

# SECTION MIR

## MIRRORS

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## CONTENTS

<b>WIRING DIAGRAM .....</b>	<b>2</b>	<b>PREPARATION .....</b>	<b>17</b>
<b>INSIDE MIRROR .....</b>	<b>2</b>	<b>PREPARATION .....</b>	<b>17</b>
Wiring Diagram .....	2	Special Service Tools .....	17
Commercial Service Tools .....	17	Commercial Service Tools .....	17
<b>DOOR MIRROR .....</b>	<b>4</b>	<b>ON-VEHICLE REPAIR .....</b>	<b>18</b>
<b>SEDAN .....</b>	<b>4</b>	<b>INSIDE MIRROR .....</b>	<b>18</b>
SEDAN : Wiring Diagram .....	4	Exploded View .....	18
<b>COUPE .....</b>	<b>6</b>	Removal and Installation .....	18
COUPE : Wiring Diagram .....	7	<b>DOOR MIRROR .....</b>	<b>19</b>
<b>SYMPTOM DIAGNOSIS .....</b>	<b>10</b>	Exploded View .....	19
<b>SQUEAK AND RATTLE TROUBLE DIAG-</b>		Removal and Installation .....	19
<b>NOSES .....</b>	<b>10</b>	<b>DISASSEMBLY AND ASSEMBLY .....</b>	<b>20</b>
Work Flow .....	10	<b>DOOR MIRROR .....</b>	<b>20</b>
Generic Squeak and Rattle Trouble Shooting .....	12	Exploded View .....	20
Diagnostic Worksheet .....	14	Disassembly .....	20
<b>PRECAUTION .....</b>	<b>16</b>	Assembly .....	21
<b>PRECAUTIONS .....</b>	<b>16</b>	<b>DOOR MIRROR COVER .....</b>	<b>21</b>
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" .....	16	DOOR MIRROR COVER : Disassembly .....	21
		DOOR MIRROR COVER : Assembly .....	21

MIR


# INSIDE MIRROR

< WIRING DIAGRAM >

## WIRING DIAGRAM INSIDE MIRROR

### Wiring Diagram

INFOID:0000000005431966

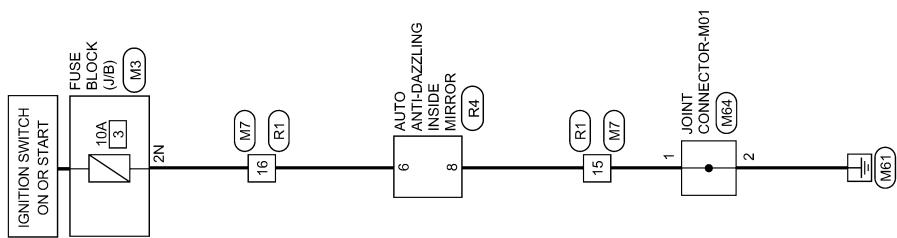


INSIDE MIRROR

# INSIDE MIRROR
 
< WIRING DIAGRAM >


## INSIDE MIRROR CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of wire	Signal Name
2N	G	—

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of wire	Signal Name
15	B	—
16	G	—

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of wire	Signal Name
15	B	—
16	B/R	—

Connector No.	M64
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY

 

Terminal No.	Color of wire	Signal Name
1	B	—
2	B	—

Connector No.	R4
Connector Name	AUTO ANTI-DAZZLING INSIDE MIRROR
Connector Color	BLACK

 

Terminal No.	Color of wire	Signal Name
6	B/R	IGN
8	B	GND

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
Q  
R  
S  
T  
U  
V  
W  
X  
Y  
Z  
MIR

# DOOR MIRROR

< WIRING DIAGRAM >

## DOOR MIRROR


SEDAN

SEDAN : Wiring Diagram

INFOID:0000000005431965

DOOR MIRROR - SEDAN

: WITH HEATED MIRRORS  
 : WITH TURN SIGNAL IN MIRROR

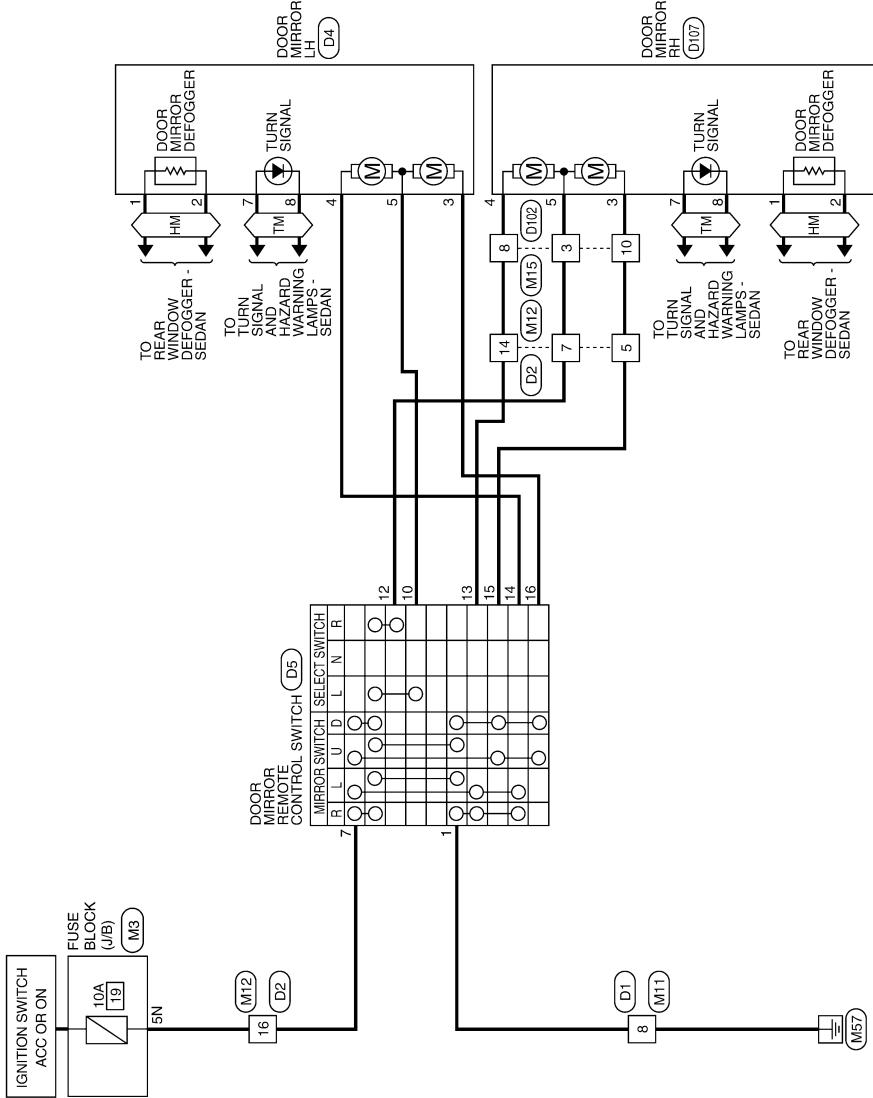

ABLWA0718GB

# DOOR MIRROR

< WIRING DIAGRAM >

 
## DOOR MIRROR CONNECTORS - SEDAN

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
5N	V/Y	-

Terminal No.	Color of Wire	Signal Name
8	B	-


  

1 2 3	4 5 6 7
8 9 10 11 12	13 14 15 16


Terminal No.	Color of Wire	Signal Name
5	L/O	-
7	V/W	-
14	Y/B	-
16	V/Y	-

Terminal No.	Color of Wire	Signal Name
8	B	-


  

 7 6 5 4	3 2 1
16 15 14 13	12 11 10 9 8



Terminal No.	Color of Wire	Signal Name
5	B	-
7	W	-
14	SB	-
16	G	-

Terminal No.	Color of Wire	Signal Name
8	B	-
10	L/O	-


  

 
A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
Q  
R  
S  
T  
U  
V  
W  
X  
Y  
Z  
P  
MIR


# DOOR MIRROR
 
< WIRING DIAGRAM >

Connector No.	D4
Connector Name	DOOR MIRROR LH
Connector Color	WHITE

 


Connector No.	D6
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	B	GND
7	G	IGN
10	P	LH RIGHT/DOWN
12	W	RH RIGHT/DOWN
13	SB	RH LEFT
14	V	LH LEFT
15	B	RH UP
16	R	LH UP

Terminal No.	Color of Wire	Signal Name
1	G	HEATER(+)
2	B	HEATER GND
3	R	UP
4	V	LEFT
5	P	RIGHT/DOWN
6	-	-
7	GR	TURN(+)
8	B	TURN(-)


Connector No.	D4
Connector Name	DOOR MIRROR RH
Connector Color	WHITE

 

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	D107
Connector Name	DOOR MIRROR RH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	O	HEATER(+)
2	B	HEATER GND
3	V	UP
4	P	LEFT
5	SB	RIGHT/DOWN
7	W	TURN(+)
8	B	TURN(-)

ABLIA1986GB

COUPE

# DOOR MIRROR


< WIRING DIAGRAM >

## COUPE : Wiring Diagram

INFOID:0000000005431964

DOOR MIRROR - COUPE

: WITH HEATED MIRRORS  
 : WITH TURN SIGNAL IN MIRROR

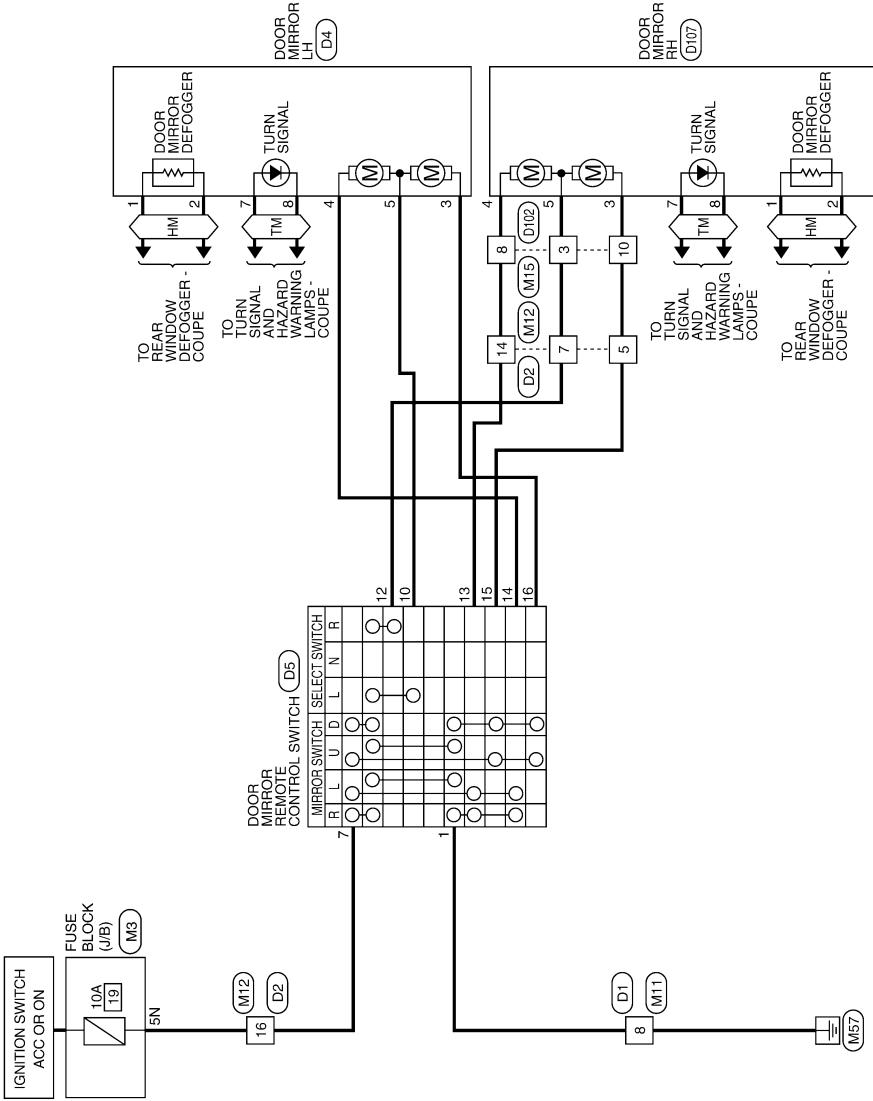


ABLWA0719GB

# DOOR MIRROR
 
< WIRING DIAGRAM >


## DOOR MIRROR CONNECTORS - COUPE

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5N	V/Y	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
8	B	-

Connector No.	M12
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6
5	6	7
6	7	8
7	8	9
8	9	10
9	10	11
10	11	12
11	12	13
12	13	14
13	14	15
14	15	16

Terminal No.	Color of Wire	Signal Name
5	L/O	-
7	V/W	-
14	Y/B	-
16	V/Y	-

 


Terminal No.	Color of Wire	Signal Name
8	7	6
7	6	5
6	5	4
5	4	3
4	3	2
3	2	1
16	15	14
15	14	13
14	13	12
13	12	11
12	11	10
11	10	9
10	9	8

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
8	B	-

Connector No.	M15
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
3	V/W	-
8	Y/B	-
10	L/O	-

ABLIA1987GB

# DOOR MIRROR

< WIRING DIAGRAM >

Connector No.	D4
Connector Name	DOOR MIRROR LH
Connector Color	WHITE



 
Terminal No.	Color of Wire	Signal Name
1	G	HEATER(+)
2	B	HEATER GND
3	R	UP
4	V	LEFT
5	P	RIGHT/DOWN
6	-	-
7	GR	TURN(+)
8	B	TURN(-)

Connector No.	D5
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	GND
7	G	IGN
10	P	LH RIGHT/DOWN
12	W	RH RIGHT/DOWN
13	SB	RH LEFT
14	V	LH LEFT
15	B	RH UP
16	R	LH UP

Connector No.	D102
Connector Name	WIRES TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	SB	-
8	P	-
10	V	-

Connector No.	D107
Connector Name	DOOR MIRROR RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O	HEATER(+)
2	B	HEATER GND
3	V	UP
4	P	LEFT
5	SB	RIGHT/DOWN
7	W	TURN(+)
8	B	TURN(-)

Terminal No.	Color of Wire	Signal Name
1	O	HEATER(+)
2	B	HEATER GND
3	V	UP
4	P	LEFT
5	SB	RIGHT/DOWN
7	W	TURN(+)
8	B	TURN(-)

ABLIA1988GB

A

B

C

D

E

F

G

H

K

MIR

M

Z

O

P

# SQUEAK AND RATTLE TROUBLE DIAGNOSES


< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### SQUEAK AND RATTLE TROUBLE DIAGNOSES

#### Work Flow

INFOID:0000000005796952

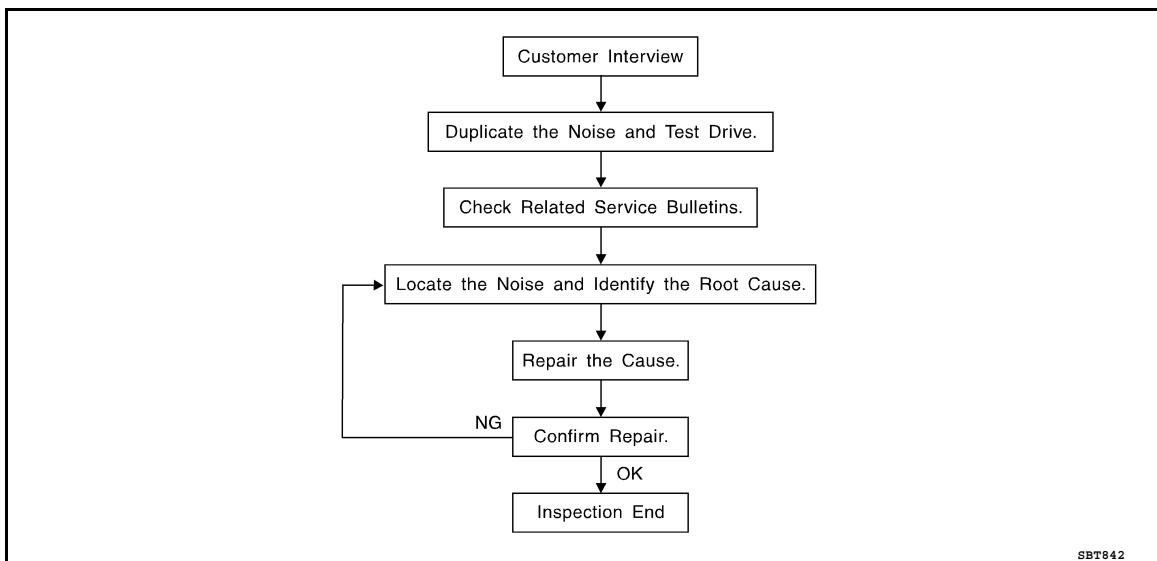

#### CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any customer's comments; refer to [MIR-14, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, be sure to diagnose and repair the noise that the customer is concerned about. This can be accomplished by test driving the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak —(Like tennis shoes on a clean floor)  
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping
- Creak—(Like walking on an old wooden floor)  
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle—(Like shaking a baby rattle)  
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock —(Like a knock on a door)  
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick—(Like a clock second hand)  
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump—(Heavy, muffled knock noise)  
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz—(Like a bumble bee)  
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending upon the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

#### DUPLICATE THE NOISE AND TEST DRIVE

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
  - 2) Tap or push/pull around the area where the noise appears to be coming from.
  - 3) Rev the engine.
  - 4) Use a floor jack to recreate vehicle "twist".
  - 5) At idle, apply engine load (electrical load, half-clutch on M/T models, drive position on CVT and A/T models).
  - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
  - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

## CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

## LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear and mechanics stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
  - removing the components in the area that you suspect the noise is coming from.  
Do not use too much force when removing clips and fasteners, otherwise clips and fastener can be broken or lost during the repair, resulting in the creation of new noise.
  - tapping or pushing/pulling the component that you suspect is causing the noise.  
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
  - feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
  - placing a piece of paper between components that you suspect are causing the noise.
  - looking for loose components and contact marks.

Refer to [MIR-12, "Generic Squeak and Rattle Trouble Shooting"](#).

## REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
  - separate components by repositioning or loosening and retightening the component, if possible.
  - insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A Nissan Squeak and Rattle Kit (J-43980) is available through your authorized Nissan Parts Department.

### CAUTION:

**Do not use excessive force as many components are constructed of plastic and may be damaged.**

### NOTE:

Always check with the Parts Department for the latest parts information.

The following materials are contained in the Nissan Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.

#### URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

76268-9E005: 100 × 135 mm (3.94 × 5.31 in)/76884-71L01: 60 × 85 mm (2.36 × 3.35 in)/76884-71L02: 15 × 25 mm (0.59 × 0.98 in)

#### INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

73982-9E000: 45 mm (1.77 in) thick, 50 × 50 mm (1.97 × 1.97 in)/73982-50Y00: 10 mm (0.39 in) thick, 50 × 50 mm (1.97 × 1.97 in)

#### INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30 × 50 mm (1.18 × 1.97 in)

#### FELT CLOTHTAPE

A

B

C

D

E

F

G

H

I

J

K

MIR

M

N

O

P

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

Used to insulate where movement does not occur. Ideal for instrument panel applications.

68370-4B000: 15 × 25 mm (0.59 × 0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll

The following materials, not found in the kit, can also be used to repair squeaks and rattles.

### UHMW (TEFLON) TAPE

Insulates where slight movement is present. Ideal for instrument panel applications.

### SILICONE GREASE

Used in place of UHMW tape that will be visible or not fit. Will only last a few months.

### SILICONE SPRAY

Use when grease cannot be applied.

### DUCT TAPE

Use to eliminate movement.

## CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

## Generic Squeak and Rattle Trouble Shooting

INFOID:0000000005796953

Refer to Table of Contents for specific component removal and installation information.

### INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicon spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

### CAUTION:

**Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.**

### CENTER CONSOLE

Components to pay attention to include:

1. Shifter assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

### DOORS

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the Nissan Squeak and Rattle Kit (J-43980) to repair the noise.

### TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner.

In addition look for:

1. Trunk lid bumpers out of adjustment

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

- 2. Trunk lid striker out of adjustment
- 3. The trunk lid torsion bars knocking together
- 4. A loose license plate or bracket

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

## SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

- 1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
- 2. Sunvisor shaft shaking in the holder
- 3. Front or rear windshield touching headlining and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

## SEATS

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

- 1. Headrest rods and holder
- 2. A squeak between the seat pad cushion and frame
- 3. The rear seat back lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

## UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted under hood noise include:

- 1. Any component mounted to the engine wall
- 2. Components that pass through the engine wall
- 3. Engine wall mounts and connectors
- 4. Loose radiator mounting pins
- 5. Hood bumpers out of adjustment
- 6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

A

B

C

D

E

F

G

H

I

J

K

MIR

M

N

O

P

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## Diagnostic Worksheet

INFOID:0000000005796954





Dear Customer:

We are concerned about your satisfaction with your vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your vehicle right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

### SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

#### I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

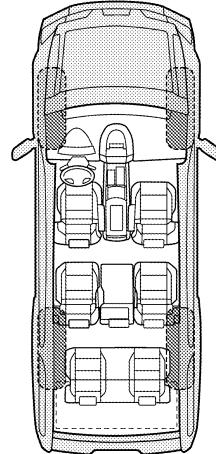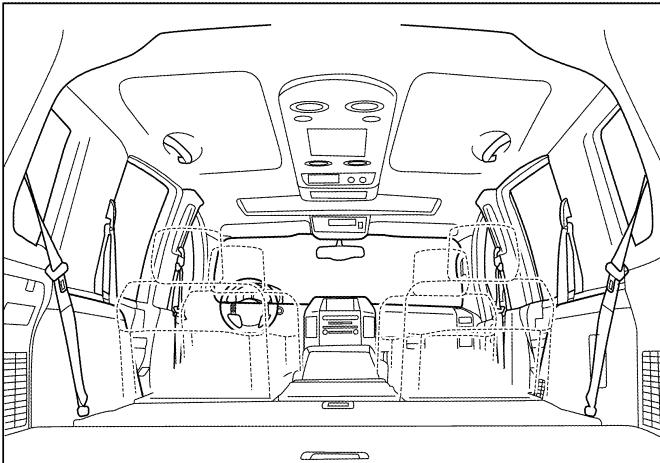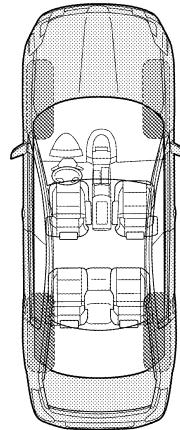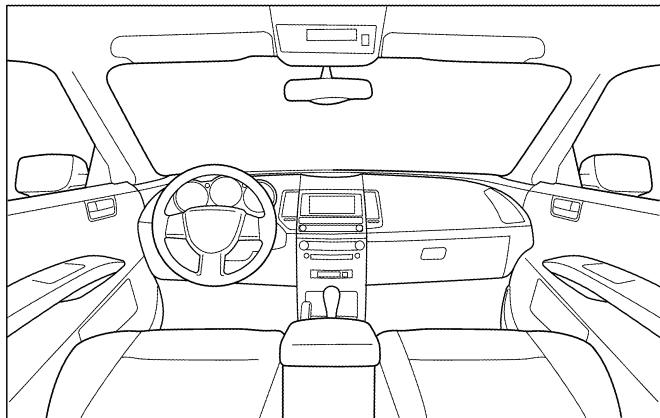

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

---

---

### II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- |   |  |
|---|--|
| <input type="checkbox"/> Anytime                      | <input type="checkbox"/> After sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning      | <input type="checkbox"/> When it is raining or wet     |
| <input type="checkbox"/> Only when it is cold outside | <input type="checkbox"/> Dry or dusty conditions       |
| <input type="checkbox"/> Only when it is hot outside  | <input type="checkbox"/> Other:                        |

A  
B

C  
D

E

### III. WHEN DRIVING:

- |   |  |
|---|--|
| <input type="checkbox"/> Through driveways                          | <input type="checkbox"/> Squeak (like tennis shoes on a clean floor) |
| <input type="checkbox"/> Over rough roads                           | <input type="checkbox"/> Creak (like walking on an old wooden floor) |
| <input type="checkbox"/> Over speed bumps                           | <input type="checkbox"/> Rattle (like shaking a baby rattle)         |
| <input type="checkbox"/> Only about _____ mph                       | <input type="checkbox"/> Knock (like a knock at the door)            |
| <input type="checkbox"/> On acceleration                            | <input type="checkbox"/> Tick (like a clock second hand)             |
| <input type="checkbox"/> Coming to a stop                           | <input type="checkbox"/> Thump (heavy muffled knock noise)           |
| <input type="checkbox"/> On turns: left, right or either (circle)   | <input type="checkbox"/> Buzz (like a bumble bee)                    |
| <input type="checkbox"/> With passengers or cargo                   |  |
| <input type="checkbox"/> Other: _____                               |  |
| <input type="checkbox"/> After driving _____ miles or _____ minutes |  |

### IV. WHAT TYPE OF NOISE

- |  |
|--|
| <input type="checkbox"/> Squeak (like tennis shoes on a clean floor) |
| <input type="checkbox"/> Creak (like walking on an old wooden floor) |
| <input type="checkbox"/> Rattle (like shaking a baby rattle)         |
| <input type="checkbox"/> Knock (like a knock at the door)            |
| <input type="checkbox"/> Tick (like a clock second hand)             |
| <input type="checkbox"/> Thump (heavy muffled knock noise)           |
| <input type="checkbox"/> Buzz (like a bumble bee)                    |

F  
G  
H

I  
J

### TO BE COMPLETED BY DEALERSHIP PERSONNEL

#### Test Drive Notes:

---

---

---

	YES	NO	Initials of person performing
Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

MIR

M  
N

VIN: \_\_\_\_\_ Customer Name: \_\_\_\_\_  
W.O.# \_\_\_\_\_ Date: \_\_\_\_\_

O

This form must be attached to Work Order

LATA0071E

P

## PRECAUTIONS

< PRECAUTION >

# PRECAUTION

## PRECAUTIONS

### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000005796955

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

## PREPARATION

< PREPARATION >



# PREPARATION

## PREPARATION

### Special Service Tools

INFOID:0000000005809579



The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

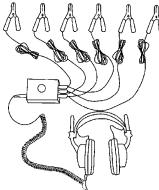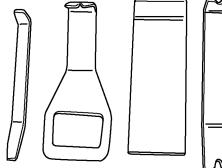Tool number (Kent-Moore No.) Tool name	Description
(J-39570) Chassis ear	 SIIA0993E Locating the noise
— (J-46534) Trim Tool Set	 AMJIA0483ZZ Removing trim components
(J-43980) NISSAN Squeak and Rattle Kit	 SIIA0994E Repairing the cause of noise

### Commercial Service Tools

 INFOID:0000000005431971

MIR

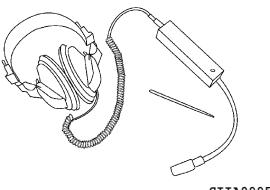Tool name	Description
Engine ear	 SIIA0995E Locating the noise
Suction lifter	 PIIB1805J Holding the door glass

# INSIDE MIRROR


< ON-VEHICLE REPAIR >

## ON-VEHICLE REPAIR

### INSIDE MIRROR

#### Exploded View

INFOID:0000000005431972

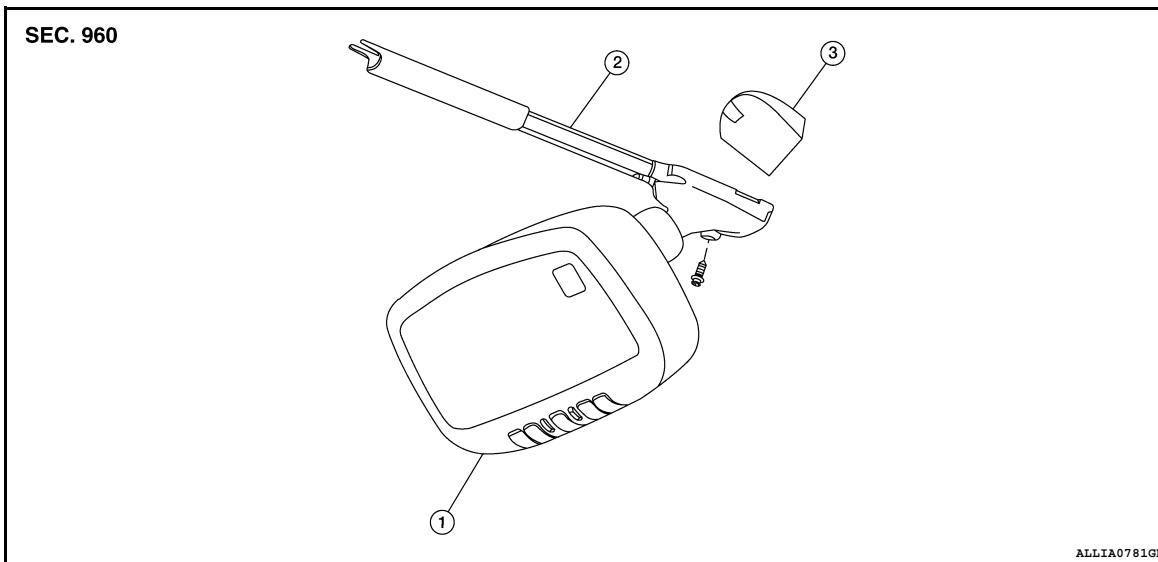


1. Inside mirror
2. Inside mirror finisher (if equipped)
3. Mirror base

#### Removal and Installation

INFOID:0000000005431973

##### REMOVAL

1. Remove inside mirror finisher (if equipped).
2. Remove screw of mirror base.
3. Slide the mirror upward to remove.
4. Disconnect the connector (if equipped).

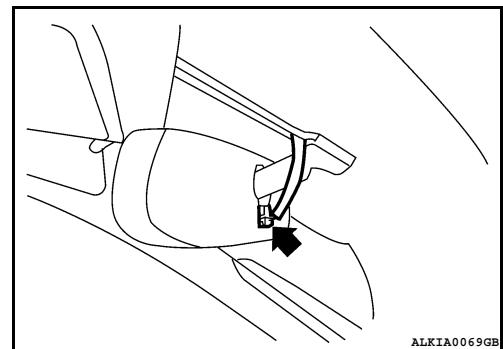

##### INSTALLATION

Installation is in the reverse order of removal.

##### CAUTION:

Apply Genuine Mirror Adhesive or equivalent to bonding surface of mounting bracket. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).


# DOOR MIRROR

< ON-VEHICLE REPAIR >

## DOOR MIRROR

### Exploded View

INFOID:0000000005431974

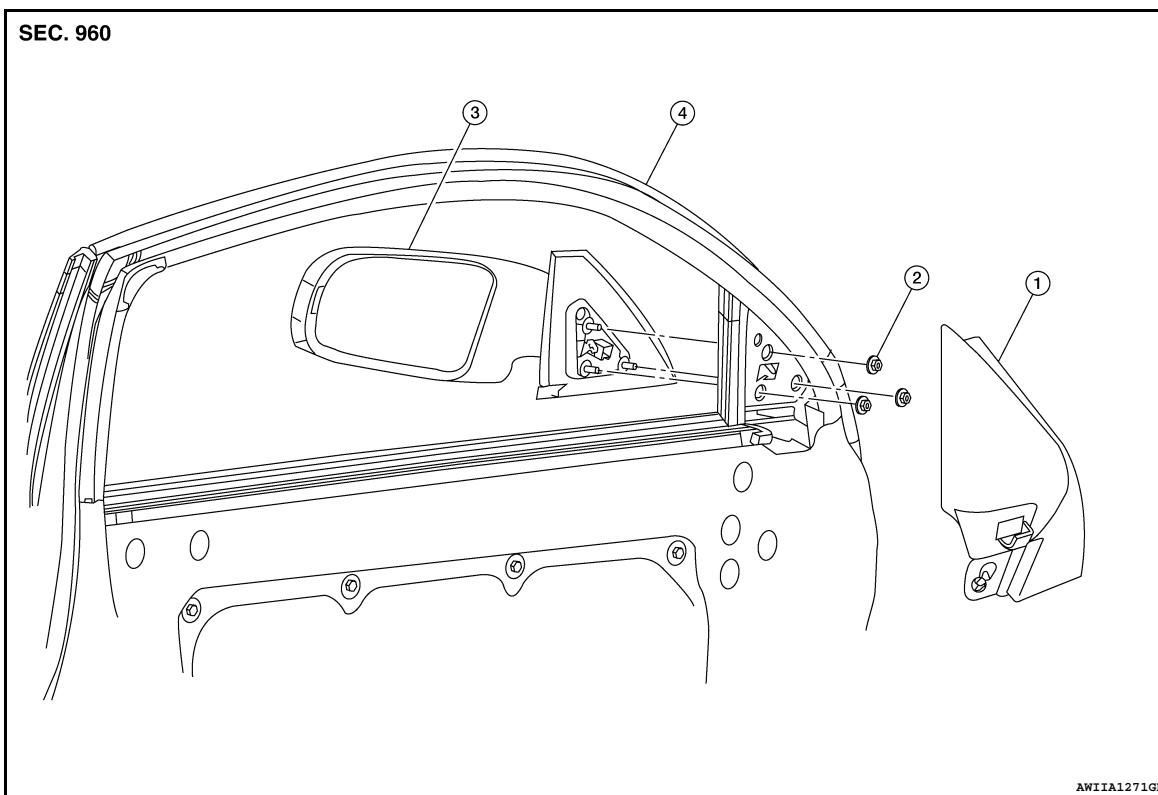

1. Mirror Cover

2. Nut

3. Mirror assembly


4. Door panel

### Removal and Installation

INFOID:0000000005431975

#### REMOVAL

1. Remove the front door finisher. Refer to [INT-31, "Removal and Installation"](#) for Sedan or [INT-11, "Removal and Installation"](#) for Coupe.
2. Disconnect the door mirror harness connector.

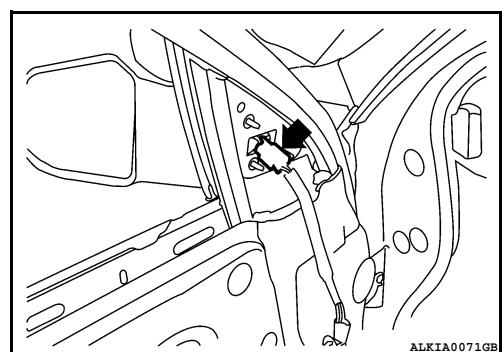

3. Remove the door mirror mounting nuts, and remove the door mirror assembly.

#### INSTALLATION

Installation is in the reverse order of removal.


## DOOR MIRROR

< DISASSEMBLY AND ASSEMBLY >

# DISASSEMBLY AND ASSEMBLY DOOR MIRROR

## Exploded View

INFOID:0000000005431976

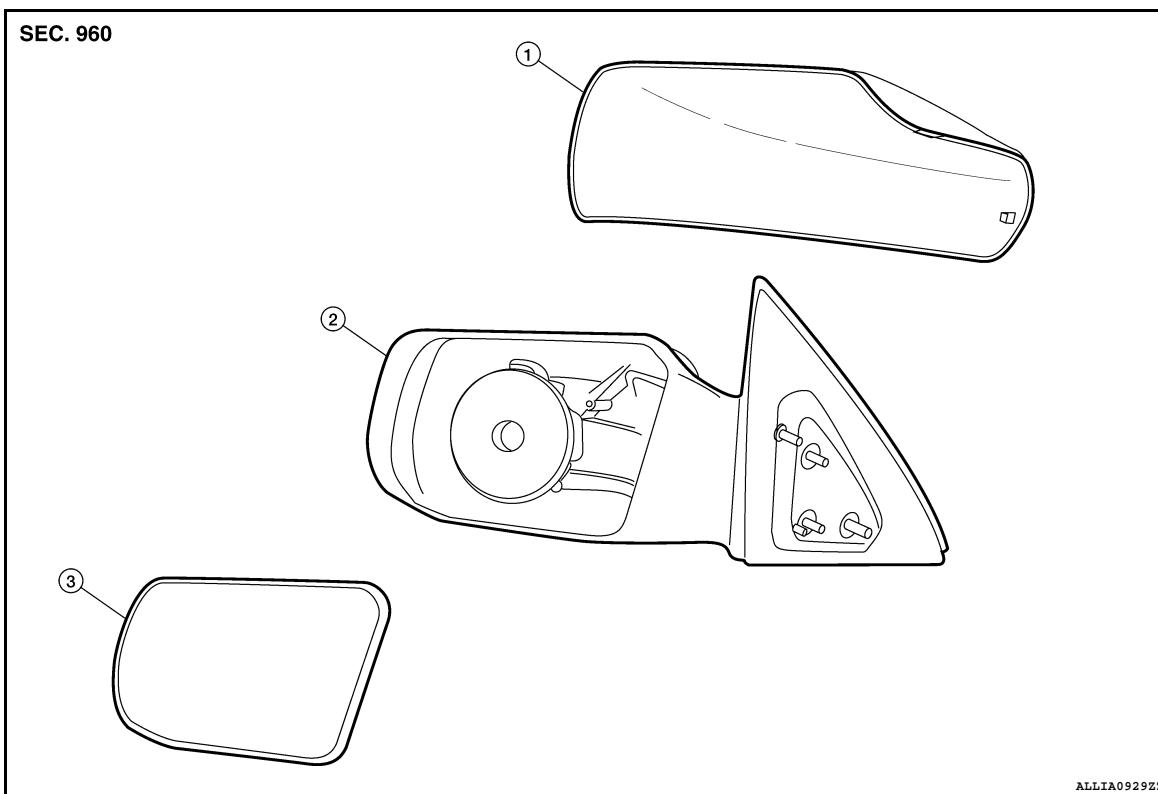

1. Door mirror cover
2. Mirror housing assembly
3. Mirror glass and holder


## Disassembly

INFOID:0000000005431977

1. Turn the mirror glass surface upward.
2. Apply a protective tape (A) to mirror housing. Insert a suitable tool (B) into the concave gap between the mirror holder (1) and mirror motor (2). Push up tabs (3) (two locations) on the mirror holder to disengage the lower part of mirror holder, and remove the mirror glass and holder.

**NOTE:**


When pushing up tabs (3), do not forcefully push up only one concave position but try to push up two concave positions.

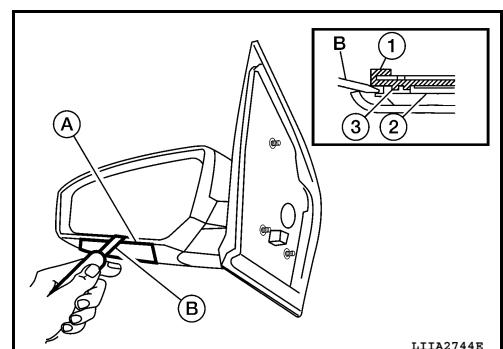

# DOOR MIRROR

## < DISASSEMBLY AND ASSEMBLY >

3. Remove the mirror glass and holder (1) from the mirror housing assembly (2).
4. Disconnect the two terminals from the mirror heater connector (if equipped).

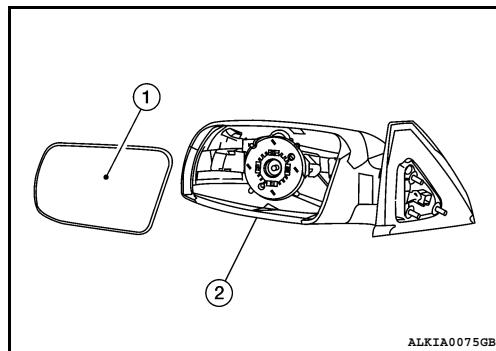


INFOID:0000000005431978

## Assembly

1. Place mirror glass and holder and mirror housing assembly (actuator) in a horizontal position.
2. Connect the two terminals to the mirror heater connector (if equipped).
3. Engage the upper tabs on the mirror glass and holder (1) onto the mirror motor (2) Then press the lower side of mirror face until a click sound is heard to engage the lower tabs.

### NOTE:

After installation, visually make sure lower two tabs are securely engaged from the bottom of mirror face.  
Make sure to insert the harness terminals into the correct connector. Do not confuse the locations.

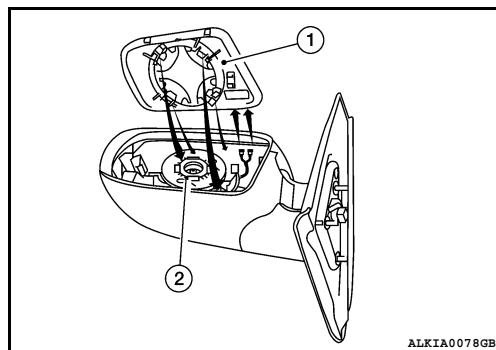

INFOID:0000000005431978

## DOOR MIRROR COVER

### DOOR MIRROR COVER : Disassembly

INFOID:0000000005431979

1. Using a suitable tool disengage the upper mirror cover pawls.




Pawl

2. Using a suitable tool disengage the lower mirror cover pawls and remove mirror cover.

### CAUTION:

Be careful not to damage the mirror or mirror cover with tool.

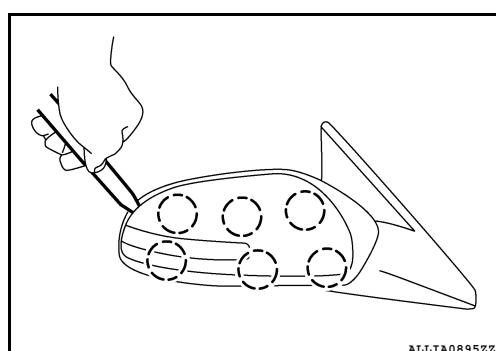

INFOID:0000000005431980

### DOOR MIRROR COVER : Assembly

Installation is in the reverse order of removal.

### CAUTION:

After installation, check that pawls are securely engaged.