

SECTION INT INTERIOR

CONTENTS

| | | | |
|--|----|--|----|
| PRECAUTION | 3 | KICKING PLATE INNER | 18 |
| PRECAUTIONS | 3 | KICKING PLATE INNER : Removal and Installation | 18 |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 3 | DASH SIDE FINISHER | 20 |
| Precaution for Procedure without Cowl Top Cover..... | 3 | DASH SIDE FINISHER : Removal and Installation | 20 |
| Precaution for Work | 3 | BODY SIDE WELT | 20 |
| PREPARATION | 4 | BODY SIDE WELT : Removal and Installation | 20 |
| PREPARATION | 4 | CENTER PILLAR LOWER GARNISH | 21 |
| Special Service Tools | 4 | CENTER PILLAR LOWER GARNISH : Removal and Installation | 21 |
| Commercial Service Tools | 4 | CENTER PILLAR UPPER GARNISH | 21 |
| CLIP LIST | 5 | CENTER PILLAR UPPER GARNISH : Removal and Installation | 21 |
| Clip List | 5 | FLOOR TRIM | 23 |
| SYMPTOM DIAGNOSIS | 6 | Exploded View | 23 |
| SQUEAK AND RATTLE TROUBLE DIAGNOSES | 6 | Removal and Installation | 23 |
| Work Flow | 6 | HEADLINING | 26 |
| Inspection Procedure | 8 | NORMAL ROOF | 26 |
| Diagnostic Worksheet | 10 | NORMAL ROOF : Exploded View | 26 |
| REMOVAL AND INSTALLATION | 12 | NORMAL ROOF : Removal and Installation | 26 |
| FRONT DOOR FINISHER | 12 | SUNROOF | 28 |
| Exploded View | 12 | SUNROOF : Exploded View | 29 |
| Removal and Installation | 12 | SUNROOF : Removal and Installation | 29 |
| REAR DOOR FINISHER | 15 | LUGGAGE FLOOR TRIM | 32 |
| Exploded View | 15 | Exploded View | 32 |
| Removal and Installation | 15 | LUGGAGE REAR PLATE | 34 |
| BODY SIDE TRIM | 17 | LUGGAGE REAR PLATE : Removal and Installation | 34 |
| Exploded View | 17 | LUGGAGE SIDE LOWER FINISHER | 34 |
| FRONT PILLAR GARNISH | 17 | LUGGAGE SIDE LOWER FINISHER : Removal and Installation | 34 |
| FRONT PILLAR GARNISH : Removal and Installation | 17 | | |

| | | | |
|--|-----------|--|-----------|
| LUGGAGE SIDE UPPER FINISHER | 35 | BACK DOOR LOWER FINISHER | 38 |
| LUGGAGE SIDE UPPER FINISHER : Removal | | BACK DOOR LOWER FINISHER : Removal and | |
| and Installation | 35 | Installation | 38 |
| BACK DOOR TRIM | 37 | BACK DOOR SIDE FINISHER | 38 |
| Exploded View | 37 | BACK DOOR SIDE FINISHER : Removal and In- | |
| BACK DOOR PULL HANDLE | 37 | stallation | 38 |
| BACK DOOR PULL HANDLE : Removal and In- | | EMERGENCY LID | 39 |
| stallation | 37 | EMERGENCY LID : Removal and Installation | 39 |

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000007576745

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:000000007576746

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

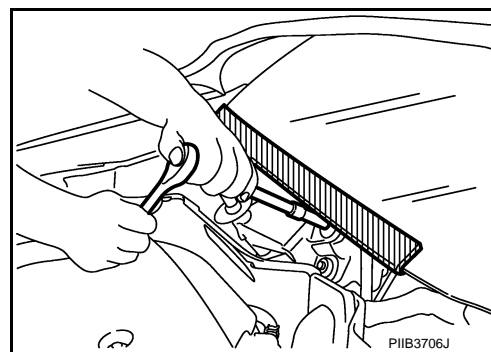

Precaution for Work

INFOID:000000007576747

- After removing and installing the opening/closing parts, be sure to carry out fitting adjustments to check their operation.
- Check the lubrication level, damage, and wear of each part. If necessary, grease or replace it.

PREPARATION

< PREPARATION >



PREPARATION

PREPARATION

Special Service Tools



INFOID:000000007576748

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.
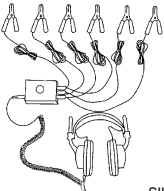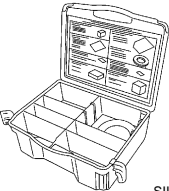
| Tool number (Kent-Moore No.) Tool name | Description |
|--|----------------------------|
| (J-39570) Chassis ear  SIIA0993E | Locates the noise |
| (J-43980) NISSAN Squeak and Rattle Kit  SIIA0994E | Repairs the cause of noise |

Commercial Service Tools

INFOID:000000007576749
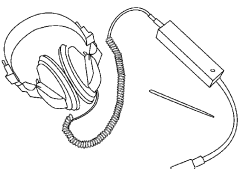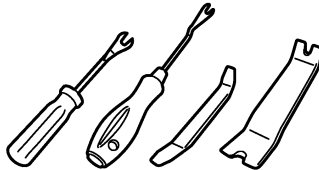
| Tool name | Description |
|--|--------------------------------------|
| Engine ear  SIIA0995E | Locates the noise |
| Remover tool  JMKIA3050ZZ | Removes clips, pawls and metal clips |

CLIP LIST

< PREPARATION >

CLIP LIST

Clip List

INFOID:000000007576750

| Shapes | Removal & Installation | | Shapes | Removal & Installation | |
|--------|--|------------------------------|--------|--|--------------------------|
| | Removal: Remove by bending up with flat-bladed screwdrivers or clip remover. | | | Removal: | |
| | Removal: Remove with a clip remover. | | | Removal: Flat-bladed screwdriver Finisher | |
| | Removal: Push center pin to catching position. (Do not remove center pin by hitting it.) | Installation: Push | | Removal: Holder portion of clip must be spread out to remove rod. | |
| | Removal: Remove by bending up with flat-bladed screwdrivers or clip remover. | | | Removal: 1. Screw out with a Phillips screwdriver. 2. Remove female portion with flat-bladed screwdriver. | |
| | Removal: | | | Removal: | Installation: |
| | Removal: | | | Removal: | |

JMJIA3734GB

SQUEAK AND RATTLE TROUBLE DIAGNOSES


< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

SQUEAK AND RATTLE TROUBLE DIAGNOSES

Work Flow

INFOID:000000007576751

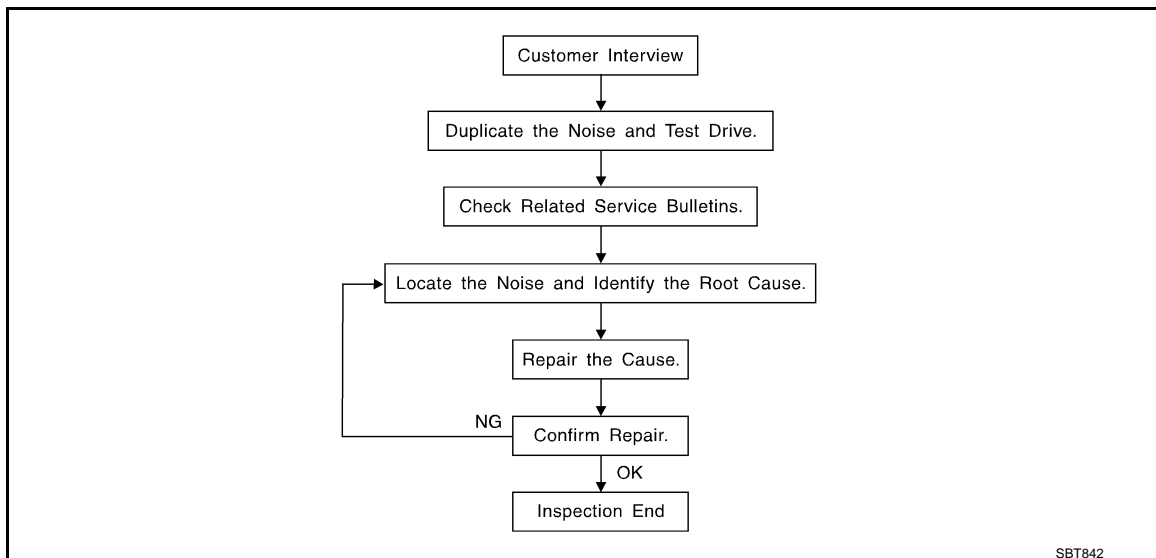

CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any customer comments. Refer to [INT-10. "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, perform a diagnosis and repair the noise that the customer is concerned about. This can be accomplished by performing a test drive with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so that the customer, service adviser, and technician use the same language when describing the noise.
- Squeak – (Like tennis shoes on a clean floor)
Squeak characteristics include the light contact / fast movement / brought on by road conditions / hard surfaces = high-pitched noise / softer surfaces = low-pitched noises / edge to surface = chirping
- Creak – (Like walking on an old wooden floor)
Creak characteristics include firm contact / slow movement/twisting with a rotational movement / pitch dependent on materials / often brought on by activity.
- Rattle – (Like shaking a baby rattle)
Rattle characteristics include fast repeated contact / vibration or similar movement / loose parts/missing clip or fastener / incorrect clearance.
- Knock – (Like a knock on a door)
Knock characteristics include hollow sounds / sometimes repeating / often brought on by driver action.
- Tick – (Like a clock second hand)
Tick characteristics include gentle contacting of light materials / loose components / can be caused by driver action or road conditions.
- Thump – (Heavy, muffled knock noise)
Thump characteristics include softer knock / dull sounds often brought on by activity.
- Buzz – (Like a bumblebee)
Buzz characteristics include high frequency rattle / firm contact.
- Often the degree of acceptable noise level varies depending upon the person. A noise that a technician may judge as acceptable may be very irritating to a customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

DUPLICATE THE NOISE AND TEST DRIVE

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when the repair is reconfirmed.

If the noise can be duplicated easily during the test drive, do the following with the vehicle stopped to help identify the source of the noise.

- 1) Close a door.
 - 2) Tap or push/pull around the area where the noise appears to be coming from.
 - 3) Rev the engine.
 - 4) Use a floor jack to recreate vehicle "twist".
 - 5) At idle, apply engine load (electrical load, half-clutch on M/T models, drive position on A/T models).
 - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
 - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to the concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis ear: J-39570, engine ear, and mechanics stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
 - Removing the component(s) in the area(s) that is / are suspected to be the cause of the noise.
Do not use too much force when removing clips and fasteners, otherwise clips and fasteners can be broken or lost during the repair, creating a new noise.
 - Tapping or pushing/pulling the component(s) that is / are suspected to be the cause of the noise.
Do not tap or push/pull the component(s) with excessive force, otherwise the noise is eliminated only temporarily.
 - Feeling for a vibration by hand by touching the component(s) that is / are suspected to be the cause of the noise.
 - Placing a piece of paper between components that are suspected to be the cause of the noise.
 - Looking for loose components and contact marks.
Refer to [INT-8, "Inspection Procedure"](#).

REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
 - Separate components by repositioning or loosening and retightening the components, if possible.
 - Insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape, or urethane tape. A NISSAN Squeak and Rattle Kit (J-43980) is available through the authorized NISSAN Parts Department.

CAUTION:

Never use excessive force as many components are constructed of plastic and may be damaged.

NOTE:

Always check with the Parts Department for the latest parts information.

The following materials are contained in the NISSAN Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.

URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

- 76268-9E005: 100 × 135 mm (3.937 × 5.315 in)
- 76884-71L01: 60 × 85 mm (2.362 × 3.346 in)
- 76884-71L02: 15 × 25 mm (0.591 × 0.984 in)

INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

- 73982-9E000: 45 mm (1.772 in) thick, 50 × 50 mm (1.969 × 1.969 in)
- 73982-50Y00: 10 mm (0.394 in) thick, 50 × 50 mm (1.969 × 1.969 in)

INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30 × 50 mm (1.181 × 1.969 in)

FELT CLOTHTAPE

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Used to insulate where movement does not occur. Ideal for instrument panel applications.

- 68370-4B000: 15 × 25 mm (0.591 × 0.984 in) pad
- 68239-13E00: 5 mm (0.197 in) wide tape roll

The following materials, not found in the kit, can also be used to repair squeaks and rattles.

UHMW (TEFLON) TAPE

Insulates where slight movement is present. Ideal for instrument panel applications.

SILICONE GREASE

Used in place of UHMW tape that is visible or does not fit. Only lasts a few months.

SILICONE SPRAY

Used when grease cannot be applied.

DUCT TAPE

Used to eliminate movement.

CONFIRM THE REPAIR

After repair is complete, test drive the vehicle to confirm that the cause of noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

Inspection Procedure

INFOID:000000007576752

Refer to Table of Contents for specific component removal and installation information.

INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicon spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

CAUTION:

Never use silicone spray to isolate a squeak or rattle. If the area is saturated with silicone, the recheck of repair becomes impossible.

CENTER CONSOLE

Components to check include:

1. Shifter assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

DOORS

Check the following items:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon connection to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping, moving the components, or pressing on them while driving to duplicate the conditions can isolate many of these incidents. The areas can usually be insulated with felt cloth tape or insulator foam blocks from the NISSAN Squeak and Rattle Kit (J-43980) to repair the noise.

TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the customer.

In addition check for the following items:

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

1. Trunk lid dumpers out of adjustment
2. Trunk lid striker out of adjustment
3. Trunk lid torsion bars knocking together
4. A loose license plate or bracket

Most of these incidents can be repaired by adjusting, securing, or insulating the item(s) or component(s) causing the noise.

SUNROOF/HEADLINING

Noises in the sunroof / headlining area can often be traced to one of the following items:

1. Sunroof lid, rail, linkage, or seals making a rattle or light knocking noise
2. Sunvisor shaft shaking in the holder
3. Front or rear windshield touching headlining and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

SEATS

When isolating seat noise it is important to note the position the seat is in and the load placed on the seat when the noise occurs. These conditions should be duplicated when verifying and isolating the cause of the noise.

Causes of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted underhood noise include:

1. Any component mounted to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator mounting pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move, or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

A

B

C

D

E

F

G

H

I

INT

K

L

M

N

O

P

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Diagnostic Worksheet

INFOID:000000007576753







SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

Dear Nissan Customer:

We are concerned about your satisfaction with your Nissan vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your Nissan right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

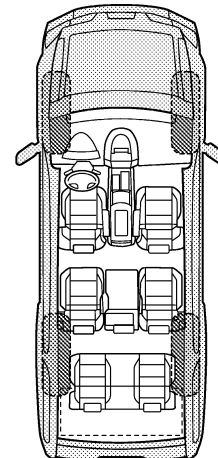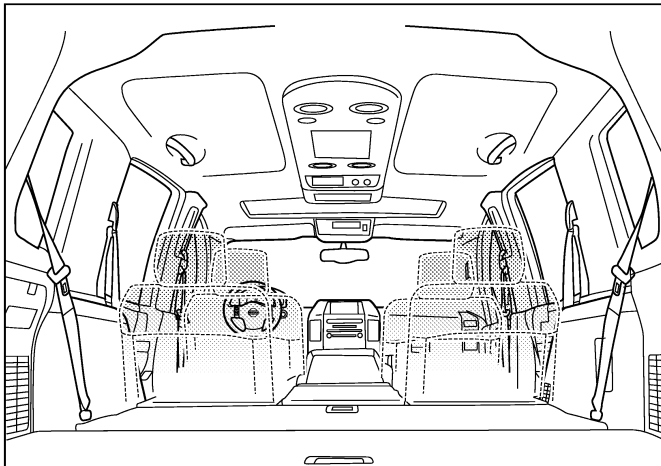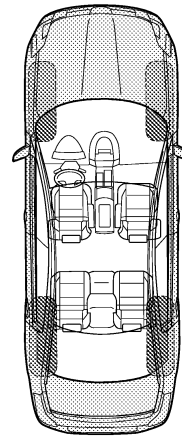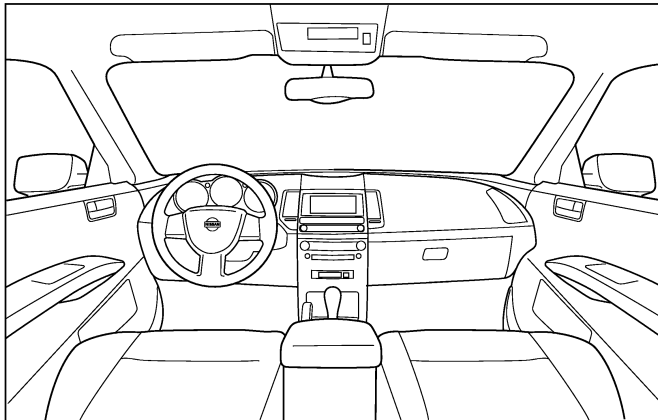

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

PIIB8740E

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- | | |
|---|--|
| <input type="checkbox"/> anytime | <input type="checkbox"/> after sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning | <input type="checkbox"/> when it is raining or wet |
| <input type="checkbox"/> only when it is cold outside | <input type="checkbox"/> dry or dusty conditions |
| <input type="checkbox"/> only when it is hot outside | <input type="checkbox"/> other: |

III. WHEN DRIVING:

- ☐ through driveways
- ☐ over rough roads
- ☐ over speed bumps
- ☐ only about ____ mph
- ☐ on acceleration
- ☐ coming to a stop
- ☐ on turns: left, right or either (circle)
- ☐ with passengers or cargo
- ☐ other: _____
- ☐ after driving ____ miles or ____ minutes

IV. WHAT TYPE OF NOISE

- ☐ squeak (like tennis shoes on a clean floor)
- ☐ creak (like walking on an old wooden floor)
- ☐ rattle (like shaking a baby rattle)
- ☐ knock (like a knock at the door)
- ☐ tick (like a clock second hand)
- ☐ thump (heavy, muffled knock noise)
- ☐ buzz (like a bumble bee)

TO BE COMPLETED BY DEALERSHIP PERSONNEL

Test Drive Notes:

| | YES | NO | Initials of person performing |
|--|--------------------------|--------------------------|-------------------------------|
| Vehicle test driven with customer | <input type="checkbox"/> | <input type="checkbox"/> | _____ |
| - Noise verified on test drive | <input type="checkbox"/> | <input type="checkbox"/> | _____ |
| - Noise source located and repaired | <input type="checkbox"/> | <input type="checkbox"/> | _____ |
| - Follow up test drive performed to confirm repair | <input type="checkbox"/> | <input type="checkbox"/> | _____ |

VIN: _____ Customer Name: _____
W.O.# _____ Date: _____

This form must be attached to Work Order

PIIB8742E

FRONT DOOR FINISHER


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

FRONT DOOR FINISHER

Exploded View

INFOID:000000007576754

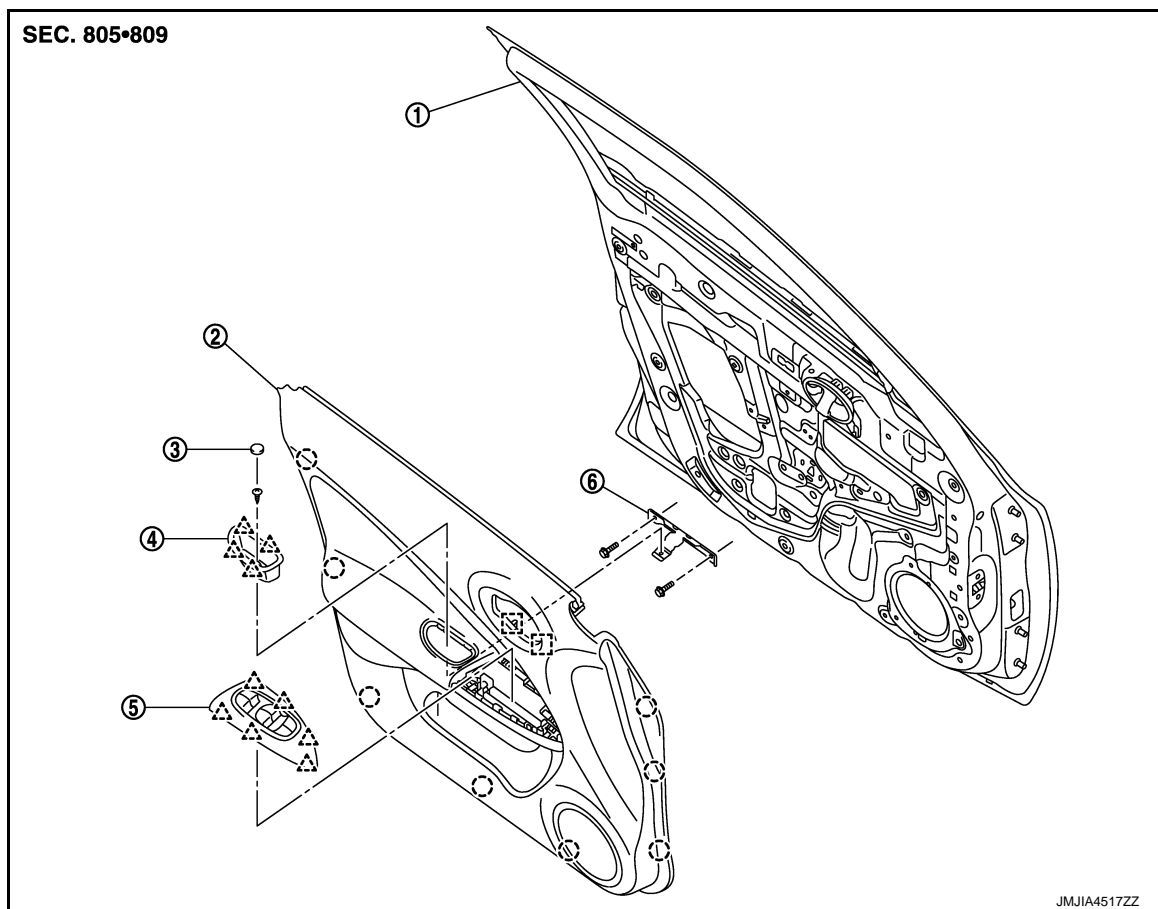

1. Front door panel

2. Front door finisher

3. Cap

4. Pull handle

5. Power window switch finisher

6. Pull handle bracket

○ : Clip

△ : Pawl

□ : Metal clip

Removal and Installation

INFOID:000000007576755

REMOVAL

CAUTION:


- When removing, always use a remover tool that is made of plastic.
- Never damage the door panel.

1. Fully open door window.
2. Remove pull handle.


FRONT DOOR FINISHER


< REMOVAL AND INSTALLATION >

1. Remove cap in the pull handle.

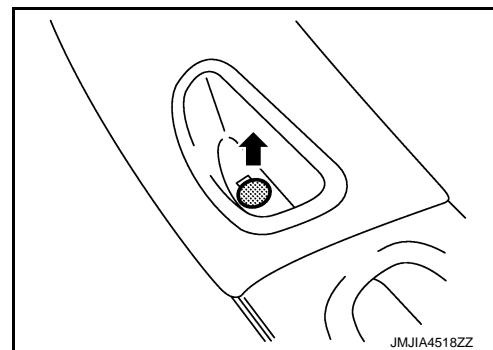


2. Remove pull handle fixing screw.
3. Lift up the pull handle while rotating it in direction indicated by the arrow as shown in the figure. Disengage pawls and remove the pull handle.

 : pawl

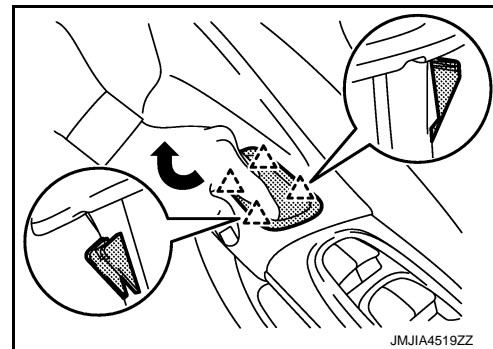

3. Remove power window switch finisher and power window switch in one body.

 
1. Disengage power window switch finisher fixing pawl with a remover tool (A).

 : Pawl


CAUTION:

Apply protective tape (B) on the parts to protect it from damage.

2. Pull up power window switch finisher and power window switch with one body and disconnect harness connector.

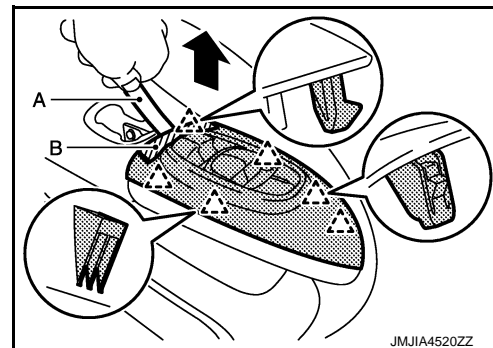


4. Remove front door corner cover. Refer to [MIR-14, "DOOR MIRROR ASSEMBLY : Removal and Installation"](#).
5. Disengage front door finisher fixing clips and metal clips with a remover tool (A), and then remove front door finisher.

 : Clip

 : Metal clip

CAUTION:

Insert a remover tool between body side panel and clip and disengage pawl.

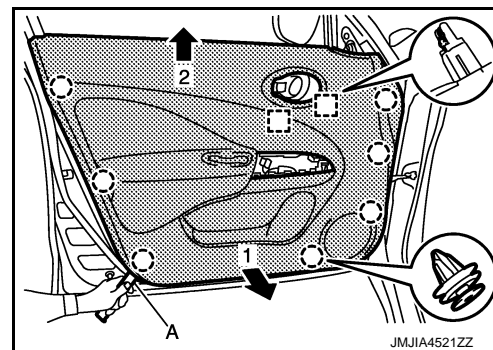

NOTE:

Remove power window switch. Refer to [PWC-48, "Removal and Installation"](#).

INSTALLATION

Note the following item, and install in the reverse order of removal.

CAUTION:

FRONT DOOR FINISHER

< REMOVAL AND INSTALLATION >

When installing front door finisher, check that clips, and metal clips are securely in body panel holes, and press them in.


REAR DOOR FINISHER

< REMOVAL AND INSTALLATION >

REAR DOOR FINISHER

Exploded View

INFOID:000000007576756

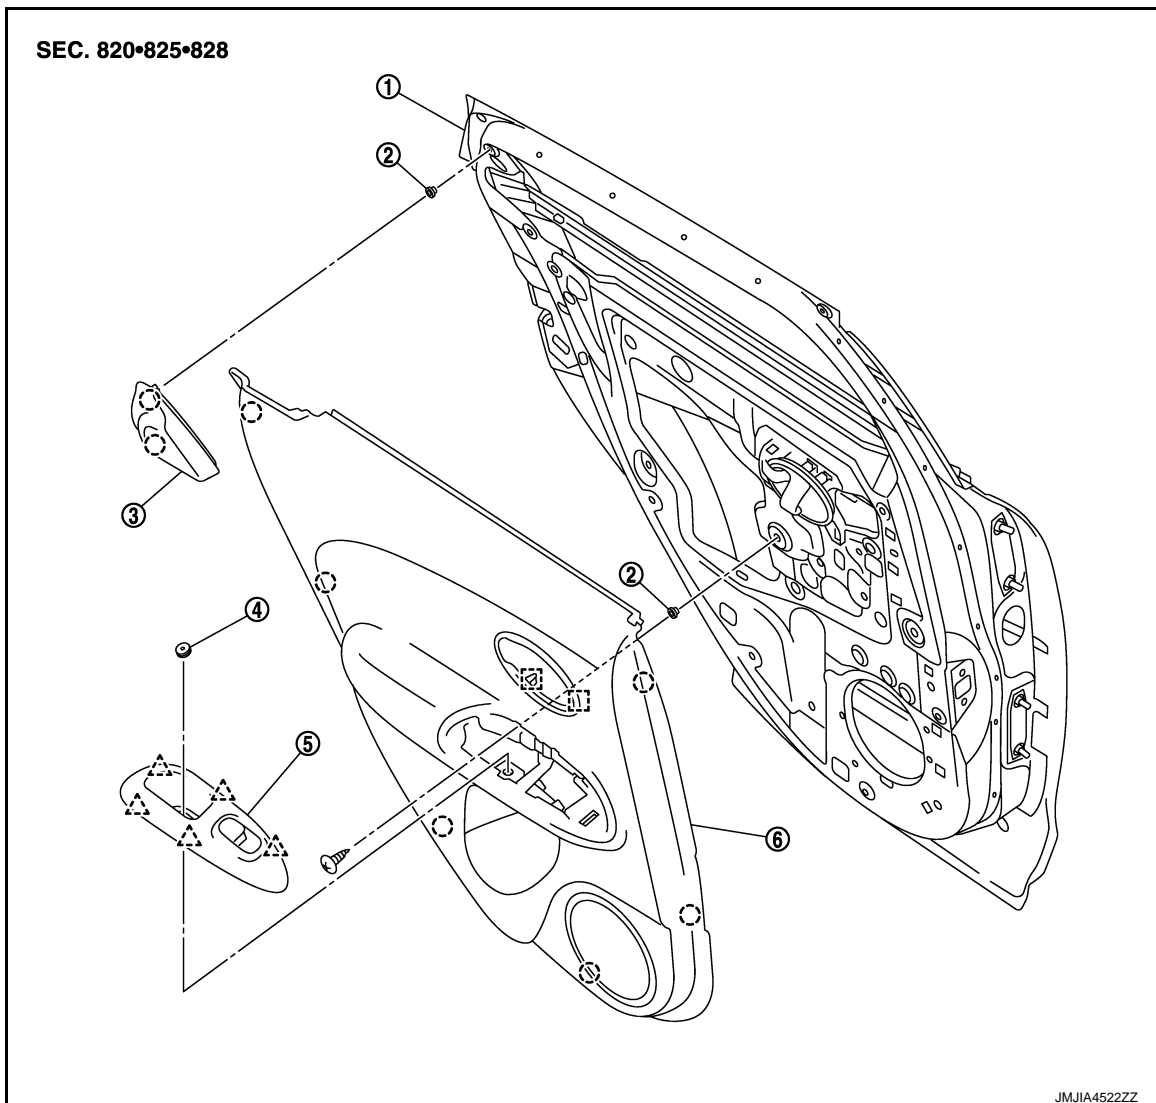

1. Rear door panel

4. Cap

○ : Clip

△ : Pawl

□ : Metal clip

2. Grommet

5. Power window switch finisher

3. Rear door corner cover inner

6. Rear door finisher

Removal and Installation

INFOID:000000007576757

REMOVAL

CAUTION:

 
- When removing, always use a remover tool that is made of plastic.
- Never damage the door panel.


1. Fully open door window.
2. Remove rear corner cover inner.

REAR DOOR FINISHER


< REMOVAL AND INSTALLATION >


Disengage rear corner cover inner fixing pawl with a remover tool.

 : Clip

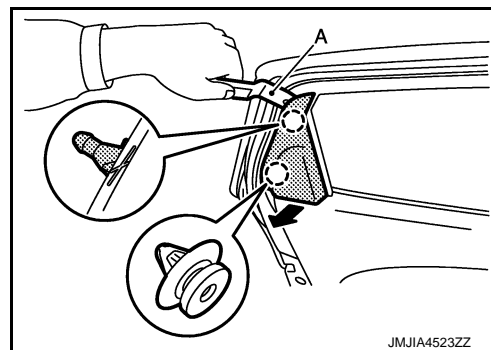


 3. Remove power window switch finisher and power window switch in one body.
Pull up power window switch finisher and power window switch with one body and disconnect harness connector.

 : Pawl

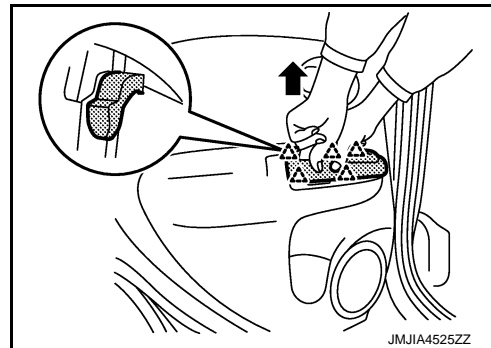

 
4. Remove rear door finisher fixing screw.
5. Disengage rear door finisher fixing clips and metal clips with a remover tool (A), and then remove rear door finisher.

 : Clip

 : Metal clip

CAUTION:

Insert a remover tool between body side panel and clip and disengage pawl.

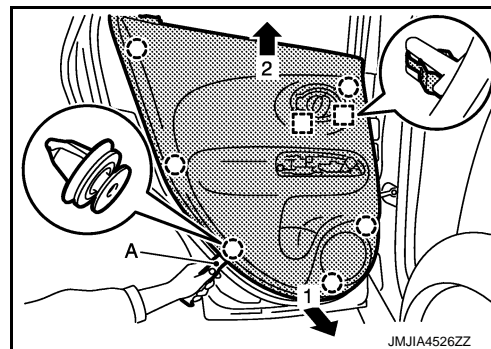

NOTE:

Remove power window switch. Refer to [PWC-48, "Removal and Installation"](#).

INSTALLATION

Note the following item, and install in the reverse order of removal.

CAUTION:

When installing rear door finisher, check that clips, and metal clips are securely in body panel holes, and press them in.


BODY SIDE TRIM

< REMOVAL AND INSTALLATION >

BODY SIDE TRIM

Exploded View

INFOID:000000007576758

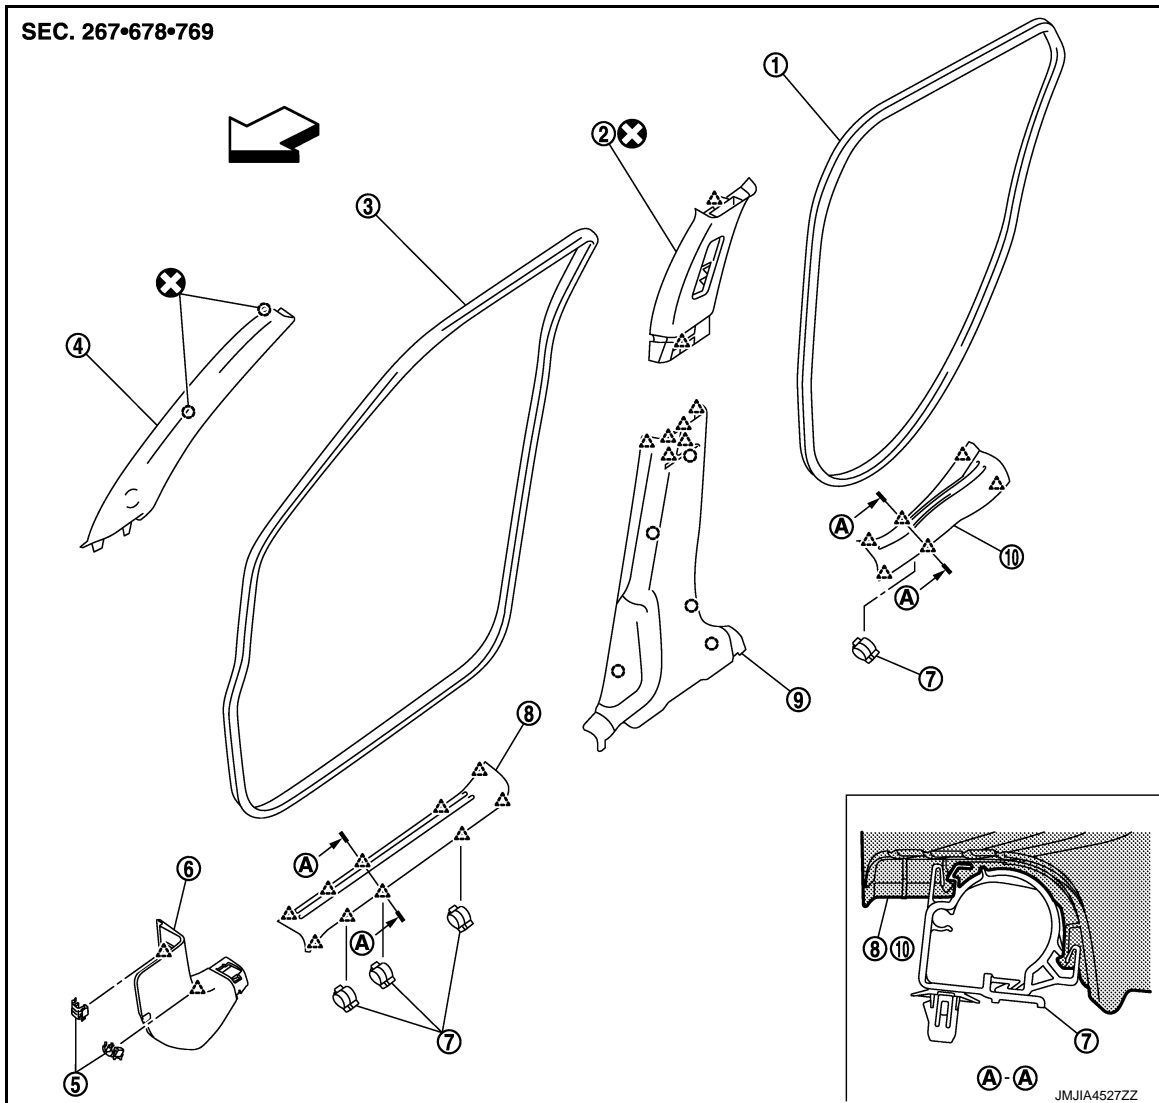

- | | | |
|------------------------------|--------------------------------|--------------------------------|
| 1. Rear body side welt | 2. Center pillar upper garnish | 3. Front body side welt |
| 4. Front pillar garnish | 5. Metal clip | 6. Dash side finisher RH |
| 7. Harness clip | 8. Front kicking plate inner | 9. Center pillar lower garnish |
| 10. Rear kicking plate inner | | |

○ : Clip

△ : Pawl

□ : Metal clip

← : Vehicle front

⊗ : Always replace after every disassembly.

FRONT PILLAR GARNISH

FRONT PILLAR GARNISH : Removal and Installation

INFOID:000000007576759

REMOVAL

 
CAUTION:


BODY SIDE TRIM

< REMOVAL AND INSTALLATION >


- When removing, always use a remover tool that is made of plastic.
- Never damage the body.

1. Release front pillar garnish portion of front body side welt.
2. Remove front pillar garnish.
 1. Disengage front pillar garnish fixing clips with a remover tool (A).

 : Clip

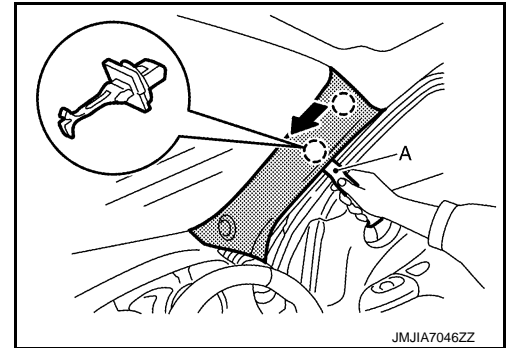

2. Cut clip anchor portion, and then remove front pillar garnish.

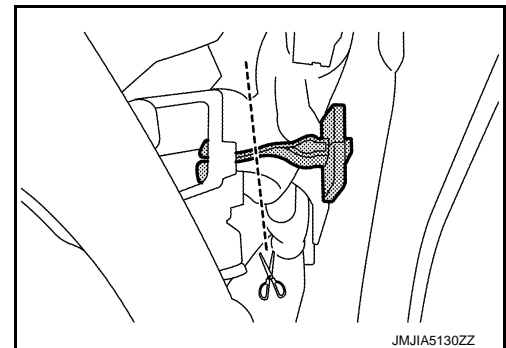


INSTALLATION

Note the following items, and install in the reverse order of removal.

CAUTION:

- Replace clip anchor with a new part after removal. Never reuse clip anchor.
- Be sure to install clip anchor to front pillar garnish before installing front pillar garnish to the vehicle body.
- When installing clip anchor to front pillar garnish, be sure to align the notch and then insert clip anchor.

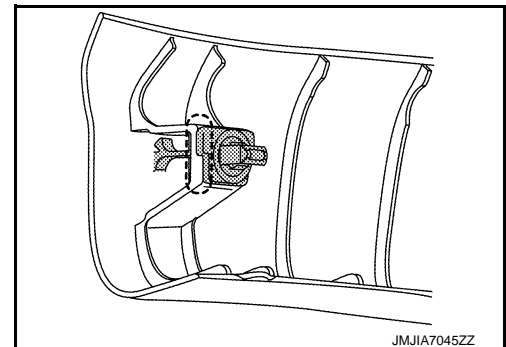

- After installing clip anchor to front pillar garnish, check that clip anchor is engaged securely to front pillar garnish. If clip anchor is not engaged securely, front pillar garnish may be lifted and disengaged from the vehicle body.
- When installing front pillar garnish, check that clips are securely in body panel holes, and press them in.

KICKING PLATE INNER

KICKING PLATE INNER : Removal and Installation

INFOID:000000007576760

REMOVAL

CAUTION:

- When removing, always use a remover tool that is made of plastic to prevent damage to the parts.
- Never damage the body.

BODY SIDE TRIM

 
< REMOVAL AND INSTALLATION >

FRONT KICKING PLATE INNER


1. Disengage fixing pawls on front lower end of front kicking plate inner using a remover tool (A).

CAUTION:

Apply protective tape (B) on the parts to protect it from damage.

 : Pawl


 : Vehicle front

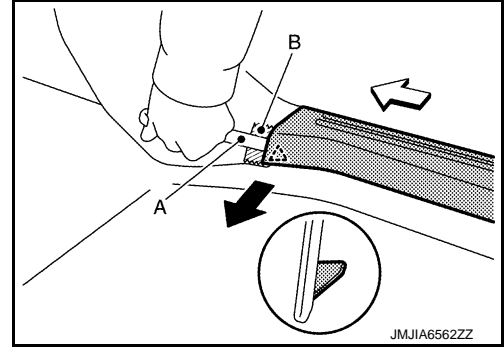


2. Lift up toward vehicle upper and disengage fixing pawls of front kicking plate inner starting from the front.


CAUTION:


Never lift up excessively. Otherwise, rear end of front kicking plate inner may be damaged.

 : Pawl

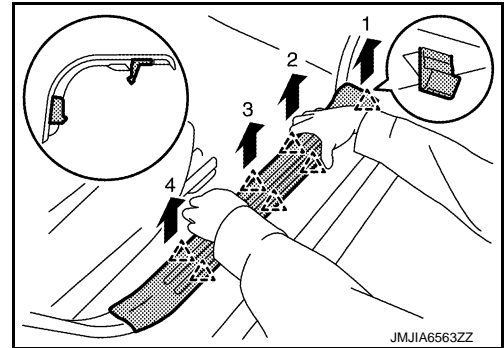

 3. Lift up lower rear end of front kicking plate inner while pulling it toward vehicle inside, disengage fixing pawls of front kicking plate inner, and then remove front kicking plate inner.

 : Pawl

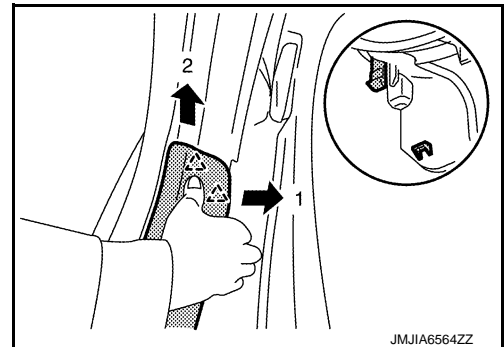


REAR KICKING PLATE INNER


1. Remove rear seat cushion. Refer to [SE-26, "SEAT CUSHION : Removal and Installation"](#).

2. Disengage fixing pawls on front lower end of rear kicking plate inner using a remover tool (A).

CAUTION:

 Apply protective tape (B) on the parts to protect it from damage.

 : Pawl

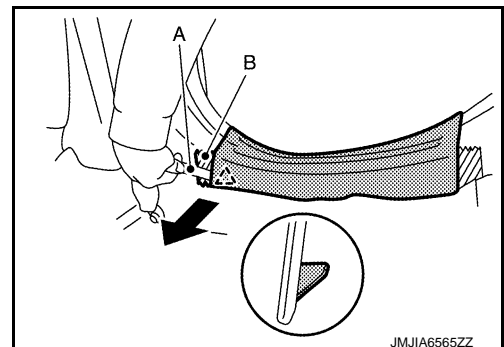


BODY SIDE TRIM


< REMOVAL AND INSTALLATION >

3. Lift up toward vehicle upper and disengage fixing pawls of rear kicking plate inner starting from the front.

CAUTION:

Never lift up excessively. Otherwise, rear end of rear kicking plate inner may be damaged.


 : Pawl

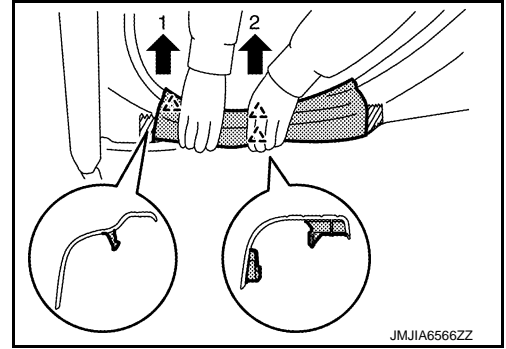


4. Using a remover tool (A), lift up lower rear end of rear kicking plate inner while disengaging a fixing pawl on lower rear end of rear kicking plate inner, disengage remaining fixing pawls, and then remove rear kicking plate inner.

CAUTION:

Apply protective tape (B) on the parts to protect it from damage.

 : Pawl

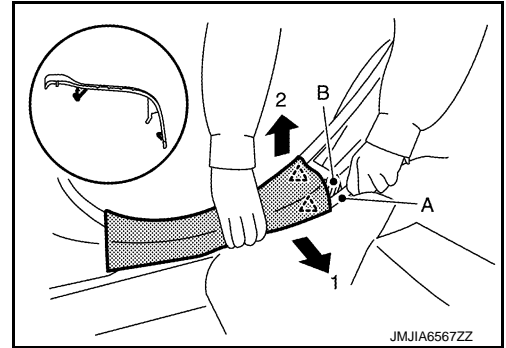

INSATALLATION

Install in the reverse order of removal.

DASH SIDE FINISHER

DASH SIDE FINISHER : Removal and Installation


INFOID:000000007576761


REMOVAL

CAUTION:

Never damage the body.

1. Remove front kicking plate inner. Refer to [INT-18. "KICKING PLATE INNER : Removal and Installation"](#).
2. Pull back dash side finisher, and then disengage the pawls.

 : Pawl

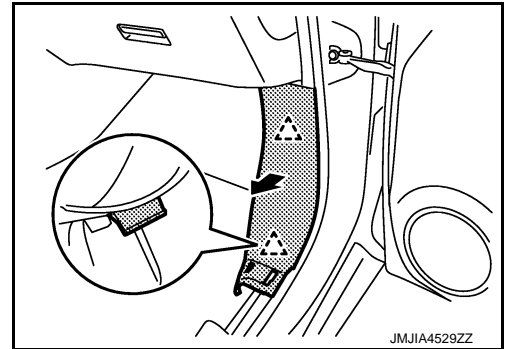

3. Disconnect dash side finisher, vehicle front side, from stud bolt and remove dash side finisher.

INSTALLATION

Install in the reverse order of removal.

BODY SIDE WELT

BODY SIDE WELT : Removal and Installation

INFOID:000000007576762

REMOVAL

CAUTION:

- Never excessively pull body side welt.
- Never damage the body.

FRONT BODY SIDE WELT

BODY SIDE TRIM

< REMOVAL AND INSTALLATION >

1. Remove front kicking plate inner. Refer to [INT-18. "KICKING PLATE INNER : Removal and Installation"](#).
2. Remove front body side welt.

REAR BODY SIDE WELT

1. Remove rear kicking plate inner. Refer to [INT-18. "KICKING PLATE INNER : Removal and Installation"](#).
2. Remove rear body side welt.

INSTALLATION

Install in the reverse order of removal.

CENTER PILLAR LOWER GARNISH

CENTER PILLAR LOWER GARNISH : Removal and Installation


 
INFOID:000000007576763

REMOVAL

CAUTION:

- When removing, always use a remover tool that is made of plastic.
- Never damage the body.

1. Fully open front door and rear door.
2. Slide front seat to the fully forward position. Tilt seatback forward.
3. Remove Front body side welt and rear body side welt. Refer to [INT-20. "BODY SIDE WELT : Removal and Installation"](#).
4. Disengage center pillar lower garnish fixing clips and pawls with a remover tool (A), and then remove center pillar lower garnish.

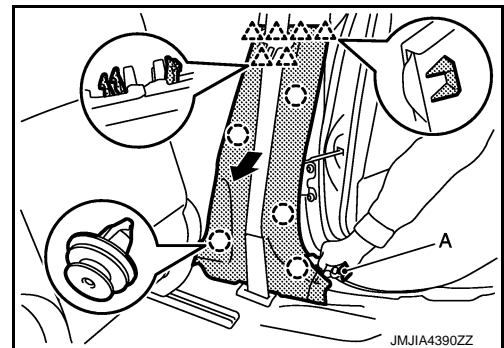

INSTALLATION

Note the following item, and install in the reverse order of removal.

CAUTION:

When installing center pillar lower garnish, check that clips are securely in body panel holes, and press them in.

CENTER PILLAR UPPER GARNISH

CENTER PILLAR UPPER GARNISH : Removal and Installation

INFOID:000000007576764

REMOVAL

CAUTION:


- When removing, always use a remover tool that is made of plastic.
- Never damage the body.


1. Remove center pillar lower garnish. Refer to [INT-21. "CENTER PILLAR LOWER GARNISH : Removal and Installation"](#).
2. Remove front seat belt shoulder anchor. Refer to [SB-5. "SEAT BELT RETRACTOR : Removal and Installation"](#).

BODY SIDE TRIM

< REMOVAL AND INSTALLATION >

3. Disengage center pillar upper garnish lower side fixing pawl using a remover tool (A).


 : Pawl

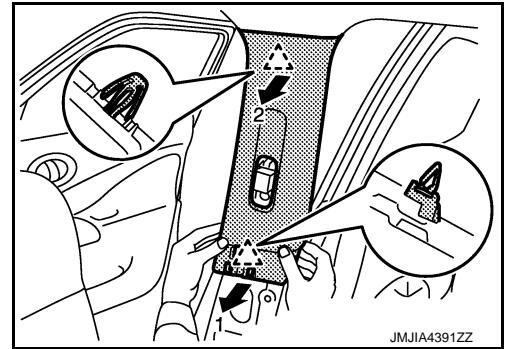

4. Disengage center pillar upper garnish upper side fixing clip using a remover tool (A).

NOTE:

Removal operation can be performed easily when pressing pawl by inserting a removal tool from direction (A) as shown in the figure.

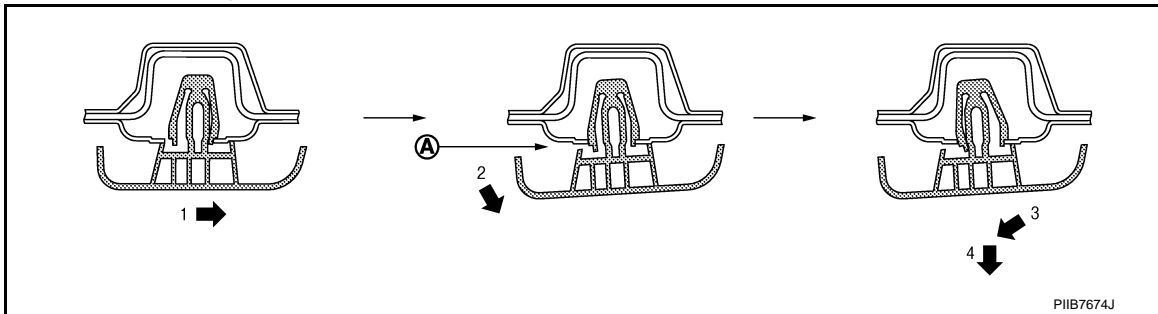

CAUTION:

Be careful not to apply excessive force when removing center pillar upper garnish. Otherwise, pawl may be damaged and fragments may drop in panel holes on body.

INSTALLATION

Note the following items, and install in the reverse order of removal.

CAUTION:

- Replace center pillar upper garnish with a new part after removal. Never reuse center pillar upper garnish.
- When installing center pillar upper garnish, check that pawls are securely in body panel holes, and press them in.


FLOOR TRIM

< REMOVAL AND INSTALLATION >

FLOOR TRIM

Exploded View

INFOID:000000007576765

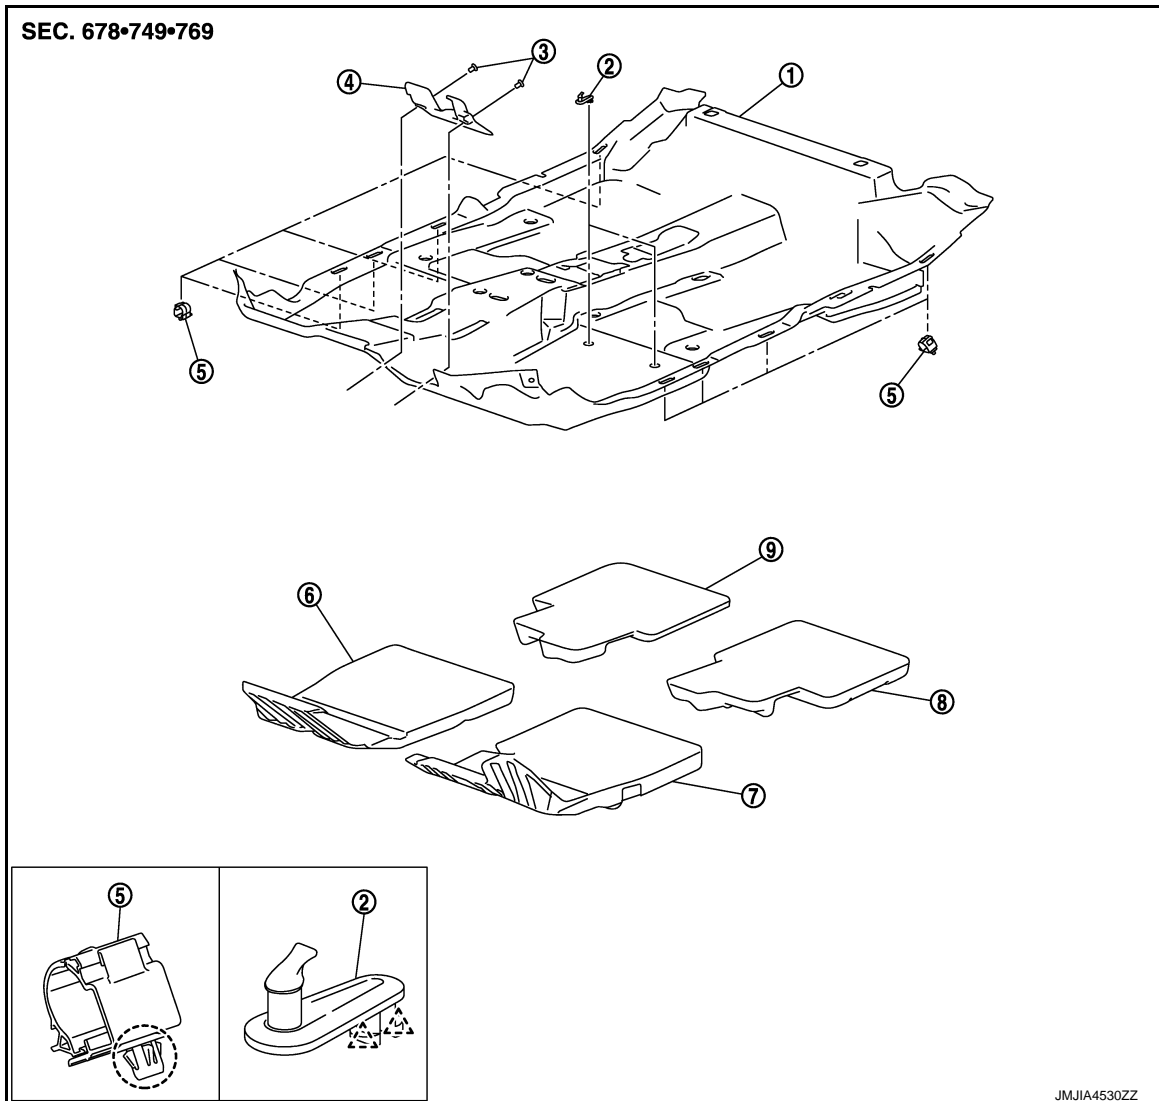

Removal and Installation

INFOID:000000007576766

REMOVAL

CAUTION:

- When removing, always use a remover tool that is made of plastic.
- Never damage the body.


1. Remove front seat assembly (LH and RH). Refer to [SE-18, "Removal and Installation"](#).
2. Remove rear seat cushion. Refer to [SE-26, "SEAT CUSHION : Removal and Installation"](#).
3. Remove center console assembly. Refer to [IP-22, "Removal and Installation"](#).
4. Remove instrument stay.

FLOOR TRIM


< REMOVAL AND INSTALLATION >

Remove instrument stay mounting nuts (A), and then remove instrument stay.

↶ : Vehicle front

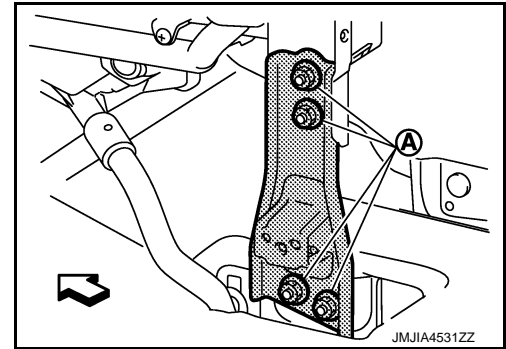


5. Disconnect drain hose. Refer to [HA-42, "A/C UNIT ASSEMBLY : Removal and Installation"](#).
6. Remove foot ducts (LH and RH). Refer to [VTL-11, "REAR HEATER DUCT 2 : Removal and Installation"](#) (Models with foot ducts).
7. Remove sift selector assembly
 - 6MT models: Refer to [TM-20, "Removal and Installation"](#).
 - CVT models: Refer to [TM-212, "Removal and Installation"](#).
8. Remove diagnosis sensor unit. Refer to [SR-27, "Removal and Installation"](#).
9. Remove parking brake lever. Refer to [PB-6, "Removal and Installation"](#).
10. Remove the inside key antenna (console lower). Refer to [DLK-162, "CONSOLE : Removal and Installation"](#) (Models with Intelligent Key system).
11. Remove center pillar lower garnish (LH and RH). Refer to [INT-21, "CENTER PILLAR LOWER GARNISH : Removal and Installation"](#).
12. Remove column hole cover.
Disengage trim clip (A), and then remove column hole cover.

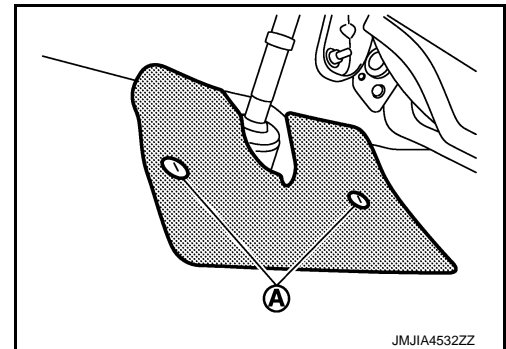

13. Remove dash side finisher (LH and RH). Refer to [INT-20, "DASH SIDE FINISHER : Removal and Installation"](#).
14. Disengage pawl using a remover tool (A) and open the harness clip.

△ : Pawl

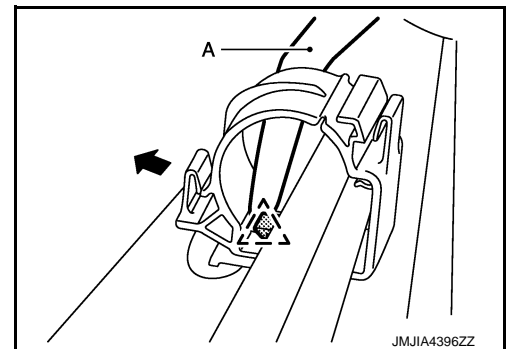


15. Remove floor carpet.

NOTE:

FLOOR TRIM

< REMOVAL AND INSTALLATION >

Disengage pawls using a remover tool (A) and remove carpet hook.

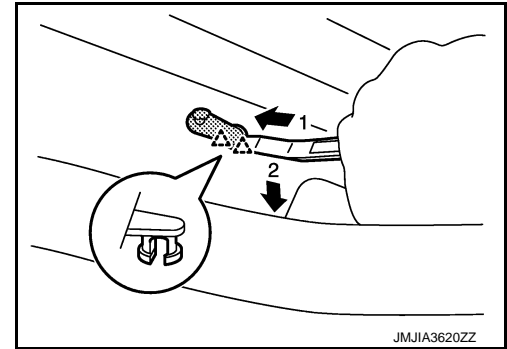

INSTALLATION

Note the following item, and install in the reverse order of removal.

CAUTION:

Replace diagnosis sensor unit fixing bolts with a new part after removal. Never reuse diagnosis sensor unit fixing bolts.

A
B
C
D
E
F
G
H
I
INT
K
L
M
N
O
P


HEADLINING

< REMOVAL AND INSTALLATION >

HEADLINING NORMAL ROOF

NORMAL ROOF : Exploded View

INFOID:000000007576767

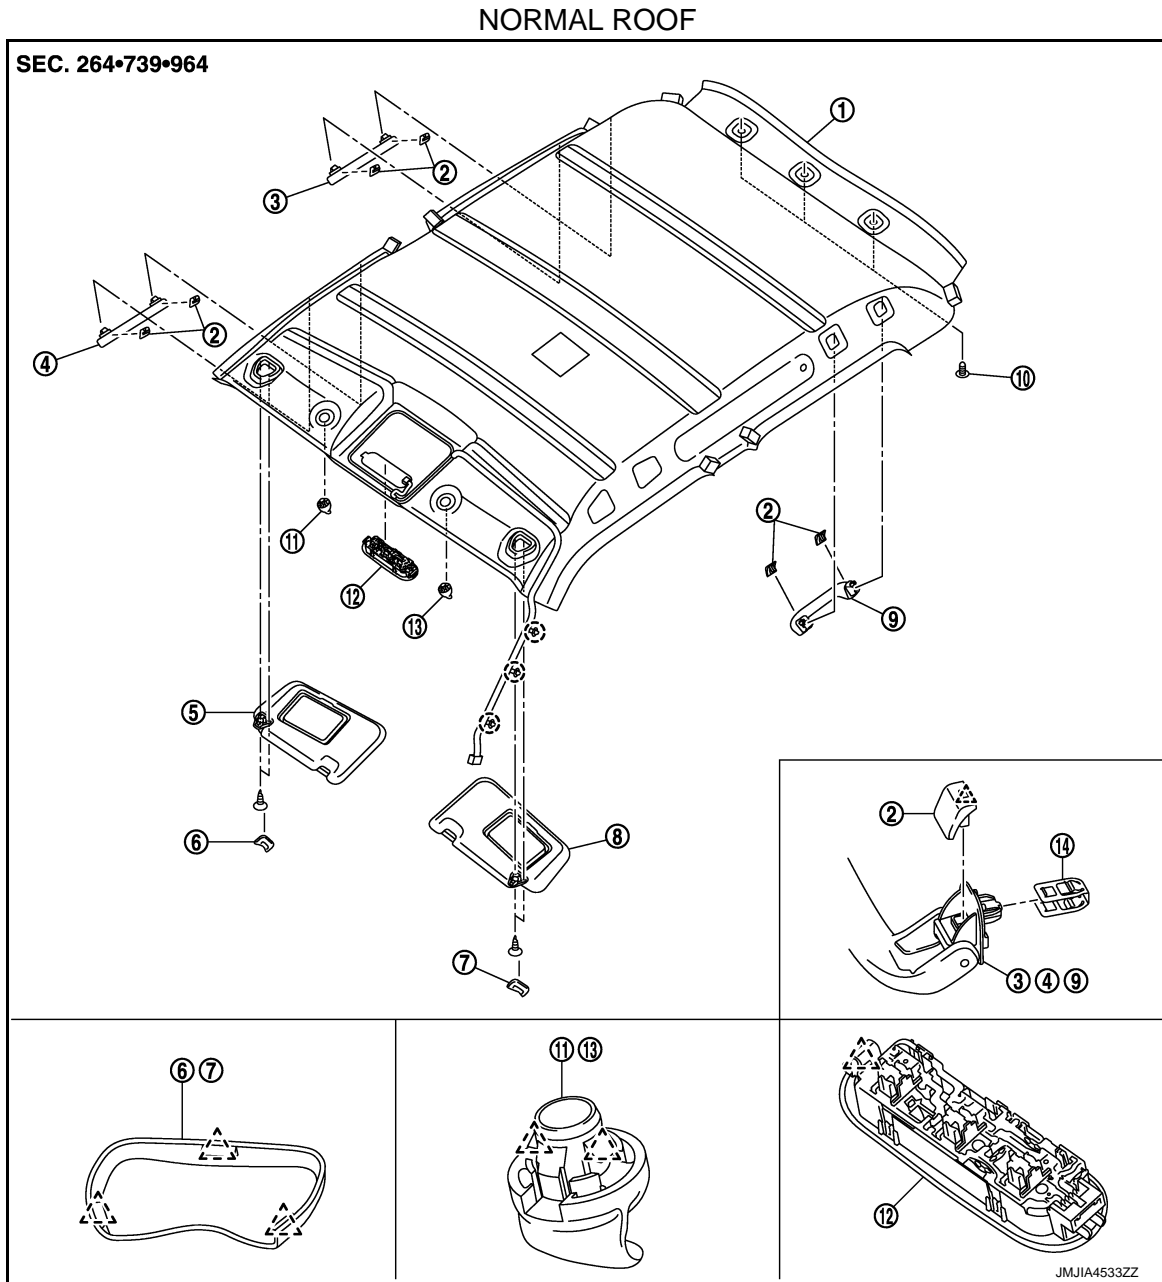

- | | | |
|-------------------------|--------------------------|------------------------|
| 1. Headlining assembly | 2. Assist grip clip | 3. Rear assist grip RH |
| 4. Front assist grip RH | 5. Sun visor assembly RH | 6. Sun visor cover RH |
| 7. Sun visor cover LH | 8. Sun visor assembly LH | 9. Rear assist grip LH |
| 10. Headlining clip | 11. Sun visor holder RH | 12. Map lamp |
| 13. Sun visor holder LH | 14. Metal clip | |

○ : Clip

△ : Pawl

NORMAL ROOF : Removal and Installation

INFOID:000000007576768

REMOVAL


HEADLINING


< REMOVAL AND INSTALLATION >

CAUTION:


- When removing, always use a remover tool that is made of plastic.
- Never damage the body.

1. Remove front pillar garnish (LH and RH). Refer to [INT-17, "FRONT PILLAR GARNISH : Removal and Installation"](#).
2. Disconnect harness connector (A) from headlining and harness clips


 : Clip

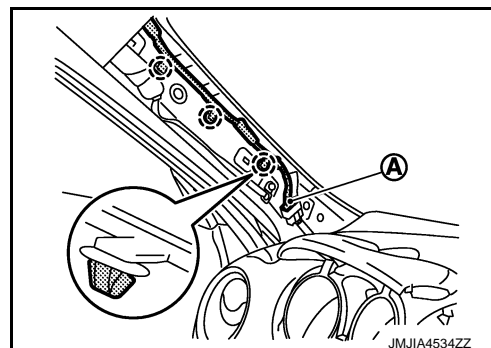

 3. Remove center pillar upper garnish (LH and RH). Refer to [INT-21, "CENTER PILLAR UPPER GARNISH : Removal and Installation"](#).
4. Remove back door weather-strip. Refer to [DLK-144, "BACK DOOR WEATHER-STRIP : Removal and Installation"](#).
5. Remove luggage side upper finisher (LH and RH). Refer to [INT-35, "LUGGAGE SIDE UPPER FINISHER : Removal and Installation"](#).
6. Remove all assist grips.
 1. Disengage pawl of assist grip clip (1) using a remover tool (A). Slide assist grip clip forward and remove it.


 : Pawl


2. Slide assist grip (2) forward and remove it.

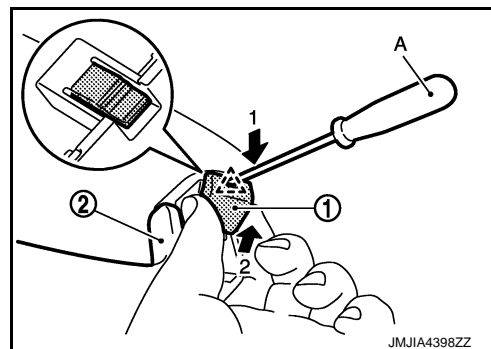

3. Remove metal clips.

 7. Remove sun visor assembly (LH and RH).
 1. Disengage sun visor cover fixing pawls with a remover tool (A), and then remove sun visor cover.

 : Pawl

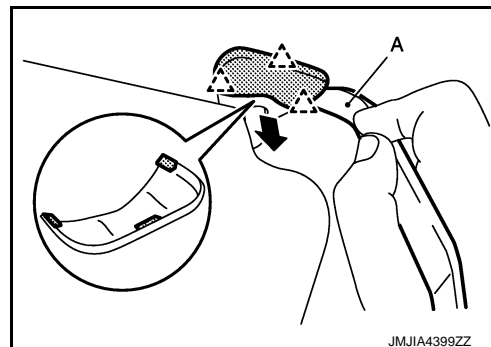


2. Remove sun visor assembly fixing screw, and then remove sun visor assembly.

8. Remove map lamp assembly. Refer to [INL-38, "Removal and Installation"](#).
9. Remove front seat assembly (passenger). Refer to [SE-18, "Removal and Installation"](#).
10. Remove sun visor holder (LH and RH).

HEADLINING

< REMOVAL AND INSTALLATION >


Rotate 90°. Remove toward vehicle lower.

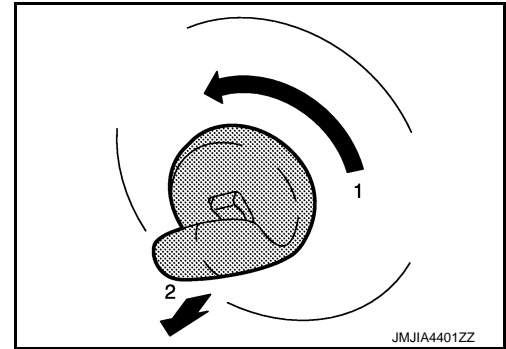

11. Remove headlining clips.
12. Remove headlining assembly through the back door.

CAUTION:

- Two workers are required for removal in order to prevent damage.
- Apply protective tape to the portion where contact may occur during work.
- Never bend headlining when removing.

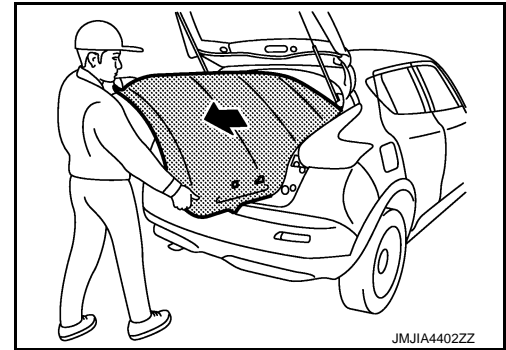

INSTALLATION

Note the following items, and install in the reverse order of removal.

CAUTION:

- When installing headlining, start by installing both sun visor holders and headlining clips in order to keep the headlining in position.
- Never bend headlining when installing.
- Be careful that the surface is not wrinkled when installing.


SUNROOF

HEADLINING

< REMOVAL AND INSTALLATION >

SUNROOF : Exploded View

INFOID:0000000007576769

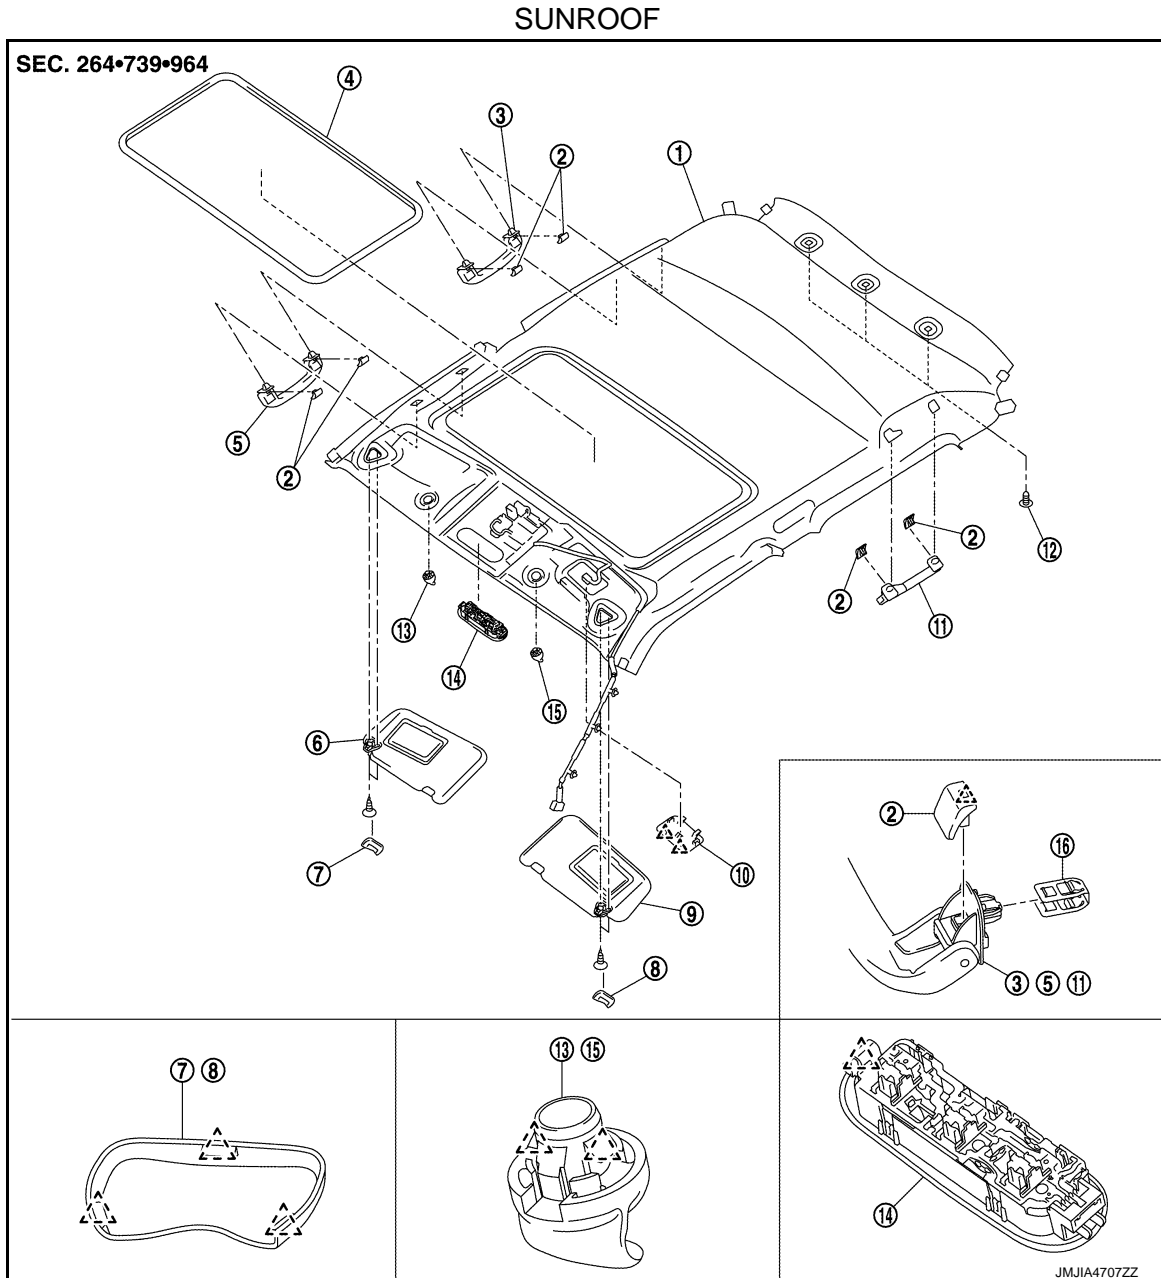

- | | | |
|-------------------------|-------------------------|--------------------------|
| 1. Headlining assembly | 2. Assist grip clip | 3. Rear assist grip RH |
| 4. Sunroof welt | 5. Front assist grip RH | 6. Sun visor assembly RH |
| 7. Sun visor cover RH | 8. Sun visor cover LH | 9. Sun visor assembly LH |
| 10. Front roof finisher | 11. Rear assist grip LH | 12. Headlining clip |
| 13. Sun visor holder RH | 14. Map lamp | 15. Sun visor holder LH |
| 16. Metal clip | | |

○ : Clip

△ : Pawl

SUNROOF : Removal and Installation

INFOID:0000000007576770

REMOVAL

CAUTION:

 
- When removing, always use a remover tool that is made of plastic.


HEADLINING

< REMOVAL AND INSTALLATION >


- **Never damage the body.**

1. Remove front pillar garnish (LH and RH). Refer to [INT-17, "FRONT PILLAR GARNISH : Removal and Installation"](#).
2. Disconnect harness connector (A) from headlining and harness clips


 : Clip

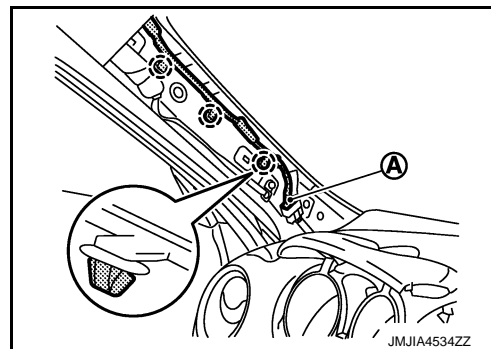

 3. Remove center pillar upper garnish (LH and RH). Refer to [INT-21, "CENTER PILLAR UPPER GARNISH : Removal and Installation"](#).
4. Remove back door weather-strip. Refer to [DLK-144, "BACK DOOR WEATHER-STRIP : Removal and Installation"](#).
5. Remove luggage side upper finisher (LH and RH). Refer to [INT-35, "LUGGAGE SIDE UPPER FINISHER : Removal and Installation"](#).
6. Remove all assist grips.
 1. Disengage pawl of assist grip clip (1) using a remover tool (A). Slide assist grip clip forward and remove it.


 : Pawl


2. Slide assist grip (2) forward and remove it.

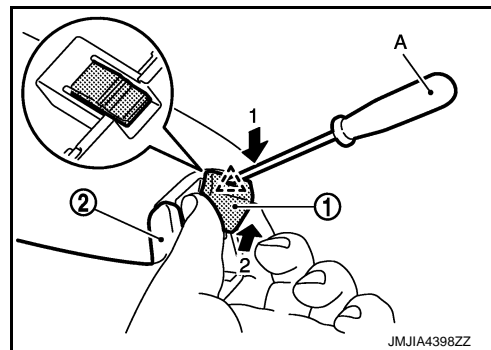

3. Remove metal clips.

 7. Remove sun visor assembly (LH and RH).
 1. Disengage sun visor cover fixing pawls with a remover tool (A), and then remove sun visor cover.

 : Pawl

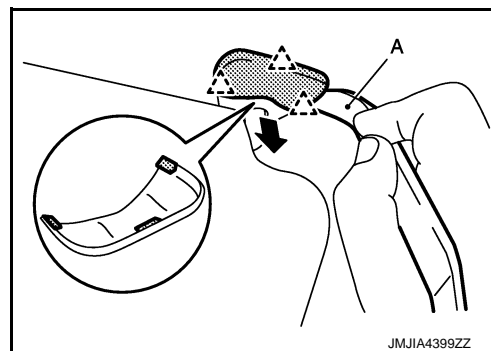


2. Remove sun visor assembly fixing screw, and then remove sun visor assembly.
8. Remove inside mirror and inside mirror cover. Refer to [MIR-13, "Removal and Installation"](#).
9. Remove map lamp assembly. Refer to [INL-38, "Removal and Installation"](#).
10. Remove sunroof welt.
11. Remove front roof finisher.


HEADLINING

< REMOVAL AND INSTALLATION >


1. Disengage front roof finisher fixing pawls with a remover tool (A).

 : Pawl

2. Disconnect harness connector, and then remove front roof finisher.

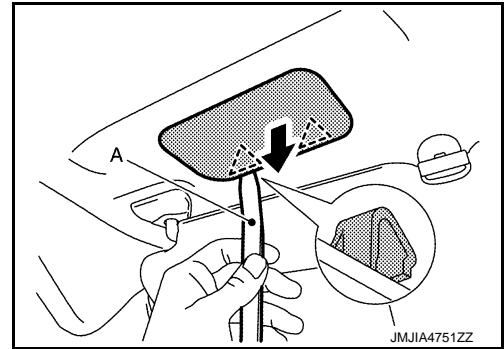


12. Remove front seat assembly (passenger). Refer to [SE-18. "Removal and Installation"](#).
13. Remove sun visor holder (LH and RH)
Rotate 90°. Remove toward vehicle lower.

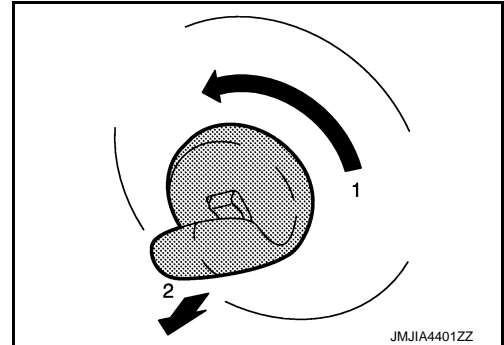

14. Remove headlining clips.
15. Remove headlining assembly through the back door.

CAUTION:

- Two workers are required for removal in order to prevent damage.
- Apply protective tape to the portion where contact may occur during work.
- Never bend headlining when removing.

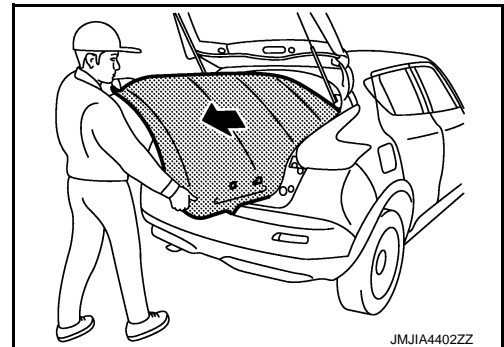


INSTALLATION

Note the following items, and install in the reverse order of removal.

CAUTION:

- When installing headlining, start by installing both sun visor holders and headlining clips in order to keep the headlining in position.
- Never bend headlining when installing.
- Be careful that the surface is not wrinkled when installing.
- Align sunroof welt connection (A) to (B) when installing sunroof welt.

 : Vehicle front

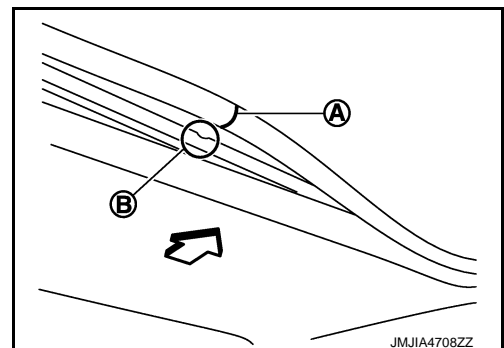

LUGGAGE FLOOR TRIM


< REMOVAL AND INSTALLATION >

LUGGAGE FLOOR TRIM

Exploded View

INFOID:000000007576771

2WD models

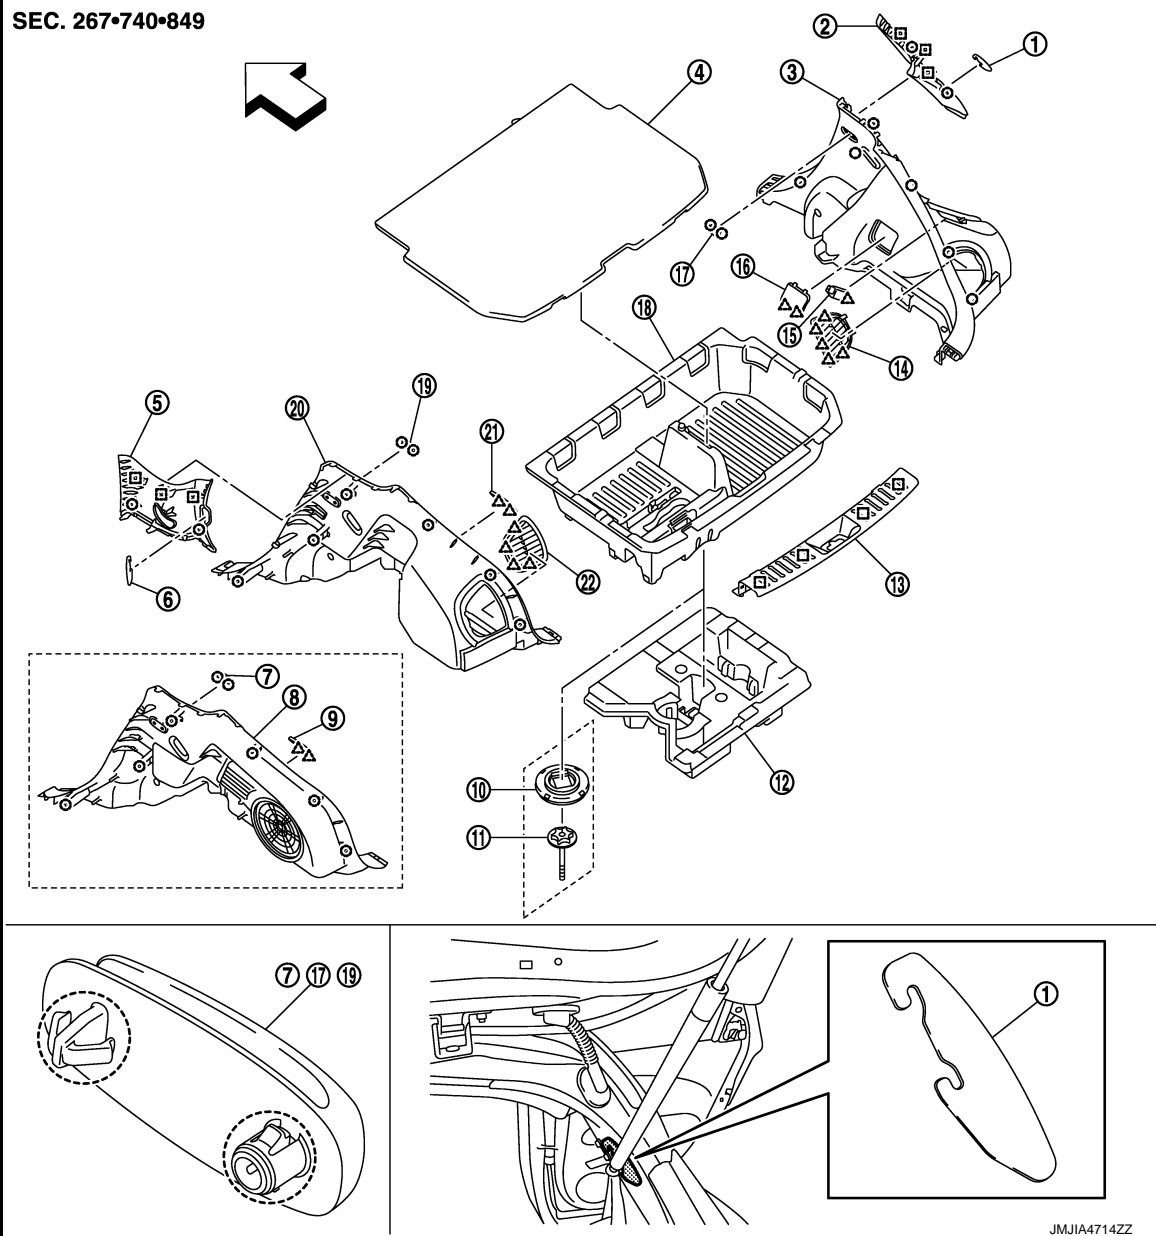

- | | | |
|--|---|--|
| 1. Rear pillar cap RH | 2. Luggage side upper finisher RH | 3. Luggage side lower finisher RH |
| 4. Luggage floor board | 5. Luggage side upper finisher LH | 6. Rear pillar cap LH |
| 7. Seat belt hook LH (Models with woofer) | 8. Luggage side lower finisher LH (Models with woofer) | 9. Shock absorber mask LH (Models with woofer) |
| 10. Luggage floor rear center spacer (Models with spare tire) | 11. Spare tire clamp (Models with spare tire) | 12. Repair kit holder (Models without spare tire) |
| 13. Luggage rear plate | 14. Luggage side lower finisher grille RH | 15. Luggage room lamp |
| 16. Shock absorber mask RH | 17. Seat belt hook RH | 18. Luggage floor box |
| 19. Seat belt hook LH | 20. Luggage side lower finisher LH | 21. Shock absorber mask LH |
| 22. Luggage side lower finisher grille LH | | |


○ : Clip
△ : Pawl

LUGGAGE FLOOR TRIM

< REMOVAL AND INSTALLATION >

- : Metal clip
 ⇐ : Vehicle front

AWD models

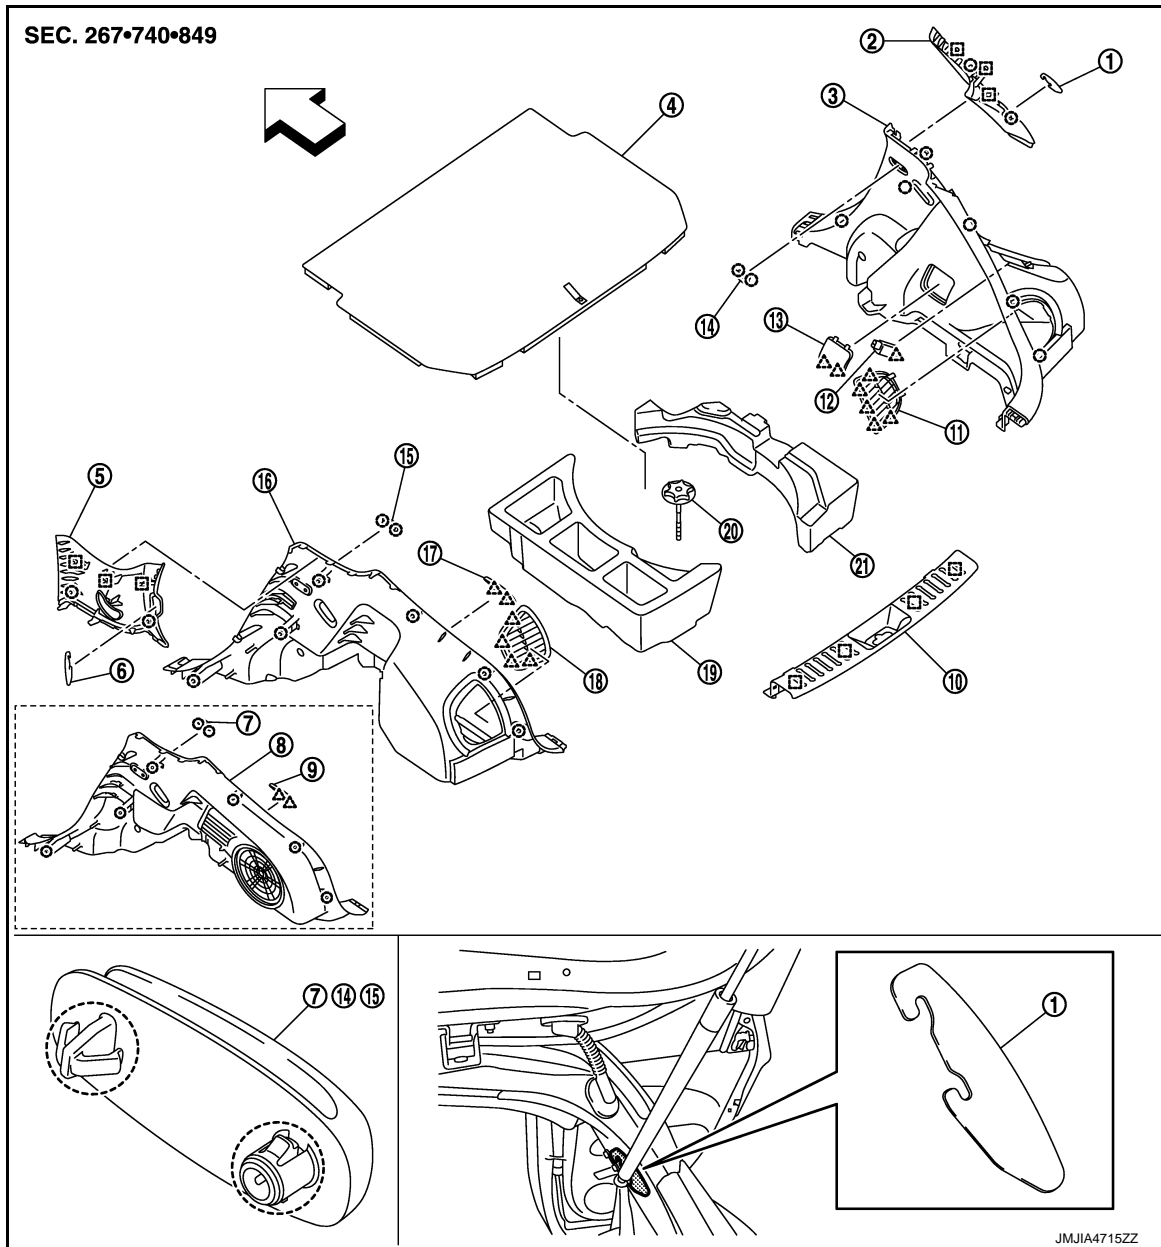

- | | | |
|--|---|---|
| 1. Rear pillar cap RH | 2. Luggage side upper finisher RH | 3. Luggage side lower finisher RH |
| 4. Luggage floor board | 5. Luggage side upper finisher LH | 6. Rear pillar cap LH |
| 7. Seat belt hook LH (Models with woofer) | 8. Luggage side lower finisher LH (Models with woofer) | 9. Shock absorber mask LH (Models with woofer) |
| 10. Luggage rear plate | 11. Luggage side lower finisher grille RH | 12. Luggage room lamp |
| 13. Shock absorber mask RH | 14. Seat belt hook RH | 15. Seat belt hook LH |
| 16. Luggage side lower finisher LH | 17. Shock absorber mask LH | 18. Luggage side lower finisher grille LH |
| 19. Luggage floor rear spacer LH | 20. Spare tire clamp | 21. Luggage floor rear spacer RH |

- : Clip
 △ : Pawl
 □ : Metal clip
 ⇐ : Vehicle front

A

B

C

D

E

F

G

H

I

INT

K

L

M

N

O

P

LUGGAGE FLOOR TRIM

< REMOVAL AND INSTALLATION >

LUGGAGE REAR PLATE

LUGGAGE REAR PLATE : Removal and Installation

INFOID:000000007576772


CAUTION:

- When removing, always use a remover tool that is made of plastic.
- Never damage the body.

REMOVE

1. Remove back door weather-strip. Refer to [DLK-144, "BACK DOOR WEATHER-STRIP : Removal and Installation"](#).
2. Disengage luggage rear plate fixing metal clip with a remover tool (A), and then remove luggage rear plate.

 : Metal clip

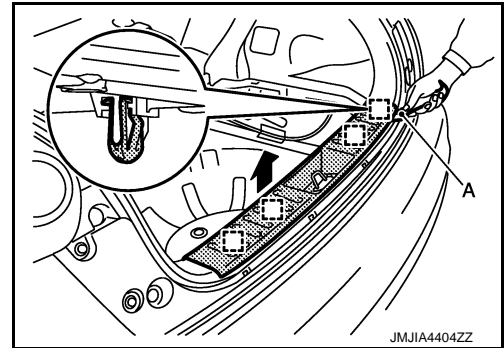

INSTALLATION

Note the following items, and install in the reverse order of removal.

CAUTION:

When installing luggage rear plate, check that metal clips are securely in body panel holes, and press them in.

LUGGAGE SIDE LOWER FINISHER

LUGGAGE SIDE LOWER FINISHER : Removal and Installation


INFOID:000000007576773


REMOVAL

CAUTION:

- When removing, always use a remover tool that is made of plastic.
- Never damage the body.

1. Remove luggage room lamp. Refer to [INL-42, "Removal and Installation"](#).
2. Remove luggage floor board.
3. Remove luggage floor box.(Models with 2WD)
4. Remove luggage rear plate. Refer to [INT-34, "LUGGAGE REAR PLATE : Removal and Installation"](#).
5. Remove rear body side welt. Refer to [INT-20, "BODY SIDE WELT : Removal and Installation"](#).
6. Remove rear seat cushion. Refer to [SE-26, "SEAT CUSHION : Removal and Installation"](#).
7. Remove rear seat back. Refer to [SE-27, "SEATBACK : Removal and Installation"](#).
8. Remove side hinge of seatback hinge. Refer to [SE-32, "SEATBACK HINGE : Removal and Installation"](#).
9. Disengage luggage side lower finisher fixing clips with a remover tool (A), and then remove luggage side lower finisher.

 : Clip

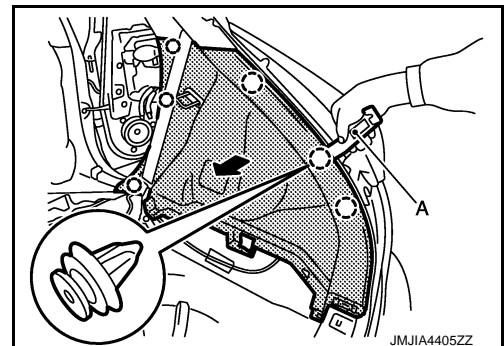

INSTALLATION

Note the following item, and install in the reverse order of removal.

LUGGAGE FLOOR TRIM

< REMOVAL AND INSTALLATION >

CAUTION:

When installing luggage side lower finisher, check that clips are securely in body panel holes, and press them in.


Removal and Installation of Shock Absorber Mask

CAUTION:

When removing, always use a remover tool that is made of plastic.


REMOVAL

1. Disengage shock absorber mask fixing pawls with a remover tool (A), and then remove shock absorber mask.

 : Pawl

CAUTION:

Apply protective tape (B) on the parts to protect it from damage.

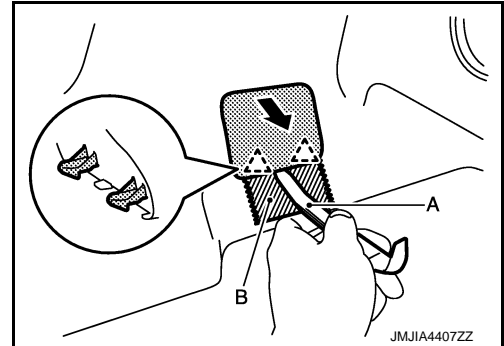

INSTALLATION

Install in the reverse order of removal.


Removal and Installation of Luggage Side Lower Finisher Grille

CAUTION:

When removing, always use a remover tool that is made of plastic.


REMOVAL

Disengage luggage side lower finisher grille fixing pawls with a remover tool (A), and then remove luggage side lower finisher grille.

 : Pawl

CAUTION:

Apply protective tape (B) on the parts to protect it from damage.

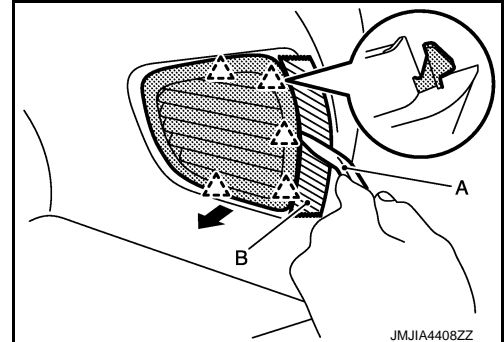

INSTALLATION

Install in the reverse order of removal.

LUGGAGE SIDE UPPER FINISHER

LUGGAGE SIDE UPPER FINISHER : Removal and Installation

INFOID:000000007576774

REMOVAL

CAUTION:

- When removing, always use a remover tool that is made of plastic.
- Never damage the body.


1. Remove luggage side lower finisher. Refer to [INT-34, "LUGGAGE SIDE LOWER FINISHER : Removal and Installation"](#).
2. Remove rear seat belt (floor) anchor bolt. Refer to [SB-12, "SEAT BELT RETRACTOR : Removal and Installation"](#).

LUGGAGE FLOOR TRIM

< REMOVAL AND INSTALLATION >

3. Disengage luggage side upper finisher fixing clips and metal clips with a remover tool (A), and then remove luggage side upper finisher.

- : Clip
□ : Metal clip

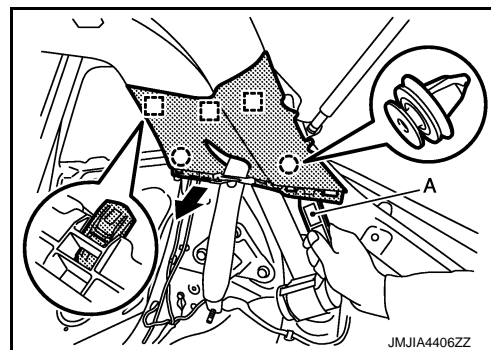

INSTALATION

Note the following item, and install in the reverse order of removal.

CAUTION:

When installing luggage side upper finisher, check that clips, and metal clips are securely in body panel holes, and press them in.


BACK DOOR TRIM

< REMOVAL AND INSTALLATION >

BACK DOOR TRIM

Exploded View

INFOID:000000007576775

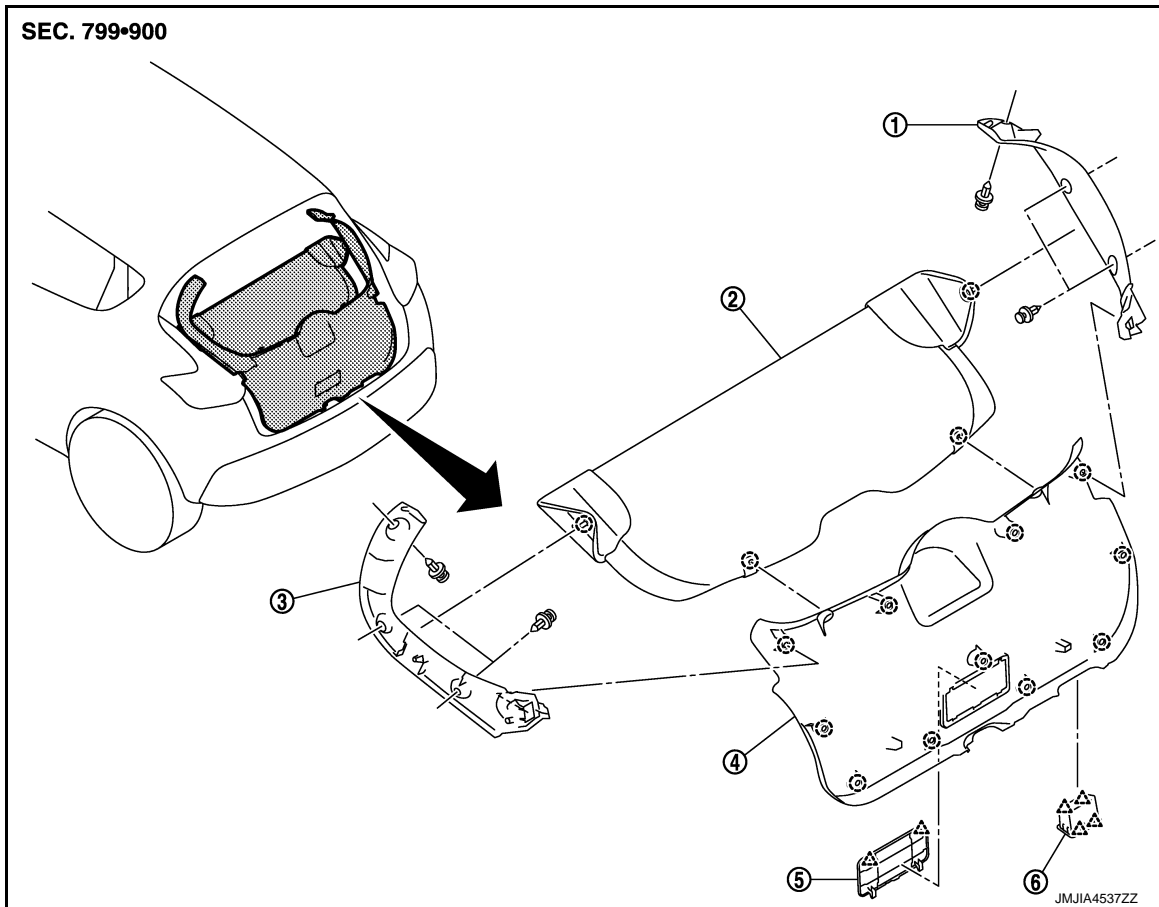

- | | | |
|-------------------------------|-------------------------------|-------------------------------|
| 1. Back door side finisher RH | 2. Rear parcel shelf finisher | 3. Back door side finisher LH |
| 4. Back door lower finisher | 5. Emergency lid | 6. Back door pull handle |

○ : Clip

△ : Pawl

BACK DOOR PULL HANDLE

BACK DOOR PULL HANDLE : Removal and Installation

INFOID:000000007576776

REMOVAL

CAUTION:


- When removing, always use a remover tool that is made of plastic.
- Never damage the back door panel.


1. Fully open back door.

BACK DOOR TRIM

< REMOVAL AND INSTALLATION >

2. Disengage back door pull handle fixing pawls with a remover tool (A), and then remove back door pull handle.

 : Pawl

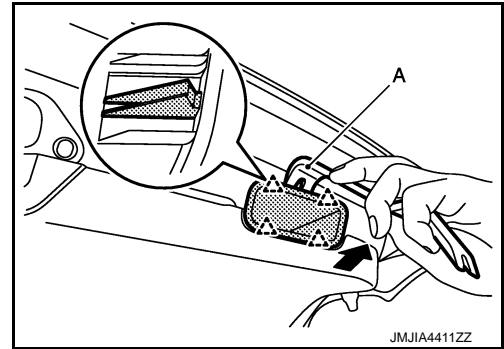

INSTALLATION

Install in the reverse order of removal.

BACK DOOR LOWER FINISHER

BACK DOOR LOWER FINISHER : Removal and Installation


INFOID:000000007576777


REMOVAL

CAUTION:

- When removing, always use a remover tool that is made of plastic.
- Never damage the back door panel.

1. Fully open back door.
2. Remove rear parcel shelf finisher. (Models with rear parcel shelf finisher)
3. Disengage back door lower finisher fixing clips with a remover tool (A), and then remove back door lower finisher.

 : Clip

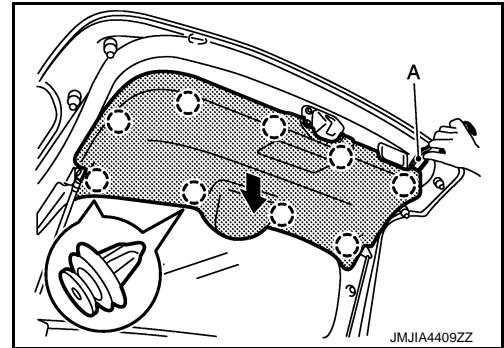

INSTALLATION

Note the following item, and install in the reverse order of removal.

CAUTION:

When installing back door lower finisher, check that clips are securely in back door panel holes, and press them in.

BACK DOOR SIDE FINISHER

BACK DOOR SIDE FINISHER : Removal and Installation

INFOID:000000007576778

REMOVAL

CAUTION:


- When removing, always use a remover tool that is made of plastic.
- Never damage the back door panel.

1. Fully open back door.
2. Remove back door lower finisher. Refer to [INT-38, "BACK DOOR LOWER FINISHER : Removal and Installation"](#).

BACK DOOR TRIM

< REMOVAL AND INSTALLATION >

3. Disengage back door side finisher fixing clips, and then remove back door side finisher.

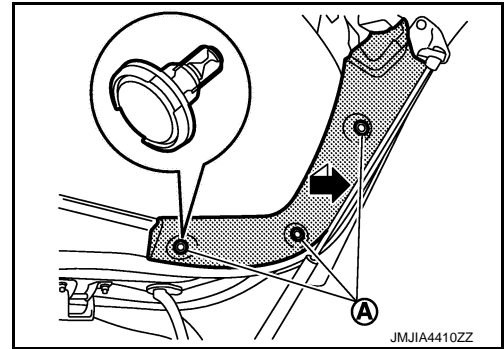

INSTALLATION

Note the following item, and install in the reverse order of removal.

CAUTION:

When installing back door side finisher, check that clips are securely in back door panel holes, and press them in.

EMERGENCY LID

EMERGENCY LID : Removal and Installation


INFOID:000000007576779

REMOVAL

CAUTION:


When removing, always use a remover tool that is made of plastic.

1. Fully open back door.
2. Disengage emergency lid fixing pawls with a remover tool (A), and then remove emergency lid.

 : Pawl

CAUTION:

Apply protective tape (B) on the parts to protect it from damage.

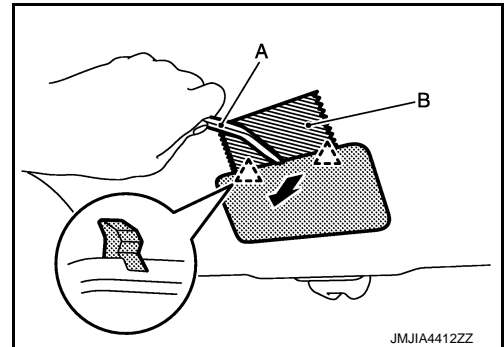

INSTALLATION

Install in the reverse order of removal.