



## SUPER MULTIPLE JUNCTION (SMJ)

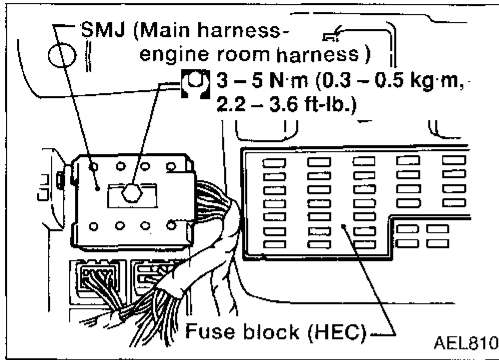

### INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

: 3 - 5 N·m  
(0.3 - 0.5 kg·m, 2.2 - 3.6 ft·lb)



### CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

# SUPER MULTIPLE JUNCTION (SMJ)

## Terminal Arrangement


### MAIN ROOM HARNESS

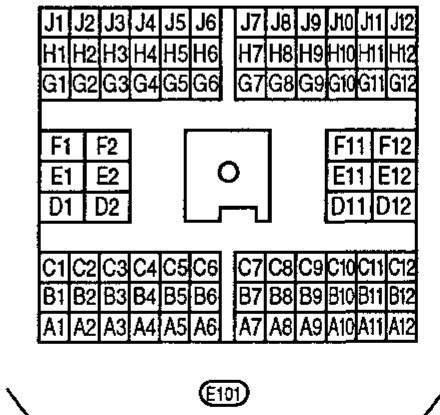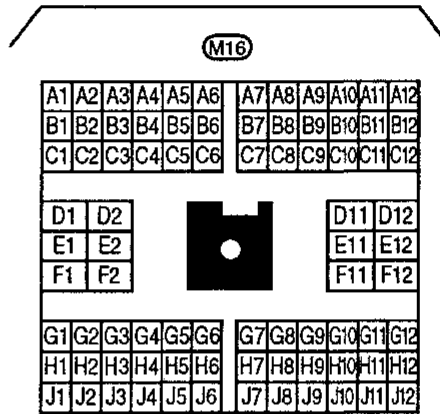


### ENGINE HARNESS

# JOINT CONNECTOR (J/C)

## Location



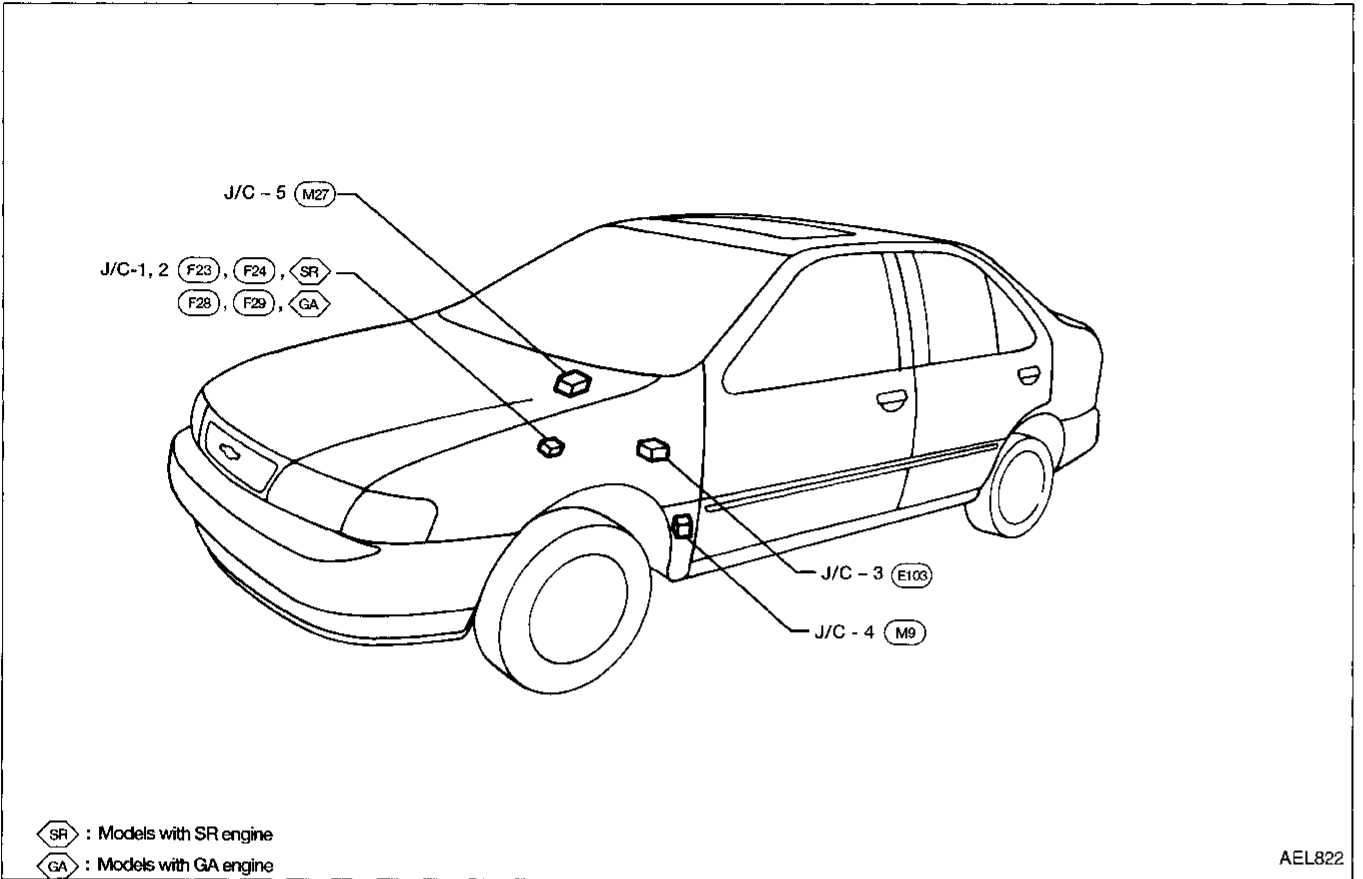


## Terminal Arrangement

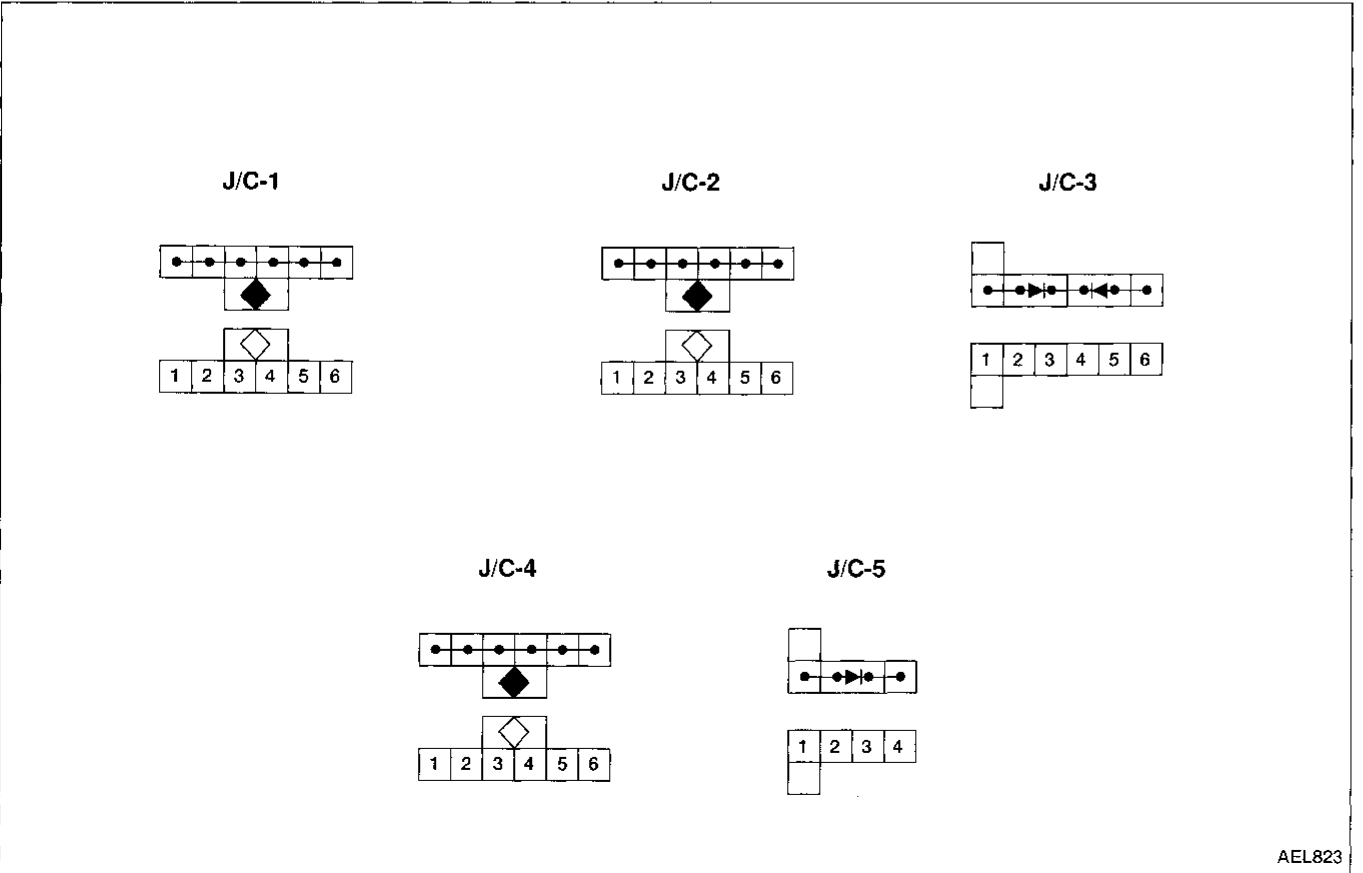

# HYBRID ELECTRIC CONTROL UNIT (HEC)


## Construction and Terminal Arrangement

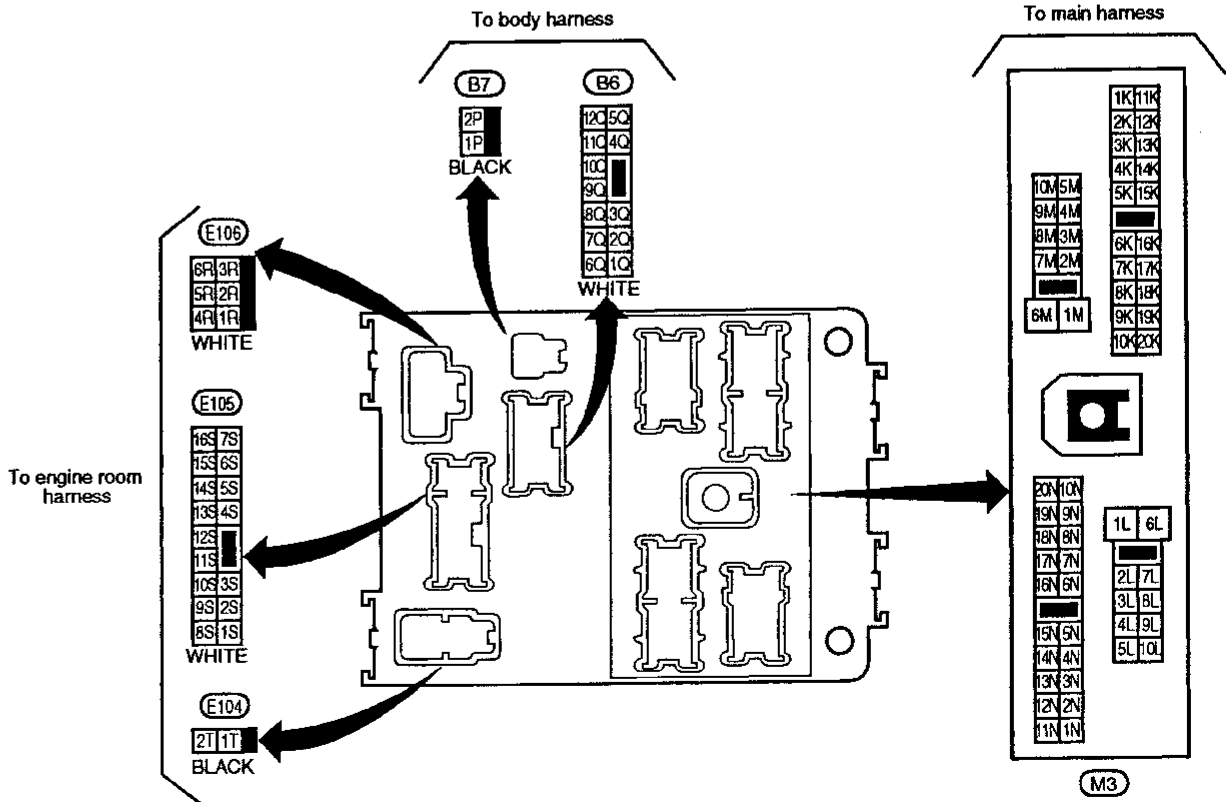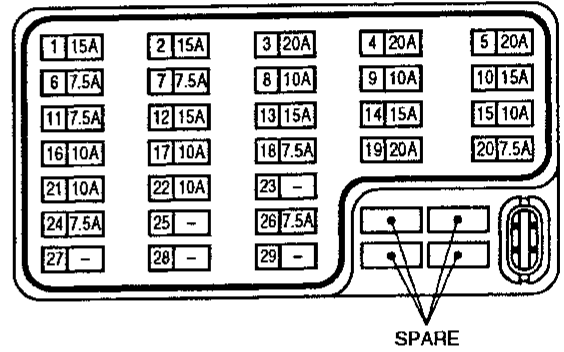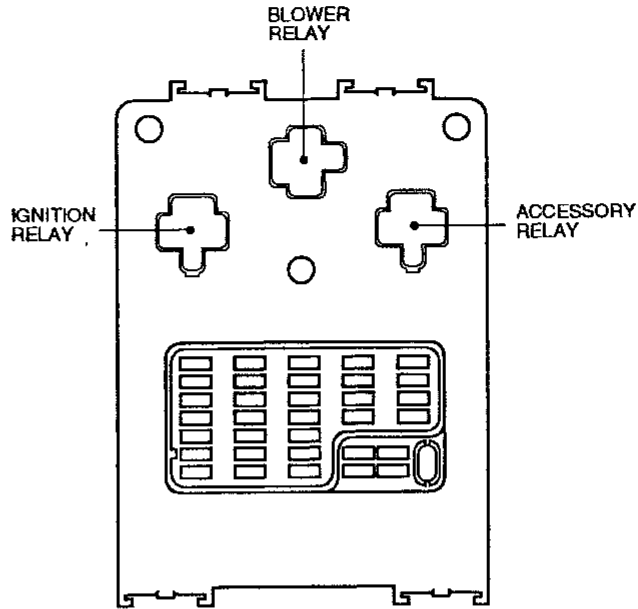


# FUSE BLOCK/FUSIBLE LINK AND FUSE BOX

## Fuse Arrangement

Fusible link box (E15)

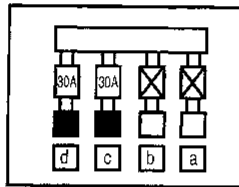


Fusible link box (E17)

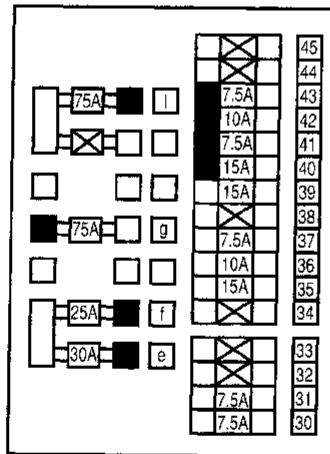


# CONTROL UNITS

 
## SMART ENTRANCE CONTROL UNIT




## AIRBAG DIAGNOSIS SENSOR UNIT

 


## ABS CONTROL UNIT

 

## A/T CONTROL UNIT

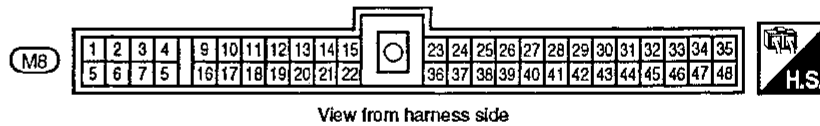

## ECM (ECCS CONTROL MODULE)

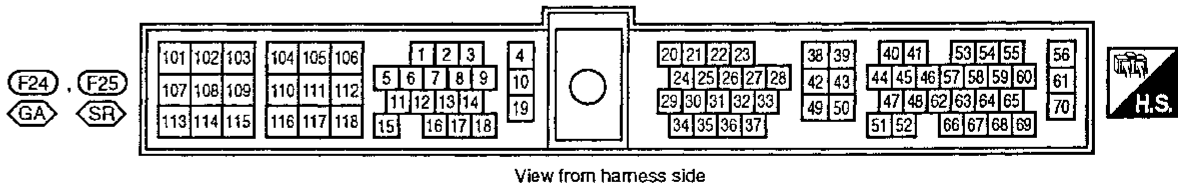

- : Models with GA engines
- : Models with SR engines