

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS actuator ..... BR-37  
 ABS (anti-lock brake system)..... BR-33  
 ABS circuit diagram..... BR-57  
 ABS control unit ..... BR-36  
 ABS self-diagnosis ..... BR-45  
 ABS symptom chart ..... BR-47  
 ABS system components ..... BR-34  
 ABS wheel sensors ..... BR-35  
 ABS wiring diagram..... BR-40  
 A/C air flow..... HA-13  
 A/C circuit diagram..... HA-33  
 A/C component layout..... HA-12  
 A/C compressor clutch removal and  
   installation ..... HA-58  
 A/C compressor precaution..... HA-5  
 A/C control operation ..... HA-14  
 A/C diagnostic work flow..... HA-15  
 A/C harness layout..... HA-31  
 A/C HFC134a (R134a) system precaution ..... HA-2  
 A/C HFC134a (R134a) system service tools..... HA-6  
 A/C lubricant oil..... HA-53  
 A/C operational check..... HA-16  
 A/C performance chart..... HA-26  
 A/C performance test diagnoses..... HA-24  
 A/C relay..... HA-49  
 A/C service data specification ..... HA-64  
 A/C switch ..... HA-48  
 A/C symptom chart..... HA-18  
 A/C trouble diagnoses..... HA-15  
 Accelerator control system..... FE-2  
 Accelerator wire adjustment..... FE-2  
 Activated carbon canister (GA engine) ..... EC-246  
 Activated carbon canister inspection  
   (GA engine)..... EC-246  
 Activated carbon canister inspection  
   (SR engine)..... EC-19  
 Activated carbon canister (SR engine) ..... EC-19  
 Air bag..... RS-9  
 Air bag disposal..... RS-17  
 Air bag module..... RS-13  
 Air bag precautions ..... GI-2  
 Air bag removal and installation..... RS-13  
 Air bleeding for brake system ..... BR-5  
 Air cleaner filter replacement (GA engine)..... MA-22  
 Air cleaner filter replacement (SR engine)..... MA-14  
 Air conditioner cut control (GA engine)..... EC-245  
 Air conditioner cut control (SR engine)..... EC-17  
 Air flow meter - See Mass air flow sensor  
   (GA engine)..... EC-323  
 Air flow meter - See Mass air flow sensor  
   (SR engine)..... EC-98  
 Air spoiler, rear - See Rear air spoiler..... BT-27

Alternator - See Generator..... EL-36  
 Angular tightening application ..... EM-2  
 Anti-freeze coolant ..... MA-8  
 Anti-freeze coolant mixture ratio ..... MA-9  
 ASCD (automatic speed control device)..... EL-167  
 A/T control unit..... AT-125  
 A/T diagnosis communication line  
   (SR engine)..... EC-189  
 A/T fluid temperature sensor..... AT-129  
 A/T removal and installation..... AT-154  
 A/T self-diagnoses (RE4F03V) ..... AT-68  
 A/T shift lock system ..... AT-140  
 A/T trouble diagnoses (RE4F03V) ..... AT-36  
 A/T trouble diagnoses (RL4F03A) ..... AT-17  
 Audio ..... EL-147  
 Audio and A/C control removal and  
   installation - See Instrument panel..... BT-12  
 Automatic transaxle number ..... GI-34  
 Automatic transmission fluid ..... MA-8  
 Automatic transmission fluid replacement ..... MA-26  
 Auxiliary air control (AAC) (GA engine) ..... EC-341  
 Auxiliary air control (AAC) (SR engine) ..... EC-116

## B

Back window ..... BT-33  
 Back-up lamp ..... EL-55  
 Back-up lamp switch (MT) (RS5F31A) ..... MT-10  
 Back-up lamp switch (MT) (RS5F32V) ..... MT-31  
 Ball joint front axle..... FA-27  
 Battery ..... EL-17  
 Baulk ring (MT) (RS5F31A) ..... MT-11  
 Baulk ring (MT) (RS5F32V) ..... MT-32  
 Belt inspection (drive belt) (GA engine)..... MA-18  
 Belt inspection (drive belt) (SR engine)..... MA-10  
 Blower motor ..... HA-48  
 Blower resistor..... HA-48  
 Board-on lift..... GI-36  
 Body alignment..... BT-37  
 Boring/horning cylinder block (GA engine) ..... EM-100  
 Boring/horning cylinder block (SR engine) ..... EM-53  
 Brake control valve (Proportioning Valve)..... BR-8  
 Brake fluid ..... MA-8  
 Brake fluid change ..... BR-4  
 Brake fluid level..... MA-27  
 Brake fluid level and line check ..... BR-4  
 Brake hydraulic line..... BR-6  
 Brake inspection..... MA-27  
 Brake lines and cables inspection ..... MA-27  
 Brake lining temporary checking..... MA-28  
 Brake master cylinder ..... BR-11  
 Brake pedal ..... BR-10  
 Bumper, front - See Front bumper..... BT-5

# ALPHABETICAL INDEX

Bumper, rear - See Rear bumper ..... BT-7

## C

Camshaft inspection (GA engine) ..... EM-82  
 Camshaft inspection (SR engine) ..... EM-36  
 Camshaft position sensor (CMPS)  
     (GA engine) ..... EC-318  
 Camshaft position sensor (CMPS)  
     (SR engine) ..... EC-93  
 Camshaft position sensor inspection  
     (GA engine) ..... EC-321  
 Camshaft position sensor inspection  
     (SR engine) ..... EC-96  
 Canister control (GA engine) ..... EC-246  
 Canister control solenoid valve (GA engine) .... EC-433  
 Canister control solenoid valve inspection  
     (GA engine) ..... EC-433  
 Canister control solenoid valve inspection  
     (SR engine) ..... EC-209  
 Canister control solenoid valve (SR engine) .... EC-209  
 Canister control (SR engine) ..... EC-19  
 Canister inspection (GA engine) ..... EC-246  
 Canister inspection (SR engine) ..... EC-19  
 Canister purge control (GA engine) ..... EC-246  
 Canister purge control (SR engine) ..... EC-19  
 Canister purge control valve (GA engine) ..... EC-246  
 Canister purge control valve (SR engine) ..... EC-19  
 Charging system ..... EL-33  
 Chassis and body maintenance ..... MA-25  
 Cigarette lighter ..... EL-138  
 Circuit breaker ..... EL-16  
 Closed loop control (GA engine) ..... EC-378  
 Closed loop control (SR engine) ..... EC-157  
 Clutch cable ..... CL-3  
 Clutch cover ..... CL-6  
 Clutch disc ..... CL-6  
 Clutch pedal ..... CL-3  
 Clutch pedal free play ..... CL-4  
 Clutch pedal height ..... CL-4  
 Clutch release bearing ..... CL-5  
 Clutch withdrawal lever ..... CL-5  
 Coil spring (front) ..... FA-25  
 Coil spring (rear) ..... RA-10  
 Combination lamp, rear, removal and  
     installation ..... BT-26  
 Combination meter (needle type)  
     (w/tachometer) ..... EL-75  
 Combination meter (needle type)  
     (wo/tachometer) ..... EL-81  
 Combination meter (w/tachometer) ..... EL-75  
 Combination meter (wo/tachometer) ..... EL-81

Combination meter removal and installation -  
     See Instrument panel ..... BT-12  
 Combination switch ..... EL-40  
 Compression pressure (GA engine) ..... EM-65 **GI**  
 Compression pressure (SR engine) ..... EM-10  
 Compressor clutch removal and installation ..... HA-58  
 Compressor mounting ..... HA-57 **MA**  
 Compressor precaution ..... HA-5  
 Connecting rod (GA engine) ..... EM-98  
 Connecting rod (SR engine) ..... EM-51  
 Connecting rod bearing clearance  
     (GA engine) ..... EM-102 **LC**  
 Connecting rod bearing clearance  
     (SR engine) ..... EM-55  
 Connecting rod bushing clearance  
     (GA engine) ..... EM-103 **EC**  
 Console box - See Instrument panel ..... BT-12  
 CONSULT for ABS ..... BR-48 **FE**  
 Consult for ECCS (GA engine) ..... EC-268  
 Consult for ECCS (SR engine) ..... EC-42 **CL**  
 CONSULT general information ..... GI-31  
 Control lever (MT) ..... MT-9  
 Control valve (AT) (RE4F03V) ..... AT-203 **MT**  
 Control valve (AT) (RL4F03A) ..... AT-195  
 Converter housing installation ..... AT-272  
 Coolant replacement (GA engine) ..... MA-19 **AT**  
 Coolant replacement (SR engine) ..... MA-11  
 Cooling circuit (GA engine) ..... LC-17 **FA**  
 Cooling circuit (SR engine) ..... LC-8  
 Cooling fan control (GA engine) ..... EC-345  
 Cooling fan control (SR engine) ..... EC-120 **RA**  
 Cooling fan control system (GA engine) ..... LC-23  
 Cooling fan control system (SR engine) ..... LC-12 **BR**  
 Cooling fan (GA engine) ..... LC-23  
 Cooling fan (SR engine) ..... LC-12  
 Cooling fan motor inspection (GA engine) ..... EC-353  
 Cooling fan motor inspection (SR engine) ..... EC-132 **ST**  
 Cooling fan relay inspection (GA engine) ..... EC-353  
 Cooling fan relay inspection (SR engine) ..... EC-132 **RS**  
 Counter gear (MT) (RS5F31A) ..... MT-11  
 Counter gear (MT) (RS5F32V) ..... MT-32  
 Coupling sleeve (MT) (RS5F31A) ..... MT-11 **BT**  
 Coupling sleeve (MT) (RS5F32V) ..... MT-32  
 Crank angle sensor built into distributor - See  
     Camshaft position sensor (GA engine) ..... EC-318 **HA**  
 Crank angle sensor built into distributor - See  
     Camshaft position sensor (SR engine) ..... EC-93 **EL**  
 Crank case ventilation system (GA engine) ..... EC-248  
 Crank case ventilation system (SR engine) ..... EC-21  
 Crankshaft assembly (GA engine) ..... EM-104 **IDX**  
 Crankshaft assembly (SR engine) ..... EM-58  
 Crankshaft bearing clearance (GA engine) ..... EM-101  
 Crankshaft bearing clearance (SR engine) ..... EM-54  
 Crankshaft inspection (GA engine) ..... EM-100

# ALPHABETICAL INDEX

Crankshaft inspection (SR engine) .....	EM-53
Crankshaft position sensor (OBD) (GA engine) .....	EC-406
Crankshaft position sensor (OBD) inspection (GA engine) .....	EC-409
Crankshaft position sensor (OBD) inspection (SR engine) .....	EC-188
Crankshaft position sensor (OBD) (SR engine) .....	EC-185
Cruise control - See ASCD .....	EL-167
Cylinder block (GA engine) .....	EM-96
Cylinder block (SR engine) .....	EM-49
Cylinder block boring (GA engine) .....	EM-100
Cylinder block boring (SR engine) .....	EM-53
Cylinder head (GA engine) .....	EM-81
Cylinder head (SR engine) .....	EM-32
Cylinder head bolt tightening (GA engine) .....	EM-74
Cylinder head bolt tightening (SR engine) .....	EM-24

## D

Daytime light system .....	EL-46
Daytime running light - See Daytime light system .....	EL-46
Detonation sensor - See Knock sensor (SR engine) .....	EC-148
Detonation sensor - See Knock sensor (GA engine) .....	EC-369
Device (FICD) solenoid valve (GA engine) .....	EC-451
Device (FICD) solenoid valve (SR engine) .....	EC-230
Diagnostic trouble code (DTC) for ECCS OBD system (GA engine) .....	EC-258
Diagnostic trouble code (DTC) for ECCS OBD system (SR engine) .....	EC-32
Differential gear (FF AT) (RE4F03V) .....	AT-267
Differential gear (FF AT) (RL4F03A) .....	AT-263
Differential gear (FF MT) (RS5F31A) .....	MT-21
Differential gear (FF MT) (RS5F32V) .....	MT-46
Dimensions .....	GI-35
Distributor (GA engine) .....	EC-244
Distributor ignition (DI) system (GA engine) .....	EC-244
Distributor ignition (DI) system (SR engine) .....	EC-16
Distributor (SR engine) .....	EC-16
Dome lamp - See Interior lamp .....	EL-66
Door, front - See Front door .....	BT-9
Door glass (Front door) .....	BT-9
Door glass (Rear door) .....	BT-11
Door lock (Front door) .....	BT-9
Door lock (Rear door) .....	BT-11
Door mirror .....	BT-36
Door, rear - See Rear door .....	BT-11
Door trim .....	BT-18
Drive plate runout (SR engine) .....	EM-57

Drive shaft (front) .....	FA-13
Dropping resistor (AT) .....	AT-131
Dual pressure switch .....	HA-49

## E

ECCS basic inspection (GA engine) .....	EC-298
ECCS basic inspection (SR engine) .....	EC-74
ECCS circuit diagram (GA engine) .....	EC-234
ECCS circuit diagram (SR engine) .....	EC-6
ECCS component parts location (GA engine) ..	EC-236
ECCS component parts location (SR engine) .....	EC-8
ECCS fail-safe system (GA engine) .....	EC-297
ECCS fail-safe system (SR engine) .....	EC-73
ECCS on-board diagnostic system (GA engine) .....	EC-258
ECCS on-board diagnostic system (SR engine) .....	EC-32
ECCS symptom matrix chart (GA engine) .....	EC-301
ECCS symptom matrix chart (SR engine) .....	EC-77
ECCS system diagram and chart (GA engine) .....	EC-235
ECCS system diagram and chart (SR engine) .....	EC-7
ECCS trouble diagnoses (GA engine) .....	EC-282
ECCS trouble diagnoses (SR engine) .....	EC-57
ECM input/output signal inspection (GA engine) .....	EC-309
ECM input/output signal inspection (SR engine) .....	EC-84
EGR canister control solenoid valve inspection (GA engine) .....	EC-436
EGR canister control solenoid valve inspection (SR engine) .....	EC-213
EGR control (EGRC) - BPT valve (GA engine) .....	EC-376
EGR control (EGRC) - BPT valve (SR engine) .....	EC-155
EGR control (EGRC) - solenoid valve (GA engine) .....	EC-433
EGR control (EGRC) - solenoid valve (SR engine) .....	EC-209
EGR temperature sensor (GA engine) .....	EC-372
EGR temperature sensor inspection (GA engine) .....	EC-375
EGR temperature sensor inspection (SR engine) .....	EC-154
EGR temperature sensor (SR engine) .....	EC-151
EGR valve inspection (GA engine) .....	EC-363
EGR valve inspection (SR engine) .....	EC-142
EGRC - BPT valve inspection (GA engine) .....	EC-377
EGRC - BPT valve inspection (SR engine) .....	EC-156

# ALPHABETICAL INDEX

<p>EGRC — solenoid valve inspection            (GA engine)..... EC-433</p> <p>EGRC — solenoid valve inspection            (SR engine)..... EC-209</p> <p>Electric sun roof ..... EL-136</p> <p>Electrical load signal circuit..... EC-454</p> <p>Electrical units location - See Location of            electrical units ..... EL-223</p> <p>Electronic ignition system (GA engine)..... EC-244</p> <p>Electronic ignition system (SR engine)..... EC-16</p> <p>Engine compartment ..... BT-37</p> <p>Engine control module (ECM) (GA engine) ..... EC-354</p> <p>Engine control module (ECM) (SR engine) ..... EC-133</p> <p>Engine coolant temperature sensor (ECTS)            DTC13, P0115 (GA engine)..... EC-328</p> <p>Engine coolant temperature sensor (ECTS)            DTC13, P0115 (SR engine)..... EC-103</p> <p>Engine coolant temperature sensor (ECTS)            DTC13, P0115 inspection (GA engine) ..... EC-331</p> <p>Engine coolant temperature sensor (ECTS)            DTC13, P0115 inspection (SR engine) ..... EC-106</p> <p>Engine coolant temperature sensor (ECTS)            DTC98, P0125 (GA engine)..... EC-429, EC-425</p> <p>Engine coolant temperature sensor (ECTS)            DTC98, P0125 (SR engine)..... EC-199, EC-203</p> <p>Engine coolant temperature sensor (ECTS)            (GA engine)..... EC-328</p> <p>Engine coolant temperature sensor (ECTS)            (SR engine)..... EC-103</p> <p>Engine oil..... MA-8</p> <p>Engine oil filter replacement (GA engine)..... MA-23</p> <p>Engine oil filter replacement (SR engine)..... MA-15</p> <p>Engine oil precautions..... GI-4</p> <p>Engine oil replacement (GA engine)..... MA-22</p> <p>Engine oil replacement (SR engine)..... MA-14</p> <p>Engine outer component parts (GA engine) ..... EM-61</p> <p>Engine outer component parts (SR engine) ..... EM-7</p> <p>Engine removal (GA engine)..... EM-92</p> <p>Engine removal (SR engine)..... EM-45</p> <p>Engine room - See Engine compartment ..... BT-37</p> <p>Engine serial number ..... GI-34</p> <p>Evaporative emission system (GA engine)..... EC-246</p> <p>Evaporative emission system (SR engine)..... EC-19</p> <p>Exhaust gas recirculation (EGR) system            (GA engine)..... EC-356</p> <p>Exhaust gas recirculation (EGR) system            (SR engine)..... EC-135</p> <p>Exhaust gas recirculation (EGR) valve            (GA engine)..... EC-356</p> <p>Exhaust gas recirculation (EGR) valve            (SR engine)..... EC-135</p> <p>Exhaust system ..... FE-5</p> <p>Exhaust system inspection..... MA-25</p> <p>Exterior ..... BT-22</p>	<p>Exterior lamp ..... EL-55</p>
<h2 style="margin: 0;">F</h2>	
<p>Fan switch ..... HA-48</p> <p>Fast idle ..... EC-449</p> <p>Fast idle cam (FIC) ..... EC-449</p> <p>Fast idle cam (FIC) inspection and            adjustment..... EC-449</p> <p>Final drive (FF AT) (RE4F03V) ..... AT-267</p> <p>Final drive (FF AT) (RL4F03A)..... AT-263</p> <p>Final drive (FF MT) (RS5F31A) ..... MT-21</p> <p>Final drive (FF MT) (RS5F32V) ..... MT-46</p> <p>Finisher, interior - See Trim..... BT-15</p> <p>Finisher, trunk lid - See Trunk lid finisher ..... BT-25</p> <p>Floor trim ..... BT-15</p> <p>Fluid temperature sensor (AT) ..... AT-129</p> <p>Fluids ..... MA-8</p> <p>Flywheel runout (GA engine) ..... EM-103</p> <p>Flywheel runout (SR engine) ..... EM-57</p> <p>Fog lamp, front, removal and installation..... BT-6</p> <p>Fog lamp, front - See Front fog lamp ..... EL-58</p> <p>Fork rod (MT) (RS5F31A) ..... MT-12</p> <p>Fork rod (MT) (RS5F32V) ..... MT-33</p> <p>Forward clutch..... AT-234</p> <p>Freeze frame data (GA engine) ..... EC-259</p> <p>Freeze frame data (SR engine) ..... EC-33</p> <p>Front axle ..... FA-8</p> <p>Front bumper..... BT-5</p> <p>Front disc brake ..... BR-16</p> <p>Front door..... BT-9</p> <p>Front fog lamp ..... EL-58</p> <p>Front fog lamp removal and installation..... BT-6</p> <p>Front heated oxygen sensor (HO2S) heater            (GA engine)..... EC-416</p> <p>Front heated oxygen sensor (HO2S) heater            (SR engine)..... EC-192</p> <p>Front heated oxygen sensor (GA engine)..... EC-416</p> <p>Front heated oxygen sensor (SR engine)..... EC-192</p> <p>Front heated oxygen sensor heater            inspection (GA engine) ..... EC-418</p> <p>Front heated oxygen sensor heater            inspection (SR engine) ..... EC-194</p> <p>Front oxygen sensor (GA engine)..... EC-364</p> <p>Front oxygen sensor (SR engine)..... EC-143</p> <p>Front oxygen sensor monitor (GA engine)..... EC-260</p> <p>Front oxygen sensor monitor (SR engine)..... EC-34</p> <p>Front passenger air bag..... RS-14</p> <p>Front seat ..... BT-28</p> <p>Front seat belt ..... RS-4</p> <p>Front suspension..... FA-24</p> <p>Front washer ..... EL-110</p> <p>Front wiper ..... EL-110</p>	<p style="text-align: right;">GI</p> <p style="text-align: right;">MA</p> <p style="text-align: right;">EM</p> <p style="text-align: right;">LC</p> <p style="text-align: right;">EC</p> <p style="text-align: right;">FE</p> <p style="text-align: right;">CL</p> <p style="text-align: right;">MT</p> <p style="text-align: right;">AT</p> <p style="text-align: right;">FA</p> <p style="text-align: right;">RA</p> <p style="text-align: right;">BR</p> <p style="text-align: right;">ST</p> <p style="text-align: right;">RS</p> <p style="text-align: right;">BT</p> <p style="text-align: right;">HA</p> <p style="text-align: right;">EL</p> <p style="text-align: right; background-color: black; color: white; padding: 2px;"><b>IDX</b></p>

# ALPHABETICAL INDEX

Fuel check valve inspection (GA engine) .....	EC-247
Fuel check valve inspection (SR engine) .....	EC-20
Fuel cut control (GA engine) .....	EC-245
Fuel cut control (SR engine) .....	EC-18
Fuel filler lid .....	BT-7
Fuel filter replacement (GA engine) .....	MA-21
Fuel filter replacement (SR engine) .....	MA-13
Fuel gauge (w/tachometer) .....	EL-76
Fuel gauge (wo/tachometer) .....	EL-82
Fuel injection system (GA engine) .....	EC-396
Fuel injection system (SR engine) .....	EC-175
Fuel line inspection (GA engine) .....	MA-21
Fuel line inspection (SR engine) .....	MA-13
Fuel precautions .....	GI-5
Fuel pressure check (GA engine) .....	EC-249
Fuel pressure check (SR engine) .....	EC-22
Fuel pressure regulator (GA engine) .....	EC-250
Fuel pressure regulator (SR engine) .....	EC-23
Fuel pressure release (GA engine) .....	EC-249
Fuel pressure release (SR engine) .....	EC-22
Fuel pump control (GA engine) .....	EC-442
Fuel pump control (SR engine) .....	EC-219
Fuel pump (GA engine) .....	EC-442
Fuel pump (SR engine) .....	EC-219
Fuel pump inspection (GA engine) .....	EC-445
Fuel pump inspection (SR engine) .....	EC-223
Fuel pump relay inspection (GA engine) .....	EC-445
Fuel pump relay inspection (SR engine) .....	EC-223
Fuel system .....	FE-3
Fuel tank vacuum relief valve inspection (GA engine) .....	EC-247
Fuel tank vacuum relief valve inspection (SR engine) .....	EC-20
Fuse .....	EL-16
Fusible link .....	EL-16

## G

Garage jack and safety stand .....	GI-37
Gauges (w/tachometer) .....	EL-74
Gauges (wo/tachometer) .....	EL-80
Gears (MT) (RS5F31A) .....	MT-11
Gears (MT) (RS5F32V) .....	MT-32
Generator .....	EL-36
Generic scan tool (GST) (GA engine) .....	EC-280
Generic scan tool (GST) (SR engine) .....	EC-54
Glass (Front door) .....	BT-9
Glass (Rear door) .....	BT-11
Governor valve assembly .....	AT-27
Grille .....	BT-5

## H

Harness connector .....	EL-3
Harness layout .....	EL-225
Hazard warning lamp .....	EL-60
Headlamp .....	EL-43
Headlamp aiming control .....	EL-54
Headlining - See Roof trim .....	BT-20
Heated oxygen sensor (front) (GA engine) .....	EC-364
Heated oxygen sensor (front) (SR engine) .....	EC-143
Heated oxygen sensor (H02S) heater (rear) (GA engine) .....	EC-405
Heated oxygen sensor (H02S) heater (rear) (SR engine) .....	EC-184
Heated oxygen sensor heater (front) (GA engine) .....	EC-416
Heated oxygen sensor heater (front) (SR engine) .....	EC-192
Heated oxygen sensor heater (front) inspection (GA engine) .....	EC-418
Heated oxygen sensor heater (front) inspection (SR engine) .....	EC-194
Heated oxygen sensor (HO2S) heater (front) (GA engine) .....	EC-364
Heated oxygen sensor (HO2S) heater (front) (SR engine) .....	EC-143
Heated oxygen sensor (rear) (GA engine) .....	EC-401
Heated oxygen sensor (rear) (SR engine) .....	EC-180
Heater wiring diagram .....	HA-35
HEC (Hybrid electrical control unit) .....	Foldout page
Height (Dimensions) .....	GI-35
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service tools .....	HA-6
High clutch .....	AT-229
Hood .....	BT-5
Horn .....	EL-138
How to erase DTC for ECCS OBD system (GA engine) .....	EC-258
How to erase DTC for ECCS OBD system (SR engine) .....	EC-32
How to follow flowchart in trouble diagnoses .....	GI-28
How to perform efficient diagnosis for an electrical incident .....	GI-17
How to read wiring diagrams .....	GI-9
How to use this manual .....	GI-7
Hydraulic lash adjuster inspection (SR engine) .....	EM-40

## I

IACV - air regulator inspection (SR engine) .....	EC-229
IACV - FICD solenoid valve inspection (GA engine) .....	EC-453

# ALPHABETICAL INDEX

IACV - FICD solenoid valve inspection (SR engine).....	EC-232
IACV-AAC valve inspection (GA engine) .....	EC-344
IACV-AAC valve inspection (SR engine) .....	EC-119
Identification plate .....	GI-33
Idle air control valve (IACV) - air regulator (SR engine).....	EC-227
Idle air control valve (IACV) (GA engine) .....	EC-341
Idle air control valve (IACV) (SR engine) .....	EC-116
Idle mixture ratio inspection (GA engine).....	EC-251
Idle mixture ratio inspection (SR engine).....	EC-25
Idle speed inspection (GA engine).....	EC-251
Idle speed inspection (SR engine).....	EC-25
Ignition coil inspection (GA engine) .....	EC-340
Ignition coil inspection (SR engine) .....	EC-115
Ignition timing inspection (GA engine) .....	EC-251
Ignition timing inspection (SR engine) .....	EC-25
Illumination .....	EL-66
Inhibitor switch (RE4F03V) .....	AT-130
Inhibitor switch (RL4F03A).....	AT-33
Injector inspection (GA engine).....	EC-439
Injector inspection (SR engine).....	EC-216
Injector removal and installation (GA engine)...	EC-250
Injector removal and installation (SR engine).....	EC-23
Input shaft (RS5F31A) .....	MT-15
Input shaft (RS5F32V) .....	MT-37
Instrument panel.....	BT-12
Intake air temperature sensor (SR engine) .....	EC-158
Intake air temperature sensor (GA engine) .....	EC-379
Intake air temperature sensor inspection (GA engine).....	EC-383
Intake air temperature sensor inspection (SR engine).....	EC-162
Intake door control linkage adjustment.....	HA-50
Intake manifold (GA engine) .....	EM-62
Intake manifold (SR engine) .....	EM-8
Interior .....	BT-15
Interior lamp .....	EL-66

## J

Jacking points.....	GI-36
Joint connector (J/C).....	Foldout page

## K

Keyless entry system - See Multi-remote control system.....	EL-152
Knock sensor inspection (GA engine).....	EC-371
Knock sensor inspection (SR engine).....	EC-150
Knock sensor (KS) (GA engine).....	EC-369
Knock sensor (KS) (SR engine).....	EC-148

Knuckle spindle .....	FA-8
-----------------------	------

## L

Length (Dimensions) .....	GI-35	
License lamp .....	EL-56	MA
Lifting points .....	GI-36	
Line pressure solenoid valve .....	AT-129	
Line pressure test (AT) (RE4F03V) .....	AT-135	EM
Line pressure test (AT) (RL4F03A).....	AT-26	
Liquid gasket application.....	EM-2	LC
Location of electrical units.....	EL-223	
Lock, door - See Door lock.....	BT-9	
Low and reverse brake .....	AT-240	EC
Lubricant.....	HA-53	
Lubricants.....	MA-8	
Lubrication circuit (GA engine).....	LC-13	FE
Lubrication circuit (SR engine).....	LC-4	
Lubrication-locks, hinges and hood latches.....	MA-30	CL
Luggage compartment trim .....	BT-21	

## M

Magnet clutch.....	HA-58	AT
Main drive gear (MT) (RS5F31A) .....	MT-11	
Main drive gear (MT) (RS5F32V) .....	MT-32	FA
Mainshaft (MT) (RS5F31A).....	MT-11	
Mainshaft (MT) (RS5F32V).....	MT-32	RA
Maintenance (GA engine) .....	MA-18	
Maintenance (SR engine) .....	MA-10	
Maintenance general.....	MA-3	
Maintenance periodic .....	MA-5	BR
Maintenance schedule (1).....	MA-6	
Maintenance schedule (2).....	MA-7	
Malfunction indicator lamp (MIL) (GA engine) ..	EC-260	ST
Malfunction indicator lamp (MIL) (SR engine) ...	EC-34	
Manual steering gear .....	ST-12	RS
Manual transaxle number.....	GI-34	
Manual transmission oil.....	MA-8	
Manual transmission oil replacement.....	MA-25	BT
Mass air flow sensor inspection (GA engine) ...	EC-327	
Mass air flow sensor inspection (SR engine) ...	EC-102	HA
Mass air flow sensor (MAFS) (GA engine).....	EC-323	
Mass air flow sensor (MAFS) (SR engine).....	EC-98	
Master cylinder (brake) .....	BR-11	EL
Meter and gauges (w/tachometer).....	EL-74	
Meter and gauges (wo/tachometer).....	EL-80	
MIL & Data link connectors circuit (GA engine).....	EC-457	
MIL & Data link connectors circuit (SR engine).....	EC-233	
Mirror, door - See Door mirror .....	BT-36	

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# ALPHABETICAL INDEX

Mirror, outside - See Outside mirror ..... BT-36  
Misfire (GA engine) ..... EC-389  
Misfire (SR engine) ..... EC-168  
Mode door control linkage adjustment ..... HA-49  
Model variation ..... GI-32  
Molding - See Exterior ..... BT-22  
M/T overhaul (RS5F31A) ..... MT-10  
M/T overhaul (RS5F32V) ..... MT-31  
M/T removal and installation ..... MT-7  
Mudguard ..... BT-26  
Multi purpose grease ..... MA-8  
Multiport fuel injection (MFI) system  
    (GA engine) ..... EC-241  
Multiport fuel injection (MFI) system  
    (SR engine) ..... EC-14  
Multiport fuel injection precautions ..... GI-4  
Multi-remote control system ..... EL-152

## N

Neutral position switch (MT) ..... MT-10, MT-31

## O

Oil pan (GA engine) ..... EM-66  
Oil pan (SR engine) ..... EM-11  
Oil pressure (GA engine) ..... LC-14  
Oil pressure relief valve (GA engine) ..... LC-16  
Oil pressure (SR engine) ..... LC-4  
Oil pump (AT) ..... AT-191  
Oil pump (GA engine) ..... LC-15  
Oil pump (SR engine) ..... LC-5  
Oil pump regulator valve (GA engine) ..... LC-15  
Oil pump regulator valve (SR engine) ..... LC-7  
Oil seal replacement (GA engine) ..... EM-79  
Oil seal replacement (SR engine) ..... EM-30  
Out side mirror ..... BT-36  
Overdrive switch (RE4F03V) ..... AT-130  
Overdrive switch (RL4F03A) ..... AT-32  
Overrun clutch ..... AT-234  
Overrun clutch solenoid valve ..... AT-129  
Oversize piston (GA engine) ..... EM-100  
Oversize piston (SR engine) ..... EM-52  
Oxygen sensor (Front) (GA engine) ..... EC-364  
Oxygen sensor (Front) (SR engine) ..... EC-143

## P

Park/Neutral position switch (GA engine) ..... EC-430  
Park/Neutral position switch (SR engine) ..... EC-204

PCV (positive crankcase ventilation)  
    inspection (GA engine) ..... EC-248  
PCV (positive crankcase ventilation)  
    inspection (SR engine) ..... EC-21  
Personal lamp ..... EL-70, EL-72  
Pilot bushing replacement ..... EM-57  
Piston assembly (GA engine) ..... EM-104  
Piston assembly (SR engine) ..... EM-57  
Piston pin inspection (GA engine) ..... EM-97  
Piston pin inspection (SR engine) ..... EM-50  
Piston ring inspection (GA engine) ..... EM-98  
Piston ring inspection (SR engine) ..... EM-51  
Piston to bore clearance (GA engine) ..... EM-99  
Piston to bore clearance (SR engine) ..... EM-52  
Power door lock ..... EL-127  
Power door mirror ..... EL-135  
Power steering fluid ..... MA-8  
Power steering fluid level ..... ST-5  
Power steering gear ..... ST-17  
Power steering hydraulic pressure ..... ST-7  
Power steering oil pressure switch  
    (GA engine) ..... EC-446  
Power steering oil pressure switch  
    (SR engine) ..... EC-224  
Power steering oil pressure switch inspection  
    (GA engine) ..... EC-448  
Power steering oil pressure switch inspection  
    (SR engine) ..... EC-226  
Power steering pump ..... ST-23  
Power steering system bleeding ..... ST-6  
Power supply routing ..... EL-6  
Power transistor & ignition coil (GA engine) ..... EC-336  
Power transistor & ignition coil (SR engine) ..... EC-111  
Power transistor inspection (GA engine) ..... EC-340  
Power transistor inspection (SR engine) ..... EC-115  
Power window ..... EL-119  
Precautions (General) ..... GI-3  
Pressure plate - See Clutch cover ..... CL-6  
Pressure test (AT) (RE4F03V) ..... AT-135  
Pressure test (AT) (RL4F03A) ..... AT-26

## Q

Quarter window ..... BT-34

## R

Radiator (GA engine) ..... LC-23  
Radiator (SR engine) ..... LC-12  
Radiator fan - See Cooling fan (GA engine) ..... LC-23  
Radiator fan - See Cooling fan (SR engine) ..... LC-12  
Radio - See Audio ..... EL-147



# ALPHABETICAL INDEX

<p>Rear air spoiler..... BT-27</p> <p>Rear axle..... RA-6</p> <p>Rear axle (disc brake type)..... RA-6</p> <p>Rear bumper..... BT-7</p> <p>Rear combination lamp removal and installation..... BT-26</p> <p>Rear disc brake..... BR-23</p> <p>Rear door..... BT-11</p> <p>Rear drum brake..... BR-20</p> <p>Rear heated oxygen sensor (HO2S) heater (GA engine)..... EC-405</p> <p>Rear heated oxygen sensor (HO2S) heater (SR engine)..... EC-184</p> <p>Rear heated oxygen sensor (GA engine)..... EC-401</p> <p>Rear heated oxygen sensor (SR engine)..... EC-180</p> <p>Rear seat..... BT-29</p> <p>Rear seat belt..... RS-7</p> <p>Rear side window..... BT-34</p> <p>Rear suspension..... RA-8</p> <p>Rear window..... BT-33</p> <p>Rear window defogger..... EL-139</p> <p>Rear window signal (GA engine)..... EC-454</p> <p>Refrigerant connection precaution..... HA-4</p> <p>Refrigerant general precaution..... HA-3</p> <p>Refrigerant lines..... HA-55</p> <p>Refrigeration cycle..... HA-11</p> <p>Release bearing (clutch)..... CL-5</p> <p>Remote keyless entry system - See Multi-remote control system..... EL-152</p> <p>Resistor inspection (GA engine)..... EC-340</p> <p>Resistor inspection (SR engine)..... EC-115</p> <p>Reverse clutch..... AT-225</p> <p>Reverse gear (MT) (RS5F31A)..... MT-11</p> <p>Reverse gear (MT) (RS5F32V)..... MT-32</p> <p>Reverse idler shaft (MT) (RS5F31A)..... MT-11</p> <p>Reverse idler shaft (MT) (RS5F32V)..... MT-32</p> <p>Revolution sensor (AT)..... AT-131</p> <p>Road wheel size..... GI-35</p> <p>Roof trim..... BT-20</p> <p>Room lamp..... EL-70</p> <p>Rotor disc (front)..... FA-8</p>	<p>Shift control (MT) (RS5F31A)..... MT-12</p> <p>Shift control (MT) (RS5F32V)..... MT-33</p> <p>Shift fork (MT) (RS5F31A)..... MT-12</p> <p>Shift fork (MT) (RS5F32V)..... MT-33</p> <p>Shift lock system..... AT-140</p> <p>Shift schedule (RE4F03V)..... AT-59</p> <p>Shift schedule (RL4F03A)..... AT-19</p> <p>Shift solenoid valve (AT)..... AT-129</p> <p>Shock absorber (front)..... FA-25</p> <p>Shock absorber (rear)..... RA-10</p> <p>Side trim..... BT-15</p> <p>Side window - See Rear side window..... BT-34</p> <p>Spark plug replacement (GA engine)..... MA-24</p> <p>Spark plug replacement (SR engine)..... MA-15</p> <p>Speedometer (w/tachometer)..... EL-76</p> <p>Speedometer (wo/tachometer)..... EL-82</p> <p>Spiral cable..... RS-13</p> <p>Spot lamp..... EL-70</p> <p>Spring (Wheelarch) height..... FA-5</p> <p>SRS - See Supplemental Restraint System..... RS-9</p> <p>SRS Trouble diagnoses..... RS-22</p> <p>SRS Wiring diagram..... RS-22</p> <p>Stabilizer bar (front)..... FA-26</p> <p>Stall test (AT) (RE4F03V)..... AT-132</p> <p>Stall test (AT) (RL4F03A)..... AT-24</p> <p>Standardized relay..... EL-4</p> <p>Starter..... EL-28</p> <p>Starting system..... EL-21</p> <p>Steering gear and linkage inspection..... MA-28</p> <p>Steering gear oil level..... MA-29</p> <p>Steering knuckle..... FA-8</p> <p>Steering linkage (manual steering)..... ST-12</p> <p>Steering linkage (power steering)..... ST-17</p> <p>Steering switch..... EL-42</p> <p>Steering wheel and column..... ST-8</p> <p>Steering wheel play..... ST-26</p> <p>Steering wheel turning force..... ST-6</p> <p>Stop lamp..... EL-56</p> <p>Striking rod (MT) (RS5F31A)..... MT-12</p> <p>Striking rod (MT) (RS5F32V)..... MT-33</p> <p>Strut (front)..... FA-25</p> <p>Sunroof..... BT-30</p> <p>Sunroof, electric - See Electric sunroof..... EL-136</p> <p>Supplemental Restraint System..... RS-9</p> <p>Symbols and abbreviations..... GI-8</p> <p>Synchronizer (MT) (RS5F31A)..... MT-11</p> <p>Synchronizer (MT) (RS5F32V)..... MT-32</p>
--	---

## S

<p>SAE J1930 terminology list..... GI-41</p> <p>Seal - See Exterior..... BT-22</p> <p>Seat belt inspection..... MA-30</p> <p>Seat belt, front - See Front seat belt..... RS-4</p> <p>Seat belt, rear - See Rear seat belt..... RS-7</p> <p>Seat, front - See Front seat..... BT-28</p> <p>Seat, rear - See Rear seat..... BT-29</p> <p>Self-diagnostic results (GA engine)..... EC-260</p> <p>Self-diagnostic results (SR engine)..... EC-34</p>
--

## T

<p>Tachometer..... EL-76</p> <p>Tail lamp..... EL-56</p>
--

# ALPHABETICAL INDEX

Temperature control cable and linkage adjustment.....	HA-50
Theft warning system.....	EL-190
Thermal protector.....	HA-49
Thermo control amp.....	HA-49
Thermostat (GA engine).....	LC-21
Thermostat (SR engine).....	LC-10
Three way catalyst (GA engine).....	EC-393
Three way catalyst (SR engine).....	EC-172
Three way catalyst precautions.....	GI-4
Throttle bodies (GA engine).....	EM-62
Throttle bodies (SR engine).....	EM-8
Throttle drum adjustment.....	FE-2
Throttle position sensor inspection (GA engine).....	EC-298
Throttle position sensor inspection (SR engine).....	EC-74
Throttle position sensor (TPS) (GA engine).....	EC-384
Throttle position sensor (TPS) (SR engine).....	EC-163
Throwout bearing - See Clutch release bearing.....	CL-5
Tie-rod.....	ST-20
Tie-rod ball joints.....	ST-20
Tightening torque of standard bolts.....	GI-40
Timing chain (GA engine).....	EM-68
Timing chain (SR engine).....	EM-16
Tire rotation.....	MA-28
Tire size.....	GI-35
Torque converter clutch solenoid valve (RE4F03V).....	AT-129
Torque converter clutch solenoid valve (RL4F03A).....	AT-34
Torque converter installation.....	AT-298
Tow truck towing.....	GI-38
Transmission case (MT) (RS5F31A).....	MT-10
Transmission case (MT) (RS5F32V).....	MT-31
Transverse link (front).....	FA-27
Tread-FR&RR (Dimensions).....	GI-35
Trim.....	BT-15
Trunk lid.....	BT-7
Trunk lid finisher.....	BT-25
Trunk lid opener - See Trunk lid.....	BT-7
Trunk lid trim.....	BT-25
Trunk room lamp.....	EL-70
Trunk room trim.....	BT-21
Turn signal lamp.....	EL-60
Two trip detection logic (GA engine).....	EC-258
Two trip detection logic (SR engine).....	EC-32

## U

Under body.....	BT-39
-----------------	-------

## V

Vacuum hose (brake system).....	BR-15
Vacuum hose drawing (ECCS) (GA engine).....	EC-239
Vacuum hose drawing (ECCS) (SR engine).....	EC-12
Valve clearance (GA engine).....	EM-89
Valve guide inspection (GA engine).....	EM-84
Valve guide inspection (SR engine).....	EM-37
Valve seat inspection (GA engine).....	EM-85
Valve seat inspection (SR engine).....	EM-39
Valve spring inspection (GA engine).....	EM-86
Valve timing control (VTC) (GA engine).....	EC-410
Vapor lines inspection (GA engine).....	MA-24
Vapor lines inspection (SR engine).....	MA-17
Vehicle identification number.....	GI-33
Vehicle speed sensor (VSS) (GA engine).....	EC-332
Vehicle speed sensor (VSS) (SR engine).....	EC-107
Viscosity number (SAE).....	MA-8
Viscous coupling (FF AT).....	AT-267
Viscous coupling (FF MT).....	MT-46

## W

Warning chime.....	EL-87
Warning lamps.....	EL-87
Washer, front - See Front washer.....	EL-110
Water cock control rod adjustment.....	HA-50
Water pump (GA engine).....	LC-20
Water pump (SR engine).....	LC-9
Water temperature gauge (w/tachometer).....	EL-76
Water temperature gauge (wo/tachometer).....	EL-82
Weatherstrip - See Exterior.....	BT-22
Wheel alignment (front).....	FA-6
Wheel alignment (rear).....	RA-5
Wheel balance.....	MA-28
Wheel bearing (front axle).....	FA-6
Wheel bearing (rear).....	RA-4
Wheel hub and steering knuckle.....	FA-8
Wheel hub (front).....	FA-8
Wheel sensors (ABS).....	BR-35
Wheel size.....	GI-35
Wheelarch height.....	FA-5
Wheelbase (Dimensions).....	GI-35
Wide open & closed throttle position (CTP) switch (GA engine).....	EC-384
Wide open & closed throttle position (CTP) switch (SR engine).....	EC-163
Width (Dimensions).....	GI-35
Window, back - See Back window.....	BT-33
Window, door (Front door).....	BT-9
Window, door (Rear door).....	BT-11
Window, opera - See Quarter window.....	BT-34
Window, rear - See Rear window.....	BT-33

# ALPHABETICAL INDEX

---

Window, rear side - See Rear side window.....	BT-34	Wiper, front - See Front wiper.....	EL-110
Window, side - See Rear side window .....	BT-34	Withdrawal lever (clutch).....	CL-5
Windshield.....	BT-33	Wrist pin - See Piston pin inspection	
Windshield washer - See Front washer.....	EL-110	(GA engine).....	EM-97
Windshield wiper - See Front wiper.....	EL-110	Wrist pin - See Piston pin inspection	
Wiper and washer .....	EL-110	(SR engine).....	EM-50

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**