

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram..... EC-304
ABS - Wiring diagram BR-48
ABS (anti-lock brake system)..... BR-37
ABS sensor rotor..... FA-9
Absolute pressure sensor EC-119
A/C - Wiring diagram..... HA-24
A/C air flow..... HA-16
A/C component layout..... HA-14
A/C compressor clutch removal and
installation HA-61
A/C compressor mounting..... HA-60
A/C compressor precaution..... HA-7
A/C compressor special service tool..... HA-8
A/C control linkage adjustment (manual A/C)..... HA-41
A/C control operation (manual A/C) HA-15
A/C diagnostic work flow (manual A/C) HA-17
A/C harness layout (manual A/C) HA-20
A/C HFC134a (R134a) system precaution HA-2
A/C HFC134a (R134a) system service
procedure..... HA-55
A/C HFC134a (R134a) system service tools..... HA-9
A/C HFC134a system service equipment
precaution HA-11
A/C lubricant (R134a)..... HA-57
A/C lubrication oil HA-57
A/C operational check..... HA-18
A/C performance chart..... HA-45
A/C performance test diagnoses..... HA-43
A/C pressure switch HA-13
A/C relay..... HA-40
A/C service data specification..... HA-67
A/C switch HA-39
A/C trouble diagnoses (manual A/C) HA-17
Accelerator control system..... FE-2
Accelerator wire adjustment..... FE-2
Air bag..... RS-17
Air bag disposal..... RS-21
Air bag precautions GI-2
Air bleeding for brake system BR-5
Air cleaner filter replacement MA-14
Air conditioner - wiring diagram HA-24
Air conditioner cut control EC-19
Air conditioning - See A/C..... HA-2
Air flow meter - See Mass air flow sensor..... EC-110
Air mix door control linkage adjustment..... HA-40
Air spoiler, rear BT-28
Alternator..... EL-35
Angular tightening application..... EM-2
Antenna EL-140
Anti-lock brake system - See ABS..... BR-37
Anti-lock brake system - Wiring diagram..... BR-48

AP/SEN - Wiring diagram EC-119
ASCD - Wiring diagram..... EL-147
ASCD (automatic speed control device)..... EL-143
A/T - Wiring diagram AT-8
A/T removal and installation..... AT-59
A/T shift lock system AT-48
A/T shift lock system - Wiring diagram..... AT-49
A/T trouble diagnoses AT-31
Audio EL-137
AUDIO - Wiring diagram EL-138
Audio and A/C control removal and
installation - See Instrument panel..... BT-13
Automatic speed control system - See ASCD.. EL-143
Automatic transaxle number GI-37
Automatic transmission fluid replacement MA-20
Auxiliary air control (AAC)..... EC-304

B

BACK/L - Wiring diagram..... EL-54
Back-up lamp EL-54
Back-up lamp switch (M/T) MT-7, MT-11
Ball joint front axle..... FA-25
Battery..... EL-19
Baulk ring (M/T)..... MT-12
Blower motor HA-31
Blower resistor..... HA-31
Board-on lift..... GI-40
Body alignment..... BT-41
Boring/honing cylinder block EM-49
BPT valve EC-262, EC-267
Brake booster..... BR-16
Brake control valve (Proportioning valve)..... BR-8
Brake fluid change BR-4
Brake fluid level..... MA-20
Brake fluid level and line check BR-4
Brake hydraulic line..... BR-6
Brake inspection..... MA-20
Brake lines and cables inspection MA-20
Brake lining temporary checking..... MA-21
Brake master cylinder BR-12
Brake pedal BR-10
Bulb specifications..... EL-251
Bumper, front..... BT-5
Bumper, rear..... BT-8
BYP/S - Wiring diagram..... EC-406

C

Camshaft inspection..... EM-31
Camshaft position sensor (CMPS)..... EC-249
Canister - See EVAP canister..... EC-21

ALPHABETICAL INDEX

<p>CANI/V - Wiring diagram..... EC-417</p> <p>CHARGE - Wiring diagram..... EL-33</p> <p>Charging system..... EL-32</p> <p>Chassis and body maintenance..... MA-18</p> <p>CHIME - Wiring diagram..... EL-108</p> <p>CIGAR - Wiring diagram..... EL-127</p> <p>Cigarette lighter..... EL-127</p> <p>Circuit breaker..... EL-14</p> <p>CKPS - Wiring diagram..... EC-244, EC-343</p> <p>Clearance lamp..... EL-56</p> <p>Closed loop control..... EC-334</p> <p>Closed throttle position switch..... EC-311</p> <p>Clutch cable..... CL-4</p> <p>Clutch cover..... CL-7</p> <p>Clutch disc..... CL-7</p> <p>Clutch pedal..... CL-4</p> <p>Clutch release bearing..... CL-6</p> <p>Clutch release mechanism..... CL-6</p> <p>Clutch withdrawal lever..... CL-6</p> <p>CMPS - Wiring diagram..... EC-249</p> <p>Coil spring (front)..... FA-23</p> <p>Coil spring (rear)..... RA-11</p> <p>Collision diagnosis..... RS-47</p> <p>Combination lamp, rear, removal and installation..... BT-27</p> <p>Combination meter..... EL-78, EL-87</p> <p>Combination meter removal and installation - See Instrument panel..... BT-13</p> <p>Combination switch..... EL-39</p> <p>Compression pressure..... EM-14</p> <p>Compressor clutch removal and installation..... HA-61</p> <p>Compressor mounting..... HA-60</p> <p>Compressor precaution..... HA-7</p> <p>Compressor special service tool..... HA-8</p> <p>Connecting rod..... EM-47</p> <p>Connecting rod bearing clearance..... EM-51</p> <p>Connecting rod bushing clearance..... EM-52</p> <p>Connector inspection..... GI-17</p> <p>Console box - See Instrument panel..... BT-13</p> <p>CONSULT for ABS..... BR-55</p> <p>CONSULT for ECCS..... EC-62</p> <p>CONSULT general information..... GI-33</p> <p>Control lever (M/T)..... MT-10</p> <p>Control valve (A/T)..... AT-88</p> <p>Converter housing installation..... AT-60</p> <p>Coolant mixture ratio..... MA-9</p> <p>Coolant replacement..... MA-11</p> <p>COOL/F - Wiring diagram..... EC-449</p> <p>Cooling circuit (engine)..... LC-8</p> <p>Cooling fan..... LC-14</p> <p>Cooling fan control..... EC-446</p> <p>Cooling fan motor..... HA-20, EC-458</p> <p>Cooling fan relay..... HA-20, EC-458</p> <p>Coupling sleeve (M/T)..... MT-12</p>	<p>Crank angle sensor built into distributor - See Camshaft position sensor..... EC-249</p> <p>Crankcase emission control system - See positive crankcase ventilation..... EC-31</p> <p>Crankcase ventilation system - See positive crankcase ventilation..... EC-31</p> <p>Crankshaft..... EM-49</p> <p>Crankshaft position sensor (OBD)..... EC-244</p> <p>Cruise control - See ASCD..... EL-143</p> <p>Cylinder block..... EM-45</p> <p>Cylinder block boring..... EM-49</p> <p>Cylinder head..... EM-30</p> <p>Cylinder head bolt tightening..... EM-23</p>
D	
<p>Data link connector for Consult..... EC-62</p> <p>Daytime light system..... EL-46</p> <p>Daytime running light - See Daytime light system..... EL-46</p> <p>DEF - Wiring diagram..... EL-130</p> <p>Detonation sensor - See Knock sensor..... EC-240</p> <p>Diagnosis sensor unit..... RS-16</p> <p>Diagnostic trouble code (DTC) chart..... EC-85</p> <p>Diagnostic trouble code (DTC) for ECCS OBD system..... EC-2</p> <p>Differential gear (FF A/T)..... AT-136</p> <p>Differential gear (FF M/T)..... MT-22</p> <p>Dimensions..... GI-38</p> <p>Distributor..... EC-18</p> <p>Distributor ignition (DI) system..... EC-18</p> <p>D/LOCK - Wiring diagram..... EL-176</p> <p>Dome light - See Interior lamp..... EL-71</p> <p>Door, front..... BT-10</p> <p>Door glass (front)..... BT-10</p> <p>Door glass (rear)..... BT-12</p> <p>Door lock (front)..... BT-10</p> <p>Door lock (rear)..... BT-12</p> <p>Door mirror..... BT-40</p> <p>Door, rear..... BT-12</p> <p>Door trim..... BT-19</p> <p>Drive belt inspection..... MA-10</p> <p>Drive plate runout..... EM-52</p> <p>Drive shaft (front)..... FA-14</p> <p>DTRL - Wiring diagram..... EL-49</p> <p>Dual pressure switch..... HA-40</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>FA</p> <p>RA</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>EL</p>
E	
<p>ECCS basic inspection..... EC-82</p> <p>ECCS circuit diagram..... EC-9</p> <p>ECCS component parts location..... EC-11</p>	<p>IDX</p>

ALPHABETICAL INDEX

ECCS fail-safe system	EC-86	Fast idle cam (FIC) inspection and adjustment.....	EC-33
ECCS on board diagnostic system.....	EC-42	F/FOG - Wiring diagram.....	EL-59
ECCS relay.....	EC-11	FICD - Wiring diagram	EC-473
ECCS symptom matrix chart.....	EC-87	Final drive (FF A/T)	AT-136
ECCS system diagram and chart	EC-10	Final drive (FF M/T)	MT-22
ECM input/output signal.....	EC-95	Finisher, interior - See Trim.....	BT-16
ECTS - Wiring diagram.....	EC-133, EC-149	Finisher, trunk lid.....	BT-26
EGR control (EGRC) - BPT valve.....	EC-263	Floor trim	BT-16
EGR control (EGRC) - solenoid valve	EC-348	Flow charts	GI-30
EGR control valve	EC-261, EC-364	Fluids	MA-8
EGR temperature sensor	EC-353	Flywheel (clutch)	CL-8
EGRC1 - Wiring diagram	EC-255	Flywheel runout.....	EM-52
EGRC/V - Wiring diagram.....	EC-348	Fog lamp, front.....	EL-58
EGR/TS - Wiring diagram	EC-353	Fog lamp, front, removal and installation.....	BT-5
Electric sun roof	EL-141	Fork rod (M/T)	MT-13
Electrical diagnoses	GI-20	Forward clutch.....	AT-112
Electrical load signal circuit.....	EC-477	F/PUMP - Wiring diagram	EC-465
Electrical units location.....	EL-230	Freeze frame data.....	EC-44
Electronic ignition system.....	EC-18	FRO2 - Wiring diagram	EC-154
Engine compartment	BT-41	FRO2/H - Wiring diagram	EC-186
Engine control circuit diagram.....	EC-9	Front axle	FA-9
Engine control module (ECM).....	EC-316	Front bumper.....	BT-5
Engine coolant temperature sensor (ECTS).....	EC-133	Front disc brake	BR-19
Engine oil filter replacement.....	MA-15	Front door.....	BT-10
Engine oil precautions.....	GI-5	Front fog lamp.....	EL-58
Engine oil replacement.....	MA-15	Front fog lamp removal and installation.....	BT-5
Engine outer component parts.....	EM-10	Front heated oxygen sensor (HO2S).....	EC-154
Engine removal	EM-41	Front heated oxygen sensor (HO2S) heater	EC-186
Engine room - See Engine compartment	BT-41	Front heated oxygen sensor (HO2S) monitor...EC-161	
Engine serial number	GI-37	Front oxygen sensor (O2S).....	EC-154
EVAP canister	EC-21	Front oxygen sensor (O2S) monitor	EC-53
EVAP canister purge control solenoid valve.....	EC-417, EC-423	Front passenger air bag.....	RS-19
EVAP canister purge control valve	EC-417, EC-423	Front seat	BT-29
EVAP canister purge volume control valve.....	EC-21, EC-283, EC-378	Front seat belt	RS-3
EVAP canister vent control valve.....	EC-289	Front suspension.....	FA-22
EVAP control system pressure sensor	EC-294	Front washer	EL-117
EVAP control system (small leak) diagnosis	EC-272, EC-366	Front wiper	EL-117
EVAP vapor lines inspection	MA-17	FUEL - Wiring diagram	EC-219
Evaporative emission (EVAP) system.....	EC-21	Fuel cut control (at no load & high engine speed)	EC-20
Exhaust gas recirculation (EGR) valve.....	EC-255	Fuel filler lid.....	BT-8
Exhaust system.....	FE-6	Fuel filter.....	EC-32
Exhaust system inspection.....	MA-18	Fuel filter replacement.....	MA-14
Exterior	BT-23	Fuel gauge	EL-80, EL-89
Exterior lamp	EL-54	Fuel injector.....	EC-461
		Fuel line inspection	MA-13
		Fuel precautions.....	GI-6
		Fuel pressure check.....	EC-32
		Fuel pressure regulator.....	EC-33
		Fuel pressure release	EC-32
		Fuel pump	EC-465
		Fuel pump and gauge.....	FE-5
		Fuel pump relay	EC-465

F

Fan switch.....	HA-31
Fast idle.....	EC-33
Fast idle cam (FIC)	EC-33

ALPHABETICAL INDEX

Fuel system	FE-3
Fuel tank vacuum relief valve	EC-22
Fuse	EL-14
Fuse block	Foldout page
Fusible link	EL-14

G

Garage jack and safety stand	GI-40
Gauges	EL-77, EL-86
Gear components (M/T)	MT-12
Generator	EL-35
Generic scan tool (GST)	EC-76
Glass (front)	BT-10
Glass (rear)	BT-12
Governor valve assembly	AT-35
Grease	MA-8
Grille - See Exterior	BT-5
Ground distribution	EL-15

H

Harness connector	EL-3
Harness connector inspection	GI-17
Harness layout	EL-231
Hazard warning lamp	EL-61
Headlamp	EL-42
Headlamp aiming control	EL-45
Headlining - See Roof trim	BT-21
Heated oxygen sensor (HO2S) (front)	EC-154
Heated oxygen sensor (HO2S) heater (front)	EC-186
Heated oxygen sensor (HO2S) heater (rear) ...	EC-215
Heated oxygen sensor monitor (HO2S) (front)	EC-161
Heated oxygen sensor (rear)	EC-190
HEATER - Wiring diagram	HA-23
Heater system - Wiring diagram	HA-23
Height (Dimensions)	GI-38
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure ...	HA-55
HFC134a (R134a) system service tools	HA-9
HFC134a system service equipment precaution	HA-11
High clutch	AT-107
H/LAMP - Wiring diagram	EL-43
Hood	BT-5
Horn	EL-126
HORN - Wiring diagram	EL-126
How to erase DTC for ECCS OBD system	EC-52

I

IACV-AAC valve inspection	EC-310	GI
IACV-FICD solenoid valve	EC-473	
IATS - Wiring diagram	EC-127	MA
Identification plate	GI-36	
Idle air control (IAC) system	EC-304	
Idle air control valve (IACV)	EC-304	EM
Idle mixture ratio	EC-36	
Idle speed	EC-36	
Ignition coil	EC-342	LC
Ignition timing	EC-36	
Ignition wire inspection	EC-239	EC
IGN/SG - Wiring diagram	EC-336	
ILL - Wiring diagram	EL-68	
Illumination	EL-67	FE
Inhibitor switch	AT-47	
INJECT - Wiring diagram	EC-459	
Injector	EC-461	GL
Injector removal and installation	EC-33	
Input shaft (FF M/T)	MT-16	MT
Instrument panel	BT-13	
Intake air temperature sensor	EC-127	
Intake door control linkage adjustment	HA-34	AT
Intake door motor	HA-34	
Intake manifold	EM-10	FA
Intake valve timing control	EC-326	
Intake valve timing control solenoid valve	EC-326	
Interior	BT-16	RA
Interior lamp	EL-71	
Interior lamp on-off control	EL-72	
INT/L - Wiring diagram	EL-73	BR
IVC - Wiring diagram	EC-326	

J

Jacking points	GI-40, GI-39	RS
Joint connector (J/C)	Foldout page	
Junction box (J/B)	Foldout page	BT

K

Keyless entry system - See Multi-remote control system	EL-188	EL
Knock sensor (KS)	EC-240	
Knuckle spindle	FA-9	
KS - Wiring diagram	EC-240	

ALPHABETICAL INDEX

L

Length (Dimensions)	GI-38
License lamp	EL-56
Lifting points	GI-39
Line pressure test (A/T)	AT-34
Liquid gasket application.....	EM-2
LKUP - Wiring diagram	EC-436
LOAD - Wiring diagram.....	EC-477
Location of electrical units.....	EL-229
Lock, door (front).....	BT-10
Lock, door (rear).....	BT-12
Low and reverse brake	AT-118
Lubricant (R134a) A/C.....	HA-57
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C	HA-57
Lubrication-locks, hinges and hood latches.....	MA-23
Luggage compartment trim	BT-22

M

MAFS - Wiring diagram.....	EC-110
Magnet clutch.....	HA-61
MAIN - Wiring diagram.....	EC-105
Main drive gear (M/T).....	MT-12
Mainshaft (M/T)	MT-18
Maintenance	MA-3
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-62
Malfunction indicator lamp (MIL).....	EC-53
Manual steering gear	ST-14
Manual transaxle number.....	GI-37
Manual transmission oil replacement.....	MA-18
MAP/BARO switch solenoid valve	EC-318
Mass air flow sensor (MAFS).....	EC-110
Master cylinder (brake)	BR-12
Meter	EL-77, EL-86
METER - Wiring diagram.....	EL-79, EL-88
MIL & Data link connectors circuit	EC-481
MIL/DL - Wiring diagram	EC-481
MIRROR - Wiring diagram	EL-142
Mirror, door.....	BT-40
Mirror, out side	BT-40
Misfire.....	EC-235
Mode door control linkage adjustment.....	HA-41
Model variation	GI-35
Molding - See Exterior	BT-23
M/T major overhaul	MT-11
M/T removal and installation.....	MT-8
Mud guard - See Exterior.....	BT-27
MULTI - Wiring diagram.....	EL-191

Multiport fuel injection (MFI) system.....	EC-16
Multiport fuel injection precautions.....	GI-5
Multi-remote control system.....	EL-188

N

Neutral position switch (M/T)	MT-7
NVH troubleshooting (BR).....	BR-3
NVH troubleshooting (CL).....	CL-3
NVH troubleshooting (EM)	EM-8
NVH troubleshooting (FA)	FA-4
NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (RA).....	RA-3
NVH troubleshooting (ST).....	ST-5

O

Oil change (capacity)	MA-8
Oil change (interval).....	MA-5
Oil pan (engine).....	EM-15
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine).....	LC-7
Oil pump (A/T).....	AT-84
Oil pump (engine).....	LC-6
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-28
ORVR (On-board Refueling Vapor Recovery)	EC-26
Out side mirror	BT-40
Overdrive control switch.....	AT-46
Overrun clutch.....	AT-112
Oversize piston.....	EM-49
Oxygen sensor monitor (O2S) (front)	EC-161
Oxygen sensor (O2S) (front).....	EC-154

P

Parking brake control	BR-35
Park/Neutral position switch.....	EC-431
PCV (positive crankcase ventilation)	EC-31
PGC/V - Wiring diagram	EC-283
Piston assembly	EM-53
Piston pin inspection	EM-46
Piston ring inspection.....	EM-47
Piston to bore clearance	EM-48
PNP/SW - Wiring diagram	EC-431
POWER - Wiring diagram	EL-8
Power door mirror	EL-142
Power steering fluid level.....	ST-6, MA-22
Power steering gear.....	ST-19
Power steering hydraulic pressure.....	ST-9
Power steering oil pressure switch	EC-469, EC-472

ALPHABETICAL INDEX

Power steering oil pump	ST-24
Power steering system bleeding	ST-7
Power supply routing	EL-6
Power transistor	EC-342
Power transistor & ignition coil.....	EC-336
Power window	EL-167
Precautions (General)	GI-3
PRE/SE - Wiring diagram	EC-294
Pressure plate - See Clutch cover.....	CL-7
Pressure test (A/T)	AT-34
PST/SW - Wiring diagram.....	EC-469

R

Rack retainer adjustment	ST-16
Radiator	LC-14
Radiator fan - See Cooling fan	LC-14
Radio - See Audio	EL-137
Rear air spoiler.....	BT-28
Rear axle	RA-7
Rear axle (disc brake type).....	RA-7
Rear axle (drum brake type).....	RA-7
Rear bumper	BT-8
Rear combination lamp removal and installation	BT-27
Rear disc brake	BR-27
Rear door	BT-12
Rear drum brake	BR-24
Rear heated oxygen sensor (HO2S)	EC-190
Rear heated oxygen sensor (HO2S) heater.....	EC-215
Rear seat.....	BT-30
Rear seat belt.....	RS-3
Rear side window.....	BT-38
Rear suspension	RA-9
Rear window.....	BT-37
Rear window defogger	EL-128
Refrigerant CFC12 precaution	HA-2
Refrigerant connection precaution	HA-6
Refrigerant discharging evacuating charging.....	HA-55
Refrigerant general precaution.....	HA-3
Refrigerant lines	HA-59
Refrigeration cycle.....	HA-13
Release bearing (clutch)	CL-6
Resistor	EC-342
Reverse clutch.....	AT-103
Reverse idler shaft (M/T)	MT-12
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-7
Reverse main gear (M/T)	MT-12
Road wheel size.....	GI-38
Roof trim.....	BT-21
Room lamp	EL-71
Rotor disc (front)	FA-9

RRO2 - Wiring diagram.....	EC-190
RRO2/H - Wiring diagram.....	EC-215

S

SAE J1930 terminology list.....	GI-44
Seal - See Exterior.....	BT-23
Seat belt, front.....	RS-3
Seat belt inspection.....	MA-23
Seat belt, rear.....	RS-3
Seat, front.....	BT-29
Seat, rear.....	BT-30
Self-diagnostic results	EC-53
SFT, RL - Wiring diagram	AT-49
SHIFT - Wiring diagram	AT-49
Shift control components (M/T).....	MT-13
Shift fork (M/T)	MT-13
Shift lever	MT-10
Shift lock system	AT-48
Shift schedule.....	AT-38
Shock absorber (front)	FA-23
Shock absorber (rear)	RA-11
Side trim	BT-16
Side window - See Rear side window	BT-38
Smart entrance control unit.....	EL-228
SMJ (super multiple junction).....	Foldout page
Spare tire size	GI-38
Spark plug replacement	MA-16
Speedometer	EL-83, EL-91
Spiral cable.....	RS-17
Spring (Wheelarch) height	FA-6
SROOF - Wiring diagram.....	EL-141
SRS - See Supplemental Restraint System	RS-13
SRS - Wiring diagram	RS-30
SRS Trouble diagnoses	RS-25, RS-28
S/SIG - Wiring diagram	EC-462
Stabilizer bar (front).....	FA-24
Stall test (A/T)	AT-31
Standardized relay	EL-4
START - Wiring diagram	EL-25
Start signal	EC-462
Starter.....	EL-28
Starting system.....	EL-23
Steering gear and linkage inspection.....	MA-22
Steering knuckle.....	FA-9
Steering linkage.....	ST-14, ST-19
Steering switch.....	EL-41
Steering wheel and column.....	ST-10
Steering wheel play.....	ST-8
Steering wheel turning force	ST-7
Stop lamp	EL-56
Striking rod (M/T)	MT-13
Strut (front)	FA-23

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Strut (rear).....	RA-11
Sun roof, electric.....	EL-141
Sunroof.....	BT-31
Supplemental restraint system - Wiring diagram.....	RS-30
Supplemental Restraint System.....	RS-13
SW/V - Wiring diagram.....	EC-318
Symbols and abbreviations.....	GI-8
Synchronizer (M/T).....	MT-12
System readiness test (SRT) code.....	EC-44

T

Tachometer.....	EL-82
Tail lamp.....	EL-56
TAIL/L - Wiring diagram.....	EL-56
Tank fuel temperature sensor.....	EC-231
Temperature control cable and linkage adjustment.....	HA-40
TFTS - Wiring diagram.....	EC-231
THEFT - Wiring diagram.....	EL-207
Theft warning system.....	EL-202
Thermal protector.....	HA-40
Thermo control amp.....	HA-40
Thermostat.....	LC-12
Three way catalyst precautions.....	GI-5
Throttle bodies.....	EM-11
Throttle drum adjustment.....	FE-2
Throttle position sensor adjustment.....	EC-82
Throttle position sensor (TPS).....	EC-138
Throwout bearing - See Clutch release bearing.....	CL-6
Tie-rod.....	ST-16, ST-22
Tie-rod ball joints.....	ST-16, ST-22
Tightening torque of standard bolts.....	GI-43
Timing chain.....	EM-17
Tire rotation.....	MA-22
Tire size.....	GI-38
Torque converter clutch solenoid valve.....	AT-44
Torque converter installation.....	AT-60
Torque convertor clutch solenoid valve.....	EC-436, EC-441
Tow truck towing.....	GI-41
TPS - Wiring diagram.....	EC-138
TP/SW - Wiring diagram.....	EC-311
Transmission case (M/T).....	MT-11
Transverse link (front).....	FA-25
Tread-FR&RR (Dimensions).....	GI-38
Trim.....	BT-16
Trouble diagnoses.....	GI-20
Trunk lid.....	BT-8
Trunk lid finisher.....	BT-26
Trunk lid opener - See Trunk lid.....	BT-8

Trunk room lamp.....	EL-71
Trunk room trim.....	BT-22
TURN - Wiring diagram.....	EL-64
Turn signal lamp.....	EL-61
Two trip detection logic.....	EC-42
Two-pole lift.....	GI-41

U

Under body.....	BT-43
-----------------	-------

V

Vacuum cut valve.....	EC-416
Vacuum cut valve bypass valve.....	EC-406
Vacuum hose (brake system).....	BR-18
Vacuum hose drawing (ECCS).....	EC-14
Valve clearance.....	EM-38
Valve guide.....	EM-33
Valve seat.....	EM-35
Valve spring.....	EM-36
Vehicle identification number.....	GI-36
Vehicle recovery (freeing a stuck vehicle).....	GI-42
Vehicle speed sensor (VSS).....	EC-300
VENT/V - Wiring diagram.....	EC-289
Viscosity number (SAE).....	MA-8
VSS - Wiring diagram.....	EC-300

W

WARN - Wiring diagram.....	EL-97
Warning chime.....	EL-106
Warning lamps.....	EL-94
Washer, front.....	EL-117
Water pump.....	LC-11
Water temperature gauge.....	EL-80, EL-89
Weatherstrip - See Exterior.....	BT-23
Wheel alignment (front).....	FA-7
Wheel alignment (rear).....	RA-6
Wheel balance.....	MA-22
Wheel bearing (front axle).....	FA-7, FA-11
Wheel bearing (rear).....	RA-5
Wheel hub (front).....	FA-9
Wheel hub (rear).....	RA-7
Wheel sensors (ABS).....	BR-40
Wheel size.....	GI-38
Wheelarch height.....	FA-6
Wheelbase (Dimensions).....	GI-38
Wide open & closed throttle position (CTP) switch.....	EC-138
Width (Dimensions).....	GI-38

ALPHABETICAL INDEX

WINDOW - Wiring diagram.....	EL-170	WIPER - Wiring diagram.....	EL-119
Window, door (front).....	BT-10	Wiper, front.....	EL-117
Window, door (rear).....	BT-12	Wiring diagram (cell code) list.....	EL-252
Window, rear	BT-37	Wiring diagrams	GI-9
Window, rear side.....	BT-38	Withdrawal lever (clutch).....	CL-6
Window, side - See Rear side window	BT-38	Wrist pin - See Piston pin inspection.....	EM-46
Windshield.....	BT-36		

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX