

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS (anti-lock brake system) .....	BR-26
ABS actuator .....	BR-30
ABS circuit diagram .....	BR-35
ABS component parts and connector locations.....	BR-34
ABS control unit .....	BR-30
ABS hydraulic circuit .....	BR-26
ABS input/output signal inspection .....	BR-70
ABS self-diagnosis .....	BR-41, 45
ABS system components .....	BR-27
ABS trouble diagnoses .....	BR-32
ABS wheel sensors .....	BR-29
ABS wiring diagram .....	BR-36
A/C air flow.....	HA-13
A/C component layout.....	HA-12
A/C compressor clutch removal and installation.....	HA-72
A/C compressor description.....	HA-15
A/C compressor mounting .....	HA-70
A/C compressor precaution .....	HA-6
A/C compressor special service tool .....	HA-6
A/C control linkage adjustment (manual A/C).....	HA-61
A/C control operation (manual A/C).....	HA-14
A/C diagnostic work flow (manual A/C) .....	HA-21
A/C harness layout (manual A/C) .....	HA-38
A/C HFC134a (R134a) system precaution.....	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-63
A/C HFC134a (R134a) system service tools .....	HA-7
A/C HFC134a system service equipment precaution.....	HA-9
A/C lubricant (R134a) .....	HA-65
A/C operational check.....	HA-22
A/C performance chart.....	HA-34
A/C performance test diagnoses .....	HA-32
A/C push control .....	HA-71
A/C relay .....	HA-60
A/C service data specification.....	HA-76
A/C symptom chart (manual A/C) .....	HA-24
A/C trouble diagnoses (manual A/C) .....	HA-21
Accelerator control system .....	FE-2
Accelerator wire adjustment .....	FE-2
Air bag .....	RS-5
Air bag disposal .....	RS-13
Air bag module.....	RS-9
Air bag precautions .....	GI-2
Air bleeding for brake system.....	BR-6
Air cleaner filter replacement.....	MA-13
Air conditioner cut control .....	EC-18
Air flow meter - See Mass air flow sensor.....	EC-94
Air mix door control linkage adjustment.....	HA-61
Air mix. door motor .....	HA-61
<b>1296</b> spoiler, front.....	BT-24

Air spoiler, rear .....	BT-24
Alternator .....	EL-34
Angular tightening application .....	EM-2
Anti-freeze coolant mixture ratio.....	MA-9
ASCD (automatic speed control device) .....	EL-131
A/T control DTC:P0600 .....	EC-226
AT control unit .....	AT-51
AT diagnosis communication line.....	EC-278
AT fluid temperature sensor .....	AT-63
AT removal and installation.....	AT-135
AT self-diagnoses .....	AT-21
AT shift lock system .....	AT-125
Audio .....	EL-114
Audio and A/C control removal and installation - See Instrument panel.....	BT-16
Automatic transmission fluid replacement.....	MA-18
Automatic transmission number.....	GI-37
Axle housing (rear).....	RA-8

## B

Back-up lamp.....	EL-53
Back-up lamp switch (MT) .....	MT-6
Ball joint front axle .....	FA-15
Battery.....	EL-20
Baulk ring (MT) .....	MT-10
Belt inspection (drive belt) .....	MA-10
Bi-level door control linkage adjustment.....	HA-62
Blower motor .....	HA-59
Blower resistor .....	HA-59
Board-on lift .....	GI-39
Body alignment.....	BT-41
Boring/horning cylinder block .....	EM-39
BPT valve .....	EC-181
Brake booster .....	BR-11
Brake control valve (Proportioning valve) .....	BR-4
Brake fluid change .....	BR-5
Brake fluid level .....	MA-19
Brake fluid level and line check .....	BR-5
Brake hydraulic line.....	BR-3
Brake inspection .....	MA-20
Brake lines and cables inspection.....	MA-19
Brake master cylinder .....	BR-8
Brake pedal .....	BR-7
Bumper, front .....	BT-6
Bumper, rear .....	BT-9

## C

Camshaft inspection .....	EM-25
Camshaft position sensor (CMPS) .....	EC-168
Canister-See EVAP canister .....	EC-20
Center bearing assembly (propeller shaft) .....	PD-8
Center bearing disassembly (propeller shaft) .....	PD-8

# ALPHABETICAL INDEX

Charging system.....	EL-30
Chassis and body maintenance .....	MA-17
Cigarette lighter .....	EL-104
Circuit breaker .....	EL-16
Clock.....	EL-104
Closed loop control .....	EC-131
Closed throttle position switch .....	EC-222
Clutch cover.....	CL-10
Clutch disc.....	CL-10
Clutch fluid level .....	MA-17
Clutch master cylinder.....	CL-6
Clutch operating cylinder.....	CL-7
Clutch pedal.....	CL-4
Clutch pedal free play .....	CL-4
Clutch pedal height.....	CL-4
Clutch release bearing .....	CL-8
Clutch withdrawal lever .....	CL-8
Coil spring (front).....	FA-13
Coil spring (rear).....	RA-20
Collision diagnosis .....	RS-37
Combination lamp, rear, removal and installation .....	BT-24
Combination meter .....	EL-75
Combination meter removal and installation - See Instrument panel.....	BT-16
Combination switch.....	EL-35
Compression pressure.....	EM-9
Compressor clutch removal and installation.....	HA-72
Compressor description .....	HA-15
Compressor mounting.....	HA-70
Compressor precaution.....	HA-6
Compressor special service tool.....	HA-6
Connecting rod .....	EM-38
Connecting rod bearing clearance .....	EM-41
Connecting rod bushing clearance.....	EM-42
Console box - See Instrument panel.....	BT-16
CONSULT general information.....	GI-34
Control lever (MT) .....	MT-11
Control valve (AT) .....	AT-157
Converter housing installation.....	AT-137
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-7
Cooling fan .....	LC-13
Cooling fan control.....	EC-281
Cooling fan motor.....	EC-292
Cooling fan relay .....	EC-292
Counter gear (MT) .....	MT-10
Coupling sleeve (MT).....	MT-10
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-168
Crankshaft.....	EM-39
Crankshaft position sensor (OBD) DTC0802, P0335.....	EC-164
Crankshaft position sensor (OBD) DTC0802, P0335 inspection .....	EC-167
Cruise control - See ASCD.....	EL-131
Cylinder block.....	EM-35
Cylinder block boring.....	EM-39
Cylinder head.....	EM-23

Cylinder head bolt tightening.....	EM-19
------------------------------------	-------

## D

Daytime running light - See Daytime light system.....	EL-41	GI
Detonation sensor - See Knock sensor.....	EC-161	MA
Differential carrier assembly (except FF).....	PD-26	
Differential carrier disassembly (except FF).....	PD-14	EM
Differential gear oil replacement.....	MA-19	
Dimensions.....	GI-38	LC
Distributor ignition (DI) system.....	EC-17	
Dome light - See Interior lamp .....	EL-71	
Door glass.....	BT-11	EC
Door glass Fitting Adjustment.....	BT-12	
Door lock.....	BT-11	
Door mirror.....	BT-40	FE
Door trim.....	BT-21	
Door, front .....	BT-11	
Drive pinion diff. inspection (except FF) .....	PD-18	CL
Drive plate runout .....	EM-43	
Drive shaft (rear).....	RA-12	
Dropping resistor (AT).....	AT-90	MT

## E

ECCS basic inspection .....	EC-71	
ECCS component parts location.....	EC-11	PD
ECCS on board diagnostic system.....	EC-33	
ECCS symptom matrix chart .....	EC-76	FA
ECCS system diagram and chart .....	EC-10	
ECM input/output signal.....	EC-84	
EGR control (EGRC) - BPT valve.....	EC-180	RA
EGR control (EGRC) - solenoid valve .....	EC-251	
EGRC-solenoid valve.....	EC-254	
EGRC-solenoid valve inspection .....	EC-254	BR
Electric sun roof.....	EL-128	
Electrical unit.....	Foldout	
Electrical units location .....	EL-208	ST
Engine compartment.....	BT-41	
Engine coolant temperature sensor (ECTS).....	EC-111	RS
Engine oil filter replacement.....	MA-14	
Engine oil precautions.....	GI-5	
Engine oil replacement .....	MA-14	BT
Engine outer component parts .....	EM-7	
Engine removal.....	EM-33	
Engine room - See Engine compartment .....	BT-41	HA
Engine serial number .....	GI-37	
EVAP canister .....	EC-20	EL
EVAP canister inspection.....	EC-20	
EVAP canister purge control valve .....	EC-195	
EVAP canister purge control valve inspection.....	EC-202	IDX

# ALPHABETICAL INDEX

EVAP canister purge volume control valve .....	EC-265
EVAP canister vent control valve .....	EC-203
EVAP control system (small leak) diagnosis .....	EC-185
EVAP control system pressure sensor .....	EC-99, 209
EVAP control system purge flow monitoring diagnosis .....	EC-271
EVAP vapor lines inspection .....	MA-16
Evaporative emission (EVAP) system .....	EC-20
Exhaust gas recirculation (EGR) valve .....	EC-172
Exhaust system .....	FE-7
Exhaust system inspection .....	MA-17
Exterior .....	BT-24
Exterior lamp .....	EL-51

## F

Fan switch .....	HA-59
Fifth position switch .....	EC-313
Final drive disassembly (except FF) .....	PD-14
Final drive pre-inspection (except FF) .....	PD-14
Finisher, interior - See Trim .....	BT-19
Finisher, rear panel .....	BT-23
Floor trim .....	BT-19
Fluid temperature sensor (AT) .....	AT-63
Fluids .....	MA-8
Flywheel runout .....	EM-43
Fork rod (MT) .....	MT-11
Forward clutch .....	AT-176
Freeze frame data .....	EC-35, 55
Front air spoiler .....	BT-24
Front axle .....	FA-8
Front bumper .....	BT-6
Front disc brake .....	BR-13
Front door .....	BT-11
Front fog lamp .....	EL-55
Front heated oxygen sensor (HO2S) .....	EC-126
Front passenger air bag .....	RS-10
Front seat .....	BT-31
Front seat belt .....	RS-3
Front suspension .....	FA-12
Front washer .....	EL-95
Front wiper .....	EL-95
Fuel cut control (at no load & high engine speed) .....	EC-19
Fuel filler lid .....	BT-9
Fuel filter replacement .....	MA-13
Fuel gauge .....	EL-76
Fuel injection system .....	EC-143, 148
Fuel line inspection .....	MA-12
Fuel precautions .....	GI-6
Fuel pressure check .....	EC-25
Fuel pressure release .....	EC-25
Fuel pump .....	EC-298, 302
Fuel pump relay .....	EC-302
Fuel system .....	FE-3
<b>1208</b> .....	EL-16

Fusible link .....	EL-16
--------------------	-------

## G

Garage jack and safety stand .....	GI-40
Gauges .....	EL-74
Gears (MT) .....	MT-10
Glass .....	BT-11
Grease .....	MA-8
Ground distribution .....	EL-17

## H

Harness connector .....	EL-3
Harness layout .....	EL-211
Hazard warning lamp .....	EL-58
Headlamp .....	EL-38
Headlamp removal and installation .....	BT-6
Headlining - See Roof trim .....	BT-22
Heated oxygen sensor (HO2S) (front) .....	EC-126
Heated oxygen sensor (rear) .....	EC-135
Height (Dimensions) .....	GI-38
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service procedure .....	HA-63
HFC134a (R134a) system service tools .....	HA-7
HFC134a system service equipment precaution .....	HA-9
High clutch .....	AT-174
Hood .....	BT-6
Horn .....	EL-104
How to erase DTC for ECCS OBD system .....	EC-42
How to follow flow chart in trouble diagnoses .....	GI-31
How to perform efficient diagnosis for an electrical incident .....	GI-19
How to read wiring diagrams .....	GI-9
How to use this manual .....	GI-7

## I

IACV - air regulator .....	EC-308
IACV - FICD solenoid valve .....	EC-312
IACV-AAC valve inspection .....	EC-221
IACV-FICD solenoid valve .....	EC-309
Identification plate .....	GI-37
Idle air control valve (IACV) - air regulator .....	EC-306
Idle mixture ratio .....	EC-27
Idle speed .....	EC-27
Ignition coil .....	EC-246
Ignition timing .....	EC-27
Illumination .....	EL-66
Inhibitor switch .....	AT-59
Injector .....	EC-295
Injector removal and installation .....	EC-26

# ALPHABETICAL INDEX

Instrument panel ..... BT-16  
 Intake air temperature sensor ..... EC-106  
 Intake air temperature sensor  
 inspection ..... EC-110  
 Intake door control linkage adjustment ..... HA-61  
 Intake manifold ..... EM-8  
 Interior ..... BT-19  
 Interior lamp ..... EL-66

## J

Jacking points ..... GI-40

## K

Keyless entry system - See Multi-remote control system ..... EL-164  
 Knock sensor (KS) ..... EC-161, 163  
 Knuckle spindle ..... FA-8

## L

Length (Dimensions) ..... GI-38  
 License lamp ..... EL-51  
 Line pressure solenoid valve ..... AT-79, 87, 90  
 Line pressure test (AT) ..... AT-123  
 Liquid gasket application ..... EM-2  
 Location of electrical units ..... EL-208  
 Lock, door ..... BT-11  
 Low and reverse brake ..... AT-180  
 Lower ball joint (rear susp.) ..... RA-21  
 Lubricant (R134a) A/C ..... HA-65  
 Lubricants ..... MA-8  
 Lubrication circuit (engine) ..... LC-4  
 Lubrication-locks, hinges and hood  
 latches ..... MA-22

## M

Magnet clutch ..... HA-72  
 Main drive gear (MT) ..... MT-10  
 Mainshaft (MT) ..... MT-10  
 Maintenance (engine) ..... MA-10  
 Maintenance ..... MA-1  
 Maintenance general ..... MA-3  
 Maintenance periodic ..... MA-5  
 Maintenance schedule (1) ..... MA-6  
 Maintenance schedule (2) ..... MA-7  
 Manual steering gear ..... ST-13  
 Manual transmission number ..... GI-37  
 Manual transmission oil replacement ..... MA-17  
 MAP/BARO switch solenoid valve ..... EC-236  
 Mass air flow sensor (MAFS) ..... EC-94  
 Master cylinder (brake) ..... BR-8  
 Master cylinder (clutch) ..... CL-6

Meter ..... EL-74  
 MIL & Data link connectors circuit ..... EC-317  
 Mirror, door ..... BT-40  
 Mirror, out side ..... BT-40  
 Misfire ..... EC-157  
 Mode door control linkage adjustment ..... HA-61  
 Model variation ..... GI-35  
 Molding - See Exterior ..... BT-24  
 MT overhaul ..... MT-9  
 MT removal and installation ..... MT-7  
 Mud guard - See Exterior ..... BT-24  
 Multi link/lower ball joint (rear) ..... RA-21  
 Multi-remote control system ..... EL-164  
 Multiport fuel injection (MFI) system ..... EC-15  
 Multiport fuel injection precautions ..... GI-4

## N

Neutral position switch (MT) ..... MT-6

## O

Oil pan (engine) ..... EM-10  
 Oil pressure (engine) ..... LC-4  
 Oil pressure relief valve (engine) ..... LC-6  
 Oil pump (AT) ..... AT-153  
 Oil pump (engine) ..... LC-5  
 Oil pump regulator valve (engine) ..... LC-6  
 Oil seal replacement (engine) ..... EM-21  
 Oil seal replacement  
 (front of final drive) ..... PD-9  
 Oil seal replacement  
 (side of final drive) ..... PD-9  
 Operating cylinder (clutch) ..... CL-7  
 Out side mirror ..... BT-40  
 Overdrive control switch ..... AT-59  
 Overrun clutch ..... AT-176  
 Overrun clutch solenoid valve ..... AT-79, 87, 100  
 Oversize piston ..... EM-39

## P

Park/Neutral position switch ..... EC-231  
 Parking brake control ..... BR-24  
 Parking lamp ..... EL-51  
 Pilot bushing replacement ..... EM-45  
 Pinion bearing preload diff. (except FF) ..... PD-20  
 Pinion gear height diff. (except FF) ..... PD-20  
 Piston assembly ..... EM-43  
 Piston pin inspection ..... EM-37  
 Piston ring inspection ..... EM-37  
 Piston to bore clearance ..... EM-38  
 Power antenna ..... EL-122  
 Power door lock ..... EL-158  
 Power door mirror ..... EL-129  
 Power steering fluid level ..... MA-21, ST-6  
 Power steering hydraulic pressure ..... ST-81

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

EL

**IDX**

299

# ALPHABETICAL INDEX

Power steering oil pressure switch.....	EC-303, 305
Power steering oil pump.....	ST-23
Power steering system bleeding.....	ST-7
Power supply routing.....	EL-6
Power transistor & ignition coil.....	EC-242
Power transistor.....	EC-246
Power window.....	EL-153
Precautions (General).....	GI-2
Pressure plate - See Clutch cover.....	CL-10
Pressure test (AT).....	AT-123
Propeller shaft.....	PD-5
Propeller shaft on vehicle service.....	PD-6
Propeller shaft vibration.....	PD-6

## R

Rack retainer adjustment.....	ST-6
Radiator.....	LC-10
Radio - See Audio.....	EL-114
Rear air spoiler.....	BT-24
Rear axle (disc brake type).....	RA-8
Rear bumper.....	BT-9
Rear combination lamp removal and installation.....	BT-24
Rear disc brake.....	BR-17
Rear heated oxygen sensor (HO2S).....	EC-135
Rear panel finisher.....	BT-23
Rear seat.....	BT-33
Rear seat belt.....	RS-4
Rear side window.....	BT-39
Rear suspension.....	RA-18
Rear window.....	BT-38
Rear window defogger.....	EL-106
Refrigerant connection precaution.....	HA-3
Refrigerant general precaution.....	HA-2
Refrigerant lines.....	HA-67
Refrigeration cycle.....	HA-11
Release bearing (clutch).....	CL-8
Resistor.....	EC-246
Reverse clutch.....	AT-170
Reverse gear (MT).....	MT-10
Reverse idler shaft (MT).....	MT-10
Reverse lamp switch (MT) - See Back-up lamp switch (MT).....	MT-6
Revolution sensor (AT).....	AT-65
Ring gear diff. Inspection (except FF).....	PD-18
Road wheel size.....	GI-38
Roof trim.....	BT-22

## S

SAE J1930 terminology list.....	GI-44
Seal - See Exterior.....	BT-24
Seat belt inspection.....	MA-22
Seat belt, front.....	RS-3
Seat belt, rear.....	RS-4
Seat, front.....	BT-31
Seat, rear.....	BT-33

Shift control (MT).....	MT-11
Shift fork (MT).....	MT-11
Shift lock system.....	AT-125
Shift schedule.....	AT-44
Shift solenoid valve (AT).....	AT-69, 72, 74, 79, 87, 92, 95
Shock absorber (rear).....	RA-20
Side bearing preload diff. (except FF).....	PD-19
Side trim.....	BT-19
Side window - See Rear side window.....	BT-39
Smart entrance control unit.....	EL-204
SMJ (super multiple junction).....	Foldout
Spark plug replacement.....	MA-15
Speedometer.....	EL-76
Spiral cable.....	RS-9
Spot lamp.....	EL-71
Spring (Wheelarch) height.....	FA-5
SRS - See Supplemental Restraint System.....	RS-5
SRS Trouble diagnoses.....	RS-17
SRS Wiring diagram.....	RS-20
Stabilizer bar (front).....	FA-14
Stabilizer bar (rear).....	RA-22
Stall test (AT).....	AT-120
Standardized relay.....	EL-4
Starter.....	EL-29
Starting system.....	EL-24
Steering gear and linkage inspection.....	MA-20
Steering gear oil level.....	MA-21
Steering linkage.....	ST-13
Steering switch.....	EL-37
Steering wheel and column.....	ST-9
Steering wheel play.....	ST-5
Steering wheel turning force.....	ST-7
Stop lamp.....	EL-51
Striking rod (MT).....	MT-11
Strut (front).....	FA-13
Sun roof, electric.....	EL-128
Sunroof.....	BT-34
Supplemental Restraint System.....	RS-5
Symbols and abbreviations.....	GI-8
Synchronizer (MT).....	MT-10
System readiness test (SRT) code.....	EC-35

## T

Tachometer.....	EL-76
Tail lamp.....	EL-51
Tank fuel temperature sensor.....	EC-153
Tension rod (front).....	FA-14
Theft warning system.....	EL-178
Thermostat.....	LC-9
Three way catalyst.....	EC-182
Three way catalyst precautions.....	GI-5
Throttle bodies.....	EM-8
Throttle position sensor (TPS).....	EC-116
Throttle position switch.....	AT-60
Throwout bearing - See Clutch release bearing.....	CL-8

# ALPHABETICAL INDEX

Thrust washer selection diff. (except FF) .....	PD-26
Tie-rod .....	ST-17
Tightening torque of standard bolts .....	GI-43
Timing chain .....	EM-12
Tire rotation .....	MA-19
Tire size .....	GI-38
Tooth contact diff. (except FF) .....	PD-25
Torque converter clutch solenoid valve .....	AT-79, 82, 87
Torque converter installation .....	AT-137
Tow truck towing .....	GI-41
Towing point .....	GI-42
Transmission case (MT) .....	MT-9
Transmission serial number .....	GI-37
Transverse link (front) .....	FA-15
Tread-FR&RR (Dimensions) .....	GI-38
Trim .....	BT-19
Triple pressure switch .....	HA-11, 60
Trunk lid .....	BT-9
Trunk lid opener - See Trunk lid .....	BT-9
Trunk room lamp .....	EL-71
Trunk room trim .....	BT-23
Turn signal lamp .....	EL-58
Two trip detection logic .....	EC-33
Two-pole lift .....	GI-41

## U

Under body .....	BT-43
------------------	-------

## V

Vacuum cut valve .....	EC-264
Vacuum cut valve bypass valve .....	EC-260
Vacuum hose (brake system) .....	BR-12
Vacuum hose drawing (ECCS) .....	EC-13
Valve clearance .....	EM-30

Valve guide .....	EM-26
Valve seat .....	EM-28
Valve spring .....	EM-29
Vehicle identification number .....	GI-36
Vehicle speed sensor (VSS) .....	EC-213
Viscosity number (SAE) .....	MA-8

## W

Warning buzzer .....	EL-86	EM
Warning lamps .....	EL-81	
Water pump .....	LC-8	LC
Water temperature gauge .....	EL-76	
Weatherstrip - See Exterior .....	BT-24	
Wheel alignment (front) .....	FA-6	EC
Wheel alignment (rear) .....	RA-5	
Wheel balance .....	MA-19	
Wheel bearing (front axle) .....	FA-5	FE
Wheel bearing (rear) .....	RA-5	
Wheel hub (front) .....	FA-8	
Wheel hub (rear) .....	RA-8	CL
Wheel hub and steering knuckle .....	FA-8	
Wheel sensors (ABS) .....	BR-29	
Wheel size .....	GI-38	MT
Wheelarch height .....	FA-5	
Wheelbase (Dimensions) .....	GI-38	
Wide open & closed throttle position (CTP) switch .....	EC-116	AT
Width (Dimensions) .....	GI-38	PD
Window, rear .....	BT-38	
Window, rear side .....	BT-39	
Window, side - See Rear side window .....	BT-39	FA
Windshield .....	BT-38	
Windshield washer - See Front washer .....	EL-95	
Windshield wiper - See Front wiper .....	EL-95	RA
Wiper and washer .....	EL-95	
Withdrawal lever (clutch) .....	CL-8	BR

GI

MA

EM

LC

EC

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX