

SECTION **HRN**
HORN

A
B
C
D
E

CONTENTS

DTC/CIRCUIT DIAGNOSIS	2	EXCEPT FOR MEXICO : Precaution for Battery Service	5
HORN	2	FOR MEXICO	5
Wiring Diagram - HORN -	2	FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	5
PRECAUTION	5	FOR MEXICO : Precaution for Battery Service	6
PRECAUTIONS	5	REMOVAL AND INSTALLATION	7
EXCEPT FOR MEXICO	5	HORN	7
EXCEPT FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	5	Exploded View	7
		Removal and Installation	7

J
K

HRN

M
N

O
P

HORN


< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

HORN

Wiring Diagram - HORN -

INFOID:0000000006350459

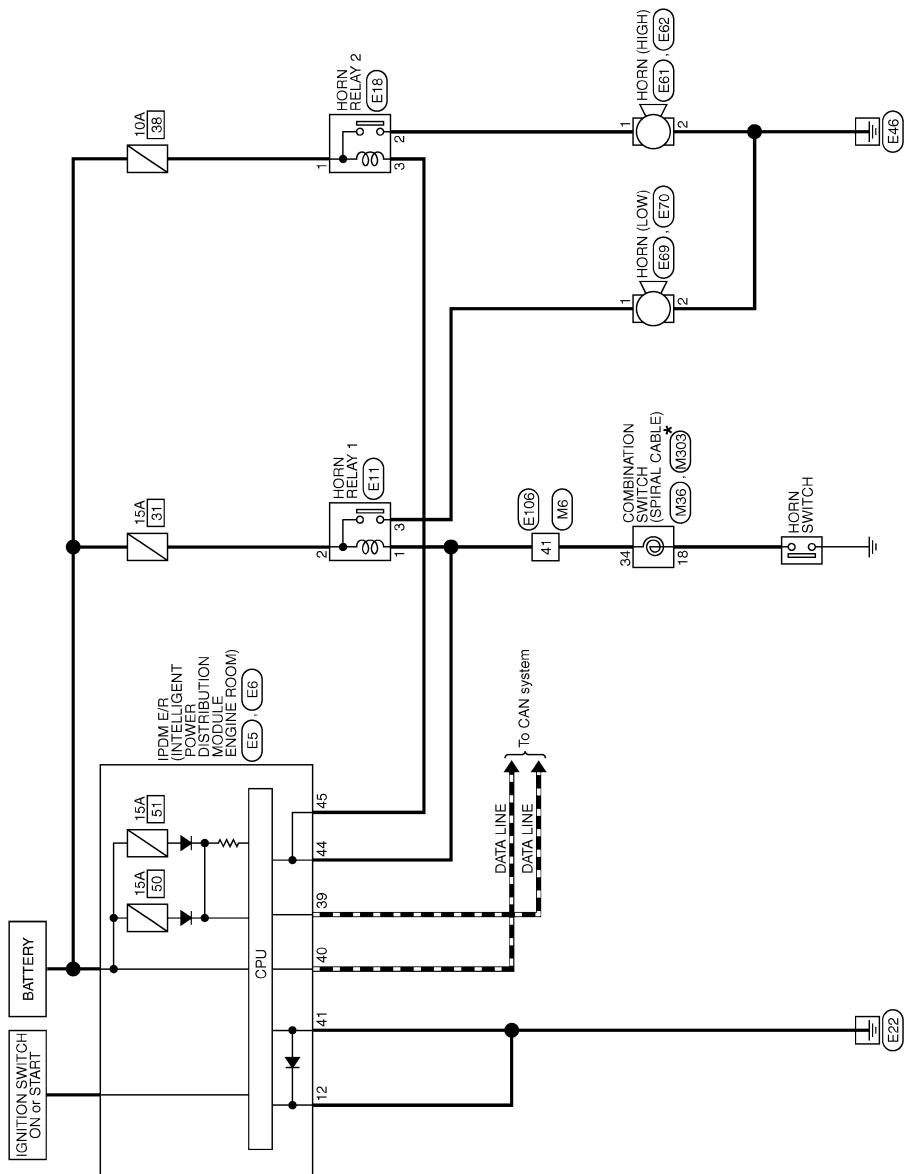


* : This connector is not shown in "Harness Layout".

HORN

HORN

< DTC/CIRCUIT DIAGNOSIS >

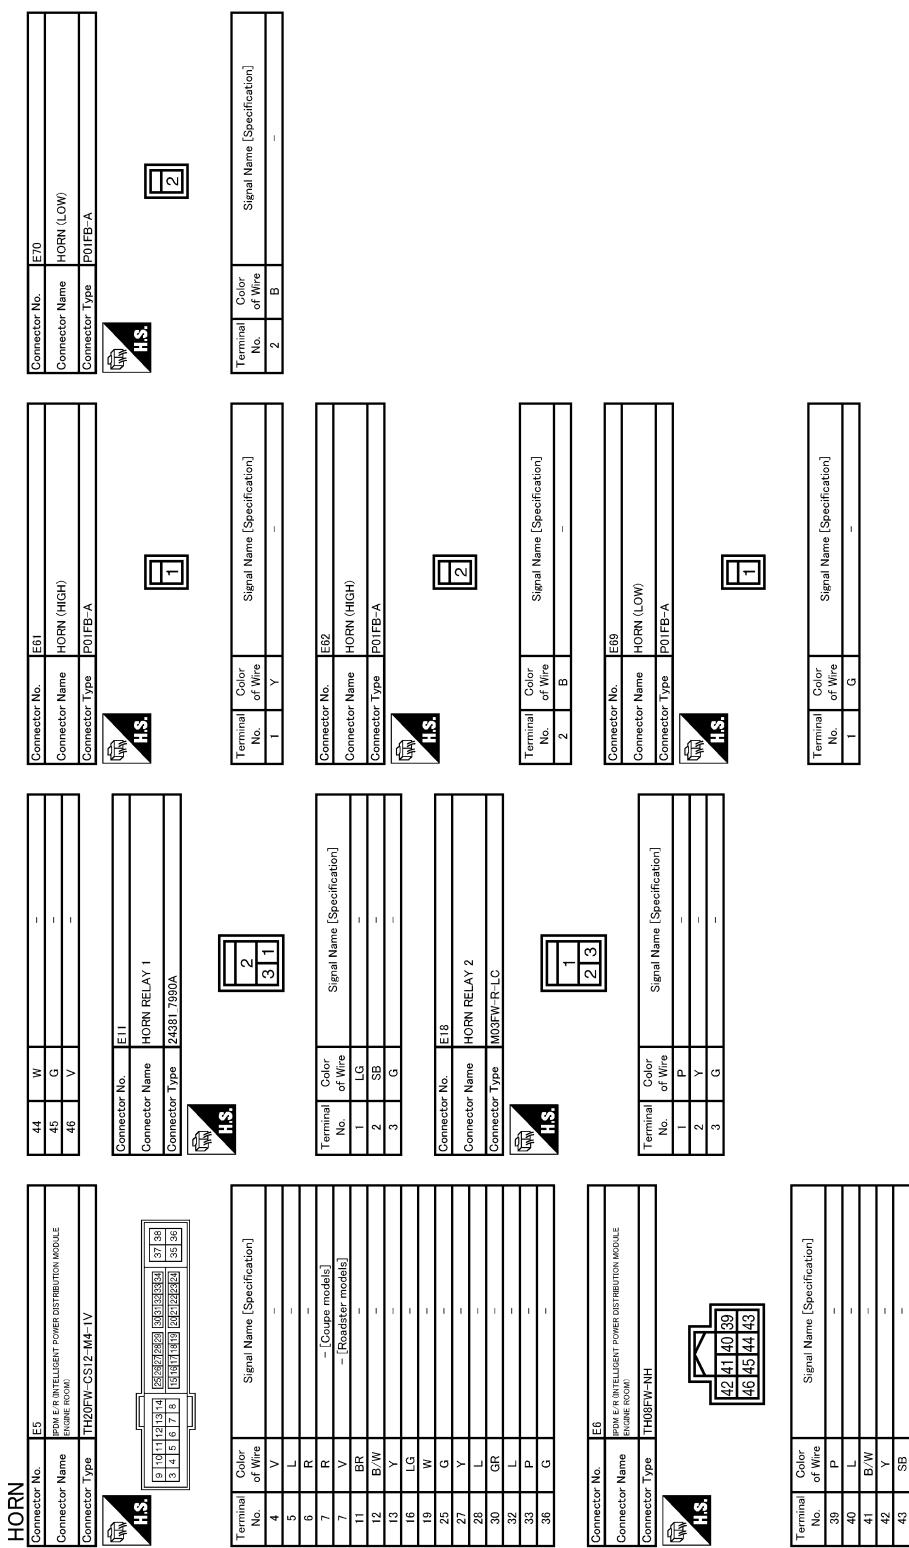

JCLWA4533GB

A B C D E F G H I J K L M N O P

HRN

HORN

< DTC/CIRCUIT DIAGNOSIS >

HORN			
Connector No.	E106	Signal Name [Specification]	
Connector Name	WIRE TO WIRE		
Connector Type	THBDFW-CS16-TM4		
Terminal No.	81	P	-
Color of Wire	82	G	-
	83	V	-
	84	L	-
	85	BG	-
	86	LG	-
	87	R	-
	89	P	-
	91	V	-
	92	L	-
	93	G	-
	94	Y	-
	96	Y	-
	97	BR	-
	98	GR	-
	99	LG	-
	100	BG	-
Connector No.	M6		
Connector Name	WIRE TO WIRE		
Connector Type	THBDMW-CS16-TM4		
Terminal No.	1	Y	-
	3	L	-
	4	L	-
	7	B	-
	8	P	-
	9	B	-
	11	V	-
	12	R	-
	13	L	-
	14	GR	-
	15	P	-
	16	W	-
	17	SB	-
	20	LG	-
	21	BR	-
	21	G	-
	31	L	-
	32	Y	-
	33	P	-
	34	L	-
	35	BR	-
	36	V	-
	37	Y	-
	38	R	-
	39	B	-
	40	W	-
	41	LG	-
	42	SB	-
	43	G	-
	44	GR	-
	44	R	-
	45	BG	-
	46	W	-
	47	P	-
	56	SHIELD	-
	59	L	-
	70	P	-
	80	W	-
Connector No.	M36		
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)		
Connector Type	TK08F-GY		
Terminal No.	24	25	26
	31	32	33
	34	-	-
Terminal Color or Wire No.	24	25	26
	31	32	33
	34	-	-
Signal Name [Specification]			

JCLWA4534GB

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

EXCEPT FOR MEXICO

EXCEPT FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006350460

A

B

C

D

E

F

G

H

I

J

K

HRN

M

N

O

P

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

EXCEPT FOR MEXICO : Precaution for Battery Service

INFOID:000000006350461

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006350462

M

N

O

P

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.

PRECAUTIONS

< PRECAUTION >

- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR MEXICO : Precaution for Battery Service

INFOID:0000000006350463

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

HORN


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

HORN

Exploded View

INFOID:000000006350464

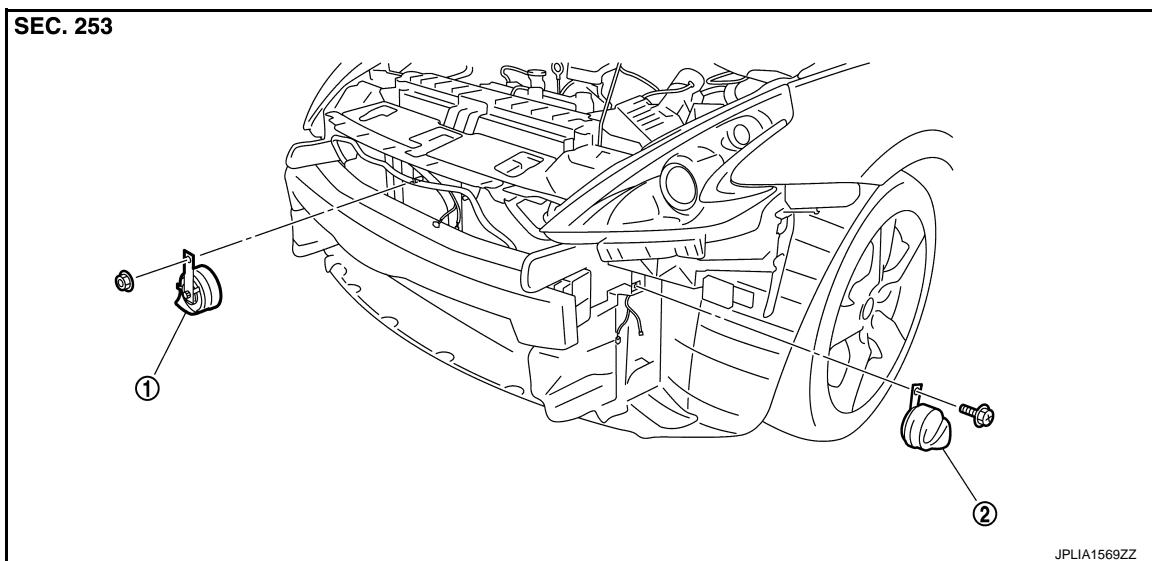

1. Horn (LOW)

2. Horn (HIGH)

Removal and Installation

INFOID:000000006350465

REMOVAL

Horn (LOW)

1. Remove the bumper center upper finisher. Refer to [EXT-13, "Exploded View"](#).
2. Disconnect the horn (LOW) connector.
3. Remove the horn mounting nut, and remove the horn (LOW) from the vehicle.

Horn (HIGH)

1. Remove the fender protector LH (front). Refer to [EXT-25, "FENDER PROTECTOR : Exploded View"](#).
2. Disconnect the horn (HIGH) connector.
3. Remove the horn mounting bolt, and remove the horn (HIGH) from the vehicle.

INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

HRN

M

N

O

P