

SECTION **SEC** SECURITY CONTROL SYSTEM

CONTENTS

BASIC INSPECTION	6	INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)	27
DIAGNOSIS AND REPAIR WORK FLOW	6	THEFT ALM	31
Work Flow	6	THEFT ALM : CONSULT-III Function (BCM - THEFT)	31
INSPECTION AND ADJUSTMENT	9	IMMU	32
ECM RECOMMUNICATING FUNCTION	9	IMMU : CONSULT-III Function (BCM - IMMU)	32
ECM RECOMMUNICATING FUNCTION : De- scription	9	DTC/CIRCUIT DIAGNOSIS	33
ECM RECOMMUNICATING FUNCTION : Special Repair Requirement	9	U1000 CAN COMM CIRCUIT	33
SYSTEM DESCRIPTION	10	BCM	33
INTELLIGENT KEY SYSTEM/ENGINE		BCM : Description	33
START FUNCTION	10	BCM : DTC Logic	33
System Diagram	10	BCM : Diagnosis Procedure	33
System Description	10	IPDM E/R	33
Component Parts Location	14	IPDM E/R : Description	33
Component Description	15	IPDM E/R : DTC Logic	33
NISSAN VEHICLE IMMOBILIZER SYSTEM-		IPDM E/R : Diagnosis Procedure	33
NATS	17	U1010 CONTROL UNIT (CAN)	35
System Diagram	17	BCM	35
System Description	17	BCM : DTC Logic	35
Component Parts Location	19	BCM : Diagnosis Procedure	35
Component Description	20	BCM : Special Repair Requirement	35
VEHICLE SECURITY SYSTEM	22	P1610 LOCK MODE	36
System Diagram	22	Description	36
System Description	22	DTC Logic	36
Component Parts Location	24	Diagnosis Procedure	36
Component Description	25	P1611 ID DISCORD, IMMU-ECM	37
DIAGNOSIS SYSTEM (BCM)	26	Description	37
COMMON ITEM	26	DTC Logic	37
COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)	26	Diagnosis Procedure	37
INTELLIGENT KEY	27	P1612 CHAIN OF ECM-IMMU	39
		Description	39

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

DTC Logic	39	DTC Logic	60
Diagnosis Procedure	39	Diagnosis Procedure	60
P1614 CHAIN OF IMMU-KEY	40	B2560 STARTER CONTROL RELAY	61
Description	40	Description	61
DTC Logic	40	DTC Logic	61
Diagnosis Procedure	40	Diagnosis Procedure	61
P1615 DIFFERENCE OF KEY	43	B2601 SHIFT POSITION	62
Description	43	Description	62
DTC Logic	43	DTC Logic	62
Diagnosis Procedure	43	Diagnosis Procedure	62
B2190 NATS ANTENNA AMP.	44	Component Inspection	64
Description	44	B2602 SHIFT POSITION	65
DTC Logic	44	Description	65
Diagnosis Procedure	44	DTC Logic	65
B2191 DIFFERENCE OF KEY	47	Diagnosis Procedure	65
Description	47	Component Inspection	66
DTC Logic	47	B2603 SHIFT POSITION STATUS	68
Diagnosis Procedure	47	Description	68
B2192 ID DISCORD, IMMU-ECM	48	DTC Logic	68
Description	48	Diagnosis Procedure	68
DTC Logic	48	B2604 PNP SWITCH	71
Diagnosis Procedure	48	Description	71
B2193 CHAIN OF ECM-IMMU	50	DTC Logic	71
Description	50	Diagnosis Procedure	71
DTC Logic	50	B2605 PNP SWITCH	73
Diagnosis Procedure	50	Description	73
B2195 ANTI-SCANNING	51	DTC Logic	73
Description	51	Diagnosis Procedure	73
DTC Logic	51	B2606 STEERING LOCK RELAY	75
Diagnosis Procedure	51	Description	75
B2013 ID DISCORD, IMMU-STRG	52	DTC Logic	75
Description	52	Diagnosis Procedure	75
DTC Logic	52	B2607 STEERING LOCK RELAY	76
Diagnosis Procedure	52	Description	76
B2014 CHAIN OF STRG-IMMU	53	DTC Logic	76
Description	53	Diagnosis Procedure	76
DTC Logic	53	B2608 STARTER RELAY	78
Diagnosis Procedure	53	Description	78
B2555 STOP LAMP	56	DTC Logic	78
Description	56	Diagnosis Procedure	78
DTC Logic	56	B2609 STEERING STATUS	80
Diagnosis Procedure	56	Description	80
Component Inspection	57	DTC Logic	80
B2556 PUSH-BUTTON IGNITION SWITCH	58	Diagnosis Procedure	80
Description	58	B260B STEERING LOCK UNIT	84
DTC Logic	58	Description	84
Diagnosis Procedure	58	DTC Logic	84
Component Inspection	59	Diagnosis Procedure	84
B2557 VEHICLE SPEED	60	B260C STEERING LOCK UNIT	85
Description	60	Description	85

DTC Logic	85	DTC Logic	104		A
Diagnosis Procedure	85	Diagnosis Procedure	104		
B260D STEERING LOCK UNIT	86	B210A STEERING LOCK CONDITION SWITCH	105		B
Description	86	Description	105		
DTC Logic	86	DTC Logic	105		C
Diagnosis Procedure	86	Diagnosis Procedure	105		
B260F ENGINE STATUS	87	B210B STARTER CONTROL RELAY	109		D
Description	87	Description	109		
DTC Logic	87	DTC Logic	109		E
Diagnosis Procedure	87	Diagnosis Procedure	109		
B26E8 CLUTCH INTERLOCK SWITCH	88	B210C STARTER CONTROL RELAY	110		F
Description	88	Description	110		
DTC Logic	88	DTC Logic	110		G
Diagnosis Procedure	88	Diagnosis Procedure	110		
Component Inspection	89	B210D STARTER RELAY	111		H
B26E9 STEERING STATUS	90	Description	111		
Description	90	DTC Logic	111		I
DTC Logic	90	Diagnosis Procedure	111		J
Diagnosis Procedure	90	B210E STARTER RELAY	112		
B26EA KEY REGISTRATION	91	Description	112		
Description	91	DTC Logic	112		
DTC Logic	91	Diagnosis Procedure	112		
Diagnosis Procedure	91	B210F PNP/CLUTCH INTERLOCK SWITCH	114		
B2612 STEERING STATUS	92	Description	114		
Description	92	DTC Logic	114		
DTC Logic	92	Diagnosis Procedure	114		
Diagnosis Procedure	92	B2110 PNP/CLUTCH INTERLOCK SWITCH	116		
B2617 STARTER RELAY CIRCUIT	96	Description	116		
Description	96	DTC Logic	116		
DTC Logic	96	Diagnosis Procedure	116		
Diagnosis Procedure	96	POWER SUPPLY AND GROUND CIRCUIT	118		
B2619 BCM	98	BCM	118		
Description	98	BCM : Diagnosis Procedure	118		
DTC Logic	98	IPDM E/R	118		
Diagnosis Procedure	98	IPDM E/R : Diagnosis Procedure	118		
B261E VEHICLE TYPE	99	KEY SLOT	120		
Description	99	Description	120		
DTC Logic	99	Component Function Check	120		
Diagnosis Procedure	99	Diagnosis Procedure	120		
B261F ASCD CLUTCH SWITCH	100	KEY SLOT INDICATOR	121		
Description	100	Description	121		
DTC Logic	100	Component Function Check	121		
Diagnosis Procedure	100	Diagnosis Procedure	121		
Component Inspection	101	HOOD SWITCH	123		
B2108 STEERING LOCK RELAY	102	Description	123		
Description	102	Component Function Check	123		
DTC Logic	102	Diagnosis Procedure	123		
Diagnosis Procedure	102	Component Inspection	124		
B2109 STEERING LOCK RELAY	104				
Description	104				

HORN FUNCTION	125	VEHICLE SECURITY SYSTEM CANNOT BE SET	215
Description	125	INTELLIGENT KEY	215
Component Function Check	125	INTELLIGENT KEY : Description	215
Diagnosis Procedure	125	INTELLIGENT KEY : Diagnosis Procedure	215
SECURITY INDICATOR LAMP	127	DOOR REQUEST SWITCH	215
Description	127	DOOR REQUEST SWITCH : Description	215
Component Function Check	127	DOOR REQUEST SWITCH : Diagnosis Procedure	215
Diagnosis Procedure	127	VEHICLE SECURITY ALARM DOES NOT ACTIVATE	217
KEY WARNING LAMP	129	Description	217
Description	129	Diagnosis Procedure	217
Component Function Check	129	INTELLIGENT KEY INSERT INFORMATION DOES NOT OPERATE	218
Diagnosis Procedure	129	Description	218
INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION	130	Diagnosis Procedure	218
Wiring Diagram - INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION -	130	PANIC ALARM FUNCTION DOES NOT OPERATE	220
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS	143	Description	220
Wiring Diagram - NISSAN VEHICLE IMMOBILIZER SYSTEM -	143	Diagnosis Procedure	220
VEHICLE SECURITY SYSTEM	152	PRECAUTION	221
Wiring Diagram - VEHICLE SECURITY SYSTEM -	152	PRECAUTIONS	221
ECU DIAGNOSIS INFORMATION	162	FOR USA AND CANADA	221
BCM	162	FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	221
Reference Value	162	FOR USA AND CANADA : Precautions Necessary for Steering Wheel Rotation After Battery Disconnection	221
Wiring Diagram - BCM -	187	FOR USA AND CANADA : Precaution for Battery Service	222
Fail-safe	193	FOR USA AND CANADA : Precaution for Procedure without Cowl Top Cover	222
DTC Inspection Priority Chart	195	FOR MEXICO	222
DTC Index	196	FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	222
IPDM E/R	199	FOR MEXICO : Precautions Necessary for Steering Wheel Rotation After Battery Disconnection ..	222
Reference Value	199	FOR MEXICO : Precaution for Battery Service ..	223
Wiring Diagram - IPDM E/R -	206	FOR MEXICO : Precaution for Procedure without Cowl Top Cover	223
Fail-safe	209	REMOVAL AND INSTALLATION	224
DTC Index	211	KEY SLOT	224
SYMPTOM DIAGNOSIS	212	Exploded View	224
ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE	212	Removal and Installation	224
Description	212	PUSH BUTTON IGNITION SWITCH	225
Diagnosis Procedure	212	Exploded View	225
STEERING DOES NOT LOCK	213		
Description	213		
Diagnosis Procedure	213		
SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK	214		
Description	214		
Diagnosis Procedure	214		

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000006353044

OVERALL SEQUENCE

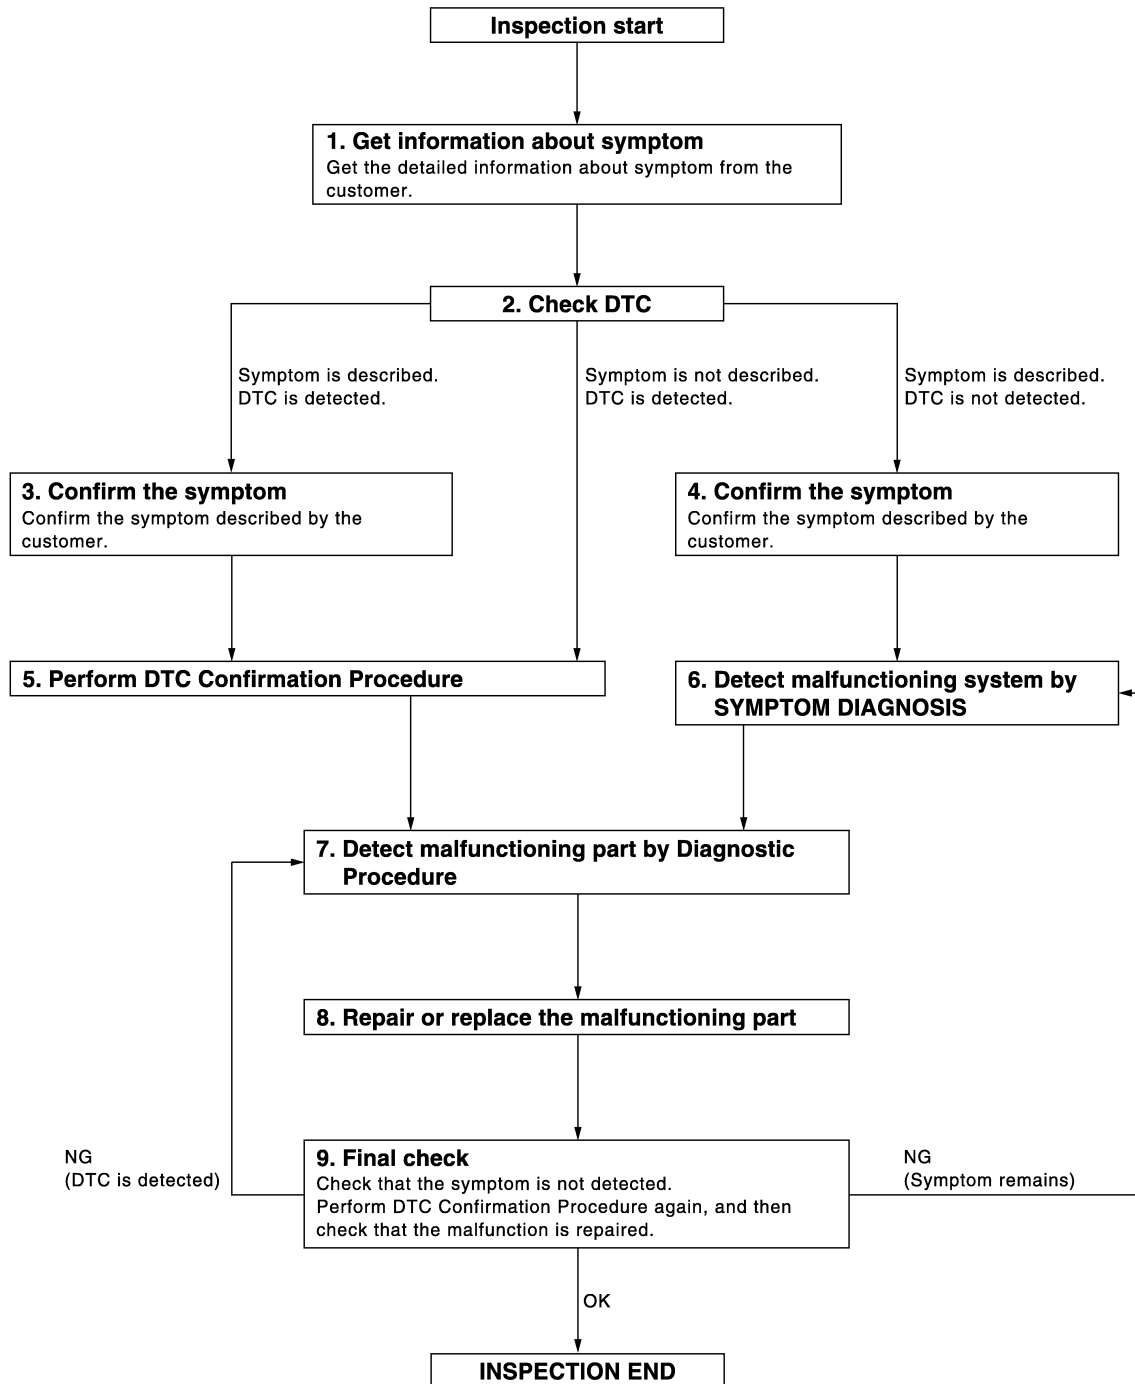

JMKIA3449GB

DETAILED FLOW

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

1.GET INFORMATION ABOUT SYMPTOM

Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).

>> GO TO 2.

2.CHECK DTC

1. Check DTC of BCM and IPDM E/R.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT-III.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3.CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle and check self-diagnostic results in real time.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4.CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle and check self-diagnostic results in real time.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the detected DTC, and then check that DTC is detected again.

At this time, always connect CONSULT-III to the vehicle and check self-diagnostic results in real time.

If two or more DTCs are detected, refer to [SEC-195, "DTC Inspection Priority Chart"](#) (BCM) or [SEC-211, "DTC Index"](#) (IPDM E/R), and determine trouble diagnosis order.

Is DTC detected?

YES >> GO TO 7.

NO >> Refer to [GI-43, "Intermittent Incident"](#).

6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 7.

7.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

NOTE:

The Diagnostic Procedure is described based on open and short circuit inspection.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check voltage of related BCM terminals using CONSULT-III.

8.REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Does the symptom reappear?

YES (DTC is detected)>>GO TO 7.

YES (Symptom remains)>>GO TO 6.

NO >> INSPECTION END

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT ECM RECOMMUNICATING FUNCTION

ECM RECOMMUNICATING FUNCTION : Description

INFOID:000000006353045

Performing the following procedure can automatically activate recommunication of ECM and BCM, but only when the ECM is replaced with a new one*.

*: New one means a virgin ECM that is never energized on-board.

(In this step, initialization procedure by CONSULT-III is not necessary)

NOTE:

- When registering new Key IDs or replacing the ECM that is not brand new, refer to CONSULT-III Operation Manual NATS-IVIS/NVIS.
- If multiple keys are attached to the key holder, separate them before beginning work.
- Distinguish keys with unregistered key IDs from those with registered IDs.

ECM RECOMMUNICATING FUNCTION : Special Repair Requirement

INFOID:000000006353046

1.PERFORM ECM RECOMMUNICATING FUNCTION

1. Install ECM.
2. Insert the registered Intelligent Key* into key slot, turn ignition switch to "ON".
*: To perform this step, use the key that is used before performing ECM replacement.
3. Maintain ignition switch in the "ON" position for 5 seconds or more.
4. Turn ignition switch to "OFF".
5. Start engine.

Can engine be started?

YES >> Procedure is complete.

NO >> Initialize control unit. Refer to CONSULT-III Operation Manual NATS-IVIS/NVIS.

SEC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

System Diagram

INFOID:000000006353047

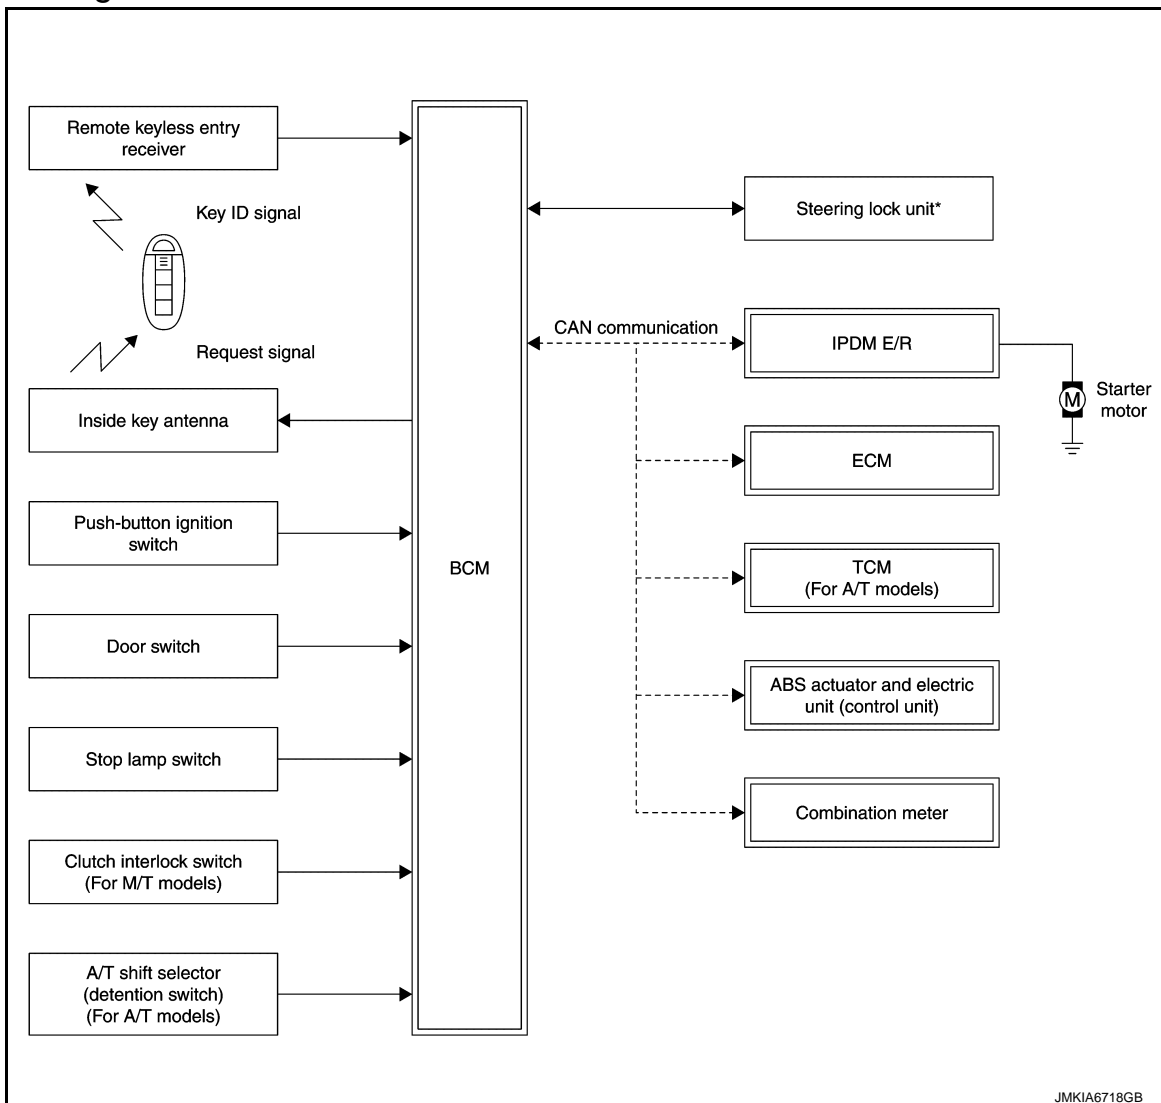

*: Models with steering lock unit

System Description

INFOID:000000006353048

SYSTEM DESCRIPTION

- The engine start function of Intelligent Key system is a system that makes it possible to start and stop the engine without removing the key. It verifies an electronic ID using two-way communication when pressing the push-button ignition switch while carrying the Intelligent Key, which operates based on the results of electronic ID verification of Intelligent Key using two-way communication between the Intelligent Key and the vehicle.

NOTE:

The driver should carry the Intelligent Key at all times.

- Intelligent Key has 2 IDs [Intelligent Key and NVIS (NATS)]. It can perform the door lock/unlock operation and the push-button ignition switch operation when the registered Intelligent Key is carried.
- When the Intelligent Key battery is discharged, it can be used as emergency back-up by inserting the Intelligent Key to the key slot. At that time, perform the NVIS (NATS) ID verification. If it is used when the Intelligent Key is carried, perform the Intelligent Key ID verification.
- If the ID is successfully verified, when push-button ignition switch is pressed, steering lock is released and the engine can be started. (Models with steering lock unit)

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >

- Up to 4 Intelligent Keys can be registered (Including the standard Intelligent Key) upon request from the customer.

NOTE:

Refer to [DLK-24. "INTELLIGENT KEY SYSTEM : System Description"](#) for any functions other than engine start function of Intelligent Key system.

PRECAUTIONS FOR INTELLIGENT KEY SYSTEM

In the Intelligent Key system, the transponder [the chip for NVIS (NATS) ID verification] is integrated into the Intelligent Key. (For the conventional models, it is integrated into the mechanical key.) Therefore, the mechanical key cannot perform ID verification, and thus it cannot start the engine. Instead, NVIS (NATS) ID verification can be performed by inserting the Intelligent Key to the key slot, and then it can start the engine.

OPERATION WHEN INTELLIGENT KEY IS CARRIED

Models with steering lock unit

1. When the push-button ignition switch is pressed, the BCM activates the inside key antenna and transmits the request signal to the Intelligent Key.
2. The Intelligent Key receives the request signal and transmits the Intelligent Key ID signal to the BCM.
3. The BCM receives the Intelligent Key ID signal via the remote keyless entry receiver, and verifies it with the registered ID.
4. BCM transmits the steering unlock signal to steering lock unit and IPDM E/R, if the verification results are OK.
5. IPDM E/R turns the steering lock relay ON to supply power source to the steering lock unit.
6. The steering lock releases.
7. BCM transmits the power supply stop signal to IPDM E/R when detecting that the steering lock is in the unlock condition.
8. IPDM E/R turns the steering lock relay OFF to stop power supply to the steering lock unit.
9. BCM turns ACC relay ON and transmits the ignition power supply ON signal to IPDM E/R.
10. IPDM E/R turns the ignition relay ON to start the ignition power supply.
11. BCM detects that the selector lever position and brake pedal operating condition (A/T models), or shift lever position and clutch pedal operation condition (M/T models).
12. BCM transmits the starter request signal via CAN communication to IPDM E/R and turns the starter relay in IPDM E/R ON if BCM judges that the engine start condition is satisfied.
13. IPDM E/R turns the starter control relay ON when receiving the starter request signal.
14. Battery power is supplied through the starter relay and the starter control relay to operate the starter motor to start the cranking.

CAUTION:

If a malfunction is detected in the Intelligent Key system, the “KEY” warning lamp in the combination meter illuminates. At that time, the engine cannot be started.

15. When BCM receives feedback signal from ECM indicating that the engine is started, the BCM transmits a stop signal to IPDM E/R and stops cranking by turning OFF the starter motor relay. (If engine start is unsuccessful, cranking stops automatically within 5 seconds.)

CAUTION:

When the Intelligent Key is carried outside of the vehicle (inside key antenna detection area) while the power supply is in the ACC or ON position, even if the engine start condition* is satisfied, the engine cannot be started.

*: For the engine start condition, refer to “POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION”.

Models without steering lock unit

1. When the push-button ignition switch is pressed, the BCM activates the inside key antenna and transmits the request signal to the Intelligent Key.
2. The Intelligent Key receives the request signal and transmits the Intelligent Key ID signal to the BCM.
3. The BCM receives the Intelligent Key ID signal via the remote keyless entry receiver, and verifies it with the registered ID.
4. BCM turns ACC relay ON and transmits the ignition power supply ON signal to IPDM E/R.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >

5. IPDM E/R turns the ignition relay ON to start the ignition power supply.
6. BCM confirms that the shift position is P or N.
7. BCM transmits the starter request signal via CAN communication to IPDM E/R and turns the starter relay in IPDM E/R ON if BCM judges that the engine start condition is satisfied.
8. IPDM E/R turns the starter control relay ON when receiving the starter request signal.
9. Battery power is supplied through the starter relay and the starter control relay to operate the starter motor to start the cranking.

CAUTION:

If a malfunction is detected in the Intelligent Key system, the “KEY” warning lamp in the combination meter illuminates. At that time, the engine cannot be started.

10. When BCM received feedback signal from ECM indicating that the engine is started, the BCM transmits a stop signal to IPDM E/R and stops the cranking by turning OFF the starter motor relay. (If the engine initiating has failed, the cranking will stop automatically within 5 seconds.)

CAUTION:

When the Intelligent Key is carried outside of the vehicle (inside key antenna detection area) with the power supply in ACC or ON position, even if the engine start condition* is satisfied, the engine cannot be started.

*: For the engine start condition, refer to “POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION”.

OPERATION RANGE

Engine can be started when Intelligent Key is inside the vehicle. However, sometimes engine may not start when Intelligent Key is on instrument panel or in glove box.

OPERATION WHEN KEY SLOT IS USED

When the Intelligent Key battery is discharged, it performs NVIS (NATS) ID verification between the integrated transponder and BCM by inserting the Intelligent Key into the key slot, and then the engine can be started.

For details relating to starting the engine using key slot, refer to [SEC-17. "System Description"](#).

BATTERY SAVER SYSTEM

When all the following conditions are met for 60 minutes, the battery saver system cuts off the power supply to prevent battery discharge.

- The ignition switch is in the ACC position
- All doors are closed
- Selector lever is in the P position

Reset Condition of Battery Saver System

A/T models

In order to prevent the battery from discharging, the battery saver system cuts off the power supply when all doors are closed, the selector lever is in the P position, and the ignition switch is left in the ACC position for 60 minutes. If any of the following conditions are met the battery saver system is released. At the same time, the steering changes automatically to the lock position from the OFF position (models with steering lock unit).

- Opening any door
- Operating door lock using door request switch
- Operating door lock using Intelligent Key

Press push-button ignition switch and ignition switch changes to the ACC position from the OFF position.

M/T models

If any of the above conditions are met, the battery saver system is released.

However, the steering is not locked (models with steering lock unit). In this case, the steering operation OFF to LOCK is prohibited.

STEERING LOCK OPERATION (MODELS WITH STEERING LOCK UNIT)

Steering is locked by steering lock unit when ignition switch is in the OFF position, selector lever is in the P position, and any of the following conditions are met.

- Opening door
- Closing door
- Door is locked using door request switch
- Door is locked using Intelligent Key

NOTE:

For models without steering lock unit, power supply position changes to LOCK even though the steering lock operation is not performed.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >

POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when it is inserted to the key slot, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions,

A/T models

- Brake pedal operating condition
- Selector lever position
- Vehicle speed

M/T models

- Clutch pedal operating condition
- Vehicle speed

Vehicle speed: less than 4 km/h (2.5 MPH)

Power supply position	Engine start/stop condition			Push-button ignition switch operation frequency
	A/T models		M/T models	
	Selector lever	Brake pedal operation condition	Clutch pedal operation condition	
LOCK → ACC	—	Not depressed	Not depressed	1
LOCK → ACC → ON	—	Not depressed	Not depressed	2
LOCK → ACC → ON → OFF	—	Not depressed	Not depressed	3
LOCK → START ACC → START ON → START	P or N position	Depressed	Depressed	1
Engine is running → OFF	—	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more

Power supply position	Engine start/stop condition			Push-button ignition switch operation frequency
	A/T models		M/T models	
	Selector lever	Brake pedal operation condition	Clutch pedal operation condition	
Engine is running → ACC	—	—	—	Emergency stop operation
Engine stall return operation while driving	N position	Not depressed	Depressed	1

Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


SEC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000006353049

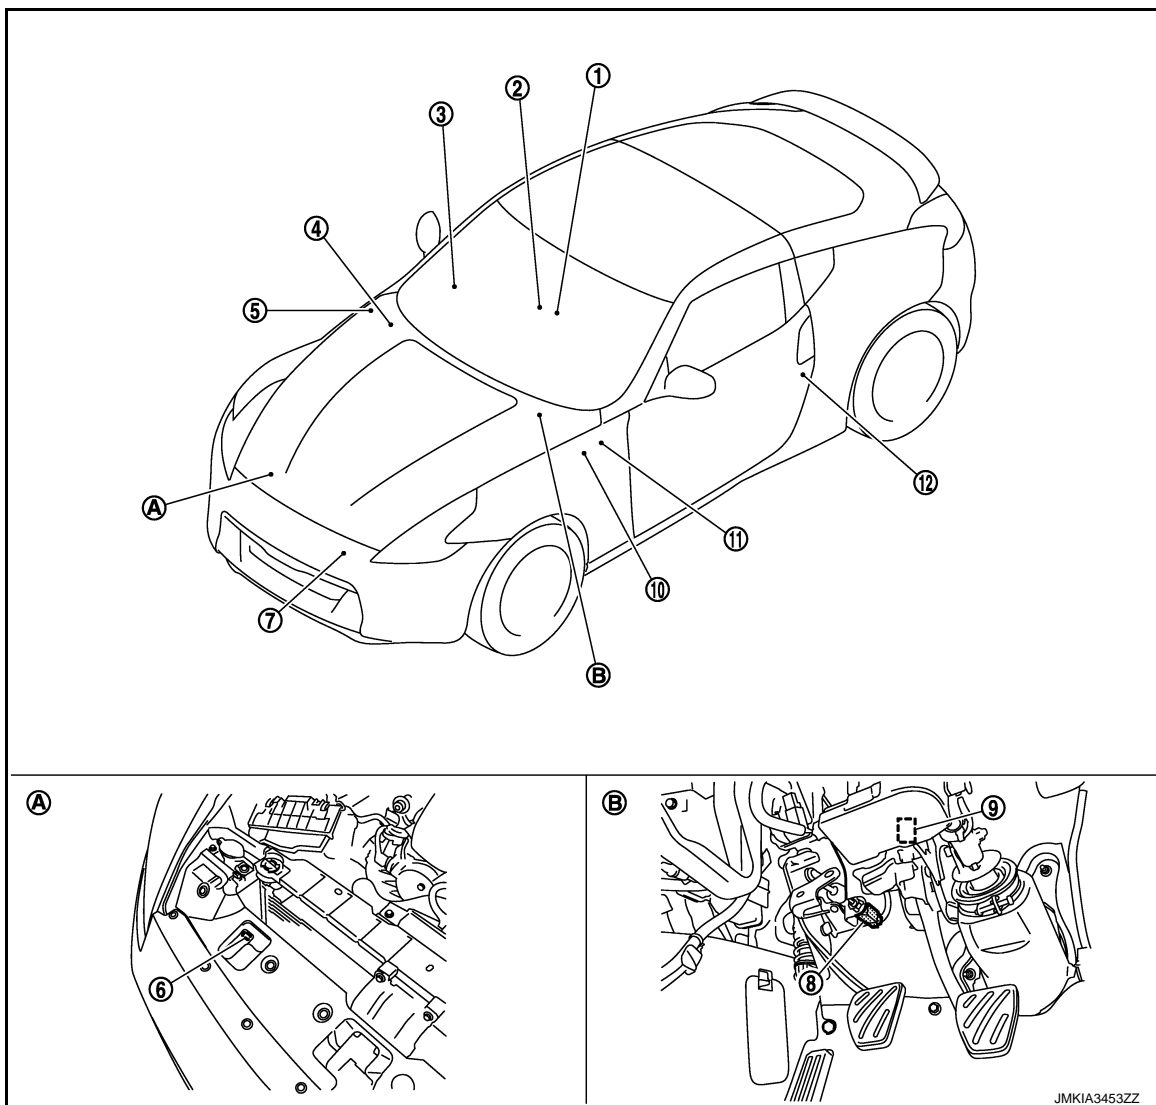


- | | | |
|--|--|--|
| 1. Combination meter M53, M54 | 2. Push-button ignition switch M50 | 3. Remote keyless entry receiver M104
Refer to DLK-16, "INTELLIGENT KEY SYSTEM: Component Parts Location" . |
| 4. BCM M118, M119, M121, M122, M123
Refer to BCS-9, "Component Parts Location" . | 5. IPDM E/R E5, E6, E7, E9
Refer to PCS-6, "Component Parts Location" . | 6. Hood switch |
| 7. Horn (low) E69, E70 | 8. Clutch interlock switch E111 (for M/T models) | 9. Stop lamp switch E110 |
| 10. ABS actuator and electric unit (control unit) E41
Refer to BRC-11, "Component Parts Location" . | 11. Key slot M22 | 12. Driver side door switch B16 |
| A. Built in hood lock RH | B. View with instrument driver lower cover removed | |

JMKIA3453ZZ

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >

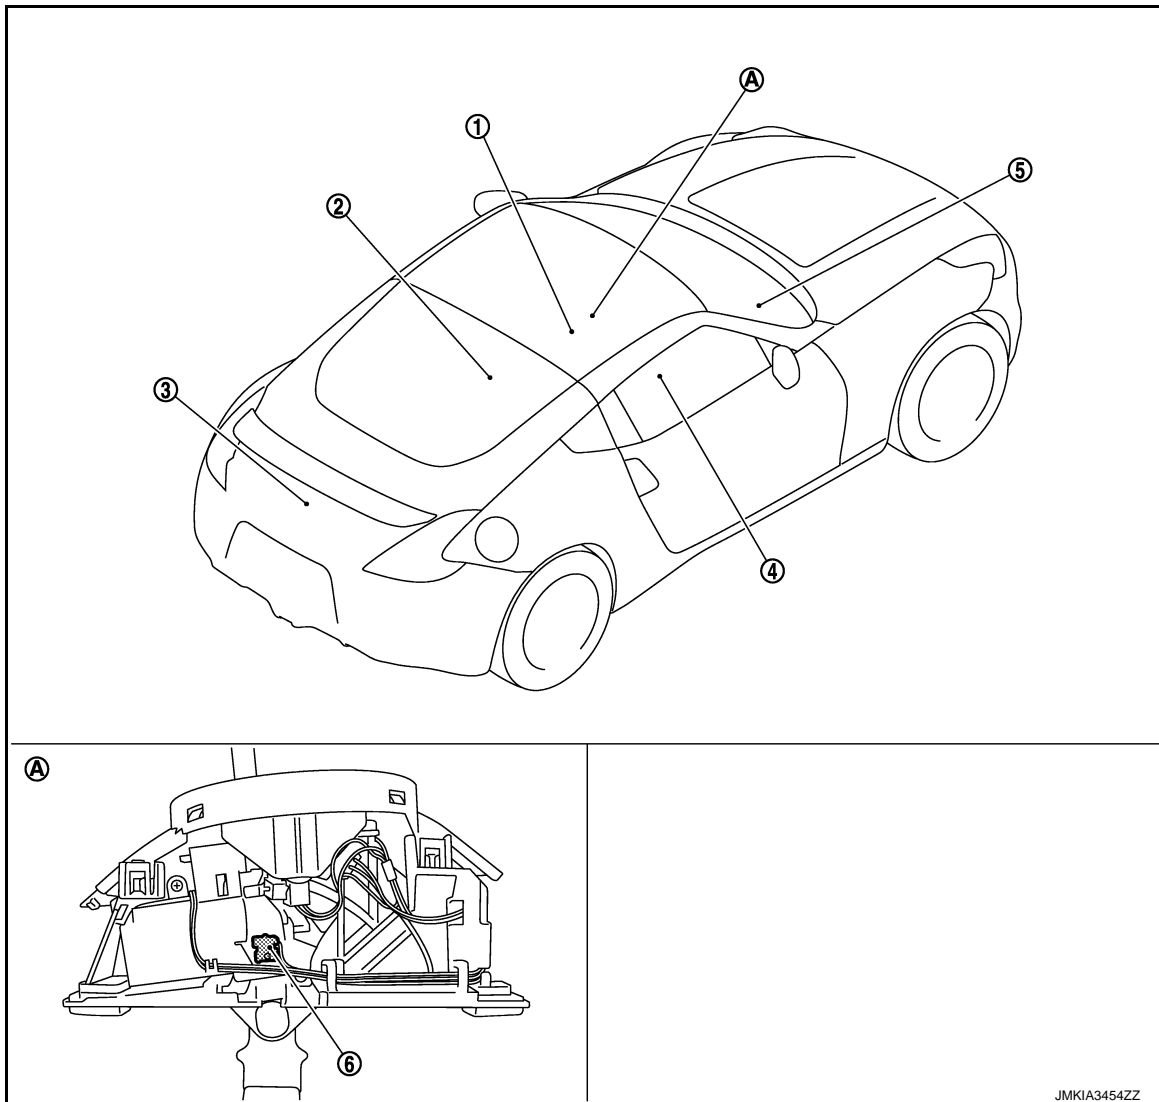

1. Inside key antenna (console) M257 2. Inside key antenna (luggage room) B222 3. Back door switch B66
4. TCM F301 5. ECM M107 6. A/T shift selector (detention switch) M137
- A. Built in A/T shift selector

Component Description

INFOID:000000006353050

Component	Reference
BCM	SEC-98
Steering lock unit (Models with steering lock unit)	SEC-84
Push-button ignition switch	SEC-58
Door switch	DLK-20 or DLK-209
A/T shift selector (detention switch) (A/T models)	SEC-114
Inside key antenna	DLK-20 or DLK-209
Remote keyless entry receiver	DLK-20 or DLK-209
Stop lamp switch	SEC-56
TCM (A/T models)	SEC-71

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >

Component	Reference
Clutch interlock switch (M/T models)	SEC-88
Steering lock relay (Models with steering lock unit)	SEC-75
Starter relay	SEC-78
Starter control relay	SEC-109
Security indicator lamp	SEC-127
Key warning lamp	SEC-129


NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< SYSTEM DESCRIPTION >

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

System Diagram

INFOID:000000006353051

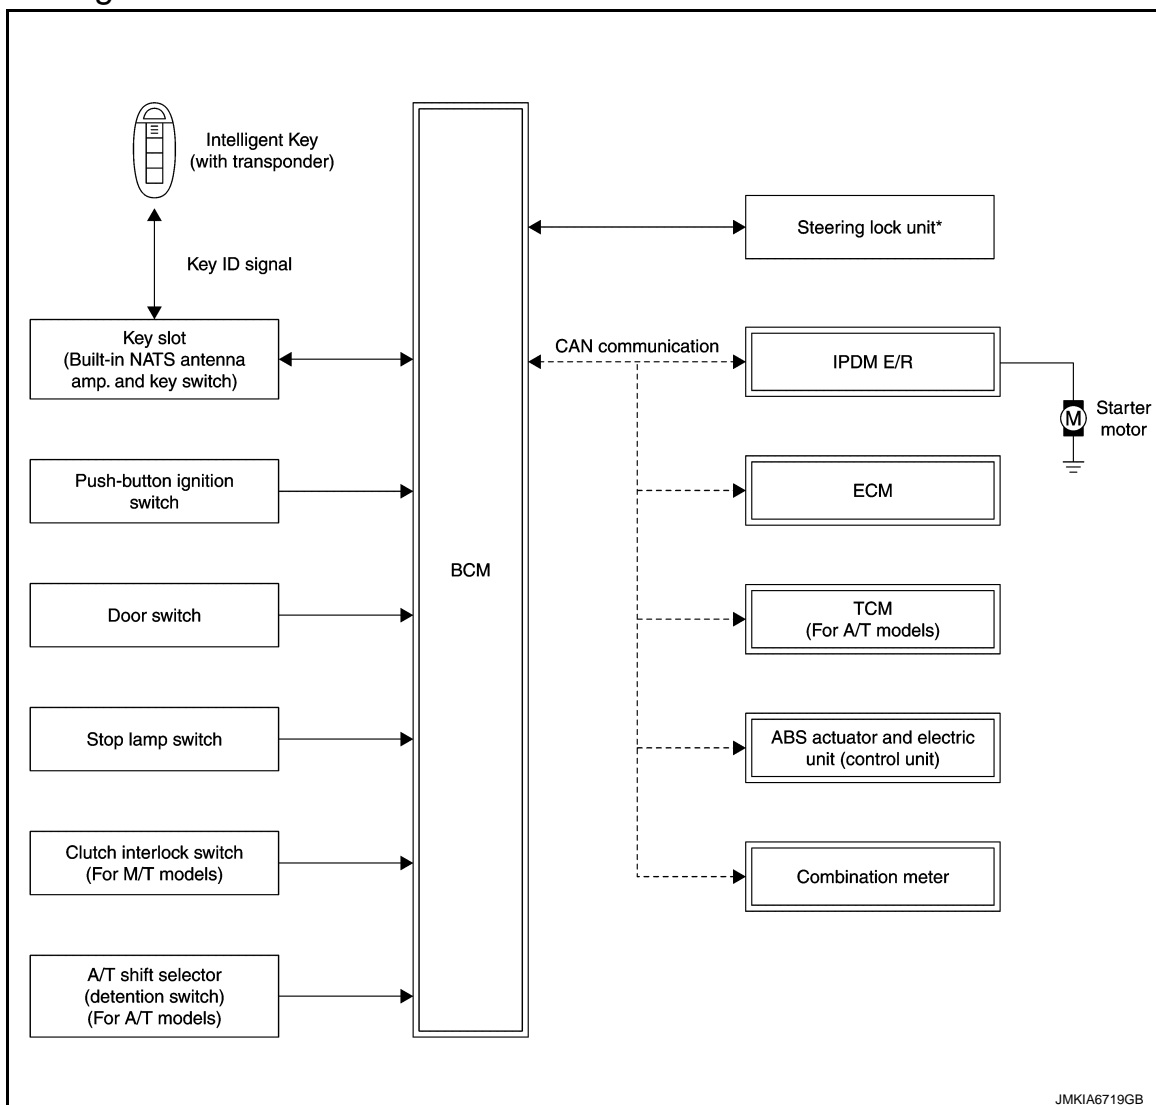

*: Models with steering lock unit

System Description

INFOID:000000006353052

SYSTEM DESCRIPTION

- The NVIS (NATS) is an anti-theft system that registers an Intelligent Key ID to the vehicle and prevents the engine from being started by an unregistered Intelligent Key. It has higher protection against auto theft involving the duplication of mechanical keys.
- It performs ID verification when starting the engine in the same way as the Intelligent system, but it performs the NVIS (NATS) ID verification when inserting the Intelligent Key into the key slot.
- The mechanical key integrated in the Intelligent Key cannot start the engine. When the Intelligent Key battery is discharged, the NVIS (NATS) ID verification memorized to the transponder integrated with Intelligent Key is performed by inserting the Intelligent Key into the key slot. If the verification results are OK, the engine start operation can be performed by the push-button ignition switch operation.
- Locate the security indicator lamp that warns that the NVIS (NATS) is on board the model.
- Security indicator lamp always blinks when the power supply position is in any position except the ON position.
- Up to 4 Intelligent Keys can be registered (including the standard ignition key) upon request from the owner.
- Specified registration is required when replacing ECM, BCM, or Intelligent Key. For the registrations procedures for NVIS (NATS) and Intelligent Key when installing the BCM, refer to CONSULT-III Operation Manual NATS-IVIS/NVIS.

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< SYSTEM DESCRIPTION >

- Possible symptom of NVIS (NATS) malfunction is "Engine cannot start". But the engine can not be started with other than NVIS (NATS) malfunction neither. Identify the possible causes according to "Work Flow". Refer to [SEC-6, "Work Flow"](#).
- If ECM other than genuine part is installed, the engine cannot be started. For ECM replacement procedure, refer to [EC-17, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(ECM\) : Special Repair Requirement"](#).

PRECAUTIONS FOR KEY REGISTRATION

- The key registration is a procedure that erases the current NVIS (NATS) ID once, and then reregisters a new ID operation. Therefore a registered Intelligent Key is necessary for this procedure. Before starting the registration operation collect all registered Intelligent Keys from the customer.
- When registering the Intelligent Key, perform only one procedure to simultaneously register both ID (NVIS "NATS" ID and Intelligent Key ID).
The NVIS (NATS) ID registration is the procedure that registers the ID stored into the transponder (integrated in Intelligent Key) to BCM.
The Intelligent key ID registration is the procedure that registers the ID to BCM.
- When performing the Intelligent Key system registration only, the engine cannot be started by inserting the Intelligent Key into the key slot. When performing the NVIS (NATS) registration only, the engine cannot be started by the operation when carrying the Intelligent Key. The registrations of both systems should be performed.

SECURITY INDICATOR LAMP

- Warns that the vehicle is equipped with NVIS (NATS).
- Security indicator lamp always blinks when the ignition switch is in any position except the ON position.

NOTE:

Because security indicator lamp is highly efficient, the battery is barely affected.

POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when it is inserted to the key slot, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions,

A/T models

- Brake pedal operating condition
- Selector lever position
- Vehicle speed

M/T models

- Clutch pedal operating condition
- Vehicle speed

Vehicle speed: less than 4 km/h (2.5 MPH)

Power supply position	Engine start/stop condition			Push-button ignition switch operation frequency
	A/T models		M/T models	
	Selector lever	Brake pedal operation condition	Clutch pedal operation condition	
LOCK → ACC	—	Not depressed	Not depressed	1
LOCK → ACC → ON	—	Not depressed	Not depressed	2
LOCK → ACC → ON → OFF	—	Not depressed	Not depressed	3
LOCK → START ACC → START ON → START	P or N position	Depressed	Depressed	1
Engine is running → OFF	—	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< SYSTEM DESCRIPTION >


Power supply position	Engine start/stop condition			Push-button ignition switch operation frequency
	A/T models		M/T models	
	Selector lever	Brake pedal operation condition	Clutch pedal operation condition	
Engine is running → ACC	—	—	—	Emergency stop operation
Engine stall return operation while driving	N position	Not depressed	Depressed	1

Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.

Component Parts Location

INFOID:000000006353053

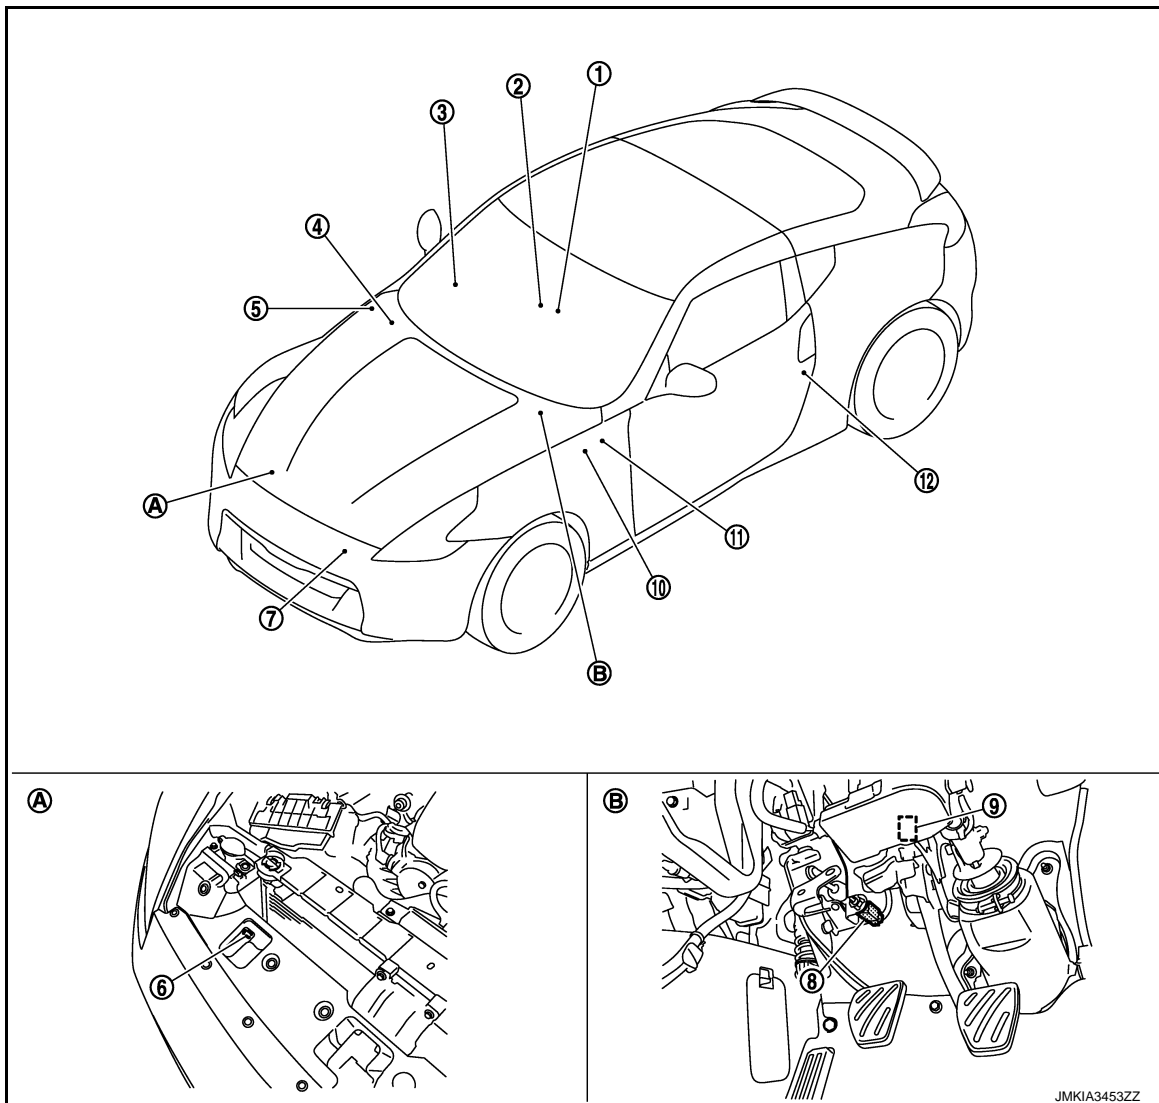


1. Combination meter M53, M54
2. Push-button ignition switch M50
3. Remote keyless entry receiver M104
Refer to [DLK-16, "INTELLIGENT KEY SYSTEM : Component Parts Location"](#).
4. BCM M118, M119, M121, M122, M123
Refer to [BCS-9, "Component Parts Location"](#).
5. IPDM E/R E5, E6, E7, E9
Refer to [PCS-6, "Component Parts Location"](#).
6. Hood switch

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< SYSTEM DESCRIPTION >

- | | | |
|--|---|---------------------------------|
| 7. Horn (low) E69, E70 | 8. Clutch interlock switch E111
(for M/T models) | 9. Stop lamp switch E110 |
| 10. ABS actuator and electric unit (control unit) E41
Refer to BRC-11, "Component Parts Location" . | 11. Key slot M22 | 12. Driver side door switch B16 |
| A. Built in hood lock RH | B. View with instrument driver lower cover removed | |

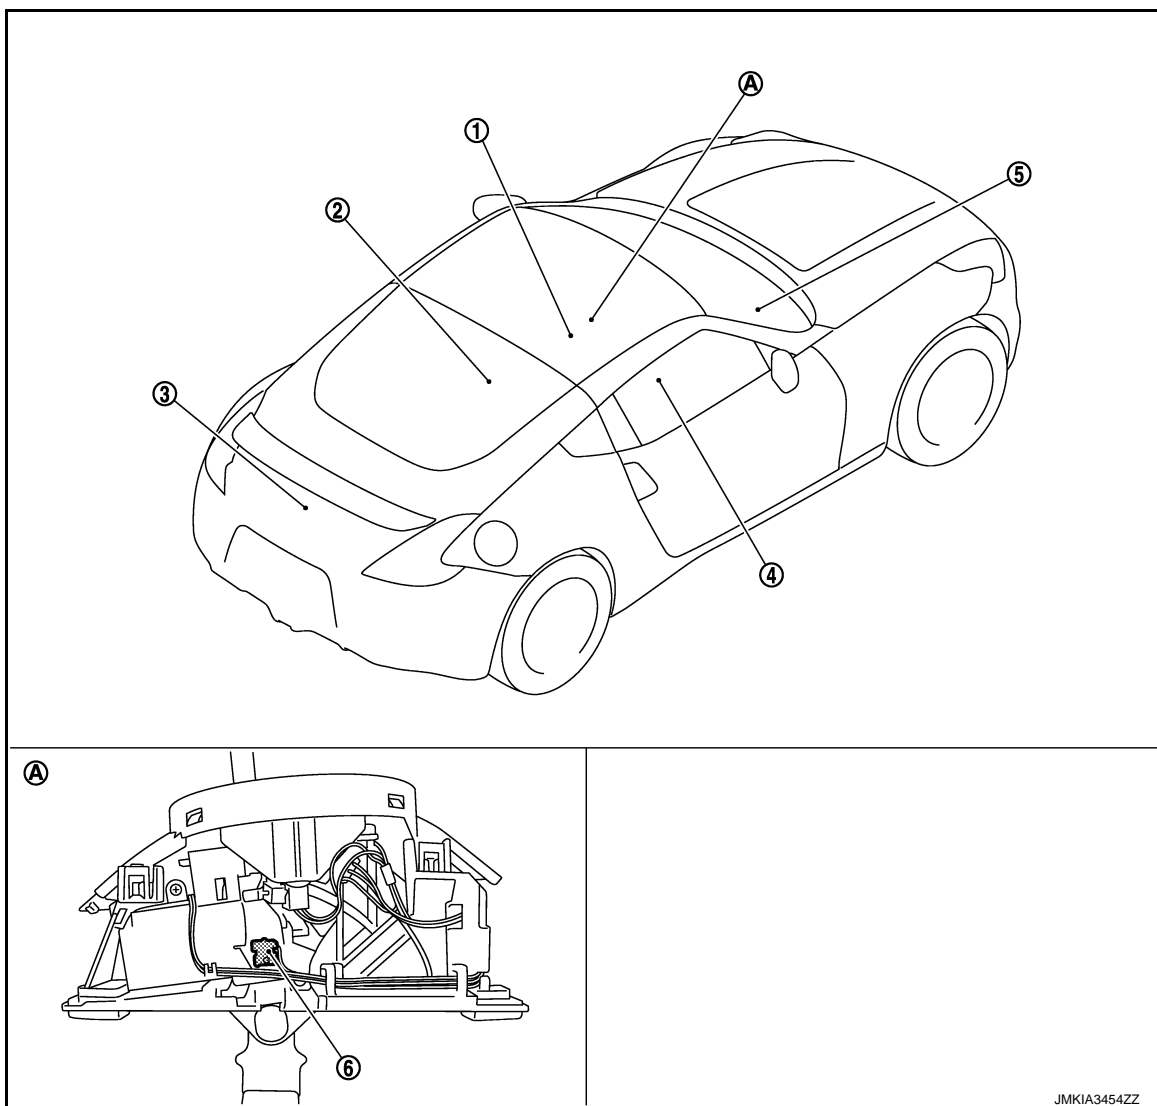

- | | | |
|--------------------------------------|---|---|
| 1. Inside key antenna (console) M257 | 2. Inside key antenna (luggage room) B222 | 3. Back door switch B66 |
| 4. TCM F301 | 5. ECM M107 | 6. A/T shift selector (detention switch) M137 |
| A. Built in A/T shift selector | | |

Component Description

INFOID:000000006353054

Component	Reference
BCM	SEC-98
Steering lock unit (Models with steering lock unit)	SEC-84
Push-button ignition switch	SEC-58

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< SYSTEM DESCRIPTION >

Component	Reference
Door switch	DLK-20 or DLK-209
Key slot	SEC-120
A/T shift selector (detention switch) (A/T models)	SEC-114
Stop lamp switch	SEC-56
TCM (A/T models)	SEC-71
Clutch interlock switch (M/T models)	SEC-88
Steering lock relay (Models with steering lock unit)	SEC-75
Starter relay	SEC-78
Starter control relay	SEC-109
Security indicator lamp	SEC-127

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC


VEHICLE SECURITY SYSTEM

< SYSTEM DESCRIPTION >

VEHICLE SECURITY SYSTEM

System Diagram

INFOID:000000006353055

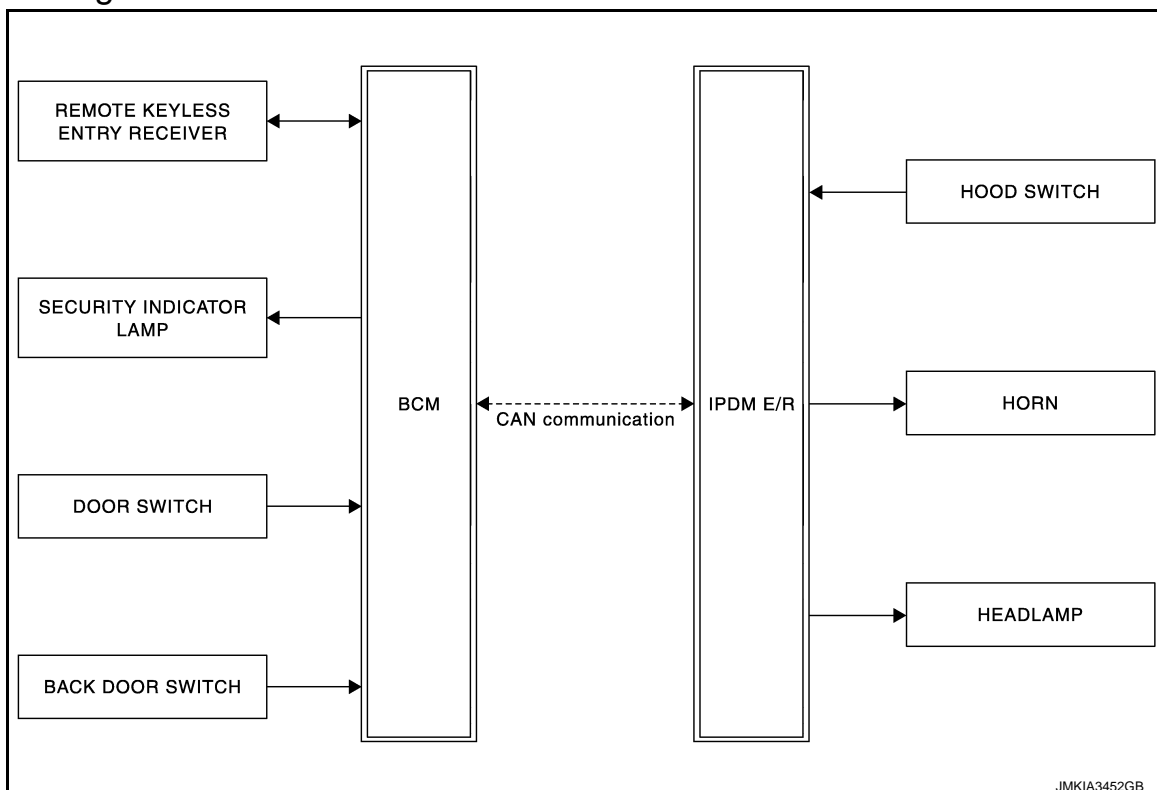


JMKIA3452GB

System Description

INFOID:000000006353056

OPERATION FLOW

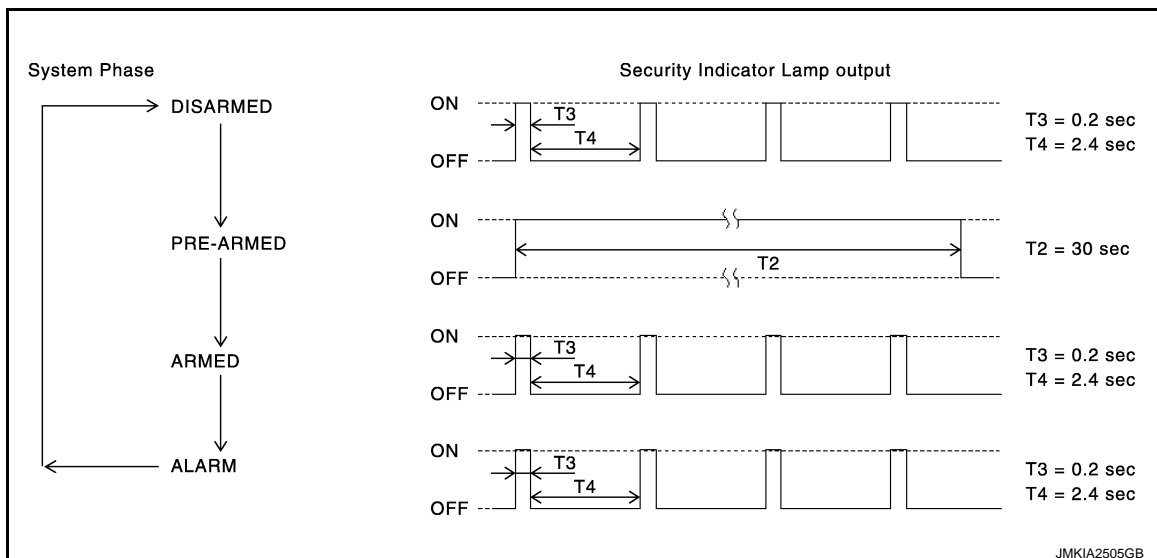

JMKIA2505GB

SETTING THE VEHICLE SECURITY SYSTEM

Initial Condition

- Ignition switch is in the OFF position.

Disarmed Phase

- When any door or back door is open, the vehicle security system is set in the disarmed phase on the assumption that the owner is inside or near the vehicle.

VEHICLE SECURITY SYSTEM

< SYSTEM DESCRIPTION >

- When the vehicle security system is in the disarmed phase, the security indicator lamp blinks every 2.4 seconds.

Pre-armed Phase and Armed Phase

When the following operation is performed, the vehicle security system turns into the “pre-armed” phase. (The security indicator lamp illuminates.)

1. BCM receives LOCK signal from door request switch or Intelligent Key, after all doors are closed.
2. Security indicator lamp illuminates for 30 seconds. Then, the system automatically shifts into the “armed” phase.

CANCELING THE ARMED PHASE VEHICLE SECURITY SYSTEM

When one of the following operations is performed, the armed phase is canceled.

1. Unlock all doors with the door request switch or Intelligent Key.
2. Turn ignition switch “ON” or “ACC” position.

CANCELING THE ALARM OPERATION OF THE VEHICLE SECURITY SYSTEM

When unlocking all doors with the door request switch or Intelligent Key the alarm operation is canceled.

ACTIVATING THE ALARM OPERATION OF THE VEHICLE SECURITY SYSTEM

Check that the system is in the armed phase. (Security indicator lamp blinks every 2.4 seconds.)

When the following operations 1 or 2 is performed, the system sounds the horns and blinks the headlamps for about 50 seconds.

1. Any door or hood is open during the armed phase.
2. Disconnecting and connecting the battery connector before canceling the armed phase.

PANIC ALARM FUNCTION

When ignition switch is OFF (ignition switch is not pressed) and key switch is OFF (Intelligent Key is not inserted in key slot), BCM receives PANIC ALARM signal from Intelligent Key.

BCM turns on and off headlamp intermittently and transmits theft warning horn signal to IPDM E/R. Then, IPDM E/R turns on and off horn intermittently.

The headlamp blinks and the horn sounds intermittently.

The alarm automatically turns off:

- After 25 seconds
- When BCM receives any signal from Intelligent Key

Panic alarm function mode can be changed by “PANIC ALARM SET” mode in “WORK SUPPORT” of “INTELLIGENT KEY” of “BCM” using CONSULT-III. Refer to [SEC-27, "INTELLIGENT KEY : CONSULT-III Function \(BCM - INTELLIGENT KEY\)"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


SEC

VEHICLE SECURITY SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location


INFOID:000000006353057

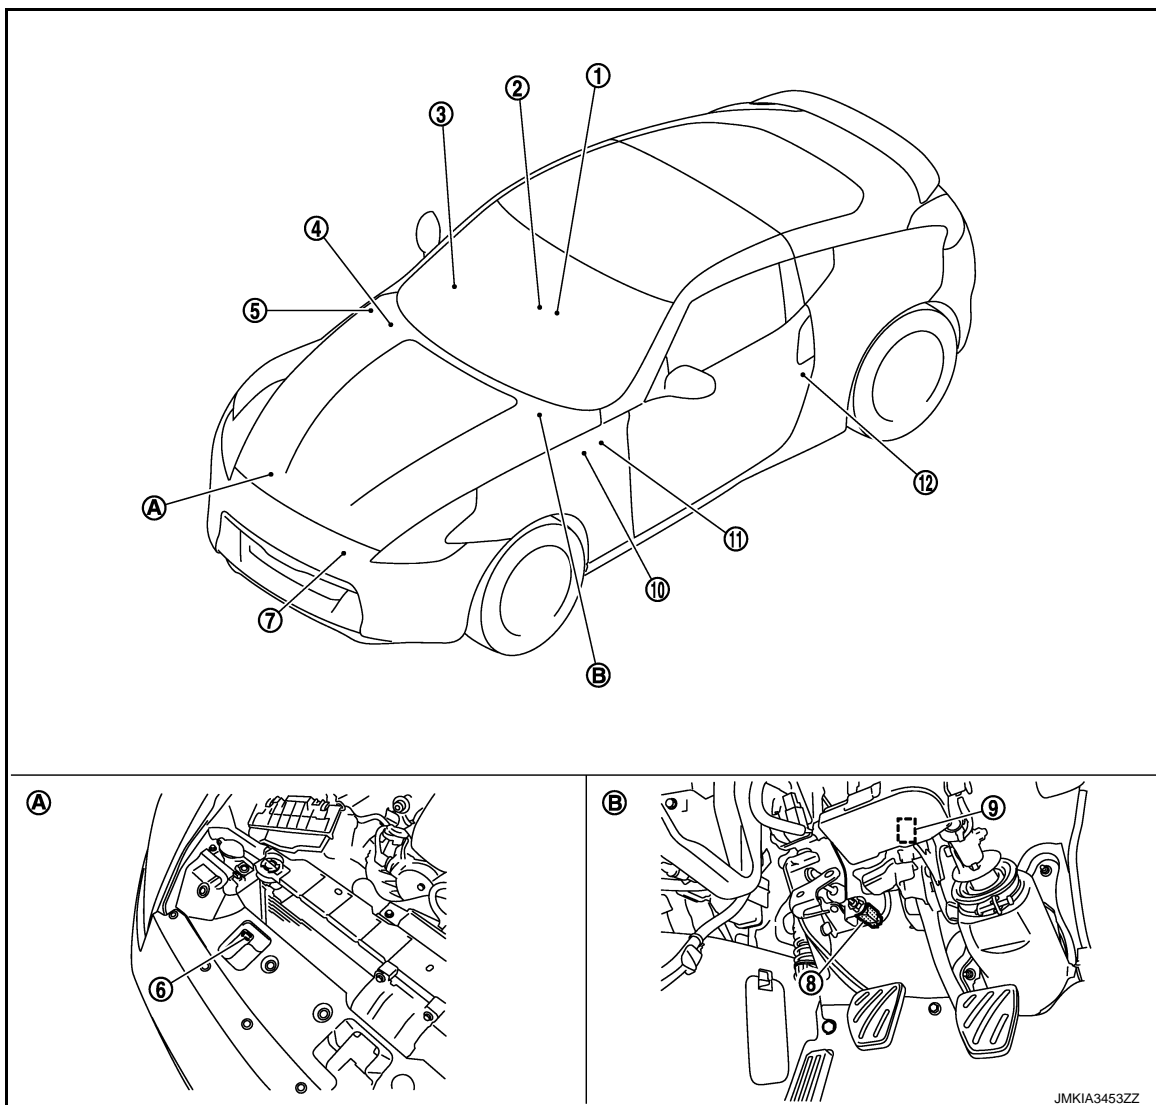

- | | | |
|--|--|---------------------------------------|
| 1. Combination meter M53, M54 | 2. Push-button ignition switch M50 | 3. Remote keyless entry receiver M104 |
| 4. BCM M118, M119, M121, M122, M123
Refer to BCS-9, "Component Parts Location" . | 5. IPDM E/R E5, E6, E7, E9
Refer to PCS-6, "Component Parts Location" . | 6. Hood switch |
| 7. Horn (low) E69, E70 | 8. Clutch interlock switch E111
(for M/T models) | 9. Stop lamp switch E110 |
| 10. ABS actuator and electric unit (control unit) E41
Refer to BRC-11, "Component Parts Location" . | 11. Key slot M22 | 12. Driver side door switch B16 |
| A. Built in hood lock RH | B. View with instrument driver lower cover removed | |

VEHICLE SECURITY SYSTEM

< SYSTEM DESCRIPTION >

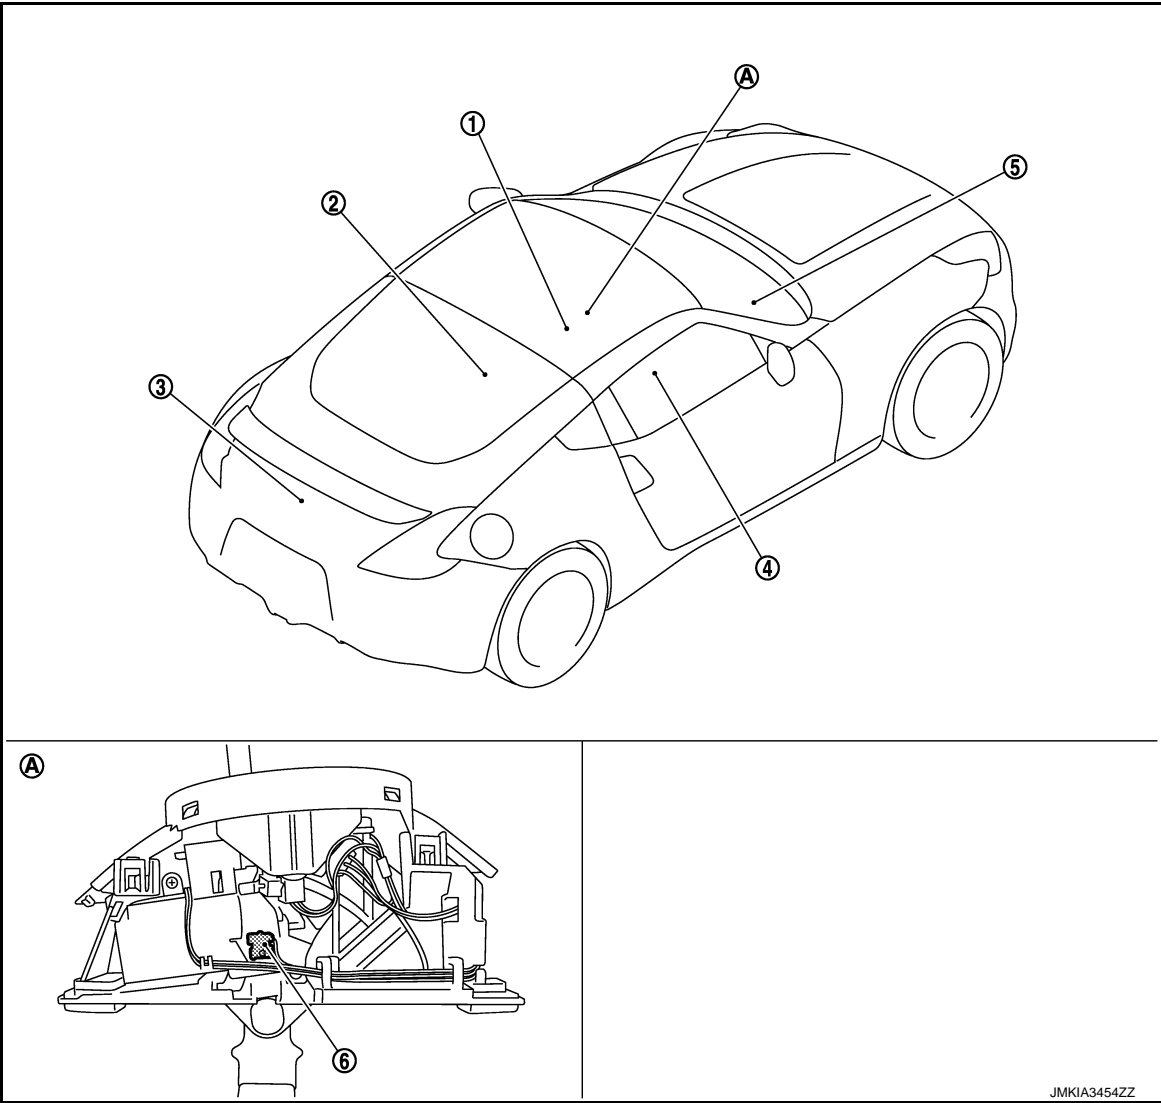

1. Inside key antenna (console) M257
2. Inside key antenna (luggage room) B222
3. Back door switch B66
4. TCM F301
5. ECM M107
6. A/T shift selector (detention switch) M137
- A. Built in A/T shift selector

Component Description

INFOID:000000006353058

Component	Reference
BCM	SEC-98
Security indicator lamp	SEC-127
Door switch	DLK-20 or DLK-209
Back door switch	DLK-20
Hood switch	SEC-123

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000006921597

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> Read and save the vehicle specification. Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*			
<ul style="list-style-type: none"> Intelligent Key system Engine start system 	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door/Trunk lid open	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	TPMS (AIR PRESSURE MONITOR)	×	×	×

NOTE:

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT-III.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power supply position status of the moment a particular DTC is detected	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"*)
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC		While turning power supply position from "LOCK"* to "ACC"
	ACC>ON		While turning power supply position from "ACC" to "IGN"
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Except emergency stop operation)
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF		While turning power supply position from "ACC" to "OFF"
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"*
	OFF>ACC		While turning power supply position from "OFF" to "ACC"
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK"*.) to low power consumption mode
	LOCK		Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)*
	OFF		Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)
	ACC		Power supply position is "ACC" (Ignition switch ACC)
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)
	ENGINE RUN		Power supply position is "RUN" (Ignition switch ON with engine running)
	CRANKING		Power supply position is "CRANKING" (At engine cranking)
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. 	

NOTE:

*: For models without steering lock unit, power supply position changes from "OFF" to "LOCK" when steering lock conditions are satisfied.

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)

INFOID:0000000006928410

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item	Description
CONFIRM KEY FOB ID	It can be checked whether Intelligent Key ID code is registered or not in this mode
AUTO LOCK SET	Auto door lock time can be changed in this mode <ul style="list-style-type: none"> • MODE 1: 1 minute • MODE 2: 5 minutes • MODE 3: 30 seconds • MODE 4: 2 minutes
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch (driver side, passenger side and back door side/trunk lid*) mode can be changed to operate (On) or not operate (Off) in this mode
ENGINE START BY I-KEY	Engine start function mode can be changed to operate (On) or not operate (Off) with this mode
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by back door opener switch/ trunk lid opener switch* can be changed to operate (ON) or not operate (OFF) with this mode
PANIC ALARM SET	Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following with this mode <ul style="list-style-type: none"> • MODE 1: 0.5 sec. • MODE 2: Non-operation • MODE 3: 1.5 sec.
TAKE OUT FROM WIN WARN	NOTE: This item is displayed, but cannot be monitored
PW DOWN SET	Unlock button pressing time on Intelligent Key button can be selected from the following with this mode <ul style="list-style-type: none"> • MODE 1: 3 sec. • MODE 2: Non-operation • MODE 3: 5 sec.
TRUNK OPEN DELAY	NOTE: This item is displayed, but cannot be supported
LO- BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operate (On) or not operate (Off) with this mode
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operate (On) or not operate (Off) with this mode
HAZARD ANSWER BACK	Hazard reminder function mode can be selected from the following with this mode <ul style="list-style-type: none"> • LOCK ONLY: Door lock operation only • UNLOCK ONLY: Door unlock operation only • LOCK/UNLOCK: Lock/unlock operation • OFF: Non-operation
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side, passenger side and back door side/trunk lid*) can be selected from the following with this mode <ul style="list-style-type: none"> • Horn chirp: Sound horn • Buzzer: Sound Intelligent Key warning buzzer • OFF: Non-operation
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch (driver side, passenger side and back door side/trunk lid*) can be changed to operate (On) or not operate (Off) with this mode
SHORT CRANKING OUTPUT	Starter motor can be forcibly activated
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (On) or not operate (Off) with this mode

*: For roadster models

SELF-DIAG RESULT

Refer to [BCS-85. "DTC Index"](#).

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor Item	Condition	
REQ SW -DR	Indicates [On/Off] condition of driver side door request switch	A
REQ SW -AS	Indicates [On/Off] condition of passenger side door request switch	
REQ SW -BD/TR	Indicates [On/Off] condition of back door request switch/trunk lid door request switch*4	B
PUSH SW	Indicates [On/Off] condition of push-button ignition switch	
IGN RLY2 -F/B	Indicates [On/Off] condition of ignition relay 2	C
ACC RLY-F/B	NOTE: This item is displayed, but cannot be monitored	
CLUCH SW*1	Indicates [On/Off] condition of clutch switch	D
BRAKE SW 1	Indicates [On/Off]*3 condition of brake switch power supply	
BRAKE SW 2	Indicates [On/Off] condition of brake switch	E
DETE/CANCL SW*2	Indicates [On/Off] condition of P position	
SFT PN/N SW*2	Indicates [On/Off] condition of P or N position	F
S/L -LOCK	Indicates [On/Off] condition of steering lock unit (LOCK) NOTE: For models without steering lock unit, this item is not monitored.	G
S/L -UNLOCK	Indicates [On/Off] condition of steering lock unit (UNLOCK) NOTE: For models without steering lock unit, this item is not monitored.	H
S/L RELAY -F/B	Indicates [On/Off] condition of steering lock relay NOTE: For models without steering lock unit, this item is not monitored.	I
UNLK SEN -DR	Indicates [On/Off] condition of driver door UNLOCK status	J
PUSH SW -IPDM	Indicates [On/Off] condition of push-button ignition switch	
IGN RLY1 -F/B	Indicates [On/Off] condition of ignition relay 1	
DETE SW -IPDM*2	Indicates [On/Off] condition of P position	
SFT PN -IPDM*2	Indicates [On/Off] condition of P or N position	
SFT P -MET*2	Indicates [On/Off] condition of P position	SEC
SFT N -MET*2	Indicates [On/Off] condition of N position	
ENGINE STATE	Indicates [STOP/STALL/CRANK/RUN] condition of engine states	L
S/L LOCK-IPDM	Indicates [On/Off] condition of steering lock unit (LOCK) NOTE: For models without steering lock unit, this item is not monitored.	M
S/L UNLK-IPDM	Indicates [On/Off] condition of steering lock unit (UNLOCK) NOTE: For models without steering lock unit, this item is not monitored.	N
S/L RELAY-REQ	Indicates [On/Off] condition of steering lock relay NOTE: For models without steering lock unit, this item is not monitored.	O
VEH SPEED 1	Display the vehicle speed signal received from combination meter by numerical value [km/h]	
VEH SPEED 2	Display the vehicle speed signal received from ABS or VDC or TCM by numerical value [km/h]	
DOOR STAT-DR	Indicates [LOCK/READY/UNLOCK] condition of driver side door status	P
DOOR STAT-AS	Indicates [LOCK/READY/UNLOCK] condition of passenger side door status	
ID OK FLAG	Indicates [Set/Reset] condition of key ID	
PRMT ENG STRT	Indicates [Set/Reset] condition of engine start possibility	
PRMT RKE STRT	NOTE: This item is displayed, but cannot be monitored	
KEY SW -SLOT	Indicates [On/Off] condition of key slot	

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor Item	Condition
TRNK/HAT MNTR	NOTE: This item is displayed, but cannot be monitored
RKE-LOCK	Indicates [On/Off] condition of LOCK signal from Intelligent Key
RKE-UNLOCK	Indicates [On/Off] condition of UNLOCK signal from Intelligent Key
RKE-TR/BD	NOTE: This item is displayed, but cannot be monitored
RKE-PANIC	Indicates [On/Off] condition of PANIC button of Intelligent Key
RKE-P/W OPEN	Indicates [On/Off] condition of P/W DOWN signal from Intelligent Key
RKE-MODE CHG	Indicates [On/Off] condition of MODE CHANGE signal from Intelligent Key
RKE OPE COUN1	When remote keyless entry receiver (front) receives the signal transmitted while operating on Intelligent Key, the numerical value start changing
RKE OPE COUN2	NOTE: This item is displayed, but cannot be monitored
REVERSE SW*1	Indicates [On/Off] condition of R position

*1: It is displayed but does not operate on A/T models.

*2: It is displayed but does not operate on M/T models.

*3: OFF is displayed when brake pedal is depressed while brake switch power supply is OFF.

*4: For roadster models

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check interior room lamp operation The interior room lamp is activated after "On" on CONSULT-III screen is touched
PW REMOTO DOWN SET	This test is able to check power window down operation The power window down is activated after "On" on CONSULT-III screen is touched
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation The Intelligent Key warning buzzer is activated after "On" on CONSULT-III screen is touched
INSIDE BUZZER	This test is able to check warning chime in combination meter operation <ul style="list-style-type: none"> Take away warning chime sounds when "Take out" on CONSULT-III screen is touched Key warning chime sounds when "Key" on CONSULT-III screen is touched OFF position warning chime sounds when "Knob" on CONSULT-III screen is touched
INDICATOR	This test is able to check warning lamp operation <ul style="list-style-type: none"> "KEY" Warning lamp illuminates when "Key on" on CONSULT-III screen is touched "KEY" Warning lamp blinks when "Key ind" on CONSULT-III screen is touched
INT LAMP	This test is able to check interior room lamp operation The interior room lamp is activated after "On" on CONSULT-III screen is touched
LCD	This test is able to check meter display information <ul style="list-style-type: none"> Engine start information displays when "BP N" on CONSULT-III screen is touched Engine start information displays when "BP I" on CONSULT-III screen is touched Key ID warning displays when "ID NG" on CONSULT-III screen is touched Steering lock information displays when "ROTAT" on CONSULT-III screen is touched NOTE: For models without steering lock unit, "ROTAT" is displayed but cannot be tested. <ul style="list-style-type: none"> P position warning displays when "SFT P" on CONSULT-III screen is touched Intelligent Key insert information displays when "INSRT" on CONSULT-III screen is touched Intelligent Key low battery warning displays when "BATT" on CONSULT-III screen is touched Take away through window warning displays when "NO KY" on CONSULT-III screen is touched Take away warning display when "OUTKEY" on CONSULT-III screen is touched OFF position warning display when "LK WN" on CONSULT-III screen is touched
TRUNK/GLASS HATCH	NOTE: This item is displayed, but cannot be tested

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Test item	Description
FLASHER	This test is able to check hazard warning lamp operation The hazard warning lamps are activated after "LH/RH/Off" on CONSULT-III screen is touched
HORN	This test is able to check horn operation The horn is activated after "On" on CONSULT-III screen is touched
P RANGE*1	This test is able to check A/T shift selector power supply A/T shift selector power is supplied when "On" on CONSULT-III screen is touched
ENGINE SW ILLUMI	This test is able to check push-ignition switch illumination operation Push-ignition switch illumination illuminates when "On" on CONSULT-III screen is touched
LOCK INDICATOR	This test is able to check LOCK indicator in push-ignition switch operation LOCK indicator in push-ignition switch illuminates when "On" on CONSULT-III screen is touched
ACC INDICATOR	This test is able to check ACC indicator in push-ignition switch operation ACC indicator in push-ignition switch illuminates when "On" on CONSULT-III screen is touched
IGNITION ON IND	This test is able to check ON indicator in push-ignition switch operation ON indicator in push-ignition switch illuminates when "On" on CONSULT-III screen is touched
KEY SLOT ILLUMI	This test is able to check key slot illumination operation Key slot illumination blinks when "On" on CONSULT-III screen is touched
TRUNK/BACK DOOR	This test is able to check back door opener actuator/ trunk lid opener actuator*2 open operation This actuator opens when "Open" on CONSULT-III screen is touched

*1: It is displayed but does not operate on M/T models.

*2: For roadster models

THEFT ALM

THEFT ALM : CONSULT-III Function (BCM - THEFT)

INFOID:0000000006353061

DATA MONITOR

Monitored Item	Description
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW -RR	NOTE: This is displayed even when it is not equipped.
REQ SW -RL	NOTE: This is displayed even when it is not equipped.
REQ SW -BD/TR	Indicates [ON/OFF] condition of back door request switch.
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.
DOOR SW-DR	Indicates [ON/OFF] condition of driver side door switch.
DOOR SW-AS	Indicates [ON/OFF] condition of passenger side door switch.
DOOR SW-RR	NOTE: This is displayed even when it is not equipped.
DOOR SW-RL	NOTE: This is displayed even when it is not equipped.
DOOR SW-BK	Indicates [ON/OFF] condition of back door switch.
CDL LOCK SW	Indicates [ON/OFF] condition of lock signal from door lock/unlock switch LH and RH.
CDL UNLOCK SW	Indicates [ON/OFF] condition of unlock signal from door lock/unlock switch LH and RH.
TR/BD OPEN SW	Indicates [ON/OFF] condition of back door opener switch.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitored Item	Description
TRNK/HAT MNTR	NOTE: This is displayed even when it is not equipped.
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	NOTE: This is displayed even when it is not equipped.

WORK SUPPORT

Test Item	Description
SECURITY ALARM SET	This mode is able to confirm and change security alarm ON-OFF setting.
THEFT ALM TRG	The switch which triggered vehicle security alarm is recorded. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching "CLEAR" on CONSULT-III screen.

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation. The lamp is turned on when "ON" on CONSULT-III screen is touched.
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation. The horns are activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.
HEADLAMP(HI)	This test is able to check vehicle security lamp operation. The headlamps are activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.
FLASHER	This test is able to check vehicle security hazard lamp operation. The hazard lamps are activated after "ON" on CONSULT-III screen is touched.

IMMU

IMMU : CONSULT-III Function (BCM - IMMU)

INFOID:000000006353062

DATA MONITOR

Monitor item	Content
CONFIRM ID ALL	Indicates [YET] at all time. Switches to [DONE] when a registered Intelligent Key is inserted into the key slot.
CONFIRM ID4	
CONFIRM ID3	
CONFIRM ID2	
CONFIRM ID1	
TP 4	Indicates the number of IDs that are registered.
TP 3	
TP 2	
TP 1	
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.

ACTIVE TEST

Test item	Description
THEFT IND	This test is able to check security indicator lamp operation. The lamp is turned on when "ON" on CONSULT-III screen touched.

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

BCM

BCM : Description

INFOID:0000000006353063

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-25, "CAN Communication Signal Chart"](#).

BCM : DTC Logic

INFOID:0000000006353064

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1000	CAN COMM	When BCM cannot communicate CAN communication signal continuously for 2 seconds or more.	CAN communication system

BCM : Diagnosis Procedure

INFOID:0000000006353065

1.PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

Is DTC "U1000" displayed?

YES >> Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

NO >> Refer to [GI-43, "Intermittent Incident"](#).

IPDM E/R

SEC

IPDM E/R : Description

INFOID:0000000006353066

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-25, "CAN Communication Signal Chart"](#).

IPDM E/R : DTC Logic

INFOID:0000000006353067

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	CAN communication system

IPDM E/R : Diagnosis Procedure

INFOID:0000000006353068

1.PERFORM SELF DIAGNOSTIC

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of IPDM E/R.

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).
- NO >> Refer to [GI-43, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

BCM

BCM : DTC Logic

INFOID:0000000006353069

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT(CAN)	BCM detected internal CAN communication circuit malfunction.	BCM

BCM : Diagnosis Procedure

INFOID:0000000006353070

1.REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-92. "Exploded View"](#).

BCM : Special Repair Requirement

INFOID:0000000006353071

1.REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to CONSULT-III operation manual NATS-IVIS/NVIS.

>> Work end.

SEC

P1610 LOCK MODE

< DTC/CIRCUIT DIAGNOSIS >

P1610 LOCK MODE

Description

INFOID:000000006353072

When the starting operation is carried more than five times consecutively under the following conditions, NATS shifts to the mode that prevents the engine from being started.

- Unregistered Intelligent Key is used.
- BCM or ECM is malfunctioning.

DTC Logic

INFOID:000000006353073

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1610	LOCK MODE	When the starting operation is carried out five or more times consecutively under the following conditions. <ul style="list-style-type: none">• Unregistered Intelligent Key• BCM or ECM is malfunctioning	—

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-36. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353074

1.CHECK ENGINE START FUNCTION

1. Perform the check for DTC except DTC P1610.
2. Use CONSULT-III to erase DTC after fixing.
3. Turn ignition switch OFF.
4. Turn ignition switch ON when registered Intelligent Key is inserted into key slot and wait for 5 seconds.
5. Turn the ignition switch OFF and wait 5 seconds.
6. Repeat steps 4 and 5 twice (a total of 3 times).
7. Check that engine can start when registered Intelligent Key is inserted into key slot.

>> INSPECTION END

P1611 ID DISCORD, IMMUECM

< DTC/CIRCUIT DIAGNOSIS >

P1611 ID DISCORD, IMMUECM

Description

INFOID:000000006353075

BCM performs the ID verification with ECM that allows the engine to start. Start the engine if the ID is successfully verified. ECM prevents the engine from starting if the ID is not registered. BCM starts the communication with ECM if ignition switch is turned ON.

DTC Logic

INFOID:000000006353076

DTC DETECTION LOGIC

NOTE:

- If DTC P1611 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC P1611 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1611	ID DISCORD, IMMUECM	The ID verification results between BCM and ECM are NG. Registration is necessary.	<ul style="list-style-type: none">• BCM• ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-37, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353077

1.PERFORM INITIALIZATION

Perform initialization using CONSULT-III. Reregister all Intelligent Keys.
For initialization and registration of Intelligent Key, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

- YES >> INSPECTION END
NO >> GO TO 2.

2.REPLACE BCM

1. Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
2. Perform initialization using CONSULT-III.
For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

- YES >> INSPECTION END
NO >> GO TO 3.

3.REPLACE ECM

1. Replace ECM. Refer to [EC-17, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(ECM\) : Description"](#).
2. Perform initialization using CONSULT-III.

P1611 ID DISCORD, IMMU-ECM

< DTC/CIRCUIT DIAGNOSIS >

For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

YES >> INSPECTION END
NO >> GO TO 4.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

P1612 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

P1612 CHAIN OF ECM-IMMU

Description

INFOID:000000006353078

BCM performs ID verification with ECM that allows the engine to start. Start the engine if the ID is successfully verified. ECM prevents the engine from starting if the ID is not registered. BCM starts the communication with ECM if ignition switch is turned ON.

DTC Logic

INFOID:000000006353079

DTC DETECTION LOGIC

NOTE:

- If DTC P1612 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC P1612 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1612	CHAIN OF ECM-IMMU	Inactive communication between ECM and BCM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-39, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353080

1.REPLACE BCM

1. Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
2. Perform initialization using CONSULT-III.
For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Does the engine start?

- YES >> INSPECTION END
NO >> GO TO 2.

2.REPLACE ECM

Replace ECM. Refer to [EC-17, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(ECM\) : Description"](#).

>> INSPECTION END

P1614 CHAIN OF IMMU-KEY

< DTC/CIRCUIT DIAGNOSIS >

P1614 CHAIN OF IMMU-KEY

Description

INFOID:000000006353081

Performs ID verification through BCM and Intelligent Key when push-button ignition switch is pressed. Prohibits the release of steering lock (models with steering lock unit) or start of engine when an unregistered ID of Intelligent Key is used.

DTC Logic

INFOID:000000006353082

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1614	CHAIN OF IMMU-KEY	Inactive communication between key slot and BCM.	<ul style="list-style-type: none">• Harness or connectors (The key slot circuit is open or shorted)• Key slot• BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE 1

1. Insert Intelligent Key into the key slot.
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-40, "Diagnosis Procedure"](#).
NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE 2

1. Press the push-button ignition switch.
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-40, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353083

1. INSPECTION START

Perform inspection in accordance with procedure that confirms DTC.

Which procedure confirms DTC?

DTC confirmation procedure 1>>GO TO 2.
DTC confirmation procedure 2>>GO TO 4.

2.CHECK KEY SLOT INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect key slot connector.
3. Check voltage between key slot harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Key slot			
Connector	Terminal		
M22	2	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace key slot. Refer to [SEC-224, "Removal and Installation"](#).
NO >> GO TO 3.

P1614 CHAIN OF IMMU-KEY

< DTC/CIRCUIT DIAGNOSIS >

3.CHECK KEY SLOT CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between key slot harness connector and BCM harness connector.

Key slot		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M22	2	M122	80	Existed

3. Check continuity between key slot harness connector and ground.

Key slot		Ground	Continuity
Connector	Terminal		
M22	2		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

NO >> Repair or replace harness.

4.CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns ON.

Does ignition switch turn to ON?

YES >> GO TO 5.

NO >> GO TO 7.

5.CHECK KEY SLOT COMMUNICATION SIGNAL

1. Turn ignition switch OFF.
2. Disconnect key slot connector.
3. Check voltage between key slot harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Key slot			
Connector	Terminal		
M22	3	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace key slot. Refer to [SEC-224. "Removal and Installation"](#).

NO >> GO TO 6.

6.CHECK KEY SLOT COMMUNICATION SIGNAL CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between key slot harness connector and BCM harness connector.

Key slot		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M22	3	M122	81	Existed

3. Check continuity between key slot harness connector and ground.

Key slot		Ground	Continuity
Connector	Terminal		
M22	3		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

NO >> Repair or replace harness.

7.CHECK KEY SLOT GROUND CIRCUIT

P1614 CHAIN OF IMMU-KEY

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect key slot connector.
3. Check continuity between key slot harness connector and ground.

Key slot		Ground	Continuity
Connector	Terminal		
M22	7		Existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace harness.

8. CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

P1615 DIFFERENCE OF KEY

< DTC/CIRCUIT DIAGNOSIS >

P1615 DIFFERENCE OF KEY

Description

INFOID:000000006353084

Performs ID verification through BCM and Intelligent Key when push-button ignition switch is pressed. Prohibits the release of steering lock (models with steering lock unit) or start of engine when an unregistered ID of Intelligent Key is used.

DTC Logic

INFOID:000000006353085

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1615	DIFFERENCE OF KEY	The ID verification results between BCM and Intelligent Key are NG. Registration is necessary.	Intelligent Key

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Press the push-button ignition switch.
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-43. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353086

1.PERFORM INITIALIZATION

Perform initialization using CONSULT-III. Reregister all Intelligent Keys. For initialization and registration of Intelligent Key, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

YES >> INSPECTION END
NO >> GO TO 2.

2.REPLACE INTELLIGENT KEY

1. Replace Intelligent Key.
2. Perform initialization using CONSULT-III.
For initialization and registration of Intelligent Key, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

YES >> INSPECTION END
NO >> GO TO 3.

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

B2190 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

B2190 NATS ANTENNA AMP.

Description

INFOID:000000006353087

Performs ID verification through BCM and Intelligent Key when push-button ignition switch is pressed. Prohibits the release of steering lock (models with steering lock unit) or start of engine when an unregistered ID of Intelligent Key is used.

DTC Logic

INFOID:000000006353088

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2190	NATS ANTENNA AMP	Inactive communication between key slot and BCM.	<ul style="list-style-type: none">• Harness or connectors (The key slot circuit is open or shorted)• Key slot• BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE 1

1. Insert Intelligent Key into the key slot.
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-44, "Diagnosis Procedure"](#).
NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE 2

1. Press the push-button ignition switch.
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-44, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353089

1. INSPECTION START

Perform inspection in accordance with the appropriate confirmation procedure DTC.

Which procedure confirms DTC?

DTC confirmation procedure 1>>GO TO 2.
DTC confirmation procedure 2>>GO TO 4.

2.CHECK KEY SLOT INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect key slot connector.
3. Check voltage between key slot harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Key slot			
Connector	Terminal		
M22	2	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace key slot. Refer to [SEC-224, "Removal and Installation"](#).
NO >> GO TO 3.

B2190 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

3.CHECK KEY SLOT CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between key slot harness connector and BCM harness connector.

Key slot		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M22	2	M122	80	Existed

3. Check continuity between key slot harness connector and ground.

Key slot		Ground	Continuity
Connector	Terminal		
M22	2		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

NO >> Repair or replace harness.

4.CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns ON.

Does ignition switch turn to ON?

YES >> GO TO 5.

NO >> GO TO 7.

5.CHECK KEY SLOT COMMUNICATION SIGNAL

1. Turn ignition switch OFF.
2. Disconnect key slot connector.
3. Check voltage between key slot harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Key slot			
Connector	Terminal		
M22	3	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace key slot. Refer to [SEC-224. "Removal and Installation"](#).

NO >> GO TO 6.

6.CHECK KEY SLOT COMMUNICATION SIGNAL CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between key slot harness connector and BCM harness connector.

Key slot		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M22	3	M122	81	Existed

3. Check continuity between key slot harness connector and ground.

Key slot		Ground	Continuity
Connector	Terminal		
M22	3		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

NO >> Repair or replace harness.

7.CHECK KEY SLOT GROUND CIRCUIT

B2190 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect key slot connector.
3. Check continuity between key slot harness connector and ground.

Key slot		Ground	Continuity
Connector	Terminal		
M22	7		Existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace harness.

8. CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

B2191 DIFFERENCE OF KEY

< DTC/CIRCUIT DIAGNOSIS >

B2191 DIFFERENCE OF KEY

Description

INFOID:000000006353090

Performs ID verification through BCM and Intelligent Key when push-button ignition switch is pressed. Prohibits the release of steering lock (models with steering lock unit) or start of engine when an unregistered ID of Intelligent Key is used.

DTC Logic

INFOID:000000006353091

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2191	DIFFERENCE OF KEY	The ID verification results between BCM and Intelligent Key are NG. Registration is necessary.	Intelligent Key

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Press the push-button ignition switch.
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-47. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353092

1.PERFORM INITIALIZATION

Perform initialization using CONSULT-III. Reregister all Intelligent Keys.
For initialization and registration of Intelligent Key, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

YES >> INSPECTION END
NO >> GO TO 2.

2.REPLACE INTELLIGENT KEY

1. Replace Intelligent Key.
2. Perform initialization using CONSULT-III.
For initialization and registration of Intelligent Key, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

YES >> INSPECTION END
NO >> GO TO 3.

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

B2192 ID DISCORD, IMMUECM

< DTC/CIRCUIT DIAGNOSIS >

B2192 ID DISCORD, IMMUECM

Description

INFOID:000000006353093

BCM performs ID verification with ECM that allows the engine to start. Start the engine if the ID is successfully verified. ECM prevents the engine from starting if the ID is not registered. BCM starts the communication with ECM if ignition switch is turned ON.

DTC Logic

INFOID:000000006353094

DTC DETECTION LOGIC

NOTE:

- If DTC B2192 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2192 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2192	ID DISCORD, IMMUECM	The ID verification results between BCM and ECM are NG. Registration is necessary.	<ul style="list-style-type: none">• BCM• ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-48, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353095

1.PERFORM INITIALIZATION

Perform initialization using CONSULT-III. Reregister all Intelligent Keys.
For initialization and registration of Intelligent Key, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

- YES >> INSPECTION END
NO >> GO TO 2.

2.REPLACE BCM

1. Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
2. Perform initialization using CONSULT-III.
For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

- YES >> INSPECTION END
NO >> GO TO 3.

3.REPLACE ECM

1. Replace ECM. Refer to [EC-17, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(ECM\) : Description"](#).
2. Perform initialization using CONSULT-III.
For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

B2192 ID DISCORD, IMMU-ECM

< DTC/CIRCUIT DIAGNOSIS >

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

YES >> INSPECTION END

NO >> GO TO 4.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

B2193 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

B2193 CHAIN OF ECM-IMMU

Description

INFOID:000000006353096

BCM performs the ID verification with ECM that allows the engine to start. Start the engine if the ID is successfully verified. ECM prevents the engine from starting if the ID is not registered. BCM starts the communication with ECM if ignition switch is turned ON.

DTC Logic

INFOID:000000006353097

DTC DETECTION LOGIC

NOTE:

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2193	CHAIN OF ECM-IMMU	Inactive communication between ECM and BCM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-50, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353098

1.REPLACE BCM

1. Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
2. Perform initialization using CONSULT-III.
For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Does the engine start?

- YES >> INSPECTION END
NO >> GO TO 2.

2.REPLACE ECM

Replace ECM. Refer to [EC-17, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(ECM\) : Description"](#).

>> INSPECTION END

B2195 ANTI-SCANNING

< DTC/CIRCUIT DIAGNOSIS >

B2195 ANTI-SCANNING

Description

INFOID:000000006353099

When ignition switch is turned ON, BCM performs ID verification with ECM. If ID verification that is out of the specified specification is detected, BCM prohibits further ID verification and engine cranking.

DTC Logic

INFOID:000000006353100

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2195	ANTI-SCANNING	ID verification between BCM and ECM that is out of the specified specification is detected	ID verification request out of the specified specification

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Refer to [SEC-51, "Diagnosis Procedure"](#).
NO >> INSPECTION END.

Diagnosis Procedure

INFOID:000000006353101

1.CHECK SELF-DIAGNOSTIC RESULT-1

1. Perform "Self-diagnostic result" of BCM using CONSULT-III.
2. Erase DTC.
3. Perform DTC Confirmation Procedure. Refer to [SEC-51, "DTC Logic"](#).

Is DTC 2195 detected?

- YES >> GO TO 2.
NO >> INSPECTION END

2.CHECK EQUIPMENT OF THE VEHICLE

Check that unspecified accessory part related to engine start is not installed.

Is unspecified accessory part related to engine start installed?

- YES >> GO TO 3.
NO >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

3.CHECK SELF-DIAGNOSTIC RESULT-2

1. Obtain the customers approval to remove unspecified accessory part related to engine start, and then remove it.
2. Perform "Self-diagnostic result" of BCM using CONSULT-III.
3. Erase DTC.
4. Perform DTC Confirmation Procedure. Refer to [SEC-51, "DTC Logic"](#).

Is DTC 2195 detected?

- YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
NO >> INSPECTION END

B2013 ID DISCORD, IMMU-STRG

< DTC/CIRCUIT DIAGNOSIS >

B2013 ID DISCORD, IMMU-STRG

Description

INFOID:000000006353102

BCM performs the ID verification with the steering lock unit and releases the steering lock if both BCM and steering lock unit ID are same. BCM starts the communication with the steering lock unit when Intelligent Key is carried into the passenger compartment and the push-button ignition switch is pressed.

DTC Logic

INFOID:000000006353103

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2013	ID DISCORD, IMMU-STRG	The ID verification results between BCM and steering lock unit are NG. Registration is necessary.	Steering lock unit

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Lock steering.
2. Press the push-button ignition switch.
3. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-52, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353104

1.PERFORM INITIALIZATION

Perform initialization using CONSULT-III.
For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Does steering lock operate?

YES >> INSPECTION END
NO >> GO TO 2.

2.REPLACE STEERING LOCK UNIT

1. Replace steering lock unit.
2. Perform initialization using CONSULT-III.
For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Does steering lock operate?

YES >> INSPECTION END
NO >> GO TO 3.

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

B2014 CHAIN OF STRG-IMMU

< DTC/CIRCUIT DIAGNOSIS >

B2014 CHAIN OF STRG-IMMU

Description

INFOID:000000006353105

BCM performs the ID verification with the steering lock unit to release the steering. BCM starts the communication with the steering lock unit when Intelligent Key is carried into the passenger compartment and the push-button ignition switch is pressed.

DTC Logic

INFOID:000000006353106

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2014	CHAIN OF STRG-IMMU	Inactive communication between steering lock unit and BCM.	<ul style="list-style-type: none">• Harness or connectors (Steering lock unit circuit is open or shorted)• Steering lock unit• BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Lock steering.
2. Press the push-button ignition switch.
3. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-53. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353107

1.CHECK STEERING LOCK UNIT POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect steering lock unit connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
Steering lock unit					
Connector	Terminal				
M40	7	Ground	Ignition switch	OFF or ACC	Battery voltage
				ON	0

Is the inspection result normal?

YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK STEERING LOCK UNIT POWER SUPPLY CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between steering lock unit harness connector and BCM harness connector.

Steering lock unit		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M40	7	M122	106	Existed

3. Check continuity between steering lock unit harness connector and ground.

B2014 CHAIN OF STRG-IMMU

< DTC/CIRCUIT DIAGNOSIS >

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	7		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

NO >> Repair or replace harness.

3.CHECK STEERING LOCK UNIT GROUND CIRCUIT

Check continuity between steering lock unit and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	5		Existed
	6		


Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK STEERING LOCK UNIT COMMUNICATION SIGNAL

1. Connect steering lock unit connector and BCM connector.
2. Read voltage signal between steering lock unit harness connector and ground.

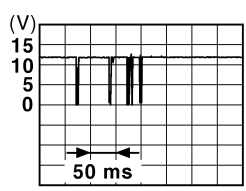(+) Steering lock unit		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
M40	2	Ground	Lock status	Battery voltage
			Lock or unlock	 JMKIA0066GB
			For 15 seconds after unlock	Battery voltage
			15 seconds or later after unlock.	0

Steering is locked : Opening the door when ignition switch is ON to OFF.

Steering is unlocked : Ignition switch is OFF to ACC.

Is the inspection result normal?

YES >> Replace steering lock unit.

NO >> GO TO 5.

5.CHECK STEERING LOCK UNIT COMMUNICATION CIRCUIT

1. Disconnect steering lock unit and BCM connector.
2. Check continuity between steering lock unit harness connector and BCM harness connector.

Steering lock unit		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M40	2	M122	111	Existed

B2014 CHAIN OF STRG-IMMU

< DTC/CIRCUIT DIAGNOSIS >

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	2		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
- NO >> Repair or replace harness.

A

B

C

D

E

F

G

H

I

J

L

M

N

O

P

SEC

B2555 STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

B2555 STOP LAMP

Description

INFOID:000000006353108

BCM detects the stop lamp status and confirms the stop lamp switch ON/OFF status. BCM confirms the engine start condition according to the stop lamp switch ON/OFF status.

DTC Logic

INFOID:000000006353109

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2555	STOP LAMP	BCM makes a comparison between the upper voltage and lower voltage of stop lamp switch. It judges from their values to detect the malfunctioning circuit.	<ul style="list-style-type: none">• Harness or connectors (stop lamp switch circuit is open or shorted)• Stop lamp switch• Fuse

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Depress the brake pedal and wait 1 second or more.
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-56, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353110

1.CHECK STOP LAMP SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M123	116	Ground	Battery voltage

Is the inspection normal?

YES >> GO TO 2.
NO-1 >> Check 10 A fuse [No. 7, located in the fuse block (J/B)].
NO-2 >> Check harness for open or short between BCM and fuse.

2.CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

1. Disconnect stop lamp switch connector.
2. Check voltage between stop lamp harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Stop lamp switch			
Connector	Terminal		
E110	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.
NO >> Check harness for open or short to stop lamp switch.

3.CHECK STOP LAMP SWITCH CIRCUIT

B2555 STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

1. Check continuity between stop lamp switch harness connector and BCM harness connector.

Stop lamp switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E110	2	M123	118	Existed

2. Check continuity between stop lamp switch harness connector and ground.

Stop lamp switch		Ground	Continuity
Connector	Terminal		
E110	2		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK STOP LAMP SWITCH

Refer to [SEC-57, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace stop lamp switch. Refer to [BR-20, "Exploded View"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000006353111

1.CHECK STOP LAMP SWITCH

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch connector.
3. Check continuity between stop lamp switch terminals.

Stop lamp switch		Condition		Continuity
Terminal				
1	2	Brake pedal	Not depressed	Not existed
			Depressed	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch. Refer to [BR-20, "Exploded View"](#).

B2556 PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

B2556 PUSH-BUTTON IGNITION SWITCH

Description

INFOID:000000006353112

The switch changes the power supply position. BCM maintains the power supply position status. BCM changes the power supply position with the operation of the push-button ignition switch.

DTC Logic

INFOID:000000006353113

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2556	PUSH-BUTTON IGNITION SWITCH	BCM detects the push-button ignition switch stuck at ON for 100 seconds or more.	<ul style="list-style-type: none">• Harness or connectors (Push-button ignition switch circuit is shorted.)• Push-button ignition switch• BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait 100 seconds or more.
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-58, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353114

1.CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Push-button ignition switch			
Connector	Terminal		
M50	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between push-button ignition switch harness connector and BCM harness connector.

Push-button ignition switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M50	4	M122	89	Existed

3. Check continuity between push-button ignition switch harness connector and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M50	4		Not existed

Is the inspection result normal?

B2556 PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
NO >> Repair or replace harness.

3.CHECK PUSH-BUTTON IGNITION SWITCH GROUND CIRCUIT

Check continuity between push-button ignition switch harness connector and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M50	1		Existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace harness.

4.CHECK PUSH-BUTTON IGNITION SWITCH

Refer to [SEC-59, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Replace push-button ignition switch. Refer to [SEC-225, "Removal and Installation"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000006353115

1.CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals.

Push-button ignition switch		Condition		Continuity
Terminal				
1	4	Push-button ignition switch	Pressed	Existed
			Not pressed	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace push-button ignition switch. Refer to [SEC-225, "Removal and Installation"](#).

SEC

B2557 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

B2557 VEHICLE SPEED

Description

INFOID:000000006353116

BCM receives 2 vehicle speed signals via CAN communication. 1 signal is transmitted by the “unified meter and A/C amp.”. Another signal is transmitted by “ABS actuator and electric unit (control unit.)”. BCM compares both signals to detect the vehicle speed.

DTC Logic

INFOID:000000006353117

DTC DETECTION LOGIC

NOTE:

- If DTC B2557 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2557 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Self-diagnosis name	DTC detecting condition	Possible causes
B2557	VEHICLE SPEED	BCM detects the following difference between the vehicle speed signal from “unified meter and A/C amp.” and the one from “ABS actuator and electric unit” for 10 seconds continuously. <ul style="list-style-type: none">• One is 10 km/h (6.2 MPH) or more and the other is 4 km/h (2.5 MPH) or less	<ul style="list-style-type: none">• Wheel sensor• Unified meter and A/C amp.• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Drive the vehicle at the vehicle speed of 10 km/h (6.2 MPH) or more and wait 10 seconds or more.
2. Check “Self-diagnostic result” using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-60, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353118

1.CHECK DTC WITH “ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)”

Check “Self-diagnostic result” using CONSULT-III. Refer to [BRC-91, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2.CHECK DTC WITH “COMBINATION METER”

Check “Self-diagnostic result” using CONSULT-III. Refer to [MWI-77, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunctioning parts.

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

B2560 STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

B2560 STARTER CONTROL RELAY

Description

INFOID:000000006353119

Starter control relay, integrated in IPDM E/R, permits the starter relay operation when in the N or P position and the steering is locked or unlocked (models with steering lock unit).

DTC Logic

INFOID:000000006353120

DTC DETECTION LOGIC

NOTE:

- If DTC B2560 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2560 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Self-diagnosis name	DTC detecting condition	Possible causes
B2560	STARTER CONTROL RELAY	BCM detects a discrepancy between the OFF request of starter control relay to IPDM E/R and the feedback. (The feedback is ON instead of OFF.)	IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 2 seconds or more.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-61, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353121

1.CHECK DTC WITH IPDM E/R

Check "Self-diagnostic result" using CONSULT-III. Refer to [SEC-211, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).

2.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

B2601 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

B2601 SHIFT POSITION

Description

INFOID:000000006353122

BCM confirms the shift position with the following 4 signals.

- Selector lever
- Transmission range switch
- P position signal from IPDM E/R (CAN)
- P position signal from TCM (CAN)

DTC Logic

INFOID:000000006353123

DTC DETECTION LOGIC

NOTE:

- If DTC B2601 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2601 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2601	SHIFT POSITION	BCM detects when a difference between the shift P input signal and the shift position signal received from IPDM E/R via CAN communication continues for 2 seconds or more.	<ul style="list-style-type: none">• Harness or connectors (A/T shift selector circuit is open or shorted)• A/T shift selector (detention switch)

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 2 seconds or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-62, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353124

1.CHECK A/T SHIFT SELECTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector (detention switch) connector.
3. Check voltage between A/T shift selector (detention switch) harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
A/T shift selector (detention switch)			
Connector	Terminal		
M137	9	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK A/T SHIFT SELECTOR POWER SUPPLY CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between A/T shift selector (detention switch) harness connector and BCM harness connector.

B2601 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

A/T shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M137	9	M122	96	Existed

3. Check continuity between A/T shift selector (detention switch) harness connector and ground.

A/T shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M137	9		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

NO >> Repair or replace harness.

3.CHECK A/T SHIFT SELECTOR CIRCUIT (BCM)

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between A/T shift selector (detention switch) harness connector and BCM harness connector.

A/T shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M137	10	M122	99	Existed

3. Check continuity between A/T shift selector (detention switch) harness connector and ground.

A/T shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M137	10		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK A/T SHIFT SELECTOR CIRCUIT (IPDM E/R)

Check continuity between A/T shift selector (detention switch) harness connector and IPDM E/R harness connector.

A/T shift selector (detention switch)		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M137	10	E6	43	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5.CHECK A/T SHIFT SELECTOR (DETENTION SWITCH)

Refer to [SEC-64, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace A/T shift selector. Refer to [TM-321, "Removal and Installation"](#).

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

B2601 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

Component Inspection

INFOID:000000006353125

1. CHECK A/T SHIFT SELECTOR (DETENTION SWITCH)

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector connector.
3. Check continuity between A/T shift selector (detention switch) terminals.

A/T shift selector (detention switch)		Condition		Continuity
Terminal				
9	10	Selector lever	P position	Not existed
			Other than above	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace A/T shift selector. Refer to [TM-321, "Removal and Installation"](#).

B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

B2602 SHIFT POSITION

Description

INFOID:000000006353126

BCM confirms the shift position with the following 4 signals.

- Selector lever
- Transmission range switch
- P position signal from IPDM E/R (CAN)
- P position signal from TCM (CAN)

DTC Logic

INFOID:000000006353127

DTC DETECTION LOGIC

NOTE:

- If DTC B2602 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2602 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2602	SHIFT POSITION	BCM detects the following status for 10 seconds. <ul style="list-style-type: none">• Shift position is in the P position• Vehicle speed is 4 km/h (2.5 MPH) or more• Ignition switch is in the ON position	<ul style="list-style-type: none">• Harness or connectors (A/T shift selector circuit is open or shorted)• A/T shift selector (detention switch)• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine under the following conditions and wait 10 seconds or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-65, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353128

1.CHECK DTC WITH "ABS ACTUATOR AND ELECTRIC UNIT"

Check "Self-diagnostic result" using CONSULT-III. Refer to [BRC-91, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2.CHECK A/T SHIFT SELECTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector (detention switch) connector.
3. Check voltage between A/T shift selector (detention switch) harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
A/T shift selector (detention switch)			
Connector	Terminal		
M137	9	Ground	Battery voltage

Is the inspection result normal?

B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 4.
NO >> GO TO 3.

3.CHECK A/T SHIFT SELECTOR POWER SUPPLY CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between A/T shift selector (detention switch) harness connector and BCM harness connector.

A/T shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M137	9	M122	96	Existed

3. Check continuity between A/T shift selector (detention switch) harness connector and ground.

A/T shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M137	9		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
NO >> Repair or replace harness.

4.CHECK A/T SHIFT SELECTOR CIRCUIT

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between A/T shift selector (detention switch) harness connector and BCM harness connector.

A/T shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M137	10	M122	99	Existed

3. Check continuity between A/T shift selector (detention switch) harness connector and ground.

A/T shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M137	10		Not existed

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace harness.

5.CHECK A/T SHIFT SELECTOR (DETENTION SWITCH)

Refer to [SEC-66, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Replace A/T shift selector. Refer to [TM-321, "Removal and Installation"](#).

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000006353129

1.CHECK A/T SHIFT SELECTOR (DETENTION SWITCH)

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector connector.
3. Check continuity between A/T shift selector (detention switch) terminals.

B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

A/T shift selector (detention switch)		Condition		Continuity
Terminal				
9	10	Selector lever	P position	Not existed
			Other than above	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace A/T shift selector. Refer to [TM-321, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2603 SHIFT POSITION STATUS

< DTC/CIRCUIT DIAGNOSIS >

B2603 SHIFT POSITION STATUS

Description

INFOID:000000006353130

BCM confirms the shift position with the following 4 signals.

- Selector lever
- Transmission range switch
- P position signal from IPDM E/R (CAN)
- P position signal from TCM (CAN)

DTC Logic

INFOID:000000006353131

DTC DETECTION LOGIC

NOTE:

- If DTC B2603 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2603 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).
- If DTC B2603 is displayed with DTC B2601, first perform the trouble diagnosis for DTC B2601. Refer to [SEC-62, "DTC Logic"](#).

DTC No.	Self-diagnosis name	DTC detecting condition	Possible causes
B2603	SHIFT POSITION STATUS	BCM detects the following status for 500 ms or more when shift is in the P position, and ignition switch is in the ON position. <ul style="list-style-type: none">• Transmission range switch: approx. 0 V• A/T shift selector (detention switch): approx. 0 V	<ul style="list-style-type: none">• Harness or connector (A/T shift selector circuit is open or shorted)• Harness or connectors (TCM circuit is open or shorted)• A/T shift selector (detention switch)• TCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-68, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353132

1.CHECK DTC WITH TCM

Check "Self-diagnostic result" using CONSULT-III.

Are any DTC detected?

- YES >> Refer to [TM-294, "DTC Index"](#).
NO >> GO TO 2.

2.CHECK TRANSMISSION RANGE SWITCH CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect A/T assembly connector and BCM connector.
3. Check continuity between A/T assembly harness connector and BCM harness connector.

A/T assembly		BCM		Continuity
Connector	Terminal	Connector	Terminal	
F51	9	M123	140	Existed

4. Check continuity between A/T assembly harness connector and ground.

B2603 SHIFT POSITION STATUS

< DTC/CIRCUIT DIAGNOSIS >

A/T assembly		Ground	Continuity
Connector	Terminal		
F51	9		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK TRANSMISSION RANGE SWITCH CIRCUIT 2

1. Disconnect TCM connector.
2. Check continuity between TCM harness connector and A/T assembly harness connector.

TCM		A/T assembly		Continuity
Connector	Terminal	Connector	Terminal	
F301	9	F51	9	
				Existed

3. Check continuity between TCM harness connector and ground.

TCM		Ground	Continuity
Connector	Terminal		
F301	9		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK A/T SHIFT SELECTOR POWER SUPPLY

1. Disconnect A/T shift selector (detention switch) connector.
2. Check voltage between A/T shift selector (detention switch) harness connector and ground.

(+) A/T shift selector (detention switch)		(-) Ground	Voltage (V) (Approx.) Battery voltage
Connector	Terminal		
M137	9		

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

5.CHECK A/T SHIFT SELECTOR POWER SUPPLY CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between A/T shift selector (detention switch) harness connector and BCM harness connector.

A/T shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M137	9	M122	96	
				Existed

3. Check continuity between A/T shift selector (detention switch) harness connector and ground.

A/T shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M137	9		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

NO >> Repair or replace harness.

B2603 SHIFT POSITION STATUS

< DTC/CIRCUIT DIAGNOSIS >

6. CHECK A/T SHIFT SELECTOR CIRCUIT

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between A/T shift selector (detention switch) harness connector and BCM harness connector.

A/T shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M137	10	M122	99	Existed

3. Check continuity between A/T shift selector (detention switch) harness connector and ground.

A/T shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M137	10		Not existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace harness.

7. CHECK A/T SHIFT SELECTOR (DETENTION SWITCH)

Refer to [SEC-64. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace A/T shift selector. Refer to [TM-321. "Removal and Installation"](#).

8. CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

B2604 PNP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

B2604 PNP SWITCH

Description

INFOID:000000006353133

BCM confirms the shift position with the following 4 signals.

- Selector lever
- Transmission range switch
- P position signal from IPDM E/R (CAN)
- P position signal from TCM (CAN)

DTC Logic

INFOID:000000006353134

DTC DETECTION LOGIC

NOTE:

- If DTC B2604 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2604 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2604	PNP SWITCH	BCM detects the following status for 500 ms or more when the ignition switch is in the ON position. <ul style="list-style-type: none">• N position input signal exists. Shift position signal from TCM does not exist.• N position input signal does not exist. Shift position signal from TCM exists.	<ul style="list-style-type: none">• Harness or connectors (TCM circuit is open or shorted)• TCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-71, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353135

1.CHECK DTC WITH TCM

Check "Self-diagnostic result" using CONSULT-III.

Are any DTC detected?

- YES >> Refer to [TM-294, "DTC Index"](#).
NO >> GO TO 2.

2.CHECK TRANSMISSION RANGE SWITCH CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect A/T assembly connector and BCM connector.
3. Check continuity between A/T assembly harness connector and BCM harness connector.

A/T assembly		BCM		Continuity
Connector	Terminal	Connector	Terminal	
F51	9	M123	140	Existed

4. Check continuity between A/T assembly harness connector and ground.

B2604 PNP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

A/T assembly		Ground	Continuity
Connector	Terminal		
F51	9		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK TRANSMISSION RANGE SWITCH CIRCUIT 2

1. Disconnect TCM connector.
2. Check continuity between TCM harness connector and A/T assembly harness connector.

TCM		A/T assembly		Continuity
Connector	Terminal	Connector	Terminal	
F301	9	F51	9	
				Existed

3. Check continuity between TCM harness connector and ground.

TCM		Ground	Continuity
Connector	Terminal		
F301	9		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

B2605 PNP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

B2605 PNP SWITCH

Description

INFOID:000000006353136

BCM confirms the shift position with the following 4 signals.

- Selector lever
- Transmission range switch
- P position signal from IPDM E/R (CAN)
- P position signal from TCM (CAN)

DTC Logic

INFOID:000000006353137

DTC DETECTION LOGIC

NOTE:

- If DTC B2605 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33. "BCM : DTC Logic"](#).
- If DTC B2605 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35. "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2605	PNP SWITCH	BCM detects the following status for 500 ms or more when the ignition switch is in the ON position <ul style="list-style-type: none">• N position input signal exists. Shift position signal from IPDM E/R does not exist.• N position input signal does not exist. Shift position signal from IPDM E/R exists.	<ul style="list-style-type: none">• Harness or connectors (TCM circuit is open or shorted)• TCM• IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-73. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353138

1.CHECK DTC WITH IPDM E/R

Check "Self-diagnostic result" using CONSULT-III. Refer to [SEC-211. "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2.CHECK TRANSMISSION RANGE SWITCH CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect A/T assembly connector and BCM connector.
3. Check continuity between A/T assembly harness connector and BCM harness connector.

A/T assembly		BCM		Continuity
Connector	Terminal	Connector	Terminal	
F51	9	M123	140	Existed

4. Check continuity between A/T assembly harness connector and ground.

B2605 PNP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

A/T assembly		Ground	Continuity
Connector	Terminal		
F51	9		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK TRANSMISSION RANGE SWITCH CIRCUIT 2

1. Disconnect TCM connector.
2. Check continuity between TCM harness connector and A/T assembly harness connector.

TCM		A/T assembly		Continuity
Connector	Terminal	Connector	Terminal	
F301	9	F51	9	
				Existed

3. Check continuity between TCM harness connector and ground.

TCM		Ground	Continuity
Connector	Terminal		
F301	9		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

B2606 STEERING LOCK RELAY

< DTC/CIRCUIT DIAGNOSIS >

B2606 STEERING LOCK RELAY

Description

INFOID:000000006353139

The steering lock relay ON signal is transmitted to IPDM E/R by BCM via CAN communication. IPDM E/R turns the steering lock relay ON and transmits the release of the steering to BCM.

DTC Logic

INFOID:000000006353140

DTC DETECTION LOGIC

NOTE:

- If DTC B2606 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2606 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2606	STEERING LOCK RELAY	BCM detects that there is a discrepancy between the following statuses. <ul style="list-style-type: none">• Steering lock unit ON signal transmitted by IPDM E/R• The steering lock unit status feedback	Steering lock relay (In IPDM E/R)

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-75, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353141

1.CHECK DTC WITH IPDM E/R

Check "Self-diagnostic result" using CONSULT-III. Refer to [SEC-211, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).

2.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

B2607 STEERING LOCK RELAY

< DTC/CIRCUIT DIAGNOSIS >

B2607 STEERING LOCK RELAY

Description

INFOID:000000006353142

BCM requests to IPDM E/R to supply power to steering lock unit. After receiving the power, the steering lock unit transmits an ON signal to BCM.

DTC Logic

INFOID:000000006353143

DTC DETECTION LOGIC

NOTE:

- If DTC B2607 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2607 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2607	STEERING LOCK RELAY	BCM detects that there is a difference between the following statuses. <ul style="list-style-type: none">• Steering lock unit ON signal transmitted by IPDM E/R• The steering lock unit status feedback	<ul style="list-style-type: none">• Harness or connectors (Steering lock unit power supply circuit is open or shorted)• Steering lock relay (In IPDM E/R)

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-76, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353144

1.CHECK DTC WITH IPDM E/R

Check "Self-diagnostic result" using CONSULT-III. Refer to [SEC-211, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2.CHECK STEERING LOCK UNIT POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect steering lock unit connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Steering lock unit				
Connector	Terminal			
M40	1	Ground	Press push-button ignition switch when steering lock is in lock condition.	Battery voltage

Is the inspection result normal?

B2607 STEERING LOCK RELAY

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 4.
NO >> GO TO 3.

3.CHECK STEERING LOCK UNIT CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between steering lock unit harness connector and IPDM E/R harness connector.

Steering lock unit		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M40	1	E5	11	Existed

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	1		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
NO >> Repair or replace harness.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

SEC

B2608 STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

B2608 STARTER RELAY

Description

INFOID:000000006353145

Located in IPDM E/R, the starter relay runs the starter motor. The starter relay is turned ON by the BCM when the ignition switch is in the START position. IPDM E/R transmits the starter relay ON signal to BCM via CAN communication.

DTC Logic

INFOID:000000006353146

DTC DETECTION LOGIC

NOTE:

- If DTC B2608 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2608 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).
- If DTC B2608 is displayed with DTC B210D for IPDM E/R, first perform the trouble diagnosis for DTC B210D. Refer to [SEC-111, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2608	STARTER RELAY	BCM receives starter relay ON signal (CAN) from IPDM E/R even if BCM turns the starter relay OFF.	<ul style="list-style-type: none">• Harness or connectors (Starter relay circuit is open or shorted.)• IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-78, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353147

1.CHECK BCM POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
BCM					
Connector	Terminal				
M121	52	Ground	Selector lever (A/T models)	N or P position	12
				Other than above	0
			Clutch pedal (M/T models)	Depressed	Battery voltage
				Not depressed	0

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 2.

B2608 STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

2.CHECK STARTER RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E6	46	M121	52	Existed

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E6	46		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
NO >> Repair or replace harness.

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

SEC

B2609 STEERING STATUS

< DTC/CIRCUIT DIAGNOSIS >

B2609 STEERING STATUS

Description

INFOID:000000006353148

There are 2 switches in the steering lock unit (steering lock/unlock switch 1 and 2). BCM compares the 2 switch conditions to judge the present steering status.

DTC Logic

INFOID:000000006353149

DTC DETECTION LOGIC

NOTE:

- If DTC B2609 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2609 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2609	STEERING STATUS	BCM detects the malfunction of steering lock unit switches for 1 second.	<ul style="list-style-type: none">• Harness or connectors [Steering lock unit circuit (BCM side) is open or shorted]• Harness or connectors [Steering lock unit circuit (IPDM E/R side) is open or shorted]• Steering lock unit• IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE-1

1. Turn ignition switch ON under the following conditions.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-80, "Diagnosis Procedure"](#).
NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-2

1. Turn ignition switch ON.
2. Turn ignition switch OFF.
3. Press driver side door switch and wait 1second or more.
4. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-80, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353150

1.INSPECTION START

Perform inspection in accordance with procedure that confirms DTC.

Which procedure confirms DTC?

- DTC confirmation procedure 1>>>GO TO 2.
DTC confirmation procedure 2>>>GO TO 6.

B2609 STEERING STATUS

< DTC/CIRCUIT DIAGNOSIS >

2.CHECK BCM OUTPUT SIGNAL-1

1. Turn ignition switch OFF.
2. Disconnect steering lock unit connector and IPDM E/R connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Steering lock unit			
Connector	Terminal		
M40	3	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK STEERING LOCK UNIT CIRCUIT-1

1. Disconnect BCM connector.
2. Check continuity between steering lock unit harness connector and BCM harness connector.

Steering lock unit		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M40	3	M122	97	Existed

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	3		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

NO >> Repair or replace harness.

4.CHECK IPDM E/R OUTPUT SIGNAL-1

1. Connect IPDM E/R connector.
2. Disconnect BCM connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Steering lock unit			
Connector	Terminal		
M40	3	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace steering lock unit.

NO >> GO TO 5.

5.CHECK STEERING LOCK UNIT CIRCUIT-2

1. Disconnect IPDM E/R connector.
2. Check continuity between steering lock unit harness connector and IPDM E/R harness connector.

Steering lock unit		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M40	3	E5	32	Existed

3. Check continuity between steering lock unit harness connector and ground.

B2609 STEERING STATUS

< DTC/CIRCUIT DIAGNOSIS >

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	3		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).

NO >> Repair or replace harness.

6.CHECK BCM OUTPUT SIGNAL-2

1. Turn ignition switch OFF.
2. Disconnect steering lock unit connector and IPDM E/R connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Steering lock unit			
Connector	Terminal		
M40	8	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

7.CHECK STEERING LOCK UNIT CIRCUIT-3

1. Disconnect BCM connector.
2. Check continuity between steering lock unit harness connector and BCM harness connector.

Steering lock unit		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M40	8	M122	98	Existed

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	8		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

NO >> Repair or replace harness.

8.CHECK IPDM E/R OUTPUT SIGNAL-2

1. Connect IPDM E/R connector.
2. Disconnect BCM connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Steering lock unit			
Connector	Terminal		
M40	8	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace steering lock unit.

NO >> GO TO 9.

9.CHECK STEERING LOCK UNIT CIRCUIT-4

1. Disconnect IPDM E/R connector.
2. Check continuity between steering lock unit harness connector and IPDM E/R harness connector.

B2609 STEERING STATUS

< DTC/CIRCUIT DIAGNOSIS >

Steering lock unit		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M40	8	E5	33	Existed

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	8		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B260B STEERING LOCK UNIT

< DTC/CIRCUIT DIAGNOSIS >

B260B STEERING LOCK UNIT

Description

INFOID:000000006353151

The steering lock unit performs the check by itself according to the steering status.

DTC Logic

INFOID:000000006353152

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B260B	STEERING LOCK UNIT	BCM detects malfunctioning of steering lock unit before steering unlocking.	Steering lock unit

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Press the push-button ignition switch, when steering is locked.
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-84. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353153

1.INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" using CONSULT-III.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [SEC-84. "DTC Logic"](#).

Is the DTC B260B displayed again?

- YES >> Replace steering lock unit.
NO >> INSPECTION END

B260C STEERING LOCK UNIT

< DTC/CIRCUIT DIAGNOSIS >

B260C STEERING LOCK UNIT

Description

INFOID:000000006353154

The steering lock unit performs the check by itself according to the steering status.

DTC Logic

INFOID:000000006353155

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B260C	STEERING LOCK UNIT	BCM detects malfunctioning of steering lock unit before steering locking.	Steering lock unit

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Turn ignition switch OFF.
3. Press driver side door switch.
4. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-85, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353156

1.INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" using CONSULT-III.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [SEC-85, "DTC Logic"](#).

Is the DTC B260C displayed again?

- YES >> Replace steering lock unit.
NO >> INSPECTION END

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B260D STEERING LOCK UNIT

< DTC/CIRCUIT DIAGNOSIS >

B260D STEERING LOCK UNIT

Description

INFOID:000000006353157

The steering lock unit performs the check by itself according to the steering lock status (before lock, after lock and unlock).

DTC Logic

INFOID:000000006353158

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B260D	STEERING LOCK UNIT	BCM detects malfunctioning of steering lock unit after steering locking.	Steering lock unit

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Turn ignition switch OFF.
3. Press driver side door switch.
4. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-86, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353159

1.INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" using CONSULT-III.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [SEC-86, "DTC Logic"](#).

Is the DTC B260D displayed again?

- YES >> Replace steering lock unit.
NO >> INSPECTION END

B260F ENGINE STATUS

< DTC/CIRCUIT DIAGNOSIS >

B260F ENGINE STATUS

Description

INFOID:000000006353160

BCM receives the engine status signal from ECM via CAN communication.

DTC Logic

INFOID:000000006353161

DTC DETECTION LOGIC

NOTE:

- If DTC B260F is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B260F is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B260F	INTERRUPTION OF ENGINE STATUS SIGNAL	BCM has not yet received the engine status signal from ECM when ignition switch is in the ON position.	ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-87, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353162

SEC

1.INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" using CONSULT-III.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [SEC-87, "DTC Logic"](#).

Is the DTC B260F displayed again?

- YES >> GO TO 2.
NO >> GO TO 3.

2.REPLACE ECM

Replace ECM. Refer to [EC-17, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(ECM\) : Description"](#).

>> INSPECTION END

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

B26E8 CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

B26E8 CLUTCH INTERLOCK SWITCH

Description

INFOID:000000006353163

When clutch interlock switch turns ON, BCM detects that clutch pedal is being depressed and permits to start the engine.

DTC Logic

INFOID:000000006353164

NOTE:

If DTC B26E8 is displayed with DTC B210F, first perform the trouble diagnosis for DTC B210F. Refer to [SEC-114, "DTC Logic"](#).

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detection condition	Possible cause
B26E8	CLUTCH INTERLOCK SWITCH	Detects that ASCD cancel switch is in the ON position for 2 seconds or more while ignition switch and clutch interlock switch are ON.	<ul style="list-style-type: none">Clutch interlock switchHarness or connector (Clutch interlock switch circuit open or shorted)

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON under the following condition.
 - Shift lever is in the neutral position.
 - Depress clutch pedal.
- Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-88, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353165

1.CHECK CLUTCH INTERLOCK SWITCH POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect clutch interlock switch connector.
- Check voltage between clutch interlock switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Clutch interlock switch			
Connector	Terminal		
E111	1	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.
NO-1 >> Check 10 A fuse [No. 9, located in the fuse block (J/B)]
NO-2 >> Check harness for open or short between clutch interlock switch and fuse.

2.CHECK CLUTCH INTERLOCK SWITCH SIGNAL

- Connect clutch interlock switch connector.
- Disconnect BCM connector.
- Check voltage between BCM harness connector and ground.

B26E8 CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

(+)		(-)	Condition		Voltage (V) (Approx.)
BCM					
Connector	Terminal				
M123	114	Ground	Clutch pedal	Depressed	Battery voltage
				Not depressed	0

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

NO >> GO TO 3.

3.CHECK CLUTCH INTERLOCK SWITCH SIGNAL CIRCUIT

1. Disconnect clutch interlock switch connector.
2. Check continuity between clutch interlock switch harness connector and BCM harness connector.

Clutch interlock switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E111	2	M123	114	Existed

3. Check continuity between clutch interlock switch harness connector and ground.

Clutch interlock switch		Ground	Continuity
Connector	Terminal		
E111	2		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK CLUTCH INTERLOCK SWITCH

Refer to [SEC-89, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace clutch interlock switch. Refer to [CL-12, "Exploded View"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000006353166

1.CHECK CLUTCH INTERLOCK SWITCH

1. Turn ignition switch OFF.
2. Disconnect clutch interlock switch connector.
3. Check continuity between clutch interlock switch terminals.

Clutch interlock switch		Condition		Continuity
Terminal				
1	2	Clutch pedal	Depressed	Existed
			Not depressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace clutch interlock switch. Refer to [CL-12, "Exploded View"](#).

B26E9 STEERING STATUS

< DTC/CIRCUIT DIAGNOSIS >

B26E9 STEERING STATUS

Description

INFOID:000000006353167

There are 2 switches in the steering lock unit (steering lock/unlock switch 1 and 2). BCM compares the 2 switch conditions to judge the present steering status.

DTC Logic

INFOID:000000006353168

DTC DETECTION LOGIC

NOTE:

If DTC B26E9 is displayed with DTC B2609, first perform the trouble diagnosis for DTC B2609. Refer to [SEC-80, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26E9	S/L STATUS	BCM requests lock to steering lock unit, then steering lock unit transmits a recognition signal to BCM, but steering lock unit remains unlocked.	Steering lock unit

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Turn ignition switch OFF.
3. Press driver side door switch and wait 1 second or more.
4. Turn ignition switch ON.
5. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Refer to [SEC-90, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353169

1.INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" using CONSULT-III.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure.
Refer to [SEC-90, "DTC Logic"](#).

Is the DTC B26E9 displayed again?

- YES >> GO TO 2.
NO >> GO TO 3.

2.REPLACE STEERING LOCK UNIT

1. Replace steering lock unit.
2. Perform DTC confirmation procedure. Refer to [SEC-90, "DTC Logic"](#).

Is the DTC B26E9 displayed again?

- YES >> GO TO 3.
NO >> INSPECTION END

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

B26EA KEY REGISTRATION

< DTC/CIRCUIT DIAGNOSIS >

B26EA KEY REGISTRATION

Description

INFOID:000000006353170

When the registered Intelligent Key is carried, the door lock/unlock operation and the push-button ignition switch operation become possible.

DTC Logic

INFOID:000000006353171

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26EA	KEY REGISTRATION	Intelligent Key is not registered successfully.	<ul style="list-style-type: none">Improper registration operationIntelligent KeyBCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Perform initialization using CONSULT-III. Reregister all Intelligent Keys.
For initialization and registration of Intelligent Key, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-91. "Diagnosis Procedure"](#)
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353172

1.PERFORM INITIALIZATION

1. Perform initialization using CONSULT-III. Reregister all Intelligent Keys.
For initialization and registration of Intelligent Key, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> GO TO 2.
NO >> INSPECTION END

2.REPLACE INTELLIGENT KEY

1. Replace Intelligent Key. Reregister all Intelligent Keys
2. Perform initialization using CONSULT-III. For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".
3. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).
NO >> INSPECTION END

B2612 STEERING STATUS

< DTC/CIRCUIT DIAGNOSIS >

B2612 STEERING STATUS

Description

INFOID:000000006353173

There are 2 switches in the steering unit. IPDM E/R compares the 2 switch conditions to judge the present steering status and transmits the result to BCM via CAN communication.

DTC Logic

INFOID:000000006353174

DTC DETECTION LOGIC

NOTE:

- If DTC B2612 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2612 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Self-diagnosis name	DTC detecting condition	Possible causes
B2612	STEERING STATUS	BCM detects the difference between the following status for 1 second <ul style="list-style-type: none">• Steering lock or unlock• Feedback of steering lock status from IPDM E/R (CAN)	<ul style="list-style-type: none">• Harness or connectors [Steering lock unit circuit (BCM side) is open or shorted]• Harness or connectors [Steering lock unit circuit (IPDM E/R side) is open or shorted]• Steering lock unit• IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE-1

1. Turn ignition switch ON under the following conditions.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-92, "Diagnosis Procedure"](#).
NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-2

1. Turn ignition switch ON.
2. Turn ignition switch OFF.
3. Press door switch.
4. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-92, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353175

1.INSPECTION START

Perform inspection in accordance with procedure that confirms DTC.

Which procedure confirms DTC?

- DTC confirmation procedure 1>>GO TO 2.
DTC confirmation procedure 2>>GO TO 6.

2.CHECK BCM OUTPUT SIGNAL-1

B2612 STEERING STATUS

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect steering lock unit connector and IPDM E/R connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Steering lock unit			
Connector	Terminal		
M40	3	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK STEERING LOCK UNIT CIRCUIT-1

1. Disconnect BCM connector.
2. Check continuity between steering lock unit harness connector and BCM harness connector.

Steering lock unit		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M40	3	M122	97	Existed

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	3		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

NO >> Repair or replace harness.

4.CHECK IPDM E/R OUTPUT SIGNAL-1

1. Connect IPDM E/R connector.
2. Disconnect BCM connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Steering lock unit			
Connector	Terminal		
M40	3	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace steering lock unit.

NO >> GO TO 5.

5.CHECK STEERING LOCK UNIT CIRCUIT-2

1. Disconnect IPDM E/R connector.
2. Check continuity between steering lock unit harness connector and IPDM E/R harness connector.

Steering lock unit		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M40	3	E5	32	Existed

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	3		Not existed

B2612 STEERING STATUS

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
NO >> Repair or replace harness.

6.CHECK BCM OUTPUT SIGNAL-2

1. Turn ignition switch OFF.
2. Disconnect steering lock unit connector and IPDM E/R connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Steering lock unit			
Connector	Terminal		
M40	8	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 8.
NO >> GO TO 7.

7.CHECK STEERING LOCK UNIT CIRCUIT-3

1. Disconnect BCM connector.
2. Check continuity between steering lock unit harness connector and BCM harness connector.

Steering lock unit		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M40	8	M122	98	Existed

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	8		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
NO >> Repair or replace harness.

8.CHECK IPDM E/R OUTPUT SIGNAL-2

1. Connect IPDM E/R connector.
2. Disconnect BCM connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Steering lock unit			
Connector	Terminal		
M40	8	Ground	Battery voltage

Is the inspection result normal?

- YES >> Replace steering lock unit.
NO >> GO TO 9.

9.CHECK STEERING LOCK UNIT CIRCUIT-4

1. Disconnect IPDM E/R connector.
2. Check continuity between steering lock unit harness connector and IPDM E/R harness connector.

Steering lock unit		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M40	8	E5	33	Existed

B2612 STEERING STATUS

< DTC/CIRCUIT DIAGNOSIS >

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	8		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).

NO >> Repair or replace harness.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

B2617 STARTER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

B2617 STARTER RELAY CIRCUIT

Description

INFOID:000000006353176

Located in IPDM E/R, the starter relay runs the starter motor. The starter relay is turned ON by the BCM when the ignition switch is in the START position. IPDM E/R transmits the starter relay ON signal to BCM via CAN communication.

DTC Logic

INFOID:000000006353177

DTC DETECTION LOGIC

NOTE:

- If DTC B2617 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B2617 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).
- If DTC B2617 is displayed with DTC B210E for IPDM E/R, first perform the trouble diagnosis for DTC B210E. Refer to [SEC-112, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2617	STARTER RELAY CIRCUIT	An immediate operation of starter relay is requested by BCM, but there is no response for more than 1 second.	<ul style="list-style-type: none">• Harness or connectors (Starter relay circuit is open or shorted.)• IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-96, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353178

1.CHECK STARTER RELAY

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
BCM					
Connector	Terminal				
M121	52	Ground	Selector lever (A/T models)	N or P position	12
				Other than above	0
			Clutch pedal (M/T models)	Depressed	Battery voltage
				Not depressed	0

Is the measurement value within the specification.

- YES >> GO TO 3.
NO >> GO TO 2.

B2617 STARTER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

2.CHECK STARTER RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E6	46	M121	52	Existed

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E6	46		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
NO >> Repair or replace harness.

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

SEC

B2619 BCM

< DTC/CIRCUIT DIAGNOSIS >

B2619 BCM

Description

INFOID:000000006353179

BCM requests IPDM E/R to supply power to steering lock unit. After receiving the power, the steering lock unit transmits an ON signal to BCM.

DTC Logic

INFOID:000000006353180

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2619	BCM	BCM detects a discrepancy between the power supplied to the steering lock unit and the feedback for one second or more.	BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-98. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353181

1.INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" using CONSULT-III.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [SEC-98. "DTC Logic"](#).

Is the DTC B2619 displayed again?

- YES >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).
NO >> INSPECTION END

B261E VEHICLE TYPE

< DTC/CIRCUIT DIAGNOSIS >

B261E VEHICLE TYPE

Description

INFOID:000000006353182

There are two types of vehicles.

- HEV
- Conventional

DTC Logic

INFOID:000000006353183

DTC DETECTION LOGIC

NOTE:

- If DTC B261E is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "BCM : DTC Logic"](#).
- If DTC B261E is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-35, "BCM : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B261E	VEHICLE TYPE	Difference of BCM configuration.	BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-99, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353184

1.INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" using CONSULT-III.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [SEC-99, "DTC Logic"](#).

Is the 1st trip DTC B261E displayed again?

- YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
NO >> INSPECTION END

B261F ASCD CLUTCH SWITCH

< DTC/CIRCUIT DIAGNOSIS >

B261F ASCD CLUTCH SWITCH

Description

INFOID:000000006353185

BCM judges that clutch pedal is operated by clutch interlock switch and clutch pedal position switch operation.

DTC Logic

INFOID:000000006353186

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detection condition	Possible cause
B261F	ASCD CNCL/CLTH SW	When ignition switch is ON and vehicle speed is 40 km/h, BCM detects that clutch pedal position switch is ON for 10 seconds or more.	<ul style="list-style-type: none">• Harness or connector (ASCD clutch switch circuit open or shorted)• Clutch pedal position switch• BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Drive the vehicle at the vehicle speed of 40 km/h (24.8 MPH) or more wait 10 seconds or more.
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-100, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353187

1.CHECK CLUTCH PEDAL POSITION SWITCH POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect clutch pedal position switch connector.
3. Turn ignition switch ON.
4. Check voltage between clutch pedal position switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Clutch pedal position switch			
Connector	Terminal		
E108	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.
NO-1 >> Check 10 A fuse [No. 3, located in the fuse block (J/B)]
NO-2 >> Check harness for open or short between clutch pedal position switch and fuse.

2.CHECK CLUTCH PEDAL POSITION SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Connect clutch pedal position switch connector.
3. Disconnect BCM connector.
4. Turn ignition switch ON.
5. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
BCM					
Connector	Terminal				
M122	99	Ground	Clutch pedal	Depressed	0
				Not depressed	Battery voltage

Is the inspection result normal?

B261F ASCD CLUTCH SWITCH

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).
NO >> GO TO 3.

3.CHECK CLUTCH PEDAL POSITION SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect clutch pedal position switch connector.
3. Check continuity between clutch pedal position switch harness connector and BCM harness connector.

Clutch pedal position switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E108	2	M122	99	Existed

4. Check continuity between clutch pedal position switch harness connector and ground.

Clutch pedal position switch		Ground	Continuity
Connector	Terminal		
E108	2		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace harness.

4.CHECK CLUTCH PEDAL POSITION SWITCH

Refer to [SEC-101. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Replace clutch pedal position switch. Refer to [CL-12. "Exploded View"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000006353188

SEC

1.CHECK CLUTCH PEDAL POSITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect clutch pedal position switch connector.
3. Check continuity between clutch pedal position switch terminals.

Clutch pedal position switch		Condition		Continuity
Terminal				
1	2	Clutch pedal	Depressed	Not existed
			Not depressed	Existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace clutch pedal position switch. Refer to [CL-12. "Exploded View"](#).

B2108 STEERING LOCK RELAY

< DTC/CIRCUIT DIAGNOSIS >

B2108 STEERING LOCK RELAY

Description

INFOID:000000006353189

The steering lock relay ON signal is transmitted to IPDM E/R by BCM via CAN communication. IPDM E/R turns the steering lock relay ON and transmits the release of the steering to BCM.

DTC Logic

INFOID:000000006353190

DTC DETECTION LOGIC

NOTE:

If DTC B2108 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "IPDM E/R : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2108	STRG LCK RELAY ON	IPDM E/R detects that the relay is stuck in the ON position for about 1 second even if the IPDM E/R receives steering lock relay ON/OFF signal from BCM.	IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-102, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353191

1.CHECK STEERING LOCK RELAY

Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
IPDM E/R					
Connector	Terminal				
E5	11	Ground	Ignition switch OFF	A few seconds after opening the driver door	Battery voltage
			Ignition switch LOCK	Press the push-button ignition switch	Battery voltage
			Ignition switch ACC or ON		0

Is the inspection normal?

- YES >> GO TO 2.
NO >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).

2.CHECK STEERING LOCK RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and steering lock unit connector.
3. Check continuity IPDM E/R harness connector and steering lock unit harness connector.

B2108 STEERING LOCK RELAY

< DTC/CIRCUIT DIAGNOSIS >

IPDM E/R		Steering lock unit		Continuity
Connector	Terminal	Connector	Terminal	
E5	11	M40	1	Existed

4. Check continuity IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	11		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

SEC

B2109 STEERING LOCK RELAY

< DTC/CIRCUIT DIAGNOSIS >

B2109 STEERING LOCK RELAY

Description

INFOID:000000006353192

The steering lock relay ON signal is transmitted to IPDM E/R by BCM via CAN communication. IPDM E/R turns the steering lock relay ON and transmits the release of the steering to BCM.

DTC Logic

INFOID:000000006353193

DTC DETECTION LOGIC

NOTE:

- If DTC B2109 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "IPDM E/R : DTC Logic"](#).
- When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the DTC B2109 may be detected.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2109	STRG LCK RELAY OFF	IPDM E/R detects that the relay is stuck in the OFF position for about 1 second even if the IPDM E/R receives steering lock relay ON/OFF signal from BCM.	<ul style="list-style-type: none">• Harness or connector (Power supply circuit)• IPDM E/R• Battery

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-104, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353194

1.CHECK POWER SUPPLY CIRCUIT

Check IPDM E/R power supply circuit. Refer to [SEC-118, "IPDM E/R : Diagnosis Procedure"](#).

Is the circuit normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning part.

2.CHECK FUSE

1. Turn ignition switch OFF.
2. Check 10A fuse (No. 48, located in IPDM E/R).

Is the inspection normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

B210A STEERING LOCK CONDITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

B210A STEERING LOCK CONDITION SWITCH

Description

INFOID:000000006353195

There are 2 switches in the steering unit. IPDM E/R compares the 2 switch conditions to judge the present steering status and transmits the result to BCM via CAN communication.

DTC Logic

INFOID:000000006353196

DTC DETECTION LOGIC

NOTE:

If DTC B210A is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "IPDM E/R : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210A	STRG LCK STATE SW	IPDM E/R detects the difference between steering condition switches 1 and 2 for 1 second.	<ul style="list-style-type: none">• Harness or connectors [Steering lock unit circuit (BCM side) is open or shorted]• Harness or connectors [Steering lock unit circuit (IPDM E/R side) is open or shorted]• Steering lock unit• IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE-1

1. Turn ignition switch ON under the following conditions and wait 1 second or more.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-105, "Diagnosis Procedure"](#).

NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-2

1. Turn ignition switch ON.
2. Turn ignition switch OFF.
3. Press driver side door switch and wait 1 second or more.
4. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-105, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353197

1.INSPECTION START

Perform inspection in accordance with procedure that confirms DTC.

Which procedure confirms DTC?

DTC confirmation procedure 1>>GO TO 2.

DTC confirmation procedure 2>>GO TO 6.

2.CHECK BCM OUTPUT SIGNAL-1

1. Turn ignition switch OFF.

B210A STEERING LOCK CONDITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect steering lock unit connector and IPDM E/R connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Steering lock unit			
Connector	Terminal		
M40	3	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK STEERING LOCK UNIT CIRCUIT-1

1. Disconnect BCM connector.
2. Check continuity between steering lock unit harness connector and BCM harness connector.

Steering lock unit		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M40	3	M122	97	Existed

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	3		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

NO >> Repair or replace harness.

4.CHECK IPDM E/R OUTPUT SIGNAL-1

1. Connect IPDM E/R connector.
2. Disconnect BCM connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Steering lock unit			
Connector	Terminal		
M40	3	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace steering lock unit.

NO >> GO TO 5.

5.CHECK STEERING LOCK UNIT CIRCUIT-2

1. Disconnect IPDM E/R connector.
2. Check continuity between steering lock unit harness connector and IPDM E/R harness connector.

Steering lock unit		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M40	3	E5	32	Existed

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	3		Not existed

B210A STEERING LOCK CONDITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
NO >> Repair or replace harness.

6.CHECK BCM OUTPUT SIGNAL-2

1. Turn ignition switch OFF.
2. Disconnect steering lock unit connector and IPDM E/R connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Steering lock unit			
Connector	Terminal		
M40	8	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 8.
NO >> GO TO 7.

7.CHECK STEERING LOCK UNIT CIRCUIT-3

1. Disconnect BCM connector.
2. Check continuity between steering lock unit harness connector and BCM harness connector.

Steering lock unit		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M40	8	M122	98	Existed

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	8		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
NO >> Repair or replace harness.

8.CHECK IPDM E/R OUTPUT SIGNAL-2

1. Connect IPDM E/R connector.
2. Disconnect BCM connector.
3. Check voltage between steering lock unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Steering lock unit			
Connector	Terminal		
M40	8	Ground	Battery voltage

Is the inspection result normal?

- YES >> Replace steering lock unit.
NO >> GO TO 9.

9.CHECK STEERING LOCK UNIT CIRCUIT-4

1. Disconnect IPDM E/R connector.
2. Check continuity between steering lock unit harness connector and IPDM E/R harness connector.

Steering lock unit		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M40	8	E5	33	Existed

B210A STEERING LOCK CONDITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

3. Check continuity between steering lock unit harness connector and ground.

Steering lock unit		Ground	Continuity
Connector	Terminal		
M40	8		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
NO >> Repair or replace harness.

B210B STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

B210B STARTER CONTROL RELAY

Description

INFOID:000000006353198

Starter control relay, integrated in IPDM E/R, permits the starter relay operation when in the N or P position and the steering is locked or unlocked (models with steering lock unit). It is installed parallel to the starter relay.

DTC Logic

INFOID:000000006353199

DTC DETECTION LOGIC

NOTE:

If DTC B210B is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "IPDM E/R : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210B	START CONT RLY ON	IPDM E/R detects that the relay is stuck in the ON position even if the following conditions are met for about 1 second. <ul style="list-style-type: none">• Starter control relay ON/OFF signal from BCM• Transmission range switch input signal	IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to start under the following conditions and wait 1 second or more.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-109, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353200

1.INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" for IPDM E/R using CONSULT-III.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [SEC-109, "DTC Logic"](#).

Is the DTC B210B displayed again?

- YES >> Replace IPDM E/R. Refer [PCS-35, "Removal and Installation"](#).
NO >> INSPECTION END

B210C STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

B210C STARTER CONTROL RELAY

Description

INFOID:000000006353201

Starter control relay, integrated in IPDM E/R, permits the starter relay operation when in the N or P position and the steering is locked or unlocked (models with steering lock unit). It is installed parallel to the starter relay.

DTC Logic

INFOID:000000006353202

DTC DETECTION LOGIC

NOTE:

- If DTC B210C is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "IPDM E/R : DTC Logic"](#).
- When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the DTC B210C may be detected.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210C	START CONT RLY OFF	IPDM E/R detects that the relay is stuck in the OFF position even if the following conditions are met for about 1 second. <ul style="list-style-type: none">• Starter control relay ON/OFF signal from BCM• Transmission range switch input signal	<ul style="list-style-type: none">• IPDM E/R• Battery

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to start under the following conditions and wait 1 second or more.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-110, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353203

1.INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" for IPDM E/R using CONSULT-III.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [SEC-110, "DTC Logic"](#).

Is the DTC B210C displayed again?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
NO >> INSPECTION END

B210D STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

B210D STARTER RELAY

Description

INFOID:000000006353204

Located in IPDM E/R, the starter relay runs the starter motor. The starter relay is turned ON by the BCM when the ignition switch is in the START position. IPDM E/R transmits the starter relay ON signal to BCM via CAN communication.

DTC Logic

INFOID:000000006353205

DTC DETECTION LOGIC

NOTE:

- If DTC B210D is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "IPDM E/R : DTC Logic"](#).
- If DTC B210D is displayed with DTC B2617, first perform the trouble diagnosis for DTC B2617. Refer to [SEC-96, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210D	STARTER RELAY ON	IPDM E/R detects that the relay is stuck in the ON position even if the following conditions are met for about 1 second. <ul style="list-style-type: none">• Starter control relay ON/OFF signal from BCM• Transmission range switch input	IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait for 1 second or more.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-111, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353206

1.INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" for IPDM E/R using CONSULT-III.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [SEC-111, "DTC Logic"](#).

Is the DTC B210D displayed again?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
NO >> INSPECTION END

B210E STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

B210E STARTER RELAY

Description

INFOID:000000006353207

Located in IPDM E/R, the starter relay runs the starter motor. The starter relay is turned ON by the BCM when the ignition switch is in the START position. IPDM E/R transmits the starter relay ON signal to BCM via CAN communication.

DTC Logic

INFOID:000000006353208

DTC DETECTION LOGIC

NOTE:

- If DTC B210E is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "IPDM E/R : DTC Logic"](#).
- If DTC B210E is displayed with DTC B2110 for IPDM E/R, first perform the trouble diagnosis for DTC B2110. Refer to [SEC-116, "DTC Logic"](#).
- When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the DTC B210F may be detected.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210E	STARTER RELAY OFF	IPDM E/R detects that the relay is stuck in the OFF position even if the following conditions are met for about 1 second. <ul style="list-style-type: none">• Starter control relay ON/OFF signal from BCM• Transmission range switch input	<ul style="list-style-type: none">• IPDM E/R• Battery

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-112, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353209

1.CHECK STARTER RELAY OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
BCM					
Connector	Terminal				
M121	52	Ground	Selector lever (A/T models)	P or N position	12
				Other than above	0
			Clutch pedal (M/T models)	Depressed	Battery voltage
				Not depressed	0

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

B210E STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

2. CHECK STARTER RELAY OUTPUT SIGNAL CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between BCM harness connector and IPDM E/R harness connector.

BCM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M121	52	E6	46	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M121	52		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).
NO >> Repair or replace harness.

3. CHECK STARTER RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
E5	36	Ground	Battery voltage

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).
NO >> Check harness for open or short between IPDM E/R and battery. Refer to [SEC-206. "Wiring Diagram - IPDM E/R -"](#).

SEC

B210F PNP/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

B210F PNP/CLUTCH INTERLOCK SWITCH

Description

INFOID:000000006353210

IPDM E/R confirms the shift position with the following signals.

- Transmission range switch
- Shift position signal from BCM (CAN)

DTC Logic

INFOID:000000006353211

DTC DETECTION LOGIC

NOTE:

If DTC B210F is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "IPDM E/R : DTC Logic"](#)

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210F	INTER LOCK/PNP SW ON	IPDM E/R detects the difference between the signals below for 1 second or more. <ul style="list-style-type: none">• Transmission range switch input signal• Shift position signal from BCM (CAN)	<ul style="list-style-type: none">• Harness or connectors (Transmission range switch circuit is open or shorted)• Transmission range switch• IPDM E/R• BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

YES >> Go to [SEC-114, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353212

1.CHECK DTC WITH BCM

Check "Self-diagnostic result" using CONSULT-III. Refer to [SEC-196, "DTC Index"](#).

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2.CHECK TRANSMISSION RANGE SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Turn ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
IPDM E/R					
Connector	Terminal				
E5	30	Ground	Selector lever (A/T models)	N or P position	Battery voltage
				Other than above	0
			Clutch pedal (M/T models)	Depressed	Battery voltage
				Not depressed	0

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).

B210F PNP/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 3.

3. CHECK TRANSMISSION RANGE SWITCH SIGNAL CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E5	30	M123	140	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	30		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
NO >> Repair or replace harness.

SEC

B2110 PNP/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

B2110 PNP/CLUTCH INTERLOCK SWITCH

Description

INFOID:000000006353213

IPDM E/R confirms the shift position with the following signals.

- Transmission range switch
- Shift position signal from BCM (CAN)

DTC Logic

INFOID:000000006353214

DTC DETECTION LOGIC

NOTE:

If DTC B2110 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-33, "IPDM E/R : DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2110	INTER LOCK/PNP SW	IPDM E/R detects the difference between the signals below for 1 second or more. <ul style="list-style-type: none">• Transmission range switch input signal• Shift position signal from BCM (CAN)	<ul style="list-style-type: none">• Harness or connectors (Transmission range switch circuit is open or shorted)• Transmission range switch• IPDM E/R• BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the ignition switch ON under the following conditions and wait 1 second or more.

A/T models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnostic result" using CONSULT-III.

Is DTC detected?

- YES >> Go to [SEC-116, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000006353215

1.CHECK DTC WITH BCM

Check "Self-diagnostic result" using CONSULT-III. Refer to [SEC-196, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2.CHECK TRANSMISSION RANGE SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Turn ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

B2110 PNP/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

(+)		(-)	Condition		Voltage (V) (Approx.)
IPDM E/R					
Connector	Terminal				
E5	30	Ground	Selector lever (A/T models)	N or P position	Battery voltage
				Other than above	0
			Clutch pedal (M/T models)	Depressed	Battery voltage
				Not depressed	0

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).

NO >> GO TO 3.

3. CHECK TRANSMISSION RANGE SWITCH SIGNAL CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E5	30	M123	140	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	30		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

NO >> Repair or replace harness.

SEC

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:000000006353216

1.CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	K
	10

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground Battery voltage
Connector	Terminal	
M118	1	
M119	11	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

IPDM E/R

IPDM E/R : Diagnosis Procedure

INFOID:000000006353217

1.CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
Battery power supply	C
	50
	51

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

Terminals			Voltage (Approx.)
(+)		(-)	
IPDM E/R			
Connector	Terminal	Ground	Battery voltage
E4	1		

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	12		Existed
E6	41		

Does continuity exist?

YES >> INSPECTION END

NO >> Repair the harness or connector.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

KEY SLOT

< DTC/CIRCUIT DIAGNOSIS >

KEY SLOT

Description

INFOID:000000006353218

When the Intelligent Key battery is discharged, it performs the NVIS (NATS) ID verification between the integrated transponder and BCM by inserting the Intelligent Key into the key slot, and then the engine can be started.

Component Function Check

INFOID:000000006353219

1.CHECK FUNCTION

1. Remove Intelligent Key battery from Intelligent Key.
2. Change power supply position when Intelligent Key insert into key slot and then press push-button ignition switch.

Is the inspection result normal?

- YES >> Key slot function is normal.
NO >> Go to [SEC-120, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000006353220

1.CHECK KEY SLOT POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect key slot connector.
3. Check voltage between key slot harness connector and ground.

(+) Key slot		(-)	Voltage (V) (Approx.)
Connector	Terminal		
M22	1	Ground	Battery voltage
	5		

Is the inspection result normal?

- YES >> GO TO 2.
NO-1 >> Check 10 A fuse [No. 6 and 9 located in the fuse block (J/B)].
NO-2 >> Check harness for open or short between key slot and fuse.

2.CHECK KEY SLOT GROUND CIRCUIT

Check continuity between key slot harness connector and ground.

Key slot		Ground	Continuity
Connector	Terminal		
M22	7		Existed

Is the inspection result normal?

- YES >> Replace key slot. Refer to [SEC-224, "Removal and Installation"](#).
NO >> Repair or replace harness.

KEY SLOT INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

KEY SLOT INDICATOR

Description

INFOID:000000006353221

Blinks when Intelligent Key insertion is required.

Component Function Check

INFOID:000000006353222

1.CHECK FUNCTION

Check key slot illumination ("KEY SLOT ILLUMI") Active Test mode.

Is the inspection result normal?

YES >> Key slot function is normal.

NO >> Refer to [SEC-121, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000006353223

1.CHECK KEY SLOT INDICATOR OUTPUT SIGNAL

Check voltage between key slot harness connector and ground.

Key slot		(–)	Condition	Key slot illumination	Voltage (V) (Approx.)
(+)					
Connector	Terminal				
M22	6	Ground	Insert Intelligent Key into key slot	OFF	Battery voltage
			Remove Intelligent Key from key slot	ON	0

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 2.

2.CHECK KEY SLOT POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect key slot connector.
3. Check voltage between key slot harness connector and ground.

Key slot		(-)	Voltage (V) (Approx.)
(+)			
Connector	Terminal		
M22	1	Ground	Battery voltage
	5		

Is the inspection result normal?

YES >> GO TO 3.

NO-1 >> Check 10 A fuse [No. 6 and 9 located in the fuse block (J/B)].

NO-2 >> Check harness for open or short between key slot and fuse.

3.CHECK KEY SLOT GROUND CIRCUIT

Check continuity between key slot harness connector and ground.

Key slot		Ground	Continuity
Connector	Terminal		
M22	7		
			Existed

Is the inspection result normal?

YES >> GO TO 4.

KEY SLOT INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace key slot ground circuit.

4.CHECK KEY SLOT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and key slot harness connector.

BCM		Key slot		Continuity
Connector	Terminal	Connector	Terminal	
M122	92	M22	6	Existed

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M122	92		Not existed

Is the inspection result normal?

YES >> Replace key slot. Refer to [SEC-224, "Removal and Installation"](#).

NO >> Repair or replace harness.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

HOOD SWITCH

Description

INFOID:000000006353224

Hood switch is built into hood lock (RH) and connected to IPDM E/R which detects the open/close condition of hood.

Component Function Check

INFOID:000000006353225

1.CHECK FUNCTION

1. Select "HOOD SW" in the "Data Monitor" mode using CONSULT-III.
2. Check the hood switch signal under the following condition.

Test item	Condition		Status
HOOD SW	Hood	Open	ON
		Close	OFF

Is the indication normal?

- YES >> Hood switch is normal.
NO >> Go to [SEC-123. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000006353226

1.CHECK HOOD SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect hood switch connector.
3. Check voltage between hood switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Hood switch			
Connector	Terminal		
E30	2	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK HOOD SWITCH CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and hood switch harness connector.

IPDM E/R		Hood switch		Continuity
Connector	Terminal	Connector	Terminal	
E9	104	E30	2	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E9	104		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).
NO >> Repair or replace harness.

3.CHECK HOOD SWITCH GROUND CIRCUIT

Check continuity between hood switch harness connector and ground.

HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Hood switch		Ground	Continuity
Connector	Terminal		
E30	1		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK HOOD SWITCH

Refer to [SEC-124, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace hood lock (RH). Refer to [DLK-183, "Removal and Installation"](#) (Coupe models) or [DLK-384, "Removal and Installation"](#) (Roadster models).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000006353227

1.CHECK HOOD SWITCH

1. Turn ignition switch OFF.
2. Disconnect hood switch connector.
3. Check continuity between hood switch terminals.

Hood switch		Condition		Continuity
Terminal				
1	2	Hood switch	Pressed	Not existed
			Released	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace hood lock (RH). Refer to [DLK-183, "Removal and Installation"](#) (Coupe models) or [DLK-384, "Removal and Installation"](#) (Roadster models).

HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

HORN FUNCTION

Description

INFOID:000000006353228

Performs answer-back for each operation with horn.

Component Function Check

INFOID:000000006353229

1.CHECK FUNCTION

1. Use CONSULT-III to perform Active Test ("HORN").
2. Touch "ON" to check that it works normally.

Is the operation normal?

- YES >> Horn function is OK.
NO >> Refer to [SEC-125, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000006353230

1.CHECK HORN SWITCH

Check horn function with horn switch

Do the horns sound?

- YES >> GO TO 2.
NO >> Refer to [HRN-2, "Wiring Diagram - HORN -"](#).

2.CHECK HORN RELAY POWER SUPPLY

1. Turn ignition switch ON.
2. Perform "ACTIVE TEST" ("HORN") using CONSULT-III.
3. Check voltage between malfunctioning horn relay harness connector and ground.

(+)			(-)	Test item		Voltage (V) (Approx.)
Horn relay						
Connector		Terminal				
Low	E11	1	Ground	HORN	ON	Battery voltage → 0 → Battery voltage
High	E18	3			Other than above	Battery voltage

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 3.

3.CHECK HORN RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and horn relay.
3. Check continuity between IPDM E/R harness connector and malfunctioning horn relay terminal connector.

IPDM E/R		Horn relay		Continuity
Connector	Terminal	Connector	Terminal	
E6	44	E11	1	Existed
	45	E18	3	

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		Not existed
E6	44		
	45		

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).

HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

Is the inspection result normal?

>> INSPECTION END

SECURITY INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

SECURITY INDICATOR LAMP

Description

INFOID:000000006353231

- Security indicator lamp is located on combination meter.
- NVIS (Nissan Vehicle Immobilizer System) and vehicle security system conditions are indicated by blink or illumination of security indicator lamp.

Component Function Check

INFOID:000000006353232

1.CHECK FUNCTION

1. Perform "THEFT IND" in the "ACTIVE TEST" mode using CONSULT-III.
2. Check security indicator lamp operation.

Test item		Description	
THEFT IND	ON	Security indicator lamp	Illuminates
	OFF		Does not illuminate

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to [SEC-127, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000006353233

1.CHECK SECURITY INDICATOR LAMP POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check voltage between combination meter harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Combination meter			
Connector	Terminal		
M53	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.

NO-1 >> Check 10 A fuse [No. 11, located in the fuse block (J/B)].

NO-2 >> Check harness for open or short between combination meter and fuse.

2.CHECK SECURITY INDICATOR LAMP SIGNAL

1. Connect combination meter connector.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M123	141	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

NO >> GO TO 3.

3.CHECK COMBINATION METER CIRCUIT

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector and BCM harness connector.

SECURITY INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

Combination meter		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M54	28	M123	141	Existed

3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M54	28		Not existed

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-103, "Removal and Installation"](#).
NO >> Repair or replace harness.

KEY WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

KEY WARNING LAMP

Description

INFOID:0000000006353234

Performs operation method guide and warning together with buzzer.

Component Function Check

INFOID:0000000006353235

1.CHECK FUNCTION

Check the operation with "INDICATOR" in "Active Test" mode using CONSULT-III.

Test item	Condition	
INDICATOR	KEY ON	Key warning lamp illuminates
	KEY IND	Key warning lamp blinks

Is the inspection result normal?

- YES >> Key warning lamp in combination meter is normal.
NO >> Refer to [SEC-129, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000006353236

1.CHECK KEY WARNING LAMP

Refer to [DLK-122, "Diagnosis Procedure"](#) (Coupe models) or [DLK-322, "Diagnosis Procedure"](#) (Roadster models).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

SEC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION


< DTC/CIRCUIT DIAGNOSIS >

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

Wiring Diagram - INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION -

INFOID:000000006353237

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

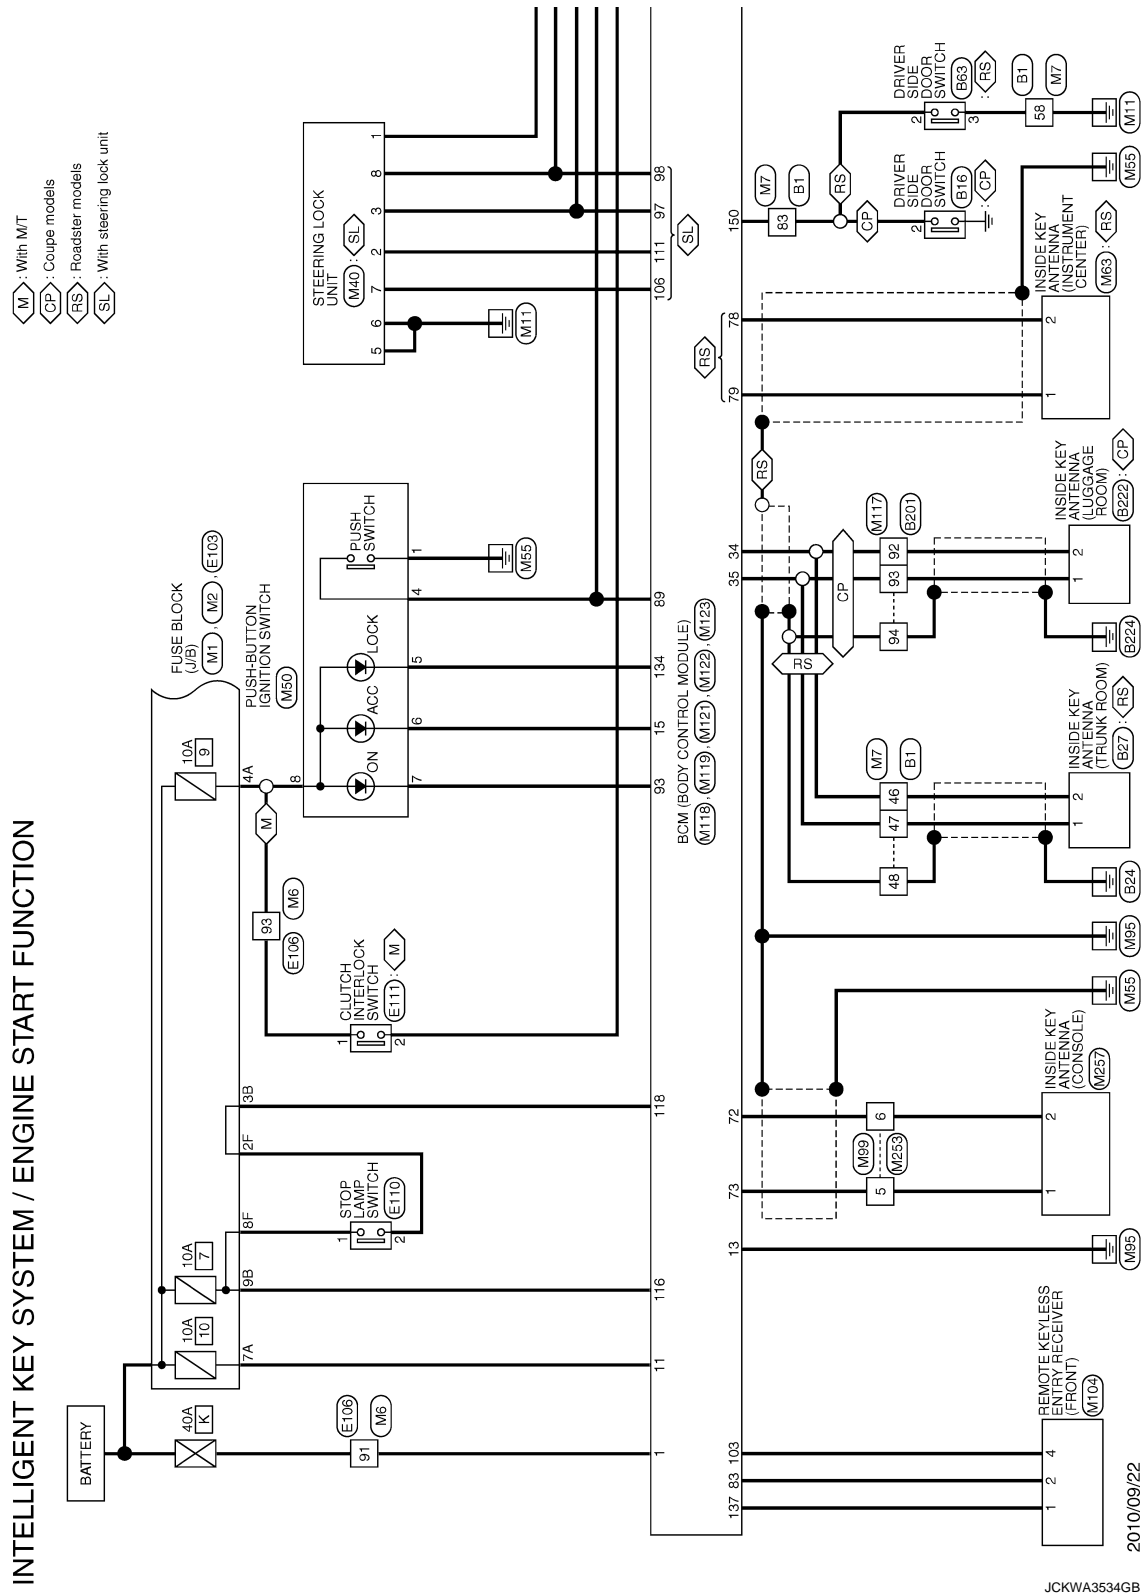


< DTC/CIRCUIT DIAGNOSIS >



A
B
C
D
E
F
G
H
I
J
SE
L
M
N
O
P

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

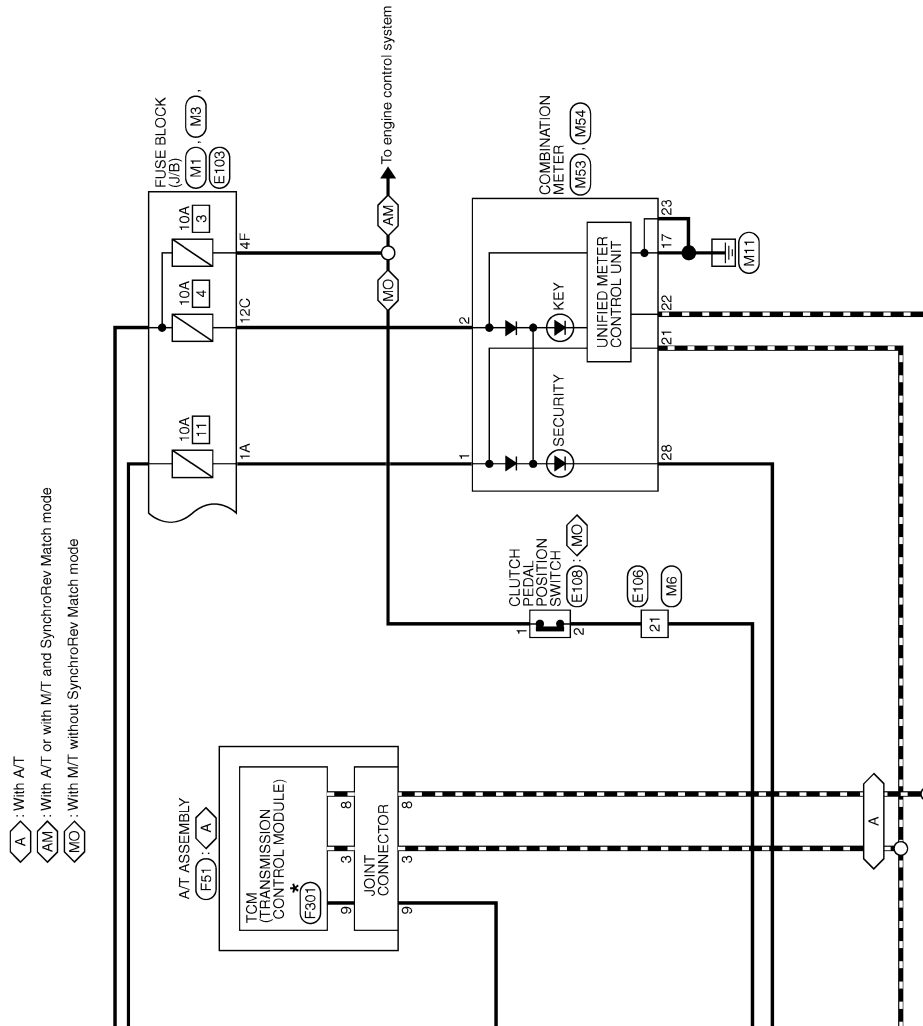


JCKWA3536GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION


Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	
2	BG	
3	Y	
4	W	
5	V	
6	LG	
7	GR	
8	SB	
9	Y	
10	W	
11	BR	
12	LG	
13	B	
14	V	
15	R	
16	B	
17	R	
18	B	
20	SB	
21	G	
22	GR	
23	V	
24	BG	
25	L	
26	P	
27	W	
28	SHIELD	
31	W	
32	B	
33	P	
34	W	
35	R	
36	B	
40	Y	
41	L	
42	GR	
43	BR	
44	R	

45	BG	-
46	SHIELD	- [Coupe models] - [Roadster models]
47	SB	-
48	Y	-
49	SHIELD	-
51	W	-
52	R	-
57	SHIELD	-
58	B	-
60	V	-
61	SB	-
62	SHIELD	-
63	BR	-
64	Y	-
65	SHIELD	-
66	P	-
67	L	-
68	SHIELD	-
69	R	-
70	G	-
71	V	-
72	P	-
73	BR	-
74	GR	-
75	BG	-
80	Y	-
81	R	-
82	B	-
83	GR	-
84	G	-
84	L	- [Coupe models] - [Roadster models]
85	LG	-
86	V	-
87	BR	-
88	GR	-
93	Y	-
94	L	- [Coupe models] - [Roadster models]
94	G	- [Coupe models] - [Roadster models]
95	GR	- [Coupe models] - [Roadster models]
96	L	-
97	Y	-
98	W	- [Coupe models] - [Roadster models]
98	Y/B	- [Coupe models] - [Roadster models]
99	LG	-
100	B	-

Connector No.	B18
Connector Name	DRIVER SIDE DOOR SWITCH
Connector Type	A33FW

 


Terminal No.	Color of Wire	Signal Name [Specification]
2	GR	-

Connector No.	B27
Connector Name	INSIDE KEY ANTENNA (TRUNK ROOM)
Connector Type	PK02FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	SB	-

Connector No.	B63
Connector Name	DRIVER SIDE DOOR SWITCH
Connector Type	A33FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	GR	-
3	B	-


JCKWA3537GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH00FW-CS16-TM44

 


Terminal No.	Color of Wire	Signal Name [Specification]
2	BR	- [Coupe models]
3	R	- [Roadster models]
4	G	- [Coupe models]
5	B	- [Roadster models]
6	Y	- [Coupe models]
7	R	- [Roadster models]
8	LG	- [Coupe models]
9	Y	- [Roadster models]
10	R	- [Coupe models]
11	G	- [Roadster models]
12	R	- [Coupe models]
13	B	- [Roadster models]
14	W	- [Coupe models]
15	V	- [Roadster models]
16	LG	- [Coupe models]
17	Y	- [Roadster models]
18	R	- [Coupe models]
19	G	- [Roadster models]
20	R	- [Coupe models]
21	B	- [Roadster models]
22	W	- [Coupe models]
23	P	- [Roadster models]
24	SB	- [Coupe models]
25	LG	- [Roadster models]
26	Y	- [Coupe models]
27	G	- [Roadster models]
28	R	- [Coupe models]
29	W	- [Roadster models]
30	B	- [Coupe models]
31	P	- [Roadster models]
32	L	- [Coupe models]
33	SHIELD	- [Roadster models]
34	BR	- [Coupe models]
35	Y	- [Roadster models]
36	SHIELD	- [Coupe models]
37	G	- [Roadster models]
38	P	- [Coupe models]
39	R	- [Roadster models]
40	L	- [Coupe models]
41	B	- [Roadster models]
42	W	- [Coupe models]
43	Y	- [Roadster models]
44	SB	- [Coupe models]
45	P	- [Roadster models]
46	L	- [Coupe models]
47	SHIELD	- [Roadster models]
48	BR	- [Coupe models]
49	Y	- [Roadster models]
50	SHIELD	- [Coupe models]
51	G	- [Roadster models]
52	R	- [Coupe models]
53	W	- [Roadster models]
54	V	- [Coupe models]
55	LG	- [Roadster models]
56	Y	- [Coupe models]
57	G	- [Roadster models]
58	P	- [Coupe models]
59	R	- [Roadster models]
60	L	- [Coupe models]
61	B	- [Roadster models]
62	W	- [Coupe models]
63	Y	- [Roadster models]
64	SB	- [Coupe models]
65	P	- [Roadster models]
66	LG	- [Coupe models]
67	V	- [Roadster models]
68	P	- [Coupe models]

Terminal No.	Color of Wire	Signal Name [Specification]
2	LG	-
3	B	-



Connector No.	B216
Connector Name	PASSENGER SIDE DOOR SWITCH
Connector Type	A03FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	LG	-




Connector No.	B222
Connector Name	INSIDE KEY ANTENNA (LUGGAGE ROOM)
Connector Type	RK02GY



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	SB	-

Connector No.	B206
Connector Name	PASSENGER SIDE DOOR SWITCH
Connector Type	A03FW

 

JCKWA3538GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	E3
Connector Name	WIRE TO WIRE
Connector Type	SA33MB-RSS-SH28

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----



Terminal No.	Color of Wire	Signal Name [Specification]
1	L/Y	-
2	SHIELD	-
3	L/B	-
4	SHIELD	-
5	BR	-
7	G	-
8	W	-
9	W	-
10	Y	-
11	V	-
12	SB	-
13	L	-
14	G	-
15	R	-
16	LG	-
17	GR	-
18	Y	-
19	BG	-
20	B	-
21	SB	-
22	W	-
23	SB	-
24	GR	-
25	V	-
27	GR	-
28	V	-
29	P	-
30	R	-
31	BR	-
32	Y	-
33	G	-
34	BG	-
36	GR	-
37	SHIELD	-
38	L	-
39	P	-
40	R	-
41	W	-

42	LG	-
43	G	-
45	SB	-
46	SHIELD	-
47	W	-
48	BR	-
49	G	-
50	B	-
51	SB	-
52	R	-

Connector No.	E5
Connector Name	SPDLE R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----



Terminal No.	Color of Wire	Signal Name [Specification]
4	V	-
5	L	-
6	R	-
7	R	-
7	V	-
11	BR	-
12	B/W	-
13	Y	-
16	LG	-
19	W	-
23	G	-
27	Y	-
28	L	-
30	GR	-
32	L	-
33	P	-
36	G	-

Connector No.	E6
Connector Name	SPDLE R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-MH

42	41	40	39	46	45	44	43
----	----	----	----	----	----	----	----



Terminal No.	Color of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/W	-
42	Y	-
43	SB	-
44	W	-
45	G	-
46	V	-

Connector No.	E7
Connector Name	SPDLE R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-CS12-M4

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----



Terminal No.	Color of Wire	Signal Name [Specification]
48	L	-
49	BG	-
51	Y	-
53	W	-
54	V	-
55	SB	-
56	LG	-
57	G	-
58	P	-
59	BR	-
60	BG	-
72	GR	-
73	GR	-
74	G	-

75	SB	-
76	Y	-
77	R	-
80	W	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FB-AH24-LH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	G	UBMR
3	R	UBVR
4	B	GND
5	Y	DS FL
6	BG	DP RL
7	BR	DP RR
9	B	DP FR
10	W	DS FR
14	P	CAN-L
25	Y	BUS-L
26	LG	DP FL
27	GR	DS RL
28	G	UZ
29	P	DS RR
30	SB	BLS
31	R	VDC OFF SW
35	L	CAN-H
45	B	BUS-H

JCKWA3539GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS



7F	6F	5F	4F	3F	2F	1F
10F	15F	14F	13F	12F	11F	10F
9F	8F	7F	6F	5F	4F	3F

Terminal No.	Color of Wire	Signal Name [Specification]
1F	SB	-
2F	W	-
4F	G	-
6F	EG	-
8F	L	-
9F	R	-
9F	V	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
3	L	-
4	L	-
7	B	-
8	P	-
9	B	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	SB	-
20	LG	-
21	BR	-

Terminal No.	Color of Wire	Signal Name [Specification]
21	G	-
31	L	-
32	Y	-
33	P	-
34	L	-
35	BR	-
36	V	-
37	Y	-
38	R	-
39	B	-
40	W	-
41	LG	-
42	SB	-
43	G	-
44	GR	-
44	R	-
45	EG	-
46	W	-
47	P	-
58	SHIELD	-
59	L	-
70	P	-
80	W	-
81	P	-
82	G	-
83	V	-
84	L	-
85	EG	-
86	LG	-
87	R	-
89	P	-
91	W	-
92	L	-
93	G	-
94	Y	-
96	Y	-
97	BR	-
98	GR	-
99	LG	-
100	EG	-

Connector No.	E108
Connector Name	CLUTCH PEDAL POSITION SWITCH
Connector Type	S02FL



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
1	G	-
2	B	-
2	BR	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	MD4FW-LG



1	2	3	4
---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	W	-
3	G	-
4	P	-

Connector No.	E111
Connector Name	CLUTCH INTERLOCK SWITCH
Connector Type	S02FL



2	1
---	---


JCKWA3540GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >


INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Type	SAC30FB-RS8-S1Z3

 

42	GR	-
43	R	-
45	SS	-
46	SHIELD	-
47	W/L	-
48	LG	-
49	O/L	-
50	L/Y	-
51	W	-
52	L/G	-

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	RK10FG-DGY

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	L/Y	-
2	SHIELD	-
3	L/B	-
4	SHIELD	-
5	BR	-
7	G	-
8	W	-
9	W	-
10	G	-
11	R	-
12	P	-
13	O	-
14	LG	-
15	BR	-
16	Y	-
17	W	-
18	LG	-
19	P	-
20	O	-
21	BR	-
22	G	-
23	Y	-
24	LG	-
25	V	-
27	GR	-
28	BR	-
29	L	-
30	R	-
31	P	-
32	W	-
33	SB	-
34	O	-
36	GR	-
37	SHIELD	-
38	W	-
39	Y	-
40	G	-
41	B	-


Connector No.	F55
Connector Name	PARK / NEUTRAL POSITION SWITCH
Connector Type	RK02FB



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	BR	-
3	L	-
4	V	-
5	B	-
6	Y	-
7	W	-
8	P	-
9	GR	-
10	B	-


1	G	-
2	W	-

Connector No.	F103
Connector Name	WIRE TO WIRE
Connector Type	TK30FW-NS10

 


Terminal No.	Color of Wire	Signal Name [Specification]
2	G	-
3	W	-
4	R	-
5	B	-
8	L	-
9	Y	-
10	GR	-
19	O	-
20	Y	-
28	B	-
29	LG	-
30	R	-
31	O	-
39	W	-
42	G	-
43	P	-
44	L	-
45	Y	-
46	V	-

Connector No.	F301
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	SP10FG

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	VGN
2	B	BATT
3	R	CAN-H
4	O	K-LINE
5	G	GND
6	GR	VGN
7	L	REV LAMP RLY
8	BR	CAN-L
9	Y	STARTER RLY
10	W/B	GND

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS30FW-M2

 

Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	P	-
5A	L	-
6A	Y	-
7A	BR	-
8A	L	-

JCKWA3541GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



4B	3B	2B	1B
9B	8B	7B	6B
5B	4B	3B	2B
1B	0B	9B	8B

Terminal No.	Color of Wire	Signal Name [Specification]
3B	P	-
4B	G	-
5B	O	-
6B	Y	-
8B	R	-
9B	SB	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



5C	4C	3C	2C	1C
12C	11C	10C	9C	8C
7C	6C	5C	4C	3C
2C	1C	0C	9C	8C

Terminal No.	Color of Wire	Signal Name [Specification]
8C	R	-
9C	B	-
10C	O	-
11C	L	-
12C	O	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MM-CS (6-TM4)



1A	2A	3A	4A	5A	6A	7A	8A	9A	10A
11A	12A	13A	14A	15A	16A	17A	18A	19A	20A
21A	22A	23A	24A	25A	26A	27A	28A	29A	30A
31A	32A	33A	34A	35A	36A	37A	38A	39A	40A

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
3	L	-
4	L	-
7	B	-
8	P	-
9	B	-
11	GR	-
12	R	-
13	L	-
14	G	-
15	P	-
16	W	-
17	BR	-
20	GR	-
21	R	-
31	BR	-
32	V	-
33	P	-
34	L	-
35	BR	-
36	SB	-
37	Y	-
38	LG	-
39	SB	-
40	W	-
41	LG	-
42	R	-
43	G	-
44	G	-
45	O	-
46	G	-
47	BR	-
58	SHIELD	-
59	L	-
70	R	-
80	LG	-
81	GR	-

82	V	-
83	V	-
84	L	-
85	BR	-
86	Y	-
87	G	-
89	P	-
91	W	-
92	P	-
93	P	-
94	Y	-
96	P	-
97	GR	-
98	O	-
99	W	-
100	R	-


JCKWA3542GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION


Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS (E-TM4)

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	O	-
3	LG	-
4	O	-
6	V	-
7	LG	-
8	SB	-
9	GR	-
11	Y	-
12	V	-
13	BR	-
14	V	-
15	B	-
16	V	-
17	R	-
18	L	-
20	SB	-
21	G	-
22	GR	-
23	V	-
24	R	-
26	L	-
26	P	-
27	B	-
28	SHIELD	-
31	W	-
32	B	-
33	W	-
34	R	-
35	B	-
36	L	-
40	L	-
41	R	-
42	GR	-
43	R	-
44	R	-
45	O	-
46	SHIELD	- [Coupe models]


46	G	- [Roadster models]
47	R	-
48	SHIELD	-
51	V	-
52	R	-
57	SHIELD	-
58	B	-
60	L	-
61	R	-
62	SHIELD	-
63	R	-
64	G	-
65	SHIELD	-
66	LG	-
67	V	-
68	SHIELD	-
69	L	-
70	P	-
71	V	-
72	P	-
73	BR	-
74	GR	-
75	O	-
80	Y	-
81	W	-
82	BR	-
83	GR	-
84	L	-
85	LG	-
86	V	-
87	BR	-
88	SB	-
93	Y	-
94	SB	-
94	L	- [Roadster models]
95	GR	- [Coupe models]
95	W	- [Roadster models]
96	L	-
97	LG	- [Coupe models]
97	Y	- [Roadster models]
98	BG	- [Coupe models]
98	Y/B	- [Roadster models]
99	W	-
100	B	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FN

 

Terminal No.	Color of Wire	Signal Name [Specification]
3	LG	- [Coupe models]
3	Y	- [Roadster models]
4	B	-
5	B	-
6	L	-
7	Y	-
8	G	-
11	Y	- [Coupe models]
11	LG	- [Roadster models]
14	P	-
16	Y	-

Connector No.	M40
Connector Name	STEERING LOCK UNIT
Connector Type	TH80FW-NH

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	S/L 12V (MECHANICAL)
2	Y	S/L (K LINE)
3	L	S/L CONDITION 1
5	B	GND
6	B	GND
7	W	S/L 12V (GPU)
8	P	S/L CONDITION 2

Connector No.	M60
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FER



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	R	-
3	G	-
4	BR	-
5	GR	-
6	Y	-
7	V	-
8	P	-

JCKWA3543GB

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH16FW-NH



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

Terminal No.	Color of Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	O	IGNITION POWER SUPPLY
3	L	VEHICLE SPEED SIGNAL (2-PULSE)
4	V	VEHICLE SPEED SIGNAL (8-PULSE) [Expand for Mexico]
5	B	VEHICLE SPEED SIGNAL (8-PULSE) [For Mexico]
6	R	ILLUMINATION CONTROL SIGNAL
7	R	ROOF STATUS SIGNAL
8	R	ILLUMINATION CONTROL SIGNAL
9	BR	COMMUNICATION SIGNAL (METER-Triples Meter)
10	L	COMMUNICATION SIGNAL (TRIPLE METER-METER)
12	G	S-MODE SWITCH SIGNAL
15	L	ACC POWER SUPPLY
16	R	AIR BAG SIGNAL
17	B	GROUND
18	V	AMBIENT SENSOR SIGNAL
19	G	A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL
20	GR	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	V	FUEL LEVEL SENSOR GROUND

Connector No.	M54
Connector Name	COMBINATION METER
Connector Type	TH16FW-NH



25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name [Specification]
25	W	ALTERNATOR SIGNAL
26	O	PARKING BRAKE SWITCH SIGNAL

27	LG	BRAKE FLUID LEVEL SWITCH SIGNAL
28	Y	SECURITY SIGNAL
29	GR	WASHER LEVEL SWITCH SIGNAL
32	G	PADDLE SHIFTER DOWN SIGNAL
33	O	PADDLE SHIFTER UP SIGNAL
34	BR	FUEL LEVEL SENSOR SIGNAL
35	L	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE) [Expand for Mexico]
36	P	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE) [For Mexico]
37	G	NON-MANUAL MODE SIGNAL
38	V	MANUAL MODE SHIFT DOWN SIGNAL
39	L	MANUAL MODE SHIFT UP SIGNAL
40	W	MANUAL MODE SIGNAL

Connector No.	M63
Connector Name	INSIDE KEY ANTENNA (INSTRUMENT CENTER)
Connector Type	RK02FGY



1	2
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	L	-

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Type	TH12MP-NH



1	2	3	4	5	6
7	8	9	10	11	12

Terminal No.	Color of Wire	Signal Name [Specification]
1	SHIELD	-
2	L	-
3	G	-
4	Y	-
5	P	-

6	L	-
7	B	-
8	SHIELD	-
9	LG	-
10	V	-

Connector No.	M104
Connector Name	REMOTE KEYLESS ENTRY RECEIVER (FRONT)
Connector Type	JAB04FB



1	2	3	4
---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	P	GROUND
2	GR	SIGNAL OUTPUT
4	LG	BATTERY

Connector No.	M107
Connector Name	ECM
Connector Type	RH24FY-RZ8-R-LH-Z



128	129	130	131	132	133	134	135	136	137
138	139	140	141	142	143	144	145	146	147

Terminal No.	Color of Wire	Signal Name [Specification]
97	R	APS 1
98	P	APS 2
99	L	AVCC 1-APS 1
100	W	GND-APS 1
101	SB	ASGDSW
102	GR	FTRPS
103	G	AVCC2-APS 2
104	GR	GND-APS 2
105	L	PDPRESS
106	W	TF
107	BR	AVCC 2-FTRPS
108	Y	GND-ASGDSW

109	G	NEUT-H
110	R	TACHO
112	SB	GND-FTRES
113	P	VEHCAN-LI
114	L	VEHCAN-HI
117	Y	KLINE
121	LG	ODCV
122	P	BRAKE
123	B	GND
124	B	GND
125	R	VBR
126	BR	BNGSW
127	B	GND
128	B	GND

Connector No.	M116
Connector Name	WIRE TO WIRE
Connector Type	TK36MW-NS10




1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39											

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	GR	- [Coupe models]
3	LG	- [Roadster models]
4	B	- [Coupe models]
5	W	- [Roadster models]
7	LG	- [Coupe models]
8	LG	- [Roadster models]
9	Y	- [Coupe models]
11	R	- [Coupe models]
20	G	- [Coupe models]
21	R	- [Coupe models]
30	B	- [Coupe models]
40	O	- [Coupe models]
41	Y	- [Coupe models]
42	G	- [Coupe models]
43	L	- [Coupe models]
44	SB	- [Coupe models]
51	R	- [Coupe models]
52	G	- [Coupe models]
53	SHIELD	- [Coupe models]
54	LG	- [Coupe models]
55	V	- [Coupe models]
56	SHIELD	- [Coupe models]
57	G	- [Coupe models]
58	P	- [Roadster models]
59	L	- [Roadster models]
60	W	- [Roadster models]
61	GR	- [Roadster models]
62	B	- [Roadster models]
63	Y	- [Roadster models]
64	L	- [Roadster models]
65	G	- [Roadster models]
66	O	- [Roadster models]
67	V	- [Roadster models]
68	P	- [Roadster models]

69	L	-
70	L	-
72	B	-
73	B	-
74	B	-
75	B	-
76	B	-
80	L	-
81	Y	-
82	W	-
83	B	-
84	R	-
85	G	-
86	SHIELD	-
87	G	-
88	L	-
89	P	- [Coupe models]
90	Y	- [Roadster models]
92	G	- [Coupe models]
93	R	- [Roadster models]
94	V	- [Roadster models]
95	G	- [Coupe models]
96	SB	- [Coupe models]
97	LG	- [Coupe models]
98	Y	- [Roadster models]
99	Y/B	- [Roadster models]
100	BR	- [Coupe models]
101	Y	- [Roadster models]

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03PB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (E/L)
2	W	POWER WINDOW POWER SUPPLY (BAT)


3	Y	POWER WINDOW POWER SUPPLY (IGN)
---	---	---------------------------------

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	R	INTERIOR ROOM LAMP POWER SUPPLY
5	G	SUPER LOCK OUTPUT
8	V	ALL DOOR FUEL ID LOCK OUTPUT
9	G	DRIVER DOOR FUEL ID UNLOCK OUTPUT
11	BR	BAT (FUSE)
13	B	GND
14	R	PUSH-BUTTON IGNITION SW ILL POWER
15	Y	ACC IND
17	W	TURN SIGNAL RH (FRONT SIDE)
18	O	TURN SIGNAL LH (FRONT SIDE)
19	P	ROOM LAMP TIMER CONTROL

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH

 

Terminal No.	Color of Wire	Signal Name [Specification]
34	G	LUGGAGE ROOM ANT-
35	R	LUGGAGE ROOM ANT+
38	B	BACK DOOR ANT-
39	W	BACK DOOR ANT+
47	V	IGN RELAY (IPDM E/R) CONT
52	SB	STARTER RELAY CONT
61	W	BACK DOOR REQUEST SW [Coupe models]
61	W	TRUNK LID REQUEST SW [Roadster models]

JCKWA3545GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40TB-NH



91	90	89	88	87	86	85	84	83	82	81	80	79	78	77	76	75	74	73	72
111	110	109	108	107	106	105	104	103	102	101	100	99	98	97	96	95	94	93	92


NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

Wiring Diagram - NISSAN VEHICLE IMMOBILIZER SYSTEM -

INFOID:000000006353238

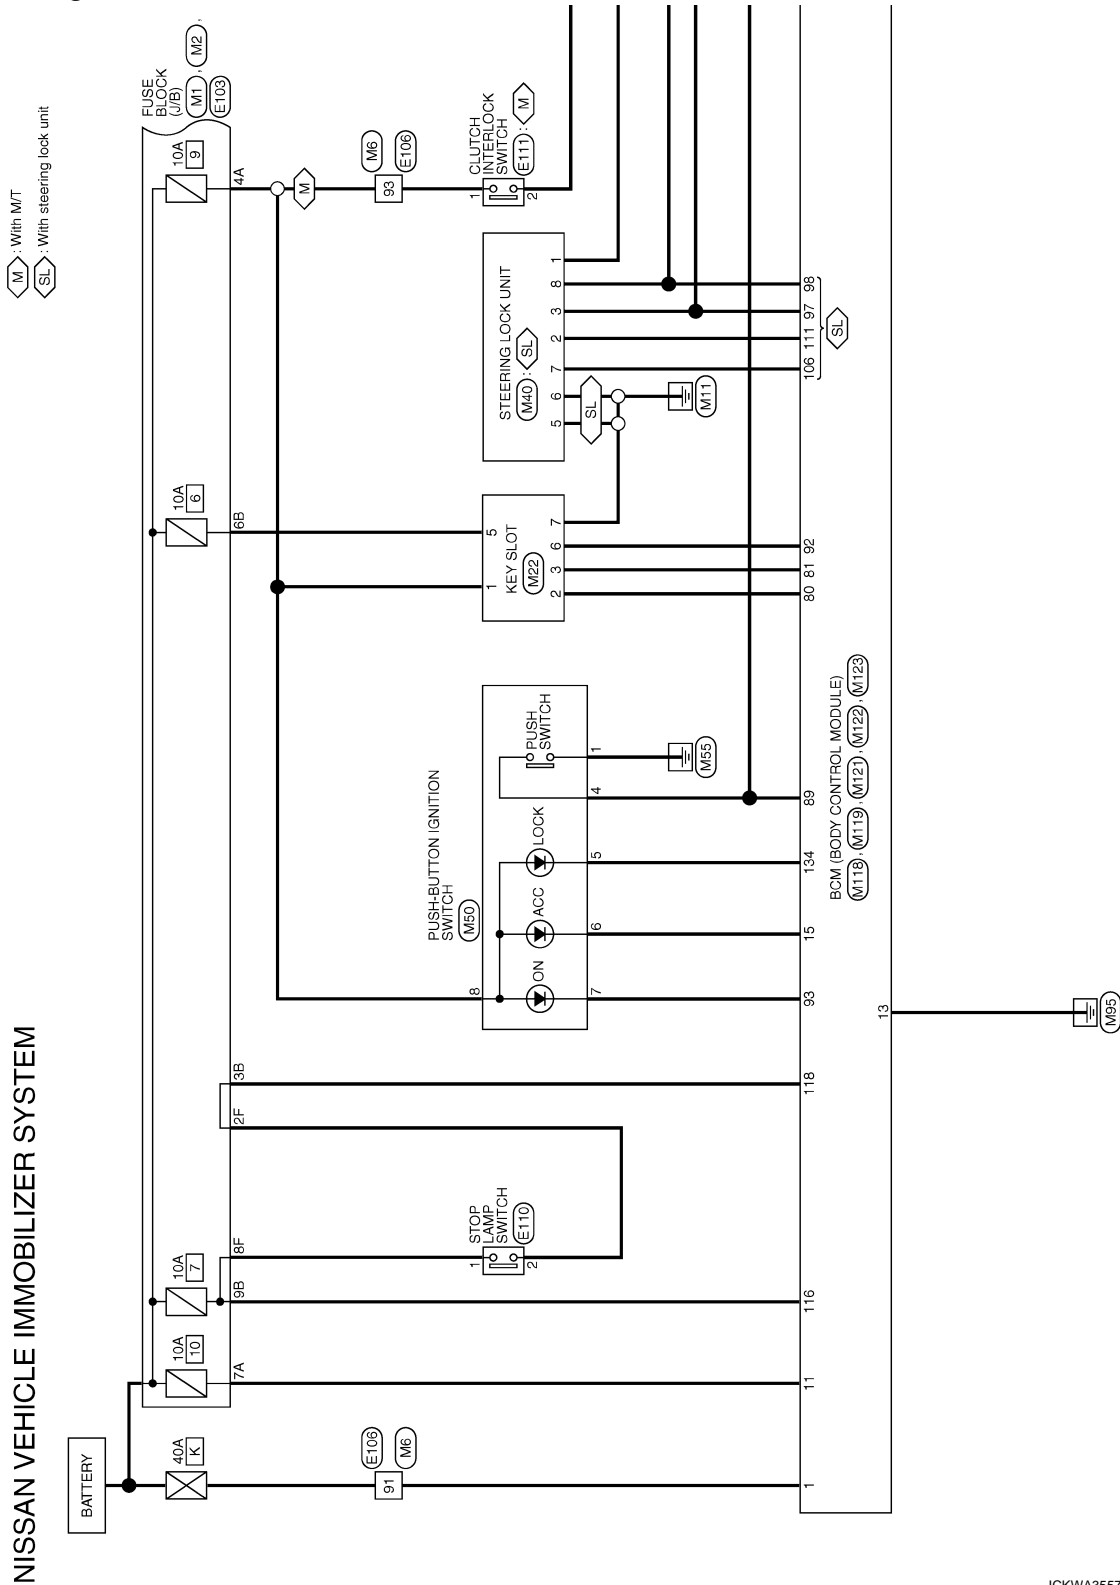

2010/09/22


JCKWA3557GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS


< DTC/CIRCUIT DIAGNOSIS >

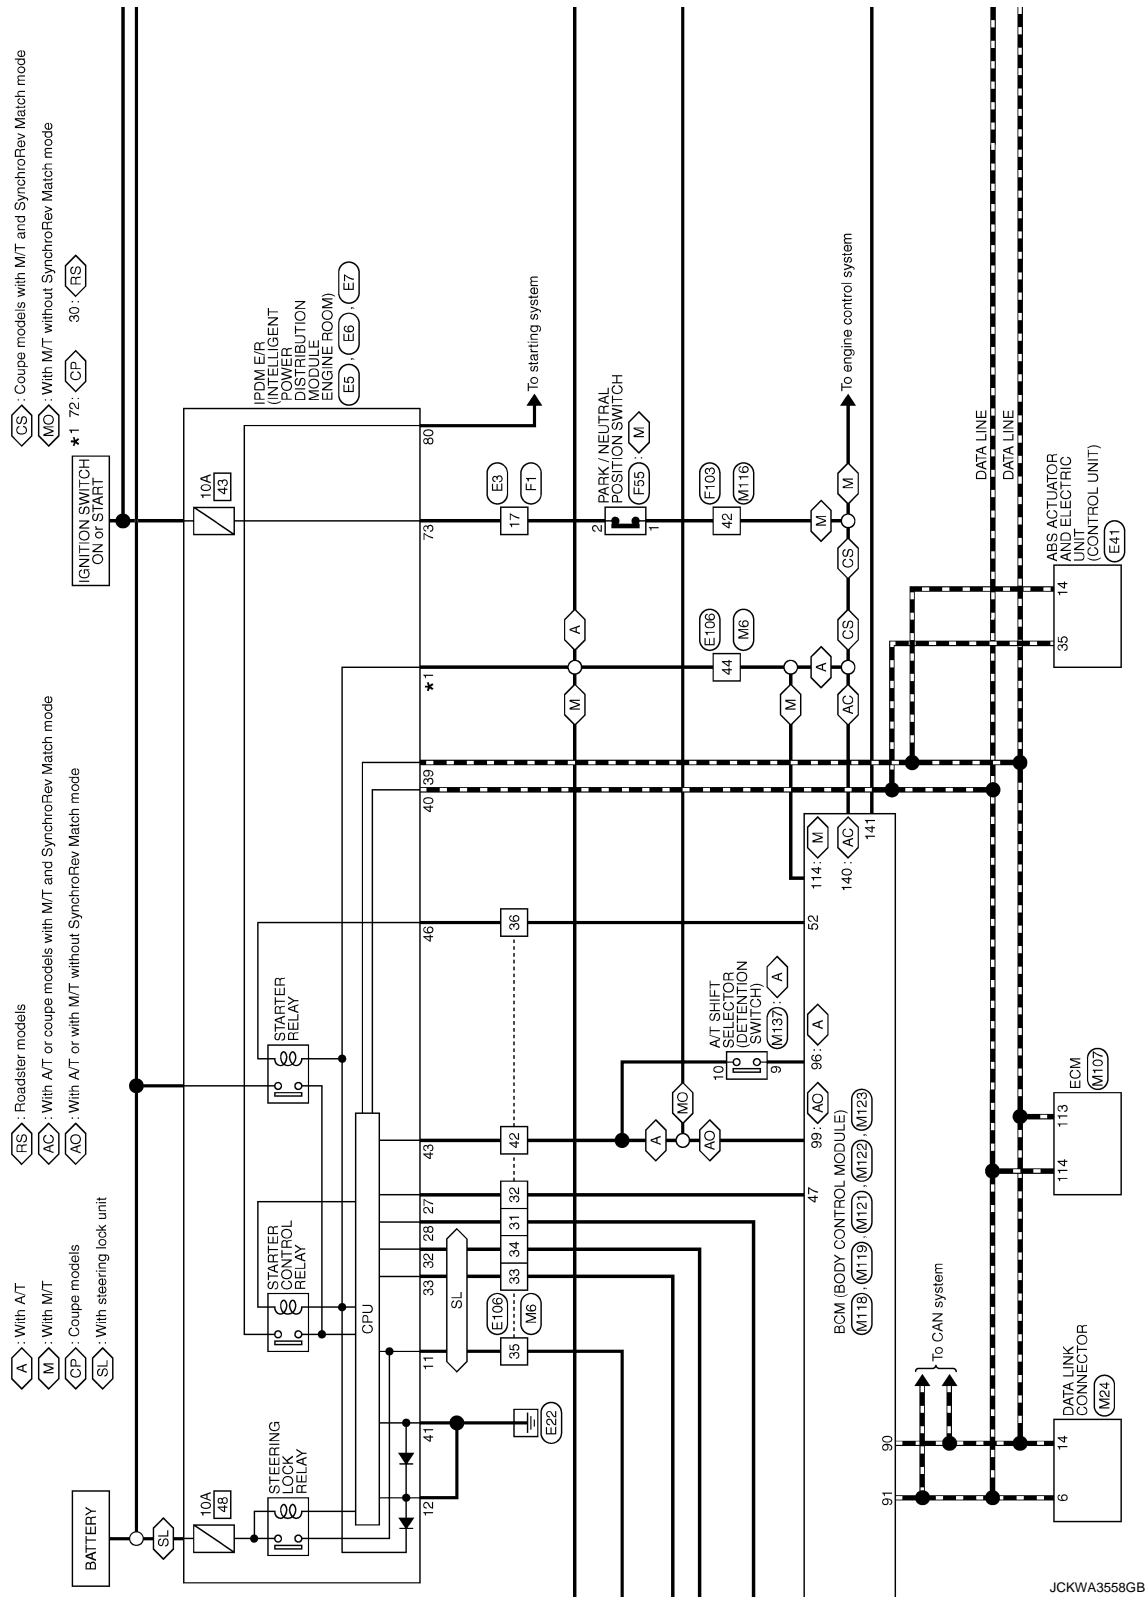

JCKWA3558GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

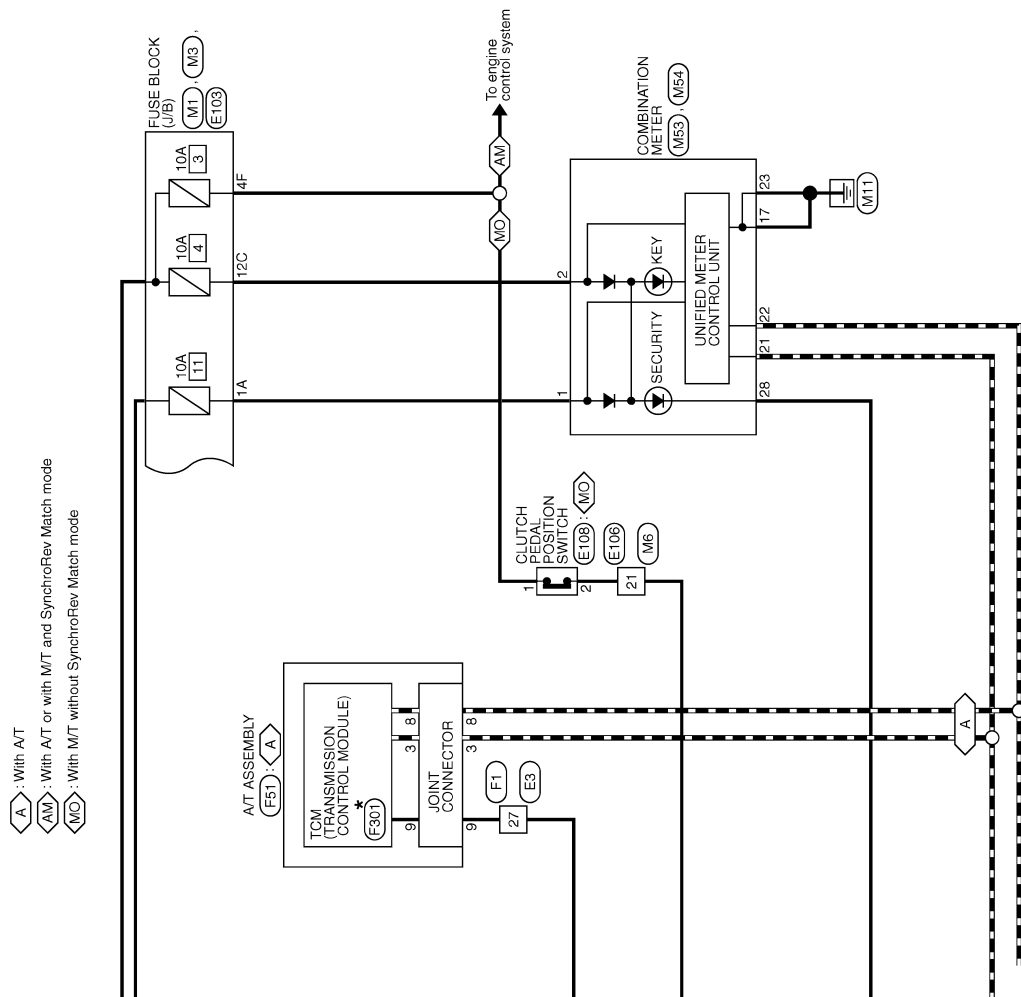

★: This connector is not shown in "Harness Layout".

JCKWA3559GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

NISSAN VEHICLE IMMOBILIZER SYSTEM

Connector No.	E3
Connector Name	WIRE TO WIRE
Connector Type	SA33MB-FSS-SH28

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----



Terminal No.	Color of Wire	Signal Name [Specification]
1	L/Y	-
2	SHIELD	-
3	L/B	-
4	SHIELD	-
5	BR	-
7	G	-
8	W	-
9	W	-
10	Y	-
11	V	-
12	SB	-
13	L	-
14	G	-
15	R	-
16	LG	-
17	GR	-
18	Y	-
19	BG	-
20	B	-
21	SB	-
22	W	-
23	SB	-
24	GR	-
25	V	-
27	GR	-
28	V	-
29	P	-
30	R	-
31	BR	-
32	Y	-
33	G	-
34	BG	-
36	GR	-
37	SHIELD	-
38	L	-
39	P	-
40	R	-
41	W	-

42	LG	-
43	G	-
45	SB	-
46	SHIELD	-
47	W	-
48	BR	-
49	G	-
50	B	-
51	SB	-
52	R	-

Connector No.	E5
Connector Name	SPM E R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----



Terminal No.	Color of Wire	Signal Name [Specification]
4	V	-
5	L	-
6	R	-
7	R	- [Coupe models]
7	V	- [Roadster models]
11	BR	-
12	B/W	-
13	Y	-
16	LG	-
19	W	-
25	G	-
27	Y	-
28	L	-
30	GR	-
32	L	-
33	P	-
36	G	-

Connector No.	E6
Connector Name	SPM E R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-M4

42	41	40	39	46	45	44	43
----	----	----	----	----	----	----	----



Terminal No.	Color of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/W	-
42	Y	-
43	SB	-
44	W	-
45	G	-
46	V	-

Connector No.	E7
Connector Name	SPM E R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-CS12-M4

13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----



Terminal No.	Color of Wire	Signal Name [Specification]
48	L	-
49	BG	-
51	Y	-
53	W	-
54	V	-
55	SB	-
56	LG	-
57	G	-
58	P	-
69	BR	-
70	BG	-
72	GR	-
73	GR	-
74	G	-

75	SB	-
76	Y	-
77	R	-
80	W	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FB-AH24-LH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	G	UBMR
3	R	UBVR
4	B	GND
5	Y	DS FL
6	BG	DP RL
7	BR	DP RR
9	B	DP FR
10	W	DS FR
14	P	CAN-L
25	Y	BUS-L
26	LG	DP FL
27	GR	DS RL
28	G	UZ
29	P	DS RR
30	SB	BLS
31	R	VDC OFF SW
35	L	CAN-H
45	B	BUS-H

JCKWA3560GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

NISSAN VEHICLE IMMOBILIZER SYSTEM

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS



7F	6F	5F	4F	3F	2F	1F
10F	15F	14F	13F	12F	11F	10F
9F	8F	7F	6F	5F	4F	3F

Terminal No.	Color of Wire	Signal Name [Specification]
1F	SB	-
2F	W	-
4F	G	-
6F	BG	-
8F	L	-
9F	R	-
9F	V	-

Connector No.	E106
Connector Name	WIRE TO WIPE
Connector Type	TH80FW-CS16-TM4



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
3	L	-
4	L	-
7	B	-
8	P	-
9	B	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	SB	-
20	LG	-
21	BR	-

Terminal No.	Color of Wire	Signal Name [Specification]
21	G	- [Roadster models]
31	L	-
32	Y	-
33	P	-
34	L	-
35	BR	-
36	V	-
37	Y	-
38	R	-
39	B	-
40	W	-
41	LG	-
42	SB	-
43	G	-
44	GR	- [Except for roadster models with M/T]
44	R	- [Roadster models with M/T]
45	BG	-
46	W	-
47	P	-
58	SHIELD	-
59	L	-
70	P	-
80	W	-
81	P	-
82	G	-
83	V	-
84	L	-
85	BG	-
86	LG	-
87	R	-
89	P	-
91	W	-
92	L	-
93	G	-
94	Y	-
96	Y	-
97	BR	-
98	GR	-
99	LG	-
100	BG	-

Connector No.	E108
Connector Name	CLUTCH PEDAL POSITION SWITCH
Connector Type	S02FL



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	- [With SynchroRev Match mode]
1	G	- [Without SynchroRev Match mode]
2	B	- [With SynchroRev Match mode]
2	BR	- [Without SynchroRev Match mode]

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	MD0FW-LG



1	2	3	4
---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	W	-
3	G	-
4	P	-

Connector No.	E111
Connector Name	CLUTCH INTERLOCK SWITCH
Connector Type	S02FL



2	1
---	---

JCKWA3561GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >


NISSAN VEHICLE IMMOBILIZER SYSTEM

Connector No.	Signal Name [Specification]
F1	
Connector Name	WIRE TO WIRE
Connector Type	SA30FE-RS8-SVZ3

 

Terminal No.	Color of Wire	Signal Name [Specification]
42	GR	-
43	R	-
45	SR	-
46	SHIELD	-
47	W/L	-
48	LG	-
49	O/L	-
50	L/Y	-
51	W	-
52	L/G	-

Connector No.	Signal Name [Specification]
F51	
Connector Name	A/T ASSEMBLY
Connector Type	RK10FG-DGY

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	L/Y	-
2	SHIELD	-
3	L/B	-
4	SHIELD	-
5	BR	-
7	G	-
8	W	-
9	W	-
10	G	-
11	R	-
12	P	-
13	O	-
14	LG	-
15	BR	-
16	Y	-
17	W	-
18	LG	-
19	P	-
20	O	-
21	BR	-
22	G	-
23	Y	-
24	LG	-
25	V	-
27	GR	-
28	BR	-
29	L	-
30	R	-
31	P	-
32	W	-
33	SB	-
34	O	-
36	GR	-
37	SHIELD	-
38	W	-
39	Y	-
40	G	-
41	B	-


Connector No.	Signal Name [Specification]
F55	
Connector Name	PARK / NEUTRAL POSITION SWITCH
Connector Type	RK02FB



Terminal No.	Color of Wire	Signal Name [Specification]


Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	W	-

Connector No.	Signal Name [Specification]
F103	
Connector Name	WIRE TO WIRE
Connector Type	TK30FW-NS10

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	G	-
3	W	-
4	R	-
5	B	-
8	L	-
9	Y	-
10	GR	-
19	O	-
20	Y	-
28	B	-
29	LG	-
30	R	-
31	O	-
39	W	-
42	G	-
43	P	-
44	L	-
45	Y	-
46	V	-

Connector No.	Signal Name [Specification]
F301	
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	SP10FG

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	VIGN
2	B	BATT
3	R	CAN-H
4	O	K-LINE
5	G	GND
6	GR	VIGN
7	L	REV LAMP RLY
8	BR	CAN-L
9	Y	STARTER RLY
10	W/B	GND

Connector No.	Signal Name [Specification]
M1	
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS30FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	P	-
5A	L	-
6A	Y	-
7A	BR	-
8A	L	-

JCKWA3562GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

NISSAN VEHICLE IMMOBILIZER SYSTEM

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



4B	3B	2B	1B
10B	9B	8B	7B
6B	5B	4B	3B
2B	1B	0B	9B

Connector No.	M6
Connector Name	WIRED TO WIRE
Connector Type	TH60M4-CS16-TM4



1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30
31	32	33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48	49	50
51	52	53	54	55	56	57	58	59	60
61	62	63	64	65	66	67	68	69	70
71	72	73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88	89	90
91	92	93	94	95	96	97	98	99	100

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

NISSAN VEHICLE IMMOBILIZER SYSTEM

Connector No.	M50
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08BR



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	R	-
3	G	-
4	BR	-
5	GR	-
6	V	-
7	V	-
8	P	-

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH24FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	O	IGNITION POWER SUPPLY
3	L	VEHICLE SPEED SIGNAL (2-PULSE)
4	Y	VEHICLE SPEED SIGNAL (8-PULSE) (Except for Mexico)
4	V	VEHICLE SPEED SIGNAL (8-PULSE) (For Mexico)
5	B	ILLUMINATION CONTROL SIGNAL
6	R	ROOF STATUS SIGNAL
9	BR	COMMUNICATION SIGNAL (METER->TRIPLE METER)
10	L	COMMUNICATION SIGNAL (TRIPLE METER->METER)
12	G	S-MODE SWITCH SIGNAL
15	L	ACC POWER SUPPLY
16	R	AIR BAG SIGNAL
17	B	GROUND
18	V	AMBIENT SENSOR SIGNAL


19	G	A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL
20	GR	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	Y	FUEL LEVEL SENSOR GROUND

Connector No.	M54
Connector Name	COMBINATION METER
Connector Type	TH10FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
25	W	ALTERNATOR SIGNAL
26	O	PARKING BRAKE SWITCH SIGNAL
27	LG	BRAKE FLUID LEVEL SWITCH SIGNAL
28	Y	SECURITY SIGNAL
29	GR	WASHER LEVEL SWITCH SIGNAL
32	G	PADDLE SHIFTER DOWN SIGNAL
33	O	PADDLE SHIFTER UP SIGNAL
34	BR	FUEL LEVEL SENSOR SIGNAL
35	L	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	P	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE) (Except for Mexico)
36	L	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE) (For Mexico)
37	G	NON-MANUAL MODE SIGNAL
38	V	MANUAL MODE SHIFT DOWN SIGNAL
39	L	MANUAL MODE SHIFT UP SIGNAL
40	W	MANUAL MODE SIGNAL

Connector No.	M107
Connector Name	ECM
Connector Type	RH24FCY-R28-R-LH-Z

 

19	O	-
20	G	-
28	B	-
29	LG	-
30	LG	-
31	O	-
39	G	-
42	P	-
43	P	-
44	L	-
45	BR	-
46	V	-

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	W	POWER WINDOW POWER SUPPLY (BAT)
3	Y	POWER WINDOW POWER SUPPLY (IGN)

Terminal No.	Color of Wire	Signal Name [Specification]
97	R	APS 1
98	P	APS 2
99	L	AVCC 1-APS 1
100	W	AVCC 1-APS 1
101	SB	ASCDSW
102	GR	FTPRS
103	G	AVCC2-APS 2
104	GR	GND-APS 2
105	L	PDPRESS
106	W	TF
107	BR	AVCC 2-FTPRS
108	Y	GND ASCDSW
109	G	NEUT-H
110	R	TACHO
112	SB	GND-FTPRS
113	P	VEHCAN-LI
114	L	VEHCAN-HI
117	Y	KLINE
121	LG	GDSV
122	P	BRAKE
123	B	GND
124	B	GND
125	R	VBR
126	BR	BKCSW
127	B	GND
128	B	GND

Connector No.	M118
Connector Name	WIRE TO WIRE
Connector Type	TK30MW-NS10



Terminal No.	Color of Wire	Signal Name [Specification]
2	W	-
3	BG	- [Coupe models]
3	O	- [Roadster models]
4	W	-
5	B	-
8	L	-
9	Y	-
10	R	-

JCKWA3564GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

NISSAN VEHICLE IMMOBILIZER SYSTEM

Connector No.	MI19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



4	5	6	7	8	9	10
11	12	13	14	15	16	17
18	19					

Terminal No.	Color of Wire	Signal Name [Specification]
4	R	INTERIOR ROOM LAMP POWER SUPPLY
5	G	SUPER LOCK OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
11	BR	BAT (FUSE)
12	B	GND
14	R	PUSH-BUTTON IGNITION SW ILL POWER
15	Y	ACC IND
17	W	TURN SIGNAL RH (FRONT, SIDE)
18	O	TURN SIGNAL LH (FRONT, SIDE)
19	P	ROOM LAMP TIMER CONTROL

Connector No.	MI21
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40GY-NH



1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30

Terminal No.	Color of Wire	Signal Name [Specification]
34	G	LUGGAGE ROOM ANT-
35	R	LUGGAGE ROOM ANT+
38	B	BACK DOOR ANT-
39	W	BACK DOOR ANT+
47	V	IGN RELAY (IPDM E/R) CONT
52	SB	STARTER RELAY CONT
61	W	BACK DOOR REQUEST SW [Coupe models]
61	W	TRUNK LID REQUEST SW [Reader models]
64	G	I-KEY WARN BUZZER (ENG ROOM)
66	R	BACK DOOR SW [Coupe models]
66	R	TRUNK ROOM LAMP SW [Reader models]

67	GR	BACK DOOR OPENER SW [Coupe models]
67	GR	TRUNK LID OPENER SW [Reader models]

Connector No.	MI22
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30

Terminal No.	Color of Wire	Signal Name [Specification]
72	L	ROOM ANT 2-
73	P	ROOM ANT 2+
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	L	ROOM ANT 1-
79	R	ROOM ANT 1+
80	GR	NATS ANT AMP
81	W	NATS ANT AMP
82	R	IGN RELAY (F/B) CONT
83	GR	KYLS ENT RECEIVER (FRONT COMM)
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL
93	V	ON IND
95	O	ACC RELAY CONT
96	Y	A/T SHIFT SELECTOR POWER SUPPLY
97	L	S/L CONDITION 1
98	P	S/L CONDITION 2
99	R	CLUTCH PEDAL POS SW [With M/T]
99	R	SHIFT P [With A/T]
100	GR	PASSENGER DOOR REQUEST SW
101	Y	DRIVER DOOR REQUEST SW
102	O	BLOWER FAN MOTOR RELAY CONT
103	LG	KYLS ENT RECEIVER (FRONT) PWR SUPPLY
106	W	S/L UNIT POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	P	HAZARD SW

111	Y	S/L UNIT COMM
-----	---	---------------

Connector No.	MI23
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30

Terminal No.	Color of Wire	Signal Name [Specification]
113	O	OPTICAL SENSOR
114	R	CLUTCH INTERLOCK SW
115	O	SHOCK SENSOR
116	SB	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	R	KEY SLOT SW
123	W	IGN F/B
124	LG	PASSENGER DOOR SW
129	O	TRUNK LID OPENER CANCEL SW
130	L	REAR DEFOGGER SW
132	V	P/W SW & SOFT TOP C/U COMM [Reader models]
132	Y	POWER WINDOW SW COMM [Coupe models]
133	G	PUSH BUTTON IGNITION SW ILL POWER
134	GR	LOCK IND
137	P	RECEIVER / SENSOR GND
138	V	RECEIVER / SENSOR POWER SUPPLY
139	L	TIRE PRESS KYLS ENT (REAR) RECEV COMM
140	G	P/N POSITION SW [With M/T]
140	G	SHIFT IN/P [With A/T]
141	Y	SECURITY INDICATOR
142	O	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

Connector No.	MI37
Connector Name	A/T SHIFT SELECTOR
Connector Type	TK10FW



1	2	3	4
5	6	7	8
9	10		

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	L	-
4	B	-
5	G	-
6	R	-
7	W	-
8	P	-
9	Y	-
10	R	-

JCKWA3565GB


A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

INFOID:0000000006353239



JCKWA3547GB

CP: Coupe models
RS: Roadster models
★2 14: CP
7: RS

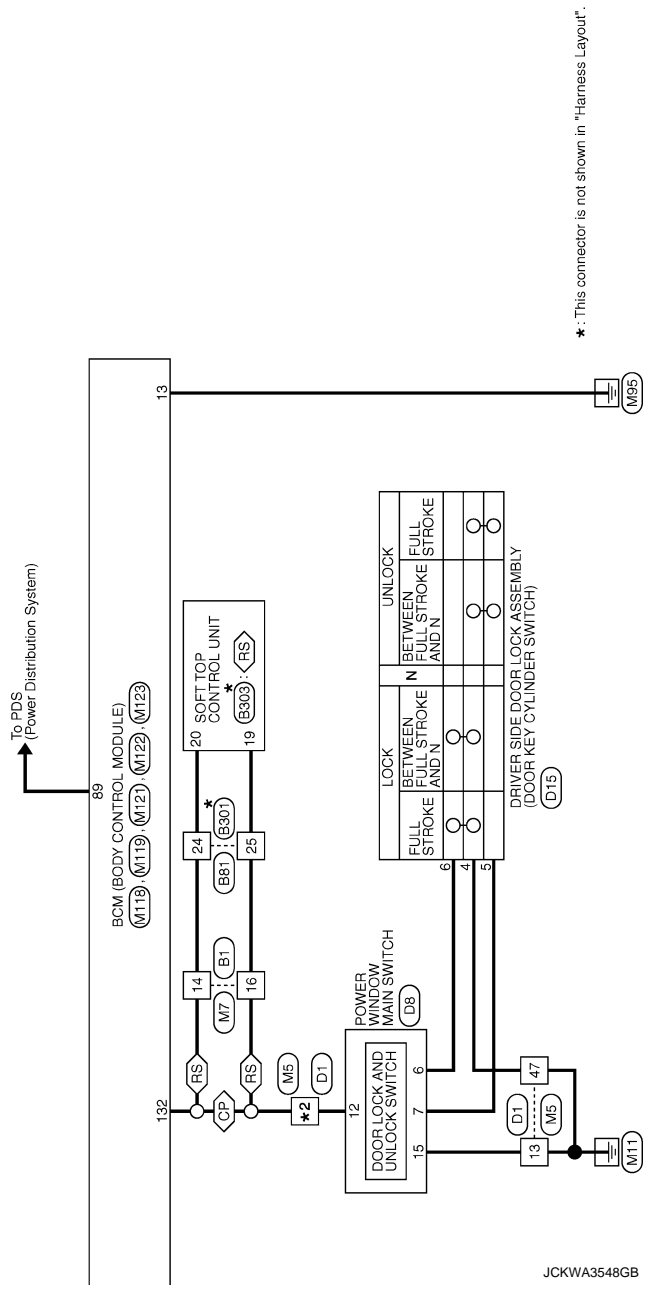

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

VEHICLE SECURITY SYSTEM


Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	Y	-
4	W	-
6	V	-
7	LG	-
8	GR	-
9	SB	-
11	Y	-
12	W	-
13	BR	-
14	LG	-
15	B	-
16	V	-
17	R	-
18	B	-
20	SB	-
21	G	-
22	GR	-
23	V	-
24	BG	-
25	L	-
26	P	-
27	W	-
28	SHIELD	-
31	W	-
32	B	-
33	P	-
33	W	- [Coupe models] - [Roadster models]
34	R	-
35	W	- [Coupe models] - [Roadster models]
35	B	- [Roadster models]
36	B	-
40	Y	-
41	L	-
42	GR	-
43	BR	-
44	R	-


45	BG	-
46	SHIELD	- [Coupe models] - [Roadster models]
46	SB	-
47	Y	-
48	SHIELD	-
51	W	-
52	R	-
57	SHIELD	-
58	B	-
60	V	-
61	SB	-
62	SHIELD	-
63	BR	-
64	Y	-
65	SHIELD	-
66	P	-
67	L	-
68	SHIELD	-
69	R	-
70	G	-
71	V	-
72	P	-
73	BR	-
74	GR	-
75	BG	-
80	Y	-
81	R	-
82	B	-
83	GR	-
84	G	-
84	L	- [Coupe models] - [Roadster models]
85	LG	-
86	V	-
87	BR	-
88	GR	-
93	Y	-
94	L	-
94	G	- [Coupe models] - [Roadster models]
95	GR	- [Coupe models] - [Roadster models]
95	LG	- [Roadster models]
96	L	-
97	Y	-
98	W	-
98	Y/B	- [Coupe models] - [Roadster models]
99	LG	-
100	B	-

Connector No.	B16
Connector Name	DRIVER SIDE DOOR SWITCH
Connector Type	A03FW

 


Terminal No.	Color of Wire	Signal Name [Specification]
2	GR	-

Connector No.	B63
Connector Name	DRIVER SIDE DOOR SWITCH
Connector Type	A03FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	GR	-
3	B	-

Connector No.	B66
Connector Name	BACK DOOR SWITCH
Connector Type	A03FW

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
3	B	-

Connector No.	B76
Connector Name	TRUNK LID LOCK ASSEMBLY
Connector Type	NS30FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	LG	-
3	B	-

Connector No.	B81
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-NH

 

Terminal No.	Color of Wire	Signal Name [Specification]
4	W	-
5	BR	-
6	B	-
8	V	-
9	BG	-
14	GR	-
15	SB	-
16	V	-
17	G	-
24	LG	-
25	V	-
31	L	-
32	P	-
34	BG	-
35	R	-

JCKWA3549GB

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

VEHICLE SECURITY SYSTEM

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



6	7	8	9	10	11
12	13	14	15	16	17
18	19	20	21	22	23
24	25	26	27	28	29
30	31	32	33	34	35
36	37	38	39	40	41
42	43	44	45	46	47
48	49	50	51	52	53
54	55	56	57	58	59
60	61	62	63	64	65
66	67	68	69	70	71
72	73	74	75	76	77
78	79	80	81	82	83
84	85	86	87	88	89
90	91	92	93	94	95
96	97	98	99	100	101

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

VEHICLE SECURITY SYSTEM

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15

15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----



Terminal No.	Color of Wire	Signal Name [Specification]
7	Y	-
8	Y	-
9	G	-
10	B	-
11	P	- [With BOSE system]
12	V	- [Without BOSE system]
13	B	-
14	SB	- [Coupe models]
15	W	- [Roadster models]
16	W	-
17	G	-
18	R	-
19	L	-
20	L	-
21	B	-
22	SB	-
23	W	-
24	W	-
25	LG	-
26	R	-
27	V	-
28	G	-
29	G	-
30	G	-
31	G	-
32	G	-
33	G	-
34	G	-
35	G	-
36	G	-
37	G	-
38	G	-
39	G	-
40	G	-
41	G	-
42	G	-
43	G	-
44	G	-
45	G	-
46	G	-
47	G	-
48	G	-
49	G	-
50	G	-
51	R	-
52	V	-
53	B	-
54	SB	-
55	G	-

Connector No.	D8
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FW-CS

1		4	<div></div>	5	6	7
8	9	10	11	12	13	14
				15		

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

VEHICLE SECURITY SYSTEM

Connector No.	E18
Connector Name	HORN RELAY 2
Connector Type	MO3FW-R-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	Y	-
3	G	-

Connector No.	E10
Connector Name	HOOD SWITCH
Connector Type	RH02FB



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	LG	-

Connector No.	E61
Connector Name	HORN (HIGH)
Connector Type	P01FB-A

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-

Connector No.	E62
Connector Name	HORN (HIGH)
Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-

Connector No.	E69
Connector Name	HORN (LOW)
Connector Type	P01FB-A




Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-

Connector No.	E70
Connector Name	HORN (LOW)
Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH03FW-CS16-TM4

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
3	L	-
4	L	-
7	B	-
8	B	-
9	B	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	SB	-
20	LG	-
21	BR	- [Coupe models]
21	G	- [Roadster models]
31	L	-
32	Y	-
33	P	-
34	L	-
35	BR	-
36	V	-
37	Y	-
38	R	-
39	B	-
40	W	-
41	LG	-
42	SB	-
43	G	-
44	GR	- [Except for roadster models with M/T]
44	R	- [Roadster models with M/T]
45	BG	-
46	W	-
47	P	-
58	SHIELD	-
59	L	-
70	P	-
80	W	-

81	P	-
82	G	-
83	V	-
84	L	-
85	BG	-
86	LG	-
87	R	-
89	P	-
91	W	-
92	L	-
93	G	-
94	Y	-
96	Y	-
97	BR	-
98	GR	-
99	LG	-
100	BG	-

Connector No.	MI
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	P	-
5A	L	-
6A	Y	-
7A	BR	-
8A	L	-

JCKWA3552GB

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

VEHICLE SECURITY SYSTEM

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	MS12FW-CS



5C	4C		3C	2C	1C	
12C	11C	10C	9C	8C	7C	6C

Terminal No.	Color of Wire	Signal Name [Specification]
6C	R	-
7C	B	-
9C	O	-
10C	L	-
11C	LG	-
12C	O	-

Connector No.	M5
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
18	17	16	15	14	13	12	11	10	9	8	7	6	5	4
3	2	1	16	15	14	13	12	11	10	9	8	7	6	5

Terminal No.	Color of Wire	Signal Name [Specification]
7	Y	-
8	Y	-
9	G	-
10	V	-
11	V	-
12	L	-
13	B	-
14	Y	-
15	W	-
19	Y	-
23	Y/B	-
44	L	-
47	B	-
48	SB	-
49	Y	-
50	W	-

51	R	-
52	L	-
53	W	-
54	G	-
55	R	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
3	L	-
4	L	-
7	B	-
8	P	-
9	B	-
11	GR	-
12	R	-
13	L	-
14	G	-
15	P	-
16	W	-
17	BR	-
20	GR	-
21	R	-
31	BR	-
32	V	-
33	P	-
34	L	-
35	BR	-
36	SB	-
37	Y	-
38	LG	-
39	SB	-
40	W	-
41	LG	-
42	R	-
43	G	-
44	G	-
44	R	- [With A/T]
44	R	- [With M/T]
45	O	-


46	G	-
47	BR	-
58	SHIELD	-
59	L	-
70	R	-
80	LG	-
81	GR	-
82	V	-
83	V	-
84	L	-
85	BR	-
86	Y	-
87	G	-
89	P	-
91	W	-
92	P	-
93	P	-
94	Y	-
96	P	-
97	GR	-
98	O	-
99	W	-
100	R	-

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


VEHICLE SECURITY SYSTEM

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	O	-
3	LG	-
4	O	-
5	V	-
6	V	-
7	LG	-
8	SB	-
9	GR	-
10	Y	-
11	Y	-
12	V	-
13	BR	-
14	V	-
15	B	-
16	V	-
17	R	-
18	L	-
19	SB	-
20	SB	-
21	G	-
22	GR	-
23	V	-
24	R	-
25	L	-
26	P	-
27	B	-
28	SHIELD	-
29	W	-
30	B	-
31	W	-
32	B	-
33	W	-
34	R	-
35	B	-
36	L	-
37	L	-
38	R	-
39	R	-
40	R	-
41	R	-
42	GR	-
43	R	-
44	R	-
45	O	-
46	SHIELD	- [Coupe models]

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
3	LG	- [Coupe models]
4	Y	- [Roadster models]
5	B	-
6	L	-
7	Y	-
8	G	-
11	Y	- [Coupe models]
14	P	- [Roadster models]
16	Y	-


Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH24FW-NH

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	O	IGNITION POWER SUPPLY
3	L	VEHICLE SPEED SIGNAL (2-PULSE)
4	Y	VEHICLE SPEED SIGNAL (8-PULSE) [Except for Mexico]
5	B	VEHICLE SPEED SIGNAL (8-PULSE) [For Mexico]
6	R	ILLUMINATION CONTROL SIGNAL
9	BR	ROOF STATUS SIGNAL
10	L	COMMUNICATION SIGNAL (METER->TRIPLE METER)
12	L	COMMUNICATION SIGNAL (TRIPLE METER->METER)
15	L	S-MODE SWITCH SIGNAL
		ACC POWER SUPPLY

16	R	AIR BAG SIGNAL
17	B	GROUND
18	V	AMBIENT SENSOR SIGNAL
19	G	A/C AUTO AIR CONNECTION RECOGNITION SIGNAL
20	GR	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	Y	FUEL LEVEL SENSOR GROUND

Connector No.	M54
Connector Name	COMBINATION METER
Connector Type	TH16FW-NH

 

Terminal No.	Color of Wire	Signal Name [Specification]
25	W	ALTERNATOR SIGNAL
26	O	PARKING BRAKE SWITCH SIGNAL
27	LG	BRAKE FLUID LEVEL SWITCH SIGNAL
28	Y	SECURITY SIGNAL
29	GR	WASHER LEVEL SWITCH SIGNAL
32	G	PADDLE SHIFTER DOWN SIGNAL
33	O	PADDLE SHIFTER UP SIGNAL
34	BR	FUEL LEVEL SENSOR SIGNAL
35	L	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	P	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE) [For Mexico]
37	G	NON-MANUAL MODE SIGNAL
38	V	MANUAL MODE SHIFT UP SIGNAL
39	L	MANUAL MODE SHIFT DOWN SIGNAL
40	W	MANUAL MODE SIGNAL


JCKWA3554GB

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

VEHICLE SECURITY SYSTEM

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	GR	- [Coupe models]
2	LG	- [Roadster models]
3	O	- [Coupe models]
3	B	- [Roadster models]
4	W	- [Coupe models]
4	W	- [Roadster models]
7	Y	- [Coupe models]
7	Y	- [Roadster models]
8	LG	- [Coupe models]
8	LG	- [Roadster models]
9	Y	- [Coupe models]
11	R	- [Coupe models]
20	G	- [Coupe models]
21	R	- [Coupe models]
30	B	- [Coupe models]
40	O	- [Coupe models]
41	Y	- [Coupe models]
42	G	- [Coupe models]
43	L	- [Coupe models]
44	SB	- [Coupe models]
51	R	- [Coupe models]
52	G	- [Coupe models]
53	SHIELD	- [Coupe models]
54	LG	- [Coupe models]
55	V	- [Coupe models]
56	SHIELD	- [Coupe models]
57	P	- [Coupe models]
58	R	- [Coupe models]
58	L	- [Coupe models]
59	B	- [Coupe models]
60	W	- [Coupe models]
61	GR	- [Coupe models]
62	B	- [Coupe models]
63	Y	- [Coupe models]
64	L	- [Coupe models]
65	G	- [Coupe models]
66	O	- [Coupe models]
67	V	- [Coupe models]
68	P	- [Coupe models]

69	L	-
70	L	-
72	B	-
73	B	-
74	B	-
75	B	-
76	B	-
80	L	-
81	Y	-
82	W	-
83	B	-
84	R	-
85	G	-
86	SHIELD	-
87	G	-
88	L	-
89	P	- [Coupe models]
89	Y	- [Roadster models]
90	SHIELD	-
92	G	- [Coupe models]
92	LG	- [Roadster models]
93	R	- [Coupe models]
93	V	- [Roadster models]
94	SHIELD	-
95	SB	- [Coupe models]
95	LG	- [Roadster models]
97	LG	- [Coupe models]
97	Y	- [Roadster models]
98	V	- [Coupe models]
98	Y/B	- [Roadster models]
99	G	-
100	BR	- [Coupe models]
100	Y	- [Roadster models]

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	W	POWER WINDOW POWER SUPPLY (BAT)

3	Y	POWER WINDOW POWER SUPPLY (IGN)
---	---	---------------------------------

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	R	INTERIOR ROOM LAMP POWER SUPPLY
5	R	SUPER LOCK OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
11	BR	BAT (FUSE)
13	B	IGN
14	R	PUSH-BUTTON IGNITION SW ILL POWER
15	Y	ACC IND
17	W	TURN SIGNAL RH (FRONT SIDE)
18	O	TURN SIGNAL LH (FRONT SIDE)
19	P	ROOM LAMP TIMER CONTROL

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH



Terminal No.	Color of Wire	Signal Name [Specification]
34	G	LUGGAGE ROOM ANT-
35	R	LUGGAGE ROOM ANT+
38	B	BACK DOOR ANT-
39	W	BACK DOOR ANT+
47	V	IGN RELAY (IPDM E/R) CONT
52	SB	STARTER RELAY CONT
61	W	BACK DOOR REQUEST SW [Coupe models]
61	W	TRUNK LID REQUEST SW [Roadster models]

64	G	L-KEY WARN BUZZER (ENG ROOM)
66	R	BACK DOOR SW [Coupe models]
66	R	TRUNK ROOM LAMP SW [Roadster models]
67	GR	BACK DOOR OPENER SW [Coupe models]
67	GR	TRUNK LID OPENER SW [Roadster models]

JCKWA3555GB

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

VEHICLE SECURITY SYSTEM

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



91	90	89	88	87	86	85	84	83	82	81	80	79	78	77	76	75	74	73	72
111	110	109	108	107	106	105	104	103	102	101	100	99	98	97	96	95	94	93	92

ECU DIAGNOSIS INFORMATION

BCM

Reference Value

INFOID:000000006921587

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	NOTE: The item is indicated, but not monitored.	Off
RR FOG SW	Rear fog lamp switch OFF	Off
	Rear fog lamp switch ON	On
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	NOTE: The item is indicated, but not monitored.	Off

BCM

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
DOOR SW-RL	NOTE: The item is indicated, but not monitored.	Off	A
DOOR SW-BK	<ul style="list-style-type: none"> Back door closed (Coupe models) Trunk lid closed (Roadster models) 	Off	B
	<ul style="list-style-type: none"> Back door opened (Coupe models) Trunk lid opened (Roadster models) 	On	
CDL LOCK SW	Other than door lock and unlock switch LOCK	Off	C
	Door lock and unlock switch LOCK	On	
CDL UNLOCK SW	Other than door lock and unlock switch UNLOCK	Off	D
	Door lock and unlock switch UNLOCK	On	
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off	E
	Driver door key cylinder LOCK position	On	
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off	F
	Driver door key cylinder UNLOCK position	On	
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off	
HAZARD SW	Hazard switch is OFF	Off	G
	Hazard switch is ON	On	
REAR DEF SW NOTE: For models with NAVI this item is not monitored.	Rear window defogger switch OFF	Off	H
	Rear window defogger switch ON	On	
H/L WASH SW	NOTE: The item is indicated, but not monitored.	Off	I
TR CANCEL SW	Trunk lid opener cancel switch OFF	Off	J
	Trunk lid opener cancel switch ON	On	
TR/BD OPEN SW	<ul style="list-style-type: none"> Back door opener switch OFF (Coupe models) Trunk lid opener switch OFF (Roadster models) 	Off	SEC
	<ul style="list-style-type: none"> While the back door opener switch is turned ON (Coupe models) While the trunk lid opener switch is turned ON (Roadster models) 	On	
TRNK/HAT MNTR	NOTE: The item is indicated, but not monitored.	Off	
RKE-LOCK	LOCK button of the Intelligent Key is not pressed	Off	L
	LOCK button of the Intelligent Key is pressed	On	
RKE-UNLOCK	UNLOCK button of the Intelligent Key is not pressed	Off	M
	UNLOCK button of the Intelligent Key is pressed	On	
RKE-TR/BD NOTE: For Coupe models this item is not monitored.	TRUNK OPEN button of the Intelligent Key is not pressed	Off	N
	TRUNK OPEN of the Intelligent Key is pressed	On	
RKE-PANIC	PANIC button of the Intelligent Key is not pressed	Off	O
	PANIC button of the Intelligent Key is pressed	On	
RKE-P/W OPEN	UNLOCK button of the Intelligent Key is not pressed	Off	P
	UNLOCK button of the Intelligent Key is pressed and held	On	
RKE-MODE CHG	LOCK/UNLOCK button of the Intelligent Key is not pressed and held simultaneously	Off	
	LOCK/UNLOCK button of the Intelligent Key is pressed and held simultaneously	On	

BCM

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V
	Dark outside of the vehicle	Close to 0 V
REQ SW -DR	Driver door request switch is not pressed	Off
	Driver door request switch is pressed	On
REQ SW -AS	Passenger door request switch is not pressed	Off
	Passenger door request switch is pressed	On
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -RL	NOTE: The item is indicated, but not monitored.	Off
REQ SW -BD/TR	<ul style="list-style-type: none"> Back door request switch is not pressed (Coupe models) Trunk lid door request switch is not pressed (Roadster models) 	Off
	<ul style="list-style-type: none"> Back door request switch is pressed (Coupe models) Trunk lid door request switch is pressed (Roadster models) 	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
ACC RLY -F/B	NOTE: The item is indicated, but not monitored.	Off
CLUCH SW NOTE: For A/T models this item is not monitored.	The clutch pedal is not depressed	Off
	The clutch pedal is depressed	On
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
	The brake pedal is depressed	On
DETE/CANCL SW NOTE: For M/T models with Synchro-Rev Match mode this item is not monitored.	<ul style="list-style-type: none"> Selector lever in P position (A/T models) The clutch pedal is depressed (M/T models without SynchroRev Match mode) 	Off
	<ul style="list-style-type: none"> Selector lever in any position other than P (A/T models) The clutch pedal is not depressed (M/T models without SynchroRev Match mode) 	On
SFT PN/N SW NOTE: For roadster M/T models and coupe M/T models without SynchroRev Match mode this item is not monitored.	<ul style="list-style-type: none"> Selector lever in any position other than P and N (A/T models) Control lever in any position other than neutral position (Coupe M/T models with SynchroRev Match mode) 	Off
	<ul style="list-style-type: none"> Selector lever in P or N position (A/T models) Control lever in neutral position (Coupe M/T models with SynchroRev Match mode) 	On
S/L -LOCK NOTE: For models without steering lock unit, this item is not monitored.	Steering is unlocked	Off
	Steering is locked	On
S/L -UNLOCK NOTE: For models without steering lock unit, this item is not monitored.	Steering is locked	Off
	Steering is unlocked	On

BCM

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
S/L RELAY-F/B NOTE: For models without steering lock unit, this item is not monitored.	Ignition switch in OFF or ACC position	Off	A
	Ignition switch in ON position	On	B
UNLK SEN -DR	Driver door is unlocked	Off	C
	Driver door is locked	On	
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off	D
	Push-button ignition switch (push-switch) is pressed	On	
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off	E
	Ignition switch in ON position	On	
DETE SW -IPDM	Selector lever in any position other than P	Off	F
	Selector lever in P position	On	
SFT PN -IPDM	<ul style="list-style-type: none"> Selector lever in any position other than P and N (A/T models) The clutch pedal is not depressed (M/T models) 	Off	G
	<ul style="list-style-type: none"> Selector lever in P or N position (A/T models) The clutch pedal is depressed (M/T models) 	On	
SFT P -MET	Selector lever in any position other than P	Off	H
	Selector lever in P position	On	
SFT N -MET	Selector lever in any position other than N	Off	I
	Selector lever in N position	On	
ENGINE STATE	Engine stopped	Stop	J
	While the engine stalls	Stall	
	At engine cranking	Crank	
	Engine running	Run	
S/L LOCK-IPDM NOTE: For models without steering lock unit, this item is not monitored.	Steering is unlocked	Off	SEC
	Steering is locked	On	
S/L UNLK-IPDM NOTE: For models without steering lock unit, this item is not monitored.	Steering is locked	Off	L
	Steering is unlocked	On	
S/L RELAY-REQ NOTE: For models without steering lock unit, this item is not monitored.	Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK	Off	M
	Steering lock system are not the LOCK condition or the changing condition from LOCK to UNLOCK	On	
VEH SPEED 1	While driving	Equivalent to speedometer reading	O
VEH SPEED 2	While driving	Equivalent to speedometer reading	
DOOR STAT-DR	Driver door is locked	LOCK	P
	Wait with selective UNLOCK operation (60 seconds)	READY	
	Driver door is unlocked	UNLOCK	
DOOR STAT-AS	Passenger door is locked	LOCK	
	Wait with selective UNLOCK operation (60 seconds)	READY	
	Passenger door is unlocked	UNLOCK	

BCM

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
ID OK FLAG	Steering is locked	Reset
	Steering is unlocked	Set
PRMT ENG STRT	The engine start is prohibited	Reset
	The engine start is permitted	Set
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset
KEY SW -SLOT	The Intelligent Key is not inserted into key slot	Off
	The Intelligent Key is inserted into key slot	On
RKE OPE COUN1	During the operation of the Intelligent Key	Operation frequency of the Intelligent Key
RKE OPE COUN2	During the operation of the Intelligent Key	Operation frequency of the Intelligent Key
CONFIRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by any key ID registered to BCM.	Done
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet
	The ID of fourth Intelligent Key is registered to BCM	Done
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet
	The ID of third Intelligent Key is registered to BCM	Done
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet
	The ID of second Intelligent Key is registered to BCM	Done
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet
	The ID of first Intelligent Key is registered to BCM	Done
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet

BCM


< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC


TERMINAL LAYOUT

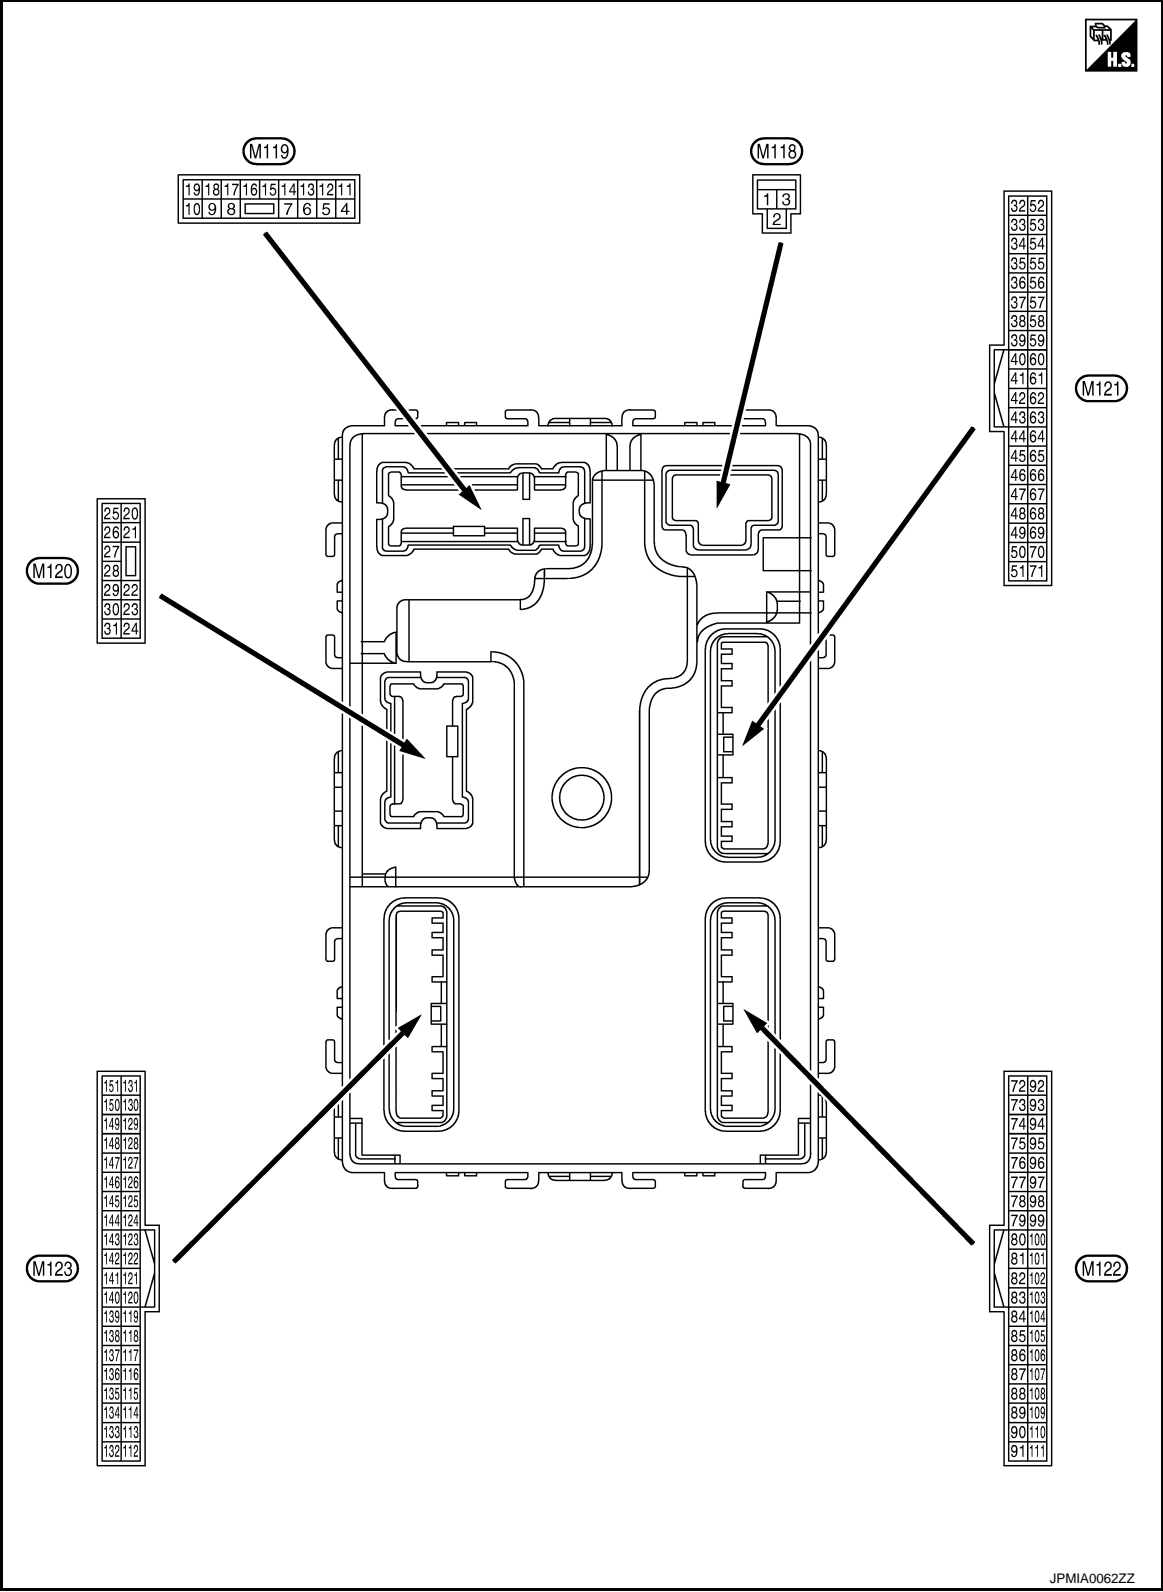

PHYSICAL VALUES

BCM





< ECU DIAGNOSIS INFORMATION >

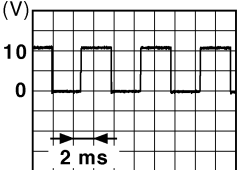Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (W)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		12 V
3 (Y)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		12 V
4 (R)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		12 V
5 (G)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors, fuel lid	LOCK (Actuator is activated)	12 V
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door, fuel lid	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
11 (BR)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (R)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p>NOTE: When the illumination brightening/dimming level is in the neutral position.</p>  <p>JSNIA0010GB</p>
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ACC	0 V

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

BCM

< ECU DIAGNOSIS INFORMATION >

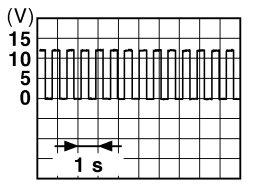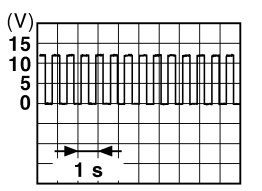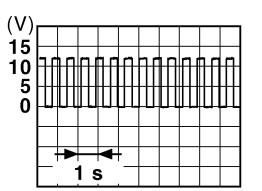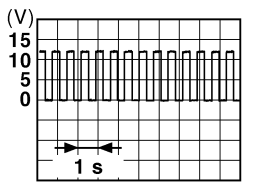Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
17 (W)	Ground	Turn signal RH (Front and side)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 6.5 V
18 (O)	Ground	Turn signal LH (Front and side)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 6.5 V
19 (P)	Ground	Room lamp timer control	Output	Interior room lamp	OFF	12 V
					ON	0 V
20 (V)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 6.5 V
23 (L)*1 (Y)*2	Ground	Back door/Trunk lid open	Output	Back door/Trunk lid	OPEN (Back door/Trunk lid opener actuator is activated)	12 V
					Other than OPEN (Back door/Trunk lid opener actuator is not activated)	0 V
24 (O)	Ground	Rear fog lamp	Output	Rear fog lamp	OFF	0 V
					ON	12 V
25 (LG)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 6.5 V
30 (R)	Ground	Luggage room/Trunk room lamp	Output	Luggage room/Trunk room lamp	ON	0 V
					OFF	12 V

BCM

< ECU DIAGNOSIS INFORMATION >




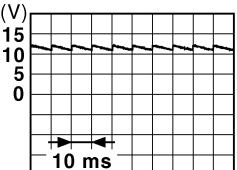
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
34 (G)	Ground	Luggage room/Trunk room antenna (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	<p>JMKIA0062GB</p>
					When Intelligent Key is not in the passenger compart- ment	<p>JMKIA0063GB</p>
35 (R)	Ground	Luggage room/Trunk room antenna (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	<p>JMKIA0062GB</p>
					When Intelligent Key is not in the passenger compart- ment	<p>JMKIA0063GB</p>
38 (B)	Ground	Rear bumper anten- na (-)	Output	When the back door/trunk lid door request switch is oper- ated with igni- tion switch OFF	When Intelligent Key is in the antenna detection area	<p>JMKIA0062GB</p>
					When Intelligent Key is not in the antenna detection area	<p>JMKIA0063GB</p>

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC






BCM

< ECU DIAGNOSIS INFORMATION >

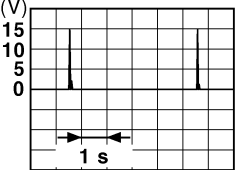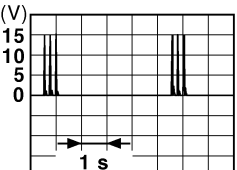Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
39 (W)	Ground	Rear bumper antenna (+)	Output	When the back door/trunk lid door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
47 (V)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	12 V
					ON	0 V
52 (SB)	Ground	Starter relay control	Output	Ignition switch ON (A/T models)	When selector lever is in P or N position	12 V
					When selector lever is not in P or N position	0 V
				Ignition switch ON (M/T models)	When the clutch pedal is depressed	Battery voltage
					When the clutch pedal is not depressed	0 V
61 (W)	Ground	Back door/Trunk Lid door request switch	Input	Back door/Trunk lid door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 JPMIA0016GB 1.0 V
64 (G)	Ground	Intelligent Key warning buzzer	Output	Intelligent Key warning buzzer	Sounding	0 V
					Not sounding	12 V
66 (R)	Ground	Back door/Trunk room lamp switch	Input	Back door/Trunk room lamp switch	OFF (Door close)	 JPMIA0011GB 11.8 V
					ON (Door open)	0 V

BCM

< ECU DIAGNOSIS INFORMATION >


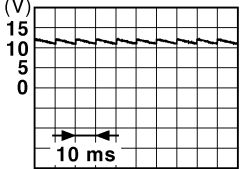
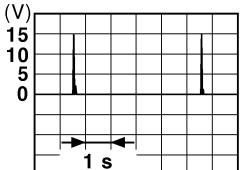
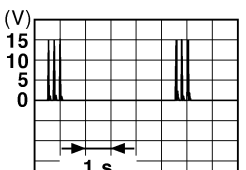
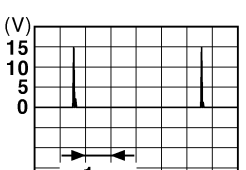
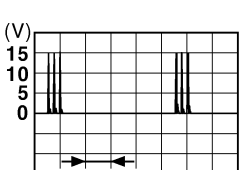
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
67 (GR)	Ground	Back door/Trunk lid opener switch	Input	Back door/ Trunk lid open- er switch	Pressed	0 V
					Not pressed	 <p>JPMIA0011GB</p>
72 (L)	Ground	Room antenna 2 (-) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 <p>JMKIA0062GB</p>
					When Intelligent Key is not in the passenger compart- ment	 <p>JMKIA0063GB</p>
73 (P)	Ground	Room antenna 2 (+) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 <p>JMKIA0062GB</p>
					When Intelligent Key is not in the passenger compart- ment	 <p>JMKIA0063GB</p>

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC







BCM

< ECU DIAGNOSIS INFORMATION >

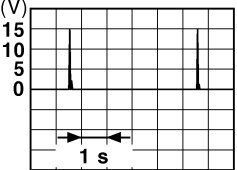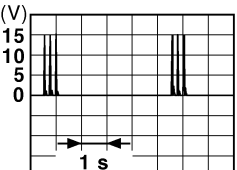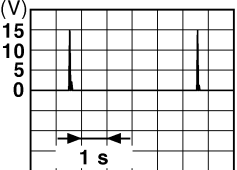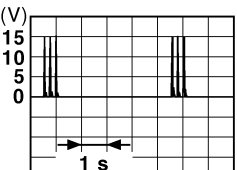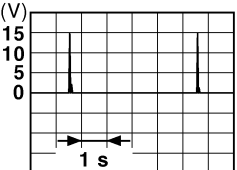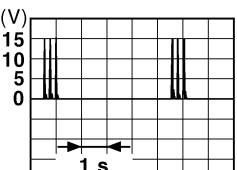Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
74 (SB)	Ground	Passenger door antenna (-)	Output	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
				When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
75 (BR)	Ground	Passenger door antenna (+)	Output	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
				When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
76 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
				When Intelligent Key is not in the antenna detection area	 JMKIA0063GB

BCM

< ECU DIAGNOSIS INFORMATION >

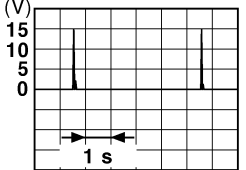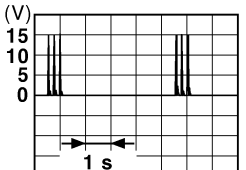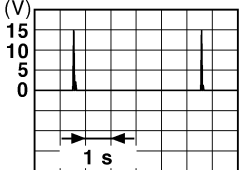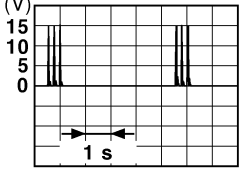
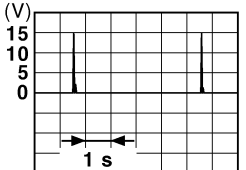
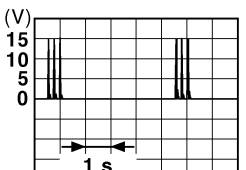


Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
77 (LG)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operated with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>
78*2 (L)	Ground	Room antenna 1 (-) (Instrument panel)	Output	Ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	 <p>JMKIA0063GB</p>
79*2 (R)	Ground	Room antenna 1 (+) (Instrument panel)	Output	Ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	 <p>JMKIA0063GB</p>

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC



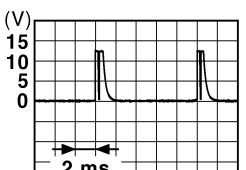

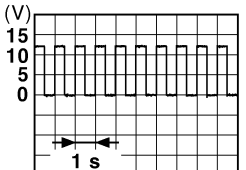
BCM
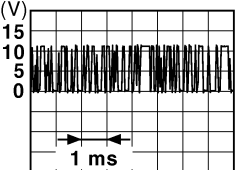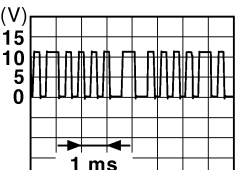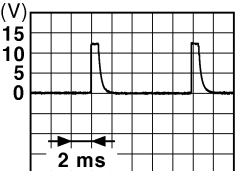
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
80 (GR)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (W)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (R)	Ground	Ignition relay [Fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
83 (GR)	Ground	Remote keyless entry receiver (front) communication	Input/ Output	During waiting		 JMKIA0064GB
				When operating either button on the Intelligent Key		 JMKIA0065GB
87 (BR)	Ground	Combination switch INPUT 5	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 JPMIA0041GB 1.4 V
					Rear fog lamp switch ON (Wiper intermittent dial 4)	 JPMIA0038GB 1.3 V
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7 	 JPMIA0040GB 1.3 V

BCM

< ECU DIAGNOSIS INFORMATION >

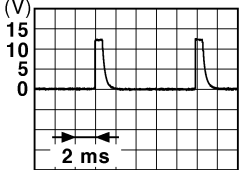Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
88 (V)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <p>JPMIA0041GB</p> <p>1.4 V</p>
					Lighting switch HI (Wiper intermittent dial 4)	 <p>JPMIA0036GB</p> <p>1.3 V</p>
					Lighting switch 2ND (Wiper intermittent dial 4)	 <p>JPMIA0037GB</p> <p>1.3 V</p>
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 	 <p>JPMIA0040GB</p> <p>1.3 V</p>
89 (BR)	Ground	Push-button ignition switch (Push switch)	Input	Push-button ignition switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
90 (P)	Ground	CAN-L	Input/ Output	—	—	—
91 (L)	Ground	CAN-H	Input/ Output	—	—	—
92 (LG)	Ground	Key slot illumination	Output	Key slot illumination	OFF	0 V
					Blinking	 <p>JPMIA0015GB</p> <p>6.5 V</p>
					ON	12 V

A

B

C

D

E

F

G

H

I

J

SEC

L

M



N

O

P



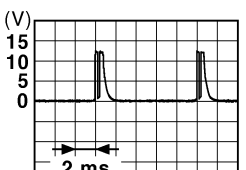

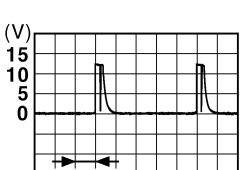
BCM

< ECU DIAGNOSIS INFORMATION >

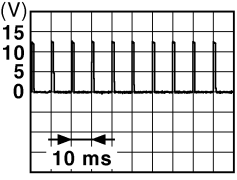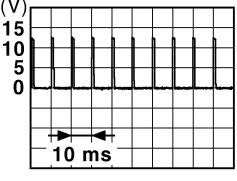Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ON	0 V
95 (O)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	12 V
96*3 (Y)	Ground	A/T shift selector (Detention switch) power supply	Output	—		12 V
97*4 (L)	Ground	Steering lock condition No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	12 V
98*4 (P)	Ground	Steering lock condition No. 2	Input	Steering lock	LOCK status	12 V
					UNLOCK status	0 V
99*5 (R)	Ground	Selector lever P position switch (A/T models)	Input	Selector lever	P position	0 V
					Any position other than P	12 V
		Clutch pedal position switch (M/T models without SynchroRev Match mode)	Input	Clutch pedal position switch	OFF (Clutch pedal is depressed)	0 V
					ON (Clutch pedal is not depressed)	Battery voltage
100 (GR)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p>JPMIA0016GB</p> <p>1.0 V</p>
101 (Y)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p>JPMIA0016GB</p> <p>1.0 V</p>
102 (O)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
103 (LG)	Ground	Remote keyless entry receiver (front) power supply	Output	Ignition switch OFF		12 V
106*4 (W)	Ground	Steering lock unit power supply	Output	Ignition switch	OFF or ACC	12 V
					ON	0 V

BCM

< ECU DIAGNOSIS INFORMATION >

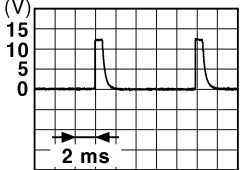

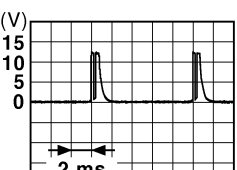
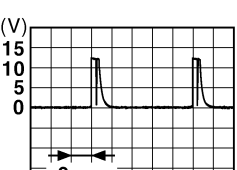
Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
107 (LG)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermit- tent dial 4)	All switches OFF  1.4 V
					Turn signal switch LH  1.3 V
					Turn signal switch RH  1.3 V
					Front wiper switch LO  1.3 V
					Front washer switch ON  1.3 V

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC



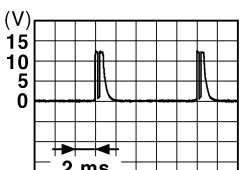



BCM
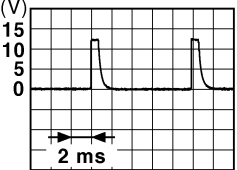
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	 <p>1.4 V</p>
				Lighting switch AUTO (Wiper intermittent dial 4)	 <p>1.3 V</p>
				Lighting switch 1ST (Wiper intermittent dial 4)	 <p>1.3 V</p>
				Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 	 <p>1.3 V</p>

BCM
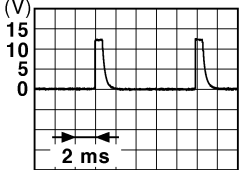
< ECU DIAGNOSIS INFORMATION >


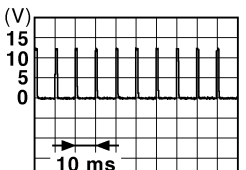
Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
109 (Y)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermit- tent dial 4)	All switches OFF  <small>JPMIA0041GB</small> 1.4 V
					Lighting switch PASS  <small>JPMIA0037GB</small> 1.3 V
					Lighting switch 2ND  <small>JPMIA0036GB</small> 1.3 V
					Front wiper switch INT  <small>JPMIA0038GB</small> 1.3 V
					Front wiper switch HI  <small>JPMIA0040GB</small> 1.3 V
					ON 0 V
110 (P)	Ground	Hazard switch	Input	Hazard switch	OFF  <small>JPMIA0012GB</small> 1.1 V

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC






BCM

< ECU DIAGNOSIS INFORMATION >

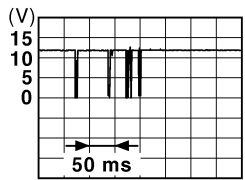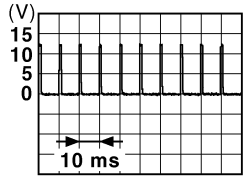Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
111*4 (Y)	Ground	Steering lock unit communication	Input/ Output	Steering lock	LOCK status	12 V
					LOCK or UNLOCK	 JMKIA0066GB
					For 15 seconds after UN- LOCK	12 V
					15 seconds or later after UNLOCK	0 V
113 (O)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
114*6 (R)	Ground	Clutch interlock switch	Input	Clutch interlock switch	OFF (Clutch pedal is not depressed)	0 V
					ON (Clutch pedal is de- pressed)	Battery voltage
116 (SB)	Ground	Stop lamp switch 1	Input	—		Battery voltage
118 (P)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
119 (SB)	Ground	Driver side door lock assembly (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	 JPMIA0012GB
					UNLOCK status (Unlock switch sensor ON)	0 V
121 (R)	Ground	Key slot switch	Input	When the Intelligent Key is inserted into key slot		12 V
				When the Intelligent Key is not inserted into key slot		0 V
123 (W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage

BCM

< ECU DIAGNOSIS INFORMATION >

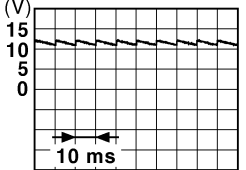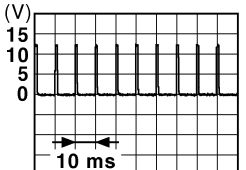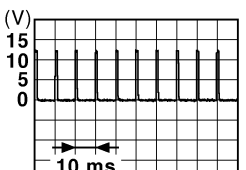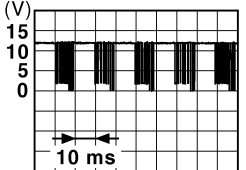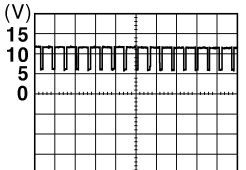Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
124 (LG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (Door close)	 JPMIA0011GB 11.8 V
					ON (Door open)	0 V
129*2 (O)	Ground	Trunk lid opener cancel switch	Input	Trunk lid opener cancel switch	CANCEL	 JPMIA0012GB 1.1 V
					ON	0 V
130*7 (L)	Ground	Rear window defogger switch	Input	Ignition switch ON	Rear window defogger switch OFF	 JPMIA0012GB 1.1 V
					Rear window defogger switch ON	0 V
132 (Y)*1 (V)*2	Ground	Power window switch and soft top control unit communication	Input/ Output	Ignition switch ON		 JPMIA0013GB 10.2 V
				Ignition switch OFF or ACC		12 V
133 (G)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumination	ON (Tail lamps OFF)	9.5 V
					ON (Tail lamps ON)	NOTE: The pulse width of this wave is varied by the illumination brightening/dimming level.  JPMIA0159GB
					OFF	0 V

A

B

C

D

E

F

G

H

I

J

SEC

L

M





N

O

P





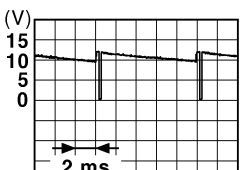
BCM
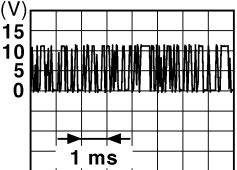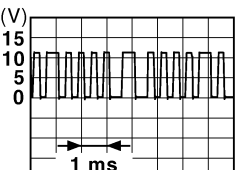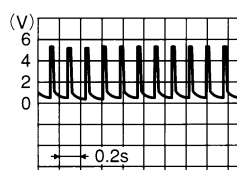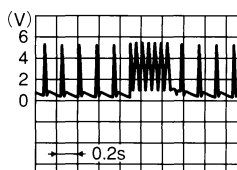
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
134 (GR)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF	Battery voltage
					ON	0 V
137 (P)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V
138 (V)	Ground	Receiver and sensor power supply	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V
139 (L)	Ground	Tire pressure receiver communication	Input/ Output	Ignition switch OFF (Remote keyless entry receiver communication)	During waiting	 JMKIA0064GB
					When operating either button on the Intelligent Key	 JMKIA0065GB
				Ignition switch ON (Tire pressure receiver communication)	Standby state	 OCC3881D
					When receiving the signal from the transmitter	 OCC3880D
140*8 (G)	Ground	Selector lever P/N position (A/T models)	Input	Selector lever	P or N position	12 V
					Except P and N positions	0 V
		Park/neutral position switch (Coupe M/T models with Synchro-Rev Match mode)	Input	Ignition switch ON	Control lever in neutral position	Battery voltage
					Control lever in any position other than neutral	0 V

BCM
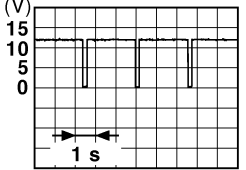
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
141 (Y)	Ground	Security indicator lamp	Output	Security indica- tor lamp	ON	0 V
					Blinking	 JPMIA0014GB
					OFF	11.3 V
142 (O)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	12 V
					Lighting switch 1ST	 JPMIA0031GB
					Lighting switch HI	
					Lighting switch 2ND	
					Turn signal switch RH	
143 (P)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switches OFF (Wiper intermittent dial 4)	0 V
					Front wiper switch HI (Wiper intermittent dial 4)	 JPMIA0032GB
					Any of the conditions be- low with all switches OFF	
					<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7 	
144 (G)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switches OFF (Wiper intermittent dial 4)	0 V
					Front washer switch ON (Wiper intermittent dial 4)	 JPMIA0033GB
					Any of the conditions be- low with all switches OFF	
					<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 	
145 (L)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	0 V
					Front wiper switch INT	 JPMIA0034GB
					Front wiper switch LO	
					Lighting switch AUTO	
					Rear fog lamp switch ON	

A

B

C

D

E

F

G

H

I

J

SEC

L

M



N

O

P

BCM


< ECU DIAGNOSIS INFORMATION >

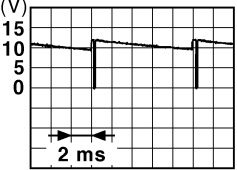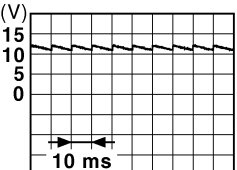Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
146 (SB)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	0 V
					Lighting switch 2ND	
					Lighting switch PASS	
					Turn signal switch LH	
150 (GR)	Ground	Driver door switch	Input	Driver door switch	OFF (Door close)	
					ON (Door open)	11.8 V
151 (G)	Ground	Rear window defog- ger relay control	Output	Rear window defogger	Active	0 V
					Not activated	Battery voltage

- *1: Coupe models
- *2: Roadster models
- *3: A/T models
- *4: With steering lock unit
- *5: Except M/T models with SynchroRev Match mode
- *6: M/T models
- *7: Without NAVI
- *8: A/T models or coupe M/T models without SynchroRev Match mode

Wiring Diagram - BCM -

INFOID:000000006921588

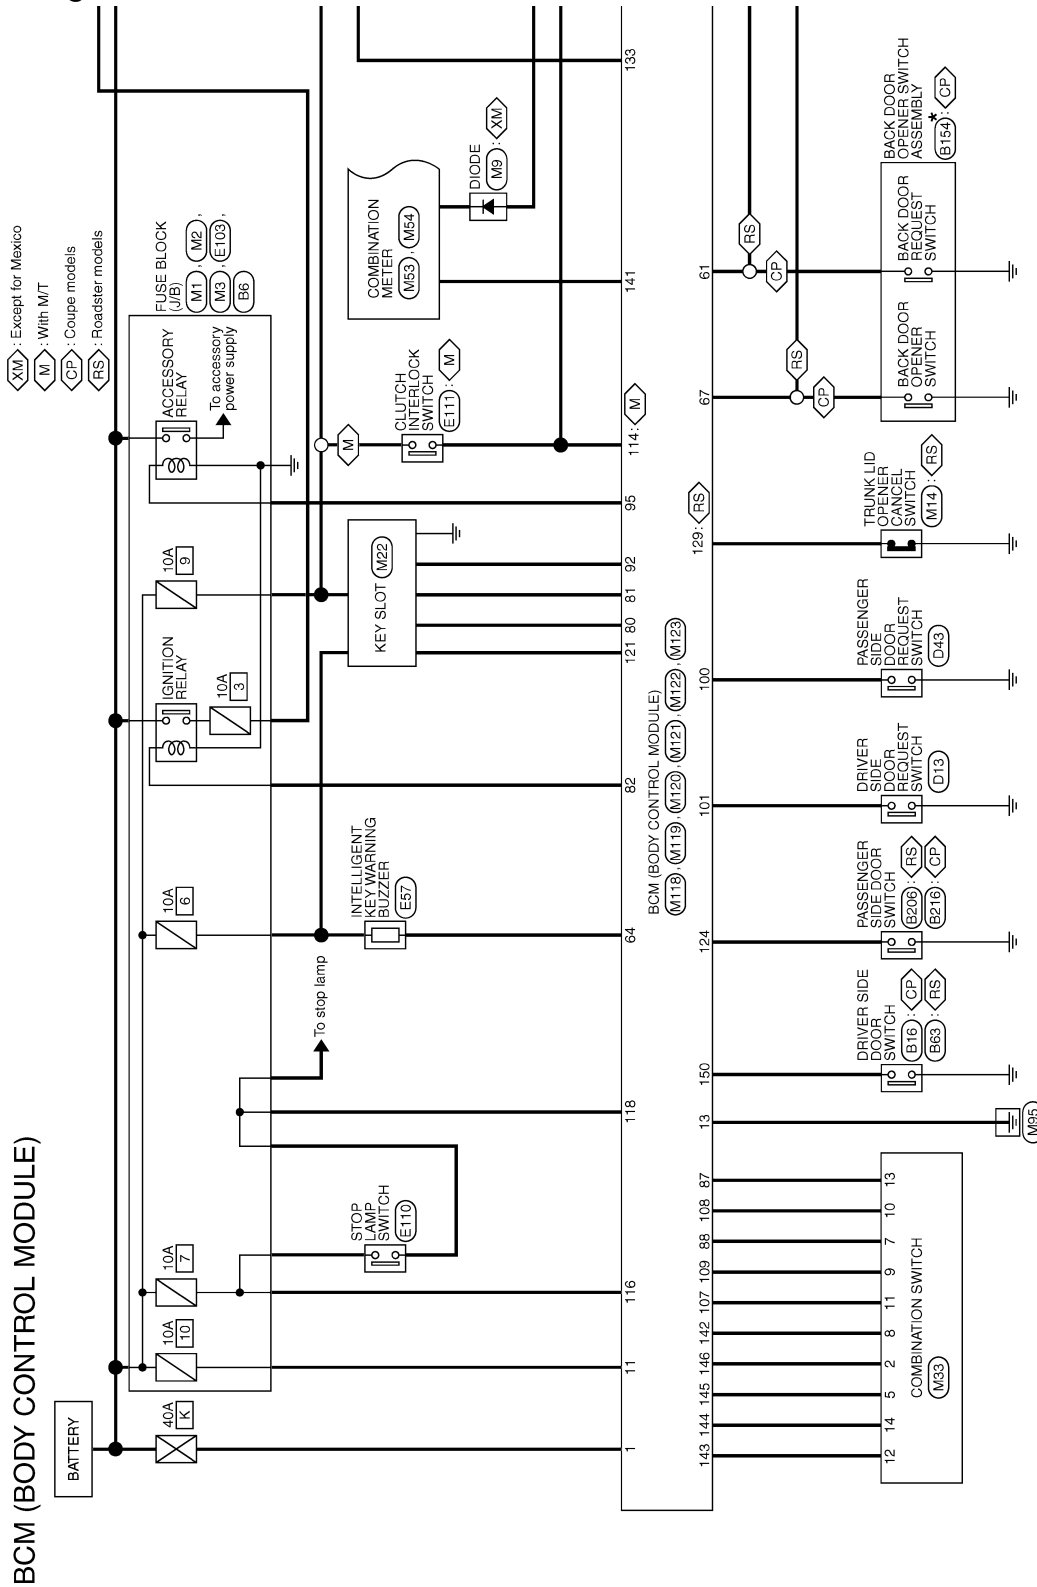

*: This connector is not shown in "Harness Layout".

2010/09/22

JCMWA6293GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

< ECU DIAGNOSIS INFORMATION >

SL : With steering lock unit

CP : Coupe models


XM : Except for Mexico

RS : Roadster models

A : With A/T


CS : Coupe models with M/T and SynchroRev Match mode

M : With M/T

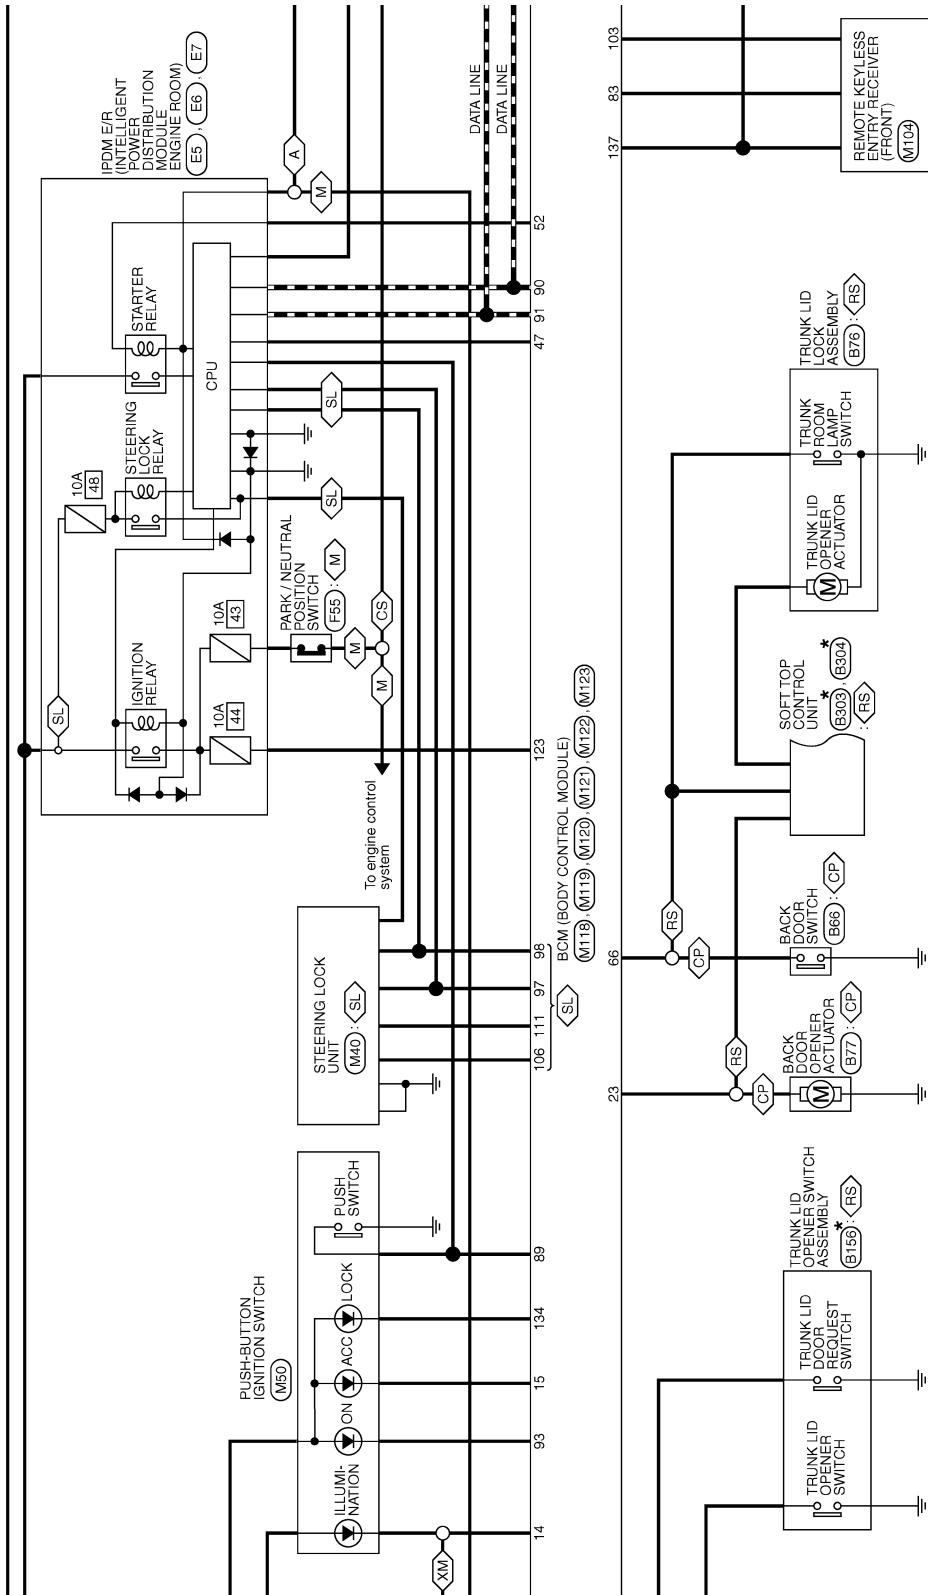


★ : This connector is not shown in "Harness Layout".

 JCMWA6294GB




A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

CP : Coupe models
 RS : Roadster models
 WP : With power seat
 ON : Without NAVI

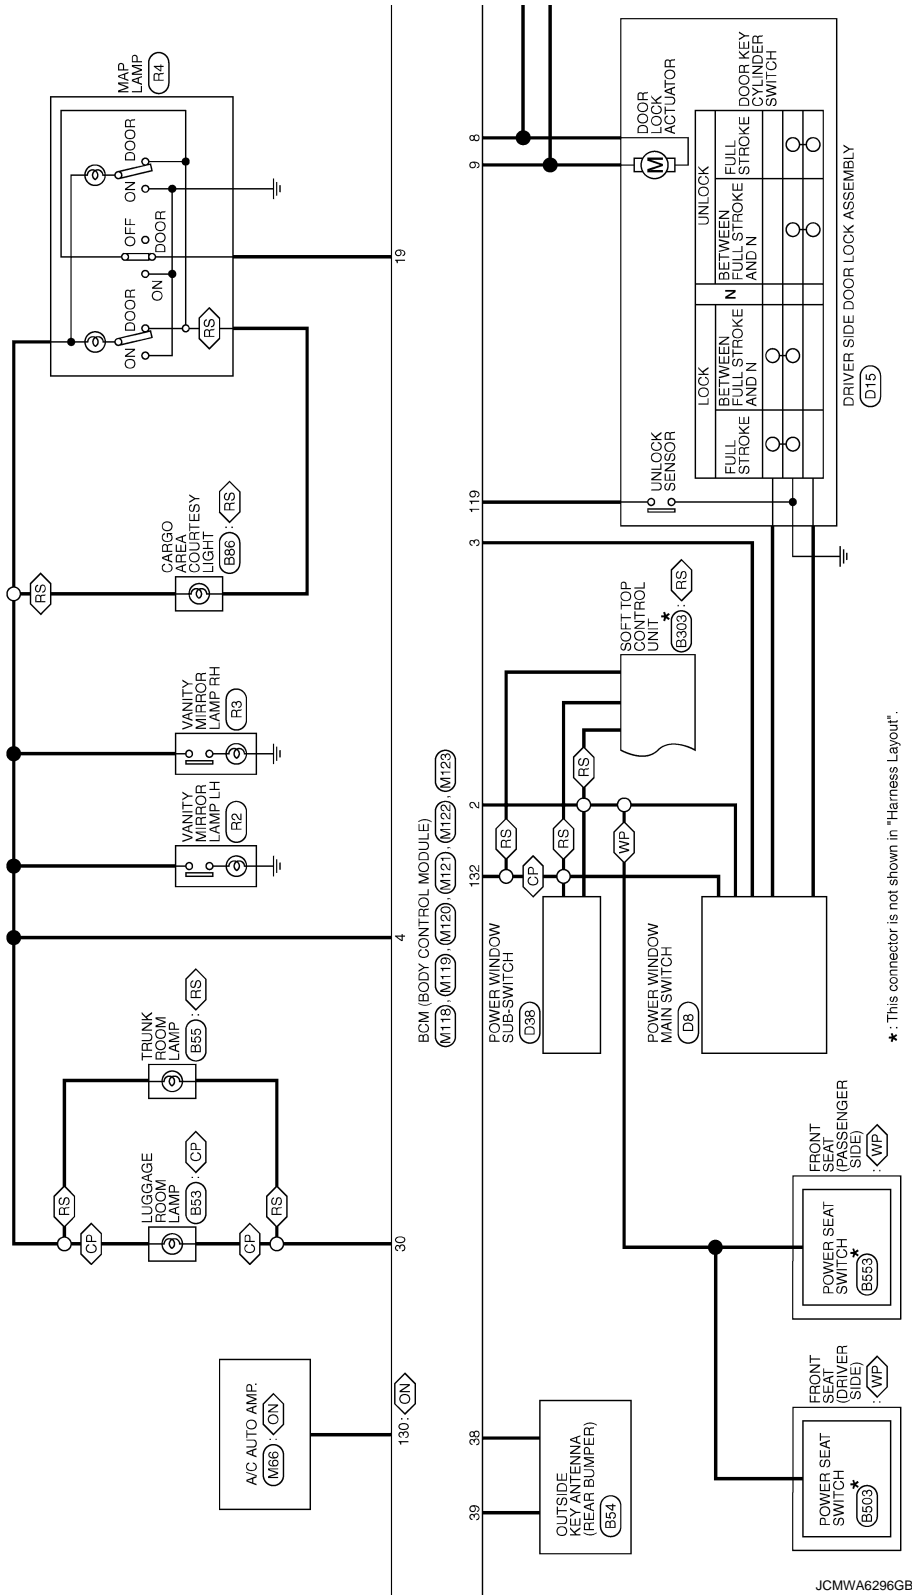

A : With A/T
M : With M/T
RF : With rear fog lamp

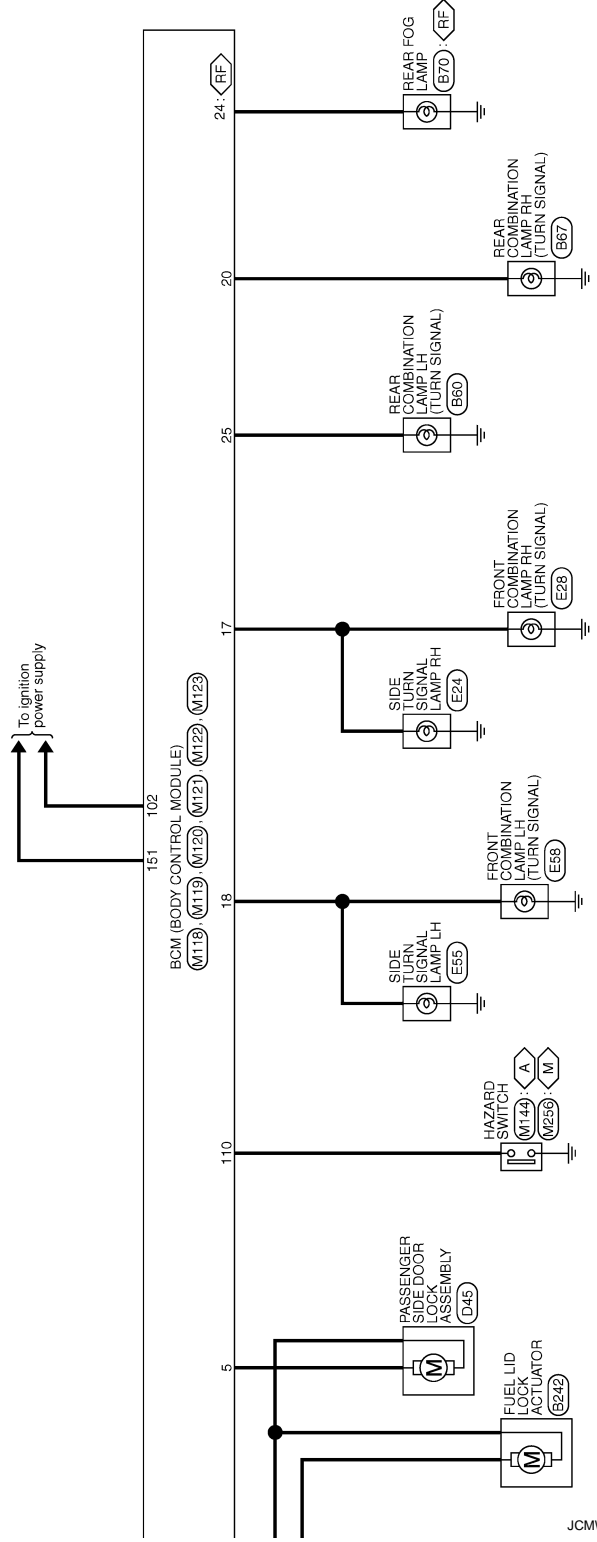


JCMWA6297GB

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

BCM (BODY CONTROL MODULE)

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	P	FR WASHER (-)
2	SB	OUTPUT 4
5	L	OUTPUT 3
6	B	GND
7	V	INPUT 3
8	O	OUTPUT 5
9	Y	INPUT 2
10	R	INPUT 4
11	LG	INPUT 1
12	P	OUTPUT 1
13	BR	INPUT 5
14	G	OUTPUT 2

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LG




Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	W	POWER WINDOW POWER SUPPLY (BAT)
3	Y	POWER WINDOW POWER SUPPLY (IGN)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS

 


Terminal No.	Color of Wire	Signal Name [Specification]
4	R	INTERIOR ROOM LAMP POWER SUPPLY
5	G	SUPER LOCK OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
11	BR	BAT (FUSE)
13	B	GND
14	R	PUSH-BUTTON IGNITION SW (LL POWER)
15	Y	ACC IND
17	W	TURN SIGNAL RH (FRONT, SIDE)
18	O	TURN SIGNAL LH (FRONT, SIDE)
19	P	ROOM LAMP TIMER CONTROL

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS

 


Terminal No.	Color of Wire	Signal Name [Specification]
20	V	TURN SIGNAL RH (REAR)
23	L	BACK DOOR OPEN OUTPUT (Coupe models)
24	Y	TRUNK LID OPEN OUTPUT (Roadster models)
25	O	REAR FOG OUTPUT
26	LG	TURN SIGNAL LH (REAR)
30	R	LUGGAGE ROOM LAMP OUTPUT

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40GF-NH

 

Terminal No.	Color of Wire	Signal Name [Specification]
34	G	LUGGAGE ROOM ANT-
35	R	LUGGAGE ROOM ANT+
38	B	BACK DOOR ANT-
39	W	BACK DOOR ANT+
47	V	IGN RELAY (PDM E/R) CONT
52	SB	STARTER RELAY CONT
61	W	BACK DOOR REQUEST SW (Coupe models)
64	G	TRUNK LID REQUEST SW (Roadster models)
66	R	1-KEY WARN BUZZER (ENG ROOM)
68	R	BACK DOOR SW (Coupe models)
69	R	TRUNK ROOM LAMP SW (Roadster models)
67	GR	BACK DOOR OPENER SW (Coupe models)
67	GR	TRUNK LID OPENER SW (Roadster models)

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH

 

Terminal No.	Color of Wire	Signal Name [Specification]
72	L	ROOM ANT 2-
73	P	ROOM ANT 2+
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	L	ROOM ANT 1-
79	R	ROOM ANT 1+
80	GR	NATS ANT AMP



81	W	NATS ANT AMP
82	R	IGN RELAY (F/B) CONT
83	GR	KYLS ENT RECEIVER (FRONT) COMM
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL
93	V	ON IND
95	O	ACC RELAY CONT
96	Y	A/T SHIFT SELECTOR POWER SUPPLY
97	L	S/L CONDITION 1
98	P	S/L CONDITION 2
99	R	CLUTCH PEDAL POS SW (Whr M/T)
99	R	SHIFT P (Whr A/T)
100	GR	PASSENGER DOOR REQUEST SW
101	Y	DRIVER DOOR REQUEST SW
102	O	BLOWER FAN MOTOR RELAY CONT
103	LG	KYLS ENT RECEIVER (FRONT) PWR SUPPLY
106	W	S/L UNIT POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	P	HAZARD SW
111	Y	S/L UNIT COMM

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH

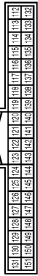

Terminal No.	Color of Wire	Signal Name [Specification]
113	O	OPTICAL SENSOR
114	R	CLUTCH INTERLOCK SW
115	O	SHOCK SENSOR
116	SB	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	R	KEY SLOT SW
123	W	IGN P/B
124	LG	PASSENGER DOOR SW
129	O	TRUNK LID OPENER CANCEL SW
130	L	REAR DEFOGGER SW
132	V	P/W SW & SOFT TOP C/U COMM [Resistor models]
132	Y	POWER WINDOW SW COMM [Coupe models]
133	G	PUSH BUTTON IGNITION SW ILL POWER
134	GR	LOCK IND
137	P	RECEIVER/SENSOR GND
138	V	RECEIVER / SENSOR POWER SUPPLY
139	L	TIRE PRESS./K/LS ENT (REAR) RECEIV COMM
140	G	P/N POSITION SW [With M/T]
141	G	SHIFT N/P [With A/T]
141	Y	SECURITY INDICATOR
142	O	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

Fail-safe

FAIL-SAFE CONTROL BY DTC
BCM performs fail-safe control when any DTC are detected.

BCM

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> • Selector lever P position switch signal • P range signal (CAN)
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Vehicle speed: 4 km/h (2.5 MPH) or more
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Selector lever P/N position signal: Except P and N positions (0 V)
B2604: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (battery voltage) - P range signal or N range signal (CAN): ON • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF
B2605: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - Interlock/PNP switch signal (CAN): OFF • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (battery voltage) - PNP switch signal (CAN): ON
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)

BCM

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has becomes consistent <ul style="list-style-type: none"> Steering lock relay signal (Request signal) Steering lock relay signal (Condition signal)
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> Starter motor relay control signal Starter relay status signal (CAN)
B2609: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock 	When the following steering lock conditions agree <ul style="list-style-type: none"> BCM steering lock control status Steering lock condition No. 1 signal status Steering lock condition No. 2 signal status
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> IGN relay (IPDM E/R) control signal: OFF (Battery voltage) Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> Power position changes to ACC Receives engine status signal (CAN)
B2612: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock 	When any of the following conditions are fulfilled <ul style="list-style-type: none"> Steering lock unit status signal (CAN) is received normally The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E8: CLUTCH SW	Inhibit engine cranking	When any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> Status 1 <ul style="list-style-type: none"> Clutch switch signal (CAN from ECM): ON Clutch interlock switch signal: OFF (0 V) Status 2 <ul style="list-style-type: none"> Clutch switch signal (CAN from ECM): OFF Clutch interlock switch signal: ON (Battery voltage)
B26E9: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock 	When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> Steering condition No. 1 signal: LOCK (0 V) Steering condition No. 2 signal: LOCK (Battery voltage)

DTC Inspection Priority Chart

INFOID:0000000006921590

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> U1000: CAN COMM CIRCUIT U1010: CONTROL UNIT (CAN)
3	<ul style="list-style-type: none"> B2190: NATS ANTENNA AMP B2191: DIFFERENCE OF KEY B2192: ID DISCORD BCM-ECM B2193: CHAIN OF BCM-ECM B2195: ANTI SCANNING

BCM

< ECU DIAGNOSIS INFORMATION >

Priority	DTC
4	<ul style="list-style-type: none"> • B2013: ID DISCORD BCM-S/L • B2014: CHAIN OF S/L-BCM • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2606: S/L RELAY • B2607: S/L RELAY • B2608: STARTER RELAY • B2609: S/L STATUS • B260A: IGNITION RELAY • B260B: STEERING LOCK UNIT • B260C: STEERING LOCK UNIT • B260D: STEERING LOCK UNIT • B260F: ENG STATE SIG LOST • B2612: S/L STATUS • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B2619: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26E8: CLUTCH SW • B26E9: S/L STATUS • B26EA: KEY REGISTRATION • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED SIG
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1734: CONTROL UNIT
6	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA

DTC Index

INFOID:000000006921591

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [SEC-26. "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)".](#)

BCM

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warn- ing lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	—	BCS-42
U1010: CONTROL UNIT (CAN)	—	—	—	—	BCS-43
U0415: VEHICLE SPEED SIG	—	—	—	—	BCS-44
B2013: ID DISCORD BCM-S/L*	×	×	—	—	SEC-52
B2014: CHAIN OF S/L-BCM*	×	×	—	—	SEC-53
B2190: NATS ANTENNA AMP	×	—	—	—	SEC-44
B2191: DIFFERENCE OF KEY	×	—	—	—	SEC-47
B2192: ID DISCORD BCM-ECM	×	—	—	—	SEC-48
B2193: CHAIN OF BCM-ECM	×	—	—	—	SEC-50
B2195: ANTI SCANNING	×	—	—	—	SEC-51
B2553: IGNITION RELAY	—	×	—	—	PCS-52
B2555: STOP LAMP	—	×	—	—	SEC-56
B2556: PUSH-BTN IGN SW	—	×	×	—	SEC-58
B2557: VEHICLE SPEED	×	×	×	—	SEC-60
B2560: STARTER CONT RELAY	×	×	×	—	SEC-61
B2562: LOW VOLTAGE	—	×	—	—	BCS-45
B2601: SHIFT POSITION	×	×	×	—	SEC-62
B2602: SHIFT POSITION	×	×	×	—	SEC-65
B2603: SHIFT POSI STATUS	×	×	×	—	SEC-68
B2604: PNP SW	×	×	×	—	SEC-71
B2605: PNP SW	×	×	×	—	SEC-73
B2606: S/L RELAY*	×	×	×	—	SEC-75
B2607: S/L RELAY*	×	×	×	—	SEC-76
B2608: STARTER RELAY	×	×	×	—	SEC-78
B2609: S/L STATUS*	×	×	×	—	SEC-80
B260A: IGNITION RELAY	×	×	×	—	PCS-54
B260B: STEERING LOCK UNIT*	—	×	×	—	SEC-84
B260C: STEERING LOCK UNIT*	—	×	×	—	SEC-85
B260D: STEERING LOCK UNIT*	—	×	×	—	SEC-86
B260F: ENG STATE SIG LOST	×	×	×	—	SEC-87
B2612: S/L STATUS*	×	×	×	—	SEC-92
B2614: ACC RELAY CIRC	—	×	×	—	PCS-56
B2615: BLOWER RELAY CIRC	—	×	×	—	PCS-59
B2616: IGN RELAY CIRC	—	×	×	—	PCS-62
B2617: STARTER RELAY CIRC	×	×	×	—	SEC-96
B2618: BCM	×	×	×	—	PCS-65
B2619: BCM*	×	×	×	—	SEC-98
B261A: PUSH-BTN IGN SW	—	×	×	—	PCS-66

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

BCM

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warn- ing lamp ON	Reference page
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	—	SEC-99
B2621: INSIDE ANTENNA	—	×	—	—	DLK-278
B2622: INSIDE ANTENNA	—	×	—	—	• DLK-83 (Coupe) • DLK-280 (Roadster)
B2623: INSIDE ANTENNA	—	×	—	—	• DLK-85 (Coupe) • DLK-282 (Roadster)
B26E8: CLUTCH SW	×	×	×	—	SEC-88
B26E9: S/L STATUS*	×	×	× (Turn ON for 15 seconds)	—	SEC-90
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	—	SEC-91
C1704: LOW PRESSURE FL	—	—	—	×	WT-23
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	
C1708: [NO DATA] FL	—	—	—	×	WT-25
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	
C1716: [PRESSDATA ERR] FL	—	—	—	×	WT-28
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	WT-30
C1734: CONTROL UNIT	—	—	—	×	WT-32

*: For models without steering lock unit, this DTC is not applied.

IPDM E/R

< ECU DIAGNOSIS INFORMATION >

IPDM E/R

Reference Value

INFOID:0000000006921598

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition		Value/Status
RAD FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 - 100 %
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
	Daytime running light system is operated (With daytime running light system)		
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	NOTE: The item is indicated, but not monitored.		Off
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N (A/T models)	Off
		Release clutch pedal (M/T models)	
	Ignition switch ON	Selector lever in P or N position (A/T models)	On
		Depress clutch pedal (M/T models)	
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O


P

IPDM E/R

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
ST/INHI RLY	Ignition switch ON	Off
	At engine cranking	INHI ON → ST ON
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF	UNKWN
DETENT SW	Ignition switch ON <ul style="list-style-type: none"> Press the selector button with selector lever in P position Selector lever in any position other than P 	Off
	Release the selector button with selector lever in P position NOTE: Fixed On for M/T models	On
S/L RLY -REQ NOTE: For models without steering lock unit, this item is not monitored.	None of the conditions below are present	Off
	<ul style="list-style-type: none"> Open the driver door after the ignition switch is turned OFF (for a few seconds) Press the push-button ignition switch when the steering lock is activated Depress the clutch pedal when the steering lock is activated 	On
S/L STATE NOTE: For models without steering lock unit, this item is not monitored.	Steering lock is activated	LOCK
	Steering lock is deactivated	UNLOCK
	[DTC: B210A] is detected	UNKWN
DTRL REQ NOTE: This item is monitored only on the vehicle with the daytime running light system.	Daytime running light system is not operated	Off
	Daytime running light system is operated	On
OIL P SW	Ignition switch OFF, ACC or engine running	Open
	Ignition switch ON	Close
HOOD SW	Close the hood	Off
	Open the hood	On
HL WASHER REQ	NOTE: The item is indicated, but not monitored.	Off
THFT HRN REQ	Not operation	Off
	<ul style="list-style-type: none"> Panic alarm is activated Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 	On
HORN CHIRP	Not operating	Off
	Door locking with Intelligent Key (horn chirp mode)	On
CRNRNG LMP REQ	NOTE: The item is indicated, but not monitored.	Off

TERMINAL LAYOUT

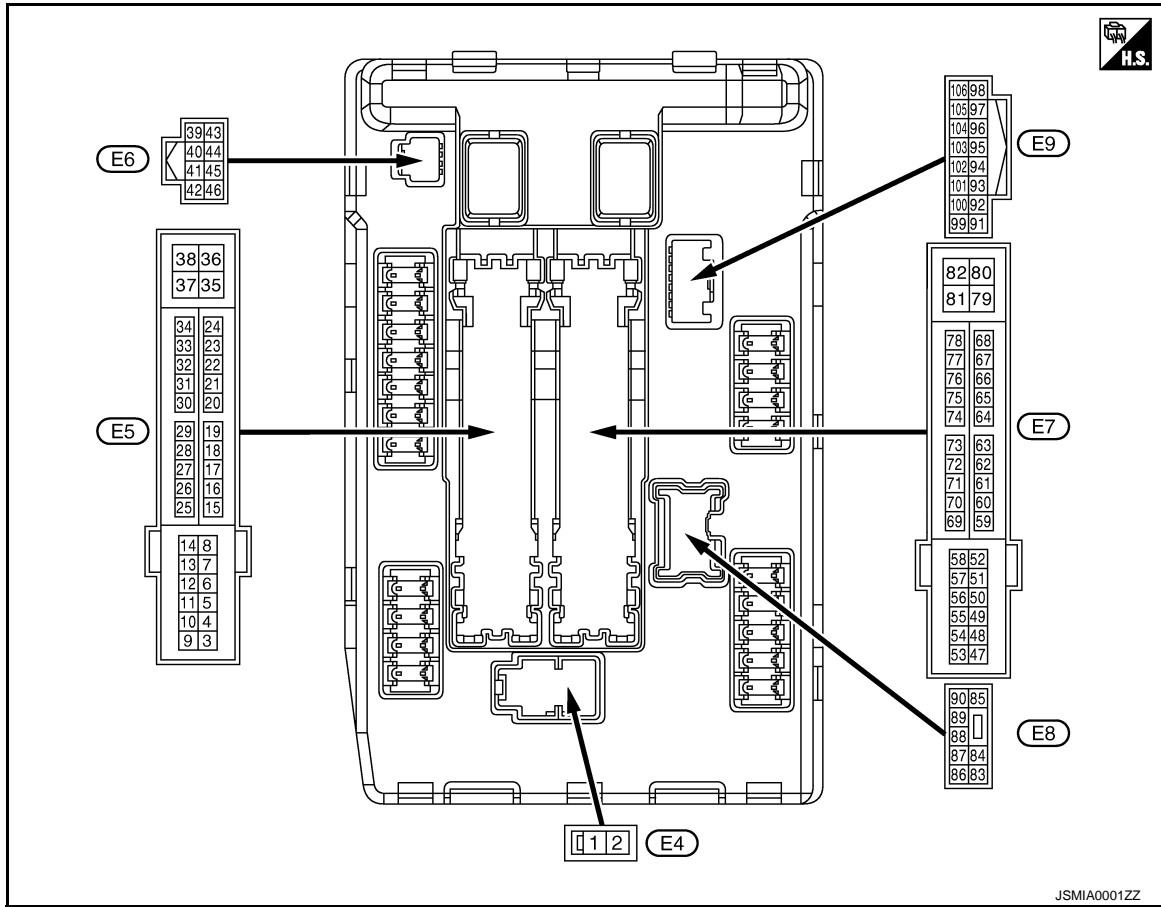

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (V)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch LO	Battery voltage
5 (L)	Ground	Front wiper HI	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch HI	Battery voltage
6*1 (R)	Ground	Daytime running light relay	Input	Ignition switch OFF		Battery voltage
7 (R)*5 (V)*6	Ground	Illuminations*1	Output	Ignition switch ON	Lighting switch OFF	0 V
		Tail, license plate lamps & illuminations*2			Lighting switch 1ST	Battery voltage
11*7 (BR)	Ground	Steering lock unit power supply	Output	Ignition switch OFF	A few seconds after opening the driver door	Battery voltage
				Ignition switch LOCK	Press the push-button ignition switch	Battery voltage
				Ignition switch ACC or ON		0 V
12 (B/W)	Ground	Ground	—	Ignition switch ON		0 V

IPDM E/R

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	—	Signal name	Input/ Output			
13 (Y)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON		0 V
				<ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running 		Battery voltage
16 (LG)	Ground	Front wiper auto stop	Input	Ignition switch ON	Front wiper stop position	0 V
					Any position other than front wiper stop position	Battery voltage
19 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
25 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
27 (Y)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage
				Ignition switch ON		0 V
28 (L)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V
				Release the push-button ignition switch		Battery voltage
30 (GR)	Ground	Starter relay control	Input	A/T models	Selector lever in any position other than P or N (Ignition switch ON)	0 V
					Selector lever P or N (Ignition switch ON)	Battery voltage
				M/T models	Release the clutch pedal	0 V
					Depress the clutch pedal	Battery voltage
32*7 (L)	Ground	Steering lock unit condition-1	Input	Steering lock is activated		0 V
				Steering lock is deactivated		Battery voltage
33*7 (P)	Ground	Steering lock unit condition-2	Input	Steering lock is activated		Battery voltage
				Steering lock is deactivated		0 V
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
39 (P)	—	CAN-L	Input/ Output	—		—
40 (L)	—	CAN-H	Input/ Output	—		—
41 (B/W)	Ground	Ground	—	Ignition switch ON		0 V
42 (Y)	Ground	Cooling fan relay control	Input	Ignition switch OFF or ACC		0 V
				Ignition switch ON		0.7 V
43*3 (SB)	Ground	A/T shift selector (Detention switch)	Input	Ignition switch ON	<ul style="list-style-type: none"> Press the selector button (selector lever P) Selector lever in any position other than P 	Battery voltage
					Release the selector button (selector lever P)	0 V
44 (W)	Ground	Horn relay control	Input	The horn is deactivated		Battery voltage
				The horn is activated		0 V
45 (G)	Ground	Anti theft horn relay control	Input	The horn is deactivated		Battery voltage
				The horn is activated		0 V

IPDM E/R




< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)	
+	-	Signal name	Input/ Output				
46 (V)	Ground	Starter relay control	Input	A/T models	Selector lever in any position other than P or N (Ignition switch ON)	0 V	A
					Selector lever P or N (Ignition switch ON)	Battery voltage	B
				M/T models	Release the clutch pedal	0 V	C
					Depress the clutch pedal	Battery voltage	D
48 (L)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V	E
					A/C switch ON (A/C compressor is operating)	Battery voltage	F
49 (BG)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V	G
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 		Battery voltage	H
51 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V	I
				Ignition switch ON		Battery voltage	J
53 (W)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V	L
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 		Battery voltage	M
54 (V)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V	N
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 		Battery voltage	O
55 (SB)	Ground	ECM power supply	Output	Ignition switch OFF		Battery voltage	P
56 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V	
				Ignition switch ON		Battery voltage	
57 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V	
				Ignition switch ON		Battery voltage	
58*3 (P)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V	
				Ignition switch ON		Battery voltage	
69 (BR)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		Battery voltage	
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 		0 - 1.5 V	

SEC

IPDM E/R

< ECU DIAGNOSIS INFORMATION >

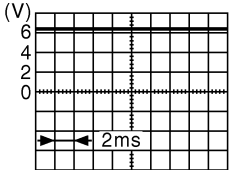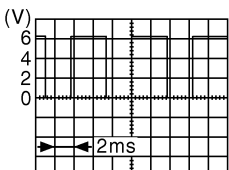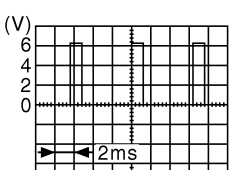Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
70 (BG)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF		0 - 1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON		0 - 1.0 V
72 (GR)	Ground	Starter relay control	Input	A/T models	Selector lever in any position other than P or N (Ignition switch ON)	0 V
					Selector lever P or N (Ignition switch ON)	Battery voltage
				M/T models	Release the clutch pedal	0 V
					Depress the clutch pedal	Battery voltage
73*4 (GR)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
74 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
75 (SB)	Ground	Oil pressure switch	Input	Ignition switch ON	Engine stopped	0 V
					Engine running	Battery voltage
76 (Y)	Ground	Power generation command signal	Output	Ignition switch ON		 JPMA0001GB 6.3 V
				40% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		 JPMA0002GB 3.8 V
				80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		 JPMA0003GB 1.4 V
77 (R)	Ground	Fuel pump relay control	Output	<ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running 		0 - 1.0 V
				Approximately 1 second or more after turning the ignition switch ON		Battery voltage
80 (W)	Ground	Starter motor	Output	At engine cranking		Battery voltage

IPDM E/R

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
83 (R)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
				Daytime running light system activated*1		
84 (P)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
				Daytime running light system activated*1		
88 (G)	Ground	Washer pump power supply	Output	Ignition switch ON		Battery voltage
89 (BR)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					• Lighting switch HI • Lighting switch PASS	Battery voltage
90 (LG)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					• Lighting switch HI • Lighting switch PASS	Battery voltage
91*2 (P)	Ground	Parking lamp (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
92*2 (BG)	Ground	Parking lamp (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
97 (V)	Ground	Cooling fan control	Output	Engine idling		0 - 5 V
104 (LG)	Ground	Hood switch	Input	Close the hood		Battery voltage
				Open the hood		0 V
105*1 (SB)	Ground	Daytime running light relay control	Output	<ul style="list-style-type: none"> Parking lamp Side maker lamp License plate lamp Tail lamp 	Turned OFF	Battery voltage
					Turned ON	0 V


- *1: With daytime running light system
 *2: Without daytime running light system
 *3: A/T models only
 *4: M/T models only
 *5: Coupe models
 *6: Roadster models
 *7: Models with steering lock unit

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

Wiring Diagram - IPDM E/R -

INFOID:000000006921599

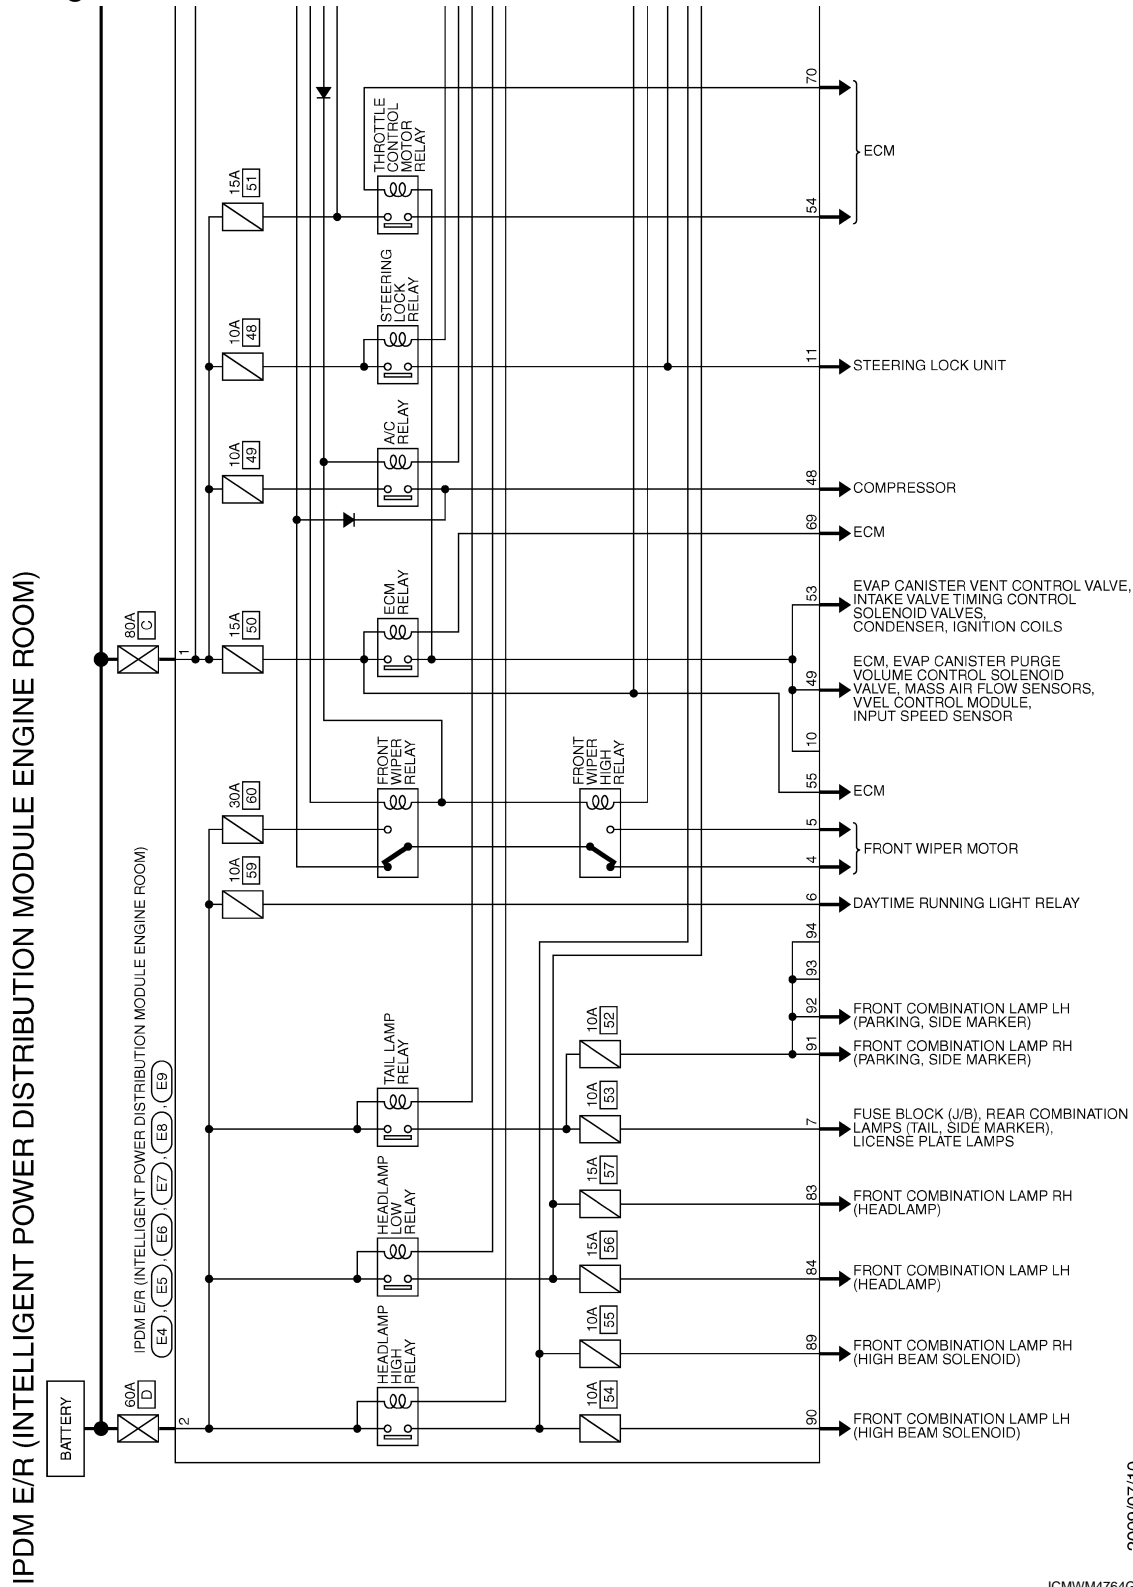


2009/07/10

JCMWM4764GB


IPDM E/R

< ECU DIAGNOSIS INFORMATION >

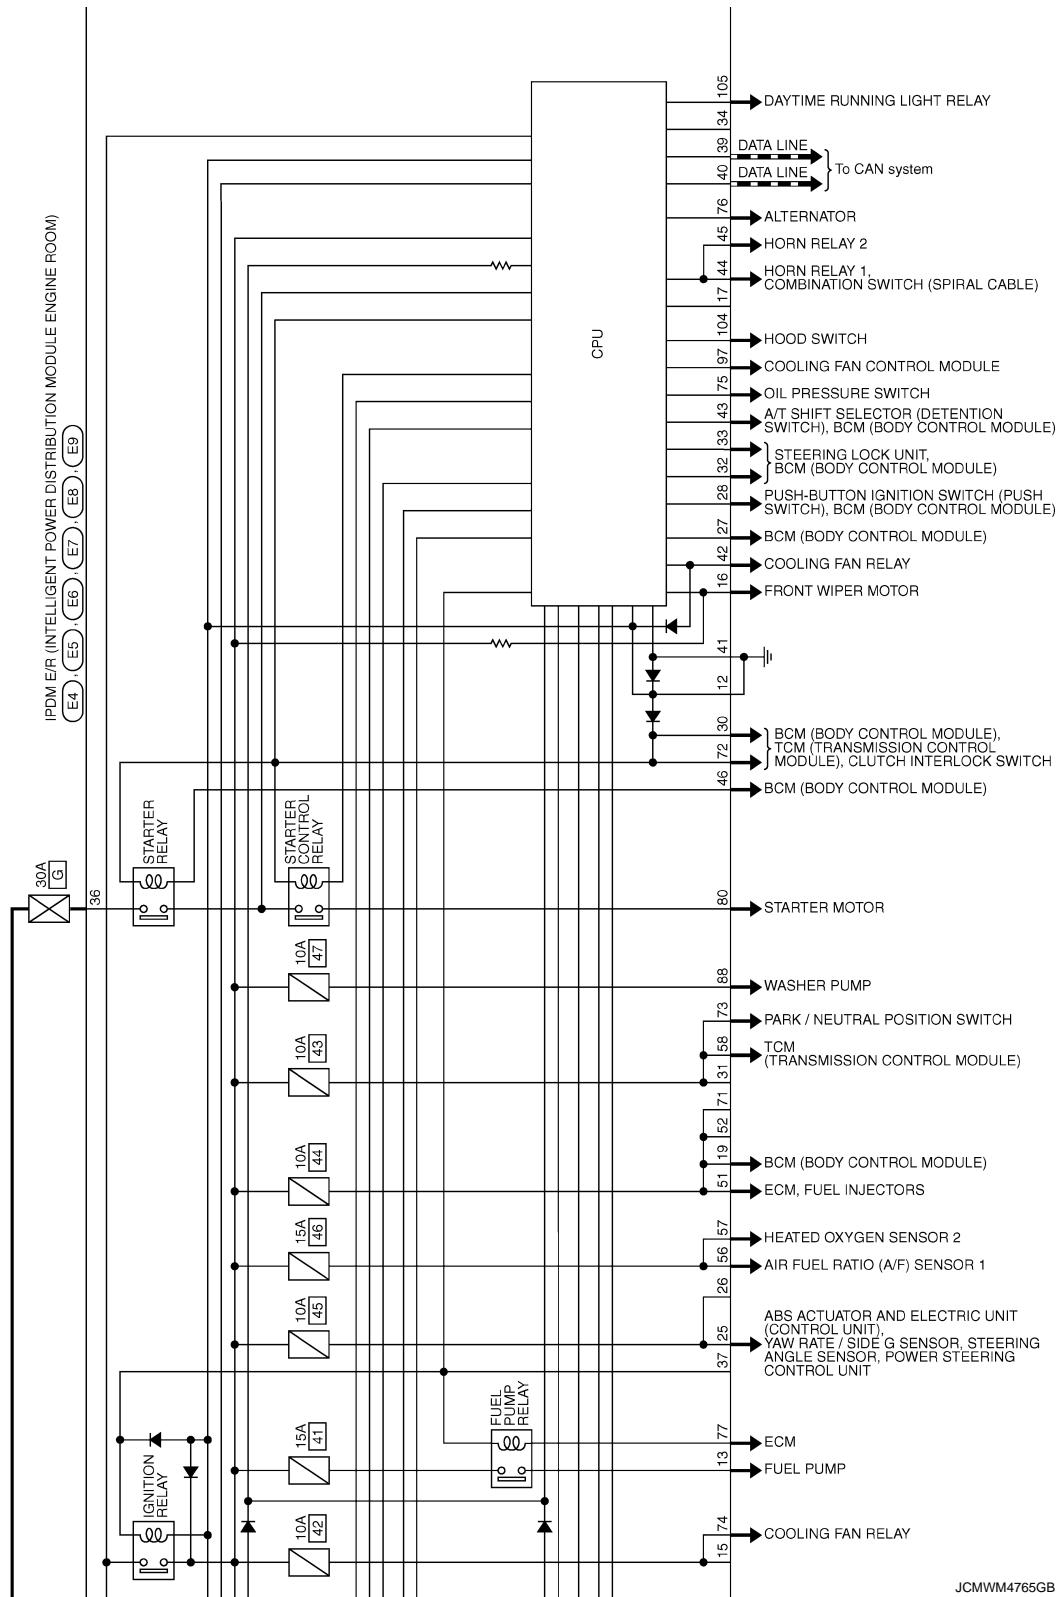





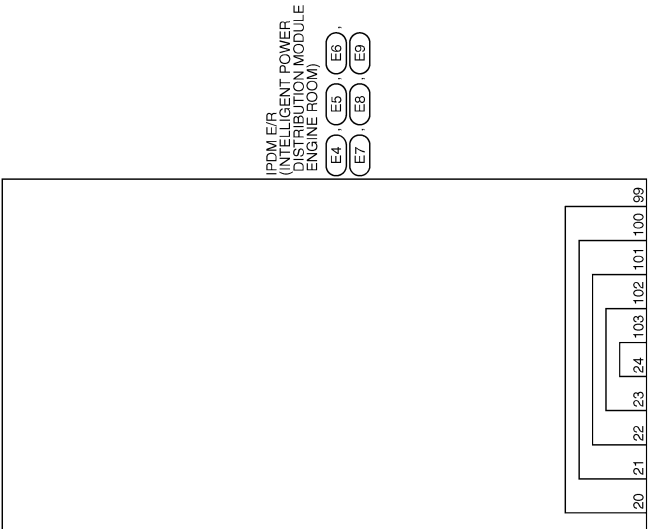

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC



JCMWM4766GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)			
Connector No.	E4	Connector No.	E6
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	LC2FE-MC	Connector Type	TH20FW-NH
  			
Terminal No.	1	Terminal No.	39
Color of Wire	W	Color of Wire	P
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	2	Terminal No.	40
Color of Wire	L	Color of Wire	L
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.		Terminal No.	41
Color of Wire		Color of Wire	B/W
Signal Name [Specification]		Signal Name [Specification]	-
Terminal No.		Terminal No.	42
Color of Wire		Color of Wire	Y
Signal Name [Specification]		Signal Name [Specification]	-
Terminal No.		Terminal No.	43
Color of Wire		Color of Wire	SB
Signal Name [Specification]		Signal Name [Specification]	-
Terminal No.		Terminal No.	44
Color of Wire		Color of Wire	W
Signal Name [Specification]		Signal Name [Specification]	-
Terminal No.		Terminal No.	45
Color of Wire		Color of Wire	G
Signal Name [Specification]		Signal Name [Specification]	-
Terminal No.		Terminal No.	46
Color of Wire		Color of Wire	V
Signal Name [Specification]		Signal Name [Specification]	-
Connector No.	E5	Connector No.	E7
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V	Connector Type	TH20FW-CS12-M4
  			
Terminal No.	4	Terminal No.	48
Color of Wire	V	Color of Wire	L
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	5	Terminal No.	49
Color of Wire	L	Color of Wire	BG
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	6	Terminal No.	50
Color of Wire	R	Color of Wire	Y
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	7	Terminal No.	51
Color of Wire	R	Color of Wire	W
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	7	Terminal No.	52
Color of Wire	V	Color of Wire	V
Signal Name [Specification]	- [Coupe models] - [Reader models]	Signal Name [Specification]	-
Terminal No.	11	Terminal No.	53
Color of Wire	BR	Color of Wire	W
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	12	Terminal No.	54
Color of Wire	B/W	Color of Wire	V
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	13	Terminal No.	55
Color of Wire	Y	Color of Wire	SB
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	16	Terminal No.	56
Color of Wire	LG	Color of Wire	LG
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	19	Terminal No.	57
Color of Wire	W	Color of Wire	G
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	25	Terminal No.	58
Color of Wire	G	Color of Wire	P
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	27	Terminal No.	69
Color of Wire	Y	Color of Wire	BR
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	28	Terminal No.	70
Color of Wire	L	Color of Wire	BG
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	30	Terminal No.	72
Color of Wire	GR	Color of Wire	GR
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	32	Terminal No.	73
Color of Wire	L	Color of Wire	GR
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	33	Terminal No.	74
Color of Wire	P	Color of Wire	G
Signal Name [Specification]	-	Signal Name [Specification]	-
Terminal No.	36	Terminal No.	
Color of Wire	G	Color of Wire	
Signal Name [Specification]	-	Signal Name [Specification]	

Fail-safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

JCMWA6306GB

INFOID:000000006921600

IPDM E/R

< ECU DIAGNOSIS INFORMATION >

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF
<ul style="list-style-type: none"> Parking lamps Side maker lamp License plate lamps Illuminations Tail lamps 	<ul style="list-style-type: none"> Turns ON the tail lamp relay and the daytime running light relay*¹ when the ignition switch is turned ON Turns OFF the tail lamp relay and the daytime running light relay*¹ when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the AUTO mode and the front wiper motor is operating.
Horn	Horn relay OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF
Steering lock unit* ²	Steering lock relay OFF

*1: With daytime running light system

*2: For models with steering lock unit

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay and the daytime running light relay* for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> Detects DTC "B2098: IGN RELAY ON" Turns ON the tail lamp relay and the daytime running light relay* for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"

*: With daytime running light system

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

IPDM E/R

< ECU DIAGNOSIS INFORMATION >

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:0000000006921601

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now.
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
 - The number is 0 when is detected now.
 - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-16
B2098: IGN RELAY ON	×	PCS-17
B2099: IGN RELAY OFF	—	PCS-18
B2108: S/L RELAY ON*	—	SEC-102
B2109: S/L RELAY OFF*	—	SEC-104
B210A: S/L STATE SW*	—	SEC-105
B210B: START CONT RLY ON	—	SEC-109
B210C: START CONT RLY OFF	—	SEC-110
B210D: STARTER RELAY ON	—	SEC-111
B210E: STARTER RELAY OFF	—	SEC-112
B210F: INTRLOCK/PNP SW ON	—	SEC-114
B2110: INTRLOCK/PNP SW OFF	—	SEC-116

*: For models without steering lock unit, this DTC is not applied.

ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE

Description

INFOID:000000006353249

Engine does not start when push-button ignition switch is pressed while carrying Intelligent Key.

NOTE:

- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.
- The engine start function, door lock function, power distribution system, and NATS-IVIS/NVIS in the Intelligent Key system are closely related to each other regarding control. The vehicle security function can operate only when the door lock and power distribution system are operating normally.

Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT-III.
- Intelligent Key is not inserted in key slot.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Diagnosis Procedure

INFOID:000000006353250

1.PERFORM WORK SUPPORT

Perform “INSIDE ANT DIAGNOSIS” on Work Support in “INTELLIGENT KEY”.

Refer to [SEC-27, "INTELLIGENT KEY : CONSULT-III Function \(BCM - INTELLIGENT KEY\)"](#).

>> GO TO 2.

2.PERFORM SELF-DIAGNOSTIC RESULT

Perform Self-Diagnostic Result in “BCM”, and check whether or not DTC of inside key antenna is detected.

Is DTC detected?

- YES >> Refer to [DLK-83, "DTC Logic"](#) (console) or [DLK-85, "DTC Logic"](#) (luggage room).
- NO >> GO TO 3.

3.CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Refer to [PCS-69, "Component Function Check"](#).

Is the operation normal?

- YES >> GO TO 4.
- NO >> Repair or replace malfunctioning parts.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

- YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).
- NO >> GO TO 1.

STEERING DOES NOT LOCK

< SYMPTOM DIAGNOSIS >

STEERING DOES NOT LOCK

Description

INFOID:000000006353251

For models with steering lock unit, steering does not lock when door is open while ignition switch is OFF.

NOTE:

Before performing the diagnosis, check "Work Flow". Refer to [SEC-6, "Work Flow"](#).

Diagnosis Procedure

INFOID:000000006353252

1.CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-87, "Component Function Check"](#) (Coupe models) or [DLK-284, "Component Function Check"](#) (Roadster models).

Is the inspection normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK

< SYMPTOM DIAGNOSIS >

SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK

Description

INFOID:000000006353253

Security indicator lamp does not blink when ignition switch is in a position other than ON

NOTE:

- Before performing the diagnosis, check "Work Flow". Refer to [SEC-6, "Work Flow"](#).
- Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

Conditions of Vehicle (Operating Conditions)

- Intelligent Key is not inserted in key slot.
- Ignition switch is not in the ON position.

Diagnosis Procedure

INFOID:000000006353254

1.CHECK SECURITY INDICATOR LAMP

Check security indicator lamp.

Refer to [SEC-127, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

VEHICLE SECURITY SYSTEM CANNOT BE SET

< SYMPTOM DIAGNOSIS >

VEHICLE SECURITY SYSTEM CANNOT BE SET INTELLIGENT KEY

INTELLIGENT KEY : Description

INFOID:0000000006353255

Armed phase is not activated when door is locked using Intelligent Key.

NOTE:

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of "SECURITY ALARM SET" in "WORK SUPPORT" in "THEFT ALM" using CONSULT-III.

INTELLIGENT KEY : Diagnosis Procedure

INFOID:0000000006353256

1.CHECK INTELLIGENT KEY SYSTEM (REMOTE KEYLESS ENTRY FUNCTION)

Lock/unlock door with Intelligent Key.

Refer to [DLK-29, "REMOTE KEYLESS ENTRY FUNCTION : System Diagram"](#) (Coupe models) or [DLK-219, "REMOTE KEYLESS ENTRY FUNCTION : System Diagram"](#) (Roadster models).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (remote keyless entry function). Refer to [DLK-131, "Diagnosis Procedure"](#) (Coupe models) or [DLK-331, "Diagnosis Procedure"](#) (Roadster models).

2.CHECK HOOD SWITCH

Check hood switch.

Refer to [SEC-123, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

DOOR REQUEST SWITCH

DOOR REQUEST SWITCH : Description

INFOID:0000000006353257

Armed phase is not activated when door is locked using door request switch.

NOTE:

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of "SECURITY ALARM SET" in "WORK SUPPORT" in "THEFT ALM" using CONSULT-III.

DOOR REQUEST SWITCH : Diagnosis Procedure

INFOID:0000000006353258

1.CHECK INTELLIGENT KEY SYSTEM (DOOR LOCK FUNCTION)

Lock/unlock door with door request switch.

Refer to [DLK-25, "DOOR LOCK FUNCTION : System Description"](#) (Coupe models) or [DLK-216, "DOOR LOCK FUNCTION : System Description"](#) (Roadster models).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (door lock function). Refer to [DLK-129, "ALL DOOR : Diagnosis Procedure"](#) (Coupe models) or [DLK-329, "ALL DOOR : Diagnosis Procedure"](#) (Roadster models).

VEHICLE SECURITY SYSTEM CANNOT BE SET

< SYMPTOM DIAGNOSIS >

2.CHECK HOOD SWITCH

Check hood switch.

Refer to [SEC-123, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

VEHICLE SECURITY ALARM DOES NOT ACTIVATE

< SYMPTOM DIAGNOSIS >

VEHICLE SECURITY ALARM DOES NOT ACTIVATE

Description

INFOID:000000006353259

Alarm does not operate when alarm operating condition is satisfied.

NOTE:

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

"SECURITY ALARM SET" in "WORK SUPPORT" of "THEFT ALM" is ON when setting on CONSULT-III.

Diagnosis Procedure

INFOID:000000006353260

1.CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-87. "Component Function Check"](#) (Coupe models) or [DLK-284. "Component Function Check"](#) (Roadster models).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the malfunctioning door switch

2.CHECK HOOD SWITCH

Check hood switch.

Refer to [SEC-123. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CHECK HEADLAMP

Check headlamp.

Refer to [EXL-81. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4.CHECK HORN

Check horn.

Refer to [HRN-2. "Wiring Diagram - HORN -"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

5.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

INTELLIGENT KEY INSERT INFORMATION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

INTELLIGENT KEY INSERT INFORMATION DOES NOT OPERATE

Description

INFOID:000000006353261

Intelligent Key insert information does not operate when push-button ignition switch is operated while Intelligent Key is not inside vehicle.

NOTE:

Warning functions operating condition is extremely complicated. During operation confirmation reconfirm the list above twice in order to ensure proper operation. Refer to [DLK-32, "WARNING FUNCTION : System Description"](#) (Coupe models) or [DLK-222, "WARNING FUNCTION : System Description"](#) (Roadster models).

Diagnosis Procedure

INFOID:000000006353262

1.CHECK POWER POSITION

Check if ignition switch position is changing or not.

Does ignition switch position change?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Refer to [PCS-69, "Component Function Check"](#).

Is the inspection result normal?

YES >> Check BCM for DTC. Refer to [SEC-196, "DTC Index"](#).

NO >> Repair or replace the malfunctioning parts.

3.CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-87, "Component Function Check"](#) (Coupe models) or [DLK-284, "Component Function Check"](#) (Roadster models).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4.CHECK KEY SLOT

Check key slot.

Refer to [SEC-120, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

5.CHECK COMBINATION METER DISPLAY

Check combination meter display.

Refer to [DLK-120, "Component Function Check"](#) (Coupe models) or [DLK-320, "Component Function Check"](#) (Roadster models).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace the malfunctioning parts.

6.CHECK KEY SLOT INDICATOR

Check key slot indicator.

Refer to [SEC-121, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace the malfunctioning parts.

7.CONFIRM THE OPERATION

Confirm the operation again.

INTELLIGENT KEY INSERT INFORMATION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).
NO >> GO TO 1.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

PANIC ALARM FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

PANIC ALARM FUNCTION DOES NOT OPERATE

Description

INFOID:000000006353263

NOTE:

Before performing the diagnosis in the following procedure, check the operation condition. Refer to [DLK-29, "REMOTE KEYLESS ENTRY FUNCTION : System Description"](#) (Coupe models) or [DLK-220, "REMOTE KEYLESS ENTRY FUNCTION : System Description"](#) (Roadster models).

Diagnosis Procedure

INFOID:000000006353264

1.CHECK REMOTE KEYLESS ENTRY FUNCTION

Check remote keyless entry function.

Does door lock/unlock with Intelligent Key button?

YES >> GO TO 2.

NO >> Refer to [DLK-131, "Diagnosis Procedure"](#) (Coupe models) or [DLK-331, "Diagnosis Procedure"](#) (Roadster models).

2.CHECK VEHICLE SECURITY ALARM OPERATION

Check vehicle security alarm operation.

Does alarm (headlamp and horn) active?

YES >> GO TO 3.

NO >> Refer to [SEC-217, "Diagnosis Procedure"](#).

3.CHECK "PANIC ALARM SET" SETTING IN "WORK SUPPORT"

Check "PANIC ALARM SET" setting in "WORK SUPPORT".

Refer to [SEC-27, "INTELLIGENT KEY : CONSULT-III Function \(BCM - INTELLIGENT KEY\)"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Set "PANIC ALARM SET" setting in "WORK SUPPORT".

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

FOR USA AND CANADA

FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006921561

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR USA AND CANADA : Precautions Necessary for Steering Wheel Rotation After Battery Disconnection

INFOID:000000006921568

CAUTION:

Comply with the following cautions to prevent any error and malfunction.

- Before removing and installing any control units, first turn the ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Turn the ignition switch to ACC position.
(At this time, the steering lock will be released.)

PRECAUTIONS

< PRECAUTION >

3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT.

FOR USA AND CANADA : Precaution for Battery Service


INFOID:000000006921573

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

FOR USA AND CANADA : Precaution for Procedure without Cowl Top Cover

INFOID:000000006921583

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

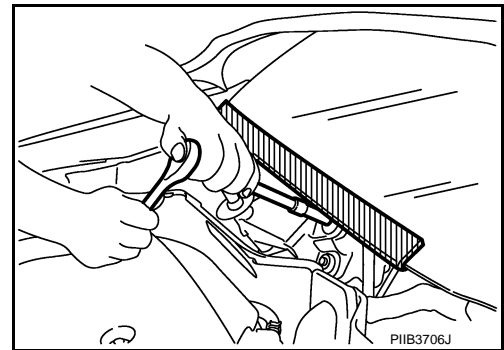

FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006921584

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR MEXICO : Precautions Necessary for Steering Wheel Rotation After Battery Dis-

PRECAUTIONS

< PRECAUTION >

connection

INFOID:000000006921570

CAUTION:

Comply with the following cautions to prevent any error and malfunction.

- Before removing and installing any control units, first turn the ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Turn the ignition switch to ACC position.
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT.

FOR MEXICO : Precaution for Battery Service


INFOID:000000006921576

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

FOR MEXICO : Precaution for Procedure without Cowl Top Cover

INFOID:000000006921584

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

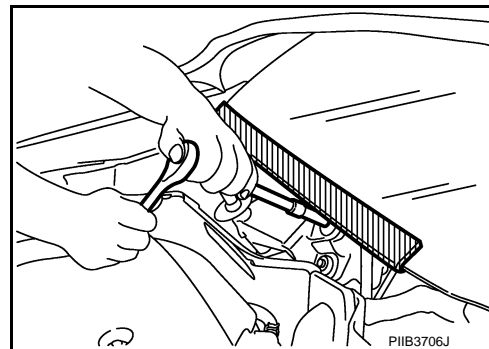

KEY SLOT

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

KEY SLOT

Exploded View

INFOID:000000006353273


Refer to [IP-14, "Exploded View"](#).

Removal and Installation

INFOID:000000006353274

REMOVAL

1. Remove the instrument driver lower panel. Refer to [IP-15, "Removal and Installation"](#).
2. Disconnect key slot connector.
3. Remove the key slot mounting screw (A), and then remove key slot (1) from instrument driver lower panel.

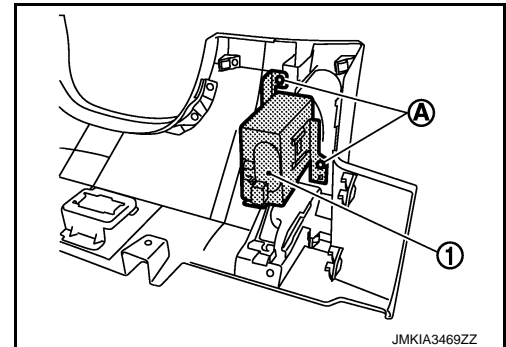

INSTALLATION

Install in the reverse order of removal.

PUSH BUTTON IGNITION SWITCH

< REMOVAL AND INSTALLATION >

PUSH BUTTON IGNITION SWITCH

Exploded View

INFOID:000000006353275

Refer to [IP-14, "Exploded View"](#).

Removal and Installation


INFOID:000000006353276


REMOVAL

Disconnect the push-button ignition switch (1) fixing pawl using a remover tool (A), and then remove push-button ignition switch.

CAUTION:

Always apply a protective tape (B) on instrument panel for protection.

 : Pawl

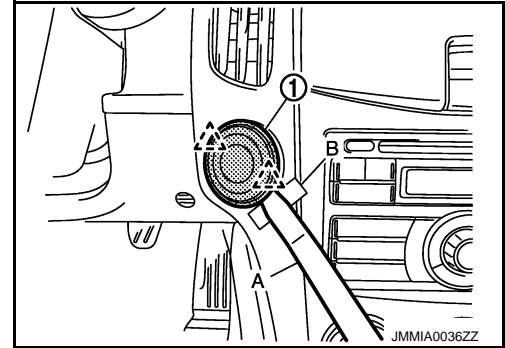

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC