

D

Е

CONTENTS

CAN FUNDAMENTAL	PRECAUTIONS21	F
PRECAUTION 5	FOR USA AND CANADA21	
	FOR USA AND CANADA: Precaution for Supple-	G
PRECAUTIONS5	mental Restraint System (SRS) "AIR BAG" and	
Precautions for Trouble Diagnosis5	"SEAT BELT PRE-TENSIONER"21	
Precautions for Harness Repair5	FOR USA AND CANADA : Precaution for Battery	Н
SYSTEM DESCRIPTION6	Service21 FOR USA AND CANADA : Precautions for Trou-	
CAN COMMUNICATION SYSTEM6	ble Diagnosis21	
System Description6	FOR USA AND CANADA: Precautions for Har-	
System Diagram6	ness Repair22	
CAN Communication Control Circuit7	FOR MEXICO22	
	FOR MEXICO : Precaution for Supplemental Re-	J
DIAG ON CAN 8	straint System (SRS) "AIR BAG" and "SEAT BELT	
Description8	PRE-TENSIONER"22	
System Diagram8	FOR MEXICO: Precaution for Battery Service23	K
TROUBLE DIAGNOSIS9	FOR MEXICO: Precautions for Trouble Diagnosis	
Condition of Error Detection9	23	
Symptom When Error Occurs in CAN Communi-	FOR MEXICO: Precautions for Harness Repair23	L
cation System9	DAGIO INCRECTION	
CAN Diagnosis with CONSULT12	BASIC INSPECTION24	
Self-Diagnosis12	DIAGNOSIS AND REPAIR WORKFLOW24	LAN
CAN Diagnostic Support Monitor12	Interview Sheet24	
How to Use CAN Communication Signal Chart14	THOUSENESS OF THE PROPERTY OF	
BASIC INSPECTION15	SYSTEM DESCRIPTION25	Ν
	CAN COMMUNICATION SYSTEM25	
DIAGNOSIS AND REPAIR WORKFLOW15	CAN System Specification Chart25	
Trouble Diagnosis Flow Chart15	CAN Communication Signal Chart25	0
Trouble Diagnosis Procedure15 CAN	DTC/CIRCUIT DIAGNOSIS29	
CAN	DIO/GINGOII DIAGNOGIO29	
HOW TO USE THIS MANUAL20	CAN COMMUNICATION SYSTEM29	Р
	Component Parts Location29	
HOW TO USE THIS SECTION20	Wiring Diagram - CAN SYSTEM30	
Caution	MALFUNCTION AREA CHART31	
Abbreviation List20	Main Line31	
PRECAUTION21	Branch Line31	

Short Circuit	31	DLC BRANCH LINE CIRCUIT	
MAIN LINE BETWEEN DLC AND ABS CIR-		Diagnosis Procedure	52
CUIT	32	HVAC BRANCH LINE CIRCUIT	
Diagnosis Procedure	32	Diagnosis Procedure	53
ECM BRANCH LINE CIRCUIT	33	M&A BRANCH LINE CIRCUIT	54
Diagnosis Procedure	33	Diagnosis Procedure	54
A-BAG BRANCH LINE CIRCUIT		STRG BRANCH LINE CIRCUIT	
Diagnosis Procedure	34	Diagnosis Procedure	55
AV BRANCH LINE CIRCUIT		ABS BRANCH LINE CIRCUIT	
Diagnosis Procedure	35	Diagnosis Procedure	56
BCM BRANCH LINE CIRCUIT		IPDM-E BRANCH LINE CIRCUIT	
Diagnosis Procedure	36	Diagnosis Procedure	57
C/ROOF BRANCH LINE CIRCUIT		CAN COMMUNICATION CIRCUIT	
Diagnosis Procedure	37	Diagnosis Procedure CAN SYSTEM (TYPE 2)	58
DLC BRANCH LINE CIRCUIT		, ,	
Diagnosis Procedure	38	DTC/CIRCUIT DIAGNOSIS	. 60
HVAC BRANCH LINE CIRCUIT		MAIN LINE BETWEEN DLC AND ABS CIR-	
Diagnosis Procedure	39	CUIT	
M&A BRANCH LINE CIRCUIT		Diagnosis Procedure	60
Diagnosis Procedure	40	ECM BRANCH LINE CIRCUIT	
STRG BRANCH LINE CIRCUIT		Diagnosis Procedure	61
Diagnosis Procedure	41	A-BAG BRANCH LINE CIRCUIT	
TCM BRANCH LINE CIRCUIT		Diagnosis Procedure	62
Diagnosis Procedure	42	AV BRANCH LINE CIRCUIT	
ABS BRANCH LINE CIRCUIT	43	Diagnosis Procedure	63
Diagnosis Procedure	43	BCM BRANCH LINE CIRCUIT	
IPDM-E BRANCH LINE CIRCUIT		Diagnosis Procedure	64
Diagnosis Procedure	44	C/ROOF BRANCH LINE CIRCUIT	
CAN COMMUNICATION CIRCUIT	45	Diagnosis Procedure	65
Diagnosis Procedure	45	DLC BRANCH LINE CIRCUIT	
CAN SYSTEM (TYPE 1)		Diagnosis Procedure	66
DTC/CIRCUIT DIAGNOSIS	. 47	HVAC BRANCH LINE CIRCUIT	
MAIN LINE BETWEEN DLC AND ABS CIR-		Diagnosis Procedure	67
CUIT	47	M&A BRANCH LINE CIRCUIT	
Diagnosis Procedure	47	Diagnosis Procedure	68
ECM BRANCH LINE CIRCUIT	48	STRG BRANCH LINE CIRCUIT	69
Diagnosis Procedure	48	Diagnosis Procedure	69
A-BAG BRANCH LINE CIRCUIT	49	ABS BRANCH LINE CIRCUIT	70
Diagnosis Procedure	49	Diagnosis Procedure	70
BCM BRANCH LINE CIRCUIT	50	IPDM-E BRANCH LINE CIRCUIT	71
Diagnosis Procedure	50	Diagnosis Procedure	71
C/ROOF BRANCH LINE CIRCUIT	51	CAN COMMUNICATION CIRCUIT	72
Diagnosis Procedure	51	Diagnosis Procedure	72

CAN SYSTEM (TYPE 3)	C/ROOF BRANCH LINE CIRCUIT93
DTC/CIRCUIT DIAGNOSIS74	Diagnosis Procedure93
MAIN LINE BETWEEN DLC AND ABS CIR-	DLC BRANCH LINE CIRCUIT94 Diagnosis Procedure94
CUIT74 Diagnosis Procedure74	HVAC BRANCH LINE CIRCUIT95 Diagnosis Procedure95
ECM BRANCH LINE CIRCUIT75 Diagnosis Procedure75	M&A BRANCH LINE CIRCUIT96 Diagnosis Procedure96
A-BAG BRANCH LINE CIRCUIT76 Diagnosis Procedure76	STRG BRANCH LINE CIRCUIT97 Diagnosis Procedure97
BCM BRANCH LINE CIRCUIT77 Diagnosis Procedure77	TCM BRANCH LINE CIRCUIT98 Diagnosis Procedure98
C/ROOF BRANCH LINE CIRCUIT78 Diagnosis Procedure78	ABS BRANCH LINE CIRCUIT99
DLC BRANCH LINE CIRCUIT79 Diagnosis Procedure79	Diagnosis Procedure99 IPDM-E BRANCH LINE CIRCUIT100
HVAC BRANCH LINE CIRCUIT80	Diagnosis Procedure100
Diagnosis Procedure80	CAN COMMUNICATION CIRCUIT101 Diagnosis Procedure101
M&A BRANCH LINE CIRCUIT81	CAN SYSTEM (TYPE 21)
Diagnosis Procedure81	DTC/CIRCUIT DIAGNOSIS103
STRG BRANCH LINE CIRCUIT82 Diagnosis Procedure82	MAIN LINE BETWEEN DLC AND ABS CIR- CUIT103
TCM BRANCH LINE CIRCUIT83 Diagnosis Procedure83	Diagnosis Procedure103
ABS BRANCH LINE CIRCUIT84 Diagnosis Procedure84	Diagnosis Procedure104
PDM-E BRANCH LINE CIRCUIT85 Diagnosis Procedure85	A-BAG BRANCH LINE CIRCUIT105 Diagnosis Procedure
CAN COMMUNICATION CIRCUIT86 Diagnosis Procedure86	BCM BRANCH LINE CIRCUIT106 Diagnosis Procedure106
CAN SYSTEM (TYPE 4) DTC/CIRCUIT DIAGNOSIS88	DLC BRANCH LINE CIRCUIT107 Diagnosis Procedure107
MAIN LINE BETWEEN DLC AND ABS CIR-CUIT88	HVAC BRANCH LINE CIRCUIT108 Diagnosis Procedure108
Diagnosis Procedure88	M&A BRANCH LINE CIRCUIT109 Diagnosis Procedure109
ECM BRANCH LINE CIRCUIT89 Diagnosis Procedure89	STRG BRANCH LINE CIRCUIT110 Diagnosis Procedure110
A-BAG BRANCH LINE CIRCUIT90 Diagnosis Procedure90	ABS BRANCH LINE CIRCUIT111 Diagnosis Procedure111
AV BRANCH LINE CIRCUIT91 Diagnosis Procedure91	IPDM-E BRANCH LINE CIRCUIT112 Diagnosis Procedure112
BCM BRANCH LINE CIRCUIT92 Diagnosis Procedure92	CAN COMMUNICATION CIRCUIT113 Diagnosis Procedure

CAN SYSTEM (TYPE 22)	M&A BRANCH LINE CIRCUIT	
DTC/CIRCUIT DIAGNOSIS11	Diagnosis Procedure5	
MAIN LINE BETWEEN DLC AND ABS CIR-	STRG BRANCH LINE CIRCUIT Diagnosis Procedure	
CUIT11 Diagnosis Procedure11	TOM DOMNOLLLING CIDOLUT	136
•	Diagnosis Procedure	136
ECM BRANCH LINE CIRCUIT11 Diagnosis Procedure11		
A-BAG BRANCH LINE CIRCUIT11		
Diagnosis Procedure11	7 IPDM-E BRANCH LINE CIRCUIT Diagnosis Procedure	
AV BRANCH LINE CIRCUIT 11 Diagnosis Procedure11	8 CAN COMMUNICATION CIRCUIT	139
BCM BRANCH LINE CIRCUIT 11 Diagnosis Procedure11		139
	DTC/CIRCUIT DIAGNOSIS	141
DLC BRANCH LINE CIRCUIT 12 Diagnosis Procedure12	0 MAIN LINE BETWEEN DLC AND ABS CIR-	
HVAC BRANCH LINE CIRCUIT 12 Diagnosis Procedure12	DIAGNOSIS FIGGEORIE	
	ECM BRANCH LINE CIRCUIT	142
M&A BRANCH LINE CIRCUIT 12 Diagnosis Procedure12	Diagnosis Flocedure	142
	A-BAG BRANCH LINE CIRCUIT	143
STRG BRANCH LINE CIRCUIT 12 Diagnosis Procedure12	DIGUTUSIS FTUGEOUTE	143
ABS BRANCH LINE CIRCUIT12	AV BRANCH LINE CIRCUIT Diagnosis Procedure	
Diagnosis Procedure12	BCM BRANCH LINE CIRCUIT	
IPDM-E BRANCH LINE CIRCUIT 12 Diagnosis Procedure	5 Diagnosis Procedure	
CAN COMMUNICATION CIRCUIT 12	DLC BRANCH LINE CIRCUIT	
Diagnosis Procedure12	Diadriosis Flocedule	146
CAN SYSTEM (TYPE 23)	HVAC BRANCH LINE CIRCUIT Diagnosis Procedure	
DTC/CIRCUIT DIAGNOSIS12	8 M&A BRANCH LINE CIRCUIT	1/Ω
MAIN LINE BETWEEN DLC AND ABS CIR-	Diagnosis Procedure	
CUIT 12		149
Diagnosis Procedure12	Diagnosis Procedure	
ECM BRANCH LINE CIRCUIT12		150
Diagnosis Procedure12	Diagnosis Procedure	
A-BAG BRANCH LINE CIRCUIT13		151
Diagnosis Procedure13	Diagnosis Procedure	
BCM BRANCH LINE CIRCUIT13		152
Diagnosis Procedure13	Diagnosis Procedure	
DLC BRANCH LINE CIRCUIT13		152
Diagnosis Procedure13	Diagnosis Procedure	
HVAC BRANCH LINE CIRCUIT 13	3	
Diagnosis Procedure13	3	

PRECAUTION

PRECAUTIONS

Precautions for Trouble Diagnosis


CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.

Precautions for Harness Repair


Solder the repaired area and wrap tape around the soldered area.
 NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

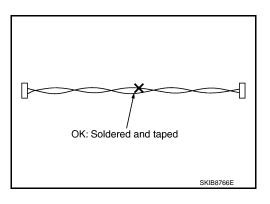

Bypass connection is never allowed at the repaired area.
 NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

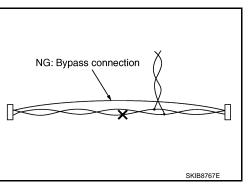

 Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

LAN

K

Α

В

D

Е

Н

INFOID:0000000007626519

INFOID:0000000007626520

Ν

0

SYSTEM DESCRIPTION

CAN COMMUNICATION SYSTEM


System Description

INFOID:0000000007626521

- CAN communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting control units with two communication lines (CAN-H and CAN-L).
- Control units on the CAN network transmit signals using the CAN communication control circuit. They receive only necessary signals from other control units to operate various functions.
- · CAN communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

System Diagram

INFOID:0000000007626522

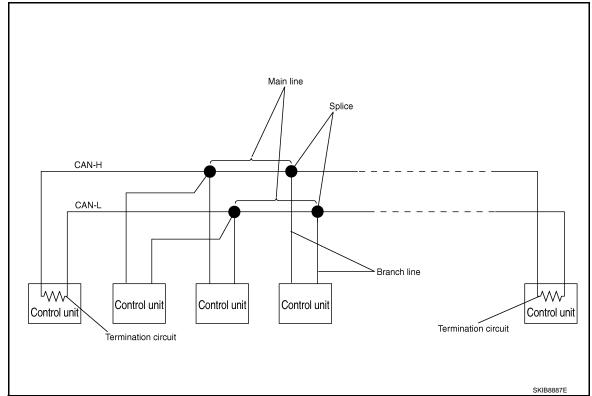

Each control unit passes an electric current to the termination circuits when transmitting CAN communication signal. The termination circuits produce an electrical potential difference between CAN-H and CAN-L. CAN communication system transmits and receives CAN communication signals by the potential difference.

Component	Description
Main line	CAN communication line between splices
Branch line	CAN communication line between splice and a control unit
Splice	A point connecting a branch line with a main line
Termination circuit	Refer to LAN-7, "CAN Communication Control Circuit".

Α

В

D


Е

F

G

Н

CAN Communication Control Circuit

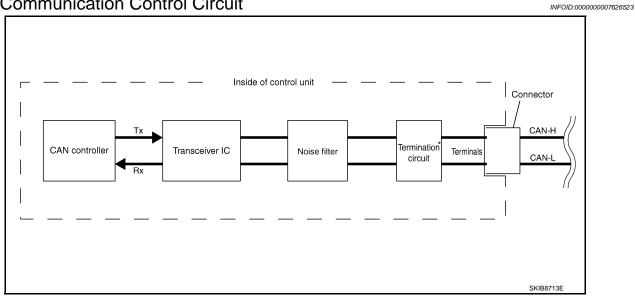

Component	System description	
CAN controller	It controls CAN communication signal transmission and reception, error detection, etc.	
Transceiver IC	It converts digital signal into CAN communication signal, and CAN communication signal into digital signal.	
Noise filter	It eliminates noise of CAN communication signal.	
Termination circuit [*] (Resistance of approx. 120 Ω)	It produces potential difference.	

^{*:} These are the only control units wired with both ends of CAN communication system.

LAN

K

Ν

0


DIAG ON CAN

Description INFOID:000000007626524

"Diag on CAN" is a diagnosis using CAN communication instead of previous DDL1 and DDL2 communication lines, between control units and diagnosis unit.

System Diagram

INFOID:0000000007626525

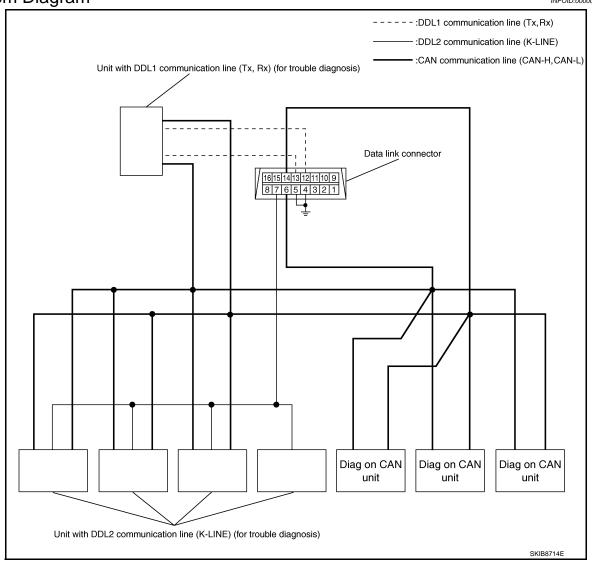

Name	Harness	Description
DDL1	Tx Rx	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
DDL2	K-LINE	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
Diag on CAN	CAN-H CAN-L	It is used for trouble diagnosis and control.

INFOID:0000000007626526

TROUBLE DIAGNOSIS

Condition of Error Detection

DTC (e.g. U1000 and U1001) of CAN communication is indicated on SELF-DIAG RESULTS on CONSULT if a CAN communication signal is not transmitted or received between units for 2 seconds or more.

CAN COMMUNICATION SYSTEM ERROR

- CAN communication line open (CAN-H, CAN-L, or both).
- CAN communication line short (ground, between CAN communication lines, other harnesses).
- Error of CAN communication control circuit of the unit connected to CAN communication line.

WHEN DTC OF CAN COMMUNICATION IS INDICATED EVEN THOUGH CAN COMMUNICATION SYSTEM IS NORMAL

- Removal/installation of parts: Error may be detected when removing and installing CAN communication unit and related parts while turning the ignition switch ON. (A DTC except for CAN communication may be detected.)
- Fuse blown out (removed): CAN communication of the unit may cease.
- Voltage drop: Error may be detected if voltage drops due to discharged battery when turning the ignition switch ON (Depending on the control unit which carries out CAN communication).
- Error may be detected if the power supply circuit of the control unit, which carries out CAN communication, malfunctions (Depending on the control unit which carries out CAN communication).
- Error may be detected if reprogramming is not completed normally.

CAUTION:

CAN communication system is normal if DTC of CAN communication is indicated on SELF-DIAG RESULTS of CONSULT under the above conditions. Erase the memory of the self-diagnosis of each unit.

Symptom When Error Occurs in CAN Communication System


In CAN communication system, multiple units mutually transmit and receive signals. Each unit cannot transmit and receive signals if any error occurs on CAN communication line. Under this condition, multiple control units related to the root cause malfunction or go into fail-safe mode.

ERROR EXAMPLE

NOTE:

- Each vehicle differs in symptom of each unit under fail-safe mode and CAN communication line wiring.
- Refer to LAN-20, "Abbreviation List" for the unit abbreviation.

Example: TCM branch line open circuit

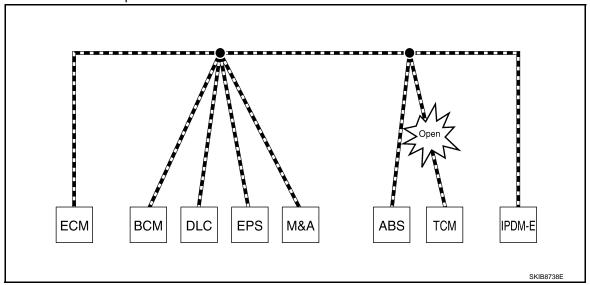

Unit name	Symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	Reverse warning chime does not sound.

Revision: 2011 August LAN-9 2012 370Z

C

Α

D

Е

G

J

LAN


Ν

0

< SYSTEM DESCRIPTION >

Unit name	Symptom
EPS control unit	Normal operation.
Combination meter	 Shift position indicator and OD OFF indicator turn OFF. Warning lamps turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	Normal operation.

Example: Data link connector branch line open circuit

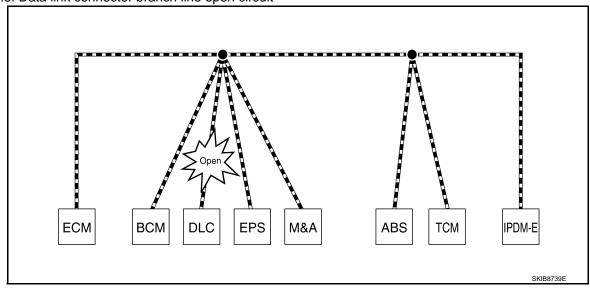


Unit name	Symptom
ECM	
BCM	
EPS control unit	
Combination meter	Normal operation.
ABS actuator and electric unit (control unit)	
TCM	
IPDM E/R	

NOTE:

- When data link connector branch line is open, transmission and reception of CAN communication signals are not affected. Therefore, no symptoms occur. However, be sure to repair malfunctioning circuit.
- The model (all units on CAN communication system are Diag on CAN) cannot perform CAN diagnosis with CONSULT if the following error occurs. The error is judged by the symptom.


Error	Difference of symptom
Data link connector branch line open circuit	Normal operation.
CAN-H, CAN-L harness short-circuit	Most of the units which are connected to the CAN communication system enter fail-safe mode or are deactivated.

Example: Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit) Open Circuit

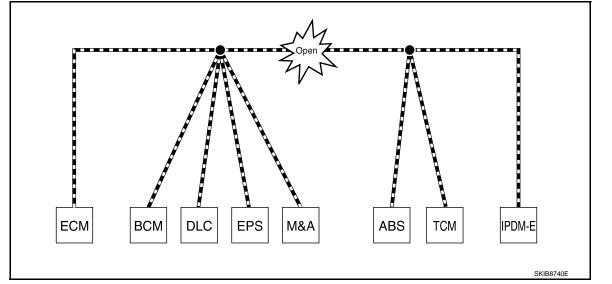

Unit name	Symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	 Reverse warning chime does not sound. The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position.
EPS control unit	The steering effort increases.
Combination meter	 The shift position indicator and OD OFF indicator turn OFF. The speedometer is inoperative. The odo/trip meter stops.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, • The headlamps (Lo) turn ON. • The cooling fan continues to rotate.

Example: CAN-H, CAN-L Harness Short Circuit

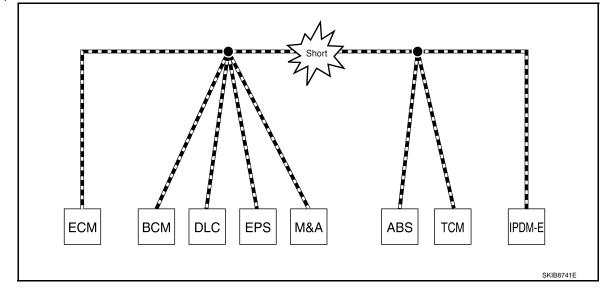

Α

В

С

D

Е

F

G

Н

12

L

LAN

Ν

0

Unit name	Symptom
ECM	 Engine torque limiting is affected, and shift harshness increases. Engine speed drops.
BCM	 Reverse warning chime does not sound. The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position. The room lamp does not turn ON. The engine does not start (if an error or malfunction occurs while turning the ignition switch OFF.) The steering lock does not release (if an error or malfunction occurs while turning the ignition switch OFF.)
EPS control unit	The steering effort increases.
Combination meter	 The tachometer and the speedometer do not move. Warning lamps turn ON. Indicator lamps do not turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, • The headlamps (Lo) turn ON. • The cooling fan continues to rotate.

CAN Diagnosis with CONSULT

INFOID:0000000007626528

CAN diagnosis on CONSULT extracts the root cause by receiving the following information.

- Response to the system call
- · Control unit diagnosis information
- Self-diagnosis
- CAN diagnostic support monitor

Self-Diagnosis

INFOID:0000000007626529

If communication signals cannot be transmitted or received among units communicating via CAN communication line, CAN communication-related DTC is displayed on the CONSULT "Self Diagnostic Result" screen.

The following table shows examples of CAN communication-related DTC. For other DTC, refer to the applicable sections.

DTC	Self-diagnosis item (CONSULT indication)		DTC detection condition	Inspection/Action		
U1000	CAN COMM CIRCUIT	ECM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.			
01000	Except for ECM		When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.	Start the inspection. Re- fer to the applicable sec- tion of the indicated		
U1001	CAN COMM CIRCUIT	cation sig	M is not transmitting or receiving CAN communi- inal other than OBD (emission-related diagnosis) ands or more.	control unit.		
U1002	SYSTEM COMM		control unit is not transmitting or receiving CAN cation signal for 2 seconds or less.			
U1010	CONTROL UNIT(CAN)		error is detected during the initial diagnosis for troller of each control unit.	Replace the control unit indicating "U1010".		

CAN Diagnostic Support Monitor

INFOID:0000000007626530

MONITOR ITEM (CONSULT)

Α

В

D

Е

F

Н

K

LAN

0

Example: CAN DIAG SUPPORT MNTR indication

Without PAST			With	PAST	
EC	М		EC	М	
	¦ PRSNT	¦ PAST		PRSNT	PAST
INITIAL DIAG	OK	!	TRANSMIT DIAG	OK	OK
TRANSMIT DIAG	¦ok	; <u>-</u>	VDC/TCS/ABS	 !-	1-
TCM	OK	: <u>-</u>	METER/M&A	¦OK	¦OK
VDC/TCS/ABS	UNKWN	[]	BCM/SEC	ОК	OK
METER/M&A	¦OK	:1	ICC		Ţ-
ICC	UNKWN	:1	HVAC		Ţ
BCM/SEC	¦ OK	; <u>_</u>	TCM	ОК	OK
IPDM E/R	OK		EPS	[-	J
			IPDM E/R	OK	¦ok
			e4WD	[-]-
			AWD/4WD	OK	OK

Without PAST

Item	PRSNT	Description
Initial diagnosis	OK	Normal at present
Initial diagnosis	NG	Control unit error (Except for some control units)
	OK	Normal at present
Transmission diagnosis		Unable to transmit signals for 2 seconds or more.
	UNKWN	Diagnosis not performed
	OK	Normal at present
Control unit name		Unable to receive signals for 2 seconds or more.
(Reception diagnosis)	UNKWN	Diagnosis not performed
		No control unit for receiving signals. (No applicable optional parts)

With PAST

Item	PRSNT	PAST	Description
		OK	Normal at present and in the past
Transmission diagnosis	OK	1 – 39	Normal at present, but unable to transmit signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to transmit signals for 2 seconds or more at present.
		OK	Normal at present and in the past
Control unit name	OK	1 – 39	Normal at present, but unable to receive signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
(Reception diagnosis)	UNKWN	0	Unable to receive signals for 2 seconds or more at present.
			Diagnosis not performed.
	_	_	No control unit for receiving signals. (No applicable optional parts)

MONITOR ITEM (ON-BOARD DIAGNOSIS)

NOTE:

For some models, CAN communication diagnosis result is received from the vehicle monitor.


< SYSTEM DESCRIPTION >

Item	Result indi- cated	Error counter	Description
	OK	0	Normal at present
CAN_COMM (Initial diagnosis)	NG	1 – 50	Control unit error (The number indicates how many times diagnosis has been run.)
	OK	0	Normal at present
CAN_CIRC_1 (Transmission diagnosis)	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
	OK	0	Normal at present
CAN_CIRC_2 - 9			Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
(Reception diagnosis of each unit)	UNKWN	1 – 50	Diagnosis not performed.
			No control unit for receiving signals. (No applicable optional parts)

How to Use CAN Communication Signal Chart

INFOID:0000000007626531


The CAN communication signal chart lists the signals needed for trouble diagnosis. It is useful for detecting the root cause by finding a signal related to the symptom, and by checking transmission and reception unit.

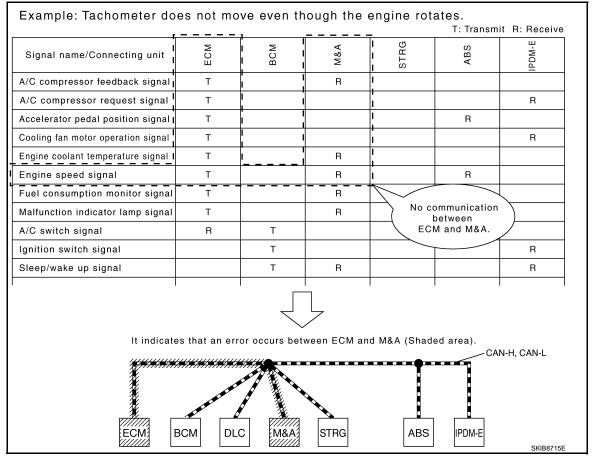

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Trouble Diagnosis Flow Chart

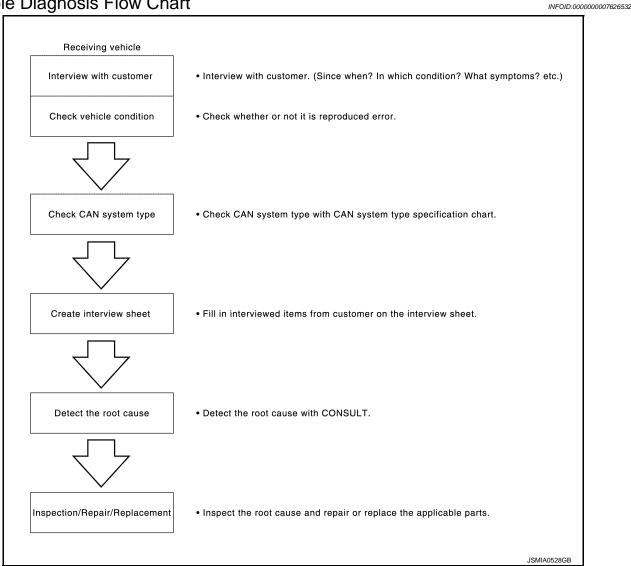

Trouble Diagnosis Procedure

INFOID:0000000007626533

INTERVIEW WITH CUSTOMER

Interview with the customer is important to detect the root cause of CAN communication system errors and to understand vehicle condition and symptoms for proper trouble diagnosis.

Points in interview

- · What: Parts name, system name
- · When: Date, Frequency
- Where: Road condition, Place
- In what condition: Driving condition/environment
- Result: Symptom

NOTE:

- Check normal units as well as error symptoms.
- Example: Circuit between ECM and the combination meter is judged normal if the customer indicates tachometer functions normally.
- When a CAN communication system error is present, multiple control units may malfunction or go into failsafe mode.

LAN


Р

Α

В

D

• Indication of the combination meter is important to detect the root cause because it is the most obvious to the customer, and it performs CAN communication with many units.

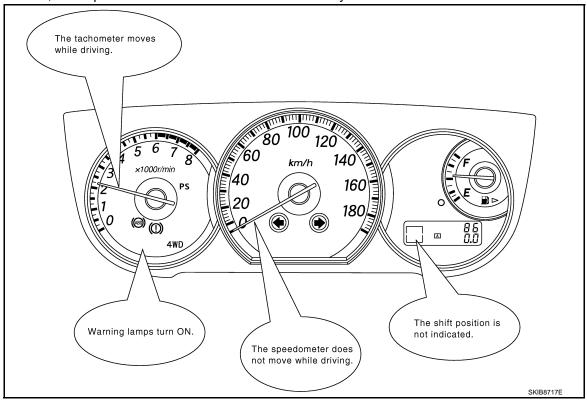

INSPECTION OF VEHICLE CONDITION

Check whether the symptom is reproduced or not.

NOTE:

Do not turn the ignition switch OFF or disconnect the battery cable while reproducing the error. The error may temporarily correct itself, making it difficult to determine the root cause.

CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART) Determine CAN system type based on vehicle equipment.

NOTE:

- This chart is used if CONSULT does not automatically recognize CAN system type.
- There are two styles for CAN system type specification charts. Depending on the number of available system types, either style A or style B may be used.

CAN System Type Specification Chart (Style A) **NOTE:**

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Α


В

D

Е

F

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

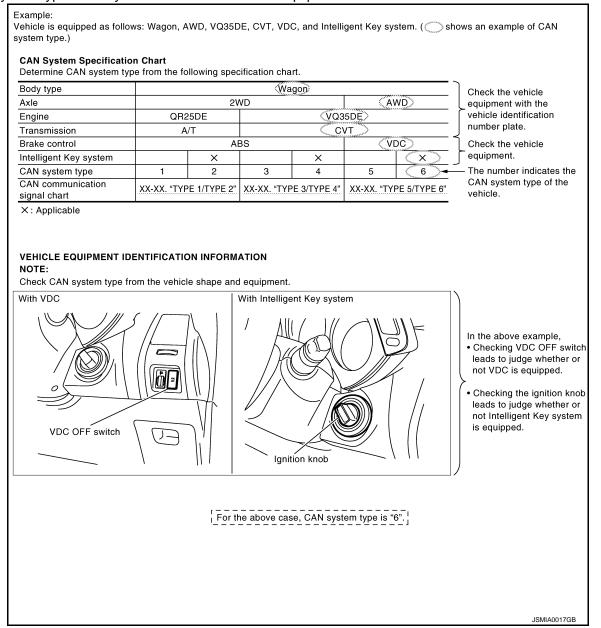

CAN System Type Specification Chart (Style B)

NOTE:

LAN

Ν


C

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

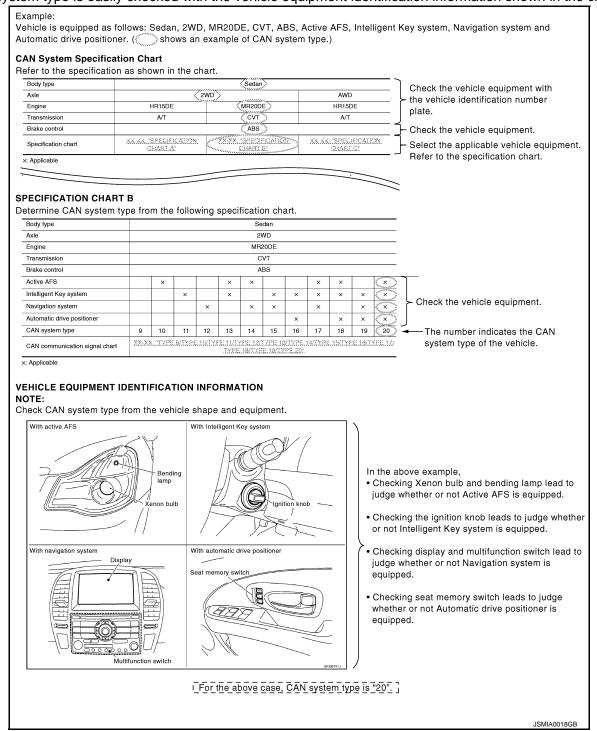

CREATE INTERVIEW SHEET

Fill out the symptom described by the customer, vehicle condition, and CAN system type on the interview sheet.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Α

В

С

D

Е

F

Н

Interview Sheet (Example)

CAN Communication System Diagnosis Interview Sheet
Date received: 3, Feb. 2006
Type: DBA-KG11 VIN No.: KG11-005040
Model: BDRARGZ397EDA-E-J-
First registration: 10, Jan. 2001 Mileage: 62,140
CAN system type: Type 19
Symptom (Results from interview with customer) Headlamps suddenly turn ON while driving the vehicle. The engine does not restart after stopping the vehicle and turning the ignition
switch OFF. The cooling fan continues rotating while turning the ignition switch ON.
Condition at inspection
Error Symptom: Present / Past The engine does not start. While turning the ignition switch ON, • The headlamps (Lo) turn ON, and the cooling fan continues rotating.
•The interior lamp does not turn ON.
 JSMIA0019GB

DETECT THE ROOT CAUSE

CAN diagnosis function of CONSULT detects the root cause.

LAN

Κ

L

Ν

0

HOW TO USE THIS MANUAL

HOW TO USE THIS SECTION

Caution INFOID:000000007626534

- This section describes information peculiar to a vehicle and inspection procedures.
- For trouble diagnosis procedure, refer to LAN-15, "Trouble Diagnosis Flow Chart".

Abbreviation List

Unit name abbreviations in CONSULT CAN diagnosis and in this section are as per the following list.

Abbreviation	Unit name
A-BAG	Air bag diagnosis sensor unit
ABS	ABS actuator and electric unit (control unit)
AV	AV control unit
ВСМ	BCM
C/ROOF	Soft top control unit
DLC	Data link connector
ECM	ECM
HVAC	A/C auto amp.
IPDM-E	IPDM E/R
M&A	Combination meter
STRG	Steering angle sensor
TCM	TCM

PRECAUTIONS

< PRECAUTION > [CAN]

PRECAUTION

PRECAUTIONS
FOR USA AND CANADA

FOR USA AND CANADA: Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the
 ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with
 a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing
 serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR USA AND CANADA: Precaution for Battery Service

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

FOR USA AND CANADA: Precautions for Trouble Diagnosis

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.

LAN

Ν

INFOID:0000000007626537

INFOID:0000000007626538

Α

D

Е

_/\\\

P

Revision: 2011 August **LAN-21** 2012 370Z


< PRECAUTION > [CAN]

FOR USA AND CANADA: Precautions for Harness Repair

INFOID:0000000007626539


Solder the repaired area and wrap tape around the soldered area.
 NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

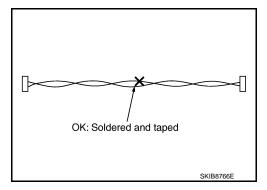

Bypass connection is never allowed at the repaired area.
 NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

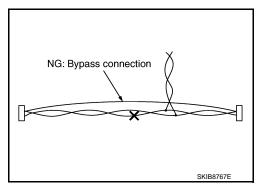

 Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

FOR MEXICO

FOR MEXICO: Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal
 injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag
 Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

< PRECAUTION > [CAN]

FOR MEXICO: Precaution for Battery Service

INFOID:0000000007626541

Α

В

D

Е

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

FOR MEXICO: Precautions for Trouble Diagnosis

INFOID:0000000007626542

CAUTION:


- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.

FOR MEXICO: Precautions for Harness Repair

INFOID:0000000007626543


Solder the repaired area and wrap tape around the soldered area.
 NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

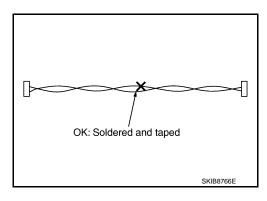

Bypass connection is never allowed at the repaired area.
 NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

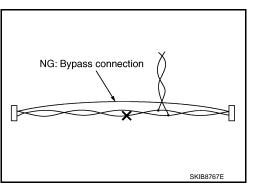

 Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

LAN

Ν

0

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Interview Sheet

	Date received:
Туре:	VIN No.:
Model:	
st registration:	Mileage:
CAN system type:	
Symptom (Results from interview	with customer)
Condition at inspection	
Condition at inspection Error symptom : Present / Pa	ast
	ast

< SYSTEM DESCRIPTION >

[CAN]

INFOID:0000000007626545

Α

В

D

Е

F

SYSTEM DESCRIPTION

CAN COMMUNICATION SYSTEM

CAN System Specification Chart

Determine CAN system type from the following specification chart.

NOTE:

Refer to LAN-15, "Trouble Diagnosis Procedure" for how to use CAN system specification chart.


Body type	Coupe Roadster								
Axle	2WD								
Engine	VQ37VHR								
Transmission	N	I/T	P	VT	N	1/T	A/T		
Brake control	VDC								
Navigation system		×		×		×		×	
CAN system type	21	22	23	24	1	2	3	4	

x: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

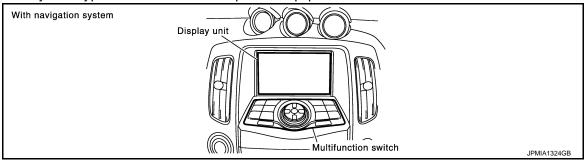

CAN Communication Signal Chart

Refer to <u>LAN-14</u>, "How to <u>Use CAN Communication Signal Chart"</u> for how to use CAN communication signal chart.

NOTE:

Refer to LAN-20, "Abbreviation List" for the abbreviations of the connecting units.

								T: Tr	ansmit	R: Receive
Signal name/Connecting unit	ECM	AV	BCM	C/ROOF*1	HVAC	M&A	STRG	TCM	ABS	IPDM-E
A/C compressor request signal	Т									R
Accelerator pedal position signal	Т							R	R	
ASCD OD cancel request signal	Т							R		
ASCD operation signal	Т							R		
ASCD status signal	Т					R				
Closed throttle position signal	Т							R		
Cooling fan speed request signal	Т									R
Engine and A/T integrated control signal	Т							R		
Engine and A Fintegrated Control Signal	R							Т		
Engine coolant temperature signal	Т				R	R				

Revision: 2011 August **LAN-25** 2012 370Z

L

INFOID:0000000007626546

LAN

Ν

0

CAN COMMUNICATION SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name/Connecting unit	ECM	A	BCM	C/ROOF*1	HVAC	M&A	STRG	TCM	ABS	IPDM-E
Engine speed signal	Т					R		R	R	
Engine status signal	Т	R	R			R				
Fuel consumption monitor signal	Т	R				R				
Fuel filler cap warning display signal	Т					R				
Malfunctioning indicator lamp signal	Т					R				
Oil temperature signal	Т					R				
Power generation command value signal	Т									R
Shift position signal	Т					R R		Т		
Wide open throttle position signal	Т							R		
A/C switch operation signal		Т			R					
A/C switch/indicator signal		T R				R T				
Rear window defogger switch signal ^{*2}		Т	R							
System setting signal		T R	R T							
Buzzer output signal			Т			R				
Day time running light request signal			Т							R
Door switch signal			T			R				R
Front wiper request signal			T							R
High beam request signal			Т			R				R
Horn reminder signal			Т							R
Ignition switch ON signal			T R	R						R T
Ignition switch signal			Т	R						
Interlock/PNP switch signal			T R							R T
Key warning lamp signal			Т			R				
Low beam request signal			Т							R
Low tire pressure warning lamp signal			Т			R				
Meter display signal			Т			R				
Oil pressure switch signal			T R			R				Т
Position light request signal			Т			R				R
Rear fog lamp status signal			Т			R				
Rear window defogger control signal	R	R*2	Т							R T
Sleep wake up signal		I.V.	Т			R				R
			T			Γ.				R
Starter control relay signal			R							T T
Starter relay status signal			T			R				R
Stop lamp switch signal			Т					R		

CAN COMMUNICATION SYSTEM

< SYSTEM DESCRIPTION > [CAN]

SYSTEM DESCRIPTION >										[CAN
Signal name/Connecting unit	ECM	AV	BCM	C/ROOF*1	HVAC	M&A	STRG	TCM	ABS	IPDM-E
Theft warning horn request signal			Т							R
TPMS malfunction warning lamp signal			Т			R				
Turn indicator signal			Т			R				
Roof status signal		R		Т		R				
Tonneau board status signal				Т		R				
A/C display signal		R			Т					
A/C evaporator temperature signal	R				Т					
A/C ON signal	R				Т					
Blower fan ON signal	R				Т					
Target A/C evaporator temperature signal	R				Т					
Distance to empty signal		R				Т				
Fuel filler cap warning reset signal	R					Т				
Fuel level sensor signal	R					Т				
Manual mode shift down signal						Т		R		
Manual mode shift up signal						Т		R		
Manual mode signal						Т		R		
Non-manual mode signal						Т		R		
Odometer signal			R			Т				
Paddle shifter shift down signal						Т		R		
Paddle shifter shift up signal						Т		R		
Parking brake switch signal			R			Т				
Seat belt buckle switch signal			R			Т				
			R			Т				
Sleep-ready signal			R							Т
	R	R	R	R	R	Т		R		R
Vehicle speed signal			R			R			Т	
Wake up signal			R			Т				
Steering angle sensor signal		R					Т		R	
A/T CHECK indicator lamp signal						R		Т		
A/T self-diagnosis signal	R							Т		
Current gear position signal	.,							T	R	
Manual mode indicator signal						R		Т		
Manual mode shift refusal signal						R		Т		
N range signal			R					Т		
Output shaft revolution signal	R							Т		
P range signal			R					Т		
Shift position signal						R		T	R	
ABS operation signal								R	T	
ABS warning lamp signal						R		11	, T	
Brake warning lamp signal						R			' Т	
VDC OFF indicator lamp signal						R			T	
VDC ore indicator lamp signal						R			T	

Revision: 2011 August **LAN-27** 2012 370Z

LAN

A

В

С

D

Е

F

G

Н

J

Κ

L

Ν

0

CAN COMMUNICATION SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name/Connecting unit	ECM	AV	BCM	C/ROOF*1	HVAC	M&A	STRG	TCM	ABS	IPDM-E
A/C compressor feedback signal	R				R					Т
Detention switch signal			R							Т
Front wiper stop position signal			R							Т
High beam status signal	R									Т
Hood switch signal			R							Т
Low beam status signal	R									Т
Push-button ignition switch status signal			R							Т

^{*1:} Roadster models only

NOTE

CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.

^{*2:} For models with navigation

[CAN]


INFOID:0000000007626547

DTC/CIRCUIT DIAGNOSIS

CAN COMMUNICATION SYSTEM

Component Parts Location


COUPE MODELS

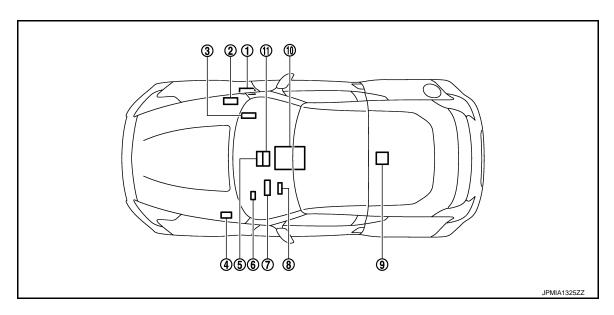

- 1. BCM M122
- 4. ABS actuator and electric unit (control unit) E41
- 7. Combination meter M53
- 10. A/T assembly F51

- 2. IPDM E/R E6
- 5. AV control unit M86
- 8. Steering angle sensor M37
- 11. A/C auto amp. M66
- 3. ECM M107
- 6. Data link connector M24
- 9. Air bag diagnosis sensor unit M147

ROADSTER MODELS

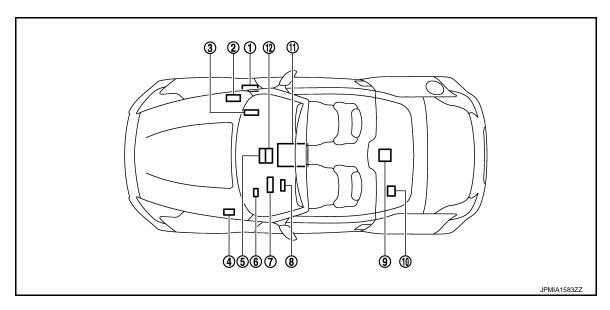

- 1. BCM M122
- ABS actuator and electric unit (control unit) E41
- 7. Combination meter M53
- 10. Soft top control unit B303
- 2. IPDM E/R E6
- 5. AV control unit M86
- 8. Steering angle sensor M37
- 11. A/T assembly F51

- 3. ECM M107
- 6. Data link connector M24
- 9. Air bag diagnosis sensor unit M147
- 12. A/C auto amp. M66

D

Α

В

Е

F

G

Н

J

K

LAN

N

С

Р


.

Revision: 2011 August **LAN-29** 2012 370Z

Wiring Diagram - CAN SYSTEM -

INFOID:0000000007626548

For connector terminal arrangements, harness layouts, and alphabets in a (option abbreviation; if notdescribed in wiring diagram), refer to GI-12, "Connector Information".

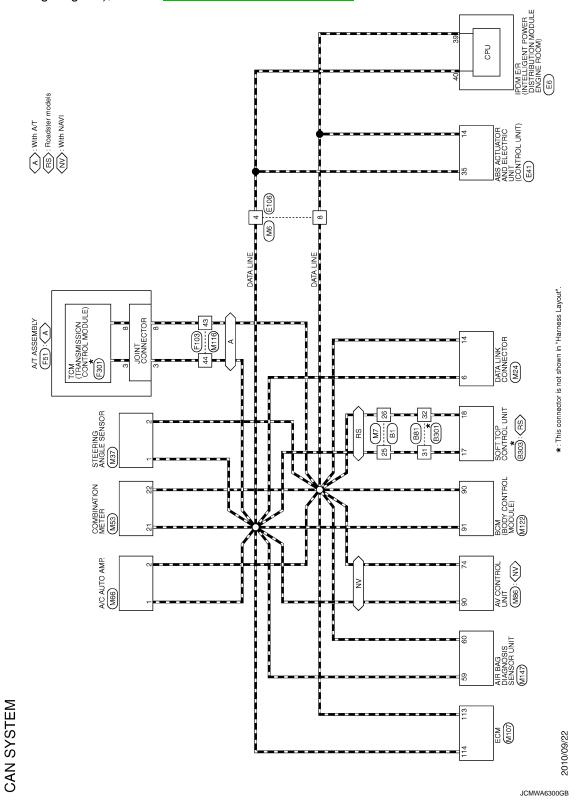

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Α

В

C

D

Е

F

G

Н

J

K

MALFUNCTION AREA CHART

Main Line

Malfunction area	Reference
Main line between data link connector and ABS actuator and electric unit (control unit)	LAN-32, "Diagnosis Procedure"

Branch Line

Malfunction area	Reference
ECM branch line circuit	LAN-33, "Diagnosis Procedure"
Air bag diagnosis sensor unit branch line circuit	LAN-34, "Diagnosis Procedure"
AV control unit branch line circuit	LAN-35, "Diagnosis Procedure"
BCM branch line circuit	LAN-36, "Diagnosis Procedure"
Soft top control unit branch line circuit	LAN-37, "Diagnosis Procedure"
Data link connector branch line circuit	LAN-38, "Diagnosis Procedure"
A/C auto amp. branch line circuit	LAN-39, "Diagnosis Procedure"
Combination meter branch line circuit	LAN-40, "Diagnosis Procedure"
Steering angle sensor branch line circuit	LAN-41, "Diagnosis Procedure"
TCM branch line circuit	LAN-42, "Diagnosis Procedure"
ABS actuator and electric unit (control unit) branch line circuit	LAN-43, "Diagnosis Procedure"
IPDM E/R branch line circuit	LAN-44, "Diagnosis Procedure"

Short Circuit

Malfunction area	Reference
CAN communication circuit	LAN-45, "Diagnosis Procedure"

LAN

Ν

0

Р

Revision: 2011 August **LAN-31** 2012 370Z

L

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

AGNOSIS > [CAN]

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000007626552

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- 3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
- Harness connector M6
- Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

- 1. Disconnect the harness connectors M6 and E106.
- 2. Check the continuity between the data link connector and the harness connector.

Data link	connector	Harness	connector	Continuity	
Connector No.	Terminal No.	Connector No. Terminal No.		Continuity	
M24	6	M6	4	Existed	
10124	14	IVIO	8	Existed	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M6.

3.check harness continuity (open circuit)

- Disconnect the connector of ABS actuator and electric unit (control unit).
- Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness	connector	ABS actuator and electric unit (control u harness connector		Continuity	
Connector No.	Terminal No.	Connector No.	Terminal No.		
E106	4	E41	35	Existed	
E100	8	E41	14	Existed	

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626553

1. CHECK CONNECTOR

Α

В

D

F

Н

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of ECM.
- 2. Check the resistance between the ECM harness connector terminals.

	Resistance (Ω)		
Connector No.	Termi	1\esistance (22)	
M107	114	113	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to <u>EC-172, "Diagnosis Procedure"</u>. Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to <u>EC-17</u>, "<u>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ECM)</u>: Special Repair Requirement".

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

LAN

K

Ν

Р

Revision: 2011 August **LAN-33** 2012 370Z

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

INFOID:0000000007626554

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to the following.

- Coupe models: SRC-9, "Work Flow".
- Roadster models: SRC-164, "Work Flow".

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Α

В

D

F

Н

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626555

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of AV control unit.
- 2. Check the resistance between the AV control unit harness connector terminals.

	Resistance (Ω)	
Connector No.	Termi	1\esistance (22)
M86	90	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to AV-212, "AV CONTROL UNIT : Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to AV-240, "Exploded View".

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

_AIN

Ν

Р

Revision: 2011 August **LAN-35** 2012 370Z

K

LAN

BCM BRANCH LINE CIRCUIT

[CAN] < DTC/CIRCUIT DIAGNOSIS >

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626556

2012 370Z

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of BCM.
- Check the resistance between the BCM harness connector terminals.

	Resistance (Ω)		
Connector No.	Termi	ivesistance (22)	
M122	91	91 90	

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BCM branch line.

3.check power supply and ground circuit

Check the power supply and the ground circuit of the BCM. Refer to BCS-50, "Diagnosis Procedure". Is the inspection result normal?

YES (Present error)>>Replace the BCM. Refer to BCS-92, "Exploded View".

YES (Past error)>>Error was detected in the BCM branch line.

>> Repair the power supply and the ground circuit.

C/ROOF BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Α

В

D

Е

F

Н

C/ROOF BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626557

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
- Soft top control unit
- Harness connector B301
- Harness connector B81
- Harness connector B1
- Harness connector M7

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of soft top control unit.
- 2. Check the resistance between the soft top control unit harness connector terminals.

Soft top control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		resistance (\$2)
B303	17	18	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the soft top control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the soft top control unit. Refer to RF-138, "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the soft top control unit. Refer to RF-235, "Exploded View".

YES (Past error)>>Error was detected in the soft top control unit branch line.

NO >> Repair the power supply and the ground circuit.

Ν

Р

Revision: 2011 August **LAN-37** 2012 370Z

LAN

K

L

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626558

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

	Data link connector		
Connector No.	Terminal No.		Resistance (Ω)
M24	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

>> Repair the data link connector branch line.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626559

1. CHECK CONNECTOR

Α

В

D

F

Н

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the A/C auto amp, for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of A/C auto amp.
- 2. Check the resistance between the A/C auto amp. harness connector terminals.

	A/C auto amp. harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M66	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the A/C auto amp. branch line.

3.check power supply and ground circuit

Check the power supply and the ground circuit of the A/C auto amp. Refer to the following.

- Without 7 inch display: HAC-47, "A/C AUTO AMP.: Diagnosis Procedure"
- With 7 inch display: <u>HAC-133</u>, "A/C AUTO AMP.: <u>Diagnosis Procedure"</u>

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to the following.

- Without 7 inch display
- Base audio: HAC-80, "BASE AUDIO: Exploded View"
- BOSE audio without navigation: HAC-81, "BOSE AUDIO WITHOUT NAVIGATION: Exploded
- With 7 inch display: <u>HAC-165</u>, "Exploded View"

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

>> Repair the power supply and the ground circuit. NO

LAN

L

Ν

Р

LAN-39 Revision: 2011 August 2012 370Z

[CAN]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626560

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of combination meter.
- Check the resistance between the combination meter harness connector terminals.

Co	Combination meter harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M53	21	22	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to MWI-45, "COMBINATION METER: Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to MWI-92, "Exploded View".

YES (Past error)>>Error was detected in the combination meter branch line.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Α

В

D

Е

F

Н

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626561

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of steering angle sensor.
- 2. Check the resistance between the steering angle sensor harness connector terminals.

Ste	Steering angle sensor harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to <u>BRC-88</u>, "Wiring Diagram - BRAKE CONTROL SYSTEM -".

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to BRC-111, "Exploded View".

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

LAN

K

Ν

Р

[CAN]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626562

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- 3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
- A/T assembly
- Harness connector F103
- Harness connector M116

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2 .CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of A/T assembly.
- Check the resistance between the A/T assembly harness connector terminals.

	A/T assembly harness connector		
Connector No.	Terminal No.		Resistance (Ω)
F51	3	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK HARNESS FOR OPEN CIRCUIT

- Remove the joint connector. Refer to TM-321, "Removal and Installation".
- Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	Continuity
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

f 4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to TM-267, "Diagnosis Procedure". Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to TM-321, "Removal and Installation".

YES (Past error)>>Error was detected in the TCM branch line.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Α

В

D

Н

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626563

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of ABS actuator and electric unit (control unit).
- Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		resistance (22)
E41	35	14	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to BRC-74, "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to BRC-108, "Exploded View".

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

NO >> Repair the power supply and the ground circuit.

_/\IN

Ν

Р

Revision: 2011 August **LAN-43** 2012 370Z

LAN

K

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626564

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of IPDM E/R.
- 2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector		Resistance (Ω)	
Connector No.	Terminal No.		ivesistance (22)
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to <u>PCS-19, "Diagnosis Procedure"</u>. Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to PCS-34, "Exploded View".

YES (Past error)>>Error was detected in the IPDM E/R branch line.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Α

В

D

F

Н

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:0000000007626565

1. CONNECTOR INSPECTION

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect all the unit connectors on CAN communication system.
- 4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

	Data link connector		Continuity
Connector No.	Terminal No.		Continuity
M24	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.check harness continuity (short circuit)

Check the continuity between the data link connector and the ground.

Data link connector			Continuity
Connector No.	Terminal No.	Ground	Continuity
M24	6	Ground	Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.


4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

- Remove the ECM and the IPDM E/R.
- Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		ixesistance (22)
114	113	Approx. 108 – 132

Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)	
Terminal No.			
40	39	Approx. 108 – 132	

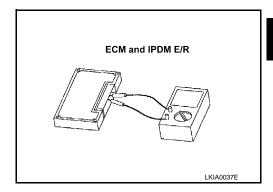

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Revision: 2011 August **LAN-45** 2012 370Z

LAN

K

Ν

0

Р

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.check unit reproduction

Perform the reproduction test as per the following procedure for each unit.

- Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

INFOID:0000000007626566

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

Diagnosis Procedure

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- 3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
- Harness connector M6
- Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

$2. {\sf CHECK\ HARNESS\ CONTINUITY\ (OPEN\ CIRCUIT)}$

- 1. Disconnect the harness connectors M6 and E106.
- Check the continuity between the data link connector and the harness connector.

Data link	connector	Harness	connector	Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	Continuity
M24	6	M6	4	Existed
IVI24	14	IVIO	8	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M6.

3.check harness continuity (open circuit)

- Disconnect the connector of ABS actuator and electric unit (control unit).
- 2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness	connector		ectric unit (control unit) connector	Continuity	
Connector No.	Terminal No.	Connector No. Terminal No.			
E106	4	E41	35	Existed	
	8	L41	14	Existed	

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

Α

Е

D

G

K

L

LAN

Р

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626567

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of ECM.
- 2. Check the resistance between the ECM harness connector terminals.

	ECM harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M107	114	113	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to <u>EC-172, "Diagnosis Procedure"</u>. <u>Is the inspection result normal?</u>

YES (Present error)>>Replace the ECM. Refer to <u>EC-17</u>, "<u>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ECM)</u>: Special Repair Requirement".

YES (Past error)>>Error was detected in the ECM branch line.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626568

Α

В

C

D

Е

F

Н

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to the following.

- Coupe models: SRC-9, "Work Flow".
- Roadster models: SRC-164, "Work Flow".

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

LAN

K

Ν

Р

Revision: 2011 August **LAN-49** 2012 370Z

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626569

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of BCM.
- 2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Termi	ixesistance (22)	
M122	91	90	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BCM branch line.

3.check power supply and ground circuit

Check the power supply and the ground circuit of the BCM. Refer to <u>BCS-50, "Diagnosis Procedure"</u>. <u>Is the inspection result normal?</u>

YES (Present error)>>Replace the BCM. Refer to BCS-92, "Exploded View".

YES (Past error)>>Error was detected in the BCM branch line.

C/ROOF BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

C/ROOF BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626570

Α

В

D

Е

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
- Soft top control unit
- Harness connector B301
- Harness connector B81
- Harness connector B1
- Harness connector M7

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of soft top control unit.
- 2. Check the resistance between the soft top control unit harness connector terminals.

Soft top control unit harness connector			Resistance (Ω)
Connector No.	Termi		
B303	17	Approx. 54 – 66	

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the soft top control unit branch line.

${f 3.}$ CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the soft top control unit. Refer to RF-138, "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the soft top control unit. Refer to RF-235, "Exploded View".

YES (Past error)>>Error was detected in the soft top control unit branch line.

NO >> Repair the power supply and the ground circuit.

LAN

K

L

Ν

Р

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626571

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

	Data link connector		
Connector No.	Termi	Resistance (Ω)	
M24	6 14		Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626572

Α

В

D

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of A/C auto amp.
- 2. Check the resistance between the A/C auto amp. harness connector terminals.

	A/C auto amp. harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M66	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the A/C auto amp. branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to the following.

- Without 7 inch display: <u>HAC-47</u>, "A/C AUTO AMP. : <u>Diagnosis Procedure</u>"
- With 7 inch display: <u>HAC-133</u>, "A/C AUTO AMP. : <u>Diagnosis Procedure</u>"

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to the following.

- Without 7 inch display
- Base audio: HAC-80, "BASE AUDIO: Exploded View"
- BOSE audio without navigation: <u>HAC-81, "BOSE AUDIO WITHOUT NAVIGATION: Exploded View"</u>
- With 7 inch display: <u>HAC-165</u>, "Exploded View"

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

NO >> Repair the power supply and the ground circuit.

LAN

Ν

C

Р

Revision: 2011 August **LAN-53** 2012 370Z

A B I

L

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626573

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of combination meter.
- 2. Check the resistance between the combination meter harness connector terminals.

Co	Combination meter harness connector		
Connector No.	Termi	Resistance (Ω)	
M53	21 22		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to MWI-45, "COMBINATION METER: Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to MWI-92, "Exploded View".

YES (Past error)>>Error was detected in the combination meter branch line.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626574

Α

В

D

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of steering angle sensor.
- 2. Check the resistance between the steering angle sensor harness connector terminals.

Ste	Steering angle sensor harness connector		
Connector No.	Termi	Resistance (Ω)	
M37	1 2		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to <u>BRC-88</u>, "Wiring Diagram - BRAKE CONTROL SYSTEM -".

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to BRC-111, "Exploded View".

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

LAN

K

Ν

Р

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626575

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of ABS actuator and electric unit (control unit).
- Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator	ABS actuator and electric unit (control unit) harness connector		
Connector No.	Termi	Resistance (Ω)	
E41	35	14	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to BRC-74, "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to BRC-108, "Exploded View".

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626576

Α

В

D

F

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2 CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of IPDM E/R.
- Check the resistance between the IPDM E/R harness connector terminals.

	IPDM E/R harness connector		
Connector No.	Terminal No.		Resistance (Ω)
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to PCS-19, "Diagnosis Procedure". Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to PCS-34, "Exploded View".

YES (Past error)>>Error was detected in the IPDM E/R branch line.

>> Repair the power supply and the ground circuit.

K

Ν

Р

LAN-57 Revision: 2011 August 2012 370Z

LAN

INFOID:0000000007626577

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

1.connector inspection

1. Turn the ignition switch OFF.

- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect all the unit connectors on CAN communication system.
- 4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

	Data link connector		
Connector No.	Terminal No.		Continuity
M24	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.check harness continuity (short circuit)

Check the continuity between the data link connector and the ground.

Data link connector			Continuity
Connector No.	Terminal No.	Ground	Continuity
M24	6		Not existed
IVI24	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.


4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

- 1. Remove the ECM and the IPDM E/R.
- 2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)	
Terminal No.			
114	113	Approx. 108 – 132	

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)	
Terminal No.			
40	39	Approx. 108 – 132	

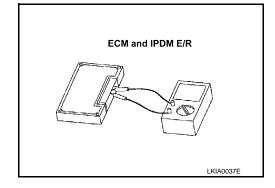

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

ICAN SYSTEM (TYPE 1)

< DTC/CIRCUIT L	JIAGNOSIS >	
Inspection result		
Reproduced>>G	O TO 6.	
	>>Start the diagnosis again. Follow the trouble diagnosis pro	cedure when past error is
6.CHECK UNIT F	REPRODUCTION	I
Perform the reprod	duction test as per the following procedure for each unit.	
1. Turn the ignition	on switch OFF.	
2. Disconnect the	e battery cable from the negative terminal.	(
Disconnect on NOTE:	ne of the unit connectors of CAN communication system.	
ECM and IPDI 4. Connect the b	M E/R have a termination circuit. Check other units first. pattery cable to the negative terminal. Check if the symptoms interview with customer)" are reproduced.	described in the "Symptom
NOTE:	· ·	vmntome
Inspection result	related error symptoms occur, do not confuse them with other s	ymptoms.
	onnect the connector. Check other units as per the above proce	dure
	>>Replace the unit whose connector was disconnected.	dure.
		,
		I
		,
		I
		L
		I
		· · · · · · · · · · · · · · · · · · ·

LAN-59 Revision: 2011 August 2012 370Z

Ρ

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000007626578

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- 3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
- Harness connector M6
- Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.check harness continuity (open circuit)

- 1. Disconnect the harness connectors M6 and E106.
- Check the continuity between the data link connector and the harness connector.

Data link	connector	Harness connector		Continuity
Connector No.	Terminal No.	Connector No. Terminal No.		Continuity
M24	M24 6	M6	4	Existed
IVI24	14	IVIO	8	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M6.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

- Disconnect the connector of ABS actuator and electric unit (control unit).
- 2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness	connector		ABS actuator and electric unit (control unit) harness connector	
Connector No.	Terminal No.	Connector No. Terminal No.		
E106	4	E41	35	Existed
	8	L41	14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626579

Α

В

D

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of ECM.
- 2. Check the resistance between the ECM harness connector terminals.

	ECM harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M107	114	113	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to <u>EC-172, "Diagnosis Procedure"</u>. <u>Is the inspection result normal?</u>

YES (Present error)>>Replace the ECM. Refer to <u>EC-17</u>, "<u>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ECM)</u>: Special Repair Requirement".

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

LAN

Ν

Р

Revision: 2011 August **LAN-61** 2012 370Z

A N I

K

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626580

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to the following.

- Coupe models: <u>SRC-9</u>, "Work Flow".
- Roadster models: <u>SRC-164, "Work Flow"</u>.

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626581

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2 CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of AV control unit.
- Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		1\esistance (22)
M86	90	74	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to AV-212, "AV CONTROL UNIT: Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to AV-240, "Exploded View".

YES (Past error)>>Error was detected in the AV control unit branch line.

>> Repair the power supply and the ground circuit. NO

Ν

Р

LAN-63 Revision: 2011 August 2012 370Z Α

В

D

F

Н

K

LAN

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626582

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of BCM.
- 2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		ixesistance (22)
M122	91	90	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BCM branch line.

3.check power supply and ground circuit

Check the power supply and the ground circuit of the BCM. Refer to <u>BCS-50, "Diagnosis Procedure"</u>. <u>Is the inspection result normal?</u>

YES (Present error)>>Replace the BCM. Refer to BCS-92, "Exploded View".

YES (Past error)>>Error was detected in the BCM branch line.

C/ROOF BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

C/ROOF BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626583

Α

В

D

Е

F

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
- Soft top control unit
- Harness connector B301
- Harness connector B81
- Harness connector B1
- Harness connector M7

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2 .CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of soft top control unit.
- Check the resistance between the soft top control unit harness connector terminals.

Soft top control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		116313181106 (22)
B303	17	18	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the soft top control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the soft top control unit. Refer to RF-138. "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the soft top control unit. Refer to RF-235, "Exploded View".

YES (Past error)>>Error was detected in the soft top control unit branch line.

NO >> Repair the power supply and the ground circuit.

LAN

Ν

Р

LAN-65 Revision: 2011 August 2012 370Z

K

L

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626584

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

	Data link connector		
Connector No.	Terminal No.		Resistance (Ω)
M24	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626585

Α

В

D

F

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the A/C auto amp, for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of A/C auto amp.
- 2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the A/C auto amp. branch line.

3.check power supply and ground circuit

Check the power supply and the ground circuit of the A/C auto amp. Refer to the following.

- Without 7 inch display: HAC-47, "A/C AUTO AMP.: Diagnosis Procedure"
- With 7 inch display: <u>HAC-133</u>, "A/C AUTO AMP.: <u>Diagnosis Procedure</u>"

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to the following.

- Without 7 inch display
- Base audio: HAC-80, "BASE AUDIO: Exploded View"
- BOSE audio without navigation: HAC-81, "BOSE AUDIO WITHOUT NAVIGATION: Exploded
- With 7 inch display: <u>HAC-165</u>, "Exploded View"

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

>> Repair the power supply and the ground circuit. NO

Ν

Р

LAN-67 Revision: 2011 August 2012 370Z

LAN

L

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626586

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of combination meter.
- 2. Check the resistance between the combination meter harness connector terminals.

Co	Combination meter harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M53	21	22	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to MWI-45, "COMBINATION METER: Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to MWI-92, "Exploded View".

YES (Past error)>>Error was detected in the combination meter branch line.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626587

1. CHECK CONNECTOR

Α

В

D

F

Н

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of steering angle sensor.
- 2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to <u>BRC-88</u>, "Wiring Diagram - BRAKE CONTROL SYSTEM -".

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to BRC-111, "Exploded View".

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

LAN

K

Ν

Р

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626588

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of ABS actuator and electric unit (control unit).
- Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector		Resistance (Ω)	
Connector No.	Terminal No.		110313141106 (52)
E41	35	14	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to BRC-74, "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to BRC-108, "Exploded View".

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626589

Α

В

D

F

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2 CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of IPDM E/R.
- Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		ivesistatice (22)
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to PCS-19, "Diagnosis Procedure". Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to PCS-34, "Exploded View".

YES (Past error)>>Error was detected in the IPDM E/R branch line.

>> Repair the power supply and the ground circuit.

K

Р

LAN-71 Revision: 2011 August 2012 370Z

LAN

Ν

INFOID:0000000007626590

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

1.CONNECTOR INSPECTION

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect all the unit connectors on CAN communication system.
- 4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity	
Connector No.	Terminal No.		Continuity
M24	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.check harness continuity (short circuit)

Check the continuity between the data link connector and the ground.

Data link connector			Continuity
Connector No.	Terminal No.	Ground	Continuity
M24	6	Ground	Not existed
	14	-	Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.


4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

- Remove the ECM and the IPDM E/R.
- Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

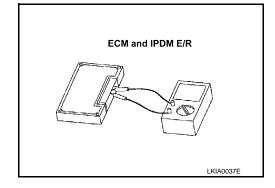

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

- DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

< DTC/CIRCUIT DIAGNOSIS >	[CAN STSTEM (TTPE 2)]
Inspection result	
Reproduced>>GO TO 6.	
Non-reproduced>>Start the diagnosis again. Follow the trouble diagred detected.	nosis procedure when past error is
6. CHECK UNIT REPRODUCTION	
Perform the reproduction test as per the following procedure for each unit 1. Turn the ignition switch OFF.	
 Disconnect the battery cable from the negative terminal. Disconnect one of the unit connectors of CAN communication system NOTE: 	1.
ECM and IPDM E/R have a termination circuit. Check other units first 4. Connect the battery cable to the negative terminal. Check if the sy (Results from interview with customer)" are reproduced. NOTE:	
Although unit-related error symptoms occur, do not confuse them with	n other symptoms.
Inspection result	
Reproduced>>Connect the connector. Check other units as per the above Non-reproduced>>Replace the unit whose connector was disconnected.	

Revision: 2011 August LAN-73 2012 370Z

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000007626591

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
- Harness connector M6
- Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.check harness continuity (open circuit)

- 1. Disconnect the harness connectors M6 and E106.
- Check the continuity between the data link connector and the harness connector.

Data link	connector	Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	Continuity
M24	6	Me	4	Existed
IVI24	14	M6	8	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M6.

3.check harness continuity (open circuit)

- Disconnect the connector of ABS actuator and electric unit (control unit).
- 2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	4	E41	35	Existed
	8	- E41	14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626592

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2 CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of ECM.
- 2. Check the resistance between the ECM harness connector terminals.

	ECM harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M107	114	113	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to EC-172, "Diagnosis Procedure". Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to EC-17, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ECM): Special Repair Requirement".

YES (Past error)>>Error was detected in the ECM branch line.

>> Repair the power supply and the ground circuit.

LAN

K

Ν

Р

LAN-75 Revision: 2011 August 2012 370Z Α

В

D

F

Н

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626593

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to the following.

- Coupe models: <u>SRC-9</u>, "Work Flow".
- Roadster models: <u>SRC-164, "Work Flow"</u>.

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626594

Α

В

D

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of BCM.
- 2. Check the resistance between the BCM harness connector terminals.

	BCM harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M122	91	90	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to <u>BCS-50, "Diagnosis Procedure"</u>. <u>Is the inspection result normal?</u>

YES (Present error)>>Replace the BCM. Refer to BCS-92, "Exploded View".

YES (Past error)>>Error was detected in the BCM branch line.

NO >> Repair the power supply and the ground circuit.

LAN

Ν

Р

Revision: 2011 August **LAN-77** 2012 370Z

C/ROOF BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

C/ROOF BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626595

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
- Soft top control unit
- Harness connector B301
- Harness connector B81
- Harness connector B1
- Harness connector M7

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of soft top control unit.
- 2. Check the resistance between the soft top control unit harness connector terminals.

Soft top control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		rtesistance (22)
B303	17	18	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the soft top control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the soft top control unit. Refer to <u>RF-138</u>, "<u>Diagnosis Procedure</u>".

Is the inspection result normal?

YES (Present error)>>Replace the soft top control unit. Refer to RF-235, "Exploded View".

YES (Past error)>>Error was detected in the soft top control unit branch line.

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626596

Α

В

D

Е

F

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

	Data link connector		Resistance (Ω)
Connector No.	Terminal No.		110313181100 (22)
M24	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

Н

Κ

L

LAN

Ν

C

Р

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626597

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of A/C auto amp.
- 2. Check the resistance between the A/C auto amp. harness connector terminals.

	A/C auto amp. harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M66	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the A/C auto amp. branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to the following.

- Without 7 inch display: <u>HAC-47</u>, "A/C AUTO AMP.: <u>Diagnosis Procedure</u>"
- With 7 inch display: HAC-133, "A/C AUTO AMP. : Diagnosis Procedure"

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to the following.

- Without 7 inch display
- Base audio: HAC-80, "BASE AUDIO: Exploded View"
- BOSE audio without navigation: <u>HAC-81</u>, "BOSE AUDIO WITHOUT NAVIGATION: Exploded View"
- With 7 inch display: HAC-165, "Exploded View"

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626598

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of combination meter.
- Check the resistance between the combination meter harness connector terminals.

Co	Combination meter harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M53	21	22	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to MWI-45, "COMBINATION METER: Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to MWI-92, "Exploded View".

YES (Past error)>>Error was detected in the combination meter branch line.

>> Repair the power supply and the ground circuit. NO

LAN

K

Ν

Р

LAN-81 Revision: 2011 August 2012 370Z

Α

В

D

F

Н

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626599

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of steering angle sensor.
- 2. Check the resistance between the steering angle sensor harness connector terminals.

Ste	Steering angle sensor harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to <u>BRC-88</u>, "Wiring Diagram - BRAKE CONTROL SYSTEM -".

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to BRC-111, "Exploded View".

YES (Past error)>>Error was detected in the steering angle sensor branch line.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626600

Α

В

D

Е

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- 3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
- A/T assembly
- Harness connector F103
- Harness connector M116

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of A/T assembly.
- 2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector			Resistance (Ω)
Connector No.	Terminal No.		1/65/5/8/106 (22)
F51	3	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK HARNESS FOR OPEN CIRCUIT

- Remove the joint connector. Refer to TM-321, "Removal and Installation".
- Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side TCM harness connector side		Continuity
Terminal No.	Terminal No.	Continuity
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

f 4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to TM-267, "Diagnosis Procedure". Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to TM-321, "Removal and Installation".

YES (Past error)>>Error was detected in the TCM branch line.

>> Repair the power supply and the ground circuit. NO

LAN

K

Ν

Р

LAN-83 Revision: 2011 August 2012 370Z

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626601

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of ABS actuator and electric unit (control unit).
- Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator	ABS actuator and electric unit (control unit) harness connector		
Connector No.	Terminal No.		Resistance (Ω)
E41	35 14		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to BRC-74, "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to BRC-108, "Exploded View".

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626602

Α

В

D

F

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of IPDM E/R.
- Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		1\esistance (22)
E6	40 39		Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to PCS-19, "Diagnosis Procedure". Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to PCS-34, "Exploded View".

YES (Past error)>>Error was detected in the IPDM E/R branch line.

>> Repair the power supply and the ground circuit.

LAN

K

Ν

Р

LAN-85 Revision: 2011 August 2012 370Z

INFOID:0000000007626603

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

1.CONNECTOR INSPECTION

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect all the unit connectors on CAN communication system.
- 4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

	Data link connector		
Connector No.	Terminal No.		Continuity
M24	6	Not existed	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.check harness continuity (short circuit)

Check the continuity between the data link connector and the ground.

Data link	Data link connector		Continuity
Connector No.	Terminal No.	Ground	Continuity
M24	Grou 6	Ground	Not existed
IVI24	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.


4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

- Remove the ECM and the IPDM E/R.
- Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (O)	
Terminal No.		Resistance (Ω)	
40	39	Approx. 108 – 132	

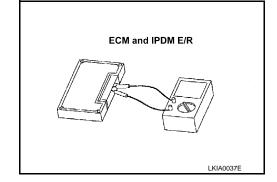

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

- DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

< DTC/CIRCUIT DIAGNOSIS >	
Inspection result	
Reproduced>>GO TO 6.	
Non-reproduced>>Start the diagnosis again. Follow the trouble diagnodetected.	osis procedure when past error is
6. CHECK UNIT REPRODUCTION	
Perform the reproduction test as per the following procedure for each unit.	
Turn the ignition switch OFF. Disconnect the bettery cable from the pagetive terminal.	
 Disconnect the battery cable from the negative terminal. Disconnect one of the unit connectors of CAN communication system. 	
NOTE:	
ECM and IPDM E/R have a termination circuit. Check other units first.4. Connect the battery cable to the negative terminal. Check if the sym (Results from interview with customer)" are reproduced.	nptoms described in the "Symptom
NOTE: Although unit-related error symptoms occur, do not confuse them with	other symptoms
Inspection result	caror dymptome.
Reproduced>>Connect the connector. Check other units as per the above	e procedure
Non-reproduced>>Replace the unit whose connector was disconnected.	o procedure.

Revision: 2011 August **LAN-87** 2012 370Z

0

Р

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000007626604

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
- Harness connector M6
- Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.check harness continuity (open circuit)

- 1. Disconnect the harness connectors M6 and E106.
- Check the continuity between the data link connector and the harness connector.

Data link	connector	Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	Continuity
M24	6	M6	4	Existed
IVI24	14	IVIO	8	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M6.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

- Disconnect the connector of ABS actuator and electric unit (control unit).
- 2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness	Harness connector ABS actuator and electric unit (contained to the property of the property) ABS actuator and electric unit (contained to the property)		*	Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	4	E41	35	Existed
	8	L41	14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626605

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of ECM.
- 2. Check the resistance between the ECM harness connector terminals.

	ECM harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M107	114	113	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to EC-172, "Diagnosis Procedure". Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to EC-17, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ECM): Special Repair Requirement".

YES (Past error)>>Error was detected in the ECM branch line.

>> Repair the power supply and the ground circuit.

LAN

K

Ν

Р

LAN-89 Revision: 2011 August 2012 370Z Α

В

D

F

Н

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

INFOID:0000000007626606

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to the following.

- Coupe models: <u>SRC-9</u>, "Work Flow".
- Roadster models: <u>SRC-164, "Work Flow"</u>.

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626607

Α

В

D

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of AV control unit.
- 2. Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		1\esistance (22)
M86	90 74		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to AV-212, "AV CONTROL UNIT : Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to AV-240, "Exploded View".

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

LAN

K

Ν

Р

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626608

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of BCM.
- 2. Check the resistance between the BCM harness connector terminals.

	BCM harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M122	91	Approx. 54 – 66	

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BCM branch line.

3.check power supply and ground circuit

Check the power supply and the ground circuit of the BCM. Refer to <u>BCS-50, "Diagnosis Procedure"</u>. <u>Is the inspection result normal?</u>

YES (Present error)>>Replace the BCM. Refer to BCS-92, "Exploded View".

YES (Past error)>>Error was detected in the BCM branch line.

C/ROOF BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

C/ROOF BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626609

Α

В

D

Е

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- 3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
- Soft top control unit
- Harness connector B301
- Harness connector B81
- Harness connector B1
- Harness connector M7

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of soft top control unit.
- 2. Check the resistance between the soft top control unit harness connector terminals.

Soft top control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		116313181106 (22)
B303	17 18		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the soft top control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the soft top control unit. Refer to RF-138, "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the soft top control unit. Refer to RF-235, "Exploded View".

YES (Past error)>>Error was detected in the soft top control unit branch line.

NO >> Repair the power supply and the ground circuit.

LAN

K

L

Ν

P

Revision: 2011 August **LAN-93** 2012 370Z

_/\\\

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

INFOID:0000000007626610

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

	Data link connector		
Connector No.	Terminal No.		Resistance (Ω)
M24	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626611

1. CHECK CONNECTOR

Α

В

D

F

Н

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the A/C auto amp, for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of A/C auto amp.
- 2. Check the resistance between the A/C auto amp. harness connector terminals.

	A/C auto amp. harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M66	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the A/C auto amp. branch line.

3.check power supply and ground circuit

Check the power supply and the ground circuit of the A/C auto amp. Refer to the following.

- Without 7 inch display: HAC-47, "A/C AUTO AMP. : Diagnosis Procedure"
- With 7 inch display: <u>HAC-133</u>, "A/C AUTO AMP.: <u>Diagnosis Procedure</u>"

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to the following.

- Without 7 inch display
- Base audio: HAC-80, "BASE AUDIO: Exploded View"
- BOSE audio without navigation: HAC-81, "BOSE AUDIO WITHOUT NAVIGATION: Exploded
- With 7 inch display: <u>HAC-165</u>, "Exploded View"

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

>> Repair the power supply and the ground circuit. NO

Ν

Р

LAN-95 Revision: 2011 August 2012 370Z

LAN

L

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626612

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of combination meter.
- 2. Check the resistance between the combination meter harness connector terminals.

Co	Combination meter harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M53	21	22	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to MWI-45, "COMBINATION METER: Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to MWI-92, "Exploded View".

YES (Past error)>>Error was detected in the combination meter branch line.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626613

Α

В

D

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of steering angle sensor.
- 2. Check the resistance between the steering angle sensor harness connector terminals.

Ste	Steering angle sensor harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to <u>BRC-88</u>, "Wiring Diagram - BRAKE CONTROL SYSTEM -".

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to BRC-111, "Exploded View".

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

LAN

K

Ν

Р

[CAN SYSTEM (TYPE 4)]

INFOID:0000000007626614

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.

- 2. Disconnect the battery cable from the negative terminal.
- Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
- A/T assembly
- Harness connector F103
- Harness connector M116

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of A/T assembly.
- 2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)	
Connector No.	Terminal No.		ixesistance (22)
F51	3	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3. CHECK HARNESS FOR OPEN CIRCUIT

- Remove the joint connector. Refer to <u>TM-321, "Removal and Installation"</u>.
- 2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	Continuity
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

f 4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to <u>TM-267</u>, <u>"Diagnosis Procedure"</u>. Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to TM-321, "Removal and Installation".

YES (Past error)>>Error was detected in the TCM branch line.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626615

Α

В

D

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of ABS actuator and electric unit (control unit).
- Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		Tresistance (22)
E41	35 14		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to BRC-74, "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to BRC-108, "Exploded View".

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

>> Repair the power supply and the ground circuit. NO

Ν

LAN-99 Revision: 2011 August 2012 370Z

Р

LAN

K

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626616

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of IPDM E/R.
- 2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		1\esistance (22)
E6	40 39		Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to <u>PCS-19</u>, "<u>Diagnosis Procedure</u>". <u>Is the inspection result normal?</u>

YES (Present error)>>Replace the IPDM E/R. Refer to PCS-34, "Exploded View".

YES (Past error)>>Error was detected in the IPDM E/R branch line.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:0000000007626617

Α

В

D

F

Н

1. CONNECTOR INSPECTION

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect all the unit connectors on CAN communication system.
- 4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.check harness continuity (short circuit)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		Continuity
M24	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.check harness continuity (short circuit)

Check the continuity between the data link connector and the ground.

Data link connector			Continuity
Connector No.	Terminal No.	Ground	Continuity
M24	6	Ground	Not existed
IVI24	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.


4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

- Remove the ECM and the IPDM E/R.
- 2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		ixesistance (22)
114	113	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)	
Terminal No.			
40	39	Approx. 108 – 132	

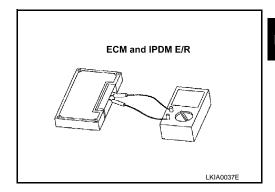

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Revision: 2011 August **LAN-101** 2012 370Z

LAN

K

Ν

0

Р

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6. CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 21)]

INFOID:0000000007626618

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

Diagnosis Procedure

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
- Harness connector M6
- Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.check harness continuity (open circuit)

- 1. Disconnect the harness connectors M6 and E106.
- 2. Check the continuity between the data link connector and the harness connector.

Data link	connector	nnector Harness		Continuity	
Connector No.	Terminal No.	Connector No.	Terminal No.	Continuity	
M24	6	M6	4	Existed	
IVI24	14		8	Existed	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M6.

3.check harness continuity (open circuit)

- Disconnect the connector of ABS actuator and electric unit (control unit).
- 2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness	connector		ectric unit (control unit) connector	Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	4	E41	35	Existed
	8		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

D

Е

Α

_

L

K

LAN

Ν

Ρ

Revision: 2011 August **LAN-103** 2012 370Z

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 21)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626619

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of ECM.
- 2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		ixesistance (22)
M107	114	113	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to <u>EC-172, "Diagnosis Procedure"</u>. <u>Is the inspection result normal?</u>

YES (Present error)>>Replace the ECM. Refer to <u>EC-17</u>, "<u>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ECM)</u>: Special Repair Requirement".

YES (Past error)>>Error was detected in the ECM branch line.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 21)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626620

Α

В

C

D

Е

F

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to the following.

- Coupe models: SRC-9, "Work Flow".
- Roadster models: SRC-164, "Work Flow".

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

Н

K

LAN

Ν

Р

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 21)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626621

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of BCM.
- 2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		ivesistatice (22)
M122	91	90	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to <u>BCS-50, "Diagnosis Procedure"</u>. <u>Is the inspection result normal?</u>

YES (Present error)>>Replace the BCM. Refer to BCS-92, "Exploded View".

YES (Past error)>>Error was detected in the BCM branch line.

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 21)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626622

Α

В

D

Е

F

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		ivesistatice (22)
M24	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

Н

K

LAN

Ν

Р

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 21)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626623

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of A/C auto amp.
- 2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		ivesistance (22)
M66	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the A/C auto amp. branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to the following.

- Without 7 inch display: HAC-47, "A/C AUTO AMP.: Diagnosis Procedure"
- With 7 inch display: HAC-133, "A/C AUTO AMP. : Diagnosis Procedure"

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to the following.

- Without 7 inch display
- Base audio: HAC-80, "BASE AUDIO: Exploded View"
- BOSE audio without navigation: <u>HAC-81</u>, "BOSE AUDIO WITHOUT NAVIGATION: Exploded View"
- With 7 inch display: HAC-165, "Exploded View"

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 21)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626624

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of combination meter.
- Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		1\esistance (22)
M53	21 22		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to MWI-45, "COMBINATION METER: Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to MWI-92, "Exploded View".

YES (Past error)>>Error was detected in the combination meter branch line.

>> Repair the power supply and the ground circuit. NO

LAN

K

Ν

Р

LAN-109 Revision: 2011 August 2012 370Z Α

В

D

F

Н

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 21)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626625

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of steering angle sensor.
- 2. Check the resistance between the steering angle sensor harness connector terminals.

Ste	Steering angle sensor harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M37	1 2		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to <u>BRC-88</u>, "Wiring Diagram - BRAKE CONTROL SYSTEM -".

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to BRC-111, "Exploded View".

YES (Past error)>>Error was detected in the steering angle sensor branch line.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 21)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626626

Α

В

D

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of ABS actuator and electric unit (control unit).
- Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Termi	110013141100 (32)	
E41	35 14		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to BRC-74, "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to BRC-108, "Exploded View".

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

>> Repair the power supply and the ground circuit. NO

Ν

Р

LAN-111 Revision: 2011 August 2012 370Z

LAN

K

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 21)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626627

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.check harness for open circuit

- 1. Disconnect the connector of IPDM E/R.
- 2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		1\esistance (22)
E6	40 39		Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.check power supply and ground circuit

Check the power supply and the ground circuit of the IPDM E/R. Refer to <u>PCS-19</u>, "<u>Diagnosis Procedure</u>". <u>Is the inspection result normal?</u>

YES (Present error)>>Replace the IPDM E/R. Refer to PCS-34, "Exploded View".

YES (Past error)>>Error was detected in the IPDM E/R branch line.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 21)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:0000000007626628

Α

В

D

F

Н

1.CONNECTOR INSPECTION

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect all the unit connectors on CAN communication system.
- 4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		Continuity
M24	6 14		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.check harness continuity (short circuit)

Check the continuity between the data link connector and the ground.

Data link connector			Continuity
Connector No.	Terminal No.	Ground	Continuity
M24	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.


4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

- Remove the ECM and the IPDM E/R.
- 2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)	
Terminal No.			
114	113	Approx. 108 – 132	

Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)	
Terminal No.			
40 39		Approx. 108 – 132	

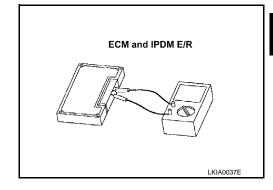

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Revision: 2011 August **LAN-113** 2012 370Z

LAN

K

Ν

Р

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 21)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6. CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

- Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 22)]

INFOID:0000000007626629

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

Diagnosis Procedure

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- 3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
- Harness connector M6
- Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.check harness continuity (open circuit)

- 1. Disconnect the harness connectors M6 and E106.
- Check the continuity between the data link connector and the harness connector.

Data link	connector	Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	Continuity
M24	6	M6	4	Existed
IVI24	14		8	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M6.

3.check harness continuity (open circuit)

- Disconnect the connector of ABS actuator and electric unit (control unit).
- 2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness	Harness connector		ABS actuator and electric unit (control unit) harness connector		
Connector No.	Terminal No.	Connector No.	Terminal No.		
E106	4	E41	35	Existed	
	8	L41	14	Existed	

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

Е

D

Α

G

K

L

LAN

Р

Revision: 2011 August **LAN-115** 2012 370Z

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 22)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626630

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of ECM.
- 2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		1\e3i3tai10e (22)
M107	114 113		Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to <u>EC-172</u>, "<u>Diagnosis Procedure</u>". <u>Is the inspection result normal?</u>

YES (Present error)>>Replace the ECM. Refer to <u>EC-17</u>, "<u>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ECM)</u>: Special Repair Requirement".

YES (Past error)>>Error was detected in the ECM branch line.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 22)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626631

Α

В

C

D

Е

F

Н

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to the following.

- Coupe models: SRC-9, "Work Flow".
- Roadster models: SRC-164, "Work Flow".

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

K

Ν

Р

Revision: 2011 August **LAN-117** 2012 370Z

LAN

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 22)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626632

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of AV control unit.
- 2. Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		ivesistatice (22)
M86	90 74		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to AV-212, "AV CONTROL UNIT : Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to AV-240, "Exploded View".

YES (Past error)>>Error was detected in the AV control unit branch line.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 22)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626633

Α

В

D

F

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of BCM.
- 2. Check the resistance between the BCM harness connector terminals.

	BCM harness connector		Resistance (Ω)
Connector No.	Terminal No.		ivesistance (22)
M122	91	90	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to BCS-50, "Diagnosis Procedure". Is the inspection result normal?

YES (Present error)>>Replace the BCM. Refer to BCS-92, "Exploded View".

YES (Past error)>>Error was detected in the BCM branch line.

>> Repair the power supply and the ground circuit.

Р

LAN-119 Revision: 2011 August 2012 370Z

LAN

Ν

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 22)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626634

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

	Data link connector		Resistance (Ω)
Connector No.	Terminal No.		1/63/3/4/106 (22)
M24	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 22)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626635

Α

В

D

F

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the A/C auto amp, for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of A/C auto amp.
- 2. Check the resistance between the A/C auto amp. harness connector terminals.

	A/C auto amp. harness connector		Resistance (Ω)
Connector No.	Terminal No.		1\esistance (22)
M66	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the A/C auto amp. branch line.

3.check power supply and ground circuit

Check the power supply and the ground circuit of the A/C auto amp. Refer to the following.

- Without 7 inch display: HAC-47, "A/C AUTO AMP. : Diagnosis Procedure"
- With 7 inch display: <u>HAC-133</u>, "A/C AUTO AMP.: <u>Diagnosis Procedure</u>"

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to the following.

- · Without 7 inch display
- Base audio: HAC-80, "BASE AUDIO: Exploded View"
- BOSE audio without navigation: HAC-81, "BOSE AUDIO WITHOUT NAVIGATION: Exploded
- With 7 inch display: <u>HAC-165</u>, "Exploded View"

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

>> Repair the power supply and the ground circuit. NO

Ν

Р

LAN-121 Revision: 2011 August 2012 370Z

LAN

L

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 22)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626636

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of combination meter.
- 2. Check the resistance between the combination meter harness connector terminals.

Co	Combination meter harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M53	21	22	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to MWI-45, "COMBINATION METER: Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to MWI-92, "Exploded View".

YES (Past error)>>Error was detected in the combination meter branch line.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 22)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626637

Α

В

D

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of steering angle sensor.
- 2. Check the resistance between the steering angle sensor harness connector terminals.

Ste	Steering angle sensor harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to <u>BRC-88</u>, "Wiring Diagram - BRAKE CONTROL SYSTEM -".

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to BRC-111, "Exploded View".

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

LAN

K

Ν

P

Revision: 2011 August **LAN-123** 2012 370Z

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 22)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626638

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of ABS actuator and electric unit (control unit).
- 2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator	ABS actuator and electric unit (control unit) harness connector		Resistance (Ω)
Connector No.	Terminal No.		rvesisiance (22)
E41	35	14	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to BRC-74, "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to BRC-108, "Exploded View".

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 22)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626639

Α

В

D

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of IPDM E/R.
- Check the resistance between the IPDM E/R harness connector terminals.

	IPDM E/R harness connector		Resistance (Ω)
Connector No.	Terminal No.		1\esistance (22)
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to <u>PCS-19, "Diagnosis Procedure"</u>. Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to PCS-34, "Exploded View".

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

LAN

Ν

Р

Revision: 2011 August **LAN-125** 2012 370Z

. . . .

K

INFOID:0000000007626640

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

1.CONNECTOR INSPECTION

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect all the unit connectors on CAN communication system.
- 4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

	Data link connector		Continuity
Connector No.	Terminal No.		Continuity
M24	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.check harness continuity (short circuit)

Check the continuity between the data link connector and the ground.

Data link connector			Continuity
Connector No.	Terminal No.	Ground	Continuity
M24	6	Giounu	Not existed
IVI24	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.


4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

- Remove the ECM and the IPDM E/R.
- Check the resistance between the ECM terminals.

E	ECM Resistance (Ω)	
Terminal No.		ivesistance (22)
114	113	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

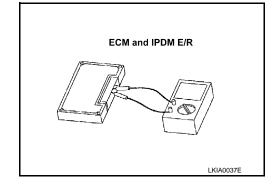

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

Р

< DTC/CIRCUIT DIAGNOSIS > [CAN STSTE	IVI (I TPE 22)]
Inspection result	
Reproduced>>GO TO 6.	
Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when detected.	n past error is
6.CHECK UNIT REPRODUCTION	
Perform the reproduction test as per the following procedure for each unit.	
Turn the ignition switch OFF.	
 Disconnect the battery cable from the negative terminal. Disconnect one of the unit connectors of CAN communication system. 	
NOTE:	
ECM and IPDM E/R have a termination circuit. Check other units first.	
4. Connect the battery cable to the negative terminal. Check if the symptoms described in (Results from interview with customer)" are reproduced.	the "Symptom
NOTE: Although unit-related error symptoms occur, do not confuse them with other symptoms.	
Inspection result	
Reproduced>>Connect the connector. Check other units as per the above procedure. Non-reproduced>>Replace the unit whose connector was disconnected.	
Non reproduced>>/teplace the drift whose confidence was disconfidence.	

LAN-127 2012 370Z Revision: 2011 August

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

Diagnosis Procedure

INFOID:0000000007626641

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- 3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
- Harness connector M6
- Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.check harness continuity (open circuit)

- Disconnect the harness connectors M6 and E106.
- Check the continuity between the data link connector and the harness connector.

Data link	connector	Harness connector		Continuity	
Connector No.	Terminal No.	Connector No. Terminal No.		Continuity	
M24	6		4	Existed	
IVI24	14	M6	8	Existed	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M6.

3.check harness continuity (open circuit)

- Disconnect the connector of ABS actuator and electric unit (control unit).
- 2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness	Harness connector ABS actuator and electric unit (control unit) harness connector		Continuity		
Connector No.	Terminal No.	Connector No.	Terminal No.]	
E106	4	E41	35	Existed	
	8	L41	14	Existed	

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626642

Α

В

D

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of ECM.
- 2. Check the resistance between the ECM harness connector terminals.

	ECM harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M107	114	113	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to <u>EC-172, "Diagnosis Procedure"</u>. Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to <u>EC-17</u>, "<u>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ECM)</u>: Special Repair Requirement".

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

LAN

Ν

Р

Revision: 2011 August **LAN-129** 2012 370Z

K

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626643

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to the following.

- Coupe models: <u>SRC-9</u>, "Work Flow".
- Roadster models: <u>SRC-164, "Work Flow"</u>.

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626644

Α

В

D

F

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of BCM.
- 2. Check the resistance between the BCM harness connector terminals.

	BCM harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M122	91	90	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to BCS-50, "Diagnosis Procedure". Is the inspection result normal?

YES (Present error)>>Replace the BCM. Refer to BCS-92, "Exploded View".

YES (Past error)>>Error was detected in the BCM branch line.

>> Repair the power supply and the ground circuit.

Ν

Р

LAN-131 Revision: 2011 August 2012 370Z

LAN

K

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626645

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

	Data link connector		
Connector No.	Termi	Resistance (Ω)	
M24	6 14		Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626646

Α

В

D

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of A/C auto amp.
- 2. Check the resistance between the A/C auto amp. harness connector terminals.

	A/C auto amp. harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M66	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the A/C auto amp. branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to the following.

- Without 7 inch display: <u>HAC-47</u>, "A/C AUTO AMP. : <u>Diagnosis Procedure</u>"
- With 7 inch display: HAC-133, "A/C AUTO AMP. : Diagnosis Procedure"

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to the following.

- · Without 7 inch display
- Base audio: HAC-80, "BASE AUDIO: Exploded View"
- BOSE audio without navigation: <u>HAC-81</u>, "BOSE AUDIO WITHOUT NAVIGATION: Exploded <u>View"</u>
- With 7 inch display: <u>HAC-165</u>, "Exploded View"

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

NO >> Repair the power supply and the ground circuit.

LAN

Ν

Р

Revision: 2011 August **LAN-133** 2012 370Z

A N I

L

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626647

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of combination meter.
- 2. Check the resistance between the combination meter harness connector terminals.

Co	Combination meter harness connector		
Connector No.	Termi	Resistance (Ω)	
M53	21	22	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to MWI-45, "COMBINATION METER: Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to MWI-92, "Exploded View".

YES (Past error)>>Error was detected in the combination meter branch line.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626648

1. CHECK CONNECTOR

Α

В

D

F

Н

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of steering angle sensor.
- 2. Check the resistance between the steering angle sensor harness connector terminals.

Ste	Steering angle sensor harness connector		
Connector No.	Termi	Resistance (Ω)	
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to <u>BRC-88</u>, "Wiring Diagram - BRAKE CONTROL SYSTEM -".

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to BRC-111, "Exploded View".

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

LAN

K

Ν

Р

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626649

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
- A/T assembly
- Harness connector F103
- Harness connector M116

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of A/T assembly.
- 2. Check the resistance between the A/T assembly harness connector terminals.

	A/T assembly harness connector		
Connector No.	Termi	Resistance (Ω)	
F51	3	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK HARNESS FOR OPEN CIRCUIT

- 1. Remove the joint connector. Refer to TM-321, "Removal and Installation".
- 2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity	
Terminal No.	Terminal No.	Continuity	
3	3	Existed	
8	8	Existed	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to <u>TM-267</u>, "<u>Diagnosis Procedure</u>". Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to TM-321, "Removal and Installation".

YES (Past error)>>Error was detected in the TCM branch line.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626650

Α

В

D

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of ABS actuator and electric unit (control unit).
- Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Termi	resistance (22)	
E41	35 14		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to BRC-74, "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to BRC-108, "Exploded View".

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

>> Repair the power supply and the ground circuit. NO

Ν

Р

LAN-137 Revision: 2011 August 2012 370Z

LAN

K

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626651

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of IPDM E/R.
- 2. Check the resistance between the IPDM E/R harness connector terminals.

	IPDM E/R harness connector		
Connector No.	Termi	Resistance (Ω)	
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to <u>PCS-19, "Diagnosis Procedure"</u>. Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to PCS-34, "Exploded View".

YES (Past error)>>Error was detected in the IPDM E/R branch line.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:0000000007626652

Α

В

D

F

Н

1.CONNECTOR INSPECTION

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect all the unit connectors on CAN communication system.
- 4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		Continuity
M24	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.check harness continuity (short circuit)

Check the continuity between the data link connector and the ground.

Data link connector			Continuity
Connector No.	Terminal No.	Ground	Continuity
M24	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.


4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

- Remove the ECM and the IPDM E/R.
- 2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)	
Terminal No.		ixesistance (22)	
114	113	Approx. 108 – 132	

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)	
Terminal No.			
40	39	Approx. 108 – 132	

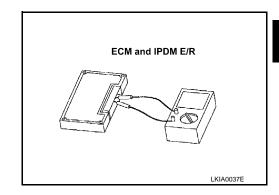

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Revision: 2011 August **LAN-139** 2012 370Z

LAN

K

Ν

0

Р

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 23)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.check unit reproduction

Perform the reproduction test as per the following procedure for each unit.

- Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND ABS CIRCUIT

Diagnosis Procedure

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
- Harness connector M6
- Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.check harness continuity (open circuit)

- 1. Disconnect the harness connectors M6 and E106.
- 2. Check the continuity between the data link connector and the harness connector.

Data link	Data link connector Harness connector		Continuity	
Connector No.	Terminal No.	Connector No.	Terminal No.	Continuity
M24	6	M6	4	Existed
IVI24	14	IVIO	8	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M6.

3.check harness continuity (open circuit)

- Disconnect the connector of ABS actuator and electric unit (control unit).
- 2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness	Harness connector		ABS actuator and electric unit (control unit) harness connector		
Connector No.	Terminal No.	Connector No.	Terminal No.		
E106	4	E41	35	Existed	
	8	L41	14	Existed	

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

D

Е

INFOID:0000000007626653

Α

F

G

U

K

L

LAN

1 4

0

Р

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626654

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of ECM.
- 2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		1\e3i3tai10e (22)
M107	114	113	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to <u>EC-172, "Diagnosis Procedure"</u>. <u>Is the inspection result normal?</u>

YES (Present error)>>Replace the ECM. Refer to <u>EC-17</u>, "<u>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (ECM)</u>: Special Repair Requirement".

YES (Past error)>>Error was detected in the ECM branch line.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626655

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to the following.

- Coupe models: SRC-9, "Work Flow".
- Roadster models: SRC-164, "Work Flow".

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

LAN

Ν

Р

Revision: 2011 August **LAN-143** 2012 370Z

С

Α

В

D

Е

_

F

G

Н

K

ı

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626656

2012 370Z

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of AV control unit.
- Check the resistance between the AV control unit harness connector terminals.

	AV control unit harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M86	90	74	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to AV-212, "AV CONTROL UNIT : Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to AV-240, "Exploded View".

YES (Past error)>>Error was detected in the AV control unit branch line.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626657

Α

В

D

F

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of BCM.
- 2. Check the resistance between the BCM harness connector terminals.

	BCM harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M122	91	90	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to BCS-50, "Diagnosis Procedure". Is the inspection result normal?

YES (Present error)>>Replace the BCM. Refer to BCS-92, "Exploded View".

YES (Past error)>>Error was detected in the BCM branch line.

>> Repair the power supply and the ground circuit.

LAN

K

Р

LAN-145 Revision: 2011 August 2012 370Z

Ν

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626658

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

	Data link connector		
Connector No.	Terminal No.		Resistance (Ω)
M24	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626659

Α

В

D

F

Н

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of A/C auto amp.
- 2. Check the resistance between the A/C auto amp. harness connector terminals.

	A/C auto amp. harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M66	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the A/C auto amp. branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to the following.

- Without 7 inch display: <u>HAC-47</u>, "A/C AUTO AMP. : <u>Diagnosis Procedure</u>"
- With 7 inch display: HAC-133, "A/C AUTO AMP. : Diagnosis Procedure"

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to the following.

- · Without 7 inch display
- Base audio: HAC-80, "BASE AUDIO: Exploded View"
- BOSE audio without navigation: <u>HAC-81</u>, "BOSE AUDIO WITHOUT NAVIGATION : Exploded <u>View"</u>
- With 7 inch display: <u>HAC-165</u>, "Exploded View"

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

NO >> Repair the power supply and the ground circuit.

LAN

L

Ν

 \circ

Р

Revision: 2011 August **LAN-147** 2012 370Z

A B I

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626660

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of combination meter.
- 2. Check the resistance between the combination meter harness connector terminals.

Co	Combination meter harness connector		
Connector No.	Terminal No.		Resistance (Ω)
M53	21	22	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to MWI-45, "COMBINATION METER: Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to MWI-92, "Exploded View".

YES (Past error)>>Error was detected in the combination meter branch line.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626661

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of steering angle sensor.
- 2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		1\esistance (22)
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to BRC-88, "Wiring Diagram - BRAKE CONTROL SYSTEM -".

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to BRC-111, "Exploded View".

YES (Past error)>>Error was detected in the steering angle sensor branch line.

>> Repair the power supply and the ground circuit. NO

LAN

Ν

Р

LAN-149 Revision: 2011 August 2012 370Z

В

Α

D

F

Н

K

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626662

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
- A/T assembly
- Harness connector F103
- Harness connector M116

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of A/T assembly.
- 2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)	
Connector No.	Terminal No.		1/63/3/4/106 (22)
F51	3	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK HARNESS FOR OPEN CIRCUIT

- 1. Remove the joint connector. Refer to TM-321, "Removal and Installation".
- 2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	Continuity
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to <u>TM-267</u>, "<u>Diagnosis Procedure</u>". Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to TM-321, "Removal and Installation".

YES (Past error)>>Error was detected in the TCM branch line.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626663

Α

В

D

Н

1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

- Disconnect the connector of ABS actuator and electric unit (control unit).
- Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		110313141100 (22)
E41	35	14	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to BRC-74, "Diagnosis Procedure".

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to BRC-108, "Exploded View".

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

>> Repair the power supply and the ground circuit. NO

K

Ν

Р

LAN-151 Revision: 2011 August 2012 370Z

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000007626664

1. CHECK CONNECTOR

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

- 1. Disconnect the connector of IPDM E/R.
- 2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector		Resistance (Ω)	
Connector No.	Terminal No.		1\esistance (22)
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to <u>PCS-19, "Diagnosis Procedure"</u>. Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to PCS-34, "Exploded View".

YES (Past error)>>Error was detected in the IPDM E/R branch line.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:0000000007626665

Α

В

D

F

Н

1.CONNECTOR INSPECTION

- 1. Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect all the unit connectors on CAN communication system.
- 4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		Continuity
M24	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.check harness continuity (short circuit)

Check the continuity between the data link connector and the ground.

Data link connector			Continuity
Connector No.	Terminal No.	Ground	Continuity
M24	6	Ground	Not existed
	14	1	Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.


4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

- Remove the ECM and the IPDM E/R.
- 2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)	
Terminal No.		Resistance (12)	
114	113	Approx. 108 – 132	

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

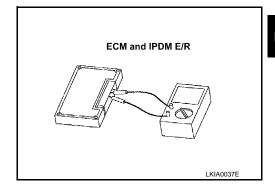

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Revision: 2011 August **LAN-153** 2012 370Z

LAN

K

N

 \cap

Р

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 24)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.check unit reproduction

Perform the reproduction test as per the following procedure for each unit.

- Turn the ignition switch OFF.
- 2. Disconnect the battery cable from the negative terminal.
- 3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.