

# NISSAN

## **Model 910 Series Australian Built Models Series I & II**

### **FOREWORD**

This service manual has been prepared primarily for the purpose of assisting service personnel in providing effective service and maintenance of the model 910 series.

This manual includes procedures for maintenance, adjustments, removal and installation, disassembly and assembly of components, and trouble-shooting.

All information, illustrations and specifications contained in this manual are based on the latest product information available at the time of publication. If your car differs from the specifications contained in this manual, consult your NISSAN dealer for information.

The right is reserved to make changes in specifications and methods at any time without notice.

MOTOR BOOK SHOP  
1015 Burke Rd  
Camberwell 3124  
Ph: 813 2127 or 813 3485

**NISSAN MOTOR COMPANY (AUSTRALIA)  
PTY. LTD.**

©1984 NISSAN MOTOR COMPANY  
(AUSTRALIA) PTY. LTD.  
Printed in Australia.

Not to be reproduced in whole or in part without the prior written permission of Nissan Motor Company (Australia) Pty. Ltd., Dandenong, Victoria.

### **QUICK REFERENCE INDEX**

GENERAL INFORMATION.....	GI
MAINTENANCE .....	MA
ENGINE MECHANICAL.....	EM
ENGINE LUBRICATION & COOLING SYSTEM .....	LC
ENGINE FUEL .....	EF
EMISSION CONTROL SYSTEM .....	EC
ENGINE REMOVAL & INSTALLATION .....	ER
ENGINE CONTROL, FUEL & EXHAUST SYSTEM.....	FE
CLUTCH .....	CL
MANUAL TRANSMISSION .....	MT
AUTOMATIC TRANSMISSION .....	AT
PROPELLER SHAFT & DIFFERENTIAL CARRIER .....	PD
FRONT AXLE & FRONT SUSPENSION.....	FA
REAR AXLE & REAR SUSPENSION.....	RA
BRAKE SYSTEM.....	BR
STEERING SYSTEM.....	ST
BODY .....	BF
HEATER & AIR CONDITIONER .....	HA
ELECTRICAL SYSTEM .....	EL