

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

A

| | |
|--|-------------|
| ABS actuator..... | BR-38 |
| ABS (anti-lock brake system)..... | BR-35 |
| ABS circuit diagram..... | BR-49 |
| ABS component parts and connector locations.... | BR-42 |
| ABS control unit..... | BR-38 |
| ABS hydraulic circuit..... | BR-6 |
| ABS self-diagnosis..... | BR-44 |
| ABS symptom chart..... | BR-46 |
| ABS system components..... | BR-36 |
| ABS trouble diagnoses..... | BR-43 |
| ABS wheel sensors..... | BR-37 |
| ABS wiring diagram..... | BR-39 |
| A/C air flow..... | HA-13 |
| A/C circuit diagram (auto A/C)..... | HA-96 |
| A/C circuit diagram (manual A/C)..... | HA-35 |
| A/C component layout..... | HA-12 |
| A/C compressor clutch removal and installation..... | HA-142 |
| A/C compressor mounting..... | HA-141 |
| A/C compressor precaution..... | HA-5 |
| A/C compressor special service tool..... | HA-6 |
| A/C control linkage adjustment (auto A/C)..... | HA-122 |
| A/C control linkage adjustment (manual A/C)..... | HA-59 |
| A/C control operation (auto A/C)..... | HA-60 |
| A/C control operation (manual A/C)..... | HA-14 |
| A/C diagnostic work flow (auto A/C)..... | HA-62 |
| A/C diagnostic work flow (manual A/C)..... | HA-15 |
| A/C harness layout (auto A/C)..... | HA-94 |
| A/C harness layout (manual A/C)..... | HA-33 |
| A/C R-134a system precaution..... | HA-2 |
| A/C R-134a system service procedure..... | HA-136 |
| A/C R-134a system service tools..... | HA-7 |
| A/C R-134a system service equipment precaution..... | HA-9 |
| A/C lubrication oil..... | HA-138 |
| A/C operational check (auto A/C)..... | HA-63 |
| A/C operational check (manual A/C)..... | HA-16 |
| A/C performance chart (auto A/C)..... | HA-89 |
| A/C performance chart (manual A/C)..... | HA-28 |
| A/C performance test diagnoses (auto A/C)..... | HA-87 |
| A/C performance test diagnoses (manual A/C).... | HA-26 |
| A/C pressure switch (auto A/C)..... | HA-121 |
| A/C pressure switch (manual A/C)..... | HA-58 |
| A/C push control..... | HA-14 |
| A/C relay (auto A/C)..... | HA-121 |
| A/C relay (manual A/C)..... | HA-58 |
| A/C self diagnoses (auto A/C)..... | HA-71 |
| A/C service data specification..... | HA-146 |
| A/C switch..... | HA-57 |
| A/C symptom chart (auto A/C)..... | HA-66 |
| A/C symptom chart (manual A/C)..... | HA-18 |
| A/C system description (auto A/C)..... | HA-124 |
| A/C trouble diagnoses (auto A/C)..... | HA-62 |
| A/C trouble diagnoses (manual A/C)..... | HA-15 |
| A/C wiring diagram (auto A/C)..... | HA-97 |
| A/C wiring diagram (manual A/C)..... | HA-37 |
| Accel drum unit..... | EM-28 |
| Acceleration cut control..... | EF & EC-25 |
| Accelerator control system..... | FE-2 |
| Accelerator wire adjustment..... | FE-2 |
| Activated carbon canister..... | EF & EC-17 |
| Activated carbon canister inspection..... | EF & EC-168 |
| Air bag..... | BF-58 |
| Air bag caution labels..... | BF-60 |
| Air bag precautions..... | GI-2 |
| Air bag removal and installation..... | BF-65 |
| Air bag scrapping..... | BF-69 |
| Air bag system trouble diagnoses..... | BF-73 |
| Air bleeding for brake system..... | BR-5 |
| Air cleaner filter replacement..... | MA-11 |
| Air conditioning - See A/C..... | — |
| Air mix door control linkage adjustment..... | HA-122 |
| Air mix. door motor..... | HA-127 |
| Air spoiler (Rear)..... | BF-53 |
| Alternator..... | EL-26 |
| Ambient sensor..... | HA-126 |
| Angular tightening application..... | EM-2 |
| Anti-freeze coolant..... | MA-7 |
| ASCD (automatic speed control device)..... | EL-134 |
| AT control unit..... | AT-85 |
| AT fluid temperature sensor..... | AT-90 |
| A/T indicator lamp..... | EL-63 |
| AT removal and installation..... | AT-113 |
| AT self diagnoses..... | AT-46 |
| AT trouble diagnoses..... | AT-15 |
| Audio..... | EL-121 |
| Automatic amplifier..... | HA-127 |
| Automatic transaxle number..... | GI-21 |
| Automatic transmission fluid..... | MA-7 |
| Automatic transmission fluid replacement..... | MA-15 |
| Auxiliary air control (AAC) valve..... | EF & EC-15 |

B

| | |
|-----------------------------------|--------|
| Back up lamp..... | EL-48 |
| Back-up lamp switch (MT)..... | MT-6 |
| Ball joint front axle..... | FA-27 |
| Battery..... | EL-12 |
| Baulk ring (MT)..... | MT-41 |
| Belt inspection (drive belt)..... | MA-8 |
| Blower motor (auto A/C)..... | HA-121 |
| Blower motor (manual A/C)..... | HA-57 |
| Blower relay..... | HA-121 |
| Blower resistor..... | HA-57 |

ALPHABETICAL INDEX

| | |
|--|-------|
| Body alignment..... | BF-54 |
| Boring/horning cylinder block..... | EM-45 |
| Brake booster..... | BR-14 |
| Brake control valve (proportioning valve)..... | BR-7 |
| Brake fluid..... | MA-7 |
| Brake fluid change..... | BR-4 |
| Brake fluid level..... | MA-16 |
| Brake fluid level and line check..... | BR-4 |
| Brake hydraulic line..... | BR-6 |
| Brake inspection..... | MA-16 |
| Brake lines and cables inspection..... | MA-16 |
| Brake lining wear temporary checking..... | MA-17 |
| Brake master cylinder..... | BR-11 |
| Brake pedal..... | BR-9 |

C

| | |
|--|-------------|
| Camshaft inspection..... | EM-31 |
| Camshaft position sensor (CMPS)..... | EF & EC-12 |
| Camshaft position sensor inspection..... | EF & EC-158 |
| Canister control solenoid valve..... | EF & EC-17 |
| Charging system..... | EL-23 |
| Chassis and body maintenance..... | MA-14 |
| Cigarette lighter..... | EL-116 |
| Clearance lamp..... | EL-50 |
| Clock..... | EL-116 |
| Clutch cover..... | CL-9 |
| Clutch disc..... | CL-9 |
| Clutch fluid..... | MA-7 |
| Clutch fluid level..... | MA-14 |
| Clutch master cylinder..... | CL-6 |
| Clutch operating cylinder..... | CL-7 |
| Clutch pedal..... | CL-3 |
| Clutch pedal free play..... | CL-4 |
| Clutch pedal height..... | CL-4 |
| Clutch release bearing..... | CL-8 |
| Clutch withdrawal lever..... | CL-8 |
| Coil spring (front)..... | FA-23 |
| Coil spring (rear)..... | RA-10 |
| Combination lamp (rear) removal and installation..... | BF-40 |
| Combination meter..... | EL-69 |
| Combination meter (needle type)..... | EL-69 |
| Combination switch..... | EL-30 |
| Compression pressure..... | EM-11 |
| Compressor clutch removal and installation..... | HA-142 |
| Compressor mounting..... | HA-141 |
| Compressor precaution..... | HA-5 |
| Compressor special service tool..... | HA-6 |
| Connecting rod..... | EM-45 |
| Connecting rod bearing clearance..... | EM-48 |
| Connecting rod bushing clearance..... | EM-49 |
| Consult for ECCS..... | EF & EC-43 |

| | |
|--|-------------|
| CONSULT general information..... | GI-17 |
| Control lever (MT)..... | MT-9 |
| Control valve (AT)..... | AT-142 |
| Converter housing installation..... | AT-114 |
| Coolant..... | MA-7 |
| Coolant replacement..... | MA-9 |
| Cooling circuit (engine)..... | LC-8 |
| Cooling fan..... | LC-12 |
| Cooling fan control..... | EF & EC-25 |
| Cooling fan motor inspection..... | EF & EC-139 |
| Cooling fan relay inspection..... | EF & EC-164 |
| Cornering lamp..... | EL-60 |
| Coupling sleeve (MT)..... | MT-11 |
| Crankcase emission control system..... | EF & EC-170 |
| Crankshaft assembly..... | EM-51 |
| Crankshaft bearing clearance..... | EM-47 |
| Crankshaft inspection..... | EM-46 |
| Cylinder block..... | EM-42 |
| Cylinder block boring..... | EM-45 |
| Cylinder head..... | EM-30 |
| Cylinder head bolt tightening..... | EM-24 |

D

| | |
|--------------------------------------|------------|
| Data link connector for Consult..... | EF & EC-16 |
| Daytime light system..... | EL-37 |
| Device (FICD) solenoid valve..... | EF & EC-15 |
| Differential gear (FF MT)..... | MT-26 |
| Differential gear (RE4F04A)..... | AT-190 |
| Differential gear (RE4F04A)..... | AT-194 |
| Dimensions..... | GI-22 |
| Door adjustment (front)..... | BF-9 |
| Door adjustment (rear)..... | BF-10 |
| Door mirror..... | BF-51 |
| Drive plate runout..... | EM-50 |
| Drive shaft (front)..... | FA-15 |
| Dropping resistor (AT)..... | AT-91 |

E

| | |
|---|----------------|
| ECCS basic inspection..... | EF & EC-55 |
| ECCS circuit diagram..... | EF & EC-11 |
| ECCS component parts location..... | EF & EC-5 |
| ECCS fail-safe system..... | EF & EC-26 |
| ECCS on-board diagnostic system..... | EF & EC-37 |
| ECCS system diagram and chart..... | EF & EC-7 |
| ECCS trouble diagnoses..... | EF & EC-33 |
| ECCS Wiring Diagram..... | FOLD OUT |
| ECM input/output signal inspection..... | EF & EC-153 |
| EGR canister control solenoid valve inspection..... | EF & EC-160 |
| EGR control (EGRC) - BPT valve..... | EF & EC-17 |

ALPHABETICAL INDEX

EGR control (EGRC) - solenoid valve..... EF & EC-17
EGR temperature sensor..... EF & EC-17
EGR temperature sensor inspection EF & EC-161
EGR valve inspection..... EF & EC-161
EGRC-BPT valve inspection..... EF & EC-161
Electrical units location..... EL-181
Energy conserving oils MA-7
Engine control module (ECM)..... EF & EC-12
Engine coolant temperature sensor (ECTS) EF &
EC-13
Engine coolant temperature sensor inspection..... EF &
EC-159
Engine oil MA-7
Engine oil filter replacement..... MA-12
Engine oil precautions GI-4
Engine oil replacement..... MA-12
Engine outer component parts..... EM-8
Engine removal..... EM-39
Engine serial number GI-21
Evaporative emission system..... EF & EC-168
Exhaust gas recirculation (EGR) system..... EF & EC-24
Exhaust gas recirculation (EGR) valve..... EF & EC-16
Exhaust system FE-5
Exhaust system inspection..... MA-18
Exterior BF-35
Exterior lamp..... EL-48

F

Fan control amp..... HA-133
Fan switch..... HA-57
Final drive (FF MT)..... MT-26
Final Drive (RE4F04A) AT-190
Final Drive (RE4F04V) AT-194
Fluid temperature sensor (AT)..... AT-90
Fluids..... MA-7
Flywheel runout EM-50
Fog lamp, front EL-52
Fork rod (MT)..... MT-11
Forward clutch AT-167
Fresh vent door control linkage adjustment
(auto A/C) HA-123
Fresh vent door control linkage adjustment
(manual A/C) HA-59
Front axle FA-4
Front bumper BF-5
Front disc brake..... BR-17
Front suspension FA-23
Fuel check valve inspection EF & EC-169
Fuel damper..... EF & EC-14
Fuel filler lid..... BF-7
Fuel filter EF & EC-16
Fuel filter replacement..... MA-11

Fuel gauge..... EL-76
Fuel injector EF & EC-14
Fuel line inspection..... MA-10
Fuel precautions GI-5
Fuel pressure check EF & EC-166
Fuel pressure regulator EF & EC-14
Fuel pressure release..... EF & EC-166
Fuel pump EF & EC-14
Fuel pump control..... EF & EC-24
Fuel pump inspection EF & EC-160
Fuel pump relay inspection EF & EC-164
Fuel system FE-3
Fuel tank vacuum relief valve inspection .. EF & EC-169
Fuse EL-11
Fusible link..... EL-11

G

Gear oil MA-7
Gears (MT) MT-21
Generator..... EL-26
Grease MA-7

H

Harness connector EL-3
Harness layout..... EL-183
Hazard warning lamp EL-54
Headlamp..... EL-32
Height (Dimensions) GI-22
R-134a system precaution HA-2
R-134a system service procedure HA-136
R-134a system service tools HA-7
R-134a system service equipment precaution HA-9
HFC134a - See R-134a —
High clutch AT-162
Hood adjustment BF-5
Horn EL-116
How to follow flow chart in trouble diagnosis GI-14
How to read wiring diagrams GI-8
How to use this manual GI-6
Hydraulic lash adjuster inspection EM-36

I

IACV - air regulator inspection..... EF & EC-165
IACV - FICD solenoid valve inspection EF & EC-165
IACV-AAC valve inspection..... EF & EC-163
Identification plate GI-20
Idle air control (IAC) system EF & EC-23

ALPHABETICAL INDEX

| | |
|--|-------------|
| Idle air control (IACV) - fast idle control | EF & EC-15 |
| Idle air control valve (IACV) - air regulator.. | EF & EC-15 |
| Idle air control valve (IACV) valve | EF & EC-15 |
| Idle mixture ratio inspection | EF & EC-28 |
| Idle speed inspection..... | EF & EC-28 |
| Ignition coil inspection | EF & EC-160 |
| Ignition timing inspection | EF & EC-28 |
| Illumination | EL-63 |
| In-vehicle sensor..... | HA-125 |
| Inhibitor switch | AT-89 |
| Inhibitor switch inspection | EF & EC-147 |
| Injection removal and installation..... | EF & EC-167 |
| Injector inspection..... | EF & EC-163 |
| Instrument panel..... | BF-28 |
| Intake door control linkage adjustment (auto A/C)..... | HA-123 |
| Intake door control linkage adjustment (manual A/C) | HA-59 |
| Intake manifold | EM-8 |
| Interior | BF-31 |
| Interior lamp | EL-63 |

J

| | |
|-----------------------------|--------|
| Jacking points | GI-24 |
| Joint connector (J/C) | EL-203 |

K

| | |
|-------------------------------|-------------|
| Knock sensor inspection | EF & EC-163 |
| Knock sensor (KS) | EF & EC-16 |
| Knuckle spindle..... | FA-10 |

L

| | |
|--|--------|
| Length (Dimensions) | GI-22 |
| Lifting points..... | GI-24 |
| Line pressure solenoid valve | AT-90 |
| Line pressure test (AT)..... | AT-94 |
| Liquid gasket application | EM-3 |
| Low and reverse brake | AT-173 |
| Lubricants..... | MA-7 |
| Lubrication circuit (engine) | LC-4 |
| Lubrication oil A/C | HA-138 |
| Lubrication-locks, hinges and hood latches | MA-19 |
| Luggage room lamp | EL-67 |

M

| | |
|---|-------------|
| Magnet clutch | HA-142 |
| Main drive gear (MT)..... | MT-21 |
| Mainshaft (MT)..... | MT-21 |
| Maintenance | MA-2 |
| Maintenance (engine)..... | MA-8 |
| Maintenance general | MA-2 |
| Maintenance periodic | MA-4 |
| Maintenance schedule (1)..... | MA-4 |
| Maintenance schedule (2)..... | MA-4 |
| Manual transaxle number..... | GI-21 |
| Manual transmission oil..... | MA-7 |
| Manual transmission oil replacement | MA-14 |
| Map lamp | EL-67 |
| Mass air flow sensor inspection..... | EF & EC-158 |
| Mass air flow sensor (MAFS)..... | EF & EC-12 |
| Master cylinder (brake)..... | BR-11 |
| Master cylinder (clutch) | CL-6 |
| Meter and gauges | EL-68 |
| Mode door control linkage adjustment (auto A/C)..... | HA-122 |
| Mode door control linkage adjustment (manual A/C)..... | HA-59 |
| Model variation | GI-19 |
| Molding..... | BF-35 |
| MT overhaul..... | MT-13 |
| MT removal and installation | MT-7 |
| Mud guard..... | BF-41 |
| Multi purpose grease..... | MA-7 |
| Multiport fuel injection (MFI) system..... | EF & EC-18 |
| Multiport fuel injection precautions..... | GI-4 |
| Multiport fuel injection system inspection .. | EF & EC-166 |

N

| | |
|---|-------------|
| Neutral position switch inspection..... | EF & EC-147 |
| Neutral position switch (MT) | MT-6 |

O

| | |
|---|--------|
| Oil change (capacity)..... | MA-7 |
| Oil change (interval) | MA-4 |
| Oil pan (engine) | EM-12 |
| Oil pressure (engine)..... | LC-5 |
| Oil pump (AT) | AT-138 |
| Oil pump (engine)..... | LC-5 |
| Oil pump regulator valve (engine) | LC-6 |
| Oil pump relief valve (engine)..... | LC-7 |
| Oil seal replacement (engine)..... | EM-26 |

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

| | |
|-------------------------------------|------------|
| Operating cylinder (clutch) | CL-7 |
| Overdrive switch | AT-89 |
| Overrun clutch | AT-167 |
| Overrun clutch solenoid valve | AT-90 |
| Oversize piston | EM-46 |
| Oxygen sensor (O2S) | EF & EC-14 |

P

| | |
|--|-------------|
| Parking brake control | BR-33 |
| PCV (positive crankcase ventilation) inspection | EF & EC-170 |
| Personal lamp | EL-67 |
| Piston assembly | EM-50 |
| Piston pin inspection | EM-44 |
| Piston ring inspection | EM-44 |
| Piston to bore clearance | EM-45 |
| Power antenna | EL-128 |
| Power door lock | BF-11 |
| Power lock trouble diagnoses | BF-14 |
| Power steering fluid | MA-7 |
| Power steering fluid level | MA-18 |
| Power steering fluid level | ST-6 |
| Power steering gear | ST-13 |
| Power steering hydraulic pressure | ST-8 |
| Power steering oil pressure switch | EF & EC-15 |
| Power steering oil pressure switch inspection | EF & EC-164 |
| Power steering oil pump | ST-24 |
| Power steering system bleeding | ST-6 |
| Power supply routing | EL-6 |
| Power transistor & ignition coil | EF & EC-15 |
| Power transistor inspection | EF & EC-159 |
| Power window | BF-15 |
| Power window trouble diagnoses | BF-17 |
| Precautions (General) | GI-2 |
| Pressure test (AT) | AT-94 |

R

| | |
|---|--------|
| Rack retainer adjustment | ST-22 |
| Radiator | LC-12 |
| Rear axle | RA-5 |
| Rear axle (disc brake type) | RA-4 |
| Rear axle (drum brake type) | RA-4 |
| Rear bumper | BF-7 |
| Rear disc brake | BR-26 |
| Rear drum brake | BR-21 |
| Rear suspension | RA-10 |
| Rear window defogger | EL-117 |
| Refilling engine coolant | LC-12 |
| Refrigerant connection precaution | HA-4 |

| | |
|---|-------------|
| Refrigerant discharging evacuating charging | HA-136 |
| Refrigerant general precaution | HA-3 |
| Refrigerant lines | HA-140 |
| Refrigeration cycle | HA-11 |
| Release bearing (clutch) | CL-8 |
| Resistor inspection | EF & EC-165 |
| Reverse clutch | AT-114 |
| Reverse gear (MT) | MT-11 |
| Reverse idler shaft (MT) | MT-13 |
| Revolution sensor (AT) | AT-90 |
| Road wheel size | GI-22 |
| Room lamp | EL-67 |

S

| | |
|---|---------------|
| SAE J1930 terminology list | GI-28 |
| Seat belt inspection | MA-19 |
| Seat belt system | BF-44 |
| Seat (front) | BF-42 |
| Seat (rear) | BF-43 |
| Self-diagnostic results | EF & EC-46 |
| Shift control (MT) | MT-30 |
| Shift fork (MT) | MT-11 |
| Shift lock system | AT-99 |
| Shift schedule | AT-37 |
| Shift solenoid valve (AT) | AT-90 |
| Shock absorber (front) | FA-23 |
| Shock absorber (rear) | RA-10 |
| Side guard molding | BF-40 |
| SMJ (super multiple junction) | EL-201 |
| Soft/Hard closed throttle position (CTP) switch | EF & EC-13 |
| Spark plug replacement | MA-13 |
| Speedometer | EL-78 |
| Spot lamp | EL-67 |
| Spring (wheelarch) height | FA-5 |
| Stabilizer bar (front) | FA-26 |
| Stabilizer bar (rear) | RA-14 |
| Stall test (AT) | AT-91 |
| Standardized relay | EL-4 |
| Starter | EL-21 |
| Starting system | EL-17 |
| Steering gear and linkage inspection | MA-18 |
| Steering gear oil level | MA-18 |
| Steering knuckle | FA-10 |
| Steering linkage | ST-13 |
| Steering switch | EL-151 |
| Steering wheel and column | ST-9 |
| Steering wheel play | ST-5 |
| Steering wheel turning force | ST-7 |
| Stop lamp | EL-50 |
| Striking rod (MT) | MT-5 |
| Strut (front) | FA-23 |

ALPHABETICAL INDEX

| | |
|------------------------------------|--------|
| Strut (rear)..... | RA-10 |
| Sunroof..... | BF-46 |
| Sunload sensor..... | HA-126 |
| Supplemental restraint system..... | BF-58 |
| Synchronizer (MT)..... | MT-11 |

T

| | |
|--|-------------|
| Tachometer..... | EL-77 |
| Tail lamp..... | EL-50 |
| Temperature control cable and linkage adjustment..... | HA-59 |
| Theft warning system..... | EL-153 |
| Thermal protector (auto A/C)..... | HA-121 |
| Thermal protector (manual A/C)..... | HA-58 |
| Thermo control amp. (auto A/C)..... | HA-121 |
| Thermo control amp. (manual A/C)..... | HA-58 |
| Thermostat..... | LC-11 |
| Three way catalyst precautions..... | GI-4 |
| Throttle bodies..... | EM-8 |
| Throttle drum adjustment..... | FE-2 |
| Throttle position sensor inspection and adjustment..... | EF & EC-162 |
| Throttle position sensor (TPS)..... | EF & EC-13 |
| Throttle position switch inspection..... | EF & EC-161 |
| Tie rod..... | ST-15 |
| Tie rod ball joints..... | ST-18 |
| Tightening torque of standard bolts..... | GI-27 |
| Time control system..... | EL-92 |
| Timing chain..... | EM-17 |
| Tire rotation..... | MA-18 |
| Tire size..... | GI-22 |
| Torque converter clutch solenoid valve..... | AT-90 |
| Torque converter installation..... | AT-114 |
| Tow truck towing..... | GI-25 |
| Towing point..... | GI-26 |
| Transmission case (MT)..... | MT-10 |
| Transverse link (front)..... | FA-27 |
| Tread-FR&RR (Dimensions)..... | GI-22 |
| Trim - door..... | BF-32 |
| Trim - luggage compartment..... | BF-34 |
| Trim - roof..... | BF-33 |
| Trim - side and floor..... | BF-31 |
| Triple pressure switch (auto A/C)..... | HA-121 |
| Triple pressure switch (manual A/C)..... | HA-58 |
| Trunk lid..... | BF-7 |
| Trunk room lamp..... | EL-67 |

| | |
|-----------------------|-------|
| Turn signal lamp..... | EL-54 |
|-----------------------|-------|

V

| | |
|--------------------------------------|-------------|
| Vacuum hose (brake system)..... | BR-16 |
| Vacuum hose drawing (ECCS)..... | EF & EC-10 |
| Valve clearance..... | EM-37 |
| Valve guide inspection..... | EM-33 |
| Valve seat inspection..... | EM-34 |
| Valve spring inspection..... | EM-35 |
| Vapor lines inspection..... | MA-13 |
| Vehicle identification number..... | GI-20 |
| Vehicle speed sensor inspection..... | EF & EC-104 |
| Vehicle speed sensor (VSS)..... | EF & EC-16 |
| Viscosity number (SAE)..... | MA-7 |
| Viscous coupling (FF AT)..... | AT-194 |
| Viscous coupling (FF MT)..... | MT-6 |

W

| | |
|---|--------|
| Warning buzzer..... | EL-89 |
| Warning chime..... | EL-89 |
| Warning lamps..... | EL-82 |
| Washer, front..... | EL-109 |
| Water cock solenoid valve (auto A/C)..... | HA-122 |
| Water cock solenoid valve (manual A/C)..... | HA-59 |
| Water pump..... | LC-9 |
| Water temperature gauge..... | EL-76 |
| Weatherstrip..... | BF-35 |
| Wheel alignment (front)..... | FA-6 |
| Wheel alignment (rear)..... | RA-6 |
| Wheel balance..... | MA-18 |
| Wheel bearing (front axle)..... | FA-6 |
| Wheel bearing (rear)..... | RA-5 |
| Wheel hub and steering knuckle..... | FA-10 |
| Wheel hub (front)..... | FA-10 |
| Wheel hub (rear)..... | RA-8 |
| Wheel sensors (ABS)..... | BR-37 |
| Wheelarch height..... | FA-5 |
| Wheelbase (Dimensions)..... | GI-22 |
| Width (Dimensions)..... | GI-22 |
| Windshield and windows..... | BF-50 |
| Wiper and washer..... | EL-109 |
| Wiper, front..... | EL-109 |
| Withdrawal lever (clutch)..... | CL-8 |

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX