


SUPER MULTIPLE JUNCTION (SMJ)

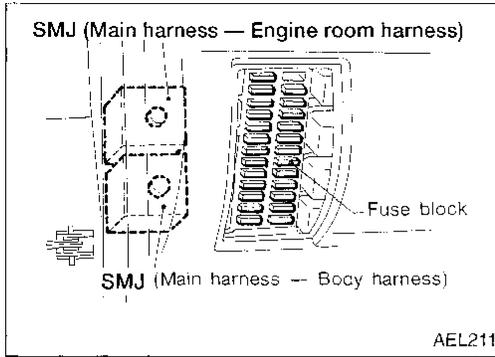


INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

: 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:


Do not overtighten bolts, otherwise, it may damage them.

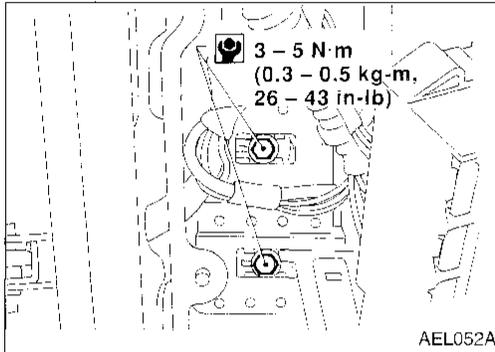

SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement

MAIN HARNESS

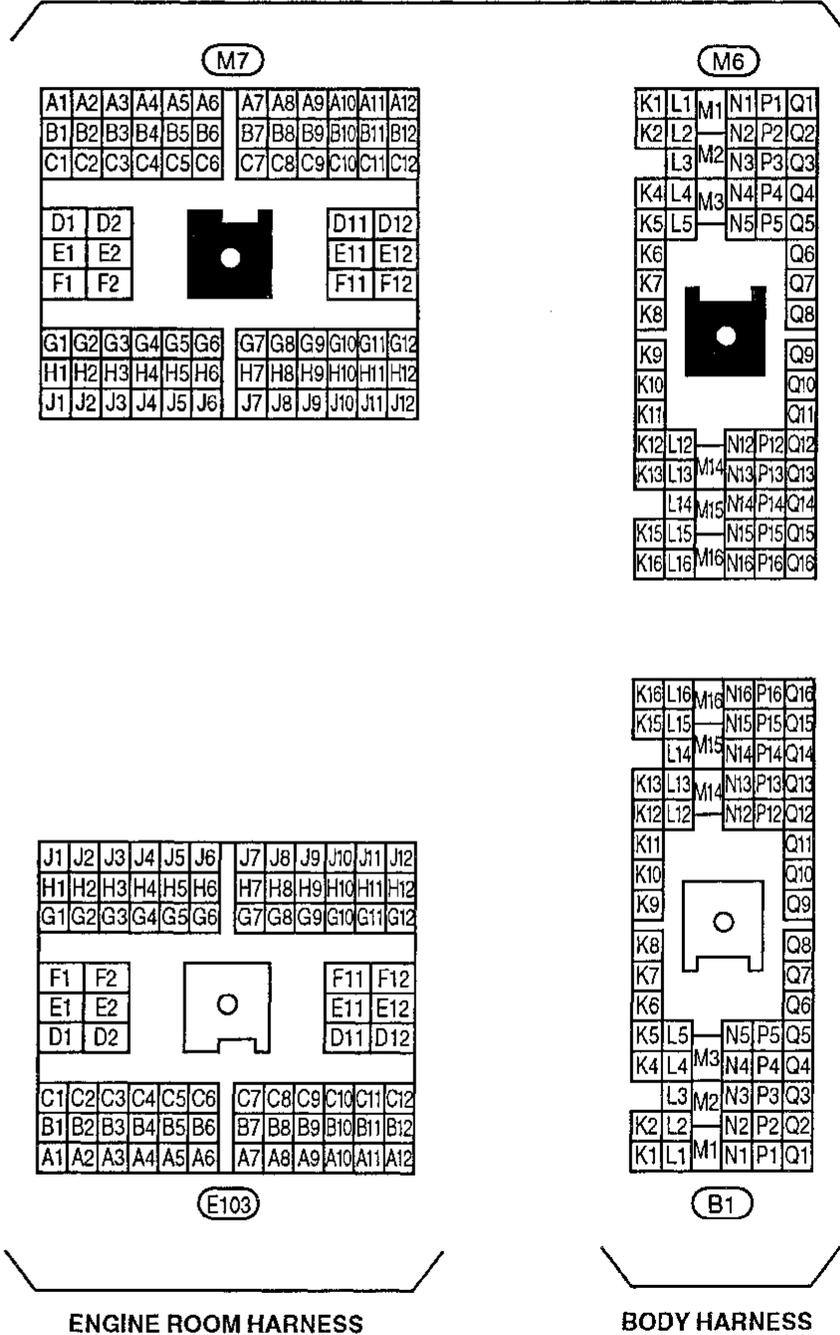


ENGINE ROOM HARNESS

BODY HARNESS


JOINT CONNECTOR (J/C)

Location

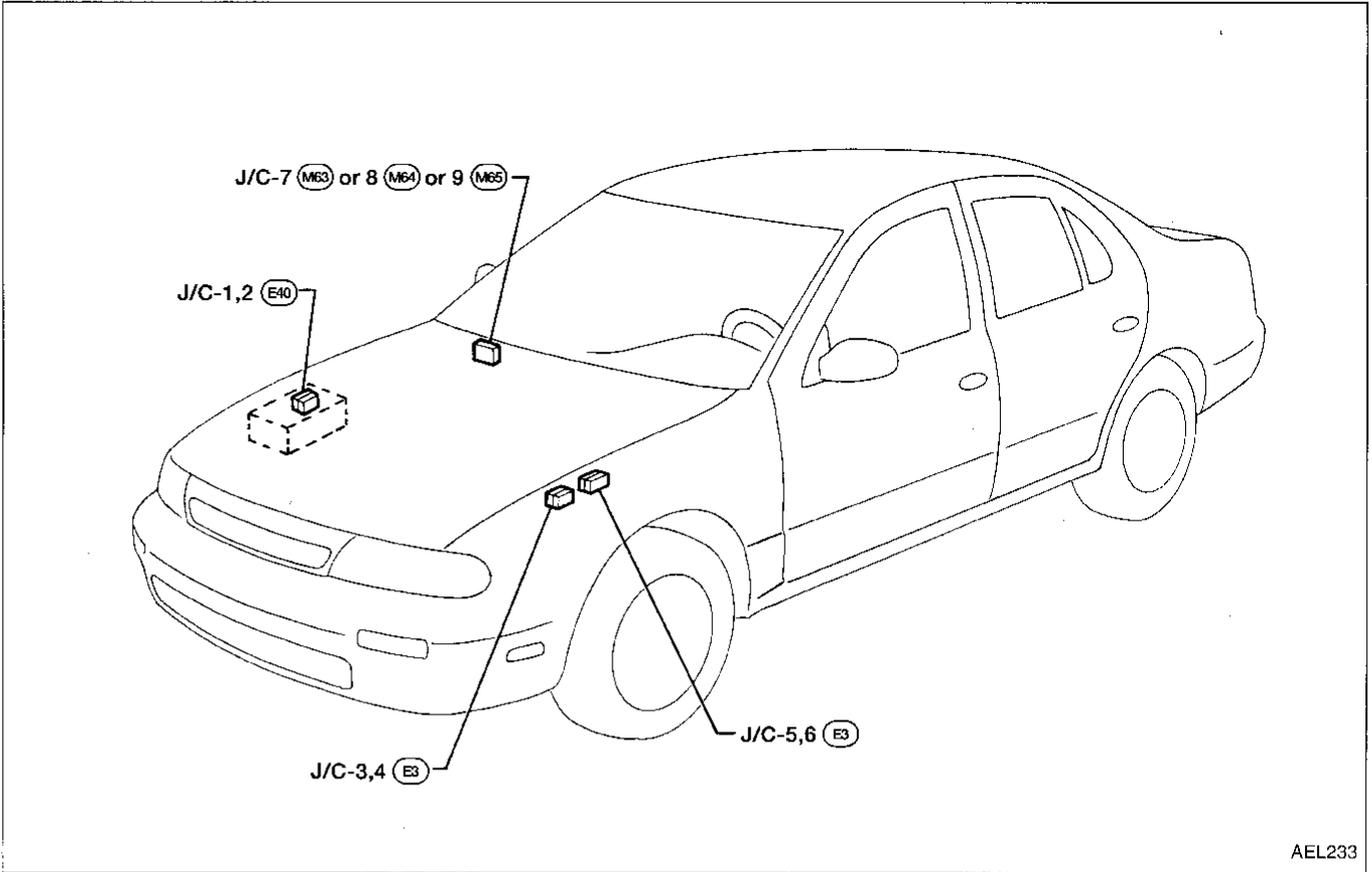

AEL233

Terminal Arrangement

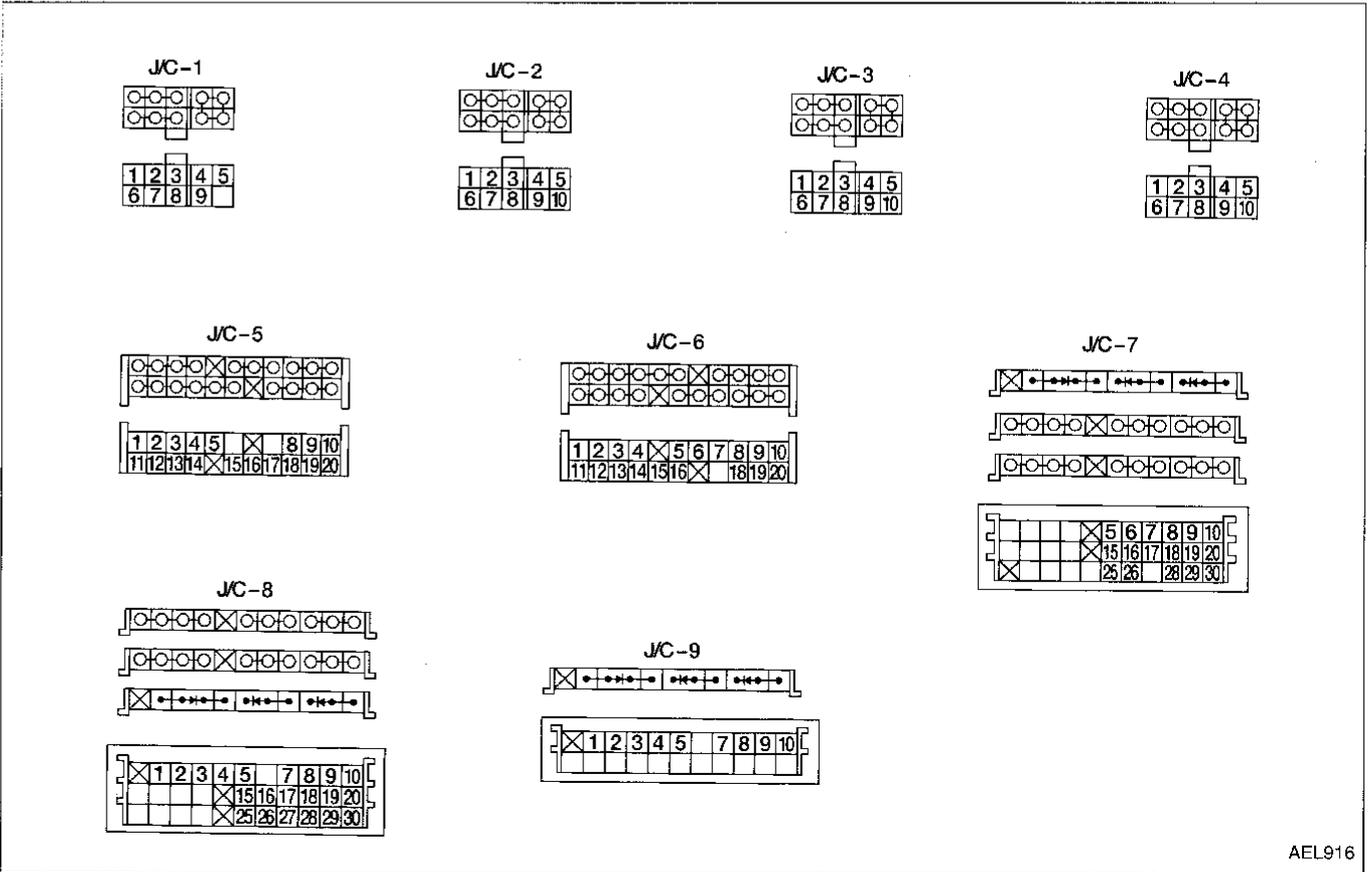


AEL916

FUSE BLOCK/FUSIBLE LINK AND FUSE BOX


Fuse Arrangement

FUSE BLOCK

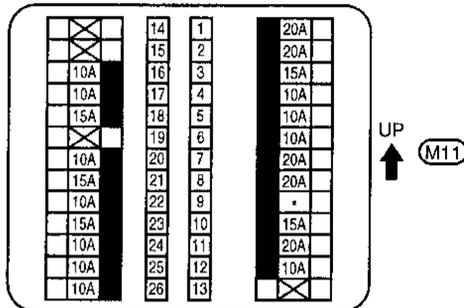

*10A--Models without active speaker audio system
 15A--Models with active speaker audio system

FUSIBLE LINK AND FUSE BOX

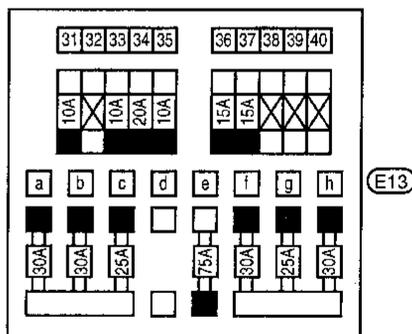


CONTROL UNITS/MODULE

AIRBAG DIAGNOSIS SENSOR UNIT




View from harness side

 ABS CONTROL UNIT




View from harness side

 AT CONTROL UNIT



View from harness side

ECM (ECCS CONTROL MODULE)

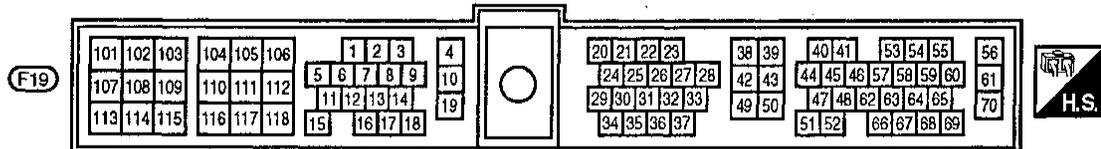

View from harness side