

## SECTION **MT**

GI  
MA  
EM  
LC  
EC  
FE  
CL  
**MT**  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
FL  
IDX







### CONTENTS

|                                                    |    |                                                   |    |
|----------------------------------------------------|----|---------------------------------------------------|----|
| <b>PREPARATION</b> .....                           | 2  | Gear End Play .....                               | 40 |
| Special Service Tools.....                         | 2  | Clearance Between Baulk Ring And Gear             |    |
| Commercial Service Tools .....                     | 4  | 1st, 3rd, 4th, & 5th.....                         | 40 |
| <b>ON-VEHICLE SERVICE</b> .....                    | 5  | Reverse Baulk Ring.....                           | 40 |
| Replacing Oil Seal .....                           | 5  | 2nd baulk ring.....                               | 40 |
| Differential Side Oil Seal .....                   | 5  | Available Snap Ring                               |    |
| Striking Rod Oil Seal .....                        | 5  | 3rd & 4th synchronizer hub (At input shaft) ..... | 40 |
| Position Switch Check .....                        | 6  | 1st & 2nd synchronizer hub .....                  | 40 |
| Viscous Coupling Check.....                        | 6  | 5th main gear .....                               | 40 |
| <b>REMOVAL AND INSTALLATION</b> .....              | 7  | Available Washer                                  |    |
| Removal.....                                       | 7  | Input shaft thrust washer.....                    | 41 |
| Installation.....                                  | 9  | Differential side gear thrust washer —            |    |
| <b>TRANSAXLE GEAR CONTROL</b> .....                | 10 | RS5F50A.....                                      | 41 |
| <b>MAJOR OVERHAUL</b> .....                        | 11 | Differential side gear thrust washer —            |    |
| Case Components .....                              | 11 | RS5F50V.....                                      | 41 |
| Gear Components.....                               | 12 | Available Shim.....                               | 41 |
| Shift Control Components.....                      | 13 | Bearing preload and end play.....                 | 41 |
| <b>DISASSEMBLY</b> .....                           | 14 | Turning torque (New bearing) .....                | 41 |
| <b>REPAIR FOR COMPONENT PARTS</b> .....            | 17 | Mainshaft bearing adjusting shim .....            | 41 |
| Input Shaft and Gears .....                        | 17 | Table for selecting mainshaft adjusting           |    |
| Mainshaft and Gears .....                          | 22 | shim(s).....                                      | 42 |
| Final Drive.....                                   | 26 | Input shaft bearing adjusting shim.....           | 42 |
| Shift Control Components.....                      | 30 | Table for selecting input shaft bearing           |    |
| Case Components .....                              | 30 | adjusting shim(s) .....                           | 42 |
| <b>ADJUSTMENT</b> .....                            | 31 | Differential side bearing adjusting shim          |    |
| Input Shaft End Play and Differential Side         |    | — RS5F50A .....                                   | 43 |
| Bearing Preload .....                              | 31 | Table for selecting differential side             |    |
| Mainshaft Bearing Preload .....                    | 32 | bearing adjusting shim(s) — RS5F50A .....         | 43 |
| <b>ASSEMBLY</b> .....                              | 35 | Differential side bearing adjusting shim          |    |
| <b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> ..... | 39 | — RS5F50V .....                                   | 43 |
| General Specifications.....                        | 39 | Table for selecting differential side             |    |
| Inspection and Adjustment.....                     | 40 | bearing adjusting shim(s) — RS5F50V .....         | 43 |

# PREPARATION








## Special Service Tools

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.
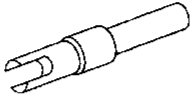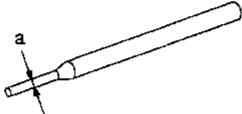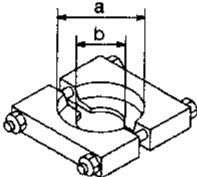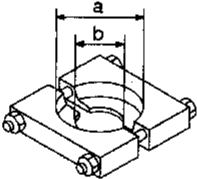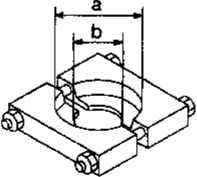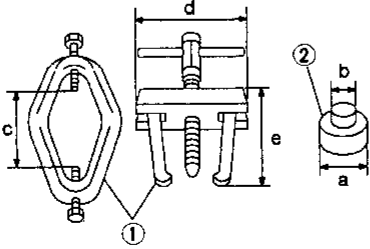
| Tool number<br>(Kent-Moore No.)<br>Tool name                                                                                                     | Description                                                                         |                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| KV38106500<br>(J34284)<br>Preload adapter                                                                                                        |    | Measuring turning torque of final drive assembly<br>Measuring total turning torque<br>Measuring clearance between side gear and differential case with washer<br>Selecting differential side bearing adjusting shim<br>NT087 |
| KV32101000<br>(J25689-A)<br>Pin punch                                                                                                            |    | Removing and installing retaining pin<br>a: 4 mm (0.16 in) dia.<br>NT410                                                                                                                                                     |
| ST22730000<br>(J25681)<br>Puller                                                                                                                 |   | Removing mainshaft front and rear bearing inner race<br>a: 82 mm (3.23 in) dia.<br>b: 30 mm (1.18 in) dia.<br>NT411                                                                                                          |
| ST30031000<br>(J22912-01)<br>Puller                                                                                                              |  | Removing input shaft front and rear bearing<br>Removing 4th & 5th main gear<br>a: 90 mm (3.54 in) dia.<br>b: 50 mm (1.97 in) dia.<br>NT411                                                                                   |
| ST30021000<br>(J22912-01)<br>Puller                                                                                                              |  | Removing 5th synchronizer<br>Removing 3rd & 4th synchronizer<br>Removing 2nd & 3rd main gear<br>a: 110 mm (4.33 in) dia.<br>b: 68 mm (2.68 in) dia.<br>NT411                                                                 |
| ST3306S001<br>(J22888-D)<br>Differential side bearing puller set<br>① ST33051001<br>(J22888-D)<br>Puller<br>② ST33061000<br>(J8107-2)<br>Adapter |  | Removing differential side bearing inner race<br>a: 38 mm (1.50 in) dia.<br>b: 28.5 mm (1.122 in) dia.<br>c: 130 mm (5.12 in)<br>d: 135 mm (5.31 in)<br>e: 100 mm (3.94 in)<br>NT413                                         |

# PREPARATION




## Special Service Tools (Cont'd)
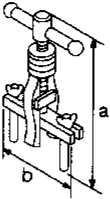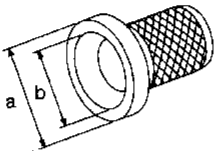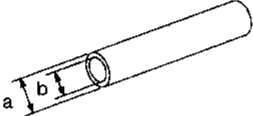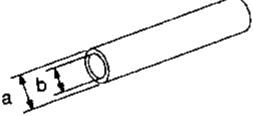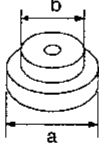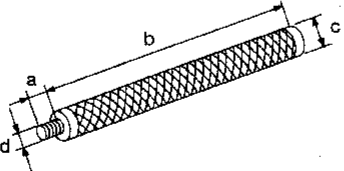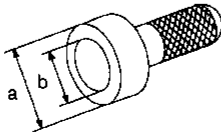
| Tool number<br>(Kent-Moore No.)<br>Tool name | Description                                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ST33290001<br>(J34286)<br>Puller             | <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Removing differential oil seal<br/>Removing mainshaft rear bearing outer race<br/>Removing differential side bearing outer race</p> <p><b>a: 250 mm (9.84 in)</b><br/><b>b: 160 mm (6.30 in)</b></p> </div> </div> <p style="text-align: center;">NT414</p>       |
| ST33400001<br>(J26082)<br>Drift              | <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Installing differential oil seal.</p> <p><b>a: 60 mm (2.36 in) dia.</b><br/><b>b: 47 mm (1.85 in) dia.</b></p> </div> </div> <p style="text-align: center;">NT086</p>                                                                                             |
| ST30600000<br>(J25863-01)<br>Drift           | <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Installing input shaft front bearing</p> <p><b>a: 36 mm (1.42 in) dia.</b><br/><b>b: 31 mm (1.22 in) dia.</b></p> </div> </div> <p style="text-align: center;">NT065</p>                                                                                          |
| ST22452000<br>(J34335)<br>Drift              | <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Installing 3rd, 4th and 5th main gear</p> <p><b>a: 45 mm (1.77 in) dia.</b><br/><b>b: 36 mm (1.42 in) dia.</b></p> </div> </div> <p style="text-align: center;">NT065</p>                                                                                       |
| ST30621000<br>(J25742-5)<br>Drift            | <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Installing mainshaft rear bearing outer race<br/>(Use with ST30611000.)</p> <p><b>a: 79 mm (3.11 in) dia.</b><br/><b>b: 59 mm (2.32 in) dia.</b></p> </div> </div> <p style="text-align: center;">NT073</p>                                                     |
| ST30611000<br>(J25742-1)<br>Drift            | <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Installing mainshaft rear bearing outer race<br/>(Use with ST30621000.)</p> <p><b>a: 15 mm (0.59 in)</b><br/><b>b: 335 mm (13.19 in)</b><br/><b>c: 25 mm (0.98 in) dia.</b><br/><b>d: M12 x 1.5P</b></p> </div> </div> <p style="text-align: center;">NT419</p> |
| ST307200000<br>(J25405)<br>Drift             | <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Installing differential side bearing outer race</p> <p><b>a: 77 mm (3.03 in) dia.</b><br/><b>b: 55.5 mm (2.185 in) dia.</b></p> </div> </div> <p style="text-align: center;">NT115</p>                                                                          |



GI  
MA  
EM  
LC  
EC  
FE  
CL  
**MT**  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX


## PREPARATION

### Special Service Tools (Cont'd)
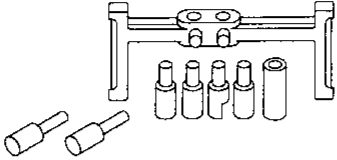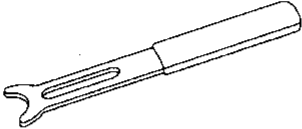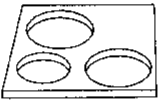
| Tool number<br>(Kent-Moore No.)<br>Tool name | Description                                                                                                                                                                                                     |
|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (J34290)<br>Shim selecting tool set          |  <p style="text-align: center;">NT080</p> <p style="text-align: right;">Selecting differential side bearing adjusting shim</p> |
| (J34305)<br>Snap ring remover and installer  |  <p style="text-align: center;">NT081</p> <p style="text-align: right;">Removing and installing stopper ring of shift fork</p> |
| (J25407-2)                                   |  <p style="text-align: center;">NT082</p> <p style="text-align: right;">Measuring reverse bulk ring wear</p>                   |

### Commercial Service Tools

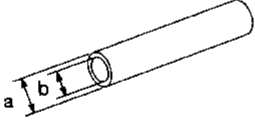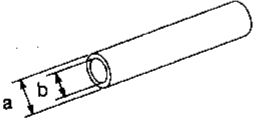
| Tool name | Description                                                                                                                                                                                                                                                                                          |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Drift     |  <p style="text-align: center;">NT065</p> <p style="text-align: right;">Installing differential side bearing inner race</p> <p style="text-align: right;">a: 45 mm (1.77 in) dia.<br/>b: 41 mm (1.61 in) dia.</p> |
| Drift     |  <p style="text-align: center;">NT065</p> <p style="text-align: right;">Installing striking rod oil seal</p> <p style="text-align: right;">a: 38 mm (1.50 in) dia.<br/>b: 20 mm (0.79 in) dia.</p>                |

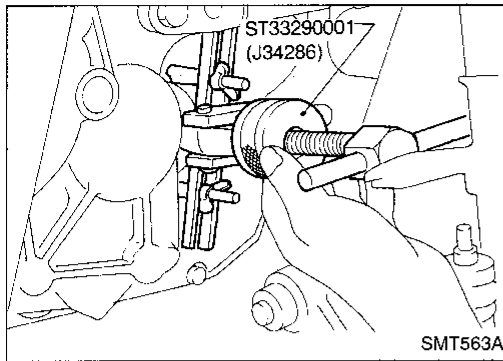

## Replacing Oil Seal

### DIFFERENTIAL SIDE OIL SEAL


1. Drain gear oil from transaxle.
2. Remove drive shafts. Refer to FA section ("Removal", "FRONT AXLE — Drive Shaft").
3. Remove differential oil seal with Tool.

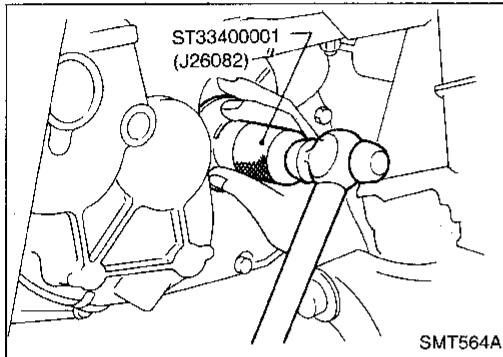

4. Install differential oil seal. Suitable drift sizes are shown in "PREPARATION".

- **Apply multi-purpose grease to seal lip of oil seal before installing.**


5. Install drive shafts. Refer to FA section ("Installation", "FRONT AXLE — Drive Shaft").

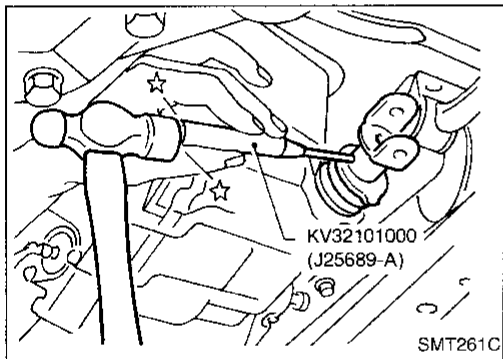


### STRIKING ROD OIL SEAL

1. Remove transaxle control rod from yoke.
2. Remove yoke retaining pin with Tool.

- **Be careful not to damage boot.**

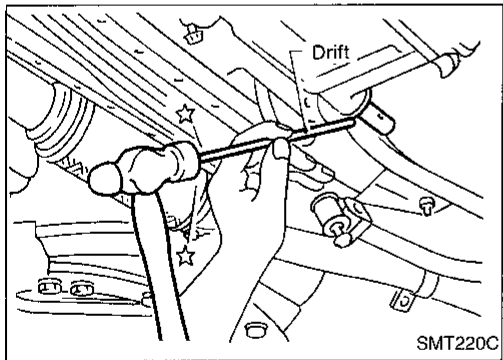

3. Remove striking rod oil seal.

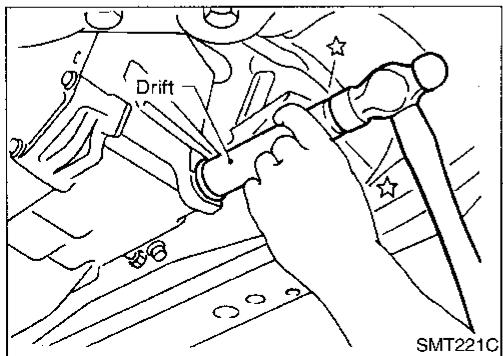

4. Install striking rod oil seal.

- **Apply multi-purpose grease to seal lip of oil seal before installing.**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST


RS

BT

HA

EL

IDX

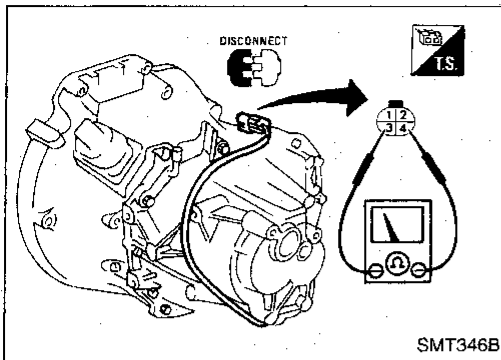


## Position Switch Check

### BACK-UP LAMP SWITCH AND NEUTRAL POSITION SWITCH

- Check continuity.

| Gear position              | Continuity |
|----------------------------|------------|
| Reverse                    | ② — ④      |
| Neutral                    | ① — ③      |
| Except reverse and neutral | No         |

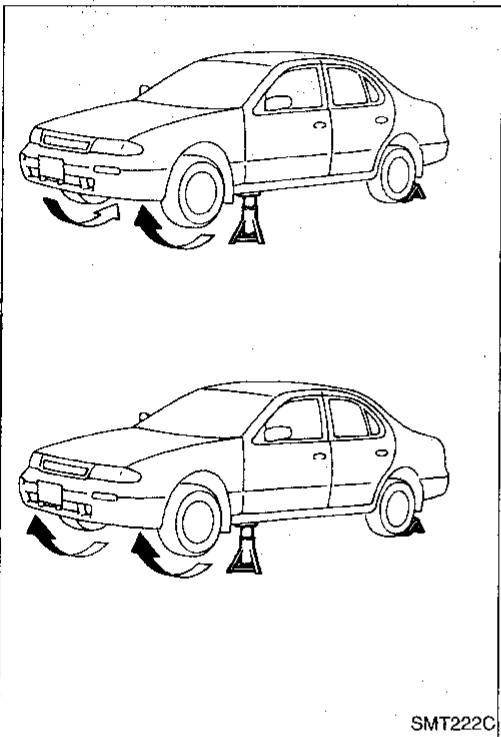

## Viscous Coupling Check

1. Apply parking brake firmly and place shift lever in the neutral position.
2. Jack up front wheels.
3. Rotate one front wheel and check turning direction of the other front wheel.






### Turning direction of the two wheels is opposite:

The viscous coupling is not functioning normally.

### Turning direction of the two wheels is the same:

If differential side gear and pinion mate gear thrust washers are OK, viscous coupling is functioning normally.

# REMOVAL AND INSTALLATION

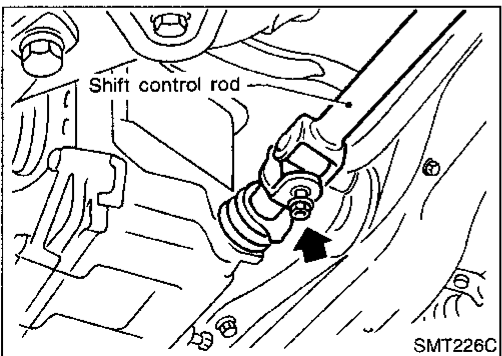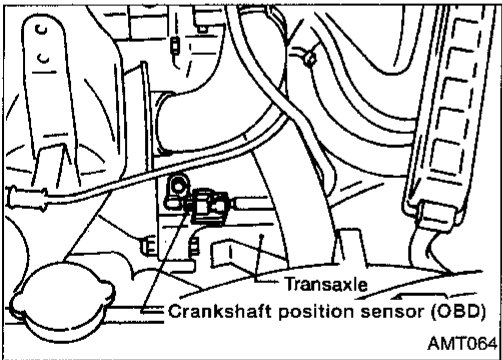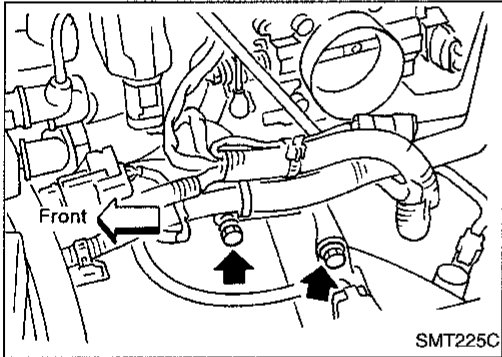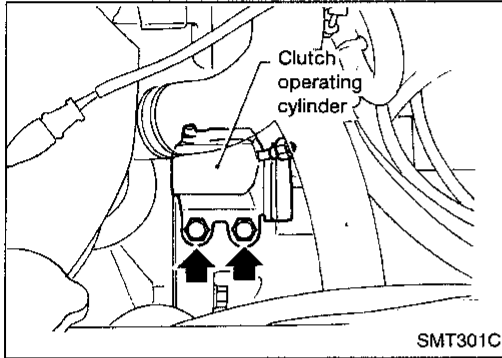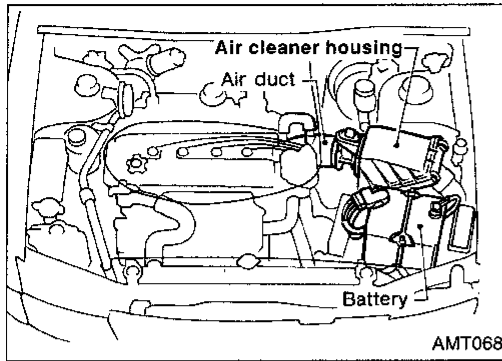

## Removal

### CAUTION:

Before separating transaxle from engine, remove the crankshaft position sensor (OBD) from transaxle.


Be careful not to damage sensor.

1. Remove battery and its bracket.
2. Remove air cleaner housing with mass air flow sensor.
3. Remove air duct.
4. Remove clutch operating cylinder from transaxle.
5. Disconnect speedometer pinion, position switch and ground harness connectors.
6. Remove starter motor from transaxle.
7. Remove crankshaft position sensor (OBD) from transaxle.  
Be careful not to damage sensor tip.
8. Remove shift control rod from transaxle.
9. Drain gear oil from transaxle.


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## REMOVAL AND INSTALLATION

### Removal (Cont'd)

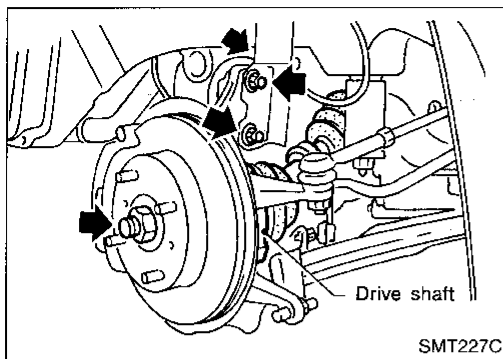

10. Draw out drive shafts from transaxle. Refer to FA section ("Removal", "FRONT AXLE — Drive Shaft").


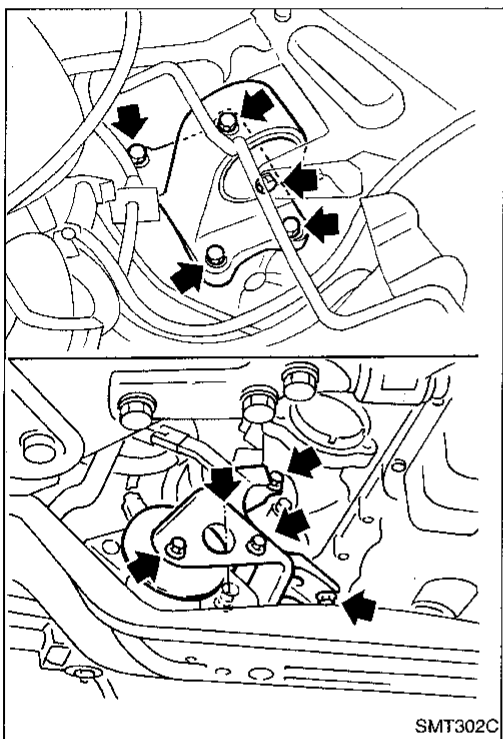


11. Support engine by placing a jack under oil pan.


**CAUTION:**

**Do not place jack under oil pan drain plug.**

12. Remove rear and LH mounts.

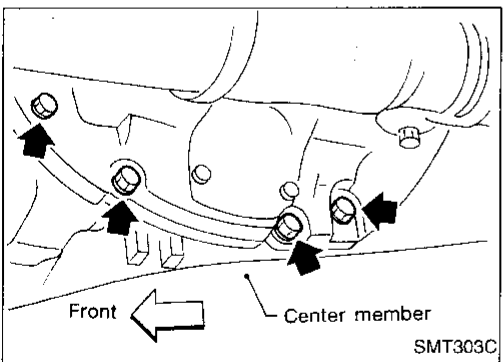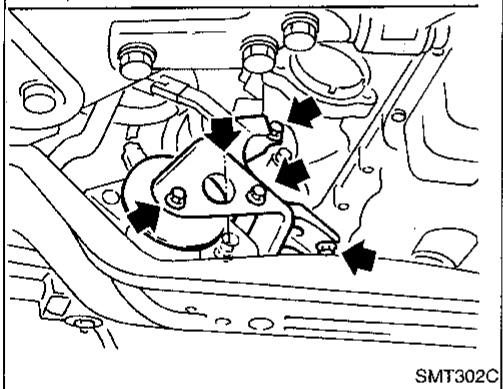


13. Raise jack for access to lower housing bolts. Remove bolts. Lower jack.

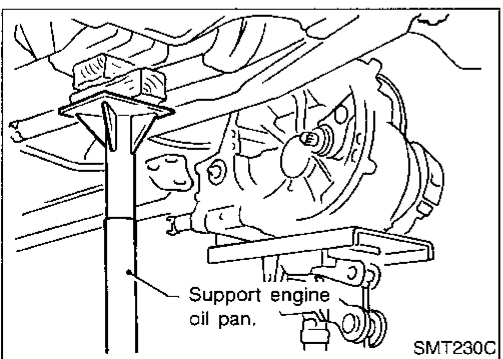

14. Remove bolts securing transaxle.  
15. Lower transaxle while supporting it with a jack.



# REMOVAL AND INSTALLATION

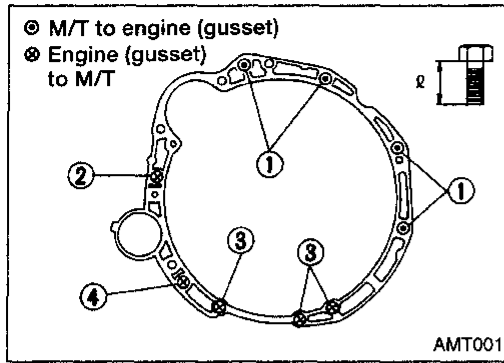

## Installation


- Tighten bolts securing transaxle.

| Bolt No. | Tightening torque<br>N·m (kg-m, ft-lb) | ℓ mm (in) |
|----------|----------------------------------------|-----------|
| 1        | 39 - 49 (4.0 - 5.0, 29 - 36)           | 45 (1.77) |
| 2        | 39 - 49 (4.0 - 5.0, 29 - 36)           | 48 (1.89) |
| 3        | 30 - 40 (3.1 - 4.1, 22 - 30)           | 30 (1.18) |
| 4        | 30 - 40 (3.1 - 4.1, 22 - 30)           | 40 (1.57) |

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
**MT**  
 AT  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX

# TRANSAXLE GEAR CONTROL

SEC. 341

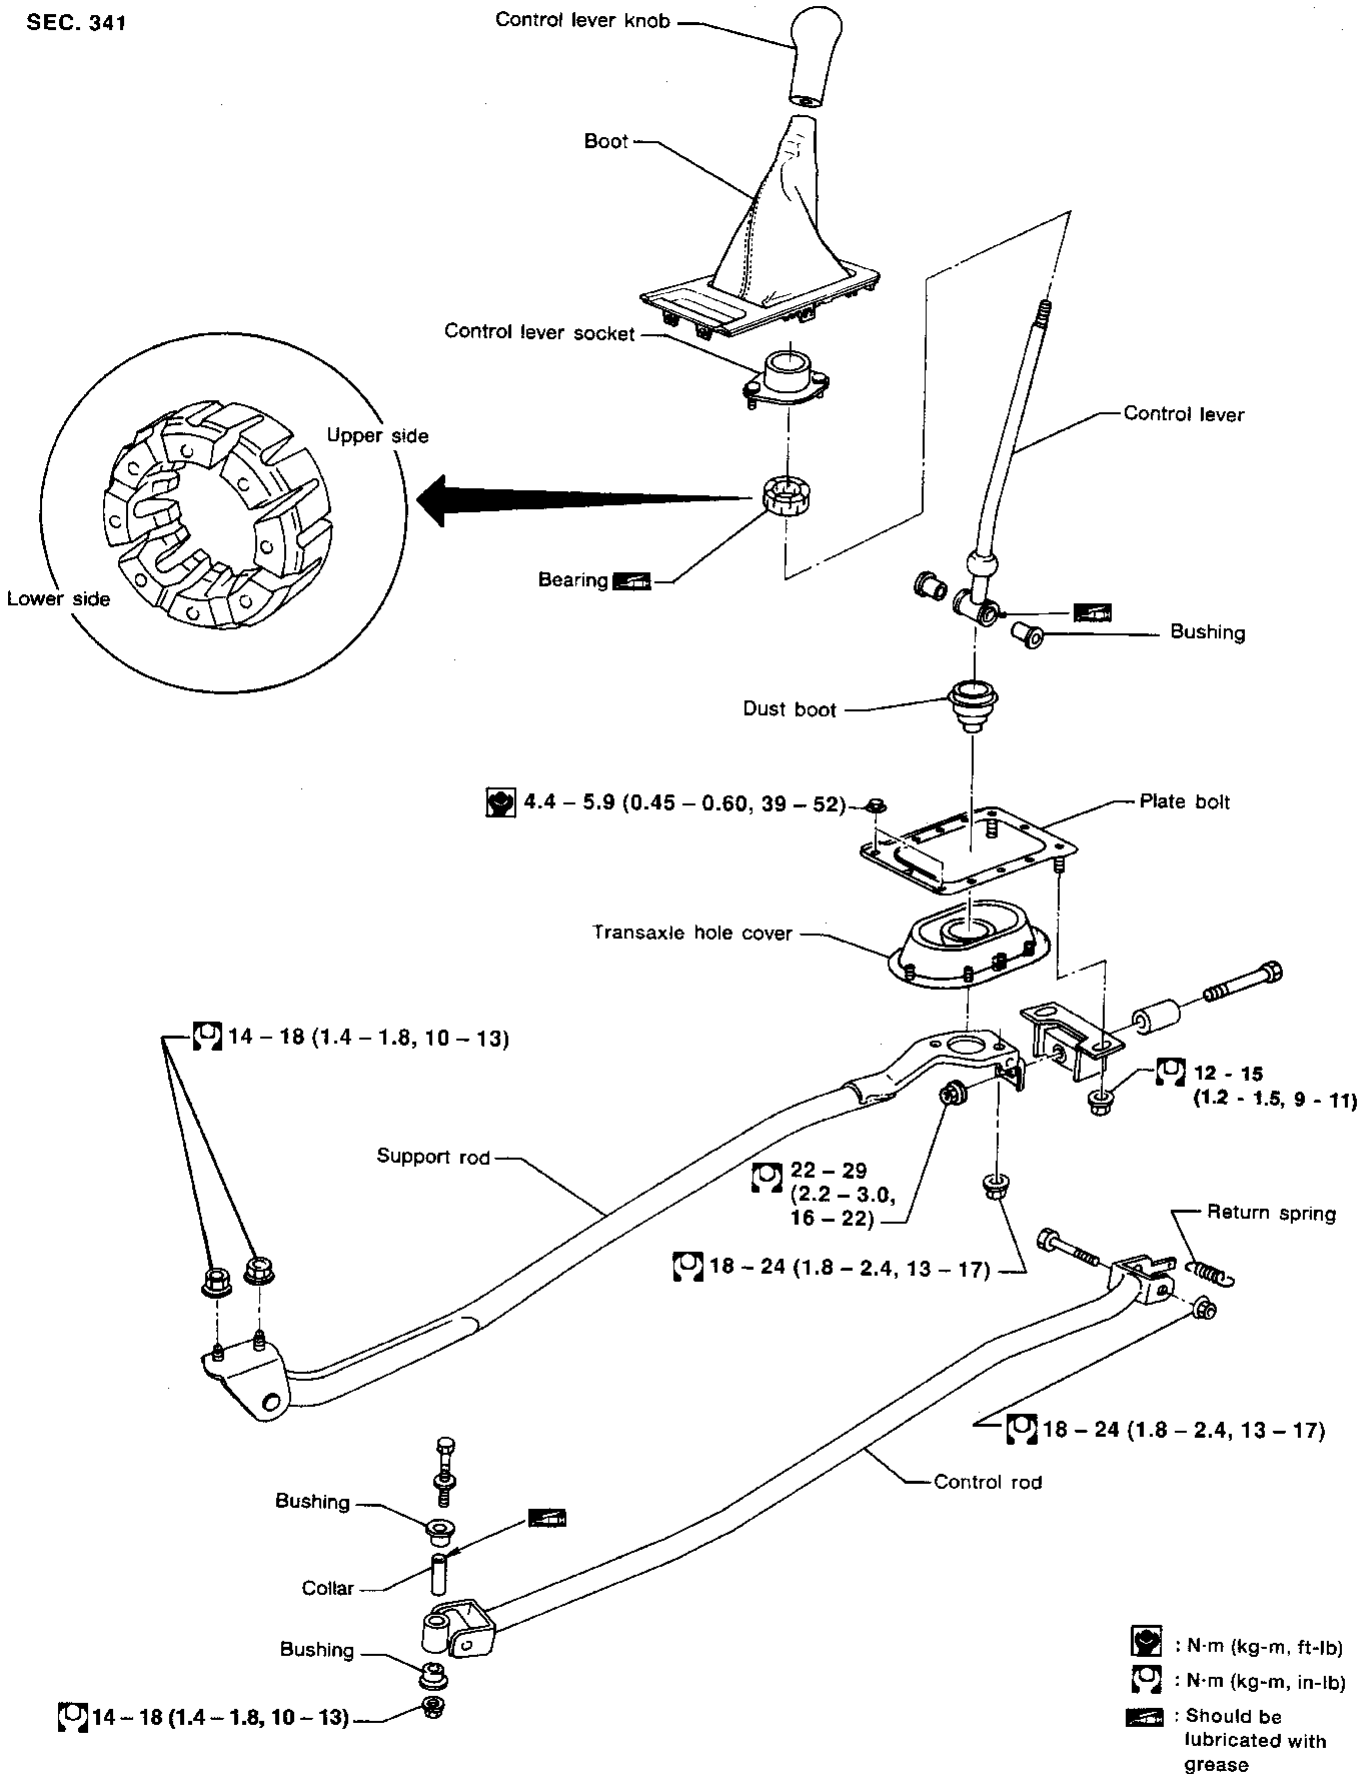


AMT063

# MAJOR OVERHAUL

## Case Components

SEC. 320

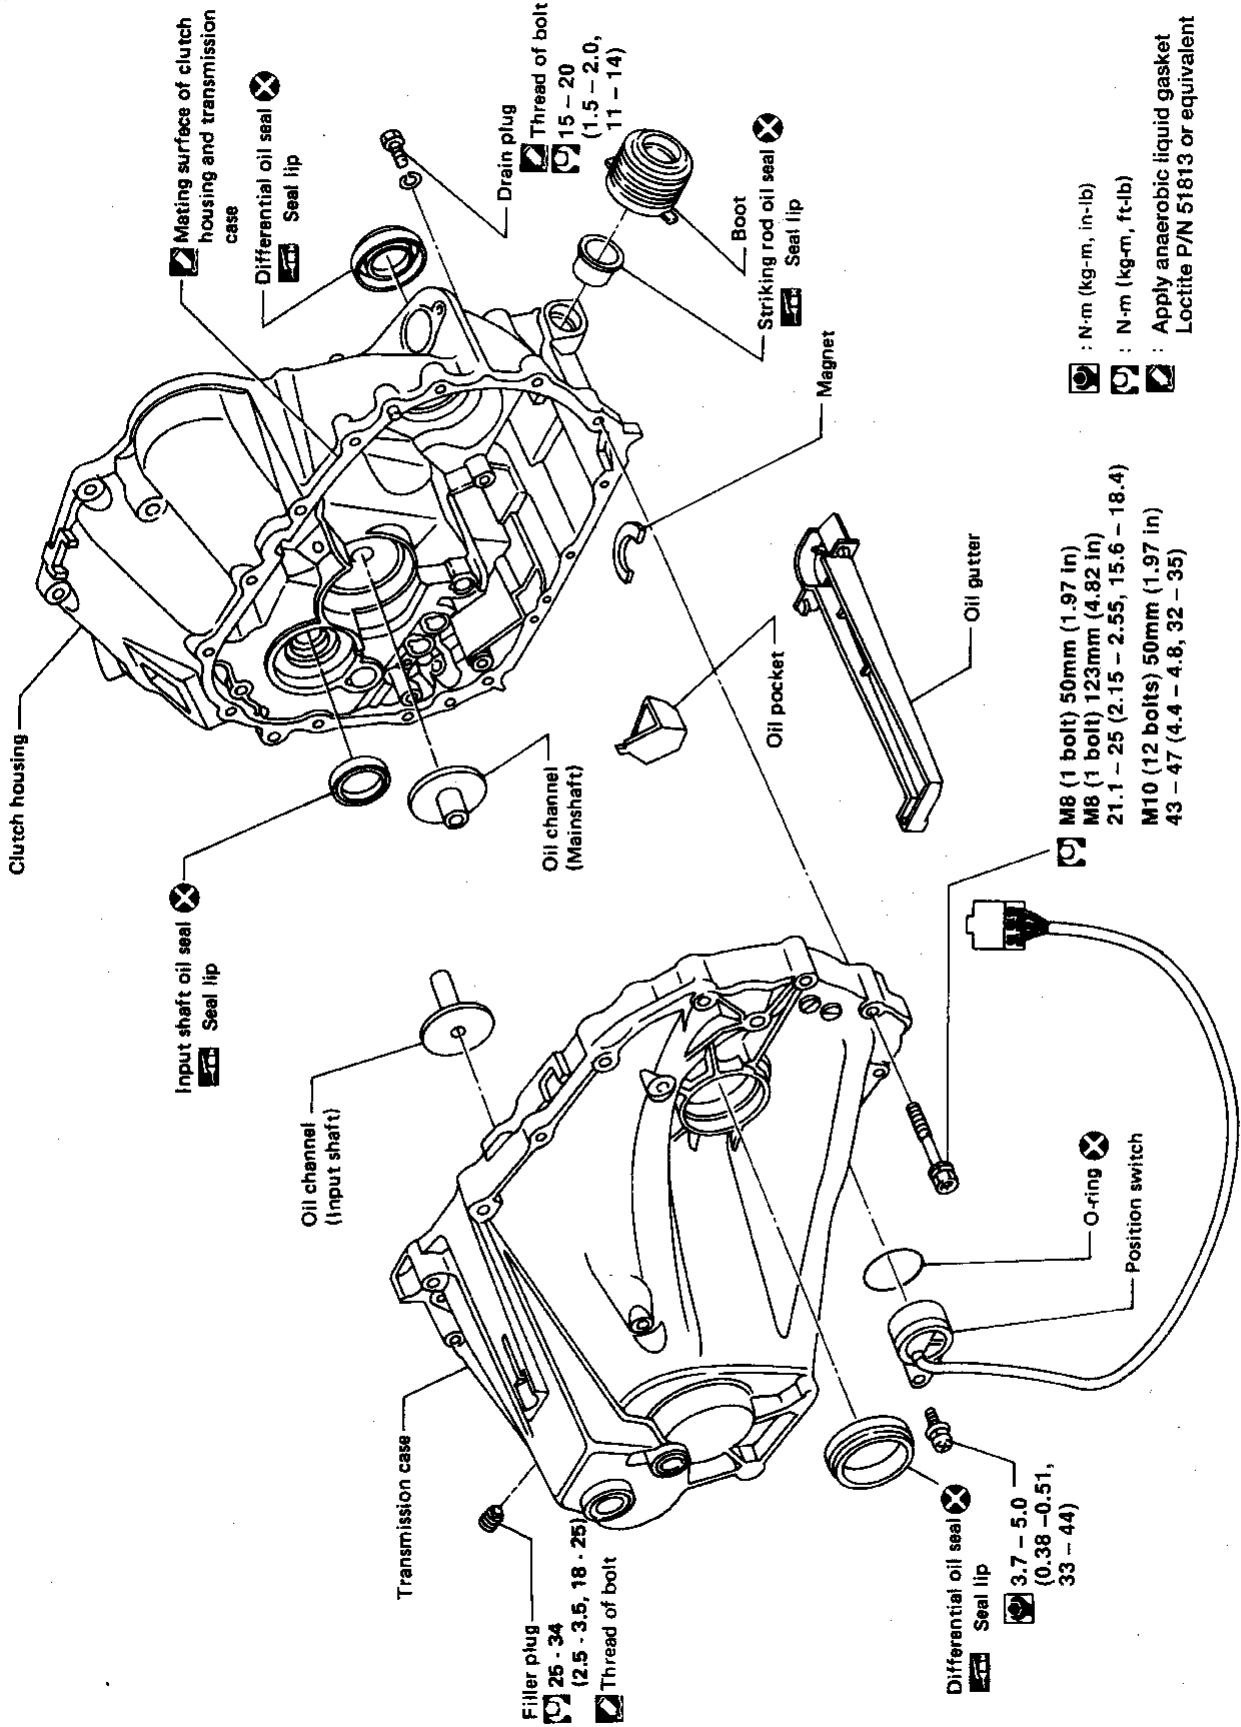

- : N·m (kg·m, in·lb)
- : N·m (kg·m, ft·lb)
- : Apply anaerobic liquid gasket  
Loctite P/N 51813 or equivalent

- M8 (1 bolt) 50mm (1.97 in)
- M8 (1 bolt) 123mm (4.82 in)  
21.1 - 25 (2.15 - 2.55, 15.6 - 18.4)
- M10 (12 bolts) 50mm (1.97 in)  
43 - 47 (4.4 - 4.8, 32 - 35)

GI  
MA  
EM  
LC  
EC  
FE  
CL  
**MT**  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX


# MAJOR OVERHAUL

## Gear Components

SEC. 322

Apply gear oil to gears, shafts, synchronizers and bearings when assembling.


- : N-m (kg-m, in-lb)
- : N-m (kg-m, ft-lb)
- : Select proper thickness.
- : Apply anaerobic liquid gasket
- : Loctite P/N 51813 or equivalent

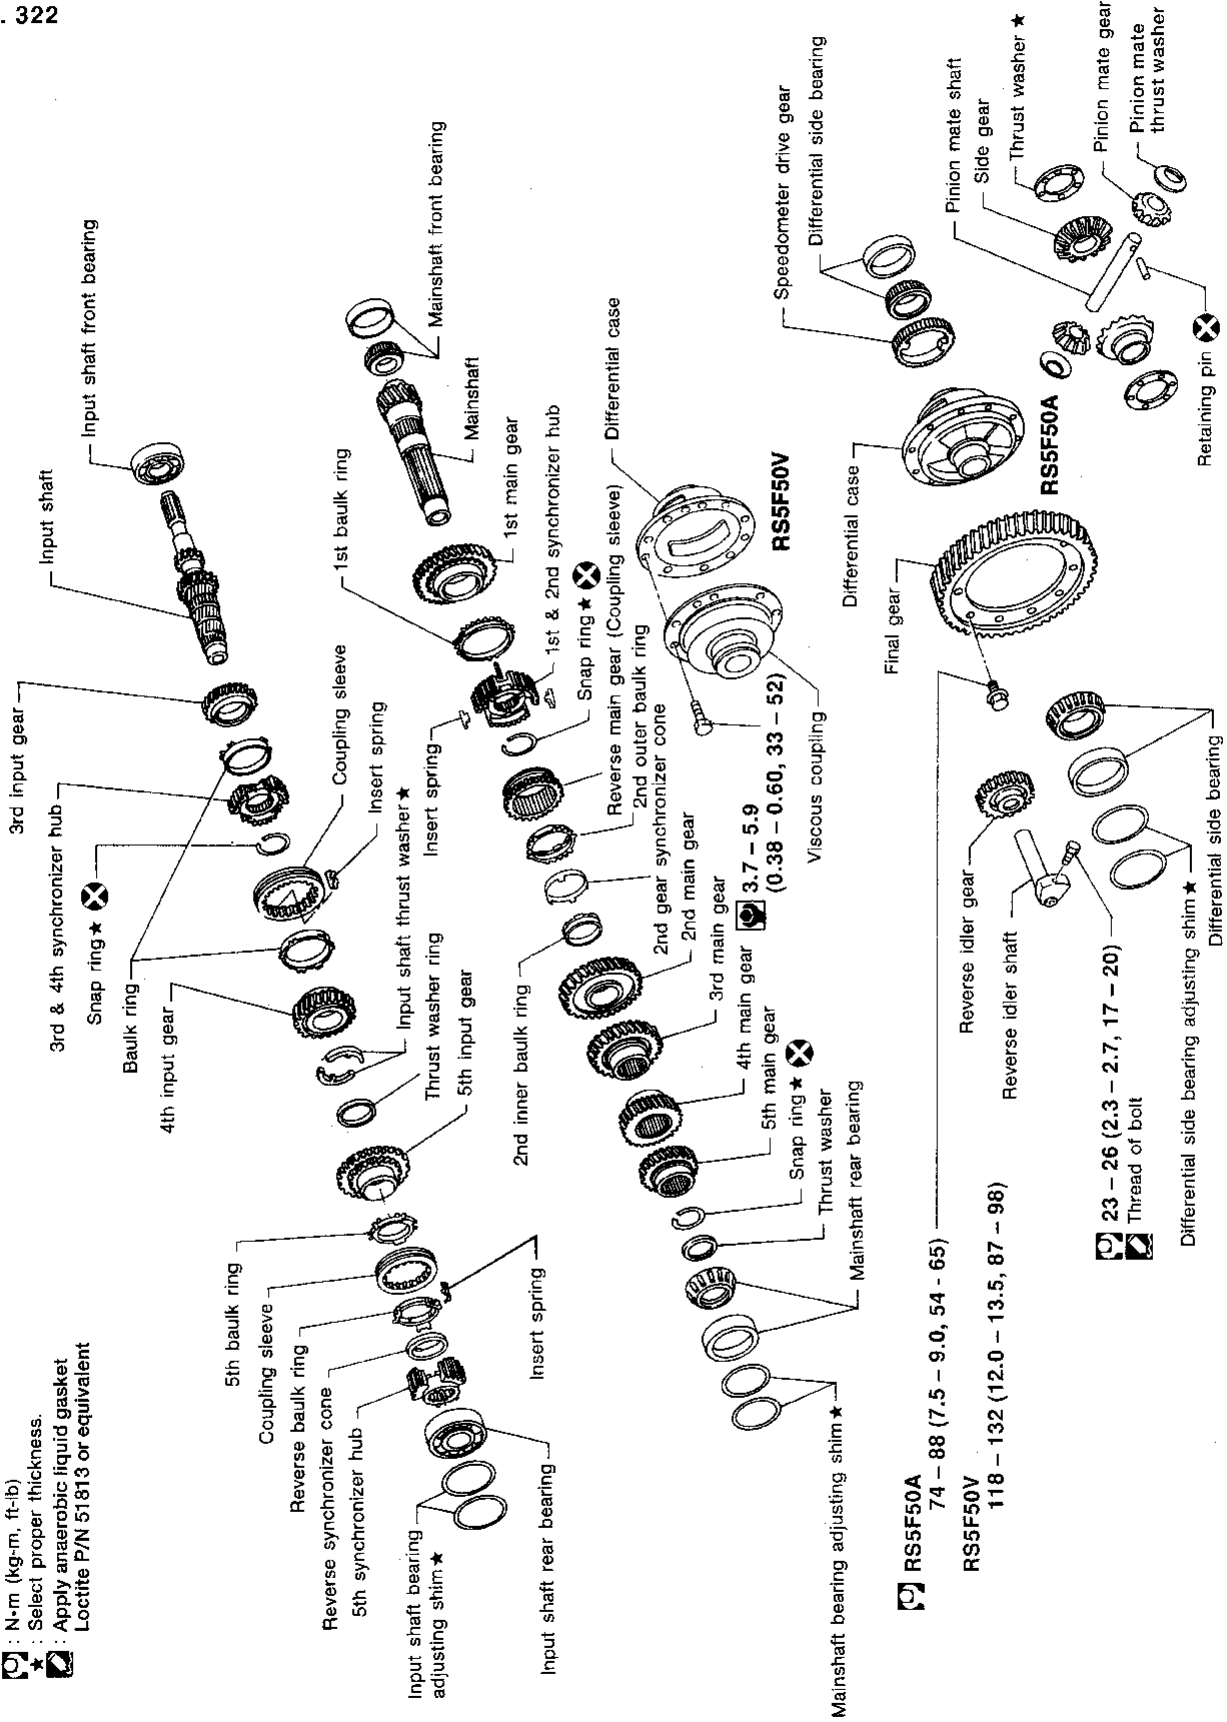

# MAJOR OVERHAUL


## Shift Control Components

SEC. 328

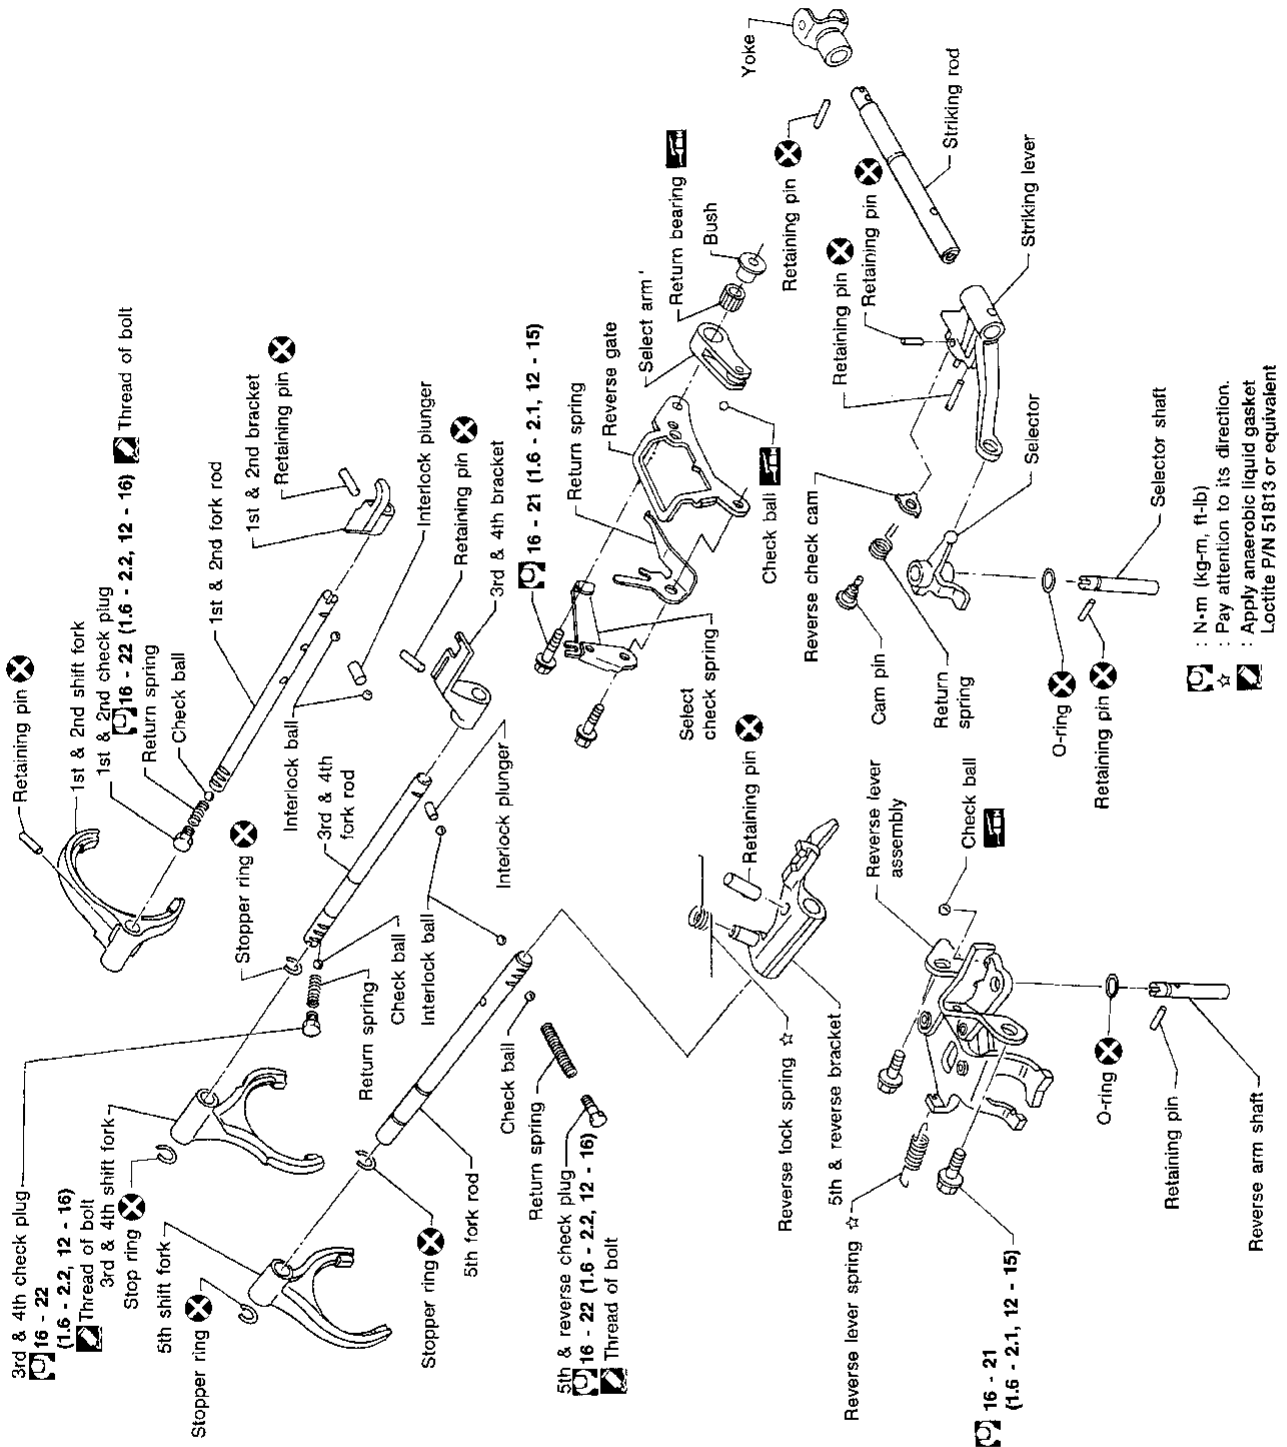


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX


## DISASSEMBLY

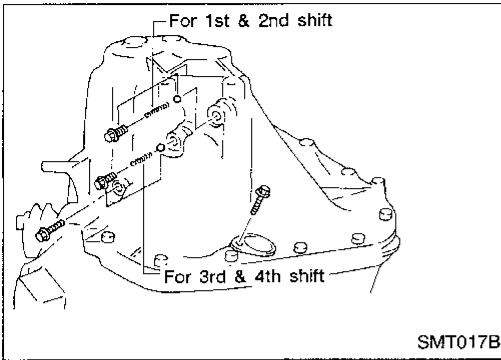


1. Before removing transmission case, remove bolts and plugs as shown left.
2. Remove transmission case.

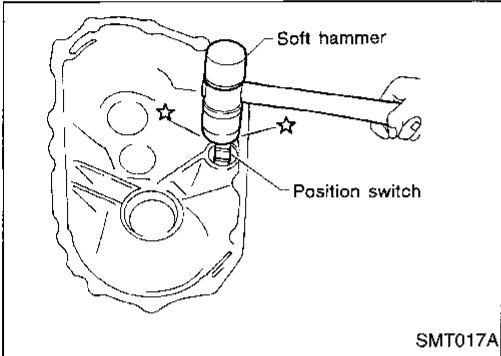


3. Remove position switch.

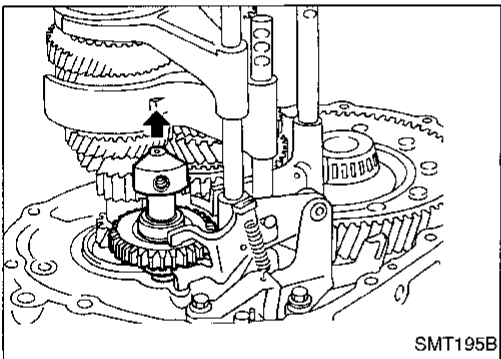

4. Mesh 4th gear, then remove reverse idler shaft and reverse idler gear.

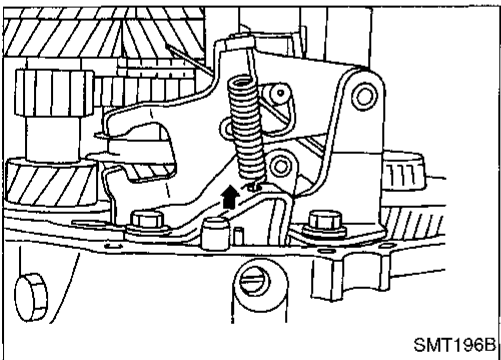


5. Pull out retaining pin.

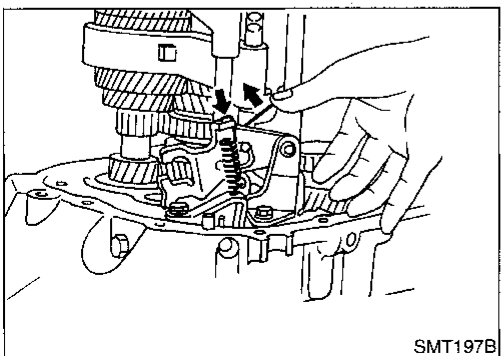


6. Remove reverse lever spring and reverse lock spring from reverse lever assembly.


## DISASSEMBLY

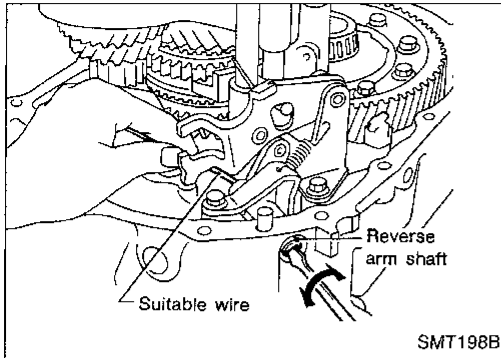


7. Remove reverse arm shaft while rotating it.

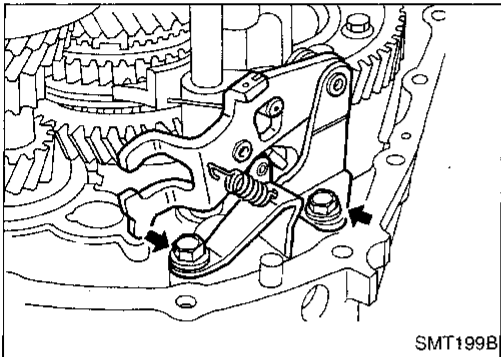

8. Remove reverse lever assembly.

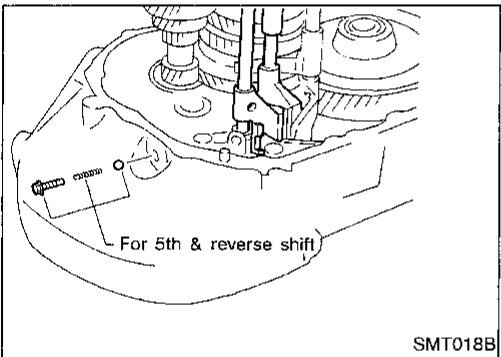


9. Remove 5th & reverse check plug, spring and ball.

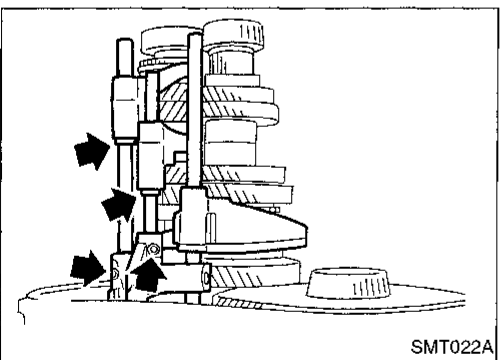

10. Remove stopper rings and retaining pins from 5th & reverse and 3rd & 4th fork rods.

11. Remove 5th & reverse and 3rd & 4th fork rods. Then remove forks and brackets.

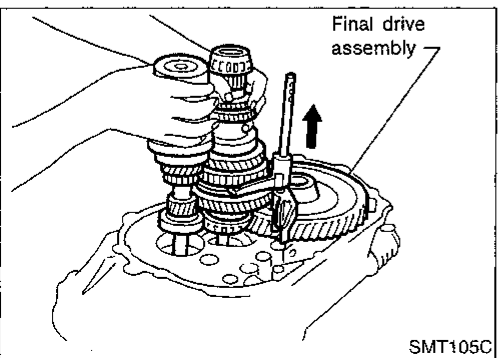

12. Remove both input and mainshafts with 1st & 2nd fork and fork rod as a set.

13. Remove final drive assembly.

- Always withdraw mainshaft straight out. Failure to do so can damage resin oil channel on clutch housing side.

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS


BT

HA


EL

IDX



## DISASSEMBLY

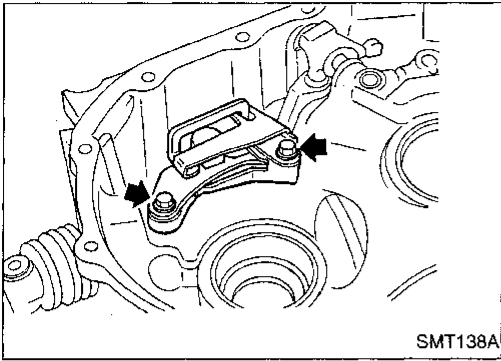


14. Remove reverse check assembly.
  - Be careful not to lose check ball.

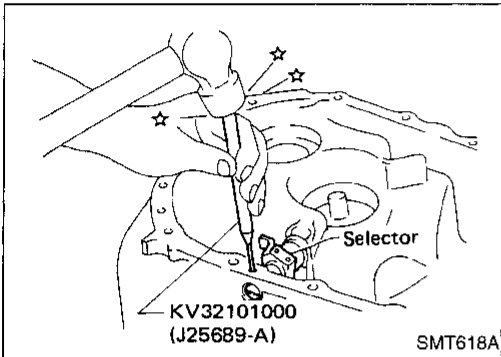

15. Remove retaining pin with Tool and detach the selector.




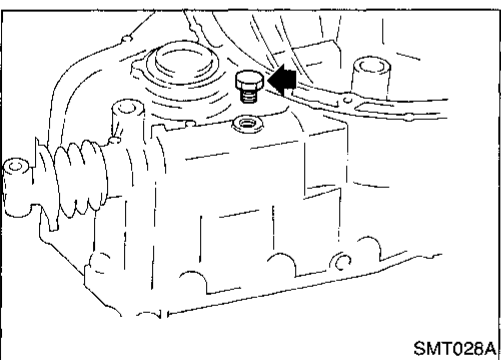
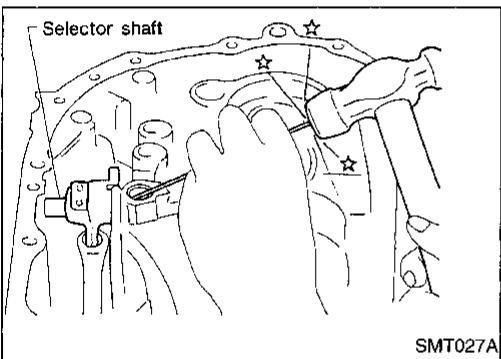


16. Remove drain plug for convenience in removing retaining pin which holds striking lever to striking rod.

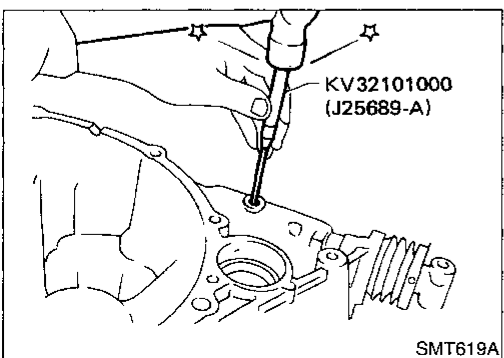

17. Remove retaining pin with Tool and then withdraw striking lever and striking rod.



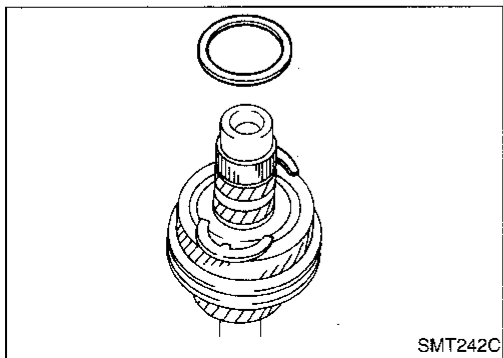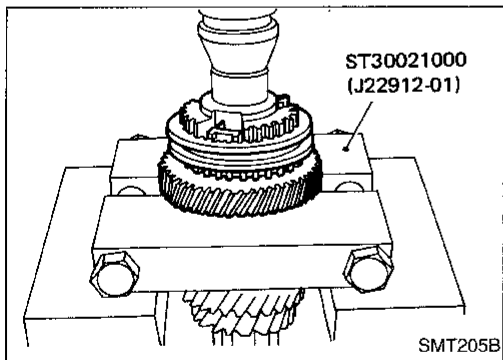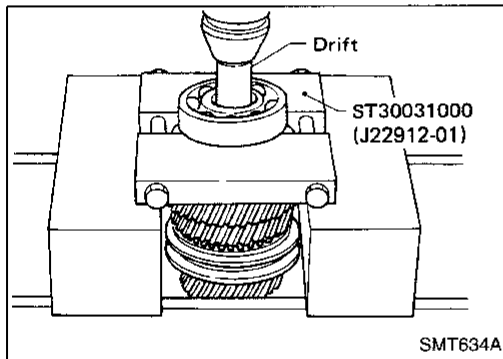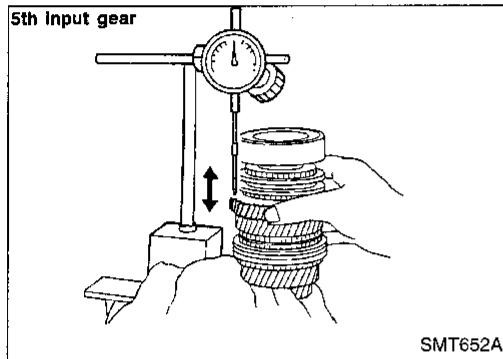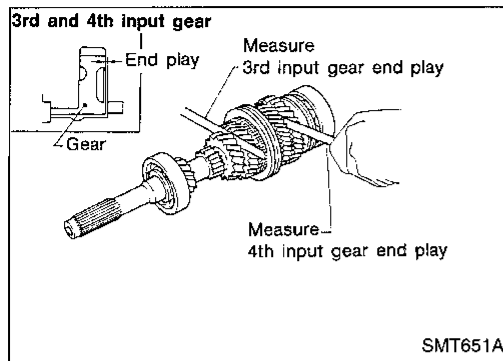

## Input Shaft and Gears

### DISASSEMBLY

1. Before disassembly, check 3rd, 4th and 5th input gear end plays.

**Gear end play:**

**Refer to SDS, MT-40.**

- If not within specification, disassemble and check contact surface of gear, shaft and hub. Check clearance of snap ring groove. Refer to "ASSEMBLY", MT-19.

2. Remove input shaft rear bearing with Tool.


3. Remove 5th & reverse synchronizer and 5th input gear with Tool.

4. Remove thrust washer ring, thrust washers and 4th input gear.


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## REPAIR FOR COMPONENT PARTS


### Input Shaft and Gears (Cont'd)

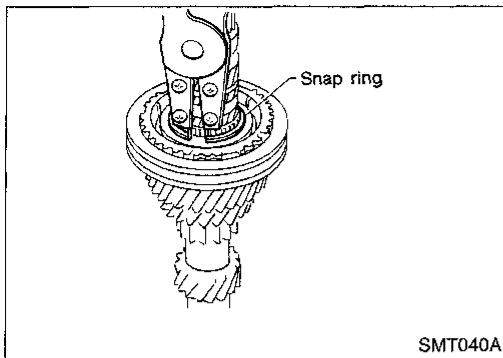


5. Remove snap ring.

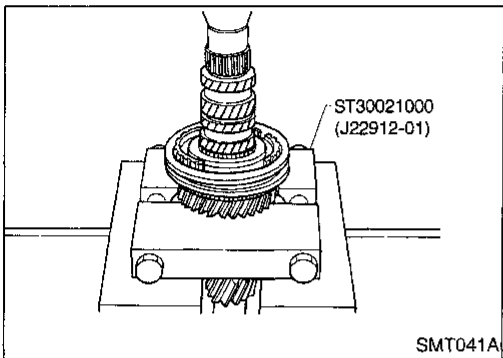

6. Remove 3rd & 4th synchronizer and 3rd input gear with Tool.

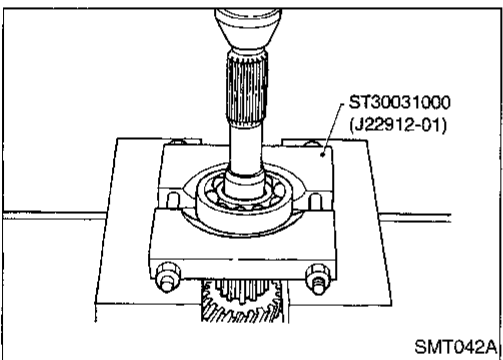


7. Remove input shaft front bearing with Tool.

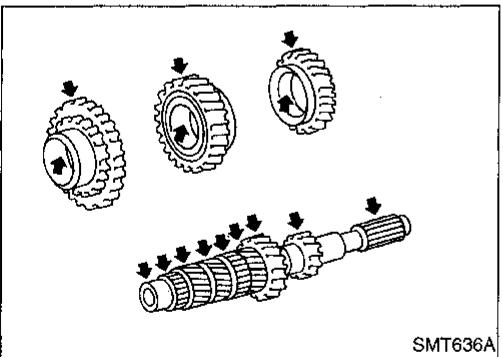

### INSPECTION

#### Gear and shaft

- Check shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

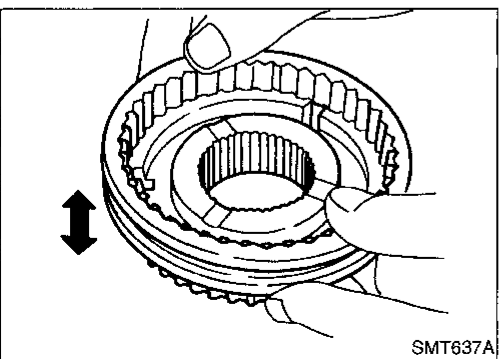


#### Synchronizer

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check insert springs for wear or deformation.

## REPAIR FOR COMPONENT PARTS

### Input Shaft and Gears (Cont'd)

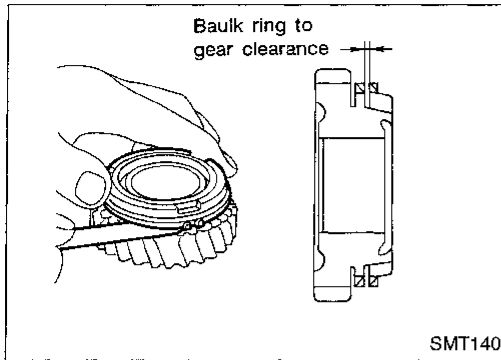

- Measure clearance between baulk ring and gear (4th and 5th).


Clearance between baulk ring and gear:

Standard:

1.0 - 1.35 mm (0.0394 - 0.0531 in)

Wear limit:

0.7 mm (0.028 in)

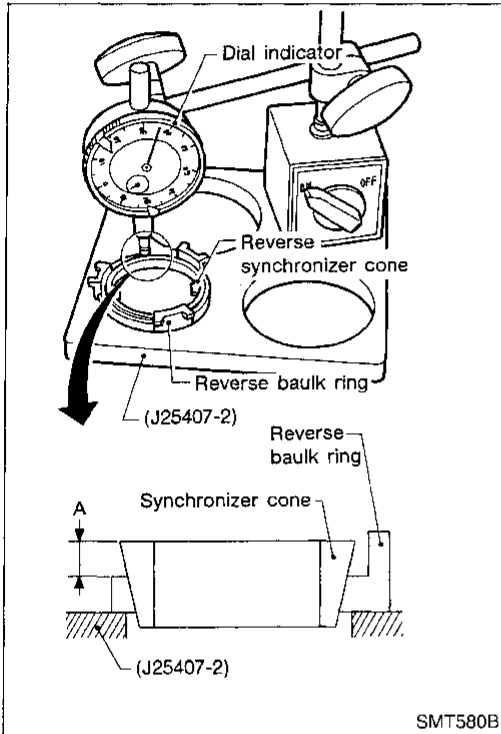

- Measure wear of reverse baulk ring.

a. Place reverse baulk ring on Tool and then place reverse synchronizer cone on reverse baulk ring.

- Make sure projection of synchronizer cone is positioned over the recess on Tool.


b. While holding reverse synchronizer cone against reverse baulk ring as firmly as possible, measure dimension "A" with dial indicator.

Wear limit:

Dimension "A"


1.2 mm (0.047 in)

c. If dimension "A" is smaller than the wear limit, replace baulk ring.

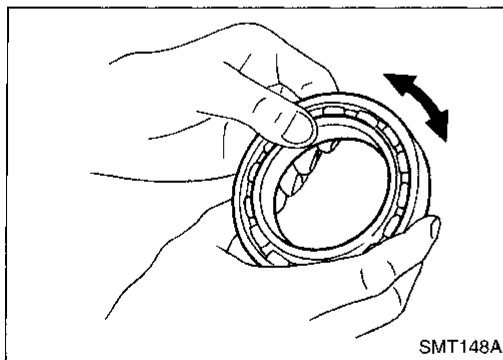

### Bearing






- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.

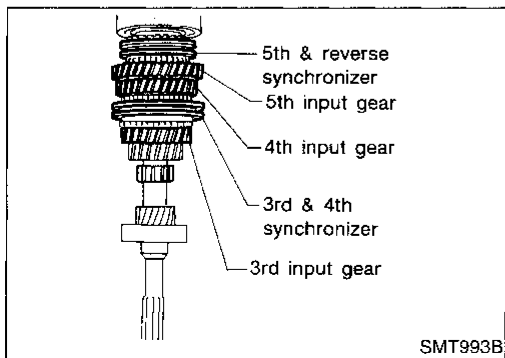

### ASSEMBLY

## REPAIR FOR COMPONENT PARTS

### Input Shaft and Gears (Cont'd)

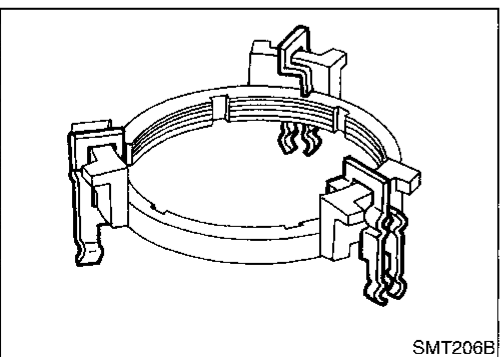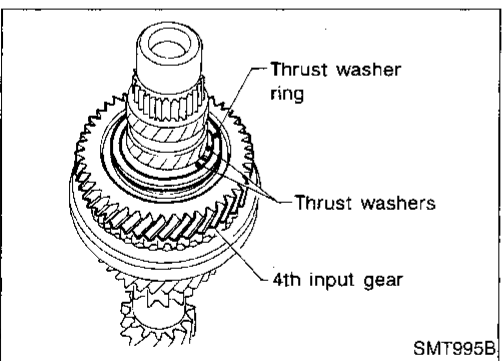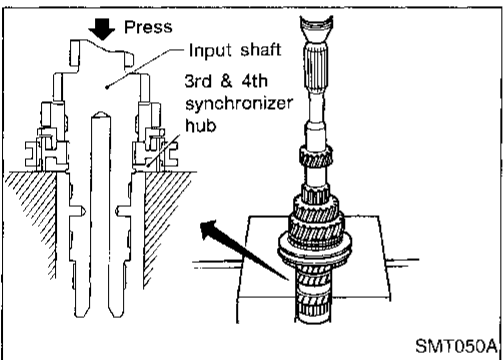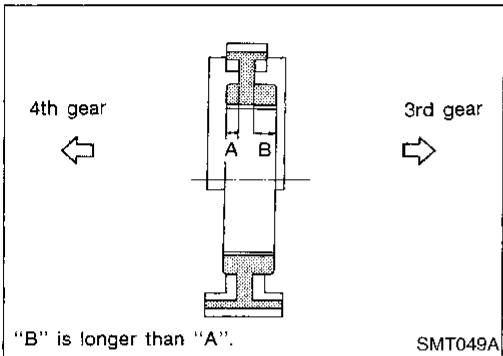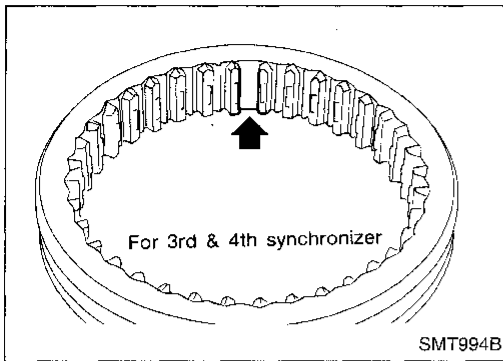

1. Place inserts in three grooves on coupling sleeve (3rd & 4th synchronizer).

2. Install 3rd input gear and 3rd baulk ring.

3. Press on 3rd & 4th synchronizer hub.

- **Pay attention to its direction.**

4. Select proper snap ring of 3rd & 4th synchronizer hub to minimize clearance of groove, and then install it.

**Allowable clearance of groove:**

**0 - 0.1 mm (0 - 0.004 in)**

**Snap ring of 3rd & 4th synchronizer hub:**

**Refer to MT-40.**

5. Install 4th input gear.

6. Select proper thrust washers to minimize clearance of groove.

Then install them and thrust washer ring.

**Allowable clearance of groove:**

**0 - 0.06 mm (0 - 0.0024 in)**

**Input shaft thrust washer:**


**Refer to MT-41.**

7. Install 5th & reverse synchronizer assembly.


- a. Hook insert springs on reverse baulk ring.

# REPAIR FOR COMPONENT PARTS


## Input Shaft and Gears (Cont'd)

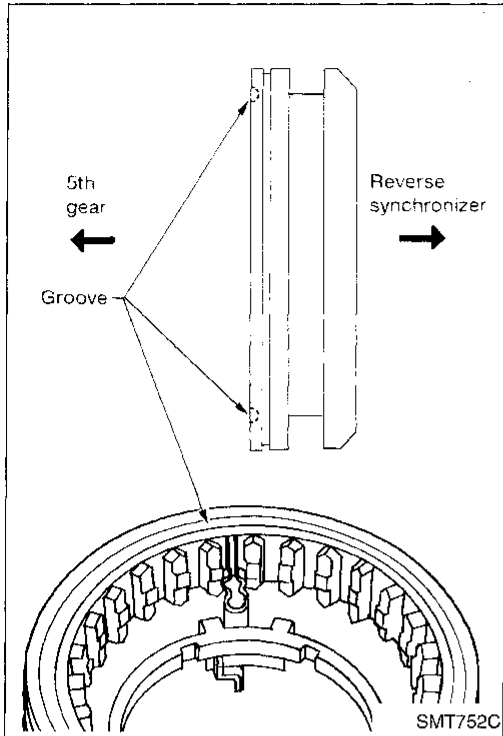


- b. Install insert springs with reverse baulk ring onto coupling sleeve.
- **Pay attention to position of insert springs.**
- c. Place 5th baulk ring on 5th input gear.
- d. Install reverse synchronizer cone on reverse baulk ring.

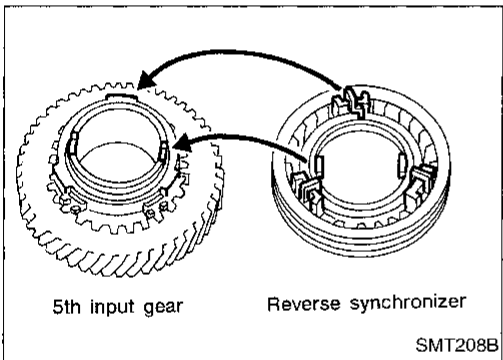

- e. Place reverse synchronizer assembly on 5th input gear.
- **Mesh recesses of 5th input gear with projections of reverse synchronizer cone.**
- **Put insert spring mounts on reverse baulk ring upon those on 5th baulk ring.**

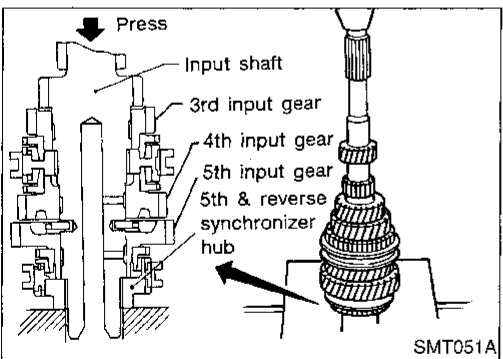


- f. Press on 5th & reverse synchronizer assembly with 5th input gear.

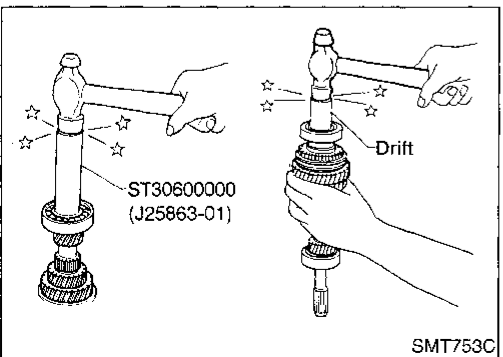

8. Install input shaft front and rear bearings with Tool.
9. Measure gear end play as the final check. Refer to MT-17.

# REPAIR FOR COMPONENT PARTS

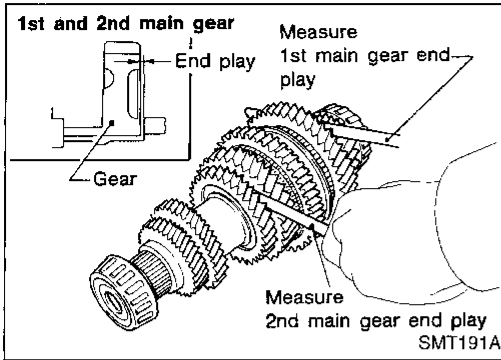

## Mainshaft and Gears


### DISASSEMBLY

1. Before disassembly, check 1st and 2nd main gear end plays.


**Gear end play:**  
Refer to SDS, MT-40.

If not within specification, disassemble and check contact surface of gear, shaft and hub. Then check clearance of snap ring groove. Refer to "ASSEMBLY", MT-24.


2. Press out mainshaft rear bearing with Tool.

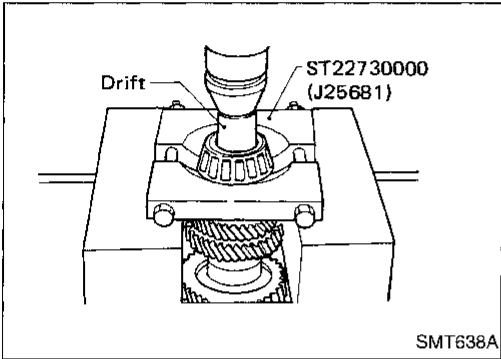


3. Remove thrust washer and snap ring.

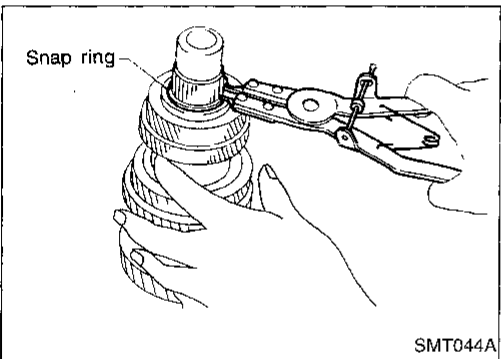

4. Press out 5th main gear and 4th main gear.

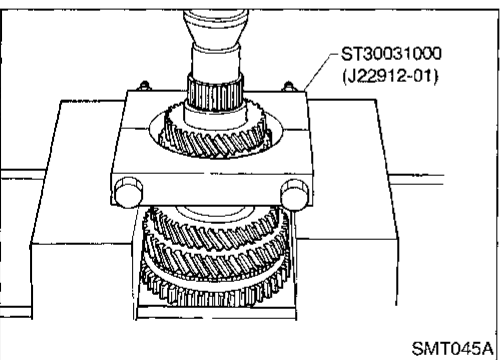


5. Press out 3rd main gear and 2nd main gear with Tool.

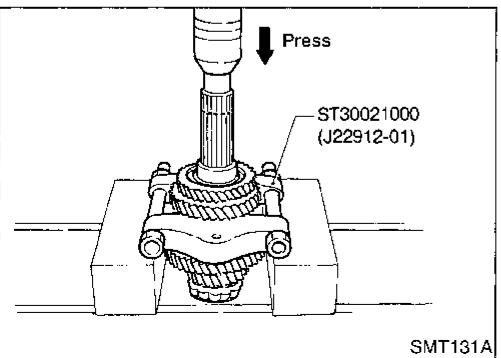


# REPAIR FOR COMPONENT PARTS

## Mainshaft and Gears (Cont'd)



6. Remove snap ring.

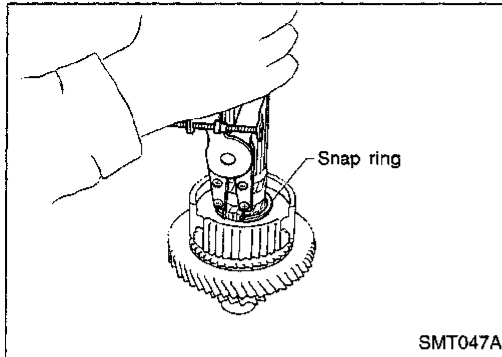

7. Remove 1st & 2nd synchronizer and 1st main gear.

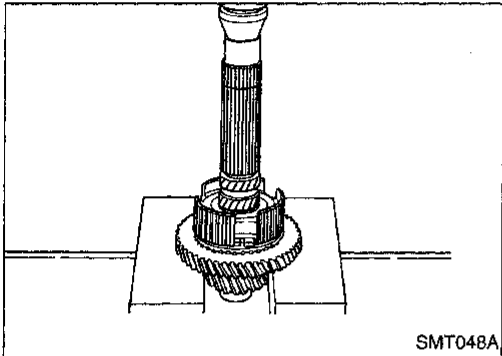

8. Remove mainshaft front bearing with Tool.

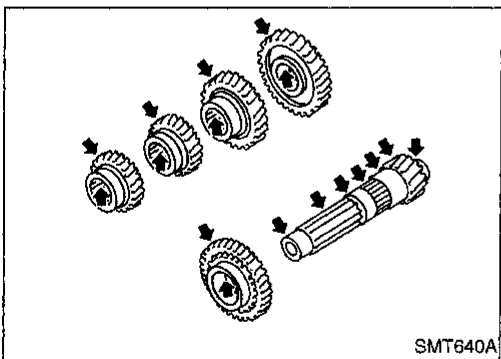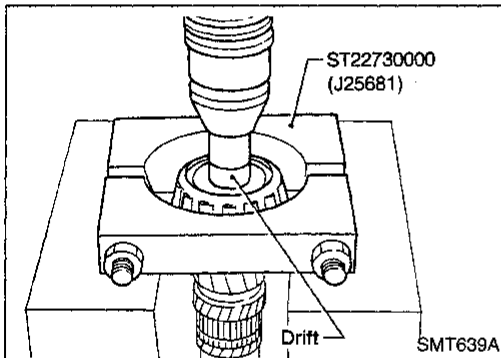


### INSPECTION

#### Gear and shaft

- Check shaft for cracks, wear or bending.
- Check gears for excessive wear, chips or cracks.

#### Synchronizer

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks.
- Check baulk rings for cracks or deformation.
- Check insert springs for deformation.

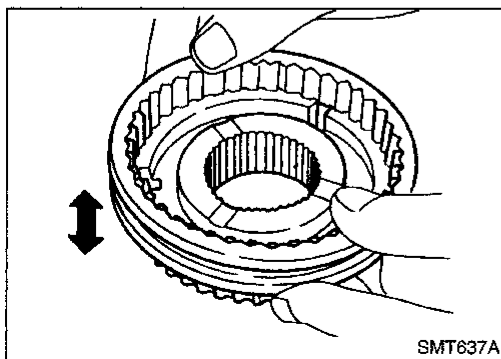

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT


HA

EL

IDX

## REPAIR FOR COMPONENT PARTS

### Mainshaft and Gears (Cont'd)

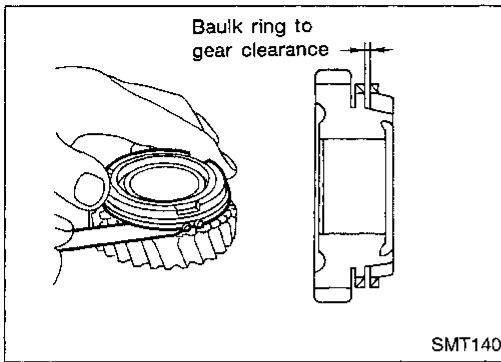

- Measure clearance between baulk ring and gear (1st).


**Clearance between baulk ring and gear:**

**Standard:**

1.0 - 1.35 mm (0.0394 - 0.0531 in)

**Wear limit:**

0.7 mm (0.028 in)

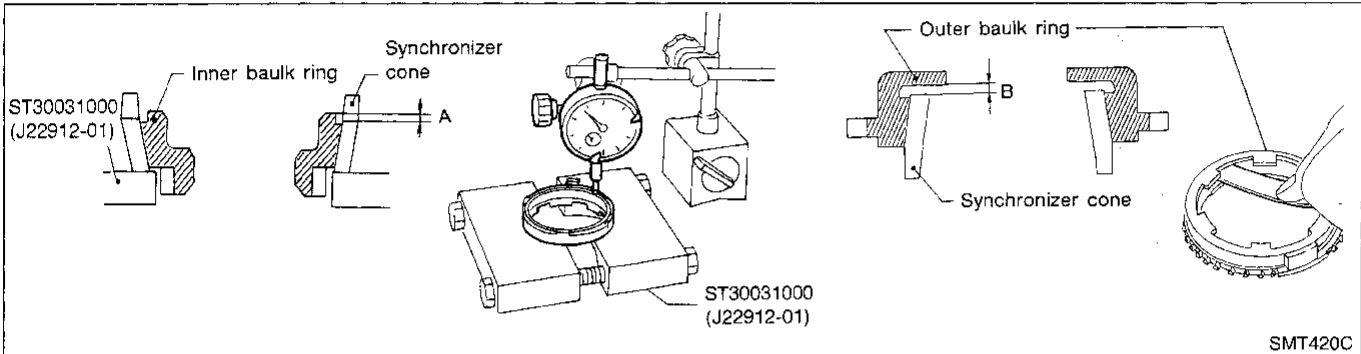

- Measure wear of 2nd baulk rings.
  - a. Place baulk rings in position on synchronizer cone.
  - b. While holding baulk ring against synchronizer cone as far as it will go, measure dimensions "A" and "B".

**Standard:**


**A 0.6 - 0.8 mm (0.024 - 0.031 in)**

**B 0.6 - 1.1 mm (0.024 - 0.043 in)**

**Wear limit:**


**0.2 mm (0.008 in)**

- c. If dimension "A" or "B" is smaller than the wear limit, replace baulk ring.

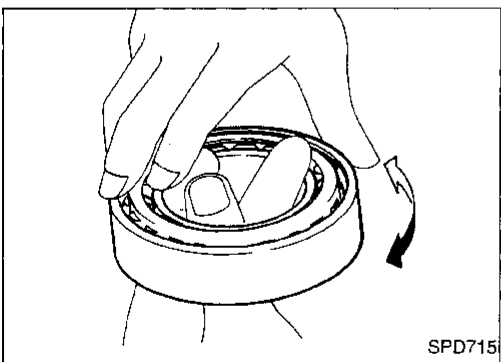

### Bearing

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing tapered roller bearing, replace outer and inner race as a set.**

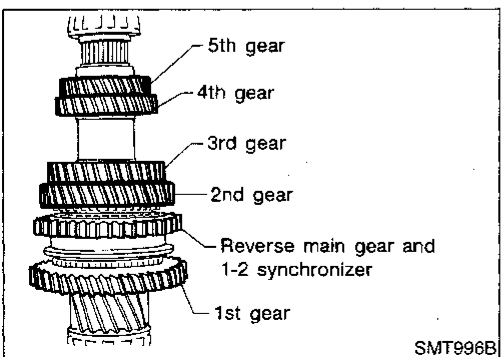


### ASSEMBLY



# REPAIR FOR COMPONENT PARTS

## Mainshaft and Gears (Cont'd)

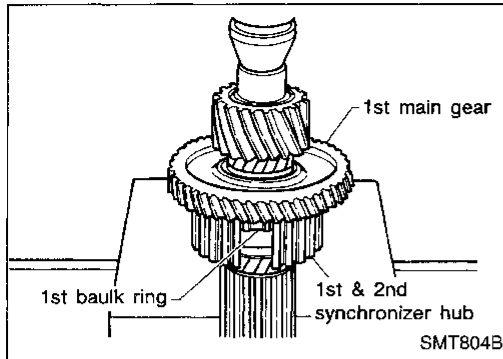

1. Press on 1st main gear, 1st baulk ring and 1st & 2nd synchronizer hub.

• Pay attention to direction of 1st & 2nd synchronizer hub.



2. Select proper snap ring of 1st & 2nd synchronizer hub to minimize clearance of groove and then install it.

**Allowable clearance of groove:**

0 - 0.1 mm (0 - 0.004 in)

**Snap ring of 1st & 2nd synchronizer hub:**


Refer to MT-40.

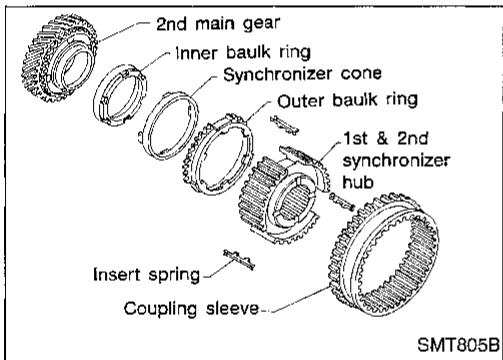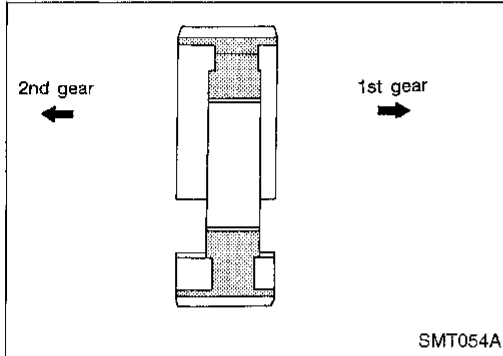

3. Install 2nd synchronizer cone, inner & outer baulk rings. Insert springs and 1st & 2nd coupling sleeve.


4. Install 2nd main gear.

• Ensure four protrusions of 2nd synchronizer cone are set in 2nd main gear holes.

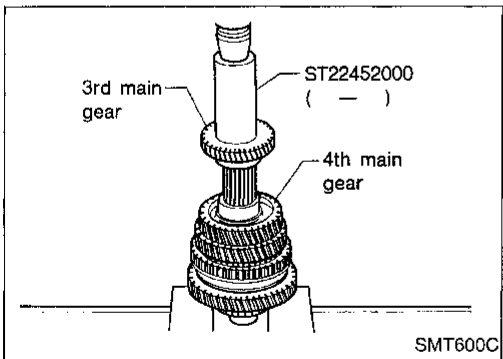

5. Press on 3rd main gear.

6. Press on 4th main gear.

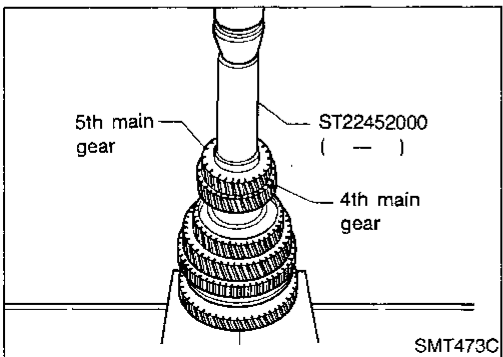

7. Press on 5th main gear.

8. Select proper snap ring of 5th main gear to minimize clearance of groove and then install it.

**Allowable clearance of groove:**

0 - 0.15 mm (0 - 0.0059 in)


**Snap ring of 5th main gear:**

Refer to MT-40.


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## REPAIR FOR COMPONENT PARTS


### Mainshaft and Gears (Cont'd)

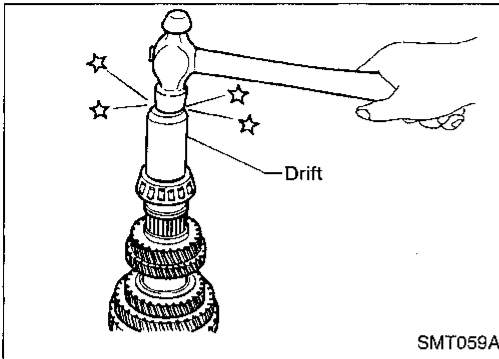

9. Press on thrust washer and press on mainshaft rear bearing.

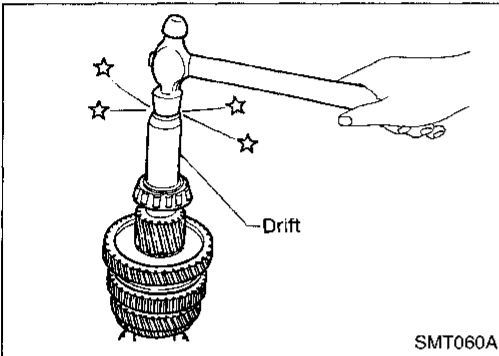


10. Press on mainshaft front bearing.
11. Measure gear end play as the final check. Refer to MT-22.

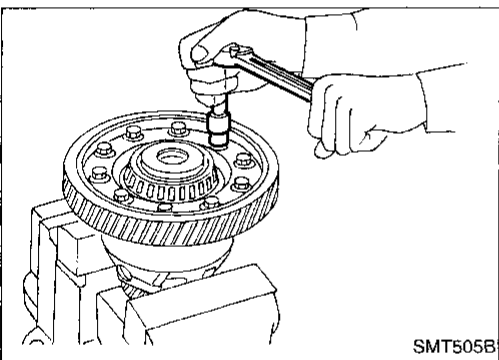


### Final Drive

#### DISASSEMBLY

1. Remove final gear.
2. Remove speedometer drive gear by cutting it.

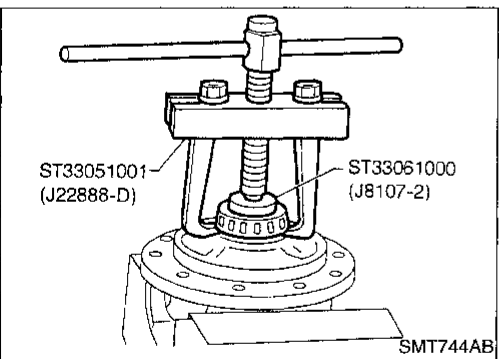


3. Press out differential side bearings with Tool.
  - Be careful not to mix up the right and left bearings.

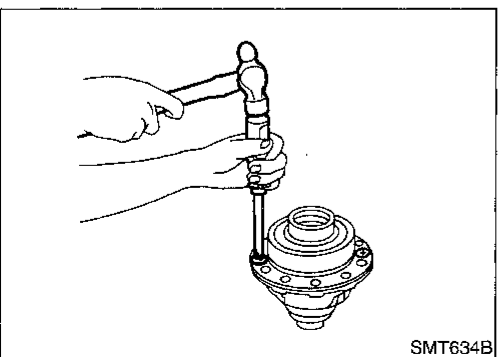


4. Remove viscous coupling. (Models with viscous coupling).

# REPAIR FOR COMPONENT PARTS

## Final Drive (Cont'd)

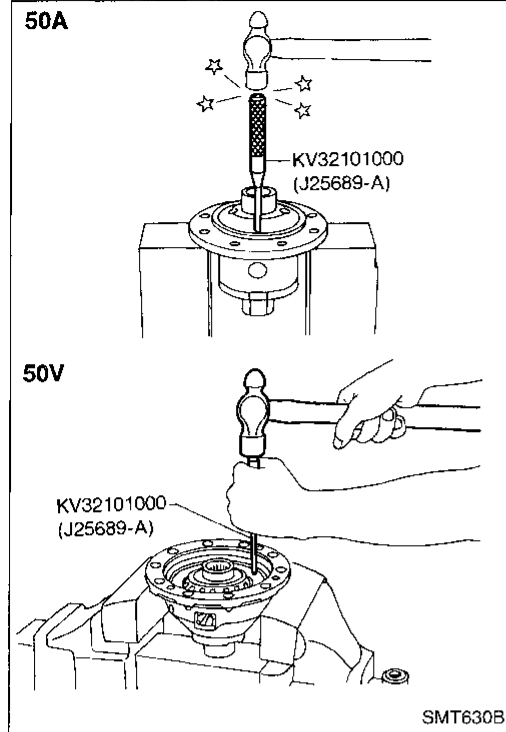


5. Drive out retaining pin and draw out pinion mate shaft.
6. Remove pinion mate gears and side gears.

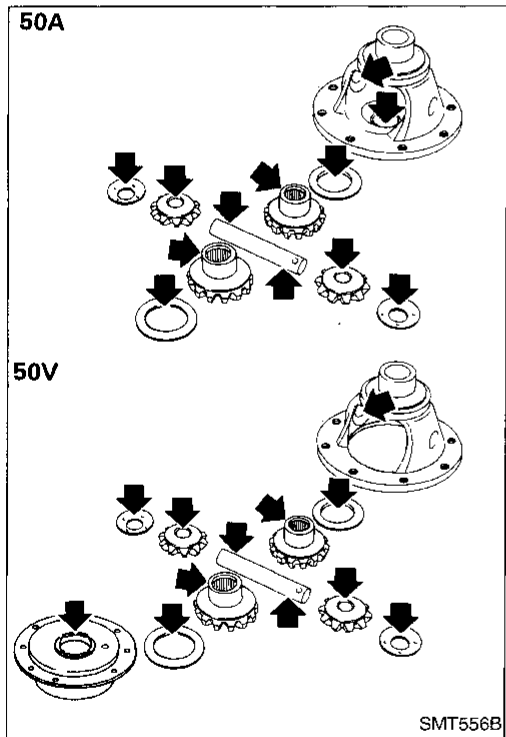

## INSPECTION

### Gear, washer, shaft and case

- Check mating surfaces of differential case, viscous coupling, side gears and pinion mate gears.
- Check washers for wear.

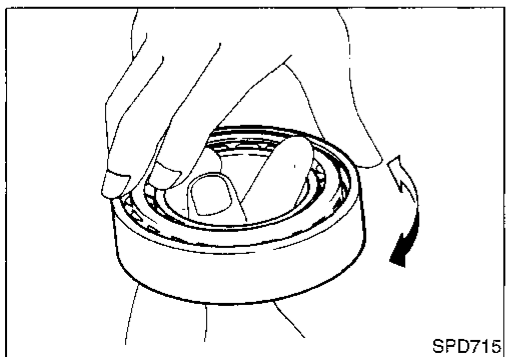

### Bearing

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing tapered roller bearing, replace outer and inner race as a set.**

GI

MA

EM

LC

EC

FE

CL

**MT**

AT

FA

RA

BR

ST

RS

BT


HA

EL

IDX


# REPAIR FOR COMPONENT PARTS

## Final Drive (Cont'd)

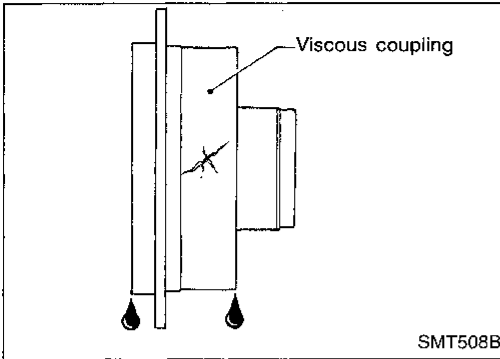


### Viscous coupling

- Check case for cracks.
- Check silicone oil for leakage.

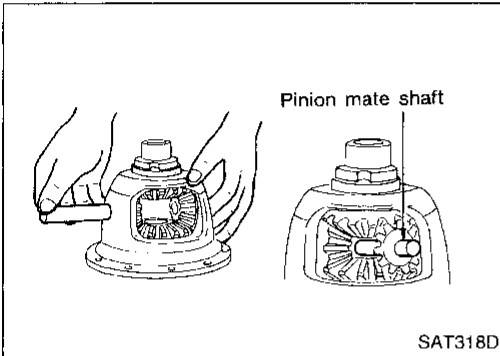

### ASSEMBLY


1. Install side gear and thrust washers in differential case.
  2. Install pinion mate gears and thrust washers in differential case while rotating them.
- **When inserting, be careful not to damage pinion mate thrust washers.**
  - **Apply ATF to any parts.**

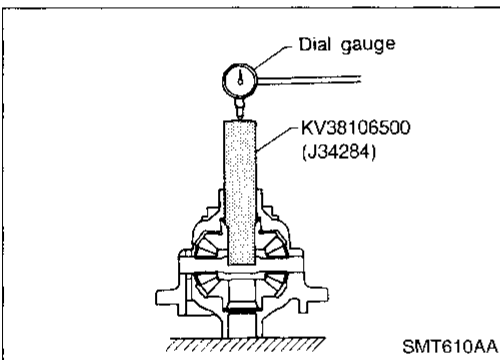

3. Measure clearance between side gear and differential case with washers following the procedure below:
  - a. Set Tool and dial indicator on side gear.
  - b. Move side gear up and down to measure dial indicator deflection. Always measure indicator deflection on both side gears.

### Clearance between side gear and differential case with washers:

**0.1 - 0.2 mm (0.004 - 0.008 in)**

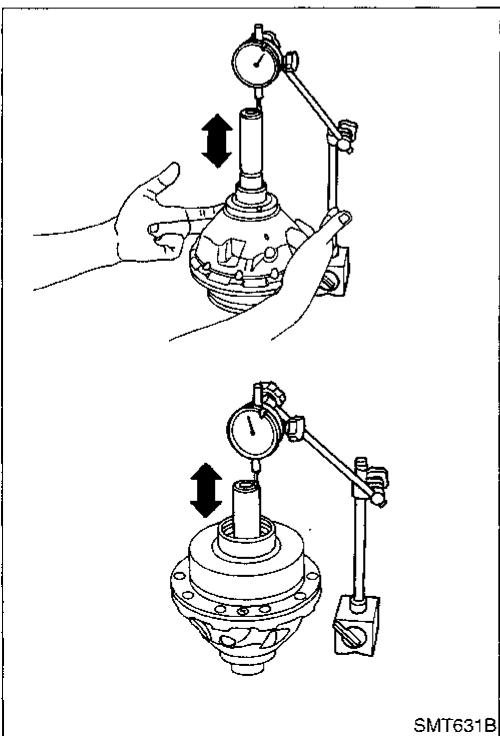


- c. If not within specification, adjust clearance by changing thickness of side gear thrust washers.

### Side gear thrust washer:

**Refer to SDS, MT-41.**


## REPAIR FOR COMPONENT PARTS

### Final Drive (Cont'd)

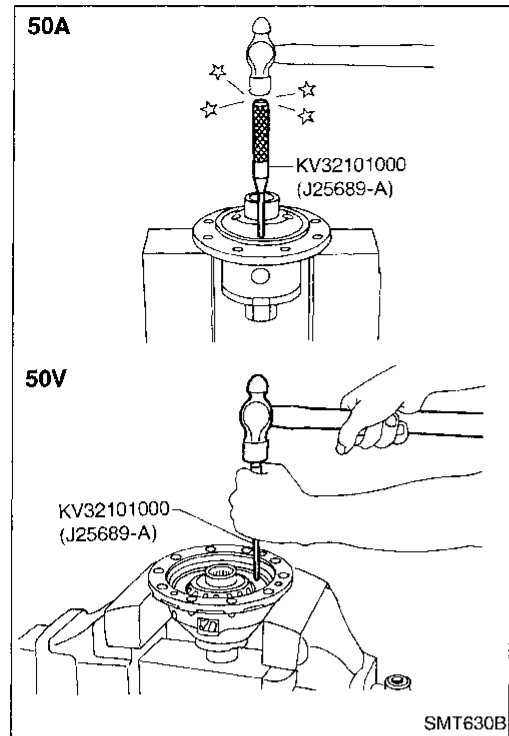


4. Install retaining pin.

- Make sure that retaining pin is flush with case.

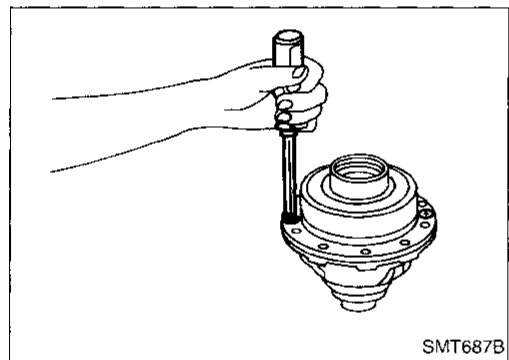


5. Install viscous coupling. (Models with viscous coupling).

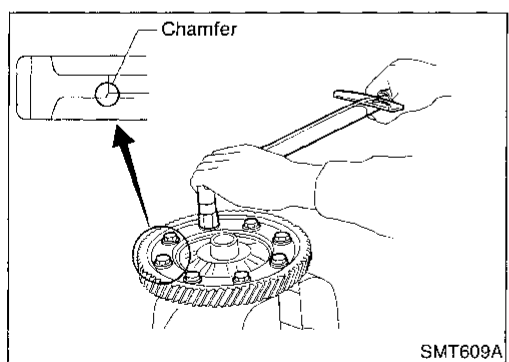

6. Install final gear.

- Apply locking sealant to final gear fixing bolts before installing.

7. Install speedometer drive gear.

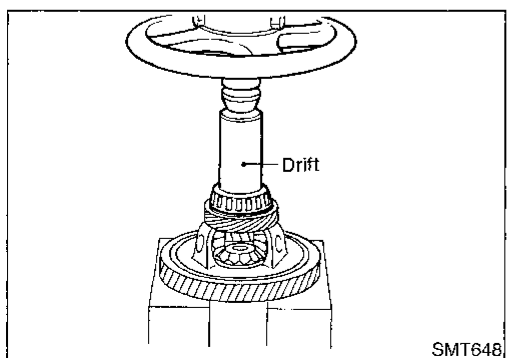

8. Press on differential side bearings.

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS


BT

HA

EL

IDX


## REPAIR FOR COMPONENT PARTS

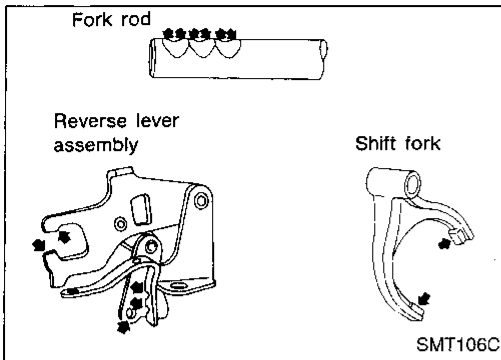

### Shift Control Components

#### INSPECTION

- Check contact surface and sliding surface for wear, scratches, projections or other damage.


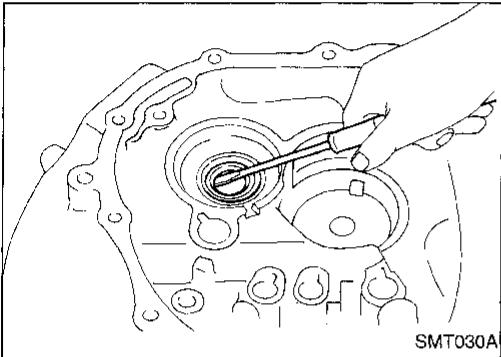


### Case Components

#### REMOVAL AND INSTALLATION

##### Input shaft oil seal

- Apply multi-purpose grease to seal lip of oil seal before installing.

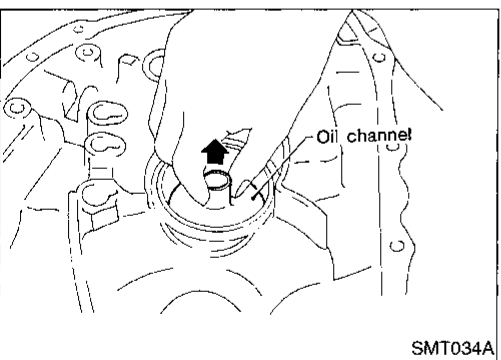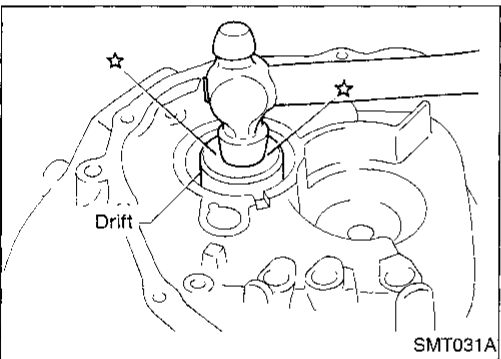

##### Mainshaft front bearing outer race

##### Mainshaft rear bearing outer race

Refer to MT-32.

##### Differential side bearing outer race

Refer to MT-31.

# ADJUSTMENT

## Input Shaft End Play and Differential Side Bearing Preload

If any of the following parts are replaced, adjust input shaft end play.

- Input shaft
- Input shaft bearing
- Clutch housing
- Transmission case

If any of the following parts are replaced, adjust differential side bearing preload.

- Differential case
- Differential side bearing
- Clutch housing
- Transmission case

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST


RS

BT


HA

EL


IDX

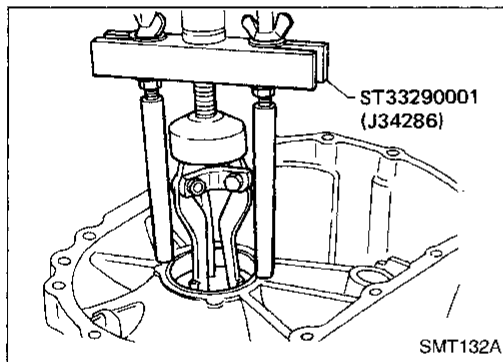

1. Remove differential side bearing outer race (transmission case side) and shim(s).

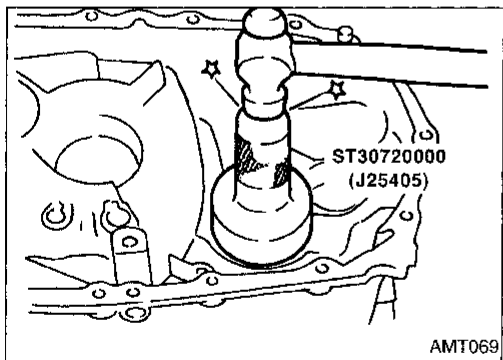





2. Install differential side bearing outer race without shim(s).
3. Install input shaft and final drive assembly on clutch housing.
4. Install transmission case without input shaft bearing shim(s).  
Tighten it to the specified torque. Refer to MT-11.

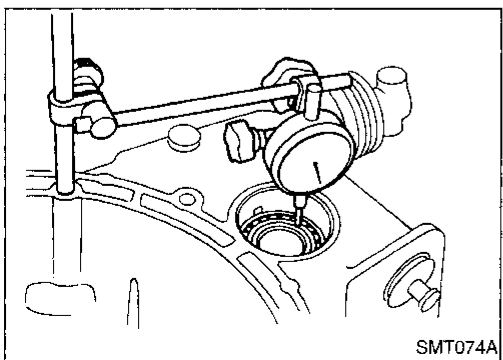

5. Using the following procedures, measure clearance between bearings and transmission case.
  - **Differential side**
    - a. Attach dial indicator. If clamp diameter of dial indicator is too small or too large, attach dial indicator using a magnetic stand.

## ADJUSTMENT

### Input Shaft End Play and Differential Side Bearing Preload (Cont'd)

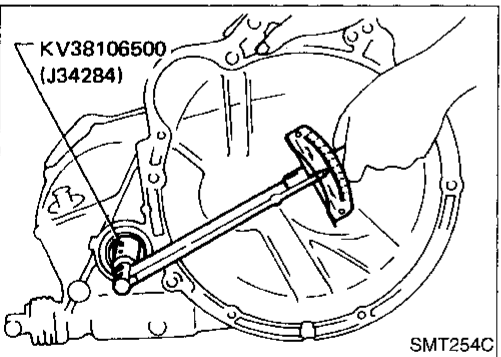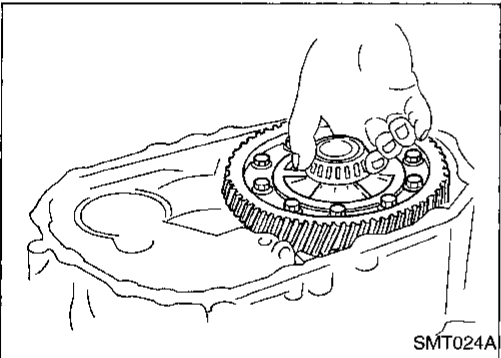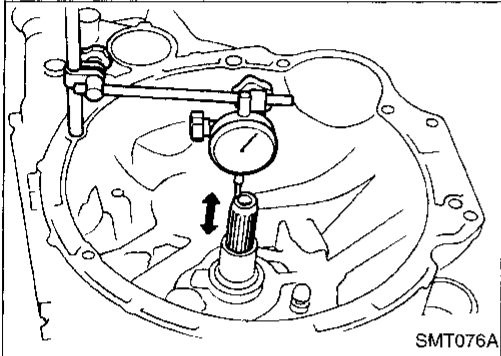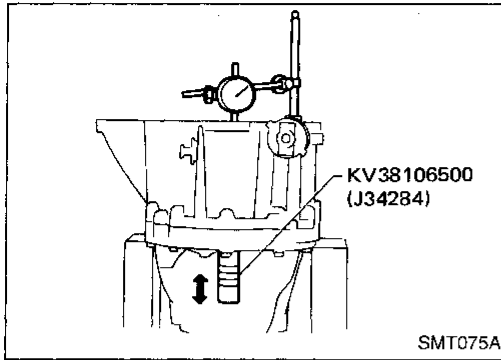

- b. Insert Tool all the way into differential side gear. Move Tool up and down and measure dial indicator deflection.

- **Input shaft side**

- a. Set dial indicator on rear end of input shaft.
- b. Move input shaft up and down and measure dial indicator deflection.
6. Select shims with proper thickness with SDS table as a guide. Refer to MT-42.
7. Install selected differential side bearing adjusting shim and differential side bearing outer race.

8. Check differential side bearing turning torque.

- a. Install final drive assembly on clutch housing.
- b. Install transmission case on clutch housing.

- **Tighten transmission case fixing bolts to the specified torque.**

- c. Measure turning torque of final drive assembly.

**Turning torque of final drive assembly  
(New bearing):**

4.9 - 7.8 N·m (50 - 80 kg-cm, 43 - 69 in-lb)

- **When old bearing is used again, turning torque will be slightly less than the above.**
- **Make sure torque is close to the specified range.**

### Mainshaft Bearing Preload






If any of the following parts are replaced, adjust mainshaft bearing preload.

- **Mainshaft**
- **Mainshaft bearings**
- **Clutch housing**
- **Transmission case**



## ADJUSTMENT

### Mainshaft Bearing Preload (Cont'd)

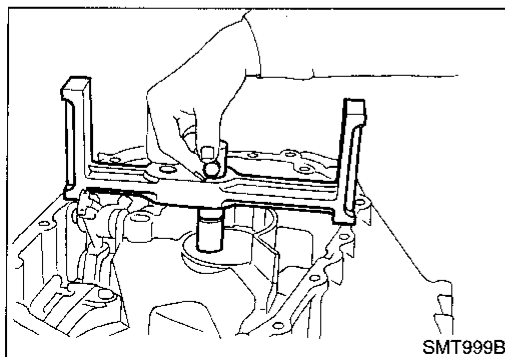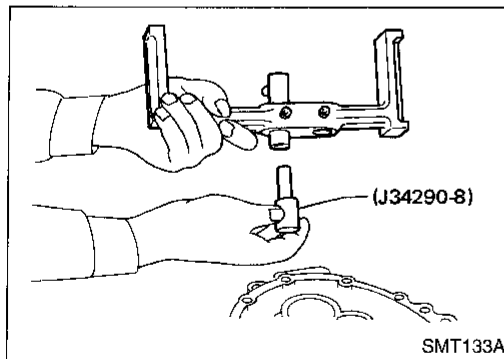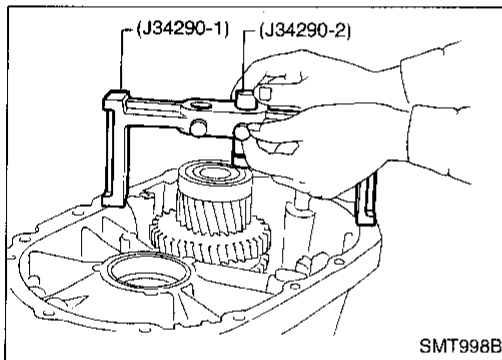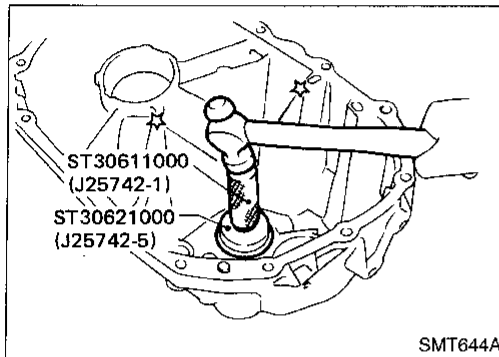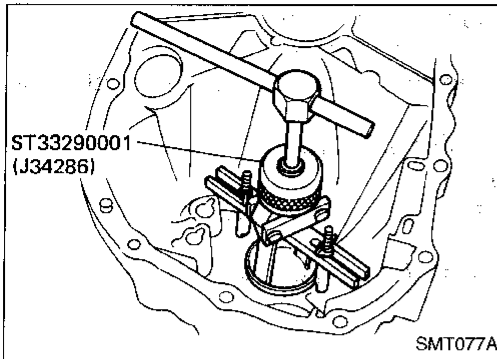

1. Remove mainshaft rear bearing outer race and shim(s).
2. Reinstall mainshaft rear bearing outer race without shims.
3. Clean mating surfaces of clutch housing and transmission case with solvent.
4. Install mainshaft and mainshaft front bearing outer race into transmission case. Turn mainshaft while holding bearing outer race so that bearings are properly seated.
5. Place Tools (bridge and gauging cylinder) onto machined surface of transmission case. Allow gauging cylinder to rest on surface of mainshaft front bearing outer race. Use proper screw in bridge to lock gauging cylinder in place.
6. Turn bridge over and place Tool (gauging plunger) into gauging cylinder.
7. Place bridge, legs up, onto machined surface of clutch housing. Allow gauging plunger to rest upon mating surface where mainshaft front bearing outer race fits.

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT


HA

EL

IDX

## ADJUSTMENT

### Mainshaft Bearing Preload (Cont'd)

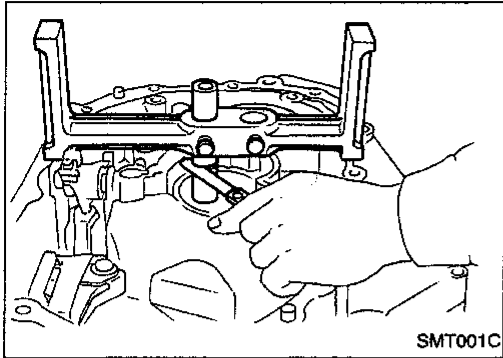


8. Measure with feeler gauge distance between gauging cylinder and shoulder of gauging plunger.
9. Use feeler gauge reading to select correct mainshaft preload shim(s).


#### Mainshaft bearing adjusting shim:

Refer to MT-41.


10. Install selected mainshaft bearing adjusting shim and mainshaft bearing outer race.
11. Check total turning torque after assembly. Refer to MT-35.

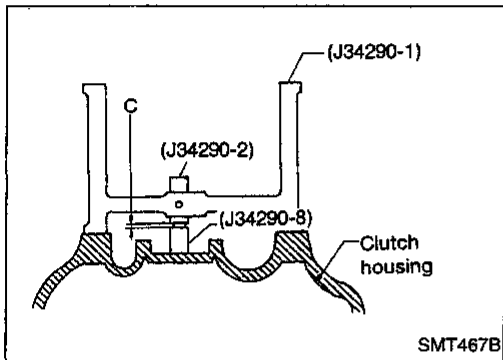


# ASSEMBLY

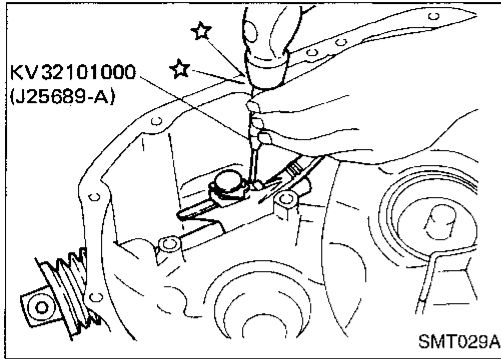


1. Install striking lever and striking rod with Tool.

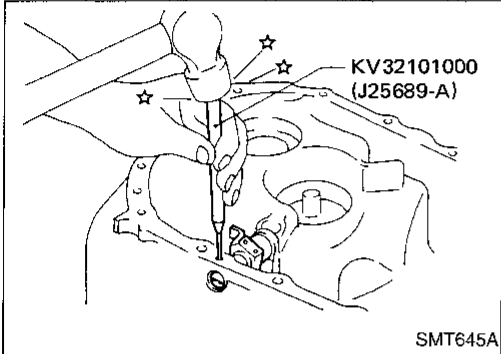


2. Install selector and retaining pin with Tool.

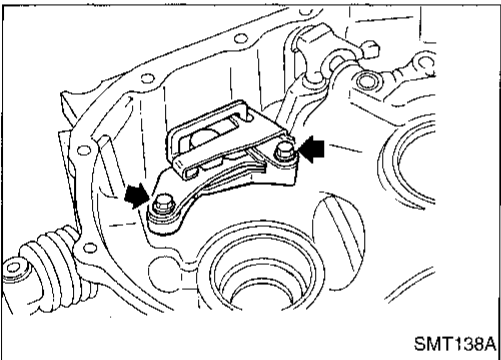

3. Install reverse gate assembly.
  - Be careful not to lose check ball.

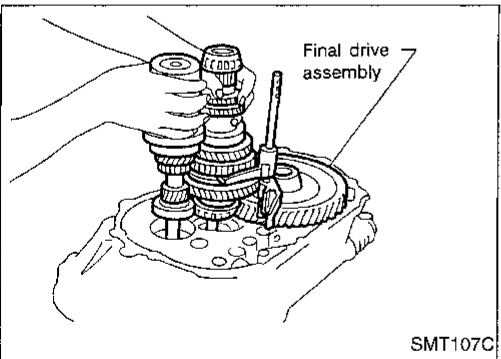

4. Install final drive assembly.
5. Install input shaft and mainshaft with 1st & 2nd shift fork assembly.
  - Be careful not to damage input shaft oil seal.

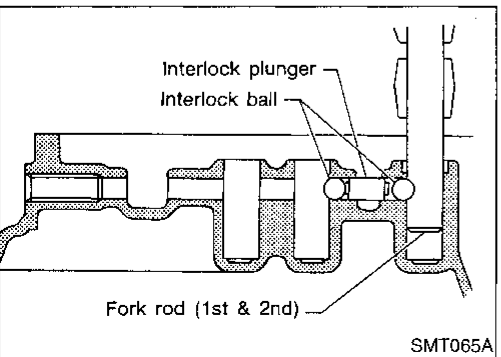

6. Install interlock balls and plunger.

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS


BT

HA



EL

IDX


# ASSEMBLY

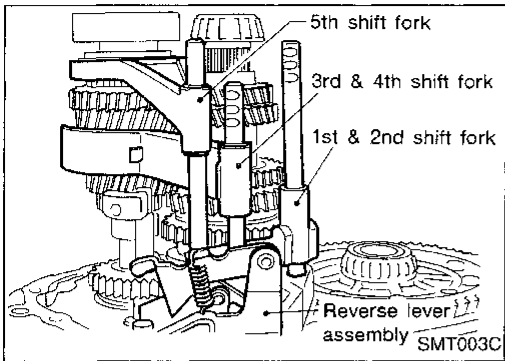


7. Install 3rd & 4th shift fork and bracket, then install 3rd & 4th shift rod, stopper ring and retaining pin.

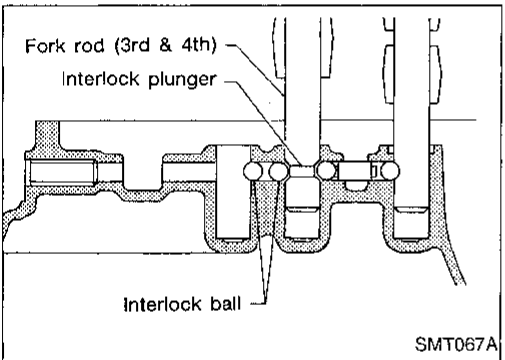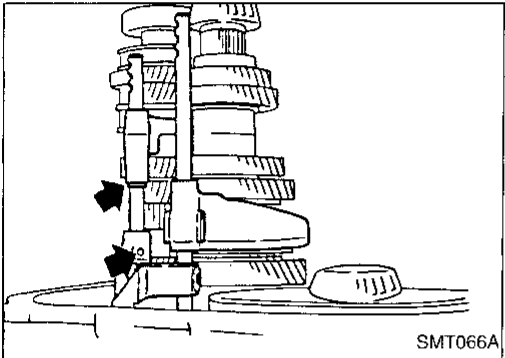

8. Install interlock balls.

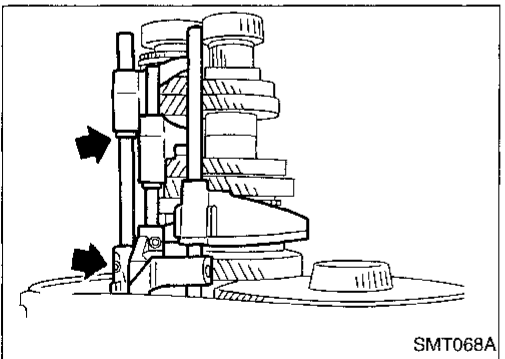


9. Install 5th shift fork and bracket, then install shift rod, stopper ring and retaining pin.

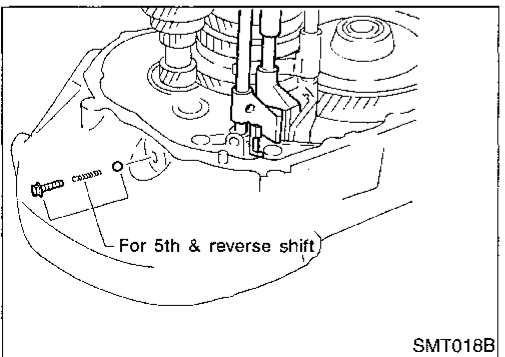


10. Install 5th & reverse check plug, spring and ball.


# ASSEMBLY

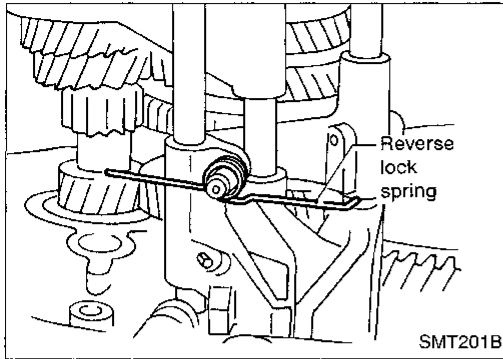


11. Install reverse lock spring on 5th & reverse bracket.
  - Pay attention to its direction.

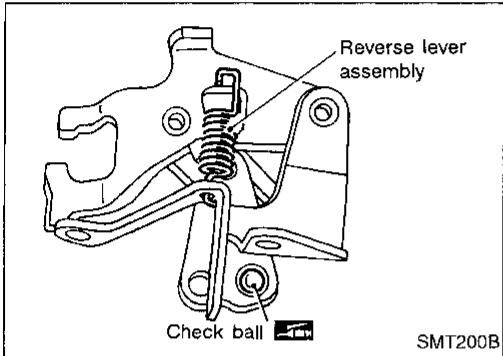


12. Install check ball and reverse lever spring on reverse lever assembly.
  - Apply multi-purpose grease to check ball.
  - Pay attention to direction of reverse lever spring.

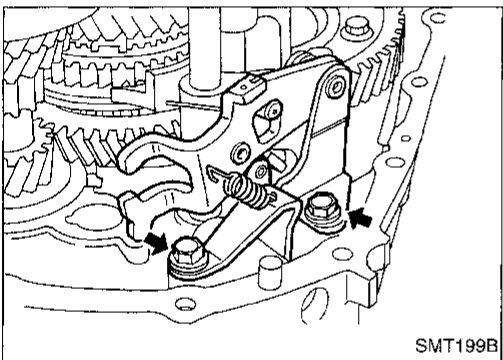

13. Install reverse lever assembly on clutch housing.

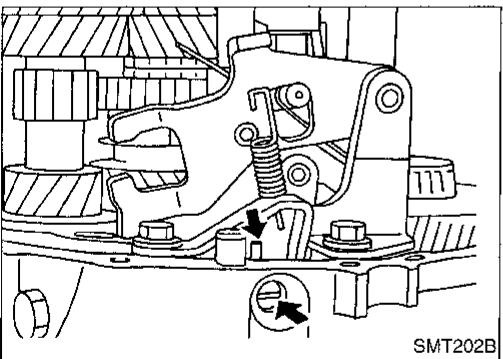

14. Install reverse arm shaft and retaining pin.

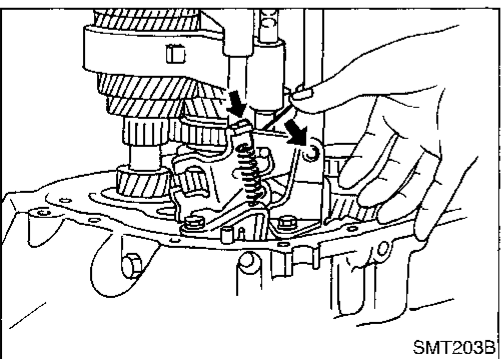

15. Hook reverse lock spring and reverse lever spring on reverse lever assembly.

GI

MA

EW

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS


BT

HA


EL

IDX


## ASSEMBLY

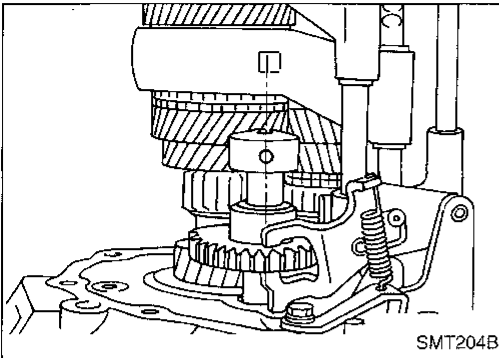


16. Mesh 4th gear, then install reverse idler gear and shaft.
  - Pay attention to direction of tapped hole.

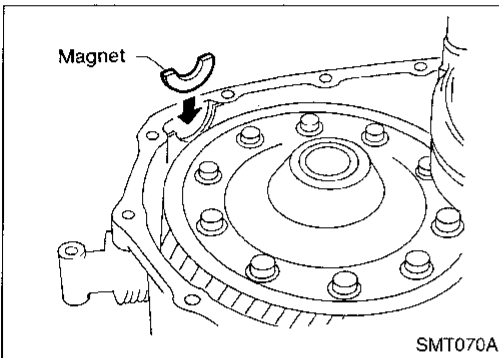


17. Place magnet on clutch housing.

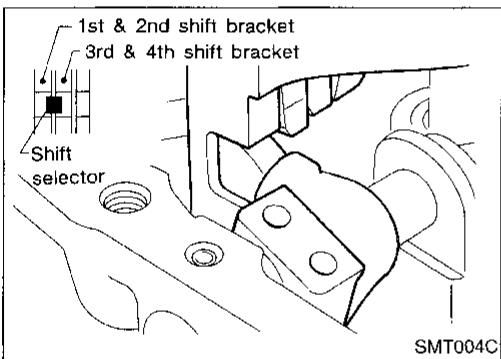

18. If bearing preload was adjusted, install selected shim(s) into transmission case.
  - To aid in installation of transmission case, place shift selector in the 1st & 2nd shift bracket or between 1st & 2nd bracket and 3rd & 4th bracket.
19. Apply an anaerobic liquid gasket Loctite P/N 51813 or equivalent to mating surface of transmission case and install it.
20. Install position switch.

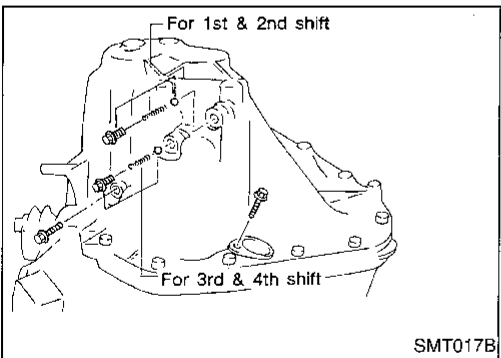

21. Apply an anaerobic liquid gasket Loctite P/N 51813 or equivalent to threads of check plugs. Install balls, springs and plugs.
22. After assembly, check that you can shift into each gear smoothly.

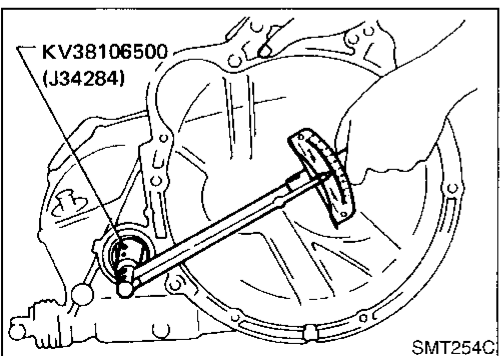


23. Measure total turning torque.
  - Total turning torque (New bearing):**  
8.8 - 21.6 N·m (90 - 220 kg·cm, 78 - 191 in·lb)
  - When old bearing is used again, preload will be slightly less than the above. Make sure torque is close to the specified range.

# SERVICE DATA AND SPECIFICATIONS (SDS)

## General Specifications

### TRANSAXLE

|                                     |                                   |                                                                                   |                                                 |                                                |
|-------------------------------------|-----------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------|------------------------------------------------|
| Engine                              |                                   | KA24DE                                                                            |                                                 |                                                |
| Transaxle model                     |                                   | RS5F50A                                                                           | RS5F50V                                         |                                                |
| Number of speeds                    |                                   | 5                                                                                 |                                                 |                                                |
| Synchronesh type                    |                                   | Warner                                                                            |                                                 |                                                |
| Shift pattern                       |                                   |  |                                                 |                                                |
| Gear ratio                          |                                   | 1st                                                                               | 3.285                                           |                                                |
|                                     |                                   | 2nd                                                                               | 1.850                                           |                                                |
|                                     |                                   | 3rd                                                                               | 1.206                                           |                                                |
|                                     |                                   | 4th                                                                               | 0.954                                           |                                                |
|                                     |                                   | 5th                                                                               | 0.740                                           |                                                |
|                                     |                                   | Rev.                                                                              | 3.428                                           |                                                |
| Number of teeth                     | Input gear                        | 1st                                                                               | 14                                              |                                                |
|                                     |                                   | 2nd                                                                               | 20                                              |                                                |
|                                     |                                   | 3rd                                                                               | 29                                              |                                                |
|                                     |                                   | 4th                                                                               | 44                                              |                                                |
|                                     |                                   | 5th                                                                               | 50                                              |                                                |
|                                     |                                   | Rev.                                                                              | 14                                              |                                                |
|                                     | Main gear                         | 1st                                                                               | 46                                              |                                                |
|                                     |                                   | 2nd                                                                               | 37                                              |                                                |
|                                     |                                   | 3rd                                                                               | 35                                              |                                                |
|                                     |                                   | 4th                                                                               | 42                                              |                                                |
|                                     |                                   | 5th                                                                               | 37                                              |                                                |
|                                     |                                   | Rev.                                                                              | 48                                              |                                                |
|                                     | Reverse idler gear                |                                                                                   | 29                                              |                                                |
|                                     | Oil capacity<br>ℓ (US pt, Imp pt) |                                                                                   | 4.5 - 4.8<br>(9-1/2 - 10-1/8,<br>7-7/8 - 8-1/2) | 4.3 - 4.5<br>(9-1/8 - 9-1/2,<br>7-5/8 - 7-7/8) |
| Double baulk ring type synchronizer |                                   | 2nd synchronizer                                                                  |                                                 |                                                |

### FINAL GEAR

|                   |         |                  |
|-------------------|---------|------------------|
| Transaxle model   | RS5F50A | RS5F50V, RS5F50A |
| Final gear ratio  | 3.650   | 3.895            |
| Number of teeth   |         |                  |
| Final gear/Pinion | 73/20   | 74/19            |
| Side gear/Pinion  | 16/10   | 16/10            |

GI  
MA  
EM  
LC  
EC  
FE  
CL  
**MT**  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# SERVICE DATA AND SPECIFICATIONS (SDS)

## Inspection and Adjustment

### GEAR END PLAY


| Gear           | End play mm (in)              |
|----------------|-------------------------------|
| 1st main gear  | 0.23 - 0.43 (0.0091 - 0.0169) |
| 2nd main gear  | 0.23 - 0.58 (0.0091 - 0.0228) |
| 3rd input gear | 0.23 - 0.43 (0.0091 - 0.0169) |
| 4th input gear | 0.25 - 0.55 (0.0098 - 0.0217) |
| 5th input gear | 0.23 - 0.48 (0.0091 - 0.0189) |

### CLEARANCE BETWEEN BAULK RING AND GEAR 1ST, 3RD, 4TH, & 5TH

Unit: mm (in)

|           | Standard                        | Wear limit  |
|-----------|---------------------------------|-------------|
| 1st       | 1.0 - 1.35<br>(0.0394 - 0.0531) | 0.7 (0.028) |
| 3rd & 4th | 1.0 - 1.35<br>(0.0394 - 0.0531) | 0.7 (0.028) |
| 5th       | 1.0 - 1.35<br>(0.0394 - 0.0531) | 0.7 (0.028) |

### REVERSE BAULK RING

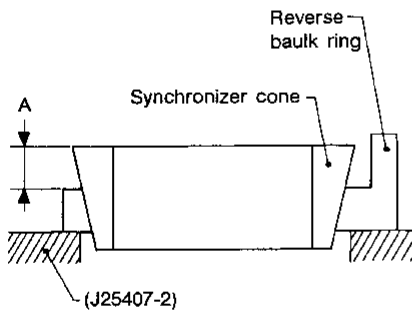


SMT581B

| Dimension | Wear limit        |
|-----------|-------------------|
| A         | 1.2 mm (0.047 in) |

### 2nd baulk ring

Unit: mm (in)

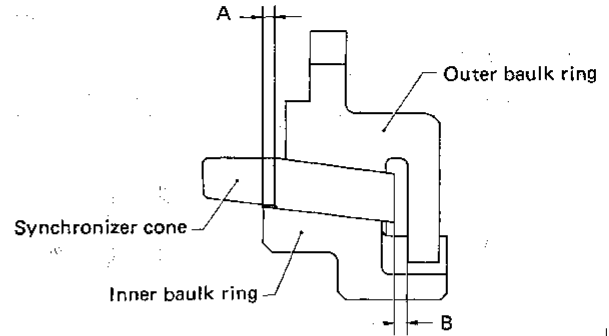

SMT806B

| Dimension | Standard                  | Wear limit  |
|-----------|---------------------------|-------------|
| A         | 0.6 - 0.8 (0.024 - 0.031) | 0.2 (0.008) |
| B         | 0.6 - 1.1 (0.024 - 0.043) |             |

### AVAILABLE SNAP RING

#### 3rd & 4th synchronizer hub (At input shaft)

| Allowable clearance | 0 - 0.1 mm (0 - 0.004 in) |
|---------------------|---------------------------|
| Thickness mm (in)   | Part number               |
| 1.95 (0.0768)       | 32269-03E03               |
| 2.00 (0.0787)       | 32269-03E00               |
| 2.05 (0.0807)       | 32269-03E01               |
| 2.10 (0.0827)       | 32269-03E02               |

#### 1st & 2nd synchronizer hub

| Allowable clearance | 0 - 0.1 mm (0 - 0.004 in) |
|---------------------|---------------------------|
| Thickness mm (in)   | Part number               |
| 1.95 (0.0768)       | 32269-03E03               |
| 2.00 (0.0787)       | 32269-03E00               |
| 2.05 (0.0807)       | 32269-03E01               |
| 2.10 (0.0827)       | 32269-03E02               |

#### 5th main gear

| Allowable clearance | 0 - 0.15 mm (0 - 0.0059 in) |
|---------------------|-----------------------------|
| Thickness mm (in)   | Part number                 |
| 1.95 (0.0768)       | 32348-05E00                 |
| 2.05 (0.0807)       | 32348-05E01                 |
| 2.15 (0.0846)       | 32348-05E02                 |
| 2.55 (0.1004)       | 32348-05E03                 |



# SERVICE DATA AND SPECIFICATIONS (SDS)

## Inspection and Adjustment (Cont'd)

### AVAILABLE WASHER

#### Input shaft thrust washer

| Allowable clearance |             | 0 - 0.06 mm (0 - 0.0024 in) |
|---------------------|-------------|-----------------------------|
| Thickness mm (in)   | Part number |                             |
| 4.500 (0.1772)      | 32278-03E01 |                             |
| 4.525 (0.1781)      | 32278-03E02 |                             |
| 4.550 (0.1791)      | 32278-03E03 |                             |
| 4.575 (0.1801)      | 32278-03E04 |                             |

#### Differential side gear thrust washer — RS5F50A

| Allowable clearance between side gear and differential case with washer |             | 0.1 - 0.2 mm (0.004 - 0.008 in) |
|-------------------------------------------------------------------------|-------------|---------------------------------|
| Thickness mm (in)                                                       | Part number |                                 |
| 0.75 (0.0295)                                                           | 38424-E3020 |                                 |
| 0.80 (0.0315)                                                           | 38424-E3021 |                                 |
| 0.85 (0.0335)                                                           | 38424-E3022 |                                 |
| 0.90 (0.0354)                                                           | 38424-E3023 |                                 |

#### Differential side gear thrust washer — RS5F50V

| Allowable clearance between side gear and (differential case or viscous coupling) with washer |                               | 0.1 - 0.2 mm (0.004 - 0.008 in) |
|-----------------------------------------------------------------------------------------------|-------------------------------|---------------------------------|
|                                                                                               | Thickness mm (in)             | Part number                     |
| Differential case side                                                                        | 0.75 - 0.80 (0.0295 - 0.0315) | 38424-E3000                     |
|                                                                                               | 0.80 - 0.85 (0.0315 - 0.0335) | 38424-E3001                     |
|                                                                                               | 0.85 - 0.90 (0.0335 - 0.0354) | 38424-E3002                     |
|                                                                                               | 0.90 - 0.95 (0.0354 - 0.0374) | 38424-E3003                     |
| Viscous coupling side                                                                         | 0.43 - 0.45 (0.0169 - 0.0177) | 38424-51E10                     |
|                                                                                               | 0.52 - 0.54 (0.0205 - 0.0213) | 38424-51E11                     |
|                                                                                               | 0.61 - 0.63 (0.0240 - 0.0248) | 38424-51E12                     |
|                                                                                               | 0.70 - 0.72 (0.0276 - 0.0283) | 38424-51E13                     |
|                                                                                               | 0.79 - 0.81 (0.0311 - 0.0319) | 38424-51E14                     |

### AVAILABLE SHIM

#### — INPUT SHAFT END PLAY AND MAINSHAFT AND DIFFERENTIAL SIDE BEARING PRELOAD AND ADJUSTING SHIM

#### Bearing preload and end play

|                                   | Unit: mm (in)                 |
|-----------------------------------|-------------------------------|
| Mainshaft bearing preload         | 0.06 - 0.11 (0.0024 - 0.0043) |
| Input shaft end play              | 0 - 0.05 (0 - 0.0020)         |
| Differential side bearing preload | 0.40 - 0.45 (0.0157 - 0.0177) |

#### Turning torque (New bearing)

|                  | Unit: N·m (kg·cm, in·lb)        |
|------------------|---------------------------------|
| Final drive only | 4.9 - 7.8 (50 - 80, 43 - 69)    |
| Total            | 8.8 - 21.6 (90 - 220, 78 - 191) |

#### Mainshaft bearing adjusting shim

| Thickness mm (in) | Part number |
|-------------------|-------------|
| 0.40 (0.0157)     | 32139-03E11 |
| 0.44 (0.0173)     | 32139-03E00 |
| 0.48 (0.0189)     | 32139-03E01 |
| 0.52 (0.0205)     | 32139-03E12 |
| 0.56 (0.0220)     | 32139-03E02 |
| 0.60 (0.0236)     | 32139-03E03 |
| 0.64 (0.0252)     | 32139-03E04 |
| 0.68 (0.0268)     | 32139-03E05 |
| 0.72 (0.0283)     | 32139-03E06 |
| 0.76 (0.0299)     | 32139-03E07 |
| 0.80 (0.0315)     | 32139-03E08 |
| 1.20 (0.0472)     | 32139-03E13 |


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

# SERVICE DATA AND SPECIFICATIONS (SDS)

## Inspection and Adjustment (Cont'd)

**Table for selecting mainshaft adjusting shim(s)**

Unit: mm (in)

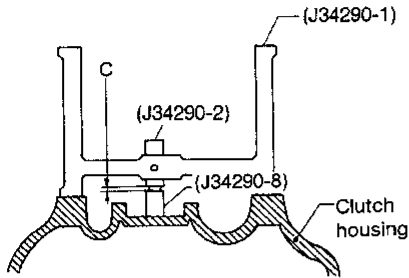

SMT467B

| Dimension "C"                 | Suitable shim(s)              |
|-------------------------------|-------------------------------|
| 0.30 - 0.34 (0.0118 - 0.0134) | 0.40 (0.0157)                 |
| 0.34 - 0.38 (0.0134 - 0.0150) | 0.44 (0.0173)                 |
| 0.38 - 0.42 (0.0150 - 0.0165) | 0.48 (0.0189)                 |
| 0.42 - 0.46 (0.0165 - 0.0181) | 0.52 (0.0205)                 |
| 0.46 - 0.50 (0.0181 - 0.0197) | 0.56 (0.0220)                 |
| 0.50 - 0.54 (0.0197 - 0.0213) | 0.60 (0.0236)                 |
| 0.54 - 0.58 (0.0213 - 0.0228) | 0.64 (0.0252)                 |
| 0.58 - 0.62 (0.0228 - 0.0244) | 0.68 (0.0268)                 |
| 0.62 - 0.66 (0.0244 - 0.0260) | 0.72 (0.0283)                 |
| 0.66 - 0.70 (0.0260 - 0.0276) | 0.76 (0.0299)                 |
| 0.70 - 0.74 (0.0276 - 0.0291) | 0.80 (0.0315)                 |
| 0.74 - 0.78 (0.0291 - 0.0307) | 0.40 + 0.44 (0.0157 + 0.0173) |
| 0.78 - 0.82 (0.0307 - 0.0323) | 0.44 + 0.44 (0.0173 + 0.0173) |
| 0.82 - 0.86 (0.0323 - 0.0339) | 0.44 + 0.48 (0.0173 + 0.0189) |
| 0.86 - 0.90 (0.0339 - 0.0354) | 0.48 + 0.48 (0.0189 + 0.0189) |
| 0.90 - 0.94 (0.0354 - 0.0370) | 0.48 + 0.52 (0.0189 + 0.0205) |
| 0.94 - 0.98 (0.0370 - 0.0386) | 0.52 + 0.52 (0.0205 + 0.0205) |
| 0.98 - 1.02 (0.0386 - 0.0402) | 0.52 + 0.56 (0.0205 + 0.0220) |
| 1.02 - 1.06 (0.0402 - 0.0417) | 0.56 + 0.56 (0.0220 + 0.0220) |
| 1.06 - 1.10 (0.0417 - 0.0433) | 0.56 + 0.60 (0.0220 + 0.0236) |
| 1.10 - 1.14 (0.0433 - 0.0449) | 0.60 + 0.60 (0.0236 + 0.0236) |
| 1.14 - 1.18 (0.0449 - 0.0465) | 0.60 + 0.64 (0.0236 + 0.0252) |
| 1.18 - 1.22 (0.0465 - 0.0480) | 0.64 + 0.64 (0.0252 + 0.0252) |
| 1.22 - 1.26 (0.0480 - 0.0496) | 0.64 + 0.68 (0.0252 + 0.0268) |
| 1.26 - 1.30 (0.0496 - 0.0512) | 0.68 + 0.68 (0.0268 + 0.0268) |
| 1.30 - 1.34 (0.0512 - 0.0528) | 0.68 + 0.72 (0.0268 + 0.0283) |
| 1.34 - 1.38 (0.0528 - 0.0543) | 0.72 + 0.72 (0.0283 + 0.0283) |
| 1.38 - 1.42 (0.0543 - 0.0559) | 0.72 + 0.76 (0.0283 + 0.0299) |
| 1.42 - 1.46 (0.0559 - 0.0575) | 0.76 + 0.76 (0.0299 + 0.0299) |
| 1.46 - 1.50 (0.0575 - 0.0591) | 0.76 + 0.80 (0.0299 + 0.0315) |

**Input shaft bearing adjusting shim**

| Thickness mm (in) | Part number |
|-------------------|-------------|
| 0.40 (0.0157)     | 32225-08E00 |
| 0.44 (0.0173)     | 32225-08E01 |
| 0.48 (0.0189)     | 32225-08E02 |
| 0.52 (0.0205)     | 32225-08E03 |
| 0.56 (0.0220)     | 32225-08E04 |
| 0.60 (0.0236)     | 32225-08E05 |
| 0.64 (0.0252)     | 32225-08E06 |
| 0.68 (0.0268)     | 32225-08E07 |
| 0.72 (0.0283)     | 32225-08E08 |
| 0.76 (0.0299)     | 32225-08E09 |
| 0.80 (0.0315)     | 32225-08E10 |
| 1.20 (0.0472)     | 32225-08E11 |

**Table for selecting input shaft bearing adjusting shim(s)**

Unit: mm (in)

| Dial indicator deflection     | Suitable shim(s)              |
|-------------------------------|-------------------------------|
| 0.65 - 0.69 (0.0256 - 0.0272) | 0.64 (0.0252)                 |
| 0.69 - 0.73 (0.0272 - 0.0287) | 0.68 (0.0268)                 |
| 0.73 - 0.77 (0.0287 - 0.0303) | 0.72 (0.0283)                 |
| 0.77 - 0.81 (0.0303 - 0.0319) | 0.76 (0.0299)                 |
| 0.81 - 0.85 (0.0319 - 0.0335) | 0.80 (0.0315)                 |
| 0.85 - 0.89 (0.0335 - 0.0350) | 0.40 + 0.44 (0.0157 + 0.0173) |
| 0.89 - 0.93 (0.0350 - 0.0366) | 0.44 + 0.44 (0.0173 + 0.0173) |
| 0.93 - 0.97 (0.0366 - 0.0382) | 0.44 + 0.48 (0.0173 + 0.0189) |
| 0.97 - 1.01 (0.0382 - 0.0398) | 0.48 + 0.48 (0.0189 + 0.0189) |
| 1.01 - 1.05 (0.0398 - 0.0413) | 0.48 + 0.52 (0.0189 + 0.0205) |
| 1.05 - 1.09 (0.0413 - 0.0429) | 0.52 + 0.52 (0.0205 + 0.0205) |
| 1.09 - 1.13 (0.0429 - 0.0445) | 0.52 + 0.56 (0.0205 + 0.0220) |
| 1.13 - 1.17 (0.0445 - 0.0461) | 0.56 + 0.56 (0.0220 + 0.0220) |
| 1.17 - 1.21 (0.0461 - 0.0476) | 0.56 + 0.60 (0.0220 + 0.0236) |
| 1.21 - 1.25 (0.0476 - 0.0492) | 0.60 + 0.60 (0.0236 + 0.0236) |
| 1.25 - 1.29 (0.0492 - 0.0508) | 0.60 + 0.64 (0.0236 + 0.0252) |
| 1.29 - 1.33 (0.0508 - 0.0524) | 0.64 + 0.64 (0.0252 + 0.0252) |
| 1.33 - 1.37 (0.0524 - 0.0539) | 0.64 + 0.68 (0.0252 + 0.0268) |
| 1.37 - 1.41 (0.0539 - 0.0555) | 0.68 + 0.68 (0.0268 + 0.0268) |
| 1.41 - 1.45 (0.0555 - 0.0571) | 0.68 + 0.72 (0.0268 + 0.0283) |
| 1.45 - 1.49 (0.0571 - 0.0587) | 0.72 + 0.72 (0.0283 + 0.0283) |
| 1.49 - 1.53 (0.0587 - 0.0602) | 0.72 + 0.76 (0.0283 + 0.0299) |
| 1.53 - 1.57 (0.0602 - 0.0618) | 0.76 + 0.76 (0.0299 + 0.0299) |
| 1.57 - 1.61 (0.0618 - 0.0634) | 0.76 + 0.80 (0.0299 + 0.0315) |
| 1.61 - 1.65 (0.0634 - 0.0650) | 0.80 + 0.80 (0.0315 + 0.0315) |
| 1.65 - 1.69 (0.0650 - 0.0665) | 0.44 + 1.20 (0.0173 + 0.0472) |

# SERVICE DATA AND SPECIFICATIONS (SDS)

## Inspection and Adjustment (Cont'd)

### Differential side bearing adjusting shim — RS5F50A

| Thickness mm (in) | Part number |
|-------------------|-------------|
| 0.40 (0.0157)     | 38453-96E00 |
| 0.44 (0.0173)     | 38453-96E01 |
| 0.48 (0.0189)     | 38453-96E02 |
| 0.52 (0.0205)     | 38453-96E03 |
| 0.56 (0.0220)     | 38453-96E04 |
| 0.60 (0.0236)     | 38453-96E05 |
| 0.64 (0.0252)     | 38453-96E06 |
| 0.68 (0.0268)     | 38453-96E07 |
| 0.72 (0.0283)     | 38453-96E08 |
| 0.76 (0.0299)     | 38453-96E09 |
| 0.80 (0.0315)     | 38453-96E10 |
| 0.84 (0.0331)     | 38453-96E11 |
| 0.88 (0.0346)     | 38453-96E12 |
| 1.20 (0.0472)     | 38453-96E13 |

### Differential side bearing adjusting shim — RS5F50V

| Thickness mm (in) | Part number |
|-------------------|-------------|
| 0.36 (0.0142)     | 38753-56E00 |
| 0.40 (0.0157)     | 38753-56E01 |
| 0.44 (0.0173)     | 38753-56E02 |
| 0.48 (0.0189)     | 38753-56E03 |
| 0.52 (0.0205)     | 38753-56E04 |
| 0.56 (0.0220)     | 38753-56E05 |
| 0.60 (0.0236)     | 38753-56E06 |
| 0.64 (0.0252)     | 38753-56E07 |
| 0.68 (0.0268)     | 38753-56E08 |
| 0.72 (0.0283)     | 38753-56E09 |
| 0.76 (0.0299)     | 38753-56E10 |
| 0.80 (0.0315)     | 38753-56E11 |
| 0.84 (0.0331)     | 38753-56E12 |
| 0.88 (0.0346)     | 38753-56E13 |
| 0.92 (0.0362)     | 38753-56E14 |

### Table for selecting differential side bearing adjusting shim(s) — RS5F50A

Unit: mm (in)

| Dial indicator deflection     | Suitable shim(s)              |
|-------------------------------|-------------------------------|
| 0.47 - 0.51 (0.0185 - 0.0201) | 0.44 + 0.48 (0.0173 + 0.0189) |
| 0.51 - 0.55 (0.0201 - 0.0217) | 0.48 + 0.48 (0.0189 + 0.0189) |
| 0.55 - 0.59 (0.0217 - 0.0232) | 0.48 + 0.52 (0.0189 + 0.0205) |
| 0.59 - 0.63 (0.0232 - 0.0248) | 0.52 + 0.52 (0.0205 + 0.0205) |
| 0.63 - 0.67 (0.0248 - 0.0264) | 0.52 + 0.56 (0.0205 + 0.0220) |
| 0.67 - 0.71 (0.0264 - 0.0280) | 0.56 + 0.56 (0.0220 + 0.0220) |
| 0.71 - 0.75 (0.0280 - 0.0295) | 0.56 + 0.60 (0.0220 + 0.0236) |
| 0.75 - 0.79 (0.0295 - 0.0311) | 0.60 + 0.60 (0.0236 + 0.0236) |
| 0.79 - 0.83 (0.0311 - 0.0327) | 0.60 + 0.64 (0.0236 + 0.0252) |
| 0.83 - 0.87 (0.0327 - 0.0343) | 0.64 + 0.64 (0.0252 + 0.0252) |
| 0.87 - 0.91 (0.0343 - 0.0358) | 0.64 + 0.68 (0.0252 + 0.0268) |
| 0.91 - 0.95 (0.0358 - 0.0374) | 0.68 + 0.68 (0.0268 + 0.0268) |
| 0.95 - 0.99 (0.0374 - 0.0390) | 0.68 + 0.72 (0.0268 + 0.0283) |
| 0.99 - 1.03 (0.0390 - 0.0406) | 0.72 + 0.72 (0.0283 + 0.0283) |
| 1.03 - 1.07 (0.0406 - 0.0421) | 0.72 + 0.76 (0.0283 + 0.0299) |
| 1.07 - 1.11 (0.0421 - 0.0437) | 0.76 + 0.76 (0.0299 + 0.0299) |
| 1.11 - 1.15 (0.0437 - 0.0453) | 0.76 + 0.80 (0.0299 + 0.0315) |
| 1.15 - 1.19 (0.0453 - 0.0469) | 0.80 + 0.80 (0.0315 + 0.0315) |
| 1.19 - 1.23 (0.0469 - 0.0484) | 0.44 + 1.20 (0.0173 + 0.0472) |
| 1.23 - 1.27 (0.0484 - 0.0500) | 0.48 + 1.20 (0.0189 + 0.0472) |
| 1.27 - 1.31 (0.0500 - 0.0516) | 0.52 + 1.20 (0.0205 + 0.0472) |

### Table for selecting differential side bearing adjusting shim(s) — RS5F50V

Unit: mm (in)

| Dial indicator deflection     | Suitable shim(s)              |
|-------------------------------|-------------------------------|
| 0.47 - 0.51 (0.0185 - 0.0201) | 0.44 + 0.48 (0.0173 + 0.0189) |
| 0.51 - 0.55 (0.0201 - 0.0217) | 0.48 + 0.48 (0.0189 + 0.0189) |
| 0.55 - 0.59 (0.0217 - 0.0232) | 0.48 + 0.52 (0.0189 + 0.0205) |
| 0.59 - 0.63 (0.0232 - 0.0248) | 0.52 + 0.52 (0.0205 + 0.0205) |
| 0.63 - 0.67 (0.0248 - 0.0264) | 0.52 + 0.56 (0.0205 + 0.0220) |
| 0.67 - 0.71 (0.0264 - 0.0280) | 0.56 + 0.56 (0.0220 + 0.0220) |
| 0.71 - 0.75 (0.0280 - 0.0295) | 0.56 + 0.60 (0.0220 + 0.0236) |
| 0.75 - 0.79 (0.0295 - 0.0311) | 0.60 + 0.60 (0.0236 + 0.0236) |
| 0.79 - 0.83 (0.0311 - 0.0327) | 0.60 + 0.64 (0.0236 + 0.0252) |
| 0.83 - 0.87 (0.0327 - 0.0343) | 0.64 + 0.64 (0.0252 + 0.0252) |
| 0.87 - 0.91 (0.0343 - 0.0358) | 0.64 + 0.68 (0.0252 + 0.0268) |
| 0.91 - 0.95 (0.0358 - 0.0374) | 0.68 + 0.68 (0.0268 + 0.0268) |
| 0.95 - 0.99 (0.0374 - 0.0390) | 0.68 + 0.72 (0.0268 + 0.0283) |
| 0.99 - 1.03 (0.0390 - 0.0406) | 0.72 + 0.72 (0.0283 + 0.0283) |
| 1.03 - 1.07 (0.0406 - 0.0421) | 0.72 + 0.76 (0.0283 + 0.0299) |
| 1.07 - 1.11 (0.0421 - 0.0437) | 0.76 + 0.76 (0.0299 + 0.0299) |
| 1.11 - 1.15 (0.0437 - 0.0453) | 0.76 + 0.80 (0.0299 + 0.0315) |
| 1.15 - 1.19 (0.0453 - 0.0469) | 0.80 + 0.80 (0.0315 + 0.0315) |
| 1.19 - 1.23 (0.0469 - 0.0484) | 0.72 + 0.92 (0.0273 + 0.0362) |
| 1.23 - 1.27 (0.0484 - 0.0500) | 0.76 + 0.92 (0.0299 + 0.0362) |
| 1.27 - 1.31 (0.0500 - 0.0516) | 0.80 + 0.92 (0.0315 + 0.0362) |