

ALPHABETICAL INDEX

SECTION **IDX**

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram..... EC-332
ABS - Wiring diagram BR-46
ABS (anti-lock brake system)..... BR-39
Absolute pressure sensor EC-124
A/C - Wiring diagram..... HA-21
A/C air flow..... HA-16
A/C component layout..... HA-15
A/C compressor clutch removal and
installation HA-68
A/C compressor description HA-7
A/C compressor mounting..... HA-67
A/C compressor precaution..... HA-7
A/C compressor special service tool..... HA-8
A/C control linkage adjustment (manual A/C)..... HA-37
A/C control operation (manual A/C)..... HA-14
A/C diagnostic work flow (manual A/C) HA-28
A/C HFC134a (R134a) system introduction HA-13
A/C HFC134a (R134a) system precaution HA-2
A/C HFC134a (R134a) system service
procedure HA-59, HA-62
A/C HFC134a (R134a) system service tools..... HA-9
A/C HFC134a system service equipment
precaution HA-11
A/C lubricant (R134a)..... HA-64
A/C lubrication oil HA-64
A/C operational check..... HA-26
A/C performance chart..... HA-52
A/C performance test diagnoses..... HA-50
A/C pressure switch HA-13
A/C push control..... HA-14, HA-75
A/C relay..... HA-47
A/C service data specification..... HA-76
A/C trouble diagnoses (manual A/C) HA-28
Accel drum unit EM-28
Accelerator control system..... FE-3
Accelerator wire adjustment..... FE-3
Air bag RS-11
Air bag disposal..... RS-24
Air bag precautions GI-2
Air bleeding for brake system BR-7
Air bleeding (hydraulic clutch)..... CL-6
Air cleaner filter replacement MA-13
Air conditioner cut control EC-21
Air conditioning - See A/C..... HA-13
Air flow meter - See Mass air flow sensor..... EC-115
Alternator EL-37
Angular tightening application EM-2
Antenna EL-150
Anti-lock brake system - See ABS..... BR-39
Anti-lock brake system - Wiring diagram..... BR-46
AP/SEN - Wiring diagram EC-124

ASCD - Wiring diagram..... EL-161
ASCD (automatic speed control device)..... EL-157
A/T - Wiring diagram - AT - FTS AT-85
A/T - Wiring diagram - AT - MAIN..... AT-76
A/T - Wiring diagram - AT - PNP/SW..... AT-80
A/T - Wiring diagram - AT - VSS A/T AT-90
A/T control EC-344
A/T diagnosis communication line EC-433
A/T fluid temperature sensor..... AT-87
A/T self-diagnoses..... AT-38
A/T shift lock system..... AT-200
A/T shift lock system - Wiring diagram AT-201
A/T trouble diagnoses AT-49
A/T Wiring diagram - AT - ENG SS AT-94
A/T Wiring diagram AT - 1ST AT-99
A/T Wiring diagram AT - 2ND AT-105
A/T Wiring diagram AT - 3RD AT-111
A/T Wiring diagram AT - 4TH..... AT-117
A/T Wiring diagram AT - BA/FTS..... AT-163
A/T Wiring diagram AT - LPSV AT-136
A/T Wiring diagram AT - NONDTC AT-174
A/T Wiring diagram AT - OVRCSV AT-158
A/T Wiring diagram AT - SSV/A AT-141
A/T Wiring diagram AT - SSV/B AT-146
A/T Wiring diagram AT - TCCSIG AT-129
A/T Wiring diagram AT - TCV AT-123
A/T Wiring diagram AT - TPS..... AT-152
A/T Wiring diagram AT - VSSMTR..... AT-168
AT/C - Wiring diagram..... EC-344
Audio EL-145
AUDIO - Wiring diagram EL-146
Audio and A/C control removal and
installation - See Instrument panel..... BT-18
Automatic speed control system - See ASCD.. EL-157
Automatic transaxle number GI-41
Automatic transmission fluid replacement MA-18
Auxiliary air control (AAC)..... EC-332

B

Back window BT-48
BACK/L - Wiring diagram..... EL-62
Back-up lamp EL-62
Back-up lamp switch (M/T) MT-8
Ball joint front axle..... FA-27
Basic inspection EC-84
Battery EL-27
Baulk ring (M/T)..... MT-15
Block heater EM-44
Blower and cooling unit..... HA-73
Blower motor HA-34, HA-74
Blower resistor..... HA-34
Board-on lift..... GI-44

ALPHABETICAL INDEX

Body alignment.....	BT-52
Boring/honing cylinder block.....	EM-47
BPT valve.....	EC-280
Brake booster.....	BR-16
Brake control valve (Proportioning valve).....	BR-9
Brake fluid change.....	BR-6
Brake fluid level.....	MA-19
Brake fluid level and line check.....	BR-6
Brake hydraulic line.....	BR-8
Brake inspection.....	MA-19
Brake lines and cables inspection.....	MA-19
Brake lining wear temporary checking.....	MA-20
Brake master cylinder.....	BR-13
Brake pedal.....	BR-11
Bulb specifications.....	EL-287
Bumper, front.....	BT-7
Bumper, rear.....	BT-11
BYPS/V - Wiring diagram.....	EC-423

C

Camshaft inspection.....	EM-33
Camshaft position sensor (CMPS).....	EC-260
Canister - See EVAP canister.....	EC-23
CHARGE - Wiring diagram.....	EL-38
Charging system.....	EL-37
Chassis and body maintenance.....	MA-17
CHIME - Wiring diagram.....	EL-112
CIGAR - Wiring diagram.....	EL-131
Cigarette lighter.....	EL-131
Circuit breaker.....	EL-19
CKPS - Wiring diagram.....	EC-255
Closed loop control.....	EC-19
Clutch cover.....	CL-11
Clutch disc.....	CL-11
Clutch fluid level.....	MA-17
Clutch master cylinder.....	CL-7
Clutch operating cylinder.....	CL-8
Clutch pedal.....	CL-4
Clutch release bearing.....	CL-9
Clutch release mechanism.....	CL-9
Clutch withdrawal lever.....	CL-9
CMPS - Wiring diagram.....	EC-260
Coil spring (front).....	FA-25
Coil spring (rear).....	RA-12
Collision diagnosis.....	RS-64
Combination lamp, rear, removal and installation.....	BT-32
Combination meter.....	EL-86
Combination meter removal and installation - See Instrument panel.....	BT-18
Combination switch.....	EL-42
Component Location (manual A/C).....	HA-17

Compression pressure.....	EM-13
Compressor clutch removal and installation.....	HA-68
Compressor description.....	HA-7
Compressor mounting.....	HA-67
Compressor precaution.....	HA-7
Compressor special service tool.....	HA-8
Connecting rod.....	EM-47
Connecting rod bearing clearance.....	EM-50
Connecting rod bushing clearance.....	EM-51
Connector inspection.....	GI-20
Console box - See Instrument panel.....	BT-18
CONSULT for ABS.....	BR-56
CONSULT for engine.....	EC-67
CONSULT general information.....	GI-36
Control lever (M/T).....	MT-13
Control valve (A/T).....	AT-238
Coolant mixture ratio.....	MA-9
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-9
Cooling fan.....	LC-14
Cooling fan control system.....	LC-14
Cooling fan motor.....	EC-453
Cooling fan relay.....	EC-453
CORNER - Wiring diagram.....	EL-66
Cornering lamp.....	EL-66
Coupling sleeve (M/T).....	MT-15
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-260
Crankcase emission control system - See positive crankcase ventilation.....	EC-33
Crankcase ventilation system - See positive crankcase ventilation.....	EC-33
Crankshaft.....	EM-48
Crankshaft position sensor (OBD).....	EC-255
Crankshaft position sensor (OBD) cog chipping.....	EC-361
Cruise control - See ASCD.....	EL-157
Cylinder block.....	EM-44
Cylinder block boring.....	EM-47
Cylinder head.....	EM-30
Cylinder head bolt tightening.....	EM-30

D

Daytime light system.....	EL-50
Daytime running light - See Daytime light system.....	EL-50
DEF - Wiring diagram.....	EL-136
Detonation sensor - See Knock sensor.....	EC-250
Diagnosis sensor unit.....	RS-16
Diagnostic trouble code (DTC) inspection priority chart.....	EC-90
Differential gear (FF A/T).....	AT-281

ALPHABETICAL INDEX

Differential gear (FF M/T).....	MT-29
Dimensions.....	GI-42
Distributor.....	EC-20
Distributor ignition (DI) system.....	EC-20
D/LOCK - Wiring diagram.....	EL-185
Dome light - See Interior lamp.....	EL-76
Door, front.....	BT-15
Door glass.....	BT-15
Door lock.....	BT-15
Door mirror.....	BT-50
Door, rear.....	BT-17
Door trim.....	BT-23
Drive belt inspection.....	MA-10
Drive plate runout.....	EM-52
Drive shaft (front).....	FA-16
Dropping resistor (A/T).....	AT-138
DTC work support.....	EC-75
DTRL - Wiring diagram.....	EL-53

E

ECCS relay.....	EC-110
ECM input/output signal.....	EC-99
ECTS - Wiring diagram.....	EC-135
EGR control (EGRC) - BPT valve.....	EC-276
EGR control (EGRC) - solenoid valve.....	EC-366
EGR control valve.....	EC-273, EC-280, EC-382
EGR temperature sensor.....	EC-371
EGRC1 - Wiring diagram.....	EC-267
EGRC/V - Wiring diagram.....	EC-366
EGR/TS - Wiring diagram.....	EC-371
Electric sun roof.....	EL-152
Electrical diagnoses.....	GI-23
Electrical ignition system.....	EC-20
Electrical load signal circuit.....	EC-473
Electrical unit.....	EL-266
Electrical units location.....	EL-266
Engine compartment.....	BT-52
Engine control circuit diagram.....	EC-12
Engine control component parts location.....	EC-13
Engine control module (ECM).....	EC-348
Engine control system diagram and chart.....	EC-15
Engine coolant temperature sensor (ECTS).....	EC-135, EC-153
Engine fail-safe system.....	EC-91
Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-7
Engine oil replacement.....	MA-14
Engine outer component parts.....	EM-10
Engine removal.....	EM-41
Engine room - See Engine compartment.....	BT-52
Engine serial number.....	GI-41
EVAP canister.....	EC-23

EVAP canister purge volume control solenoid valve.....	EC-294, EC-394
EVAP canister vent control valve.....	EC-300, EC-401
EVAP control system pressure sensor.....	EC-305
EVAP control system purge flow monitoring diagnosis.....	EC-406
EVAP control system (small leak) diagnosis.....	EC-285
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-23
Exhaust gas recirculation (EGR) valve.....	EC-267
Exhaust system.....	FE-6
Exhaust system inspection.....	MA-17
Exterior.....	BT-27

F

Fan switch.....	HA-34
Fast idle.....	EC-35
Fast idle cam (FIC).....	EC-35
Fast idle cam (FIC) inspection and adjustment.....	EC-35
F/FOG - Wiring diagram.....	EL-64
FICD - Wiring diagram.....	EC-469
Final drive (FF A/T).....	AT-281
Final drive (FF M/T).....	MT-29
Finisher, interior - See Trim.....	BT-21
Finisher, rear panel.....	BT-21
Floor trim.....	BT-21
Flow charts.....	GI-33
Fluid temperature sensor (A/T).....	AT-87
Fluids.....	MA-8
Flywheel (clutch).....	CL-12
Flywheel runout.....	EM-52
Fog lamp, front.....	EL-63
Fog lamp, front, removal and installation.....	BT-7
Fork rod (M/T).....	MT-16
Forward clutch.....	AT-259
F/PUMP - Wiring diagram.....	EC-460
Freeze frame data.....	EC-45
FRO2 - Wiring diagram.....	EC-158
FRO2/H - Wiring diagram.....	EC-196
Front axle.....	FA-11
Front bumper.....	BT-7
Front disc brake.....	BR-19
Front door.....	BT-15
Front fog lamp.....	EL-63
Front fog lamp removal and installation.....	BT-7
Front heated oxygen sensor (HO2S).....	EC-158, EC-165, EC-173, EC-181, EC-189
Front passenger air bag.....	RS-11
Front seat.....	BT-35
Front seat belt.....	RS-4
Front suspension.....	FA-24

ALPHABETICAL INDEX

Front tower bar	BT-32
Front washer	EL-122
Front wiper	EL-122
FUEL - Wiring diagram	EC-231
Fuel cut control (at no load & high engine speed)	EC-22
Fuel filler lid	BT-11
Fuel filter replacement	MA-13
Fuel gauge	EL-87
Fuel injector	EC-454
Fuel line inspection	MA-12
Fuel precautions	GI-8
Fuel pressure check	EC-34
Fuel pressure regulator	EC-35
Fuel pressure release	EC-34
Fuel pump	EC-460
Fuel pump and gauge	FE-5
Fuel pump relay	EC-464
Fuel system	FE-4
Fuel tank vacuum relief valve	EC-24
Fuel temperature sensor	EC-241
FUELLH - Wiring diagram	EC-332
Fuse	EL-19
Fusible link	EL-19

G

Garage jack and safety stand	GI-44
Gauges	EL-86
Gear components (M/T)	MT-15
Generator	EL-37
Generic scan tool (GST)	EC-78
Glass	BT-47
Grease	MA-8
Grille - See Exterior	BT-7
Ground distribution	EL-20

H

Harness connector	EL-5
Harness connector inspection	GI-20
Harness layout	EL-269
Hazard warning lamp	EL-68
Headlamp	EL-45
Headlamp aiming control	EL-49
Headlamp leveler - See Headlamp aiming control	EL-49
Headlining - See Roof trim	BT-25
Heated oxygen sensor heater	EC-170, EC-178
Heated oxygen sensor (HO2S)	EC-158, EC-165, EC-173, EC-181, EC-189
HEATER - Wiring diagram	HA-20

Heater unit (heater core)	HA-72
Height (Dimensions)	GI-42
HFC134a (R134a) system introduction	HA-13
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure	HA-59, HA-62
HFC134a (R134a) system service tools	HA-9
HFC134a system service equipment precaution	HA-11
High clutch	AT-255
H/LAMP - Wiring diagram	EL-46
HLC - Wiring diagram	EL-67
Hood	BT-7
Horn	EL-130
HORN - Wiring diagram	EL-130
How to erase DTC for OBD system	EC-56

I

IACV-AAC valve	EC-332
IACV-FICD solenoid valve	EC-469
IATS - Wiring diagram	EC-129
Identification plate	GI-40
Idle air control valve (IACV)	EC-332
Idle mixture ratio	EC-37
Idle speed	EC-37
Ignition coil	EC-354
Ignition timing	EC-37
Ignition wire inspection	EC-249
IGN/SG - Wiring diagram	EC-354
ILL - Wiring diagram	EL-74
Illuminated entry system	EL-76
Illumination	EL-73
INJECT - Wiring diagram	EC-454
Injector	EC-456
Injector removal and installation	EC-35
Input shaft (FF M/T)	MT-20
Instrument panel	BT-18
Intake air temperature sensor	EC-129
Intake door control linkage adjustment	HA-41
Intake manifold	EM-10
Integrated homelink transmitter	EL-248
Interior	BT-21
Interior lamp	EL-76
Interior lamp on-off control	EL-77
INT/L - Wiring diagram	EL-85

J

Jacking points	GI-43, GI-44
----------------------	--------------

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

K

Keyless entry system - See Multi-remote control system.....	EL-196
Knock sensor (KS).....	EC-250
Knuckle spindle.....	FA-11
KS - Wiring diagram.....	EC-250

L

Length (Dimensions).....	GI-42
License lamp.....	EL-58
Lifting points.....	GI-43
Line pressure solenoid valve.....	AT-134
Line pressure test (A/T).....	AT-57
Liquid gasket application.....	EM-2
LOAD - Wiring diagram.....	EC-473
Location of electrical units.....	EL-266
Lock, door.....	BT-15
Low and reverse brake.....	AT-265
Lubricant (R134a) A/C.....	HA-64
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C.....	HA-64
Lubrication-locks, hinges and hood latches.....	MA-22
Luggage compartment trim.....	BT-26
Luggage room lamp.....	EL-85

M

MAFS - Wiring diagram.....	EC-115
Magnet clutch.....	HA-68
MAIN - Wiring diagram.....	EC-110
Main drive gear (M/T).....	MT-15
Mainshaft (M/T).....	MT-25
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-213
Malfunction indicator lamp (MIL).....	EC-58
Manual transaxle number.....	GI-41
Manual transmission oil replacement.....	MA-17
Map lamp.....	EL-85
Mass air flow sensor (MAFS).....	EC-115
Master cylinder (brake).....	BR-13
Master cylinder (clutch).....	CL-7
Meter.....	EL-86
METER - Wiring diagram.....	EL-92
MIL & Data link connectors circuit.....	EC-476
MIL/DL - Wiring diagram.....	EC-476
MIRROR - Wiring diagram.....	EL-155
Mirror, door.....	BT-50
Mirror, out side.....	BT-50

Misfire.....	EC-245
Mode door control linkage adjustment.....	HA-37
Model variation.....	GI-39
Molding - See Exterior.....	BT-27
M/T major overhaul.....	MT-14
M/T removal and installation.....	MT-9
MULTI - Wiring diagram.....	EL-201
Multi link/lower ball joint (rear).....	RA-14
Multipoint fuel injection (MFI) system.....	EC-18
Multipoint fuel injection precautions.....	GI-6
Multi-remote control system.....	EL-196

N

NATS - Wiring diagram.....	EL-252
Neutral position switch.....	EC-437
NVH troubleshooting (BR).....	BR-5
NVH troubleshooting (CL).....	CL-3
NVH troubleshooting (EM).....	EM-8
NVH troubleshooting (M/T).....	MT-5
NVH troubleshooting (RA).....	RA-3
NVH troubleshooting (ST).....	ST-5
NVIS (Nissan vehicle immobilizer system).....	EL-250

O

Oil change (capacity).....	MA-14
Oil jet.....	LC-4
Oil pan (engine).....	EM-15
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine).....	LC-8
Oil pump (A/T).....	AT-234
Oil pump (engine).....	LC-6
Oil pump regulator valve (engine).....	LC-8
Oil seal replacement (engine).....	EM-26
On board diagnostic system.....	EC-43
Operating cylinder (clutch).....	CL-8
Out side mirror.....	BT-50
Overdrive control switch.....	AT-198
Overrun clutch.....	AT-259
Overrun clutch solenoid valve.....	AT-156
Oversize piston.....	EM-47
Oxygen sensor (O2S).....	EC-158, EC-165, EC-173, EC-181, EC-189

P

Parking brake control.....	BR-37
Parking drum brake.....	BR-23
Parking lamp.....	EL-58, EL-60
Park/Neutral position switch.....	EC-437

ALPHABETICAL INDEX

Park/neutral position switch (A/T)AT-78
 Park/neutral position switch (M/T).....MT-8
 PCV (positive crankcase ventilation)EC-33
 PGC/V - Wiring diagramEC-394
 Pilot bushing replacement.....EM-54
 Piston assemblyEM-52
 Piston pin inspectionEM-46
 Piston ring inspectionEM-46
 Piston to bore clearanceEM-47
 PNP/SW - Wiring diagramEC-437
 POWER - Wiring diagram.....EL-12
 Power door lockEL-181
 Power door mirrorEL-155
 Power seatEL-156
 Power steering fluid level.....ST-6, MA-21
 Power steering gearST-14
 Power steering hydraulic pressure.....ST-9
 Power steering oil pressure switchEC-465
 Power steering oil pumpST-20
 Power steering system bleeding.....ST-7
 Power supply routing.....EL-10
 Power transistor & ignition coil.....EC-354
 Power windowEL-175
 Precautions (General)GI-4
 PRE/SE - Wiring diagramEC-305
 Pressure plate - See Clutch cover.....CL-11
 Pressure test (A/T).....AT-57
 PST/SW - Wiring diagram.....EC-465

R

R134a - See HFC134aHA-2
 RadiatorLC-14
 Radiator fan - See Cooling fanLC-14
 Radio - See AudioEL-145
 Rear axleRA-4
 Rear axle (disc brake type).....RA-8
 Rear axle (drum brake type).....RA-8
 Rear bumperBT-11
 Rear combination lamp removal and
 installationBT-32
 Rear disc brakeBR-28
 Rear doorBT-17
 Rear drum brakeBR-23
 Rear heated oxygen sensor
 (HO2S).....EC-200, EC-208, EC-215, EC-221
 Rear panel finisher.....BT-21
 Rear seat.....BT-37
 Rear seat belt.....RS-6
 Rear suspensionRA-10
 Rear window.....BT-48
 Rear window defoggerEL-133
 Refrigerant connection precautionHA-4

Refrigerant discharging evacuating charging.....HA-62
 Refrigerant general precaution.....HA-3
 Refrigerant linesHA-66
 Refrigeration cycle.....HA-13
 Release bearing (clutch)CL-9
 Removal and installation (A/T).....AT-210
 ResistorEC-360
 Reverse clutch.....AT-252
 Reverse idler shaft (M/T)MT-15
 Reverse lamp switch (M/T) - See Back-up
 lamp switch (M/T)MT-8
 Reverse main gear (M/T)MT-15
 Revolution sensor (A/T)AT-91
 Road wheel size.....GI-42
 Roof trim.....BT-25
 Room lampEL-76
 Room lamp - See Interior lamp.....EL-76
 ROOM/L - Wiring diagramEL-80
 Rotor disc (front)FA-11
 RRO2 - Wiring diagram.....EC-200
 RRO2/H - Wiring diagramEC-227

S

SAE J1930 terminology listGI-49
 Seal - See ExteriorBT-27
 SEAT - Wiring diagramEL-156
 Seat belt, front.....RS-4
 Seat belt inspection.....RS-8, MA-22
 Seat belt pre-tensioner.....RS-2, RS-11
 Seat belt pre-tensioner disposalRS-24
 Seat belt, rear.....RS-6
 Seat, front.....BT-35
 Seat, rear.....BT-37
 Self-diagnostic resultsEC-58
 SHIFT - Wiring diagramAT-201
 Shift control components (M/T).....MT-16
 Shift fork (M/T)MT-16
 Shift lock systemAT-200
 Shift schedule.....AT-304
 Shift solenoid valve A (A/T).....AT-100, AT-112
 Shift solenoid valve B (A/T)AT-100
 Shock absorber (front)FA-25
 Shock absorber (rear)RA-12
 Side air bagRS-11
 Side trimBT-21
 Smart entrance control unit.....EL-242
 Spare tire sizeGI-42
 Spark plug replacementMA-15
 SpeedometerEL-88
 Spiral cable.....RS-18
 Spot lampEL-85
 Spring (Wheelarch) heightFA-6

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

SROOF - Wiring diagram.....	EL-152
SRS - See Supplemental Restraint System.....	RS-11
SRS - Wiring diagram.....	RS-36
SRS Trouble diagnoses.....	RS-31
S/SIG - Wiring diagram.....	EC-457
Stabilizer bar (front).....	FA-26
Stabilizer bar (rear).....	RA-14
Stall test (A/T).....	AT-54
Standardized relay.....	EL-7
START - Wiring diagram.....	EL-33
Start signal.....	EC-457
Starter.....	EL-31
Starting system.....	EL-31
Steering gear and linkage inspection.....	MA-21
Steering knuckle.....	FA-11
Steering linkage.....	ST-14
Steering switch.....	EL-44
Steering wheel and column.....	ST-10
Steering wheel play.....	ST-8
Steering wheel turning force.....	ST-7
Stop lamp.....	EL-61
STOP/L - Wiring diagram.....	EL-61
Striking rod (M/T).....	MT-16
Strut (front).....	FA-25
Strut (rear).....	RA-12
Sun roof, electric.....	EL-152
Sunroof.....	BT-39
Supplemental Restraint System.....	RS-11
Supplemental restraint system - Wiring diagram.....	RS-36
Symbols and abbreviations.....	GI-10
Symptom matrix chart.....	EC-92
Synchronizer (M/T).....	MT-15, MT-26
System readiness test (SRT) code.....	EC-45

T

Tachometer.....	EL-87
Tail lamp.....	EL-58
TAIL/L - Wiring diagram.....	EL-58
TCM circuit diagram.....	AT-14
TCM inspection table.....	AT-72
Temperature control cable and linkage adjustment.....	HA-48
TFTS - Wiring diagram.....	EC-241
THEFT - Wiring diagram.....	EL-226
Theft warning system.....	EL-219
Thermal protector.....	HA-47
Thermo control amp.....	HA-47
Thermostat.....	LC-13
Three way catalyst.....	EC-281
Three way catalyst precautions.....	GI-6
Throttle bodies.....	EM-10

Throttle drum adjustment.....	FE-3
Throttle position sensor adjustment.....	EC-84
Throttle position sensor (TPS).....	EC-140
Throttle position switch.....	AT-155, AT-199
Throwout bearing - See Clutch release bearing.....	CL-9
Tie-rod.....	ST-17
Tie-rod ball joints.....	ST-17
Tightening torque of standard bolts.....	GI-48
Timing chain.....	EM-19
Tire rotation.....	MA-21
Tire size.....	GI-42
TLID - Wiring diagram.....	EL-154
Torque converter clutch solenoid valve.....	AT-121
Torque converter installation.....	AT-211
Tow truck towing.....	GI-45
TPS - Wiring diagram.....	EC-140
TP/SW - Wiring diagram.....	EC-338
Transmission case (M/T).....	MT-14
Transverse link (front).....	FA-27
Tread-FR&RR (Dimensions).....	GI-42
Trim.....	BT-21
Triple pressure switch.....	HA-47
Trouble diagnoses.....	GI-23
Trunk lid.....	BT-11
Trunk lid opener - See Trunk lid.....	BT-11
Trunk lid opener, electric.....	EL-154
Trunk room lamp.....	EL-85
Trunk room trim.....	BT-26
TURN - Wiring diagram.....	EL-70
Turn signal lamp.....	EL-68
Two trip detection logic.....	EC-43
Two-pole lift.....	GI-45

U

Under body.....	BT-54
-----------------	-------

V

Vacuum cut valve.....	EC-432
Vacuum cut valve bypass valve.....	EC-423, EC-428
Vacuum hose (brake system).....	BR-18
Vacuum hose drawing (Engine control).....	EC-16
Valve clearance.....	EM-38
Valve guide.....	EM-34
Valve lifter.....	EM-37
Valve seat.....	EM-36
Valve spring.....	EM-37
Vanity mirror lamp.....	EL-85
Vehicle identification number.....	GI-40
Vehicle recovery (freeing a stuck vehicle).....	GI-47

ALPHABETICAL INDEX

Vehicle speed sensor (VSS)EC-328
 Vent mode switchHA-14
 VENT/V - Wiring diagram..... EC-300, EC-413
 Viscosity number (SAE) MA-8
 VSS - Wiring diagramEC-328

W

WARN - Wiring diagram..... EL-105
 Warning buzzer EL-111
 Warning chime EL-109
 Warning lamps EL-102
 Washer, front EL-122
 Water pump LC-11
 Water temperature gauge EL-87
 Weatherstrip - See Exterior..... BT-27
 Wheel alignment (front)..... FA-7
 Wheel alignment (rear).....RA-6
 Wheel balance..... MA-21
 Wheel bearing (front axle)..... FA-7
 Wheel bearing (rear) RA-5
 Wheel hub (front)FA-11

Wheel hub (rear)RA-8
 Wheel sensors (ABS).....BR-40
 Wheel size..... GI-42
 Wheelarch height FA-6
 Wheelbase (Dimensions) GI-42
 Width (Dimensions) GI-42
 WINDOW - Wiring diagram..... EL-178
 Window antenna..... EL-151
 Window, back BT-48
 Window, door..... BT-15
 Window, rear BT-48
 Windshield BT-47
 Windshield washer - See Front washer..... EL-122
 Windshield wiper - See Front wiper..... EL-122
 WIPER - Wiring diagram..... EL-124
 Wiper and washer EL-122
 Wiper, front..... EL-122
 Wiring Diagram (Cell code) list EL-288
 Wiring diagrams GI-11
 Withdrawal lever (clutch)..... CL-9
 Wrist pin - See Piston pin inspection..... EM-46

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL