

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-330
ABS - Wiring diagram	BR-46
ABS (anti-lock brake system).....	BR-39
Absolute pressure sensor	EC-127
A/C - Wiring diagram.....	HA-22
A/C air flow.....	HA-17
A/C component layout.....	HA-16
A/C compressor clutch removal and installation	HA-71
A/C compressor description	HA-7
A/C compressor mounting.....	HA-70
A/C compressor precaution.....	HA-7
A/C compressor special service tool.....	HA-8
A/C control linkage adjustment (manual A/C).....	HA-38
A/C control operation (manual A/C)	HA-15
A/C diagnostic work flow (manual A/C)	HA-29
A/C HFC134a (R134a) system introduction	HA-14
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure	HA-60, HA-65
A/C HFC134a (R134a) system service tools.....	HA-9
A/C HFC134a system service equipment precaution	HA-12
A/C lubricant (R134a).....	HA-67
A/C lubrication oil	HA-67
A/C operational check.....	HA-27
A/C performance chart.....	HA-53
A/C performance test diagnoses.....	HA-51
A/C pressure switch	HA-14
A/C push control.....	HA-15, HA-78
A/C relay.....	HA-48
A/C service data specification.....	HA-79
A/C trouble diagnoses (manual A/C)	HA-29
Accel drum unit	EM-28
Accelerator control system.....	FE-3
Accelerator wire adjustment.....	FE-3
Air bag.....	RS-12
Air bag disposal.....	RS-26
Air bag precautions	GI-2
Air bleeding for brake system	BR-7
Air bleeding (hydraulic clutch).....	CL-6
Air cleaner filter replacement	MA-13
Air conditioner cut control	EC-21
Air conditioning - See A/C.....	HA-14
Air flow meter - See Mass air flow sensor.....	EC-118
Alternator	EL-43
Angular tightening application	EM-2
Antenna	EL-161
Anti-lock brake system - See ABS.....	BR-39
Anti-lock brake system - Wiring diagram.....	BR-46
ASCD - Wiring diagram.....	EL-172

ASCD (automatic speed control device).....	EL-168
A/T - Wiring diagram - AT - FTS	AT-85
A/T - Wiring diagram - AT - MAIN	AT-76
A/T - Wiring diagram - AT - PNP/SW.....	AT-80
A/T - Wiring diagram - AT - VSS A/T	AT-90
A/T control	EC-341
A/T diagnosis communication line	EC-425
A/T fluid temperature sensor.....	AT-87
A/T self-diagnoses.....	AT-38
A/T shift lock system	AT-197
A/T shift lock system - Wiring diagram	AT-198
A/T trouble diagnoses	AT-49
A/T Wiring diagram - AT - ENG SS	AT-93
A/T Wiring diagram AT - 1ST	AT-98
A/T Wiring diagram AT - 2ND	AT-104
A/T Wiring diagram AT - 3RD	AT-110
A/T Wiring diagram AT - 4TH	AT-116
A/T Wiring diagram AT - BA/FTS	AT-160
A/T Wiring diagram AT - LPSV	AT-135
A/T Wiring diagram AT - NONDTC	AT-171
A/T Wiring diagram AT - OVRCSV	AT-155
A/T Wiring diagram AT - SSV/A	AT-140
A/T Wiring diagram AT - SSV/B	AT-145
A/T Wiring diagram AT - TCCSIG	AT-128
A/T Wiring diagram AT - TCV	AT-122
A/T Wiring diagram AT - TPS	AT-150
A/T Wiring diagram AT - VSSMTR	AT-165
AT/C - Wiring diagram.....	EC-341
Audio	EL-157
AUDIO - Wiring diagram	EL-158
Audio and A/C control removal and installation - See Instrument panel	BT-15
Automatic speed control system - See ASCD..	EL-168
Automatic transaxle number	GI-43
Automatic transmission fluid replacement	MA-18
Auxiliary air control (AAC).....	EC-330

B

Back window	BT-44
BACK/L - Wiring diagram	EL-74
Back-up lamp	EL-74
Back-up lamp switch (M/T)	MT-8
Ball joint front axle.....	FA-26
Basic inspection	EC-83
Battery	EL-27
Baulk ring (M/T).....	MT-15
Block heater	EM-44
Blower and cooling unit.....	HA-76
Blower motor	HA-35, HA-77
Blower resistor.....	HA-35
Board-on lift.....	GI-46
Body alignment.....	BT-48

ALPHABETICAL INDEX

Boring/honing cylinder block	EM-48
BPT valve	EC-279
Brake booster	BR-16
Brake control valve (Proportioning valve)	BR-9
Brake fluid change	BR-6
Brake fluid level	MA-19
Brake fluid level and line check	BR-6
Brake hydraulic line	BR-8
Brake inspection	MA-19
Brake lines and cables inspection	MA-19
Brake lining wear temporary checking	MA-20
Brake master cylinder	BR-13
Brake pedal	BR-11
Bulb specifications	EL-292
Bumper, front	BT-5
Bumper, rear	BT-8
BYPS/V - Wiring diagram	EC-415
C	
Camshaft inspection	EM-33
Camshaft position sensor (CMPS)	EC-259
Canister - See EVAP canister	EC-23
CHARGE - Wiring diagram	EL-44
Charging system	EL-43
Chassis and body maintenance	MA-17
CHIME - Wiring diagram	EL-124
CIGAR - Wiring diagram	EL-143
Cigarette lighter	EL-143
Circuit breaker	EL-18
CKPS - Wiring diagram	EC-254
Closed loop control	EC-19
Clutch cover	CL-11
Clutch disc	CL-11
Clutch fluid level	MA-17
Clutch master cylinder	CL-7
Clutch operating cylinder	CL-8
Clutch pedal	CL-4
Clutch release bearing	CL-9
Clutch release mechanism	CL-9
Clutch withdrawal lever	CL-9
CMPS - Wiring diagram	EC-259
Coil spring (front)	FA-24
Coil spring (rear)	RA-12
Collision diagnosis	RS-64
Combination lamp, rear, removal and installation	BT-29
Combination meter	EL-99
Combination meter removal and installation - See Instrument panel	BT-15
Combination switch	EL-54
Component Location (manual A/C)	HA-18
Compression pressure	EM-13
Compressor clutch removal and installation	HA-71
Compressor description	HA-7
Compressor mounting	HA-70
Compressor precaution	HA-7
Compressor special service tool	HA-8
Connecting rod	EM-47
Connecting rod bearing clearance	EM-51
Connecting rod bushing clearance	EM-51
Connector inspection	GI-20
Console box - See Instrument panel	BT-15
CONSULT for ABS	BR-56
CONSULT for engine	EC-66
CONSULT general information	GI-38
Control lever (M/T)	MT-13
Control valve (A/T)	AT-235
Coolant mixture ratio	MA-9
Coolant replacement	MA-11
Cooling circuit (engine)	LC-9
Cooling fan	LC-14
Cooling fan control system	LC-14
Cooling fan motor	EC-444
Cooling fan relay	EC-444
CORNER - Wiring diagram	EL-78
Cornering lamp	EL-78
Coupling sleeve (M/T)	MT-15
Crank angle sensor built into distributor - See Camshaft position sensor	EC-259
Crankcase emission control system - See positive crankcase ventilation	EC-33
Crankcase ventilation system - See positive crankcase ventilation	EC-33
Crankshaft	EM-49
Crankshaft position sensor (OBD)	EC-254
Crankshaft position sensor (OBD) cog chipping	EC-351
Cruise control - See ASCD	EL-168
Cylinder block	EM-44
Cylinder block boring	EM-48
Cylinder head	EM-30
Cylinder head bolt tightening	EM-30
D	
Daytime light system	EL-62
Daytime running light - See Daytime light system	EL-62
DEF - Wiring diagram	EL-148
Detonation sensor - See Knock sensor	EC-249
Diagnosis sensor unit	RS-18
Diagnostic trouble code (DTC) inspection priority chart	EC-89
Differential gear (FF A/T)	AT-278
Differential gear (FF M/T)	MT-29

ALPHABETICAL INDEX

Dimensions.....	GI-44
Distributor	EC-20
Distributor ignition (DI) system.....	EC-20
D/LOCK - Wiring diagram	EL-194
Dome light - See Interior lamp.....	EL-88
Door, front.....	BT-12
Door glass	BT-12
Door lock	BT-12
Door mirror	BT-46
Door, rear	BT-14
Door trim.....	BT-20
Drive belt inspection.....	MA-10
Drive plate runout.....	EM-52
Drive shaft (front)	FA-15
Dropping resistor (A/T).....	AT-137
DTC work support	EC-74
DTRL - Wiring diagram	EL-65

E

ECCS relay.....	EC-113
ECM input/output signal.....	EC-98
ECTS - Wiring diagram.....	EC-134
EGR control (EGRC) - BPT valve.....	EC-275
EGR control (EGRC) - solenoid valve	EC-356
EGR control valve	EC-272, EC-279, EC-372
EGR temperature sensor	EC-361
EGRC1 - Wiring diagram	EC-266
EGRC/V - Wiring diagram.....	EC-356
EGR/TS - Wiring diagram	EC-361
Electric sun roof	EL-163
Electrical diagnoses	GI-23
Electrical ignition system.....	EC-20
Electrical load signal circuit.....	EC-471
Electrical unit.....	EL-273
Electrical units location.....	EL-273
Engine compartment	BT-48
Engine control circuit diagram.....	EC-12
Engine control component parts location.....	EC-13
Engine control module (ECM).....	EC-345
Engine control system diagram and chart	EC-15
Engine coolant temperature sensor (ECTS)	EC-134, EC-151
Engine fail-safe system	EC-90
Engine oil filter replacement.....	MA-13
Engine oil precautions.....	GI-7
Engine oil replacement.....	MA-13
Engine outer component parts.....	EM-10
Engine removal	EM-41
Engine room - See Engine compartment	BT-48
Engine serial number	GI-43
EVAP canister	EC-23

EVAP canister purge volume control solenoid valve	EC-293, EC-386
EVAP canister vent control valve.....	EC-299, EC-393
EVAP control system pressure sensor	EC-304
EVAP control system purge flow monitoring diagnosis	EC-398
EVAP control system (small leak) diagnosis	EC-284, EC-374
EVAP vapor lines inspection	MA-16
Evaporative emission (EVAP) system.....	EC-23
Exhaust gas recirculation (EGR) valve	EC-266
Exhaust system	FE-6
Exhaust system inspection.....	MA-17
Exterior	BT-24

F

Fan switch	HA-35
Fast idle.....	EC-35
Fast idle cam (FIC)	EC-35
Fast idle cam (FIC) inspection and adjustment.....	EC-35
F/FOG - Wiring diagram.....	EL-76
FICD - Wiring diagram	EC-467
Final drive (FF A/T)	AT-278
Final drive (FF M/T)	MT-29
Finisher, interior - See Trim.....	BT-18
Finisher, rear panel	BT-18
Floor trim	BT-18
Flow charts	GI-33
Fluid temperature sensor (A/T)	AT-87
Fluids	MA-8
Flywheel (clutch)	CL-12
Flywheel runout.....	EM-52
Fog lamp, front	EL-75
Fog lamp, front, removal and installation.....	BT-5
Fork rod (M/T)	MT-16
Forward clutch.....	AT-256
F/PUMP - Wiring diagram	EC-457
Freeze frame data.....	EC-47
FRO2 - Wiring diagram	EC-156
FRO2/H - Wiring diagram	EC-192
Front axle	FA-10
Front bumper	BT-5
Front disc brake	BR-19
Front door.....	BT-12
Front fog lamp	EL-75
Front fog lamp removal and installation.....	BT-5
Front heated oxygen sensor (HO2S).....	EC-156,
	EC-163, EC-170, EC-178, EC-186
Front passenger air bag.....	RS-12
Front seat	BT-32
Front seat belt	RS-4

ALPHABETICAL INDEX

Front suspension.....	FA-23
Front tower bar.....	BT-29
Front washer	EL-134
Front wiper	EL-134
FUEL - Wiring diagram	EC-230
Fuel cut control (at no load & high engine speed)	EC-22
Fuel filler lid.....	BT-8
Fuel filter replacement.....	MA-12
Fuel gauge	EL-100
Fuel injector.....	EC-451
Fuel line inspection	MA-12
Fuel precautions.....	GI-8
Fuel pressure check.....	EC-34
Fuel pressure regulator	EC-35
Fuel pressure release	EC-34
Fuel pump	EC-457
Fuel pump and gauge	FE-5
Fuel pump relay	EC-462
Fuel system.....	FE-4
Fuel tank vacuum relief valve	EC-24
Fuel temperature sensor.....	EC-240
Fuse.....	EL-18
Fusible link	EL-18
G	
Garage jack and safety stand	GI-46
Gauges.....	EL-99
Gear components (M/T)	MT-15
Generator	EL-43
Generic scan tool (GST)	EC-77
Glass	BT-43
Grease.....	MA-8
Grille - See Exterior.....	BT-5
Ground distribution	EL-20
H	
Harness connector	EL-5
Harness connector inspection.....	GI-20
Harness layout	EL-276
Hazard warning lamp	EL-80
Headlamp	EL-57
Headlamp aiming control	EL-61
Headlamp leveler - See Headlamp aiming control	EL-61
Headlining - See Roof trim.....	BT-22
Heated oxygen sensor heater.....	EC-168, EC-176
Heated oxygen sensor (HO2S).....	EC-156, EC-163, EC-170, EC-178, EC-186
HEATER - Wiring diagram	HA-21
Heater unit (heater core).....	HA-75
Height (Dimensions).....	GI-44
HFC134a (R134a) system introduction.....	HA-14
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure	HA-60, HA-65
HFC134a (R134a) system service tools	HA-9
HFC134a system service equipment precaution	HA-12
High clutch.....	AT-252
H/LAMP - Wiring diagram	EL-58
Hood	BT-5
Horn.....	EL-142
HORN - Wiring diagram	EL-142
How to erase DTC for OBD system	EC-58
I	
IACV-AAC valve	EC-330
IACV-FICD solenoid valve.....	EC-467
IATS - Wiring diagram.....	EC-129
Identification plate	GI-42
Idle air control valve (IACV)	EC-330
Idle mixture ratio.....	EC-37
Idle speed.....	EC-37
Ignition coil	EC-445
Ignition timing	EC-37
Ignition wire inspection.....	EC-248
IGN/SG - Wiring diagram	EC-445
ILL - Wiring diagram.....	EL-86
Illuminated entry system	EL-88
Illumination	EL-85
INJECT - Wiring diagram	EC-451
Injector	EC-453
Injector removal and installation	EC-35
Input shaft (FF M/T)	MT-20
Instrument panel.....	BT-15
Intake air temperature sensor	EC-129
Intake door control linkage adjustment	HA-42
Intake manifold	EM-10
Integrated homelink transmitter.....	EL-255
Interior	BT-18
Interior lamp	EL-88
Interior lamp on-off control	EL-89
INT/L - Wiring diagram	EL-97
J	
Jacking points.....	GI-45, GI-46

ALPHABETICAL INDEX

K

Keyless entry system - See Multi-remote control system.....	EL-205
Knock sensor (KS)	EC-249
Knuckle spindle	FA-10
KS - Wiring diagram.....	EC-249

L

Length (Dimensions)	GI-44
License lamp	EL-70
Lifting points	GI-45
Line pressure solenoid valve	AT-133
Line pressure test (A/T)	AT-57
Liquid gasket application.....	EM-2
LOAD - Wiring diagram.....	EC-471
Location of electrical units.....	EL-273
Lock, door.....	BT-12
Low and reverse brake	AT-262
Lubricant (R134a) A/C.....	HA-67
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C	HA-67
Lubrication-locks, hinges and hood latches.....	MA-22
Luggage compartment trim	BT-23
Luggage room lamp	EL-97

M

MAFS - Wiring diagram.....	EC-118
Magnet clutch.....	HA-71
MAIN - Wiring diagram.....	EC-113
Main drive gear (M/T).....	MT-15
Mainshaft (M/T)	MT-25
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-210
Malfunction indicator lamp (MIL).....	EC-60
Manual transaxle number.....	GI-43
Manual transmission oil replacement.....	MA-17
Map lamp.....	EL-97
Mass air flow sensor (MAFS).....	EC-118
Master cylinder (brake)	BR-13
Master cylinder (clutch)	CL-7
Meter	EL-99
METER - Wiring diagram.....	EL-105
MIL & Data link connectors circuit	EC-474
MIL/DL - Wiring diagram.....	EC-474
MIRROR - Wiring diagram.....	EL-167
Mirror, door.....	BT-46
Mirror, out side	BT-46

Misfire	EC-244
Mode door control linkage adjustment.....	HA-38
Model variation	GI-41
Molding - See Exterior	BT-24
M/T major overhaul	MT-14
M/T removal and installation	MT-9
MULTI - Wiring diagram	EL-210
Multi link/lower ball joint (rear)	RA-14
Multiport fuel injection (MFI) system	EC-18
Multiport fuel injection precautions.....	GI-6
Multi-remote control system.....	EL-205

N

NATS - Wiring diagram	EL-259
Neutral position switch	EC-428
NVH troubleshooting (BR).....	BR-5
NVH troubleshooting (CL)	CL-3
NVH troubleshooting (EM)	EM-8
NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (RA).....	RA-3
NVH troubleshooting (ST)	ST-5
NVIS (Nissan vehicle immobilizer system)	EL-257

O

Oil change (capacity)	MA-13
Oil jet	LC-4
Oil pan (engine).....	EM-15
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine)	LC-8
Oil pump (A/T)	AT-231
Oil pump (engine).....	LC-6
Oil pump regulator valve (engine)	LC-8
Oil seal replacement (engine)	EM-26
On board diagnostic system	EC-45
Operating cylinder (clutch)	CL-8
Out side mirror	BT-46
Overdrive control switch	AT-195
Overrun clutch	AT-256
Overrun clutch solenoid valve	AT-154
Oversize piston	EM-48
Oxygen sensor (O2S)	EC-156, EC-163, EC-170, EC-178, EC-186

P

Parking brake control	BR-37
Parking lamp	EL-70, EL-72
Park/Neutral position switch.....	EC-428
Park/neutral position switch (A/T)	AT-78

ALPHABETICAL INDEX

Park/neutral position switch (M/T).....	MT-8	Refrigerant general precaution.....	HA-3
PCV (positive crankcase ventilation)	EC-33	Refrigerant lines	HA-69
PGC/V - Wiring diagram	EC-386	Refrigeration cycle.....	HA-14
Pilot bushing replacement.....	EM-54	Release bearing (clutch)	CL-9
Piston assembly	EM-52	Removal and installation (A/T).....	AT-207
Piston pin inspection	EM-46	Resistor	EC-450
Piston ring inspection.....	EM-46	Reverse clutch.....	AT-249
Piston to bore clearance	EM-48	Reverse idler shaft (M/T)	MT-15
PNP/SW - Wiring diagram	EC-428	Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-8
POWER - Wiring diagram.....	EL-12	Reverse main gear (M/T)	MT-15
Power door lock	EL-190	Revolution sensor (A/T)	AT-91
Power door mirror	EL-166	Road wheel size.....	GI-44
Power seat	EL-167	Roof trim.....	BT-22
Power steering fluid level.....	ST-6, MA-21	Room lamp.....	EL-88
Power steering gear.....	ST-14	Room lamp - See Interior lamp.....	EL-88
Power steering hydraulic pressure.....	ST-9	ROOM/L - Wiring diagram	EL-92
Power steering oil pressure switch	EC-463	Rotor disc (front)	FA-10
Power steering oil pump	ST-20	RRO2 - Wiring diagram.....	EC-196
Power steering system bleeding.....	ST-7	RRO2/H - Wiring diagram	EC-225
Power supply routing.....	EL-10		
Power transistor & ignition coil.....	EC-445		
Power window	EL-185		
Precautions (General)	GI-4		
PRE/SE - Wiring diagram	EC-304		
Pressure plate - See Clutch cover.....	CL-11		
Pressure test (A/T)	AT-57		
PST/SW - Wiring diagram.....	EC-463		
R			
R134a - See HFC134a	HA-2		
Radiator	LC-14		
Radiator fan - See Cooling fan	LC-14		
Radio - See Audio	EL-157		
Rear axle	RA-4		
Rear axle (disc brake type).....	RA-8		
Rear axle (drum brake type).....	RA-8		
Rear bumper	BT-8		
Rear combination lamp removal and installation	BT-29		
Rear disc brake	BR-28		
Rear door	BT-14		
Rear drum brake	BR-23		
Rear heated oxygen sensor (HO2S)	EC-196,		
EC-204, EC-212, EC-219			
Rear panel finisher	BT-18		
Rear seat	BT-34		
Rear seat belt.....	RS-6		
Rear suspension	RA-10		
Rear window.....	BT-44		
Rear window defogger	EL-145		
Refrigerant connection precaution	HA-4		
Refrigerant discharging evacuating charging.....	HA-65		
S			
SAE J1930 terminology list.....	GI-50		
Seal - See Exterior.....	BT-24		
SEAT - Wiring diagram	EL-167		
Seat belt, front.....	RS-4		
Seat belt inspection.....	RS-8, MA-22		
Seat belt pre-tensioner.....	RS-12, RS-14		
Seat belt pre-tensioner disposal	RS-26		
Seat belt, rear.....	RS-6		
Seat, front.....	BT-32		
Seat, rear.....	BT-34		
Self-diagnostic results	EC-60		
SHIFT - Wiring diagram	AT-198		
Shift control components (M/T).....	MT-16		
Shift fork (M/T)	MT-16		
Shift lock system	AT-197		
Shift schedule.....	AT-302		
Shift solenoid valve A (A/T).....	AT-99, AT-111		
Shift solenoid valve B (A/T)	AT-99		
Shock absorber (front)	FA-24		
Shock absorber (rear)	RA-12		
Side air bag	RS-12		
Side trim	BT-18		
Smart entrance control unit.....	EL-250		
Spare tire size	GI-44		
Spark plug replacement	MA-15		
Speedometer	EL-101		
Spiral cable.....	RS-20		
Spot lamp	EL-97		
Spring (Wheelarch) height	FA-6		
SROOF - Wiring diagram	EL-163		

ALPHABETICAL INDEX

SRS - See Supplemental Restraint System	RS-12	
SRS - Wiring diagram	RS-38	
SRS Trouble diagnoses	RS-33	
S/SIG - Wiring diagram	EC-454	
Stabilizer bar (front)	FA-25	
Stabilizer bar (rear)	RA-14	
Stall test (A/T)	AT-54	
Standardized relay	EL-7	
START - Wiring diagram	EL-34	
Start signal	EC-454	
Starter	EL-33	
Starting system	EL-33	
Steering gear and linkage inspection	MA-21	
Steering knuckle	FA-10	
Steering linkage	ST-14	
Steering switch	EL-56	
Steering wheel and column	ST-10	
Steering wheel play	ST-8	
Steering wheel turning force	ST-7	
Stop lamp	EL-73	
STOP/L - Wiring diagram	EL-73	
Striking rod (M/T)	MT-16	
Strut (front)	FA-24	
Strut (rear)	RA-12	
Sun roof, electric	EL-163	
Sunroof	BT-35	
Supplemental Restraint System	RS-12	
Supplemental restraint system - Wiring diagram	RS-38	
Symbols and abbreviations	GI-10	
Symptom matrix chart	EC-91	
Synchronizer (M/T)	MT-15, MT-26	
System readiness test (SRT) code	EC-47	
T		
Tachometer	EL-100	
Tail lamp	EL-70	
TAIL/L - Wiring diagram	EL-70	
TCM circuit diagram	AT-14	
TCM inspection table	AT-72	
Temperature control cable and linkage adjustment	HA-49	
TFTS - Wiring diagram	EC-240	
THEFT - Wiring diagram	EL-234	
Theft warning system	EL-228	
Thermal protector	HA-48	
Thermo control amp	HA-48	
Thermostat	LC-13	
Three way catalyst	EC-280	
Three way catalyst precautions	GI-6	
Throttle bodies	EM-10	
Throttle drum adjustment	FE-3	
Throttle position sensor adjustment		EC-83
Throttle position sensor (TPS)		EC-139
Throttle position switch		AT-153, AT-196
Throwout bearing - See Clutch release bearing		CL-9
Tie-rod		ST-17
Tie-rod ball joints		ST-17
Tightening torque of standard bolts		GI-49
Timing chain		EM-19
Tire rotation		MA-20
Tire size		GI-44
TLID - Wiring diagram		EL-165
Torque converter clutch solenoid valve		AT-120
Torque converter installation		AT-208
Tow truck towing		GI-47
TPS - Wiring diagram		EC-139
TP/SW - Wiring diagram		EC-335
Transmission case (M/T)		MT-14
Transverse link (front)		FA-26
Tread-FR&RR (Dimensions)		GI-44
Trim		BT-18
Triple pressure switch		HA-48
Trouble diagnoses		GI-23
Trunk lid		BT-8
Trunk lid opener - See Trunk lid		BT-8
Trunk lid opener, electric		EL-165
Trunk room lamp		EL-97
Trunk room trim		BT-23
TURN - Wiring diagram		EL-82
Turn signal lamp		EL-80
Two trip detection logic		EC-45
Two-pole lift		GI-47

T

Tachometer	EL-100
Tail lamp	EL-70
TAIL/L - Wiring diagram	EL-70
TCM circuit diagram	AT-14
TCM inspection table	AT-72
Temperature control cable and linkage adjustment	HA-49
TFTS - Wiring diagram	EC-240
THEFT - Wiring diagram	EL-234
Theft warning system	EL-228
Thermal protector	HA-48
Thermo control amp	HA-48
Thermostat	LC-13
Three way catalyst	EC-280
Three way catalyst precautions	GI-6
Throttle bodies	EM-10
Throttle drum adjustment	FE-3

U

Under body	BT-50
------------------	-------

V

Vacuum cut valve	EC-424
Vacuum cut valve bypass valve	EC-415, EC-420
Vacuum hose (brake system)	BR-18
Vacuum hose drawing (Engine control)	EC-16
Valve clearance	EM-38
Valve guide	EM-34
Valve lifter	EM-37
Valve seat	EM-36
Valve spring	EM-37
Vanity mirror lamp	EL-97
Vehicle identification number	GI-42
Vehicle recovery (freeing a stuck vehicle)	GI-48
Vehicle speed sensor (VSS)	EC-326

ALPHABETICAL INDEX

Vent mode switch	HA-15	Wheel hub (rear)	RA-8
VENT/V - Wiring diagram.....	EC-299, EC-405	Wheel sensors (ABS).....	BR-40
Viscosity number (SAE)	MA-8	Wheel size.....	GI-44
VSS - Wiring diagram	EC-326	Wheelarch height	FA-6
W		Wheelbase (Dimensions)	GI-44
WARN - Wiring diagram.....	EL-117	Width (Dimensions)	GI-44
Warning buzzer	EL-121	WINDOW - Wiring diagram.....	EL-187
Warning chime	EL-121	Window antenna.....	EL-162
Warning lamps	EL-114	Window, back	BT-44
Washer, front.....	EL-134	Window, door.....	BT-12
Water pump.....	LC-11	Window, rear	BT-44
Water temperature gauge	EL-100	Windshield	BT-43
Weatherstrip - See Exterior.....	BT-24	Windshield washer - See Front washer.....	EL-134
Wheel alignment (front).....	FA-7	Windshield wiper - See Front wiper.....	EL-134
Wheel alignment (rear).....	RA-6	WIPER - Wiring diagram.....	EL-136
Wheel balance.....	MA-20	Wiper and washer	EL-134
Wheel bearing (front axle).....	FA-7	Wiper, front.....	EL-134
Wheel bearing (rear)	RA-6	Wiring Diagram (Cell code) list	EL-293
Wheel hub (front)	FA-10	Wiring diagrams	GI-11
		Withdrawal lever (clutch).....	CL-9
		Wrist pin - See Piston pin inspection.....	EM-46

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

NOTES