

CONTENTS

ACCELERATOR CONTROL SYSTEM 2	SERVICE DATA AND SPECIFICATIONS (SDS)4	F
Removal and Installation2	Accelerator Control 4	
	PEDAL TRAVEL4	

Μ

D

Ε

G

Н

J


Κ

L

ACCELERATOR CONTROL SYSTEM


Removal and Installation

- 1. Disconnect the accelerator position sensor electrical connector.
- a. Pull the connector lock back to unlock the connector from the accelerator pedal position sensor as shown.
- b. Pull up on the connector to disconnect it from the accelerator pedal position sensor as shown.

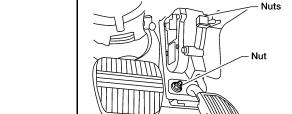

2. Remove the upper and lower accelerator pedal nuts.

- 3. Remove the accelerator pedal and accelerator position sensor assembly.
- a. Do not disassemble the pedal assembly. Do not remove the accelerator pedal position sensor from the pedal assembly.
- b. Avoid impact from dropping during handling.
- c. Keep the pedal assembly away from water.
- d. For electrical inspection of the accelerator pedal position sensor. Refer to <u>EC-49</u>, "Accelerator Pedal <u>Released Position Learning"</u>.

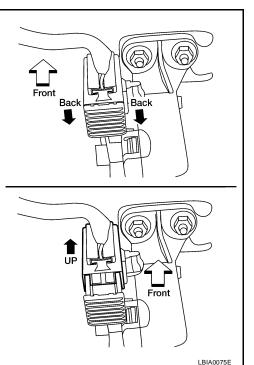


PFP:18005

I BIA0060E

EBS008QZ

- 4. Installation should be performed in the reverse procedure of removal.
 - When the harness connector of the accelerator pedal position sensor is disconnected, perform the "Accelerator pedal position released learning". Refer to <u>EC-49</u>, "Accelerator Pedal <u>Released Position Learning</u>".
 - Check the accelerator pedal for smooth operation. There should be no binding or sticking when applying or releasing the accelerator pedal.

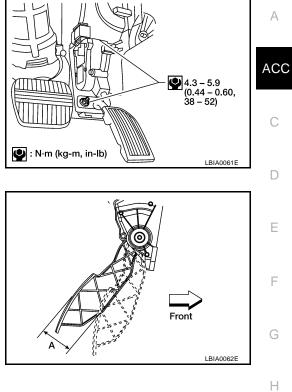

J

Κ

L

Μ

• Check that the accelerator pedal moves through the full specified distance of pedal travel.

Pedal travel : 52.6 - 58.2 mm (2.07 - 2.29 in) A

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Accelerator Control PEDAL TRAVEL

Accelerator control pedal - total travel

52.6 - 58.2 mm (2.07 - 2.29 in)

PFP:00030

EBS008R0