

CONTENTS

ACCELERATOR CONTROL SYSTEM 2	SERVICE DATA AND SPECIFICATIONS (SDS) 4	F
Removal and Installation2	Accelerator Control 4	
	PEDAL TRAVEL4	

Μ

D

Ε

G

Н

J

Κ

L

ACCELERATOR CONTROL SYSTEM

Removal and Installation

- 1. Disconnect the accelerator position sensor electrical connector.
- a. Pull the connector lock back to unlock the connector from the accelerator pedal position sensor as shown.
- b. Pull up on the connector to disconnect it from the accelerator pedal position sensor as shown.




2. Remove the upper and lower accelerator pedal nuts.

- 3. Remove the accelerator pedal and accelerator position sensor assembly.
 - For electrical inspection of the accelerator pedal position sensor. Refer to <u>EC-539</u>, "ACCELERATOR <u>PEDAL POSITION SENSOR</u>" (QR25DE), <u>EC-1214</u>, "ACCELERATOR PEDAL POSITION SENSOR" (VQ35DE).

CAUTION:

- Do not disassemble the pedal assembly. Do not remove the accelerator pedal position sensor from the pedal assembly.
- Avoid impact from dropping during handling.
- Keep the pedal assembly away from water.

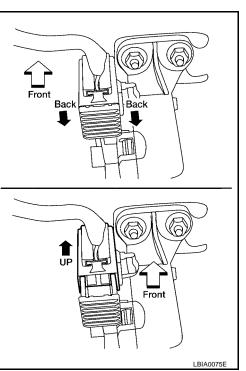


Nuts

I BIA0060E

PFP:18005

- 4. Installation should be performed in the reverse procedure of removal.
 - Check the accelerator pedal for smooth operation. There should be no binding or sticking when applying or releasing the accelerator pedal.

: 52.6 - 58.2 mm (2.07 - 2.29 in)

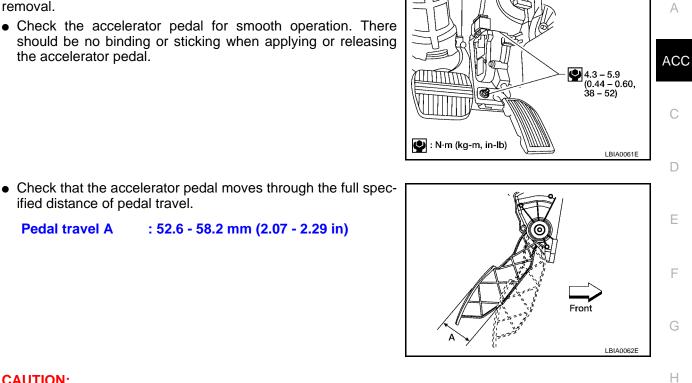

CAUTION:

ified distance of pedal travel.

Pedal travel A

When the harness connector of the accelerator pedal position sensor is disconnected, perform the "Accelerator pedal released position learning". Refer to EC-48, "Accelerator Pedal Released (QR25DE), EC-672, "Accelerator Pedal Released Position Learning" Position Learning" (VQ35DE).

Μ

I

J

Κ

L

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS) Accelerator Control PEDAL TRAVEL

PFP:00030

EBS00EW4

Accelerator control pedal - total travel

52.6 - 58.2 mm (2.07 - 2.29 in)