

SECTION **STC**

STEERING CONTROL SYSTEM

A
B
C
D
E
F
STC
H
I
J
K
L
M
N
O
P

CONTENTS

BASIC INSPECTION	2	ECU DIAGNOSIS	15
DIAGNOSIS AND REPAIR WORKFLOW	2	POWER STEERING CONTROL UNIT	15
Work Flow	2	Reference Value	15
FUNCTION DIAGNOSIS	3	Fail Safe	16
EPS SYSTEM	3	WIRING DIAGRAM	18
System Diagram	3	ELECTRONICALLY CONTROLLED POWER	
System Description	3	STEERING SYSTEM	18
Component Parts Location	4	Wiring Diagram	18
Component Description	5	SYMPTOM DIAGNOSIS	21
COMPONENT DIAGNOSIS	6	UNBALANCE STEERING WHEEL TURNING	
POWER SUPPLY AND GROUND CIRCUIT	6	FORCE (TORQUE VARIATION)	21
Description	6	Description	21
Diagnosis Procedure	6	Diagnosis Procedure	21
POWER STEERING SOLENOID VALVE	8	PRECAUTION	22
Description	8	PRECAUTIONS	22
Diagnosis Procedure	8	Precaution for Supplemental Restraint System	
ENGINE SPEED SIGNAL CIRCUIT	10	(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
Description	10	SIONER"	22
Diagnosis Procedure	10	REMOVAL AND INSTALLATION	23
VEHICLE SPEED SIGNAL CIRCUIT	13	EPS CONTROL UNIT	23
Description	13	Removal and Installation	23
Diagnosis Procedure	13		

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000005433787

DETAILED FLOW

1. COLLECT THE INFORMATION FROM THE CUSTOMER

It is also important to clarify customer complaints before inspection. First of all, reproduce symptoms, and understand them fully. Ask customer about his/her complaints carefully. In some cases, it will be necessary to check symptoms by driving vehicle with customer.

>> GO TO 2.

2. BASIC INSPECTION

1. Check the power steering fluid leakage and the power steering fluid level. Refer to [ST-7, "Inspection"](#).
2. Check the drive belt tension. Refer to [EM-16, "Checking Drive Belts"](#) (QR25DE), [EM-120, "Checking Drive Belts"](#) (VQ35DE).
3. Check the power steering gear for damages, cracks and oil leakage. Refer to [ST-7, "Inspection"](#).
4. Check the relief oil pressure. Refer to [ST-11, "Inspection"](#).

>> GO TO 3.

3. TROUBLE DIAGNOSIS FOR SYMPTOM

Perform the diagnosis by symptom. Refer to [STC-21, "Description"](#).

>> GO TO 4.

4. FINAL CHECK

Check the input/output standard values for the power steering control unit.

Are the power steering control unit input/output values within standard ranges respectively?

YES >> Inspection End

NO >> GO TO 2.

EPS SYSTEM

< FUNCTION DIAGNOSIS >


FUNCTION DIAGNOSIS

EPS SYSTEM

System Diagram

INFOID:000000005433788


CONTROL DIAGRAM

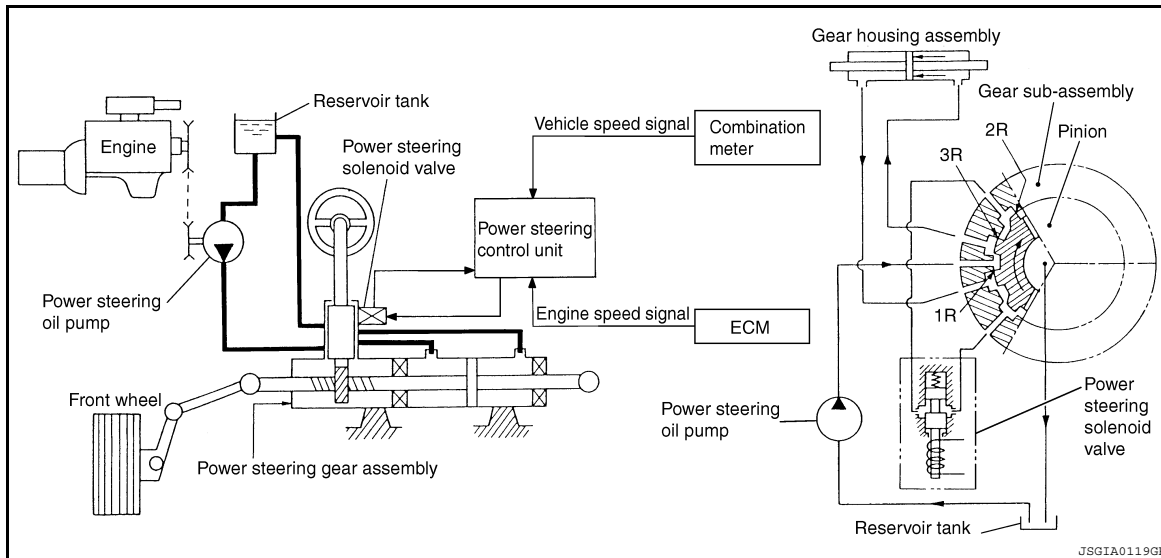

System Description


INFOID:000000005433789

- The EPS system controls the power steering solenoid valve through the power steering control unit.
- The valve driving voltage to control the power steering solenoid valve varies according to the vehicle speed.

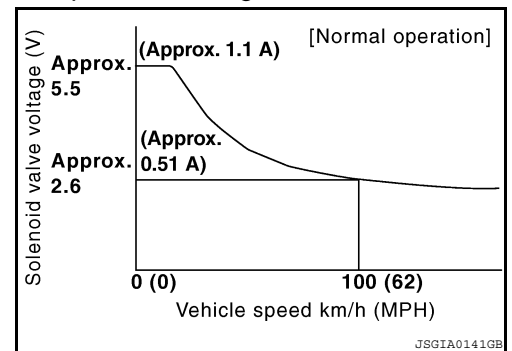

OPERATION PRINCIPLE

During Parking (When Turning The Steering Wheel To The Right)

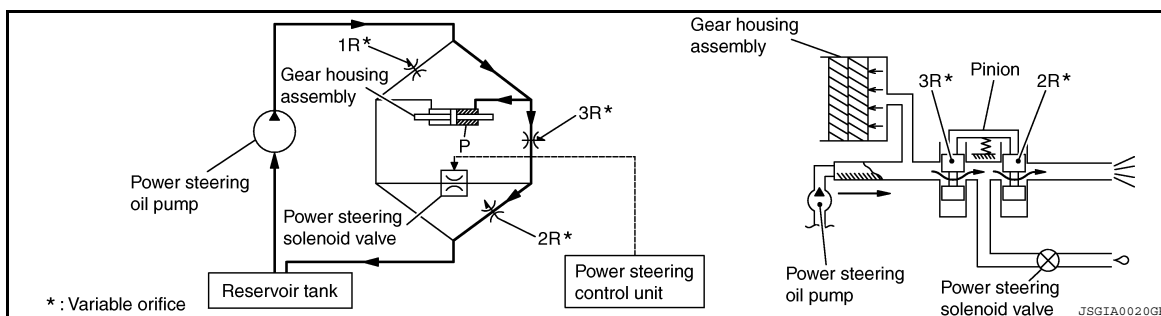


1. Power steering solenoid valve is closed while a vehicle is stopped.
2. Pinion "1R", "2R" and "3R" are closed depending on steering torque of steering wheel.
3. Oil pressure "P" in the gear housing assembly is the sum of oil pressures occurred in "2R" and "3R". This results in a light steering force because of high pressure.

EPS SYSTEM

< FUNCTION DIAGNOSIS >


During High-speed Operation

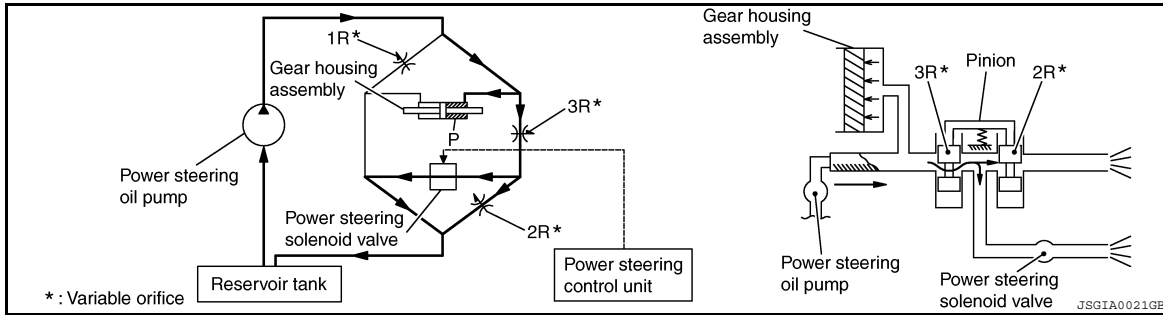

1. Power steering solenoid valve is opened during high-speed operation.
2. Pinion "1R", "2R" and "3R" are closed depending on steering torque of steering wheel.
3. Oil pressure "2R" does not occur because the power steering solenoid valve is on full throttle.
4. Oil pressure "P" in the gear housing assembly includes only oil pressure occurred in "3R" and results in a heavy steering force.

Component Parts Location

INFOID:000000005433790

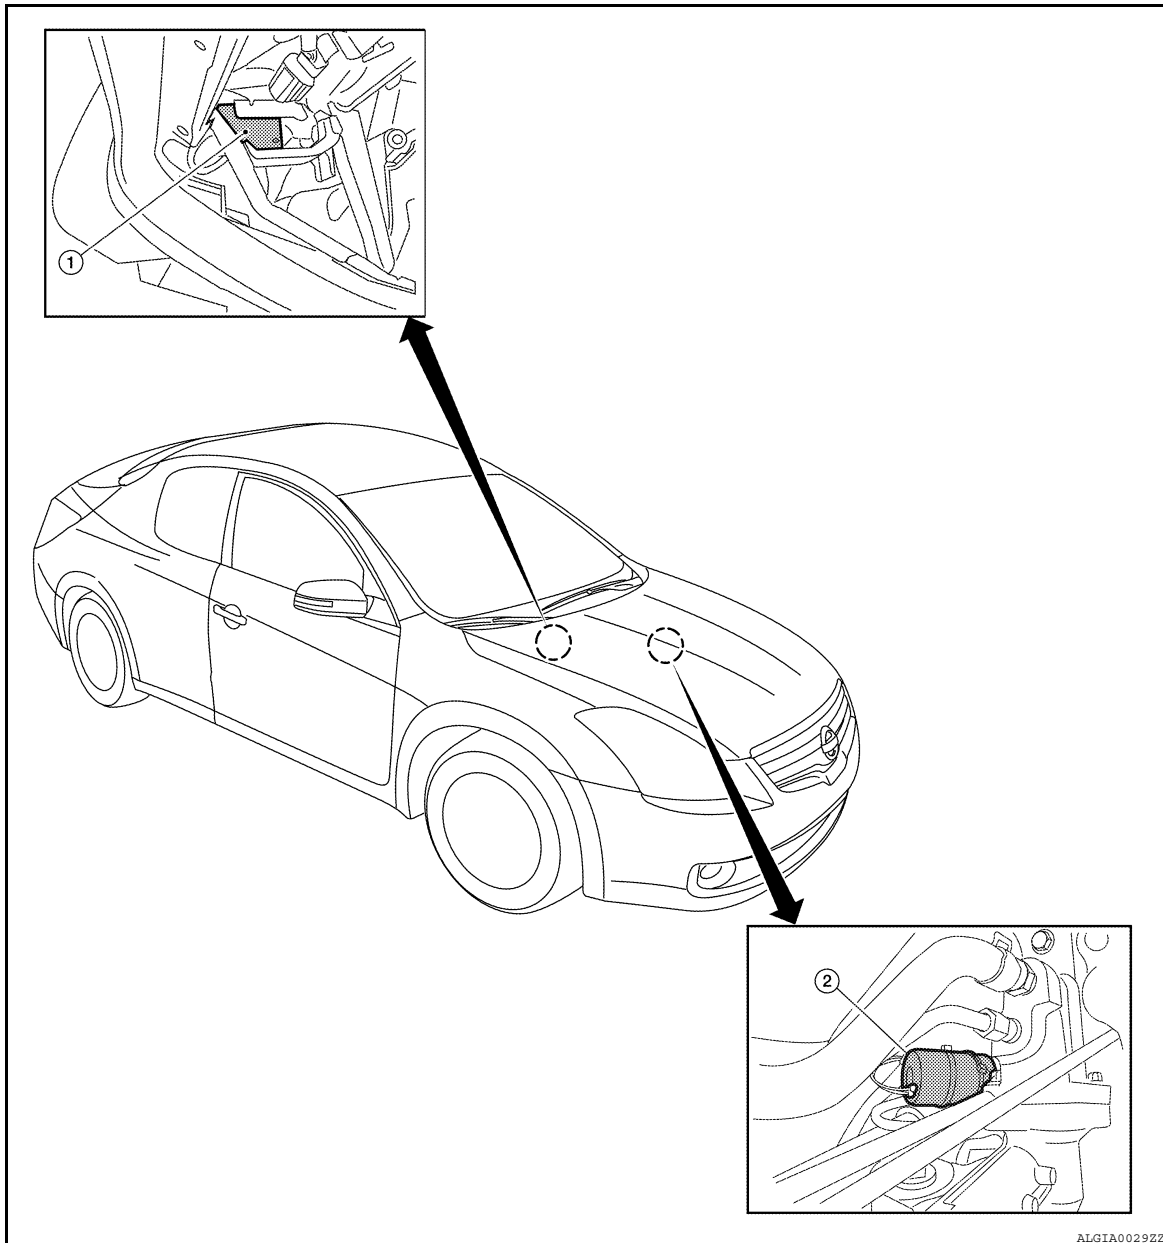

EPS SYSTEM

< FUNCTION DIAGNOSIS >

1. Power steering control unit M59
(view with glove box removed)
2. Power steering solenoid valve E14

A

Component Description

INFOID:000000005433791

B

Component parts	Function
Power steering control unit	<ul style="list-style-type: none">• Signals from various sensors control the driving voltage to the power steering solenoid valve.• The power steering control unit controls the driving voltage to the power steering solenoid valve for maintaining the power steering assist force when the fail-safe function is activated. (The engine speed signals control EPS system if any vehicle speed signal error is detected.)
Combination meter	Refer to STC-13, "Description" .
ECM	Refer to STC-10, "Description" .
Power steering solenoid valve	Refer to STC-8, "Description" .

C

D

E

F

STC

H

I

J

K

L

M

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

Description

INFOID:000000005433792

- EPS system functions by ignition power supply.

Diagnosis Procedure


INFOID:000000005433793

Regarding Wiring Diagram information, refer to [STC-18. "Wiring Diagram"](#).

1. CHECK POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect power steering control unit harness connector.
3. Check voltage between power steering control unit harness connector M59 terminal 3 and ground.

Power steering control unit		Voltage (Approx.)
Connector	Terminal	
M59	3 - Ground	0 V

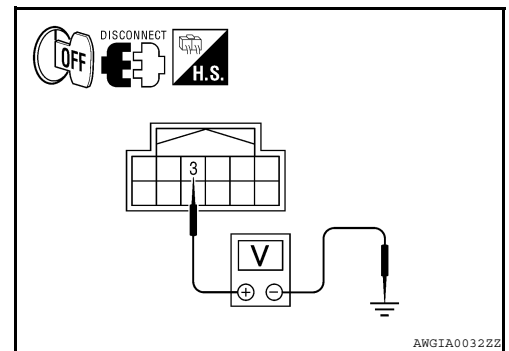


4. Turn the ignition switch ON.

CAUTION:

Never start the engine.

5. Check voltage between power steering control unit harness connector M59 terminal 3 and ground.

Power steering control unit		Voltage (Approx.)
Connector	Terminal	
M59	3 - Ground	Battery voltage

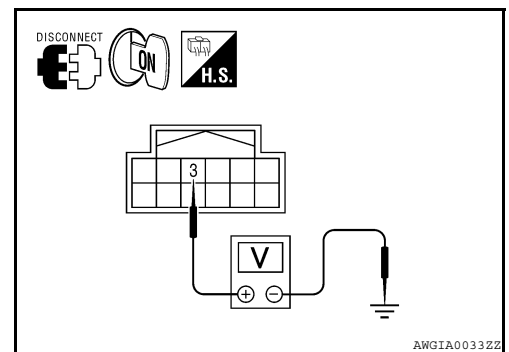

Is the inspection result normal?

YES >> GO TO 2.


NO >> Check the following. If any items are damaged, repair or replace damaged parts.

- 10A fuses (#3) open
- Harness for short or open between ignition switch and power steering control unit harness connector No. 3 terminal.
- Ignition switch.

2. CHECK GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Check continuity between power steering control unit harness connector M59 terminal 6 and ground.

Power steering control unit		Continuity
Connector	Terminal	
M59	6 - Ground	YES

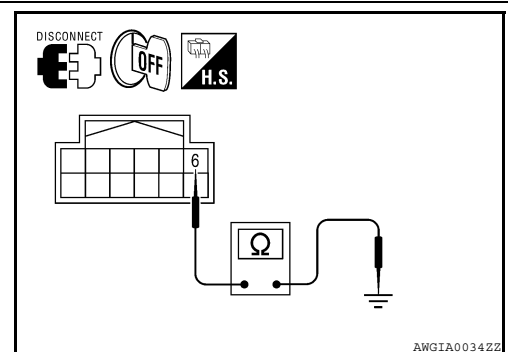

Is the inspection result normal?

YES >> GO TO 3.

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

NO >> Repair open circuit or short to power in harness or connectors.

3.CHECK TERMINALS AND HARNESS CONNECTORS

Check power steering control unit pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Inspection End

NO >> Repair or replace damaged parts.

A

B

C

D

E

F

STC

H

I

J

K

L

M

N

O

P

POWER STEERING SOLENOID VALVE

< COMPONENT DIAGNOSIS >

POWER STEERING SOLENOID VALVE

Description

INFOID:000000005433794

- Power steering solenoid valve controls the power steering oil pressure in the gear housing assembly.

Diagnosis Procedure


INFOID:000000005433795

Regarding Wiring Diagram information, refer to [STC-18, "Wiring Diagram"](#).

1. CHECK POWER STEERING SOLENOID VALVE SIGNAL

1. Start engine.
2. Check voltage between power steering control unit harness connector M59 terminal 1 and ground.

Power steering control unit			Value (Approx.)
Connector	Terminal	Condition	
M59	1 - Ground	Vehicle speed: 0 km/h (0 MPH) (Engine is running)	4.4 - 6.6 V
		Vehicle speed: 100 km/h (62 MPH)	2.5 - 3.7 V

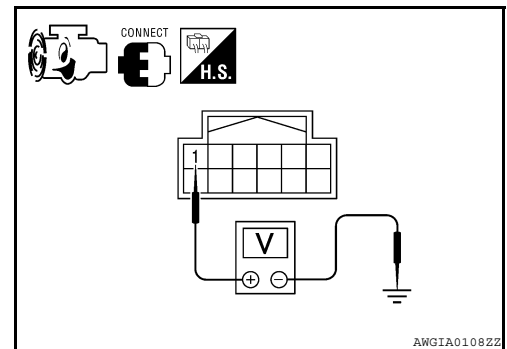


Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 4.

2. CHECK HARNESS BETWEEN POWER STEERING SOLENOID VALVE AND POWER STEERING CONTROL UNIT

1. Turn the ignition switch OFF.
2. Disconnect power steering solenoid valve harness connector.
3. Disconnect power steering control unit harness connector.
4. Check the continuity between power steering solenoid valve harness connector E14 (A) terminal 1 and 2 and the power steering control unit harness connector M59 (B) terminal 1 and 5.

Power steering solenoid valve		Power steering control unit		Continuity
Connector	Terminal	Connector	Terminal	
E14 (A)	1	M59 (B)	1	YES
	2		5	

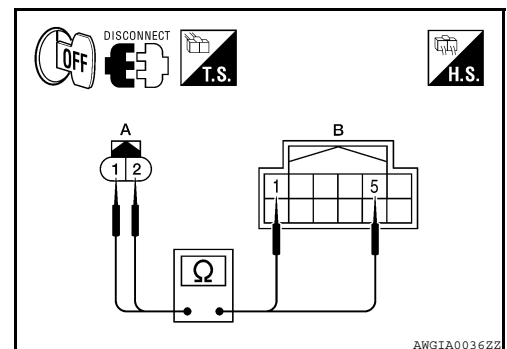

Also check harness for short to ground and short to power.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace damaged parts.

3. CHECK POWER STEERING SOLENOID VALVE

1. Check resistance between power steering solenoid valve terminals.

Power steering solenoid valve		Resistance (Approx.)
Terminal		
1 - 2		5 Ω

POWER STEERING SOLENOID VALVE

< COMPONENT DIAGNOSIS >

2. Check power steering solenoid valve by listening for its operation sound while applying battery voltage to power steering solenoid valve terminal 1 (positive) and battery ground to terminal 2 (negative).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace power steering solenoid valve. Refer to [ST-27, "Exploded View"](#).

4. CHECK TERMINALS AND HARNESS CONNECTORS

- Check power steering control unit pin terminals for damage or loose connection with harness connector.
- Check power steering solenoid valve pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Inspection End

NO >> Repair or replace damaged parts.

A
B
C
D
E
F
H
I
J
K
L
M
N
O
P

STC

ENGINE SPEED SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

ENGINE SPEED SIGNAL CIRCUIT

Description

INFOID:000000005433796

- ECM sends engine speed signal to power steering control unit.

Diagnosis Procedure

INFOID:000000005433797

Regarding Wiring Diagram information, refer to [STC-18, "Wiring Diagram"](#).

1.PERFORM ECM SELF-DIAGNOSIS

Ⓜ With CONSULT-III

Perform ECM self-diagnosis.

Is any error system detected?

- YES >> Check the error system.
NO >> GO TO 2.

2.CHECK HARNESS BETWEEN ECM AND POWER STEERING CONTROL UNIT


1. Turn the ignition switch OFF.
2. Disconnect ECM harness connector E10 (QR25DE except California), E31 (QR25DE California) or E32 (VQ35DE).
3. Disconnect power steering control unit harness connector.
4. Check continuity between ECM harness connector E10 (QR25DE except California), E31 (QR25DE California) or E32 (VQ35DE) (A) terminal 94 and power steering control unit harness connector M59 (B) terminal 10.

ECM		Power steering control unit		Continuity
Connector	Terminal	Connector	Terminal	
E10 (QR25DE except California) (A)	94	M59 (B)	10	YES
E31 (QR25DE California) (A)				
E32 VQ35DE (A)				

Also check harness for short to ground and short to power.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace damaged parts.

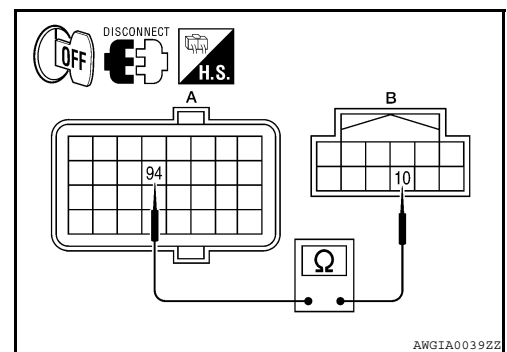


3.CHECK ENGINE SPEED SIGNAL (ECM SIDE)

ENGINE SPEED SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Connect ECM harness connector.
3. Check signal between ECM harness connector E10 (QR25DE except California), E31 (QR25DE California) or E32 (VQ35DE) terminal 94 and ground with oscilloscope.

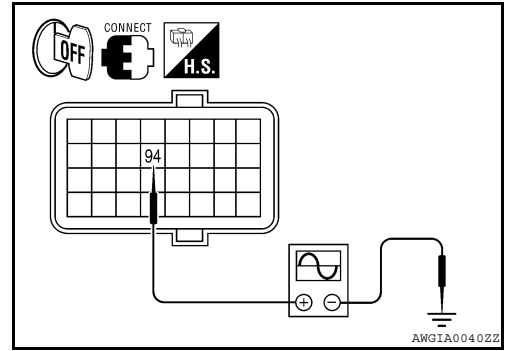

ECM			Value (Approx.)
Connector	Terminal	Condition	
E10 (QR25DE except California) E31 (QR25DE California) E32 (VQ35DE)	94 - Ground	Engine speed: At idle (Warm-up condition)	QR25DE: VQ35DE:
		Engine speed: Approx. 2,000 rpm (Warm-up condition)	QR25DE: VQ35DE:

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.


NO >> Replace ECM. Refer to [EC-36. "Component Parts Location"](#) (QR25DE for California), [EC-579. "Component Parts Location"](#) (QR25DE except for California), [EC-1074. "Component Parts Location"](#) (VQ35DE).





4. CHECK ENGINE SPEED SIGNAL (POWER STEERING CONTROL UNIT SIDE)

ENGINE SPEED SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Connect power steering control unit harness connector.
3. Check signal between power steering control unit harness connector M59 terminal 10 and ground with oscilloscope.

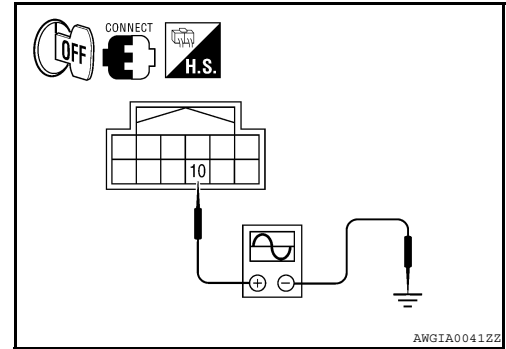

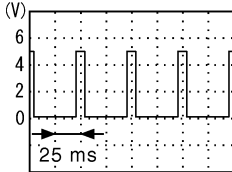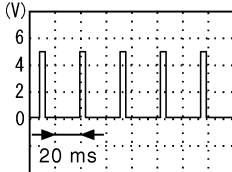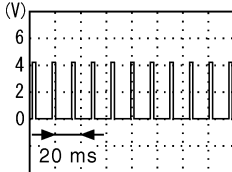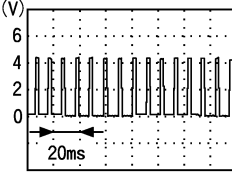Power steering control unit			Value (Approx.)
Connector	Terminal	Condition	
M59	10 - Ground	Engine speed: At idle (Warm-up condition)	QR25DE:  <small>JSGIA0144ZZ</small> VQ35DE:  <small>JSGIA0143ZZ</small>
		Engine speed: Approx. 2,000 rpm (Warm-up condition)	QR25DE:  <small>JSGIA0145ZZ</small> VQ35DE:  <small>PBIA3655J</small>

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace power steering control unit. Refer to [STC-23. "Removal and Installation"](#).

5. CHECK TERMINALS AND HARNESS CONNECTORS

- Check power steering control unit pin terminals for damage or loose connection with harness connector.
- Check ECM pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Inspection End

NO >> Repair or replace damaged parts.

VEHICLE SPEED SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

VEHICLE SPEED SIGNAL CIRCUIT

Description

INFOID:000000005433798

- Combination meter sends vehicle speed signal to power steering control unit.

Diagnosis Procedure

INFOID:000000005433799

Regarding Wiring Diagram information, refer to [STC-18, "Wiring Diagram"](#).

1. PERFORM COMBINATION METER SELF-DIAGNOSIS

Perform combination meter self-diagnosis.

Is any error system detected?

- YES >> Check the error system.
- NO >> GO TO 2.

2. CHECK HARNESS BETWEEN COMBINATION METER AND POWER STEERING CONTROL UNIT

1. Turn the ignition switch OFF.
2. Disconnect combination meter harness connector.
3. Disconnect power steering control unit harness connector.
4. Check continuity between combination meter harness connector M24 terminal 30 and power steering control unit harness connector M59 terminal 8.

Combination meter		Power steering control unit		Continuity
Connector	Terminal	Connector	Terminal	
M24	30	M59	8	YES

Also check harness for short to ground and short to power.

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace damaged parts.

3. CHECK VEHICLE SPEED SIGNAL (COMBINATION METER SIDE)


1. Turn the ignition switch OFF.
2. Connect combination meter harness connector.
3. Check combination meter input/output standard values. Refer to [MWI-60, "Reference Value"](#).

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Replace combination meter. Refer to [MWI-153, "Removal and Installation"](#).


4. CHECK VEHICLE SPEED SIGNAL (POWER STEERING CONTROL UNIT SIDE)

1. Turn the ignition switch OFF.
2. Connect power steering control unit harness connector.
3. Check signal between power steering control unit harness connector M59 terminal 8 and ground with oscilloscope.

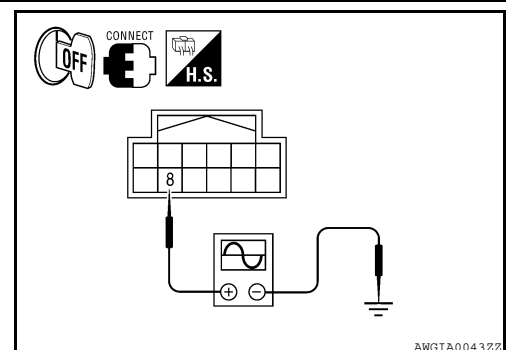

VEHICLE SPEED SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

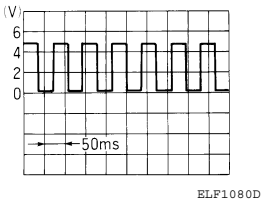Power steering control unit			Value (Approx.)
Connector	Terminal	Condition	
M59	8 - Ground	Vehicle speed: 40 km/h (25 MPH) CAUTION: Check air pressure of tire under standard condition.	

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace power steering control unit. Refer to [STC-23. "Removal and Installation"](#).

5. CHECK TERMINALS AND HARNESS CONNECTORS

- Check power steering control unit pin terminals for damage or loose connection with harness connector.
- Check combination meter pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Inspection End

NO >> Repair or replace damaged parts.

POWER STEERING CONTROL UNIT

< ECU DIAGNOSIS >


ECU DIAGNOSIS

POWER STEERING CONTROL UNIT

Reference Value

INFOID:000000005433800

TERMINAL LAYOUT

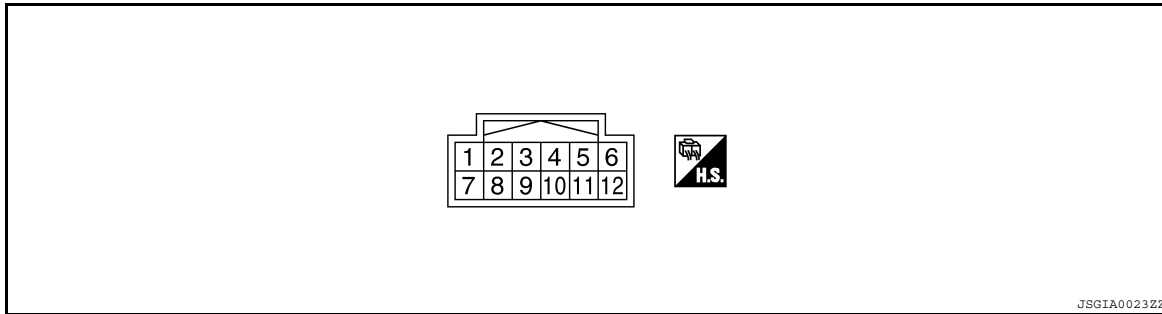





PHYSICAL VALUES

Terminal No.		Wire color	Description		Condition	Value (Approx.)
+	-		Signal name	Input/Output		
1	Ground	R/Y	Power steering solenoid valve voltage	Output	Vehicle speed: 0 km/h (0 MPH) (Engine is running)	4.4 - 6.6 V
					Vehicle speed: 100 km/h (62 MPH)	2.5 - 3.7 V
3	Ground	G	Ignition power supply	Input	Ignition switch: ON	Battery voltage
					Ignition switch: OFF	0 V
5	Ground	LG/W	Power steering solenoid valve ground	—	Always	0 V
6	Ground	B	Ground	—	Always	0 V
8	Ground	L/B	Vehicle speed signal	Input	Vehicle speed: 40 km/h (25 MPH) CAUTION: Check air pressure of tire under standard condition.	

ELF1080D

POWER STEERING CONTROL UNIT

< ECU DIAGNOSIS >

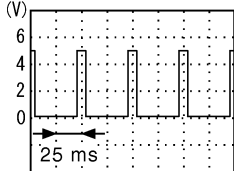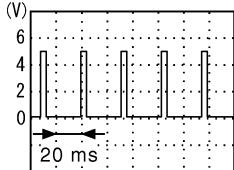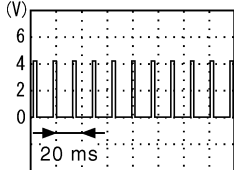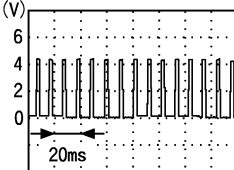Terminal No.		Wire color	Description		Condition	Value (Approx.)
+	-		Signal name	Input/Output		
10	Ground	V/W	Engine speed signal	Input	Engine speed: At idle (Warm-up condition)	QR25DE:  VQ35DE: 
					Engine speed: Approx. 2,000 rpm (Warm-up condition)	QR25DE:  VQ35DE: 

CAUTION:

When using circuit tester or oscilloscope to measure voltage for inspection, be sure not to extend forcibly any connector terminals.

Fail Safe

INFOID:000000005433802


EPS system

- EPS system enters the fail-safe mode (that allows the steering force to be controlled without impairing the drive ability) if any of the input/output signals to/from EPS system (power steering control unit) deviate from the standard.

NOTE:

The system enters the fail-safe mode if the engine speed remains at 1,500 rpm or more for over 10 seconds while the vehicle is stopped. This is normal.

- The fail-safe function is canceled when a vehicle speed signal of 2 km/h (1.2 MPH) or more is inputted or the key switch is turned OFF → ON. EPS system restores the normal operation at that time.

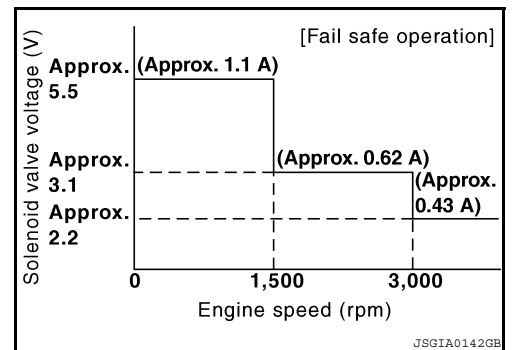

POWER STEERING CONTROL UNIT

< ECU DIAGNOSIS >

Function	Warning lamp	DTC No.	Detection point (malfunction part)	Malfunction part and cause
Fail-safe function	—	—	Vehicle speed signal	<ul style="list-style-type: none"> • Engine speed is 1,500 rpm or more and there is no vehicle speed signal input for over 10 seconds during vehicle travel. • Vehicle speed signal has abruptly dropped from 30 km/h (19 MPH) or more to 2 km/h (1.2 MPH) or less within 1.4 seconds.

A

B

C

D

E

F

STC

H

I

J

K

L

M

N

O

P

ELECTRONICALLY CONTROLLED POWER STEERING SYSTEM

< WIRING DIAGRAM >

WIRING DIAGRAM


ELECTRONICALLY CONTROLLED POWER STEERING SYSTEM

Wiring Diagram

INFOID:000000005433801

ELECTRONICALLY CONTROLLED POWER STEERING SYSTEM

◊QB◊ : QR25DE FOR CALIFORNIA
◊QC◊ : QR25DE EXCEPT FOR CALIFORNIA
◊VQ◊ : WITH VQ35DE

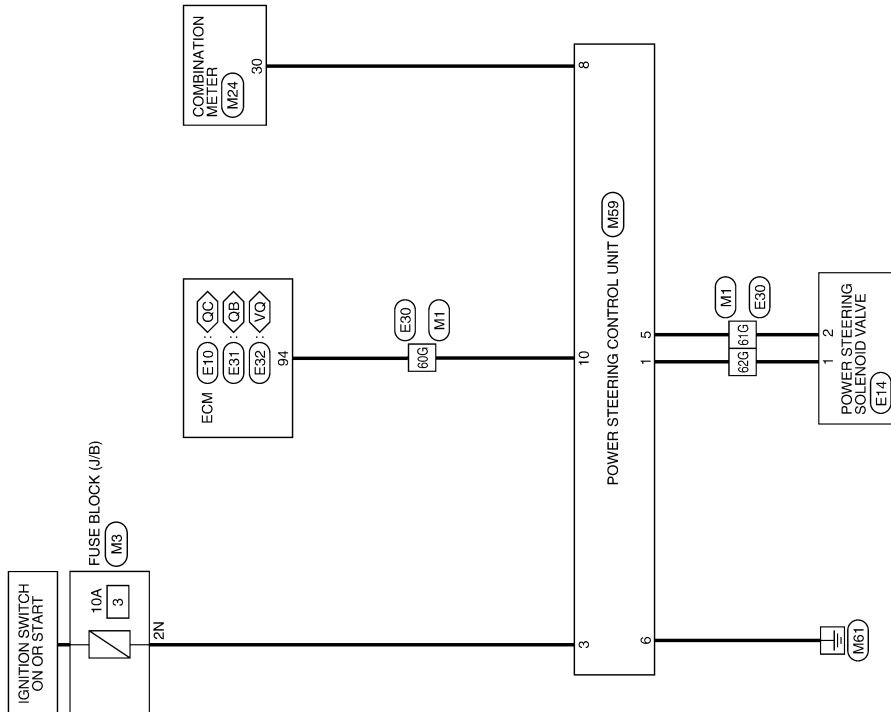


ABGWA0013GB

ELECTRONICALLY CONTROLLED POWER STEERING SYSTEM

< WIRING DIAGRAM >


ELECTRONICALLY CONTROLLED POWER STEERING SYSTEM CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

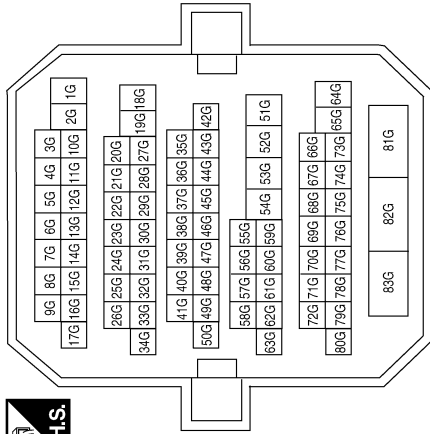

Terminal No.	Color of Wire	Signal Name
60G	V/W	-
61G	LG/W	-
62G	R/Y	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
2N	G	-

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
30	L/B	2 P/R OUT

Connector No.	M59
Connector Name	POWER STEERING CONTROL UNIT
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	R/Y	SOL
3	G	IGN
5	LG/W	SOL GND
6	B	GND
8	L/B	VEHICLE SPEED (2P)
10	V/W	ENG TACHO

Connector No.	E10
Connector Name	ECM (QR25DE EXCEPT FOR CALIFORNIA)
Connector Color	BLACK

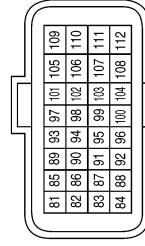

Terminal No.	Color of Wire	Signal Name
94	V/W	TACHO (CABIN)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


STC

ELECTRONICALLY CONTROLLED POWER STEERING SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
60G	GR	-
61G	LG	-
62G	V	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

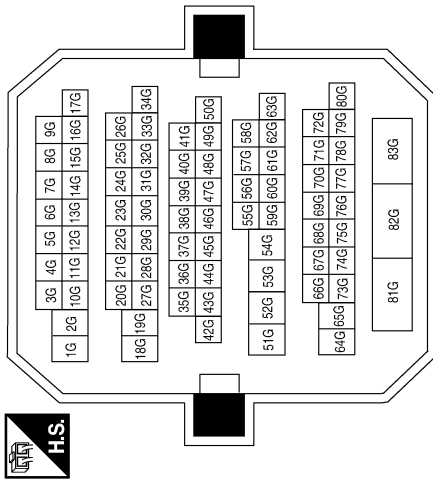


Connector No.	E14
Connector Name	POWER STEERING SOLENOID VALVE
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	V	POWER
2	LG	GND

Connector No.	E32
Connector Name	ECM (WITH VQ35DE)
Connector Color	BLACK

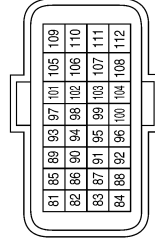

Terminal No.	Color of Wire	Signal Name
94	V/W	TACHO (CABIN)

Connector No.	E31
Connector Name	ECM (QR25DE FOR CALIFORNIA)
Connector Color	BLACK

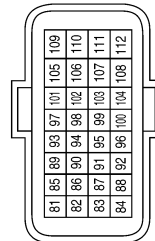

Terminal No.	Color of Wire	Signal Name
94	V/W	TACHO (CABIN)

ABGIA0036GB

UNBALANCE STEERING WHEEL TURNING FORCE (TORQUE VARIATION)

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

UNBALANCE STEERING WHEEL TURNING FORCE (TORQUE VARIATION)

Description

INFOID:000000005433803

- Hard steering when fully turning the steering wheel.
- Light steering when driving at a high speed.

Diagnosis Procedure

INFOID:000000005433804

1.CHECK SYSTEM FOR POWER SUPPLY AND GROUND

Perform trouble diagnosis for power supply and ground circuit. Refer to [STC-6, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair or replace damaged parts.

2.CHECK SYSTEM FOR VEHICLE SPEED SIGNAL

Perform trouble diagnosis for vehicle speed signal. Refer to [STC-13, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace damaged parts.

3.CHECK SYSTEM FOR ENGINE SPEED SIGNAL

Perform trouble diagnosis for engine speed signal. Refer to [STC-10, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace damaged parts.

4.CHECK SYSTEM FOR POWER STEERING SOLENOID VALVE

Perform trouble diagnosis for power steering solenoid valve. Refer to [STC-8, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Perform the symptom diagnosis for the steering system. Refer to [ST-4, "NVH Troubleshooting Chart"](#).
- NO >> Repair or replace damaged parts.

A
B
C
D
E
F
STC
H
I
J
K
L
M
N
O
P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005778720

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

EPS CONTROL UNIT

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION


EPS CONTROL UNIT

Removal and Installation

INFOID:00000000543807

REMOVAL

1. Remove audio or NAVI unit. Refer to [AV-77. "Removal and Installation"](#) (Base audio), [AV-242. "Removal and Installation"](#) (BOSE without NAVI), [AV-462. "Removal and Installation"](#) (BOSE with NAVI).
2. Remove power steering control unit (1).
3. Disconnect power steering control unit connector.

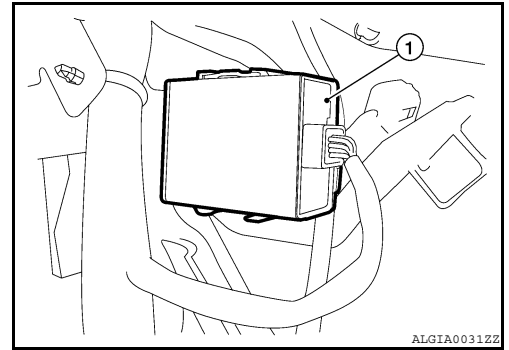

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
STC
H
I
J
K
L
M
N
O
P