

SECTION SE SEAT

CONTENTS

PRECAUTION	3	DRIVER SIDE : Removal and Installation - Seat Assembly	31
PRECAUTIONS	3	DRIVER SIDE : Removal and Installation - Seat-back Board	32
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	PASSENGER SIDE	32
Precaution for Work	3	PASSENGER SIDE : Exploded View	33
PREPARATION	4	PASSENGER SIDE : Removal and Installation - Seat Assembly	36
PREPARATION	4	PASSENGER SIDE : Removal and Installation - Seatback Board	37
Special Service Tools	4	HEATED SEAT SWITCH	37
Commercial Service Tool	4	HEATED SEAT SWITCH : Removal and Installation	37
CLIP LIST	5	REAR SEAT	39
Descriptions for Clips	5	Exploded View	39
WIRING DIAGRAM	9	Removal and Installation - Seat Cushion Assembly	42
POWER SEAT FOR DRIVER SIDE	9	Removal and Installation - Seat Assembly	42
Wiring Diagram	9	Removal and Installation - Seatback Hinge	43
POWER SEAT FOR PASSENGER SIDE	13	Removal and Installation - Seatback Latch Assembly	43
Wiring Diagram	13	Removal and Installation - Armrest Assembly	44
HEATED SEAT	17	Removal and Installation - Rear Seat Bolster	44
Wiring Diagram	17	UNIT DISASSEMBLY AND ASSEMBLY ...	45
SYMPTOM DIAGNOSIS	22	FRONT SEAT	45
SQUEAK AND RATTLE TROUBLE DIAGNOSES	22	DRIVER SIDE	45
Work Flow	22	DRIVER SIDE : Exploded View	45
Generic Squeak and Rattle Troubleshooting	23	DRIVER SIDE : Disassembly and Assembly	48
Diagnostic Worksheet	26	DRIVER SIDE : Side air bag module	57
REMOVAL AND INSTALLATION	28	DRIVER SIDE : Front Seat Heater	60
FRONT SEAT	28	PASSENGER SIDE	61
DRIVER SIDE	28	PASSENGER SIDE : Exploded View	61
DRIVER SIDE : Exploded View	28	PASSENGER SIDE : Disassembly and Assembly	64
		PASSENGER SIDE : Side air bag module	73
		PASSENGER SIDE : Front Seat Heater	76

REAR SEAT	77	Disassembly and Assembly	80
Exploded View	77		

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000010481817

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Work

INFOID:0000000010481818

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
 - Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
 - Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
 - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
 - For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION

< PREPARATION >

PREPARATION



PREPARATION

Special Service Tools

INFOID:0000000010481819

The actual shape of the tools may differ from those illustrated here.


Tool number (TechMate No.) Tool name	Description
— (J-39570) Chassis Ear	Locating the noise
— (J-46534) Trim Tool Set	Removing trim components
— (J-50397) NISSAN Squeak and Rattle Kit	Repairing the cause of noise

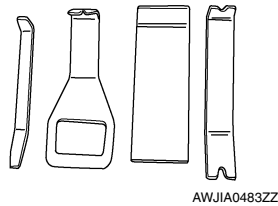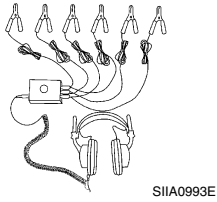

Commercial Service Tool

INFOID:0000000010481820

(TechMate No.) Tool name	Description
(J-39565) Engine Ear	Locating the noise

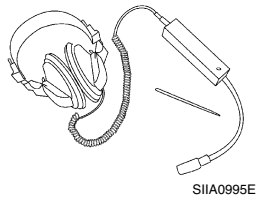

CLIP LIST


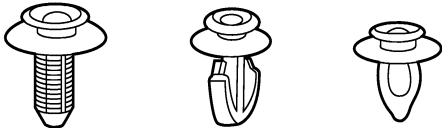





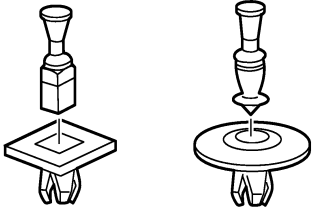
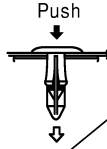
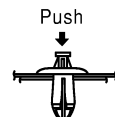

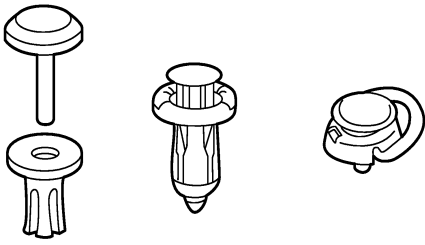
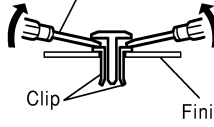

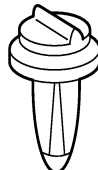
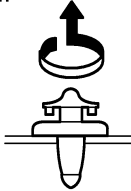
< PREPARATION >

CLIP LIST

Descriptions for Clips

INFOID:000000010481821

Replace any clips which are damaged during removal or installation.

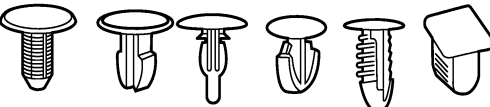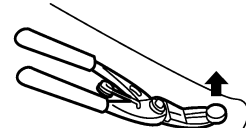
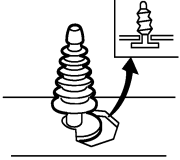
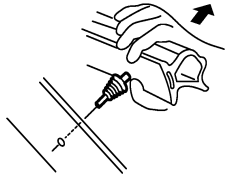

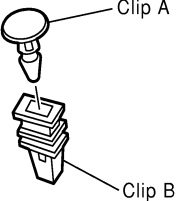
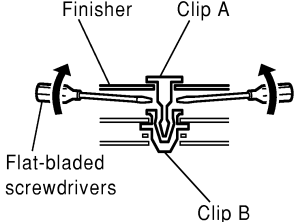

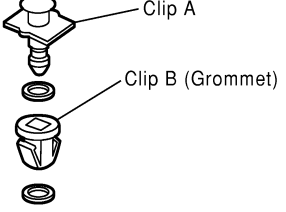
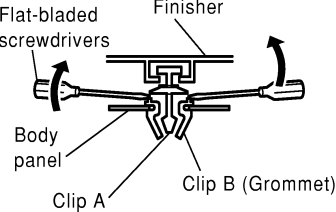
 

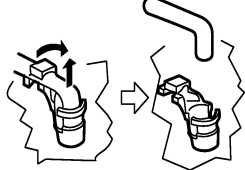

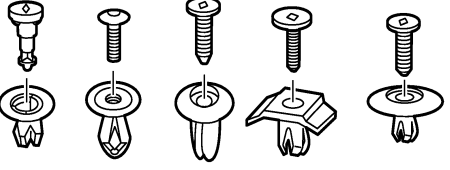

Symbol No.	Shapes	Removal & Installation
C101 		Removal: Remove by bending up with flat-bladed screwdrivers or clip remover. 
C103 		 Removal: Remove with a clip remover.
C203 		Removal: Push center pin to catching position. (Do not remove center pin by hitting it.)  Installation: 
C205 		Removal: Flat-bladed screwdriver  Clip Finisher
C206 		Removal: 

SIIA0315E

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CLIP LIST


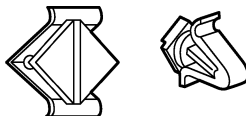
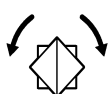
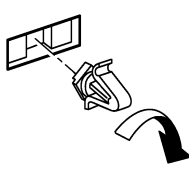










< PREPARATION >

Symbol No.	Shapes	Removal & Installation
CE103 		Removal: 
CF110 		Removal: 
CF118 		Removal: 
CR103 		Removal: Holder portion of clip must be spread out to remove rod. 
CS101 		Removal: 1. Screw out with a Phillips screwdriver. 2. Remove female portion with flat-bladed screwdriver. 

SIIA0316E

CLIP LIST

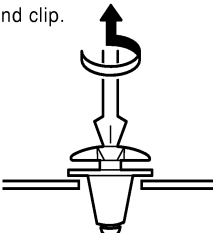
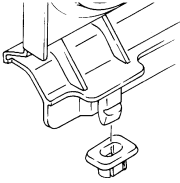
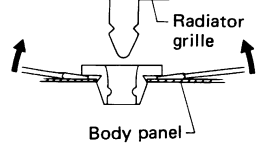

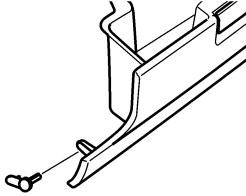
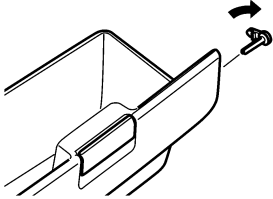
 
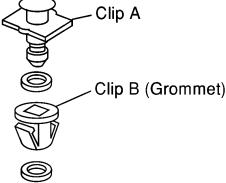
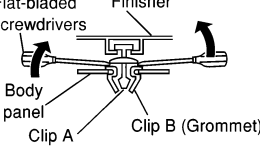
< PREPARATION >

Symbol No.	Shapes	Removal & Installation	
CG101 		Removal:  Rotate 45° to remove	Installation: 
		 Removal:	
CS102 			
CS113 		Removal: Disconnect upper connection of clip with a flat-bladed screwdriver, then remove clip while inserting a flat-bladed screwdriver between body panel and clip. 	
C111 			

SIIA0317E

CLIP LIST

< PREPARATION >

Symbol No.	Shapes	Removal & Installation
CG104 		Removal: Remove by bending up with flat-bladed screwdrivers. 
CE114 		
CF118 		Removal: Flat-bladed screwdrivers 


ALJIA0564GB

POWER SEAT FOR DRIVER SIDE

< WIRING DIAGRAM >


POWER SEAT FOR DRIVER SIDE CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

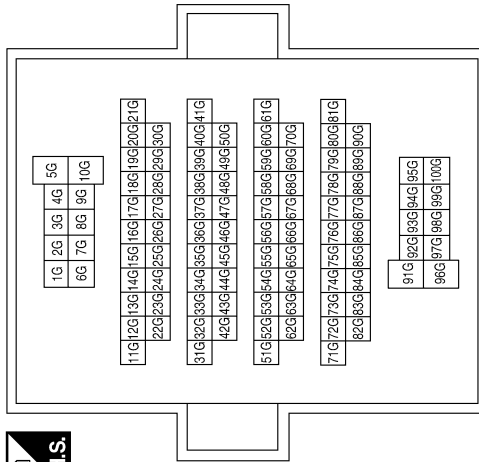


Terminal No.	5G
Color of Wire	W
Signal Name	—

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	6N
Color of Wire	W
Signal Name	—

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	GRAY

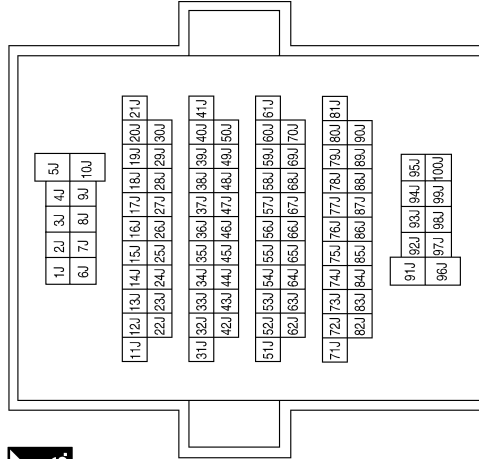

Terminal No.	6J
Color of Wire	V
Signal Name	—

Connector No.	M21
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND2
139	W	BAT POWER F/L
141	V	P/W POWER SUPPLY BAT
143	B	GND1

POWER SEAT FOR DRIVER SIDE

< WIRING DIAGRAM >

Connector No.	B12
Connector Name	WIRE TO WIRE
Connector Color	WHITE


2	1
6	5
4	3



Terminal No.	Color of Wire	Signal Name
1	B	-
2	L	-

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	GRAY


5J	4J	3J	2J	1J
10J	9J	8J	7J	6J

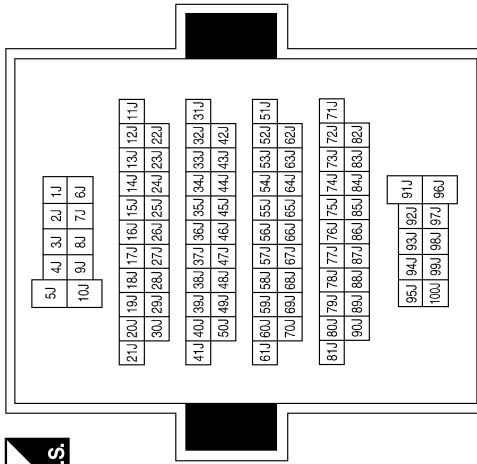

Terminal No.	Color of Wire	Signal Name
6J	L	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

5G	4G	3G	2G	1G
10G	9G	8G	7G	6G

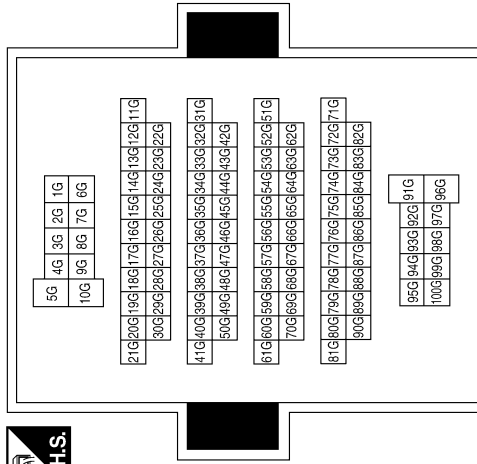

Terminal No.	Color of Wire	Signal Name
5G	P	-

Terminal No.	Color of Wire	Signal Name
2	R	-
3	R	-
4	B	-
5	G	-
6	Y	-
7	L	-
8	SB	-
9	P	-
10	BR	-

Connector No.	B203
Connector Name	POWER SEAT SWITCH LH
Connector Color	WHITE

4	3	2	1
10	9	8	7
6	5		



Terminal No.	Color of Wire	Signal Name
1	V	-

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2
3	4
5	6



Terminal No.	Color of Wire	Signal Name
1	B	-
2	R	-

AAJIA0546GB

POWER SEAT FOR DRIVER SIDE


< WIRING DIAGRAM >

Connector No.	B207
Connector Name	RECLINING MOTOR LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	BR	-
5	-	-
6	P	-

Connector No.	B206
Connector Name	SLIDING MOTOR LH
Connector Color	GRAY

 


Terminal No.	Color of Wire	Signal Name
1	SB	-
2	-	-
3	-	-
4	-	-
5	L	-

Connector No.	B205
Connector Name	LUMBAR SUPPORT SWITCH
Connector Color	BROWN

 

Terminal No.	Color of Wire	Signal Name
1	G	-
2	Y	-
3	B	-
4	R	-

Connector No.	B212
Connector Name	LUMBAR SUPPORT MOTOR
Connector Color	BLACK

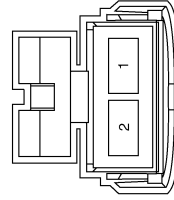


Terminal No.	Color of Wire	Signal Name
1	Y	-
2	G	-

Connector No.	B209
Connector Name	REAR LIFTING MOTOR LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	R	-
5	-	-
6	V	-

Connector No.	B208
Connector Name	FRONT LIFTING MOTOR LH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	G	-
5	-	-
6	Y	-

AAJIA0547GB

POWER SEAT FOR PASSENGER SIDE


< WIRING DIAGRAM >

POWER SEAT FOR PASSENGER SIDE

Wiring Diagram

INFOID:0000000011014865

POWER SEAT FOR PASSENGER SIDE

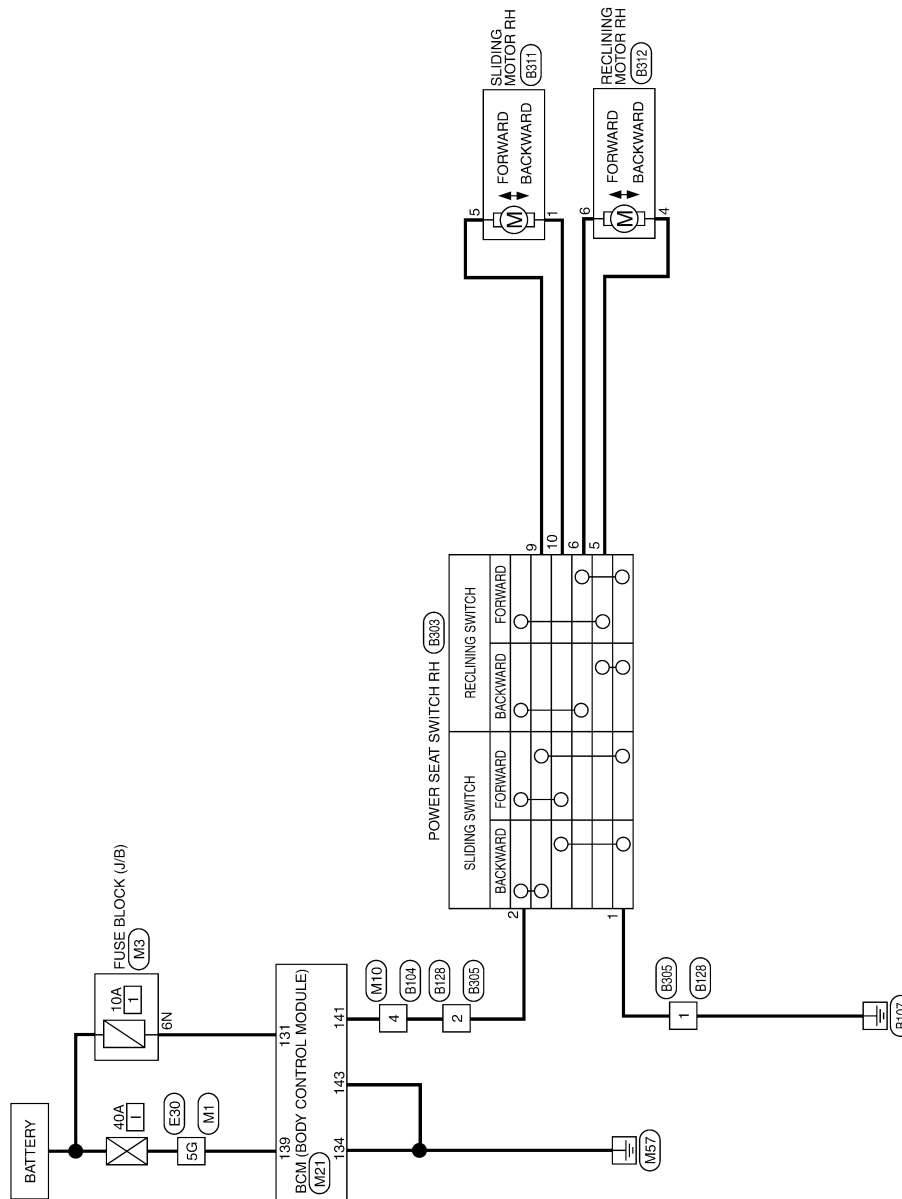


AAJWA0218GB

POWER SEAT FOR PASSENGER SIDE

< WIRING DIAGRAM >


POWER SEAT FOR PASSENGER SIDE CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

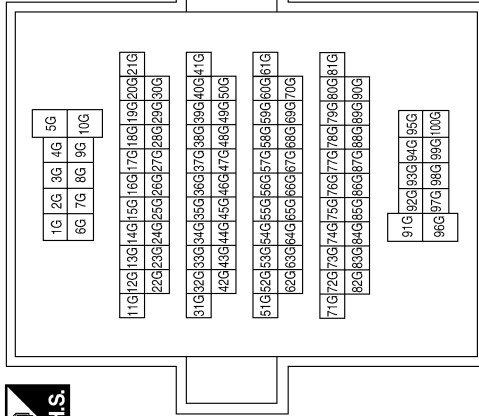


Terminal No.	Color of Wire	Signal Name
5G	W	—

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
6N	W	—

Connector No.	M10
Connector Name	WIRE TO WIRE
Connector Color	BROWN

 

Terminal No.	Color of Wire	Signal Name
4	V	—

Connector No.	M21
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
141	V	P/W POWER SUPPLY BAT
143	B	GND 1

POWER SEAT FOR PASSENGER SIDE

< WIRING DIAGRAM >

Connector No.	B104
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					




Terminal No.	Color of Wire	Signal Name
4	L	-

Terminal No.	Color of Wire	Signal Name
5G	P	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

5G	4G	3G	2G	1G
10G	9G	8G	7G	6G

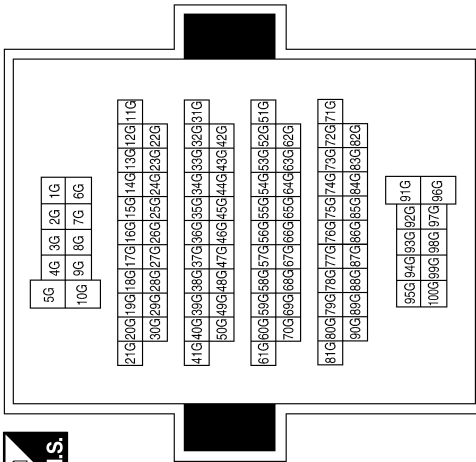

Terminal No.	Color of Wire	Signal Name
5	BR	-
6	P	-
7	-	-
8	-	-
9	L	-
10	SB	-

Connector No.	B303
Connector Name	POWER SEAT SWITCH RH
Connector Color	WHITE

4	3	2	1
10	9	8	7
6	5		



Terminal No.	Color of Wire	Signal Name
1	B	-
2	R	-
3	-	-
4	-	-

Connector No.	B128
Connector Name	WIRE TO WIRE
Connector Color	WHITE

2	1
6	5
4	3



Terminal No.	Color of Wire	Signal Name
1	B	-
2	L	-

AAJIA0540GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

POWER SEAT FOR PASSENGER SIDE


< WIRING DIAGRAM >

Connector No.	B312
Connector Name	RECLINING MOTOR RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	BR	-
5	-	-
6	P	-

Connector No.	B311
Connector Name	SLIDING MOTOR RH
Connector Color	GRAY

 

Terminal No.	Color of Wire	Signal Name
1	SB	-
2	-	-
3	-	-
4	-	-
5	L	-

Connector No.	B305
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	B	-
2	P	-

AAJIA0541GB

HEATED SEAT


< WIRING DIAGRAM >

HEATED SEAT

Wiring Diagram

INFOID:000000010481823

HEATED SEAT

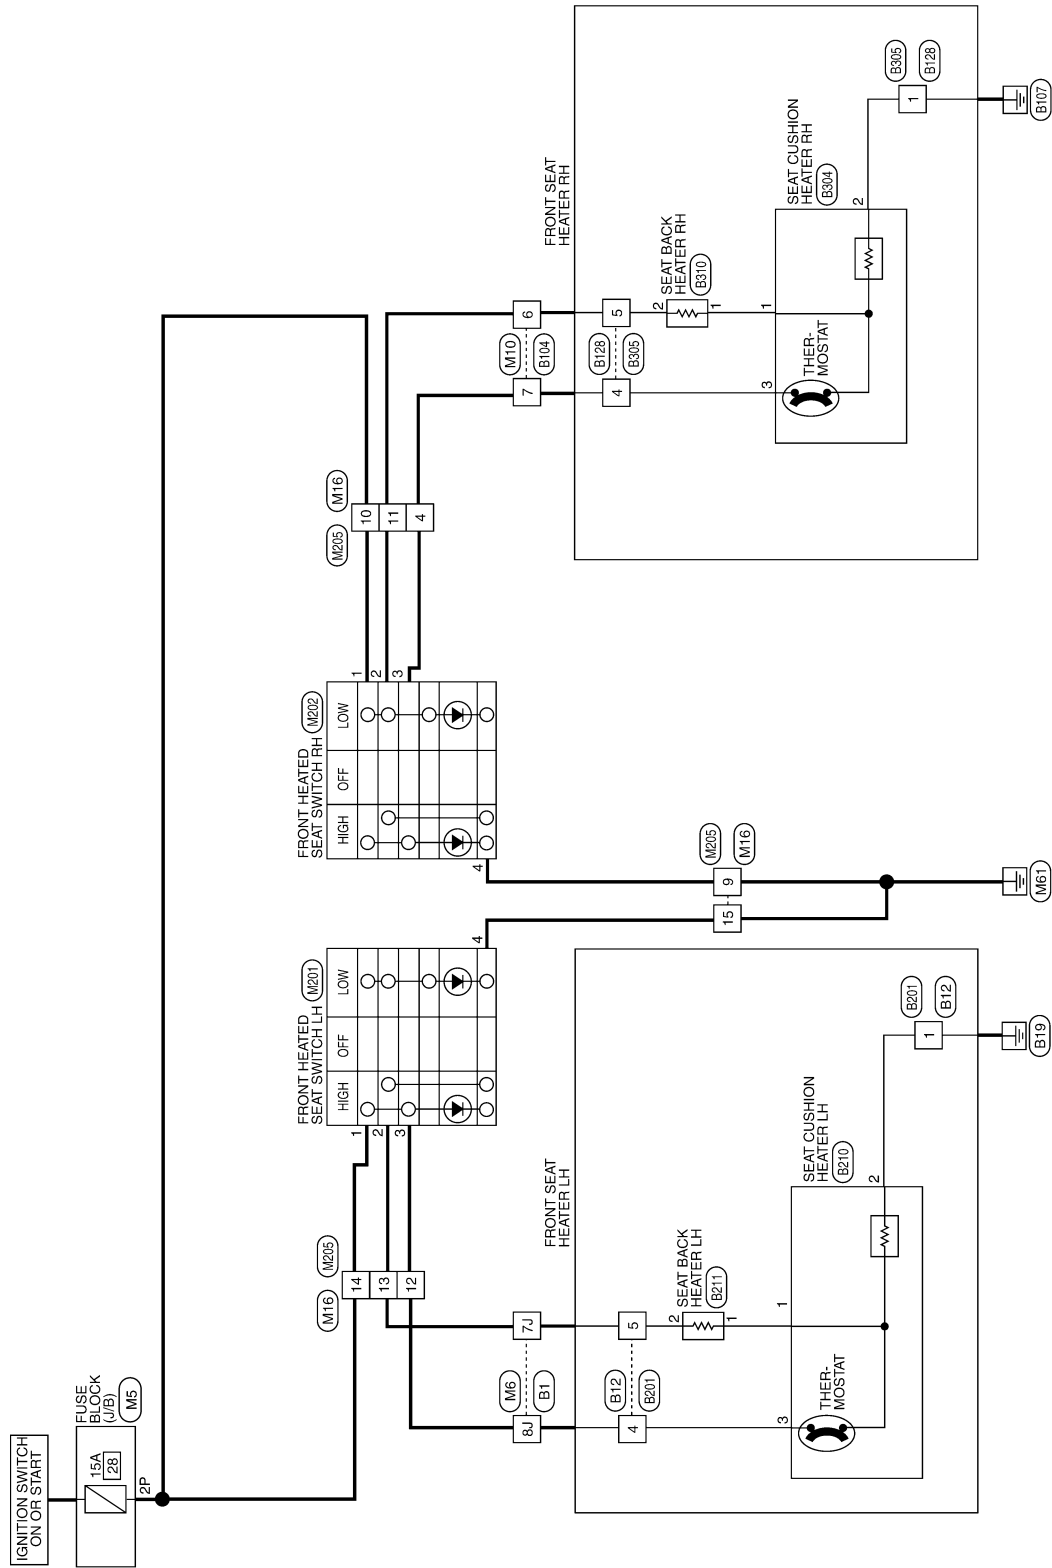

AAJWA0220GB


HEATED SEAT CONNECTORS

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2P	V	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	GRAY

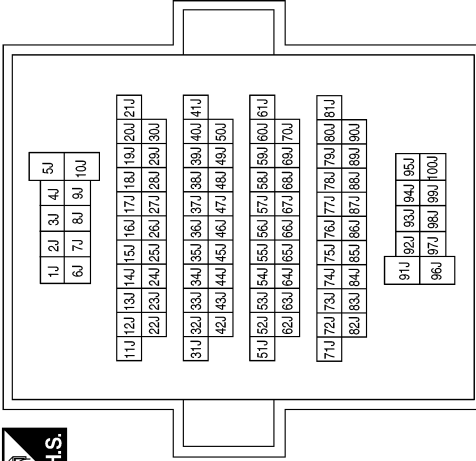

Terminal No.	Color of Wire	Signal Name
7J	W	-
8J	L	-

Connector No.	M10
Connector Name	WIRE TO WIRE
Connector Color	BROWN

 

Terminal No.	Color of Wire	Signal Name
6	Y	-
7	SB	-

Connector No.	M16
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	SB	-
9	B	-

Terminal No.	Color of Wire	Signal Name
10	V	-
11	Y	-
12	L	-
13	W	-
14	V	-
15	B	-

HEATED SEAT

< WIRING DIAGRAM >

Connector No.	M205
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

Terminal No.	Color of Wire	Signal Name
4	SB	-
9	B	-
10	L	-
11	BR	-
12	Y	-
13	LG	-
14	V	-
15	B	-

Connector No.	M202
Connector Name	FRONT HEATED SEAT SWITCH RH
Connector Color	BROWN



5	<div></div>	6
4	2	1
		3

Terminal No.	Color of Wire	Signal Name
1	L	-
2	BR	-
3	SB	-
4	B	-

Connector No.	M201
Connector Name	FRONT HEATED SEAT SWITCH LH
Connector Color	WHITE



5	<div></div>	6
4	2	1
		3

Terminal No.	Color of Wire	Signal Name
1	V	-
2	LG	-
3	Y	-
4	B	-

Connector No.	B12
Connector Name	WIRE TO WIRE
Connector Color	WHITE




2	1		
6	5	4	3

Terminal No.	Color of Wire	Signal Name
1	B	-
4	BR	-
5	V	-

Terminal No.	Color of Wire	Signal Name
7J	V	-
8J	BR	-

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

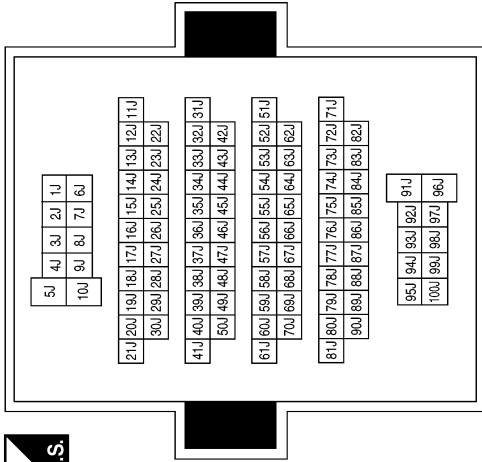

AAJIA0548GB

HEATED SEAT

< WIRING DIAGRAM >

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2
3	4
5	6



Terminal No.	Color of Wire	Signal Name
1	B	-
4	G	-
5	W	-

Connector No.	B128
Connector Name	WIRE TO WIRE
Connector Color	WHITE

2	1
6	5
4	3



Terminal No.	Color of Wire	Signal Name
1	B	-
4	Y	-
5	LG	-

Connector No.	B104
Connector Name	WIRE TO WIRE
Connector Color	BROWN

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					



Terminal No.	Color of Wire	Signal Name
6	LG	-
7	Y	-

Connector No.	B304
Connector Name	SEAT CUSHION HEATER RH
Connector Color	WHITE

1	2	3
---	---	---



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	G	-
3	B	-

Connector No.	B211
Connector Name	SEAT BACK HEATER LH
Connector Color	WHITE

1	2
---	---



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	W	-

Connector No.	B210
Connector Name	SEAT CUSHION HEATER LH
Connector Color	WHITE

1	2	3
---	---	---



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	G	-
3	B	-

AAJIA0549GB

HEATED SEAT


< WIRING DIAGRAM >

Connector No.	B310
Connector Name	SEAT BACK HEATER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	W	-

Connector No.	B305
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	B	-
4	G	-
5	W	-

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

AAJIA0550GB

SQUEAK AND RATTLE TROUBLE DIAGNOSES


< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

SQUEAK AND RATTLE TROUBLE DIAGNOSES

Work Flow

INFOID:0000000010481824

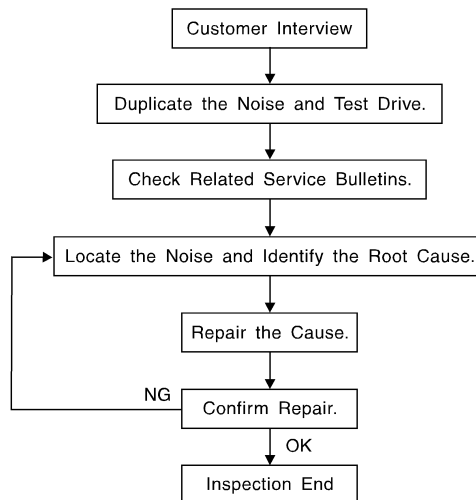

SBT842

CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any customer's comments; refer to [SE-26, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, be sure to diagnose and repair the noise that the customer is concerned about. This can be accomplished by test driving the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak —(Like tennis shoes on a clean floor)
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping.
- Creak—(Like walking on an old wooden floor)
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle—(Like shaking a baby rattle)
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock —(Like a knock on a door)
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick—(Like a clock second hand)
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump—(Heavy, muffled knock noise)
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz—(Like a bumble bee)
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending upon the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

DUPLICATE THE NOISE AND TEST DRIVE

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
 - 2) Tap or push/pull around the area where the noise appears to be coming from.
 - 3) Rev the engine.
 - 4) Use a floor jack to recreate vehicle "twist".
 - 5) At idle, apply engine load (electrical load, half-clutch on M/T model, drive position on CVT and A/T models).
 - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
 - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear: J-39565 and mechanic's stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
 - removing the components in the area that you suspect the noise is coming from.
Do not use too much force when removing clips and fasteners, otherwise clips and fasteners can be broken or lost during the repair, resulting in the creation of new noise.
 - tapping or pushing/pulling the component that you suspect is causing the noise.
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
 - feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
 - placing a piece of paper between components that you suspect are causing the noise.
 - looking for loose components and contact marks.Refer to [SE-23, "Generic Squeak and Rattle Troubleshooting"](#).

REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
 - separate components by repositioning or loosening and retightening the component, if possible.
 - insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A NISSAN Squeak and Rattle Kit (J-50397) is available through your authorized NISSAN Parts Department.

CAUTION:

Do not use excessive force as many components are constructed of plastic and may be damaged.

NOTE:

- Always check with the Parts Department for the latest parts information.
- The materials contained in the NISSAN Squeak and Rattle Kit (J-50397) are listed on the inside cover of the kit; and can each be ordered separately as needed.
- The following materials not found in the kit can also be used to repair squeaks and rattles.
 - SILICONE GREASE: Use instead of UHMW tape that will be visible or does not fit. The silicone grease will only last a few months.
 - SILICONE SPRAY: Use when grease cannot be applied.
 - DUCT TAPE: Use to eliminate movement.

CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

Generic Squeak and Rattle Troubleshooting

INFOID:0000000010481825

Refer to Table of Contents for specific component removal and installation information.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. Cluster lid A and the instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar finisher
4. Instrument panel to windshield
5. Instrument panel pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicone spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

CAUTION:

Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.

CENTER CONSOLE

Components to pay attention to include:

1. Shift selector assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

DOORS

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the NISSAN Squeak and Rattle Kit (J-50397) to repair the noise.

TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner.

In addition look for:

1. Trunk lid bumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sun visor shaft shaking in the holder
3. Front or rear windshield touching headlining and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

OVERHEAD CONSOLE (FRONT AND REAR)

Overhead console noises are often caused by the console panel clips not being engaged correctly. Most of these incidents are repaired by pushing up on the console at the clip locations until the clips engage.

In addition look for:

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

1. Loose harness or harness connectors.
2. Front console map/reading lamp lens loose.
3. Loose screws at console attachment points.

A

SEATS

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

B

Cause of seat noise include:

C

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

D

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

E

UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

F

Causes of transmitted underhood noise include:

1. Any component installed to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator installation pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

G

H

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine rpm or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

I

SE

K

L

M

N

O

P

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Diagnostic Worksheet

INFOID:000000010481826





Dear Customer:

We are concerned about your satisfaction with your vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your vehicle right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

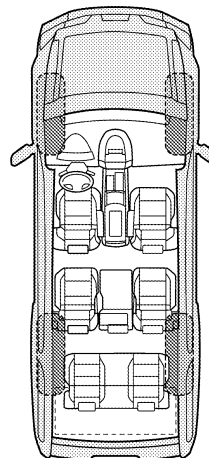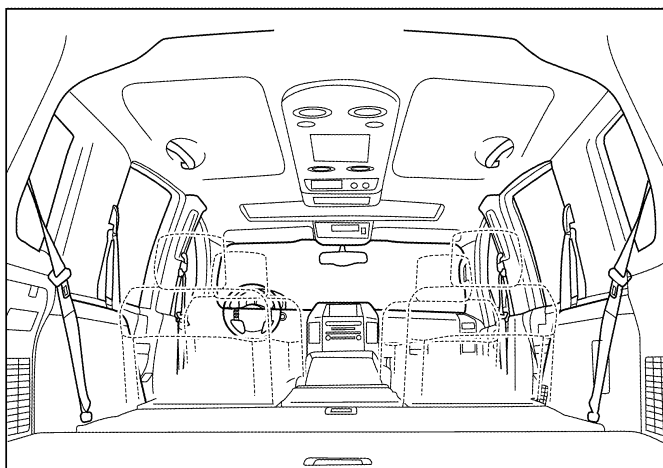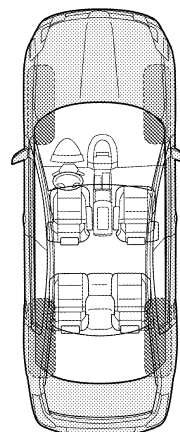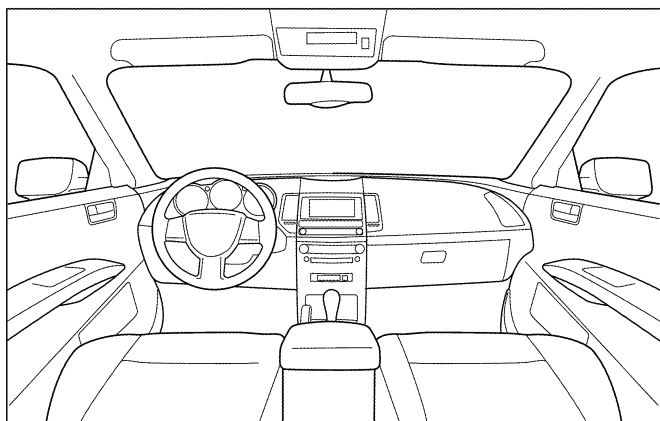

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- | | |
|---|--|
| <input type="checkbox"/> Anytime | <input type="checkbox"/> After sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning | <input type="checkbox"/> When it is raining or wet |
| <input type="checkbox"/> Only when it is cold outside | <input type="checkbox"/> Dry or dusty conditions |
| <input type="checkbox"/> Only when it is hot outside | <input type="checkbox"/> Other: |

III. WHEN DRIVING:

- ☐ Through driveways
- ☐ Over rough roads
- ☐ Over speed bumps
- ☐ Only about ____ mph
- ☐ On acceleration
- ☐ Coming to a stop
- ☐ On turns: left, right or either (circle)
- ☐ With passengers or cargo
- ☐ Other: _____
- ☐ After driving ____ miles or ____ minutes

IV. WHAT TYPE OF NOISE

- ☐ Squeak (like tennis shoes on a clean floor)
- ☐ Creak (like walking on an old wooden floor)
- ☐ Rattle (like shaking a baby rattle)
- ☐ Knock (like a knock at the door)
- ☐ Tick (like a clock second hand)
- ☐ Thump (heavy muffled knock noise)
- ☐ Buzz (like a bumble bee)

TO BE COMPLETED BY DEALERSHIP PERSONNEL

Test Drive Notes:

	YES	NO	Initials of person performing
Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

VIN: _____ Customer Name _____
W.O.# _____ Date: _____


This form must be attached to Work Order

LAIA0071E

INFOID:0000000010481827

DRIVER SEAT - POWER

SEC. 870

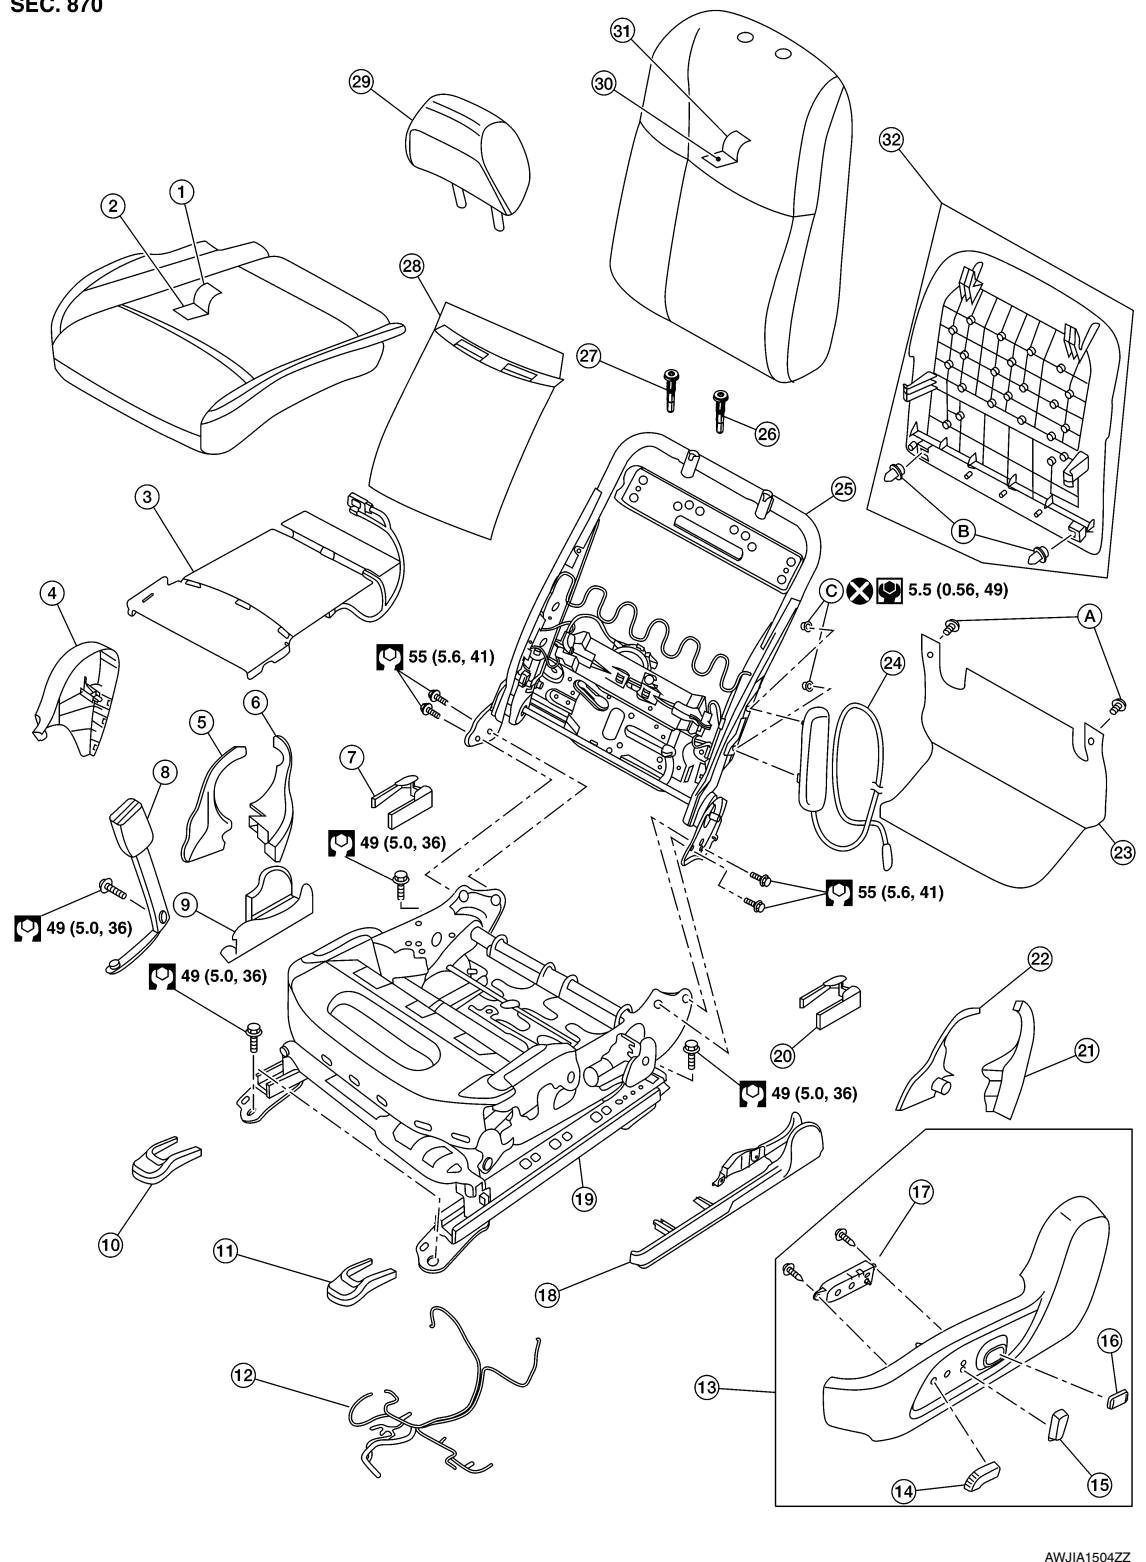

AWJIA1504ZZ

FRONT SEAT

< REMOVAL AND INSTALLATION >

1. Seat cushion trim	2. Seat cushion pad	3. Seat cushion heater (if equipped)	A
4. Seat cushion outer finisher (RH)	5. Seat cushion inner finisher (RH front)	6. Seat cushion inner finisher (RH rear)	
7. Rear slide cover (RH)	8. Seat belt buckle	9. Slide cover (RH)	B
10. Front slide cover (RH)	11. Front slide cover (LH)	12. Seat harness	
13. Seat cushion outer finisher (LH)	14. Seat slide knob	15. Seat recline knob	
16. Lumbar support switch (if equipped)	17. Power seat switch	18. Slide cover (LH)	C
19. Seat cushion frame	20. Rear slide cover (LH)	21. Seat cushion inner finisher (LH rear)	
22. Seat cushion inner finisher (LH front)	23. Rear hinge cover	24. Side air bag module	
25. Seatback frame	26. Headrest holder (locked)	27. Headrest holder (free)	D
28. Seatback heater (if equipped)	29. Headrest	30. Seatback pad	
31. Seatback trim	32. Seatback board	A. Rear hinge cover clips	
B. Seatback board clips	C. Side air bag module nuts		E

F

G

H

I

SE

K

L


M

N

O

P

DRIVER SEAT - MANUAL

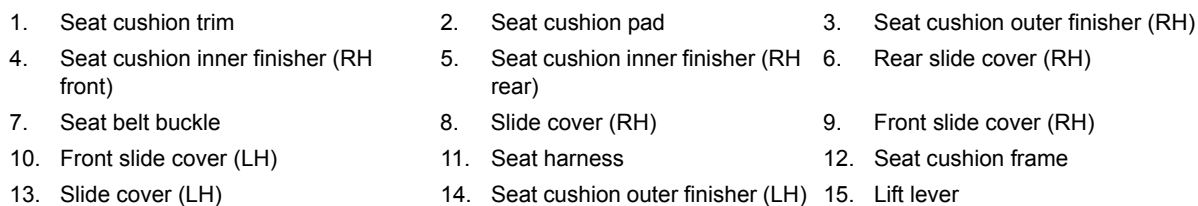

FRONT SEAT

< REMOVAL AND INSTALLATION >

- | | | |
|--|----------------------------|---|
| 16. Recline lever | 17. Rear slide cover (LH) | 18. Seat cushion inner finisher (LH rear) |
| 19. Seat cushion inner finisher (LH front) | 20. Rear hinge cover | 21. Side air bag module |
| 22. Headrest holder (locked) | 23. Headrest holder (free) | 24. Seatback frame |
| 25. Headrest | 26. Seatback pad | 27. Seatback trim |
| 28. Seatback board | A. Rear hinge cover clips | B. Seatback board clips |
| C. Side air bag module nuts | | |

DRIVER SIDE : Removal and Installation - Seat Assembly

INFOID:0000000010481828

REMOVAL

WARNING:


Do not leave any objects (screwdrivers, tools, etc.) on the seat during seat repair. It can lead to personal injury if the side air bag module should accidentally deploy.

CAUTION:

- When removing or installing the seat trim, handle it carefully to keep dirt out and to avoid damage.
- When checking the power seat circuit for continuity using a circuit tester, do not confuse its connector with the side air bag module connector. Such an error may cause the air bag module to deploy.
- Do not drop, tilt, or bump the side air bag module while installing the seat. Always handle it with care.
- After front side air bag module inflates, the front seatback must be replaced.
- When removing and installing the seat, use shop cloths to protect components from damage.
- Before removing the front seat, turn the ignition switch OFF, disconnect both battery cables and wait at least three minutes.

1. Remove the headrest.
2. Raise seat to the highest position.
3. Slide the seat to the full rearward position.
4. Disconnect battery negative and positive terminals and wait at least three minutes. Refer to [PG-78. "Removal and Installation"](#) (power seat only).
5. Remove the front slide covers (LH/RH) (A) by releasing four

⊖: Pawl

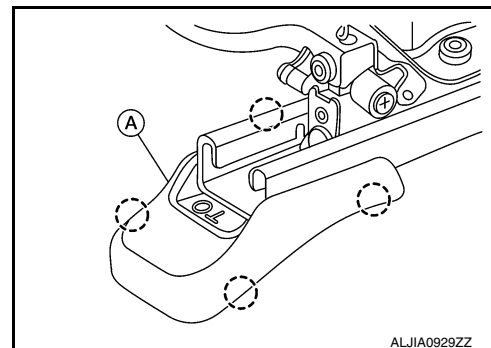

6. Connect battery negative and positive terminals and wait at least three minutes. Refer to [PG-78. "Removal and Installation"](#) (power seat only).
7. Remove the two front seat bolts.
8. Slide the seat to the full forward position.
9. Disconnect battery negative and positive terminals and wait at least three minutes. Refer to [PG-78. "Removal and Installation"](#) (power seat only).
10. Remove the two rear seat bolts.
11. Tilt the seat rearward to disconnect the harness connectors from the seat and remove.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:


Make sure that the seat harness or the floor trim is not damaged during installation.

FRONT SEAT

< REMOVAL AND INSTALLATION >

- When installing the LH front seat, tighten the bolts in the order shown.

LH front seat bolt torque : 49 N·m (5.0 kg-m, 36 lb-ft)

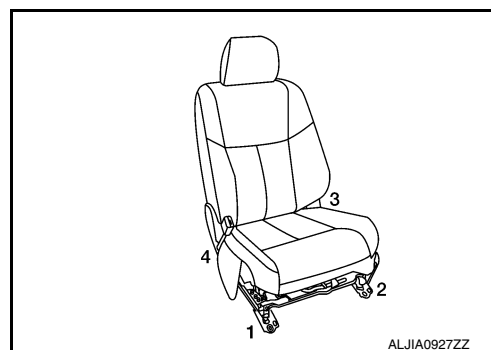

DRIVER SIDE : Removal and Installation - Seatback Board

INFOID:000000010481829

REMOVAL

CAUTION:

Always work from the side or back of the seatback, do not work in front of seat.

- Remove the seatback board (1).


NOTE:

The back side of the seatback board is shown to assist with identifying fastener location.

- Release the two bottom clips (A) using a suitable tool.

△: Clip

- Insert fingers into sides (←) and pull out the seatback board, while pressing the side clips (B) to release it from the seatback frame.
- Pull the seatback board down releasing the upper hooks (C) and remove.

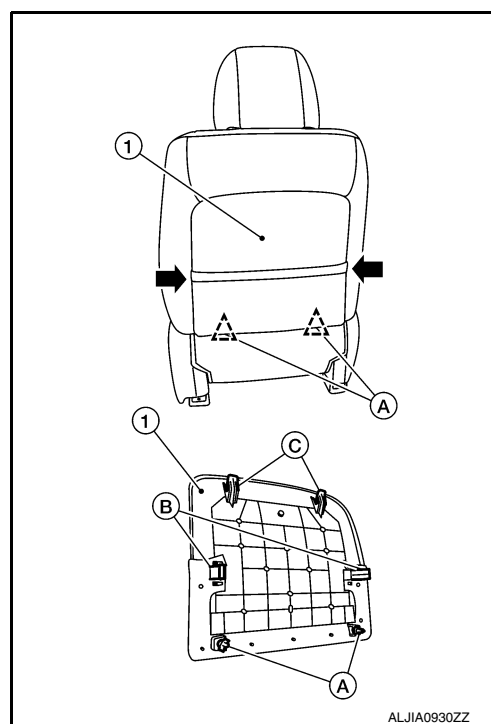

INSTALLATION

Installation is in the reverse order of removal.

PASSENGER SIDE

FRONT SEAT


< REMOVAL AND INSTALLATION >

PASSENGER SIDE : Exploded View

INFOID:000000010481831

PASSENGER SEAT - MANUAL

SEC. 870

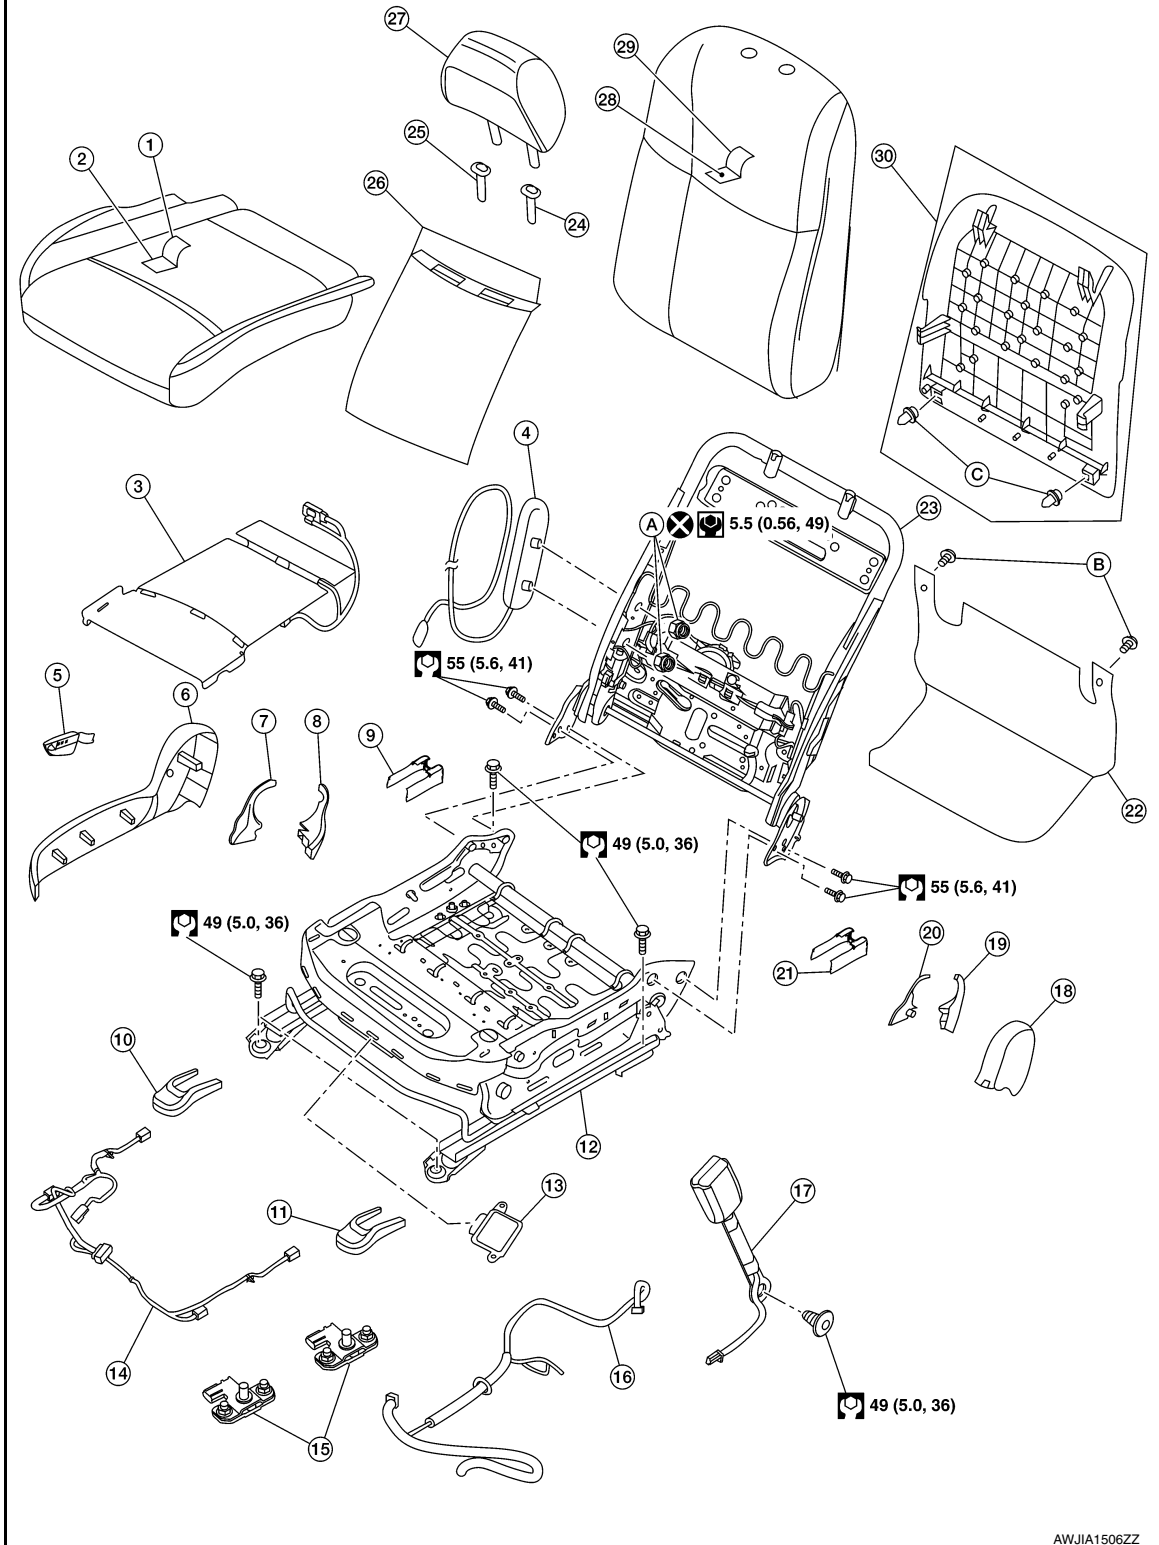

- | | | |
|---|--|--------------------------------------|
| 1. Seat cushion trim | 2. Seat cushion pad | 3. Seat cushion heater (if equipped) |
| 4. Side air bag module | 5. Recline lever | 6. Seat cushion outer finisher (RH) |
| 7. Seat cushion inner finisher (RH front) | 8. Seat cushion inner finisher (RH rear) | 9. Rear slide cover (RH) |

FRONT SEAT


< REMOVAL AND INSTALLATION >

- | | | |
|---|--|---|
| 10. Front slide cover (RH) | 11. Front slide cover (LH) | 12. Seat cushion frame |
| 13. Occupant classification control unit | 14. Occupant classification harness | 15. Occupant classification sensor |
| 16. Seat harness | 17. Seat belt buckle | 18. Seat cushion inner finisher (LH rear) |
| 19. Seat cushion inner finisher (LH rear) | 20. Seat cushion inner finisher (LH front) | 21. Rear slide cover (LH) |
| 22. Rear hinge cover | 23. Seatback frame | 24. Headrest holder (locked) |
| 25. Headrest holder (free) | 26. Seatback heater (if equipped) | 27. Headrest |
| 28. Seatback pad | 29. Seatback trim | 30. Seatback board |
| A. Side air bag module nuts | B. Rear hinge cover clips | C. Seatback board clips |

FRONT SEAT

< REMOVAL AND INSTALLATION >

PASSENGER SEAT - POWER

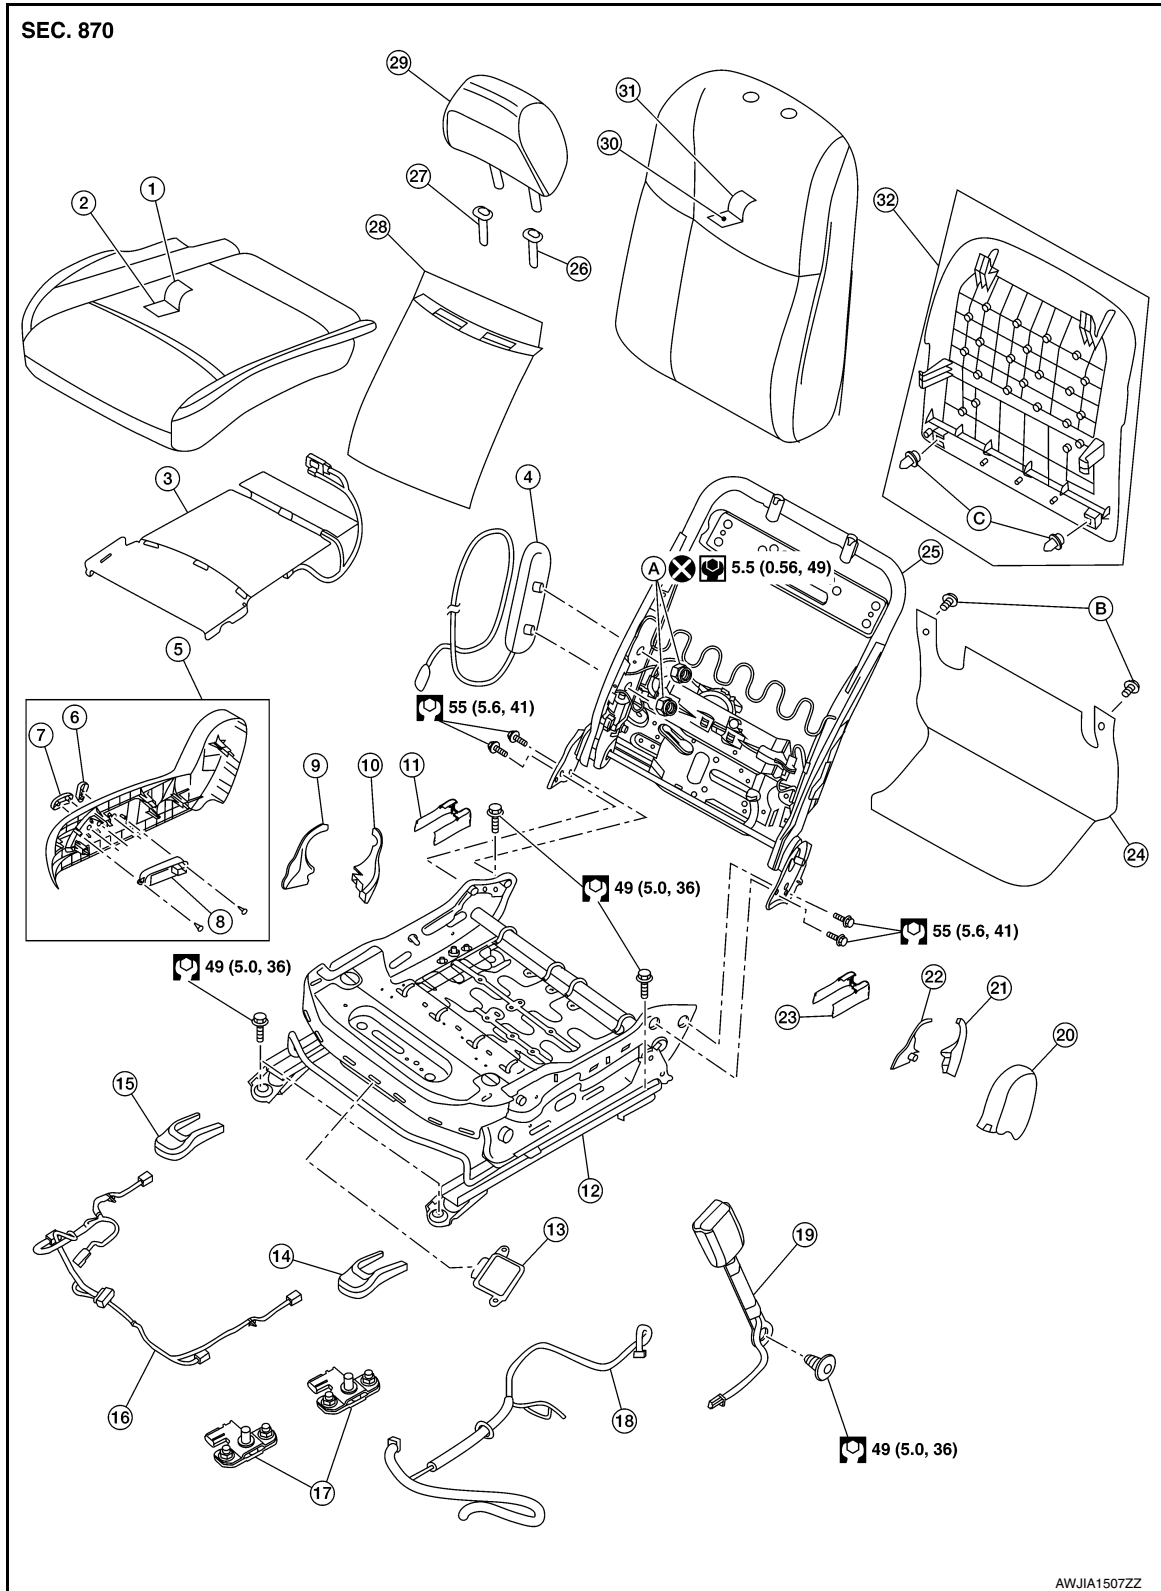

- | | | |
|---|-------------------------------------|---|
| 1. Seat cushion trim | 2. Seat cushion pad | 3. Seat cushion heater (if equipped) |
| 4. Side air bag module | 5. Seat cushion outer finisher (RH) | 6. Seat recline knob |
| 7. Seat slide knob | 8. Power seat switch | 9. Seat cushion inner finisher (RH front) |
| 10. Seat cushion inner finisher (RH rear) | 11. Rear slide cover (RH) | 12. Seat cushion frame |
| 13. Occupant classification control unit | 14. Rear slide cover (RH) | 15. Front slide cover (RH) |

FRONT SEAT

< REMOVAL AND INSTALLATION >

- | | | |
|--|--------------------------------------|---|
| 16. Occupant classification harness | 17. Occupant classification sensors | 18. Seat harness |
| 19. Seat belt buckle | 20. Seat cushion outer finisher (LH) | 21. Seat cushion inner finisher (LH rear) |
| 22. Seat cushion inner finisher (LH front) | 23. Rear slide cover (LH) | 24. Rear hinge cover |
| 25. Seatback frame | 26. Headrest holder (locked) | 27. Headrest holder (free) |
| 28. Seatback heater | 29. Headrest | 30. Seatback pad |
| 31. Seatback trim | 32. Seatback board | A. Side air bag module nuts |
| B. Rear hinge cover clips | C. Seatback board clips | |

PASSENGER SIDE : Removal and Installation - Seat Assembly

INFOID:000000010481832

REMOVAL


WARNING:

Do not leave any objects (screwdrivers, tools, etc.) on the seat during seat repair. It can lead to personal injury if the side air bag module should accidentally deploy.

CAUTION:

- When removing or installing the seat trim, handle it carefully to keep dirt out and to avoid damage.
- When checking the power seat circuit for continuity using a circuit tester, do not confuse its connector with the side air bag module connector. Such an error may cause the air bag module to deploy.
- Do not drop, tilt, or bump the side air bag module while installing the seat. Always handle it with care.
- After front side air bag module inflates, the front seatback must be replaced.
- When removing and installing the seat, use shop cloths to protect components from damage.
- Before removing the front seat, turn the ignition switch OFF, disconnect both battery cables and wait at least three minutes.

1. Remove the headrest.
2. Slide the seat to the full rearward position.
3. Disconnect battery negative and positive terminals and wait at least three minutes. Refer to [PG-78, "Removal and Installation"](#) (power seat only).
4. Remove the front slide covers (LH/RH) (A) by releasing four pawls on each.
○: Pawl

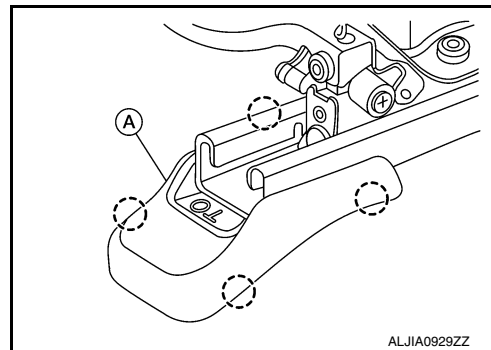

ALJIA0929ZZ

5. Connect battery negative and positive terminals and wait at least three minutes. Refer to [PG-78, "Removal and Installation"](#) (power seat only).
6. Remove the two front seat bolts.
7. Slide the seat to the full forward position.
8. Disconnect battery negative and positive terminals and wait at least three minutes. Refer to [PG-78, "Removal and Installation"](#) (power seat only).
9. Remove the two rear seat bolts.
10. Tilt the seat rearward to disconnect the harness connectors from the seat and remove.

INSTALLATION

Installation is in the reverse order of removal.

WARNING:

- Perform additional services when installing front passenger seat. Refer to [SRC-42, "ZERO POINT RESET : Description"](#).
- Zero point reset must be performed every time the front passenger seat is removed from the vehicle.
- Zero point reset is done after the front passenger seat is installed in vehicle and all bolts are tightened to specification.

FRONT SEAT


< REMOVAL AND INSTALLATION >

CAUTION:

Make sure that the seat harness or the floor trim is not damaged during installation.

- When installing the RH front seat, tighten the bolts in the order shown.

RH front seat bolt torque : 49 N·m (5.0 kg-m, 36 lb-ft)

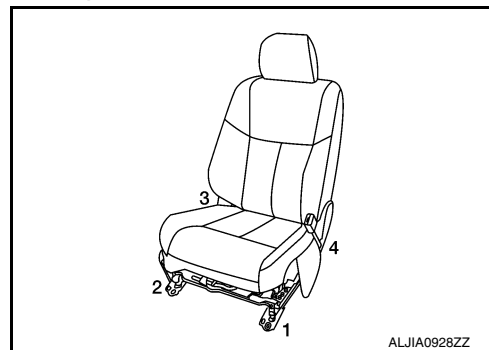

PASSENGER SIDE : Removal and Installation - Seatback Board

INFOID:000000010481833

WARNING:

Do not leave any objects (screwdrivers, tools, etc.) on the seat during seat repair. It can lead to personal injury if the side air bag module should accidentally deploy.

CAUTION:

Always work from the side or back of the seatback, do not work in front of seat.

REMOVAL

- Remove the seatback board (1).


NOTE:

The back side of the seatback board is shown to assist with identifying fastener location.

- Release the two bottom clips (A) using a suitable tool.

△: Clip

- Insert fingers into sides (←) and pull out the seatback board, while pressing the side clips (B) to release from the seatback frame.
- Pull the seatback board down releasing the upper hooks (C) and remove.

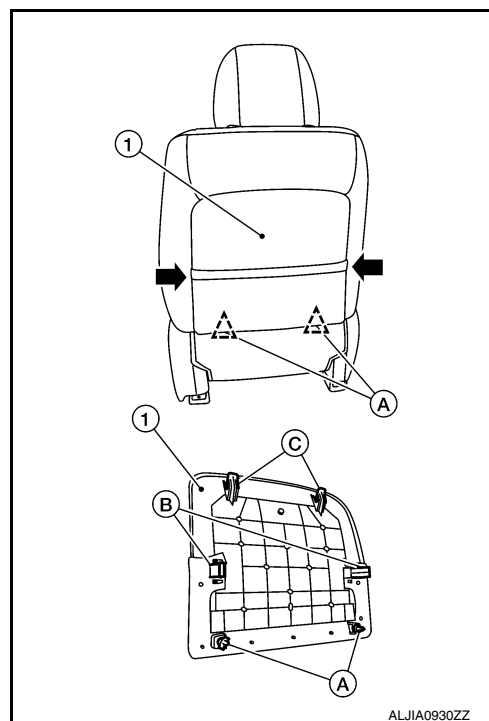

INSTALLATION

Installation is in the reverse order of removal.

HEATED SEAT SWITCH

HEATED SEAT SWITCH : Removal and Installation

INFOID:000000010481834


REMOVAL

- Remove cluster lid C lower. Refer to [JP-20, "Cluster Lid C Lower"](#).
- Remove shift selector handle. refer to [TM-183, "Removal and Installation"](#) (CVT: RE0F10D) or [TM-386, "Removal and Installation"](#) (CVT: RE0F10E).
- Release metal clips, then disconnect harness connectors and remove shift selector finisher.


FRONT SEAT

< REMOVAL AND INSTALLATION >

4. Release pawls (A) using a suitable tool and release the seat heater switch finisher (2) from the center console (1).

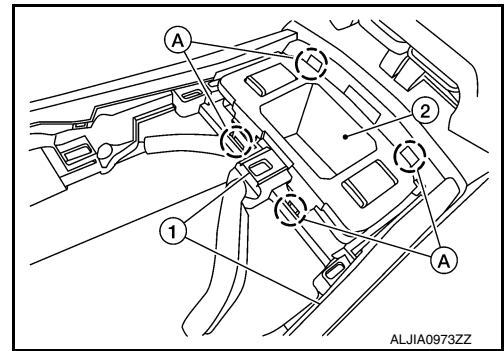

5. Disconnect the harness connectors from the front heated seat switches.
6. Release pawls (A) using a suitable tool and remove the front heated seat switches (1) from the seat heater switch finisher.

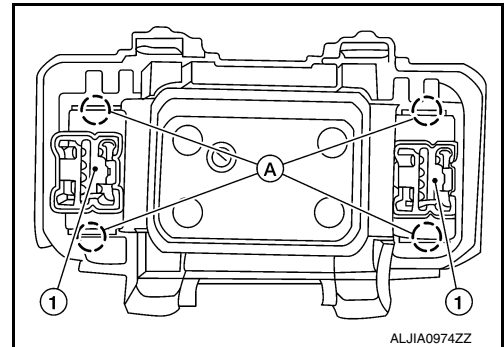

INSTALLATION

Installation is in the reverse order of removal.

REAR SEAT

< REMOVAL AND INSTALLATION >


REAR SEAT

Exploded View

INFOID:000000010481835

REAR SEAT WITHOUT REMOVABLE HEADREST

SEC. 880

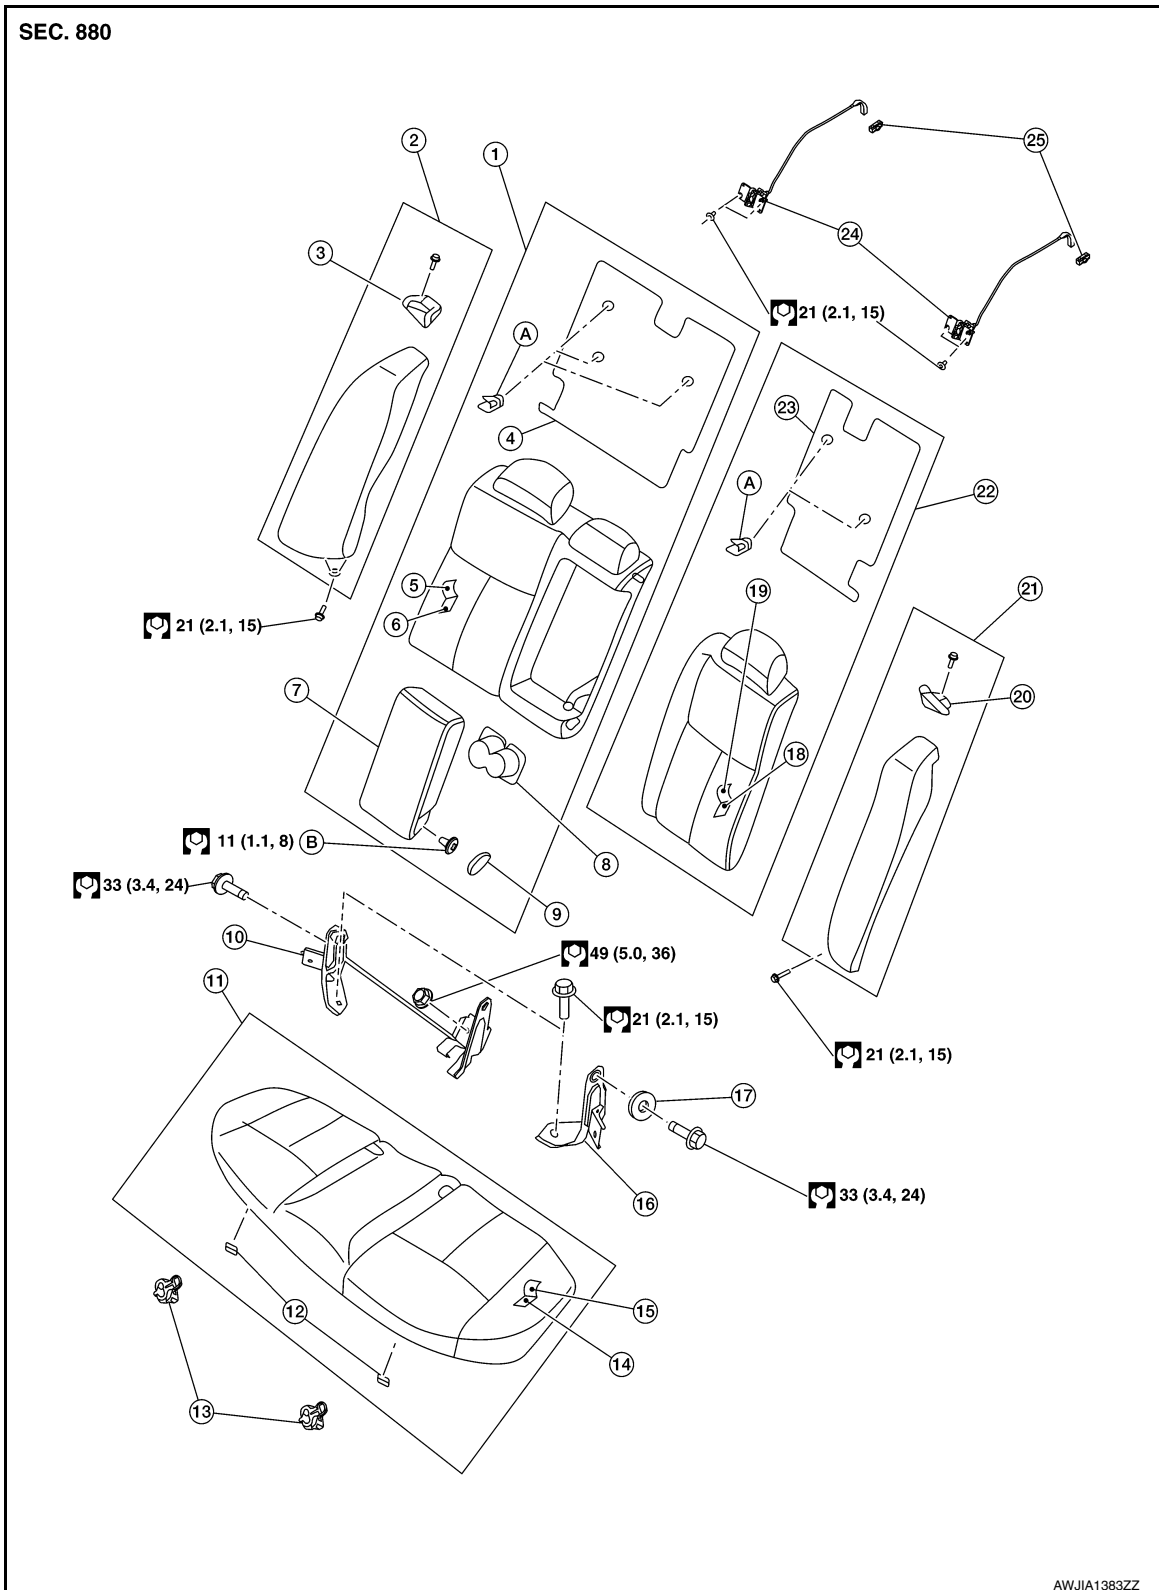

- 1. Rear seatback assembly (RH)
- 4. Seatback board (RH)

- 2. Rear seat bolster (RH)
- 5. Seatback trim (RH)

- 3. Seat belt guide (RH)
- 6. Seatback pad (RH)

REAR SEAT

< REMOVAL AND INSTALLATION >


- | | | |
|----------------------------------|---------------------------|-----------------------------|
| 7. Armrest | 8. Cup holder | 9. Armrest hinge finisher |
| 10. Seatback hinge assembly (RH) | 11. Seat cushion assembly | 12. Seat cushion wire cover |
| 13. Seat cushion lock | 14. Seat cushion pad | 15. Seat cushion trim |
| 16. Seatback hinge (LH) | 17. Wave washer | 18. Seatback pad (LH) |
| 19. Seatback trim (LH) | 20. Seat belt guide (LH) | 21. Rear seat bolster (LH) |
| 22. Rear seatback assembly (LH) | 23. Seatback board (LH) | 24. Seatback latch assembly |
| 25. Cable guide | A. Seatback board clips | B. Armrest pivot bolt |

REAR SEAT

< REMOVAL AND INSTALLATION >

REAR SEAT WITH REMOVABLE HEADREST

SEC. 880

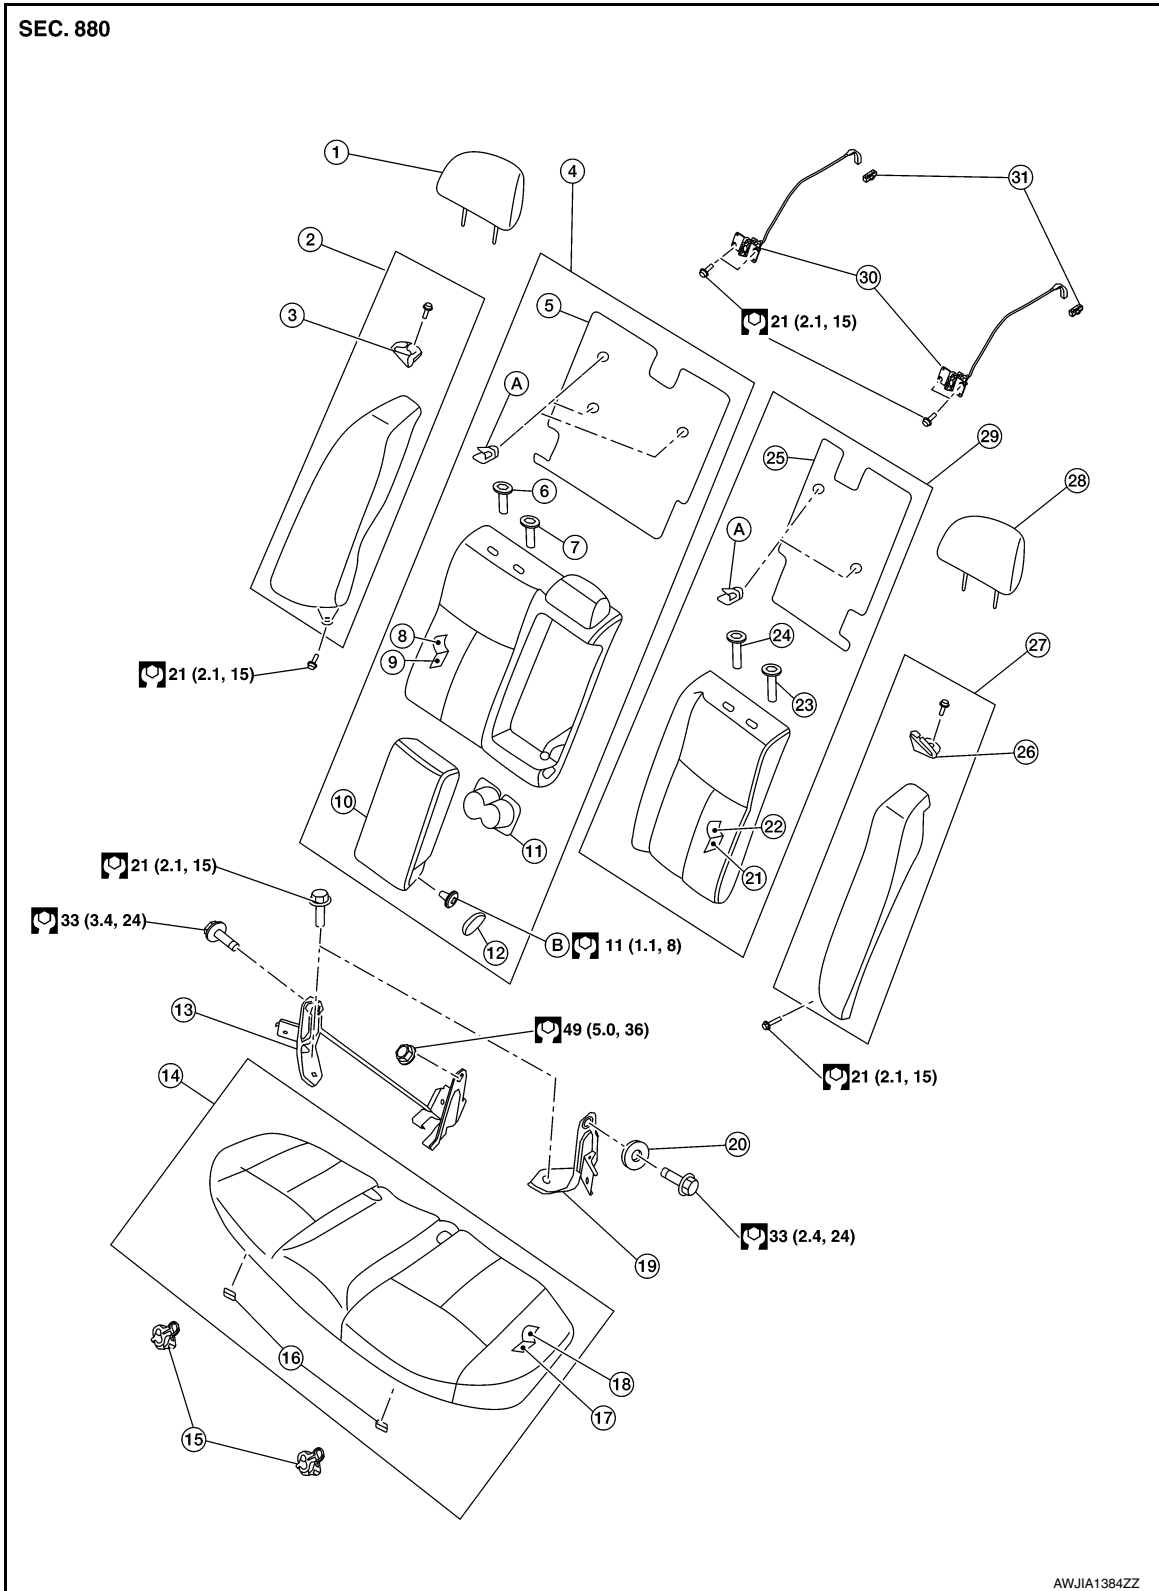

- | | | |
|----------------------------------|---------------------------|--------------------------------|
| 1. Headrest (RH) | 2. Rear seat bolster (RH) | 3. Seat belt guide (RH) |
| 4. Rear seatback assembly (RH) | 5. Seatback board (RH) | 6. Headrest holder (RH) (free) |
| 7. Headrest holder (RH) (locked) | 8. Seatback trim (RH) | 9. Seatback pad (RH) |
| 10. Armrest | 11. Cup holder | 12. Armrest hinge finisher |
| 13. Seatback hinge assembly (RH) | 14. Seat cushion assembly | 15. Seat cushion lock |
| 16. Seat cushion wire cover | 17. Seat cushion pad | 18. Seat cushion trim |

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

REAR SEAT

< REMOVAL AND INSTALLATION >

- | | | |
|-------------------------|-----------------------------------|---------------------------------|
| 19. Seatback hinge (LH) | 20. Wave washer | 21. Seatback pad (LH) |
| 22. Seatback trim (LH) | 23. Headrest holder (LH) (locked) | 24. Headrest holder (LH) (free) |
| 25. Seatback board (LH) | 26. Seat belt guide (LH) | 27. Rear seat bolster (LH) |
| 28. Headrest (LH) | 29. Rear seatback assembly (LH) | 30. Seatback latch assembly |
| 31. Cable guide | A. Seatback board clips | B. Armrest pivot bolt |


Removal and Installation - Seat Cushion Assembly

INFOID:0000000010481836

1. Locate the seat cushion lock (2) at the front bottom of the seat cushion assembly (one for each side). Pull the release lever (A) forward and lift the seat cushion upward to release the seat cushion wire (1) from the seat cushion lock (2).

↔: Front

2. Then pull the seat cushion assembly forward to remove.

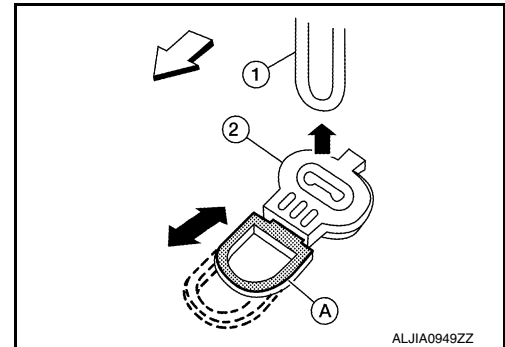

ALJIA0949ZZ

Removal and Installation - Seat Assembly

INFOID:0000000010481837


REMOVAL

NOTE:

Rear seatback assembly (RH) must be removed first, then rear seatback assembly (LH) can be removed.

1. Remove the rear seat cushion assembly. Refer to [SE-42, "Removal and Installation - Seat Cushion Assembly"](#).
2. Remove the rear seat bolster (RH). Refer to [SE-44, "Removal and Installation - Rear Seat Bolster"](#).
3. Remove the rear seatback assembly (RH) (1).
 - a. Remove the seatback pivot bolt (A).

CAUTION:
Do not remove hinge bolt (B) or seatback alignment may be necessary.
 - b. Release the seatback latch assembly then remove the rear seatback assembly (1) from the seatback hinge (RH) (2).
 - c. Remove the rear seatback assembly (RH).

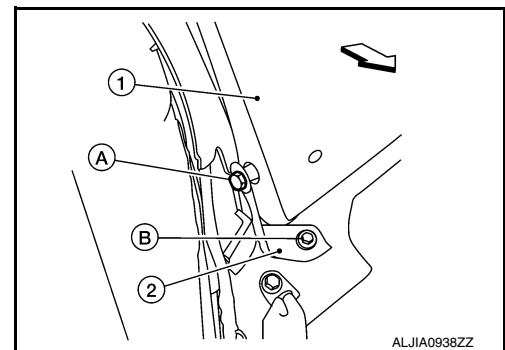


ALJIA0938ZZ

4. Remove the rear seat bolster (LH). Refer to [SE-44, "Removal and Installation - Rear Seat Bolster"](#).
5. Remove the rear seatback assembly (LH) (1).
 - a. Remove retaining clip (A) from seatback pivot pin (B) using a suitable tool.

NOTE:

Retaining clip (A) is used for factory installation only, it is not a serviceable part and not necessary to use during installation.

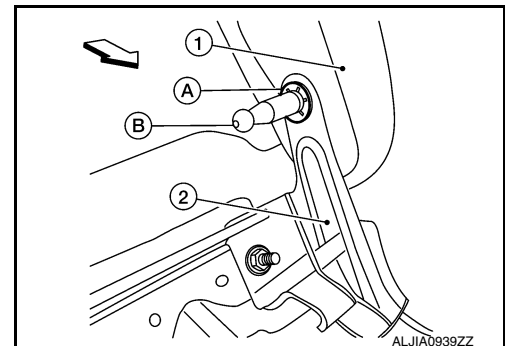


ALJIA0939ZZ

REAR SEAT

< REMOVAL AND INSTALLATION >

- b. Remove the seatback pivot bolt (A).
CAUTION:
Do not remove hinge bolt (B) or seatback alignment may be necessary.
- c. Release the seatback latch assembly then remove the rear seatback assembly (1) from the seatback hinge (LH) (2).
- d. Remove the rear seatback assembly (LH).

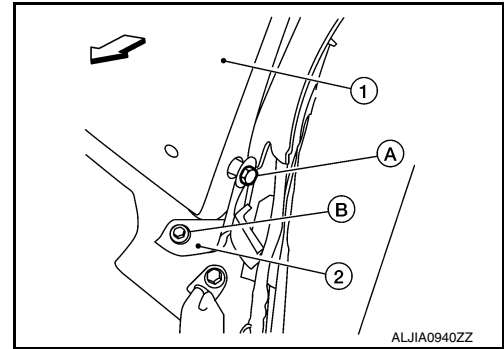

INSTALLATION

Installation is in the reverse order of removal.

- Tighten bolts and nuts to specification. Refer to [SE-39, "Exploded View"](#).

Removal and Installation - Seatback Hinge

INFOID:0000000010481838

REMOVAL

1. Remove the seat cushion assembly, rear seatback assembly (RH), and the rear seatback assembly (LH). Refer to [SE-42, "Removal and Installation - Seat Assembly"](#).
2. Remove the bolt and nut from the seatback hinge assembly (RH), then remove.
3. Remove the bolt from the seatback hinge (LH), then remove.

INSTALLATION

1. Install seatback hinge assembly (RH) and seatback hinge (LH) loosely.
2. Install the rear seatback assembly (LH) and engage into seatback latch assembly.
3. Install the rear seatback assembly (RH) and engage into seatback latch assembly.
4. Tighten seatback hinge nut and bolts to specification. Refer to [SE-39, "Exploded View"](#).

CAUTION:

Ensure rear seatback assemblies (LH/RH) fold and latch properly. Adjust if necessary.

5. Install remaining components in reverse order of removal.

Removal and Installation - Seatback Latch Assembly

INFOID:0000000010481839


REMOVAL

1. Remove the rear seat bolster (LH/RH). Refer to [SE-44, "Removal and Installation - Rear Seat Bolster"](#).
2. Place the rear seatback assemblies (LH/RH) in the folded down position.
3. Remove the rear parcel shelf finisher. Refer to [INT-26, "Exploded View"](#).
4. From trunk area release pawls (A) to open cable guide (1).
5. Unclip latch cable (2) at location (B).

⇐: Front

NOTE:

LH side shown; RH side similar.

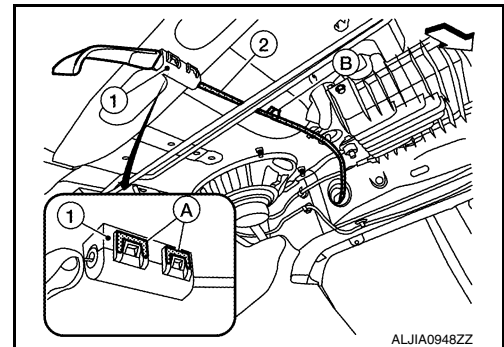

6. Remove two seatback latch assembly bolts and the seatback latch assembly.

INSTALLATION

Installation is in the reverse order of removal.

- Tighten two seatback latch assembly bolts to specification. Refer to [SE-39, "Exploded View"](#).

REAR SEAT

< REMOVAL AND INSTALLATION >

Removal and Installation - Armrest Assembly

INFOID:0000000010481840

REMOVAL

1. Place the rear seatback assembly LH in the folded down position.
2. Remove the armrest hinge finisher using a suitable tool.
3. Remove the armrest pivot bolt and the armrest.

INSTALLATION

Installation is in the reverse order of removal.

- Tighten the armrest pivot bolt to specification. Refer to [SE-39, "Exploded View"](#).

Removal and Installation - Rear Seat Bolster

INFOID:0000000010481841

REMOVAL

1. Remove the seat cushion assembly. Refer to [SE-42, "Removal and Installation - Seat Cushion Assembly"](#).
2. Remove the seat belt from the seat belt guide.
3. Remove the bolt at bottom of rear seat bolster.
4. Lift the rear seat bolster to remove.

INSTALLATION

Installation is in the reverse order of removal.

- Tighten rear seat bolster bolt to specification. Refer to [SE-39, "Exploded View"](#).

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

UNIT DISASSEMBLY AND ASSEMBLY


FRONT SEAT

DRIVER SIDE

DRIVER SIDE : Exploded View

INFOID:000000010481842

DRIVER SEAT - POWER

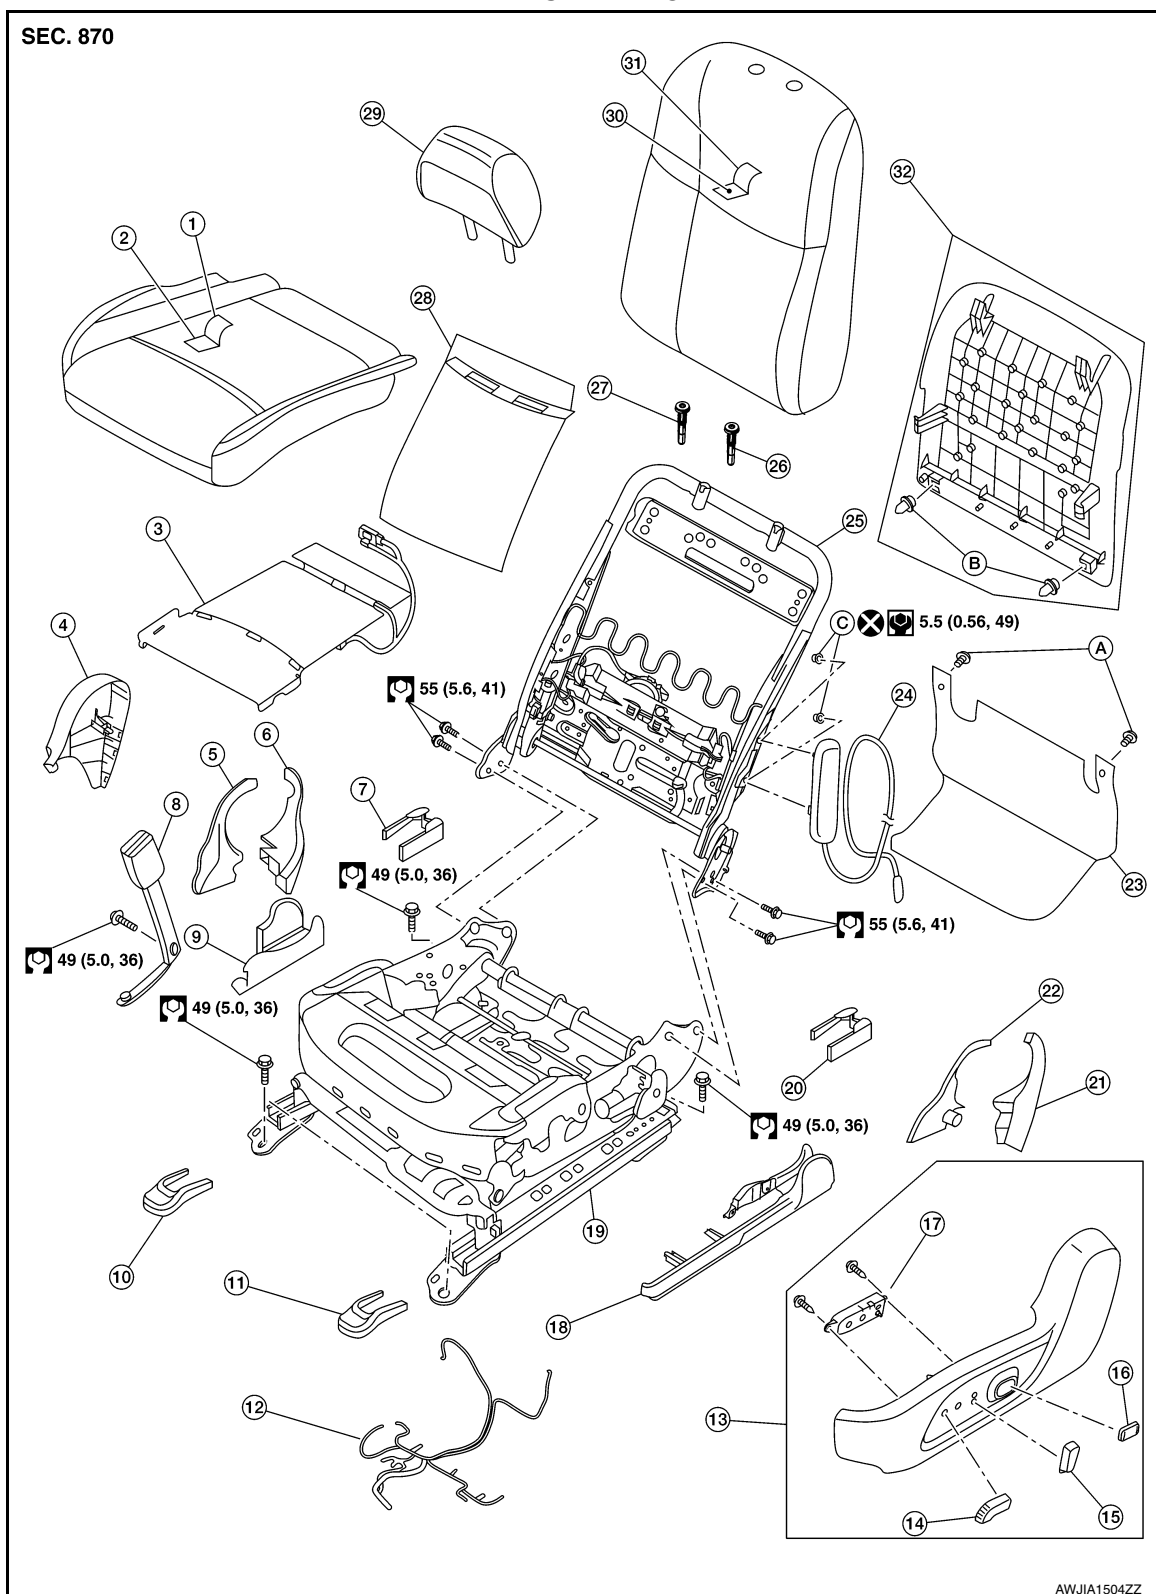

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


- | | | |
|--|---|---|
| 1. Seat cushion trim | 2. Seat cushion pad | 3. Seat cushion heater (if equipped) |
| 4. Seat cushion outer finisher (RH) | 5. Seat cushion inner finisher (RH front) | 6. Seat cushion inner finisher (RH rear) |
| 7. Rear slide cover (RH) | 8. Seat belt buckle | 9. Slide cover (RH) |
| 10. Front slide cover (RH) | 11. Front slide cover (LH) | 12. Seat harness |
| 13. Seat cushion outer finisher (LH) | 14. Seat slide knob | 15. Seat recline knob |
| 16. Lumbar support switch (if equipped) | 17. Power seat switch | 18. Slide cover (LH) |
| 19. Seat cushion frame | 20. Rear slide cover (LH) | 21. Seat cushion inner finisher (LH rear) |
| 22. Seat cushion inner finisher (LH front) | 23. Rear hinge cover | 24. Side air bag module |
| 25. Seatback frame | 26. Headrest holder (locked) | 27. Headrest holder (free) |
| 28. Seatback heater (if equipped) | 29. Headrest | 30. Seatback pad |
| 31. Seatback trim | 32. Seatback board | A. Rear hinge cover clips |
| B. Seatback board clips | C. Side air bag module nuts | |

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

DRIVER SEAT - MANUAL

SEC. 870

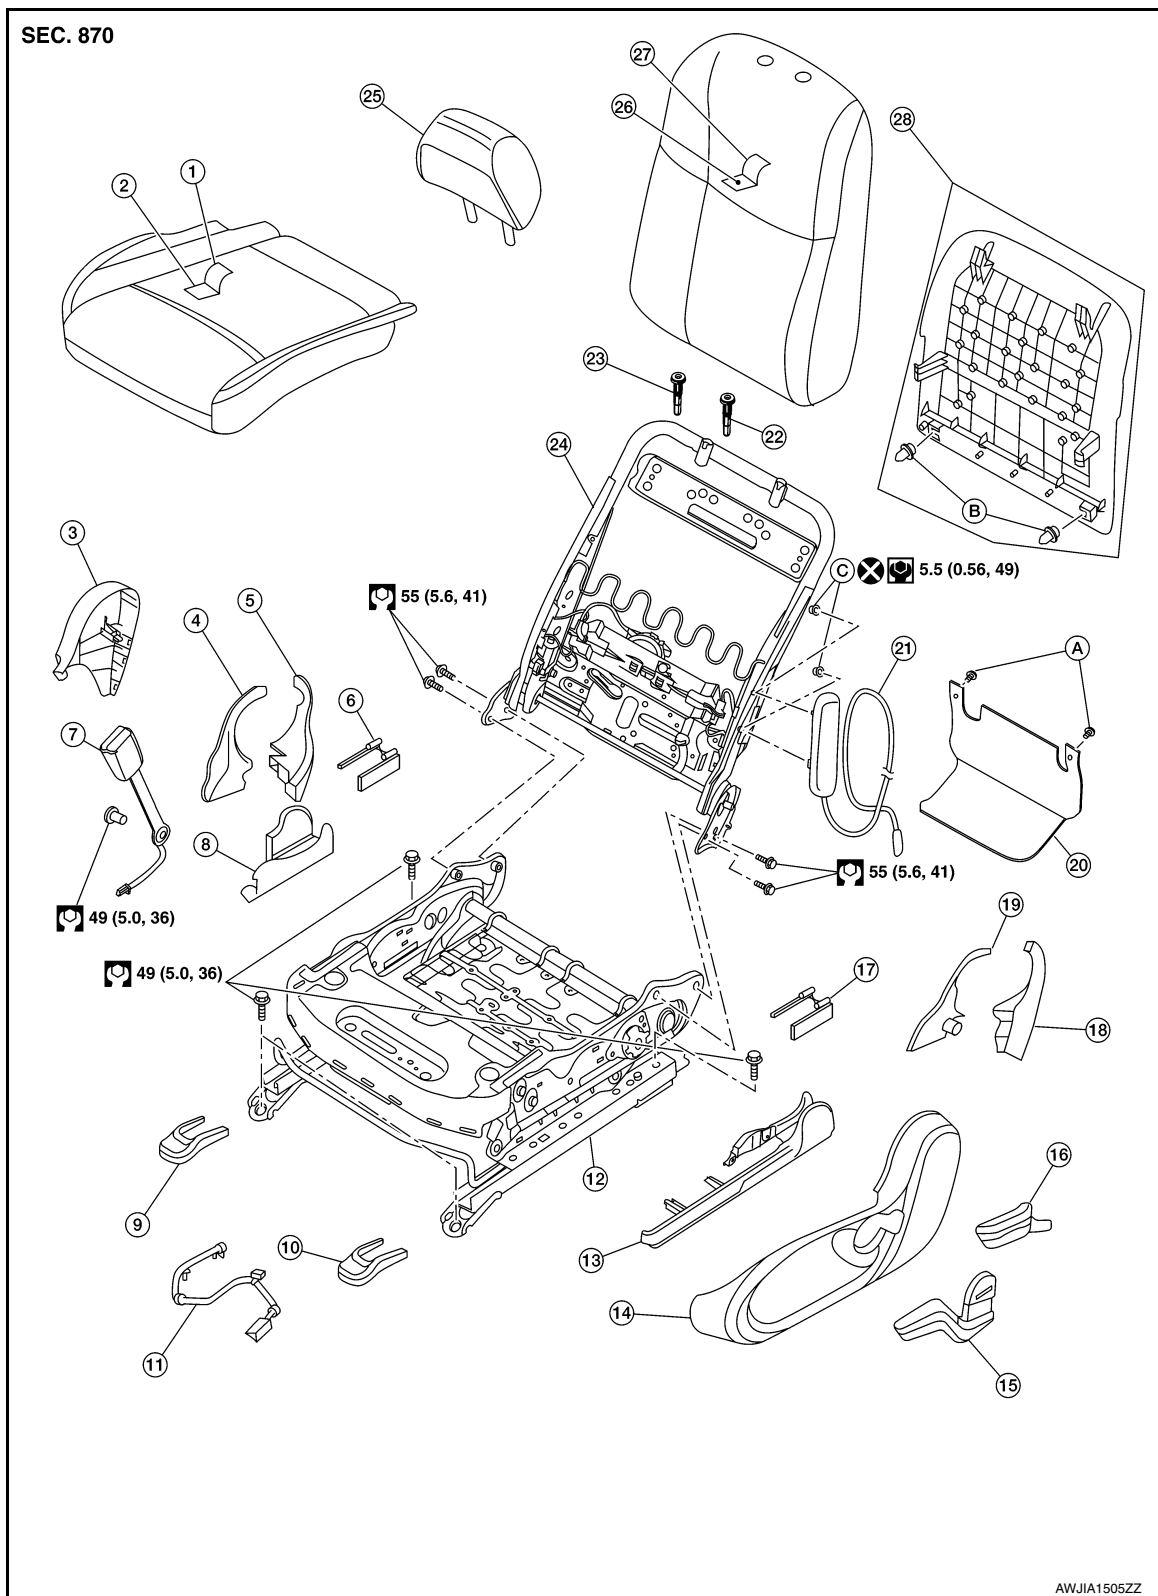

- | | | |
|---|--|-------------------------------------|
| 1. Seat cushion trim | 2. Seat cushion pad | 3. Seat cushion outer finisher (RH) |
| 4. Seat cushion inner finisher (RH front) | 5. Seat cushion inner finisher (RH rear) | 6. Rear slide cover (RH) |
| 7. Seat belt buckle | 8. Slide cover (RH) | 9. Front slide cover (RH) |
| 10. Front slide cover (LH) | 11. Seat harness | 12. Seat cushion frame |
| 13. Slide cover (LH) | 14. Seat cushion outer finisher (LH) | 15. Lift lever |

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | |
|--|----------------------------|---|
| 16. Recline lever | 17. Rear slide cover (LH) | 18. Seat cushion inner finisher (LH rear) |
| 19. Seat cushion inner finisher (LH front) | 20. Rear hinge cover | 21. Side air bag module |
| 22. Headrest holder (locked) | 23. Headrest holder (free) | 24. Seatback frame |
| 25. Headrest | 26. Seatback pad | 27. Seatback trim |
| 28. Seatback board | A. Rear hinge cover clips | B. Seatback board clips |
| C. Side air bag module nuts | | |

DRIVER SIDE : Disassembly and Assembly

INFOID:0000000010481843

SEATBACK ASSEMBLY

WARNING:

Do not leave any objects (screwdrivers, tools, etc.) on the seat during seatback repair. It can lead to personal injury if the side air bag should accidentally deploy.

CAUTION:

- Before servicing, turn ignition switch OFF, disconnect both battery terminals and wait at least three minutes.
- Handle the side air bag module carefully. During disassembly, always hold the side air bag module, do not let it hang by the wire harness.
- Always work from the side or back of the seatback, do not work in front of seat.
- Do not use air tools or electric tools for servicing the seat.
- Replace the side air bag module if it has been dropped or sustained an impact.
- Do not insert any objects into the side air bag module.
- Do not attempt to disassemble the side air bag module.
- Do not expose the side air bag module to temperatures exceeding 93°C (200°F).
- Do not expose the side air bag module to any oil, grease, detergent or water.
- During disassembly, do not damage the seatback board, chutes, connectors, retainers, clips, module harness or the side air bag module.
- During disassembly do not damage the seatback pad or seatback heater.

NOTE:

If the vehicle has been involved in a collision and the side air bag has deployed, the front seatback assembly must be replaced.

Disassembly

1. Remove the front driver seat. Refer to [SE-31, "DRIVER SIDE : Removal and Installation - Seat Assembly"](#).
2. Remove the seatback board. Refer to [SE-32, "DRIVER SIDE : Removal and Installation - Seatback Board"](#).

FRONT SEAT


< UNIT DISASSEMBLY AND ASSEMBLY >

3. Release the J-clips (A) holding the seatback trim to the seatback frame.
4. Remove the rear hinge cover (1).
5. Disconnect the harness connector (B) from the lumbar support assembly (if equipped).
6. Disconnect the harness connector (C) from the reclining motor.
7. Unclip the harness at locations (E) (if equipped).

NOTE:

Take note of harness routing and attachment location for accurate installation.

8. Unclip the side air bag module harness at locations (D).

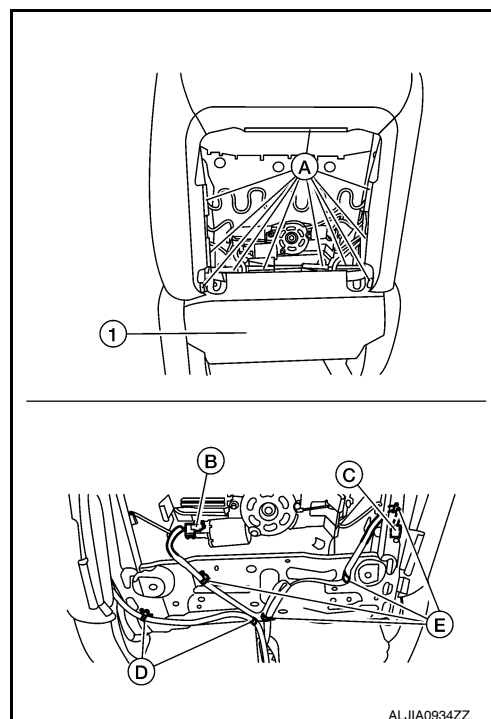


9. From the bottom of the seat.

- a. Unclip the side air bag module harness (1) at locations (A).

NOTE:

Take note of harness routing and attachment location for accurate installation.

- b. Disconnect harness connector (B) from the seatback heater (if equipped).

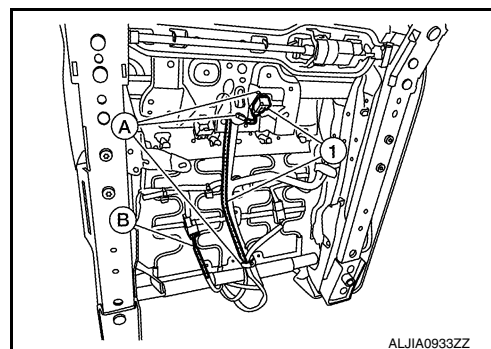

10. Remove the seat cushion outer finisher (LH) (1).

- a. For power seat:


- i. Remove screw (A).

- ii. Release metal clips (B) from the seat cushion frame (2), as shown.

[]: Metal clip

- iii. Release pawls to separate.


() : Pawl

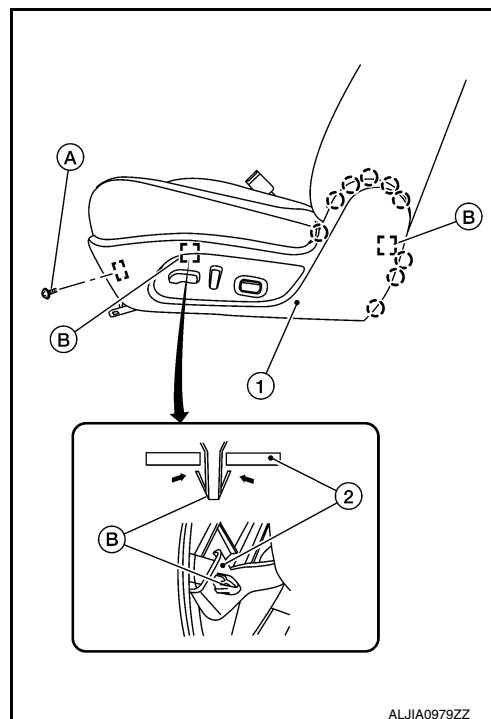

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


- iv. Disconnect the harness connector (A) from the power seat switch (1).
- v. Remove screws (B) if necessary to replace the power seat switch (1).
- vi. Disconnect the harness connector (D) from the lumbar support switch (2) (if equipped).
- vii. Release pawls (C) if necessary to replace the lumbar support switch (2) (if equipped).

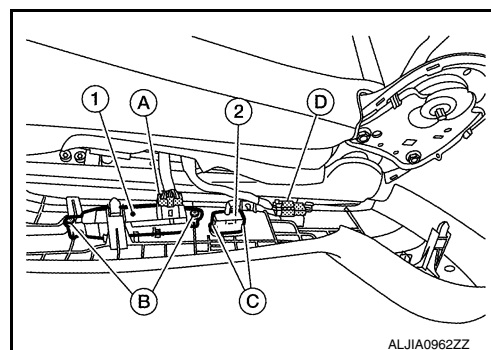

- b. For manual seat:
 - i. Release pawl and remove recline lever (3) as shown.
 - ii. Remove two screws (B) and remove the lift lever (2).
 - iii. Release metal clips (A) from the seat cushion frame (4) as shown.
- iv. Release the remaining pawls then remove the seat cushion outer finisher (LH) (1).

[]: Metal clip


○: Pawl

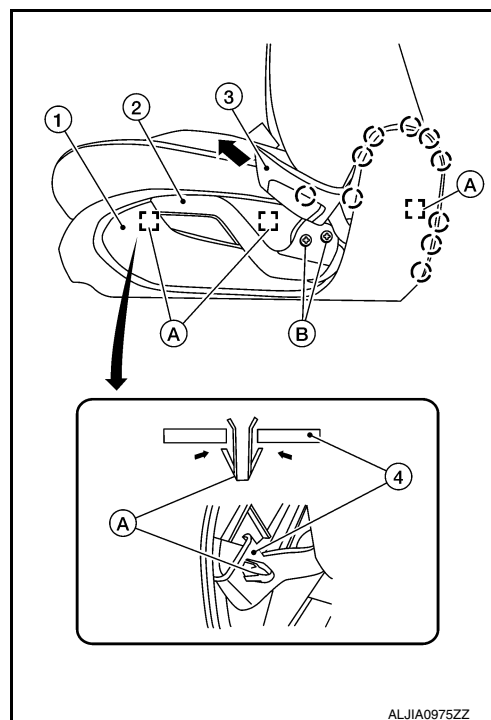

11. Remove the seat cushion outer finisher (RH) (1).
- a. Release pawls then pull to release the metal clip.

[]: Metal clip

○: Pawl

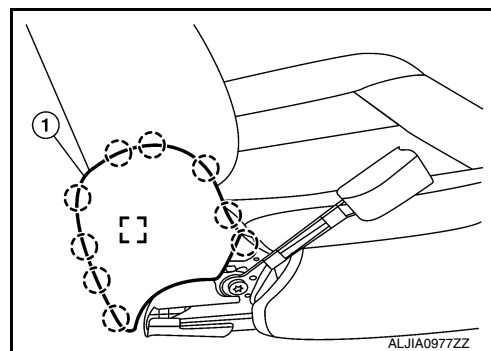


12. Remove the seat cushion inner finisher front (LH/RH) and seat cushion inner finisher rear (LH/RH).

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


13. Remove bolts (A) on both sides of seatback frame (1) and remove the seatback assembly (1).

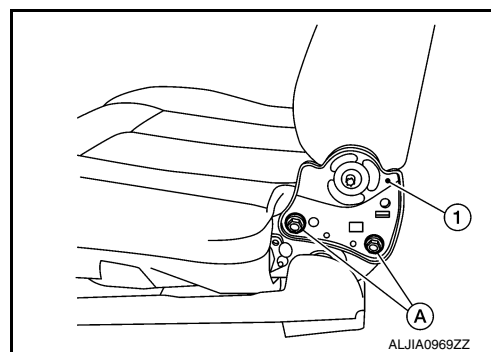

14. Remove the seatback pad from the seatback frame.
a. Release the headrest holder locks as shown and remove the headrest holders.

CAUTION:

Before removing/installing the headrest holder, check its orientation (front/rear and right/left).

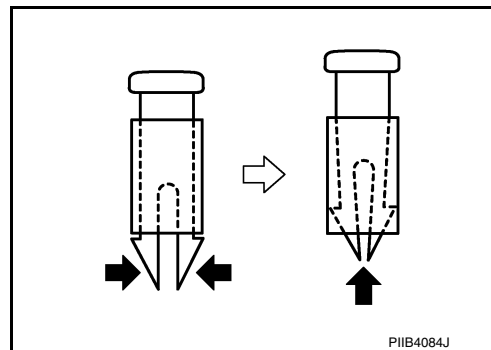


- b. Remove and discard the side air bag module nuts (A).

CAUTION:

Do not reuse the side air bag module nuts.


(1): Side air bag module

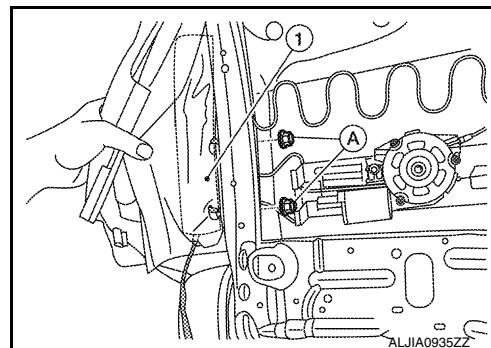

- c. Disengage the side air bag module studs from the seatback frame and lift the seatback trim and seatback pad as an assembly to remove from the seatback frame.

15. Separate the seatback trim from the seatback pad (if necessary).

- a. Open the seatback trim and release the side air bag module studs (A) protruding through holes in the chute (B).
b. Pull the side air bag module (1) out of the chute (B) and remove from the seatback trim.

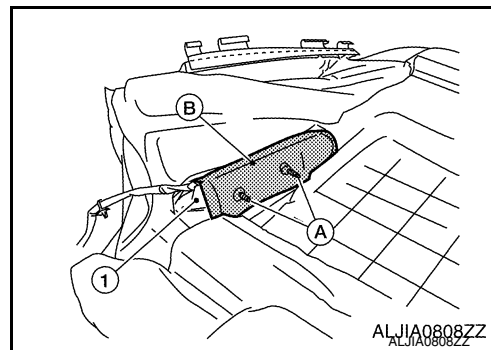

FRONT SEAT


< UNIT DISASSEMBLY AND ASSEMBLY >

- c. Pull the seatback trim (1) upward from bottom to release hook fasteners (A).
- d. Remove three hog rings and separate the seatback trim from the seatback pad.

[]: Hog ring

NOTE:

Remove all pieces of hog rings and discard them.

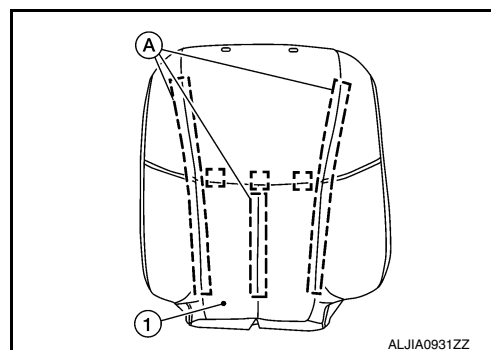

- 16. Remove the seatback heater from seatback pad (if necessary). Refer to [SE-60, "DRIVER SIDE : Front Seat Heater"](#).

Assembly

Assembly is in the reverse order of disassembly.

CAUTION:

- Inspect seatback pad, seatback trim and seatback trim chutes. Replace if damaged.
- Smooth out all wrinkles during assembly.
- Always route side air bag module harness in original location. Replace any deformed or damaged clips with same type and color. Always install clips in the original location in the harness.
- After work is completed, check that no system malfunction is detected causing the air bag warning lamp to illuminate.
- If a malfunction is detected by the air bag warning lamp after repair or replacement of the malfunction parts, perform the SRS final check. Refer to [SRC-17, "SRS Final Check"](#).
- When installing the side air bag module, make sure the side air bag chute (2) is pulled over the outboard surface of the side air bag module (3). Make sure there are no wrinkles and the chute is not folded, twisted or pinched.

(1) Seatback pad


(4) Frame

(5) Seatback board

⇐: Front

CAUTION:


- Do not reuse side air bag module nuts.
- Make sure the side air bag module nuts are tightened to specification. Refer to [SE-45, "DRIVER SIDE : Exploded View"](#).

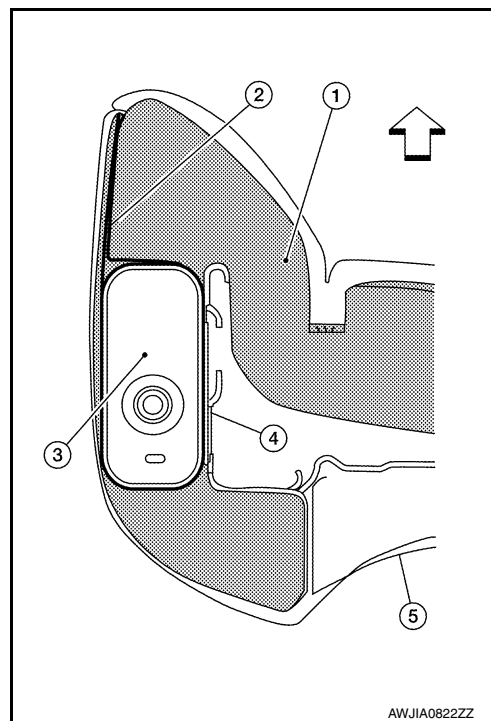


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


- When installing the seatback trim, firmly push down while sliding your hand along the seams as shown (➡) to ensure the hook fasteners below the seatback trim are fastened properly.

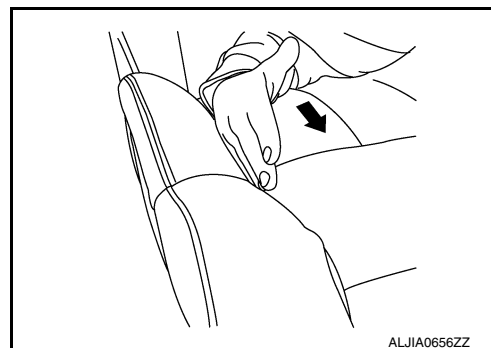

- Install new hog rings on the seatback trim in original positions. Use only one hog ring in each designated location. Ensure hog rings are correctly fastened around both the seatback trim and seatback pad wires. Use NISSAN standard hog rings and tools to assemble.

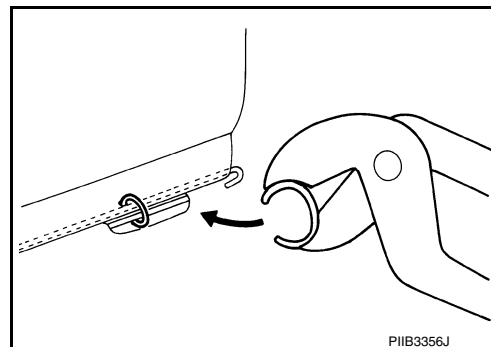

- Install all seatback frame bolts and tighten evenly in sequence shown. Tighten the seatback frame bolts to specification. Refer to [SE-45, "DRIVER SIDE : Exploded View"](#).

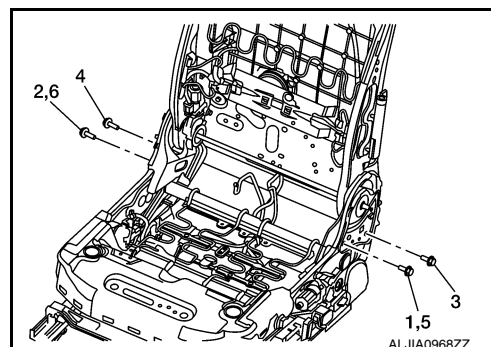

SEAT CUSHION

WARNING:

Do not leave any objects (screwdrivers, tools, etc.) on the seat during seat cushion repair. It can lead to personal injury if the side air bag should accidentally deploy.

CAUTION:

- Before servicing, turn ignition switch OFF, disconnect both battery terminals and wait at least three minutes.
- Always work from the side or back of the seatback, do not work in front of seat.
- Do not use air tools or electric tools for servicing the seat.
- During disassembly, do not damage the seatback cover, chutes, connectors, retainers, clips, module harness or the side air bag module.
- During disassembly do not damage the seat cushion pad or seat cushion heater.

Disassembly

- Remove the front driver seat. Refer to [SE-31, "DRIVER SIDE : Removal and Installation - Seat Assembly"](#).

NOTE:

Raise the front driver seat to highest position before removing.

- Remove the seatback board. Refer to [SE-32, "DRIVER SIDE : Removal and Installation - Seatback Board"](#).
- Remove the rear hinge cover.


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

4. From the bottom of the seat, disconnect the harness connector (C) from the seat cushion heater (if equipped).
 (A) Side air bag module harness clips.
 (B) Harness connector for the seatback heater (if equipped)

NOTE:


Take note of harness routing and attachment location for accurate installation.

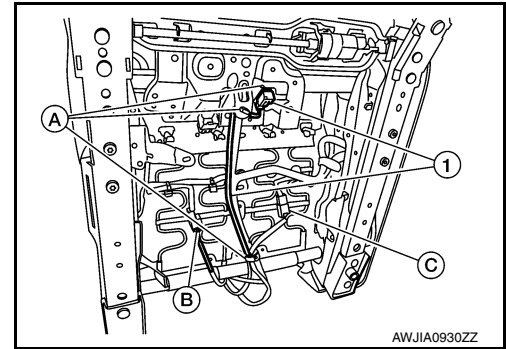


5. Remove the seat cushion outer finisher (LH) (1).
 - a. For power seat:
 - i. Remove screw (A).
 - ii. Release metal clips (B) from the seat cushion frame (2), as shown.

□: Metal clip
 - iii. Release pawls to separate.

○: Pawl

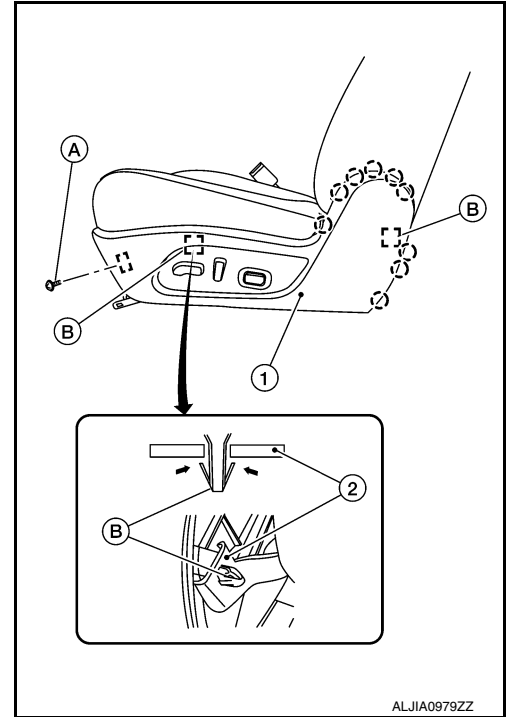


- iv. Disconnect the harness connector (A) from the power seat switch (1).
- v. Remove screws (B) if necessary to replace the power seat switch (1).
- vi. Disconnect the harness connector (D) from the lumbar support switch (2) (if equipped).
- vii. Release pawls (C) if necessary to replace the lumbar support switch (if equipped).

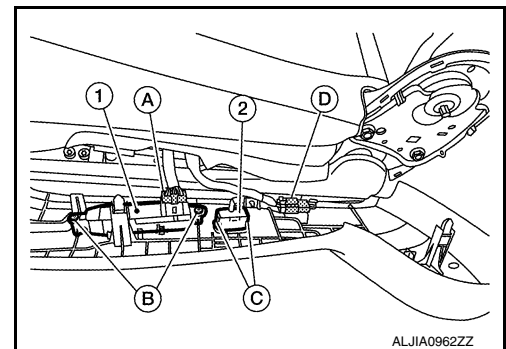


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- b. For manual seat:
 - i. Release pawl and remove recline lever (3) as shown.
 - ii. Remove two screws (B) and remove the lift lever (2).
 - iii. Release metal clips (A) from the seat cushion frame (4), as shown.
- []: Metal clip
- iv. Release the remaining pawls then remove the seat cushion outer finisher (LH) (1).
- (○): Pawl

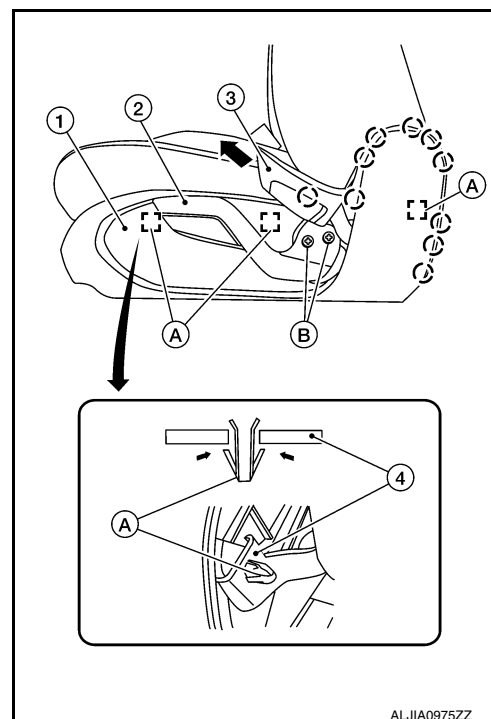

- 6. Remove the seat cushion outer finisher (RH) (1).
- a. Release pawls then pull to release the metal clip.
- []: Metal clip
 - (○): Pawl

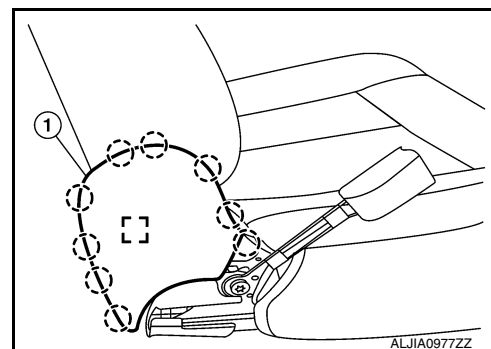

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

7. Remove the seat cushion trim (1) and seat cushion pad as an assembly.


⇐:Front

- a. Release J-clips (A) holding the seat cushion trim to the seat cushion frame.
- b. Release J-clip (B) holding the seat cushion trim to the seat cushion frame.
- c. Release J-clips (D) holding the seat cushion trim to the seat cushion frame.
- d. Release retainer strips (C) holding the seat cushion trim to the seat cushion frame.
- e. Disconnect the harness connector from the seat cushion heater (if equipped).

NOTE:

Take note of harness routing and attachment location for accurate installation.

8. Remove the seat cushion trim (1) and the seat cushion pad from the seat cushion frame.

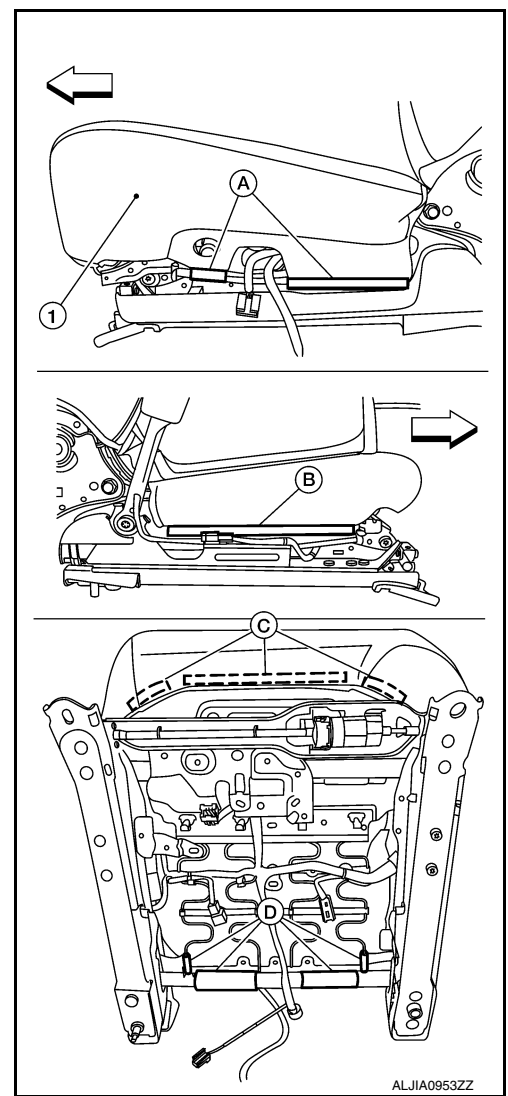


9. Separate the seat cushion trim (1) from the seat cushion pad.

- a. Pull the seat cushion trim upward to release hook fasteners (A).
- b. Remove three hog rings and separate the seat cushion trim from the seat cushion pad.

[]: Hog ring

NOTE:

Remove all pieces of hog rings and discard them.

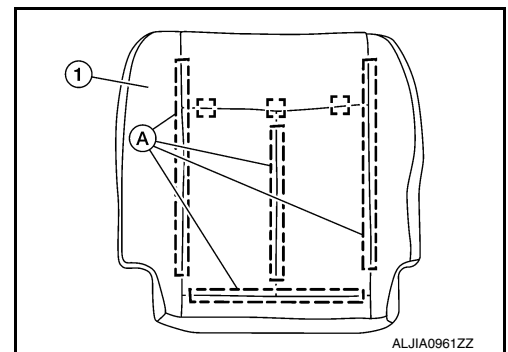

10. Remove seat cushion heater from seat cushion pad (if necessary). Refer to [SE-60, "DRIVER SIDE : Front Seat Heater"](#).

Assembly

Assembly is in the reverse order of disassembly.


CAUTION:

- Smooth out all wrinkles during assembly.
- Always route side air bag module harness in original location. Replace any deformed or damaged clips with same type and color. Always install clips in the original location in the harness.
- After work is completed, check that no system malfunction is detected causing the air bag warning lamp to illuminate.
- If a malfunction is detected by the air bag warning lamp after repair or replacement of the malfunction parts, perform the SRS final check. Refer to [SRC-17, "SRS Final Check"](#).


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- When installing the seat cushion trim, firmly push down while sliding your hand along the seams as shown (←) to ensure the hook fasteners below the seat cushion trim are fastened properly.

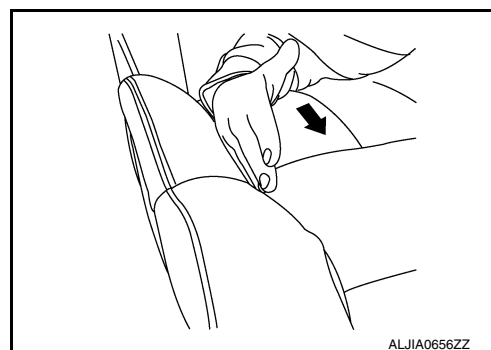

- Install new hog rings on the seat cushion trim in original positions. Use only one hog ring in each designated location. Ensure hog rings are correctly fastened around both the seat cushion trim and seat cushion pad wires. Use NISSAN standard hog rings and tools to assemble.

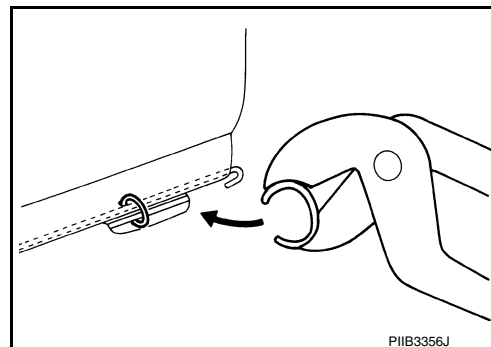

INFOID:000000010481844

DRIVER SIDE : Side air bag module

WARNING:

Do not leave any objects (screwdrivers, tools, etc.) on the seat during seatback repair. It can lead to personal injury if the side air bag should accidentally deploy.

CAUTION:

- Before servicing, turn ignition switch OFF, disconnect both battery terminals and wait at least three minutes.
- Handle the side air bag module carefully. During disassembly, always hold the side air bag module, do not let it hang by the wire harness.
- Always work from the side or back of the seatback assembly, do not work in front of seat.
- Do not use air tools or electric tools for servicing the seat.
- Replace the side air bag module if it has been dropped or sustained an impact.
- Do not insert any objects into the side air bag module.
- Do not attempt to disassemble the side air bag module.
- Do not expose the side air bag module to temperatures exceeding 93°C (200°F).
- Do not expose the side air bag module to any oil, grease, detergent or water.
- During disassembly, do not damage the seatback board, chutes, connectors, retainers, clips, module harness or the side air bag module.

NOTE:

- If the vehicle has been involved in a collision and the side air bag has deployed, the front seatback assembly must be replaced.
- For side air bag module removal and installation, seatback trim and seatback pad must be removed.

REMOVAL

- Remove the front driver seat. Refer to [SE-31. "DRIVER SIDE : Removal and Installation - Seat Assembly"](#).
- Remove the seatback board. Refer to [SE-32. "DRIVER SIDE : Removal and Installation - Seatback Board"](#).


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


3. Release the J-clips (A) holding the seatback trim (1) to the seat-back frame.
4. Remove the rear hinge cover (1).
5. Unclip the side air bag module harness at locations (D).
 (B) Harness connector for the lumbar support assembly (if equipped)
 (C) Harness connector for the reclining motor (if equipped)
 (E) Harness clips (if equipped)

NOTE:


Take note of harness routing and attachment location for accurate installation.

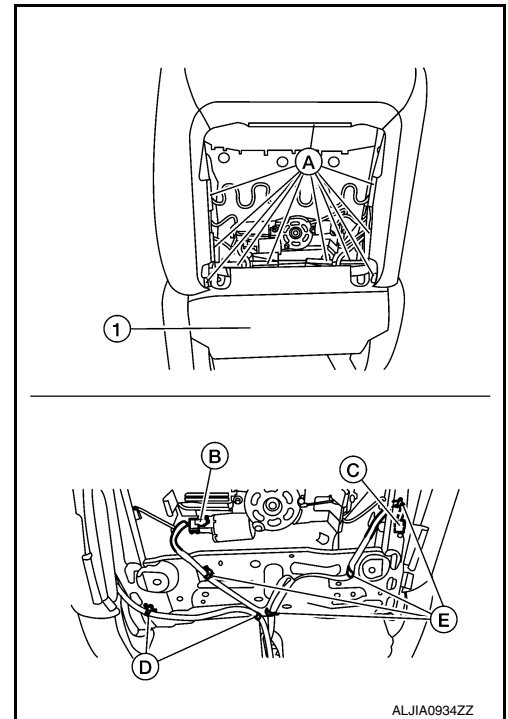


6. From the bottom of the seat.
 - a. Unclip the side air bag module harness (1) at locations (A).
NOTE:
 Take note of harness routing and attachment location for accurate installation.
 - b. Disconnect the harness connector (B) from the seatback heater (if equipped).

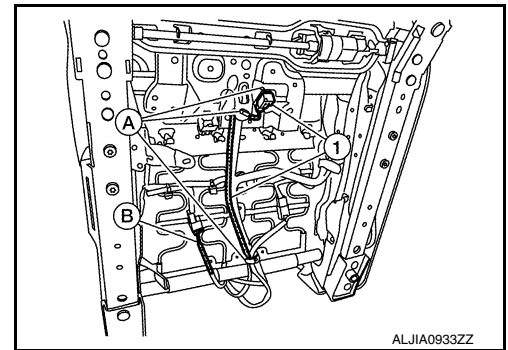

7. Release the headrest holder locks as shown and remove the headrest holders.
CAUTION:
 Before removing/installing the headrest holder, check its orientation (front/rear and right/left).

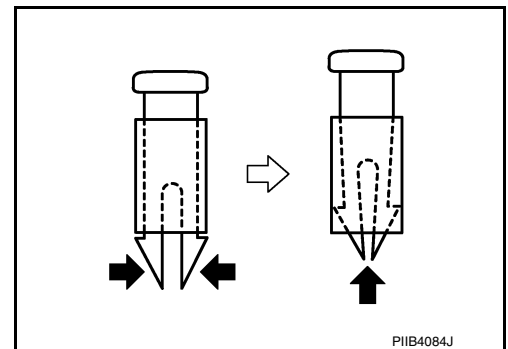


8. Remove and discard the two side air bag module nuts (A).
 (1) Side air bag module
CAUTION:
 Do not reuse the side air bag module nuts.

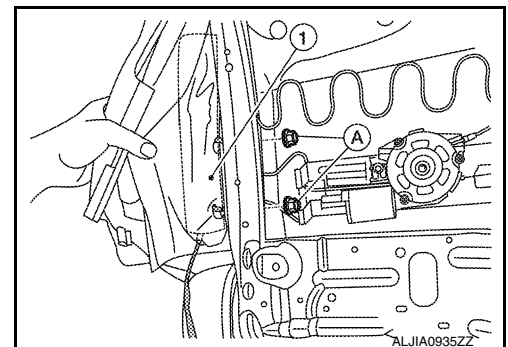

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

9. Disengage the side air bag module studs from the seatback frame and lift the seatback cushion trim and seatback pad as an assembly to remove from the seatback frame.
10. Open the seatback cushion and release the side air bag module studs (A) protruding through holes in the chute (B).
11. Pull the side air bag module (1) out of the chute (B) and remove from the seatback trim.

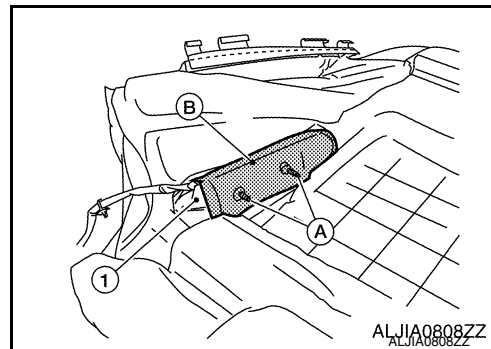

CAUTION:

- Replace the front passenger air bag module if it has been dropped or sustained an impact.
- Do not strike the front passenger air bag module.



INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Inspect seatback pad, seatback trim and seatback trim chutes. Replace if damaged.
- Smooth out all wrinkles during assembly.
- Always route side air bag module harness in original location. Replace any deformed or damaged clips with same type and color. Always install clips in the original location in the harness.
- After installation is completed, check that no system malfunction is detected causing the air bag warning lamp to illuminate.
- If a malfunction is detected by the air bag warning lamp after repair or replacement of the malfunction parts, perform the SRS final check. Refer to [SRC-17. "SRS Final Check"](#).

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- When installing the side air bag module, make sure the side air bag chute (2) is pulled over the outboard surface of the side air bag module (3). Make sure there are no wrinkles and the chute is not folded, twisted or pinched.


- (1) Seatback pad
- (4) Frame
- (5) Seatback board

⇐: Front

- Tighten the side air bag nuts to specification. Refer to [SE-45, "DRIVER SIDE : Exploded View"](#).

CAUTION:

- Do not reuse side air bag module nuts.

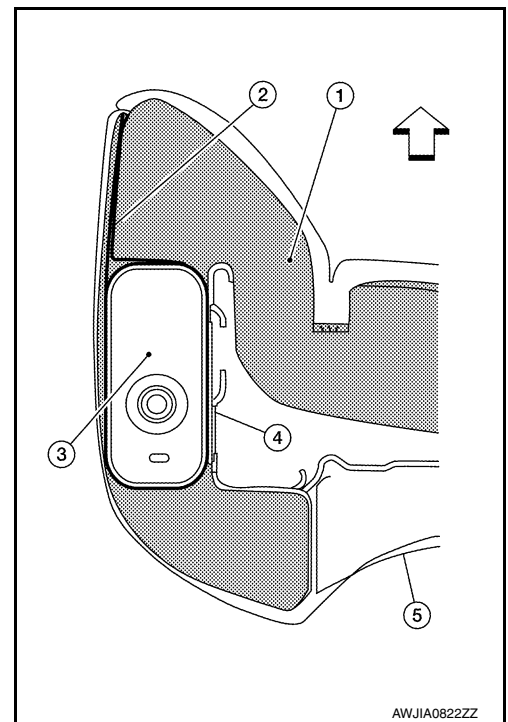

DRIVER SIDE : Front Seat Heater

INFOID:0000000011198908

REMOVAL

Seat Heater - Seatback pad

- Remove seatback pad. Refer to [SE-48, "DRIVER SIDE : Disassembly and Assembly"](#).
- Carefully remove front seatback heater from seatback pad.

CAUTION:

- Carefully remove seatback heater from seatback pad.
- Do not damage seatback pad when removing seatback heater, if damaged replace seatback pad

INSTALLATION

Seatback pad

- Peel protective backing from front seatback heater and attach to seatback pad.
- Secure the front seatback heater harness to the seatback frame.
- Install the remaining seatback components. Refer to [SE-48, "DRIVER SIDE : Disassembly and Assembly"](#).

REMOVAL

Seat Heater - Seat cushion pad

- Remove seat cushion pad. Refer to [SE-48, "DRIVER SIDE : Disassembly and Assembly"](#).
- Carefully remove front seat cushion heater from seat cushion pad.

CAUTION:

- Carefully remove seat cushion heater from seat cushion pad.
- Do not damage seat cushion pad when removing seat cushion heater, if damaged replace seat cushion pad


INSTALLATION

Seat cushion pad

- Peel protective backing from front seat cushion heater and attach to seat cushion pad.
- Secure the front seat cushion heater harness to the seat cushion frame.
- Install the remaining seat cushion components. Refer to [SE-48, "DRIVER SIDE : Disassembly and Assembly"](#).

INFOID:0000000010481845

SEC. 870

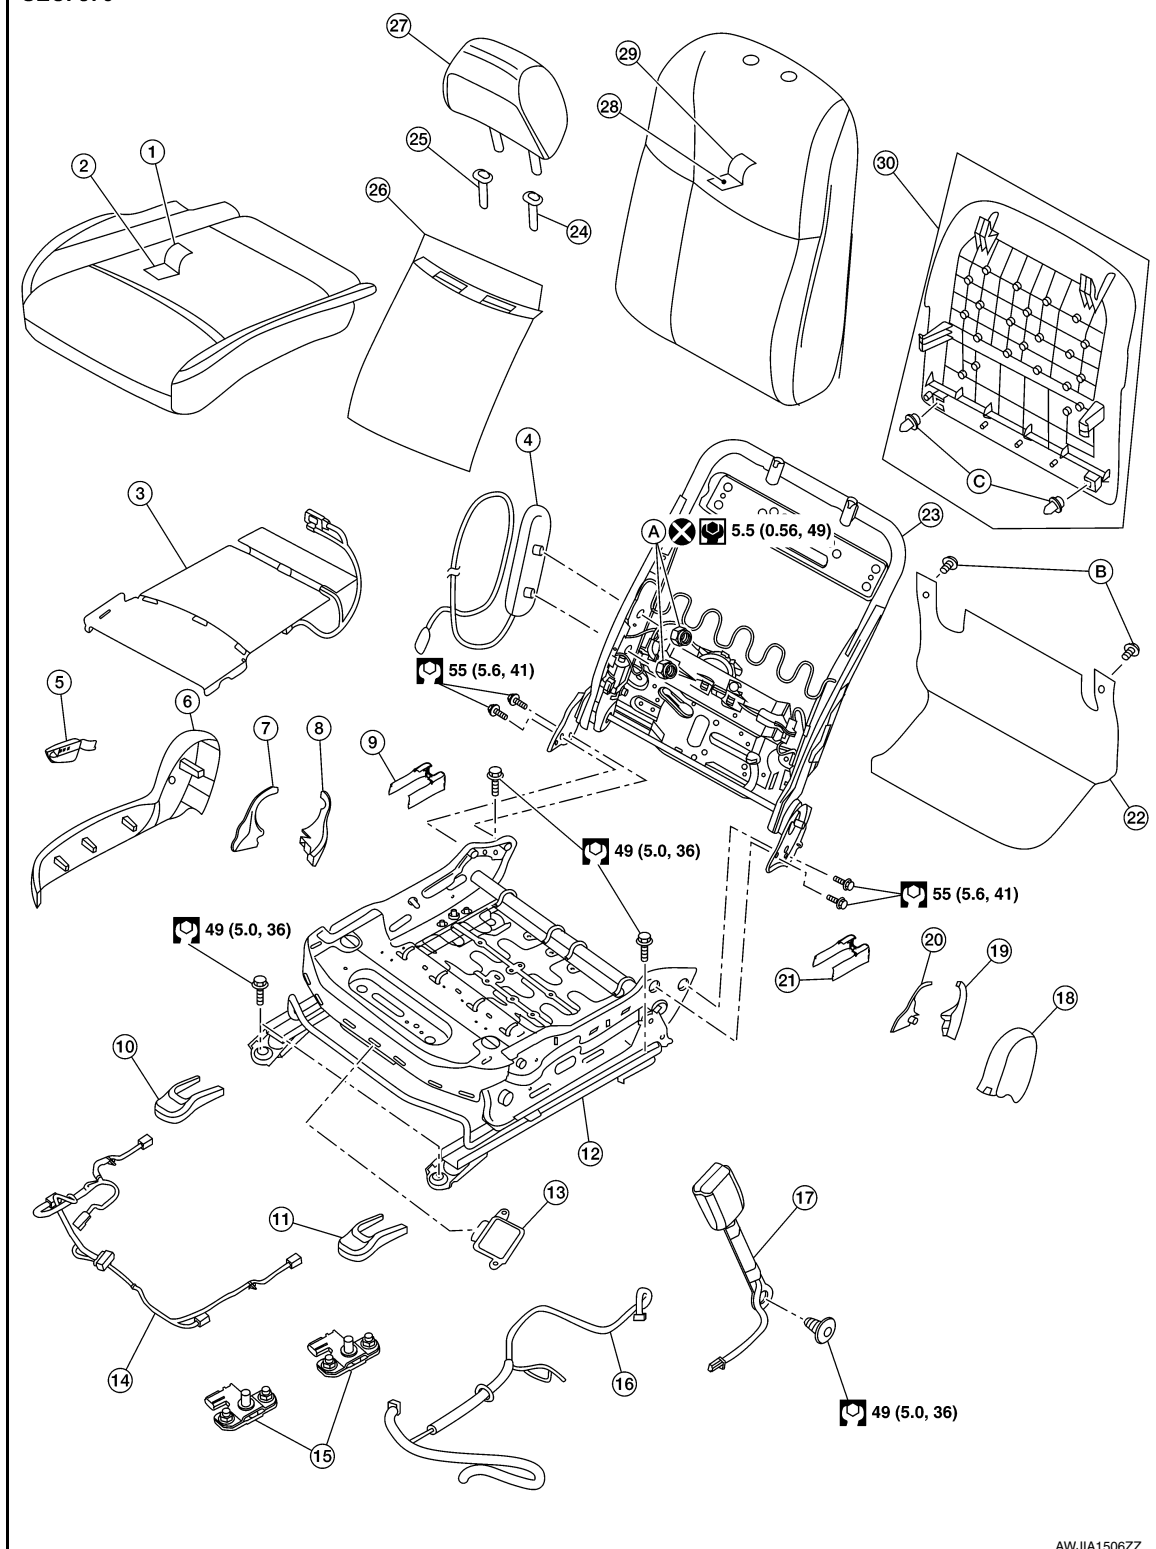

- | | | |
|------------------------|---------------------|--------------------------------------|
| 1. Seat cushion trim | 2. Seat cushion pad | 3. Seat cushion heater (if equipped) |
| 4. Side air bag module | 5. Recline lever | 6. Seat cushion outer finisher (RH) |

FRONT SEAT


< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | |
|---|--|---|
| 7. Seat cushion inner finisher (RH front) | 8. Seat cushion inner finisher (RH rear) | 9. Rear slide cover (RH) |
| 10. Front slide cover (RH) | 11. Front slide cover (LH) | 12. Seat cushion frame |
| 13. Occupant classification control unit | 14. Occupant classification harness | 15. Occupant classification sensor |
| 16. Seat harness | 17. Seat belt buckle | 18. Seat cushion inner finisher (LH rear) |
| 19. Seat cushion inner finisher (LH rear) | 20. Seat cushion inner finisher (LH front) | 21. Rear slide cover (LH) |
| 22. Rear hinge cover | 23. Seatback frame | 24. Headrest holder (locked) |
| 25. Headrest holder (free) | 26. Seatback heater (if equipped) | 27. Headrest |
| 28. Seatback pad | 29. Seatback trim | 30. Seatback board |
| A. Side air bag module nuts | B. Rear hinge cover clips | C. Seatback board clips |

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

PASSENGER SEAT - POWER

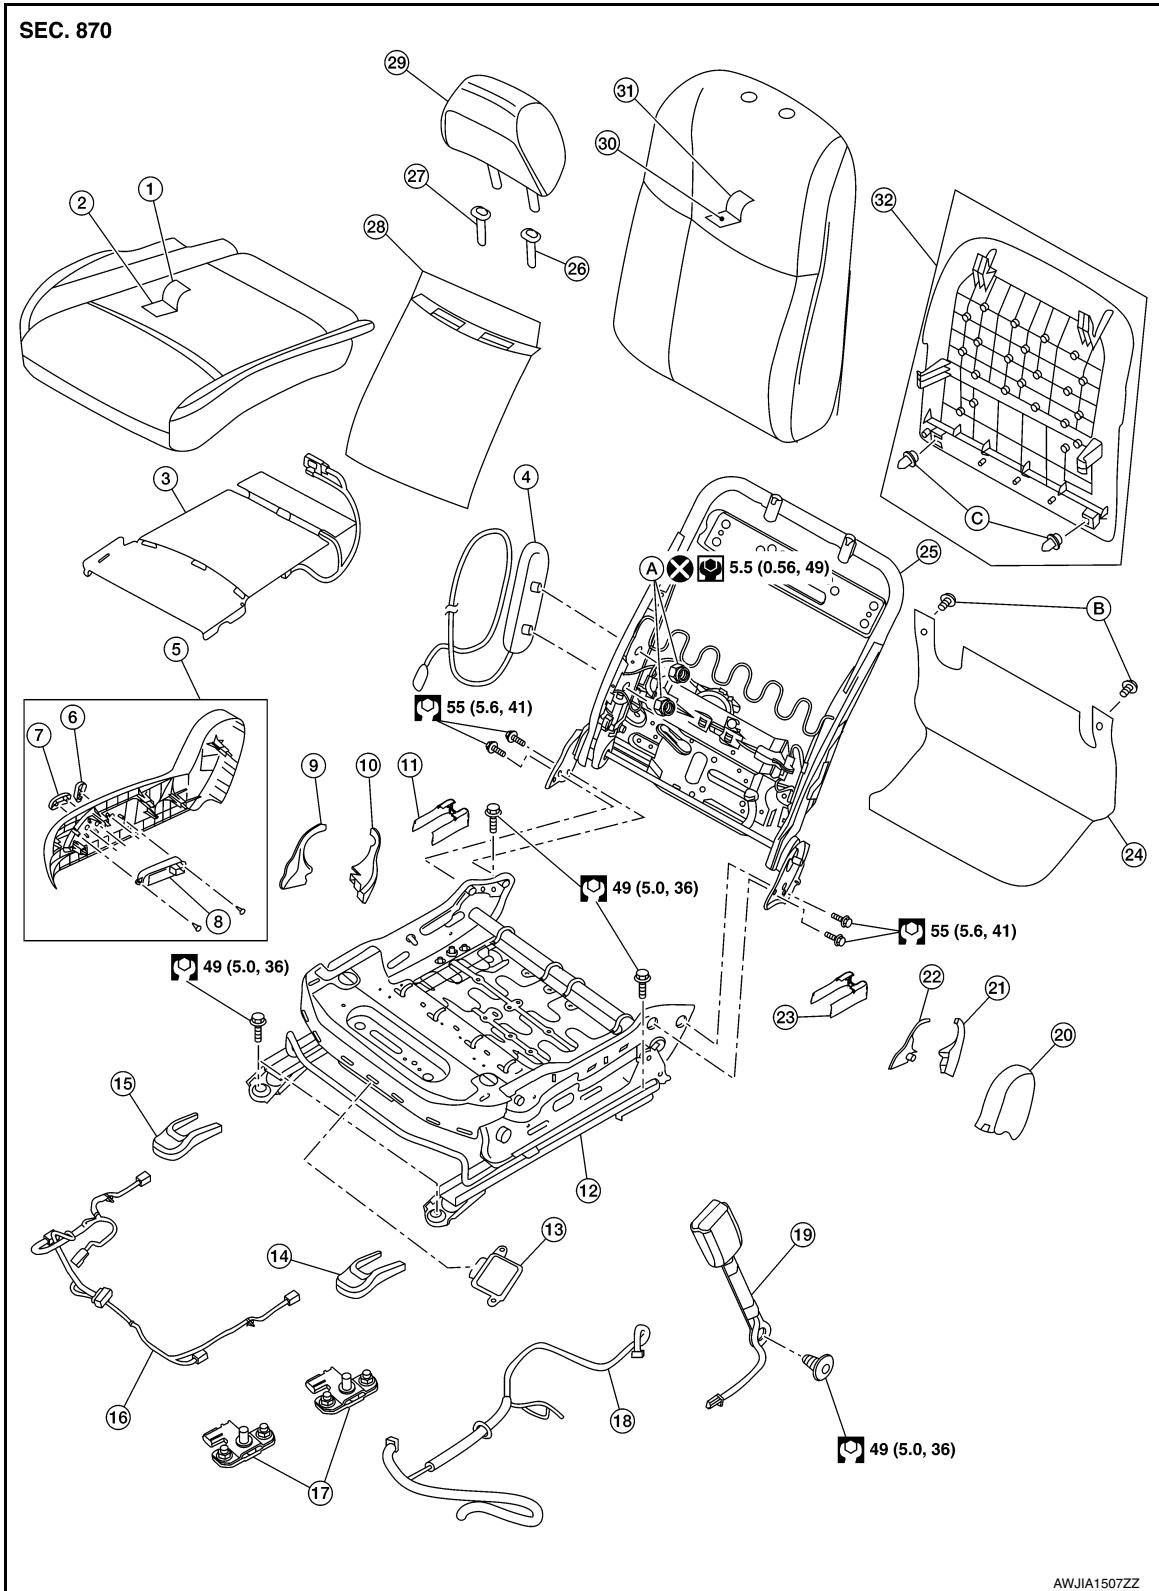

- | | | |
|---|-------------------------------------|---|
| 1. Seat cushion trim | 2. Seat cushion pad | 3. Seat cushion heater (if equipped) |
| 4. Side air bag module | 5. Seat cushion outer finisher (RH) | 6. Seat recline knob |
| 7. Seat slide knob | 8. Power seat switch | 9. Seat cushion inner finisher (RH front) |
| 10. Seat cushion inner finisher (RH rear) | 11. Rear slide cover (RH) | 12. Seat cushion frame |
| 13. Occupant classification control unit | 14. Rear slide cover (RH) | 15. Front slide cover (RH) |

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

16. Occupant classification harness	17. Occupant classification sensors	18. Seat harness
19. Seat belt buckle	20. Seat cushion outer finisher (LH)	21. Seat cushion inner finisher (LH rear)
22. Seat cushion inner finisher (LH front)	23. Rear slide cover (LH)	24. Rear hinge cover
25. Seatback frame	26. Headrest holder (locked)	27. Headrest holder (free)
28. Seatback heater	29. Headrest	30. Seatback pad
31. Seatback trim	32. Seatback board	A. Side air bag module nuts
B. Rear hinge cover clips	C. Seatback board clips	

PASSENGER SIDE : Disassembly and Assembly

INFOID:0000000010481846

SEATBACK ASSEMBLY

WARNING:

Do not leave any objects (screwdrivers, tools, etc.) on the seat during seatback repair. It can lead to personal injury if the side air bag should accidentally deploy.

CAUTION:

- Before servicing, turn ignition switch OFF, disconnect both battery terminals and wait at least three minutes.
- Handle the side air bag module carefully. During disassembly, always hold the side air bag module, do not let it hang by the wire harness.
- Always work from the side or back of the seatback, do not work in front of seat.
- Do not use air tools or electric tools for servicing the seat.
- Replace the side air bag module if it has been dropped or sustained an impact.
- Do not insert any objects into the side air bag module.
- Do not attempt to disassemble the side air bag module.
- Do not expose the side air bag module to temperatures exceeding 93°C (200°F).
- Do not expose the side air bag module to any oil, grease, detergent or water.
- During disassembly, do not damage the seatback board, chutes, connectors, retainers, clips, module harness or the side air bag module.
- During disassembly do not damage the seatback pad or seatback heater.

NOTE:

If the vehicle has been involved in a collision and the side air bag has deployed, the front seatback assembly must be replaced.

Disassembly

1. Remove the front passenger seat. Refer to [SE-36. "PASSENGER SIDE : Removal and Installation - Seat Assembly"](#).
2. Remove the seatback board. Refer to [SE-37. "PASSENGER SIDE : Removal and Installation - Seatback Board"](#).


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


3. Release the J-clips (A) holding the seatback trim to the seatback frame.
4. Remove the rear hinge cover (1).
5. Unclip the side air bag module harness at locations (B).

NOTE:


Take note of harness routing and attachment location for accurate installation.

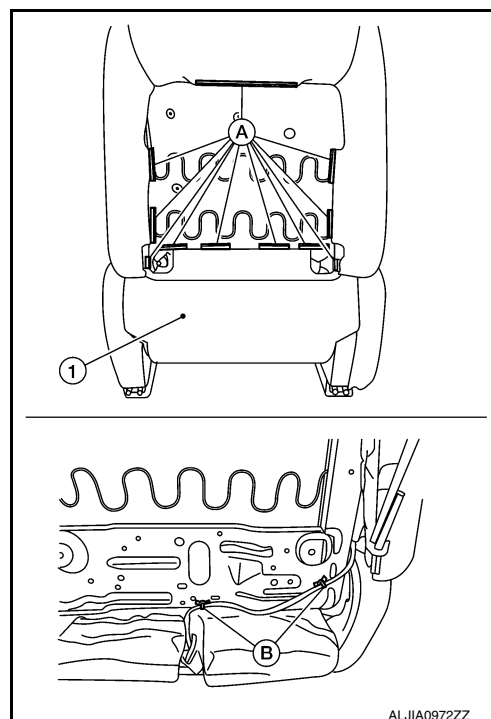

6. From the bottom of the seat.
 - a. Unclip the side air bag module harness (1) at locations (A).
NOTE:
 Take note of harness routing and attachment location for accurate installation.
 - b. Disconnect harness connectors (B) from the seatback heater (if equipped).
 (C) Harness connector for the seat cushion heater

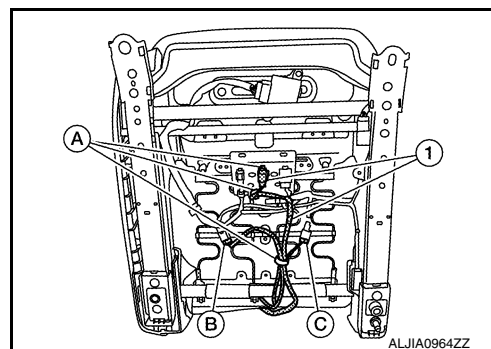


7. Remove the seat cushion outer finisher (RH) (1).
 - a. For power seat:
 - i. Release metal clips (A) from the seat cushion frame (3) as shown (←).
 - ii. Release pawls to separate.
 - iii. Disconnect the harness connector from the power seat switch (2) and if necessary remove screws and power seat switch.

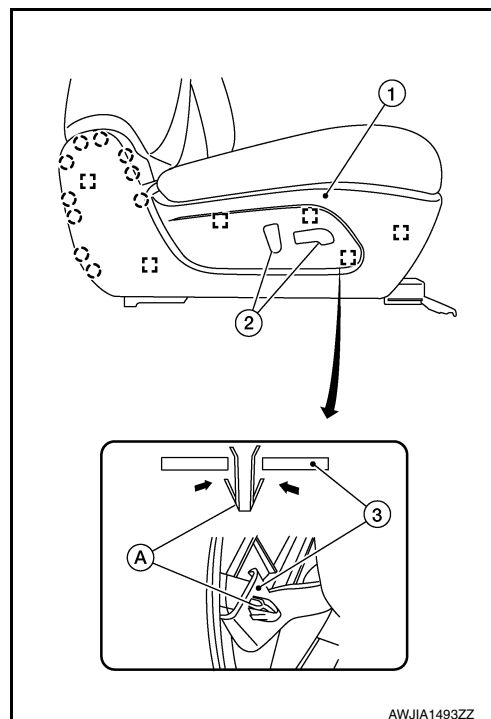


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


- b. For manual seat:
 - i. Remove the seat cushion outer finisher (RH) (2).
 - ii. Release pawl and remove recline lever (1) as shown.
 - iii. Release metal clips (A) from the seat cushion frame (3) as shown (←).
 - []: Metal clip
 - iv. Release the remaining pawls then remove the seat cushion outer finisher (RH) (2).
 - : Pawl

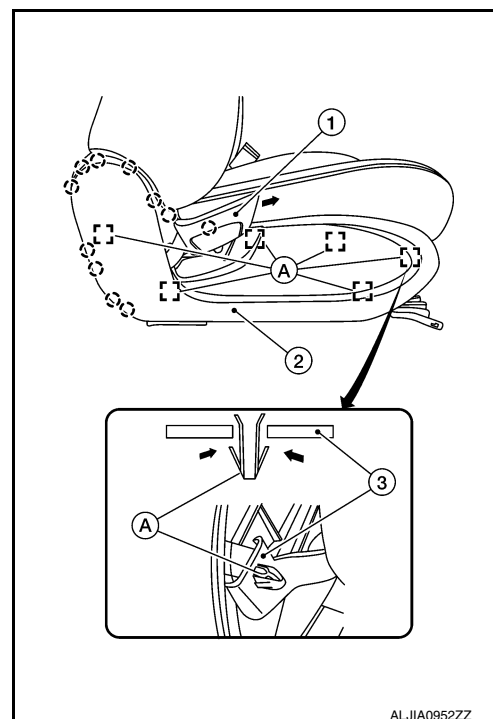

- 8. Remove the seat cushion outer finisher (LH) (1).
- a. Release pawls then pull to release the metal clip.
- []: Metal clip
- : Pawl

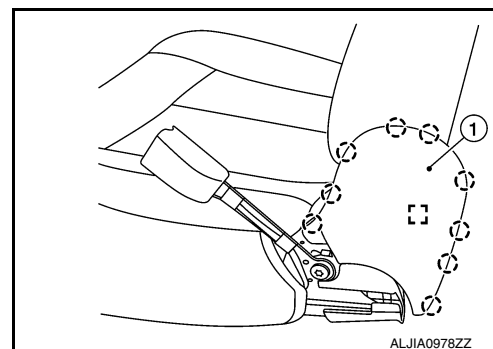

- 9. Remove the seat cushion inner finisher front (LH/RH) and seat cushion inner finisher rear (LH/RH).
- 10. Remove bolts (A) on both sides of seatback assembly (1) and remove the seatback assembly (1).

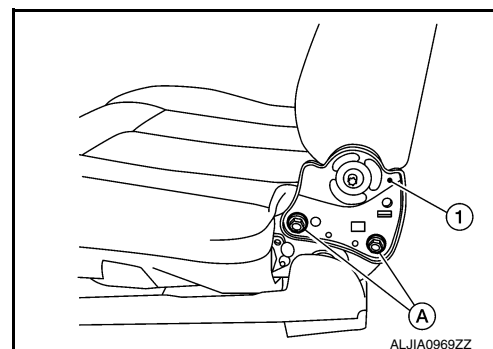

- 11. Remove the seatback pad from the seatback frame.


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- a. Release the headrest holder locks as shown and remove the headrest holders.

CAUTION:


Before removing/installing the headrest holder, check its orientation (front/rear and right/left).

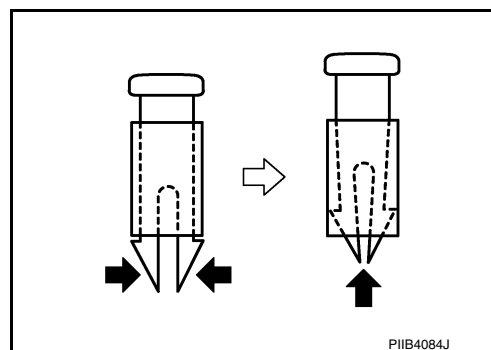

- b. Remove and discard the side air bag module nuts (A).
(1) Side air bag module

CAUTION:


Do not reuse the side air bag module nuts.

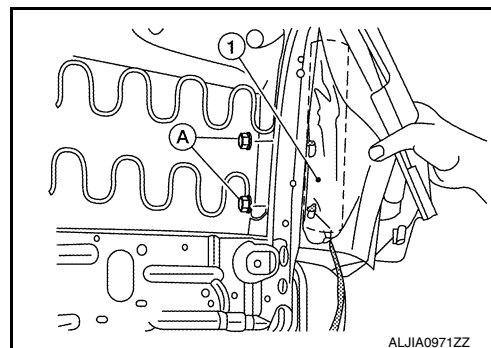

- c. Disengage the side air bag module studs from the seatback frame and lift the seatback trim and seatback pad as an assembly to remove from the seatback frame.

12. Separate the seatback trim from the seatback pad (if necessary).

- a. Open the seatback trim and release the side air bag module studs (A) protruding through holes in the chute (B).
- b. Pull the side air bag module (1) out of the chute (B) and remove from the seatback trim.

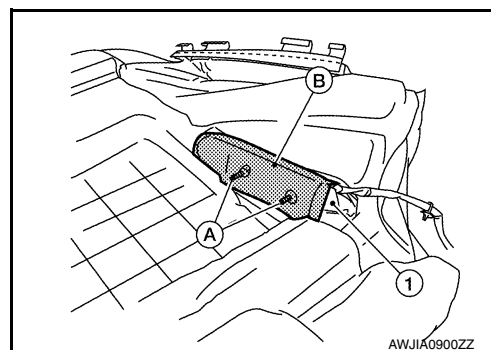


- c. Pull the seatback trim (1) upward from bottom to release hook fasteners (A).
- d. Remove three hog rings and separate the seatback trim from the seatback pad.

[]: Hog ring

NOTE:

Remove all pieces of hog rings and discard them.

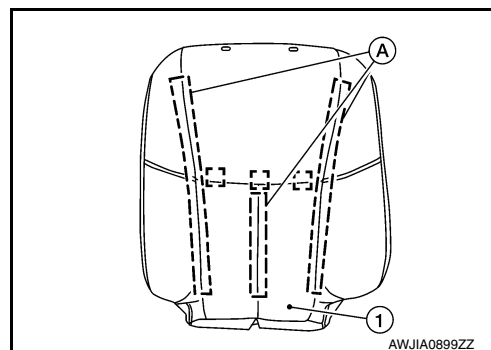

13. Remove the seatback heater from seatback pad (if necessary). Refer to [SE-76. "PASSENGER SIDE : Front Seat Heater"](#).

Assembly

Assembly is in the reverse order of disassembly.

CAUTION:

- Inspect seatback pad, seatback trim and seatback trim chutes. Replace if damaged.
- Smooth out all wrinkles during assembly.

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


- Always route side air bag module harness in original location. Replace any deformed or damaged clips with same type and color. Always install clips in the original location in the harness.
- After work is completed, check that no system malfunction is detected causing the air bag warning lamp to illuminate.
- If a malfunction is detected by the air bag warning lamp after repair or replacement of the malfunction parts, perform the SRS final check. Refer to [SRC-17, "SRS Final Check"](#).
- When installing the side air bag module, make sure the side air bag chute (4) is pulled over the outboard surface of the side air bag module (3). Make sure there are no wrinkles and the chute is not folded, twisted or pinched.

- (1) Seatback pad
- (2) Frame
- (5) Seatback board


⇐: Front

CAUTION:


- Do not reuse side air bag module nuts.
- Make sure the side air bag module nuts are tightened to specification. Refer to [SE-61, "PASSENGER SIDE : Exploded View"](#).

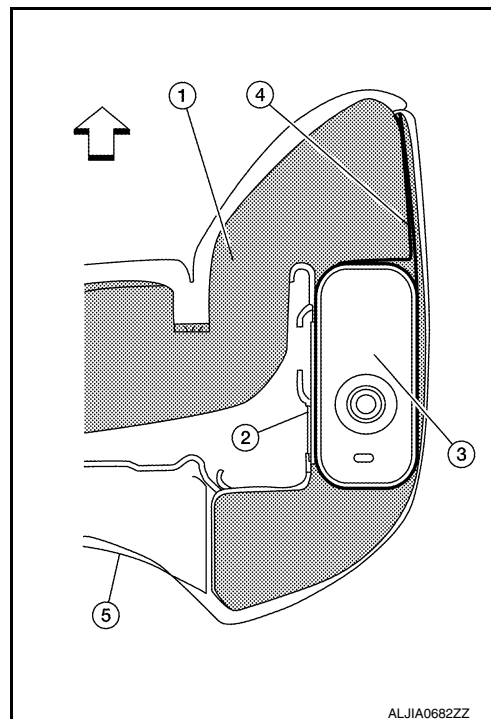

- When installing the seatback trim, firmly push down while sliding your hand along the seams as shown (⇐) to ensure the hook fasteners below the seatback trim are fastened properly.

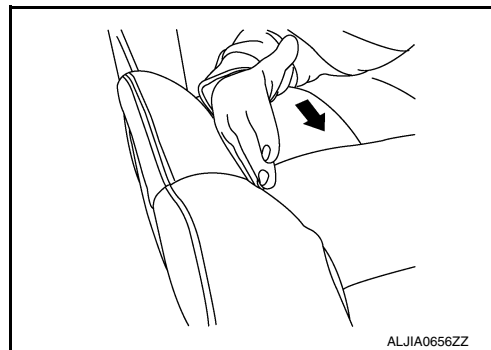


- Install new hog rings on the seatback trim in original positions. Use only one hog ring in each designated location. Ensure hog rings are correctly fastened around both the seatback trim and seatback pad wires. Use NISSAN standard hog rings and tools to assemble.

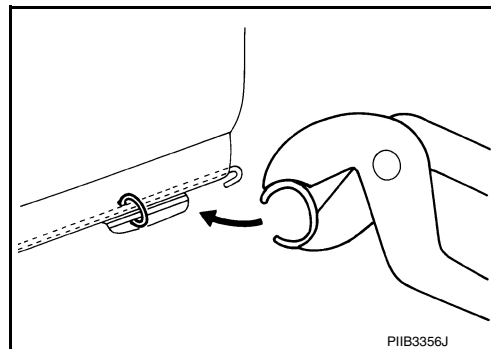

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- Install all seatback frame bolts and tighten evenly in sequence shown.
Tighten the seatback frame bolts to specification. Refer to [SE-61, "PASSENGER SIDE : Exploded View"](#).

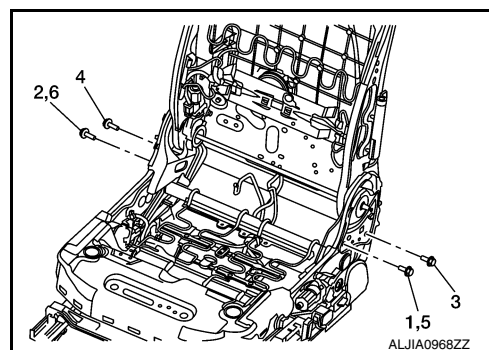

SEAT CUSHION

WARNING:

Do not leave any objects (screwdrivers, tools, etc.) on the seat during seat cushion repair. It can lead to personal injury if the side air bag should accidentally deploy.

CAUTION:

- Before servicing, turn ignition switch OFF, disconnect both battery terminals and wait at least three minutes.
- Always work from the side or back of the seatback assembly, do not work in front of seat.
- Do not use air tools or electric tools for servicing the seat assembly.
- During disassembly, do not damage the seatback cover, chutes, connectors, retainers, clips, module harness or the side air bag module.
- During disassembly do not damage the seat cushion pad or seat cushion heater.

Disassembly

1. Remove the front passenger seat. Refer to [SE-36, "PASSENGER SIDE : Removal and Installation - Seat Assembly"](#).
2. Disconnect the harness connector from the occupant classification system control unit.
3. Remove occupant classification system control unit screws.
4. Remove occupant classification system control unit.


CAUTION:

- Replace the occupant classification control unit if it has been dropped or sustained an impact.
- Do not strike the occupant classification control unit.

5. Remove the seatback board. Refer to [SE-37, "PASSENGER SIDE : Removal and Installation - Seatback Board"](#).
6. Remove the rear hinge cover.
7. From the bottom of the seat disconnect the harness connector (C) from the seat cushion heater (if equipped).
(A) Side air bag harness clips
(B) Harness connector for the seatback heater

NOTE:


Take note of harness routing and attachment location for accurate installation.

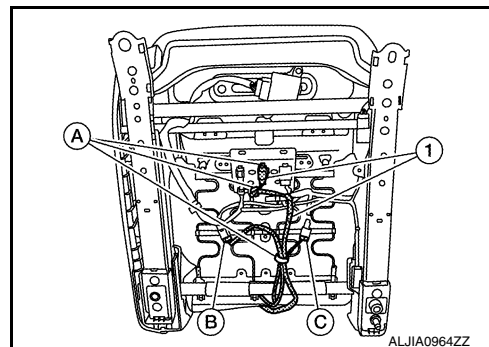


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


8. Remove the seat cushion outer finisher (RH) (1).
 - a. For power seat:
 - i. Release metal clips (A) from the seat cushion frame (3) as shown (←).
 - : Metal clip
 - ii. Release pawls to separate.
 - : Pawl
 - iii. Disconnect the harness connector from the power seat switch (2) and if necessary remove screws and power seat switch.

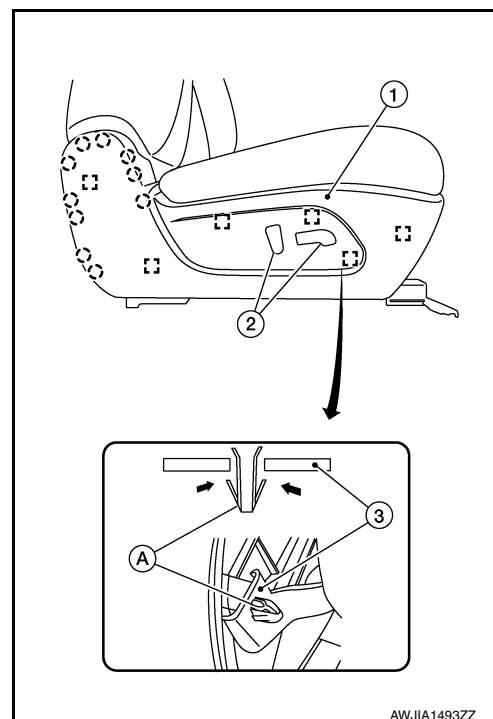

- b. For manual seat:
 - i. Remove the seat cushion outer finisher (RH) (2).
 - ii. Release pawl and remove recline lever (1) as shown.
 - iii. Release metal clips (A) from the seat cushion frame (3) as shown (←).
 - : Metal clip
 - iv. Release the remaining pawls then remove the seat cushion outer finisher (RH) (2).
 - : Pawl

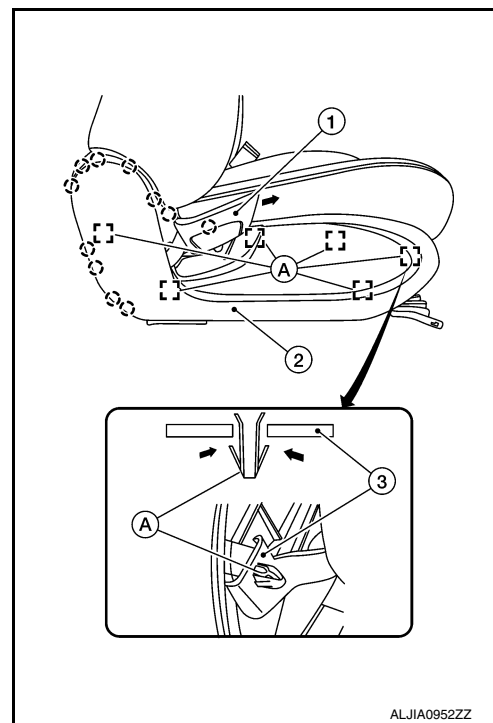

9. Remove the seat cushion outer finisher (LH) (1).
 - a. Release pawls then pull to release the metal clip.
 - : Metal clip
 - : Pawl

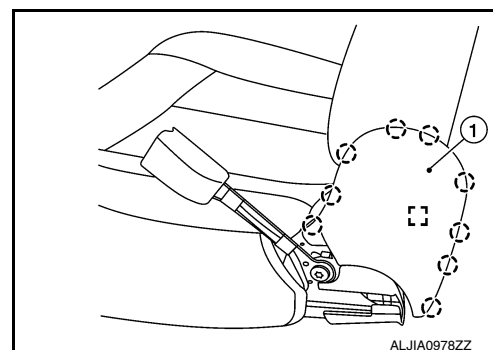

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

10. Remove the seat cushion trim (1) and seat cushion pad as an assembly.


⇐:Front

- Release J-clips (A) holding the seat cushion trim to the seat cushion frame.
- Release J-clip (B) holding the seat cushion trim to the seat cushion frame.
- Release J-clips (D) holding the seat cushion trim to the seat cushion frame.
- Release retainer strips (C) holding the seat cushion trim to the seat cushion frame.
- Disconnect the harness connector from the seat cushion heater (if equipped).

NOTE:

Take note of harness routing and attachment location for accurate installation.

11. Remove the seat cushion trim (1) and the seat cushion pad from the seat cushion frame.

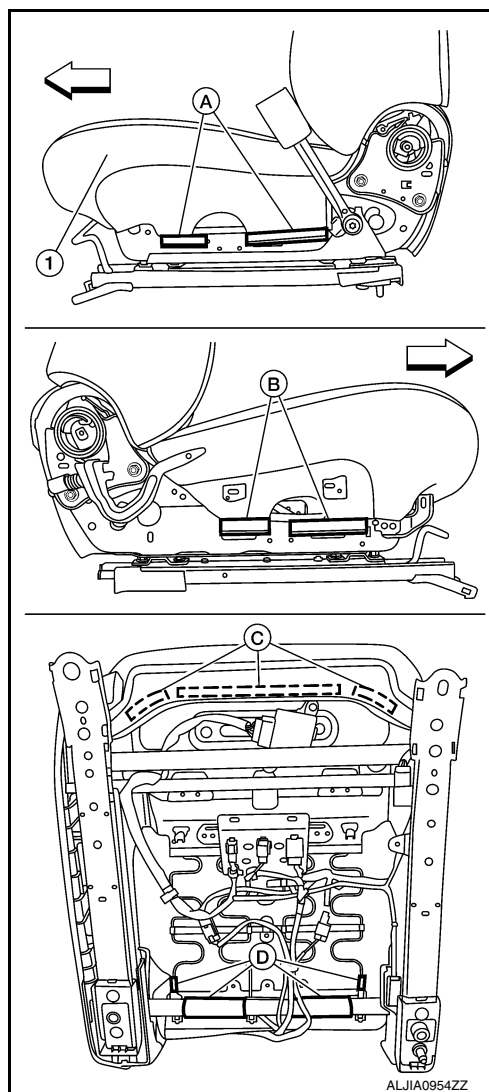


12. Separate the seat cushion trim (1) from the seat cushion pad.

- Pull the seat cushion trim upward to release hook fasteners (A).
- Remove three hog rings and separate the seat cushion trim from the seat cushion pad.

[]: Hog ring

NOTE:

Remove all pieces of hog rings and discard them.

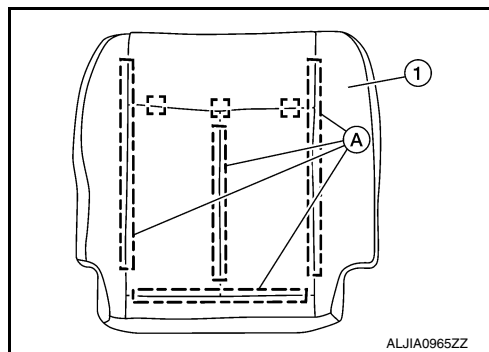

13. Remove seat cushion heater from seat cushion pad. Refer to [SE-76. "PASSENGER SIDE : Front Seat Heater"](#).
14. Disconnect harness connector from occupant classification system sensors.
15. Slide seat frame to the full forward position, then release clips using a suitable tool and remove seat slide bar (if equipped).


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

16. Remove nuts (A) and separate seat frame (1) from seat track (LH) (2).

CAUTION:

Do not reuse nuts. Replace with new parts during installation.

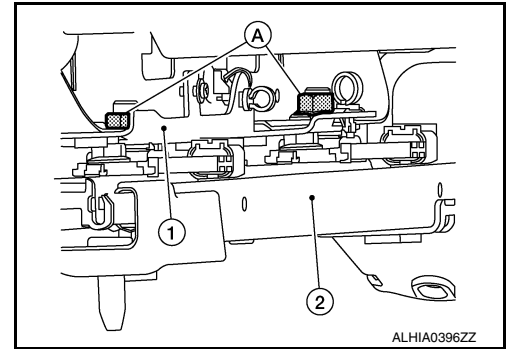


17. Remove nuts (A) from occupant classification system sensor (1) and remove.

CAUTION:

Do not reuse nuts. Replace with new parts during installation.

NOTE:

Rear sensor shown, front sensor similar.

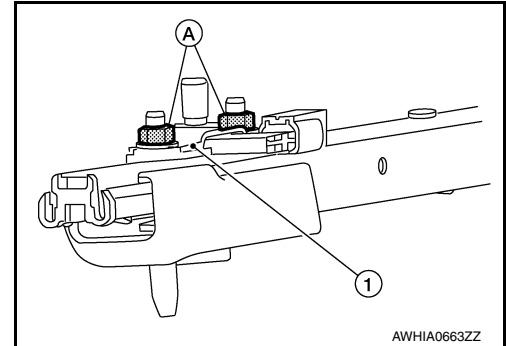

Assembly


Note the following and assemble in the reverse order of disassembly.

CAUTION:

- Smooth out all wrinkles during assembly.
- Do not damage the harness connector during installation.
- Do not reuse nuts. Replace with new parts during installation.
- Tighten nuts to specification.
 - (1) Front passenger seat frame assembly
 - (2) Front passenger seat track (LH)

Seat track nuts (A)


45N·m (4.6kg-m, 33ft-lb)

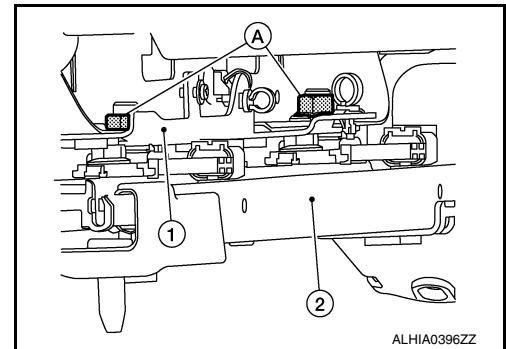

- Tighten nut to specification.
 - (1) Occupant classification system sensor

Occupant classification
system sensor nut (A)

22N·m (2.2kg-m, 16ft-lb)

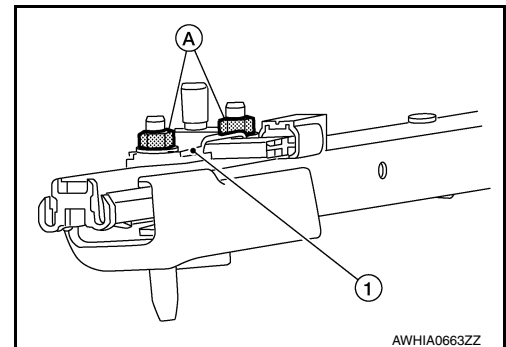


- Always route side air bag module harness in original location. Replace any deformed or damaged clips with same type and color. Always install clips in the original location in the harness.
- After work is completed, check that no system malfunction is detected causing the air bag warning lamp to illuminate.


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- If a malfunction is detected by the air bag warning lamp after repair or replacement of the malfunction parts, perform the SRS final check. Refer to [SRC-17, "SRS Final Check"](#).
- When installing the seat cushion trim, firmly push down while sliding your hand along the seams as shown (➡) to ensure the hook fasteners below the seat cushion trim are fastened properly.

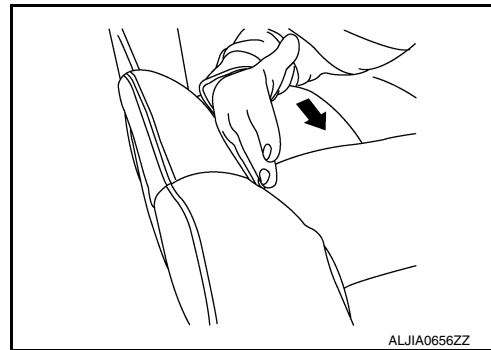

- Install new hog rings on the seat cushion trim in original positions. Use only one hog ring in each designated location. Ensure hog rings are correctly fastened around both the seat cushion trim and seat cushion pad wires. Use NISSAN standard hog rings and tools to assemble.

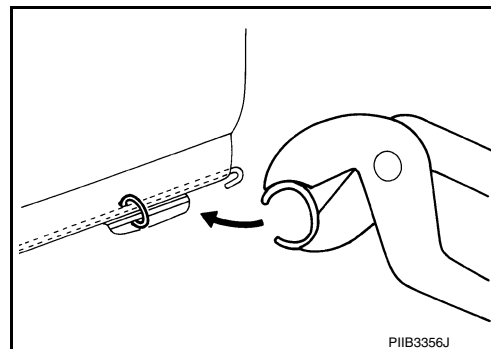

INFOID:000000010481847

PASSENGER SIDE : Side air bag module

WARNING:

Do not leave any objects (screwdrivers, tools, etc.) on the seat during seatback repair. It can lead to personal injury if the side air bag should accidentally deploy.

CAUTION:

- Before servicing, turn ignition switch OFF, disconnect both battery terminals and wait at least three minutes.
- Handle the side air bag module carefully. During disassembly, always hold the side air bag module, do not let it hang by the wire harness.
- Always work from the side or back of the seatback, do not work in front of seat.
- Do not use air tools or electric tools for servicing the seat.
- Replace the side air bag module if it has been dropped or sustained an impact.
- Do not insert any objects into the side air bag module.
- Do not attempt to disassemble the side air bag module.
- Do not expose the side air bag module to temperatures exceeding 93°C (200°F).
- Do not expose the side air bag module to any oil, grease, detergent or water.
- During disassembly, do not damage the seatback board, chutes, connectors, retainers, clips, module harness or the side air bag module.

NOTE:

- If the vehicle has been involved in a collision and the side air bag has deployed, the front seatback assembly must be replaced.
- For side air bag module removal and installation, seatback trim and seatback pad must be removed.

REMOVAL

1. Remove the front passenger seat. Refer to [SE-36, "PASSENGER SIDE : Removal and Installation - Seat Assembly"](#).
2. Remove the seatback board. Refer to [SE-37, "PASSENGER SIDE : Removal and Installation - Seatback Board"](#).


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


3. Release the J-clips (A) holding the seatback trim (1) to the seat-back frame.
4. Remove the rear hinge cover (1).
5. Unclip the side air bag module harness at locations (B).

NOTE:


Take note of harness routing and attachment location for accurate installation.

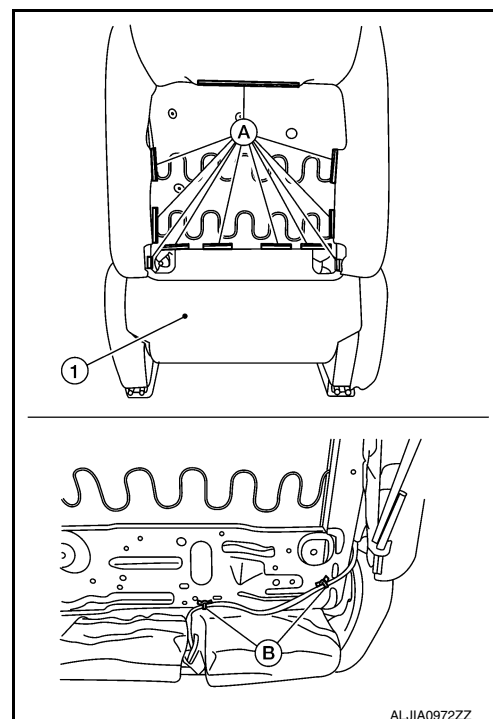


6. From the bottom of the seat.
 - a. Unclip the side air bag module harness (1) at locations (A).
NOTE:
Take note of harness routing and attachment location for accurate installation.
 - b. Disconnect the harness connector (B) from the seatback heater (if equipped).
(C) Harness connector for seat cushion heater

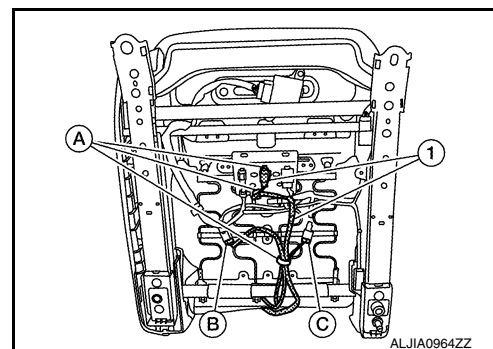

7. Release the headrest holder locks as shown and remove the headrest holders.
CAUTION:
Before removing/installing the headrest holder, check its orientation (front/rear and right/left).

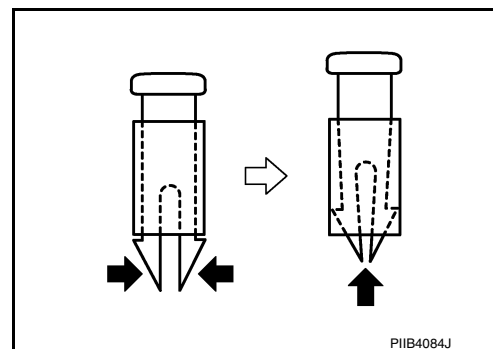


8. Remove and discard the two side air bag module nuts (A).
(1) Side air bag module
CAUTION:
Do not reuse the side air bag module nuts.

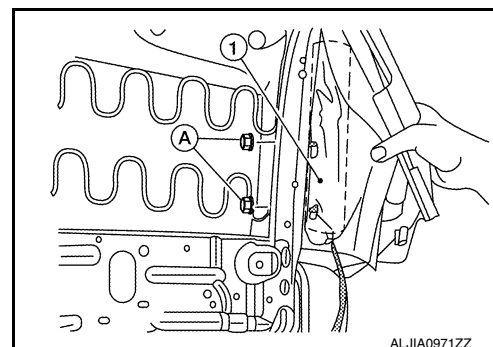

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

9. Disengage the side air bag module studs from the seatback frame and lift the seatback cushion trim and seatback pad as an assembly to remove from the seatback frame.
10. Open the seatback cushion and release the side air bag module studs (A) protruding through holes in the chute (B).
11. Pull the side air bag module (1) out of the chute (B) and remove from the seatback trim.

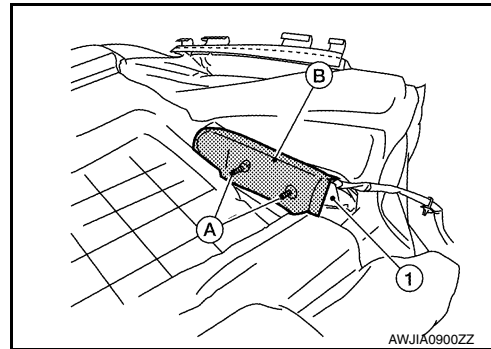

CAUTION:

- Replace the front passenger air bag module if it has been dropped or sustained an impact.
- Do not strike the front passenger air bag module.



INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Inspect seatback pad, seatback trim and seatback trim chutes. Replace if damaged.
- Smooth out all wrinkles during assembly.
- Always route side air bag module harness in original location. Replace any deformed or damaged clips with same type and color. Always install clips in the original location in the harness.
- After installation is completed, check that no system malfunction is detected causing the air bag warning lamp to illuminate.
- If a malfunction is detected by the air bag warning lamp after repair or replacement of the malfunction parts, perform the SRS final check. Refer to [SRC-17. "SRS Final Check"](#).

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- When installing the side air bag module, make sure the side air bag chute (4) is pulled over the outboard surface of the side air bag module (3). Make sure there are no wrinkles and the chute is not folded, twisted or pinched.


- (1) Seatback pad
- (2) Frame
- (5) Seatback board

⇐: Front

- Tighten the side air bag nuts to specification. Refer to [SE-61, "PASSENGER SIDE : Exploded View"](#).

CAUTION:

- Do not reuse side air bag module nuts.

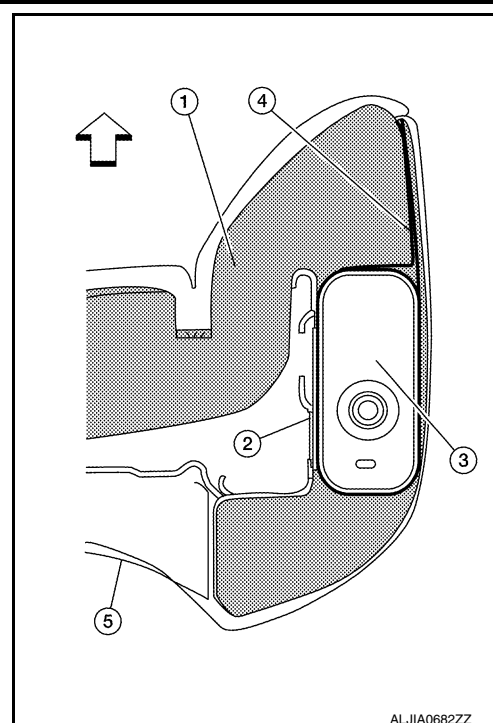

ALJIA0682ZZ

PASSENGER SIDE : Front Seat Heater

INFOID:0000000011198909

REMOVAL

Seat Heater - Seatback pad

- Remove seatback pad. Refer to [SE-64, "PASSENGER SIDE : Disassembly and Assembly"](#).
- Carefully remove front seatback heater from seatback pad.

CAUTION:

- Carefully remove seatback heater from seatback pad.
- Do not damage seatback pad when removing seatback heater, if damaged replace seatback pad

INSTALLATION

Seatback pad

- Peel protective backing from front seatback heater and attach to seatback pad.
- Secure the front seatback heater harness to the seatback frame.
- Install the remaining seatback components. Refer to [SE-64, "PASSENGER SIDE : Disassembly and Assembly"](#).

REMOVAL

Seat Heater - Seat cushion pad

- Remove seat cushion pad. Refer to [SE-64, "PASSENGER SIDE : Disassembly and Assembly"](#).
- Carefully remove front seat cushion heater from seat cushion pad.

CAUTION:

- Carefully remove seat cushion heater from seat cushion pad.
- Do not damage seat cushion pad when removing seat cushion heater, if damaged replace seat cushion pad

INSTALLATION

Seat cushion pad

- Peel protective backing from front seat cushion heater and attach to seat cushion pad.
- Secure the front seat cushion heater harness to the seat cushion frame.
- Install the remaining seat cushion components. Refer to [SE-64, "PASSENGER SIDE : Disassembly and Assembly"](#).

REAR SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


REAR SEAT

Exploded View

INFOID:000000010481848

REAR SEAT WITHOUT REMOVABLE HEADREST

SEC. 880

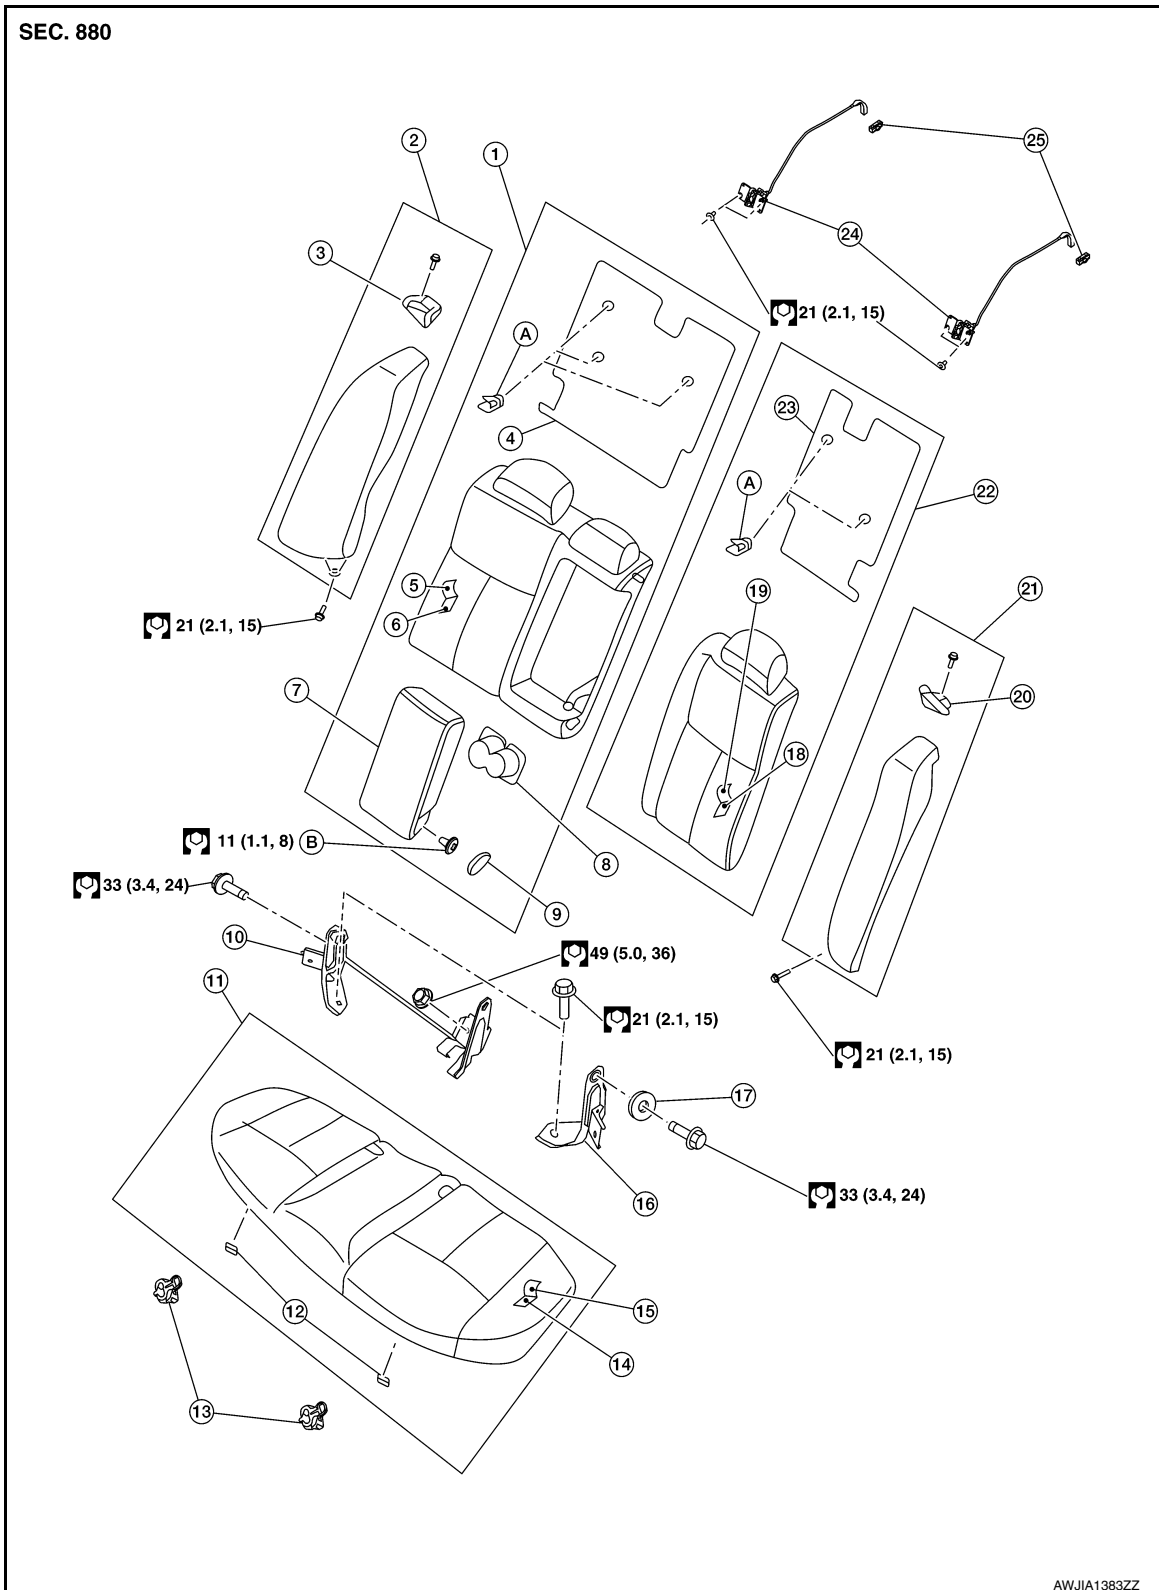

- 1. Rear seatback assembly (RH)
- 4. Seatback board (RH)

- 2. Rear seat bolster (RH)
- 5. Seatback trim (RH)

- 3. Seat belt guide (RH)
- 6. Seatback pad (RH)

REAR SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


- | | | |
|----------------------------------|---------------------------|-----------------------------|
| 7. Armrest | 8. Cup holder | 9. Armrest hinge finisher |
| 10. Seatback hinge assembly (RH) | 11. Seat cushion assembly | 12. Seat cushion wire cover |
| 13. Seat cushion lock | 14. Seat cushion pad | 15. Seat cushion trim |
| 16. Seatback hinge (LH) | 17. Wave washer | 18. Seatback pad (LH) |
| 19. Seatback trim (LH) | 20. Seat belt guide (LH) | 21. Rear seat bolster (LH) |
| 22. Rear seatback assembly (LH) | 23. Seatback board (LH) | 24. Seatback latch assembly |
| 25. Cable guide | A. Seatback board clips | B. Armrest pivot bolt |

REAR SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

REAR SEAT WITH REMOVABLE HEADREST

SEC. 880

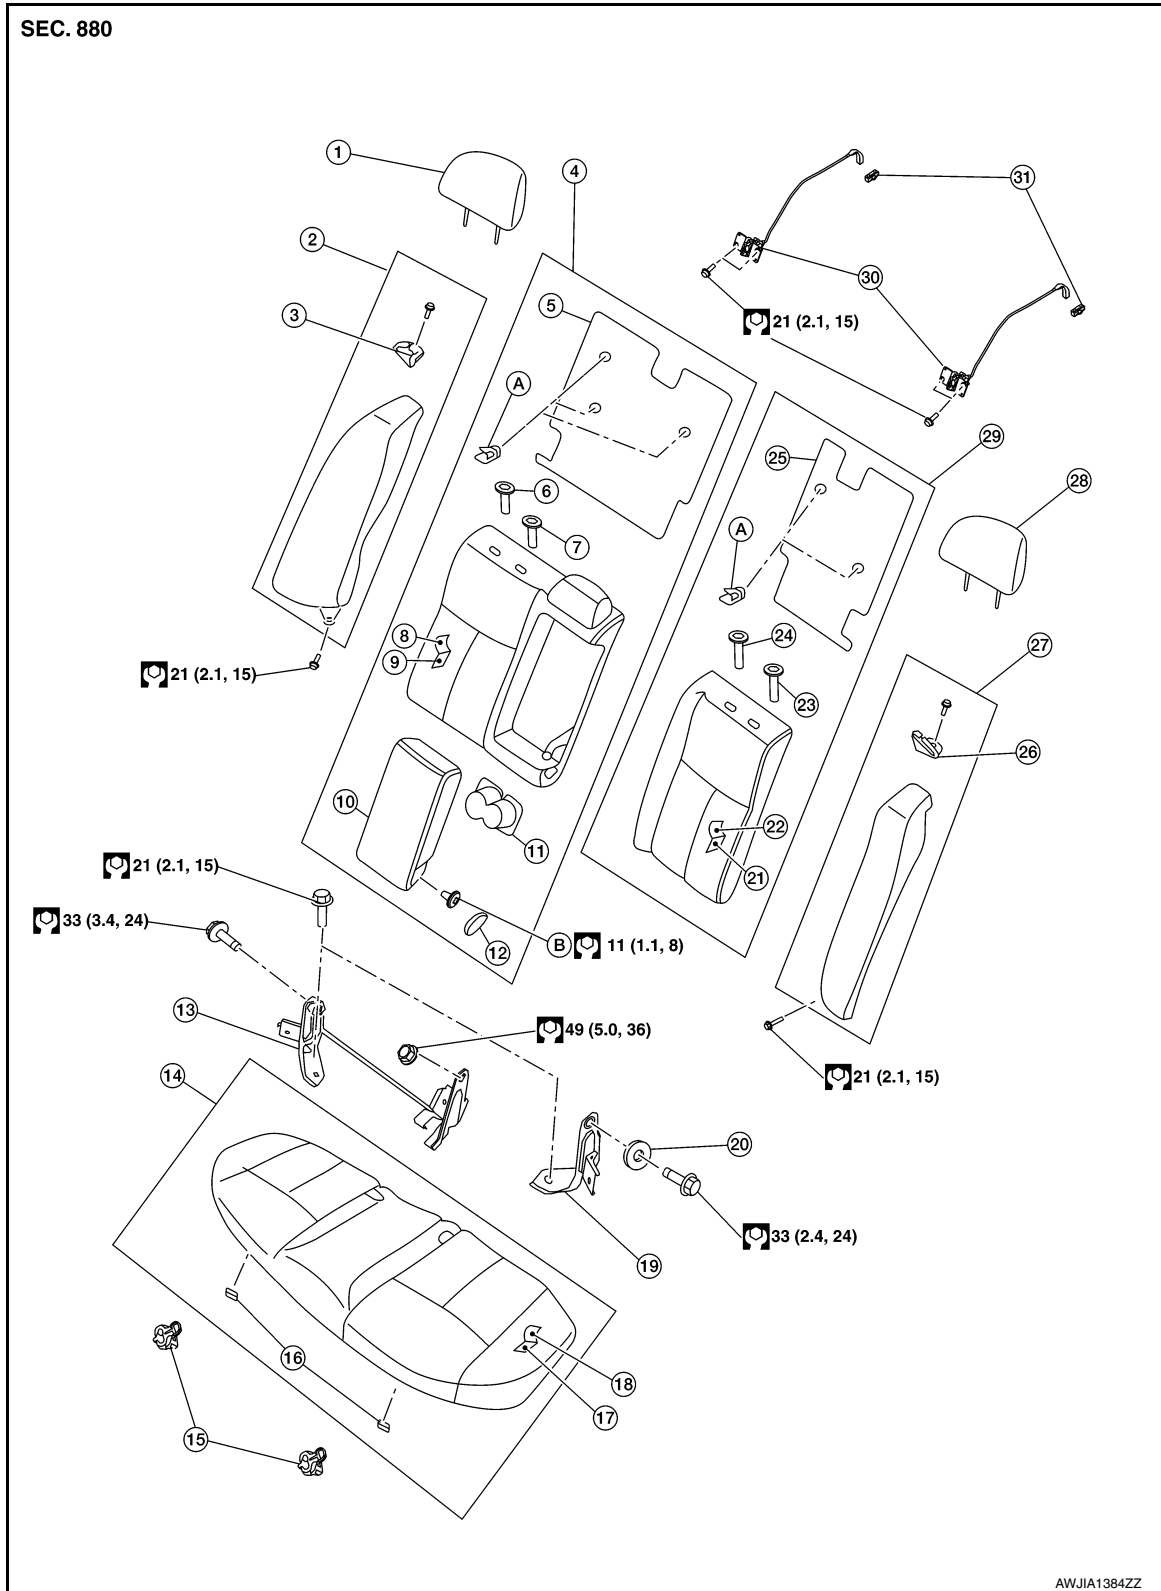

- | | | |
|----------------------------------|---------------------------|--------------------------------|
| 1. Headrest (RH) | 2. Rear seat bolster (RH) | 3. Seat belt guide (RH) |
| 4. Rear seatback assembly (RH) | 5. Seatback board (RH) | 6. Headrest holder (RH) (free) |
| 7. Headrest holder (RH) (locked) | 8. Seatback trim (RH) | 9. Seatback pad (RH) |
| 10. Armrest | 11. Cup holder | 12. Armrest hinge finisher |
| 13. Seatback hinge assembly (RH) | 14. Seat cushion assembly | 15. Seat cushion lock |
| 16. Seat cushion wire cover | 17. Seat cushion pad | 18. Seat cushion trim |

REAR SEAT


< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | |
|-------------------------|-----------------------------------|---------------------------------|
| 19. Seatback hinge (LH) | 20. Wave washer | 21. Seatback pad (LH) |
| 22. Seatback trim (LH) | 23. Headrest holder (LH) (locked) | 24. Headrest holder (LH) (free) |
| 25. Seatback board (LH) | 26. Seat belt guide (LH) | 27. Rear seat bolster (LH) |
| 28. Headrest (LH) | 29. Rear seatback assembly (LH) | 30. Seatback latch assembly |
| 31. Cable guide | A. Seatback board clips | B. Armrest pivot bolt |

Disassembly and Assembly

INFOID:0000000010481849

SEAT CUSHION

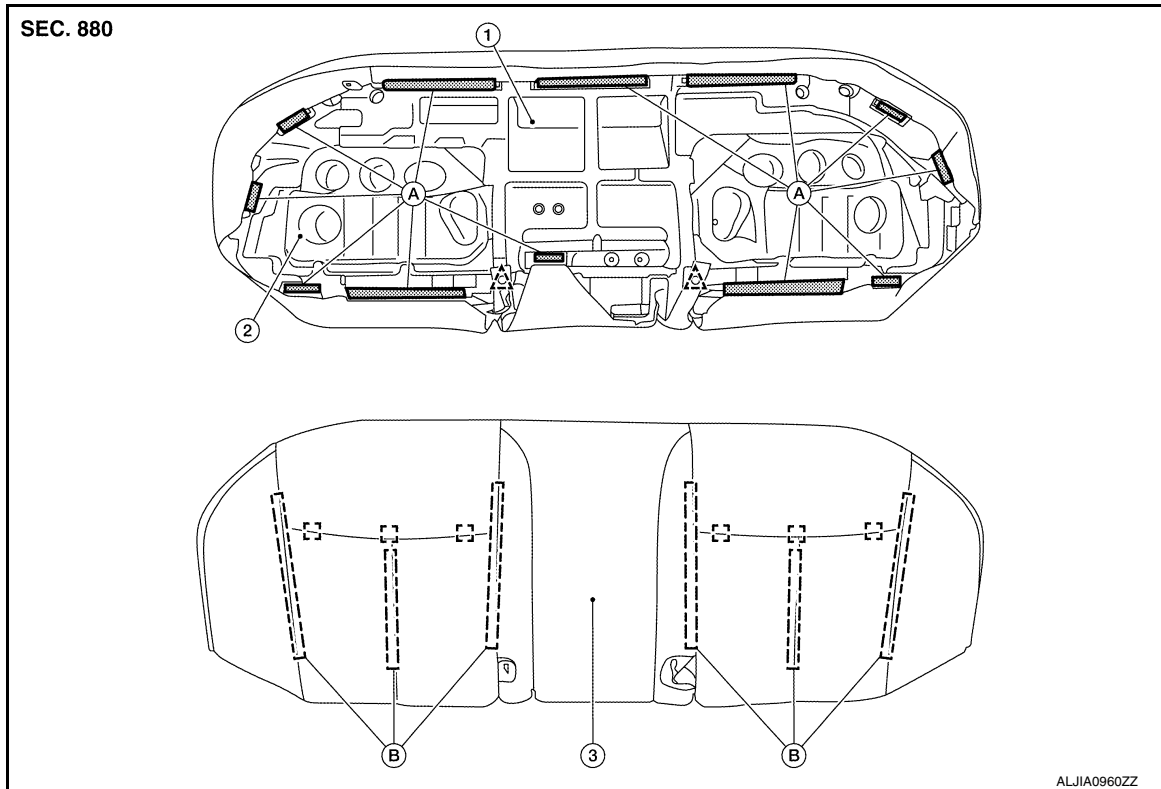

- | | | |
|-----------------------|---------------------|----------------------|
| 1. Seat cushion frame | 2. Seat cushion pad | 3. Seat cushion trim |
| A. Fastening strips | B. Hook fasteners | □ Hog rings |

Clips

Disassembly

- Remove the seat cushion assembly. Refer to [SE-42, "Removal and Installation - Seat Cushion Assembly"](#).
- Remove the two clips that retain the seat cushion trim.
- Release the fastening strips from the seat cushion frame.
- Remove the seat cushion trim and seat cushion pad from the seat cushion frame.
- Separate the seat cushion trim from the seat cushion pad.
 - Pull the seat cushion trim upward to release hook fasteners.
 - Remove the six hog rings and separate the seat cushion trim from the seat cushion pad.

NOTE:

Remove all pieces of hog rings and discard them.

Assembly

Assembly is in the reverse order of disassembly.

CAUTION:

- Make sure hog rings are correctly fastened around both the seat cushion trim and seat cushion pad wires.
- Replace any deformed or damaged hog rings.


REAR SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


- **Make sure any old hog ring pieces are removed from seat.**

NOTE:

- Install new hog rings on the seat cushion trim in original positions.
- Use only one hog ring in each designated location.

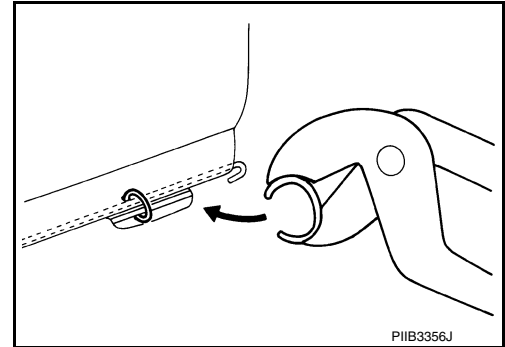


- When installing the seat cushion trim, firmly push down while sliding your hand along the seams as shown (➡) to ensure the hook fasteners below the seat cushion trim are fastened properly.

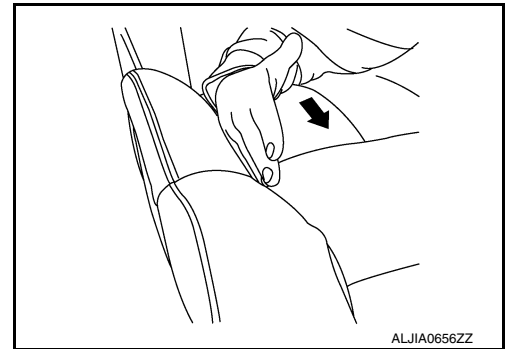


REAR SEATBACK ASSEMBLY (RH) - WITH REMOVABLE HEADREST

Disassembly

1. Remove the rear seatback assembly (RH). Refer to [SE-42, "Removal and Installation - Seat Assembly"](#).
2. Remove the armrest assembly. Refer to [SE-44, "Removal and Installation - Armrest Assembly"](#).
3. Release the J-clip retainer (B) and unzip the seatback trim cover (1).
(A) Zipper

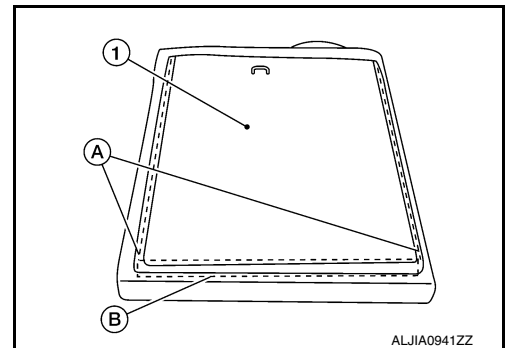

4. Remove the seatback trim and seatback pad (2) from the seatback frame (1).
 - a. Release the J-clip retainers (A) from the seatback frame (1).
 - b. Remove two hog rings that retain seatback pad in place.
[] Hog ring

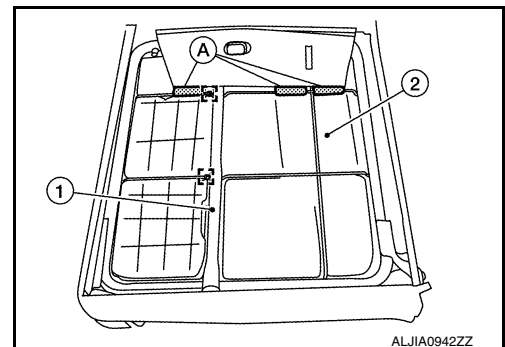

REAR SEAT


< UNIT DISASSEMBLY AND ASSEMBLY >

- c. Release the headrest holder locks as shown and remove the headrest holders (1) from the seatback frame (2).

CAUTION:

Before removing headrest holder, check its orientation (front/rear and right/left).

- d. Remove the seatback trim and seatback pad from the seatback frame.

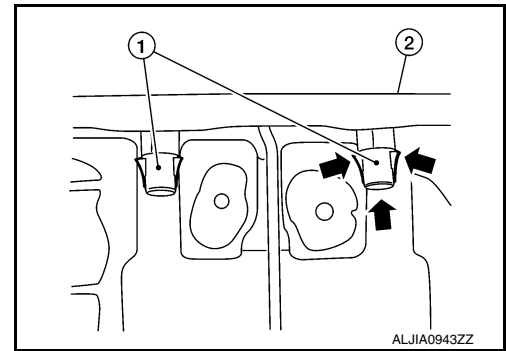


5. Separate the seatback trim from the seatback pad.
- a. Pull seatback trim (1) upward to release hook fasteners (A).
- b. Remove three hog rings and separate the seatback trim from the seatback pad.

[]: Hog ring

NOTE:

Remove all pieces of hog rings and discard them.

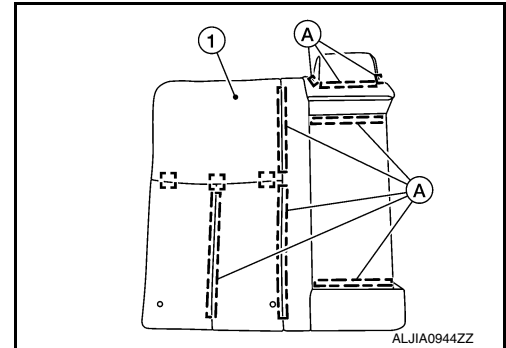

Assembly


Assembly is in the reverse order of disassembly.

CAUTION:


- Make sure hog rings are correctly fastened around both the seatback trim and seatback pad wires.
- Replace any deformed or damaged hog rings.
- Make sure any old hog ring pieces are removed from seat.

NOTE:

- Install new hog rings on the seatback trim in original positions.
- Use only one hog ring in each designated location.

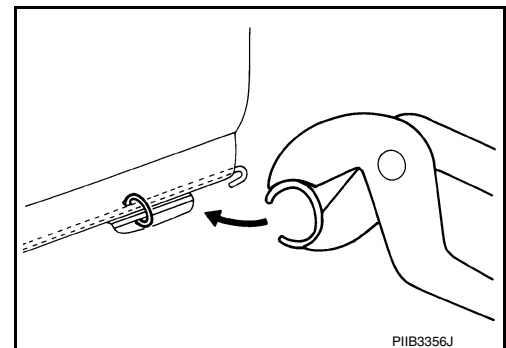

- When installing the seatback trim, firmly push down while sliding your hand along the seams as shown (←) to ensure the hook fasteners below the seatback trim are fastened properly.

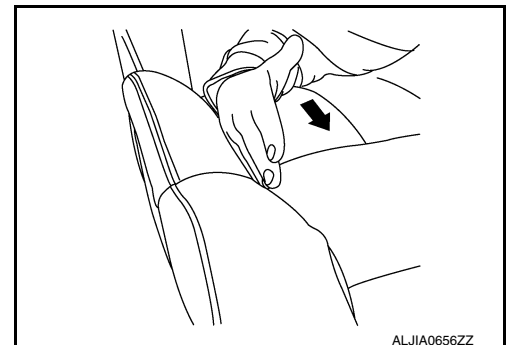


REAR SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


REAR SEATBACK ASSEMBLY (RH) - WITHOUT REMOVABLE HEADREST

Disassembly

1. Remove the rear seatback assembly (RH). Refer to [SE-42, "Removal and Installation - Seat Assembly"](#).
2. Remove the armrest assembly. Refer to [SE-44, "Removal and Installation - Armrest Assembly"](#).
3. Release the J-clip retainer (B) and unzip the seatback trim cover (1).
(A) Zipper

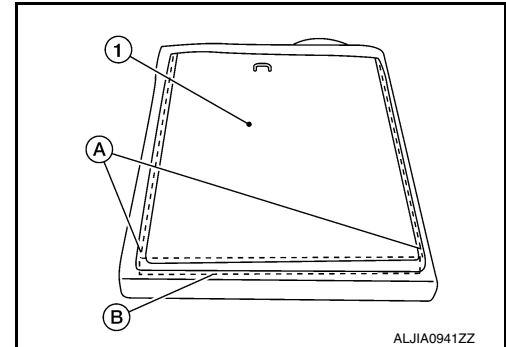

4. Remove the seatback trim and seatback pad (2) from the seatback frame (1).
 - a. Release the J-clip retainers (A).
 - b. Remove two hog rings that retain seatback pad in place.
[] Hog ring
 - c. Remove the seatback trim and seatback pad from the seatback frame.

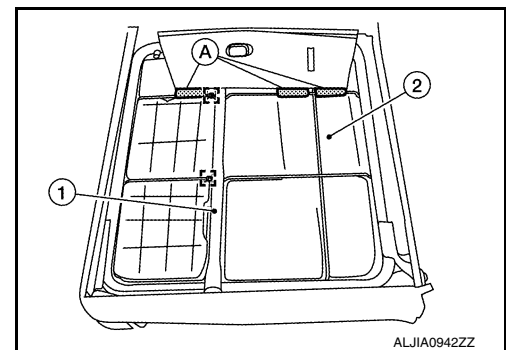


5. Separate the seatback trim from the seatback pad.
 - a. Pull seatback trim (1) upward to release hook fasteners (A).
 - b. Remove three hog rings and separate the seatback trim from the seatback pad.

[] Hog ring

NOTE:

Remove all pieces of hog rings and discard them.

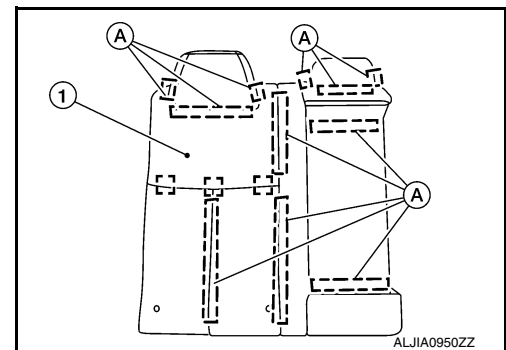

Assembly

Assembly is in the reverse order of disassembly.

CAUTION:


- Make sure hog rings are correctly fastened around both the seatback trim and seatback pad wires.
- Replace any deformed or damaged hog rings.
- Make sure any old hog ring pieces are removed from seat.

NOTE:


REAR SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- Install new hog rings on the seatback trim in original positions.
- Use only one hog ring in each designated location.

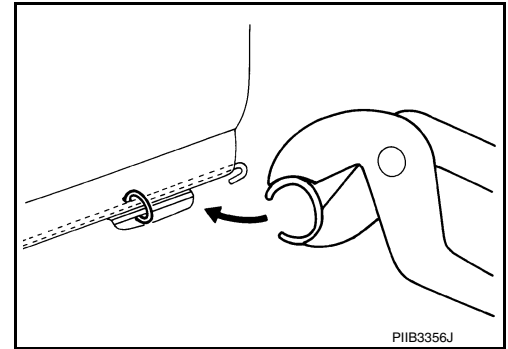


- When installing the seatback trim, firmly push down while sliding your hand along the seams as shown (➡) to ensure the hook fasteners below the seatback trim are fastened properly.

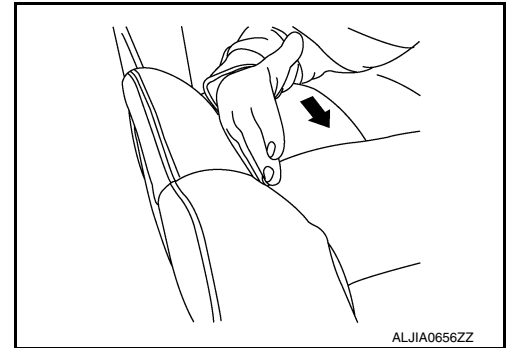


REAR SEATBACK ASSEMBLY (LH) - WITH REMOVABLE HEADREST

Disassembly

1. Remove the rear seatback assembly (LH). Refer to [SE-42, "Removal and Installation - Seat Assembly"](#).
2. Release the J-clip retainer (B) and unzip the seatback trim cover (1).
(A) Zipper

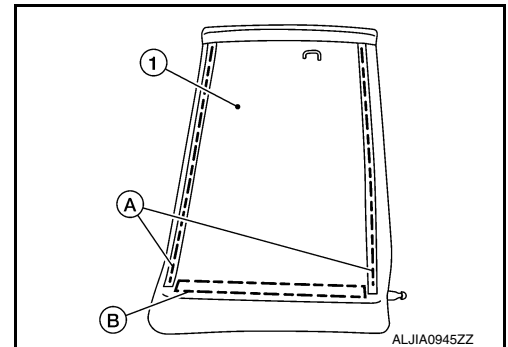

3. Remove the seatback trim and seatback pad (2) from the seatback frame (1).
 - a. Release the J-clip retainer (A).

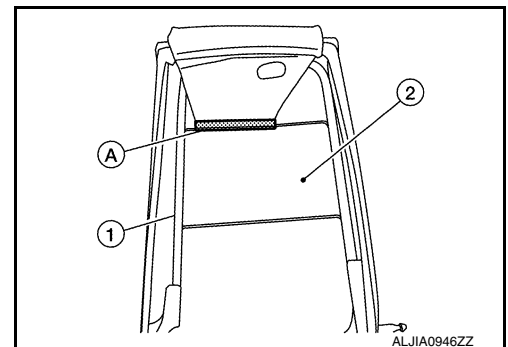

REAR SEAT


< UNIT DISASSEMBLY AND ASSEMBLY >

- b. Release the headrest holder locks as shown and remove the headrest holders (1) from the seatback frame (2).

CAUTION:

Before removing headrest holder, check its orientation (front/rear and right/left).

- c. Remove the seatback trim and seatback pad from the seatback frame.

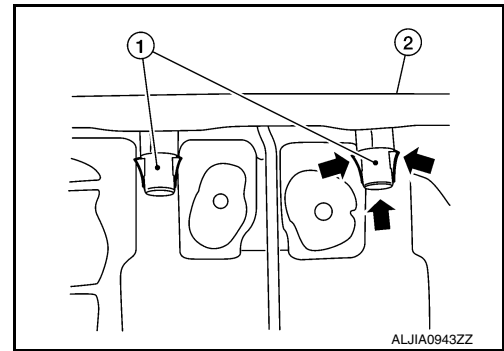


4. Separate the seatback trim (1) from the seatback pad.
 - a. Pull seatback trim upward to release hook fasteners (A).
 - b. Remove three hog rings and separate the seatback trim from the seatback pad.

[]: Hog ring

NOTE:

Remove all pieces of hog rings and discard them.

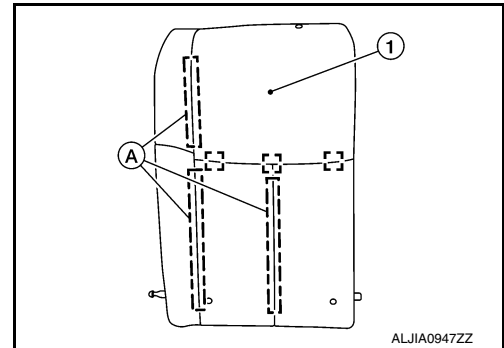

Assembly


Assembly is in the reverse order of disassembly.

CAUTION:


- Make sure hog rings are correctly fastened around both the seatback trim and seatback pad wires.
- Replace any deformed or damaged hog rings.
- Make sure any old hog ring pieces are removed from seat.

NOTE:

- Install new hog rings on the seatback trim in original positions.
- Use only one hog ring in each designated location.

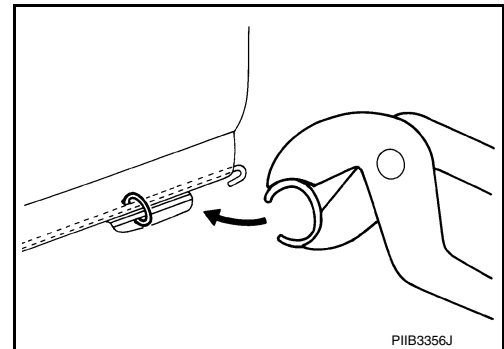

- When installing the seatback trim, firmly push down while sliding your hand along the seams as shown (↔) to ensure the hook fasteners below the seatback trim are fastened properly.

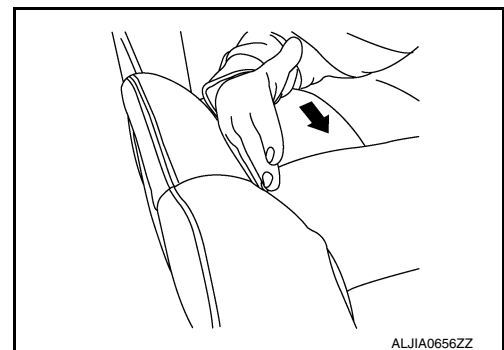


REAR SEATBACK ASSEMBLY (LH) - WITHOUT REMOVABLE HEADREST

REAR SEAT


< UNIT DISASSEMBLY AND ASSEMBLY >

Disassembly

1. Remove the rear seatback assembly (LH). Refer to [SE-42. "Removal and Installation - Seat Assembly"](#).
2. Release the J-clip retainer (B) and unzip the seatback trim cover (1).
(A) Zipper

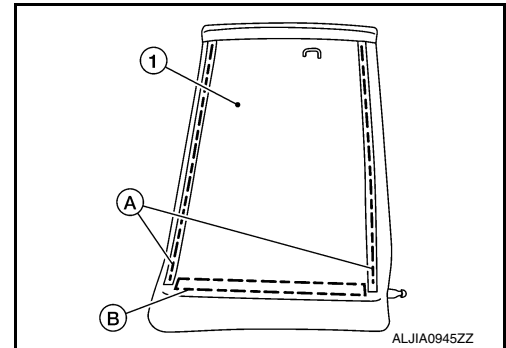

3. Remove the seatback trim and seatback pad (2) from the seatback frame (1).
 - a. Release the J-clip retainer (A).
 - b. Remove the seatback trim and seatback pad from the seatback frame.

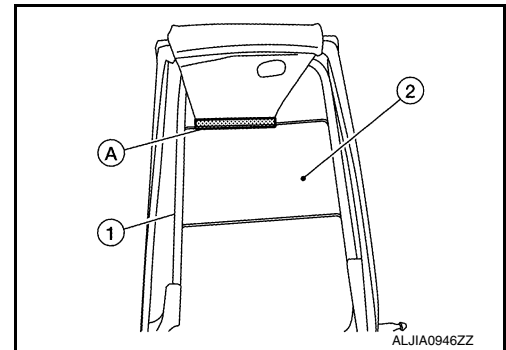


4. Separate the seatback trim (1) from the seatback pad.
 - a. Pull seatback trim upward to release hook fasteners (A).
 - b. Remove three hog rings and separate the seatback trim from the seatback pad.

[]: Hog ring

NOTE:

Remove all pieces of hog rings and discard them.

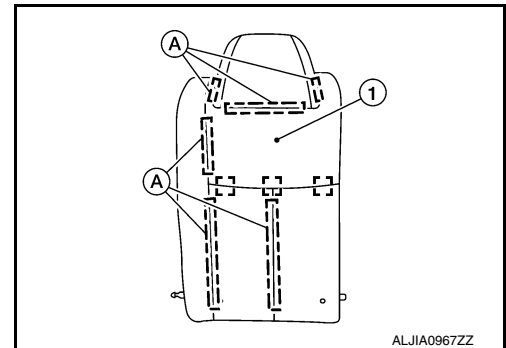

Assembly


Assembly is in the reverse order of disassembly.

CAUTION:

- Make sure hog rings are correctly fastened around both the seatback trim and seatback pad wires.
- Replace any deformed or damaged hog rings.
- Make sure any old hog ring pieces are removed from seat.

NOTE:


- Install new hog rings on the seatback trim in original positions.
- Use only one hog ring in each designated location.

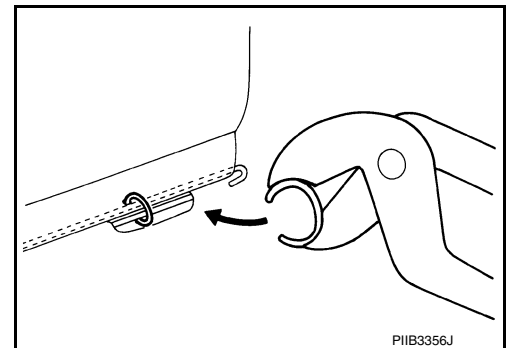

REAR SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- When installing the seatback trim, firmly push down while sliding your hand along the seams as shown (↔) to ensure the hook fasteners below the seatback trim are fastened properly.

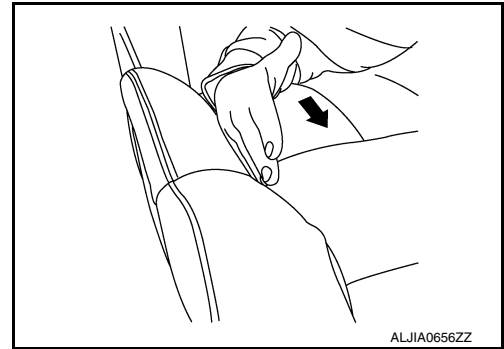

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P