

STR

SECTION STR
STARTING SYSTEM

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

CONTENTS

PRECAUTION	2	BASIC INSPECTION	12
PRECAUTIONS	2	DIAGNOSIS AND REPAIR WORKFLOW	12
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	Work Flow (With GR8-1200 NI)	12
Precaution for Power Generation Voltage Variable Control System	2	Work Flow (Without GR8-1200 NI)	15
PREPARATION	3	DTC/CIRCUIT DIAGNOSIS	17
PREPARATION	3	B TERMINAL CIRCUIT	17
Special Service Tool	3	Description	17
Commercial Service Tool	3	Diagnosis Procedure	17
SYSTEM DESCRIPTION	4	S CONNECTOR CIRCUIT	19
COMPONENT PARTS	4	Description	19
QR25DE	4	Diagnosis Procedure	19
QR25DE : Component Parts Location	4	SYMPTOM DIAGNOSIS	20
QR25DE : Component Description	4	STARTING SYSTEM	20
VQ35DE	4	Symptom Table	20
VQ35DE : Component Parts Location	5	REMOVAL AND INSTALLATION	21
VQ35DE : Component Description	5	STARTER MOTOR	21
SYSTEM	6	QR25DE	21
System Diagram	6	QR25DE : Exploded View	21
System Description	6	QR25DE : Removal and Installation	21
Component Description	6	VQ35DE	22
WIRING DIAGRAM	7	VQ35DE : Exploded View	22
STARTING SYSTEM	7	VQ35DE : Removal and Installation	22
Wiring Diagram	7	SERVICE DATA AND SPECIFICATIONS (SDS)	23
		STARTER MOTOR	23
		Starter	23

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000012603064

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery or batteries, and wait at least three minutes before performing any service.

Precaution for Power Generation Voltage Variable Control System

INFOID:0000000012603065

CAUTION:

For this model, the battery current sensor that is installed to the battery cable at the negative terminal measures the charging/discharging current of the battery, and performs various controls. If the electrical component or the ground wire is connected directly to the battery terminal, the current other than that being measured with the battery current sensor is charging to or discharging from the battery. This condition causes the malfunction of the control, and then the battery discharge may occur. Do not connect the electrical component or the ground wire directly to the battery terminal.

PREPARATION

< PREPARATION >

PREPARATION

PREPARATION


Special Service Tool

INFOID:0000000012603066

STR

A

The actual shape of the tools may differ from those illustrated here.

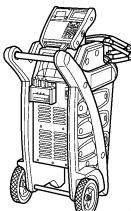Tool number (TechMate No.)	Description
— (165-GR8-1200KIT-NI) Nissan battery and electronics tester	 Tests batteries, starting and charging systems and charges batteries. For operating instructions, refer to diagnostic station instruction manual. AWIIA1239ZZ

C

D

E

F

Commercial Service Tool

INFOID:0000000012603067

G

H

I

J

K

L

M

N

O

P

Tool name	Description
Power tool	 Loosening nuts, screws and bolts PIIB1407E

COMPONENT PARTS

< SYSTEM DESCRIPTION >


SYSTEM DESCRIPTION

COMPONENT PARTS

QR25DE

QR25DE : Component Parts Location

INFOID:0000000012603068

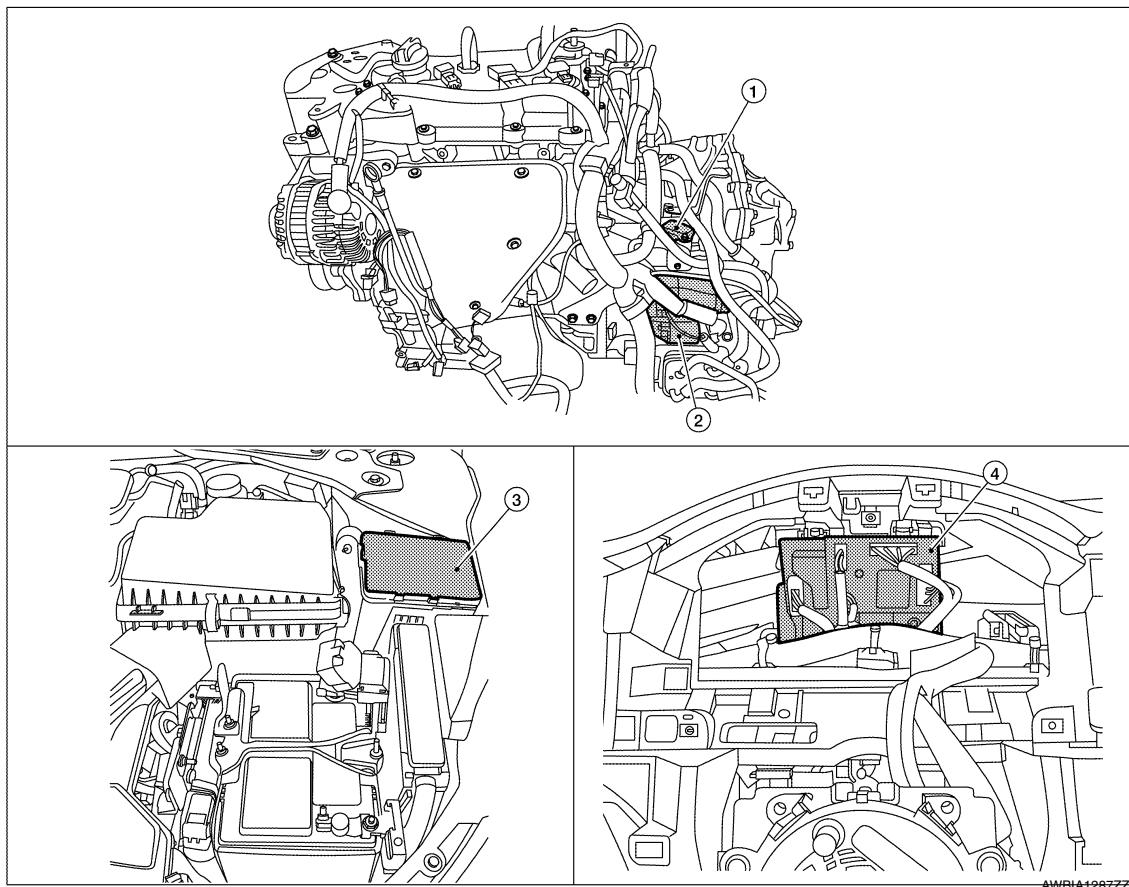

1. Transmission range switch
2. Starter motor
3. IPDM E/R
4. BCM (view with combination meter removed)

QR25DE : Component Description

INFOID:0000000012603069

Component part	Description
Transmission range switch	Transmission range switch supplies power to the starter relay and starter control relay inside the IPDM E/R when the shift selector is placed in the P or N position.
BCM	BCM controls the starter relay inside IPDM E/R.
IPDM E/R	CPU inside IPDM E/R operates the starter control relay when the ignition switch is in the start position.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the S terminal is supplied with electric power.


VQ35DE

COMPONENT PARTS

< SYSTEM DESCRIPTION >

VQ35DE : Component Parts Location

INFOID:000000012603070

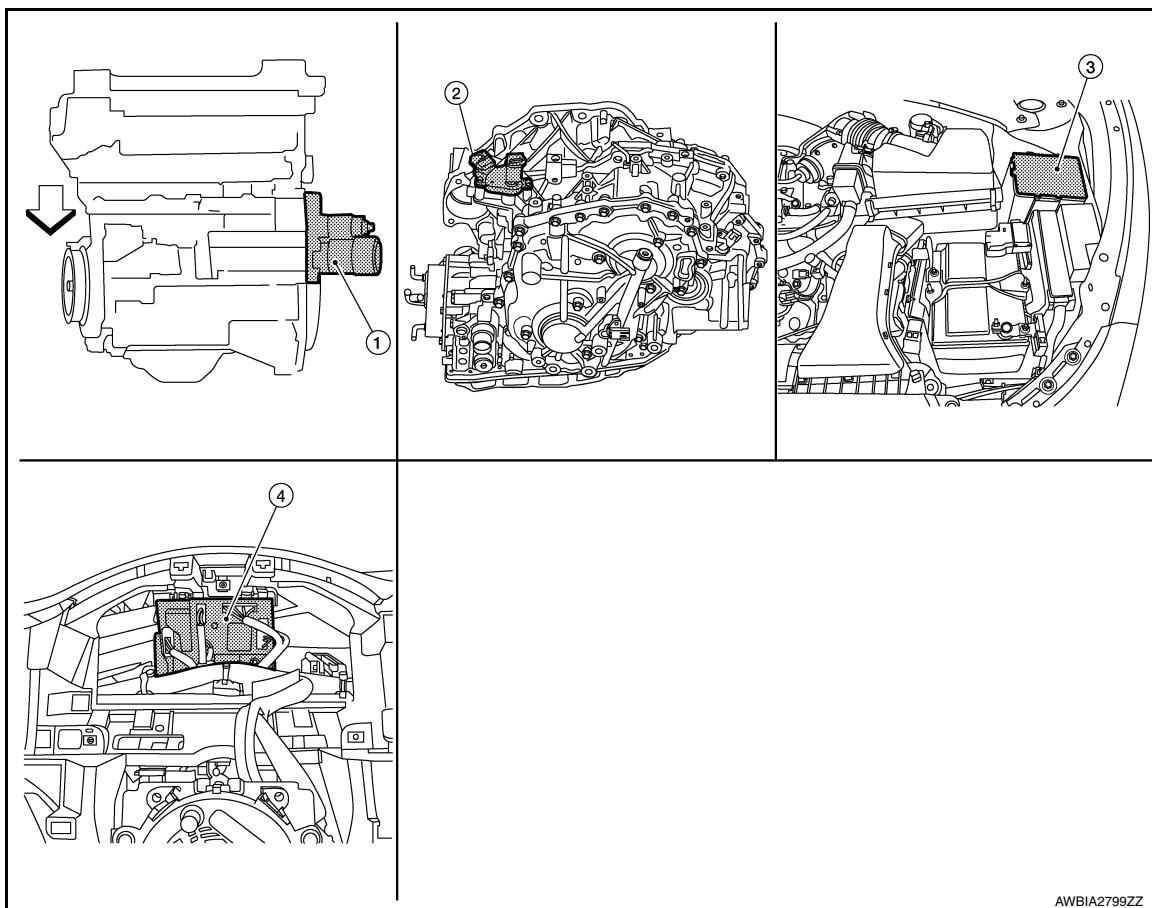

◀ Vehicle front

- | | | |
|---|------------------------------|-------------|
| 1. Starter motor | 2. Transmission range switch | 3. IPDM E/R |
| 4. BCM (view combination meter removed) | | |

VQ35DE : Component Description

INFOID:000000012603071

Component part	Description
Transmission range switch	Transmission range switch supplies power to the starter relay and starter control relay inside the IPDM E/R when the shift selector is placed in the P or N position.
BCM	BCM controls the starter relay inside IPDM E/R.
IPDM E/R	CPU inside IPDM E/R operates the starter control relay when the ignition switch is in the start position.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the S terminal is supplied with electric power.

A
STR
C
D
E
F
G
H
I
J
K
L
M
N
O
P


SYSTEM

< SYSTEM DESCRIPTION >

SYSTEM

System Diagram

INFOID:0000000012603072

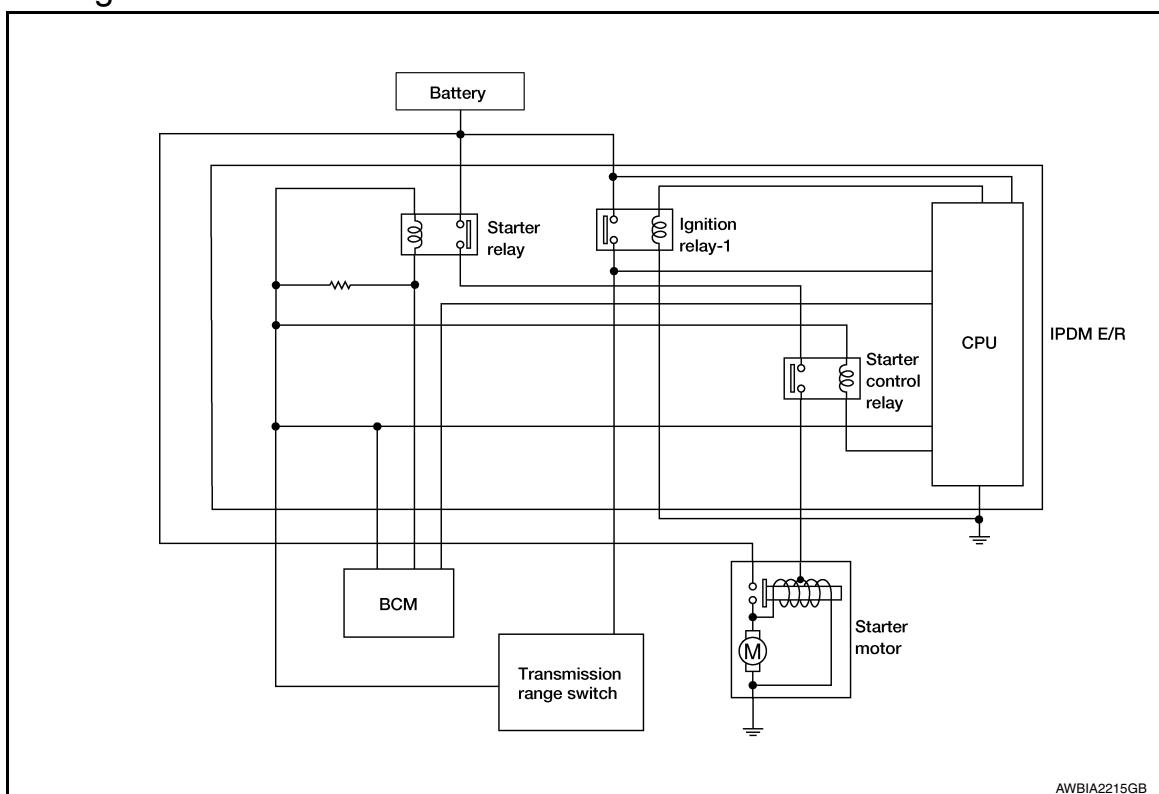

System Description

INFOID:0000000012603073

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

Component Description

INFOID:0000000012603074

Component part	Description
Transmission range switch	Transmission range switch supplies power to the starter relay and starter control relay inside the IPDM E/R when the shift selector is placed in the P or N position.
BCM	BCM controls the starter relay inside IPDM E/R.
IPDM E/R	CPU inside IPDM E/R controls the starter control relay.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.

STARTING SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM STARTING SYSTEM

Wiring Diagram

INFOID:0000000012603075

STR

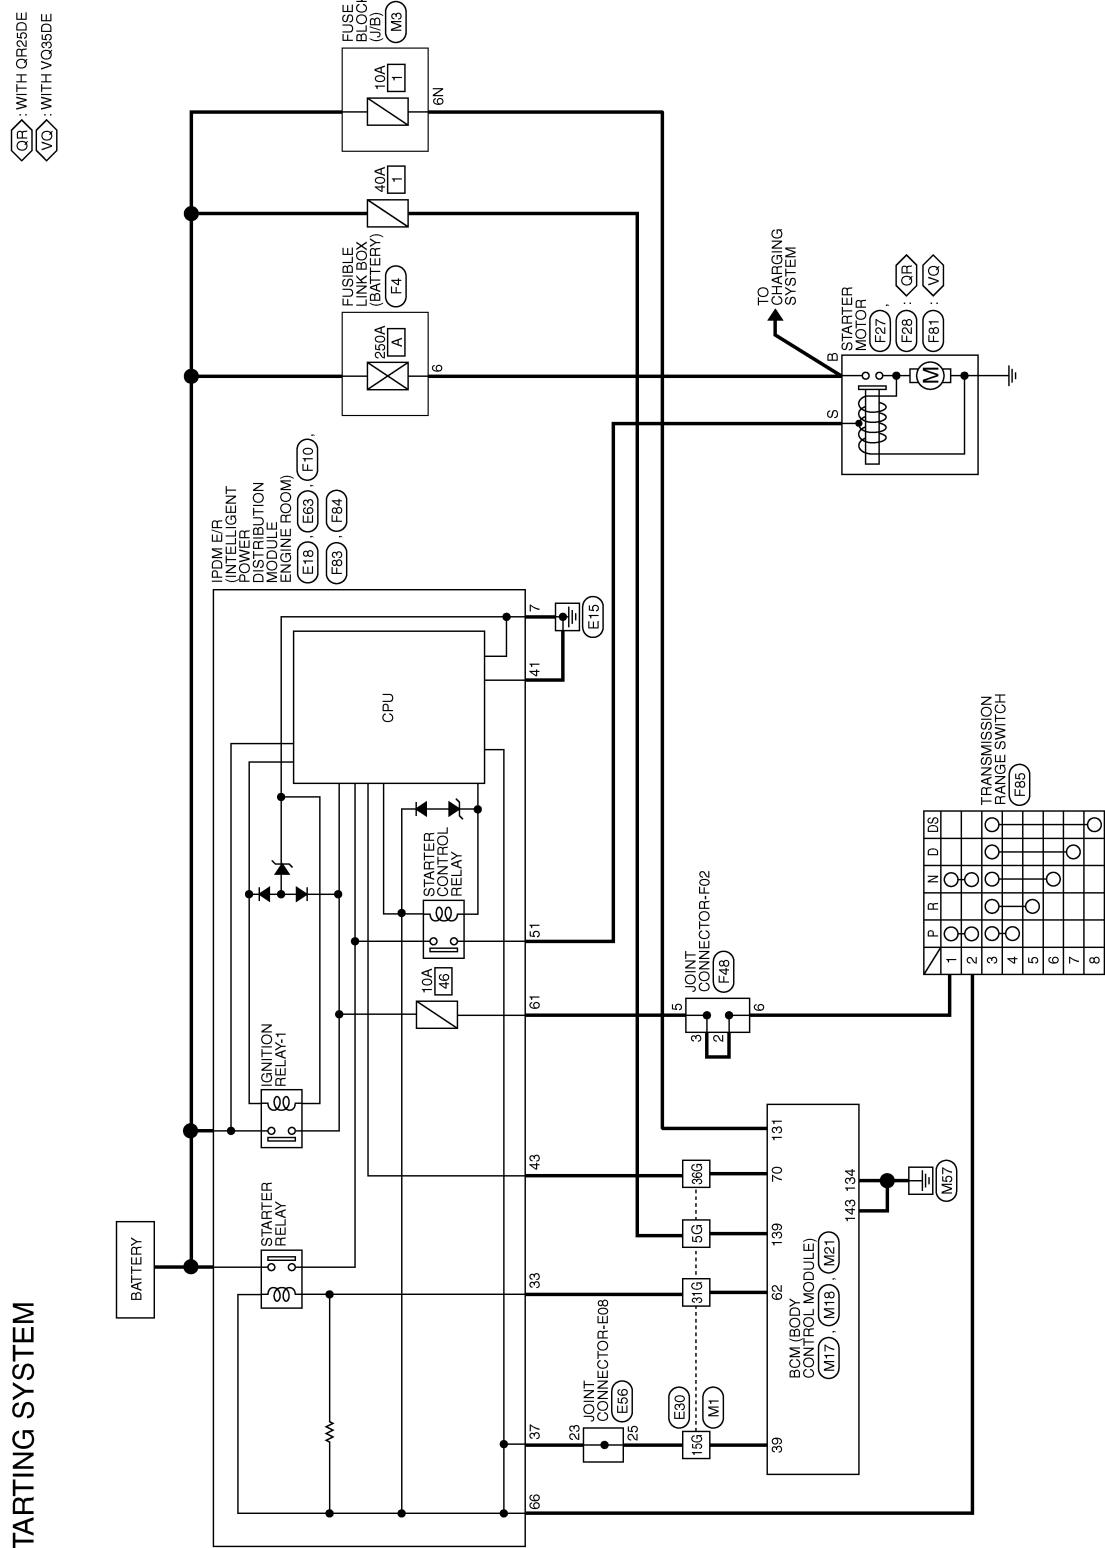


STARTING SYSTEM

< WIRING DIAGRAM >

STARTING SYSTEM CONNECTORS


Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

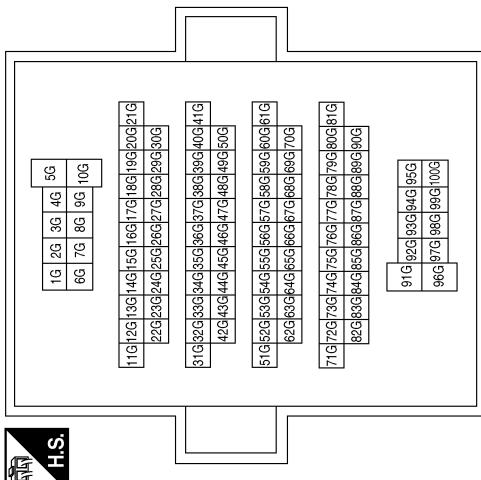

Terminal No.	Color of Wire	Signal Name
5G	W	-
15G	L	-
31G	BR	-
36G	G	-


Terminal No.	Color of Wire	Signal Name
6N	W	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

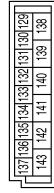

Terminal No.	Color of Wire	Signal Name
6N	W	-


Connector No.	M21
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

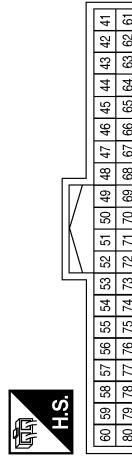

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

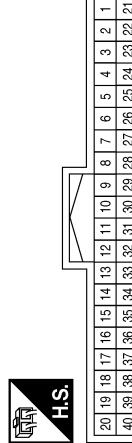

Terminal No.	Color of Wire	Signal Name
62	BR	STARTER RELAY OUT
70	G	IGN LISM OUT 1

Connector No.	M22
Connector Name	BAT POWER F/L
Connector Color	WHITE

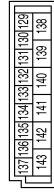



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND2

Terminal No.	Color of Wire	Signal Name
139	W	BAT POWER F/L
143	B	GND1

ABIA3128GB

STARTING SYSTEM

< WIRING DIAGRAM >

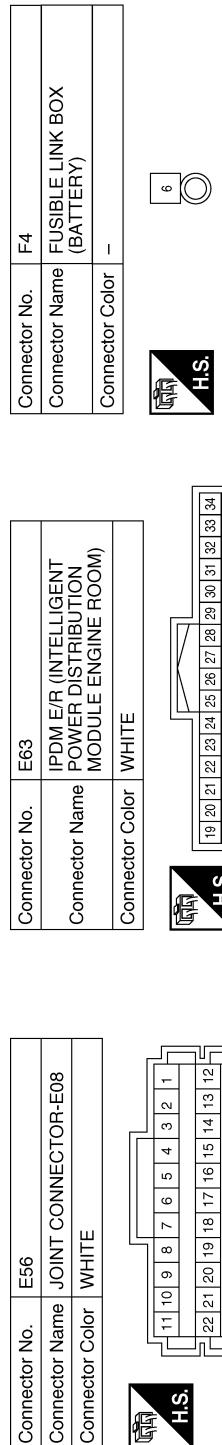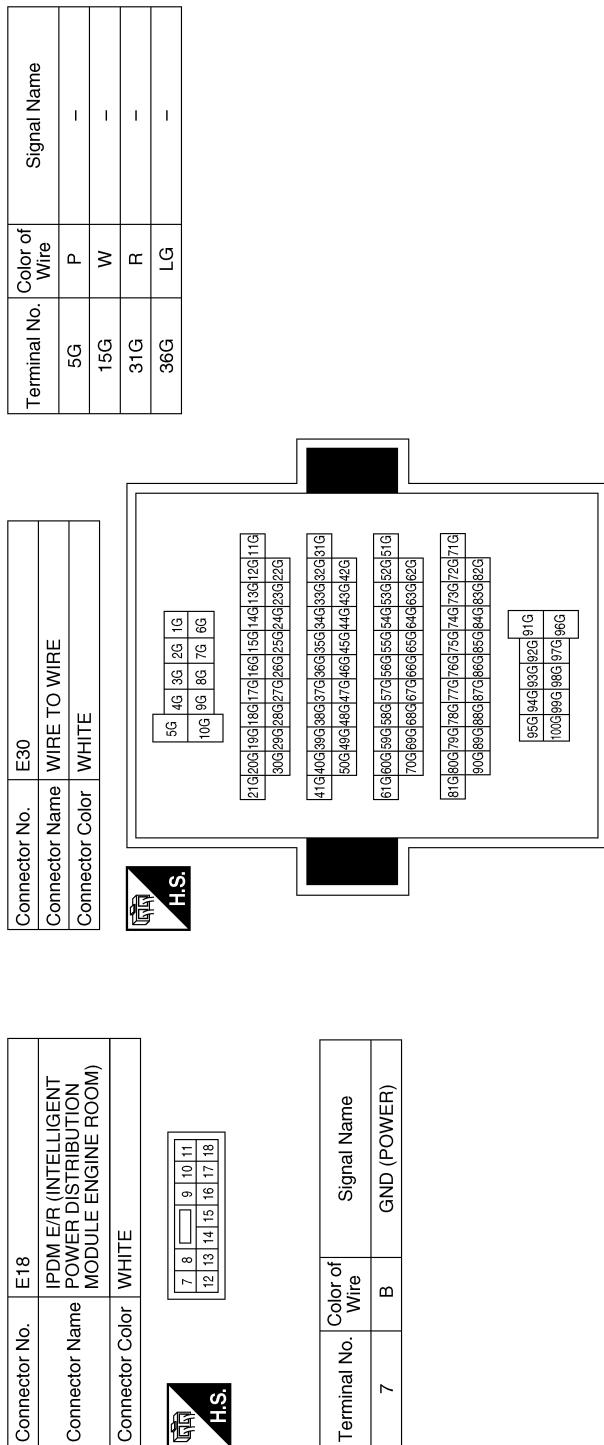

ABRIA3190GE

STARTING SYSTEM

< WIRING DIAGRAM >

Connector No.	F10
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK
	

Terminal No.	Color of Wire	Signal Name
51	R	STARTER MOTOR (WITH QR25DE)
51	W	STARTER MOTOR (WITH VQ35DE)

Connector No.	F27
Connector Name	STARTER MOTOR
Connector Color	-




Terminal No.	Color of Wire	Signal Name
S	B/R	-

Connector No.	F28
Connector Name	STARTER MOTOR (WITH QR25DE)
Connector Color	-




Terminal No.	Color of Wire	Signal Name
S	R	-

Connector No.	F83
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

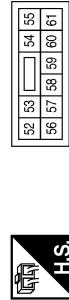


Terminal No.	Color of Wire	Signal Name
61	Y	AT ECU

Connector No.	F81
Connector Name	STARTER MOTOR (WITH VQ35DE)
Connector Color	GRAY

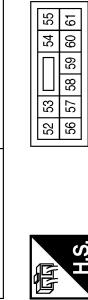

Connector No.	F48
Connector Name	JOINT CONNECTOR-F02
Connector Color	BLACK

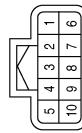

Terminal No.	Color of Wire	Signal Name
2	Y	-
3	Y	-
5	Y	-
6	Y	-(WITH QR25DE)
6	L	-(WITH VQ35DE)

ABBAIA3129GB

STARTING SYSTEM

< WIRING DIAGRAM >

A

STR

C

D

E

F

G

H

I

J

K

L

M

N


O

P

Connector No.	F84
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Connector No.	F84
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

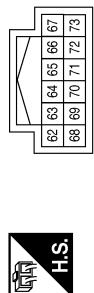

Terminal No.	Color of Wire	Signal Name	Color of Wire	Signal Name
66	LG	NP SW (WITH QR25DE)	1	Y -(WITH QR25DE)
66	G	NP SW (WITH VQ35DE)	1	L -(WITH VQ35DE)
			2	LG -(WITH QR25DE)
			2	G -(WITH VQ35DE)

Terminal No.	Color of Wire	Signal Name	Color of Wire	Signal Name
66	LG	NP SW (WITH QR25DE)	1	Y -(WITH QR25DE)
66	G	NP SW (WITH VQ35DE)	1	L -(WITH VQ35DE)

ABBAIA3130GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow (With GR8-1200 NI)

INFOID:0000000012603076

STARTING SYSTEM DIAGNOSIS WITH GR8-1200 NI

To test the starting system, use the following special service tool:

- GR8-1200 NI Multitasking battery and electrical diagnostic station


NOTE:

Refer to the diagnostic station Instruction Manual for proper starting system diagnosis procedures.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

OVERALL SEQUENCE

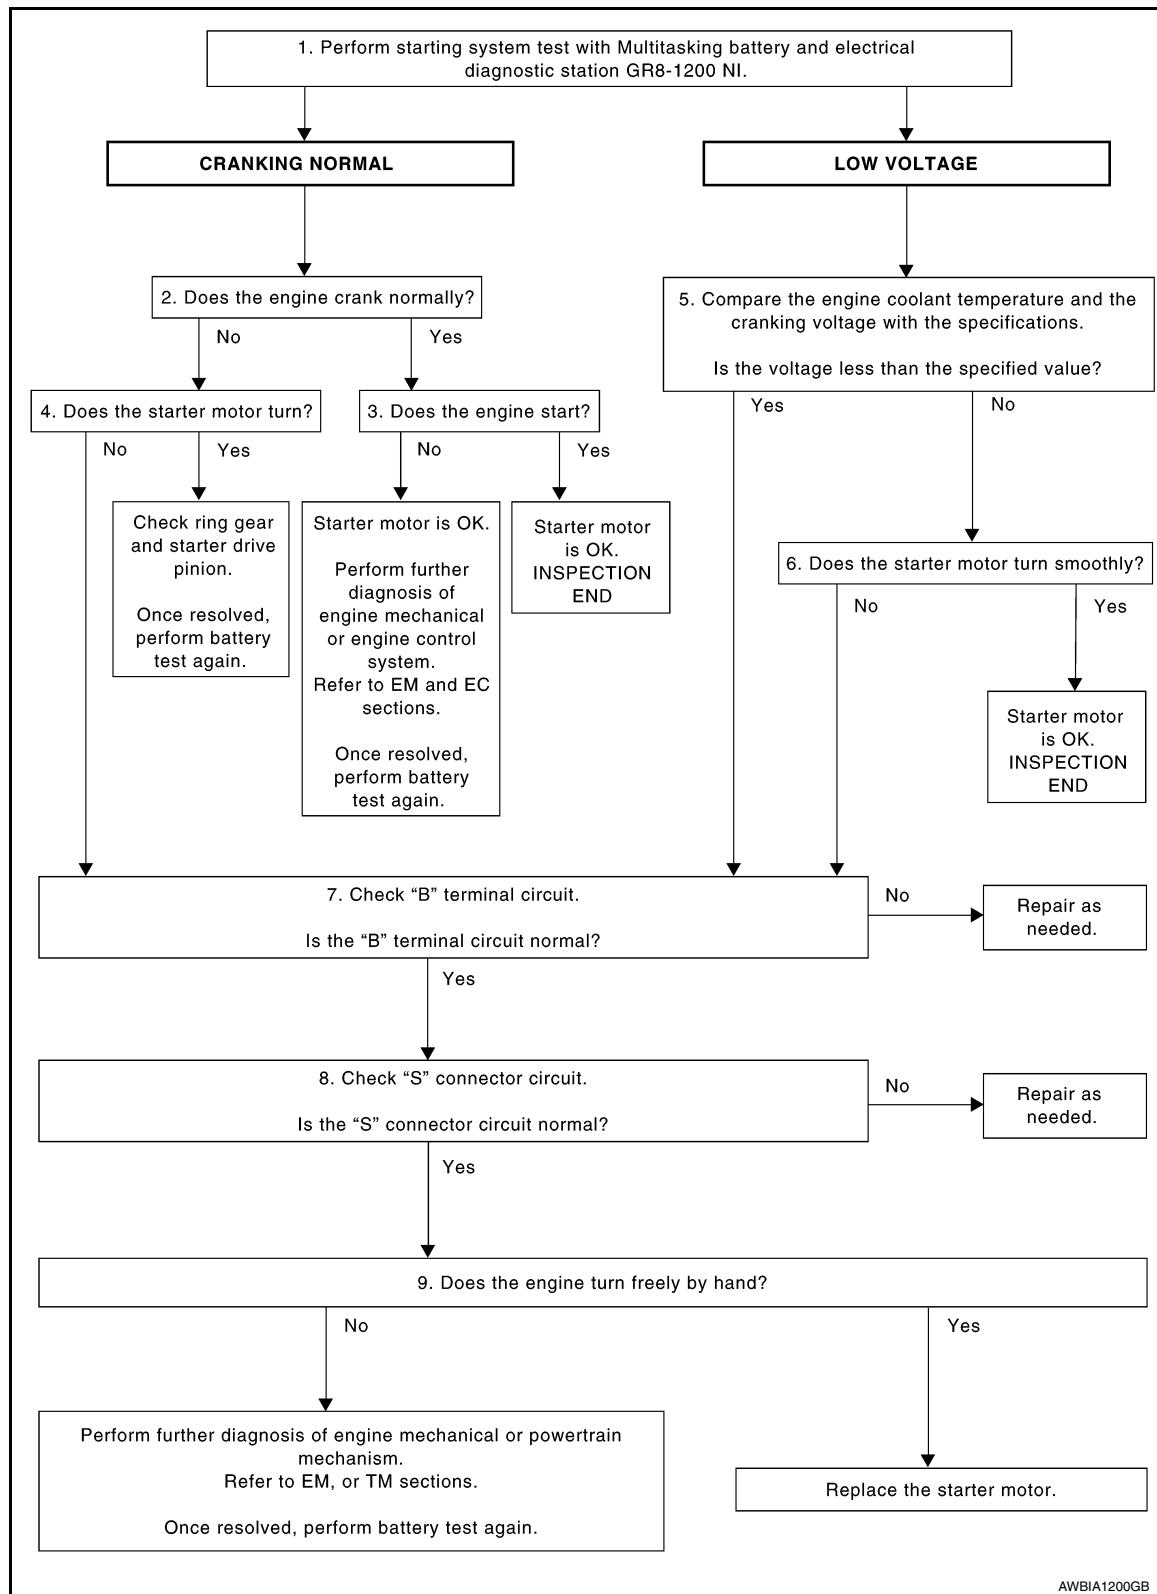

DETAILED FLOW

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter motor and generator test segments must be done as a set from start to finish.

1. DIAGNOSIS WITH MULTITASKING BATTERY AND ELECTRICAL DIAGNOSTIC STATION GR8-1200 NI

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Perform the starting system test with Multitasking battery and electrical diagnostic station GR8-1200 NI. For details and operating instructions, refer to diagnostic station Instruction Manual.

Test result

CRANKING NORMAL>>GO TO 2.

LOW VOLTAGE>>GO TO 5.

CHARGE BATTERY>>Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again. Refer to diagnostic station instruction manual.

REPLACE BATTERY>>Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again. Refer to diagnostic station instruction manual. If second test result is "REPLACE BATTERY", then do so. Perform battery test again to confirm repair.

2.CRANKING CHECK

Check that the starter motor operates properly.

Does the engine crank normally?

YES >> GO TO 3.

NO >> GO TO 4.

3.ENGINE START CHECK

Check that the engine starts.

Does the engine start?

YES >> Inspection End.

NO >> Perform further diagnosis of engine mechanical or engine control system. Refer to EM and EC sections. Once resolved, perform battery test again.

4.STARTER MOTOR ACTIVATION

Check that the starter motor operates.

Does the starter motor turn?

YES >> Check ring gear and starter motor drive pinion. Once resolved, perform battery test again.

NO >> GO TO 7.

5.COMPARISON BETWEEN ENGINE COOLANT AND CRANKING VOLTAGE

Compare the engine coolant temperature and verify the cranking voltage is within specifications.

Minimum Specification of Cranking Voltage Referencing Coolant Temperature

Engine coolant temperature [°C (°F)]	Voltage [V]
-30 to -20 (-22 to -4)	8.6
-19 to -10 (-2 to 14)	9.1
-9 to 0 (16 to 32)	9.5
More than 1 (More than 34)	9.9

Is the voltage less than the specified value?

YES >> GO TO 7.

NO >> GO TO 6.

6.STARTER OPERATION

Check the starter operation.

Does the starter motor turn smoothly?

YES >> Inspection End.

NO >> GO TO 7.

7.“B” TERMINAL CIRCUIT INSPECTION

Check “B” terminal circuit. Refer to [STR-17, "Diagnosis Procedure"](#).

Is “B” terminal circuit normal?

YES >> GO TO 8.

NO >> Repair as needed.

8.“S” CONNECTOR CIRCUIT INSPECTION

Check “S” connector circuit. Refer to [STR-19, "Diagnosis Procedure"](#).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Is "S" connector circuit normal?

YES >> GO TO 9.

NO >> Repair as needed.

9. ENGINE ROTATION STATUS

Check that the engine can be rotated by hand.

A

Does the engine turn freely by hand?

STR

YES >> Replace starter motor. Refer to [STR-21, "QR25DE : Removal and Installation"](#) (QR25DE) or [STR-22, "VQ35DE : Removal and Installation"](#) (VQ35DE).

C

NO >> Perform further diagnosis of engine mechanical or powertrain mechanism. Once resolved, perform battery test again using Multitasking battery and electrical diagnostic station GR8-1200 NI. Refer to the diagnostic station Instruction Manual for proper testing procedures.

D

Work Flow (Without GR8-1200 NI)

INFOID:0000000012603077

E

OVERALL SEQUENCE

F

G

H

I

J

K


L

M

N

O

P

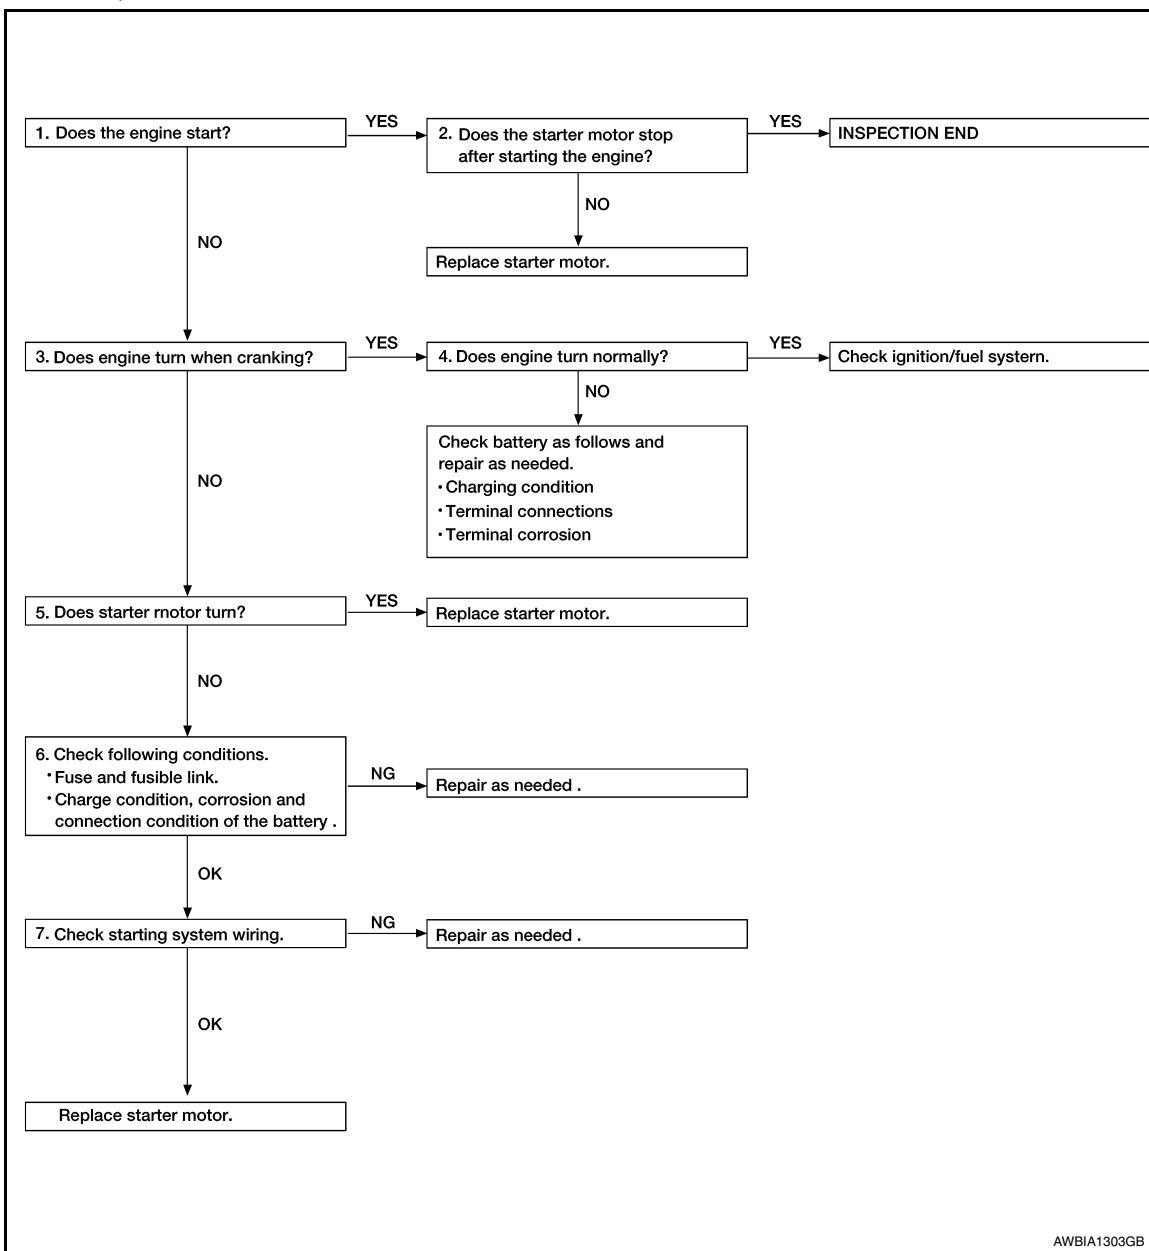

AWBIA1303GB

DETAILED FLOW

NOTE:

If any malfunction is found, immediately disconnect the battery cable from the negative terminal.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

1.CHECK ENGINE START

Crank the engine and check that the engine starts.

Does the engine start?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK THAT THE STARTER MOTOR STOPS

Check that the starter motor stops after starting the engine.

Does the starter motor stop?

YES >> Inspection End.

NO >> Replace starter motor. Refer to [STR-21, "QR25DE : Removal and Installation"](#) (QR25DE) or [STR-22, "VQ35DE : Removal and Installation"](#) (VQ35DE).

3.CHECK THAT THE ENGINE TURNS WHEN CRANKING

Check that the engine turns when cranking.

Does engine turn when cranking?

YES >> GO TO 4.

NO >> GO TO 5.

4.CHECK THE ENGINE SPEED WHEN CRANKING

Check that the engine speed is not low when cranking.

Does engine turn normally?

YES >> Check ignition/fuel system.

NO >> Check charge condition, corrosion and connection condition of the battery. Refer to [PG-69, "How to Handle Battery"](#).

5.CHECK STARTER MOTOR ACTIVATION

Check that the starter motor runs at cranking.

Does starter motor turn?

YES >> Replace starter motor. Refer to [STR-21, "QR25DE : Removal and Installation"](#) (QR25DE) or [STR-22, "VQ35DE : Removal and Installation"](#) (VQ35DE).

NO >> GO TO 6.

6.CHECK POWER SUPPLY CIRCUIT

Check the following conditions:

- Fuse and fusible link
- Charge condition, corrosion and connection of the battery.

Are these inspection results normal?

YES >> GO TO 7.

NO >> Repair as needed.

7.CHECK STARTING SYSTEM WIRING

Check the following:

- "B" terminal circuit. Refer to [STR-17, "Diagnosis Procedure"](#).
- "S" terminal circuit. Refer to [STR-19, "Diagnosis Procedure"](#).

Are the inspection results normal?

YES >> Replace starter motor. Refer to [STR-21, "QR25DE : Removal and Installation"](#) (QR25DE) or [STR-22, "VQ35DE : Removal and Installation"](#) (VQ35DE).

NO >> Repair as needed.

B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

B TERMINAL CIRCUIT

Description

INFOID:000000012603078

A
STR

Terminal "B" is constantly supplied with battery power.

Diagnosis Procedure

INFOID:000000012603079

C

Regarding Wiring Diagram information, refer to [STR-7, "Wiring Diagram"](#).

D

CAUTION:

Perform diagnosis under the condition that the engine cannot start by the following procedure.

E

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

F

1.CHECK "B" TERMINAL CIRCUIT

1. Turn ignition switch OFF.
2. Check that starter motor B" terminal connection is clean and tight.
3. Check voltage between starter motor connector F27 and ground.

G

Terminals		Voltage (Approx.)
(+)	(-)	
Starter motor B terminal	Terminal	
F27	B	Ground

H

Is the inspection result normal?

I

YES >> GO TO 2.

J

NO >> Check harness between battery and starter motor for open circuit.

K

2.CHECK BATTERY CABLE CONNECTION STATUS (VOLTAGE DROP TEST)

L

1. Shift selector to P (Park) or N (Neutral) position.
2. Check voltage between battery positive terminal and starter motor B terminal.

M

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Starter motor "B" terminal	Terminal	When the ignition switch is in START position	Less than 0.5V

N

Is the inspection result normal?

O

YES >> GO TO 3.

P

NO >> Check harness between the battery and starter motor for poor continuity.

3.CHECK GROUND CIRCUIT STATUS (VOLTAGE DROP TEST)

1. Shift selector lever to P (Park) or N (Neutral) position.
2. Check voltage between starter motor case and battery negative terminal.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Starter motor case	Battery negative terminal	When the ignition switch is in START position	Less than 0.2V

Is the inspection result normal?

B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

-
- YES >> "B" terminal circuit is OK. Further inspection is necessary. Refer to [STR-12, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-15, "Work Flow \(Without GR8-1200 NI\)"](#).
- NO >> Check the starter motor case to engine mounting for high resistance.

S CONNECTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

S CONNECTOR CIRCUIT

Description

INFOID:0000000012603080

The starter motor magnetic switch is supplied with power when the ignition switch is turned to the START position while the selector lever is in the P (Park) or N (Neutral) position.

A

STR

Diagnosis Procedure

INFOID:0000000012603081

C

Regarding Wiring Diagram information, refer to [STR-7, "Wiring Diagram"](#).

D

CAUTION: Perform diagnosis under the condition that engine cannot start by the following procedure.

E

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.
- 1.CHECK "S" CONNECTOR CIRCUIT

F

1. Turn ignition switch OFF.
2. Disconnect starter motor connector.
3. Shift selector lever to "P" (Park) or "N" (Neutral) position.
4. Check voltage between starter motor harness connector F28 (QR25DE) or F81 (VQ35DE) and ground.

G

Connector	(+)	(-)	Condition	Voltage (Approx.)
F28 (QR25DE)				
F81 (VQ35DE)	S	Ground	When the ignition switch is in START position	Battery voltage

H

Is the inspection result normal?

I

J

YES >> "S" circuit is OK. Further inspection is necessary. Refer to [STR-12, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-15, "Work Flow \(Without GR8-1200 NI\)"](#).

K

L

M

N

O

P

NO >> GO TO 2.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Q

1. Disconnect IPDM E/R connector.
2. Check continuity between starter motor harness connector F28 (QR25DE) or F81 (VQ35DE) and the IPDM E/R harness connector F10.

R

Starter motor harness connector		IPDM E/R harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F28 (QR25DE)				
F81 (VQ35DE)	S	F10	51	Yes

Is the inspection result normal?

S

T

U

V

W

YES >> Further inspection is necessary. Refer to [STR-12, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-15, "Work Flow \(Without GR8-1200 NI\)"](#).

X

NO >> Repair or replace the harness or connectors.

Y

STARTING SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

STARTING SYSTEM

Symptom Table

INFOID:000000012603082

Symptom	Reference
No normal cranking	Refer to STR-12, "Work Flow (With GR8-1200 NI)" or STR-15, "Work Flow (Without GR8-1200 NI)".
Starter motor does not rotate	

STARTER MOTOR

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

STARTER MOTOR

QR25DE

QR25DE : Exploded View

INFOID:0000000012603083

A

STR

C

D

E

F

G

H

I

J

K


L

M

N

O

P

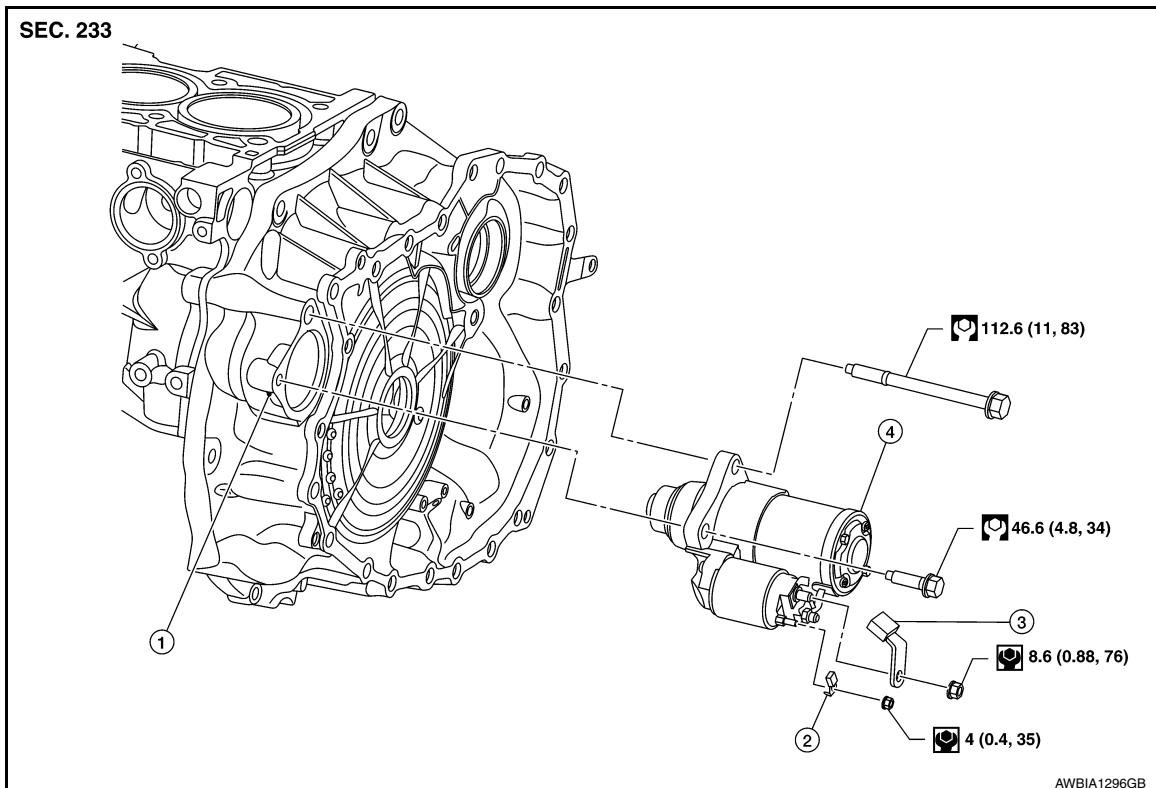

1. Converter housing
2. "B" terminal harness
3. "S" connector
4. Starter motor

QR25DE : Removal and Installation

INFOID:0000000012603084

K

L

M


N

O

P

REMOVAL

1. Remove the core support cover clips (A), then remove the core support cover (1).

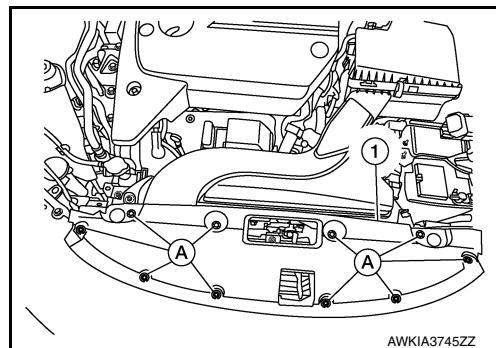

2. Remove battery tray. Refer to [PG-80, "Removal and Installation"](#).
3. Disconnect the harness connectors from the starter motor.
4. Remove the two starter motor bolts using power tool.
5. Remove the starter motor.

INSTALLATION

STARTER MOTOR


< REMOVAL AND INSTALLATION >

Installation is in the reverse order of removal.

VQ35DE

VQ35DE : Exploded View

INFOID:0000000012603085

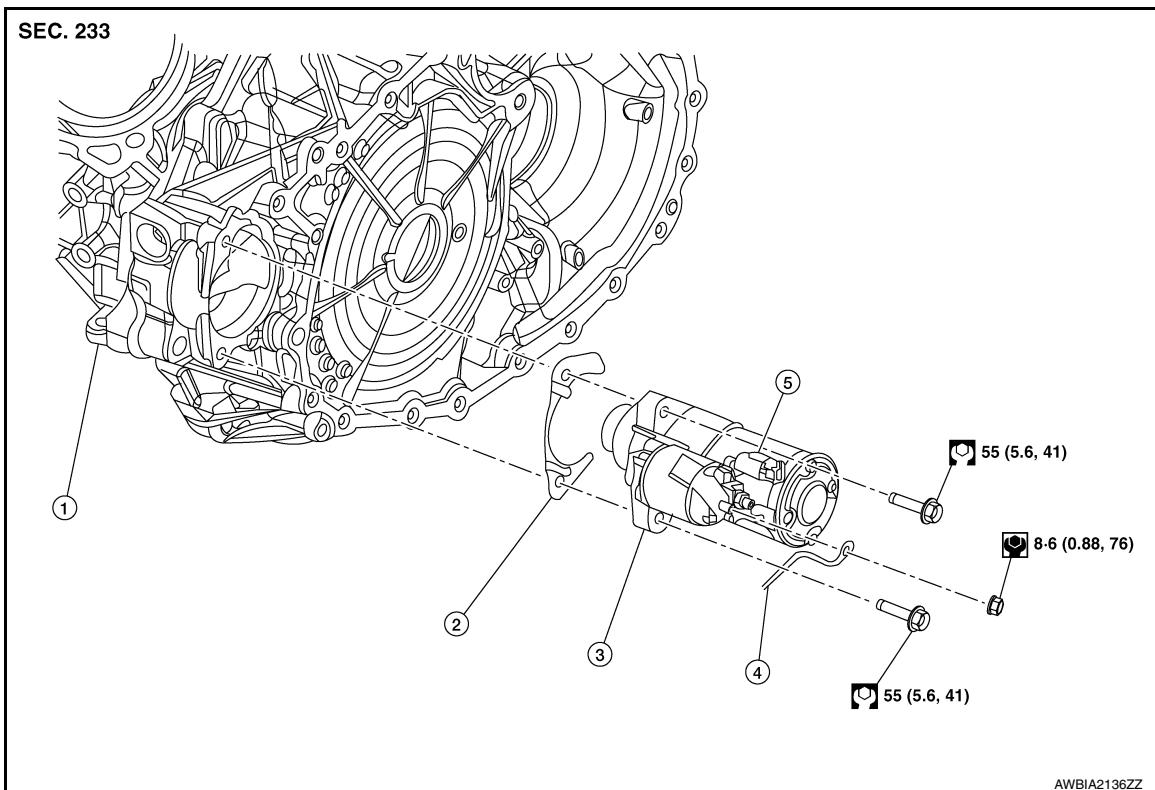


1. Cylinder block
2. Shim
3. Starter motor
4. "B" terminal harness
5. "S" connector

VQ35DE : Removal and Installation

INFOID:0000000012603086

REMOVAL

1. Remove the core support cover clips (A), then remove the core support cover (1).

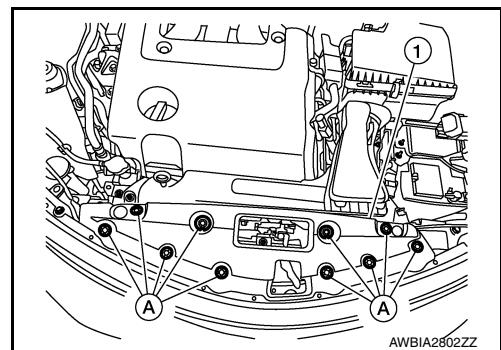

2. Remove the battery tray. Refer to [PG-80, "Removal and Installation"](#).
3. Disconnect the "S" connector and the "B" terminal.
4. Remove the two starter motor bolts using power tool.
5. Remove the starter motor.

INSTALLATION

Installation is in the reverse order of removal.

STARTER MOTOR

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

STARTER MOTOR

Starter

INFOID:000000012603087

STR

Application	QR25DE	VQ35DE
CVT model		
Manufacturer	Mitsubishi	
Model number*	M000TB0071ZC	M000TB0272ZC
Type	Reduction gear type	
System voltage	12V	
No-load	Terminal voltage	11V
	Current	Less than 90A
	Revolution	More than 2,370 rpm

*: Always check with the Parts Department for the latest parts information.