

WCS

SECTION

WARNING CHIME SYSTEM

CONTENTS

PRECAUTION	3	COMMON ITEM	14
PRECAUTIONS	3	COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	14
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	BUZZER	15
		BUZZER : CONSULT Function (BCM - BUZZER)	15
SYSTEM DESCRIPTION	4	ECU DIAGNOSIS INFORMATION	16
COMPONENT PARTS	4	BCM, COMBINATION METER	16
Component Parts Location	4	List of ECU Reference	16
Component Description	4	WIRING DIAGRAM	17
SYSTEM	6	WARNING CHIME SYSTEM	17
WARNING CHIME SYSTEM	6	Wiring Diagram	17
WARNING CHIME SYSTEM : System Diagram	6	BASIC INSPECTION	24
WARNING CHIME SYSTEM : System Description	6	DIAGNOSIS AND REPAIR WORKFLOW	24
		Work Flow	24
LIGHT REMINDER WARNING CHIME	6	DTC/CIRCUIT DIAGNOSIS	26
LIGHT REMINDER WARNING CHIME : System Diagram	6	POWER SUPPLY AND GROUND CIRCUIT	26
LIGHT REMINDER WARNING CHIME : System Description	6	COMBINATION METER	26
SEAT BELT WARNING CHIME	7	COMBINATION METER : Diagnosis Procedure	26
SEAT BELT WARNING CHIME : System Diagram	7	BCM (BODY CONTROL MODULE)	26
		BCM (BODY CONTROL MODULE) : Diagnosis Procedure	27
SEAT BELT WARNING CHIME : System Description	7	METER BUZZER CIRCUIT	28
PARKING BRAKE RELEASE WARNING CHIME	7	Description	28
PARKING BRAKE RELEASE WARNING CHIME : System Diagram	7	Component Function Check	28
PARKING BRAKE RELEASE WARNING CHIME : System Description	7	Diagnosis Procedure	28
DIAGNOSIS SYSTEM (METER)	9	SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT	29
Description	9	Description	29
CONSULT Function (METER/M&A)	9	Component Function Check	29
DIAGNOSIS SYSTEM (BCM)	14	Diagnosis Procedure	29

A
B
C
D
E

F
G
H
I
J
K
L
M

WCS

O
P

Component Inspection	30	Diagnosis Procedure	32
SYMPTOM DIAGNOSIS	31	THE LIGHT REMINDER WARNING DOES NOT SOUND	33
WARNING CHIME SYSTEM SYMPTOMS	31	Description	33
Symptom Table	31	Diagnosis Procedure	33
THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND	32	THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND	34
Description	32	Description	34
		Diagnosis Procedure	34

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000012818940

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery or batteries, and wait at least three minutes before performing any service.

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000012590955

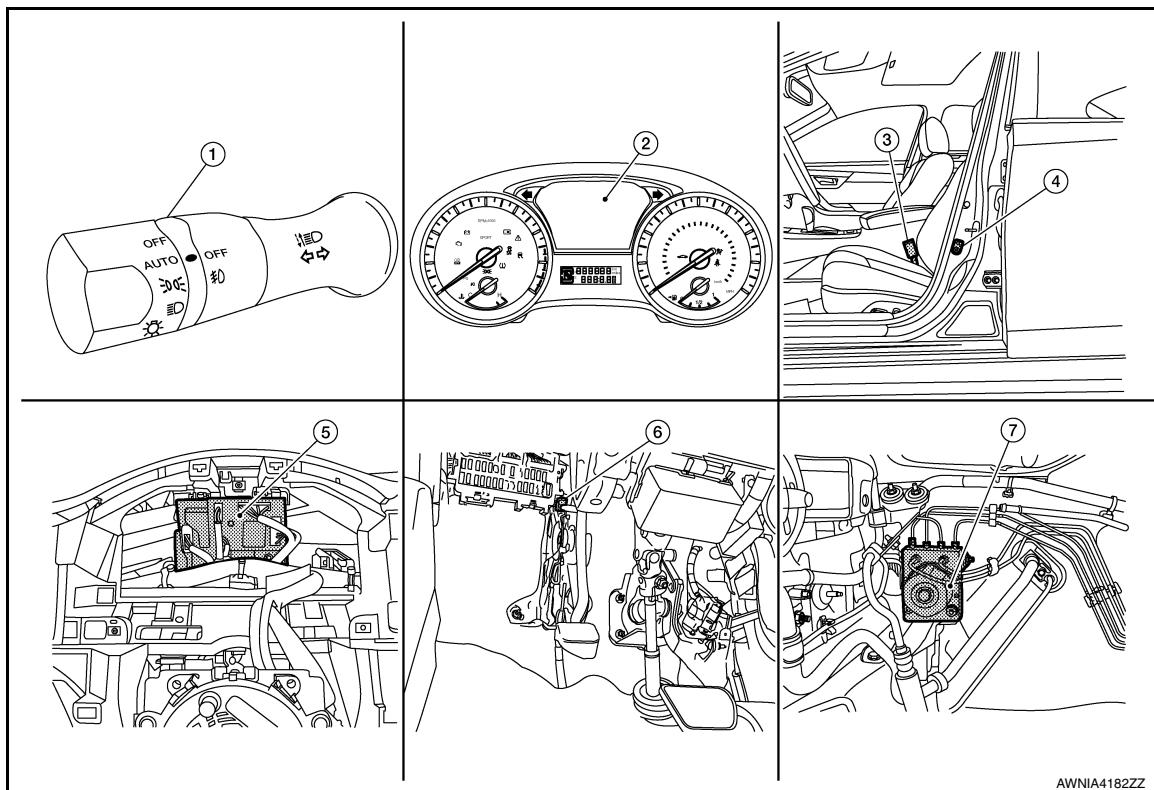

AWNIA4182Z

- | | | |
|---|--|---|
| 1. Combination switch (lighting and turn signal switch) | 2. Combination meter | 3. Seat belt buckle switch LH |
| 4. Front door switch LH | 5. BCM (view with combination meter removed) | 6. Parking brake switch (view with instrument lower panel LH removed) |
| 7. ABS actuator and electric unit (control unit) | | |

Component Description

INFOID:0000000012590956

Unit	Description
Combination switch (lighting and turn signal switch)	Transmits the lighting switch signal to the BCM.
Combination meter	<ul style="list-style-type: none">• Receives a buzzer output signal from the BCM with CAN communication and sounds the buzzer.• Receives the seat belt buckle switch signal from the seat belt buckle switch LH and transmits it to the BCM via CAN communication.• Judges whether the parking brake is released using the vehicle speed signal and the parking brake switch signal, and sounds the buzzer if necessary.
BCM	Based on the signals received from various units and switches, transmits the buzzer output signal to the combination meter via CAN communication.
Front door switch LH	Transmits the front door switch LH signal to the BCM.
Seat belt buckle switch LH	Transmits the seat belt buckle switch LH signal to the combination meter.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

Unit	Description
Parking brake switch	Transmits the parking brake switch signal to the combination meter.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication.

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM

WARNING CHIME SYSTEM

WARNING CHIME SYSTEM : System Diagram

INFOID:0000000012590957

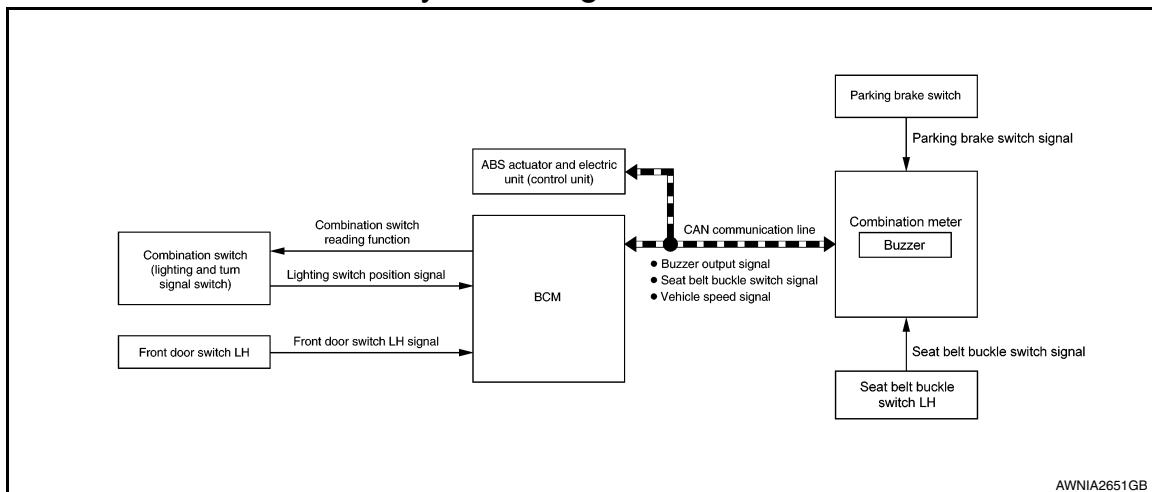

WARNING CHIME SYSTEM : System Description

INFOID:0000000012590958


DESCRIPTION

- The buzzer for the warning chime system is installed in the combination meter.
- The buzzer sounds when the combination meter receives a buzzer output signal from the BCM.
- The BCM receives signals from various units and transmits a buzzer output signal to the combination meter with CAN communication line if it judges that the warning buzzer should be activated.

LIGHT REMINDER WARNING CHIME

LIGHT REMINDER WARNING CHIME : System Diagram

INFOID:0000000012590959

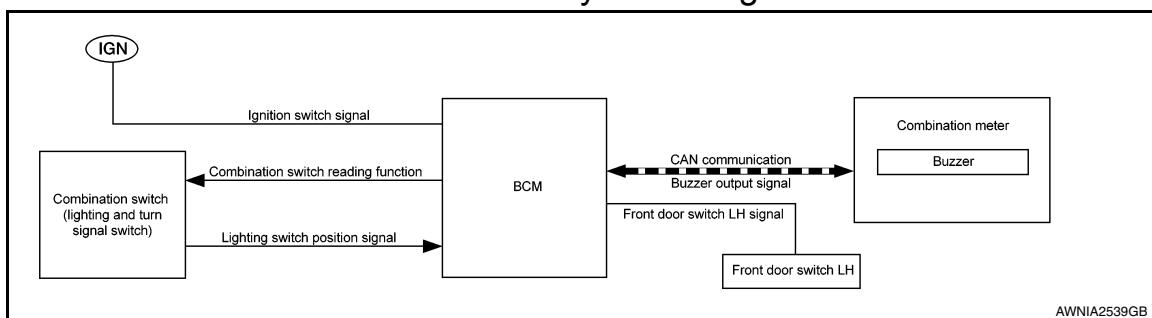

LIGHT REMINDER WARNING CHIME : System Description

INFOID:0000000012590960

DESCRIPTION

With ignition switch in OFF or ACC position, driver door open, and lighting switch in 1st or 2nd position, the light warning chime will sound.

- BCM detects ignition switch in OFF or ACC position, front door switch LH ON, and lighting switch in 1st or 2nd position. And then transmits buzzer output signal (light reminder warning chime) to combination meter with CAN communication line.
- When combination meter receives buzzer output signal (light reminder warning chime), it sounds the buzzer.

WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled:

- Lighting switch is at 1st or 2nd position
- Ignition switch is at OFF or ACC
- Front door switch LH is ON

SYSTEM

< SYSTEM DESCRIPTION >

WARNING CANCEL CONDITIONS


Warning is canceled if any of the following conditions is fulfilled:

- Lighting switch OFF
- Ignition switch ON
- Front door switch LH is OFF

SEAT BELT WARNING CHIME

SEAT BELT WARNING CHIME : System Diagram

INFOID:0000000012590961

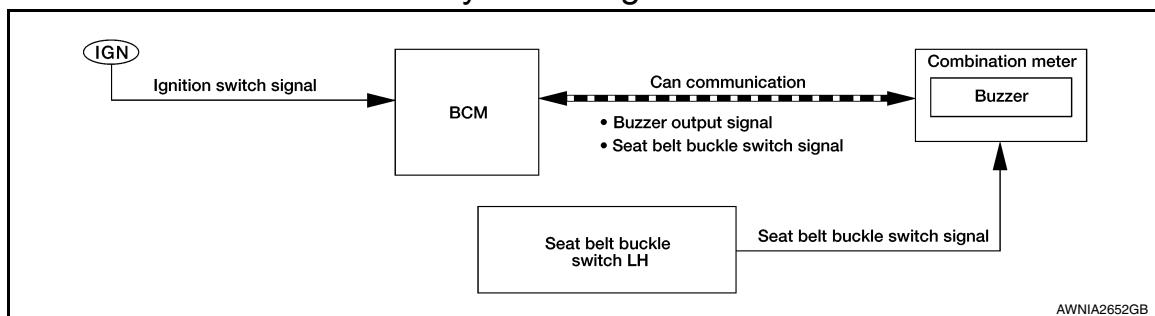

AWNIA2652GB

SEAT BELT WARNING CHIME : System Description

INFOID:0000000012590962

DESCRIPTION

With ignition switch turned ON and driver seat belt unfastened, seat belt warning chime will sound for approximately 6 seconds.

- BCM receives seat belt buckle switch LH signal from combination meter via CAN communication.
- BCM detects ignition switch turned ON and seat belt buckle switch LH is ON, and then transmits buzzer output signal (seat belt warning chime) to combination meter via CAN communication.
- When combination meter receives buzzer output signal (seat belt warning chime), it sounds the buzzer.

WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled:

- Ignition switch OFF→ON
- Seat buckle switch LH is ON (driver seat belt not fastened)

WARNING CANCEL CONDITIONS


Cancels the warning if any of the following conditions is fulfilled:

- Ignition switch OFF
- Seat buckle switch LH is OFF (driver seat belt fastened)
- 90 seconds have passed since the start of the warning

PARKING BRAKE RELEASE WARNING CHIME

PARKING BRAKE RELEASE WARNING CHIME : System Diagram

INFOID:0000000012590963

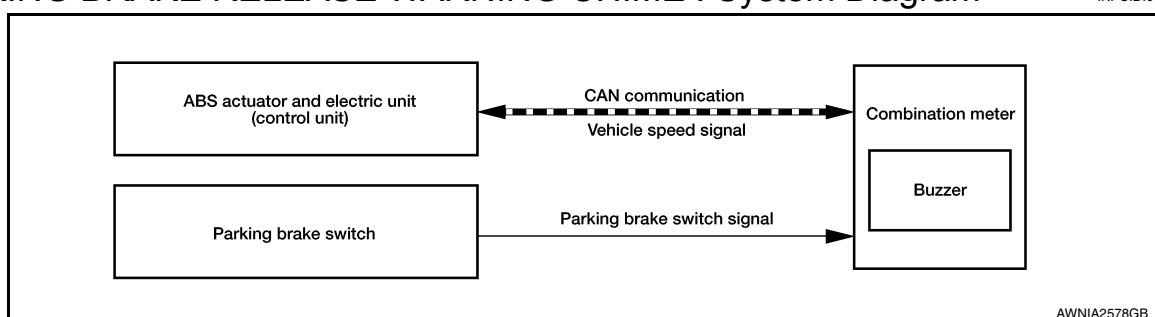

AWNIA2578GB

PARKING BRAKE RELEASE WARNING CHIME : System Description

INFOID:0000000012590964

DESCRIPTION

SYSTEM

< SYSTEM DESCRIPTION >

- The combination meter receives the vehicle speed signal from the ABS actuator and electric unit (control unit) via CAN communication line.
- The combination meter judges whether the parking brake is released using the parking brake switch signal from the parking brake switch, and sounds the warning buzzer if necessary.

WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled:

- Vehicle speed is approximately 4.3 MPH (7 km/h) or higher
- Parking brake switch ON

WARNING CANCEL CONDITIONS

Warning is canceled if any of the following conditions is fulfilled:

- Vehicle speed is approximately 1.9 MPH (3 km/h) or less
- Parking brake switch OFF

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (METER)

Description

INFOID:0000000012818941

COMBINATION METER SELF-DIAGNOSIS MODE

The following meter functions can be checked during Combination Meter Self-Diagnosis Mode:

- Pointer sweep of speedometer, tachometer and gauges.
- Illumination of all LCD segments and color patterns for meter displays.
- Illumination of all lamps/LEDs that are controlled by the combination meter (regardless of switch status).


STARTING COMBINATION METER SELF-DIAGNOSIS MODE

NOTE:

- Check combination meter power supply and ground circuits if self-diagnosis mode does not start. Refer to [MWI-59, "COMBINATION METER : Diagnosis Procedure"](#). Replace combination meter if power supply and ground circuits are found to be normal and self-diagnosis mode does not start. Refer to [MWI-83, "Removal and Installation"](#).
- Combination meter self-diagnosis mode will function with the ignition switch in ON. Combination meter self-diagnosis mode will exit upon turning the ignition switch to OFF.

How to Initiate Self-Diagnosis Mode

1. Press and hold the trip reset switch while turning the ignition switch ON. After 2 seconds release trip reset switch, then press the trip reset switch 3 times within 7 seconds after the ignition switch is turned ON.
2. When the diagnosis function is activated, the meter illuminates all of the following:
 - Warning lights/indicators.
 - Meter assembly.
 - Information display color bars red, green, blue and white (1).
 - Odometer, trip A/B odometers and CVT indicator LCD display segments (2).
3. Pressing and holding the trip reset switch performs the pointer sweep test.

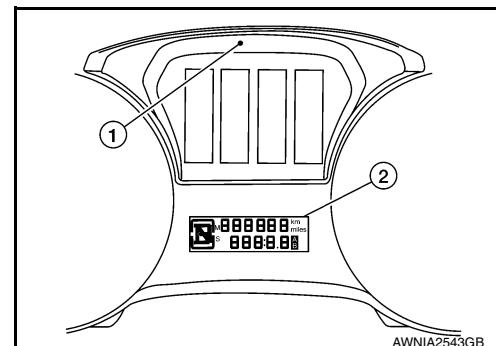

CONSULT Function (METER/M&A)

INFOID:0000000012818942

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

WCS

APPLICATION ITEMS

CONSULT can display each diagnostic item using the diagnostic test modes shown.

METER/M&A Diagnosis mode	Description
Self Diagnostic Result	Displays combination meter self-diagnosis results.
Data Monitor	Displays combination meter input/output data in real time.
Work support	Displays diagnosis procedure of each work item.
Warning History	Lighting history of the warning lamp and indicator lamp can be checked.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

SELF DIAG RESULT

Refer to [MWI-29, "DTC Index"](#).

DATA MONITOR

Display Item List

X: Applicable

Display item [Unit]	MAIN SIGNALS	Description
SPEED METER [mph or km/h]	X	Displays the value of vehicle speed signal.
SPEED OUTPUT [mph or km/h]	X	Vehicle speed signal value transmitted to other units via CAN communication.
ODO OUTPUT [mph or km/h]		Odometer signal value transmitted to other units via CAN communication.
TACHO METER [rpm]	X	Value of the engine speed signal received from ECM via CAN communication.
FUEL METER [L]	X	Fuel level indicated on combination meter.
W TEMP METER [°F] or [°C]	X	Displays the value of engine coolant temperature signal, which is input from ECM.
ABS W/L [On/Off]		Displays [ON/OFF] condition of ABS warning indicator.
VDC/TCS IND [On/Off]		Displays [ON/OFF] condition of VDC OFF indicator lamp.
SLIP IND [On/Off]		Displays [ON/OFF] condition of SLIP indicator lamp.
BRAKE W/L [On/Off]		Displays [ON/OFF] condition of brake warning indicator.
DOOR W/L [On/Off]		Displays [ON/OFF] condition of door warning message.
TRUNK/GLAS-H [On/Off]		Displays [ON/OFF] condition of trunk warning message.
HI-BEAM IND [On/Off]		Displays [ON/OFF] condition of high beam indicator.
TURN IND [On/Off]		Displays [ON/OFF] condition of turn indicator.
FR FOG IND [On/Off]		Displays [ON/OFF] condition of front fog lamp indicator.
LIGHT IND [On/Off]		Displays [ON/OFF] condition of light indicator.
OIL W/L [On/Off]		Displays [ON/OFF] condition of low oil pressure warning message.
MIL [On/Off]		Displays [ON/OFF] condition of malfunction indicator.
CRUISE IND [On/Off]		Displays [ON/OFF] condition of CRUISE indicator in the information display.
CRUISE W/L [On/Off]		Displays [ON/OFF] condition of tire CRUISE warning message.
CVT IND [On/Off]		Displays [ON/OFF] condition of CVT indicator in the information display.
SET IND [On/Off]		Displays [ON/OFF] condition of SET indicator in the information display.
O/D OFF IND [On/Off]		Displays [ON/OFF] condition of O/D OFF indicator.

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description	
FUEL W/L [On/Off]		Displays [ON/OFF] condition of low-fuel warning message.	A
WASHER W/L [On/Off]		Displays [ON/OFF] condition of low washer fluid warning message.	B
AIR PRES W/L [On/Off]		Displays [ON/OFF] condition of tire pressure warning lamp.	C
KEY G/Y W/L [On/Off]		Displays [ON/OFF] condition of key green warning lamp.	D
EPS W/L [On/Off]		Displays [ON/OFF] condition of EPS warning indicator.	E
LCD		Displays the value of Intelligent Key system message indication.	F
ACC SET SPEED [Off, km/h or mph]		Displays OFF or SET vehicle speed status in the information display.	G
ACC UNIT [On/Off]		Displays [ON/OFF] condition of display unit in the information display.	H
SHIFT IND [P, R, N, D, DS]		Displays [P, R, N, D, DS] shift selector position.	I
FUEL CAP W/L [On/Off]		Displays [ON/OFF] condition of loose fuel cap warning message.	J
O/D OFF SW [On/Off]		Displays [ON/OFF] condition of O/D OFF switch.	K
M RANGE SW [On/Off]		Displays [ON/OFF] condition of manual mode switch.	L
NM RANGE SW [On/Off]		Displays [ON/OFF] condition of non-manual mode switch.	M
AT SFT UP SW [On/Off]		Displays [ON/OFF] condition of manual mode shift up switch.	N
AT SFT DWN SW [On/Off]		Displays [ON/OFF] condition of manual mode shift down switch.	O
ST SFT UP SW [On/Off]		Displays [ON/OFF] condition of paddle shift up switch.	P
ST SFT DWN SW [On/Off]		Displays [ON/OFF] condition of paddle shift down switch.	Q
PKB SW [On/Off]		Displays [ON/OFF] condition of parking brake switch.	R
BUCKLE SW [On/Off]		Status of seat belt buckle switch LH.	S
BRAKE OIL SW [On/Off]		Displays [ON/OFF] condition of brake fluid level switch.	T
PASS BUCKLE SW [On/Off]		Status of passenger seat belt buckle switch RH.	U
DISTANCE [Mi] or [km]		Displays distance to empty.	V
OUTSIDE TEMP [°F or °C]		Displays the ambient air temperature which is input from the ambient sensor.	WCS
FUEL LOW SIG [On/Off]		Displays [ON/OFF] condition of low-fuel warning signal.	
BUZZER [On/Off]	X	Buzzer status (in the combination meter) is detected from the buzzer output signal received from each unit via CAN communication and the warning output condition of the combination meter.	
BATTERY CIRCUIT STATUS [NORMAL/OPEN]		Displays [NORMAL/OPEN] condition of battery circuit status.	

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
SONAR SET AVA [Available/Unavailable]		Displays [AVAILABLE/UNAVAILABLE] condition of meter setting.
STRG SW INPUT [SW1,SW2,SW3,SW4,SW5,SW6,S W7,SW8,SW9,SW10]		Displays [SW1,SW2,SW3,SW4,SW5,SW6,SW7,SW8,SW9,SW10] condition of steering switch.
ITS SONAR SET OUTPUT		Displays status of sonar.
SONAR DET STATUS [ON/OFF]		Displays [ON/OFF] condition of sonar detection area.
SONAR WARN [OFF/SENSOR DEACTIVE/SEN- SOR ERROR]		Displays [OFF/SENSOR DEACTIVE/SENSOR ERROR] condition of sonar warning.
SONAR DET DSP RL [ON/OFF]		Displays [ON/OFF] condition of RL sonar detection display.
SONAR DET DSP AREA RL [ON/OFF]		Displays [ON/OFF] condition of RL sonar detection area image.
SONAR DET DSP RR [ON/OFF]		Displays [ON/OFF] condition of RR sonar detection display.
SONAR DET DSP AREA RR [ON/OFF]		Displays [ON/OFF] condition of RR sonar detection area image.
SONAR DET DSP FL [ON/OFF]		Displays [ON/OFF] condition of FL sonar detection display.
SONAR DET DSP AREA FL [ON/OFF]		Displays [ON/OFF] condition of FL sonar detection area image.
SONAR DET DSP FR [ON/OFF]		Displays [ON/OFF] condition of FR sonar detection display.
SONAR DET DSP AREA FR [ON/OFF]		Displays [ON/OFF] condition of FR sonar detection area image.
SONAR DIST DSP [ON/OFF]		Displays sonar distance status.
BSW IND [On/Off]		Displays [ON/OFF] condition of BSW warning indicator message in the information display.
LDW IND [On/Off]		Displays [ON/OFF] condition of LDW warning indicator message in the information display.
TPMS MALF [On/Off]		Displays [ON/OFF] condition of TPMS warning indicator.

WORK SUPPORT

Work support item	Description
Outside air temperature diagnosis	
Fuel meter diagnosis (Analog pointer)	A possible malfunction can be narrowed down by following the displayed instructions.
Warning/Indicator lamp diagnosis	

WARNING HISTORY

Special menu

Display item	Description
W/L ON HISTORY	Lighting history of warning lamp and indicator lamp can be checked.

W/L ON HISTORY

- “W/L ON HISTORY” indicates the “TIME” when the warning/ indicator lamp is turned on.
- The “TIME” above is:

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

- 0: The condition that the warning/indicator lamp has been turned on 1 or more times after starting the engine and waiting for 30 seconds.
- 1 - 39: The number of times the engine was restarted after the 0 condition.
- NO W/L ON HISTORY: No warning/indicator lamp history is stored.

NOTE:

- W/L ON HISTORY is not stored for approximately 30 seconds after the engine starts.
- Brake warning lamp does not store any history when the parking brake is applied or the brake fluid level gets low.

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000012818943

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none">• The vehicle specification can be read and saved.• The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×	×		
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Exterior lamp	HEADLAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×	×		
Air conditioner	AIR CONDITIONER			×				
Intelligent Key system	INTELLIGENT KEY		×	×	×	×		
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×			
Trunk open	TRUNK			×				
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×				

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

System	Sub System	Direct Diagnostic Mode					
		ECU Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration
Signal buffer system	SIGNAL BUFFER			x	x		
TPMS	AIR PRESSURE MONITOR		x	x	x		

BUZZER

BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:0000000012818944

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
TAIL LAMP SW [On/Off]	Indicates condition of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.

ACTIVE TEST

Test Item	Description
SEAT BELT WARN TEST	This test is able to check seat belt warning chime operation [On/Off].
LIGHT WARN ALM	This test is able to check light warning chime operation [On/Off].
REVERSE WARNING	This test is able to check reverse warning chime operation [On/Off].

A
B
C
D

E

F

G

H

I

J

K

L

M

WCS

O

P

BCM, COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM, COMBINATION METER

List of ECU Reference

INFOID:0000000012590969

ECU	Reference
BCM	BCS-31, "Reference Value"
	BCS-50, "Fail_Safe"
	BCS-51, "DTC_Inspection_Priority_Chart"
	BCS-52, "DTC_Index"
COMBINATION METER	MWI-23, "Reference Value"
	MWI-28, "Fail-Safe"
	MWI-29, "DTC Index"

WARNING CHIME SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM

WARNING CHIME SYSTEM

Wiring Diagram

INFOID:0000000012590970

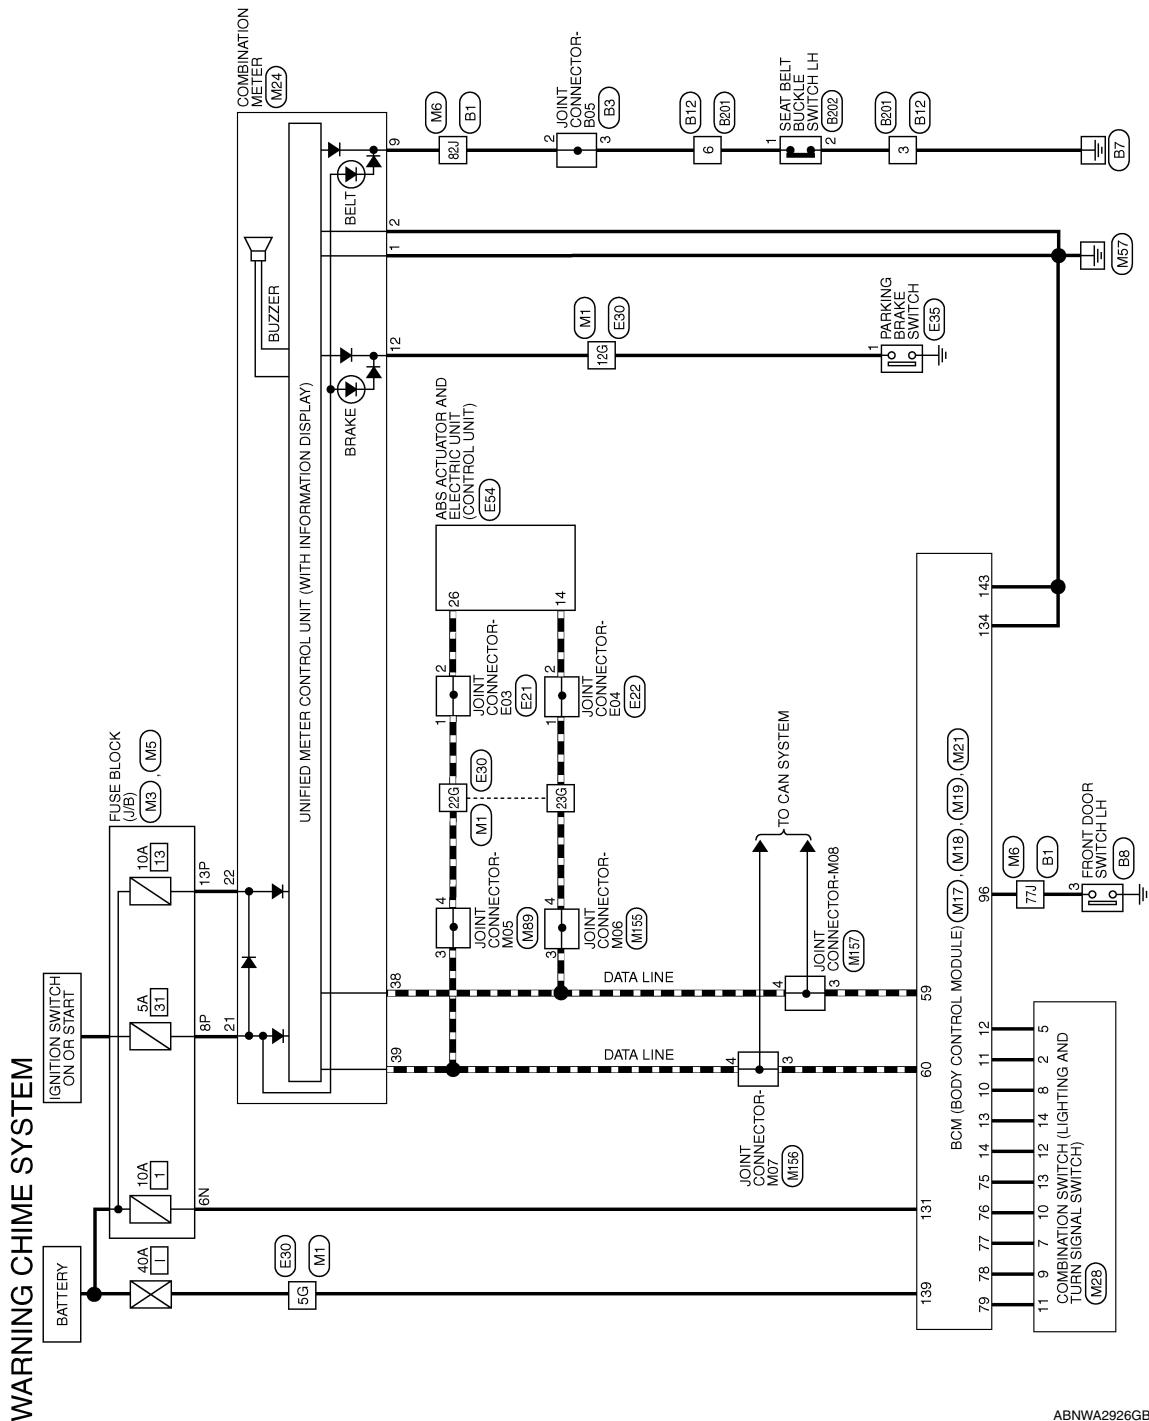


WARNING CHIME SYSTEM


< WIRING DIAGRAM >

WARNING CHIME SYSTEM CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

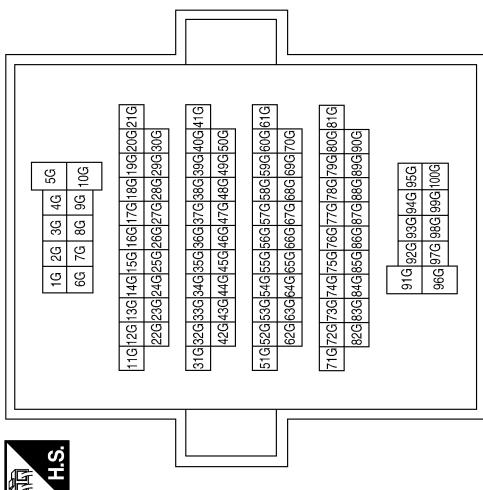

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

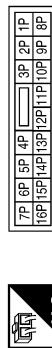


Terminal No.	Color of Wire	Signal Name
8P	BR	-
13P	G	-

ABNIA3633GB


WARNING CHIME SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
77J	BR	-
82J	V	-

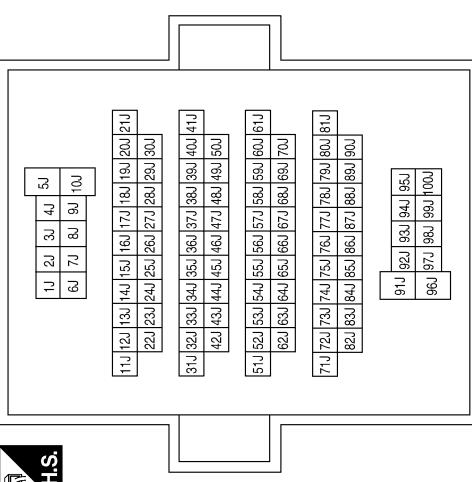


Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

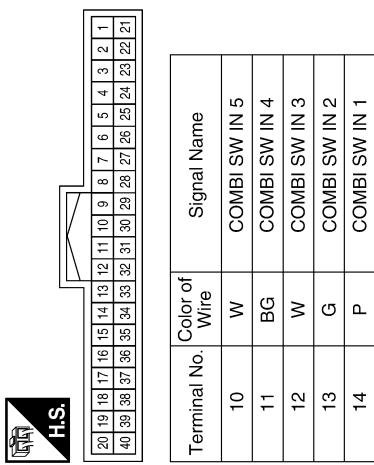

Terminal No.	Color of Wire	Signal Name
10	W	COMBI SW IN 5
11	BG	COMBI SW IN 4
12	W	COMBI SW IN 3
13	G	COMBI SW IN 2
14	P	COMBI SW IN 1

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY

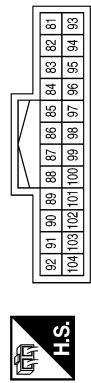

Terminal No.	Color of Wire	Signal Name
96	BR	DR DOOR SW

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z


WCS

ABNIA3634GB

WARNING CHIME SYSTEM

[**< WIRING DIAGRAM >**](#)

Connector No.	M21
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

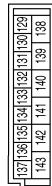


Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND2
139	W	BAT POWER F/L
143	B	GND1

Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
1	B	GND1	1	B	GND1
2	B	GND2	2	B	GND2
9	V	DR BUCKLE SW	9	V	DR BUCKLE SW
12	G	PKB	12	G	PKB
21	BR	IGN	21	BR	IGN
22	G	BAT	22	G	BAT
38	P	CAN-L	38	P	CAN-L
39	L	CAN-H	39	L	CAN-H

WARNING CHIME SYSTEM

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

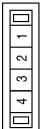


Connector No.	M89
Connector Name	JOINT CONNECTOR-M05
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
9	P	-
10	W	-
11	G	-
12	P	-
13	BG	-
14	G	-

Connector No.	M28
Connector Name	COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH)
Connector Color	WHITE

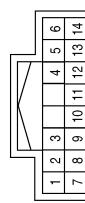


Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
2	BG	-	3	L	-
5	W	-	4	L	-
7	R	-			
8	W	-			

AANIA3116GB

WARNING CHIME SYSTEM

< WIRING DIAGRAM >

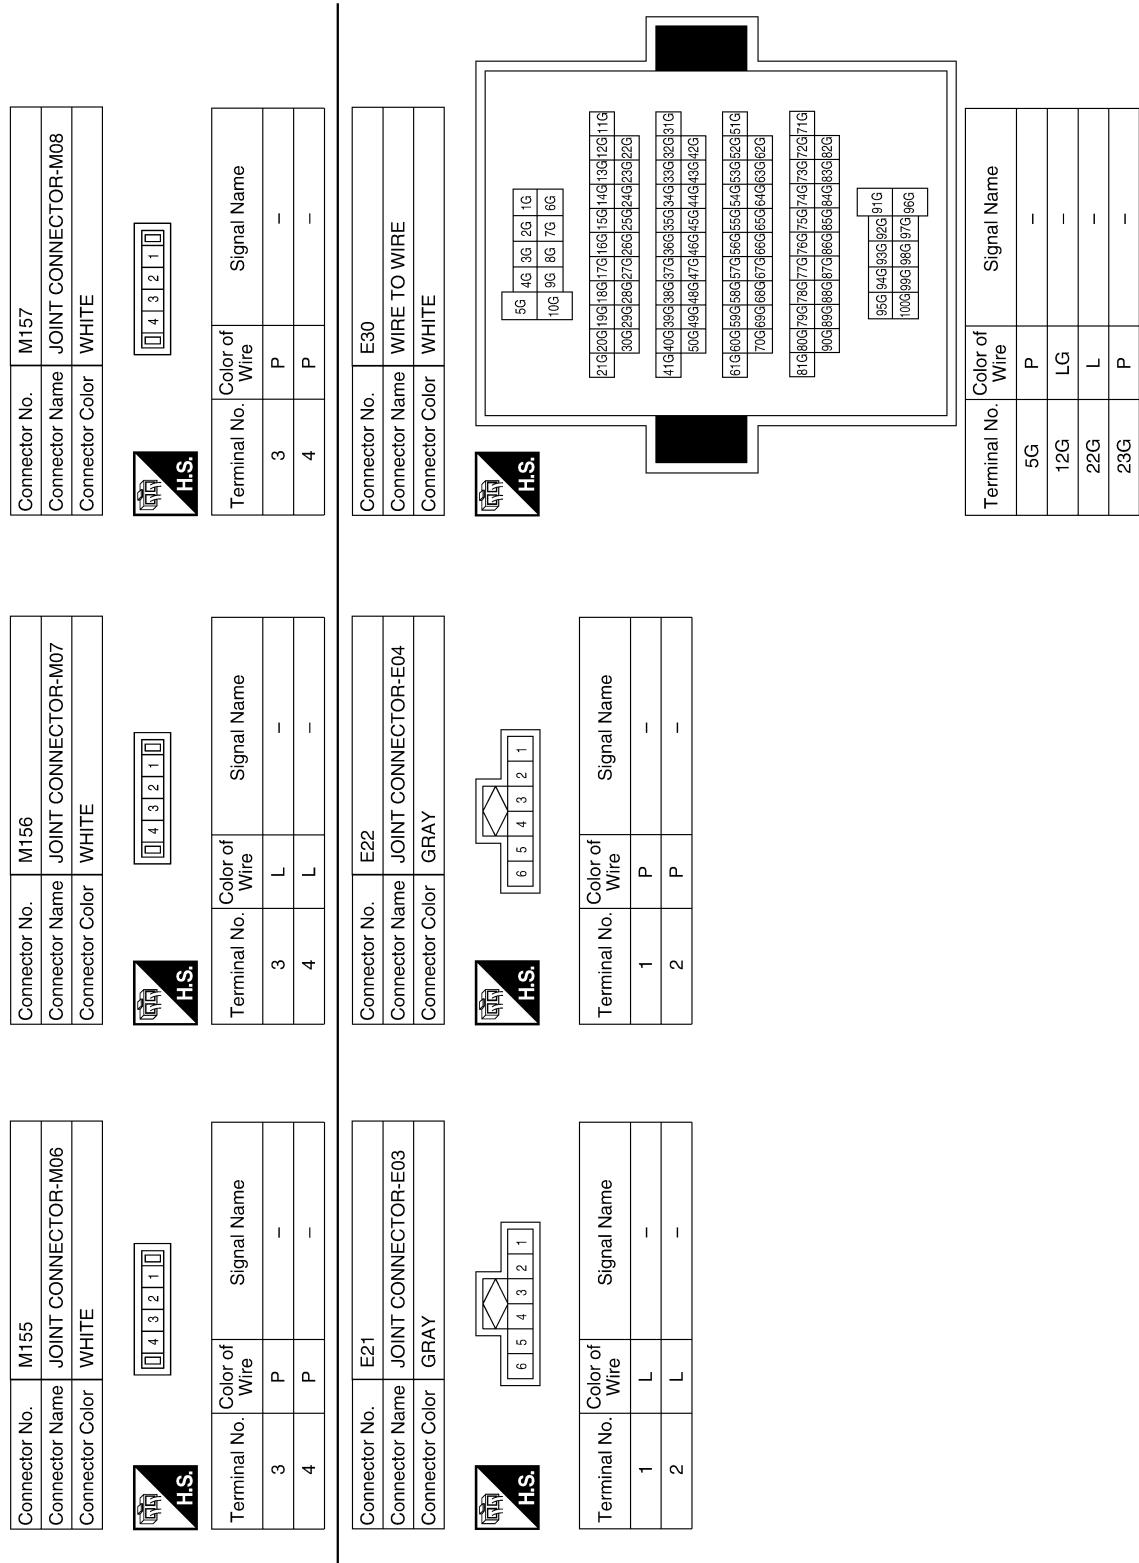

ABNIA3636GB

A B C D E F G H I J K L M P O WCS

WARNING CHIME SYSTEM

< WIRING DIAGRAM >

Connector No.	E35
Connector Name	PARKING BRAKE SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
14	P	CANL
26	L	CAN-H

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
77J	L	-
82J	LG	-

Connector No.	B3
Connector Name	JOINT CONNECTOR-B05
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	3	2
5	1	-

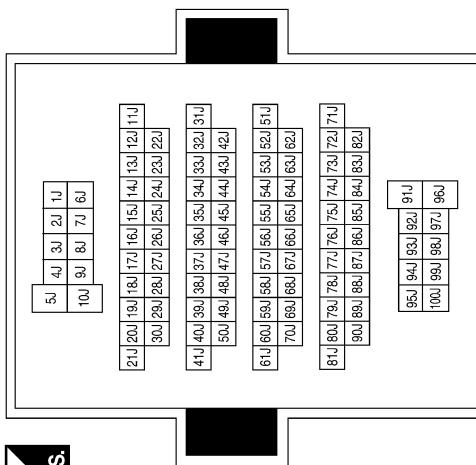


ABNIA3637GB

WARNING CHIME SYSTEM

< WIRING DIAGRAM >


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

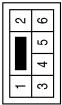


Terminal No.	Color of Wire	Signal Name
3	B	-
6	LG	-

Connector No.	B12
Connector Name	WIRE TO WIRE
Connector Color	WHITE

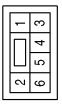


Terminal No.	Color of Wire	Signal Name
3	B	-
6	LG	-

Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE

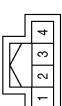

Terminal No.	Color of Wire	Signal Name
3	L	-

Connector No.	B202
Connector Name	SEAT BELT BUCKLE SWITCH LH
Connector Color	WHITE

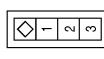

Terminal No.	Color of Wire	Signal Name
1	O	-
2	B	-

AANIA3035GB

WCS

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000012590971

OVERALL SEQUENCE

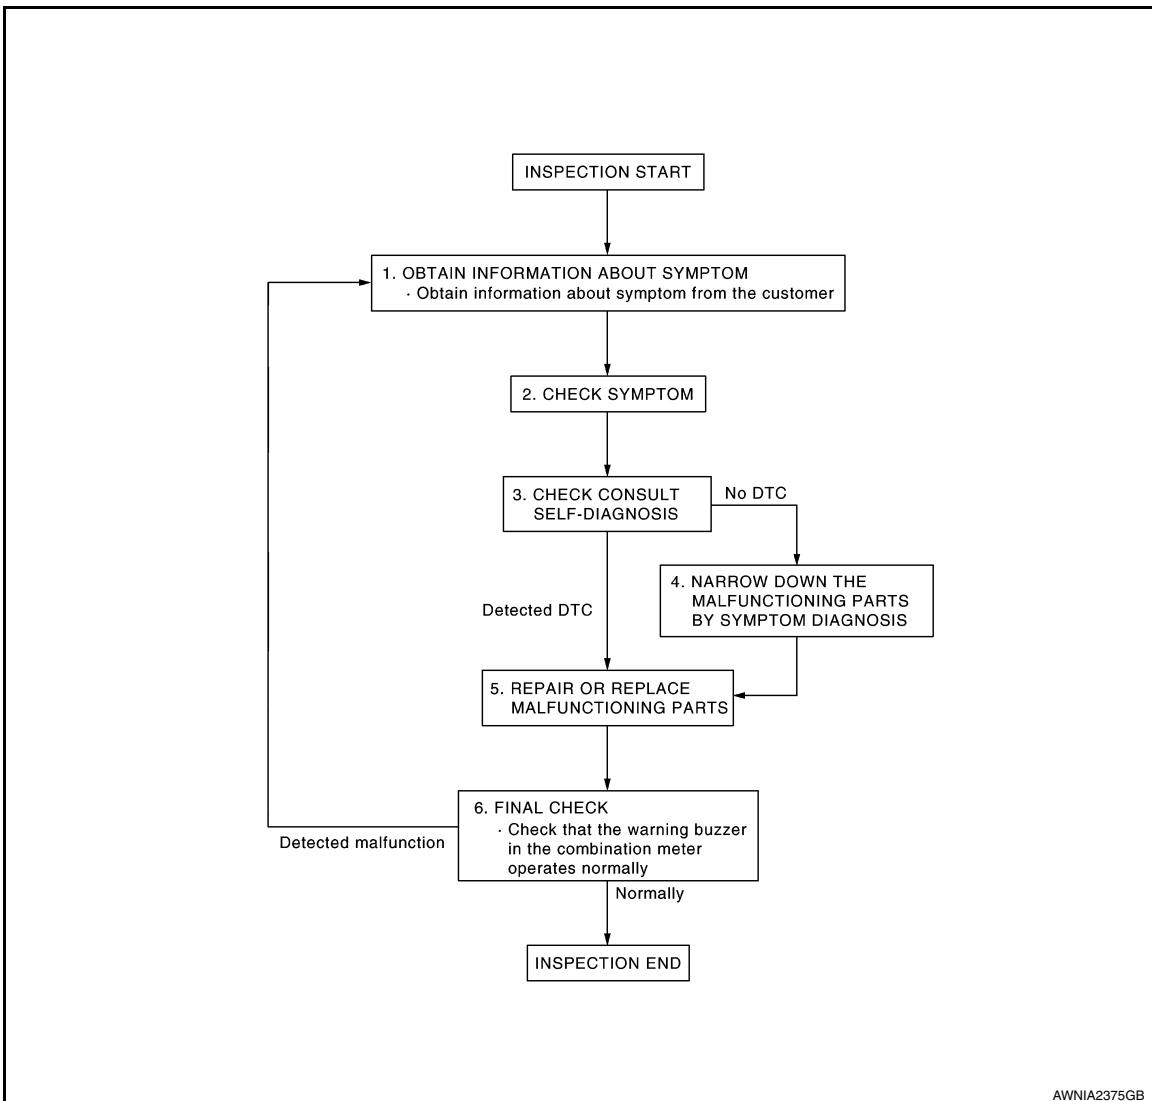

AWNIA2375GB

DETAILED FLOW

1. OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

>> GO TO 2.

2. CHECK SYMPTOM

- Check the symptom based on the information obtained from the customer.
- Check if any other malfunctions are present.

>> GO TO 3.

3. CHECK CONSULT SELF-DIAGNOSIS RESULTS

Connect CONSULT and perform Self-Diagnosis. Refer to [MWI-29, "DTC Index"](#).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Are self-diagnosis results normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

A

4. NARROW DOWN MALFUNCTIONING PARTS BY SYMPTOM DIAGNOSIS

Perform symptom diagnosis and repair or replace the identified malfunctioning parts.

B

>> GO TO 5.

C

5. REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace malfunctioning parts.

D

NOTE:

If DTC is displayed, erase DTC after repairing or replacing malfunctioning parts.

E

>> GO TO 6.

F

6. FINAL CHECK

Check that the warning buzzer in the combination meter operates normally.

G

Does it operate normally?

H

- YES >> Inspection End.

I

- NO >> GO TO 1.

J

K

L

M

WCS

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT COMBINATION METER

COMBINATION METER : Diagnosis Procedure

INFOID:0000000012818945

Regarding Wiring Diagram information, refer to [MWI-33, "Wiring Diagram"](#).

1. CHECK FUSES

Check that the following fuses are not blown.

Unit	Power source	Fuse No.
Combination meter	Battery	13
	Ignition switch ACC or ON	25
	Ignition switch ON or START	31

Is the fuse blown?

- YES >> Replace the blown fuse after repairing the affected circuit.
NO >> GO TO 2.

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect combination meter connector.
2. Check voltage between combination meter harness connector M24 terminals 5, 21, 22 and ground.

Terminals		Ignition switch position					
Connector	Terminal	(+)	(-)	OFF	ACC	ON	START
M24	22	Ground		Battery voltage	Battery voltage	Battery voltage	Battery voltage
	21			0V	0V	Battery voltage	Battery voltage
	5			0V	Battery voltage	Battery voltage	0V

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connectors.

3. GROUND CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Check continuity between combination meter harness connector M24 terminals 1, 2 and ground.

Terminals		Continuity	
Connector	Terminal	(+)	(-)
M24	1	Ground	Yes
	2		

Is the inspection result normal?

- YES >> Inspection End.
NO >> Repair or replace harness or connectors.

BCM (BODY CONTROL MODULE)

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:000000012818946

Regarding Wiring Diagram information, refer to [BCS-55, "Wiring Diagram"](#).

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Terminal No.	Signal name	Fuse and fusible link No.
139	Fusible link battery power	I (40A)
131	BCM battery fuse	1 (10A)

Is the fuse or fusible link blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connector M21.
2. Check voltage between BCM connector M21 terminals 131, 139 and ground.

BCM		Ground	Voltage (Approx.)
Connector	Terminal		
M21	131	—	Battery voltage
	139		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connectors.

3. CHECK GROUND CIRCUIT

Check continuity between BCM connector M21 terminals 134, 143 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M21	134	—	Yes
	143		

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness or connectors.

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

METER BUZZER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

METER BUZZER CIRCUIT

Description

INFOID:0000000012590974

- The buzzer for warning chime system is installed in the combination meter.
- The combination meter sounds the alarm buzzer based on the signals transmitted from various units.

Component Function Check

INFOID:0000000012590975

1. CHECK OPERATION OF METER BUZZER

1. Select "BUZZER" of "BCM" using CONSULT.
2. Perform "LIGHT WARN ALM" or "SEAT BELT WARN TEST" in "Active Test".

Does meter buzzer activate?

- YES >> Inspection End.
NO >> Refer to [WCS-28, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000012590976

1. CHECK COMBINATION METER INPUT SIGNAL

Select "Data Monitor" of "METER/M&A" using CONSULT and check the "BUZZER" monitor value.

Monitor item	Condition	Status
BUZZER	Under the condition of buzzer input	On
	Except above	Off

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-83, "Removal and Installation"](#).
NO >> Replace BCM. Refer to [BCS-81, "Removal and Installation"](#).

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

Description

INFOID:0000000012590977

Transmits a seat belt buckle switch LH signal to the combination meter.

Component Function Check

INFOID:0000000012590978

1. CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Monitor seat belt warning lamp while fastening and unfastening the driver seat belt buckle.

Condition	Warning lamp status
When driver seat belt buckle is unfastened	ON
When driver seat belt buckle is fastened	OFF

Is the inspection result normal?

- YES >> Inspection End.
NO >> Refer to [WCS-29, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000012590979

Regarding Wiring Diagram information, refer to [WCS-17, "Wiring Diagram"](#).

1. CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between combination meter harness connector M24 terminal 9 and ground.

Combination meter		Condition	Voltage (Approx.)	
Connector	Terminals			
M24	(+)	(-)	When driver seat belt is fastened	12 V
	9	Ground	When driver seat belt is unfastened	0 V

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-83, "Removal and Installation"](#).
NO >> GO TO 2.

2. CHECK SEAT BELT BUCKLE SWITCH LH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter harness connector M24 and seat belt buckle switch LH harness connector B202.
3. Check continuity between combination meter harness connector M24 terminal 9 and seat belt buckle switch LH harness connector B202 terminal 1.

Combination meter		Seat belt buckle switch LH		Continuity
Connector	Terminal	Connector	Terminal	
M24	9	B202	1	Yes

4. Check continuity between combination meter harness connector M24 terminal 9 and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M24	9		No

Is the inspection result normal?

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3. CHECK SEAT BELT BUCKLE SWITCH LH GROUND CIRCUIT

Check harness continuity between seat belt buckle switch LH harness connector B202 terminal 2 and ground.

Seat belt buckle switch LH		Ground	Continuity
Connector	Terminal		
B202	2		Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness or connector.

Component Inspection

INFOID:0000000012590980

1. CHECK SEAT BELT BUCKLE SWITCH LH

1. Turn ignition switch OFF.
2. Disconnect the seat belt buckle switch LH.
3. Check continuity between the seat belt buckle switch LH terminals 1 and 2.

Terminal		Condition	Continuity
1	2	When seat belt is fastened	No
		When seat belt is unfastened	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace the seat belt buckle switch LH. Refer to [SR-36, "Removal and Installation"](#).

WARNING CHIME SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

WARNING CHIME SYSTEM SYMPTOMS

Symptom Table

INFOID:0000000012590981

CAUTION:
Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom	Possible cause	Inspection item
The light reminder warning does not sound.	<ul style="list-style-type: none">• Harness between BCM and front door switch LH• Front door switch LH• BCM• Combination meter	Refer to WCS-33 .
The parking brake release warning continues sounding or does not sound.	<ul style="list-style-type: none">• Harness between combination meter and parking brake switch• Parking brake switch• BCM• Combination meter	Refer to WCS-32 .
The seat belt warning continues sounding or does not sound.	<ul style="list-style-type: none">• Harness between combination meter and seat belt buckle switch LH• Seat belt buckle switch LH• BCM• Combination meter	Refer to WCS-34 .
Warning chime does not sound at all.	<ul style="list-style-type: none">• BCM• Combination meter	Refer to WCS-28 .

THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

Description

INFOID:0000000012590982

- The parking brake warning buzzer sounds continuously during vehicle travel though the parking brake is released
- The parking brake warning buzzer does not sound at all even though driving the vehicle with the parking brake applied.

Diagnosis Procedure

INFOID:0000000012590983

1. CHECK PARKING BRAKE WARNING LAMP

1. Start the engine.
2. Check the operation of the brake warning lamp by operating the parking brake.

Condition	Warning lamp status
Parking brake applied	ON
Parking brake released	OFF

Is the inspection result normal?

- YES >> Replace the combination meter. Refer to [MWI-83, "Removal and Installation"](#).
NO >> GO TO 2.

2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

Check the parking brake switch signal circuit. Refer to [MWI-64, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connector.

3. CHECK PARKING BRAKE SWITCH UNIT

Check the parking brake switch. Refer to [MWI-64, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace the combination meter. Refer to [MWI-83, "Removal and Installation"](#).
NO >> Replace the parking brake switch. Refer to [PB-7, "Exploded View"](#).

THE LIGHT REMINDER WARNING DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

THE LIGHT REMINDER WARNING DOES NOT SOUND

Description

INFOID:0000000012590984

Light reminder warning does not sound even though headlamp is illuminated.

Diagnosis Procedure

INFOID:0000000012590985

1. CHECK METER BUZZER OPERATION

Perform meter buzzer function check. Refer to [WCS-28, "Component Function Check"](#).

Is the meter buzzer function normal?

YES >> GO TO 2.

NO >> Refer to [WCS-28, "Diagnosis Procedure"](#).

2. CHECK COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) OPERATION

Check that the headlamps operate normally by operating the combination switch (lighting and turn signal switch).

Do they operate normally?

YES >> GO TO 3.

NO >> Refer to [EXL-80, "Work Flow"](#) (Halogen type headlamp) or [EXL-213, "Work Flow"](#) (LED type headlamp).

3. CHECK FRONT DOOR SWITCH LH SIGNAL CIRCUIT

Check the front door switch LH signal circuit. Refer to [DLK-99, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connector.

4. CHECK FRONT DOOR SWITCH LH

Check the front door switch LH. Refer to [DLK-101, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the BCM. Refer to [BCS-81, "Removal and Installation"](#).

NO >> Replace the front door switch LH. Refer to [DLK-216, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

Description

INFOID:0000000012590986

- Seat belt warning does not sound even though driver seat belt is not fastened.
- Seat belt warning sounds even though driver seat belt is fastened.

Diagnosis Procedure

INFOID:0000000012590987

1. CHECK WARNING CHIME OPERATION

1. Select "BUZZER" or "BCM" using CONSULT.
2. Perform "SEAT BELT WARN TEST" in "Active Test".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace combination meter. Refer to [MWI-83, "Removal and Installation"](#).

2. CHECK SEAT BELT WARNING LAMP

1. Turn ignition switch ON.
2. Check the operation of the seat belt warning lamp in the combination meter.

Condition	Seat belt warning lamp
Driver seat belt fastened	OFF
Driver seat belt not fastened	ON

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-81, "Removal and Installation"](#).

NO >> GO TO 3.

3. CHECK SEAT BELT BUCKLE SWITCH LH CIRCUIT

Check the seat belt buckle switch LH circuit. Refer to [WCS-29, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connector.

4. CHECK SEAT BELT BUCKLE SWITCH LH

Check the seat belt buckle switch LH. Refer to [WCS-30, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the combination meter. Refer to [MWI-83, "Removal and Installation"](#).

NO >> Replace the seat belt buckle switch LH. Refer to [SR-36, "Removal and Installation"](#).