

SECTION **IDX**
ALPHABETICAL INDEX

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve [TF-94](#), [TF-152](#), [TF-165](#)
4WD - Wiring diagram [TF-24](#)
4WD shift switch [TF-66](#)
4WD solenoid valve [TF-90](#), [TF-152](#), [TF-165](#)
4WD system description [TF-15](#)
4WD system diagram [TF-19](#)

A

A/C air flow [ATC-29](#), [MTC-28](#)
A/C compressor clutch removal and installation .. [ATC-179](#), [MTC-154](#)
A/C compressor mounting [ATC-178](#), [MTC-153](#)
A/C compressor precaution [ATC-11](#), [MTC-11](#)
A/C compressor special service tool . [ATC-14](#), [MTC-14](#)
A/C control operation (auto A/C) [ATC-26](#), [MTC-26](#)
A/C diagnostic work flow (auto A/C) ... [ATC-131](#), [MTC-118](#)
A/C evaporator [ATC-187](#), [MTC-162](#)
A/C HFC134a (R134a) system identification [ATC-7](#), [MTC-7](#)
A/C HFC134a (R134a) system precaution [ATC-5](#), [MTC-5](#)
A/C HFC134a (R134a) system service procedure [ATC-174](#), [MTC-149](#)
A/C HFC134a (R134a) system service tools .. [ATC-14](#), [MTC-14](#)
A/C HFC134a system service equipment precaution ... [ATC-11](#), [MTC-11](#)
A/C lubricant (R134a) [ATC-22](#), [MTC-22](#)
A/C lubrication oil [ATC-22](#), [MTC-22](#)
A/C operational check [ATC-57](#), [ATC-60](#), [MTC-53](#), [MTC-55](#)
A/C self-diagnoses (auto A/C) [ATC-55](#), [ATC-131](#), [MTC-118](#)
A/C service data specification [ATC-194](#), [MTC-169](#)
A/C trouble diagnoses (auto A/C) [ATC-33](#), [MTC-32](#)
A/C, A - Wiring diagram [ATC-43](#), [MTC-42](#)
A/T fluid checking [AT-13](#), [AT-50](#), [MA-22](#)
A/T fluid cooler cleaning [AT-13](#)
A/T fluid replacement [AT-13](#), [MA-24](#)
A/T fluid temperature sensor [AT-126](#)
A/T IND - Wiring diagram [DI-40](#)
A/T indicator [DI-40](#)
A/T shift lock system [AT-222](#)
A/T trouble diagnoses [AT-41](#)
ABS - Wiring diagram [BRC-16](#)
ABS (anti-lock brake system) [BRC-7](#)
Accelerator control system [ACC-2](#)
Accelerator pedal position (APP) sensor . [EC-570](#), [EC-576](#), [EC-590](#)
Accelerator pedal released position learning [EC-89](#)
AF1B1-Wiring diagram [EC-459](#), [EC-468](#), [EC-477](#), [EC-487](#), [EC-498](#), [EC-508](#), [EC-520](#)
AF1B2-Wiring diagram [EC-461](#), [EC-470](#), [EC-479](#), [EC-489](#), [EC-500](#), [EC-510](#), [EC-522](#)
AF1HB1-Wiring diagram [EC-384](#)

AF1HB2-Wiring diagram [EC-386](#)
Aiming adjustment [LT-28](#), [LT-72](#)
Air bag [SRS-3](#)
Air cleaner and air duct [EM-14](#)
Air cleaner filter replacement [MA-16](#)
Air conditioner cut control [EC-28](#)
Air flow meter - See Mass air flow sensor [EC-171](#), [EC-180](#)
Air fuel ratio sensor 1 .. [EC-457](#), [EC-466](#), [EC-475](#), [EC-485](#), [EC-495](#), [EC-505](#), [EC-517](#)
Air fuel ratio sensor 1 heater [EC-383](#)
Air mix. door motor [ATC-70](#), [MTC-64](#)
Ambient sensor [ATC-136](#), [ATC-147](#)
Angular tightening application [EM-3](#)
APPS1 - Wiring diagram [EC-572](#)
APPS2 - Wiring diagram [EC-578](#)
APPS3 - Wiring diagram [EC-592](#)
ASC/BS - Wiring diagram [EC-552](#)
ASC/SW - Wiring diagram [EC-545](#)
ASCBOF - Wiring diagram [EC-629](#)
ASCD [EC-29](#)
ASCD (automatic speed control device) [ACS-2](#)
ASCD brake switch [EC-550](#), [EC-628](#)
ASCD indicator lamp [EC-635](#)
ASCD steering switch [EC-543](#)
ASCIND - Wiring diagram [EC-636](#)
ATP switch [TF-107](#), [TF-110](#), [TF-115](#)
Audio [AV-6](#)
AUDIO - Wiring diagram [AV-13](#)
AUT/DP - Wiring diagram [SE-20](#)
Auto air conditioner - Wiring diagram [ATC-43](#), [MTC-42](#)
Auto anti-dazzling inside mirror [GW-70](#), [GW-71](#)
Autolamp [LT-44](#)
Automatic amplifier [ATC-61](#), [MTC-56](#)
Automatic drive positioner [SE-11](#)
Automatic transmission number [GI-49](#)
AV and NAVI control unit [AV-79](#)
AV communication line [AV-103](#)

B

Back door [BL-93](#)
Back door trim [EI-29](#)
Back sonar [DI-59](#)
BACK/L - Wiring diagram [LT-100](#)
Back-up lamp [LT-100](#)
Ball joint (front) [FSU-15](#)
Basic inspection [EC-71](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-12](#), [SC-19](#)
BCM (Body control module) [BCS-3](#)
Block heater [EM-74](#)
Blower motor ... [ATC-93](#), [ATC-151](#), [MTC-82](#), [MTC-126](#)
Body alignment [BL-169](#)
Body component parts [BL-156](#)
Body construction [BL-168](#)
Body exterior paint color [BL-155](#)
Body mounting [BL-154](#)

ALPHABETICAL INDEX

<p>Body repair BL-155</p> <p>Body sealing BL-165</p> <p>Bose speaker amp. AV-8</p> <p>Brake booster BR-16</p> <p>Brake fluid level MA-28</p> <p>Brake hydraulic line BR-11</p> <p>Brake inspection MA-28</p> <p>Brake lines and cables inspection MA-28</p> <p>Brake master cylinder BR-14</p> <p>Brake switch EC-550, EC-565, EC-628</p> <p>BRK/SW - Wiring diagram EC-566</p> <p>Bulb specifications LT-162</p> <p>Bumper, front EI-14</p> <p>Bumper, rear EI-16</p>	<p>Condenser ATC-185, MTC-160</p> <p>Connecting rod EM-92</p> <p>Connecting rod bearing clearance EM-92</p> <p>Connecting rod bushing clearance EM-92</p> <p>Console box - See Instrument panel IP-10</p> <p>CONSULT for VDC BRC-28</p> <p>CONSULT general information GI-37</p> <p>CONSULT-II for engine EC-124</p> <p>Control units (terminal arrangement) PG-70</p> <p>Control valve (A/T) AT-35</p> <p>Control valve (Transfer) TF-152, TF-165</p> <p>Controller Area Network (CAN) BRC-10, SE-17, LAN-16, LAN-45, LAN-77, LAN-111, LAN-143, LAN-177</p> <p>Converter housing installation AT-246, AT-249</p> <p>COOL/F - Wiring diagram EC-440</p> <p>Coolant mixture ratio MA-12</p> <p>Coolant replacement MA-13</p> <p>Cooling circuit (engine) CO-8</p> <p>Cooling fan CO-15</p> <p>Cooling fan motor EC-447</p> <p>Cooling unit (A/C evaporator) ATC-155, ATC-187, MTC-130, MTC-162</p> <p>Corrosion protection BL-162</p> <p>Crankcase ventilation system - See Positive crankcase ventilation EC-45</p> <p>Crankshaft EM-75</p> <p>Crankshaft position sensor (POS) EC-281</p> <p>Crash zone sensor SRS-56</p> <p>Cylinder block EM-74</p> <p>Cylinder block boring EM-95</p>
C	
<p>Camshaft EM-43</p> <p>Camshaft inspection EM-47</p> <p>Camshaft position sensor (PHASE) EC-288</p> <p>CAN - Wiring diagram . EC-161, AT-96, LAN-18, LAN-47, LAN-79, LAN-113, LAN-145, LAN-179</p> <p>CAN (Controller Area Network) BRC-10, SE-17, LAN-16, LAN-45, LAN-77, LAN-111, LAN-143, LAN-177</p> <p>CAN communication ... EC-31, EC-160, AT-95, TF-20, TF-113, BRC-10, SE-17, LAN-16, LAN-45, LAN-77, LAN-111, LAN-143, LAN-177</p> <p>Canister-See EVAP canister EC-35</p> <p>Center case (Transfer) TF-152, TF-165</p> <p>CHARGE - Wiring diagram SC-18</p> <p>Charging system SC-17</p> <p>Chassis and body maintenance MA-21</p> <p>Chassis and body maintenanceSchedule 1 MA-8</p> <p>Chassis and body maintenanceSchedule 2 MA-10</p> <p>CHIME - Wiring diagram DI-45</p> <p>Circuit breaker PG-65</p> <p>Closed loop control EC-25</p> <p>Closed loop control (Bank 1) EC-434</p> <p>Closed loop control (Bank 2) EC-434</p> <p>Clutch drum (Transfer) TF-152, TF-165</p> <p>Clutch pressure switch (Transfer) TF-152, TF-165</p> <p>Coil spring (front) FSU-10</p> <p>Collision diagnosis SRS-61</p> <p>Combination lamp, front, removal and installation . LT-30</p> <p>Combination lamp, rear, removal and installation .. LT-116</p> <p>Combination meter DI-5</p> <p>Combination switch LT-91</p> <p>COMBSW - Wiring diagram LT-91</p> <p>COMM - Wiring diagram AV-103</p> <p>COMPAS - Wiring diagram DI-27</p> <p>Compass DI-26</p> <p>Component Location (auto A/C) ATC-39, MTC-38</p> <p>Compressor clutch removal and installation ATC-179, MTC-154</p> <p>Compressor mounting ATC-178, MTC-153</p> <p>Compressor precaution ATC-11, MTC-11</p> <p>Compressor special service tool ATC-14, MTC-14</p>	<p>D/L/OCK - Wiring diagram BL-20</p> <p>Data link connector for Consult EC-126, EC-137</p> <p>Daytime light system LT-31</p> <p>Daytime running light - See Daytime light system .. LT-31</p> <p>Diagnosis sensor unit SRS-59</p> <p>Diagnostic trouble code (DTC) for OBD system . EC-8, EC-52</p> <p>Diagnostic trouble code (DTC) inspection priority chart EC-100</p> <p>Differential carrier assembly RFD-12</p> <p>Differential carrier disassembly RFD-14</p> <p>Differential gear oil replacement MA-25</p> <p>Dimensions GI-50</p> <p>Direct clutch solenoid valve AT-148, AT-150</p> <p>Display and amp. assembly ATC-61, MTC-56</p> <p>Display Control Unit AV-174</p> <p>Dome light - See Interior lamp LT-123</p> <p>Door glass GW-62, GW-65</p> <p>Door lock BL-126</p> <p>Door mirror lamp LT-123</p> <p>Door trim EI-29</p> <p>Door, front BL-123, GW-62</p> <p>Door, rear BL-123, GW-65</p> <p>Drive belt EM-12</p> <p>Drive chain (Transfer) TF-147, TF-174</p>
D	
<p>Camshaft EM-43</p> <p>Camshaft inspection EM-47</p> <p>Camshaft position sensor (PHASE) EC-288</p> <p>CAN - Wiring diagram . EC-161, AT-96, LAN-18, LAN-47, LAN-79, LAN-113, LAN-145, LAN-179</p> <p>CAN (Controller Area Network) BRC-10, SE-17, LAN-16, LAN-45, LAN-77, LAN-111, LAN-143, LAN-177</p> <p>CAN communication ... EC-31, EC-160, AT-95, TF-20, TF-113, BRC-10, SE-17, LAN-16, LAN-45, LAN-77, LAN-111, LAN-143, LAN-177</p> <p>Canister-See EVAP canister EC-35</p> <p>Center case (Transfer) TF-152, TF-165</p> <p>CHARGE - Wiring diagram SC-18</p> <p>Charging system SC-17</p> <p>Chassis and body maintenance MA-21</p> <p>Chassis and body maintenanceSchedule 1 MA-8</p> <p>Chassis and body maintenanceSchedule 2 MA-10</p> <p>CHIME - Wiring diagram DI-45</p> <p>Circuit breaker PG-65</p> <p>Closed loop control EC-25</p> <p>Closed loop control (Bank 1) EC-434</p> <p>Closed loop control (Bank 2) EC-434</p> <p>Clutch drum (Transfer) TF-152, TF-165</p> <p>Clutch pressure switch (Transfer) TF-152, TF-165</p> <p>Coil spring (front) FSU-10</p> <p>Collision diagnosis SRS-61</p> <p>Combination lamp, front, removal and installation . LT-30</p> <p>Combination lamp, rear, removal and installation .. LT-116</p> <p>Combination meter DI-5</p> <p>Combination switch LT-91</p> <p>COMBSW - Wiring diagram LT-91</p> <p>COMM - Wiring diagram AV-103</p> <p>COMPAS - Wiring diagram DI-27</p> <p>Compass DI-26</p> <p>Component Location (auto A/C) ATC-39, MTC-38</p> <p>Compressor clutch removal and installation ATC-179, MTC-154</p> <p>Compressor mounting ATC-178, MTC-153</p> <p>Compressor precaution ATC-11, MTC-11</p> <p>Compressor special service tool ATC-14, MTC-14</p>	<p>Differential carrier assembly RFD-12</p> <p>Differential carrier disassembly RFD-14</p> <p>Differential gear oil replacement MA-25</p> <p>Dimensions GI-50</p> <p>Direct clutch solenoid valve AT-148, AT-150</p> <p>Display and amp. assembly ATC-61, MTC-56</p> <p>Display Control Unit AV-174</p> <p>Dome light - See Interior lamp LT-123</p> <p>Door glass GW-62, GW-65</p> <p>Door lock BL-126</p> <p>Door mirror lamp LT-123</p> <p>Door trim EI-29</p> <p>Door, front BL-123, GW-62</p> <p>Door, rear BL-123, GW-65</p> <p>Drive belt EM-12</p> <p>Drive chain (Transfer) TF-147, TF-174</p>

ALPHABETICAL INDEX

Drive pinion diff. inspection [RFD-13](#)
Drive pinion height [RFD-18](#)
Drive shaft (rear) [RAX-7](#)
Driver air bag [SRS-46](#)
DTC work support [EC-133](#)
DTRL - Wiring diagram [LT-34](#)
Duct and grilles [ATC-169](#), [MTC-144](#)
DVD Player [AV-75](#)

E

ECM input/output signal [EC-116](#), [EC-138](#)
ECM power supply [EC-154](#), [EC-390](#)
ECM relay [EC-154](#)
ECM/PW - Wiring diagram [EC-391](#)
ECTS - Wiring diagram [EC-194](#)
Electric sunroof [RF-10](#)
Electric throttle control actuator [EC-394](#), [EC-396](#)
Electrical load signal circuit [EC-627](#)
Electrical units location [PG-62](#)
Electronic ignition (EI) system [EC-26](#)
Engine control circuit diagram [EC-114](#)
Engine control component parts location [EC-107](#)
Engine control module (ECM) [EC-380](#)
Engine control system diagram [EC-23](#)
Engine coolant [CO-10](#)
Engine coolant temperature sensor (ECTS) ... [EC-192](#),
[EC-205](#)
Engine fail-safe system [EC-102](#)
Engine oil [LU-7](#)
Engine oil filter replacement [MA-17](#)
Engine oil precautions [GI-7](#)
Engine oil replacement [MA-17](#)
Engine removal [EM-70](#)
Engine room cover [EM-11](#)
Engine serial number [GI-49](#)
ETC1 - Wiring diagram [EC-397](#)
ETC2 - Wiring diagram [EC-404](#)
ETC3 - Wiring diagram [EC-408](#)
EVAP canister [EC-35](#)
EVAP canister purge volume control solenoid valve ...
[EC-315](#), [EC-529](#)
EVAP canister vent control valve [EC-322](#), [EC-537](#)
EVAP control system (small leak) diagnosis .. [EC-306](#),
[EC-346](#), [EC-354](#)
EVAP control system pressure sensor [EC-329](#), [EC-332](#), [EC-338](#)
EVAP control system purge flow monitoring diagnosis
[EC-301](#)
EVAP vapor lines inspection [MA-20](#)
Evaporative emission (EVAP) system [EC-32](#)
Evaporator [ATC-187](#), [MTC-162](#)
Exhaust manifold [EM-19](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#)
Expansion valve [ATC-189](#), [MTC-164](#)

F

F/FOG - Wiring diagram [LT-64](#)
F/PUMP - Wiring diagram [EC-617](#)
Final drive pre-inspection [FFD-14](#), [RFD-13](#)
Final drive removal and installation .. [FFD-11](#), [RFD-10](#)
Flow charts [GI-27](#)
Fluid temperature sensor (A/T) [AT-126](#)
Fluids [MA-11](#)
Fluorescent leak detector [ATC-190](#), [MTC-165](#)
Fog lamp, front [LT-62](#)
Foot lamp [LT-124](#)
Freeze frame data [EC-53](#), [EC-127](#)
Front brake solenoid valve [AT-144](#), [AT-146](#)
Front bumper [EI-14](#)
Front case (Transfer) [TF-147](#), [TF-174](#)
Front combination lamp removal and installation [LT-30](#)
Front door [BL-123](#), [BL-126](#), [GW-62](#)
Front Door Trim [EI-29](#)
Front drive shaft (Transfer) [TF-147](#), [TF-174](#)
Front fog lamp [LT-62](#)
Front passenger air bag [SRS-51](#)
Front seat [SE-89](#)
Front seat belt [SB-3](#)
Front seat belt pre-tensioner [SRS-3](#), [SRS-58](#)
Front washer [WW-4](#)
Front wiper [WW-4](#)
FTS - Wiring diagram [AT-127](#)
FTTS - Wiring diagram [EC-252](#), [EC-257](#)
Fuel cut control (at no load high engine speed) [EC-27](#)
Fuel filter replacement [FL-5](#)
Fuel gauge [DI-5](#)
Fuel injection system (Bank 1) [EC-233](#), [EC-242](#)
Fuel injection system (Bank 2) [EC-233](#), [EC-242](#)
Fuel injector and fuel tube [EM-29](#)
Fuel level sensor [EC-363](#), [EC-365](#), [EC-367](#)
Fuel line inspection [FL-3](#)
Fuel pressure check [EC-92](#)
Fuel pressure release [EC-92](#)
Fuel pump [EC-616](#)
Fuel pump and gauge [FL-5](#)
Fuel system [FL-3](#)
Fuel tank [FL-10](#)
Fuel tank temperature sensor [EC-250](#), [EC-256](#)
Fuel tank vacuum relief valve [EC-35](#)
FUELB1 - Wiring diagram [EC-235](#), [EC-244](#)
FUELB2 - Wiring diagram [EC-236](#), [EC-245](#)
Fuse [PG-65](#), [PG-76](#)
Fuse and fusible link box [PG-76](#)
Fuse block [PG-75](#)
Fusible link [PG-65](#), [PG-76](#)

G

Garage jack and safety stand [GI-40](#)
Gauges [DI-5](#)
Generator [SC-17](#)
Generic scan tool (GST) [EC-136](#)
Glass [GW-11](#), [GW-62](#), [GW-65](#)

ALPHABETICAL INDEX

Glove box lamp [LT-147](#)
 GPS antenna [AV-78](#)
 Grease [MA-11](#)
 Ground distribution [PG-29](#)

H

Handling precautions for plastics [BL-185](#)
 Harness connector [PG-66](#)
 Harness layout [PG-39](#)
 Hazard warning lamp [LT-74](#)
 Headlamp removal and installation [LT-30](#)
 Heated oxygen sensor 2 (bank 1) ... [EC-213](#), [EC-222](#),
[EC-412](#), [EC-423](#)
 Heated oxygen sensor 2 (bank 2) ... [EC-213](#), [EC-222](#),
[EC-412](#), [EC-423](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-163](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-163](#)
 Heated seat [SE-86](#)
 Heater and cooling unit (Heater core) . [ATC-155](#), [ATC-159](#), [MTC-130](#), [MTC-134](#)
 Heater unit (heater core) [ATC-155](#), [ATC-159](#), [MTC-130](#), [MTC-134](#)
 Height (Dimensions) [GI-50](#)
 HFC134a (R134a) system identification [ATC-7](#), [MTC-7](#)
 HFC134a (R134a) system precaution .. [ATC-5](#), [MTC-5](#)
 HFC134a (R134a) system service procedure [ATC-174](#),
[MTC-149](#)
 HFC134a (R134a) system service tools [ATC-14](#), [MTC-14](#)
 HFC134a system service equipment precaution [ATC-11](#), [MTC-11](#)
 High and low reverse clutch solenoid valve [AT-152](#),
[AT-154](#)
 Homelink universal transceiver [BL-151](#)
 Horn [WW-59](#)
 HORN - Wiring diagram [WW-59](#)
 How to erase DTC for OBD system [EC-61](#)
 HSEAT - Wiring diagram [SE-87](#)

I

IATS - Wiring diagram [EC-189](#)
 Identification plate [GI-48](#)
 Idle air volume learning [EC-90](#)
 Idle mixture ratio [EC-78](#)
 Idle speed [EC-71](#), [EC-76](#)
 Idle speed control (ISC) [EC-371](#), [EC-373](#)
 Ignition coil [EM-26](#), [EC-598](#)
 Ignition control system [EC-598](#)
 Ignition key hole illumination [LT-123](#)
 Ignition timing [EC-71](#), [EC-76](#)
 IGNSYS - Wiring diagram [EC-599](#)
 ILL - Wiring diagram [LT-152](#)
 Illumination [LT-146](#)
 In vehicle sensor [ATC-139](#), [ATC-148](#)
 INJECT - Wiring diagram [EC-611](#)
 Injector [EC-610](#)
 Input clutch solenoid valve [AT-140](#), [AT-142](#)

Instrument panel [IP-10](#)
 Instrument panel speaker [AV-62](#)
 Intake air temperature sensor [EC-188](#), [EC-208](#)
 Intake door control linkage adjustment . [ATC-85](#), [ATC-88](#), [MTC-74](#), [MTC-78](#)
 Intake door motor . [ATC-83](#), [ATC-163](#), [MTC-73](#), [MTC-138](#)
 Intake manifold [EM-15](#)
 Intake sensor [ATC-144](#), [ATC-150](#), [MTC-121](#), [MTC-125](#)
 Integrated homelink transmitter - See Homelink universal transceiver [BL-151](#)
 Interior [EI-32](#)
 Interior lamp [LT-123](#)
 Interior lamp on-off control [LT-124](#)
 Internal gear (Transfer) [TF-147](#), [TF-174](#)
 IPDM (Intelligent power distribution module engine room) [PG-17](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)

J

Jacking points [GI-40](#)
 Junction box (J/B) [PG-75](#)

K

Key illumination [LT-124](#)
 KEYLES - Wiring diagram [BL-45](#)
 Knock sensor (KS) [EC-276](#)
 KS - Wiring diagram [EC-277](#)

L

Length (Dimensions) [GI-50](#)
 License lamp [LT-102](#)
 Lifting points [GI-41](#)
 Line pressure solenoid valve [AT-119](#)
 Line pressure switch (Transfer) [TF-152](#), [TF-165](#)
 Line pressure test (A/T) [AT-51](#)
 Location of electrical units [PG-62](#)
 Low coast brake solenoid valve [AT-156](#), [AT-158](#)
 Low tire pressure warning system [WT-8](#)
 Low tire pressure warning system - trouble diagnoses [WT-11](#)
 Low tire pressure warning system - Wiring diagram [WT-11](#)
 Lubricant (R134a) A/C [ATC-22](#), [MTC-22](#)
 Lubricants [MA-11](#)
 Lubrication circuit (engine) [LU-5](#)
 Lubrication oil A/C [ATC-22](#), [MTC-22](#)
 Lubrication-locks, hinges and hood latches [MA-31](#)

M

MAFS - Wiring diagram [EC-174](#), [EC-182](#)
 Magnet clutch [ATC-115](#), [ATC-179](#), [MTC-103](#), [MTC-154](#)
 MAIN - Wiring diagram [EC-154](#), [AT-168](#)
 Main oil pump (Transfer) [TF-152](#), [TF-165](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Mainshaft (Transfer)	TF-152 , TF-165
Maintenance (engine)Schedule 1	MA-7
Maintenance (engine)Schedule 2	MA-9
Major overhaul (Final drive)	FFD-13 , RFD-14
Major overhaul (Transfer)	TF-144
Malfunction indicator lamp (MIL)	EC-63
Map lamp	LT-124
Mass air flow sensor (MAFS)	EC-171 , EC-180
Meter	DI-5
METER - Wiring diagram	DI-10
MIL data link connectors circuit	EC-638
MIL/DL - Wiring diagram	EC-638
MIRROR - Wiring diagram	GW-96
Misfire	EC-268
Mode door control linkage adjustment ..	ATC-66 , MTC-60
Mode door motor ..	ATC-64 , ATC-164 , MTC-59 , MTC-139
Model variation	GI-46
Multiport fuel injection (MFI) system	EC-24
Multiport fuel injection precautions	GI-6
Multi-remote control system - See Remote keyless entry system	BL-39

N

NATS - Wiring diagram	BL-135
NAVI - Wiring diagram	AV-95
NAVI Control Unit	AV-173
Neutral-4LO switch	TF-62
NONDTC - Wiring diagram	AT-177
NVH troubleshooting (AX)	FAX-4
NVH troubleshooting (EM)	EM-9
NVH troubleshooting (Final drive)	RFD-5
NVH troubleshooting (Propeller shaft)	PR-3
NVH troubleshooting (RAX)	RAX-4
NVH troubleshooting (RSU)	RSU-5
NVH troubleshooting (ST)	PS-5
NVH troubleshooting (Transfer)	TF-10
NVH troubleshooting (WT)NVH troubleshooting (WT) ..	WT-4
NVIS (Nissan vehicle immobilizer system)	BL-132
NVIS (Nissan vehicle immobilizer system) precautions ..	GI-3

O

O2H2B1 - Wiring diagram	EC-165
O2H2B2 - Wiring diagram	EC-167
O2S2B1 - Wiring diagram ..	EC-215 , EC-225 , EC-415 , EC-426
O2S2B2 - Wiring diagram ..	EC-217 , EC-227 , EC-417 , EC-428
Oil cooler (engine)	LU-11
Oil filter	LU-10
Oil filter (Transfer)	TF-141
Oil pan (engine)	EM-22
Oil pressure (engine)	LU-7
Oil pressure relief valve (engine)	LU-5

Oil pump (engine)	LU-13
Oil seal replacement (engine)	EM-56
Oil seal replacement (front of final drive) ..	FFD-7 , RFD-6
Oil seal replacement (side of final drive) ..	FFD-9 , RFD-8
On board diagnostic system	EC-48
ORVR (On-board Refueling Vapor Recovery) ..	EC-39
Overheat	EC-437

P

P/SCKT - Wiring diagram	WW-57
Pantograph jack	GI-40
Park/Neutral position switch	EC-560
Park/neutral position switch (A/T)	AT-104
Parking brake control	PB-4
PCV (positive crankcase ventilation)	EC-45
Personal lamp	LT-124
PGC/V - Wiring diagram	EC-317 , EC-531
PHASE - Wiring diagram	EC-290
Pinion bearing preload diff.	RFD-22
Piston pin inspection	EM-90
Piston ring inspection	EM-91
Piston to bore clearance	EM-95
Planetary carrier (Transfer)	TF-147 , TF-174
PNP/SW - Wiring diagram	EC-562 , AT-105
POS - Wiring diagram	EC-283
POWER - Wiring diagram	PG-6
Power door lock	BL-16
Power seat	SE-82
Power steering fluid level	MA-29
Power steering gear	PS-14
Power steering oil pump	PS-25
Power steering pressure (PSP) sensor	EC-375
Power steering system bleeding	PS-6
Power supply routing	PG-4
Power window	GW-15
PRE/SE - Wiring diagram	EC-334 , EC-340
Precautions (General)	GI-4
Precautions in repairing high strength steel	BL-188
Pressure switch 1	AT-146 , AT-160
Pressure switch 2	AT-158
Pressure switch 3	AT-142 , AT-162
Pressure switch 5	AT-150 , AT-164
Pressure switch 6	AT-154 , AT-166
Pressure test (A/T)	AT-51
Propeller shaft	PR-4 , PR-8
Propeller shaft inspection	MA-25
Propeller shaft on vehicle service	PR-8
Propeller shaft vibration	PR-4 , PR-8
PS/SEN - Wiring diagram	EC-376

R

R/VIEW - Wiring diagram	DI-73
Radiator	CO-12
Radio - See Audio	AV-6
Rear Audio Remote Control Unit	AV-63
Rear axle	RAX-5
Rear bumper	EI-16

ALPHABETICAL INDEX

Rear case (Transfer) [TF-146](#), [TF-179](#)
 Rear combination lamp removal and installation ... [LT-116](#)
 Rear cover packing replacement diff. [RFD-24](#)
 Rear door [BL-123](#), [GW-65](#)
 Rear seat [SE-96](#)
 Rear seat belt [SB-6](#)
 Rear suspension [RSU-25](#)
 Rear view monitor [DI-70](#)
 Rear washer [WW-36](#)
 Rear window defogger [GW-72](#)
 Rear wiper [WW-36](#)
 Refrigerant connection precaution [ATC-7](#), [MTC-7](#)
 Refrigerant discharging evacuating charging [ATC-174](#), [MTC-149](#)
 Refrigerant general precaution [ATC-6](#), [MTC-6](#)
 Refrigerant lines [ATC-174](#), [ATC-182](#), [ATC-183](#), [MTC-149](#), [MTC-157](#), [MTC-158](#)
 Refrigerant pressure sensor . [EC-622](#), [ATC-185](#), [MTC-160](#)
 Relay box [PG-77](#)
 Remote keyless entry system [BL-39](#)
 Removal and installation (A/T) [AT-244](#), [AT-247](#)
 Removal and installation (Transfer) [TF-143](#)
 Revolution sensor (A/T) [AT-108](#)
 Ring gear diff. inspection [RFD-13](#)
 Road wheel size [GI-50](#)
 Rocker cover [EM-33](#)
 Room lamp [LT-123](#)
 Room lamp - See Interior lamp [LT-123](#)
 ROOM/L - Wiring diagram [LT-129](#)
 RP/SEN - Wiring diagram [EC-623](#)

S

SAE J1979 - Service \$01 - 09 [EC-48](#)
 SEAT - Wiring diagram [SE-82](#), [SE-83](#)
 Seat belt inspection [SB-10](#), [MA-32](#)
 Seat belt pre-tensioner [SRS-58](#)
 Seat belt, front [SB-3](#)
 Seat belt, rear [SB-6](#)
 Seat, front [SE-89](#)
 Seat, rear [SE-96](#)
 Self-diagnosis (Transfer) [TF-50](#)
 SEN/PW - Wiring diagram [EC-453](#)
 SHIFT - Wiring diagram [AT-223](#)
 Shift control (Transfer) [TF-147](#), [TF-174](#)
 Shift lock system [AT-222](#)
 Shock absorber (front) [FSU-10](#)
 Shock absorber (rear) [RSU-34](#)
 Side air bag (satellite) sensor [SRS-57](#)
 Side bearing preload diff. [RFD-19](#)
 Side curtain air bag [SRS-54](#)
 Side trim [EI-32](#)
 SMJ (super multiple junction) [PG-73](#)
 SONAR - Wiring diagram [DI-62](#)
 Spare tire size [GI-50](#)
 Spark plug [EM-27](#)
 Spark plug replacement [MA-18](#)

Specification value [EC-143](#)
 Speedometer [DI-5](#)
 Spiral cable [SRS-48](#)
 SROOF - Wiring diagram [RF-13](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS - Wiring diagram [SRS-12](#)
 SRS Trouble diagnoses [SRS-8](#)
 Stabilizer bar (front) [FSU-12](#)
 Stabilizer bar (rear) [RSU-41](#)
 Stall test (A/T) [AT-50](#)
 Standardized relay [PG-71](#)
 START - Wiring diagram [SC-11](#)
 Starting system [SC-10](#)
 Steering gear, linkage and transfer gear inspection [MA-29](#)
 Steering linkage [PS-14](#)
 Steering wheel and column [PS-7](#)
 Step lamp [LT-124](#)
 Stop lamp [LT-97](#)
 Stop lamp switch [EC-550](#), [EC-565](#), [EC-628](#)
 STOP/L - Wiring diagram [LT-98](#)
 Strut (front) [FSU-10](#)
 STSIG - Wiring diagram [AT-100](#)
 Sub-oil pump (Transfer) [TF-152](#), [TF-165](#)
 Sun gear (Transfer) [TF-147](#), [TF-174](#)
 Sun roof, electric [RF-10](#)
 Sunload sensor [ATC-142](#)
 Sunroof [RF-24](#)
 Supplemental Restraint System [SRS-5](#)
 Supplemental restraint system - Wiring diagram . [SRS-12](#)
 Symbols and abbreviations [GI-10](#), [GI-22](#)
 Symptom matrix chart [EC-103](#)
 System readiness test (SRT) code [EC-54](#)

T

Tachometer [DI-5](#)
 Tail lamp [LT-102](#)
 TAIL/L - Wiring diagram [LT-104](#)
 TCM circuit diagram [AT-49](#)
 TCM inspection table [AT-82](#)
 TCS - Wiring diagram [BRC-16](#)
 TCS (traction control system) [BRC-7](#)
 TCS component parts and connector location [BRC-14](#)
 TCS wheel sensors [BRC-14](#)
 Theft warning system - See Vehicle security (Theft warning) system [BL-69](#)
 Thermometer [DI-26](#)
 Three way catalyst [EM-19](#)
 Three way catalyst function (Bank 1) [EC-295](#)
 Three way catalyst function (Bank 2) [EC-295](#)
 Three way catalyst precautions [GI-5](#)
 Throttle control motor [EC-407](#)
 Throttle control motor relay [EC-402](#)
 Throttle position sensor (TPS) ... [EC-198](#), [EC-261](#), [EC-448](#), [EC-450](#), [EC-583](#)
 Throttle valve closed position learning [EC-89](#)
 Tie-rod [PS-14](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Timing chain	EM-35	Warning chime	DI-42
Tire rotation	MA-28	Warning lamps	DI-30
Tire size	GI-50	Washer, front	WW-4
Tooth contact diff.	RFD-20	Washer, rear	WW-36
Torque converter installation AT-245 , AT-246 , AT-248 , AT-249		Water pump	CO-17
Torque convertor clutch solenoid valve ... AT-115 , AT-117		Water temperature gauge	DI-5
Tow truck towing	GI-42	Wheel alignment (front)	FSU-6
Towing point	GI-43	Wheel alignment (rear)	RSU-27
TPS1 - Wiring diagram	EC-263	Wheel bearing (front)	FAX-5
TPS2 - Wiring diagram	EC-200	Wheel bearing (rear)	RAX-5
TPS3 - Wiring diagram	EC-585	Wheel hub (rear)	RAX-5
Traction control system - Wiring diagram	BRC-16	Wheel size	GI-50
Transfer control device	TF-76 , TF-80 , TF-138	Wheelbase (Dimensions)	GI-50
Transfer control unit inspection table	TF-36	Width (Dimensions)	GI-50
Transfer dropping resistor	TF-90	WINDOW - Wiring diagram	GW-22
Transfer fluid temperature sensor TF-104 , TF-152 , TF-165		Window antenna	AV-64
Transfer motor	TF-102 , TF-140	Window, door	GW-62 , GW-65
Transfer motor relay	TF-102	Windshield	GW-11
Transfer oil replacement	MA-24	WIP/R - Wiring diagram	WW-40
Transfer serial number	GI-49	WIPER - Wiring diagram	WW-11
Transmission serial number	GI-49	Wiper, front	WW-4
Tread-FR&RR (Dimensions)	GI-50	Wiper, rear	WW-36
Trim	EI-32	Wiring Diagram (Cell code) list	PG-60
TRNSCV - Wiring diagram	BL-151	Wiring diagrams	GI-15
Trouble diagnoses	GI-11	WT-T/WARN - Wiring diagram	WT-11
Turbine revolution sensor	AT-131		
TURN - Wiring diagram	LT-77		
Turn signal lamp	LT-74		
Two trip detection logic	EC-48		
Two-pole lift	GI-41		

V

Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-113
Valve clearance	EM-52
Valve guide	EM-66
Vanity mirror lamp	LT-123
VDC (vehicle dynamics control)	BRC-7
VDC -Wiring diagram	BRC-16
Vehicle identification number	GI-48
Vehicle recovery (freeing a stuck vehicle)	GI-43
Vehicle security (theft warning) system	BL-69
Vehicle speed sensor (VSS)	EC-369
VEHSEC - Wiring diagram	BL-73
VENT/V - Wiring diagram	EC-324 , EC-539
Video Monitor	AV-76
VIN registration	EC-89
Viscosity number (SAE)	MA-12
VSS A/T - Wiring diagram	AT-110

W

W/ANT - Wiring diagram	AV-65
Wait detection switch	TF-69
WARN - Wiring diagram	DI-31