

MWI

SECTION

METER, WARNING LAMP & INDICATOR

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

CONTENTS

BASIC INSPECTION	4	FUEL GAUGE : Component Description	13
DIAGNOSIS AND REPAIR WORKFLOW	4	ENGINE OIL PRESSURE GAUGE	13
Work Flow	4	ENGINE OIL PRESSURE GAUGE : System Dia-	13
SYSTEM DESCRIPTION	5	gram	13
METER SYSTEM	5	ENGINE OIL PRESSURE GAUGE : System De-	13
METER SYSTEM	5	scription	13
METER SYSTEM : System Diagram	5	ENGINE OIL PRESSURE GAUGE : Component	14
METER SYSTEM : System Description	5	Parts Location	14
METER SYSTEM : Arrangement of Combination		ENGINE OIL PRESSURE GAUGE : Component	14
Meter	6	Description	14
METER SYSTEM : Component Parts Location	7	A/T OIL TEMPERATURE GAUGE	14
METER SYSTEM : Component Description	7	A/T OIL TEMPERATURE GAUGE : System Dia-	15
SPEEDOMETER	8	gram	15
SPEEDOMETER : System Diagram	8	A/T OIL TEMPERATURE GAUGE : System De-	15
SPEEDOMETER : System Description	8	scription	15
SPEEDOMETER : Component Parts Location	9	A/T OIL TEMPERATURE GAUGE : Component	15
SPEEDOMETER : Component Description	9	Parts Location	15
TACHOMETER	9	A/T OIL TEMPERATURE GAUGE : Component	16
TACHOMETER : System Diagram	9	Description	16
TACHOMETER : System Description	10	VOLTAGE GAUGE	16
TACHOMETER : Component Parts Location	10	VOLTAGE GAUGE : System Diagram	16
TACHOMETER : Component Description	10	VOLTAGE GAUGE : System Description	16
ENGINE COOLANT TEMPERATURE GAUGE	10	VOLTAGE GAUGE : Component Parts Location	16
ENGINE COOLANT TEMPERATURE GAUGE :		VOLTAGE GAUGE : Component Description	17
System Diagram	11	ODO/TRIP METER	17
ENGINE COOLANT TEMPERATURE GAUGE :		ODO/TRIP METER : System Diagram	17
System Description	11	ODO/TRIP METER : System Description	17
ENGINE COOLANT TEMPERATURE GAUGE :		ODO/TRIP METER : Component Parts Location	18
Component Parts Location	11	ODO/TRIP METER : Component Description	18
ENGINE COOLANT TEMPERATURE GAUGE :		SHIFT POSITION INDICATOR	18
Component Description	12	SHIFT POSITION INDICATOR : System Diagram	18
FUEL GAUGE	12	SHIFT POSITION INDICATOR : System Descrip-	19
FUEL GAUGE : System Diagram	12	tion	19
FUEL GAUGE : System Description	12	SHIFT POSITION INDICATOR : Component	19
FUEL GAUGE : Component Parts Location	12	Parts Location	19
		SHIFT POSITION INDICATOR : Component De-	19
		scription	19

WARNING LAMPS/INDICATOR LAMPS	19	PARKING BRAKE SWITCH SIGNAL CIRCUIT	40
WARNING LAMPS/INDICATOR LAMPS : System Diagram	20	Description	40
WARNING LAMPS/INDICATOR LAMPS : System Description	20	Component Function Check	40
WARNING LAMPS/INDICATOR LAMPS : Component Parts Location	20	Diagnosis Procedure	40
WARNING LAMPS/INDICATOR LAMPS : Component Description	21	Component Inspection	40
INFORMATION DISPLAY	21	WASHER LEVEL SWITCH SIGNAL CIRCUIT..	41
INFORMATION DISPLAY : System Diagram	21	Description	41
INFORMATION DISPLAY : System Description ...	21	Diagnosis Procedure	41
INFORMATION DISPLAY : Component Parts Location	22	Component Inspection	41
INFORMATION DISPLAY : Component Description	23	ECU DIAGNOSIS INFORMATION	42
COMPASS	24	COMBINATION METER	42
Description	24	Reference Value	42
DIAGNOSIS SYSTEM (METER)	26	Fail Safe	43
Diagnosis Description	26	DTC Index	44
CONSULT Function (METER/M&A)	27	BCM (BODY CONTROL MODULE)	45
DTC/CIRCUIT DIAGNOSIS	30	Reference Value	45
DTC U1000 CAN COMMUNICATION	30	Terminal Layout	48
DTC Logic	30	Physical Values	48
Diagnosis Procedure	30	Fail Safe	54
DTC B2205 VEHICLE SPEED CIRCUIT	31	DTC Inspection Priority Chart	54
Description	31	DTC Index	54
DTC Logic	31	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	56
Diagnosis Procedure	31	Reference Value	56
POWER SUPPLY AND GROUND CIRCUIT	32	Terminal Layout	57
COMBINATION METER	32	Physical Values	58
COMBINATION METER : Diagnosis Procedure ...	32	Fail Safe	61
BCM (BODY CONTROL MODULE)	33	DTC Index	62
BCM (BODY CONTROL MODULE) : Diagnosis Procedure	33	WIRING DIAGRAM	63
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	34	COMPASS	63
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure	34	Wiring Diagram	63
FUEL LEVEL SENSOR SIGNAL CIRCUIT	36	METER	65
Description	36	Wiring Diagram	65
Component Function Check	36	SYMPTOM DIAGNOSIS	84
Diagnosis Procedure	36	THE FUEL GAUGE POINTER DOES NOT MOVE	84
Component Inspection	37	Description	84
OIL PRESSURE SWITCH SIGNAL CIRCUIT ...	38	Diagnosis Procedure	84
Description	38	THE FUEL GAUGE POINTER DOES NOT MOVE TO "F" WHEN REFUELING	85
Component Function Check	38	Description	85
Diagnosis Procedure	38	Diagnosis Procedure	85
Component Inspection	38	THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON	86
		Description	86
		Diagnosis Procedure	86

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF	87	
Description	87	
Diagnosis Procedure	87	
THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY	88	
Description	88	
Diagnosis Procedure	88	
THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, or DOES NOT DISPLAY	89	
Description	89	
Diagnosis Procedure	89	
THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY	90	
Description	90	
Diagnosis Procedure	90	
THE LIFTGATE OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY	92	
Description	92	
Diagnosis Procedure	92	
THE LIFTGATE GLASS OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY	94	A
Description	94	
Diagnosis Procedure	94	B
NORMAL OPERATING CONDITION	95	
COMPASS	95	C
COMPASS : Description	95	
PRECAUTION	96	D
PRECAUTIONS	96	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	96	E
Precaution Necessary for Steering Wheel Rotation After Battery Disconnect	96	F
PREPARATION	98	
PREPARATION	98	G
Commercial Service Tools	98	
REMOVAL AND INSTALLATION	99	H
COMBINATION METER	99	
Removal and Installation	99	I
		J
		K
		L
		M
		O
		P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000011287487

DETAILED FLOW

1.CONFIRM SYMPTOM

Confirm symptom or customer complaint.

>> GO TO 2

2.CHECK SELF-DIAGNOSIS OPERATION OF COMBINATION METER

Perform self-diagnosis of combination meter. Refer to [MWI-26. "Diagnosis Description"](#).

Does self-diagnosis mode operate?

YES >> GO TO 3

NO >> Check power supply and ground circuit of combination meter. Refer to [MWI-32. "COMBINATION METER : Diagnosis Procedure"](#). Then, GO TO 4

3.CHECK COMBINATION METER (CONSULT)

Select "METER/M&A" on CONSULT and perform "SELF-DIAGNOSIS" of combination meter. Refer to [MWI-27. "CONSULT Function \(METER/M&A\)"](#).

Self-diagnostic results content

No malfunction detected>>Repair or replace the cause of symptom. Then, GO TO 4

Malfunction detected>>Refer to [MWI-44. "DTC Index"](#). Then, GO TO 4

4.CONFIRM OPERATION

Does the combination meter operate normally?

YES or NO

YES >> Inspection End.

NO >> GO TO 1

METER SYSTEM

< SYSTEM DESCRIPTION >


SYSTEM DESCRIPTION

METER SYSTEM

METER SYSTEM

METER SYSTEM : System Diagram

INFOID:000000011287488

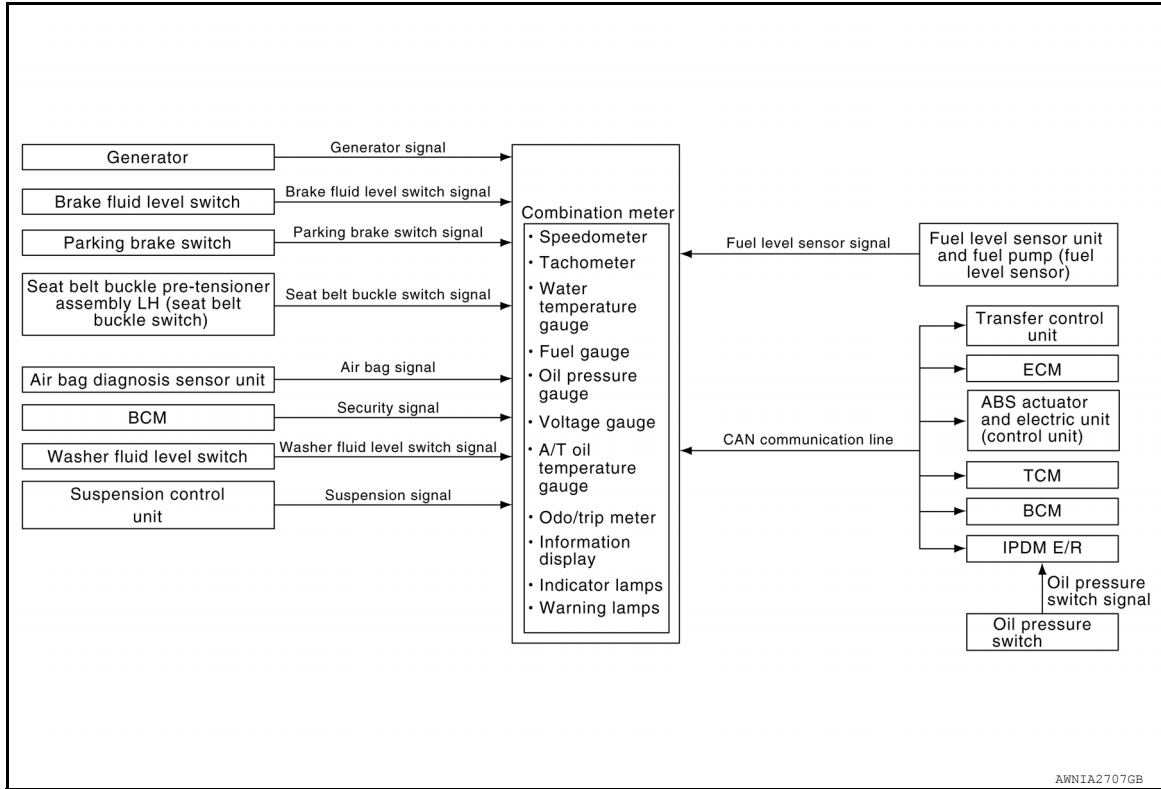

ARNIA2707GB

METER SYSTEM : System Description

INFOID:000000011287489

COMBINATION METER

- Speedometer, odo/trip meter, tachometer, fuel gauge, engine coolant temperature gauge, engine oil pressure gauge, voltage gauge, A/T oil temperature gauge and information display are controlled by the unified meter control unit, which is built into the combination meter.
- Warning and indicator lamps are controlled by the unified meter control unit and by components connected directly to the combination meter.
- Digital meter is adopted for odo/trip meter.*
*The record of the odometer is kept even if the battery cable is disconnected. The record of the trip meter is erased when the battery cable is disconnected.
- Odo/trip meter segments can be checked in diagnosis mode.
- Meter/gauge can be checked in diagnosis mode.



MWI

METER SYSTEM

< SYSTEM DESCRIPTION >


METER SYSTEM : Arrangement of Combination Meter

INFOID:000000011287490

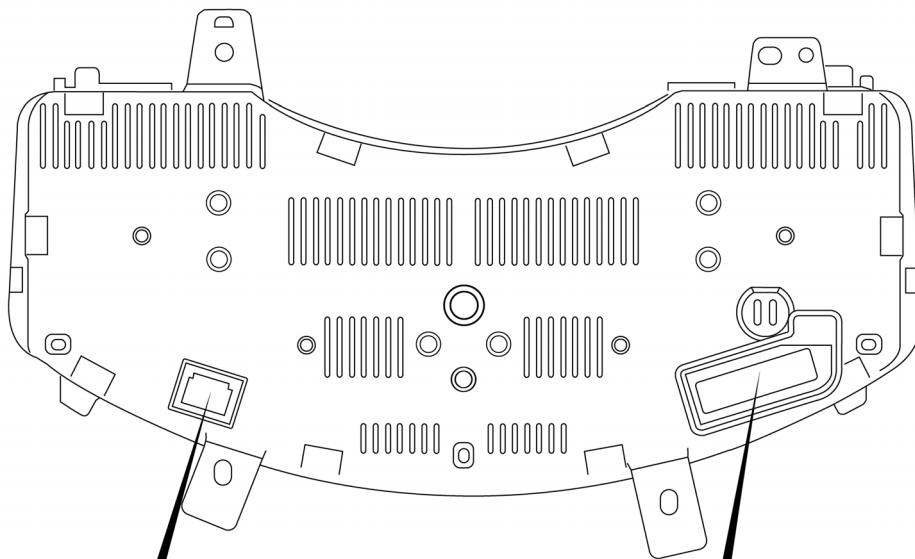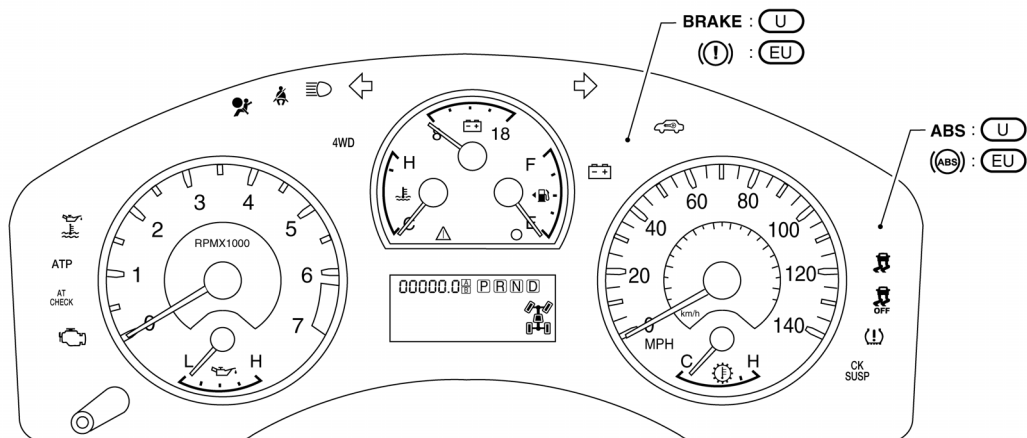

EU : Except USA

 U : USA




AWNIA2472GB

METER SYSTEM

< SYSTEM DESCRIPTION >

METER SYSTEM : Component Parts Location

INFOID:0000000011287491

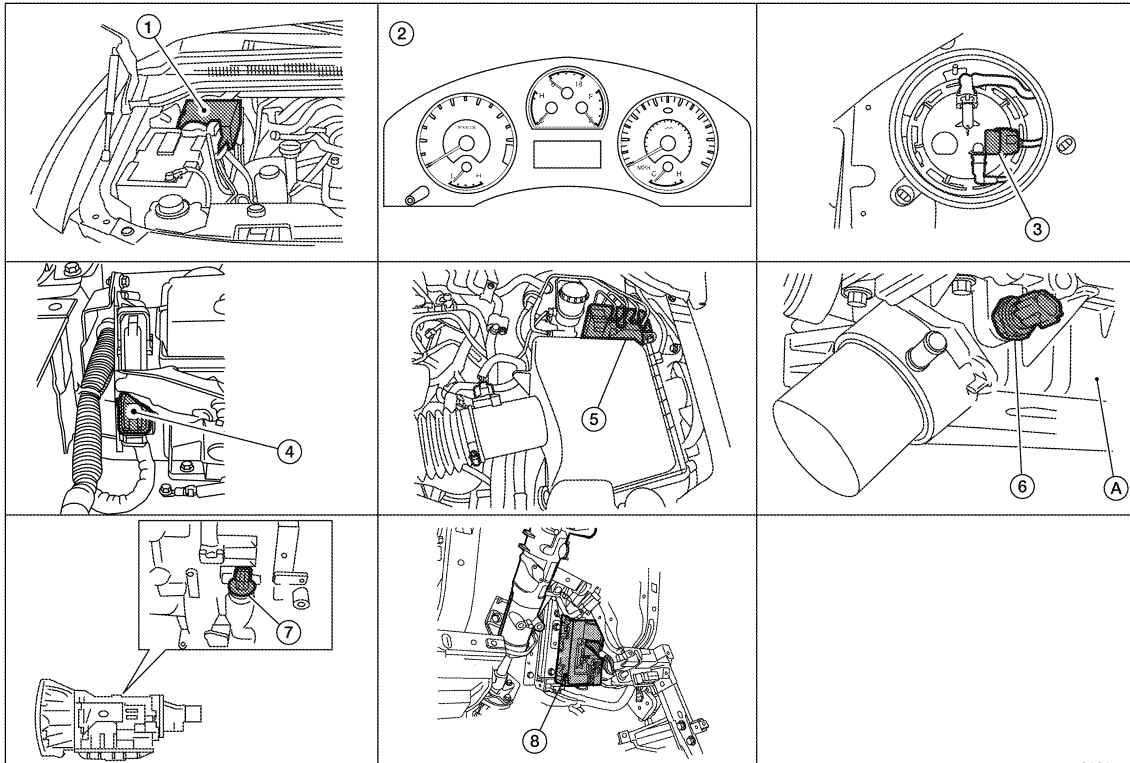

AWNIA01012Z

- | | | |
|--|---|--|
| 1. IPDM E/R E122, E124 | 2. Combination meter M23, M24 | 3. Fuel level sensor unit and fuel pump (fuel level sensor) C5 |
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A: Oil pan (upper) |
| 7. A/T assembly F9 | 8. BCM M18, M19 (view with instrument lower panel LH removed) | |

METER SYSTEM : Component Description

INFOID:0000000011287492

Unit	Description
Combination meter	<p>Controls the following with the signals received from each unit via CAN communication and the signals from switches and sensors.</p> <ul style="list-style-type: none"> • Speedometer • Engine coolant temperature gauge • Engine oil pressure gauge • Voltage gauge • Warning lamps • Information display • Tachometer • Fuel gauge • A/T oil temperature gauge • Odo/trip meter • Indicator lamps • Warning chime
IPDM E/R	IPDM E/R reads the ON/OFF signals of the oil pressure switch and transmits the oil pressure switch signal to the combination meter via BCM with CAN communication line.
Fuel level sensor unit and fuel pump (fuel level sensor)	Refer to MWI-36, "Description" .
Oil pressure switch	Refer to MWI-38, "Description" .
ECM	<p>Transmits the following signals to the combination meter with CAN communication line.</p> <ul style="list-style-type: none"> • Engine speed signal • Fuel consumption monitor signal • Engine coolant temperature signal

METER SYSTEM


< SYSTEM DESCRIPTION >

Unit	Description
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter with CAN communication line.
BCM	<ul style="list-style-type: none"> • Transmits signals provided by various units to the combination meter with CAN communication line. • Transmits the security signal to the combination meter.
TCM	<ul style="list-style-type: none"> • Transmits shift position signal to the combination meter with CAN communication line. • Transmits A/T oil temperature signal to the combination meter with CAN communication line.
Washer fluid level switch	Transmits the washer fluid level signal to the combination meter.
Brake fluid level switch	Transmits the brake fluid level switch signal to the combination meter.
Parking brake switch	Refer to MWI-40, "Description" .

SPEEDOMETER

SPEEDOMETER : System Diagram

INFOID:000000011287493

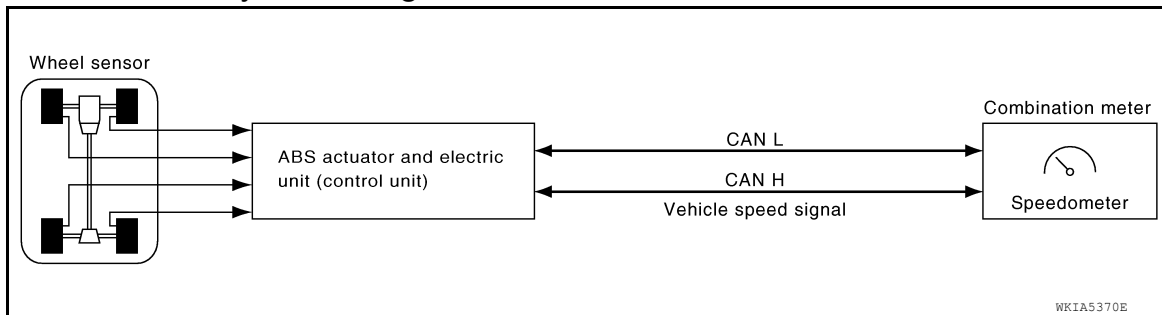

SPEEDOMETER : System Description

INFOID:000000011287494


The ABS actuator and electric unit (control unit) provides a vehicle speed signal to the combination meter via CAN communication lines.

METER SYSTEM

< SYSTEM DESCRIPTION >

SPEEDOMETER : Component Parts Location

INFOID:000000011287495

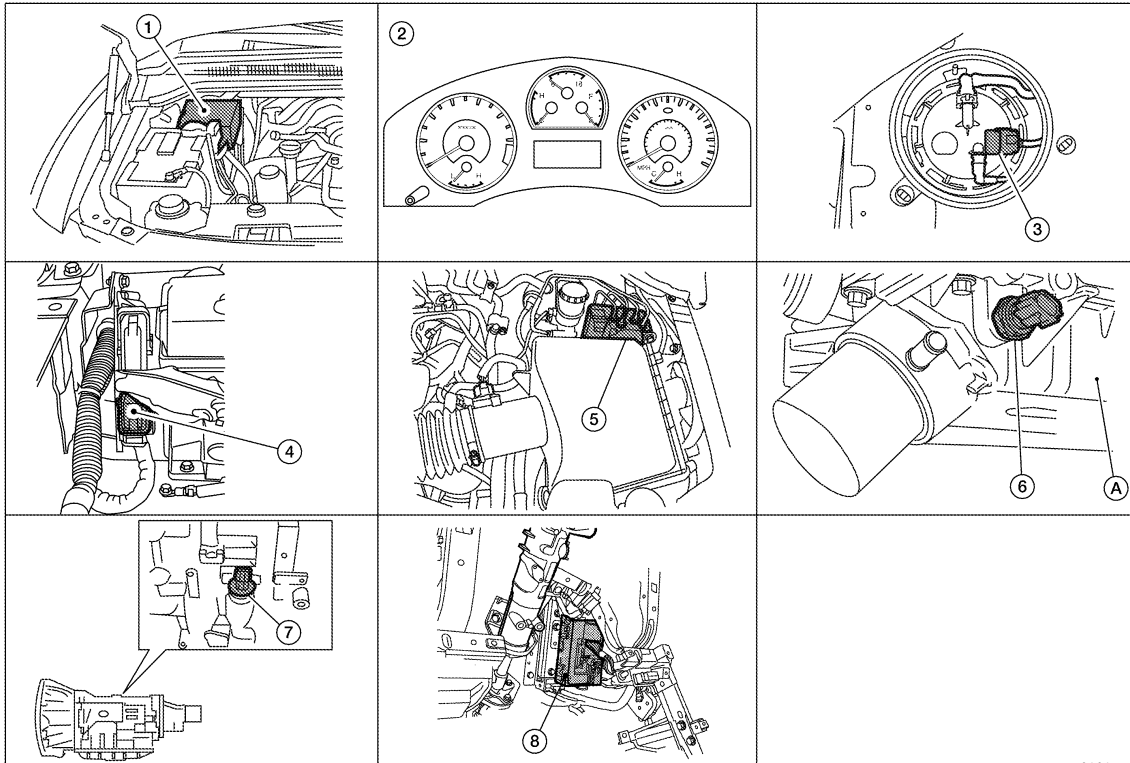

AWNIA01012Z

- | | | |
|--|---|--|
| 1. IPDM E/R E122, E124 | 2. Combination meter M23, M24 | 3. Fuel level sensor unit and fuel pump (fuel level sensor) C5 |
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A: Oil pan (upper) |
| 7. A/T assembly F9 | 8. BCM M18, M19 (view with instrument lower panel LH removed) | |

SPEEDOMETER : Component Description

INFOID:000000011287496


Unit	Description
Combination meter	Indicates the vehicle speed according to the vehicle speed signal received from ABS actuator and electric unit (control unit) via CAN communication.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter with CAN communication line.

TACHOMETER

MWI

TACHOMETER : System Diagram

INFOID:000000011287497

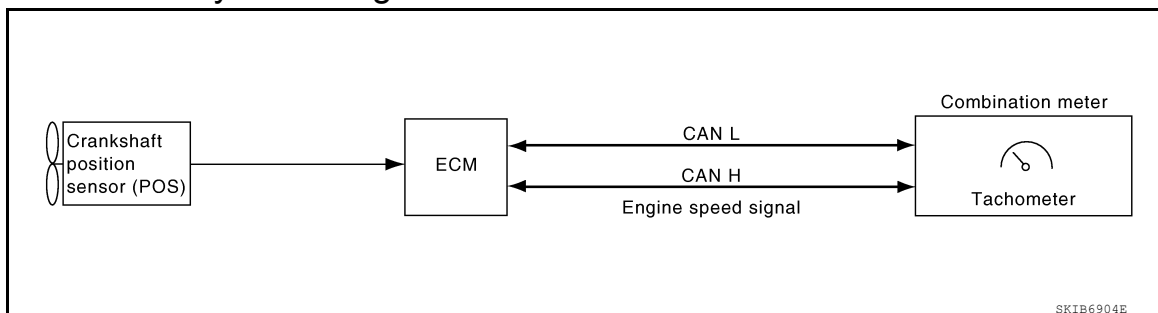

SKIB6904E

METER SYSTEM

< SYSTEM DESCRIPTION >


TACHOMETER : System Description

INFOID:000000011287498

The tachometer indicates engine speed in revolutions per minute (rpm).
The ECM provides an engine speed signal to the combination meter via CAN communication lines.

TACHOMETER : Component Parts Location

INFOID:000000011287499

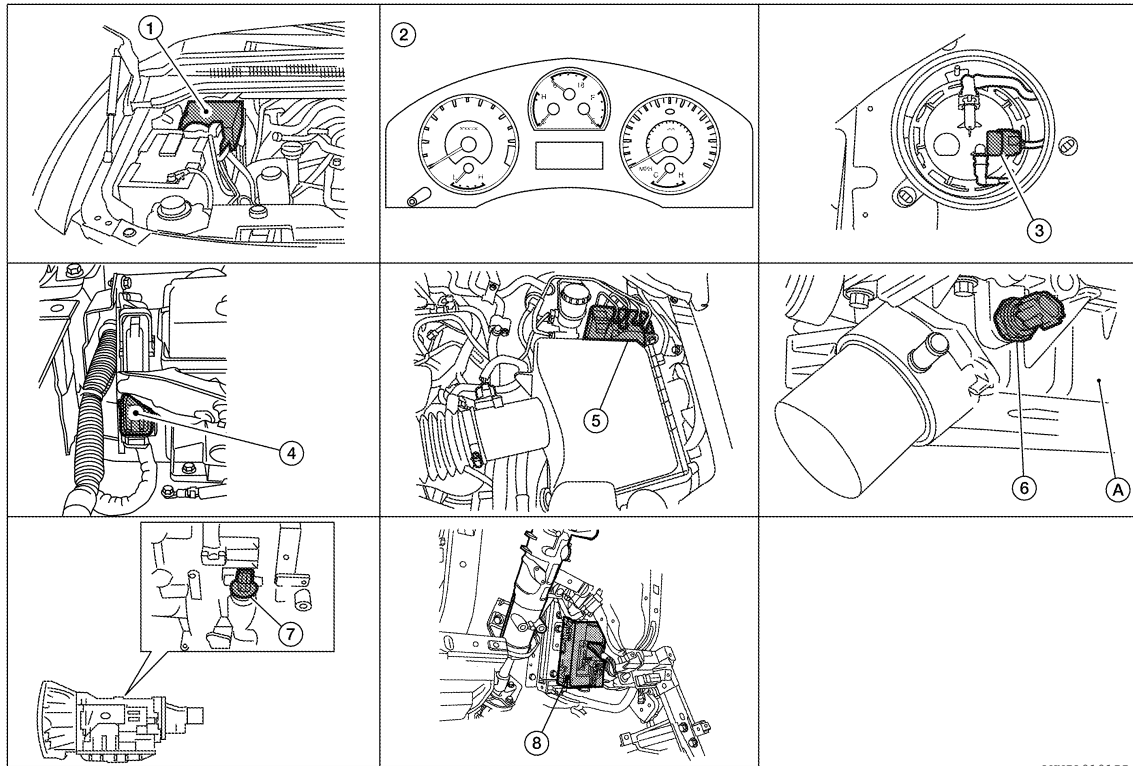

AWNIA010122

- | | | |
|--|---|--|
| 1. IPDM E/R E122, E124 | 2. Combination meter M23, M24 | 3. Fuel level sensor unit and fuel pump (fuel level sensor) C5 |
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A: Oil pan (upper) |
| 7. A/T assembly F9 | 8. BCM M18, M19 (view with instrument lower panel LH removed) | |

TACHOMETER : Component Description

INFOID:000000011287500

Unit	Description
Combination meter	Indicates the engine speed in RPM according to the engine speed signal received from ECM via CAN communication.
ECM	Transmits the engine speed signal to the combination meter with CAN communication line.


ENGINE COOLANT TEMPERATURE GAUGE

METER SYSTEM

< SYSTEM DESCRIPTION >

ENGINE COOLANT TEMPERATURE GAUGE : System Diagram

INFOID:000000011287501

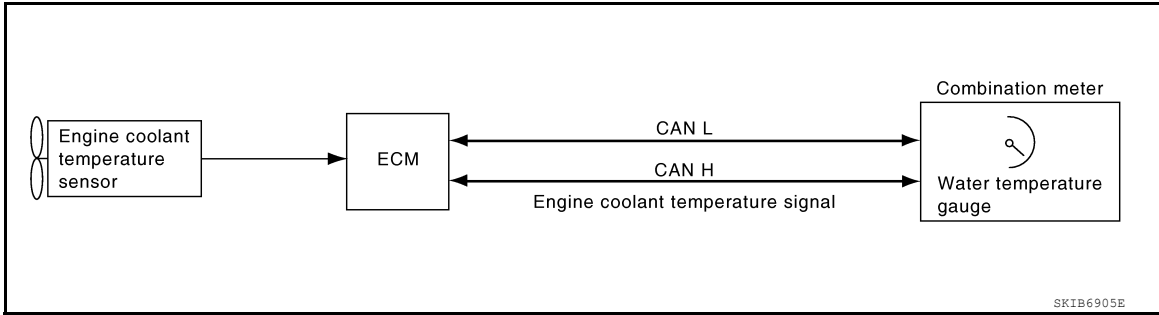

SKIB6905E


ENGINE COOLANT TEMPERATURE GAUGE : System Description

INFOID:000000011287502

The engine coolant temperature gauge indicates the engine coolant temperature. The ECM provides an engine coolant temperature signal to the combination meter via CAN communication lines.

ENGINE COOLANT TEMPERATURE GAUGE : Component Parts Location

INFOID:000000011287503

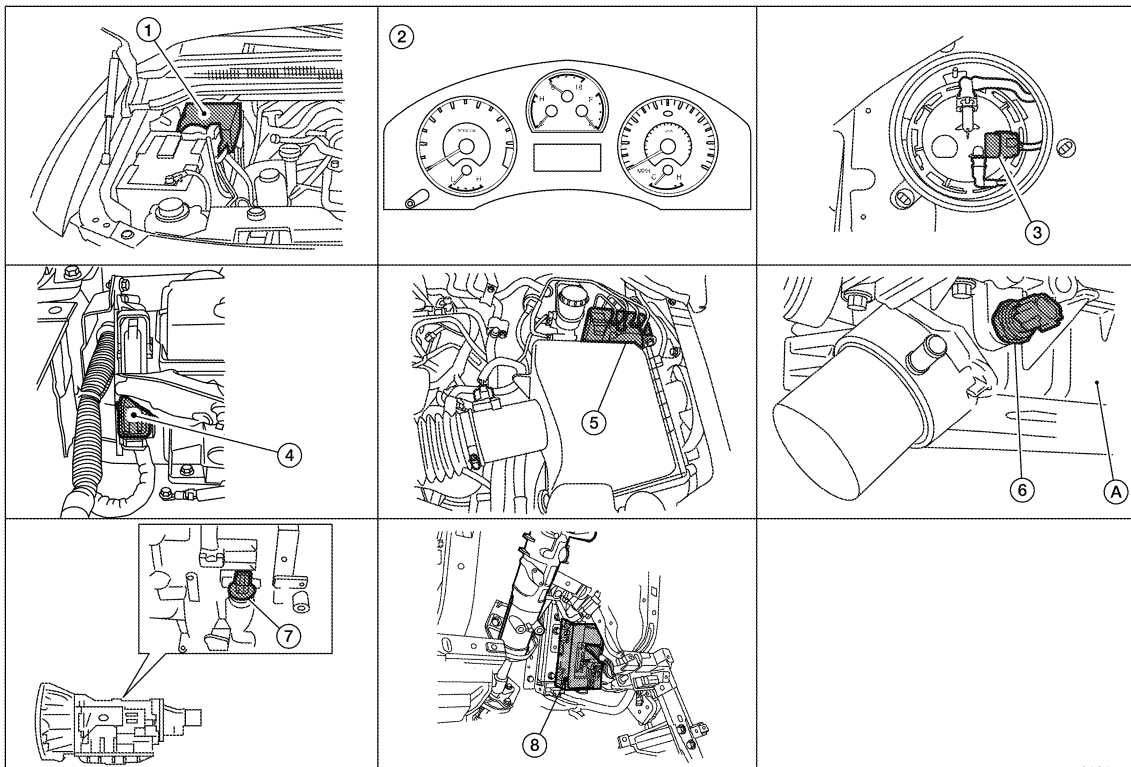

AWNIA01012Z

- | | | |
|--|---|--|
| 1. IPDM E/R E122, E124 | 2. Combination meter M23, M24 | 3. Fuel level sensor unit and fuel pump (fuel level sensor) C5 |
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A: Oil pan (upper) |
| 7. A/T assembly F9 | 8. BCM M18, M19 (view with instrument lower panel LH removed) | |

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

METER SYSTEM

< SYSTEM DESCRIPTION >

ENGINE COOLANT TEMPERATURE GAUGE : Component Description


INFOID:000000011287504

Unit	Description
Combination meter	Indicates the engine coolant temperature according to the engine coolant temperature signal received from ECM via CAN communication.
ECM	Transmits the engine coolant temperature signal to the combination meter via CAN communication.

FUEL GAUGE

FUEL GAUGE : System Diagram

INFOID:000000011287505

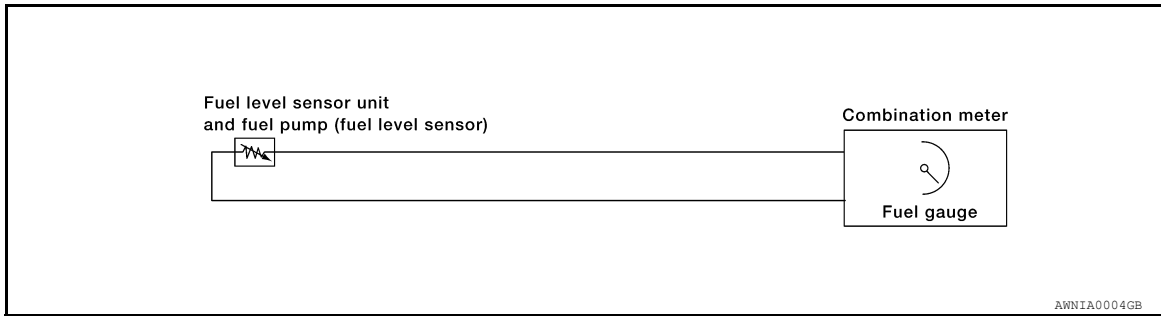


FUEL GAUGE : System Description

INFOID:000000011287506

The fuel gauge indicates the approximate fuel level in the fuel tank. The fuel gauge is regulated by the unified meter control unit and a variable resistor signal supplied by the fuel level sensor unit and fuel pump (fuel level sensor).

FUEL GAUGE : Component Parts Location

INFOID:000000011287507

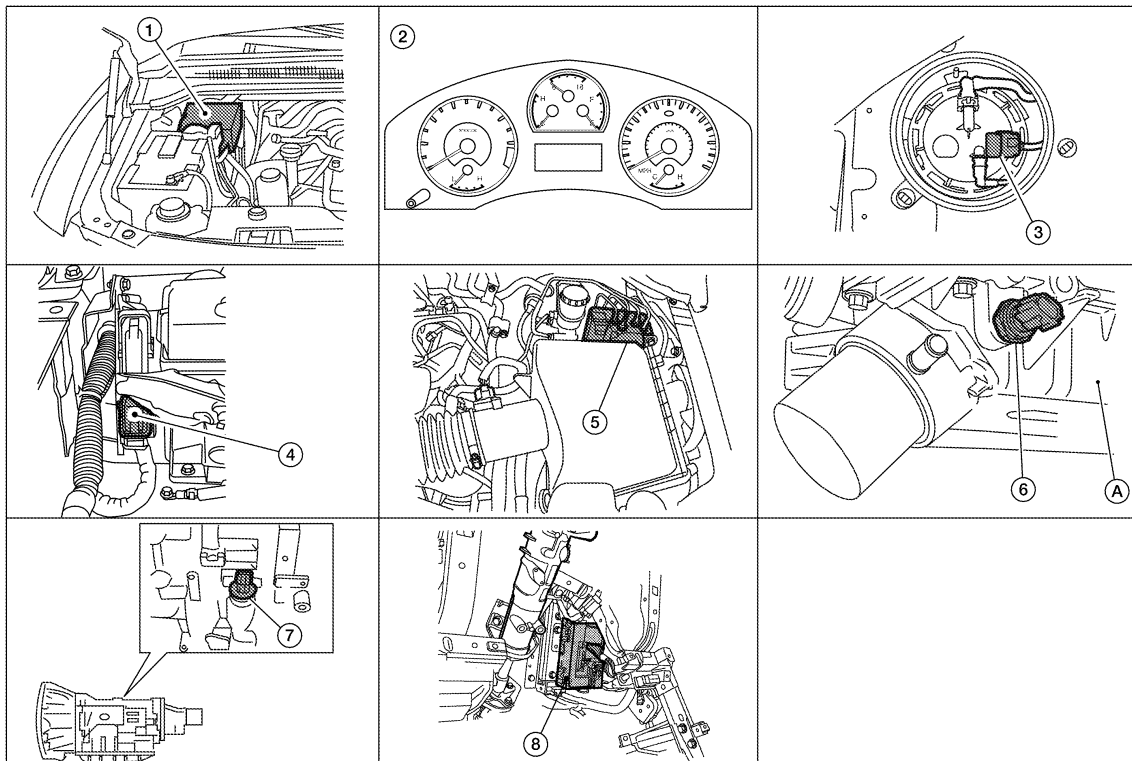

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|---|--|
| 1. IPDM E/R E122, E124 | 2. Combination meter M23, M24 | 3. Fuel level sensor unit and fuel pump (fuel level sensor) C5 |
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A: Oil pan (upper) |
| 7. A/T assembly F9 | 8. BCM M18, M19 (view with instrument lower panel LH removed) | |

FUEL GAUGE : Component Description


INFOID:000000011287508

Unit	Description
Combination meter	Indicates the fuel level according to the fuel level sensor signal received from the fuel level sensor unit and fuel pump (fuel level sensor).
Fuel level sensor unit and fuel pump (fuel level sensor)	Refer to MWI-36, "Description" .

ENGINE OIL PRESSURE GAUGE

ENGINE OIL PRESSURE GAUGE : System Diagram

INFOID:000000011287509

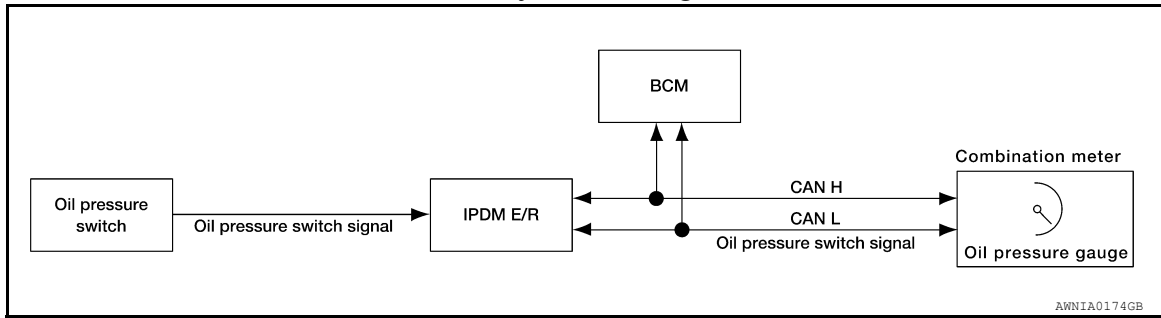

ENGINE OIL PRESSURE GAUGE : System Description

INFOID:000000011287510

The engine oil pressure gauge indicates whether the engine oil pressure is low or normal. The oil pressure gauge is controlled by the IPDM E/R. The IPDM E/R reads the ON/OFF signals from the oil pressure switch and transmits the oil pressure switch signal to the combination meter via BCM with the CAN communication line. The oil pressure gauge displays a low or normal indication according to the oil pressure switch signal received via CAN communication.


MWI

METER SYSTEM

< SYSTEM DESCRIPTION >

ENGINE OIL PRESSURE GAUGE : Component Parts Location

INFOID:000000011287511

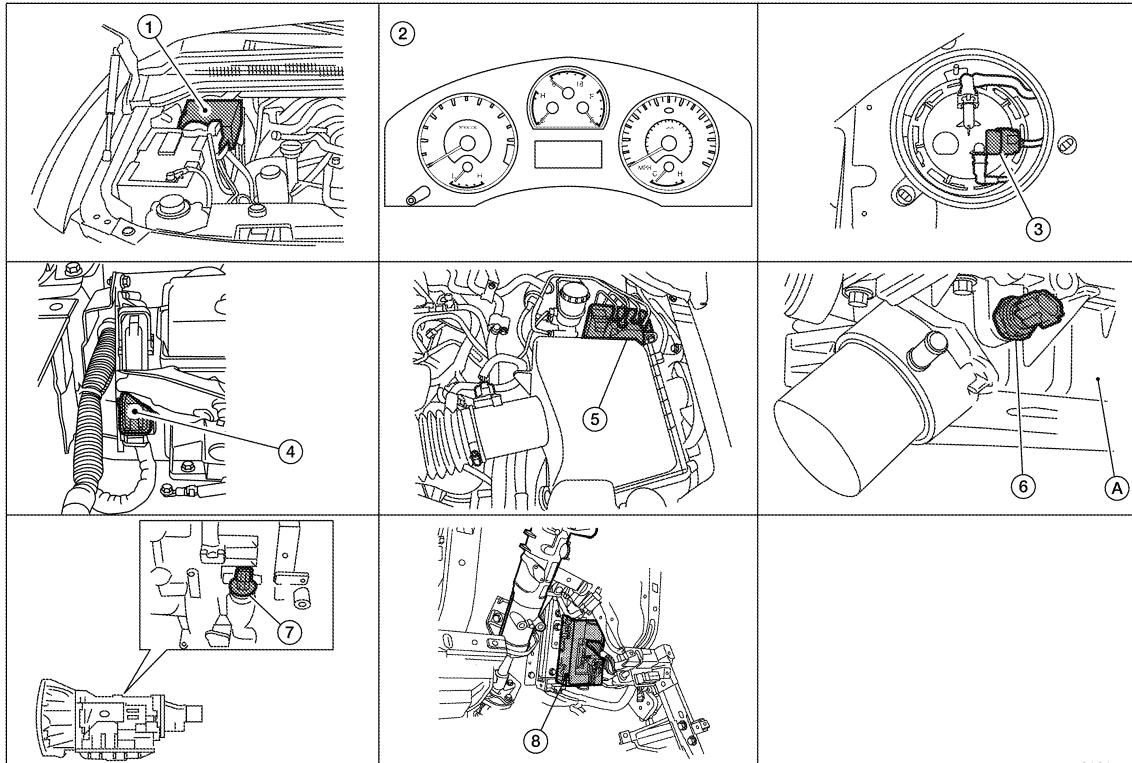

AWNIA01012Z

- | | | |
|--|---|--|
| 1. IPDM E/R E122, E124 | 2. Combination meter M23, M24 | 3. Fuel level sensor unit and fuel pump (fuel level sensor) C5 |
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A: Oil pan (upper) |
| 7. A/T assembly F9 | 8. BCM M18, M19 (view with instrument lower panel LH removed) | |

ENGINE OIL PRESSURE GAUGE : Component Description

INFOID:000000011287512

Unit	Description
Combination meter	Indicates the engine oil pressure (low/normal) according to the oil pressure switch signal received from BCM with CAN communication line.
IPDM E/R	Reads the ON/OFF signals from the oil pressure switch and transmits the oil pressure switch signal to the combination meter via BCM with the CAN communication line.
Oil pressure switch	Refer to MWI-38. "Description" .
BCM	Transmits the oil pressure switch signal received from IPDM E/R via CAN communication to the combination meter via CAN communication.


A/T OIL TEMPERATURE GAUGE

METER SYSTEM

< SYSTEM DESCRIPTION >

A/T OIL TEMPERATURE GAUGE : System Diagram

INFOID:000000011287513

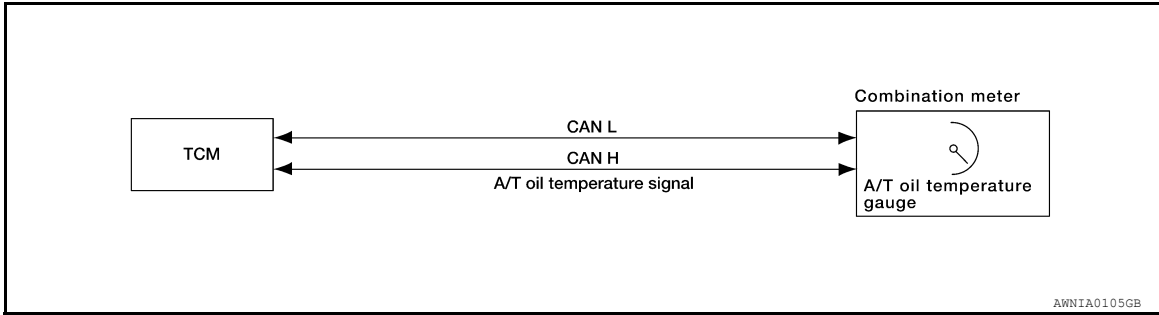


A/T OIL TEMPERATURE GAUGE : System Description

INFOID:000000011287514

The A/T oil temperature gauge indicates the A/T fluid temperature. The TCM (transmission control module) provides an A/T fluid temperature signal to combination meter via CAN communication lines.

A/T OIL TEMPERATURE GAUGE : Component Parts Location

INFOID:000000011287515

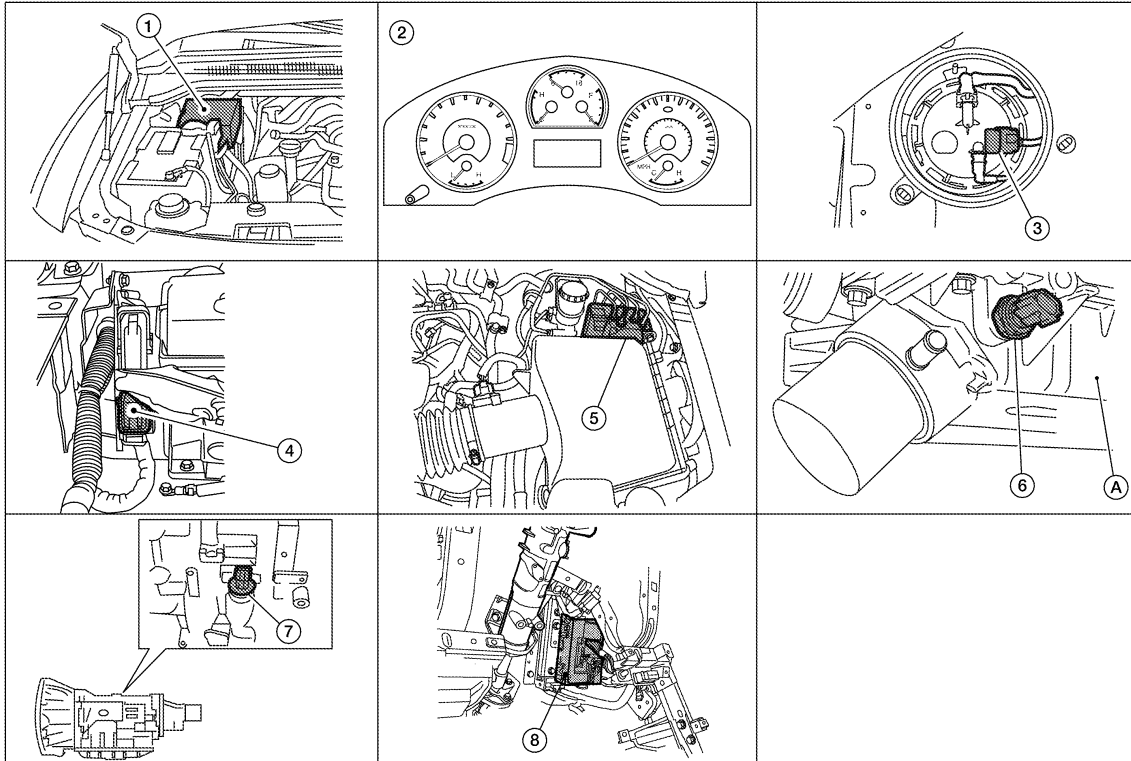

AWNIA01012Z

- | | | |
|--|---|--|
| 1. IPDM E/R E122, E124 | 2. Combination meter M23, M24 | 3. Fuel level sensor unit and fuel pump (fuel level sensor) C5 |
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A: Oil pan (upper) |
| 7. A/T assembly F9 | 8. BCM M18, M19 (view with instrument lower panel LH removed) | |

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

METER SYSTEM

< SYSTEM DESCRIPTION >

A/T OIL TEMPERATURE GAUGE : Component Description


INFOID:000000011287516

Unit	Description
Combination meter	Indicates the A/T oil temperature according to the A/T oil temperature signal received from TCM via CAN communication.
TCM	Transmits the A/T oil temperature signal to the combination meter via CAN communication.

VOLTAGE GAUGE

VOLTAGE GAUGE : System Diagram

INFOID:000000011287517

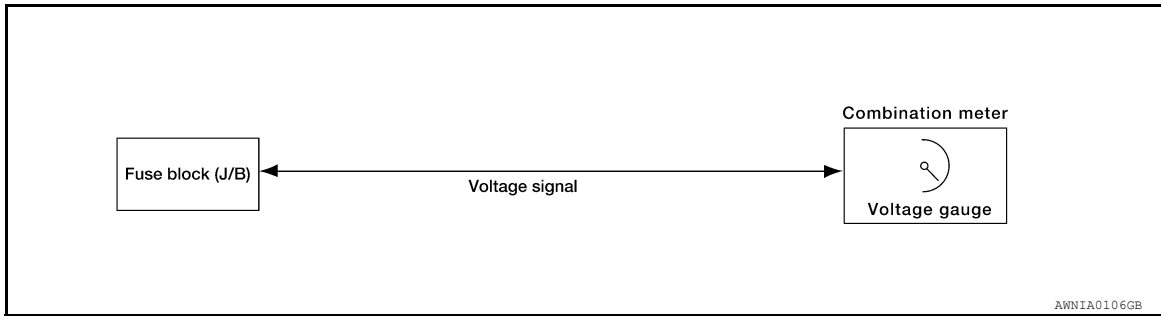

AWNIA0106GB


VOLTAGE GAUGE : System Description

INFOID:000000011287518

The voltage gauge indicates the battery/charging system voltage. The voltage gauge is regulated by the unified meter control unit.

VOLTAGE GAUGE : Component Parts Location

INFOID:000000011287519

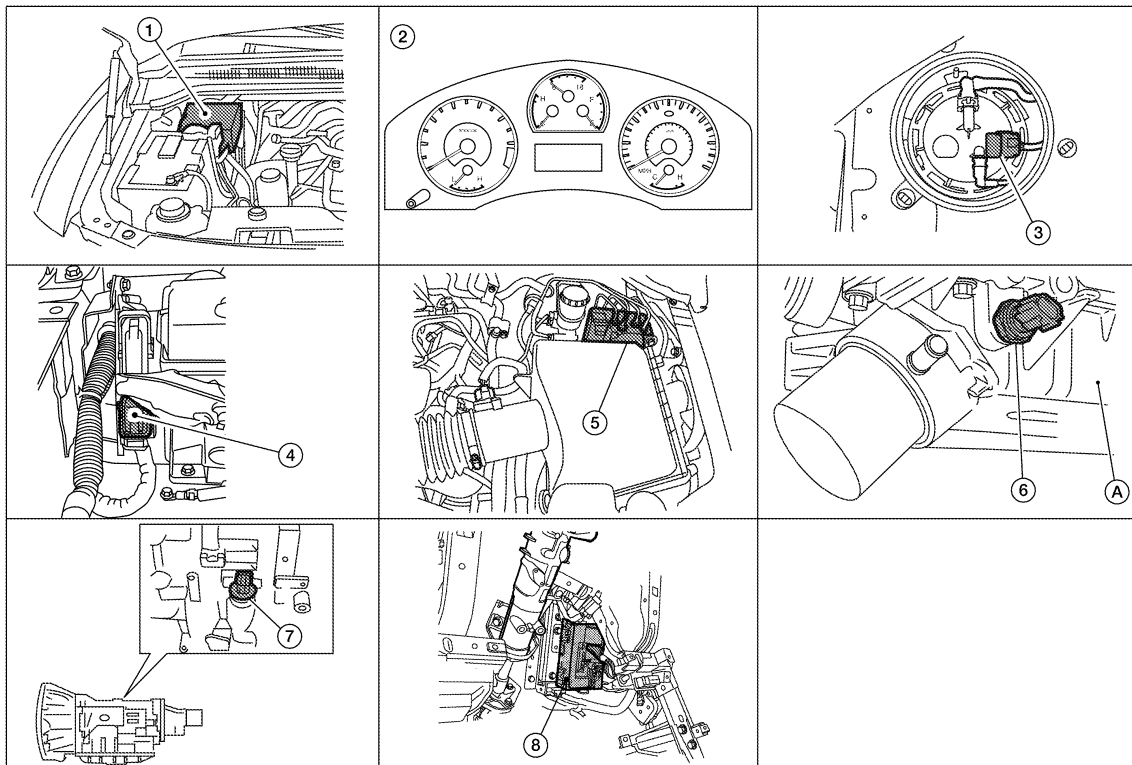

AWNIA0101ZZ

1. IPDM E/R E122, E124

2. Combination meter M23, M24

3. Fuel level sensor unit and fuel pump (fuel level sensor) C5

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|---|---|
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A: Oil pan (upper) |
| 7. A/T assembly F9 | 8. BCM M18, M19 (view with instrument lower panel LH removed) | |

VOLTAGE GAUGE : Component Description


INFOID:0000000011287520

Unit	Description
Combination meter	Indicates the battery voltage according to the voltage signal received from the fuse block (J/B).
Fuse block (J/B)	Transmits the battery voltage signal to the combination meter.

ODO/TRIP METER

ODO/TRIP METER : System Diagram

INFOID:0000000011287521

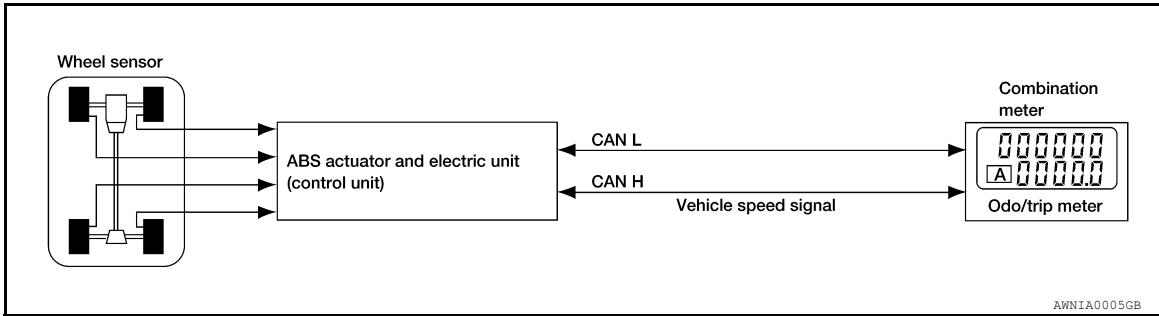

ODO/TRIP METER : System Description

INFOID:0000000011287522

The vehicle speed signal and the memory signals from the meter memory circuit are processed by the combination meter and the mileage is displayed.

HOW TO CHANGE THE DISPLAY FOR ODO/TRIP METER

Refer to Owner's Manual for odo/trip meter operating instructions.

A
B
C
D
E
F
G
H
I
J
K
L
M


MWI

METER SYSTEM

< SYSTEM DESCRIPTION >

ODO/TRIP METER : Component Parts Location

INFOID:000000011287523

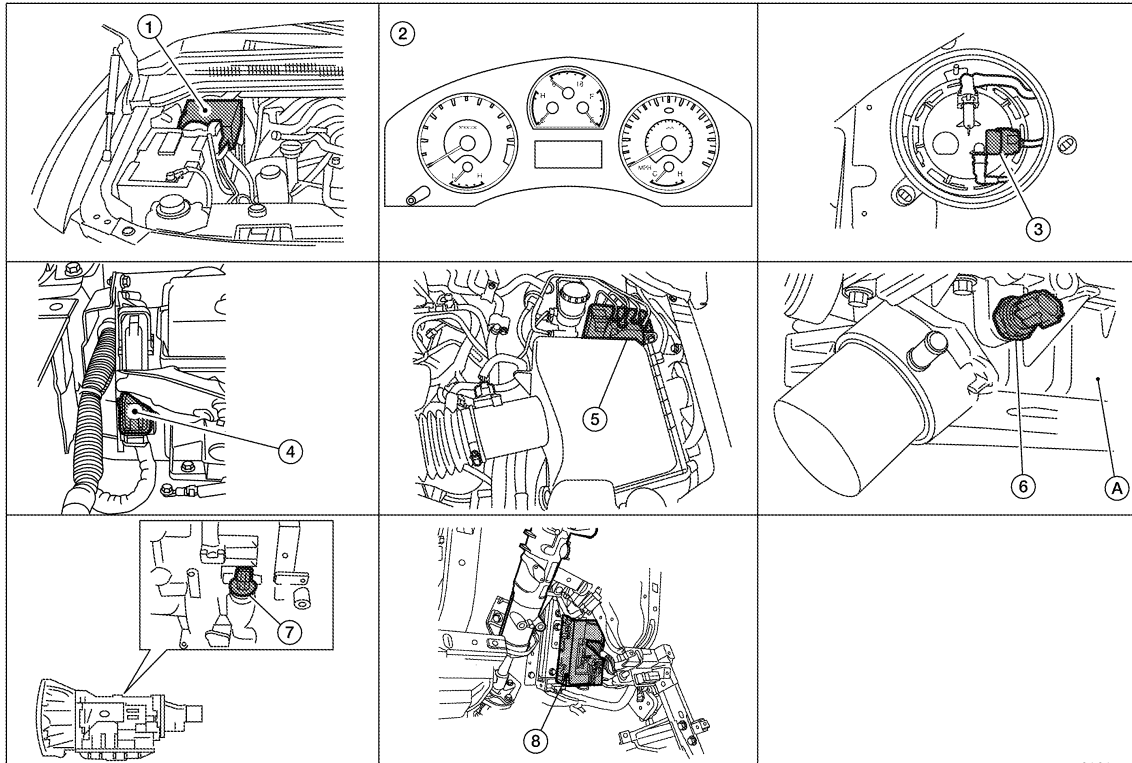

AWNIA01012Z

- | | | |
|--|---|--|
| 1. IPDM E/R E122, E124 | 2. Combination meter M23, M24 | 3. Fuel level sensor unit and fuel pump (fuel level sensor) C5 |
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A: Oil pan (upper) |
| 7. A/T assembly F9 | 8. BCM M18, M19 (view with instrument lower panel LH removed) | |

ODO/TRIP METER : Component Description


INFOID:000000011287524

Unit	Description
Combination meter	Converts the vehicle speed signal received from the ABS actuator and electric unit (control unit) via CAN communication to mileage, and it displays the accumulated mileage to the odo/trip meter.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication.

SHIFT POSITION INDICATOR

SHIFT POSITION INDICATOR : System Diagram

INFOID:000000011287525

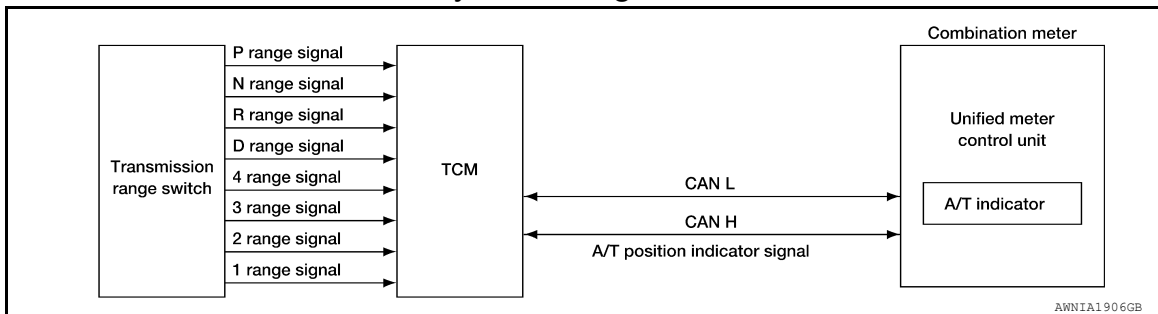

AWNIA1906GB

METER SYSTEM

< SYSTEM DESCRIPTION >


SHIFT POSITION INDICATOR : System Description

INFOID:000000011287526

The TCM receives A/T indicator signals from the transmission range switch. The TCM then sends A/T position indicator signals to the combination meter via CAN communication lines. The combination meter indicates the received shift position.

SHIFT POSITION INDICATOR : Component Parts Location

INFOID:000000011287527

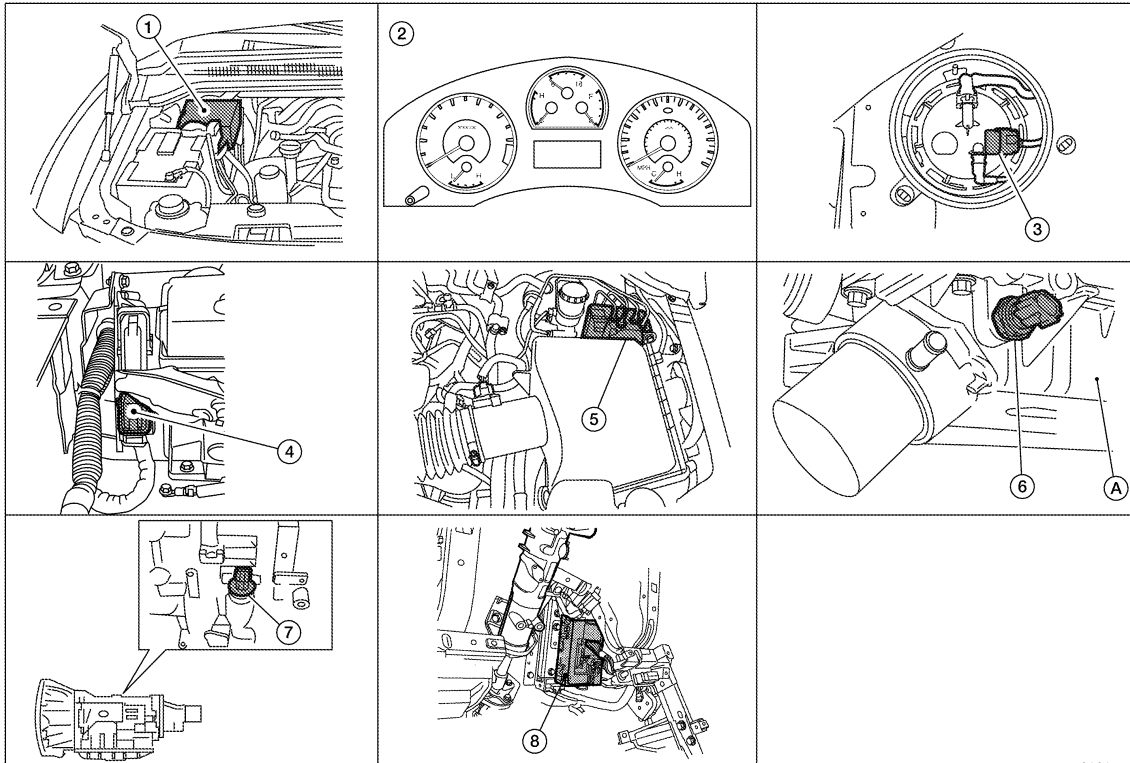

AWNIA01012Z

- | | | |
|--|---|--|
| 1. IPDM E/R E122, E124 | 2. Combination meter M23, M24 | 3. Fuel level sensor unit and fuel pump (fuel level sensor) C5 |
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A: Oil pan (upper) |
| 7. A/T assembly F9 | 8. BCM M18, M19 (view with instrument lower panel LH removed) | |

SHIFT POSITION INDICATOR : Component Description

INFOID:000000011287528

Unit	Description
Combination meter	Displays the shift position on the information display using shift position signal received from TCM.
TCM	Transmits the shift position signal to the combination meter via CAN communication.


WARNING LAMPS/INDICATOR LAMPS

METER SYSTEM

< SYSTEM DESCRIPTION >

WARNING LAMPS/INDICATOR LAMPS : System Diagram

INFOID:000000011287529

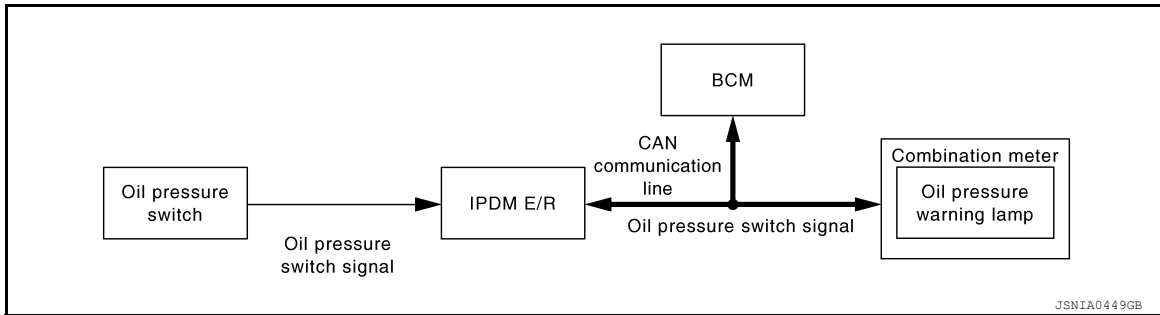

JSNIA0449GB

WARNING LAMPS/INDICATOR LAMPS : System Description


INFOID:000000011287530

OIL PRESSURE WARNING LAMP

- IPDM E/R reads the ON/OFF signals from the oil pressure switch and transmits the oil pressure switch signal to the combination meter via BCM with the CAN communication line.
- The combination meter turns the oil pressure warning lamp ON/OFF according to the oil pressure switch signal received via CAN communication.

WARNING LAMPS/INDICATOR LAMPS : Component Parts Location

INFOID:000000011287531

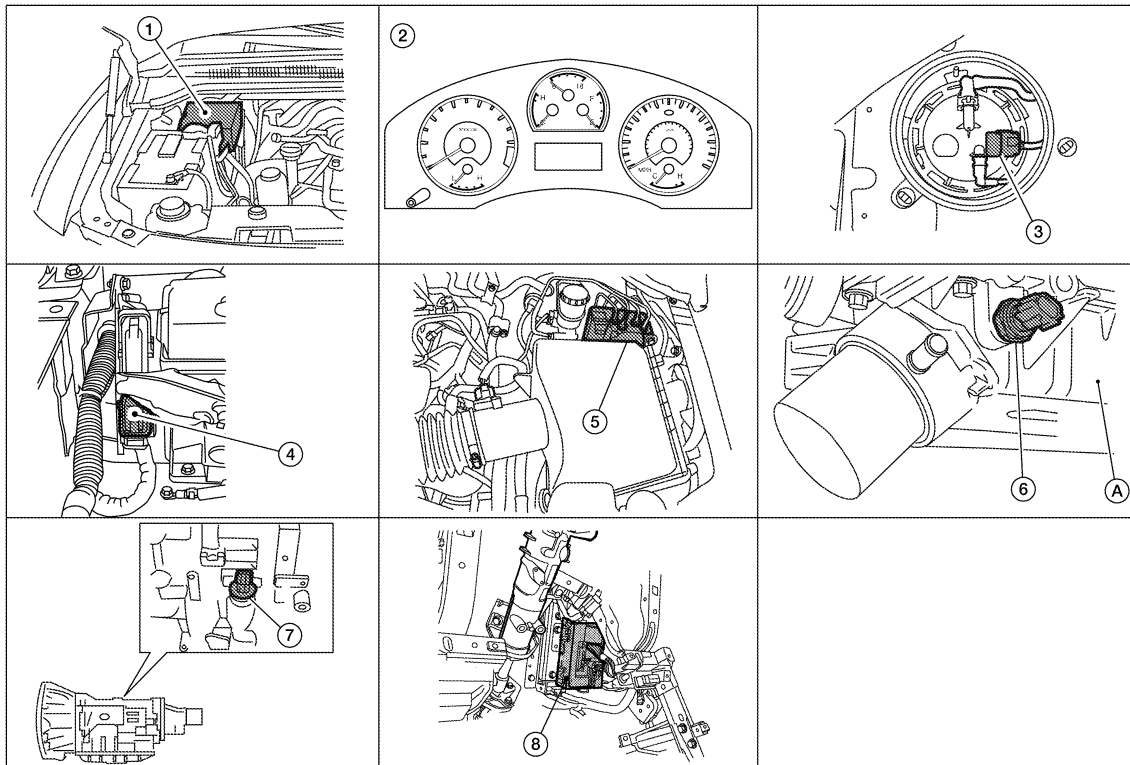

AWNIA01012Z

- | | | |
|--|---|--|
| 1. IPDM E/R E122, E124 | 2. Combination meter M23, M24 | 3. Fuel level sensor unit and fuel pump (fuel level sensor) C5 |
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A: Oil pan (upper) |
| 7. A/T assembly F9 | 8. BCM M18, M19 (view with instrument lower panel LH removed) | |

METER SYSTEM

< SYSTEM DESCRIPTION >

WARNING LAMPS/INDICATOR LAMPS : Component Description


INFOID:000000011287532

Unit	Description
Combination meter	Turns the oil pressure warning lamp ON/OFF according to the oil pressure switch signal received from BCM by means of communication.
IPDM E/R	Reads the ON/OFF signals from the oil pressure switch and transmits the oil pressure switch signal to the combination meter via BCM with the CAN communication line.
Oil pressure switch	Refer to MWI-38, "Description" .
BCM	Transmits the oil pressure switch signal received from IPDM E/R via CAN communication to the combination meter via CAN communication.

INFORMATION DISPLAY

INFORMATION DISPLAY : System Diagram

INFOID:000000011287533

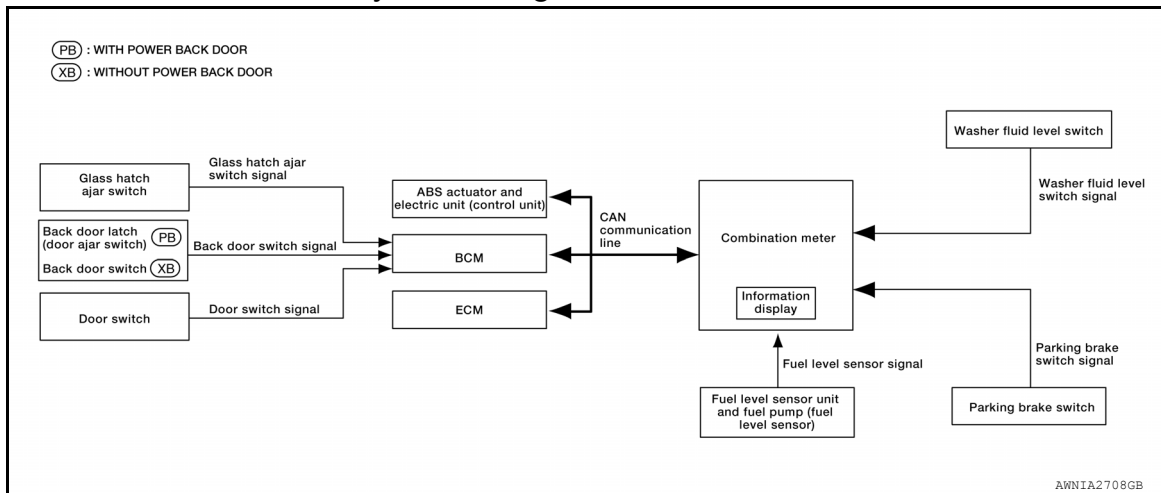

INFORMATION DISPLAY : System Description

INFOID:000000011287534

FUNCTION

The information display can indicate the following items.

- Trip A/B
- Intelligent Key operation information (with Intelligent Key)
- Warning/Indication messages (door open, back door open, back door glass open, low fuel, low washer fluid, parking brake, loose fuel cap, check tire pressure)

DOOR OPEN WARNING

This warning appears when the ignition switch is ON and the front door LH, front door RH, rear door LH or rear door RH is opened. The BCM receives a door switch signal from the front door switch LH, front door switch RH, rear door switch LH and rear door switch RH. The BCM sends the door switch signal to the combination meter via CAN communication lines. Then, when the ignition switch is turned ON, the warning message is displayed.

BACK DOOR OPEN WARNING

This warning appears when the ignition switch is ON and the back door is opened. The BCM receives a door switch signal from the back door latch (with power back door) or back door switch (without power back door). The BCM sends the door switch signal to the combination meter via CAN communication lines. Then, when the ignition switch is turned ON, the warning message is displayed.

BACK DOOR GLASS OPEN WARNING

This warning appears when the ignition switch is ON and the glass hatch is opened. The BCM receives a glass hatch switch signal from the glass hatch ajar switch. The BCM sends the glass hatch switch signal to the combination meter via CAN communication lines. Then, when the ignition switch is turned ON, the warning message is displayed.

LOW FUEL WARNING

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

METER SYSTEM

< SYSTEM DESCRIPTION >

This warning appears when the fuel level in the fuel tank is less than approximately 11.4 ℓ (3 US gal, 2.5 Imp gal). A variable resistor signal is supplied to the combination meter from the fuel level sensor unit and fuel pump (fuel level sensor) to determine the amount of fuel in the fuel tank.

LOOSE FUEL CAP WARNING

The LOOSE FUEL CAP indicator will display in the information display when the fuel-filler cap is not tightened correctly. The indicator will turn off as soon as the ECM detects the fuel-filler cap is properly tightened. The ECM provides a loose fuel cap signal to the combination meter via CAN communication lines.

CHECK TIRE PRESSURE WARNING

The CHECK TIRE PRESSURE indicator will display in the information display when BCM has detected a low tire pressure condition.

LOW WINDSHIELD WASHER FLUID WARNING

This warning appears when the windshield washer fluid level is low. When the windshield washer fluid level is low, the washer fluid level switch provides a ground signal to the combination meter (unified meter control unit). Once fluid is added, the message will stay on for 30 seconds and then turn off.


PARKING BRAKE INDICATOR

When the parking brake is applied, the parking brake switch provides a ground signal to the combination meter (unified meter control unit). Then, when the ignition switch is turned ON and vehicle speed is greater than 7 km/h (4 MPH), the message is displayed.

Refer to Owner's Manual for additional information display items.

INFORMATION DISPLAY : Component Parts Location

INFOID:000000011287535

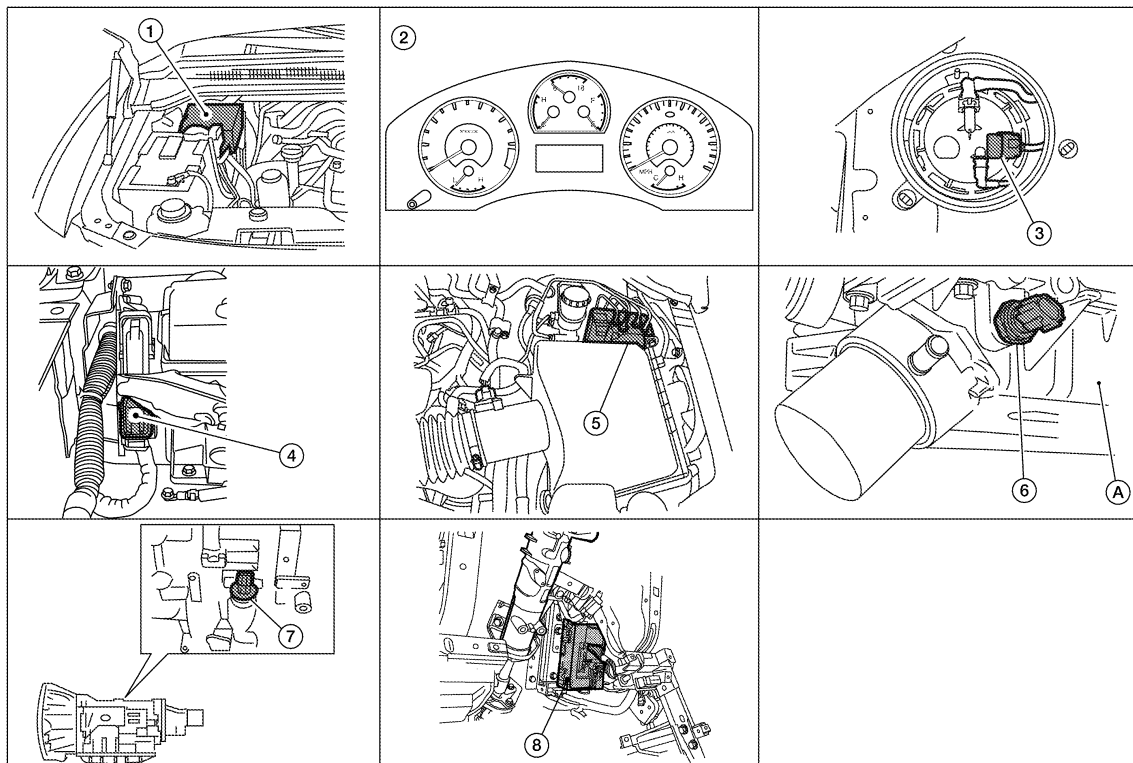

AWNIA01012Z

- | | | |
|--|---|--|
| 1. IPDM E/R E122, E124 | 2. Combination meter M23, M24 | 3. Fuel level sensor unit and fuel pump (fuel level sensor) C5 |
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A: Oil pan (upper) |
| 7. A/T assembly F9 | 8. BCM M18, M19 (view with instrument lower panel LH removed) | |

METER SYSTEM

< SYSTEM DESCRIPTION >

INFORMATION DISPLAY : Component Description

INFOID:000000011287536

Unit	Description
Combination meter	Controls the information display according to the signal received from each unit.
Fuel level sensor unit and fuel pump (fuel level sensor)	Refer to MWI-36, "Description" .
ECM	Transmits the following signals to the combination meter via CAN communication line. <ul style="list-style-type: none"> • Engine speed signal • Fuel consumption monitor signal • Loose fuel cap signal
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication line.
BCM	Transmits signals provided by various units to the combination meter via CAN communication line.
Washer fluid level switch	Transmits the washer fluid level signal to the combination meter.
Parking brake switch	Refer to MWI-40, "Description" .
Door switch	Transmits the door switch signals to BCM.
Back door switch (without power back door)	Transmits the back door switch signal to BCM.
Back door latch (door ajar switch) (with power back door)	
Glass hatch ajar switch	Transmits the glass hatch ajar switch signal to BCM.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

COMPASS

< SYSTEM DESCRIPTION >

COMPASS

Description


INFOID:000000011287537

DESCRIPTION

With the ignition switch in the ON position, and the mode or (N) switch ON, the compass display will indicate the direction the vehicle is heading.

Vehicle direction is displayed as follows:


- N: north
- E: east
- S: south
- W: west

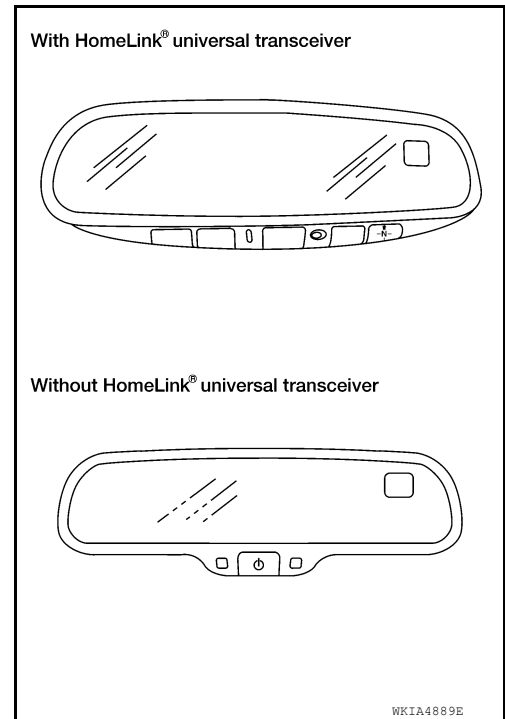

ZONE VARIATION SETTING PROCEDURE

The difference between magnetic north and geographical north can sometimes be great enough to cause false compass readings. This difference is known as variance. In order for the compass to operate properly (accurately) in a particular zone, the zone variation must be calibrated using the following procedure.

Zone Variation Chart

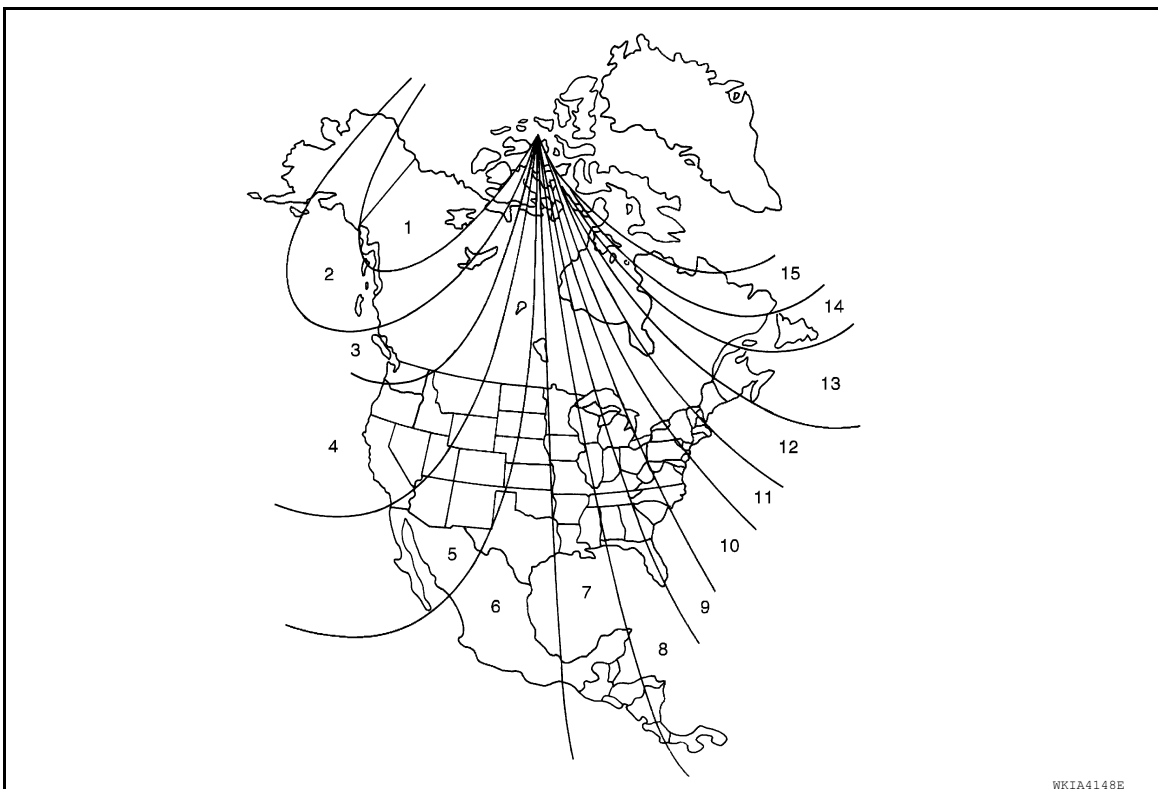

COMPASS

< SYSTEM DESCRIPTION >

1. Determine your location on the zone map.
2. Turn the ignition switch to the ON position.
3. Press and hold the (N) switch for about 5 seconds (with HomeLink universal transceiver) or the mode switch for about 8 seconds (without HomeLink universal transceiver). The current zone number will appear in the display.
4. Press the mode or (N) switch repeatedly until the desired zone number appears in the display.

Once the desired zone number is displayed, stop pressing the mode or (N) switch and the display will show a compass direction after a few seconds.

NOTE:

Use zone number 5 for Hawaii.


CALIBRATION PROCEDURE

The compass display is equipped with an automatic correction function. If the compass display reads "CAL" or the direction is not shown correctly, perform the correction procedure below.

1. Press and hold the (N) switch for about 10 seconds (with HomeLink universal transceiver) or the mode switch for about 13 seconds (without HomeLink universal transceiver). The display will read "CAL".
2. Drive the vehicle slowly in a circle, in an open, safe place. The initial calibration is completed in about 3 turns.

NOTE:

In places where the terrestrial magnetism is extremely disturbed, the initial correction may start automatically.

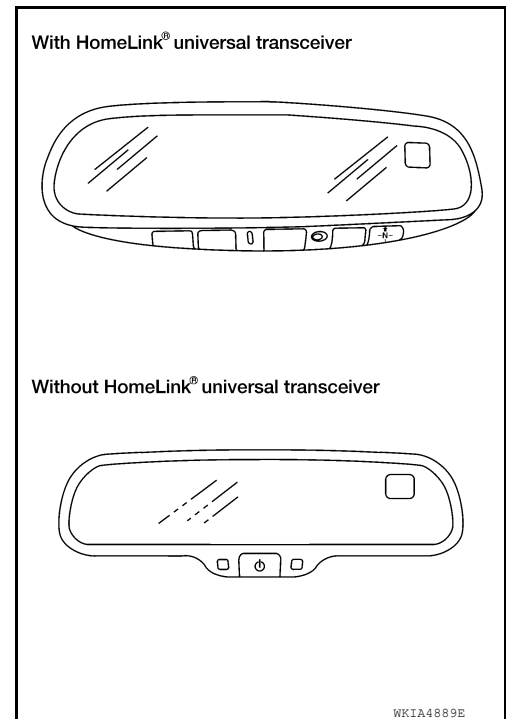

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (METER)

Diagnosis Description

INFOID:000000011287538

SELF-DIAGNOSIS MODE

The following items can be checked during Combination Meter Self-Diagnosis Mode.

- Gauge sweep and present gauge values.
- Illuminates all odometer/trip meters and A/T indicator segments.
- Illuminates all micro controlled lamps/LEDs regardless of switch position.
- Displays estimated present battery voltage.
- Displays seat belt buckle pre-tensioner assembly LH (seat belt buckle switch) status.

OPERATION PROCEDURE

NOTE:

- Once entered, combination meter self-diagnosis mode will function with the ignition switch in ON or START. Combination meter self-diagnosis mode will exit upon turning the ignition switch to OFF or ACC.
- If the diagnosis function is activated with trip A displayed, the mileage on trip A is reset to 0000.0. (Trip B operates the same way.)

To initiate combination meter self-diagnosis mode, refer to the following procedure.


1. Turn the ignition switch ON, while pressing the odometer/trip meter switch for 5 - 8 seconds. When the diagnosis function is activated, the odometer/trip meter will display tEst.

NOTE:

Check combination meter power supply and ground circuit when self-diagnosis mode of combination meter does not start. Refer to [MWI-32, "COMBINATION METER : Diagnosis Procedure"](#). Replace combination meter if normal. Refer to [MWI-99, "Removal and Installation"](#).

COMBINATION METER SELF-DIAGNOSIS MODE FUNCTIONS

To interpret combination meter self-diagnosis mode functions, refer to the following table.

Event	Odometer Display	Description of Test/Data	Notes:
Odometer/trip meter A/B switch held from 5 to 8 seconds (or until released)	tEst		Initiating self-diagnosis mode
Switch released	GAGE	Performs sweep of all gauges, then displays present gauge values.	Gauges sweep within 10 seconds
Switch pressed	(All segments illuminated)	Lights all LCD segments. Compare with picture.	 ALNIA02802Z
Switch pressed	bulb	Illuminates all micro-controlled lamps/LEDs.	Part may not be configured for all lamps (functions) that turn on during test. This is normal.
Switch pressed	r XXXX, FAIL	Return to normal operation of all lamps/LEDs and displays "r XXXX".	If a malfunction exists, "FAIL" will flash.
Switch pressed	nrXXXX	Displays Hex ROM rev as stored in NVM.	
Switch pressed	EE XX, FAIL	Displays "EE XX".	If a malfunction exists, "FAIL" will flash.
Switch pressed	dtXXXX	Hex coding of final manufacturing test date.	

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

Event	Odometer Display	Description of Test/Data	Notes:
Switch pressed (3 times)	Sc1 XX through Epr XX	Displays 8 bit software configuration value in Hex format	
Switch pressed	1nF XX	Displays 8-bit market info value in Hex format.	\$31 = USA \$2A = Canada \$FF = Other
Switch pressed (3 times)	cYL XX through tF	N/A	
Switch pressed	ot1 XX	Displays oil pressure tell-tale "" in Hex format.	
Switch pressed	ot0 XX	Displays oil pressure tell-tale "" in Hex format.	
Switch pressed	XXXXX	"Corrected" speed value in hundredths of MPH. Gauge indication may be slightly higher. This is normal.	Will display "----" if message is not received. Will display "99999" if data received is invalid.
Switch pressed	XXXXX	"Corrected" speed value in hundredths of KPH. Gauge indication may be slightly different. This is normal.	Will display "----" if message is not received. Will display "99999" if data received is invalid.
Switch pressed	t XXXX	Tachometer value in RPM. Gauge indication may be higher at higher RPM. This is normal.	Will display "----" if message is not received.
Switch pressed	F1XXXX	Present fuel level A/D input. This input represents fuel sender input.	000-009 = Short circuit 010-254 = Normal range 255 = Open circuit
Switch pressed	F2XXX	Present FLPS.	010-254 = Normal range
Switch pressed	XXXC	Last temperature gauge input value in degrees C. Temperature gauge indicates present temperature per indication standard.	Will display "---"C if message is not received. Will display "999" if data received is invalid. High = 130 deg C Normal = 70 - 105 deg C Low = less than 50 deg C
Switch pressed	BAtXX.X	Estimated present battery voltage.	
Switch pressed	rES -X	Seat belt buckle pre-tensioner assembly LH (seat belt buckle switch) status.	1= Buckled 0 = Unbuckled
Switch pressed (33 times)	PA -XX through PA1-XX	N/A	
Switch pressed	GAGE		Return to beginning of self-diagnosis cycle.

CONSULT Function (METER/M&A)

INFOID:0000000011287539

CONSULT can display each diagnostic item using the diagnostic test modes shown following.

METER/M&A diagnosis mode	Description
SELF DIAGNOSTIC RESULT	Displays combination meter self-diagnosis results.
DATA MONITOR	Displays combination meter input/output data in real time.
WORK SUPPORT	Displays diagnosis procedure of each work item.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

SELF-DIAG RESULTS

Display Item List

Refer to [MWI-44, "DTC Index"](#).

DATA MONITOR

Display Item List

X: Applicable

Display item [Unit]	MAIN SIGNALS	SELECTION FROM MENU	Description
SPEED METER [km/h] or [mph]	X	X	Displays the value of vehicle speed signal.
SPEED OUTPUT [km/h] or [mph]	X	X	Displays the value of vehicle speed signal, which is transmitted to each unit with CAN communication.
TACHO METER [rpm]	X	X	Displays the value of engine speed signal, which is input from ECM.
W TEMP METER [°C] or [°F]	X	X	Displays the value of engine coolant temperature signal, which is input from ECM.
FUEL METER [lit.]	X	X	Displays the value, which processes a resistance signal from fuel gauge.
DISTANCE [km] or [mile]	X	X	Displays the value, which is calculated by vehicle speed signal, fuel gauge and fuel consumption from ECM.
FUEL W/L [ON/OFF]	X	X	Displays [ON/OFF] condition of low-fuel warning lamp.
C-ENG W/L [ON/OFF]		X	Displays [ON/OFF] condition of malfunction indicator lamp.
AIR PRES W/L [ON/OFF]		X	Displays [ON/OFF] condition of tire pressure warning lamp.
SEAT BELT W/L [ON/OFF]		X	Indicates [ON/OFF] condition of seat belt warning lamp.
BUZZER [ON/OFF]	X	X	Displays [ON/OFF] condition of buzzer.
DOOR W/L [ON/OFF]		X	Displays [ON/OFF] condition of door warning lamp.
TRUNK W/L [ON/OFF]		X	Displays [ON/OFF] condition of glass hatch warning lamp.
HI-BEAM IND [ON/OFF]		X	Displays [ON/OFF] condition of high beam indicator.
TURN IND [ON/OFF]		X	Displays [ON/OFF] condition of turn indicator.
OIL W/L [ON/OFF]		X	Displays [ON/OFF] condition of oil pressure warning lamp.
VDC/TCS IND [ON/OFF]		X	Displays [ON/OFF] condition of VDC OFF indicator lamp.
ABS W/L [ON/OFF]		X	Displays [ON/OFF] condition of ABS warning lamp.
SLIP IND [ON/OFF]		X	Displays [ON/OFF] condition of SLIP indicator lamp.
BRAKE W/L [ON/OFF]		X	Displays [ON/OFF] condition of brake warning lamp.*
KEY G/Y W/L [ON/OFF]		X	Displays [ON/OFF] condition of key green warning lamp.
KEY R W/L [ON/OFF]		X	Displays [ON/OFF] condition of key red warning lamp.
KEY KNOB W/L [ON/OFF]		X	Displays [ON/OFF] condition of key knob warning lamp.
M RANGE SW [ON/OFF]	X	X	Displays [ON/OFF] condition of manual mode range switch.
NM RANGE SW [ON/OFF]	X	X	Displays [ON/OFF] condition of except for manual mode range switch.
AT SFT UP SW [ON/OFF]	X	X	Displays [ON/OFF] condition of A/T shift-up switch.
AT SFT DWN SW [ON/OFF]	X	X	Displays [ON/OFF] condition of A/T shift-down switch.
AT-M GEAR [1, 2, 3, 4, 5]	X	X	Indicates [1, 2, 3, 4, 5] condition of A/T manual mode gear position.
P RANGE IND [ON/OFF]	X	X	Indicates [ON/OFF] condition of A/T shift P range indicator.
R RANGE IND [ON/OFF]	X	X	Indicates [ON/OFF] condition of A/T shift R range indicator.
N RANGE IND [ON/OFF]	X	X	Indicates [ON/OFF] condition of A/T shift N range indicator.
D RANGE IND [ON/OFF]	X	X	Indicates [ON/OFF] condition of A/T shift D range indicator.
4 RANGE IND [ON/OFF]	X	X	Indicates [ON/OFF] condition of A/T shift 4 range indicator.
3 RANGE IND [ON/OFF]	X	X	Indicates [ON/OFF] condition of A/T shift 3 range indicator.

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	SELECTION FROM MENU	Description
2 RANGE IND [ON/OFF]	X	X	Indicates [ON/OFF] condition of A/T shift 2 range indicator.
1 RANGE IND [ON/OFF]	X	X	Indicates [ON/OFF] condition of A/T shift 1 range indicator.
AT CHECK W/L [ON/OFF]		X	Displays [ON/OFF] condition of AT CHECK warning lamp.
CRUISE IND [ON/OFF]		X	Displays [ON/OFF] condition of CRUISE indicator.
SET IND [ON/OFF]		X	Displays [ON/OFF] condition of SET indicator.
CRUISE W/L [ON/OFF]		X	Indicates [ON/OFF] condition of CRUISE warning lamp.
4WD LOCK SW [ON/OFF]		X	Indicates [ON/OFF] condition of 4WD lock switch.
4WD LOCK IND [ON/OFF]		X	Indicates [ON/OFF] condition of 4WD lock indicator.
4WD W/L [ON/OFF]		X	Indicates [ON/OFF] condition of 4WD warning lamp.
FUEL CAP W/L [ON/OFF]		X	Displays [ON/OFF] condition of loose fuel cap indicator.
TPMS PRESS L [ON/OFF]		X	Displays [ON/OFF] condition of check tire pressure indicator.

NOTE:

Some items are not available due to vehicle specification.

*: The monitor will indicate "OFF" even though the brake warning lamp is on if either of the following conditions exist.

- The parking brake is engaged
- The brake fluid level is low

WORK SUPPORT

Work support item	Description
Turn signal buzzer diagnosis	A possible malfunction can be narrowed down by following displayed instructions.
Fuel meter diagnosis (Analog pointer)	

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

DTC U1000 CAN COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

DTC U1000 CAN COMMUNICATION

DTC Logic

INFOID:0000000011287540

DTC DETECTION LOGIC

DTC	CONSULT display	Detection condition
U1000	CAN COMM CIRC [U1000]	When combination meter is not receiving CAN communication signals for 2 seconds or more.

Diagnosis Procedure

INFOID:0000000011287541

Symptom: Displays "CAN COMM CIRC [U1000]" as a self-diagnosis result of combination meter.

1. CHECK CAN COMMUNICATION

Select "SELF-DIAG RESULTS" mode for "METER/M&A" with CONSULT.

>> Go to "LAN system". Refer to [LAN-14. "Trouble Diagnosis Flow Chart"](#).

DTC B2205 VEHICLE SPEED CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC B2205 VEHICLE SPEED CIRCUIT

Description

INFOID:000000011287542

The ABS actuator and electric unit (control unit) provides a vehicle speed signal to the combination meter via CAN communication lines.

DTC Logic

INFOID:000000011287543

DTC	CONSULT display	Detection condition
B2205	VEHICLE SPEED CIRC [B2205]	Malfunction is detected when an erroneous speed signal is received for 2 seconds or more.

Diagnosis Procedure

INFOID:000000011287544

Symptom: Displays "VEHICLE SPEED CIRC [B2205]" as a self-diagnosis result of combination meter.

1. CHECK COMBINATION METER INPUT SIGNAL

1. Start engine and select "METER/M&A" on CONSULT.
2. Using "SPEED METER" on "DATA MONITOR", compare the value of DATA MONITOR with speedometer pointer of combination meter. Speedometer and DATA MONITOR indications should be close.

Is the inspection result normal?

- YES >> Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).
- NO >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT COMBINATION METER

COMBINATION METER : Diagnosis Procedure

INFOID:000000011287545

Regarding Wiring Diagram information, refer to [MWI-65. "Wiring Diagram"](#).

1. CHECK FUSES

Check for blown combination meter fuses.

Unit	Power source	Fuse No.
Combination meter	Battery	19
	Ignition switch ON or START	14
	Ignition switch ACC or ON	4

Is the inspection result normal?


YES >> GO TO 2

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect combination meter connector M24.
2. Check voltage between combination meter harness connector M24 terminals 1, 8, 24 and ground.

Terminals		(-)	Ignition switch position			
(+)	Connector		Terminal	OFF	ACC	ON
M24	1	Ground	0V	Battery voltage	Battery voltage	0V
	8		Battery voltage	Battery voltage	Battery voltage	Battery voltage
	24		0V	0V	Battery voltage	Battery voltage

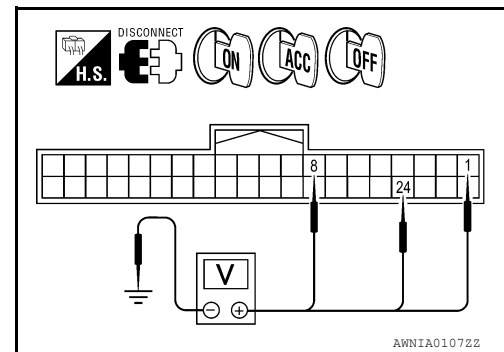

Is the inspection result normal?


YES >> GO TO 3

NO >> Check harness for open between combination meter and fuse.

3. GROUND CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect combination meter connector M23.
3. Check continuity between combination meter harness connector M23 terminal 52 and ground, and connector M24 terminal 9 and ground.

Terminals		(-)	Continuity
(+)	Connector		
A: M23	52	Ground	Yes
B: M24	9		

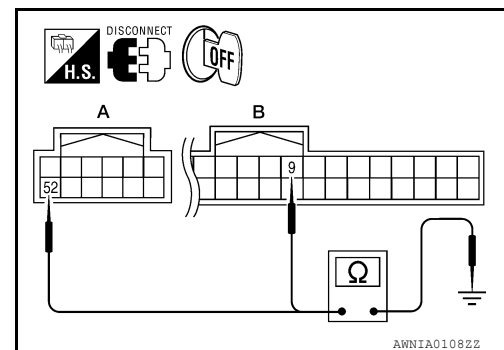

Is the inspection result normal?

YES >> Inspection End.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness or connector.

BCM (BODY CONTROL MODULE)

BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:000000011518609

Regarding Wiring Diagram information, refer to [BCS-46. "Wiring Diagram"](#).

1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	22 (15A)
70		F (50A)
11	Ignition ACC or ON	4 (10A)
38	Ignition ON or START	59 (10A)

Is the fuse blown?


YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Connector	Terminals		Power source	Condition	Voltage (V) (Approx.)
	(+)	(-)			
M18	11	Ground	ACC power supply	Ignition switch ACC or ON	Battery voltage
	38	Ground	Ignition power supply	Ignition switch ON or START	Battery voltage
M20	57	Ground	Battery power supply	Ignition switch OFF	Battery voltage
	70	Ground	Battery power supply	Ignition switch OFF	Battery voltage

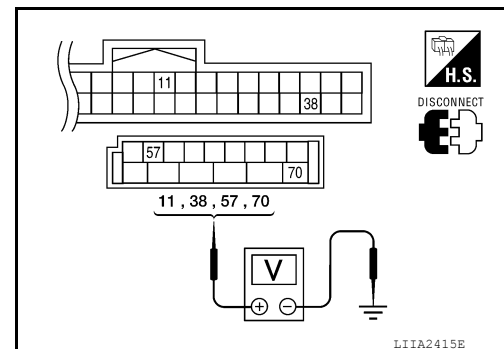

Is the measurement value normal?

YES >> GO TO 3

NO >> Repair or replace harness.

3. CHECK GROUND CIRCUIT

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

POWER SUPPLY AND GROUND CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M20	67		Yes

Does continuity exist?

- YES >> Inspection End.
 NO >> Repair or replace harness.

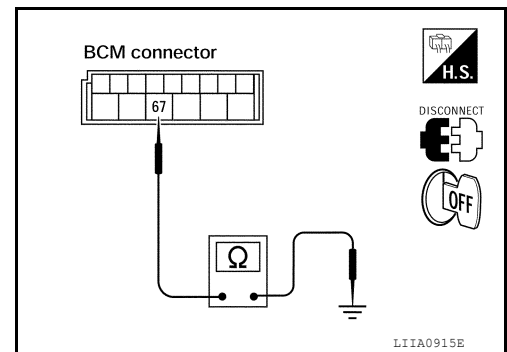

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:000000011513525

Regarding Wiring Diagram information, refer to [PCS-25. "Wiring Diagram"](#).

1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
1	Battery	A, D
2	Battery	C
12	Ignition switch ON or START	59
22	Battery	A, E, L, N

Is the fuse blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.
 NO >> GO TO 2

2. CHECK BATTERY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect IPDM E/R.
- Check voltage between IPDM E/R harness connectors and ground.

Terminals		(-)	Ignition switch position		
(+) (+)			OFF	ON	START
Connector	Terminal				
E118	1	Ground	Battery voltage	Battery voltage	Battery voltage
	2		Battery voltage	Battery voltage	Battery voltage
E119	12		0V	Battery voltage	Battery voltage
E120	22		Battery voltage	Battery voltage	Battery voltage

Is the measurement value normal?

- YES >> GO TO 3
 NO >> Repair or replace harness.

3. CHECK GROUND CIRCUIT

- Turn ignition switch OFF.

POWER SUPPLY AND GROUND CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

- Check continuity between IPDM E/R harness connectors (A, B) and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E122 (A)	38		Yes
E124 (B)	59		

Does continuity exist?

- YES >> Inspection End.
 NO >> Repair or replace harness.

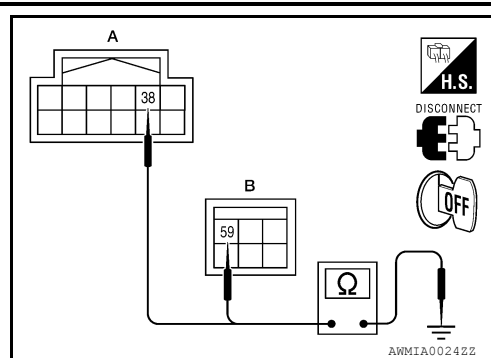

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

FUEL LEVEL SENSOR SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FUEL LEVEL SENSOR SIGNAL CIRCUIT

Description

INFOID:000000011287548

The fuel level sensor unit and fuel pump (fuel level sensor) detects the approximate fuel level in the fuel tank and transmits the fuel level signal to the combination meter.

Component Function Check

INFOID:000000011287549

1.COMBINATION METER INPUT SIGNAL

1. Select "METER/M&A" on CONSULT.
2. Using "FUEL METER" of "DATA MONITOR", compare the value of DATA MONITOR with fuel gauge pointer of combination meter.

Fuel gauge pointer	Reference value of data monitor [lit.]
Full	Approx. 93
3/4	Approx. 73
1/2	Approx. 52
1/4	Approx. 30
Empty	Approx. 11

Does the data monitor value approximately match the fuel gauge indication?

- YES >> Inspection End.
 NO >> Replace combination meter. Refer to [MWI-99. "Removal and Installation"](#).

Diagnosis Procedure

INFOID:000000011287550

Regarding Wiring Diagram information, refer to [MWI-65. "Wiring Diagram"](#).

1.CHECK HARNESS CONNECTOR

1. Turn ignition switch OFF.
2. Check combination meter and fuel level sensor unit and fuel pump (fuel level sensor) terminals (meter-side and harness-side) for poor connection.

Is the inspection result normal?


- YES >> GO TO 2
 NO >> Repair or replace terminals or connectors.

2.CHECK FUEL LEVEL SENSOR UNIT AND FUEL PUMP (FUEL LEVEL SENSOR) CIRCUIT

1. Disconnect combination meter connector and fuel level sensor unit and fuel pump (fuel level sensor) connector.
2. Check continuity between combination meter harness connector (B) and fuel level sensor unit and fuel pump (fuel level sensor) harness connector (A).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
C5	2	M24	15	Yes

3. Check continuity between fuel level sensor unit and fuel pump (fuel level sensor) harness connector (A) and ground.

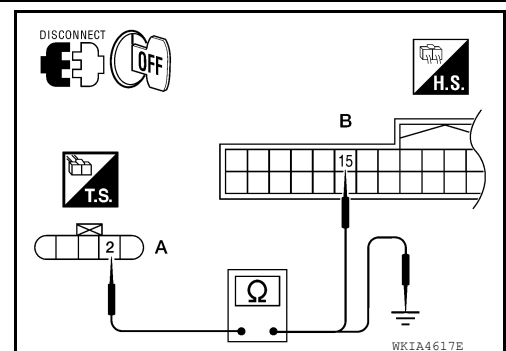

FUEL LEVEL SENSOR SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

A		Ground	Continuity
Connector	Terminal		
C5	2		No

Is the inspection result normal?

YES >> GO TO 3


NO >> Repair harness or connector.

3. CHECK FUEL LEVEL SENSOR UNIT AND FUEL PUMP (FUEL LEVEL SENSOR) GROUND CIRCUIT

1. Check continuity between combination meter harness connector (B) and fuel level sensor unit and fuel pump (fuel level sensor) harness connector (A).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
C5	5	M24	16	Yes

2. Check continuity between fuel level sensor unit and fuel pump (fuel level sensor) harness connector (A) and ground.

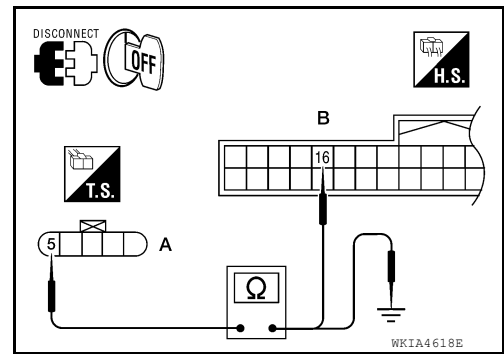

A		Ground	Continuity
Connector	Terminal		
C5	5		No

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair harness or connector.

4. CHECK INSTALLATION CONDITION

Check fuel level sensor unit and fuel pump (fuel level sensor) installation, and check whether the float arm interferes or binds with any of the internal components in the fuel tank.

Is the inspection result normal?

YES >> Inspection End.

NO >> Install the fuel level sensor unit and fuel pump (fuel level sensor) properly.

Component Inspection

INFOID:000000011287551

1. REMOVE FUEL LEVEL SENSOR UNIT AND FUEL PUMP (FUEL LEVEL SENSOR)

Remove the fuel level sensor unit and fuel pump (fuel level sensor). Refer to [FL-12. "Removal and Installation"](#).

>> GO TO 2

2. CHECK FUEL LEVEL SENSOR UNIT AND FUEL PUMP (FUEL LEVEL SENSOR)

Check the resistance between terminals 2 and 5.


Terminal		Float position mm (in)		Resistance value (Approx.)
2	5	*1	Empty	7.5 (0.3)
		*2	Full	218.9 (8.6)

*1 and *2: When float arm is in contact with stopper.

Is inspection result normal?

YES >> Inspection End.

NO >> Replace fuel level sensor unit and fuel pump (fuel level sensor). Refer to [FL-12. "Removal and Installation"](#).

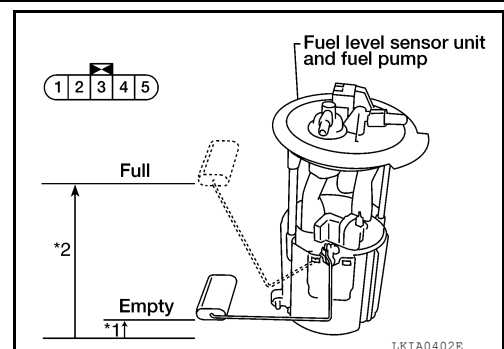

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

OIL PRESSURE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

OIL PRESSURE SWITCH SIGNAL CIRCUIT

Description

INFOID:000000011287552

Detects the engine oil pressure and transmits the oil pressure switch signal to the IPDM E/R.

Component Function Check

INFOID:000000011287553

1.COMBINATION METER INPUT SIGNAL

1. Select "METER/M&A" on CONSULT.
2. Monitor "OIL W/L" of "DATA MONITOR" while operating ignition switch.

OIL W/L

When ignition switch is in ON : ON
position (Engine stopped)

When engine is running : OFF

>> Inspection End.

Diagnosis Procedure

INFOID:000000011287554

Regarding Wiring Diagram information, refer to [MWI-65. "Wiring Diagram"](#).

1.CHECK OIL PRESSURE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector E122 and oil pressure switch connector F4.
3. Check continuity between IPDM E/R harness connector E122 terminal 42 and oil pressure switch harness connector F4 terminal 1.

Continuity should exist.

4. Check continuity between IPDM E/R harness connector E122 terminal 42 and ground.

Continuity should not exist.

Are the inspection results normal?

- YES >> Inspection End.
NO >> Repair harness or connector.


Component Inspection

INFOID:000000011287555

1.CHECK OIL PRESSURE SWITCH

Check continuity between oil pressure switch and ground.

Condition	Oil pressure [kPa (kg/cm ² , psi)]	Continuity
Engine stopped	Less than 29 (0.3, 4)	Yes
Engine running	More than 29 (0.3, 4)	No

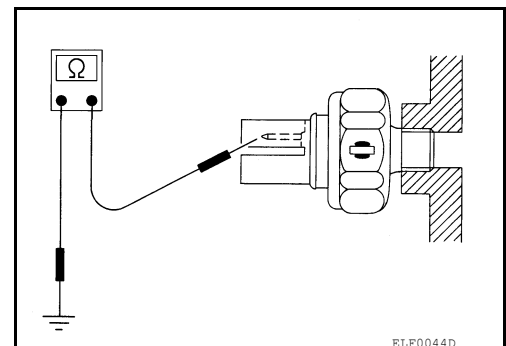

Is the inspection result normal?

OIL PRESSURE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

YES >> Inspection End.
NO >> Replace the oil pressure switch.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

PARKING BRAKE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

PARKING BRAKE SWITCH SIGNAL CIRCUIT

Description

INFOID:000000011287556

Transmits the parking brake switch signal to the combination meter.

Component Function Check

INFOID:000000011287557

1.COMBINATION METER INPUT SIGNAL

1. Start engine.
2. Monitor "BRAKE" warning lamp while applying and releasing the parking brake.

BRAKE warning lamp

Parking brake applied : ON

Parking brake released : OFF

>> Inspection End.

Diagnosis Procedure

INFOID:000000011287558

Regarding Wiring Diagram information, refer to [MWI-65, "Wiring Diagram"](#).


1.CHECK PARKING BRAKE SWITCH CIRCUIT

1. Disconnect combination meter connector and parking brake switch connector.
2. Check continuity between combination meter harness connector M24 (A) terminal 23 and parking brake switch harness connector M11 (B) terminal 1.

23 - 1 : Continuity should exist.

3. Check continuity between combination meter harness connector M24 (A) terminal 23 and ground.

23 - Ground : Continuity should not exist.

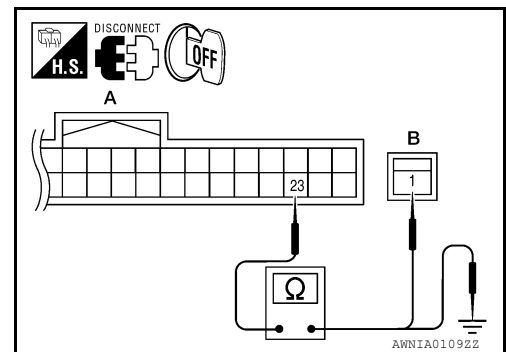

Is the inspection result normal?

- YES >> Inspection End.
NO >> Repair harness or connector.

Component Inspection

INFOID:000000011287559


1.CHECK PARKING BRAKE SWITCH

Check continuity between parking brake switch terminal 1 and switch case ground.

Component	Terminal	Condition	Continuity
Parking brake switch	1	Parking brake applied	Yes
		Parking brake released	No

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace parking brake switch.

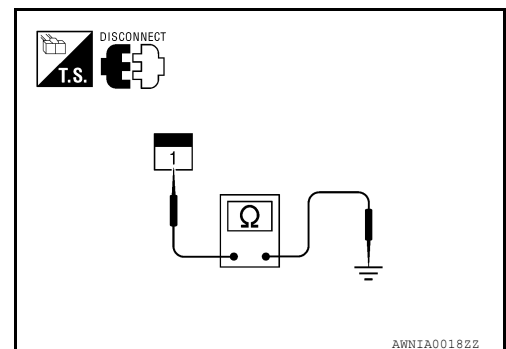

WASHER LEVEL SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

WASHER LEVEL SWITCH SIGNAL CIRCUIT

Description

INFOID:0000000011287560

Transmits the washer fluid level switch signal to the combination meter.

Diagnosis Procedure

INFOID:0000000011287561

Regarding Wiring Diagram information, refer to [MWI-65, "Wiring Diagram"](#).


1. CHECK WASHER FLUID LEVEL SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and washer fluid level switch connector.
3. Check continuity between combination meter harness connector M24 (A) terminal 37 and washer fluid level switch harness connector E106 (B) terminal 1.

37 - 1 : Continuity should exist.

4. Check continuity between combination meter harness connector M24 (A) terminal 37 and ground.

37 - Ground : Continuity should not exist.

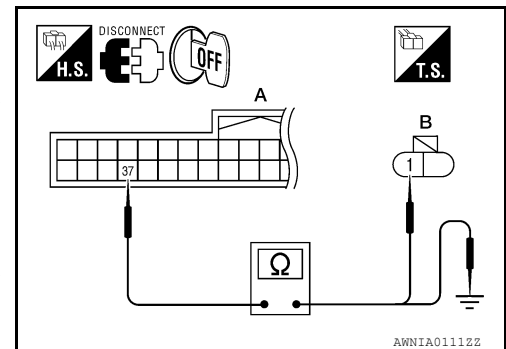

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair harness or connector.

2. CHECK WASHER FLUID LEVEL SWITCH GROUND CIRCUIT


Check continuity between washer fluid level switch harness connector E106 terminal 2 and ground.

2 - Ground : Continuity should exist.

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair harness or connector.

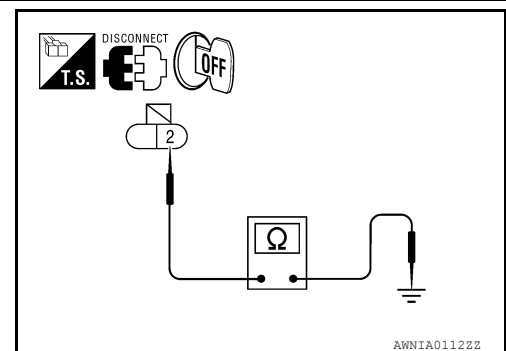

Component Inspection

INFOID:0000000011287562

1. CHECK WASHER FLUID LEVEL SWITCH


Check continuity between washer fluid level switch terminals 1 and 2.

Terminal	Washer fluid level	Continuity
1 - 2	Low	Yes
	Other	No

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace washer fluid level switch.

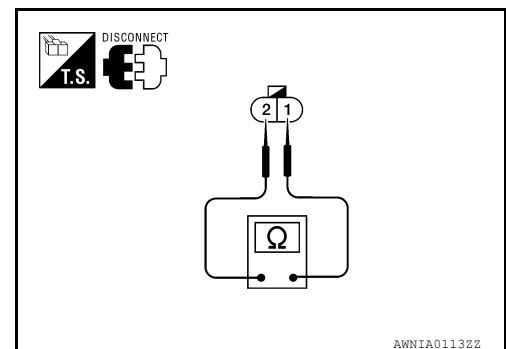

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >


ECU DIAGNOSIS INFORMATION

COMBINATION METER

Reference Value

INFOID:000000011287563

TERMINAL LAYOUT

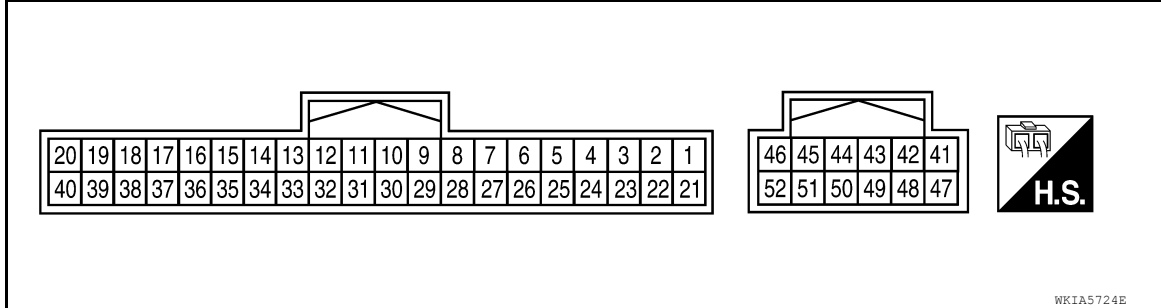


PHYSICAL VALUES

Terminal	Wire color	Item	Condition		Reference value (V) (Approx.)
			Ignition switch	Operation or condition	
1	O	Ignition switch ACC or ON	—	—	Battery voltage
2	P	Air bag warning lamp input	ON	Air bag warning lamp ON	4
				Air bag warning lamp OFF	0
3	BR	CK SUSP warning lamp input	—	CK SUSP warning lamp ON	0
				CK SUSP warning lamp OFF	Battery voltage
4	Y/G	AT 1 Range switch	—	—	—
5	SB	AT 4 Range switch	—	—	—
8	Y/R	Battery power supply	—	—	Battery voltage
9	B	Ground	—	—	0
11	L	CAN-H	—	—	—
12	P	CAN-L	—	—	—
15	Y/L	Fuel level sensor signal	—	—	Refer to MWI-12, "FUEL GAUGE : System Description" .
16	B/P	Fuel level sensor ground	ON	—	0
18	P/B	Brake fluid level switch	ON	Brake fluid level low	0
				Brake fluid level normal	Battery voltage
23	G	Parking brake switch	ON	Parking brake applied	0
				Parking brake released	Battery voltage
24	O/L	Ignition switch ON or START	ON	—	Battery voltage
27	O/B	Seat belt buckle pre-tensioner assembly LH (seat belt buckle switch)	ON	Unfastened (ON)	0
				Fastened (OFF)	Battery voltage
28	G/O	Security indicator input	OFF	Security indicator ON	0
				Security indicator OFF	Battery voltage

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

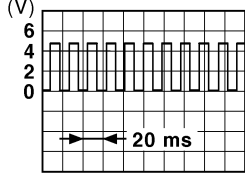Terminal	Wire color	Item	Condition		Reference value (V) (Approx.)
			Ignition switch	Operation or condition	
29	W/R	Vehicle speed signal output (8-pulse)	ON	Speedometer operated [When vehicle speed is approx. 40 km/h (25 MPH)]	NOTE: Maximum voltage may be 12V due to specifications (connected units).  <small>PKIC0643E</small>
35	LG/R	Tow Mode status	—	—	—
36	Y/V	Tow Mode lamp	—	—	—
37	W/L	Washer fluid level switch	ON	Washer fluid level low	0
				Washer fluid level normal	Battery voltage
39	B/R	Start relay	ON	Selector lever: P or N	Battery voltage
				Except above	0
40	GR/R	PNP signal	ON	Selector lever: P or N	0
				Except above	Battery voltage
41	P/L	Seat belt buckle pre-tensioner assembly RH (seat belt buckle swi	ON	Unfastened (ON)	0
				Fastened (OFF)	Battery voltage
45	BR/W	Generator	ON	Generator voltage low	0
				Generator voltage normal	Battery voltage
50	BR	Illumination output	—	—	Refer to INL-9, "System Description" .
52	B	Ground	—	—	0

Fail Safe

INFOID:000000011287564

The combination meter performs a fail-safe operation for the functions listed below when communication is lost.

Function		Specifications
Speedometer		Zero indication.
Tachometer		
Fuel gauge		
Engine coolant temperature gauge		
Engine oil pressure gauge		
Voltage gauge		
A/T oil temperature gauge		
Illumination control	Meter illumination	Change to nighttime mode when communication is lost.
Segment LCD	Odometer	Freeze current indication.
	A/T position	Display turns off.
Buzzer		Buzzer turns off.

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

	Function	Specifications
Warning lamp/indicator lamp	ABS warning lamp	Lamp turns on when communication is lost.
	Brake warning lamp	
	VDC OFF indicator lamp	
	SLIP indicator lamp	
	A/T CHECK warning lamp	Lamp turns off when communication is lost.
	Oil pressure/coolant temperature warning lamp	
	Malfunction indicator lamp	
	Master warning lamp	
	Air bag warning lamp	
	High beam indicator	
	Turn signal indicator lamp	
	Intelligent Key system warning lamp	
	Driver and passenger seat belt warning lamp	Lamp turns off when disconnected.
	Charge warning lamp	
	Security indicator lamp	
	4WD indicator lamp	
	ATP indicator lamp	
	CK SUSP warning lamp	
Low tire pressure warning lamp	Lamp will flash every second for 1 minute and then stay on continuously thereafter.	

DTC Index

INFOID:000000011287565

CONSULT display	Malfunction	Reference page
CAN COMM CIRC [U1000]	Malfunction is detected in CAN communication. CAUTION: Even when there is no malfunction on CAN communication system, malfunction may be misinterpreted when battery has low voltage (when maintaining 7 - 8 V for about 2 seconds) or 10A fuse [No. 19, located in the fuse block (J/B)] is disconnected.	MWI-30
VEHICLE SPEED CIRC [B2205]	Malfunction is detected when an erroneous speed signal is input. CAUTION: Even when there is no malfunction on speed signal system, malfunction may be misinterpreted when battery has low voltage (when maintaining 7 - 8 V for about 2 seconds).	MWI-31

NOTE:

“TIME” indicates the following.

- 0: Indicates that a malfunction is detected at present.
- 1-63: Indicates that a malfunction was detected in the past. (Displays number of ignition switch OFF → ON cycles after malfunction is detected. Self-diagnosis result is erased when “63” is exceeded.)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000011513526

NOTE:

The Signal Tech II Tool (J-50190) can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Check Intelligent Key relative signal strength
- Confirm vehicle Intelligent Key antenna signal strength
- Test remote keyless entry keyfob relative signal strength

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
ACC ON SW	Ignition switch OFF or ON	Off
	Ignition switch ACC	On
AIR COND SW	A/C switch OFF	Off
	A/C switch ON	On
AIR PRESS FL	Front left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS FR	Front right tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RL	Rear left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RR	Rear right tire air pressure value	kPa, kg/cm ² , psi
AUTO LIGHT SW	Lighting switch OFF	Off
	Lighting switch AUTO	On
BACK DOOR SW	Back door closed	Off
	Back door opened	On
BRAKE SW	Brake pedal released	Off
	Brake pedal applied	On
BUCKLE SW	Seat belt buckle unfastened	Off
	Seat belt buckle fastened	On
BUZZER	Buzzer in combination meter OFF	Off
	Buzzer in combination meter ON	On
CARGO LAMP SW	Cargo lamp switch OFF	Off
	Cargo lamp switch ON	On
CDL LOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the LOCK side	On
CDL UNLOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the UNLOCK side	On
DOOR SW-AS	Front door RH closed	Off
	Front door RH opened	On
DOOR SW-DR	Front door LH closed	Off
	Front door LH opened	On
DOOR SW-RL	Rear door LH closed	Off
	Rear door LH opened	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
DOOR SW-RR	Rear door RH closed	Off
	Rear door RH opened	On
FAN ON SIG	Blower motor fan switch OFF	Off
	Blower motor fan switch ON	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER LOW	Front wiper switch OFF	Off
	Front wiper switch LO	On
FR WIPER HI	Front wiper switch OFF	Off
	Front wiper switch HI	On
FR WIPER INT	Front wiper switch OFF	Off
	Front wiper switch INT	On
FR WIPER STOP	Any position other than front wiper stop position	Off
	Front wiper stop position	On
HAZARD SW	When hazard switch is not pressed	Off
	When hazard switch is pressed	On
HEAD LAMP SW1	Headlamp switch OFF	Off
	Headlamp switch 1st	On
HEAD LAMP SW2	Headlamp switch OFF	Off
	Headlamp switch 1st	On
HI BEAM SW	High beam switch OFF	Off
	High beam switch HI	On
ID REGST FL1	ID registration of front left tire incomplete	YET
	ID registration of front left tire complete	DONE
ID REGST FR1	ID registration of front right tire incomplete	YET
	ID registration of front right tire complete	DONE
ID REGST RL1	ID registration of rear left tire incomplete	YET
	ID registration of rear left tire complete	DONE
ID REGST RR1	ID registration of rear right tire incomplete	YET
	ID registration of rear right tire complete	DONE
IGN ON SW	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
IGN SW CAN	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
I-KEY LOCK ¹	LOCK button of Intelligent Key is not pressed	Off
	LOCK button of Intelligent Key is pressed	On
I-KEY PANIC ¹	PANIC button of Intelligent Key is not pressed	Off
	PANIC button of Intelligent Key is pressed	On
I-KEY PW DWN ¹	UNLOCK button of Intelligent Key is not pressed	Off
	UNLOCK button of Intelligent Key is pressed for greater than 3 seconds and driver's window operating in DOWN direction	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
I-KEY UNLOCK ¹	UNLOCK button of Intelligent Key is not pressed	Off	A
	UNLOCK button of Intelligent Key is pressed	On	
KEY CYL LK-SW	Door key cylinder LOCK position	On	B
	Door key cylinder other than LOCK position	Off	
KEY CYL UN-SW	Door key cylinder UNLOCK position	On	C
	Door key cylinder other than UNLOCK position	Off	
KEY ON SW	Mechanical key is removed from key cylinder	Off	
	Mechanical key is inserted to key cylinder	On	D
KEYLESS LOCK ²	LOCK button of key fob is not pressed	Off	
	LOCK button of key fob is pressed	On	E
KEYLESS PANIC ²	PANIC button of key fob is not pressed	Off	
	PANIC button of key fob is pressed	On	F
KEYLESS UNLOCK ²	UNLOCK button of key fob is not pressed	Off	
	UNLOCK button of key fob is pressed	On	G
LIGHT SW 1ST	Lighting switch OFF	Off	
	Lighting switch 1st	On	H
OIL PRESS SW	<ul style="list-style-type: none"> • Ignition switch OFF or ACC • Engine running 	Off	
	Ignition switch ON	On	I
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5V	
	Dark outside of the vehicle	Close to 0V	J
PASSING SW	Other than lighting switch PASS	Off	
	Lighting switch PASS	On	K
PUSH SW ¹	Return to ignition switch to LOCK position	Off	
	Press ignition switch	On	L
REAR DEF SW	Rear window defogger switch OFF	Off	
	Rear window defogger switch ON	On	M
RR WASHER SW	Rear washer switch OFF	Off	
	Rear washer switch ON	On	MW I
RR WIPER INT	Rear wiper switch OFF	Off	
	Rear wiper switch INT	On	O
RR WIPER ON	Rear wiper switch OFF	Off	
	Rear wiper switch ON	On	P
RR WIPER STOP	Rear wiper stop position	Off	
	Other than rear wiper stop position	On	
RR WIPER STP2	Rear wiper stop position	Off	
	Other than rear wiper stop position	On	
TURN SIGNAL L	Turn signal switch OFF	Off	
	Turn signal switch LH	On	
TURN SIGNAL R	Turn signal switch OFF	Off	
	Turn signal switch RH	On	
VEHICLE SPEED	While driving	Equivalent to speedometer reading	
WARNING LAMP	Low tire pressure warning lamp in combination meter OFF	Off	
	Low tire pressure warning lamp in combination meter ON	On	

1: With Intelligent Key


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

2: With remote keyless entry system

Terminal Layout

INFOID:000000011513527

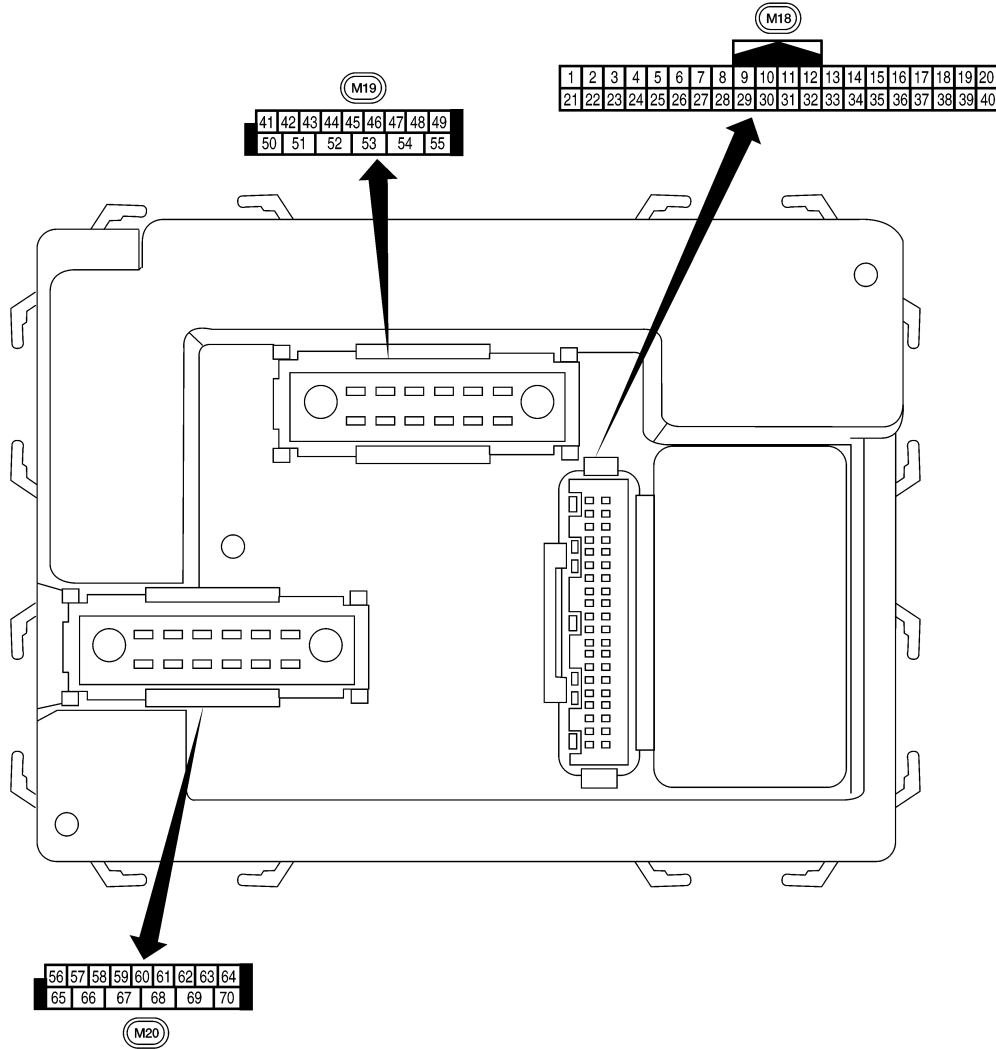


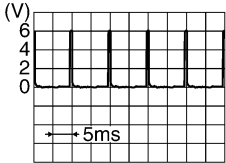

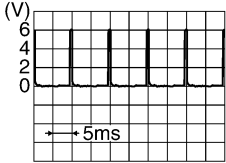
AWMIA15422Z

Physical Values

INFOID:000000011513528

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR/W	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)	Battery voltage
					Door is unlocked (SW ON)	0V
2	SB	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
3	G/Y	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
4	Y	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
5	G/B	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
6	V	Combination switch input 1				
9	R/G	Stop lamp switch	Input	OFF	Brake pedal depressed	Battery voltage
					Brake pedal released	0V
10	G	Hazard lamp flash	Input	OFF	ON (opening or closing)	0V
					OFF (other than above)	Battery voltage
11	O	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage
12	R/L	Front door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
13	GR	Rear door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
15	L/W	Tire pressure warning check connector	Input	OFF	—	5V
18	P	Remote keyless entry receiver and optical sensor (ground)	Output	OFF	—	0V

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
19	V/W	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	<p style="text-align: right; font-size: small;">LIIA1893E</p>
20	G/W	Remote keyless entry receiver (signal)	Input	OFF	Stand-by (keyfob buttons released)	<p style="text-align: right; font-size: small;">LIIA1894E</p>
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	<p style="text-align: right; font-size: small;">LIIA1895E</p>
21	G	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
22	G	BUS	—	—	Ignition switch ON or power window timer operates	<p style="text-align: right; font-size: small;">PIIA2344E</p>
23	G/O	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
26	Y/L	Rear wiper auto stop switch 2	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	0V
					Forward sweep (counterclockwise direction)	Fluctuating
					B Position (full counterclockwise stop position)	Battery voltage
					Reverse sweep (clockwise direction)	Fluctuating
27	W/R	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V

BCM (BODY CONTROL MODULE)



< ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
28	L/R	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	W/B	Hazard switch	Input	OFF	ON	0V
					OFF	5V
32	R/G	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	
33	R/Y	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	
34	L	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	
35	O/B	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1				
37 ¹	B/R	Key switch and ignition knob switch	Input	OFF	Intelligent Key inserted	Battery voltage
					Intelligent Key removed	0V
37 ²	B/R	Key switch and key lock solenoid	Input	OFF	Key inserted	Battery voltage
					Key removed	0V
38	W/L	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
41	GR/R	Rear window defogger switch	Input	ON	Rear window defogger switch ON	0V
					Rear window defogger switch OFF	5V
42	GR	Glass hatch ajar switch	Input	ON	Glass hatch open	0
					Glass hatch closed	Battery

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

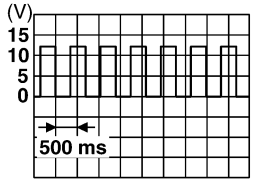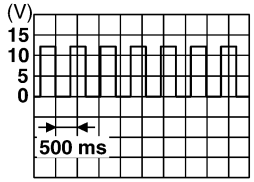Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
43	R/B	Back door switch (without power back door) or back door latch (door ajar switch) (with power back door)	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
44	O	Rear wiper auto stop switch 1	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	Battery voltage
					Forward sweep (counterclockwise direction)	Fluctuating
					B Position (full counterclockwise stop position)	0V
					Reverse sweep (clockwise direction)	Fluctuating
47	SB	Front door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
48	R/Y	Rear door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
49	R	Cargo lamp	Output	OFF	Any door open (ON)	0V
					All doors closed (OFF)	Battery voltage
51	Y/B	Trailer turn signal (right)	Output	ON	Turn right ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>
52	G/B	Trailer turn signal (left)	Output	ON	Turn left ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>
54	Y	Rear wiper output circuit 2	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	0V
					Forward sweep (counterclockwise direction)	0V
					B Position (full counterclockwise stop position)	Battery voltage
					Reverse sweep (clockwise direction)	Battery voltage
55	SB	Rear wiper output circuit 1	Output	ON	OFF	0
					ON	Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

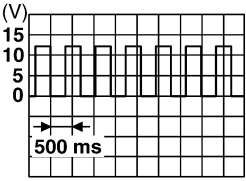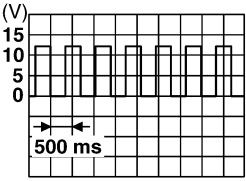Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
56	R/G	Battery saver output	Output	OFF	10 minutes after ignition switch is turned OFF	0V
				ON	—	Battery voltage
57	Y/R	Battery power supply	Input	OFF	—	Battery voltage
58	W/R	Optical sensor	Input	ON	When optical sensor is illuminated	3.1V or more
					When optical sensor is not illuminated	0.6V or less
59	G	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
60	G/B	Turn signal (left)	Output	ON	Turn left ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>
61	G/Y	Turn signal (right)	Output	ON	Turn right ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>
62	R/W	Foot lamp LH and RH	Output	OFF	ON (any door open)	0V
					OFF (all doors closed)	Battery voltage
63	L	Interior room/map lamp	Output	OFF	Any door switch	ON (open) OFF (closed)
						Battery voltage
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V
					ON (lock)	Battery voltage
66	G/Y	Front door lock actuator RH, rear door lock actuators LH/RH and back door lock actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
67	B	Ground	Input	ON	—	0V
68	W/L	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
69	W/R	Power window power supply	Output	—	—	Battery voltage
70	W/B	Battery power supply	Input	OFF	—	Battery voltage

1: With Intelligent Key system

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

2: With remote keyless entry system

Fail Safe

INFOID:000000011513529

Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

Display contents of CONSULT	Fail-safe	Cancellation
U1000: CAN COMM CIRCUIT	Inhibit engine cranking	When the BCM re-establishes communication with the other modules.

DTC Inspection Priority Chart

INFOID:000000011513530

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none">• U1000: CAN COMM CIRCUIT
2	<ul style="list-style-type: none">• B2190: NATS ANTENNA AMP• B2191: DIFFERENCE OF KEY• B2192: ID DISCORD BCM-ECM• B2193: CHAIN OF BCM-ECM• B2013: STRG COMM 1• B2552: INTELLIGENT KEY• B2590: NATS MALFUNCTION
3	<ul style="list-style-type: none">• C1729: VHCL SPEED SIG ERR• C1735: IGNITION SIGNAL
4	<ul style="list-style-type: none">• C1708: [NO DATA] FL• C1709: [NO DATA] FR• C1710: [NO DATA] RR• C1711: [NO DATA] RL• C1712: [CHECKSUM ERR] FL• C1713: [CHECKSUM ERR] FR• C1714: [CHECKSUM ERR] RR• C1715: [CHECKSUM ERR] RL• C1716: [PRESSDATA ERR] FL• C1717: [PRESSDATA ERR] FR• C1718: [PRESSDATA ERR] RR• C1719: [PRESSDATA ERR] RL• C1720: [CODE ERR] FL• C1721: [CODE ERR] FR• C1722: [CODE ERR] RR• C1723: [CODE ERR] RL• C1724: [BATT VOLT LOW] FL• C1725: [BATT VOLT LOW] FR• C1726: [BATT VOLT LOW] RR• C1727: [BATT VOLT LOW] RL

DTC Index

INFOID:000000011513531

NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page	A
No DTC is detected. further testing may be required.	—	—	—	—	B
U1000: CAN COMM CIRCUIT	—	—	—	BCS-29	C
B2013: STRG COMM 1	—	—	—	SEC-30	D
B2190: NATS ANTENNA AMP	—	—	—	SEC-33 (with I- Key), SEC-143 (without I-Key)	D
B2191: DIFFERENCE OF KEY	—	—	—	SEC-36 (with I- Key), SEC-146 (without I-Key)	E
B2192: ID DISCORD BCM-ECM	—	—	—	SEC-37 (with I- Key), SEC-147 (without I-Key)	F
B2193: CHAIN OF BCM-ECM	—	—	—	SEC-39 (with I- Key), SEC-149 (without I-Key)	G
B2552: INTELLIGENT KEY	—	—	—	SEC-41	H
B2590: NATS MALFUNCTION	—	—	—	SEC-42	I
C1708: [NO DATA] FL	—	—	—	WT-15	I
C1709: [NO DATA] FR	—	—	—	WT-17	J
C1710: [NO DATA] RR	—	—	—	WT-17	K
C1711: [NO DATA] RL	—	—	—	WT-17	L
C1712: [CHECKSUM ERR] FL	—	—	—	WT-17	M
C1713: [CHECKSUM ERR] FR	—	—	—	WT-17	MWI
C1714: [CHECKSUM ERR] RR	—	—	—	WT-17	O
C1715: [CHECKSUM ERR] RL	—	—	—	WT-17	P
C1716: [PRESSDATA ERR] FL	—	—	—	WT-19	
C1717: [PRESSDATA ERR] FR	—	—	—	WT-17	
C1718: [PRESSDATA ERR] RR	—	—	—	WT-17	
C1719: [PRESSDATA ERR] RL	—	—	—	WT-17	
C1720: [CODE ERR] FL	—	—	—	WT-17	
C1721: [CODE ERR] FR	—	—	—	WT-17	
C1722: [CODE ERR] RR	—	—	—	WT-17	
C1723: [CODE ERR] RL	—	—	—	WT-17	
C1724: [BATT VOLT LOW] FL	—	—	—	WT-17	
C1725: [BATT VOLT LOW] FR	—	—	—	WT-17	
C1726: [BATT VOLT LOW] RR	—	—	—	WT-17	
C1727: [BATT VOLT LOW] RL	—	—	—	WT-17	
C1729: VHCL SPEED SIG ERR	—	—	—	WT-21	
C1735: IGN_CIRCUIT_OPEN	—	—	—	WT-22	

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000011513532

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1, 2, 3, 4
AC COMP REQ	A/C switch OFF		Off
	A/C switch ON		On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		<ul style="list-style-type: none"> • Front fog lamp switch ON • Daytime light activated (Canada only) 	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
ST RLY REQ	Ignition switch OFF or ACC		Off
	Ignition switch START		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
RR DEF REQ	Rear defogger switch OFF		Off
	Rear defogger switch ON		On
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
DTRL REQ	Not operated		Off
	Daytime Running Lights ON		On
THFT HRN REQ	Not operated		Off
	<ul style="list-style-type: none"> • Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 		On


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
HORN CHIRP	Not operated	Off
	Door locking with keyfob or Intelligent Key (if equipped) (horn chirp mode)	On

Terminal Layout

INFOID:000000011513533

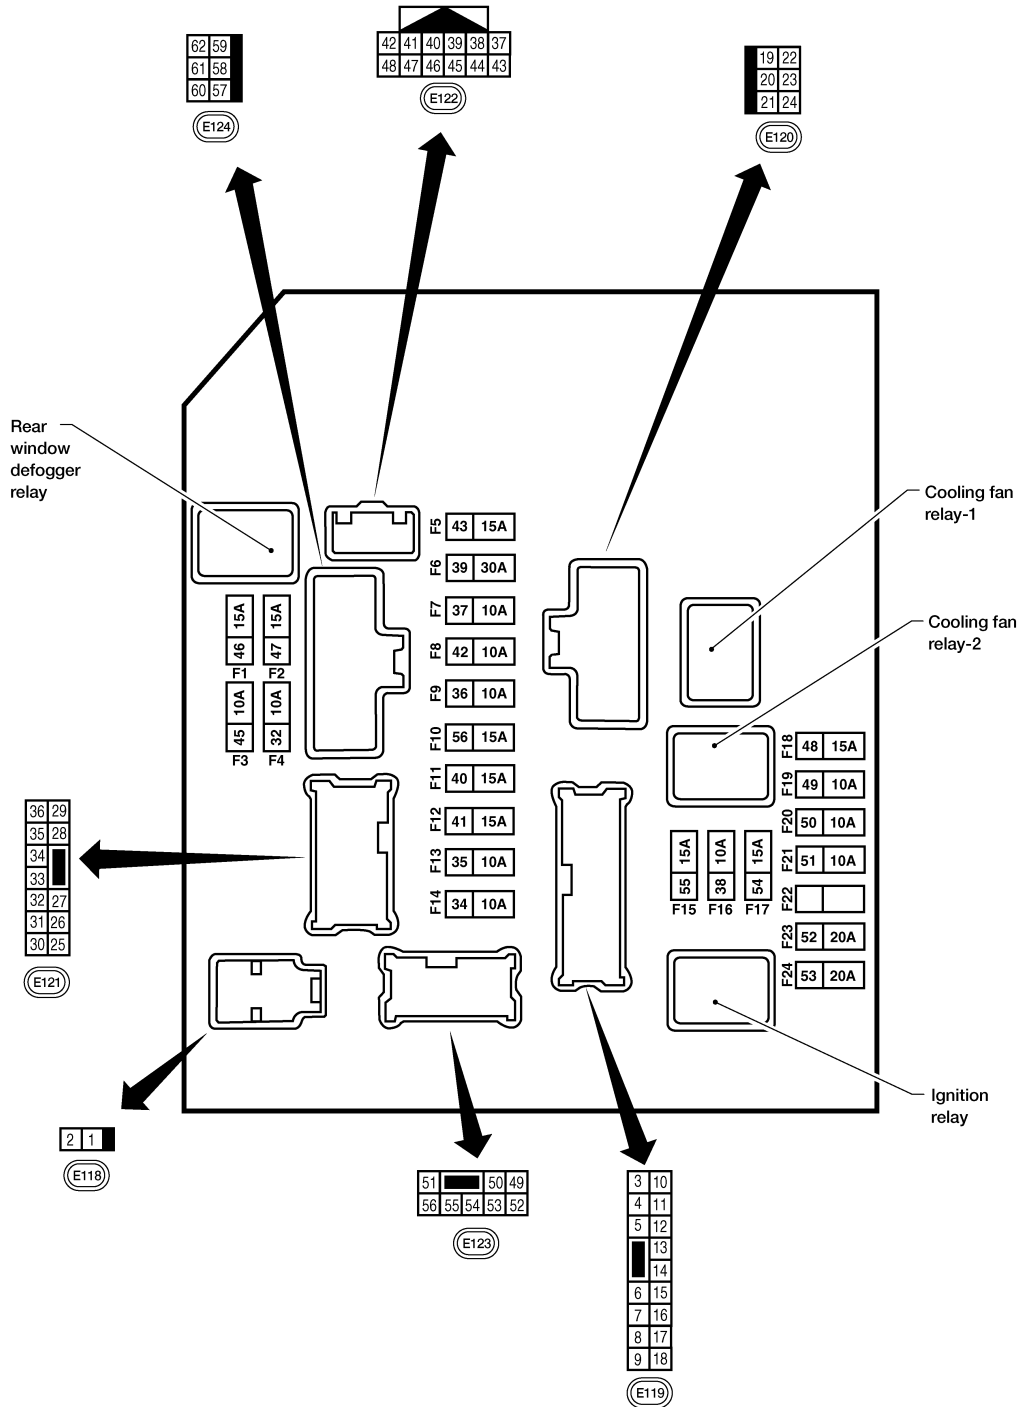

NOTE:

Numbers preceded by an "F" represent the fuse numbers imprinted on the IPDM E/R. The other numbers represent the fuse numbers as they appear in the wiring diagrams.

AWMIA1631GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Physical Values

INFOID:000000011513534

PHYSICAL VALUES

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
1	B/Y	Battery power supply	Input	OFF	—	Battery voltage
2	R	Battery power supply	Input	OFF	—	Battery voltage
3	BR	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
4	W/L	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
6	L	Throttle control motor relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
7	W/B	ECM relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
8	R/B	Fuse 54	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
10	G	Fuse 45 (Canada only)	Output	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
11	Y/B	A/C compressor	Output	ON or START	A/C switch ON or defrost A/C switch	Battery voltage
					A/C switch OFF or defrost A/C switch	0V
12	L/W	Ignition switch supplied power	Input	—	OFF or ACC	0V
					ON or START	Battery voltage
13	B/Y	Fuel pump relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
14	Y/R	Fuse 49	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
15	LG/B	Fuse 50	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
16	G	Fuse 51	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
17	W	Fuse 55	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
19	W/R	Starter motor	Output	START	—	Battery voltage
21	BR	Ignition switch supplied power	Input	—	OFF or ACC	0V
					START	Battery voltage
22	G	Battery power supply	Output	OFF	—	Battery voltage
23	GR/W	Door mirror defogger output signal	Output	—	When rear defogger switch is ON	Battery voltage
					When rear defogger switch is OFF	0V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
24	L	Cooling fan relay	Output	—	Conditions correct for cooling fan operation	Battery voltage
					Conditions not correct for cooling fan operation	0V
27	W/B	Fuse 38	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
30	W	Fuse 53	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
32	L	Wiper low speed signal	Output	ON or START	Wiper switch OFF	0V
					LO or INT	Battery voltage
35	L/B	Wiper high speed signal	Output	ON or START	Wiper switch OFF, LO, INT	0V
					HI	Battery voltage
37	Y	Power generation command signal	Output	—	Ignition switch ON	<p style="text-align: right;">JPMIA0001GB 6.3 V</p>
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	<p style="text-align: right;">JPMIA0002GB 3.8 V</p>
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	<p style="text-align: right;">JPMIA0003GB 1.4 V</p>
38	B	Ground	Input	—	—	0V
39	L	CAN-H	—	ON	—	—
40	P	CAN-L	—	ON	—	—
42	GR	Oil pressure switch	Input	—	Engine running	Battery voltage
					Engine stopped	0V
43	L/Y	Wiper auto stop signal	Input	ON or START	Wiper switch OFF, LO, INT	Battery voltage
44	BR	Daytime light relay control (Canada only)	Input	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage

A
B
C
D
E
F
G
H
I
J
K
L
M



IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)	
				Ignition switch	Operation or condition		
45	G/W	Horn relay control	Input	ON	When door locks are operated using keyfob or Intelligent Key (if equipped) (OFF → ON)*	Battery voltage → 0V	
46	GR	Fuel pump relay control	Input	—	Ignition switch ON or START	0V	
					Ignition switch OFF or ACC	Battery voltage	
47	O	Throttle control motor relay control	Input	—	Ignition switch ON or START	0V	
					Ignition switch OFF or ACC	Battery voltage	
48	B/R	Starter relay (inhibit switch)	Input	ON or START	Selector lever in "P" or "N"	0V	
					Selector lever any other position	Battery voltage	
49	R/L	Trailer tow relay illumination	Output	ON	Lighting switch must be in the 1st position	OFF	0V
						ON	Battery voltage
50	W/R	Front fog lamp (LH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	OFF	0V
						ON	Battery voltage
51	W/R	Front fog lamp (RH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	OFF	0V
						ON	Battery voltage
52	L	LH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage	
54	R/Y	RH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage	
55	G	LH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage	
56	Y (With DTRL)	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage	
56	L/W (Without DTRL)	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage	
57	R/L	Parking, license, and tail lamp	Output	ON	Lighting switch 1st position	OFF	0V
						ON	Battery voltage
59	B	Ground	Input	—	—	0V	
60	B	Rear window defogger relay	Output	ON or START	Rear defogger switch ON	Battery voltage	
					Rear defogger switch OFF	0V	
61	BR	Fuse 32	Output	OFF	—	Battery voltage	

*: When horn reminder is ON

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Fail Safe

INFOID:000000011513535

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

Control part	Fail-safe in operation
Cooling fan	<ul style="list-style-type: none">• Turns ON the cooling fan relay when the ignition switch is turned ON• Turns OFF the cooling fan relay when the ignition switch is turned OFF

If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none">• Turns ON the headlamp low relay when the ignition switch is turned ON• Turns OFF the headlamp low relay when the ignition switch is turned OFF• Headlamp high relay OFF
<ul style="list-style-type: none">• Parking lamps• License plate lamps• Tail lamps	<ul style="list-style-type: none">• Turns ON the tail lamp relay when the ignition switch is turned ON• Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none">• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Rear window defogger	Rear window defogger relay OFF
A/C compressor	A/C relay OFF
Front fog lamps (if equipped)	Front fog lamp relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Ignition switch	Ignition relay	Tail lamp relay
ON	ON	—
OFF	OFF	—

NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “DATA MONITOR” that displays “Block” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI

O
P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:0000000011513536

CONSULT display	Fail-safe	TIME ^{NOTE}		Refer to
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39	PCS-16

NOTE:

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ··· 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

COMPASS


< WIRING DIAGRAM >

WIRING DIAGRAM

COMPASS

Wiring Diagram

INFOID:000000011287577

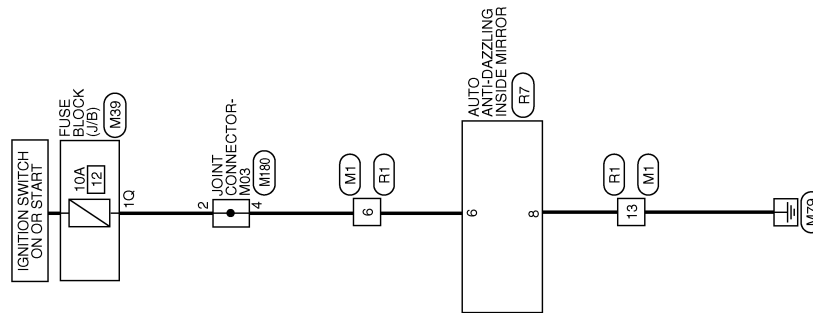

COMPASS


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

ABNWA2282GB

COMPASS CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
6	G/R	-
13	B	-

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1Q	G/R	-

Connector No.	M180
Connector Name	JOINT CONNECTOR-M03
Connector Color	BLUE

 

Terminal No.	Color of Wire	Signal Name
2	G/R	-
4	G/R	-

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
6	G/R	-
13	B	-

Connector No.	R7
Connector Name	AUTO ANTI-DAZZLING INSIDE MIRROR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
6	G/R	-
8	B	-

ABNIA6216GB


METER

< WIRING DIAGRAM >

METER

Wiring Diagram

INFOID:000000011287578

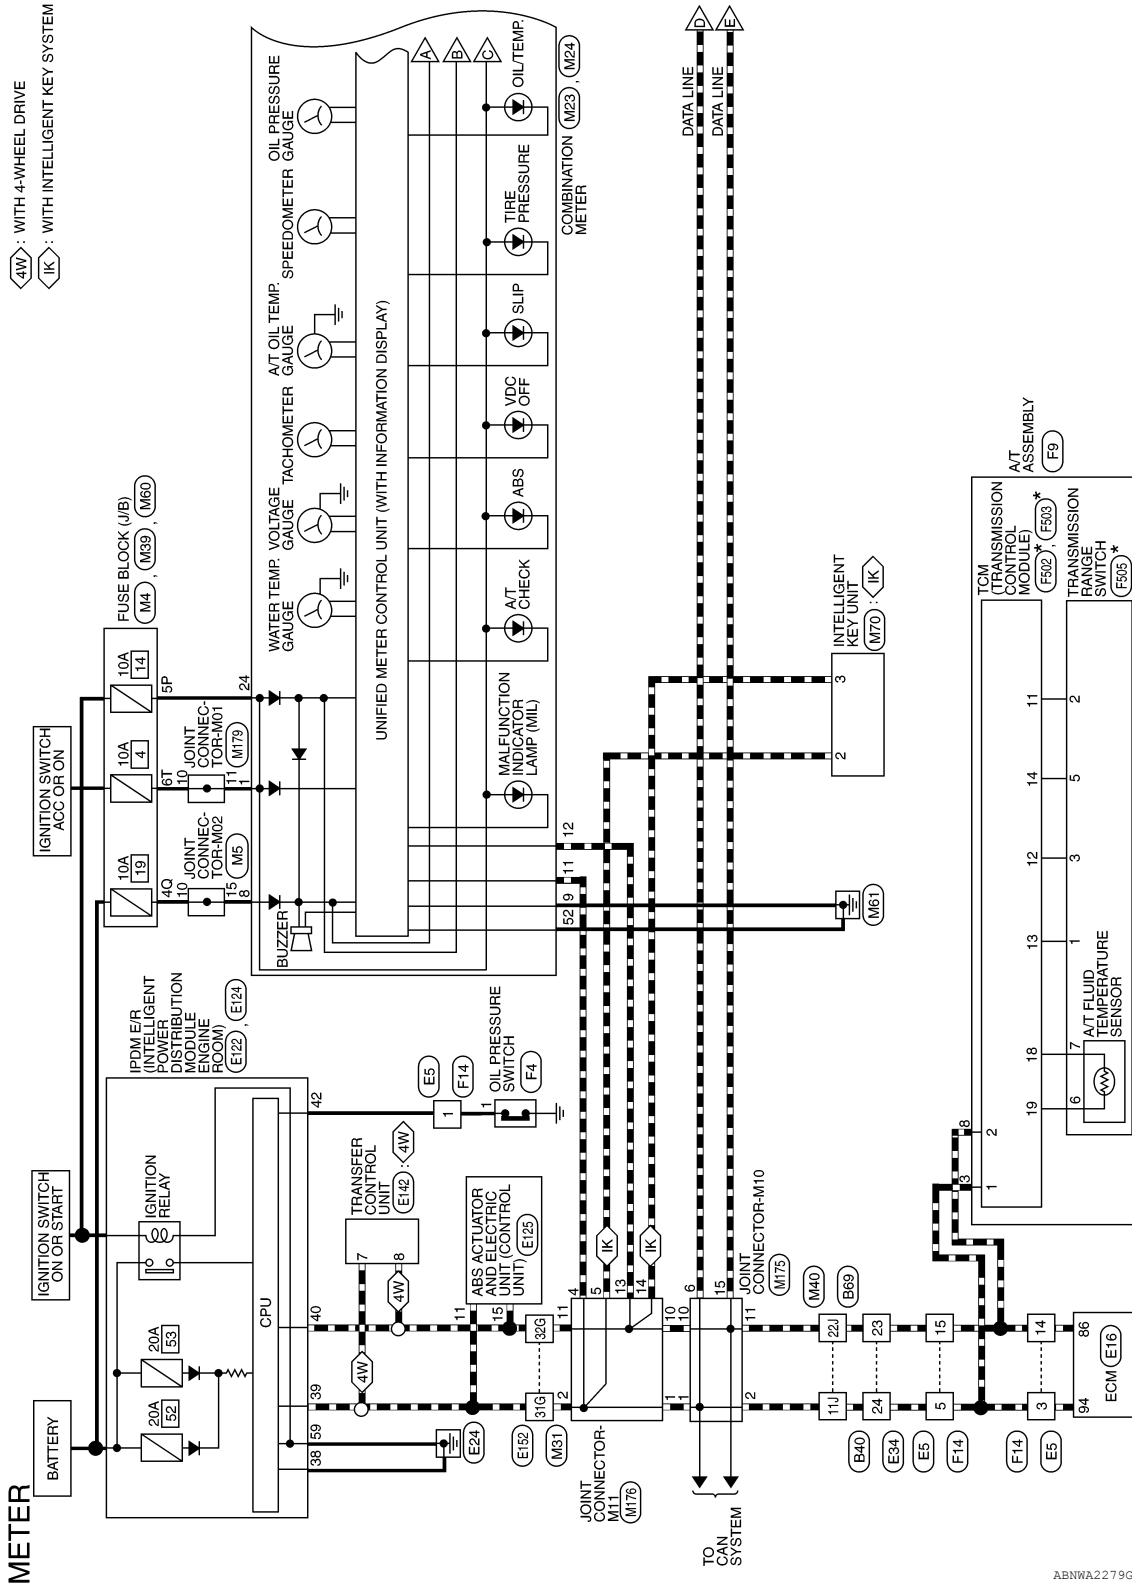

* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.

ABNWA2279GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



METER

< WIRING DIAGRAM >

- <IK> : WITH INTELLIGENT KEY SYSTEM
- <OK> : WITHOUT INTELLIGENT KEY SYSTEM
- <PB> : WITH POWER BACK DOOR
- <XB> : WITHOUT POWER BACK DOOR

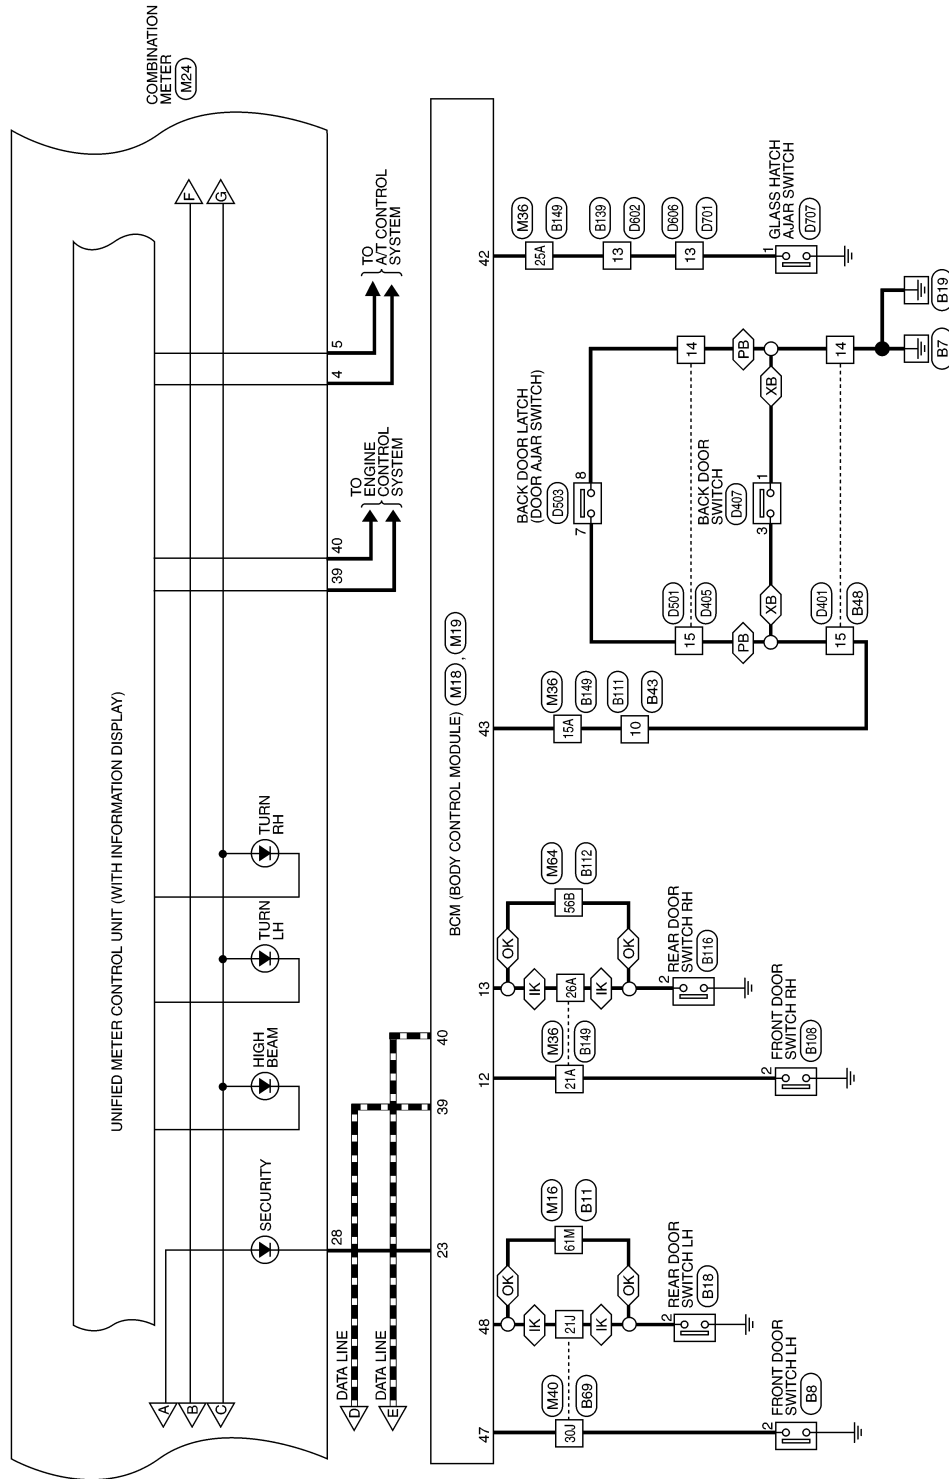


ABNWA2280GB

METER

< WIRING DIAGRAM >

4W : WITH 4-WHEEL DRIVE
LL : WITH REAR LOAD LEVELING AIR SUSPENSION SYSTEM

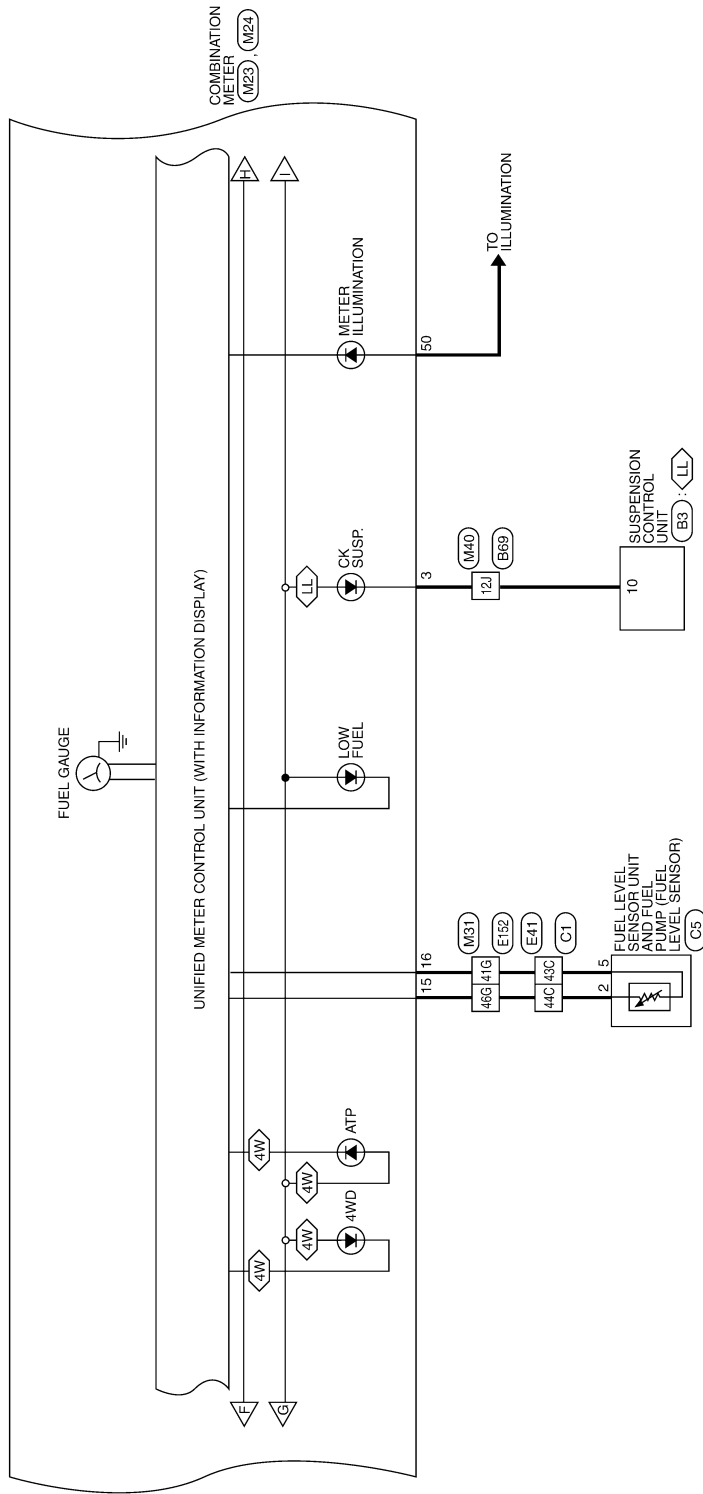


ABNWA1540GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

METER


< WIRING DIAGRAM >

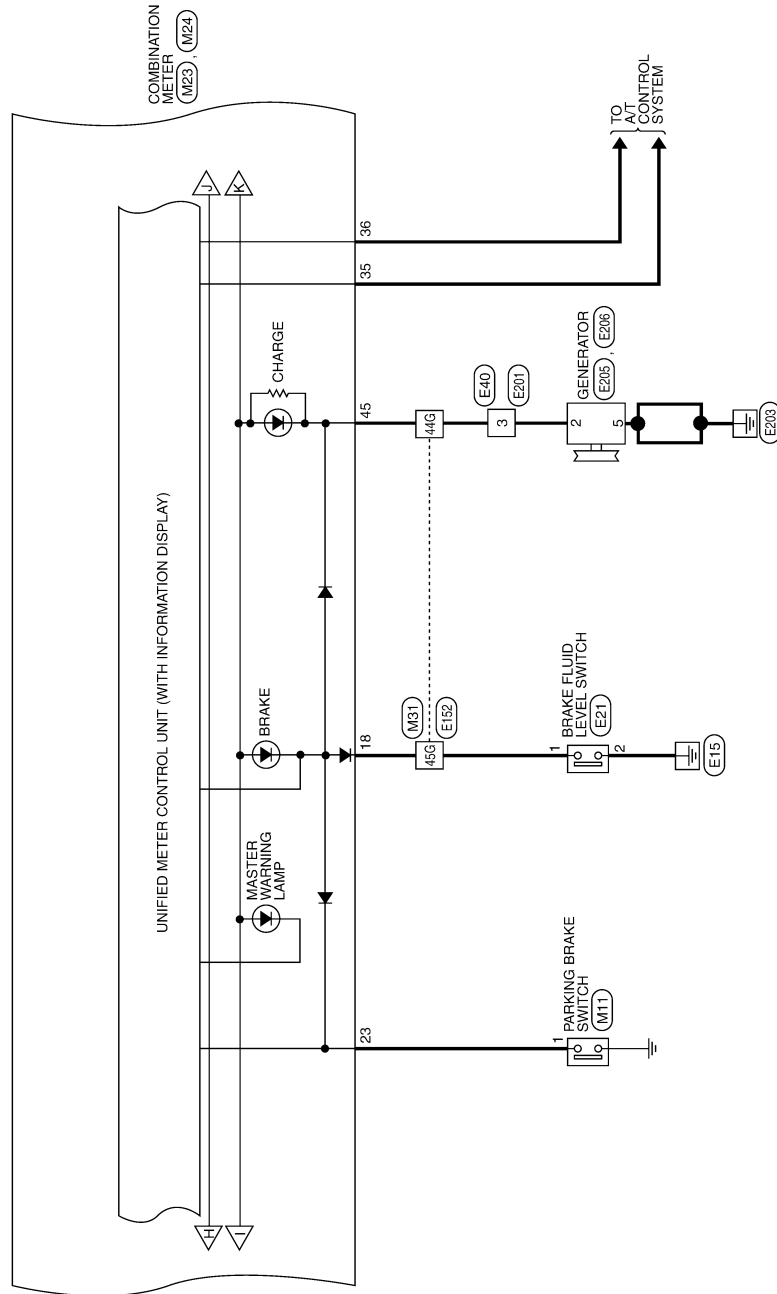

ABNWA1541GB

METER

< WIRING DIAGRAM >

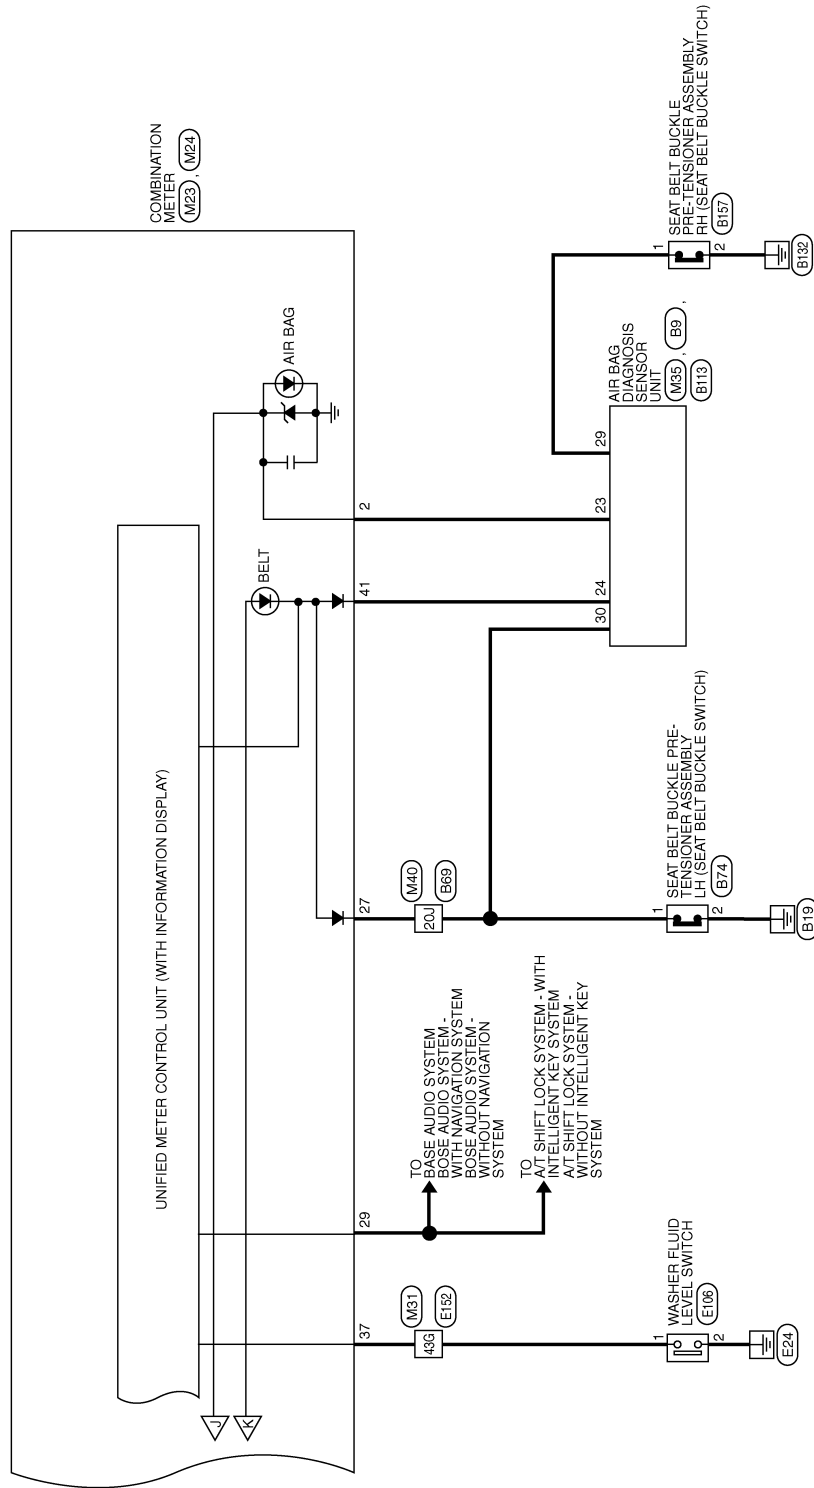

ABNWA2281GB

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P


METER CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5P	O/L	-

Connector No.	M5
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE

 


Terminal No.	Color of Wire	Signal Name
10	Y/R	-
15	Y/R	-

Connector No.	M11
Connector Name	PARKING BRAKE SWITCH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	G	-

Connector No.	M16
Connector Name	WIRE TO WIRE
Connector Color	WHITE

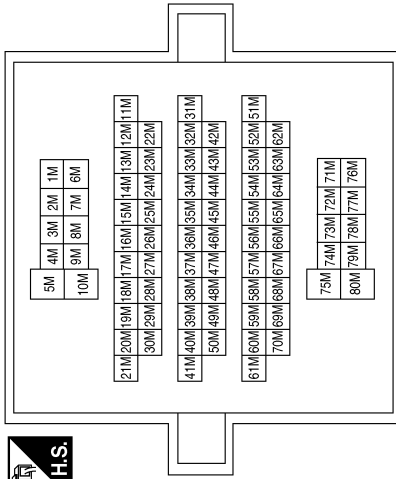


Terminal No.	Color of Wire	Signal Name
61M	R/Y	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
12	R/L	DOOR SW (AS)
13	GR	DOOR SW (RR)
23	G/O	SECURITY INDICATOR OUTPUT
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
42	GR	GLASS HATCH SW
43	R/B	BACK DOOR SW
47	SB	DOOR SW (DR)
48	R/Y	DOOR SW (RL)

METER

< WIRING DIAGRAM >


Connector No.	M23
Connector Name	COMBINATION METER
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
45	BR/W	CHARGE IN
46	-	-
47	-	-
48	-	-
49	-	-
50	BR	ILL LED CON OUTPUT
51	-	-
52	B	ILL GND

Terminal No.	Color of Wire	Signal Name
41	P/L	PASS SEAT BELT
42	-	-
43	-	-
44	-	-

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
10	-	-
11	L	CAN-H
12	P	CAN-L
13	-	-
14	-	-
15	Y/L	FUEL IN
16	B/P	ANALOG GND
17	-	-
18	P/B	BRAKE FLUID
19	-	-
20	-	-
21	-	-
22	-	-
23	G	PARK BRAKE
24	O/L	RUN/START

Terminal No.	Color of Wire	Signal Name
1	O	ACCESSORY
2	P	AIR BAG
3	BR	AIR LEVELIZER
4	Y/G	AT 1 RANGE
5	SB	AT 4 RANGE
6	-	-
7	-	-
8	Y/R	BATTERY
9	B	GND

Terminal No.	Color of Wire	Signal Name
25	-	-
26	-	-
27	O/B	SEATBELT
28	G/O	SECURITY
29	W/R	SPEED OUT
30	-	-
31	-	-
32	-	-
33	-	-
34	-	-
35	LG/R	TOW MODE
36	Y/V	TOW MODE LAMP
37	W/L	WASHER FLUID
38	-	-
39	B/R	PN ATCU
40	GR/R	PN REVERSE

ABNIA6203GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



METER


< WIRING DIAGRAM >

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

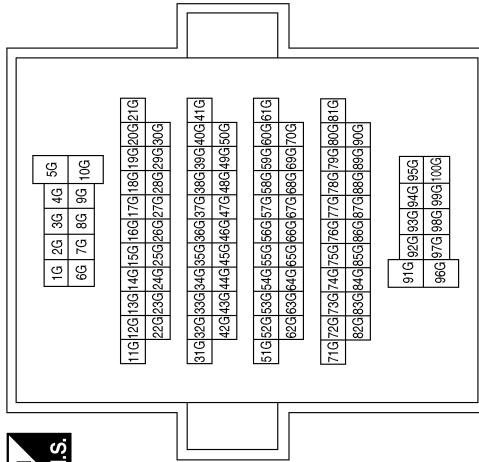


Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
41G	B/P	-
43G	W/L	-
44G	BR/W	-
45G	P/B	-
46G	Y/L	-

Connector No.	M35
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Color	YELLOW

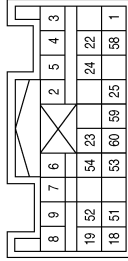

Terminal No.	Color of Wire	Signal Name
23	P	WARN LAMP
24	P/L	SEATBELT MINDER

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

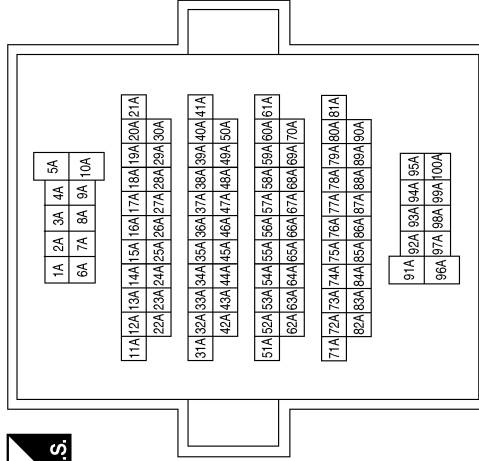


Terminal No.	Color of Wire	Signal Name
15A	R/B	-
21A	R/L	-
25A	GR	-
26A	GR	-

METER


< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
11J	L	-
12J	BR	-
20J	O/B	-
21J	R/Y	-
22J	P	-
30J	SB	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

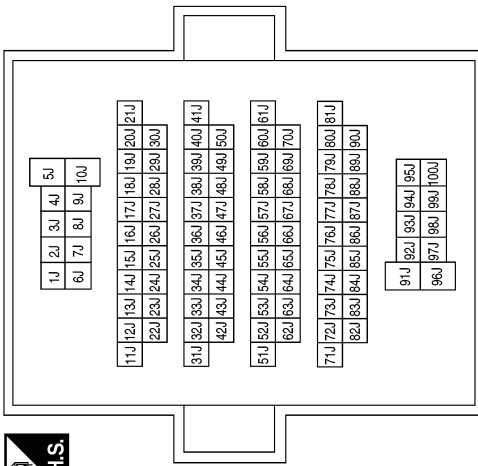


Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
4Q	Y/R	-

Terminal No.	Color of Wire	Signal Name
56B	GR	-

Connector No.	M64
Connector Name	WIRE TO WIRE
Connector Color	WHITE

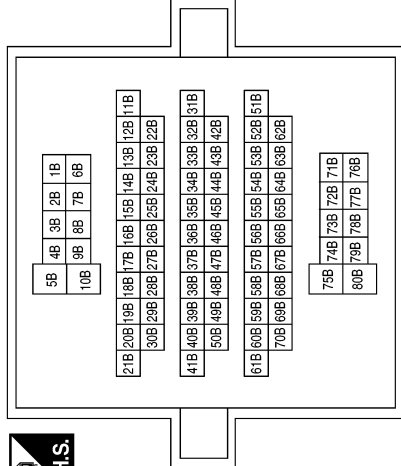

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
6T	O	-


ABNIA6205GB

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

METER


< WIRING DIAGRAM >

Connector No.	M70
Connector Name	INTELLIGENT KEY UNIT
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
2	L	CAN-H
3	P	CAN-L

Connector No.	M175
Connector Name	JOINT CONNECTOR-M10
Connector Color	BLUE

 


Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
6	L	-
10	P	-
11	P	-
15	P	-

Connector No.	M176
Connector Name	JOINT CONNECTOR-M11
Connector Color	BLUE

 

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
4	L	-
5	L	-
10	P	-
11	P	-
13	P	-
14	P	-

Connector No.	M179
Connector Name	JOINT CONNECTOR-M01
Connector Color	GREEN

 


Terminal No.	Color of Wire	Signal Name
10	O	-
11	O	-

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	GR	-
3	L	-
5	L	-
14	P	-
15	P	-

Connector No.	E16
Connector Name	ECM
Connector Color	BLACK

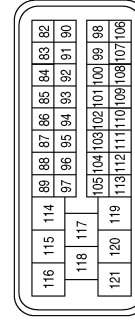

Terminal No.	Color of Wire	Signal Name
86	P	CAN-L
94	L	CAN-H

METER


< WIRING DIAGRAM >

Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
3	BR/W	-

Connector No.	E34
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
23	P	-
24	L	-

Connector No.	E21
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Color	GRAY

 


Terminal No.	Color of Wire	Signal Name
1	P/B	-
2	B	-

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
42	GR	OIL PRESSURE SW

Connector No.	E106
Connector Name	WASHER FLUID LEVEL SWITCH
Connector Color	BROWN

 

Terminal No.	Color of Wire	Signal Name
1	W/L	-
2	B	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

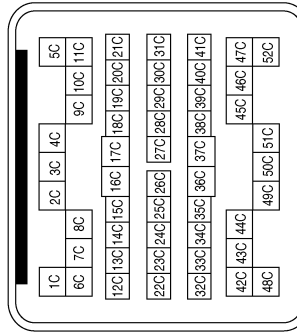

Terminal No.	Color of Wire	Signal Name
43C	B/P	-
44C	Y/L	-

ABNIA6207GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



METER


< WIRING DIAGRAM >

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E125
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK

 


Terminal No.	Color of Wire	Signal Name
11	L	CAN-H
15	P	CAN-L

Connector No.	E142
Connector Name	TRANSFER CONTROL UNIT
Connector Color	WHITE

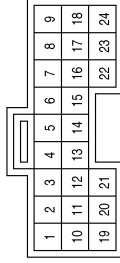

Terminal No.	Color of Wire	Signal Name
7	L	CAN-H
8	P	CAN-L

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

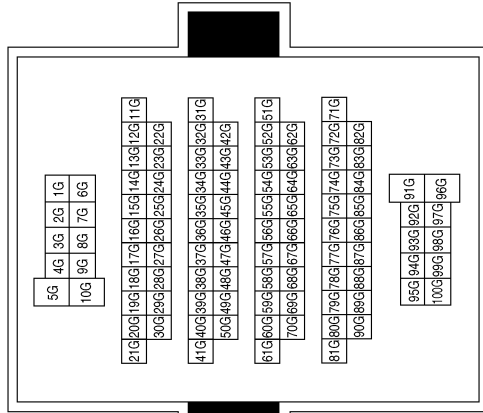

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
41G	B/P	-
43G	W/L	-
44G	BR/W	-
45G	P/B	-
46G	Y/L	-

Connector No.	E201
Connector Name	WIRE TO WIRE
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	BR/W	-

ABN1A6208GB

METER

< WIRING DIAGRAM >

Connector No.	F4
Connector Name	OIL PRESSURE SWITCH
Connector Color	GRAY



Terminal No.	1	Color of Wire	GR	Signal Name	-
--------------	---	---------------	----	-------------	---

Connector No.	E206
Connector Name	GENERATOR
Connector Color	-



Terminal No.	5	Color of Wire	B	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	E205
Connector Name	GENERATOR
Connector Color	BLACK




Terminal No.	2	Color of Wire	BR/W	Signal Name	-
--------------	---	---------------	------	-------------	---

Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY




Terminal No.	1	Color of Wire	BR	Signal Name	CAN-H
	2		L/Y		CAN-L

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	1	Color of Wire	GR	Signal Name	-
	3		L		-
	5		L		-
	14		P		-
	15		P		-

Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN

 

Terminal No.	3	Color of Wire	L	Signal Name	-
	8		P		-


ABNIA6209GB

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

METER


< WIRING DIAGRAM >

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

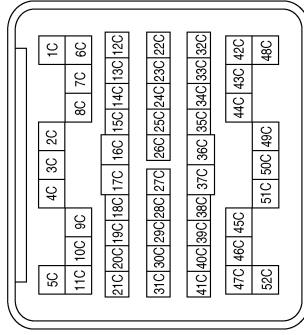


Terminal No.	Color of Wire	Signal Name
43C	B/P	-
44C	Y/L	-

Connector No.	F505
Connector Name	TRANSMISSION RANGE SWITCH
Connector Color	GRAY

 


Terminal No.	Color of Wire	Signal Name
1	BR	-
2	W	-
3	GR	-
5	L	-
6	G	-
7	O	-

Connector No.	F503
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GREEN

 


Terminal No.	Color of Wire	Signal Name
11	W	RANGE SW 4
12	GR	RANGE SW 2
13	BR	RANGE SW 1
14	L	RANGE SW 3
18	O	ATF SENS 1-
19	G	ATF SENS 1+

Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
43C	B/P	-
44C	Y/L	-

Connector No.	B3
Connector Name	SUSPENSION CONTROL UNIT
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
10	BR	WARNING LAMP OUTPUT

Connector No.	C5
Connector Name	FUEL LEVEL SENSOR UNIT AND FUEL PUMP
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
2	Y/L	-
5	B/P	-

ABNIA6210GB

METER


< WIRING DIAGRAM >

Connector No.	B18
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	R/Y	-

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Color	WHITE

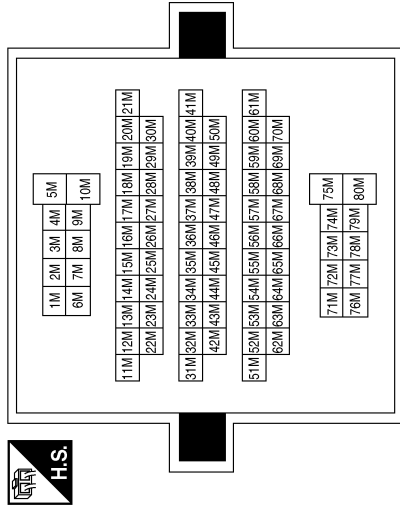


Terminal No.	Color of Wire	Signal Name
61M	R/Y	-

Connector No.	B9
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Color	YELLOW

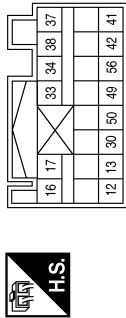


Terminal No.	Color of Wire	Signal Name
30	O/B	BUCKLE SW LH

Connector No.	B48
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
14	B	-
15	R/W	-

Connector No.	B43
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
10	R/W	-

Connector No.	B40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
23	P	-
24	L	-

ABNIA6211GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



METER

< WIRING DIAGRAM >


Connector No.	B74
Connector Name	SEAT BELT BUCKLE PRE-TENSIONER ASSEMBLY LH
Connector Color	YELLOW

 


Terminal No.	Color of Wire	Signal Name
1	O/B	-
2	B	-

Terminal No.	Color of Wire	Signal Name
11J	L	-
12J	BR	-
20J	O/B	-
21J	R/Y	-
22J	P	-
30J	SB	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

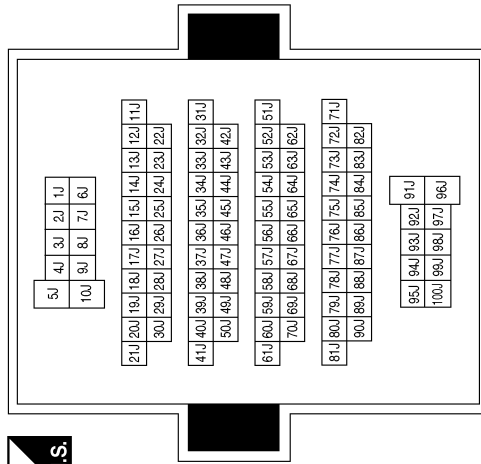


Connector No.	B111
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
10	R/W	-

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
2	R/L	-

ABNIA6212GB

METER

< WIRING DIAGRAM >


Connector No.	B113
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Color	YELLOW

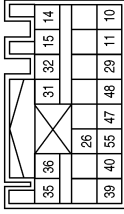

Terminal No.	29	Color of Wire	L	Signal Name	BUCKLE SW RH
--------------	----	---------------	---	-------------	--------------

Terminal No.	56B	Color of Wire	GR	Signal Name	-
--------------	-----	---------------	----	-------------	---

Connector No.	B112
Connector Name	WIRE TO WIRE
Connector Color	WHITE

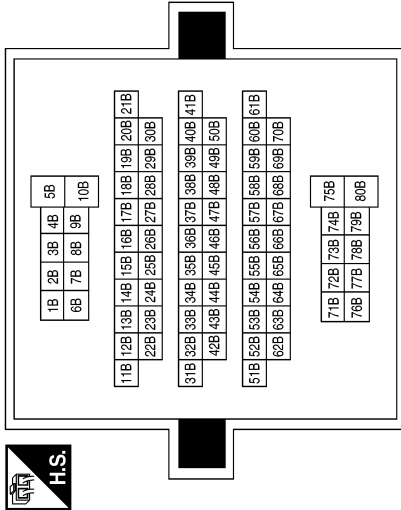


Connector No.	B139
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	13	Color of Wire	GR	Signal Name	-
--------------	----	---------------	----	-------------	---

Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE

 

Terminal No.	2	Color of Wire	GR	Signal Name	-
--------------	---	---------------	----	-------------	---


A B C D E F G H I J K L M O P

MWI

METER

< WIRING DIAGRAM >


Connector No.	B157
Connector Name	SEAT BELT BUCKLE PRE-TENSIONER ASSEMBLY RH
Connector Color	YELLOW

 


Terminal No.	Color of Wire	Signal Name
1	L	-
2	B	-

Terminal No.	Color of Wire	Signal Name
15A	R/W	-
21A	R/L	-
25A	GR	-
26A	GR	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

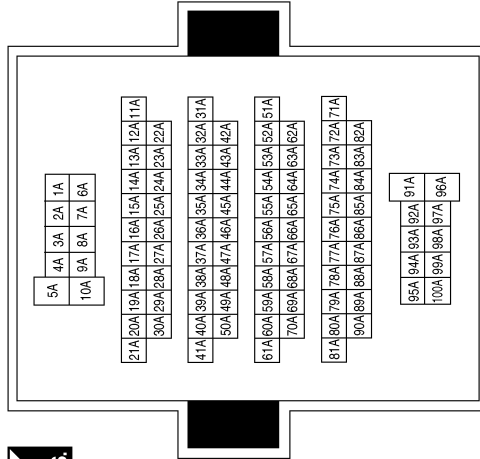


Connector No.	D407
Connector Name	BACK DOOR SWITCH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	B	-
3	R/W	-

Connector No.	D405
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
14	B	-
15	R/W	-

Connector No.	D401
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
14	B	-
15	R/W	-

ABNIA6214GB

METER


< WIRING DIAGRAM >

Connector No.	D602
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	13	Color of Wire	GR	Signal Name	-
--------------	----	---------------	----	-------------	---

Connector No.	D503
Connector Name	BACK DOOR LATCH
Connector Color	WHITE

 

Terminal No.	7	Color of Wire	R/W	Signal Name	-
8	B	-	-	-	-

Connector No.	D501
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	14	Color of Wire	B	Signal Name	-
15	R/W	-	-	-	-

Connector No.	D707
Connector Name	GLASS HATCH AJAR SWITCH
Connector Color	BLACK




Terminal No.	1	Color of Wire	GR	Signal Name	-
--------------	---	---------------	----	-------------	---

Connector No.	D701
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	13	Color of Wire	GR	Signal Name	-
--------------	----	---------------	----	-------------	---

Connector No.	D606
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	13	Color of Wire	GR	Signal Name	-
--------------	----	---------------	----	-------------	---

ABNIA6215GB

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

THE FUEL GAUGE POINTER DOES NOT MOVE

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

THE FUEL GAUGE POINTER DOES NOT MOVE

Description

INFOID:0000000011287579

Fuel gauge needle will not move from a certain position.

Diagnosis Procedure

INFOID:0000000011287580

1. CHECK COMBINATION METER INPUT SIGNAL

1. Select "METER/M&A" on CONSULT.
2. Using "FUEL METER" of "DATA MONITOR", compare the monitor value with the fuel gauge reading on the combination meter. Refer to [MWI-36. "Component Function Check"](#).

Does monitor value match fuel gauge reading?

- YES >> GO TO 2
NO >> Replace combination meter. Refer to [MWI-99. "Removal and Installation"](#).

2. CHECK FUEL LEVEL SENSOR SIGNAL CIRCUIT

Check the fuel level sensor signal circuit. Refer to [MWI-36. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3
NO >> Repair harness or connector.

3. CHECK FUEL LEVEL SENSOR UNIT AND FUEL PUMP (FUEL LEVEL SENSOR)

Perform a unit check for the fuel level sensor unit and fuel pump (fuel level sensor). Refer to [MWI-37. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 4
NO >> Replace fuel level sensor unit and fuel pump (fuel level sensor). Refer to [FL-12. "Removal and Installation"](#).

4. CHECK FLOAT INTERFERENCE

Check that the float arm does not interfere or bind with any of the components in the fuel tank.

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-99. "Removal and Installation"](#).
NO >> Repair or replace malfunctioning parts.

THE FUEL GAUGE POINTER DOES NOT MOVE TO "F" WHEN REFUELING

< SYMPTOM DIAGNOSIS >

THE FUEL GAUGE POINTER DOES NOT MOVE TO "F" WHEN REFUELING

Description

INFOID:0000000011287581

The fuel gauge needle will not move to "F" position when refueling.

Diagnosis Procedure

INFOID:0000000011287582

1.OBSERVE FUEL GAUGE

Does it take a long time for the pointer to move to FULL position?

YES or NO

YES >> GO TO 2

NO >> GO TO 3

2.IDENTIFY FUELING CONDITION

Was the vehicle fueled with the ignition switch ON?

YES or NO

YES >> Be sure to fuel the vehicle with the ignition switch OFF. Otherwise, it will take a long time to move to FULL position because of the characteristic of the fuel gauge.

NO >> GO TO 3

3.OBSERVE VEHICLE POSITION

Is the vehicle parked on an incline?

YES or NO

YES >> Check the fuel level indication with vehicle on a level surface.

NO >> GO TO 4

4.OBSERVE FUEL GAUGE POINTER

During driving, does the fuel gauge pointer move gradually toward EMPTY position?

YES or NO

YES >> Check the components. Refer to [MWI-37. "Component Inspection"](#).

NO >> The float arm may interfere or bind with any of the components in the fuel tank.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON

Description

INFOID:000000011287583

The oil pressure warning lamp stays off when the ignition switch is turned ON.

Diagnosis Procedure

INFOID:000000011287584

1. CHECK OIL PRESSURE WARNING LAMP

Perform IPDM E/R auto active test. Refer to [PCS-12, "Diagnosis Description"](#).

Is oil pressure warning lamp illuminated?

YES >> GO TO 2

NO >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).

2. CHECK OIL PRESSURE SWITCH SIGNAL CIRCUIT

Check the oil pressure switch signal circuit. Refer to [MWI-38, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair harness or connector.

3. CHECK OIL PRESSURE SWITCH UNIT

Perform a unit check for the oil pressure switch. Refer to [MWI-38, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation of IPDM E/R"](#).

NO >> Replace oil pressure switch.

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

Description

INFOID:000000011287585

The oil pressure warning lamp remains illuminated while the engine is running (normal oil pressure).

Diagnosis Procedure

INFOID:000000011287586

Regarding Wiring Diagram information, refer to [MWI-65, "Wiring Diagram"](#).

1. CHECK OIL PRESSURE WARNING LAMP

Perform IPDM E/R auto active test. Refer to [PCS-12, "Diagnosis Description"](#).

Is oil pressure warning lamp illuminated?

YES >> GO TO 2

NO >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).

2. CHECK IPDM E/R OUTPUT VOLTAGE


1. Turn ignition switch OFF.
2. Disconnect the oil pressure switch connector.
3. Turn ignition switch ON.
4. Check voltage between the oil pressure switch harness connector F4 terminal 1 and ground.

1 – Ground : Approx. 12V

Is the inspection result normal?

YES >> GO TO 3

NO >> GO TO 4

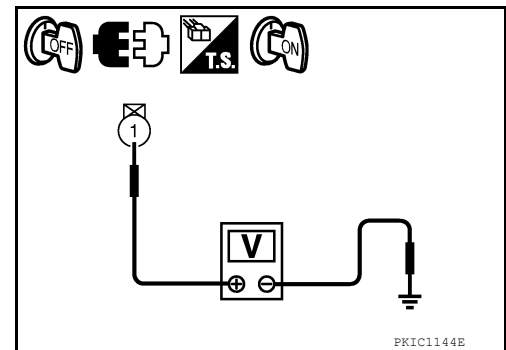

3. CHECK OIL PRESSURE SWITCH

Perform a unit check for the oil pressure switch. Refer to [MWI-38, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation of IPDM E/R"](#).

NO >> Replace oil pressure switch.

4. CHECK OIL PRESSURE SWITCH SIGNAL CIRCUIT

Check the oil pressure switch signal circuit. Refer to [MWI-38, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation of IPDM E/R"](#).

NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000011287587

- The parking brake warning is displayed while driving the vehicle even though the parking brake is released.
- The parking brake warning is not displayed even though driving the vehicle with the parking brake applied.

Diagnosis Procedure

INFOID:000000011287588

1. CHECK PARKING BRAKE WARNING LAMP OPERATION

1. Start engine.
2. Monitor "BRAKE" warning lamp while applying and releasing the parking brake.

BRAKE warning lamp

Parking brake applied : ON

Parking brake released : OFF

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).
NO >> GO TO 2

2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Check the parking brake switch signal circuit. Refer to [MWI-40, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3
NG >> Repair harness or connector.

3. CHECK PARKING BRAKE SWITCH UNIT

Perform a unit check for the parking brake switch. Refer to [MWI-40, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).
NO >> Replace parking brake switch.

THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000011287589

- The warning is still displayed even after washer fluid is added.
- The warning is not displayed even though the washer tank is empty.

Diagnosis Procedure

INFOID:000000011287590

1. CHECK WASHER FLUID LEVEL SWITCH SIGNAL CIRCUIT

Check the washer fluid level switch signal circuit. Refer to [MWI-41. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2
- NO >> Repair harness or connector.

2. CHECK WASHER FLUID LEVEL SWITCH UNIT

Perform a unit check for the washer fluid level switch. Refer to [MWI-41. "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-99. "Removal and Installation"](#).
- NO >> Replace washer fluid level switch.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000011287591

- The door open warning is displayed even though all of the doors are closed.
- The door open warning is not displayed even though a door is open.

Diagnosis Procedure

INFOID:000000011287592

Regarding Wiring Diagram information, refer to [MWI-65, "Wiring Diagram"](#).

1. CHECK COMBINATION METER INPUT SIGNAL

1. Select "METER/M&A" on CONSULT.
2. Monitor "DOOR W/L" of "DATA MONITOR" while opening and closing doors.

DOOR W/L

Front door LH open : ON

Front door LH closed : OFF

Front door RH open : ON

Front door RH closed : OFF

Rear door LH open : ON

Rear door LH closed : OFF

Rear door RH open : ON

Rear door RH closed : OFF

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).
NO >> GO TO 2

2. CHECK BCM INPUT SIGNAL

1. Select "BCM" on CONSULT.
2. Monitor "DOOR SW DR", "DOOR SW AS", "DOOR SW RL" and "DOOR SW RR" of "DATA MONITOR" while opening and closing doors.

When doors are open

DOOR SW DR : ON

DOOR SW AS : ON

DOOR SW RL : ON

DOOR SW RR : ON

When doors are closed

DOOR SW DR : OFF

DOOR SW AS : OFF

DOOR SW RL : OFF

DOOR SW RR : OFF

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
NO >> GO TO 3

3. CHECK DOOR SWITCHES

THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

1. Disconnect door switches.
2. Check continuity between door switch (front LH), (front RH), (rear LH) and (rear RH) terminal 2 and exposed metal of switch while pressing and releasing switch.


When door switch is released : Continuity should exist

When door switch is pushed : Continuity should not exist

Is the inspection result normal?

YES >> Repair open or short in circuit between BCM and door switch.

NO >> Replace door switch.

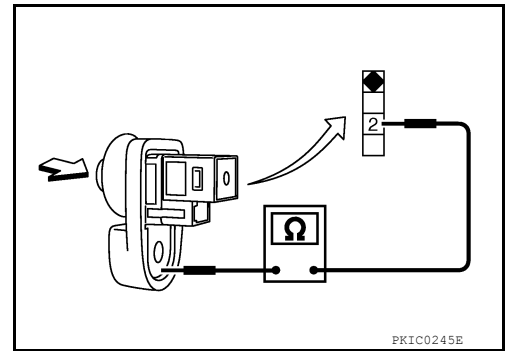

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

THE LIFTGATE OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE LIFTGATE OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000011287593

- The back door open warning is displayed continuously even though the back door is closed.
- The back door open warning is not displayed even though the back door is open.

Diagnosis Procedure

INFOID:000000011287594

Regarding Wiring Diagram information, refer to [MWI-65, "Wiring Diagram"](#).

1. CHECK BCM INPUT SIGNAL

1. Select "BCM" on CONSULT.
2. Monitor "BACK DOOR SW" of "DATA MONITOR" while opening and closing the back door.

When back door is open

BACK DOOR SW : ON

When back door is closed

BACK DOOR SW : OFF

Is the inspection result normal?

YES >> GO TO 2

NO >> GO TO 4

2. CHECK SELF-DIAGNOSIS OF BCM

Select "BCM" on CONSULT and perform "SELF-DIAGNOSIS".

Is the inspection result normal?

YES >> GO TO 3

NO >> Refer to [BCS-44, "DTC Index"](#).

3. CHECK SELF-DIAGNOSIS OF COMBINATION METER

Select "METER/M&A" on CONSULT and perform "SELF-DIAGNOSIS".

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).

NO >> Refer to [MWI-44, "DTC Index"](#).

4. CHECK BACK DOOR SWITCH CIRCUIT


With Power Back Door

1. Turn ignition switch OFF.
2. Disconnect BCM connector M19 and back door latch (door ajar switch) connector D503.
3. Check continuity between BCM harness connector M19 (A) terminal 43 and back door latch (door ajar switch) harness connector D503 (B) terminal 7.

43 - 7 : Continuity should exist.

4. Check continuity between BCM harness connector M19 (A) terminal 43 and ground.

43 - Ground : Continuity should not exist.

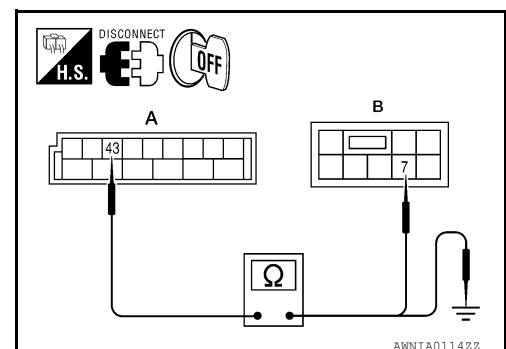

Without Power Back Door

THE LIFTGATE OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect BCM connector M19 and back door switch connector D407.
3. Check continuity between BCM harness connector M19 (A) terminal 43 and back door switch harness connector D407 (B) terminal 3.

43 - 3 : Continuity should exist.

4. Check continuity between BCM harness connector M19 (A) terminal 43 and ground.

43 - Ground : Continuity should not exist.

Is the inspection result normal?

YES >> GO TO 5

NO >> Repair harness or connector.

5. CHECK SWITCH GROUND CIRCUIT

With Power Back Door

Check continuity between back door latch (door ajar switch) harness connector D503 terminal 8 and ground.

8 - Ground : Continuity should exist.

Without Power Back Door




Check continuity between back door switch harness connector D407 terminal 1 and ground.

1 - Ground : Continuity should exist.

Is the inspection result normal?

YES >> Replace back door latch (door ajar switch) (with power back door) or back door switch (without power back door).

NO >> Repair harness or connector.

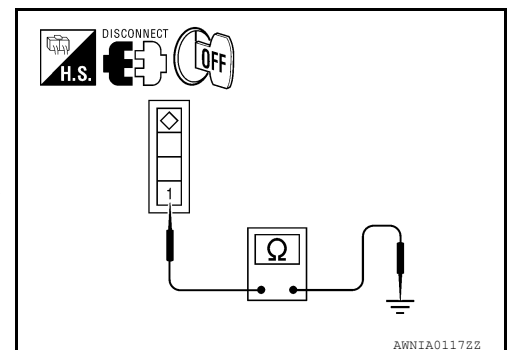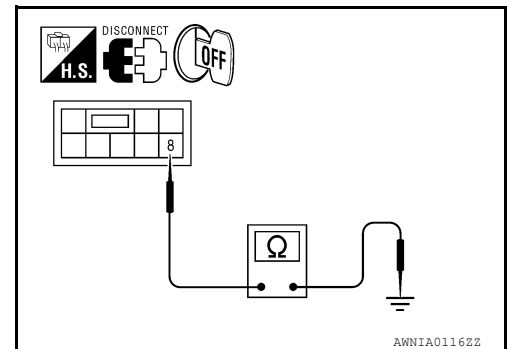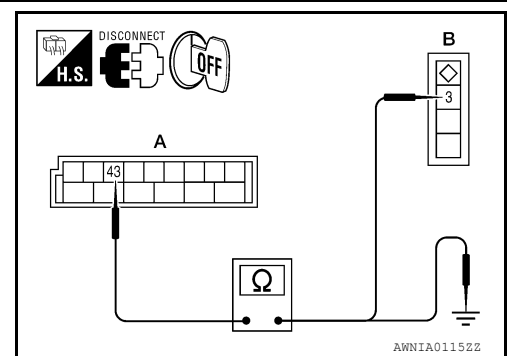

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

THE LIFTGATE GLASS OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE LIFTGATE GLASS OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000011287595

- The back door glass open warning is displayed continuously even though the glass hatch is closed.
- The back door glass open warning is not displayed even though the glass hatch is open.

Diagnosis Procedure

INFOID:000000011287596

Regarding Wiring Diagram information, refer to [MWI-65, "Wiring Diagram"](#).

1. CHECK COMBINATION METER INPUT SIGNAL

1. Select "METER/M&A" on CONSULT.
2. Monitor "TRUNK W/L" of "DATA MONITOR" while opening and closing the glass hatch.

When glass hatch is open

TRUNK W/L : ON

When glass hatch is closed

TRUNK W/L : OFF

Is the inspection result normal?


YES >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).

NO >> GO TO 2

2. CHECK GLASS HATCH AJAR SWITCH INPUT SIGNAL

Check voltage between BCM connector M19 terminal 42 and ground.

Connector	Item	Terminals		Condition	Voltage (V) (Approx.)
		(+)	(-)		
M19	BCM	42	Ground	Open ↓ Closed	0 ↓ Battery voltage

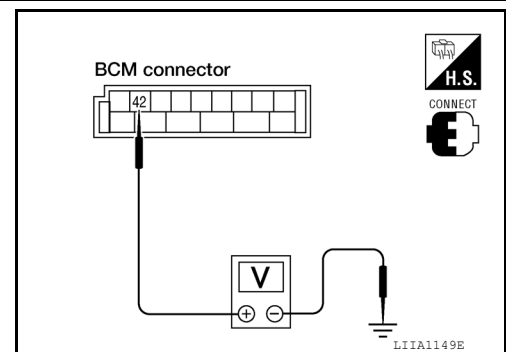

Is the inspection result normal?


YES >> Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).

NO >> GO TO 3

3. CHECK GLASS HATCH AJAR SWITCH

1. Disconnect glass hatch ajar switch connector D707.
2. Check continuity between glass hatch ajar switch terminal and ground.

	Terminals	Condition	Continuity
Glass hatch ajar switch	1 – Ground	Open	Yes
		Closed	No

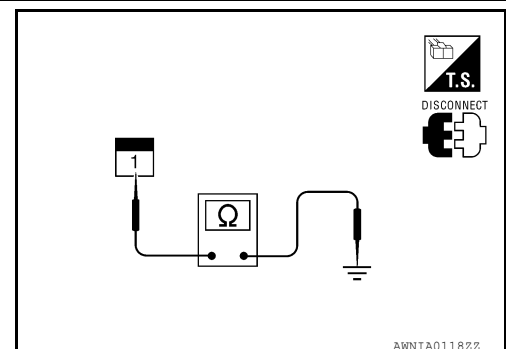

Is the inspection result normal?

YES >> Repair or replace harness between BCM and glass hatch ajar switch.

NO >> Replace glass hatch ajar switch.

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION COMPASS

COMPASS : Description

INFOID:000000011287597

COMPASS

- The electronic compass is highly protected from changes in most magnetic fields. However, some large changes in magnetic fields can affect it. Some examples are (but not limited to): high tension power lines, large steel buildings, subways, steel bridges, automatic car washes, large piles of scrap metal, etc. While this does not happen very often, it is possible.
- During normal operation, the Compass Mirror will continuously update the compass calibration to adjust for gradual changes in the vehicle's magnetic "remnant" field. If the vehicle is subjected to high magnetic influences, the compass may appear to indicate false headings, become locked, or appear that it is unable to be calibrated. If this occurs, perform the calibration procedure.
- If at any time the compass continually displays the incorrect direction or the reading is erratic or locked, verify the correct zone variance.

Symptom Chart

Symptom	Cause	Solution / Reference
The compass display reads "C".	<ul style="list-style-type: none"> • Compass is not calibrated. • Incorrect zone variance setting. • Large change in magnetic field (Steel bridges, subways, concentrations of metal, car washes, etc.) • Compass was calibrated incorrectly or in the presence of a strong magnetic field. 	Perform Calibration. Refer to MWI-24, "Description" .
Compass shows the wrong direction.		
Compass does not change direction appears "Locked".		
Compass does not show all the directions, one or more is missing.		
The compass was calibrated but it "loses" calibration.		Perform Zone Variation Setting if correct reading is desired in that location. Refer to MWI-24, "Description" .
On long trips the compass shows the wrong direction.		

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P



PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011287598

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least three minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000011287599

NOTE:

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

PRECAUTIONS

< PRECAUTION >

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

PREPARATION


< PREPARATION >

PREPARATION

PREPARATION

Commercial Service Tools

INFOID:000000011287600

Tool name	Description
<p data-bbox="175 415 285 441">Power tool</p>  <p data-bbox="829 632 902 646">PIIB1407E</p>	<p data-bbox="1003 415 1341 441">Loosening nuts, screws and bolts</p>

COMBINATION METER

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION


COMBINATION METER

Removal and Installation


INFOID:000000011287601

REMOVAL

1. Disconnect battery negative terminal.
2. Remove the cluster lid A. Refer to [IP-14. "Removal and Installation"](#).
3. Remove the combination meter lower screws (A), using power tool.

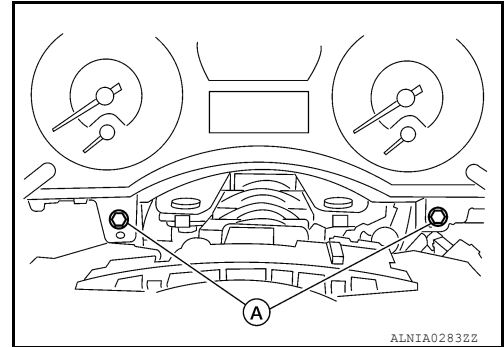

4. Remove the combination meter upper screws (A) using power tool, and pull out the combination meter (1).
5. Disconnect the combination meter connectors, and remove the combination meter (1).

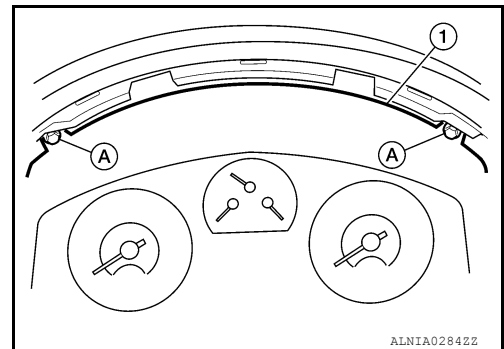

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI