

SECTION **ADP**

AUTOMATIC DRIVE POSITIONER

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

CONTENTS

<p>BASIC INSPECTION 5</p> <p>DIAGNOSIS AND REPAIR WORKFLOW 5</p> <p style="padding-left: 20px;">Work Flow5</p> <p>INSPECTION AND ADJUSTMENT 8</p> <p>ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL8</p> <p style="padding-left: 20px;">ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description8</p> <p style="padding-left: 20px;">ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement8</p> <p>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT8</p> <p style="padding-left: 20px;">ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description8</p> <p style="padding-left: 20px;">ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement8</p> <p>SYSTEM INITIALIZATION9</p> <p style="padding-left: 20px;">SYSTEM INITIALIZATION : Description9</p> <p style="padding-left: 20px;">SYSTEM INITIALIZATION : Special Repair Requirement9</p> <p>MEMORY STORING9</p> <p style="padding-left: 20px;">MEMORY STORING : Description9</p> <p style="padding-left: 20px;">MEMORY STORING : Special Repair Requirement9</p> <p>SYSTEM SETTING10</p> <p style="padding-left: 20px;">SYSTEM SETTING : Description10</p> <p style="padding-left: 20px;">SYSTEM SETTING : Special Repair Requirement11</p> <p>SYSTEM DESCRIPTION12</p> <p>AUTOMATIC DRIVE POSITIONER SYSTEM.....12</p> <p>AUTOMATIC DRIVE POSITIONER SYSTEM 12</p>	<p>AUTOMATIC DRIVE POSITIONER SYSTEM :</p> <p style="padding-left: 20px;">System Diagram12</p> <p>AUTOMATIC DRIVE POSITIONER SYSTEM :</p> <p style="padding-left: 20px;">System Description13</p> <p>AUTOMATIC DRIVE POSITIONER SYSTEM :</p> <p style="padding-left: 20px;">Component Parts Location14</p> <p>AUTOMATIC DRIVE POSITIONER SYSTEM :</p> <p style="padding-left: 20px;">Component Description15</p> <p>MANUAL FUNCTION16</p> <p style="padding-left: 20px;">MANUAL FUNCTION : System Diagram17</p> <p style="padding-left: 20px;">MANUAL FUNCTION : System Description17</p> <p style="padding-left: 20px;">MANUAL FUNCTION : Component Parts Location19</p> <p style="padding-left: 20px;">MANUAL FUNCTION : Component Description20</p> <p>SEAT SYNCHRONIZATION FUNCTION21</p> <p style="padding-left: 20px;">SEAT SYNCHRONIZATION FUNCTION : System Diagram21</p> <p style="padding-left: 20px;">SEAT SYNCHRONIZATION FUNCTION : System Description21</p> <p style="padding-left: 20px;">SEAT SYNCHRONIZATION FUNCTION : Component Parts Location23</p> <p style="padding-left: 20px;">SEAT SYNCHRONIZATION FUNCTION : Component Description24</p> <p>MEMORY FUNCTION25</p> <p style="padding-left: 20px;">MEMORY FUNCTION : System Diagram25</p> <p style="padding-left: 20px;">MEMORY FUNCTION : System Description25</p> <p style="padding-left: 20px;">MEMORY FUNCTION : Component Parts Location27</p> <p style="padding-left: 20px;">MEMORY FUNCTION : Component Description.....28</p> <p>EXIT ASSIST FUNCTION29</p> <p style="padding-left: 20px;">EXIT ASSIST FUNCTION : System Diagram29</p> <p style="padding-left: 20px;">EXIT ASSIST FUNCTION : System Description29</p> <p style="padding-left: 20px;">EXIT ASSIST FUNCTION : Component Parts Location31</p> <p style="padding-left: 20px;">EXIT ASSIST FUNCTION : Component Description32</p> <p>ENTRY ASSIST FUNCTION33</p>
--	--

ADP

ENTRY ASSIST FUNCTION : System Diagram	33	BCM	58
ENTRY ASSIST FUNCTION : System Description	... 33	BCM : Diagnosis Procedure	58
ENTRY ASSIST FUNCTION : Component Parts		DRIVER SEAT CONTROL UNIT	58
Location	35	DRIVER SEAT CONTROL UNIT :	
ENTRY ASSIST FUNCTION :		Diagnosis Procedure	58
Component Description	36	DRIVER SEAT CONTROL UNIT : Special Repair	
INTELLIGENT KEY INTERLOCK FUNCTION	37	Requirement	59
INTELLIGENT KEY INTERLOCK FUNCTION :		AUTOMATIC DRIVE POSITIONER CONTROL	
System Diagram	37	UNIT	59
INTELLIGENT KEY INTERLOCK FUNCTION :		AUTOMATIC DRIVE POSITIONER CONTROL	
System Description	37	UNIT : Diagnosis Procedure	59
INTELLIGENT KEY INTERLOCK FUNCTION :		AUTOMATIC DRIVE POSITIONER CONTROL	
Component Parts Location	39	UNIT : Special Repair Requirement	60
INTELLIGENT KEY INTERLOCK FUNCTION :		SLIDING SWITCH	61
Component Description	40	Description	61
DIAGNOSIS SYSTEM (DRIVER SEAT C/U)	41	Component Function Check	61
Diagnosis Description	41	Diagnosis Procedure	61
CONSULT Function	41	Component Inspection	62
DTC/CIRCUIT DIAGNOSIS	44	RECLINING SWITCH	63
U1000 CAN COMM CIRCUIT	44	Description	63
Description	44	Component Function Check	63
DTC Logic	44	Diagnosis Procedure	63
Diagnosis Procedure	44	Component Inspection	64
Special Repair Requirement	44	LIFTING SWITCH (FRONT)	65
B2112 SLIDING MOTOR	45	Description	65
Description	45	Component Function Check	65
DTC Logic	45	Diagnosis Procedure	65
Diagnosis Procedure	45	Component Inspection	66
B2113 RECLINING MOTOR	47	LIFTING SWITCH (REAR)	67
Description	47	Description	67
DTC Logic	47	Component Function Check	67
Diagnosis Procedure	47	Diagnosis Procedure	67
B2118 TILT SENSOR	49	Component Inspection	68
Description	49	TILT SWITCH	69
DTC Logic	49	Description	69
Diagnosis Procedure	49	Component Function Check	69
B2119 TELESCOPIC SENSOR	52	Diagnosis Procedure	69
Description	52	Component Inspection	70
DTC Logic	52	TELESCOPIC SWITCH	71
Diagnosis Procedure	52	Description	71
B2126 DETENT SW	55	Component Function Check	71
Description	55	Diagnosis Procedure	71
DTC Logic	55	Component Inspection	72
Diagnosis Procedure	55	SEAT MEMORY SWITCH	73
B2128 UART COMMUNICATION LINE	57	Description	73
Description	57	Component Function Check	73
DTC Logic	57	Diagnosis Procedure	73
Diagnosis Procedure	57	Component Inspection	74
POWER SUPPLY AND GROUND CIRCUIT	58	DOOR MIRROR REMOTE CONTROL	
		SWITCH	76
		CHANGEOVER SWITCH	76

CHANGEOVER SWITCH : Description	76	MIRROR SENSOR	103	A
CHANGEOVER SWITCH : Component Function		DRIVER SIDE	103	
Check	76	DRIVER SIDE : Description	103	B
CHANGEOVER SWITCH : Diagnosis Procedure...	76	DRIVER SIDE : Component Function Check	103	
CHANGEOVER SWITCH : Component Inspec-		DRIVER SIDE : Diagnosis Procedure	103	
tion	77	PASSENGER SIDE	104	C
MIRROR SWITCH	78	PASSENGER SIDE : Description	104	
MIRROR SWITCH : Description	78	PASSENGER SIDE :		D
MIRROR SWITCH : Component Function Check...	78	Component Function Check	104	
MIRROR SWITCH : Diagnosis Procedure	78	PASSENGER SIDE : Diagnosis Procedure	105	
MIRROR SWITCH : Component Inspection	80	SLIDING MOTOR	107	E
POWER SEAT SWITCH GROUND CIRCUIT	81	Description	107	
Diagnosis Procedure	81	Component Function Check	107	
TILT & TELESCOPIC SWITCH GROUND CIR-		Diagnosis Procedure	107	F
CUIT	82	RECLINING MOTOR	109	
Diagnosis Procedure	82	Description	109	
DETENTION SWITCH	83	Component Function Check	109	G
Description	83	Diagnosis Procedure	109	
Component Function Check	83	LIFTING MOTOR (FRONT)	111	H
Diagnosis Procedure	83	Description	111	
Component Inspection	84	Component Function Check	111	
FRONT DOOR SWITCH (DRIVER SIDE)	85	Diagnosis Procedure	111	I
Description	85	LIFTING MOTOR (REAR)	113	
Component Function Check	85	Description	113	
Diagnosis Procedure	85	Component Function Check	113	
Component Inspection	86	Diagnosis Procedure	113	
SLIDING SENSOR	87	TILT MOTOR	115	ADP
Description	87	Description	115	
Component Function Check	87	Component Function Check	115	
Diagnosis Procedure	87	Diagnosis Procedure	115	K
RECLINING SENSOR	90	TELESCOPIC MOTOR	117	
Description	90	Description	117	L
Component Function Check	90	Component Function Check	117	
Diagnosis Procedure	90	Diagnosis Procedure	117	
LIFTING SENSOR (FRONT)	93	DOOR MIRROR MOTOR	119	M
Description	93	Description	119	
Component Function Check	93	Component Function Check	119	
Diagnosis Procedure	93	Diagnosis Procedure	119	
LIFTING SENSOR (REAR)	96	Component Inspection	120	N
Description	96	SEAT MEMORY INDICATOR	122	
Component Function Check	96	Description	122	O
Diagnosis Procedure	96	Component Function Check	122	
TILT SENSOR	99	Diagnosis Procedure	122	
Description	99	Component Inspection	123	P
Component Function Check	99	ECU DIAGNOSIS INFORMATION	124	
Diagnosis Procedure	99	DRIVER SEAT CONTROL UNIT	124	
TELESCOPIC SENSOR	101	Reference Value	124	
Description	101	Wiring Diagram - AUTOMATIC DRIVE POSI-		
Component Function Check	101	TIONER CONTROL SYSTEM -	129	
Diagnosis Procedure	101	Fail Safe	142	

DTC Index	143	SEAT LIFTING (REAR)	211
AUTOMATIC DRIVE POSITIONER CONTROL UNIT	144	SEAT LIFTING (REAR) : Diagnosis Procedure ...	212
Reference Value	144	STEERING TELESCOPIC	212
Wiring Diagram - AUTOMATIC DRIVE POSITIONER CONTROL SYSTEM -	148	STEERING TELESCOPIC : Diagnosis Procedure.	212
BCM (BODY CONTROL MODULE)	162	STEERING TILT	212
Reference Value	162	STEERING TILT : Diagnosis Procedure	212
Wiring Diagram - BCM -	186	DOOR MIRROR	213
Fail-safe	200	DOOR MIRROR : Diagnosis Procedure	213
DTC Inspection Priority Chart	201	MEMORY INDICATE DOES NOT OPERATE..	214
DTC Index	202	Diagnosis Procedure	214
SYMPTOM DIAGNOSIS	205	SEAT SYNCHRONIZATION FUNCTION DOES NOT OPERATE	215
MANUAL FUNCTION DOES NOT OPERATE	205	Diagnosis Procedure	215
ALL COMPONENT	205	ENTRY/EXIT ASSIST FUNCTION DOES NOT OPERATE	216
ALL COMPONENT : Diagnosis Procedure	205	Diagnosis Procedure	216
POWER SEAT	205	INTELLIGENT KEY INTERLOCK FUNCTION DOES NOT OPERATE	217
POWER SEAT : Diagnosis Procedure	205	Diagnosis Procedure	217
STEERING POSITION FUNCTION DOES NOT OPERATE	205	NORMAL OPERATING CONDITION	218
STEERING POSITION FUNCTION DOES NOT OPERATE : Diagnosis Procedure	205	Description	218
SEAT SLIDING	206	PRECAUTION	219
SEAT SLIDING : Diagnosis Procedure	206	PRECAUTIONS	219
SEAT RECLINING	206	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	219
SEAT RECLINING : Diagnosis Procedure	206	Service	219
SEAT LIFTING (FRONT)	207	Work	219
SEAT LIFTING (FRONT) : Diagnosis Procedure ..	207	REMOVAL AND INSTALLATION	221
SEAT LIFTING (REAR)	207	DRIVER SEAT CONTROL UNIT	221
SEAT LIFTING (REAR) : Diagnosis Procedure	207	Exploded View	221
STEERING TILT	208	Removal and Installation	221
STEERING TILT : Diagnosis Procedure	208	AUTOMATIC DRIVE POSITIONER CONTROL UNIT	222
STEERING TELESCOPIC	208	Exploded View	222
STEERING TELESCOPIC : Diagnosis Procedure.	208	Removal and Installation	222
DOOR MIRROR	209	SEAT MEMORY SWITCH	223
DOOR MIRROR : Diagnosis Procedure	209	Exploded View	223
MEMORY FUNCTION DOES NOT OPERATE	210	Removal and Installation	223
ALL COMPONENT	210	POWER SEAT SWITCH	224
ALL COMPONENT : Diagnosis Procedure	210	Exploded View	224
SEAT SLIDING	210	Removal and Installation	224
SEAT SLIDING : Diagnosis Procedure	210	TILT&TELESCOPIC SWITCH	225
SEAT RECLINING	211	Exploded View	225
SEAT RECLINING : Diagnosis Procedure	211	Removal and Installation	225
SEAT LIFTING (FRONT)	211		
SEAT LIFTING (FRONT) : Diagnosis Procedure ..	211		

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000007697948

OVERALL SEQUENCE

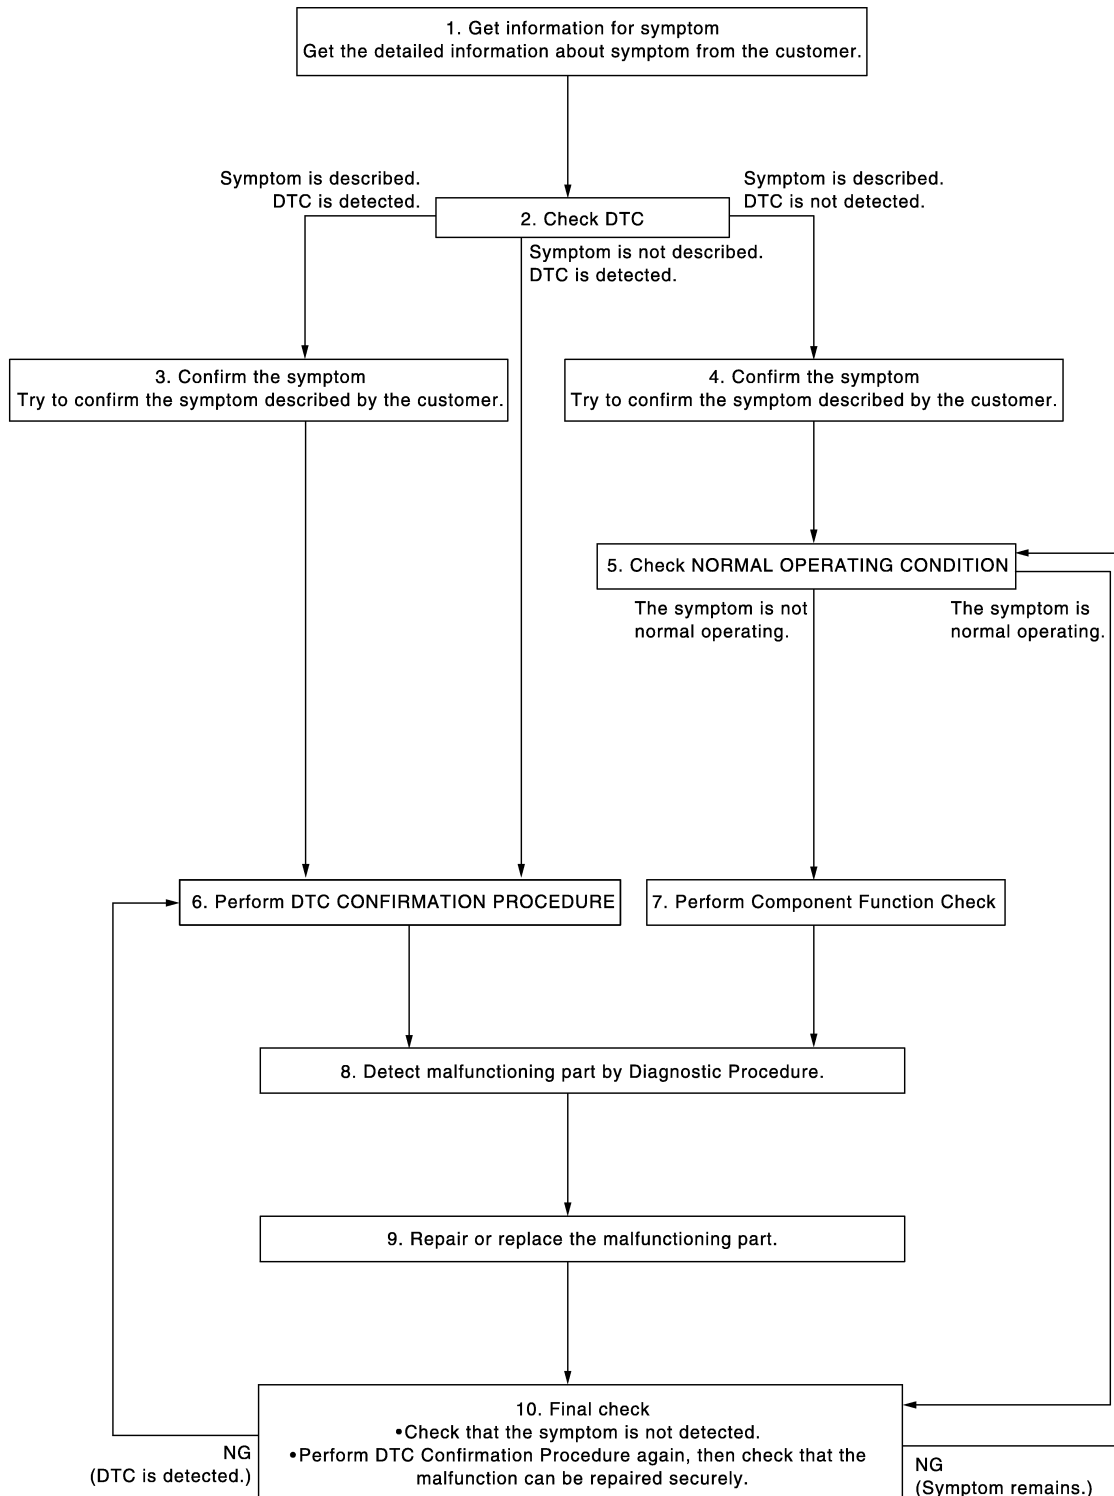

JMJIA1702GB

DETAILED FLOW

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

1.GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2.

2.CHECK DTC WITH AUTOMATIC DRIVE POSITIONER SYSTEM

Check "Self Diagnostic Result" with CONSULT. Refer to [ADP-143, "DTC Index"](#).

Is any symptom described and any DTC is displayed?

Symptom is described, DTC is displayed.>>GO TO 3.

Symptom is not described, DTC is displayed.>>GO TO 6.

Symptom is described, DTC is not displayed.>>GO TO 4.

3.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

>> GO TO 6.

4.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

>> GO TO 5.

5.CHECK NORMAL OPERATING CONDITION

Check normal operating condition. Refer to [ADP-218, "Description"](#).

Is the incident normal operation?

YES >> INSPECTION END

NO >> GO TO 7.

6.PERFORM DTC CONFIRMATION PROCEDURE

Perform the confirmation procedure for the detected DTC.

Is the DTC displayed?

YES >> GO TO 8.

NO >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

7.PERFORM COMPONENT FUNCTION CHECK

Perform the component function check for the isolated malfunctioning point.

>> GO TO 8.

8.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Isolate the malfunctioning point by performing the diagnosis procedure relevant to the symptom during the component diagnosis.

>> GO TO 9.

9.REPAIR OR REPLACE

Repair or replace the malfunctioning part.

>> GO TO 10.

10.FINAL CHECK

Perform the DTC confirmation procedure (if DTC is detected) or component function check (if no DTC is detected) again, and then check that the malfunction can be repaired securely.

Are all malfunctions corrected?

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

YES >> INSPECTION END
Symptom is detected.>> GO TO 5.
DTC is detected.>> GO TO 6.

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description

INFOID:000000007456341

Each function is reset to the following condition when the battery terminal is disconnected.

Function	Condition	Procedure
Memory (Seat, steering, mirror)	Erased	Perform storing
Entry/exit assist	ON	Perform initialization
		Set slide amount*
Intelligent Key interlock	Erased	Perform storing
Seat synchronization	OFF	—

*: Default value is 40mm.

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement

INFOID:000000007456342

1.SYSTEM INITIALIZATION

Perform system initialization. Refer to [ADP-9, "SYSTEM INITIALIZATION : Description"](#).

>> GO TO 2.

2.SYSTEM SETTING

Perform system setting. Refer to [ADP-10, "SYSTEM SETTING : Description"](#).

>> GO TO 3.

3.MEMORY STORAGE

Perform memory storage. Refer to [ADP-9, "MEMORY STORING : Description"](#).

>> END

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000007456343

Each function is reset to the following condition when the driver seat control unit is replaced.

Function	Condition	Procedure
Memory (Seat, steering, mirror)	Erased	Perform storing
Entry/exit assist	ON	Perform initialization
		Set slide amount*
Intelligent Key interlock	Erased	Perform storing
Seat synchronization	OFF	—

*: Default value is 40mm.

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000007456344

1.SYSTEM INITIALIZATION

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

Perform system initialization. Refer to [ADP-9. "SYSTEM INITIALIZATION : Description"](#).

>> GO TO 2.

2. SYSTEM SETTING

Perform system setting. Refer to [ADP-10. "SYSTEM SETTING : Description"](#).

>> GO TO 3.

3. MEMORY STORAGE

Perform memory storage. Refer to [ADP-9. "MEMORY STORING : Description"](#).

>> END

SYSTEM INITIALIZATION

SYSTEM INITIALIZATION : Description

INFOID:000000007456345

Always perform the initialization when the battery terminal is disconnected or the driver seat control unit is replaced.

The entry/exit assist function will not operate normally if no initialization is performed.

SYSTEM INITIALIZATION : Special Repair Requirement

INFOID:000000007456346

INITIALIZATION PROCEDURE

1. CHOOSE METHOD

There are two initialization methods.

Which method do you use?

With door switch>>GO TO 2.

With vehicle speed>>GO TO 4.

2. STEP A-1

Turn ignition switch from ACC to OFF position.

>> GO TO 3.

3. STEP A-2

Driver door switch is ON (open) → OFF (close) → ON (open).

>> END

4. STEP B-1

Drive the vehicle at more than 25 km/h (16 MPH).

>> END

MEMORY STORING

MEMORY STORING : Description

INFOID:000000007456347

Always perform the memory storage when the battery terminal is disconnected or the driver seat control unit is replaced. The memory function and Intelligent Key interlock function will not operate normally if no memory storage is performed.

MEMORY STORING : Special Repair Requirement

INFOID:000000007456348

Memory Storage Procedure

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

Two positions for the driver seat, steering column and outside mirror can be stored for memory operation by following procedure.

1.STEP 1

Shift A/T selector lever to P position.

>> GO TO 2.

2.STEP 2

Turn ignition switch ON.

>> GO TO 3.

3.STEP 3

Adjust driver seat, steering column and outside mirror position manually.

>> GO TO 4.

4.STEP 4

1. Push set switch.

NOTE:

- Memory indicator for which driver seat position is already retained in memory is illuminated for 5 seconds.
- Memory indicator for which driver seat position is not retained in memory is illuminated for 0.5 second.

2. Push the memory switch (1 or 2) for at least 1 second within 5 seconds after pushing the set switch.

NOTE:

If memory is stored in the same memory switch, the previous memory will be deleted.

Do you need linking of Intelligent Key?

YES >> GO TO 6.

NO >> GO TO 5.

5.STEP 5

Confirm the operation of each part with memory operation.

>> END

6.STEP 6

Push the Intelligent Key unlock button within 5 seconds after pushing memory switch (while the memory indicator is turned ON).

NOTE:

Memory switch indicator lamp blinks for 5 seconds when registration is complete.

>> GO TO 7.

7.STEP 7

Confirm the operation of each part with memory operation and Intelligent Key interlock operation.

>> END

SYSTEM SETTING

SYSTEM SETTING : Description

INFOID:000000007456349

The settings of the automatic driving positioner system can be changed, using CONSULT, the set switch. Always check the settings before and after disconnecting the battery terminal or replacing driver seat control unit.

Setting Change

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

x: Applicable

Item	Content	CONSULT	Set switch	Factory setting
Amount of seat sliding for entry/exit assist	The amount of seat sliding for entry/exit assist can be selected from 3 items. [40mm/80mm/150mm]	x	—	40mm
Entry/exit assist (seat)	Entry/exit assist (seat) can be selected: ON (operated) – OFF (not operated)	x	x	OFF
Entry/exit assist (steering column)	Entry/exit assist (steering column) can be selected: ON (operated) – OFF (not operated)	x		ON
Seat synchronization	Seat synchronization can be selected: ON (operated) – OFF (not operated)	—	x	OFF

SYSTEM SETTING : Special Repair Requirement

INFOID:000000007456350

1. CHOOSE METHOD

There are three way of setting method.

Which method do you choose?

With set switch>>GO TO 2.

With CONSULT>>GO TO 4.

2. WITH SET SWITCH - STEP 1

1. Turn ignition switch OFF.
2. Push setting button and hold for more than 10 seconds, then confirm blinking of the memory switch indicator.
 - Entry/exit assist (seat/steering column) are ON: Memory switch indicator blink two times.
 - Entry/exit assist (seat/steering column) are OFF: Memory switch indicator blink once.

>> GO TO 3.

3. WITH SET SWITCH - STEP 2

1. Turn ignition switch ACC.
2. Push setting button and hold for more than 10 seconds, then confirm blinking of the memory switch indicator.
 - Synchronization are ON: Memory switch indicator blink two times.
 - Synchronization are OFF: Memory switch indicator blink once.

>> END

4. WITH CONSULT - STEP 1

Select "Work support".

>> GO TO 5.

5. WITH CONSULT - STEP 2

1. Select "EXIT SEAT SLIDE SETTING", "EXIT TILT SETTING" or "SEAT SLIDE VOLUME SET" then touch display to change between ON and OFF.
 - EXIT SEAT SLIDE SETTING: Entry/exit assist (seat)
 - EXIT TILT SETTING: Entry/exit assist (steering column)
2. Then touch "OK".

>> END

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >


SYSTEM DESCRIPTION

AUTOMATIC DRIVE POSITIONER SYSTEM

AUTOMATIC DRIVE POSITIONER SYSTEM

AUTOMATIC DRIVE POSITIONER SYSTEM : System Diagram

INFOID:000000007456351

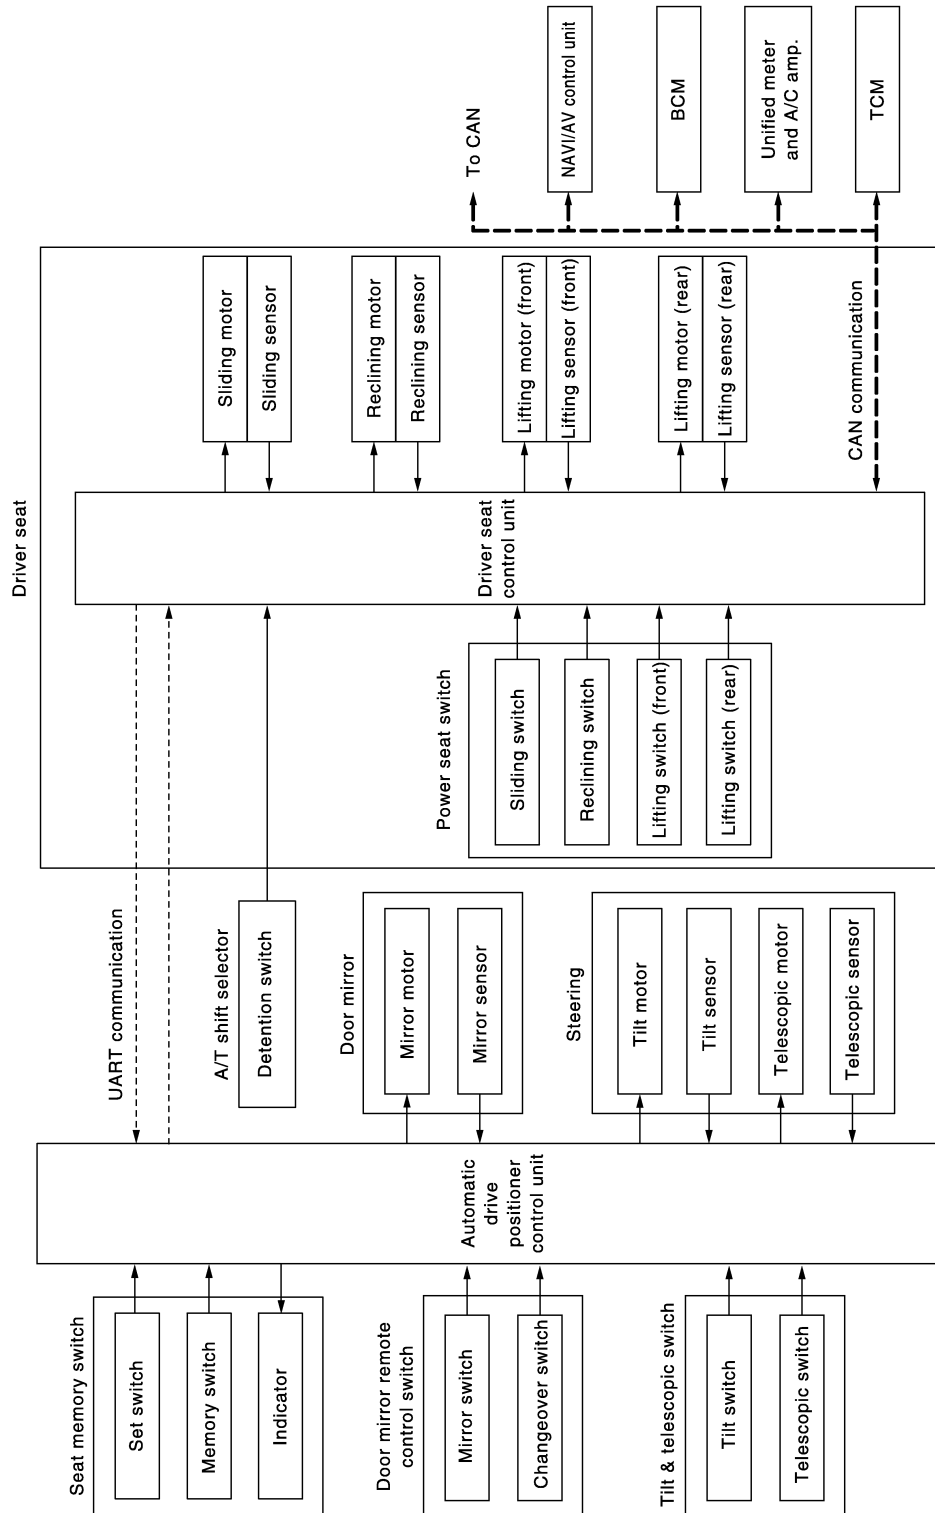

JMJIA3436GB

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

AUTOMATIC DRIVE POSITIONER SYSTEM : System Description

INFOID:000000007456352

OUTLINE

The system automatically moves the driver seat, steering column and door mirror position by the driver seat control unit and the automatic drive positioner control unit. The driver seat control unit corresponds with the automatic drive positioner control unit by UART communication.

Function		Description
Manual function		The driving position (seat, steering column and door mirror position) can be adjusted by using the power seat switch, tilt & telescopic switch or door mirror remote control switch.
Seat synchronization function		The positions of the steering column and door mirror are adjusted to the proper position automatically while linking with manual operation [seat sliding, seat lifting (rear) or seat reclining].
Memory function		The seat, steering column and outside mirror move to the stored driving position by pressing seat memory switch (1 or 2).
Entry/Exit assist function	Exit	On exit, the seat moves backward and the steering column moves upward and forward.
	Entry	On entry, the seat and steering column returns from exiting position to the previous driving position.
Intelligent Key interlock function		Perform memory operation, exiting operation and entry operation by Intelligent Key unlock operation or driver side door request switch unlock operation.

NOTE:

The lumbar support system and the side support system are controlled independently with no link to the automatic drive positioner system.


A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

AUTOMATIC DRIVE POSITIONER SYSTEM : Component Parts Location INFOID:000000007456353

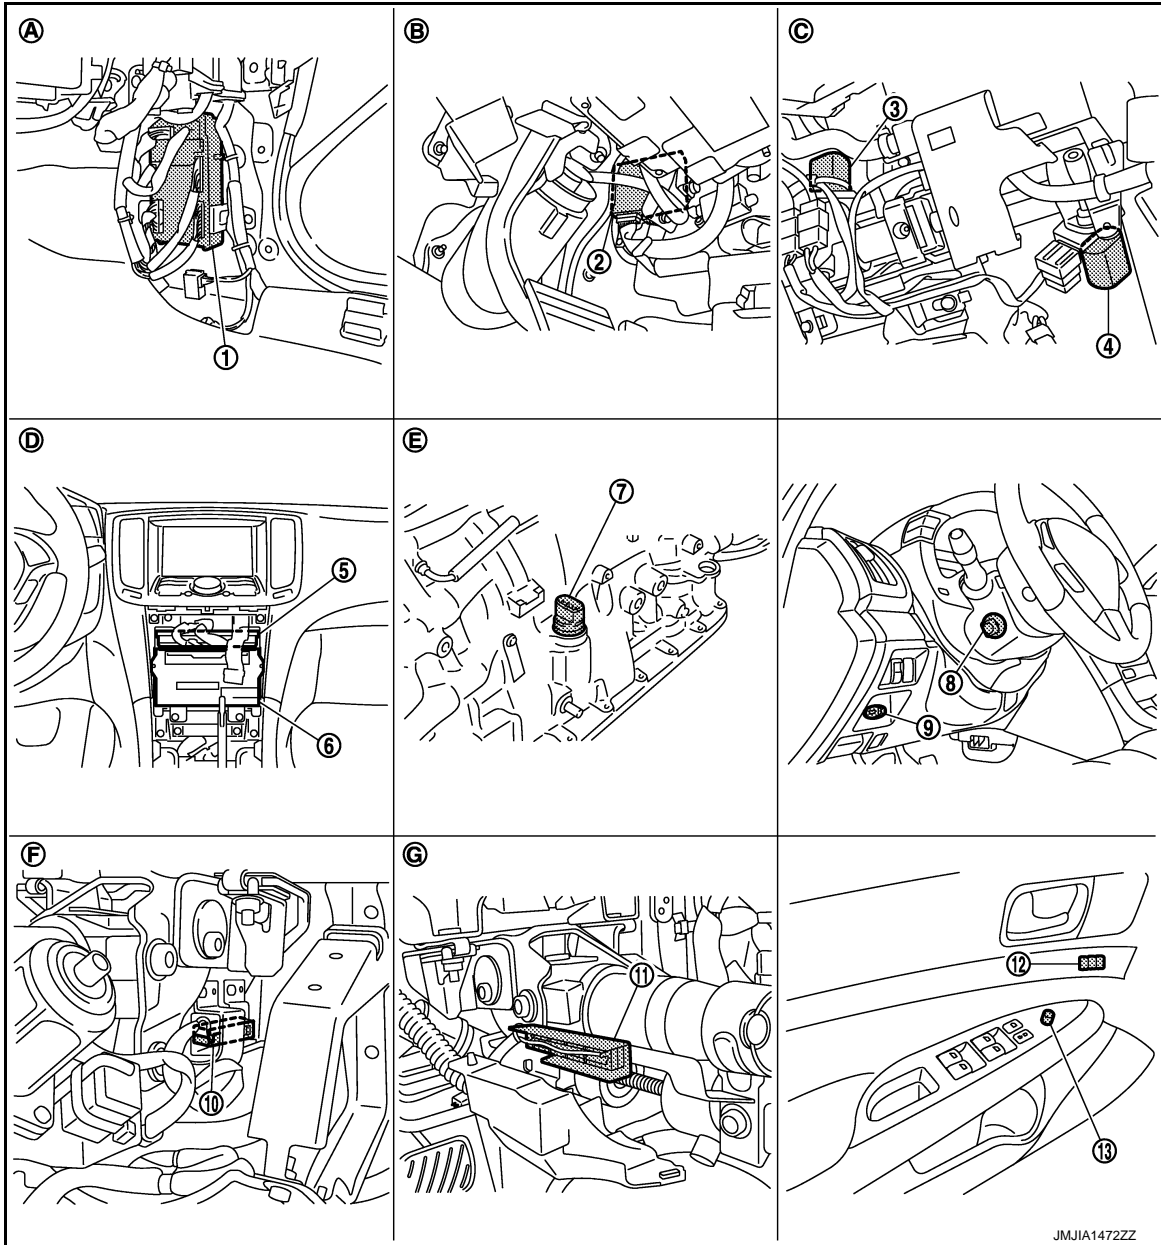


JMJIA1472ZZ

- | | | |
|---|---|---|
| 1. BCM M118, M119, M122, M123 | 2. Automatic drive positioner control unit M51, M52 | 3. Tilt motor M49 |
| 4. Telescopic motor M49 | 5. Unified meter and A/C amp. M67 | 6. AV control unit
With NAVI M87, M88
Without NAVI M83, M85 |
| 7. AT assembly connector F51 | 8. Tilt & telescopic switch M31 | 9. Key slot M22 |
| 10. Tilt sensor M48 | 11. Telescopic sensor M48 | 12. Seat memory switch D5 |
| 13. Door mirror remote control switch D17 | | |

- | | | |
|--|--|--|
| A. Dash side lower (Passenger side) | B. View with instrument driver lower panel removed | C. View with steering column cover lower and upper removed |
| D. Behind cluster lid C | E. A/T assembly (TCM is built in A/T assembly) | F. View with instrument driver lower panel removed |
| G. View with steering column cover lower and upper removed | | |

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

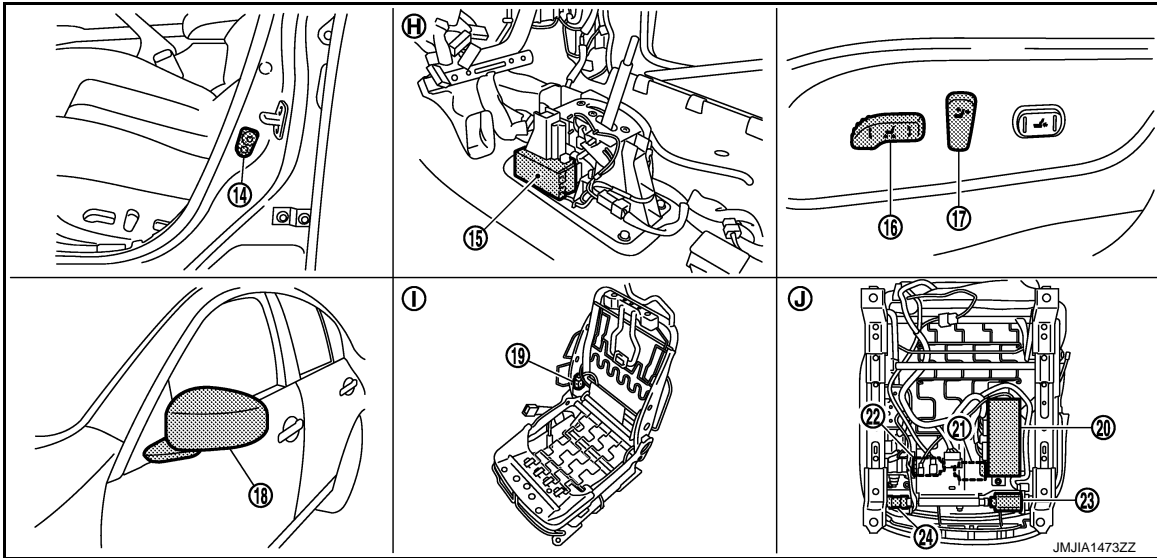

- | | | |
|---|---|--|
| 14. Front door switch (driver side) B16 | 15. A/T shift selector (detention switch) M137 | 16. Sliding, lifting switch (Power seat switch B459) |
| 17. Reclining switch (power seat switch B459) | 18. Door mirror (driver side) D3 | 19. Reclining motor B454 |
| 20. Driver seat control unit B451, B452 | 21. Lifting motor (front) B455 | 22. Lifting motor (rear) B456 |
| 23. Sliding motor B461 | 24. Sliding sensor B453 | |
| H. View with center console assembly removed | I. View with seat cushion pad and seat-back pad removed | J. Backside of the seat cushion |

AUTOMATIC DRIVE POSITIONER SYSTEM : Component Description

INFOID:000000007456354

CONTROL UNITS

ADP

Item	Function
Driver seat control unit	<ul style="list-style-type: none"> Main units of automatic drive positioner system It is connected to the CAN. It communicates with the automatic drive positioner control via UART communication.
Automatic drive positioner control unit	<ul style="list-style-type: none"> It communicates with the driver seat control unit via UART communication. Perform various controls with the instructions of driver seat control unit. Perform the controls of the tilt & telescopic, door mirror and the seat memory switch.
BCM	Transmit the following status to the driver seat control unit via CAN communication. <ul style="list-style-type: none"> Driver door: OPEN/CLOSE Ignition switch position: ACC/ON Door lock: UNLOCK (with Intelligent Key or driver side door request switch operation) Key ID Key switch: Insert/Pull out Intelligent Key Starter: CRANKING/OTHER
Unified meter and A/C amp.	Transmit the vehicle speed signal to the driver seat control unit via CAN communication.
TCM	Transmit the shift position signal (P range) to the driver seat control unit via CAN communication.

INPUT PARTS

Switches

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

Item	Function
Key slot	The key switch is installed to detect the key inserted/removed status.
Front door switch (driver side)	Detect front door (driver side) open/close status.
A/T shift selector (detention switch)	Detect the P range position of A/T selector lever.
Set switch	The registration and system setting can be performed with its operation.
Memory switch 1/2	The registration and operation can be performed with its operation.
Power seat switch	The following switch is installed. <ul style="list-style-type: none"> • Reclining switch • Lifting switch (front) • Lifting switch (rear) • Sliding switch The specific parts can be operated with the operation of each switch.
Tilt & telescopic switch	The following switch is installed. <ul style="list-style-type: none"> • Tilt switch • Telescopic switch The specific parts can be operated with the operation of each switch.
Door mirror remote control switch	The following switch is installed. <ul style="list-style-type: none"> • Mirror switch • Changeover switch The specific parts can be operated with the operation of each switch.

Sensors

Item	Function
Door mirror sensor (driver side/passenger side)	Detect the up/down and left/right position of outside mirror face.
Tilt and telescopic sensor	Detect the up/down and left/right position of steering column.
Lifting sensor (front)	Detect the up/down position of seat lifting (front).
Lifting sensor (rear)	Detect the up/down position of seat lifting (rear).
Reclining sensor	Detect the tilt of seatback.
Sliding sensor	Detect the front/rear position of seat.

OUTPUT PARTS

Item	Function
Door mirror motor (driver side/passenger side)	Move the outside mirror face upward/downward and leftward/rightward.
Tilt and telescopic motor	Move the steering column upward/downward and frontward/rearward.
Lifting motor (front)	Move the seat lifting (front) upward/downward.
Lifting motor (rear)	Move the seat lifting (rear) upward/downward.
Reclining motor	Tilt and raise up the seatback.
Sliding motor	Slide the seat frontward/rearward.
Memory indicator	Illuminates or flashes according to the registration/operation status.


MANUAL FUNCTION

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

MANUAL FUNCTION : System Diagram

INFOID:000000007456355

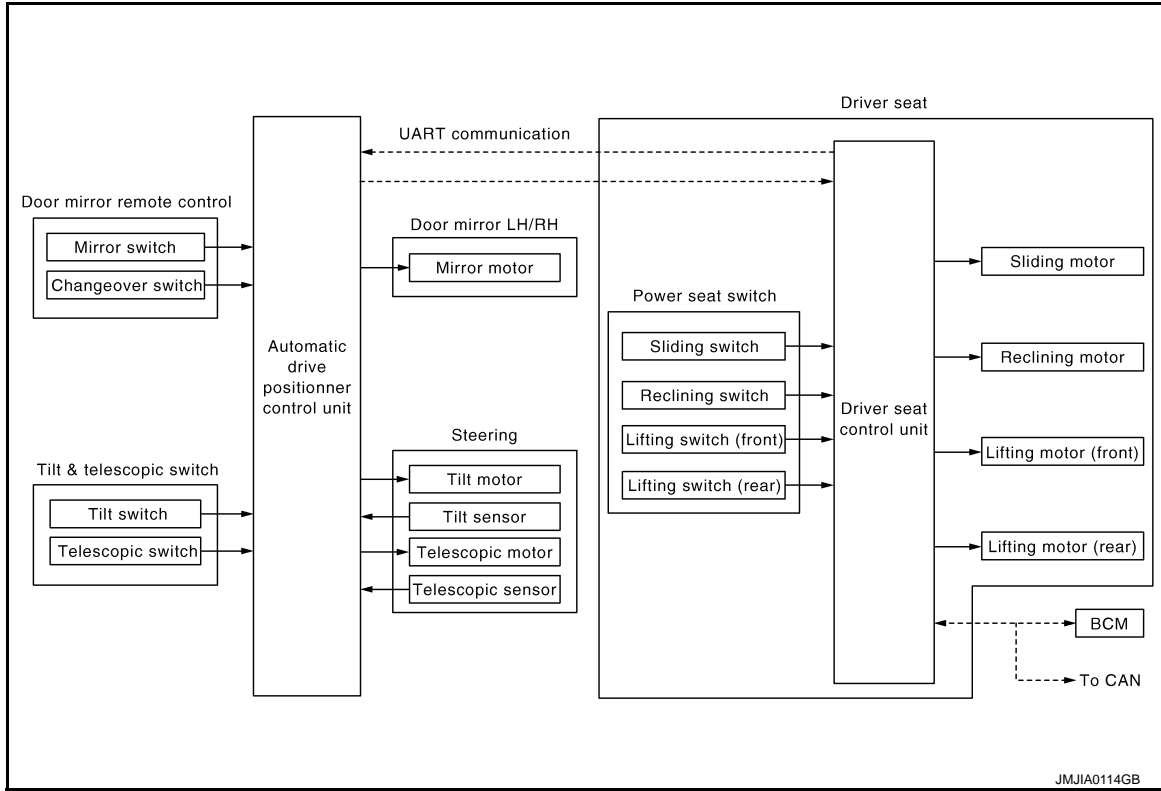

A
B
C
D
E
F
G
H

MANUAL FUNCTION : System Description

INFOID:000000007456356

OUTLINE

The driving position (seat, steering column and door mirror position) can be adjusted manually with power seat switch, tilt & telescopic switch and door mirror remote control switch.

ADP

OPERATION PROCEDURE

1. Turn ignition switch ON.
2. Operate power seat switch, tilt & telescopic switch or door mirror remote control switch.
3. The driver seat, steering column or door mirror operates according to the operation of each switch.

DETAIL FLOW

Seat

Order	Input	Output	Control unit condition
1	Power seat switch (sliding, lifting, reclining)	—	The power seat switch signal is inputted to the driver seat control unit when the power seat switch is operated.
2	—	Motors (sliding, lifting, reclining)	The driver seat control unit outputs signals to each motor according to the power seat switch input signal.

K
L

Tilt & Telescopic

Order	Input	Output	Control unit condition
1	Tilt & telescopic switch	—	The tilt & telescopic switch signal is inputted to the automatic drive positioner control unit when the tilt & telescopic switch is operated.

M
N
O
P

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

Order	Input	Output	Control unit condition
2	—	Motors (Tilt, telescopic)	The automatic drive positioner control unit actuates each motor according to the operation of the tilt & telescopic switch.
3	Sensors (Tilt, telescopic)	—	The automatic drive positioner control unit recognizes any operation limit of each actuator via each sensor and will not operate the actuator anymore at that time.*

*: Tilt does not operate upward when tilt sensor voltage is less than 1.2 V, tilt does not operate downward when the sensor value is bigger than 3.4 V. Telescopic does not operate backward when telescopic sensor value is less than 0.8 V, telescopic does not operate forward when the sensor value is bigger than 3.4 V.

Door Mirror

Order	Input	Output	Control unit condition
1	Door mirror remote control switch	—	The door mirror remote control switch signal is inputted to the automatic drive positioner control unit when the door mirror remote control switch is operated.
2	—	Motors (Door mirror motor)	The automatic drive positioner control unit actuates each motor according to the operation of the door mirror remote control switch.

NOTE:


The door mirrors can be operated manually when ignition switch is in either ACC or ON position. The ignition switch signal (ACC/ON) is transmitted from BCM to the driver seat control unit via CAN communication and from the driver seat control unit to the automatic drive positioner control unit via UART communication.

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

MANUAL FUNCTION : Component Parts Location

INFOID:000000007456357

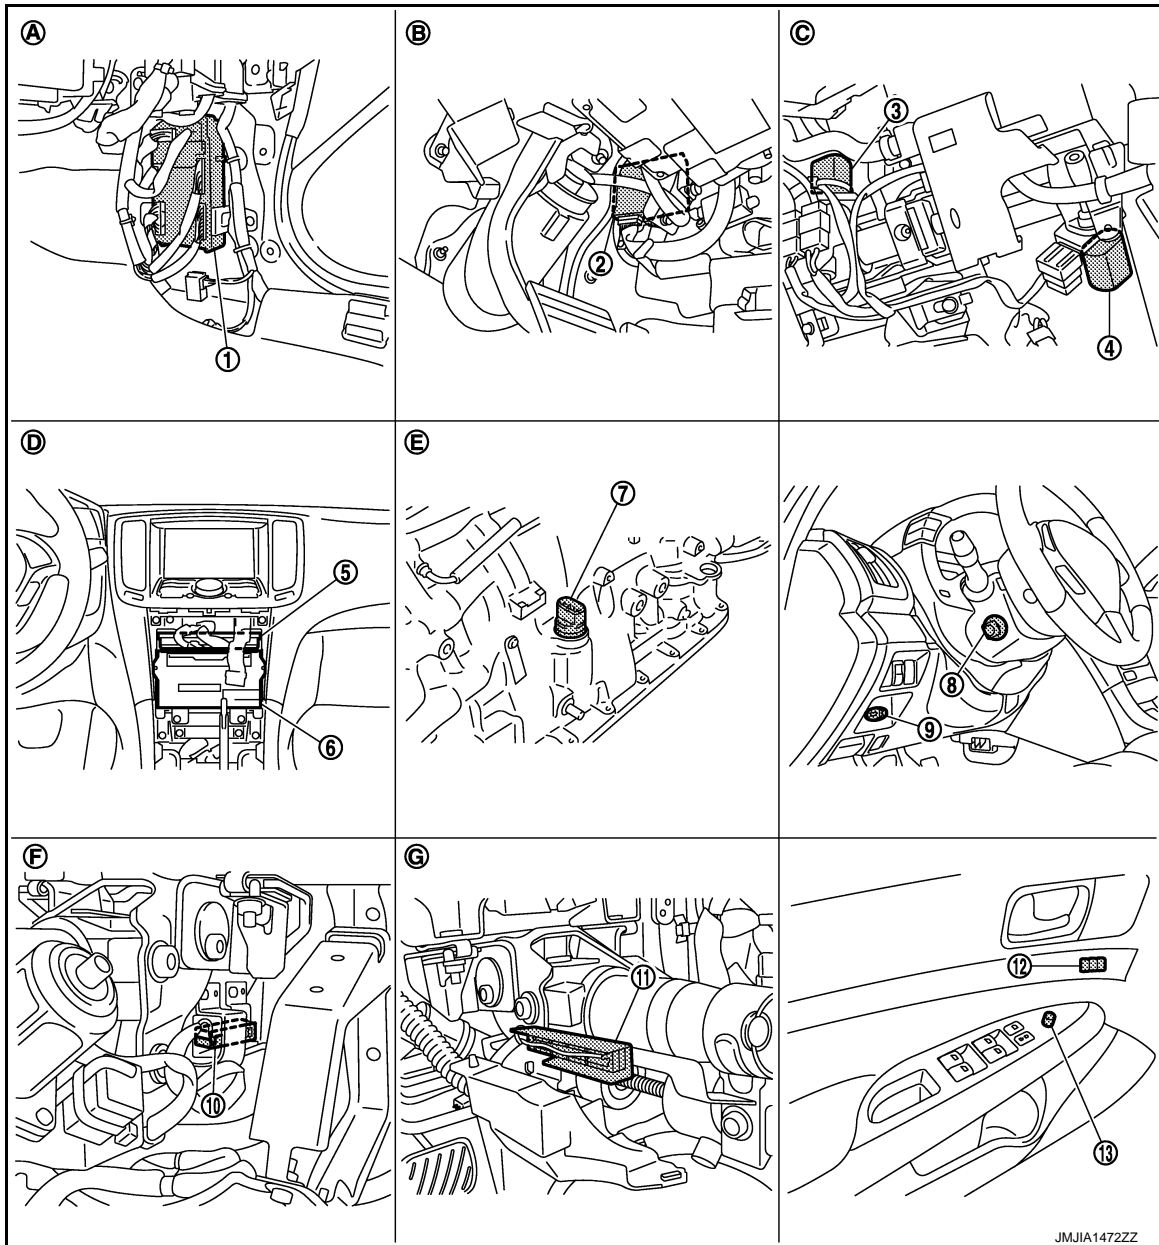

- | | | |
|---|---|---|
| 1. BCM M118, M119, M122, M123 | 2. Automatic drive positioner control unit M51, M52 | 3. Tilt motor M49 |
| 4. Telescopic motor M49 | 5. Unified meter and A/C amp. M67 | 6. AV control unit
With NAVI M87, M88
Without NAVI M83, M85 |
| 7. AT assembly connector F51 | 8. Tilt & telescopic switch M31 | 9. Key slot M22 |
| 10. Tilt sensor M48 | 11. Telescopic sensor M48 | 12. Seat memory switch D5 |
| 13. Door mirror remote control switch D17 | | |

- | | | |
|--|--|--|
| A. Dash side lower (Passenger side) | B. View with instrument driver lower panel removed | C. View with steering column cover lower and upper removed |
| D. Behind cluster lid C | E. A/T assembly (TCM is built in A/T assembly) | F. View with instrument driver lower panel removed |
| G. View with steering column cover lower and upper removed | | |


JMJIA1472ZZ

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

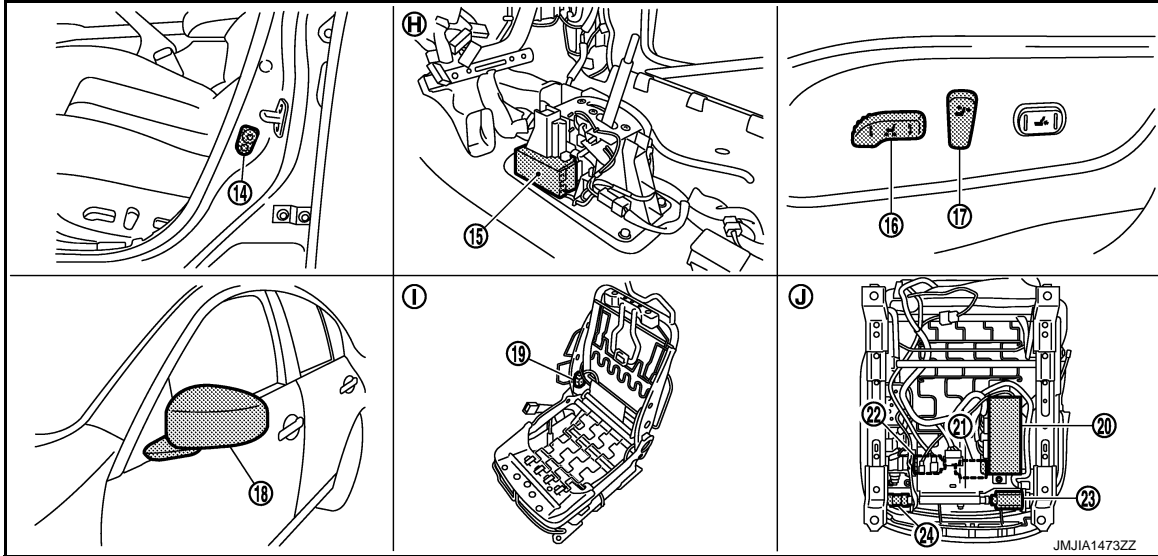

- | | | |
|---|---|--|
| 14. Front door switch (driver side) B16 | 15. A/T shift selector (detention switch) M137 | 16. Sliding, lifting switch (Power seat switch B459) |
| 17. Reclining switch (power seat switch B459) | 18. Door mirror (driver side) D3 | 19. Reclining motor B454 |
| 20. Driver seat control unit B451, B452 | 21. Lifting motor (front) B455 | 22. Lifting motor (rear) B456 |
| 23. Sliding motor B461 | 24. Sliding sensor B453 | |
| H. View with center console assembly removed | I. View with seat cushion pad and seat-back pad removed | J. Backside of the seat cushion |

MANUAL FUNCTION : Component Description

INFOID:000000007456358

CONTROL UNITS

Item	Function
Driver seat control unit	<ul style="list-style-type: none"> Operates the specific seat motor with the signal from the power seat switch. Transmits the ignition switch signal (ACC/ON) via UART communication to the automatic drive positioner control unit.
Automatic drive positioner control unit	Operates the specific motor with the signal from tilt & telescopic switch or door mirror remote control switch.
BCM	Recognizes the following status and transmits it to the driver seat control unit via CAN communication. <ul style="list-style-type: none"> Ignition position: ACC/ON

INPUT PARTS

Switches

Item	Function
Power seat switch	The following switch is installed. <ul style="list-style-type: none"> Reclining switch Lifting switch (front) Lifting switch (rear) Sliding switch The specific parts can be operated with the operation of each switch.

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

Item	Function
Tilt & telescopic switch	The following switch is installed. <ul style="list-style-type: none"> • Tilt switch • Telescopic switch The specific parts can be operated with the operation of each switch.
Door mirror remote control switch	The following switch is installed. <ul style="list-style-type: none"> • Mirror switch • Changeover switch The specific parts can be operated with the operation of each switch.

Sensors

Item	Function
Tilt and telescopic sensor	Detect the up/down and left/right position of steering column.


OUTPUT PARTS

Item	Function
Door mirror motor (driver side/passenger side)	Move the outside mirror face upward/downward and leftward/rightward.
Tilt & telescopic motor	Move the steering column upward/downward and frontward/rearward.
Lifting motor (front)	Move the seat lifter (front) upward/downward.
Lifting motor (rear)	Move the seat lifter (rear) upward/downward.
Reclining motor	Tilt and raise up the seatback.
Sliding motor	Slide the seat frontward/rearward.

SEAT SYNCHRONIZATION FUNCTION

SEAT SYNCHRONIZATION FUNCTION : System Diagram

INFOID:000000007456359

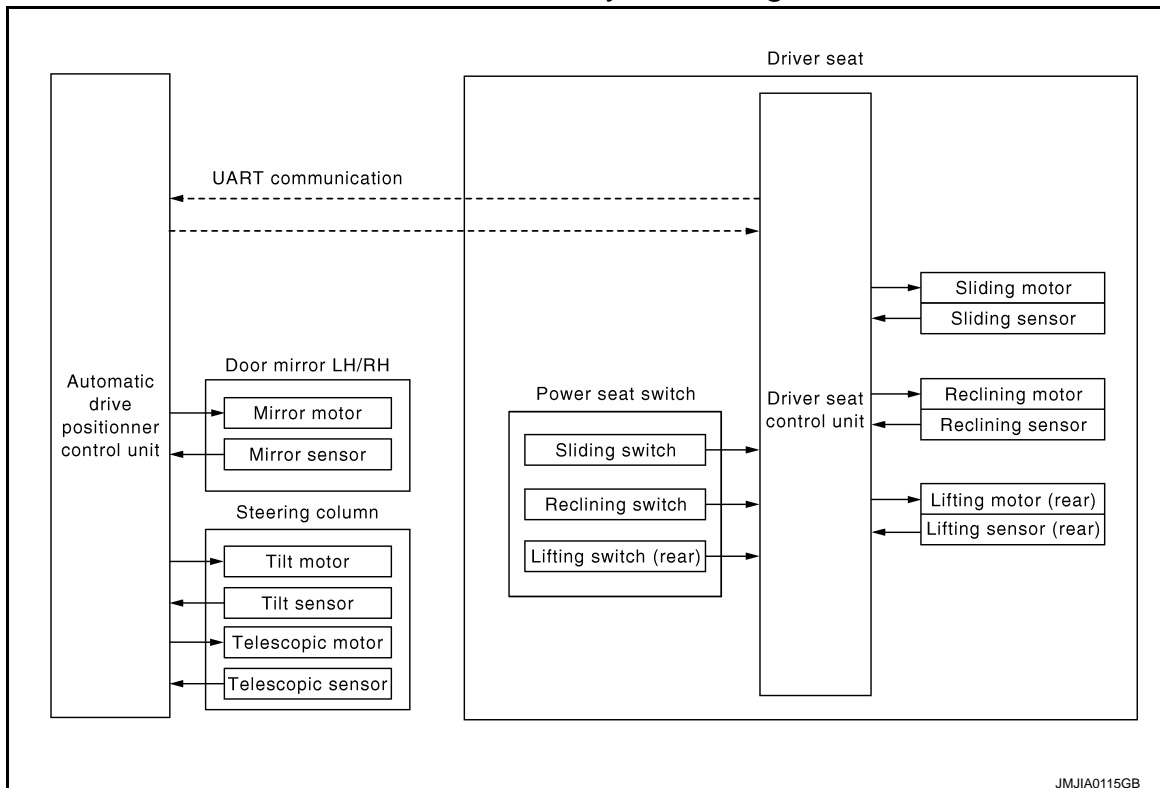

SEAT SYNCHRONIZATION FUNCTION : System Description

INFOID:000000007456360

OUTLINE

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

The steering column position and door mirror position is adjusted to the position automatically according to the direction and distance of seat movement when performing the manual operation of sliding, reclining or lifting (rear). This function saves adjusting the mirror and steering column when adjusting the seat.

NOTE:

- This function is set to OFF before delivery (initial setting).
- For the system setting procedure. Refer to [ADP-10. "SYSTEM SETTING : Description"](#).

OPERATION PROCEDURE

1. Turn ignition switch ON.
2. Adjust seat position [sliding, reclining, lifting (rear)].
3. The steering and outside mirror is adjusted automatically.

NOTE:

- The seat synchronization function will not operate if seat adjusting value is more than limit value.

Item	Limit value
Seat sliding	76 [mm]
Seat reclining	9.1 [degrees]
Seat lifter (rear)	20 [mm]

- The seat synchronization function will not operate if the steering column or door mirror moves to the operating end while this function is operating. Perform memory function or drive the vehicle at vehicle speed of 7 km/h or more once to activate this function again.
- If the seat position is uncomfortable after the adjustment, seat position can be adjusted easily by memory operation.

OPERATION CONDITION

Satisfy all of the following items. The seat synchronization function is not performed if these items are not satisfied.

Item	Request status
Ignition position	ON
System setting	ON
Switch inputs <ul style="list-style-type: none"> • Power seat switch • Tilt & telescopic switch • Door mirror remote control switch • Set switch • Memory switch 	OFF (Not operated)
A/T selector lever	P position

DETAIL FLOW


Order	Input	Output	Control unit condition
1	—	—	Perform Manual operation [Sliding, reclining or lifting (rear)].
2	Sensors [Sliding, reclining, lifting (rear)]	—	The driver seat control unit judges the direction and distance of seat movement according to the signal input from each seat sensor during manual operation.
3	—	Motors (Tilt, telescopic, outside mirror)	Driver seat control unit requests the operation to position according to the direction and distance of seat movement to the automatic drive positioner control unit via UART communication. The automatic drive positioner control unit operates each motor.
	Sensors (Tilt, telescopic, outside mirror)	—	Driver seat control unit stops the operation of each motor when the value of each sensor that is input to automatic drive positioner control unit via UART communication reaches the target address.

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

SEAT SYNCHRONIZATION FUNCTION : Component Parts Location

INFOID:000000007456361

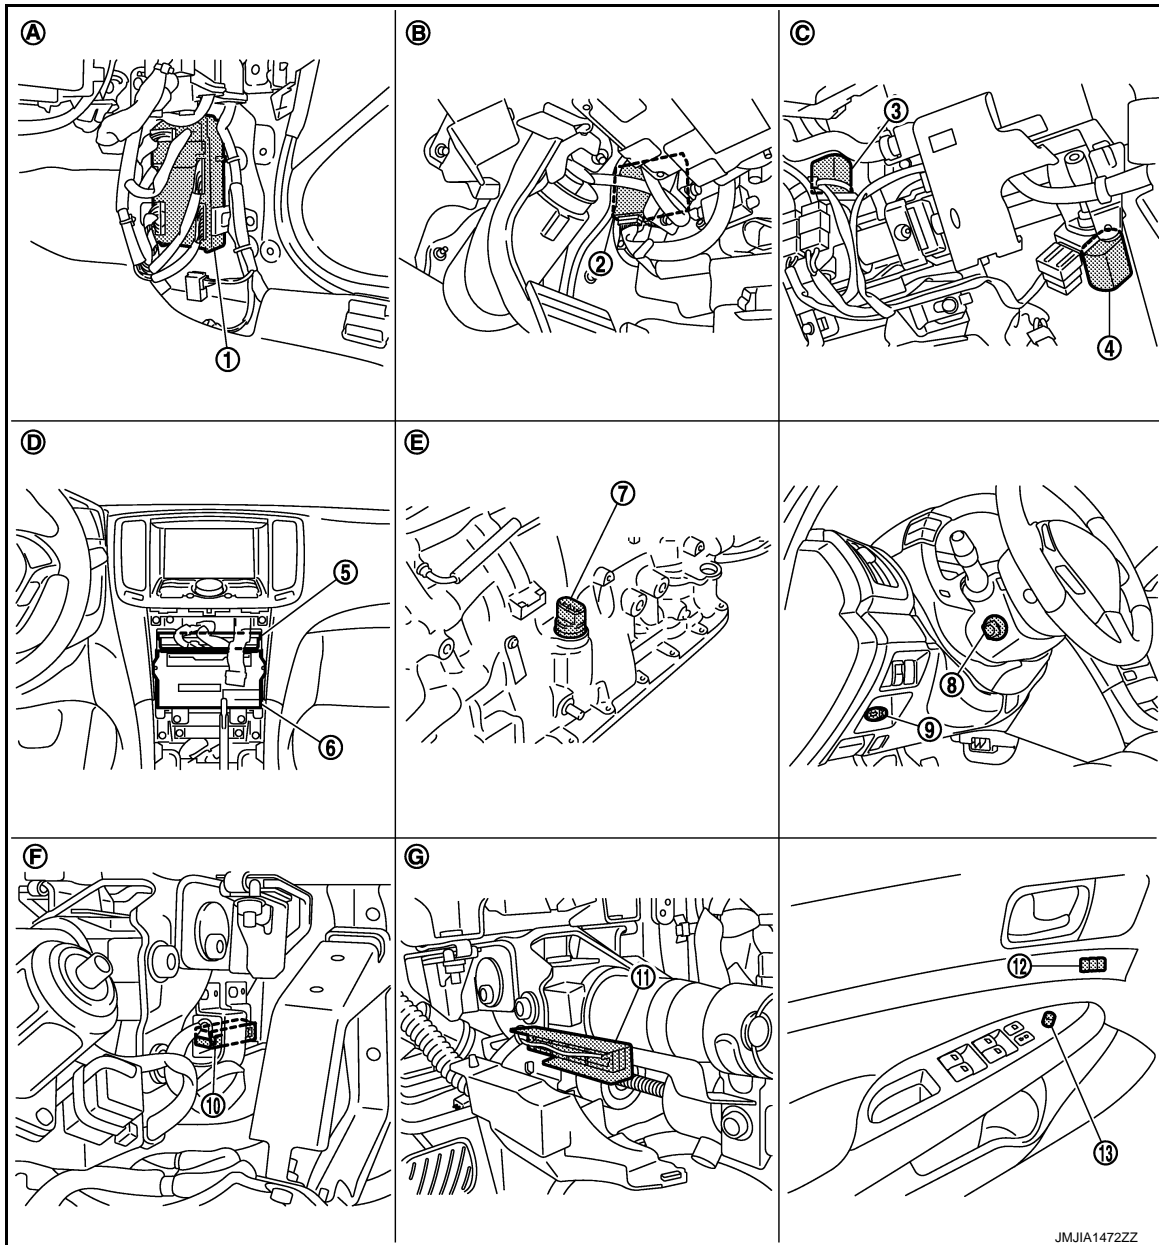


- | | | |
|---|---|---|
| 1. BCM M118, M119, M122, M123 | 2. Automatic drive positioner control unit M51, M52 | 3. Tilt motor M49 |
| 4. Telescopic motor M49 | 5. Unified meter and A/C amp. M67 | 6. AV control unit
With NAVI M87, M88
Without NAVI M83, M85 |
| 7. AT assembly connector F51 | 8. Tilt & telescopic switch M31 | 9. Key slot M22 |
| 10. Tilt sensor M48 | 11. Telescopic sensor M48 | 12. Seat memory switch D5 |
| 13. Door mirror remote control switch D17 | | |

- | | | |
|--|--|--|
| A. Dash side lower (Passenger side) | B. View with instrument driver lower panel removed | C. View with steering column cover lower and upper removed |
| D. Behind cluster lid C | E. A/T assembly (TCM is built in A/T assembly) | F. View with instrument driver lower panel removed |
| G. View with steering column cover lower and upper removed | | |

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

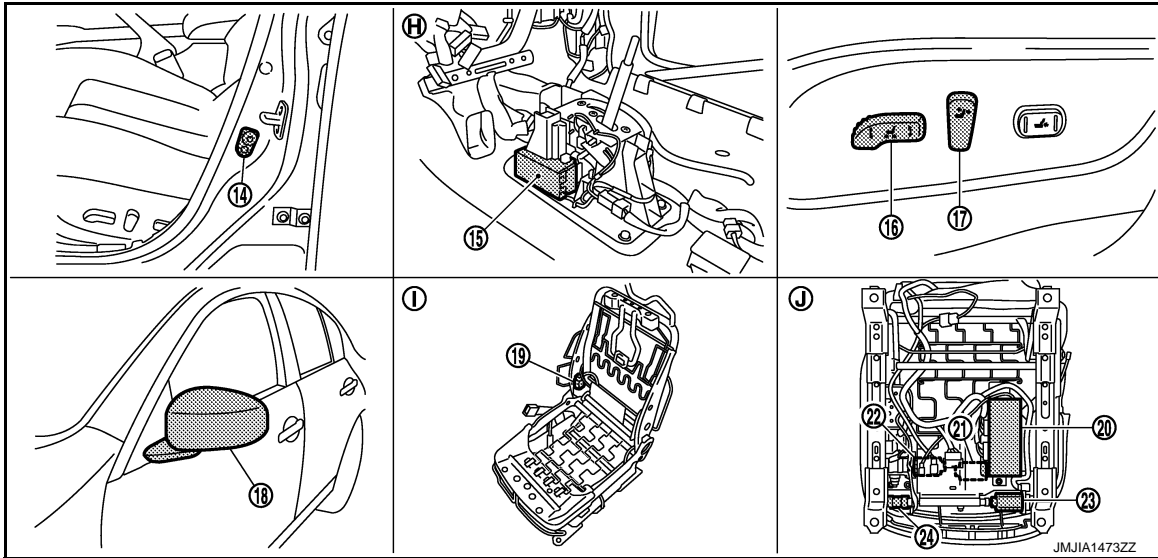

- | | | |
|---|---|---|
| 14. Front door switch (driver side) B16 | 15. A/T shift selector (detention switch) M137 | 16. Sliding, lifting switch (Power seat switch) B459) |
| 17. Reclining switch (power seat switch B459) | 18. Door mirror (driver side) D3 | 19. Reclining motor B454 |
| 20. Driver seat control unit B451, B452 | 21. Lifting motor (front) B455 | 22. Lifting motor (rear) B456 |
| 23. Sliding motor B461 | 24. Sliding sensor B453 | |
| H. View with center console assembly removed | I. View with seat cushion pad and seat-back pad removed | J. Backside of the seat cushion |

SEAT SYNCHRONIZATION FUNCTION : Component Description

INFOID:000000007456362

CONTROL UNITS

Item	Function
Driver seat control unit	Operates the specific seat motor with the signal from the power seat switch.
Automatic drive positioner control unit	Operates the steering motor and door mirror with the instructions from the driver seat control unit.

INPUT PARTS

Switches

Item	Function
Power seat switch	The following switch is installed. <ul style="list-style-type: none"> • Reclining switch • Lifting switch (front) • Lifting switch (rear) • Sliding switch The specific parts can be operated with the operation of each switch.

Sensors

Item	Function
Door mirror sensor (driver side/passenger side)	Detect the up/down and left/right position of outside mirror face.
Tilt and telescopic sensor	Detect the up/down and left/right position of steering column.
Lifting sensor (rear)	Detect the up/down position of seat lifter (rear).

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

Item	Function
Reclining sensor	Detect the tilt of seatback.
Sliding sensor	Detect the front/rear position of seat.


OUTPUT PARTS

Item	Function
Door mirror motor (driver side/passenger side)	Move the outside mirror face upward/downward and leftward/rightward.
Tilt & telescopic motor	Move the steering column upward/downward and frontward/rearward.
Lifting motor (rear)	Move the seat lifter (rear) upward/downward.
Reclining motor	Tilt and raise up the seatback.
Sliding motor	Slide the seat frontward/rearward.

MEMORY FUNCTION

MEMORY FUNCTION : System Diagram

INFOID:000000007456363

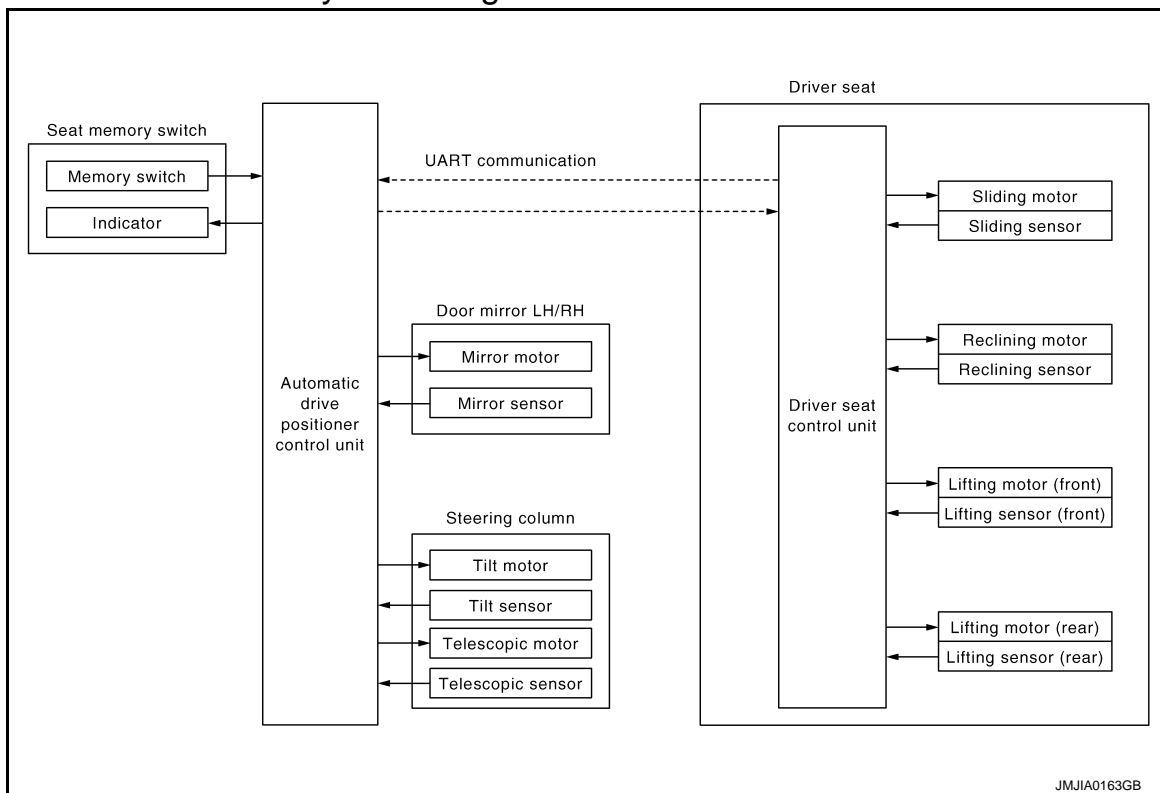

MEMORY FUNCTION : System Description

INFOID:000000007456364

OUTLINE

The driver seat control unit can store the optimum driving positions (seat, steering column and door mirror position) for 2 people. If the front seat position is changed, one-touch (pressing desired memory switch for more than 0.5 second) operation allows changing to the other driving position.

NOTE:

Further information for the memory storage procedure. Refer to [ADP-9. "MEMORY STORING : Description"](#).

OPERATION PROCEDURE

1. Turn ignition switch ON
2. Press desired memory switch for more than 0.5 second.
3. Driver seat, steering and door mirror will move to the memorized position.

OPERATION CONDITION

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

Satisfy all of the following items. The memory function is not performed if these items are not satisfied.

Item	Request status
Ignition position	ON
Switch inputs <ul style="list-style-type: none"> • Power seat switch • Tilt & telescopic switch • Door mirror control switch • Set switch • Memory switch 	OFF (Not operated)
A/T selector lever	P position

However, the memory operation can be performed for 45 seconds after opening the driver door (driver door switch OFF → ON) even if the IGN position is in OFF position.

DETAIL FLOW


Order	Input	Output	Control unit condition
1	Memory switch	—	The memory switch signal is inputted to the automatic drive positioner control unit when memory switch 1 or 2 is operated. Memory switch signal is input to driver seat control unit via UART communication.
2	—	Motors (Seat, Steering, door mirror)	Driver seat control unit operates each motor of seat when it recognizes the memory switch pressed for 0.5 second or more and requests each motor operation to automatic drive positioner control unit via UART communication. The automatic drive positioner control unit operates each motor.
		Memory switch Indicator	Driver seat control unit requests the flashing of memory indicator to automatic drive positioner control unit via UART communication while either of the motors is operating. The automatic drive positioner control unit illuminates the memory indicator.
3	Sensors (Seat, steering column, door mirror)	—	Driver seat control unit judges the operating seat position with each seat sensor input. The positions of the steering column and outside mirror are monitored with each sensor signal that is input from auto drive positioner control unit via UART communication. Driver seat control unit stops the operation of each motor when each part reaches the recorded address.
4	—	Memory switch Indicator	Driver seat control unit requests the illumination of memory indicator to auto drive positioner control unit via UART communication after all motors stop. The auto driving positioner control unit illuminates the memory indicator for 5 seconds.

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

MEMORY FUNCTION : Component Parts Location

INFOID:000000007456365

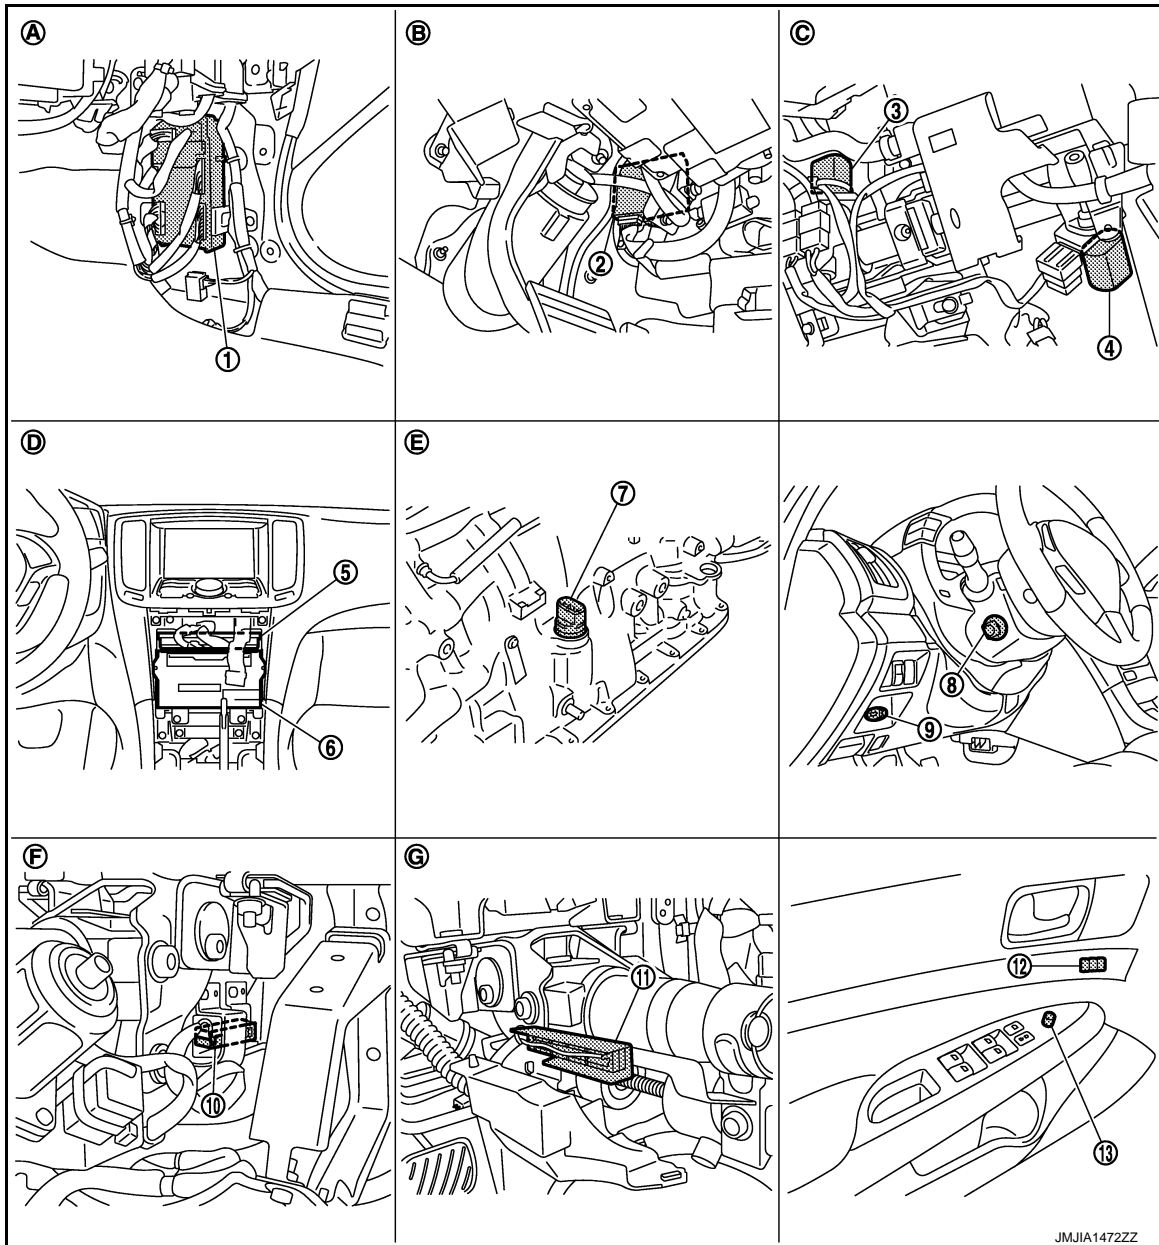

- | | | |
|---|---|---|
| 1. BCM M118, M119, M122, M123 | 2. Automatic drive positioner control unit M51, M52 | 3. Tilt motor M49 |
| 4. Telescopic motor M49 | 5. Unified meter and A/C amp. M67 | 6. AV control unit
With NAVI M87, M88
Without NAVI M83, M85 |
| 7. AT assembly connector F51 | 8. Tilt & telescopic switch M31 | 9. Key slot M22 |
| 10. Tilt sensor M48 | 11. Telescopic sensor M48 | 12. Seat memory switch D5 |
| 13. Door mirror remote control switch D17 | | |


- | | | |
|--|--|--|
| A. Dash side lower (Passenger side) | B. View with instrument driver lower panel removed | C. View with steering column cover lower and upper removed |
| D. Behind cluster lid C | E. A/T assembly (TCM is built in A/T assembly) | F. View with instrument driver lower panel removed |
| G. View with steering column cover lower and upper removed | | |

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

JMJIA1472ZZ

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

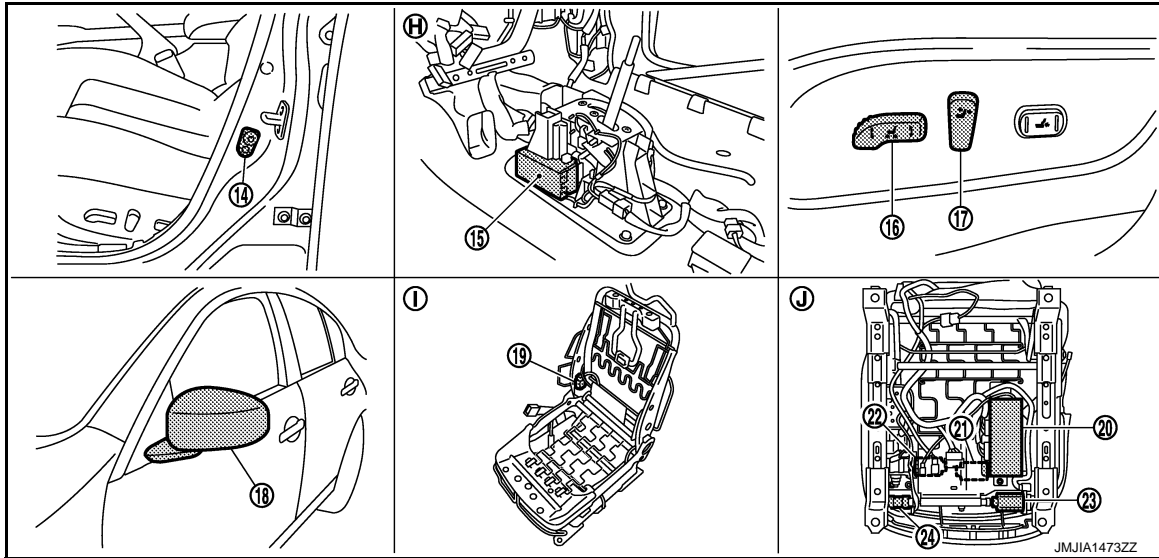

- | | | |
|---|---|--|
| 14. Front door switch (driver side) B16 | 15. A/T shift selector (detention switch) M137 | 16. Sliding, lifting switch (Power seat switch B459) |
| 17. Reclining switch (power seat switch B459) | 18. Door mirror (driver side) D3 | 19. Reclining motor B454 |
| 20. Driver seat control unit B451, B452 | 21. Lifting motor (front) B455 | 22. Lifting motor (rear) B456 |
| 23. Sliding motor B461 | 24. Sliding sensor B453 | |
| H. View with center console assembly removed | I. View with seat cushion pad and seat-back pad removed | J. Backside of the seat cushion |

MEMORY FUNCTION : Component Description

INFOID:000000007456366

CONTROL UNITS

Item	Function
Driver seat control unit	<ul style="list-style-type: none"> The address of each part is recorded. Operates each motor of seat to the registered position. Requests the operations of steering column and door mirror to automatic drive positioner control unit
Automatic drive positioner control unit	Operates the steering column and door mirror with the instructions from the driver seat control.

INPUT PARTS

Switches

Item	Function
Memory switch 1/2	The registration and memory function can be performed with its operation.

Sensors

Item	Function
Door mirror sensor (driver side/passenger side)	Detect the up/down and left/right position of outside mirror face.
Tilt & telescopic sensor	Detect the up/down and left/right position of steering column.
Lifting sensor (front)	Detect the up/down position of seat lifting (front).
Lifting sensor (rear)	Detect the up/down position of seat lifting (rear).
Reclining sensor	Detect the tilt of seatback.
Sliding sensor	Detect the front/rear position of seat.

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >


OUTPUT PARTS

Item	Function
Door mirror motor (driver side/passenger side)	Move the outside mirror face upward/downward and leftward/rightward.
Tilt and telescopic motor	Move the steering column upward/downward and frontward/rearward.
Lifting motor (front)	Move the seat lifter (front) upward/downward.
Lifting motor (rear)	Move the seat lifter (rear) upward/downward.
Reclining motor	Tilt and raise up the seatback.
Sliding motor	Slide the seat frontward/rearward.
Memory indicator	Illuminates or blinks according to the registration/operation status.

EXIT ASSIST FUNCTION

EXIT ASSIST FUNCTION : System Diagram

INFOID:000000007456367

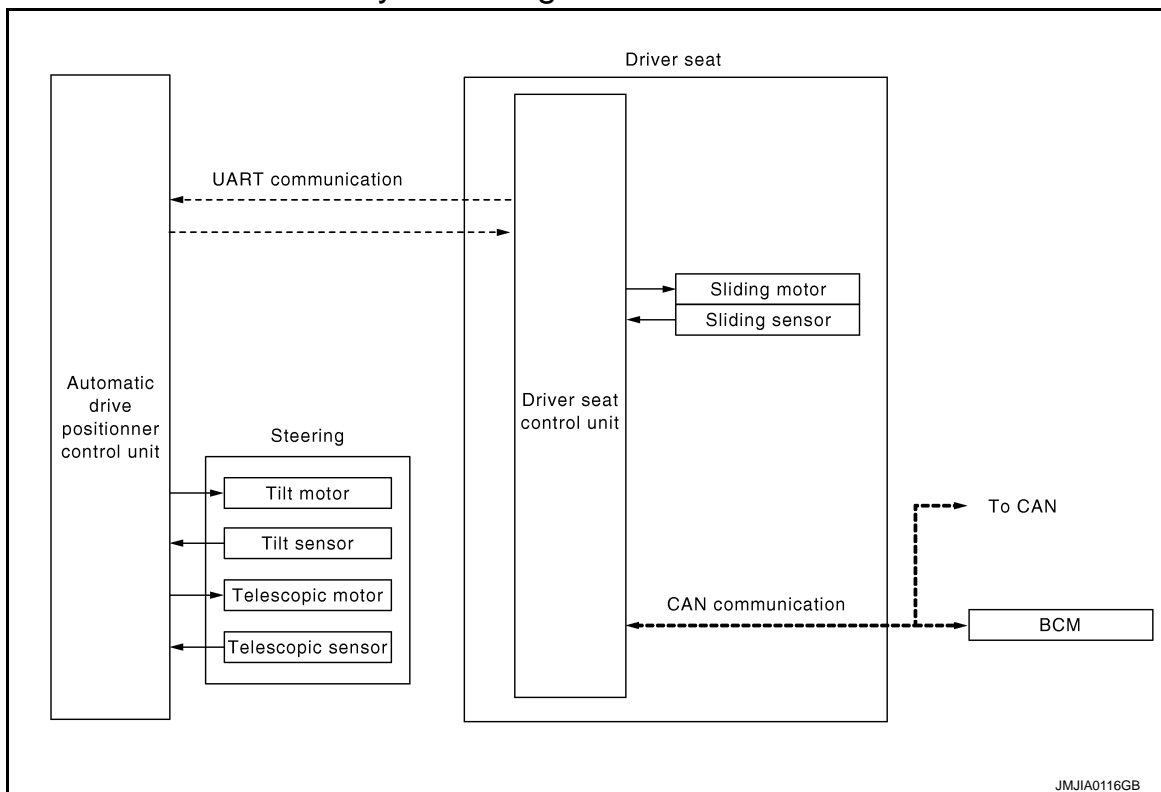

EXIT ASSIST FUNCTION : System Description

INFOID:000000007456368

OUTLINE

When exiting, the condition is satisfied, the seat is moved backward 40 mm (1.57 in) from normal sitting position and the steering is moved to the most upper position and front position. The seat slide amount and the steering operation at entry/exit operation can be changed.

NOTE:

- This function is set to ON before delivery (initial setting).
- Further information for the system setting procedure. Refer to [ADP-10. "SYSTEM SETTING : Description"](#).

OPERATION PROCEDURE

1. Open the driver door with ignition switch in ON position.
2. Driver seat and steering column will move to the exiting position.

OPERATION CONDITION

Satisfy all of the following items. The exit assist function is not performed if these items are not satisfied.

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

Item	Request status
Ignition position	OFF
System setting	ON
Initialization	Done
Switch inputs <ul style="list-style-type: none"> • Power seat switch • Tilt & telescopic switch • Door mirror remote control switch • Set switch • Memory switch 	OFF (Not operated)
A/T selector lever	P position

DETAIL FLOW


Order	Input	Output	Control unit condition
1	Door switch (Driver side)	—	Driver seat control unit receives door switch signal (driver side/ open) from BCM via CAN communication.
2	—	Motors (Seat sliding, tilt, telescopic)	Driver seat control unit operates the seat sliding motor, which recognizes that the driver side door is opened with ignition switch OFF. Driver seat control unit then requests the operations of tilt motor and telescopic motor to auto drive positioner control unit via UART communication. The automatic drive positioner control unit operates each motor for a constant amount.

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

EXIT ASSIST FUNCTION : Component Parts Location

INFOID:000000007456369

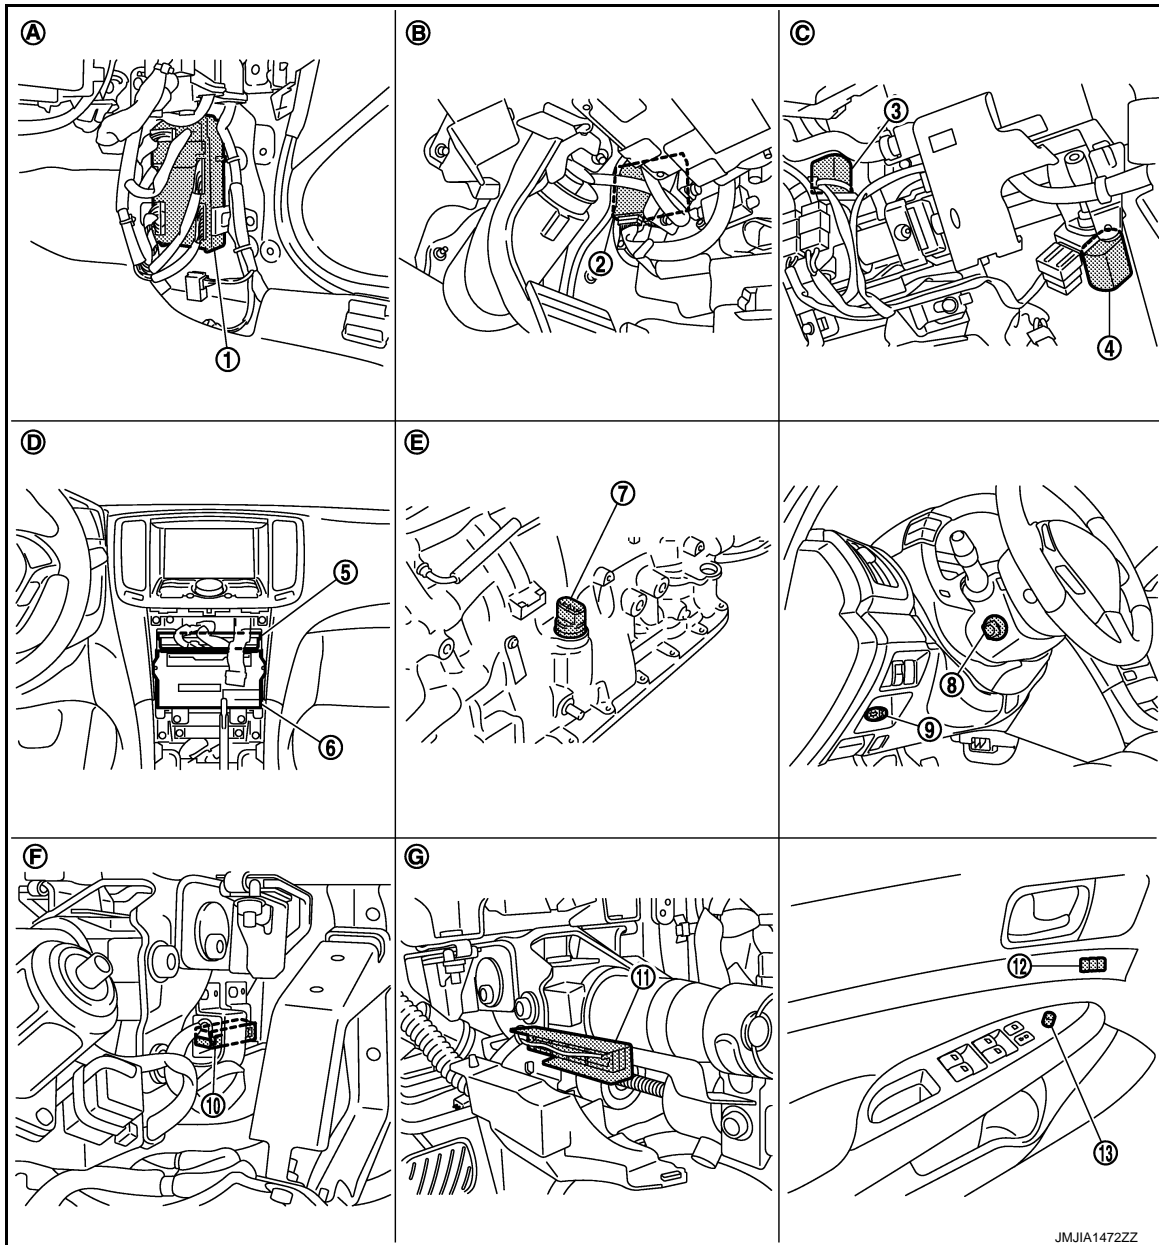

- | | | |
|---|---|---|
| 1. BCM M118, M119, M122, M123 | 2. Automatic drive positioner control unit M51, M52 | 3. Tilt motor M49 |
| 4. Telescopic motor M49 | 5. Unified meter and A/C amp. M67 | 6. AV control unit
With NAVI M87, M88
Without NAVI M83, M85 |
| 7. AT assembly connector F51 | 8. Tilt & telescopic switch M31 | 9. Key slot M22 |
| 10. Tilt sensor M48 | 11. Telescopic sensor M48 | 12. Seat memory switch D5 |
| 13. Door mirror remote control switch D17 | | |


- | | | |
|--|--|--|
| A. Dash side lower (Passenger side) | B. View with instrument driver lower panel removed | C. View with steering column cover lower and upper removed |
| D. Behind cluster lid C | E. A/T assembly (TCM is built in A/T assembly) | F. View with instrument driver lower panel removed |
| G. View with steering column cover lower and upper removed | | |

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

JMJIA1472ZZ

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

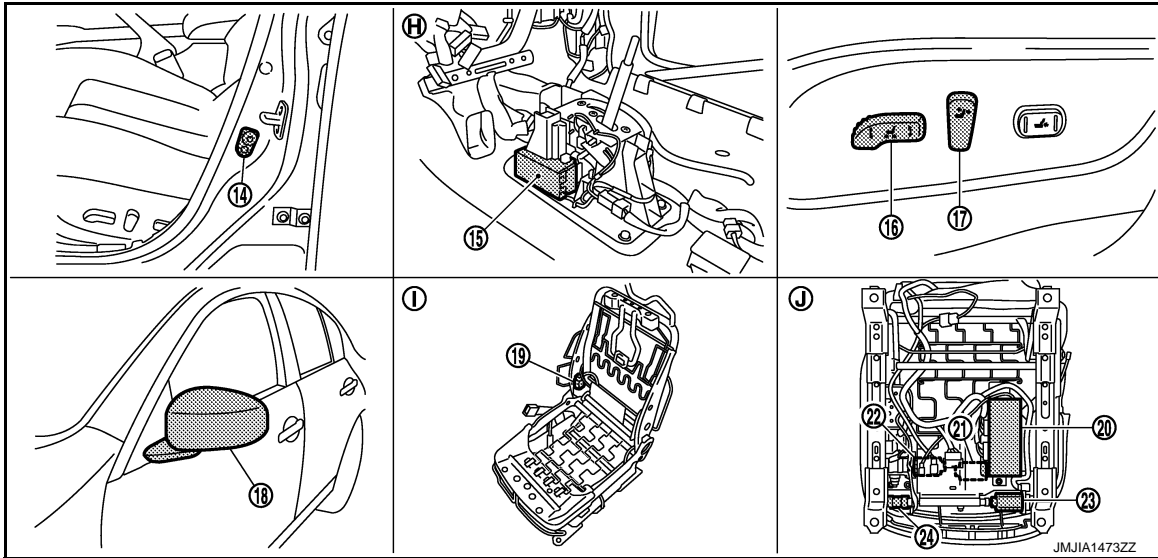

- | | | |
|---|---|--|
| 14. Front door switch (driver side) B16 | 15. A/T shift selector (detention switch) M137 | 16. Sliding, lifting switch (Power seat switch B459) |
| 17. Reclining switch (power seat switch B459) | 18. Door mirror (driver side) D3 | 19. Reclining motor B454 |
| 20. Driver seat control unit B451, B452 | 21. Lifting motor (front) B455 | 22. Lifting motor (rear) B456 |
| 23. Sliding motor B461 | 24. Sliding sensor B453 | |
| H. View with center console assembly removed | I. View with seat cushion pad and seat-back pad removed | J. Backside of the seat cushion |

EXIT ASSIST FUNCTION : Component Description

INFOID:000000007456370

CONTROL UNITS

Item	Function
Driver seat control unit	<ul style="list-style-type: none"> Operates the seat sliding motor for a constant amount. Requests the operations of tilt motor and telescopic motor to automatic drive positioner control unit.
Automatic drive positioner control unit	Operates the tilt motor and telescopic motor with the request from the driver seat control.
BCM	Recognizes the following status and transmits it to the driver seat control unit via CAN communication. <ul style="list-style-type: none"> Driver door: OPEN/CLOSE

INPUT PARTS

Switches

Item	Function
Front door switch (driver side)	Detect front door (driver side) open/close status.

Sensors

Item	Function
Tilt and telescopic sensor	Detect the up/down and left/right position of steering column.
Sliding sensor	Detect the front/rear position of seat.

OUTPUT PARTS


AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

Item	Function
Tilt and telescopic motor	Move the steering column upward/downward and forward/rearward.
Sliding motor	Slide the seat forward/rearward.

ENTRY ASSIST FUNCTION

ENTRY ASSIST FUNCTION : System Diagram

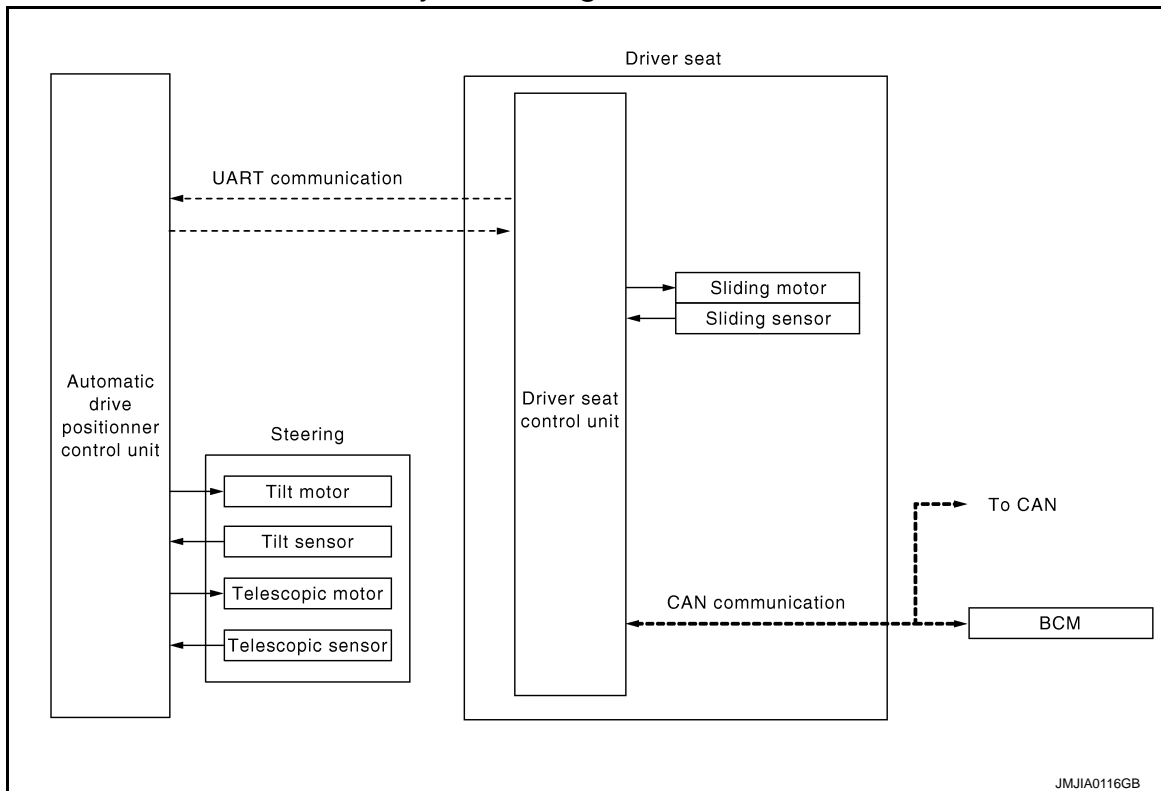

ENTRY ASSIST FUNCTION : System Description

INFOID:000000007456372

OUTLINE

The seat is in the exiting position when either following condition (A or B) is satisfied, the seat returns from exiting position to the previous driving position.

NOTE:

- This function is set to ON before delivery (initial setting).
- Further information for the system setting procedure. Refer to [ADP-10, "SYSTEM SETTING : Description"](#).

OPERATION PROCEDURE

1. A: Turn the ignition switch ON.
B: Turn the ignition switch from OFF to ACC after closing the driver door.
2. Driver seat and steering column will return from the exiting position to entry position.

OPERATION CONDITION

Satisfy all of the following items. The entry assist function is not performed if these items are not satisfied.

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

Item	Request status
Seat, steering column	The vehicle is not moved after performing the exit assist function.
Switch inputs <ul style="list-style-type: none"> • Power seat switch • Tilt & telescopic switch • Door mirror control switch • Set switch • Memory switch 	OFF (Not operated)
A/T selector lever	P position

DETAIL FLOW


Order	Input	Output	Control unit condition
1	Door switch/Ignition switch	—	Driver seat control unit receives the signals of [ignition switch signal] and [driver side door switch] from BCM via CAN communication.
2	—	Motors (Sliding, tilt, telescopic)	Driver side control unit operates the sliding motor when the operating conditions are satisfied and requests the operations of tilt motor and telescopic motor to automatic drive positioner control unit via UART communication. The automatic drive positioner operates each motor.
	Sensors (Sliding, tilt, telescopic)	—	Each sensor monitors the operating positions of seat and steering, and then stops the operation of each motor when each part reaches the recorded address.

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

ENTRY ASSIST FUNCTION : Component Parts Location

INFOID:000000007456373

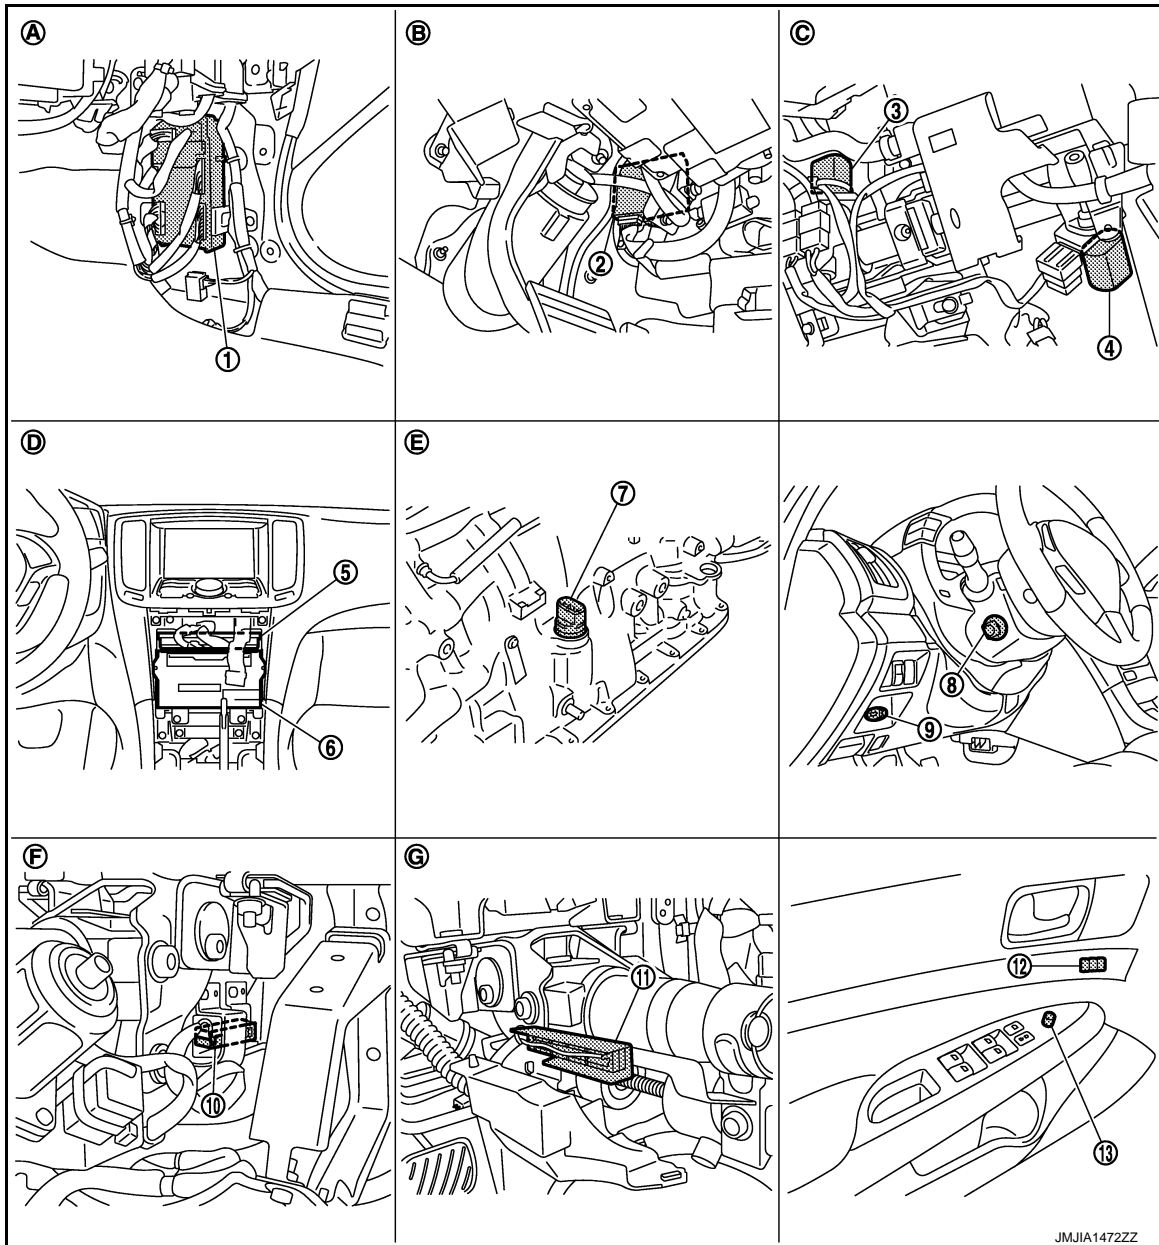

- | | | |
|---|---|---|
| 1. BCM M118, M119, M122, M123 | 2. Automatic drive positioner control unit M51, M52 | 3. Tilt motor M49 |
| 4. Telescopic motor M49 | 5. Unified meter and A/C amp. M67 | 6. AV control unit
With NAVI M87, M88
Without NAVI M83, M85 |
| 7. AT assembly connector F51 | 8. Tilt & telescopic switch M31 | 9. Key slot M22 |
| 10. Tilt sensor M48 | 11. Telescopic sensor M48 | 12. Seat memory switch D5 |
| 13. Door mirror remote control switch D17 | | |


- | | | |
|--|--|--|
| A. Dash side lower (Passenger side) | B. View with instrument driver lower panel removed | C. View with steering column cover lower and upper removed |
| D. Behind cluster lid C | E. A/T assembly (TCM is built in A/T assembly) | F. View with instrument driver lower panel removed |
| G. View with steering column cover lower and upper removed | | |

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

JMJIA1472ZZ

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

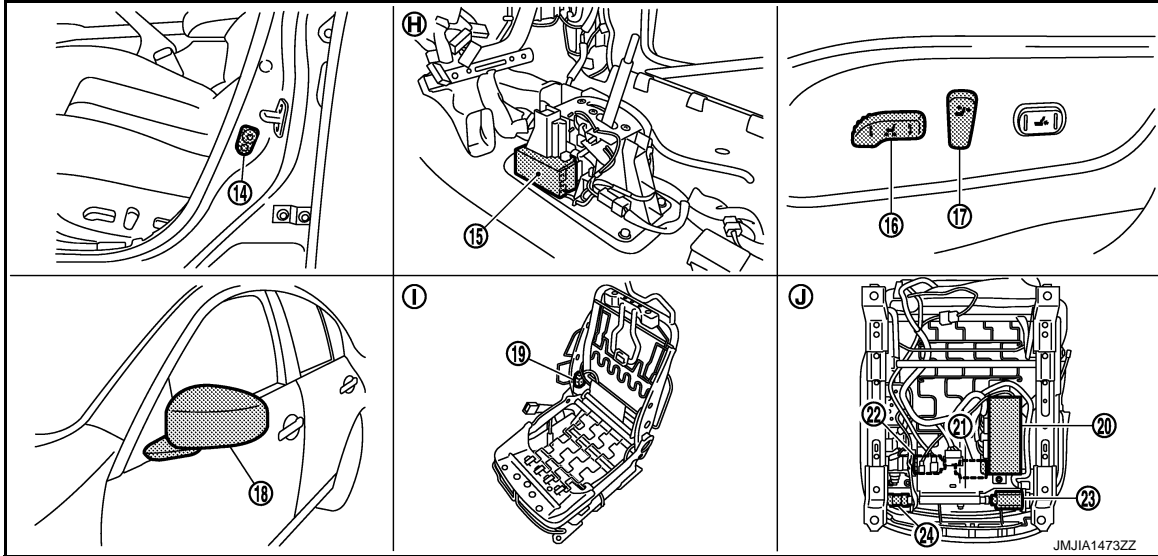

- | | | |
|---|---|--|
| 14. Front door switch (driver side) B16 | 15. A/T shift selector (detention switch) M137 | 16. Sliding, lifting switch (Power seat switch B459) |
| 17. Reclining switch (power seat switch B459) | 18. Door mirror (driver side) D3 | 19. Reclining motor B454 |
| 20. Driver seat control unit B451, B452 | 21. Lifting motor (front) B455 | 22. Lifting motor (rear) B456 |
| 23. Sliding motor B461 | 24. Sliding sensor B453 | |
| H. View with center console assembly removed | I. View with seat cushion pad and seat-back pad removed | J. Backside of the seat cushion |

ENTRY ASSIST FUNCTION : Component Description

INFOID:000000007456374

CONTROL UNITS

Item	Function
Driver seat control unit	According to the ignition signal and door switch signal (driver side) from BCM, <ul style="list-style-type: none"> Operates the seat sliding motor for a constant amount. Requests the operations of tilt motor and telescopic motor to automatic drive positioner control unit.
Automatic drive positioner control unit	Operates the tilt motor and telescopic motor with the instructions from the driver seat control.
BCM	Recognizes the following status and transmits it to the driver seat control unit via CAN communication. <ul style="list-style-type: none"> Driver door: OPEN/CLOSE Ignition switch position: ACC/ON

INPUT PARTS

Switches

Item	Function
Front door switch (driver side)	Detect front door (driver side) open/close status.

Sensors

Item	Function
Tilt & telescopic sensor	Detect the up/down and left/right position of steering column.
Sliding sensor	Detect the front/rear position of seat.

OUTPUT PARTS

AUTOMATIC DRIVE POSITIONER SYSTEM


< SYSTEM DESCRIPTION >

Item	Function
Tilt & telescopic motor	Move the steering column upward/downward and forward/rearward.
Sliding motor	Slide the seat forward/rearward.

INTELLIGENT KEY INTERLOCK FUNCTION

INTELLIGENT KEY INTERLOCK FUNCTION : System Diagram

INFOID:000000007456375

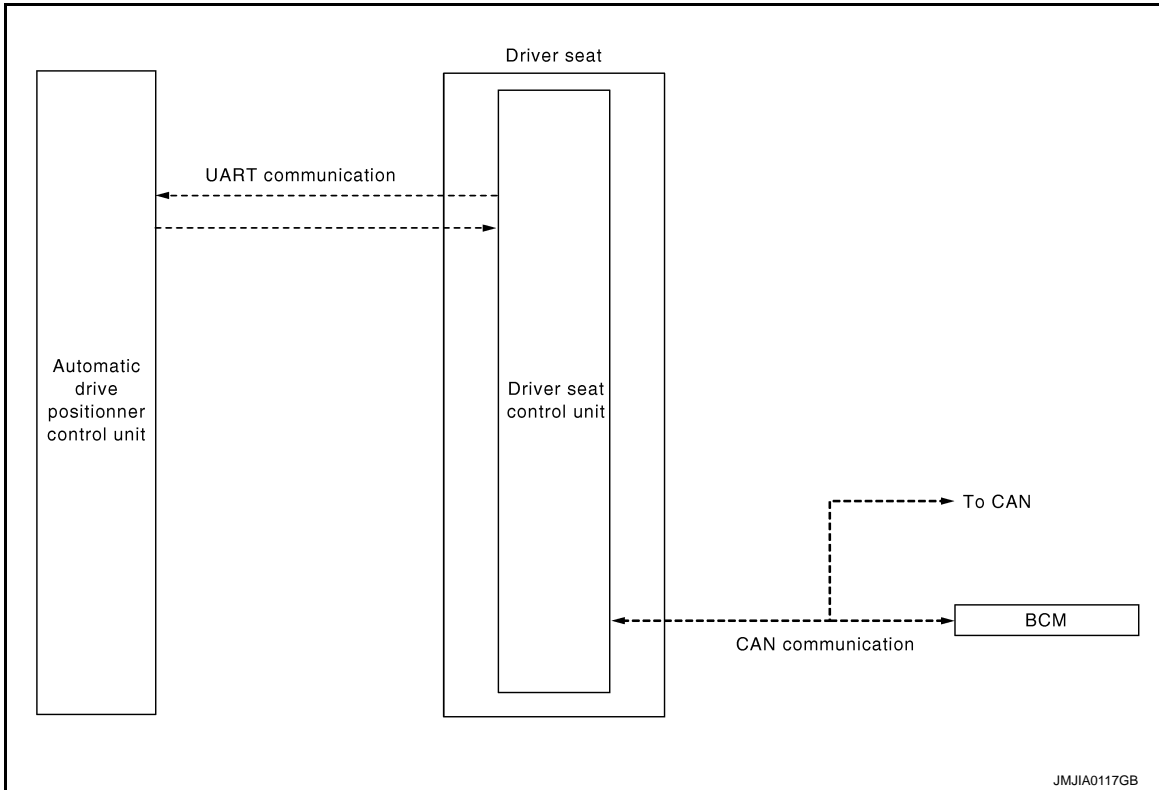

INTELLIGENT KEY INTERLOCK FUNCTION : System Description

INFOID:000000007456376

OUTLINE

When unlocking doors by using Intelligent Key or driver side door request switch, the system performs memory operation, exiting operation then entry operation.

OPERATION PROCEDURE

1. Unlock doors by using Intelligent Key or driver side door request switch.
2. The system performs memory operation, and then performs exit assist operation.

NOTE:

If the seat position is in memorized position before unlocking doors, memory operation does not perform.

NOTE:

Further information for Intelligent Key interlock function. Refer to [ADP-9. "MEMORY STORING : Description"](#).

OPERATION CONDITION

Satisfy all of the following items. The Intelligent Key interlock function is not performed if these items are not satisfied.

Item	Request status
Ignition position	OFF
System setting	ON
Key switch	OFF (Key is removed.)

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

Item	Request status
Switch inputs <ul style="list-style-type: none"> • Power seat switch • Tilt & telescopic switch • Door mirror control switch • Set switch • Memory switch 	OFF (Not operated)
AT selector lever	P position


DETAIL FLOW

Order	Input	Output	Control unit condition
1	<ul style="list-style-type: none"> • Door unlock signal (CAN) • Key ID signal (CAN) 	—	Driver seat control unit receives the door unlock signal and the key ID signal from BCM when unlocking the door with Intelligent Key or driver side door request switch.
2	—	—	Driver seat control unit performs the memory function.
3	—	—	Driver seat control unit performs the exit assist function after performing the memory function.
4	—	—	Driver seat control unit performs the entry assist function.

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

INTELLIGENT KEY INTERLOCK FUNCTION : Component Parts Location INFOID:000000007456377

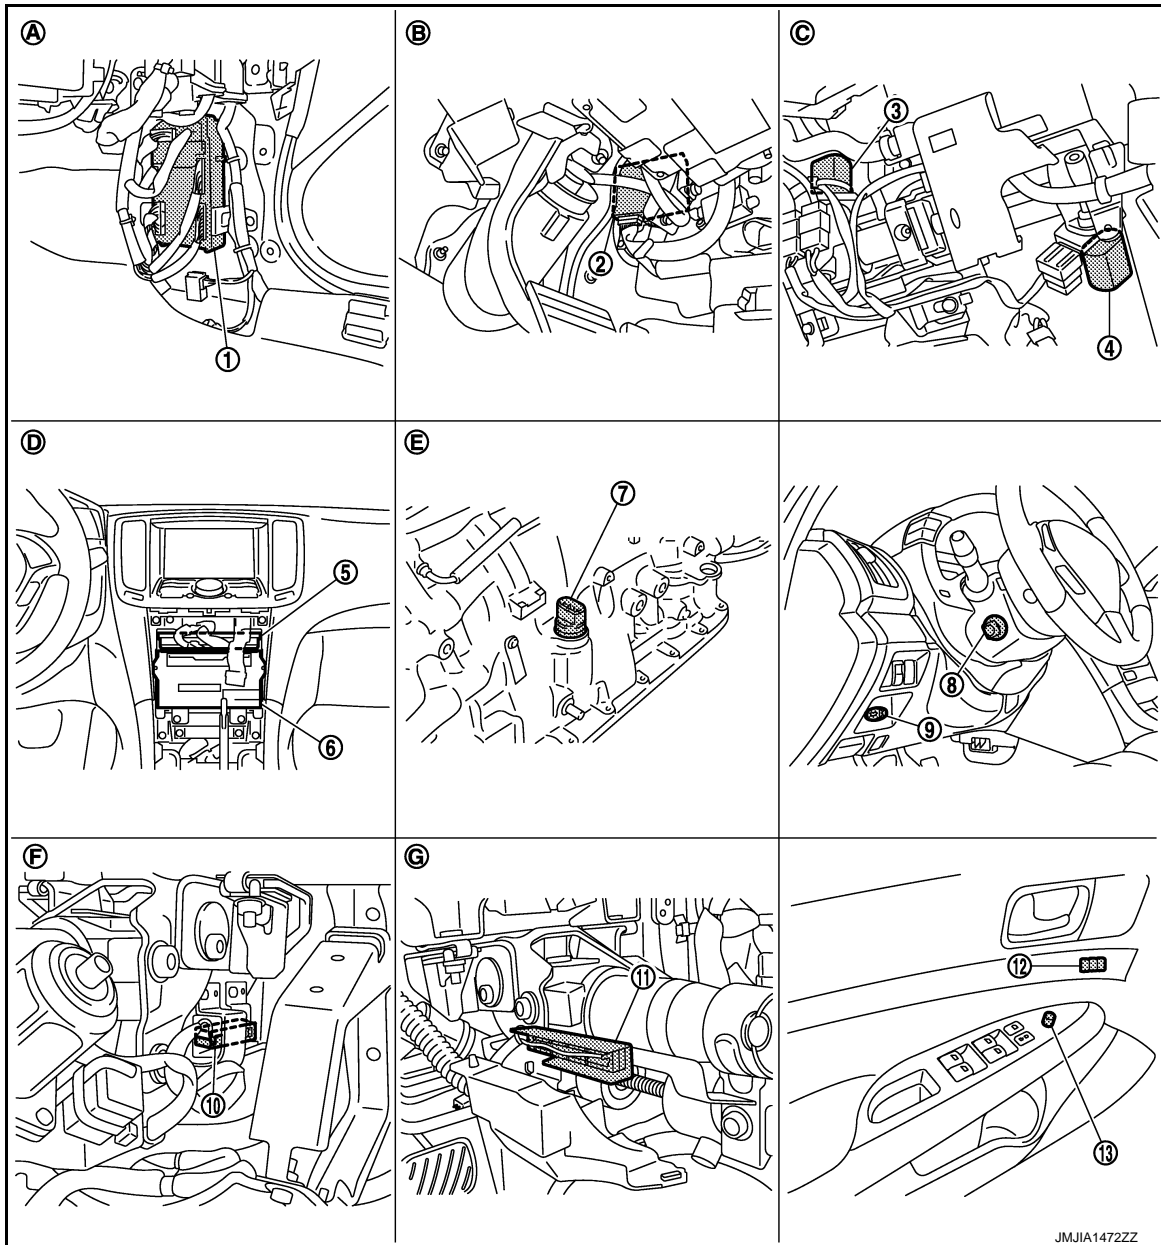

- | | | |
|---|---|---|
| 1. BCM M118, M119, M122, M123 | 2. Automatic drive positioner control unit M51, M52 | 3. Tilt motor M49 |
| 4. Telescopic motor M49 | 5. Unified meter and A/C amp. M67 | 6. AV control unit
With NAVI M87, M88
Without NAVI M83, M85 |
| 7. AT assembly connector F51 | 8. Tilt & telescopic switch M31 | 9. Key slot M22 |
| 10. Tilt sensor M48 | 11. Telescopic sensor M48 | 12. Seat memory switch D5 |
| 13. Door mirror remote control switch D17 | | |


- | | | |
|--|--|--|
| A. Dash side lower (Passenger side) | B. View with instrument driver lower panel removed | C. View with steering column cover lower and upper removed |
| D. Behind cluster lid C | E. A/T assembly (TCM is built in A/T assembly) | F. View with instrument driver lower panel removed |
| G. View with steering column cover lower and upper removed | | |

JMJIA1472ZZ

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

AUTOMATIC DRIVE POSITIONER SYSTEM

< SYSTEM DESCRIPTION >

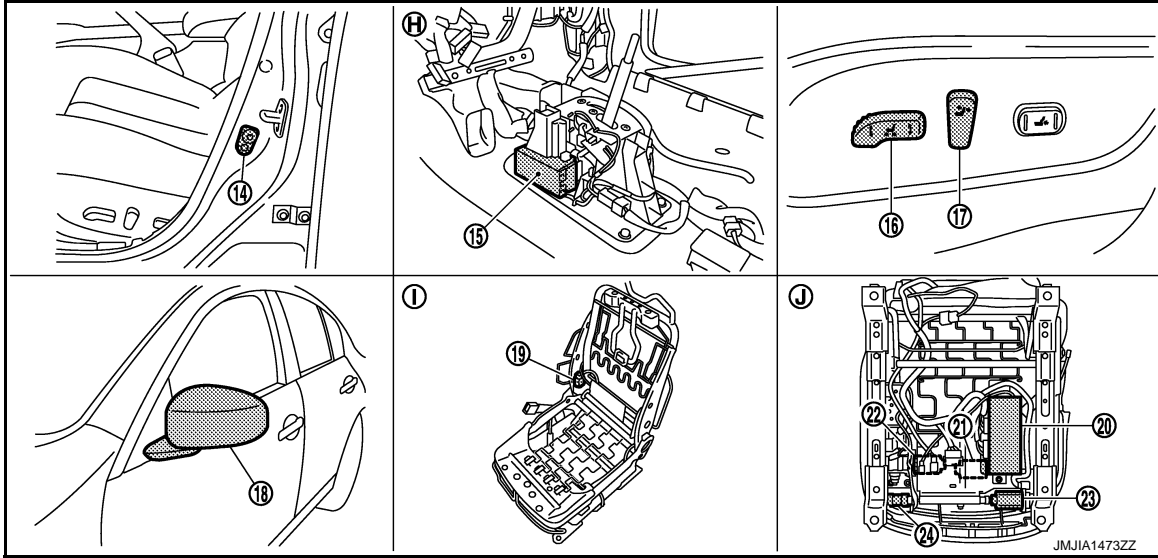

- | | | |
|---|---|--|
| 14. Front door switch (driver side) B16 | 15. A/T shift selector (detention switch) M137 | 16. Sliding, lifting switch (Power seat switch B459) |
| 17. Reclining switch (power seat switch B459) | 18. Door mirror (driver side) D3 | 19. Reclining motor B454 |
| 20. Driver seat control unit B451, B452 | 21. Lifting motor (front) B455 | 22. Lifting motor (rear) B456 |
| 23. Sliding motor B461 | 24. Sliding sensor B453 | |
| H. View with center console assembly removed | I. View with seat cushion pad and seat-back pad removed | J. Backside of the seat cushion |

INTELLIGENT KEY INTERLOCK FUNCTION : Component Description

INFOID:000000007456378

CONTROL UNITS

Item	Function
Driver seat control unit	It performs memory function and entry/exit assist function after receiving the door unlock signal from BCM.
Automatic drive positioner control unit	Operates the steering column and door mirror with the instructions from the driver seat control unit.
BCM	Recognizes the following status and transmits it to the driver seat control unit via CAN communication. <ul style="list-style-type: none"> • Door lock: UNLOCK (with Intelligent Key or driver side door request switch)

DIAGNOSIS SYSTEM (DRIVER SEAT C/U)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (DRIVER SEAT C/U)

Diagnosis Description

INFOID:000000007456379

The auto drive positioner system can be checked and diagnosed for component operation with CONSULT.

DIAGNOSTIC MODE

Diagnostic mode [AUTO DRIVE POS.]	Description
WORK SUPPORT	Changes the setting of each function.
SELF-DIAG RESULTS	Performs self-diagnosis for the auto drive positioner system and displays the results.
DATA MONITOR	Displays input signals transmitted from various switches and sensors to driver seat control unit in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Drive each output device.
ECU PART NUMBER	Displays part numbers of driver seat control unit parts.

CONSULT Function

INFOID:000000007456380

SELF-DIAGNOSIS RESULTS

Refer to [ADP-143, "DTC Index"](#).

DATA MONITOR

Monitor Item	Unit	Main Signals	Selection From Menu	Contents
SET SW	"ON/OFF"	×	×	ON/OFF status judged from the setting switch signal.
MEMORY SW 1	"ON/OFF"	×	×	ON/OFF status judged from the seat memory switch 1 signal.
MEMORY SW 2	"ON/OFF"	×	×	ON/OFF status judged from the seat memory switch 2 signal.
SLIDE SW-FR	"ON/OFF"	×	×	ON/OFF status judged from the sliding switch (forward) signal.
SLIDE SW-RR	"ON/OFF"	×	×	ON/OFF status judged from the sliding switch (backward) signal.
RECLN SW-FR	"ON/OFF"	×	×	ON/OFF status judged from the reclining switch (forward) signal.
RECLN SW-RR	"ON/OFF"	×	×	ON/OFF status judged from the reclining switch (backward) signal.
LIFT FR SW-UP	"ON/OFF"	×	×	ON/OFF status judged from the lifting switch front (up) signal.
LIFT FR SW-DN	"ON/OFF"	×	×	ON/OFF status judged from the lifting switch front (down) signal.
LIFT RR SW-UP	"ON/OFF"	×	×	ON/OFF status judged from the lifting switch rear (up) signal.
LIFT RR SW-DN	"ON/OFF"	×	×	ON/OFF status judged from the lifting switch rear (down) signal.
MIR CON SW-UP	"ON/OFF"	×	×	ON/OFF status judged from the mirror switch (up) signal.
MIR CON SW-DN	"ON/OFF"	×	×	ON/OFF status judged from the mirror switch (down) signal.
MIR CON SW-RH	"ON/OFF"	×	×	ON/OFF status judged from the door mirror remote control switch (passenger side) signal.
MIR CON SW-LH	"ON/OFF"	×	×	ON/OFF status judged from the door mirror remote control switch (driver side) signal.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

DIAGNOSIS SYSTEM (DRIVER SEAT C/U)

< SYSTEM DESCRIPTION >

Monitor Item	Unit	Main Signals	Selection From Menu	Contents
MIR CHNG SW-R	"ON/OFF"	×	×	ON/OFF status judged from the door mirror remote control switch (switching to right) signal.
MIR CHNG SW-L	"ON/OFF"	×	×	ON/OFF status judged from the door mirror remote control switch (switching to left) signal.
TILT SW-UP	"ON/OFF"	×	×	ON/OFF status judged from the tilt switch (up) signal.
TILT SW-DOWN	"ON/OFF"	×	×	ON/OFF status judged from the tilt switch (down) signal.
TELESCO SW-FR	"ON/OFF"	×	×	ON/OFF status judged from the telescoping switch (forward) signal.
TELESCO SW-RR	"ON/OFF"	×	×	ON/OFF status judged from the telescoping switch (backward) signal.
DETENT SW	"ON/OFF"	×	×	The selector lever position "OFF (P position) / ON (other than P position)" judged from the detention switch signal.
STARTER SW	"ON/OFF"	×	×	Ignition key switch ON (START, ON) /OFF (ACC, OFF) status judged from the ignition switch signal.
SLIDE PULSE	—	—	×	Value (32768) when battery connections are standard. If it moves backward, the value increases. If it moves forward, the value decreases.
RECLN PULSE	—	—	×	Value (32768) when battery connections are standard. If it moves backward, the value increases. If it moves forward, the value decreases.
LIFT FR PULSE	—	—	×	Value (32768) when battery connections are standard. If it moves DOWN, the value increases. If it moves UP, the value decreases.
LIFT RR PULSE	—	—	×	Value (32768) when battery connections are standard. If it moves DOWN, the value increases. If it moves UP, the value decreases.
MIR/SEN RH U-D	"V"	—	×	Voltage input from door mirror sensor (passenger side) up/down is displayed.
MIR/SEN RH R-L	"V"	—	×	Voltage input from door mirror sensor (passenger side) left/right is displayed.
MIR/SEN LH U-D	"V"	—	×	Voltage input from door mirror sensor (driver side) up/down is displayed.
MIR/SEN LH R-L	"V"	—	×	Voltage input from door mirror sensor (driver side) left/right is displayed.
TILT SEN	"V"	—	×	Voltage input from tilt sensor is displayed.
TELESCO SEN	"V"	—	×	Voltage input from telescopic sensor is displayed.

ACTIVE TEST

CAUTION:

When driving vehicle, do not perform active test.

Test item	Description
SEAT SLIDE	Activates/deactivates the sliding motor.
SEAT RECLINING	Activates/deactivates the reclining motor.
SEAT LIFTER FR	Activates/deactivates the lifting motor (front).
SEAT LIFTER RR	Activates/deactivates the lifting motor (rear).
TILT MOTOR	Activates/deactivates the tilt motor.
TELESCO MOTOR	Activates/deactivates the telescopic motor.
MIRROR MOTOR RH	Activates/deactivates the mirror motor (passenger side).

DIAGNOSIS SYSTEM (DRIVER SEAT C/U)

< SYSTEM DESCRIPTION >

Test item	Description
MIRROR MOTOR LH	Activates/deactivates the mirror motor (driver side).
MEMORY SW INDCTR	Turns ON/OFF the memory indicator.

WORK SUPPORT

Work item	Content	Item
SEAT SLIDE VOLUME SET	The amount of seat sliding for entry/exit assist can be selected from 3 items.	40 mm
		80 mm
		150 mm
EXIT TILT SETTING	Entry/exit assist (steering column) can be selected: ON (operated) – OFF (not operated)	ON
		OFF
EXIT SEAT SLIDE SETTING	Entry/exit assist (seat) can be selected: ON (operated) – OFF (not operated)	ON
		OFF

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000007456381

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000007456382

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detecting condition	Possible cause
U1000	CAN COMM CIRCUIT	<ul style="list-style-type: none">Driver seat control unit cannot communicate to other control units.Driver seat control unit cannot communicate for more than the specified time.	<ul style="list-style-type: none">Harness or connectors (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1.STEP 1

Turn ignition switch ON and wait at least 3 seconds.

>> GO TO 2.

2.STEP 2

Check "Self diagnostic result" with CONSULT.

Is the DTC detected?

YES >> Perform diagnosis procedure. Refer to [ADP-44, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000007456383

Refer to [LAN-16, "Trouble Diagnosis Flow Chart"](#).

Special Repair Requirement

INFOID:000000007456384

Refer to [ADP-9, "SYSTEM INITIALIZATION : Description"](#).

B2112 SLIDING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

B2112 SLIDING MOTOR

Description

INFOID:000000007456385

- The seat sliding motor is installed to the seat cushion frame.
- The seat sliding motor is installed with the driver seat control unit.
- Slides the seat forward/ rearward by changing the rotation direction of sliding motor.

DTC Logic

INFOID:000000007456386

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2112	SEAT SLIDE	The driver seat control unit detects the output of sliding motor output terminal for 0.1 second or more even if the sliding switch is not input.	<ul style="list-style-type: none">• Driver seat control unit• Slide motor harness is power shorted

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is the DTC detected?

- YES >> Perform diagnosis procedure. Refer to [ADP-45. "Diagnosis Procedure"](#).
NO >> INSPECTION END

NOTE:

First perform diagnosis for B2126 if B2126 is detected.

Diagnosis Procedure

INFOID:000000007456387

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.
3. Erase the DTC.
4. Perform DTC confirmation procedure. Refer to [ADP-45. "DTC Logic"](#).

Is the DTC displayed again?

- YES >> GO TO 2.
NO >> Check intermittent incident. Refer to [GI-42. "Intermittent Incident"](#).

2. CHECK SLIDING MOTOR CIRCUIT (POWER SHORT)

1. Turn ignition switch OFF.
2. Disconnect sliding motor and driver seat control unit connector.
3. Check voltage between sliding motor harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Connector	Terminals		
B461	35	Ground	0
	42		

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connector.

3. CHECK DRIVER SEAT CONTROL UNIT OUTPUT SIGNAL

1. Connect driver seat control unit connector.
2. Check voltage between driver seat control unit harness connector and ground.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

B2112 SLIDING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

(+)		(-)	Voltage (V) (Approx.)
Driver seat control unit			
Connector	Terminals		
B451	35	Ground	0
	42		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#)

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

B2113 RECLINING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

B2113 RECLINING MOTOR

Description

INFOID:000000007456388

- The seat reclining motor is installed to the seatback frame.
- The seat reclining motor is activated with the driver seat control unit.
- Tilts the seatback frontward/rearward by changing the rotation direction of reclining motor.

DTC Logic

INFOID:000000007456389

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2113	SEAT RECLINING	The driver seat control unit detects the output of reclining motor output terminal for 0.1 second or more even if the reclining switch is not input.	<ul style="list-style-type: none">• Driver seat control unit• Reclining motor harness is power shorted

DTC CONFIRMATION PROCEDURE

1. REFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is the DTC detected?

YES >> Perform diagnosis procedure. Refer to [ADP-47, "Diagnosis Procedure"](#).

NO >> INSPECTION END

NOTE:

First perform diagnosis for B2126 if B2126 is detected.

Diagnosis Procedure

INFOID:000000007456390

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.
3. Erase the DTC.
4. Perform DTC confirmation procedure. Refer to [ADP-47, "DTC Logic"](#).

Is the DTC displayed again?

YES >> GO TO 2.

NO >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

2. CHECK RECLINING MOTOR CIRCUIT (POWER SHORT)

1. Turn ignition switch OFF.
2. Disconnect reclining motor and driver seat control unit connector.
3. Check voltage between reclining motor harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Reclining motor			
Connector	Terminals	Ground	0
B454	36		
	44		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3. CHECK DRIVER SEAT CONTROL UNIT OUTPUT SIGNAL

1. Connect driver seat control unit connector.
2. Check voltage between driver seat control unit harness connector and ground.

B2113 RECLINING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

(+)		(-)	Voltage (V) (Approx.)
Driver seat control unit			
Connector	Terminals		
B451	36	Ground	0
	44		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

B2118 TILT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

B2118 TILT SENSOR

Description

INFOID:000000007456391

- The tilt sensor is installed to the steering column assembly.
- The resistance of tilt sensor is changed according to the up/down position of steering column.
- The terminal voltage of automatic drive positioner control unit will be changed according to a change of tilt sensor resistance. Automatic drive positioner control unit calculates the tilt position from the voltage.

DTC Logic

INFOID:000000007456392

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2118	TILT SENSOR	The input voltage of tilt sensor is less than 0.1V or more than 4.9V.	<ul style="list-style-type: none"> • Harness and connectors (Tilt sensor circuit is opened/shorted, tilt sensor power supply circuit is opened/shorted.) • Tilt sensor

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is the DTC detected?

- YES >> Perform diagnosis procedure. Refer to [ADP-49. "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000007456393

1. CHECK TILT SENSOR SIGNAL

1. Turn ignition switch ON.
2. Select "TILT SEN" in "Data monitor" mode with CONSULT.
3. Check tilt sensor signal under the following condition.

Monitor item	Condition	Value
TILT SEN	Tilt position	Change between 1.2 [V] (close to top) 3.4 [V] (close to bottom)

Is the value normal?

- YES >> GO TO 6.
- NO >> GO TO 2.

2. CHECK TILT SENSOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit and tilt & telescopic sensor connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic sensor harness connector.

Automatic drive positioner control unit		Tilt & telescopic sensor		Continuity
Connector	Terminal	Connector	Terminal	
M51	7	M48	3	Existed

4. Check continuity between automatic drive positioner control unit harness connector and ground.

B2118 TILT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	7		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3.CHECK TILT SENSOR POWER SUPPLY

1. Connect automatic drive positioner control unit connector.
2. Turn ignition switch ON.
3. Check voltage between tilt & telescopic sensor harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Tilt & telescopic sensor			
Connector	Terminal		
M48	1	Ground	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK TILT SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic sensor harness connector.

Automatic drive positioner control unit		Tilt & telescopic sensor		Continuity
Connector	Terminal	Connector	Terminal	
M52	33	M48	1	Existed

4. Check continuity between automatic drive positioner control unit harness connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M52	33		Not existed

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit. Refer to [ADP-221, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

5.CHECK TILT SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic sensor harness connector.

Automatic drive positioner control unit		Tilt & telescopic sensor		Continuity
Connector	Terminal	Connector	Terminal	
M52	41	M48	4	Existed

Is the inspection result normal?

YES >> Replace tilt & telescopic sensor.

NO >> Repair or replace harness or connector.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

B2118 TILT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

>> INSPECTION END

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

B2119 TELESCOPIC SENSOR

< DTC/CIRCUIT DIAGNOSIS >

B2119 TELESCOPIC SENSOR

Description

INFOID:000000007456394

- The telescopic sensor is installed to the steering column assembly.
- The resistance of telescopic sensor is changed according to the forward/backward position of steering column.
- The terminal voltage of automatic drive positioner control unit will be changed according to a change of telescopic sensor resistance. Automatic drive positioner control unit calculates the telescopic position from the voltage.

DTC Logic

INFOID:000000007456395

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2119	TELESCOPIC SENSOR	The input voltage of telescopic sensor is less than 0.1V or more than 4.9V.	<ul style="list-style-type: none">• Harness and connectors (Telescopic sensor circuit is opened/shorted, telescopic sensor power supply circuit is opened/shorted.)• Telescopic sensor

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is the DTC is detected?

- YES >> Perform diagnosis procedure. Refer to [ADP-52. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000007456396

1. CHECK TELESCOPIC SENSOR SIGNAL

1. Turn ignition switch ON.
2. Select "TELESCO SEN" in "Data monitor" mode with CONSULT.
3. Check the tilt sensor signal under the following condition.

Monitor item	Condition	Value
TELESCO SEN	Telescopic position	Change between 0.8 [V] (close to top) 3.4 [V] (close to bottom)

Is the valve normal?

- YES >> GO TO 6.
NO >> GO TO 2.

2. CHECK TELESCOPIC SENSOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit and tilt & telescopic sensor connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic sensor harness connector.

Automatic drive positioner control unit		Tilt & telescopic sensor		Continuity
Connector	Terminal	Connector	Terminal	
M51	23	M48	2	Existed

4. Check continuity between automatic drive positioner control unit harness connector and ground.

B2119 TELESCOPIC SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	23		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3.CHECK TELESCOPIC SENSOR POWER SUPPLY

1. Connect automatic drive positioner control unit connector.
2. Turn ignition switch ON.
3. Check voltage between tilt & telescopic sensor harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Tilt & telescopic sensor			
Connector	Terminal		
M48	1	Ground	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK TELESCOPIC SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic sensor harness connector.

Automatic drive positioner control unit		Tilt & telescopic sensor		Continuity
Connector	Terminal	Connector	Terminal	
M52	33	M48	1	Existed

4. Check continuity between automatic drive positioner control unit harness connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M52	33		Not existed

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit. Refer to [ADP-221, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

5.CHECK TELESCOPIC SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic sensor harness connector.

Automatic drive positioner control unit		Tilt & telescopic sensor		Continuity
Connector	Terminal	Connector	Terminal	
M52	41	M48	4	Existed

Is the inspection result normal?

YES >> Replace tilt & telescopic sensor.

NO >> Repair or replace harness.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

B2119 TELESCOPIC SENSOR

< DTC/CIRCUIT DIAGNOSIS >

>> INSPECTION END

B2126 DETENT SW

< DTC/CIRCUIT DIAGNOSIS >

B2126 DETENT SW

Description

INFOID:000000007456397

- Detention switch is installed on A/T shift selector. It is turned OFF when the A/T selector lever is in P position.
- The driver seat control unit judges that the A/T selector lever is in P position if continuity does not exist in this circuit.

DTC Logic

INFOID:000000007456398

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2126	DETENT SW	Selector lever is in P position and the vehicle speed of 7±4 km/h is detected.	<ul style="list-style-type: none"> • Harness and connectors (Detention switch circuit is opened/shorted.) • Detention switch • Unified meter and A/C amp. (CAN communication)

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Drive the vehicle at 7±4 km/h or more.
2. Check "Self diagnostic result" with CONSULT.

Is the DTC detected?

- YES >> Perform diagnosis procedure. Refer to [ADP-55, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000007456399

ADP

1. CHECK DTC WITH "BCM"

Check "Self diagnostic result" for BCM with CONSULT.

Is the either DTC B2601, B2602, B2603, B2604 or B2605 detected?

- YES >> Check the DTC. Refer to [BCS-86, "DTC Index"](#).
 NO >> GO TO 2.

2. CHECK DTC WITH "METER/M&A"

Check "Self diagnostic result" for METER/M&A with CONSULT.

Is the DTC detected?

- YES >> Check the DTC. Refer to [ADP-143, "DTC Index"](#).
 NO >> GO TO 3.

3. CHECK DETENTION SWITCH SIGNAL

1. Turn ignition switch ON.
2. Select "DETENT SW" in "Data Monitor" mode with CONSULT.
3. Check detention switch signal under the following condition.

Monitor item	Condition		Status
DETENT SW	selector lever	P position	OFF
		Other than above	ON

Is the status normal?

- YES >> GO TO 5.
 NO >> GO TO 4.

4. CHECK DETENTION SWITCH CIRCUIT

B2126 DETENT SW

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit and A/T shift selector connector.
3. Check continuity between driver seat control unit harness connector and A/T shift selector harness connector.

Driver seat control unit		A/T shift selector		Continuity
Connector	Terminal	Connector	Terminal	
B451	21	M137	11	Existed

4. Check continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	21		Not existed

Is the inspection result normal?

- YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).
NO >> Repair or replace harness.

5. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

B2128 UART COMMUNICATION LINE

< DTC/CIRCUIT DIAGNOSIS >

B2128 UART COMMUNICATION LINE

Description

INFOID:000000007456400

Driver seat control unit performs UART communication with the automatic drive positioner control unit using 2 communication lines, TX and RX line. Driver seat control unit receives the operation signals of tilt & telescopic switch, door mirror remote control switch, set switch and memory switch and the position signals of tilt & telescopic sensor and door mirror sensor from the automatic drive positioner control unit and transmits the operation request signal.

DTC Logic

INFOID:000000007456401

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2128	UART COMM	The communication between driver seat control unit and auto drive positioner control unit is interrupted for a period of time.	<ul style="list-style-type: none">• UART communication line (UART communication line is open or shorted)• Driver seat control unit• Automatic drive positioner control unit

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Operate tilt & telescopic switch for more than 2 seconds.
3. Check "Self diagnostic result" with CONSULT.

Is the DTC detected?

- YES >> Perform diagnosis procedure. Refer to [ADP-57, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000007456402

ADP

1. CHECK UART COMMUNICATION LINE CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit and automatic drive positioner control unit connector.
3. Check continuity between driver seat control unit harness connector and automatic drive positioner control unit harness connector.

Driver seat control unit		Automatic drive positioner control unit		Continuity
Connector	Terminal	Connector	Terminal	
B451	1	M51	10	Existed
	17		26	

4. Check continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	1		Not existed
	17		

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> Repair or replace harness.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:000000007456403

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	K
	10

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground Battery voltage
Connector	Terminal	
M118	1	
M119	11	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

DRIVER SEAT CONTROL UNIT

DRIVER SEAT CONTROL UNIT : Diagnosis Procedure

INFOID:000000007456404

NOTE:

Do not disconnect the battery negative terminal and the driver seat control unit connector until DTC is confirmed with CONSULT.

1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Check voltage between driver seat control unit harness connector and ground.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

(+)		(-)	Voltage (V) (Approx.)
Driver seat control unit			
Connector	Terminal	Ground	Battery voltage
B452	33		
	40		

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check the following.

- Repair or replace harness between driver seat control unit and fuse block (J/B).
- Circuit breaker.

2.CHECK GROUND CIRCUIT

Check continuity between the driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		Existed
B451	32		
B452	48		

Is the inspection result normal?

YES >> Driver seat control unit power supply and ground circuit are OK.

NO >> Repair or replace harness between driver seat control unit and ground.

DRIVER SEAT CONTROL UNIT : Special Repair Requirement

INFOID:000000007456405

1.PERFORM ADDITIONAL SERVICE

Perform additional service when removing battery negative terminal.

>> Refer to [ADP-8. "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

ADP

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

AUTOMATIC DRIVE POSITIONER CONTROL UNIT : Diagnosis Procedure

INFOID:000000007456406

NOTE:

Do not disconnect the battery negative terminal and the driver seat control unit connector until DTC is confirmed with CONSULT.

1.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Check voltage between automatic drive positioner control unit harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Automatic drive positioner control unit			
Connector	Terminal	Ground	Battery voltage
M52	34		
	39		

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness between automatic drive positioner control unit and fuse block (J/B).

2.CHECK GROUND CIRCUIT

Check continuity between the automatic drive positioner control unit harness connector and ground.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M52	40		Existed
	48		

Is the inspection result normal?

YES >> Automatic drive positioner control unit power supply and ground circuit are OK.

NO >> Repair or replace harness between automatic drive positioner control unit and ground.

AUTOMATIC DRIVE POSITIONER CONTROL UNIT : Special Repair Requirement

INFOID:000000007456407

1.PERFORM ADDITIONAL SERVICE

Perform additional service when removing battery negative terminal.

>> Refer to [ADP-8, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

SLIDING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

SLIDING SWITCH

Description

INFOID:000000007456408

Sliding switch is equipped to the power seat switch on the seat cushion side surface. The operation signal is inputted to the driver seat control unit when the sliding switch is operated.

Component Function Check

INFOID:000000007456409

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "SLIDE SW-FR", "SLIDE SW-RR" in "Data monitor" mode with CONSULT.
3. Check sliding switch signal under the following conditions.

Monitor item	Condition		Status
SLIDE SW-FR	Sliding switch (forward)	Operate	ON
		Release	OFF
SLIDE SW-RR	Sliding switch (backward)	Operate	ON
		Release	OFF

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-61. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456410

1.CHECK SLIDING SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Turn ignition switch ON.
4. Check voltage between power seat switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Power seat switch			
Connector	Terminal	Ground	Battery voltage
B459	11		
	26		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK SLIDING SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and power seat switch harness connector.

Driver seat control unit		Power seat switch		Continuity
Connector	Terminal	Connector	Terminal	
B451	11	B459	11	Existed
	26		26	

4. Check continuity between driver seat control unit harness connector and ground.

SLIDING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	11		
	26		

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

3.CHECK SLIDING SWITCH

Refer to [ADP-62, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace power seat switch. Refer to [ADP-224, "Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007456411

1.CHECK SLIDING SWITCH

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Check continuity between power seat switch terminals.

Power seat switch		Condition	Continuity	
Terminal				
32	11	Sliding switch (backward)	Operate	Existed
			Release	Not existed
	26	Sliding switch (forward)	Operate	Existed
			Release	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace power seat switch. Refer to [ADP-224, "Removal and Installation"](#).

RECLINING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

RECLINING SWITCH

Description

INFOID:000000007456412

Reclining switch is equipped to the power seat switch on the seat cushion side surface. The operation signal is inputted to the driver seat control unit when the reclining switch is operated.

Component Function Check

INFOID:000000007456413

1. CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "RECLN SW-FR", "RECLN SW-RR" in "Data monitor" mode with CONSULT.
3. Check reclining switch signal under the following conditions.

Monitor item	Condition	Status	
RECLINE SW-FR	Reclining switch (forward)	Operate	ON
		Release	OFF
RECLINE SW-RR	Reclining switch (backward)	Operate	ON
		Release	OFF

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-63. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456414

1. CHECK RECLINING SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Turn ignition switch ON.
4. Check voltage between power seat switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Power seat switch			
Connector	Terminal	Ground	Battery voltage
B459	12		
	27		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK RECLINING SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and power seat switch harness connector.

Driver seat control unit		Power seat switch		Continuity
Connector	Terminal	Connector	Terminal	
B451	12	B459	12	Existed
	27		27	

4. Check continuity between driver seat control unit harness connector and ground.

RECLINING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	12		
	27		

Is the inspection result normal?

- YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).
 NO >> Repair or replace harness or connector.

3.CHECK RECLINING SWITCH

Refer to [ADP-64, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Replace power seat switch. Refer to [ADP-224, "Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007456415

1.CHECK RECLINING SWITCH

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Check continuity between power seat switch terminals.

Power seat switch		Condition	Continuity	
Terminal				
32	12	Reclining switch (backward)	Operate	Existed
			Release	Not existed
	27	Reclining switch (forward)	Operate	Existed
			Release	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> Replace power seat switch. Refer to [ADP-224, "Removal and Installation"](#).

LIFTING SWITCH (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

LIFTING SWITCH (FRONT)

Description

INFOID:000000007456416

Lifting switch (front) is equipped to the power seat switch on the seat cushion side surface. The operation signal is inputted to the driver seat control unit when the lifting switch (front) is operated.

Component Function Check

INFOID:000000007456417

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "LIFT FR SW-UP", "LIFT FR SW-DN" in "Data monitor" mode with CONSULT.
3. Check lifting switch (front) signal under the following conditions.

Monitor item	Condition		Status
LIFT FR SW-UP	Lifting switch front (up)	Operate	ON
		Release	OFF
LIFT FR SW-DN	Lifting switch front (down)	Operate	ON
		Release	OFF

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-65. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456418

1.CHECK LIFTING SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Turn ignition switch ON.
4. Check voltage between power seat switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Power seat switch			
Connector	Terminal	Ground	Battery voltage
B459	13		
	28		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK LIFTING SWITCH (FRONT) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and power seat switch harness connector.

Driver seat control unit		Power seat switch		Continuity
Connector	Terminal	Connector	Terminal	
B451	13	B459	13	Existed
	28		28	

4. Check continuity between driver seat control unit harness connector and ground.

LIFTING SWITCH (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	13		
	28		

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

3.CHECK LIFTING SWITCH (FRONT)

Refer to [ADP-66, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace power seat switch. Refer to [ADP-224, "Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007456419

1.CHECK LIFTING SWITCH (FRONT)

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Check continuity between power seat switch terminals.

Power seat switch		Condition	Continuity	
Terminal				
32	13	Lifting switch front (down)	Operate	Existed
			Release	Not existed
	28	Lifting switch front (up)	Operate	Existed
			Release	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace power seat switch. Refer to [ADP-224, "Removal and Installation"](#).

LIFTING SWITCH (REAR)

< DTC/CIRCUIT DIAGNOSIS >

LIFTING SWITCH (REAR)

Description

INFOID:000000007456420

Lifting switch (rear) is equipped to the power seat switch on the seat cushion side surface. The operation signal is inputted to the driver seat control unit when the lifting switch (rear) is operated.

Component Function Check

INFOID:000000007456421

1. CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "LIFT RR SW-UP", "LIFT RR SW-DN" in "Data monitor" mode with CONSULT.
3. Check lifting switch (rear) signal under the following conditions.

Monitor item	Condition		Status
LIFT RR SW-UP	Lifting switch rear (up)	Operate	ON
		Release	OFF
LIFT RR SW-DN	Lifting switch rear (down)	Operate	ON
		Release	OFF

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-67. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456422

1. CHECK LIFTING SWITCH (REAR) SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Turn ignition switch ON.
4. Check voltage between power seat switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Power seat switch			
Connector	Terminal	Ground	Battery voltage
B459	14		
	29		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK LIFTING SWITCH (REAR) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and power seat switch harness connector.

Driver seat control unit		Power seat switch		Continuity
Connector	Terminal	Connector	Terminal	
B451	14	B459	14	Existed
	29		29	

4. Check continuity between driver seat control unit harness connector and ground.

LIFTING SWITCH (REAR)

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	14		
	29		

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

3.CHECK LIFTING SWITCH (REAR)

Refer to [ADP-68, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace power seat switch. Refer to [ADP-224, "Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007456423

1.CHECK LIFTING SWITCH (REAR)

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Check continuity between power seat switch terminals.

Power seat switch		Condition		Continuity
Terminal				
32	14	Lifting switch rear (up)	Operate	Existed
			Release	Not existed
	29	Lifting switch rear (down)	Operate	Existed
			Release	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace power seat switch. Refer to [ADP-224, "Removal and Installation"](#).

TILT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

TILT SWITCH

Description

INFOID:000000007456424

Tilt switch is equipped to the steering column. The operation signal is inputted to the automatic drive positioner control unit when the tilt switch is operated.

Component Function Check

INFOID:000000007456425

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "TILT SW-UP", "TILT SW-DN" in "Data monitor" mode with CONSULT.
3. Check tilt switch signal under the following conditions.

Monitor item	Condition		Status
TILT SW-UP	Tilt switch (up)	Operate	ON
		Release	OFF
TILT SW-DN	Tilt switch (down)	Operate	ON
		Release	OFF

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-69. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456426

1.CHECK TILT SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect tilt & telescopic switch connector.
3. Turn ignition switch ON.
4. Check voltage between tilt & telescopic switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Tilt & telescopic switch			
Connector	Terminal	Ground	Battery voltage
M31	4		
	5		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK TILT SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic switch harness connector.

Automatic drive positioner control unit		Tilt & telescopic switch		Continuity
Connector	Terminal	Connector	Terminal	
M51	1	M31	4	Existed
	17		5	

4. Check continuity between automatic drive positioner control unit harness connector and ground.

TILT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	1		
	17		

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

3.CHECK TILT SWITCH

Refer to [ADP-70, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace tilt & telescopic switch. Refer to [ADP-225, "Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007456427

1.CHECK TILT SWITCH

1. Turn ignition switch OFF.
2. Disconnect tilt & telescopic switch connector.
3. Check continuity between tilt & telescopic switch terminals.

Tilt & telescopic switch		Condition		Continuity
Terminal				
1	4	Tilt switch (up)	Operate	Existed
			Release	Not existed
	5	Tilt switch (down)	Operate	Existed
			Release	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace tilt & telescopic switch. Refer to [ADP-225, "Removal and Installation"](#).

TELESCOPIC SWITCH

< DTC/CIRCUIT DIAGNOSIS >

TELESCOPIC SWITCH

Description

INFOID:000000007456428

Telescopic switch is equipped to the steering column. The operation signal is inputted to the automatic drive positioner control unit when the telescopic switch is operated.

Component Function Check

INFOID:000000007456429

1. CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "TELESCO SW-FR", "TELESCO SW-RR" in "Data monitor" mode with CONSULT.
3. Check telescopic switch signal under the following conditions.

Monitor item	Condition		Status
TELESCO SW-FR	Telescopic switch (forward)	Operate	ON
		Release	OFF
TELESCO SW-RR	Telescopic switch (backward)	Operate	ON
		Release	OFF

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-71. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456430

1. CHECK TELESCOPIC SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect tilt & telescopic switch connector.
3. Turn ignition switch ON.
4. Check voltage between tilt & telescopic switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Tilt & telescopic switch			
Connector	Terminal	Ground	Battery voltage
M31	2		
	3		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK TELESCOPIC SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic switch harness connector.

Automatic drive positioner control unit		Tilt & telescopic switch		Continuity
Connector	Terminal	Connector	Terminal	
M51	11	M31	2	Existed
	27		3	

4. Check continuity between automatic drive positioner control unit harness connector and ground.

TELESCOPIC SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	11		
	27		

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

3.CHECK TELESCOPIC SWITCH

Refer to [ADP-72, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace tilt & telescopic switch. Refer to [ADP-225, "Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007456431

1.CHECK TELESCOPIC SWITCH

1. Turn ignition switch OFF.
2. Disconnect tilt & telescopic switch connector.
3. Check continuity between tilt & telescopic switch terminals.

Tilt & telescopic switch		Condition		Continuity
Terminal				
1	2	Telescopic switch (forward)	Operate	Existed
			Release	Not existed
	3	Telescopic switch (backward)	Operate	Existed
			Release	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace tilt & telescopic switch. Refer to [ADP-225, "Removal and Installation"](#).

SEAT MEMORY SWITCH

< DTC/CIRCUIT DIAGNOSIS >

SEAT MEMORY SWITCH

Description

INFOID:000000007456432

Memory switch is equipped on the seat set switch and seat memory switch installed to the driver side door trim. The operation signal is inputted to the automatic drive positioner control unit when the set switch or memory switch is operated.

Component Function Check

INFOID:000000007456433

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "MEMORY SW 1", "MEMORY SW 2" "SET SW" in "Data monitor" mode with CONSULT.
3. Check seat memory switch signal under the following conditions.

Monitor item	Condition	Status	
SET SW	SET SW	Push	ON
		Release	OFF
MEMORY SW 1	Memory switch 1	Push	ON
		Release	OFF
MEMORY SW 2	Memory switch 2	Push	ON
		Release	OFF

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-73, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456434

1.CHECK SEAT MEMORY SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect seat memory switch connector.
3. Turn ignition switch ON.
4. Check voltage between seat memory switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Seat memory switch			
Connector	Terminal	Ground	5
D5	3		
	1		
	2		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK MEMORY SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and seat memory switch harness connector.

SEAT MEMORY SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Automatic drive positioner control unit		Seat memory switch		Continuity
Connector	Terminal	Connector	Terminal	
M51	24	D5	3	Existed
	9		1	
	25		2	

4. Check continuity between automatic drive positioner control unit harness connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	24	Ground	Not existed
	9		
	25		

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

3.CHECK MEMORY SWITCH GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between seat memory switch harness connector and ground.

Seat memory switch		Ground	Continuity
Connector	Terminal		
D5	4	Ground	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connector.

4.CHECK SEAT MEMORY SWITCH

Refer to [ADP-74, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace seat memory switch. Refer to [ADP-223, "Removal and Installation"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007456435

1.CHECK SEAT MEMORY SWITCH

1. Turn ignition switch OFF.
2. Disconnect seat memory switch connector.
3. Check continuity between seat memory switch terminals.

SEAT MEMORY SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Seat memory switch		Condition		Continuity
Terminal				
4	3	Set switch	Push	Existed
			Release	Not existed
	1	Memory switch 1	Push	Existed
			Release	Not existed
	2	Memory switch 2	Push	Existed
			Release	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace seat memory switch. Refer to [ADP-223, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

DOOR MIRROR REMOTE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

DOOR MIRROR REMOTE CONTROL SWITCH CHANGEOVER SWITCH

CHANGEOVER SWITCH : Description

INFOID:000000007456436

Changeover switch is integrated into door mirror remote control switch.
Changeover switch has three positions (L, N and R).
It changes door mirror motor operation by transmitting control signal to automatic drive positioner control unit.

CHANGEOVER SWITCH : Component Function Check

INFOID:000000007456437

1. CHECK CHANGEOVER SWITCH FUNCTION

Check the operation on "MIR CHNG SW-R" or "MIR CHNG SW-L" in "DATA MONITOR" mode with CONSULT.

Refer to [ADP-41, "CONSULT Function"](#).

Is the inspection result normal?

YES >> Changeover switch function is OK.

NO >> Refer to [ADP-76, "CHANGEOVER SWITCH : Diagnosis Procedure"](#).

CHANGEOVER SWITCH : Diagnosis Procedure

INFOID:000000007456438

1. CHECK CHANGEOVER SWITCH SIGNAL

1. Turn ignition switch ON.
2. Check voltage between automatic drive positioner control unit connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Automatic drive positioner control unit Connector	Terminal			
M51	2	Ground	RIGHT	0
	18		Other than above	5
			LEFT	0
	Other than above		5	

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit and door mirror remote control switch connector.
3. Check continuity between automatic drive positioner control unit connector and door mirror remote control switch connector.

Automatic drive positioner control unit		Door mirror remote control switch		Continuity
Connector	Terminal	Connector	Terminal	
M51	2	D17	11	Existed
	18		10	

4. Check continuity between automatic drive positioner control unit connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	2		Not existed
	18		

Is the inspection result normal?

DOOR MIRROR REMOTE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 3.
 NO >> Repair or replace harness.

3.CHECK DOOR MIRROR REMOTE CONTROL SWITCH GROUND CIRCUIT

Check continuity between door mirror remote control switch connector and ground.

Door mirror remote control switch		Ground	Continuity
Connector	Terminal		
D17	7		Existed

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair or replace harness.

4.CHECK AUTOMATIC DRIVE POSITIONER CONTROL UNIT OUTPUT SIGNAL

1. Connect automatic drive positioner control unit connector.
2. Turn ignition switch ON.
3. Check voltage between automatic drive positioner control unit connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Connector	Terminal		
M51	2	Ground	5
	18		

Is the inspection result normal?

- YES >> GO TO 5.
 NO >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).

5.CHECK CHANGEOVER SWITCH

Check changeover switch.

Refer to [ADP-77, "CHANGEOVER SWITCH : Component Inspection"](#).

Is the inspection result normal?

- YES >> Refer to [GI-42, "Intermittent Incident"](#).
 NO >> Replace door mirror remote control switch. Refer to [MIR-122, "Removal and Installation"](#).

6.CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).
 NO >> Repair or replace the malfunctioning parts.

CHANGEOVER SWITCH : Component Inspection

INFOID:000000007456439

1.CHECK CHANGEOVER SWITCH

Check door mirror remote control switch.

Door mirror remote control switch		Condition	Continuity	
Terminal				
10	7	Change over switch	LEFT	Existed
			Other than above	Not existed
11			RIGHT	Existed
			Other than above	Not existed

Is the inspection result normal?

- YES >> INSPECTION END

DOOR MIRROR REMOTE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace door mirror remote control switch. Refer to [MIR-122, "Removal and Installation"](#).

MIRROR SWITCH

MIRROR SWITCH : Description

INFOID:000000007456440

It operates angle of the door mirror face.

It transmits mirror face adjust operation to AUTOMATIC DRIVE POSITIONER CONTROL UNIT.

MIRROR SWITCH : Component Function Check

INFOID:000000007456441

1.CHECK MIRROR SWITCH FUNCTION

Check the operation on "MIR CON SW-UP/DN" and "MIR CON SW-RH/LH" in "DATA MONITOR" mode with CONSULT.

Refer to [ADP-41, "CONSULT Function"](#).

Is the inspection result normal?

YES >> Mirror switch function is OK.

NO >> Refer to [ADP-78, "MIRROR SWITCH : Diagnosis Procedure"](#).

MIRROR SWITCH : Diagnosis Procedure

INFOID:000000007456442

1.CHECK MIRROR SWITCH FUNCTION

1. Turn ignition switch ON.
2. Check voltage between automatic drive positioner control unit connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
Automatic drive positioner control unit					
Connector	Terminal				
M51	3	Ground	Mirror switch	UP	0
				Other than above	5
	4			LEFT	0
				Other than above	5
	19			DOWN	0
				Other than above	5
	20			RIGHT	0
				Other than above	5

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 2.

2.CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit and door mirror remote control switch connector.
3. Check continuity between automatic drive positioner control unit connector and door mirror remote control switch connector.

Automatic drive positioner control unit		Door mirror remote control switch		Continuity
Connector	Terminal	Connector	Terminal	
M51	3	D17	15	Existed
	4		13	
	19		12	
	20		4	

4. Check continuity between automatic drive positioner control unit connector and ground.

DOOR MIRROR REMOTE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	3	Ground	Not existed
	4		
	19		
	20		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK DOOR MIRROR REMOTE CONTROL SWITCH GROUND CIRCUIT

Check continuity between door mirror remote control switch connector and ground.

Door mirror remote control switch		Ground	Continuity
Connector	Terminal		
D17	7		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK AUTOMATIC DRIVE POSITIONER CONTROL UNIT OUTPUT SIGNAL

1. Connect automatic drive positioner control unit connector.
2. Turn ignition switch ON.
3. Check voltage between automatic drive positioner control unit and ground.

Automatic drive positioner control unit		(-)	Voltage (V) (Approx.)
Connector	Terminal		
M51	3	Ground	5
	4		
	19		
	20		

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).

5.CHECK MIRROR SWITCH

Check mirror switch

Refer to [ADP-80, "MIRROR SWITCH : Component Inspection"](#).

Is the inspection result normal?

YES >> Refer to [GI-42, "Intermittent Incident"](#).

NO >> Replace door mirror remote control switch. Refer to [MIR-122, "Removal and Installation"](#).

6.CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning parts.

DOOR MIRROR REMOTE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

MIRROR SWITCH : Component Inspection

INFOID:000000007456443

1.CHECK MIRROR SWITCH

Check door mirror remote control switch.

Door mirror remote control switch		Condition	Continuity
Terminal			
4	7	RIGHT	Existed
		Other than above	Not existed
13		LEFT	Existed
		Other than above	Not existed
15		UP	Existed
		Other than above	Not existed
12		DOWN	Existed
		Other than above	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace door mirror remote control switch. Refer to [MIR-122. "Removal and Installation"](#).

POWER SEAT SWITCH GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SEAT SWITCH GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000007456444

1. CHECK POWER SEAT SWITCH GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Check continuity between power seat switch connector and ground.

Power seat switch		Ground	Continuity
Connector	Terminal		
B459	32		Existed

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

TILT & TELESCOPIC SWITCH GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

TILT & TELESCOPIC SWITCH GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000007456445

1. CHECK TILT & TELESCOPIC SWITCH GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect tilt & telescopic switch connector.
3. Check continuity between tilt & telescopic switch and ground.

Tilt & telescopic switch		Ground	Continuity
Connector	Terminal		Existed
M31	1		

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> Repair or replace harness.

DETENTION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

DETENTION SWITCH

Description

INFOID:000000007456446

Detention switch is installed on A/T shift selector. It is turned OFF when the Selector lever is in P position. The driver seat control unit judges that the Selector lever is in P position if continuity does not exist in this circuit.

Component Function Check

INFOID:000000007456447

1. CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "DETENT SW" signal in "Data monitor" mode with CONSULT.
3. Check detention switch signal under the following conditions.

Monitor item	Condition		Status
DETENT SW	Selector lever	P position	OFF
		Other than above	ON

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-83, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456448

1. CHECK DTC WITH "BCM"

Check "Self Diagnostic Result" for BCM with CONSULT.

Is the either DTC B2601, B2602, B2603, B2604 or B2605 detected?

YES >> Check the DTC. Refer to [BCS-86, "DTC Index"](#).

NO >> GO TO 2.

2. CHECK DETENTION SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector harness connector.
3. Turn ignition switch ON.
4. Check voltage between A/T shift selector harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
A/T shift selector			
Connector	Terminal	Ground	Battery voltage
M137	11		

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3. CHECK DETENTION SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit.
3. Check continuity between driver seat control unit harness connector and A/T shift selector harness connector.

Driver seat control unit		A/T shift selector		Continuity
Connector	Terminal	Connector	Terminal	
B451	21	M137	11	Existed

4. Check continuity between driver seat control unit harness connector and ground.

DETENTION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	21		Not existed

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

4.CHECK DETENTION SWITCH

Refer to [ADP-84, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace A/T shift selector. Refer to [TM-179, "Removal and Installation"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007456449

1.CHECK DETENTION SWITCH

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector connector.
3. Check A/T shift selector terminals.

A/T shift selector		Condition	Continuity	
Terminal				
10	11	Selector lever	P position	Existed
			Other than above	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace A/T shift selector. Refer to [TM-179, "Removal and Installation"](#).

FRONT DOOR SWITCH (DRIVER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

FRONT DOOR SWITCH (DRIVER SIDE)

Description

INFOID:000000007456450

Detects front door (driver side) open/close condition.

Component Function Check

INFOID:000000007456451

1. CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "DOOR SW-DR" in "Data monitor" mode with CONSULT.
3. Check the front door switch (driver side) signal under the following conditions.

Monitor item	Condition		Status
DOOR SW-DR	Front door switch (driver side)	Open	ON
		Close	OFF

Is the inspection result normal?

YES >> INSPECTION END


NO >> Perform diagnosis procedure. Refer to [ADP-85. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456452

1. CHECK FRONT DOOR SWITCH (DRIVER SIDE) SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front door switch (driver side) connector.
3. Check signal between front door switch (driver side) connector and ground with oscilloscope.

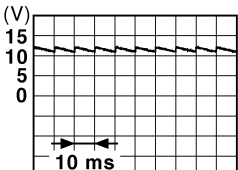(+)		(-)	Voltage (V) (Approx.)
Front door switch (driver side)			
Connector	Terminal	Ground	
B16	2		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK FRONT DOOR SWITCH (DRIVER SIDE) CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM connector and front door switch (driver side) connector.

BCM		Front door switch (driver side)		Continuity
Connector	Terminal	Connector	Terminal	
M123	150	B16	2	Existed

3. Check continuity between BCM connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M123	150	Ground	Not existed

FRONT DOOR SWITCH (DRIVER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92, "Exploded View"](#).

NO >> Repair or replace harness or connector.

3.CHECK FRONT DOOR SWITCH (DRIVER SIDE)

Refer to [ADP-86, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace front door switch (driver side). Refer to [DLK-274, "Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007456453

1.CHECK FRONT DOOR SWITCH (DRIVER SIDE)

1. Turn ignition switch OFF.
2. Disconnect front door switch (driver side) connector.
3. Check continuity between front door switch (driver side) terminals.

Front door switch (driver side)		Condition		Continuity
Terminal				
2	Ground part of door switch	Front door switch (driver side)	Pushed	Not existed
			Released	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace front door switch (driver side). Refer to [DLK-274, "Removal and Installation"](#).

SLIDING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

SLIDING SENSOR

Description

INFOID:000000007456454

- The sliding sensor is installed to the seat slide cushion frame.
- The pulse signal is inputted to the driver seat control unit when sliding is performed.
- The driver seat control unit counts the pulse and calculates the sliding amount of the seat.

Component Function Check

INFOID:000000007456455

1. CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "SLIDE PULSE" in "Data monitor" mode with CONSULT.
3. Check sliding sensor signal under the following conditions.

Monitor item	Condition		Valve
SLIDE PULSE	Seat sliding	Operate (forward)	Change (increase) ^{*1}
		Operate (backward)	Change (decrease) ^{*1}
		Release	No change ^{*1}

*1: The value at the seat position attained when the battery is connected is considered to be 32768.

Is the indication normal?

YES >> INSPECTION END


NO >> Perform diagnosis procedure. Refer to [ADP-87, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456456

1. CHECK SLIDING SENSOR SIGNAL

1. Turn ignition switch ON.
2. Check voltage signal between driver seat control unit harness connector and ground with oscilloscope.

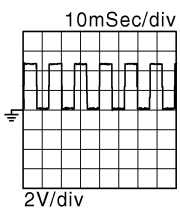(+)		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
B451	24	Ground	Seat sliding	 <p>10mSec/div 2V/div JMJA0119ZZ</p>
			Other than above	0 or 5

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).

NO >> GO TO 2.

2. CHECK SLIDING SENSOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit and sliding sensor connector.
3. Check continuity between driver seat control unit harness connector and sliding sensor harness connector.

SLIDING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Sliding sensor		Continuity
Connector	Terminal	Connector	Terminal	
B451	24	B453	24	Existed

4. Check continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	24		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3. CHECK SLIDING SENSOR POWER SUPPLY

1. Connect driver seat control unit connector.
2. Turn ignition switch ON.
3. Check voltage between sliding sensor harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Sliding sensor			
Connector	Terminal		
B453	16	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK SLIDING SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and sliding sensor harness connector.

Driver seat control unit		Sliding sensor		Continuity
Connector	Terminal	Connector	Terminal	
B451	16	B453	16	Existed

4. Check continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	16		Not existed

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

5. CHECK SLIDING SENSOR GROUND

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and sliding sensor harness connector.

Driver seat control unit		Sliding sensor		Continuity
Connector	Terminal	Connector	Terminal	
B451	31	B453	31	Existed

SLIDING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace sliding sensor.

NO >> Repair or replace harness or connector.

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

RECLINING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

RECLINING SENSOR

Description

INFOID:000000007456457

- The reclining motor is installed to the seatback frame.
- The pulse signal is inputted to the driver seat control unit when the reclining is operated.
- The driver seat control unit counts the pulse and calculates the reclining amount of the seat.

Component Function Check

INFOID:000000007456458

1. CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "RECLN PULSE" in "Data monitor" mode with CONSULT.
3. Check reclining sensor signal under the following conditions.

Monitor item	Condition		Value
RECLN PULSE	Seat reclining	Operate (forward)	Change (increase)* ¹
		Operate (backward)	Change (decrease)* ¹
		Release	No change* ¹

*¹: The value at the seat position attained when the battery is connected is considered to be 32768.

Is the indication normal?

YES >> INSPECTION END


NO >> Perform diagnosis procedure. Refer to [ADP-90. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456459

1. CHECK RECLINING SENSOR SIGNAL

1. Turn ignition switch ON.
2. Check voltage signal between driver seat control unit harness connector and ground with oscilloscope.

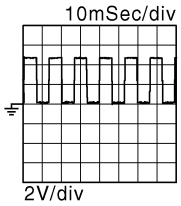(+) Driver seat control unit		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
B451	9	Ground	Seat reclining	 10mSec/div 2V/div JMJA0119ZZ
			Other than above	

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221. "Removal and Installation"](#).

NO >> GO TO 2.

2. CHECK RECLINING SENSOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit and reclining motor connector.
3. Check continuity between driver seat control unit harness connector and reclining motor harness connector.

RECLINING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Reclining motor		Continuity
Connector	Terminal	Connector	Terminal	
B451	9	B454	9	Existed

4. Check continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	9		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3. CHECK RECLINING SENSOR POWER SUPPLY

1. Connect driver seat control unit connector.
2. Turn ignition switch ON.
3. Check voltage between reclining motor harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Reclining motor			
Connector	Terminal		
B454	16	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK RECLINING SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and reclining motor harness connector.

Driver seat control unit		Reclining motor		Continuity
Connector	Terminal	Connector	Terminal	
B451	16	B454	16	Existed

4. Check continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	16		Not existed

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

5. CHECK RECLINING SENSOR GROUND

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and reclining motor harness connector.

Driver seat control unit		Reclining motor		Continuity
Connector	Terminal	Connector	Terminal	
B451	31	B454	31	Existed

RECLINING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace reclining motor.

NO >> Repair or replace harness or connector.

LIFTING SENSOR (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

LIFTING SENSOR (FRONT)

Description

INFOID:000000007456460

- The lifting sensor (front) is installed to the seat slide cushion frame.
- The pulse signal is inputted to the driver seat control unit when the lifting (front) is operated.
- The driver seat control unit counts the pulse and calculates the lifting (front) amount of the seat.

Component Function Check

INFOID:000000007456461

1. CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "LIFT FR PULSE" in "Data monitor" mode with CONSULT.
3. Check the lifting sensor (front) signal under the following conditions.

Monitor item	Condition		Value
LIFT FR PULSE	Seat lifting (front)	Operate (Up)	Change (increase) ^{*1}
		Operate (Down)	Change (decrease) ^{*1}
		Release	No change ^{*1}

^{*1}:The value at the seat position attained when the battery is connected is considered to be 32768.

Is the indication normal?

YES >> INSPECTION END


NO >> Perform diagnosis procedure. Refer to [ADP-93. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456462

1. CHECK LIFTING SENSOR (FRONT) SIGNAL

1. Turn ignition switch ON.
2. Check the voltage signal driver seat control unit harness connector and ground with an oscilloscope.

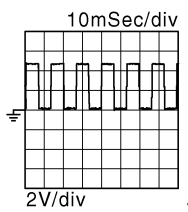(+)		(-)	Condition	Voltage (V) (Approx.)
Driver seat control unit				
Connector	Terminal			
B451	25	Ground	Seat Lifting (front)	
			Operate	
			Other than above	0 or 5

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221. "Removal and Installation"](#).

NO >> GO TO 2.

2. CHECK LIFTING SENSOR (FRONT) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit and lifting motor (front) connector.
3. Check continuity between driver seat control unit harness connector and lifting motor (front) harness connector.

LIFTING SENSOR (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Lifting motor (front)		Continuity
Connector	Terminal	Connector	Terminal	
B451	25	B455	25	Existed

4. Check continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	25		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3.CHECK LIFTING SENSOR (FRONT) POWER SUPPLY

1. Connect driver seat control unit connector.
2. Turn ignition switch ON.
3. Check voltage between lifting motor (front) harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Lifting motor (front)			
Connector	Terminal		
B455	16	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK LIFTING SENSOR (FRONT) POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and lifting motor (front) harness connector.

Driver seat control unit		Lifting motor (front)		Continuity
Connector	Terminal	Connector	Terminal	
B451	16	B455	16	Existed

4. Check continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	16		Not existed

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

5.CHECK LIFTING SENSOR (FRONT) GROUND

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and lifting motor (front) harness connector.

Driver seat control unit		Lifting motor (front)		Continuity
Connector	Terminal	Connector	Terminal	
B451	31	B455	31	Existed

LIFTING SENSOR (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace lifting motor (front).

NO >> Repair or replace harness.

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

LIFTING SENSOR (REAR)

< DTC/CIRCUIT DIAGNOSIS >

LIFTING SENSOR (REAR)

Description

INFOID:000000007456463

- The lifting sensor (rear) is installed to the seat slide cushion frame.
- The pulse signal is inputted to the driver seat control unit when the lifting (rear) is operated.
- The driver seat control unit counts the pulse and calculates the lifting (rear) amount of the seat.

Component Function Check

INFOID:000000007456464

1. CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "LIFT RR PULSE" in "Data monitor" mode with CONSULT.
3. Check lifting sensor (rear) signal under the following conditions.

Monitor item	Condition		Value
LIFT RR PULSE	Seat lifting (rear)	Operate (Up)	Change (increase) ^{*1}
		Operate (Down)	Change (decrease) ^{*1}
		Release	No change ^{*1}

*1: The value at the seat position attained when the battery is connected is considered to be 32768.

Is the indication normal?

YES >> INSPECTION END


NO >> Perform diagnosis procedure. Refer to [ADP-96. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456465

1. CHECK LIFTING SENSOR (REAR) SIGNAL

1. Turn ignition switch ON.
2. Check voltage signal between driver seat control unit harness connector and ground with oscilloscope.

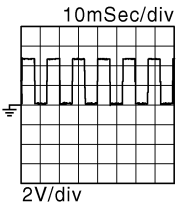(+) Driver seat control unit		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
B451	10	Ground	Seat Lifting (rear)	
			Other than above	

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221. "Removal and Installation"](#).

NO >> GO TO 2.

2. CHECK LIFTING SENSOR (REAR) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit and lifting motor (rear) connector.
3. Check the continuity between driver seat control unit harness connector and lifting motor (rear) harness connector.

LIFTING SENSOR (REAR)

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Lifting motor (rear)		Continuity
Connector	Terminal	Connector	Terminal	
B451	10	B456	10	Existed

4. Check the continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	10		Not Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3.CHECK LIFTING SENSOR (REAR) POWER SUPPLY

1. Connect driver seat control unit connector.
2. Turn ignition switch ON.
3. Check the voltage between lifting motor (rear) harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Lifting motor (rear)			
Connector	Terminal		
B456	16	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK LIFTING SENSOR (REAR) POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check the continuity between driver seat control unit harness connector and lifting motor (rear) harness connector.

Driver seat control unit		Lifting motor (rear)		Continuity
Connector	Terminal	Connector	Terminal	
B451	16	B456	16	Existed

4. Check the continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B451	16		Not existed

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

5.CHECK LIFTING SENSOR (REAR) GROUND

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check the continuity between driver seat control unit harness connector and lifting motor (rear) harness connector.

Driver seat control unit		Lifting motor (rear)		Continuity
Connector	Terminal	Connector	Terminal	
B451	31	B456	31	Existed

LIFTING SENSOR (REAR)

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace lifting motor (rear).

NO >> Repair or replace harness or connector.

TILT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

TILT SENSOR

Description

INFOID:000000007456466

- The tilt sensor is installed to the steering column assembly.
- The resistance of tilt sensor is changed according to the up/down position of steering column.
- The terminal voltage of automatic drive positioner control unit will be changed according to a change of tilt sensor resistance. Automatic drive positioner control unit calculates the tilt position from the voltage.

Component Function Check

INFOID:000000007456467

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "TILT SEN" in "Data monitor" mode with CONSULT.
3. Check the tilt sensor signal under the following condition.

Monitor item	Condition	Value
TILT SEN	Tilt position	Change between 1.2 [V] (Close to top) 3.4 [V] (Close to bottom)

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-99, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456468

1.CHECK TILT SENSOR SIGNAL

1. Turn ignition switch ON.
2. Check voltage automatic drive positioner control unit harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Automatic drive positioner control unit Connector	Terminal			
M51	7	Ground	Tilt position	Change between 1.2 [V] (Close to top) 3.4 [V] (Close to bottom)

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).

NO >> GO TO 2.

2.CHECK TILT SENSOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit and tilt & telescopic sensor connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic sensor harness connector.

Automatic drive positioner control unit		Tilt & telescopic sensor		Continuity
Connector	Terminal	Connector	Terminal	
M51	7	M48	3	Existed

4. Check continuity between automatic drive positioner control unit harness connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	7		Not existed

Is the inspection result normal?

TILT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 3.
NO >> Repair or replace harness or connector.

3. CHECK TILT SENSOR POWER SUPPLY

1. Connect automatic drive positioner control unit connector.
2. Turn ignition switch ON.
3. Check voltage between tilt & telescopic sensor harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Tilt & telescopic sensor			
Connector	Terminal		
M48	1	Ground	5

Is the inspection result normal?

- YES >> GO TO 5.
NO >> GO TO 4.

4. CHECK TILT SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic sensor harness connector.

Automatic drive positioner control unit		Tilt & telescopic sensor		Continuity
Connector	Terminal	Connector	Terminal	
M52	33	M48	1	Existed

4. Check continuity between automatic drive positioner control unit harness connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M52	33		Not existed

Is the inspection result normal?

- YES >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).
NO >> Repair or replace harness or connector.

5. CHECK TILT SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic sensor harness connector.

Automatic drive positioner control unit		Tilt & telescopic sensor		Continuity
Connector	Terminal	Connector	Terminal	
M52	41	M48	4	Existed

Is the inspection result normal?

- YES >> Replace tilt & telescopic sensor.
NO >> Repair or replace harness or connector.

TELESCOPIC SENSOR

< DTC/CIRCUIT DIAGNOSIS >

TELESCOPIC SENSOR

Description

INFOID:000000007456469

- The telescopic sensor is installed to the steering column assembly.
- The resistance of telescopic sensor is changed according to the forward/backward position of steering column.
- The terminal voltage of automatic drive positioner control unit will be changed according to a change of telescopic sensor resistance. Automatic drive positioner control unit calculates the telescopic position from the voltage.

Component Function Check

INFOID:000000007456470

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "TELESCO SEN" in "Data monitor" mode with CONSULT.
3. Check the tilt sensor signal under the following conditions.

Monitor item	Condition	Value
TELESCO SEN	Telescopic position	Change between 0.8 [V] (close to top) 3.4 [V] (close to bottom)

Is the indication normal?

YES >> INSPECTION END.

NO >> Perform diagnosis procedure. Refer to [ADP-101, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456471

1.CHECK TELESCOPIC SENSOR SIGNAL

1. Turn ignition switch ON.
2. Check voltage automatic drive positioner control unit harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Automatic drive positioner control unit Connector	Terminal			
M51	23	Ground	Telescopic position	Change between 0.8 [V] (close to top) 3.4 [V] (close to bottom)

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).

NO >> GO TO 2.

2.CHECK TELESCOPIC SENSOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit and tilt & telescopic sensor connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic sensor harness connector.

Automatic drive positioner control unit		Tilt & telescopic sensor		Continuity
Connector	Terminal	Connector	Terminal	
M51	23	M48	2	Existed

4. Check continuity between automatic drive positioner control unit harness connector and ground.

TELESCOPIC SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	23		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3.CHECK TELESCOPIC SENSOR POWER SUPPLY

1. Connect automatic drive positioner control unit connector.
2. Turn ignition switch ON.
3. Check voltage between tilt & telescopic sensor harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Tilt & telescopic sensor			
Connector	Terminal		
M48	2	Ground	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK TELESCOPIC SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic sensor harness connector.

Automatic drive positioner control unit		Tilt & telescopic sensor		Continuity
Connector	Terminal	Connector	Terminal	
M52	33	M48	1	Existed

4. Check continuity between automatic drive positioner control unit harness connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M52	33		

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

5.CHECK TELESCOPIC SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic sensor harness connector.

Automatic drive positioner control unit		Tilt & telescopic sensor		Continuity
Connector	Terminal	Connector	Terminal	
M52	41	M48	4	Existed

Is the inspection result normal?

YES >> Replace tilt & telescopic sensor.

NO >> Repair or replace harness.

MIRROR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

MIRROR SENSOR

DRIVER SIDE

DRIVER SIDE : Description

INFOID:000000007456472

- The mirror sensor (driver side) is installed to the door mirror (driver side).
- The resistance of 2 sensors (horizontal and vertical) is changed when the door mirror (driver side) is operated.
- Automatic drive positioner control unit calculates the door mirror position according to the change of the voltage of 2 sensor input terminals.

DRIVER SIDE : Component Function Check

INFOID:000000007456473

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "MIR/SEN LH U-D", "MIR/SEN LH R-L" in "Data monitor" with CONSULT.
3. Check mirror sensor (driver side) signal under the following condition.

Monitor item	Condition	Value
MIR/SEN LH U-D	Door mirror (driver side)	Change between 3.4 [V] (close to peak) 0.6 [V] (close to valley)
MIR/SEN LH R-L		Change between 0.6 [V] (close to left edge) 3.4 [V] (close to right edge)

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-103, "DRIVER SIDE : Diagnosis Procedure"](#).

DRIVER SIDE : Diagnosis Procedure

INFOID:000000007456474

1.CHECK DOOR MIRROR (DRIVER SIDE) SENSOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect door mirror (driver side) connector.
3. Turn ignition switch ON.
4. Check voltage between door mirror (driver side) harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Door mirror (driver side)			
Connector	Terminal		
D3	23	Ground	5

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK DOOR MIRROR (DRIVER SIDE) SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and door mirror (driver side) harness connector.

Automatic drive positioner control unit connector	Terminal	Door mirror (driver side) connector	Terminal	Continuity
M52	33	D3	23	Existed

4. Check continuity between automatic drive positioner control unit harness connector and ground.

MIRROR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M52	33		Not existed

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

3.CHECK DOOR MIRROR (DRIVER SIDE) SENSOR GROUND

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and door mirror (driver side) harness connector.

Automatic drive positioner control unit		Door mirror (driver side)		Continuity
Connector	Terminal	Connector	Terminal	
M52	41	D3	24	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connector.

4.CHECK DOOR MIRROR (DRIVER SIDE) SENSOR CIRCUIT

1. Check continuity between automatic drive positioner control unit harness connector and door mirror (driver side) harness connector.

Automatic drive positioner control unit		Door mirror (driver side)		Continuity
Connector	Terminal	Connector	Terminal	
M51	6	D3	21	Existed
	22		22	

2. Check continuity between automatic drive positioner control unit harness connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	6		Not existed
	22		

Is the inspection result normal?

YES >> Replace door mirror sensor. (Built in driver side mirror.)

NO >> Repair or replace harness or connector.

PASSENGER SIDE

PASSENGER SIDE : Description

INFOID:000000007456475

- The mirror sensor (passenger side) is installed to the door mirror (passenger side).
- The resistance of 2 sensors (horizontal and vertical) is changed when the door mirror (passenger side) is operated.
- Automatic drive positioner control unit calculates the door mirror position according to the change of the voltage of 2 sensor input terminals.

PASSENGER SIDE : Component Function Check

INFOID:000000007456476

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "MIR/SEN RH U-D", "MIR/SEN RH R-L" in "Data monitor" with CONSULT.
3. Check the mirror sensor (passenger side) signal under the following conditions.

MIRROR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Monitor item	Condition	Value
MIR/SEN RH U-D	Door mirror (passenger side)	Change between 3.4 [V] (close to peak) 0.6 [V] (close to valley)
MIR/SEN RH R-L		Change between 3.4 [V] (close to left edge) 0.6 [V] (close to right edge)

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-105, "PASSENGER SIDE : Diagnosis Procedure"](#).

PASSENGER SIDE : Diagnosis Procedure

INFOID:000000007456477

1. CHECK DOOR MIRROR SENSOR (PASSENGER SIDE) POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect door mirror (passenger side) connector.
3. Turn ignition switch ON.
4. Check voltage between door mirror (passenger side) harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Door mirror (passenger side)			
Connector	Terminal	Ground	5
D33	23		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK DOOR MIRROR (PASSENGER SIDE) SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and door mirror (passenger side) harness connector.

Automatic drive positioner control unit		Door mirror (passenger side)		Continuity
Connector	Terminal	Connector	Terminal	
M52	33	D33	23	Existed

4. Check continuity between automatic drive positioner control unit harness connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M52	33		Not existed

Is the inspection result normal?

YES >> Replace automatic driver positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

3. CHECK DOOR MIRROR (PASSENGER SIDE) SENSOR GROUND

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and door mirror (passenger side) connector.

MIRROR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Automatic drive positioner control unit		Door mirror (passenger side)		Continuity
Connector	Terminal	Connector	Terminal	
M52	41	D33	24	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connector.

4. CHECK DOOR MIRROR (PASSENGER SIDE) SENSOR HARNESS CONTINUITY

1. Check continuity between automatic drive positioner control unit harness connector and door mirror (passenger side) harness connector.

Automatic drive positioner control unit		Door mirror (passenger side)		Continuity
Connector	Terminal	Connector	Terminal	
M51	5	D33	21	Existed
	21		22	

2. Check continuity between automatic drive positioner control unit harness connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	5		Not existed
	21		

Is the inspection result normal?

YES >> Replace door mirror sensor. (Built in passenger side door mirror).

NO >> Repair or replace harness or connector.

SLIDING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

SLIDING MOTOR

Description

INFOID:000000007456478

- The seat sliding motor is installed to the seat cushion frame.
- The seat sliding motor is installed with the driver seat control unit.
- The seat is slid frontward/rearward by changing the rotation direction of sliding motor.

Component Function Check

INFOID:000000007456479

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "SEAT SLIDE" in "Active test" mode with CONSULT.
3. Check the sliding motor operation.

Test item		Description	
SEAT SLIDE	OFF	Seat sliding	Stop
	FR		Forward
	RR		Backward

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-107, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456480

1.CHECK SLIDING MOTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect sliding motor connector.
3. Turn the ignition switch ON.
4. Perform "Active test" ("SEAT SLIDE") with CONSULT-III
5. Check voltage between sliding motor harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
B461	35	Ground	SEAT SLIDE OFF	0
			SEAT SLIDE FR (forward)	Battery voltage
			SEAT SLIDE RR (backward)	0
	42		SEAT SLIDE OFF	0
			SEAT SLIDE FR (forward)	0
			SEAT SLIDE RR (backward)	Battery voltage

Is the inspection result normal?

YES >> Replace sliding motor. (Built in seat slide cushion frame.)

NO >> GO TO 2.

2.CHECK SLIDING MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and sliding motor harness connector.

SLIDING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Sliding motor		Continuity
Connector	Terminal	Connector	Terminal	
B452	35	B461	35	Existed
	42		42	

4. Check continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B452	35		Not existed
	42		

Is the inspection result normal?

- YES >> Replace driver control unit. Refer to [ADP-221, "Removal and Installation"](#).
 NO >> Repair or replace harness or connector.

RECLINING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

RECLINING MOTOR

Description

INFOID:000000007456481

- The seat reclining motor is installed to the seat back frame.
- The seat reclining motor is activated with the driver seat control unit.
- The seatback is reclined frontward/rearward by changing the rotation direction of reclining motor.

Component Function Check

INFOID:000000007456482

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "SEAT RECLINING" in "Active test" mode with CONSULT.
3. Check the reclining motor operation.

Test item		Description	
SEAT RECLINING	OFF	Seat reclining	Stop
	FR		Forward
	RR		Backward

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-109, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456483

1.CHECK RECLINING MOTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect reclining motor connector.
3. Turn the ignition switch ON.
4. Perform "Active test" ("SEAT RECLINING") with CONSULT
5. Check voltage between reclining motor harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Reclining motor				
Connector	Terminal			
B454	36	Ground	SEAT RECLINING OFF	0
			FR (forward)	Battery voltage
			RR (backward)	0
	44		SEAT RECLINING OFF	0
			FR (forward)	0
			RR (backward)	Battery voltage

Is the inspection result normal?

YES >> Replace reclining motor. (Built in seat back frame.)

NO >> GO TO 2.

2.CHECK RECLINING MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and reclining motor harness connector.

RECLINING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Reclining motor		Continuity
Connector	Terminal	Connector	Terminal	
B452	36	B454	36	Existed
	44		44	

4. Check continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B452	36		Not existed
	44		

Is the inspection result normal?

YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

LIFTING MOTOR (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

LIFTING MOTOR (FRONT)

Description

INFOID:000000007456484

- The lifting motor (front) is installed to the seat slide cushion frame.
- The lifting motor (front) is activated with the driver seat control unit.
- The lifter (front) is moved upward/downward by changing the rotation direction of lifting motor (front).

Component Function Check

INFOID:000000007456485

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "SEAT LIFTER FR" in "Active test" mode with CONSULT.
3. Check the lifting motor (front) operation.

Test item		Description	
SEAT LIFTER FR	OFF	Seat lifting (front)	Stop
	UP		Upward
	DWN		Downward

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-111, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456486

1.CHECK LIFTING MOTOR (FRONT) POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect lifting motor (front) connector.
3. Turn the ignition switch ON.
4. Perform "Active test" ("SEAT LIFTER FR") with CONSULT.
5. Check voltage between lifting motor (front) harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
Lifting motor (front)					
Connector	Terminal				
B455	37	Ground	SEAT LIFTER FR	OFF	0
				UP	0
				DWN (down)	Battery voltage
	45			OFF	0
				UP	Battery voltage
				DWN (down)	0

Is the inspection result normal?

YES >> Replace lifting motor (front). (Built in seat slide cushion frame.)

NO >> GO TO 2.

2.CHECK LIFTING MOTOR (FRONT) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and lifting motor (front) harness connector.

LIFTING MOTOR (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Lifting motor (front)		Continuity
Connector	Terminal	Connector	Terminal	
B452	37	B455	37	Existed
	45		45	

4. Check continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B452	37		Not existed
	45		

Is the inspection result normal?

- YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).
 NO >> Repair or replace harness or connector.

LIFTING MOTOR (REAR)

< DTC/CIRCUIT DIAGNOSIS >

LIFTING MOTOR (REAR)

Description

INFOID:000000007456487

- The lifting motor (rear) is installed to the seat slide cushion frame.
- The lifting motor (rear) is activated with the driver seat control unit.
- The seat lifter (rear) is moved upward/downward by changing the rotation direction of lifting motor (rear).

Component Function Check

INFOID:000000007456488

1. CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "SEAT LIFTER RR" in "Active test" mode with CONSULT.
3. Check the lifting motor (rear) operation.

Test item		Description	
SEAT LIFTER RR	OFF	Seat lifting (rear)	Stop
	UP		Upward
	DWN		Downward

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-113, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456489

1. CHECK LIFTING MOTOR (REAR) POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect lifting motor (rear) connector.
3. Turn the ignition switch ON.
4. Perform "Active test" ("SEAT LIFTER RR") with CONSULT
5. Check voltage between lifting motor (rear) harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
Lifting motor (rear)					
Connector	Terminal	Ground	SEAT LIFTER RR	OFF	0
B456	38			UP	Battery voltage
				DWN (DOWN)	0
				OFF	0
	39			UP	0
				DWN (DOWN)	Battery voltage

Is the inspection result normal?

YES >> Replace lifting motor (rear). (Built in seat slide cushion frame.)

NO >> GO TO 2.

2. CHECK LIFTING MOTOR (REAR) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector and lifting motor (rear) connector.
3. Check continuity between driver seat control unit harness connector and lifting motor (rear) harness connector.

ADP

LIFTING MOTOR (REAR)

< DTC/CIRCUIT DIAGNOSIS >

Driver seat control unit		Lifting motor (rear)		Continuity
Connector	Terminal	Connector	Terminal	
B452	38	B456	38	Existed
	39		39	

4. Check continuity between driver seat control unit harness connector and ground.

Driver seat control unit		Ground	Continuity
Connector	Terminal		
B452	38		Not existed
	39		

Is the inspection result normal?

- YES >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).
 NO >> Repair or replace harness or connector.

TILT MOTOR

< DTC/CIRCUIT DIAGNOSIS >

TILT MOTOR

Description

INFOID:000000007456490

- The tilt motor is installed to the steering column assembly.
- The tilt motor is activated with the automatic drive positioner control unit.
- The steering column is tilted upward/downward by changing the rotation direction of tilt motor.

Component Function Check

INFOID:000000007456491

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "TILT MOTOR" in "Active test" mode with CONSULT.
3. Check the tilt motor operation.

Test item		Description	
TILT MOTOR	OFF	Steering tilt	Stop
	UP		Upward
	DWN		Downward

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-115, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456492

1.CHECK TILT MOTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect tilt & telescopic motor connector.
3. Turn the ignition switch ON.
4. Perform "Active test" ("TILT MOTOR") with CONSULT.
5. Check voltage between tilt & telescopic motor harness connector and ground.

(+) Tilt & telescopic motor		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
M49	3	Ground	TILT MOTOR OFF	0
			TILT MOTOR UP	0
			TILT MOTOR DWN (down)	Battery voltage
	4		TILT MOTOR OFF	0
			TILT MOTOR UP	Battery voltage
			TILT MOTOR DWN (down)	0

Is the inspection result normal?

YES >> Replace tilt motor. (Built in steering column assembly.)

NO >> GO TO 2.

2.CHECK TILT MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit and tilt & telescopic motor connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic motor harness connector.

TILT MOTOR

< DTC/CIRCUIT DIAGNOSIS >

Automatic drive positioner control unit		Tilt & telescopic motor		Continuity
Connector	Terminal	Connector	Terminal	
M52	35	M49	4	Existed
	42		3	

4. Check continuity between automatic drive positioner control unit harness connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M52	35		Not existed
	42		

Is the inspection result normal?

- YES >> Replace automatic drive positioner control unit. Refer to [ADP-222. "Removal and Installation"](#).
 NO >> Repair or replace harness or connector.

TELESCOPIC MOTOR

< DTC/CIRCUIT DIAGNOSIS >

TELESCOPIC MOTOR

Description

INFOID:000000007456493

- The telescopic motor is installed to the steering column assembly.
- The telescopic motor is activated with the automatic drive positioner control unit.
- Compresses the steering column by changing the rotation direction of telescopic motor.

Component Function Check

INFOID:000000007456494

1. CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "TELESCO MOTOR" in "Active test" mode with CONSULT.
3. Check the telescopic motor operation.

Test item		Description	
TELESCO MOTOR	OFF	Steering telescopic	Stop
	FR		Forward
	RR		Backward

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-117, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456495

1. CHECK TELESCOPIC MOTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect tilt & telescopic motor connector.
3. Turn the ignition switch ON.
4. Perform "Active test" ("TELESCO MOTOR") with CONSULT
5. Check voltage between tilt & telescopic motor harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
Connector	Terminal				
M49	1	Ground	TELESCOPIC MOTOR	OFF	0
				FR (forward)	0
	RR (backward)			Battery voltage	
	2			OFF	0
				FR (forward)	Battery voltage
				RR (backward)	0

Is the inspection result normal?

YES >> Replace telescopic motor. (Built in steering column assembly.)

NO >> GO TO 2.

2. CHECK TELESCOPIC MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit and tilt & telescopic motor connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic motor harness connector.

TELESCOPIC MOTOR

< DTC/CIRCUIT DIAGNOSIS >

Automatic drive positioner control unit		Tilt & telescopic motor		Continuity
Connector	Terminal	Connector	Terminal	
M52	36	M49	2	Existed
	44		1	

4. Check continuity between automatic drive positioner control unit harness connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M52	36		Not existed
	44		

Is the inspection result normal?

- YES >> Replace automatic drive positioner control unit. Refer to [ADP-222. "Removal and Installation"](#).
 NO >> Repair or replace harness or connector.

DOOR MIRROR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

DOOR MIRROR MOTOR

Description

INFOID:000000007456496

It makes mirror face operate from side to side and up and down with the electric power that AUTOMATIC DRIVE POSITIONER CONTROL UNIT supplies.

Component Function Check

INFOID:000000007456497

1. CHECK DOOR MIRROR MOTOR FUNCTION

Check the operation with "MIRROR MOTOR RH" and "MIRROR MOTOR LH" in "ACTIVE TEST" mode with CONSULT

Refer to [ADP-41, "CONSULT Function"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Refer to [ADP-119, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456498

1. CHECK DOOR MIRROR MOTOR INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between door mirror connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
Door mirror					
Connector	Terminal				
D3 (Driver side) D33 (Passenger side)	12	Ground	Door mirror remote control switch	UP	Battery voltage
				Other than above	0
	11			LEFT	Battery voltage
				Other than above	0
	10			DOWN / RIGHT	Battery voltage
				Other than above	0

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit connector and door mirror connector.

[Door mirror driver side]

Automatic drive positioner control unit		Door mirror (driver side)		Continuity
Connector	Terminal	Connector	Terminal	
M51	16	D3	10	Existed
	31		12	
	32		11	

[Door mirror passenger side]

Automatic drive positioner control unit		Door mirror (passenger side)		Continuity
Connector	Terminal	Connector	Terminal	
M51	14	D33	12	Existed
	15		11	
	30		10	

DOOR MIRROR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

4. Check continuity between automatic drive positioner control unit connector and ground.

[Door mirror driver side]

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	16		Not existed
	31		
	32		

[Door mirror passenger side]

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	14		Not existed
	15		
	30		

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit. Refer to [ADP-222, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

3.CHECK DOOR MIRROR MOTOR

Check door mirror motor.

Refer to [ADP-120, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace door mirror. Refer to [MIR-120, "DOOR MIRROR ASSEMBLY : Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007456499

1.CHECK DOOR MIRROR MOTOR-I

Check that door mirror motor does not trap foreign objects and does not have any damage.

Refer to [MIR-120, "Exploded View"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace door mirror. Refer to [MIR-120, "DOOR MIRROR ASSEMBLY : Removal and Installation"](#).

2.CHECK DOOR MIRROR MOTOR-II

1. Turn ignition switch OFF.
2. Disconnect door mirror connector.
3. Apply 12V to each power supply terminal of door mirror motor.

Connector	Door mirror		Operational direction
	(+)	(-)	
D3 (Driver side) D33 (Passenger side)	10	11	RIGHT
	11	10	LEFT
	12	10	UP
	10	12	DOWN

Is the inspection result normal?

YES >> INSPECTION END

DOOR MIRROR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace door mirror. Refer to [MIR-120. "DOOR MIRROR ASSEMBLY : Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

SEAT MEMORY INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

SEAT MEMORY INDICATOR

Description

INFOID:000000007456500

- Memory switch is equipped on the seat memory switch installed to the driver side door trim. The operation signal is inputted to the automatic drive positioner control unit when the memory switch is operated.
- The status of automatic drive positioner system can be checked according to the illuminating/flashing status.

Component Function Check

INFOID:000000007456501

1.CHECK FUNCTION

1. Turn ignition switch ON.
2. Select "MEMORY SW INDCTR" in "Active test" mode with CONSULT.
3. Check the memory indicator operation.

Test item		Description	
MEMORY SW INDCTR	OFF	Memory switch indicator	OFF
	ON-1		Indicator 1: ON
	ON-2		Indicator 2: ON

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-122, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007456502

1.CHECK MEMORY INDICATOR POWER SUPPLY

Check voltage between seat memory switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Seat memory switch			
Connector	Terminal	Ground	Battery voltage
D5	5		

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check the following.

- 10A fuse [No.10 located in fuse block (J/B)].
- Harness for open or short between memory indicator and fuse.

2.CHECK MEMORY INDICATOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit and seat memory switch connector.
3. Check continuity between automatic drive positioner control unit harness connector and seat memory switch harness connector.

Automatic drive positioner control unit		Seat memory switch		Continuity
Connector	Terminal	Connector	Terminal	
M51	12	D5	6	Existed
	13		7	

4. Check continuity between automatic drive positioner control unit harness connector and ground.

Automatic drive positioner control unit		Ground	Continuity
Connector	Terminal		
M51	12		Not existed
	13		

SEAT MEMORY INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connector.

3.CHECK MEMORY INDICATOR

Refer to [ADP-123. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace seat memory switch. Refer to [ADP-223. "Removal and Installation"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-42. "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007456503

1.CHECK SEAT MEMORY INDICATOR

1. Turn ignition switch OFF.
2. Disconnect seat memory switch connector.
3. Check continuity between seat memory switch terminals.

Seat memory switch		Continuity
Terminal		
(+)	(-)	
5	6	Existed
	7	

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace seat memory switch. Refer to [ADP-223. "Removal and Installation"](#).

ADP

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

DRIVER SEAT CONTROL UNIT

Reference Value

INFOID:000000007456504

VALUES ON THE DIAGNOSIS TOOL

CONSULT MONITOR ITEM

Monitor Item	Condition	Value/Status	
SET SW	Set switch	Push	ON
		Release	OFF
MEMORY SW1	Memory switch 1	Push	ON
		Release	OFF
MEMORY SW2	Memory switch 2	Push	ON
		Release	OFF
SLIDE SW-FR	Sliding switch (front)	Operate	ON
		Release	OFF
SLIDE SW-RR	Sliding switch (rear)	Operate	ON
		Release	OFF
RECLN SW-FR	Reclining switch (front)	Operate	ON
		Release	OFF
RECLN SW-RR	Reclining switch (rear)	Operate	ON
		Release	OFF
LIFT FR SW-UP	Lifting switch front (up)	Operate	ON
		Release	OFF
LIFT FR SW-DN	Lifting switch front (down)	Operate	ON
		Release	OFF
LIFT RR SW-UP	Lifting switch rear (up)	Operate	ON
		Release	OFF
LIFT RR SW-DN	Lifting switch rear (down)	Operate	ON
		Release	OFF
MIR CON SW-UP	Mirror switch	Up	ON
		Other than above	OFF
MIR CON SW-DN	Mirror switch	Down	ON
		Other than above	OFF
MIR CON SW-RH	Mirror switch	Right	ON
		Other than above	OFF
MIR CON SW-LH	Mirror switch	Left	ON
		Other than above	OFF
MIR CHNG SW-R	Changeover switch	Right	ON
		Other than above	OFF
MIR CHNG SW-L	Changeover switch	Left	ON
		Other than above	OFF
TILT SW-UP	Tilt switch	Up	ON
		Other than above	OFF
TILT SW-DOWN	Tilt switch	Down	ON
		Other than above	OFF


DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
TELESCO SW-FR	Telescopic switch	Forward	ON
		Other than above	OFF
TELESCO SW-RR	Tilt switch	Backward	ON
		Other than above	OFF
DETENT SW	AT selector lever	P position	OFF
		Other than above	ON
STARTER SW	Ignition position	Cranking	ON
		Other than above	OFF
SLIDE PULSE	Seat sliding	Forward	The numeral value decreases * ¹
		Backward	The numeral value increases * ¹
		Other than above	No change to numeral value * ¹
RECLN PULSE	Seat reclining	Forward	The numeral value decreases * ¹
		Backward	The numeral value increases * ¹
		Other than above	No change to numeral value * ¹
LIFT FR PULSE	Seat lifter (front)	Up	The numeral value decreases * ¹
		Down	The numeral value increases * ¹
		Other than above	No change to numeral value * ¹
LIFT RR PULSE	Seat lifter (rear)	Up	The numeral value decreases * ¹
		Down	The numeral value increases * ¹
		Other than above	No change to numeral value * ¹
MIR/SEN RH U-D	Door mirror (passenger side)	Change between 3.4 (close to peak) 0.6 (close to valley)	
MIR/SEN RH R-L	Door mirror (passenger side)	Change between 3.4 (close to left edge) 0.6 (close to right edge)	
MIR/SEN LH U-D	Door mirror (driver side)	Change between 3.4 (close to peak) 0.6 (close to valley)	
MIR/SEN LH R-L	Door mirror (driver side)	Change between 0.6 (close to left edge) 3.4 (close to right edge)	
TILT SEN	Tilt position	Change between 1.2 (close to top) 3.4 (close to bottom)	
TELESCO SEN	Telescopic position	Change between 3.4 (close to top) 0.8 (close to bottom)	

*¹: The value at the position attained when the battery is connected is regarded as 32768.

TERMINAL LAYOUT

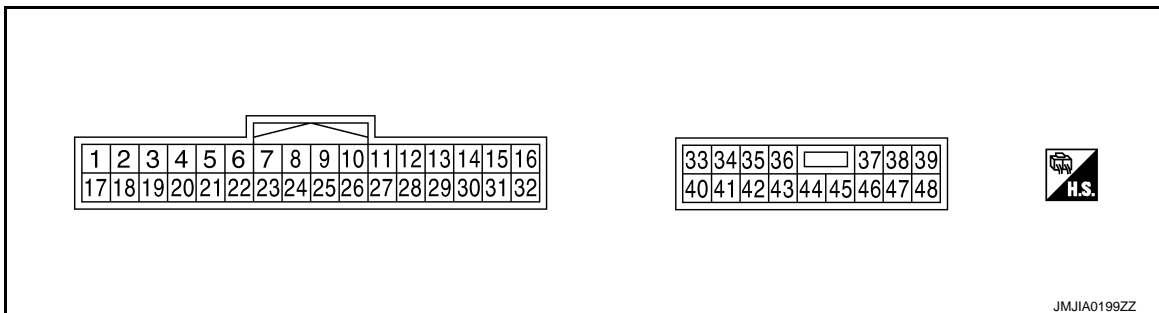

PHYSICAL VALUES




DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Terminal No.		Wire color	Description		Condition	Voltage (V) (Approx)	
+	-		Signal name	Input/Output			
1	Ground	L/W	UART communication (RX)	Input	Ignition switch ON		
3	—	R/Y	CAN-H	—	—	—	
9	Ground	W/G	Reclining sensor signal	Input	Seat reclining	Operate	
						Stop	0 or 5
10	Ground	P/B	Lifting sensor (rear) signal	Input	Seat lifting (rear)	Operate	
						Stop	0 or 5
11	Ground	BR	Sliding switch backward signal	Input	Sliding switch	Operate (backward)	0
						Release	Battery voltage
12	Ground	SB	Reclining switch backward signal	Input	Reclining switch	Operate (backward)	0
						Release	Battery voltage
13	Ground	LG/R	Lifting switch (front) down signal	Input	Lifting switch (front)	Operate (down)	0
						Release	Battery voltage
14	Ground	G/B	Lifting switch (rear) down signal	Input	Lifting switch (rear)	Operate (down)	0
						Release	Battery voltage
16	Ground	O	Sensor power supply	Output	—	5	
17	Ground	Y/R	UART communication (TX)	Output	Ignition switch ON		
19	—	V	CAN-L	—	—	—	

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

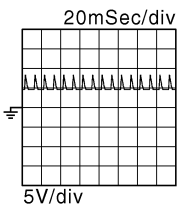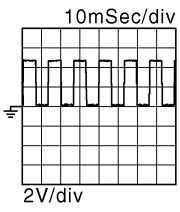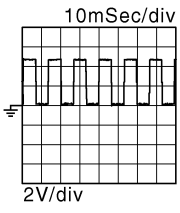Terminal No.		Wire color	Description		Condition	Voltage (V) (Approx)
+	-		Signal name	Input/ Output		
21	Ground	L/Y	Detention switch	Input	A/T selector lever	P position 0
						Except P position 
24	Ground	R	Sliding sensor signal	Input	Seat sliding	Operate 
						Stop 0 or 5
25	Ground	Y/B	Lifting sensor (front) signal	Input	Seat lifting (front)	Operate 
						Stop 0 or 5
26	Ground	Y	Sliding switch forward signal	Input	Sliding switch	Operate (forward) 0
						Release Battery voltage
27	Ground	R/G	Reclining switch forward signal	Input	Reclining switch	Operate (forward) 0
						Release Battery voltage
28	Ground	W/B	Lifting switch (front) up signal	Input	Seat lifting switch (front)	Operate (up) 0
						Release Battery voltage
29	Ground	P/L	Lifting switch (rear) up signal	Input	Seat lifting switch (rear)	Operate (up) 0
						Release Battery voltage
31	Ground	GR	Sensor ground	—	—	0
32	Ground	B/W	Ground (signal)	—	—	0
33	Ground	R	Power source (C/B)	Input	—	Battery voltage
35	Ground	W/R	Sliding motor forward output signal	Output	Seat sliding	Operate (forward) Battery voltage
						Release 0
36	Ground	G/Y	Reclining motor forward output signal	Output	Seat reclining	Operate (forward) Battery voltage
						Release 0

A
B
C
D
E
F
G
H
I

ADP

K
L
M
N
O
P

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


Terminal No.		Wire color	Description		Condition	Voltage (V) (Approx)	
+	-		Signal name	Input/ Output			
37	Ground	G/W	Lifting motor (front) down output signal	Output	Seat lifting (front)	Operate (down)	Battery voltage
						Stop	0
38	Ground	L/Y	Lifting motor (rear) up output signal	Output	Seat lifting (rear)	Operate (up)	Battery voltage
						Stop	0
39	Ground	R/B	Lifting motor (rear) down output signal	Output	Seat lifting (rear)	Operate (down)	Battery voltage
						Stop	0
40	Ground	R/W	Power source (Fuse)	Input	—	Battery voltage	
42	Ground	W/B	Sliding motor back- ward output signal	Output	Seat sliding	Operate (back- ward)	Battery voltage
						Stop	0
44	Ground	P	Reclining motor back- ward output signal	Output	Seat reclining	Operate (back- ward)	Battery voltage
						Stop	0
45	Ground	L/R	Lifting motor (front) up output signal	Output	Seat lifting (front)	Operate (up)	Battery voltage
						Stop	0
48	Ground	B	Ground (power)	—	—	0	

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - AUTOMATIC DRIVE POSITIONER CONTROL SYSTEM -

INFOID:000000007456505

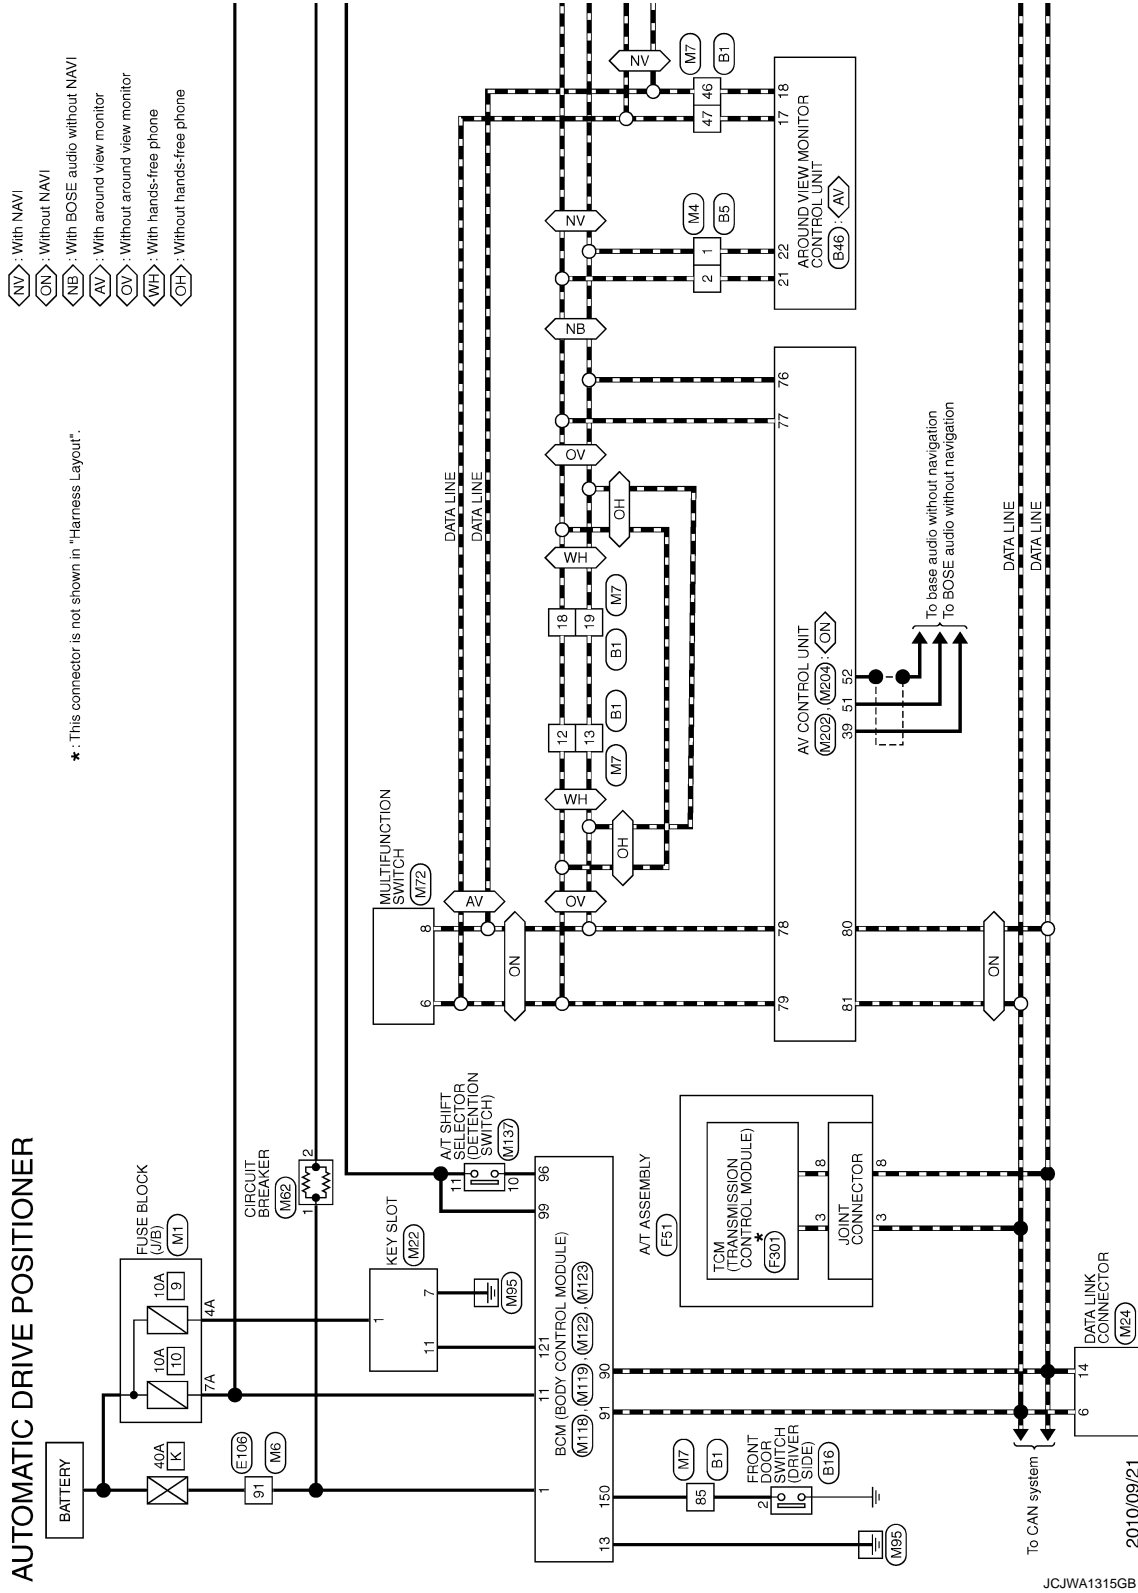


A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


(NV) : With NAVI

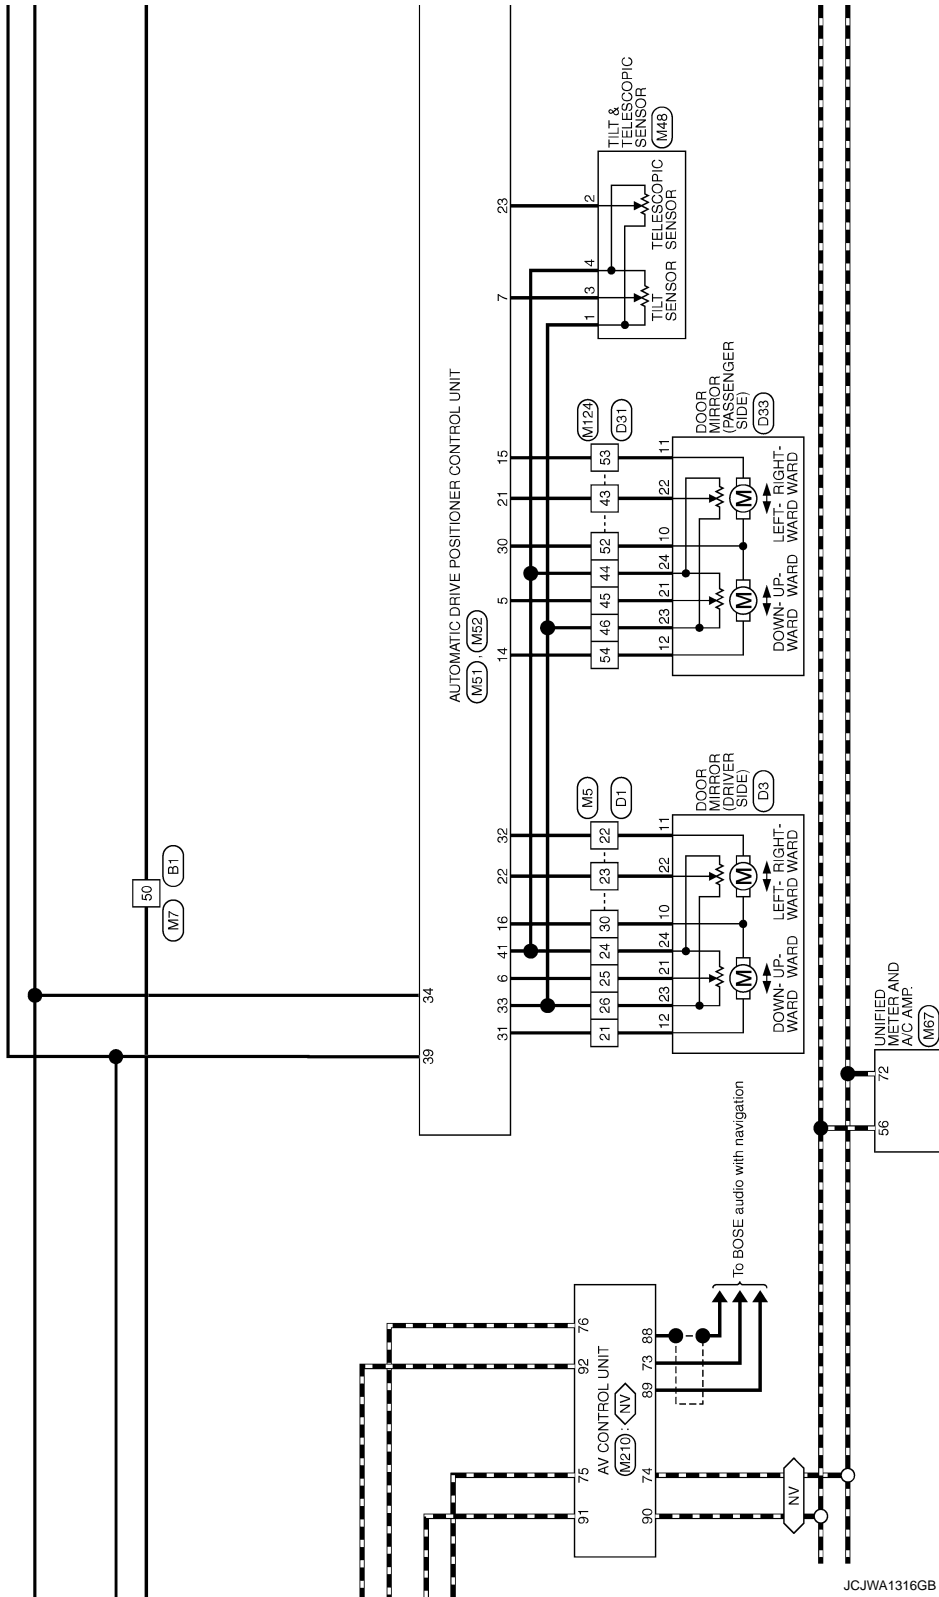

JCJWA1316GB

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

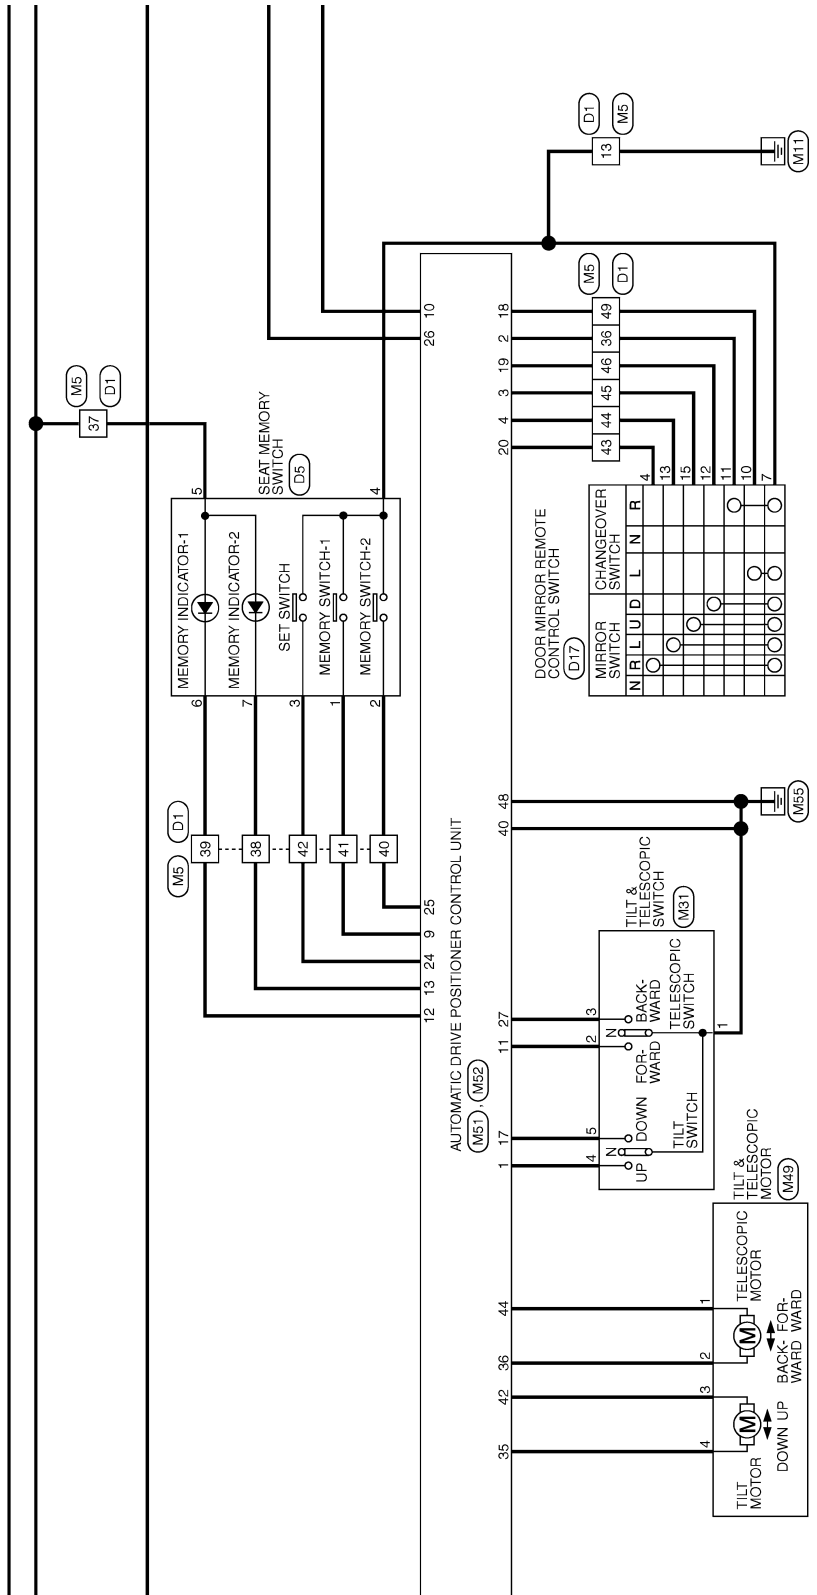


JCJWA1317GB

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

*: This connector is not shown in "Harness Layout".

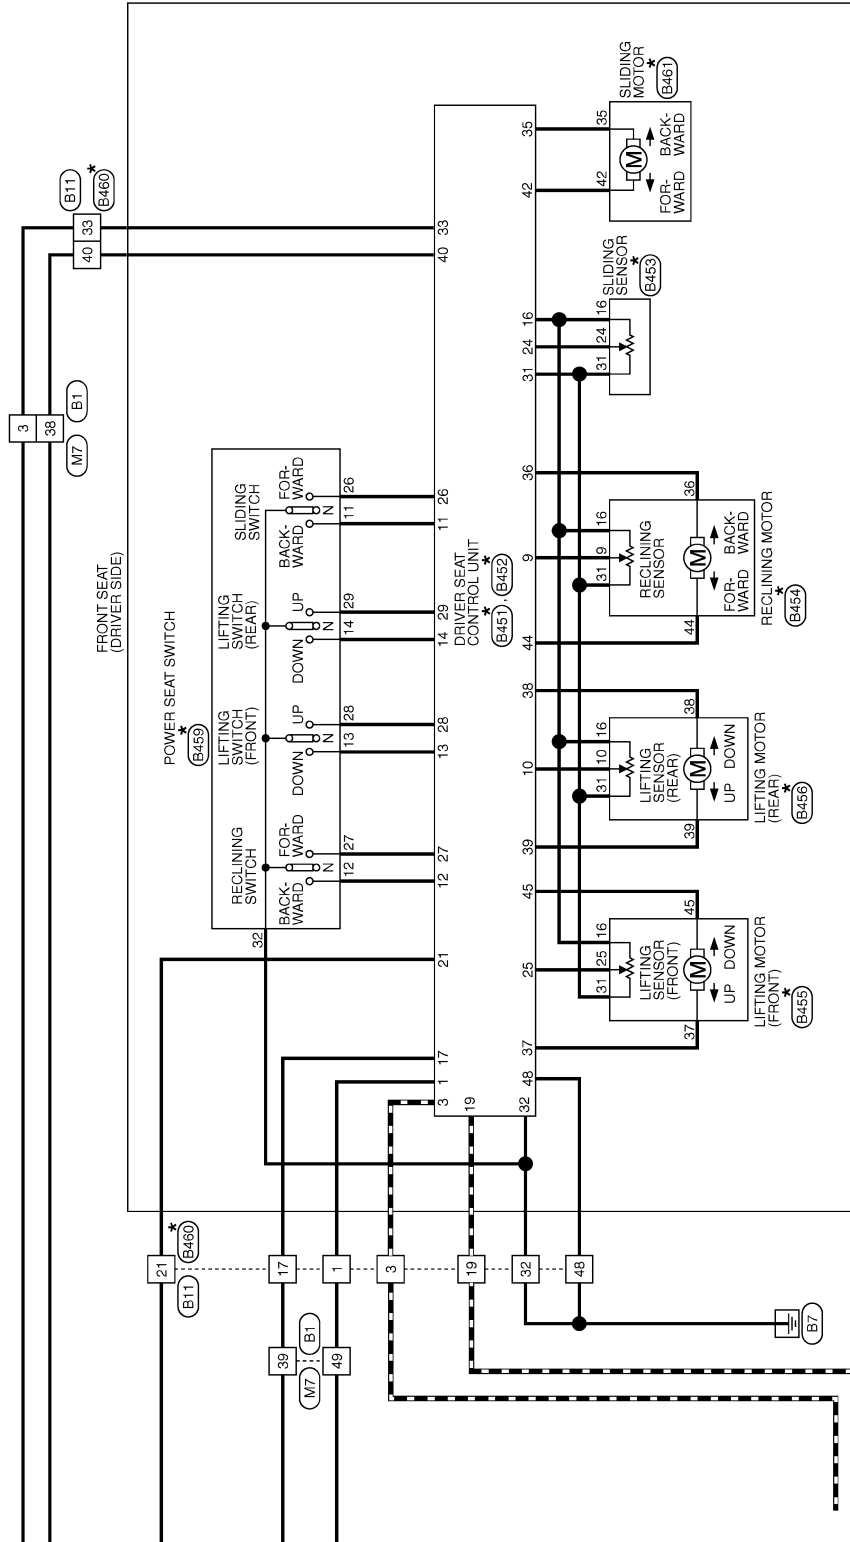


JCJWA1318GB

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER


Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80PW-6S16-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
3	R	-
5	G	-
6	SB	-
7	V	-
8	L	-
12	SB	-
13	LG	-
14	GR	-
17	W	-
18	SB	-
19	LG	-
20	BR	-
21	SHIELD	-
22	Y	-
24	P	-
27	B	-
28	R	-
29	W	-
30	SHIELD	-
31	SHIELD	-
32	W	-
33	SB	-
34	L	-
35	P	-
36	L	-
37	P	-
38	BR	-
39	Y	-
44	Y	-
45	GR	-
46	LG	-
47	SB	-
49	G	-
50	V	-


60	P	-
61	L	-
62	SHIELD	-
63	R	-
64	G	-
65	SHIELD	-
66	W	-
67	V	-
68	SB	-
69	SHIELD	-
70	W	-
73	SB	-
74	L	-
75	W	-
76	BR	-
77	R	-
78	P	-
79	GR	-
83	SG	-
85	V	-
86	LG	-
87	GR	-
88	R	-
89	B	-
90	SG	-
91	G	-
92	BR	-
93	G	-
94	SB	-
95	G	-
96	Y	-
98	W	-
99	GR	-

Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	TH32MW-AH

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	SB	-
3	Y	-
4	R	-
5	W	-
6	G	-
7	LG	-
8	SB	-
9	GR	-
15	GR	-
16	P	-
21	G	-
22	B	-
23	SHIELD	-
24	SG	-
25	BR	-
26	Y	-
27	W	-
28	R	-
29	L	-
30	SHIELD	-
31	Y	-

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Type	NS16FW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
3	L	-
17	Y	-
19	P	-
21	V	-
22	B	-
23	R	-
24	BR	-
25	GR	-
40	G	-
66	GR	-
67	Y	-

Connector No.	B15
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	A03FW

 

Terminal No.	Color Of Wire	Signal Name [Specification]
2	V	-

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

JRJWC9329GB

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

Connector No.	B46
Connector Name	ROUND VIEW MIRROR CONTROL UNIT
Connector Type	TH40PW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	Y	BATTERY
3	P	IGNITION SIGNAL
4	GR	ACC.
5	RG	ILLUMINATION SIGNAL
6	BR	VEHICLE SPEED SIGNAL (PULSE)
7	W	REAR VIEW MIRROR CONTROL SIGNAL
8	Y	CONTROL SIGNAL
9	V	AV COMM (L)
10	W	AV COMM (R)
11	LG	AV COMM (L)
12	GR	AV COMM (R)
13	LG	AUXILIARY INFRARED LED (+)
14	G	AUXILIARY INFRARED LED (-)
15	W	CAMERA IMAGE SIGNAL
16	SHIELD	CAMERA IMAGE SIGNAL GND
17	Y	CAMERA IMAGE SIGNAL
18	G	SHIELD
19	SHIELD	SHIELD
20	B	SIDE CAMERA RH GND
21	W	SIDE CAMERA RH COMM
22	R	SIDE CAMERA RH POWER SUPPLY
23	L	REAR CAMERA COMM
24	BR	REAR CAMERA POWER SUPPLY
25	SHIELD	SHIELD
26	R	REAR CAMERA IMAGE SIGNAL
27	Y	REAR CAMERA IMAGE SIGNAL
28	W	REAR CAMERA IMAGE SIGNAL
29	G	SHIELD
30	B	SHIELD
31	W	SHIELD
32	R	SHIELD
33	L	SHIELD
34	BR	SHIELD
35	SHIELD	SHIELD
36	R	SHIELD
37	Y	SHIELD
38	W	SHIELD
39	G	SHIELD
40	B	SHIELD

Connector No.	B451
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH32FW



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/W	RK
2	R/Y	CAN-H
3	W/G	PULSE (RECLINING)
4	P/B	PULSE (SLIDING)
5	BR	SLIDING SW (FORWARD)
6	GR	SLIDING SW (BACKWARD)
7	GR	RECLINING SW (FORWARD)
8	GR	RECLINING SW (BACKWARD)
9	G/B	FRONT LIFTING SW (UPWARD)
10	O	FRONT LIFTING SW (DOWNWARD)
11	V/R	TX
12	V	CAN-L
13	L/Y	P RANGE SW
14	R	PULSE (SLIDING)
15	Y/B	PULSE (FR LIFTING)
16	Y	SLIDING SW (FORWARD)
17	R/G	RECLINING SW (FORWARD)
18	W/B	FRONT LIFTING SW (UPWARD)
19	P/L	REAR LIFTING SW (UPWARD)
20	GR	SENSOR GND
21	B/W	GND (SIGNAL)

Connector No.	B452
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	NS16FW-CS



33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
33	R	BAT (C/B)
34	W/R	SLIDING MOTOR (FORWARD)
35	G/Y	RECLINING MOTOR (FORWARD)
36	G/W	FRONT LIFTING MOTOR (DOWNWARD)
37	L/Y	REAR LIFTING MOTOR (UPWARD)
38	W/B	REAR LIFTING MOTOR (BACKWARD)
39	W/B	SLIDING MOTOR (BACKWARD)
40	W/B	FRONT LIFTING MOTOR (UPWARD)
41	L/P	RECLINING MOTOR (FORWARD)
42	L/R	FRONT LIFTING MOTOR (UPWARD)
43	B	GND (POWER)

Connector No.	B453
Connector Name	SLIDING SENSOR
Connector Type	6098_0241



24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
24	O	
25	V/R	
26	GR	
27	G/W	
28	L/R	
29	L/R	
30	GR	
31	GR	
32	GR	

Connector No.	B454
Connector Name	RECLINING MOTOR
Connector Type	NS06FW-CS



36	37	38	39	40	41	42	43	44
----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
9	W/G	
16	O	
31	GR	
36	G/Y	
44	P	

Connector No.	B455
Connector Name	LIFTING MOTOR (FRONT)
Connector Type	NS06FW-CS



45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
16	O	
25	V/R	
31	GR	
37	G/W	
45	L/R	

JR.JWC9330GB

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

AUTOMATIC DRIVE POSITIONER

Connector No.	B455
Connector Name	LIFTING MOTOR (REAR)
Connector Type	NS06FBK-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
10	P/B	-
16	O	-
31	GR	-
38	L/Y	-
39	R/B	-

Connector No.	B459
Connector Name	POWER SEAT SWITCH
Connector Type	NS10PW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
11	BR	-
12	SR	-
13	LG/R	-
14	G/B	-
26	Y	-
27	R/G	-
28	W/B	-
29	P/L	-
32	B/W	-

Connector No.	B460
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/W	-
3	R/Y	-
17	Y/R	-
19	V	-
21	L/Y	-
32	B/W	-
33	R	-
34	R	-
48	Y/W	-
60	Y/R	-
66	B	-
67	L	-

Connector No.	B461
Connector Name	SLIDING MOTOR
Connector Type	6D98-0239



Terminal No.	Color Of Wire	Signal Name [Specification]
42	W/B	-

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	H40PW-CS15

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-
3	V	-
4	W	-
5	L	-
6	O	-
7	GR	-
8	Y	-
9	BR	-
10	BR	-
11	P	-
12	LG	-
13	B	-
14	Y	-
15	W	-
16	R	-
17	W	-
18	G	-
19	Y	-
20	Y	-
21	O	-
22	P	-
23	BR	-
24	V	-
25	GR	-
26	Y	-
27	B	-
28	SHIELD	-
29	LG	-
30	G	-
31	W	-
32	G	-
33	L	-
34	SR	-
35	R	-
38	LG	-

37	R	-
38	P	-
39	O	-
40	BR	-
41	L	-
42	GR	-
43	BR	- [With automatic drive positioner]
43	O	- [Without automatic drive positioner]
44	GR	- [With automatic drive positioner]
44	W	- [Without automatic drive positioner]
45	G	- [With automatic drive positioner]
45	Y	- [Without automatic drive positioner]
46	G	- [With automatic drive positioner]
46	V	- [Without automatic drive positioner]
49	GR	-
50	B	-
52	R	-
53	SR	-
54	O	-
55	Y	-

Connector No.	D3
Connector Name	DOOR MIRROR (DRIVER SIDE)
Connector Type	H122AW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
2	O	-
3	B	-
5	Y	-
6	R	-
7	W	-
10	G	-
11	P	-
12	O	-
14	LG	-
17	G	-
18	W	-
19	B	-
21	GR	-
22	GR	-

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

23	Y	-	-
24	V	-	-

Connector No.	D5
Connector Name	SEAT MEMORY SWITCH
Connector Type	A08FW




Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	BR	-
3	GR	-
4	BR	-
5	R	-
6	O	-
7	P	-

Connector No.	D17
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH
Connector Type	TK16FR



Terminal No.	Color Of Wire	Signal Name [Specification]
4	BR	-
7	B	-
8	B	-
9	R	-
10	GR	-
11	LG	-
12	G	-
13	G	-
15	Y	-

Connector No.	D31
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-C315

 

Terminal No.	Color Of Wire	Signal Name [Specification]
7	R	-
8	BR	-
9	V	-
10	P	-
11	LG	-
12	R	-
13	GR	-
14	R	-
15	BR	-
16	BR	-
17	R	-
18	R	-
19	Y	-
20	B	-
21	R	-
22	BR	-
23	G	-
24	V	-
25	P	-
26	W	-
27	S8	-
28	R	-
29	SHIELD	-
30	W	-
31	LG	-
32	BR	-
33	O	-
34	GR	-
35	G	-
43	Y	-
44	V	-
45	P	-
46	W	-
52	G	-
53	GR	-
54	O	-
55	L	-

Connector No.	D33
Connector Name	DOOR MIRROR (PASSENGER SIDE)
Connector Type	TH24MW-RH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	W	-
4	LG	SIDE CAMERA RH COMM
5	B	SIDE CAMERA RH IMAGE SIGNAL
6	R	SIDE CAMERA RH POWER SUPPLY
7	L	-
10	G	-
11	GR	-
12	BR	-
17	G	SIDE CAMERA RH IMAGE END
18	R	SIDE CAMERA RH END
19	B	-
21	P	-
22	Y	-
23	W	-
24	V	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-C316-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	R	-
3	R	-
4	GR	-

5	GR	-
8	Y	-
9	BR	-
10	B6	-
11	S8	-
12	B6	-
13	L	-
14	R	-
15	P	-
16	V	-
17	S8	-
18	V	-
20	B6	-
21	L	-
22	V	-
23	G	-
24	P	-
25	Y	-
26	W	-
27	Y	-
28	W	-
29	B6	-
30	B6	-
31	S8	-
32	W	-
33	B	-
34	R	-
35	G	-
36	SHIELD	-
37	V	-
38	BR	-
39	B6	-
41	W	-
42	G	-
43	BR	-
45	W	-
49	L	-
50	P	-
51	L	-
54	B6	-
57	BR	-
59	W	-
60	LG	-
61	G	-
62	S8	-
63	W	-
64	B	-
65	G	-
69	R	-
84	SHIELD	-
88	-	-
89	LG	-

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

70	W	-	-	-	-
71	R	-	-	-	-
72	Y	-	-	-	-
73	B	-	-	-	-
74	BR	-	[With LCC]	-	-
75	L	-	[Without LCC]	-	-
76	G	-	[With LCC]	-	-
77	W	-	[Without LCC]	-	-
78	W	-	[With LCC]	-	-
79	Y	-	[Without LCC]	-	-
80	P	-	[With LCC]	-	-
81	R	-	[Without LCC]	-	-
82	BR	-	[With LCC]	-	-
83	L	-	[Without LCC]	-	-
84	L	-	[With LCC]	-	-
85	Y	-	[Without LCC]	-	-
86	Y	-	[With LCC]	-	-
87	P	-	[Without LCC]	-	-
88	GR	-	-	-	-
89	GR	-	-	-	-
90	SHIELD	-	-	-	-
91	W	-	-	-	-
92	Y	-	-	-	-
93	V	-	-	-	-
94	LG	-	-	-	-
95	BG	-	-	-	-
96	P	-	-	-	-
97	R	-	-	-	-
98	SHIELD	-	-	-	-
99	L	-	-	-	-
100	P	-	-	-	-

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	BK10FG-D67




Terminal No.	Color	Wire	Signal Name [Specification]
1	Y	BR	-
2	BR	L	-
3	L	V	-
4	V	B	-
5	B	Y	-
6	Y	R	-
7	R	W	-
8	W	GR	-
9	GR	B	-
10	B	-	-

Connector No.	F401
Connector Name	TCH (TRANSMISSION CONTROL MODULE)
Connector Type	SP10FG




Terminal No.	Color	Wire	Signal Name [Specification]
1	-	-	VIGN
2	-	-	BATT
3	-	-	CAN-H
4	-	-	K LINE
5	-	-	GROUND
6	-	-	VIGN
7	-	-	RES LAMP-RLV
8	-	-	CAN-L
9	-	-	START RELY
10	-	-	GROUND

Connector No.	IM1
Connector Name	FUSE BLOCK (V/B)
Connector Type	NS06FW-W2

 

Terminal No.	Color	Wire	Signal Name [Specification]
1A	GR	-	-
2A	G	-	-
3A	L	-	-
4A	P	-	-
5A	Y	-	-
6A	R	-	-
7A	R	-	-
8A	L	-	-


Connector No.	IM1
Connector Name	WIRE TO WIRE
Connector Type	HK32FW-WH

 

Terminal No.	Color	Wire	Signal Name [Specification]
1	LG	-	-
2	SR	-	-
3	Y	-	-
4	R	-	-
5	W	-	-
6	G	-	-
7	LG	-	-
8	B	-	-
14	V	-	-
15	V	-	-
16	W	-	-
18	W	-	-
21	G	-	-

22	B	-	-
23	SHIELD	-	-
24	R	-	-
25	R	-	-
26	Y	-	-
27	G	-	-
28	B	-	-
29	W	-	-
30	SHIELD	-	-
31	Y	-	-

Connector No.	MS
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15

 

Terminal No.	Color	Wire	Signal Name [Specification]
1	R	-	-
2	B	-	-
3	BR	-	-
4	P	-	-
5	L	-	-
6	R	-	-
7	R	-	-
8	W	-	-
9	G	-	-
10	L	-	-
11	G	-	-
12	V	-	-
13	B	-	-
14	Y	-	-
15	W	-	-
16	R	-	-
17	B	-	-
18	G	-	-
19	Y	-	-
20	L	-	-
21	LG	-	-
22	L	-	-
23	G	-	-
24	Y	-	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

ADP


DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

25	GR	-	-	-	-
26	R	-	-	-	-
27	W	-	-	-	-
28	SHIELD	-	-	-	-
29	Y	-	-	-	-
30	Y	-	-	-	-
31	R	-	-	-	-
32	BR	-	-	-	-
33	SR	-	-	-	-
34	Y	-	-	-	-
35	P	-	-	-	-
36	LG	-	-	-	-
37	BR	-	-	-	-
38	P	-	-	-	-
39	BG	-	-	-	-
40	SR	-	-	-	-
41	L	-	-	-	-
42	R	-	-	-	-
43	BR	-	-	-	-
44	G	-	-	-	-
45	SR	-	-	-	-
46	V	-	-	-	-
49	P	-	-	-	-
50	B	-	-	-	-
52	R	-	-	-	-
53	V	-	-	-	-
54	LG	-	-	-	-
55	SR	-	-	-	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	R	-
3	SHIELD	-
5	G	-

71	LG	-	-	-	-
72	Y	-	-	-	-
73	SR	-	-	-	-
74	BR	-	-	-	-
74	L	-	-	-	-
75	G	-	-	-	-
76	GR	-	-	-	-
76	W	-	-	-	-
77	P	-	-	-	-
77	R	-	-	-	-
78	L	-	-	-	-
78	R	-	-	-	-
79	W	-	-	-	-
79	Y	-	-	-	-
80	SR	-	-	-	-
81	SR	-	-	-	-
82	SR	-	-	-	-
83	V	-	-	-	-
84	G	-	-	-	-
85	B	-	-	-	-
86	W	-	-	-	-
87	W	-	-	-	-
89	GR	-	-	-	-
90	SHIELD	-	-	-	-
91	W	-	-	-	-
92	Y	-	-	-	-
93	BR	-	-	-	-
94	P	-	-	-	-
95	GR	-	-	-	-
96	W	-	-	-	-
97	L	-	-	-	-
98	SHIELD	-	-	-	-
99	V	-	-	-	-
100	SR	-	-	-	-

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
3	SR	- [With automatic drive positioner]
3	W	- [Without automatic drive positioner]
5	G	-
6	BG	-
7	W	-
8	W	-
9	B	-
10	SR	-
11	SR	-
12	Y	-
13	G	-
14	Y	-
15	G	-
17	W	-
18	SR	-
19	LG	-
20	BR	-
21	SHIELD	-
22	Y	-
24	V	-
27	B	-
28	W	-
29	R	-
30	SHIELD	-
31	L	-
32	P	-
33	SR	-
34	L	-
35	P	-
36	L	-
37	P	-
38	BR	-
39	Y	-
44	L	-
45	GR	-
46	LG	-
48	SR	-
49	R	-
50	R	-

JRJWC9334GB


DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER


Terminal No.	Color	Wire	Signal Name [Specification]
60	P	-	-
61	L	-	-
62	SHIELD	-	-
63	R	-	-
64	G	-	-
65	SHIELD	-	-
66	S8	-	-
67	V	-	-
68	LG	-	-
69	SHIELD	-	-
70	W	-	-
73	G	-	-
74	R	-	-
75	W	-	-
76	W	-	-
77	B	-	-
78	P	-	-
79	GR	-	-
83	BG	-	-
85	LG	-	-
86	R	-	-
88	W	-	-
89	BR	-	-
90	BG	-	-
91	G	-	-
92	V	-	-
93	BR	-	-
94	V	-	-
95	G	-	-
96	Y	-	-
98	W	-	-
99	R	-	-

Connector No.	M22
Connector Name	KEY SLOT
Connector Type	TH12FW-NH

 

Terminal No.	Color	Wire	Signal Name [Specification]
1	R	BAT	BAT
2	GR	CLOCK	CLOCK
3	W	DATA	DATA
5	Y	ILL BAT	ILL BAT
6	LG	ILL	ILL
7	B	GROUND	GROUND
11	BR	KEY SWITCH SIGNAL	KEY SWITCH SIGNAL

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 

Terminal No.	Color	Wire	Signal Name [Specification]
3	LG	-	-
4	B	-	-
5	B	-	-
6	L	-	-
7	V	-	-
8	G	-	-
11	S8	-	-
14	P	-	-
15	Y	-	-

Connector No.	M31
Connector Name	TILT & TELESCOPIC SWITCH
Connector Type	TK06FGY



Terminal No.	Color	Wire	Signal Name [Specification]
1	B	-	-
2	GR	-	-
3	G	-	-
4	Y	-	-
5	W	-	-

Connector No.	M38
Connector Name	TILT & TELESCOPIC SENSOR
Connector Type	TK04FW



Terminal No.	Color	Wire	Signal Name [Specification]
1	W	-	-
2	P	-	-
3	BG	-	-
4	Y	-	-

Connector No.	M49
Connector Name	TILT & TELESCOPIC MOTOR
Connector Type	NS04FW-CS



Terminal No.	Color	Wire	Signal Name [Specification]
1	G	-	-
2	GR	-	-
3	BG	-	-
4	L	-	-

Connector No.	M51
Connector Name	AUTOMATIC DRIVE POSITIONER CONTROL UNIT
Connector Type	TH12FW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
1	Y	-	TILT SW (UPWARD)
2	LG	-	MIRROR SELECT SW (RH)
3	G	-	MIRROR SW (UPWARD)
4	V	-	MIRROR SW (LEFTWARD)
5	R	-	MIRROR SENSOR (RH VERTICAL)
6	GR	-	MIRROR SENSOR (LH VERTICAL)
7	BG	-	TILT SENSOR
9	L	-	ADDRESS
10	V	-	TX (UART)
11	GR	-	TELESCOPIC SW (FRONTWARD)
12	BG	-	IND1
13	BG	-	IND2
14	W	-	MIRROR MOTOR (RH VERTICAL)
15	S	-	MIRROR MOTOR (RH HORIZONTAL)
16	W	-	MIRROR MOTOR (LH COMPAND)
17	W	-	TILT SW (DOWNWARD)

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP


DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

Terminal No.	Color Of Wire	Signal Name [Specification]
18	P	MIRROR SELECT SW (LH)
19	SB	MIRROR SW (DOWNWARD)
20	BR	MIRROR SW (RIGHTWARD)
21	L	MIRROR SENSOR (RH HORIZONTAL)
22	G	MIRROR SENSOR (LH HORIZONTAL)
23	P	TELESCOPIC SENSOR
24	R	SET SW
25	SB	ADDRESS
26	Y	RX (UART)
27	G	TELESCOPIC SW (BACKWARD)
30	R	MIRROR MOTOR (RH COMMON)
31	LG	MIRROR MOTOR (LH VERTICAL)
32	L	MIRROR MOTOR (LH HORIZONTAL)

Connector No.	Color Of Wire	Signal Name [Specification]
M62		AUTOMATIC DRIVE POSITIONER CONTROL UNIT
NS16FW-C5		

 


Terminal No.	Color Of Wire	Signal Name [Specification]
33	R	POWER SUPPLY (SENSOR)
34	R	BAT FUSE
35	L	TILT MOTOR (UPWARD)
36	GR	TELESCOPIC MOTOR (FORWARD)
39	SB	BAT (C/B)
40	B	GND (SIGNAL)
41	Y	GND (SENSOR)
42	BG	TILT MOTOR (DOWNWARD)
44	G	TELESCOPIC MOTOR (BACKWARD)
48	B	GND (POWER)

Connector No.	Color Of Wire	Signal Name [Specification]
M62		ECU SIGNAL
	L	A/C LAM SIGNAL
	R	EACH DOOR MOTOR POWER SUPPLY
	B	GROUND
	P	CABL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	
2	SB	

Connector No.	Color Of Wire	Signal Name [Specification]
M67		UNIFIED METER AND A/C AMP.
TH22FW-NH		

 

Terminal No.	Color Of Wire	Signal Name [Specification]
41	V	ACC POWER SUPPLY
42	Y	FUEL LEVEL SENSOR SIGNAL
43	R	INTAKE SENSOR SIGNAL
44	LG	IN-VEHICLE SENSOR SIGNAL
45	P	AMBIENT SENSOR SIGNAL
46	BG	SUNLOAD SENSOR SIGNAL
47	G	PHANOT GAS / OUTSIDE COLOR DETECTING SENSOR SIGNAL
53	G	IGNITION POWER SUPPLY
54	Y	BATTERY POWER SUPPLY
55	B	GROUND
56	L	CAN-H
57	W	BRAKE FLUID LEVEL SWITCH SIGNAL
58	BR	FUEL LEVEL SENSOR GROUND
59	GR	INTAKE SENSOR GROUND
60	SB	IN-VEHICLE SENSOR GROUND
61	SB	AMBIENT SENSOR GROUND
62	SB	SUNLOAD SENSOR GROUND
63	R	SUNLOAD SENSOR GROUND

Connector No.	Color Of Wire	Signal Name [Specification]
65	BG	ECU SIGNAL
69	L	A/C LAM SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	B	GROUND
72	P	CABL



Connector No.	Color Of Wire	Signal Name [Specification]
M72		MULTIFUNCTION SWITCH
TH16FW-NH		


Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	V	ACC
3	V	ILL
4	R	ILL CONT
5	Y	ILL CONT
6	SB	AV COMM (H)
8	LG	AV COMM (L)
9	B	SW GND
14	Y	DISK EJECT SIGNAL
16	G	HAZARD ON

Connector No.	Color Of Wire	Signal Name [Specification]
M118		BCM (BODY CONTROL MODULE)
MO3FE-LC		




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	W	POWER WINDOW POWER SUPPLY (BST)
3	Y	POWER WINDOW POWER SUPPLY (RBP)

Connector No.	Color Of Wire	Signal Name [Specification]
M119		BCM (BODY CONTROL MODULE)
NS16FW-C5		

 

Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	L	PASSENGER DOOR UNLOCK OUTPUT
7	Y	STEP LAMP CONT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	BR	REAR DOOR UNLOCK OUTPUT
11	S	GROUND
13	W	GROUND
14	W	PUSH-BUTTON IGNITION SW ILL GND
15	Y	ACC I/D
17	W	TURN SIGNAL RH (FRONT)
18	BG	TURN SIGNAL LH (FRONT)
19	V	INT ROOM LAMP CONT

Connector No.	Color Of Wire	Signal Name [Specification]
M122		BCM (BODY CONTROL MODULE)
TH40FB-NH		

 

Terminal No.	Color Of Wire	Signal Name [Specification]
72	R	ROOM ANT2-
73	G	ROOM ANT2+
74	SB	PASSENGER DOOR ANT-
75	GR	PASSENGER DOOR ANT+
76	SB	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT1-

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

79	BR	ROOM ANTI+
80	GR	MASS ANT AMP.
81	W	MASS ANT AMP.
82	R	IGN RELAY (F/B) CONT
83	Y	KEYLESS ENTRY RECEIVER COMMM
87	BR	COMB SW INPUT 5
88	V	COMB SW INPUT 3
90	P	CAN-H
91	L	KEY SLOT ILL CONT
92	LG	ON IND
93	V	PUDDLE LAMP CONT
94	Y	ACC RELAY CONT
95	BG	ACC RELAY CONT
96	GR	A/T SHIFT SELECTOR POWER SUPPLY
99	R	SHIFT P
100	G	PASSENGER DOOR REQUEST SW
101	SB	DRIVER DOOR REQUEST SW
102	BG	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
107	LG	COMB SW INPUT 1
108	R	COMB SW INPUT 4
109	R	COMB SW INPUT 2
110	G	HAZARD SW

Connector No.	MT123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGG-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30

Terminal No.	Color Of Wire	Signal Name [Specification]
113	P	OPTICAL SENSOR
116	SB	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	BR	KEY SLOT SW
123	W	IGN F/B
124	LG	PASSENGER DOOR SW
132	BR	POWER WINDOW SW COMMM
133	W	PUSH-BUTTON IGNITION SW ILL POWER
134	GR	LOCK IND
137	BS	RECEIVER SENSOR GND

138	Y	RECEIVER SENSOR POWER SUPPLY
139	L	TIRE PRESSURE RECEIVER COMMM
140	GR	SHIFT N/P
141	G	SECURITY NO LAMP CONT
142	BG	COMB SW OUTPUT 5
143	P	COMB SW OUTPUT 1
144	G	COMB SW OUTPUT 2
145	L	COMB SW OUTPUT 3
146	SR	COMB SW OUTPUT 4
150	LG	DRIVER DOOR SW
151	G	REAR WINDOW DEFROGGER RELAY CONT

Connector No.	MT124
Connector Name	WIRE TO WIRE
Connector Type	TH40MMV-CS15



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30

Terminal No.	Color Of Wire	Signal Name [Specification]
7	Y	-
8	LG	-
9	Y	-
12	L	-
13	V	-
14	B	-
15	W	-
16	BR	-
17	B	-
18	R	-
19	B	-
20	W	-
20	Y	- [Without BOSE audio]
21	G	- [With BOSE audio]
21	L	- [Without BOSE audio]
22	SB	-
23	GR	-
24	G	-
25	Y	-
26	R	-
29	SHIELD	-
30	W	-
31	LG	-

32	G	-
33	BR	-
34	V	-
35	G	-
43	L	-
44	Y	-
45	R	-
46	W	-
52	R	-
53	G	-
54	W	-
55	BG	-

Connector No.	MT137
Connector Name	A/T SHIFT SELECTOR
Connector Type	TH12FW-NH



1	2	3	4	5	
6	7	8	9	10	11

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	L	-
4	B	-
5	G	-
7	R	-
8	SR	-
9	B	-
10	GR	-
11	R	-

Connector No.	M202
Connector Name	AV CONTROL UNIT
Connector Type	TH24FW-NH



36	37	38	39	40	41	42	43	44	45	46	47
48	49	50	51	52	53	54	55	56	57	58	

Terminal No.	Color Of Wire	Signal Name [Specification]
36	BG	SIGNAL VCC
37	LG	SIGNAL GND
38	R	HP
39	BR	COMM (DISP->CONT)
40	B	REG AREA (VS) SIGNAL
41	SHIELD	SHIELD
42	W	REG SYNC
43	G	REG (C-RED) SIGNAL
44	L	REG (S-BLUE) SIGNAL
45	P	REG (S-BLUE) SIGNAL
46	V	COMPOSITE IMAGE SIGNAL GND
47	SR	COMPOSITE IMAGE SIGNAL
48	Y	INVERTER VCC
49	BR	INVERTER GND
50	G	VP
51	Y	COMM (CONT->DISP)
52	SHIELD	SHIELD
57	SHIELD	SHIELD
58	SHIELD	SHIELD

Connector No.	M204
Connector Name	AV CONTROL UNIT
Connector Type	TH2FW-NH



70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

DRIVER SEAT CONTROL UNIT


< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

Terminal No.	Color	Wire	Signal Name [Specification]
76	LG	LG	AV COMM (L)
77	SB	SB	AV COMM (H)
78	LG	LG	AV COMM (L)
79	SB	SB	AV COMM (H)
80	P	P	CAN-L
81	L	L	CAN-H
82	B	B	SW GND
86			SHIELD
87	L	L	TEL VOICE SIGNAL (+)
88	P	P	TEL VOICE SIGNAL (-)
92	R	R	VEHICLE SPEED SIGNAL (8-PULSE)
93	V	V	PARKING BRAKE SIGNAL
94	BB	BB	REVERSE SIGNAL
95	G	G	IGNITION SIGNAL
96	Y	Y	DISK EJECT SIGNAL

Terminal No.	Color	Wire	Signal Name [Specification]
90	L	L	CAN-H
91	SB	SB	AV COMM (H)
92	SB	SB	AV COMM (H)

Connector No.	M210
Connector Name	AV CONTROL UNIT
Connector Type	TH23F14-44H

 

Terminal No.	Color	Wire	Signal Name [Specification]
65	V	V	PARKING BRAKE SIGNAL
67	G	G	COMPOSITE IMAGE SIGNAL GND
68	R	R	COMPOSITE IMAGE SIGNAL
71	SHIELD		MICROPHONE SHIELD
72	R	R	MICROPHONE VCC
73	R	R	COMM (CONT->DISP)
74	P	P	CAN-L
75	LG	LG	AV COMM (L)
76	LG	LG	AV COMM (L)
79	R	R	ILLUMINATION
80	G	G	IGNITION SIGNAL
81	BB	BB	REVERSE SIGNAL
82	R	R	VEHICLE SPEED SIGNAL (8-PULSE)
83	SHIELD		SHIELD
84	SHIELD		MICROPHONE SIGNAL
85	SHIELD		SHIELD
89	G	G	COMM (DISP->CONT)

JRJWC9338GB

INFOID:000000007456506

Fail Safe

The fail-safe mode may be activated if the following symptoms are observed.

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Operating in fail-safe mode	Malfunction Item	Related DTC	Diagnosis
Only manual functions operate normally.	CAN communication	U1000	ADP-44
	Tilt sensor	B2118	ADP-49
	Telescopic sensor	B2119	ADP-52
	Detention switch	B2126	ADP-55
Only manual functions, except door mirror, operate normally.	UART communication	B2128	ADP-57
Only manual functions, except seat sliding, operate normally.	Seat sliding output	B2112	ADP-45
Only manual functions, except seat reclining, operate normally.	Seat reclining output	B2113	ADP-47

DTC Index

INFOID:000000007456507

CONSULT display	Timing*1		Item	Reference page
	Current malfunction	Previous malfunction		
CAN COMM CIRCUIT [U1000]	0	1-39	CAN communication	ADP-44
SEAT SLIDE [B2112]	0	1-39	Seat slide motor output	ADP-45
SEAT RECLINING [B2113]	0	1-39	Seat reclining motor output	ADP-47
TILT SENSOR [B2118]	0	1-39	Tilt sensor input	ADP-49
TELESCO SENSOR [B2119]	0	1-39	Telescopic sensor input	ADP-52
DETENT SW [B2126]	0	1-39	Detention switch condition	ADP-55
UART COMM [B2128]	0	1-39	UART communication	ADP-57

*1:

- 0: Current malfunction is present
- 1-39: Displayed if any previous malfunction is present when current condition is normal. The numeral value increases by one at each IGN ON to OFF cycle from 1 to 39. The counter remains at 39 even if the number of cycles exceeds it. However, the counter is reset to 1 if any malfunction is detected again, the normal operation is resumed and the ignition switch is turned from OFF to ON.

AUTOMATIC DRIVE POSITIONER CONTROL UNIT


< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

Reference Value

INFOID:000000007456508

TERMINAL LAYOUT

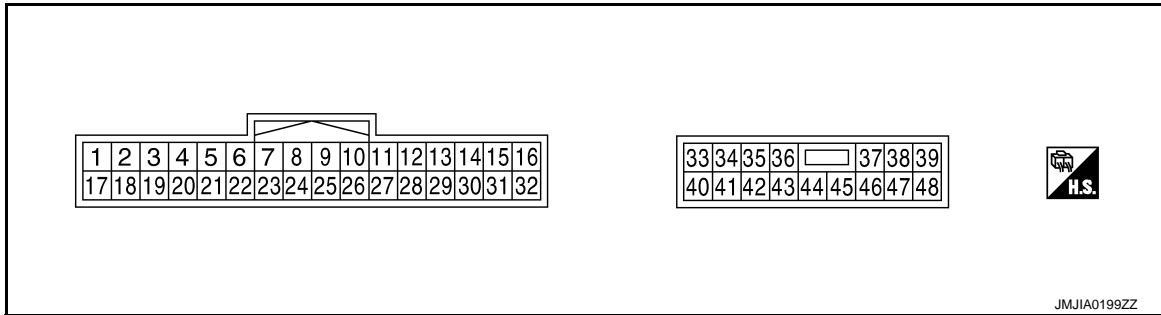

PHYSICAL VALUES

Terminal No.		Wire color	Description		Condition	Voltage (V) (Approx.)
+	-		Signal name	Input/ Output		
1	Ground	Y	Tilt switch up signal	Input	Tilt switch	Operate (up) 0
					Other than above	5
2	Ground	LG	Changeover switch RH signal	Input	Changeover switch position	RH 0
					Neutral or LH	5
3	Ground	G	Mirror switch up signal	Input	Mirror switch	Operated (up) 0
					Other than above	5
4	Ground	V	Mirror switch left signal	Input	Mirror switch	Operated (left) 0
					Other than above	5
5	Ground	R	Door mirror sensor (RH) up/down signal	Input	Door mirror RH position	Change between 3.4 (close to peak) 0.6 (close to valley)
6	Ground	GR	Door mirror sensor (LH) up/down signal	Input	Door mirror LH position	Change between 3.4 (close to peak) 0.6 (close to valley)
7	Ground	O	Tilt sensor signal	Input	Tilt position	Change between 1.2 (close to top) 3.4 (close to bottom)
9	Ground	L	Memory switch 1 signal	Input	Memory switch 1	Push 0
						Other than above 5
10	Ground	V	UART communication (TX)	Output	Ignition switch ON	

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Terminal No.		Wire color	Description		Condition	Voltage (V) (Approx.)	
+	-		Signal name	Input/ Output			
11	Ground	GR	Telescopic switch forward signal	Input	Telescopic switch	Operate (forward)	0
						Other than above	5
12	Ground	O	Memory indicator 1 signal	Output	Memory indicator 1	Illuminate	0
						Other than above	Battery voltage
13	Ground	P	Memory indicator 2 signal	Output	Memory indicator 2	Illuminate	0
						Other than above	Battery voltage
14	Ground	W	Door mirror motor (RH) up output signal	Output	Door mirror RH	Operate (up)	Battery voltage
						Other than above	0
15	Ground	G	Door mirror motor (RH) left output signal	Output	Door mirror RH	Operate (left)	Battery voltage
						Other than above	0
16	Ground	Y	Door mirror motor (LH) down output signal	Output	Door mirror (LH)	Operate (down)	Battery voltage
						Other than above	0
			Door mirror motor (LH) right output signal			Operate (right)	Battery voltage
						Other than above	0
17	Ground	W	Tilt switch down signal	Input	Tilt switch	Operate (down)	0
						Other than above	5
18	Ground	P	Changeover switch LH signal	Input	Changeover switch position	LH	0
						Neutral or RH	5
19	Ground	SB	Mirror switch down signal	Input	Mirror switch	Operate (down)	0
						Other than above	5
20	Ground	BR	Mirror switch right signal	Input	Mirror switch	Operate (right)	0
						Other than above	5
21	Ground	L	Door mirror sensor (RH) left/right signal	Input	Door mirror RH position	Change between 3.4 (close to left edge) 0.6 (close to right edge)	
22	Ground	G	Door mirror sensor (LH) left/right signal	Input	Door mirror LH position	Change between 0.6 (close to left edge) 3.4 (close to right edge)	
23	Ground	P	Telescopic sensor signal	Input	Telescopic position	Change between 0.8 (close to top) 3.4 (close to bottom)	

A
B
C
D
E
F
G
H
I
ADP

ADP

K
L
M
N
O
P

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Terminal No.		Wire color	Description		Condition		Voltage (V) (Approx.)
+	-		Signal name	Input/ Output			
24	Ground	R	Set switch signal	Input	Set switch	Push	0
						Other than above	5
25	Ground	SB	Memory switch 2 signal	Input	Memory switch 2	Push	0
						Other than above	5
26	Ground	Y	UART communication (RX)	Input	Ignition switch ON		
27	Ground	G	Telescopic switch backward signal	Input	Telescopic switch	Operate (backward)	0
						Other than above	5
30	Ground	R	Door mirror motor (RH) down output signal	Output	Door mirror (RH)	Operate (down)	Battery voltage
						Other than above	0
			Door mirror motor (RH) right output signal			Operate (right)	Battery voltage
						Other than above	0
31	Ground	LG	Door mirror motor (LH) up output signal	Output	Door mirror (LH)	Operate (up)	Battery voltage
						Other than above	0
32	Ground	L	Door mirror motor (LH) left output signal	Output	Door mirror (LH)	Operate (left)	Battery voltage
						Other than above	0
33	Ground	R	Sensor power supply	Input	—	5	
34	Ground	R	Power source (Fuse)	Input	—	Battery voltage	
35	Ground	L	Tilt motor up output signal	Output	Steering tilt	Operate (up)	Battery voltage
						Other than above	0
36	Ground	GR	Telescopic motor forward output signal	Output	Steering telescopic	Operate (forward)	Battery voltage
						Other than above	0
39	Ground	SB	Power source (C/B)		—	Battery voltage	
40	Ground	B	Ground	—	—	0	
41	Ground	Y	Sensor ground	—	—	0	

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Terminal No.		Wire color	Description		Condition	Voltage (V) (Approx.)
+	-		Signal name	Input/ Output		
42	Ground	O	Tilt motor down output signal	Output	Steering tilt	Operate (down)
						Other than above
44	Ground	G	Telescopic motor backward output signal	Output	Steering telescopic	Operate (backward)
						Other than above
48	Ground	B	Ground	—	—	0

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


Wiring Diagram - AUTOMATIC DRIVE POSITIONER CONTROL SYSTEM -

INFOID:000000007773682

- : With NAVI
- : Without NAVI
- : With BOSE audio without NAVI
- : Without BOSE audio
- : With around view monitor
- : Without around view monitor
- : With hands-free phone
- : Without hands-free phone

* : This connector is not shown in "Harness Layout".

AUTOMATIC DRIVE POSITIONER

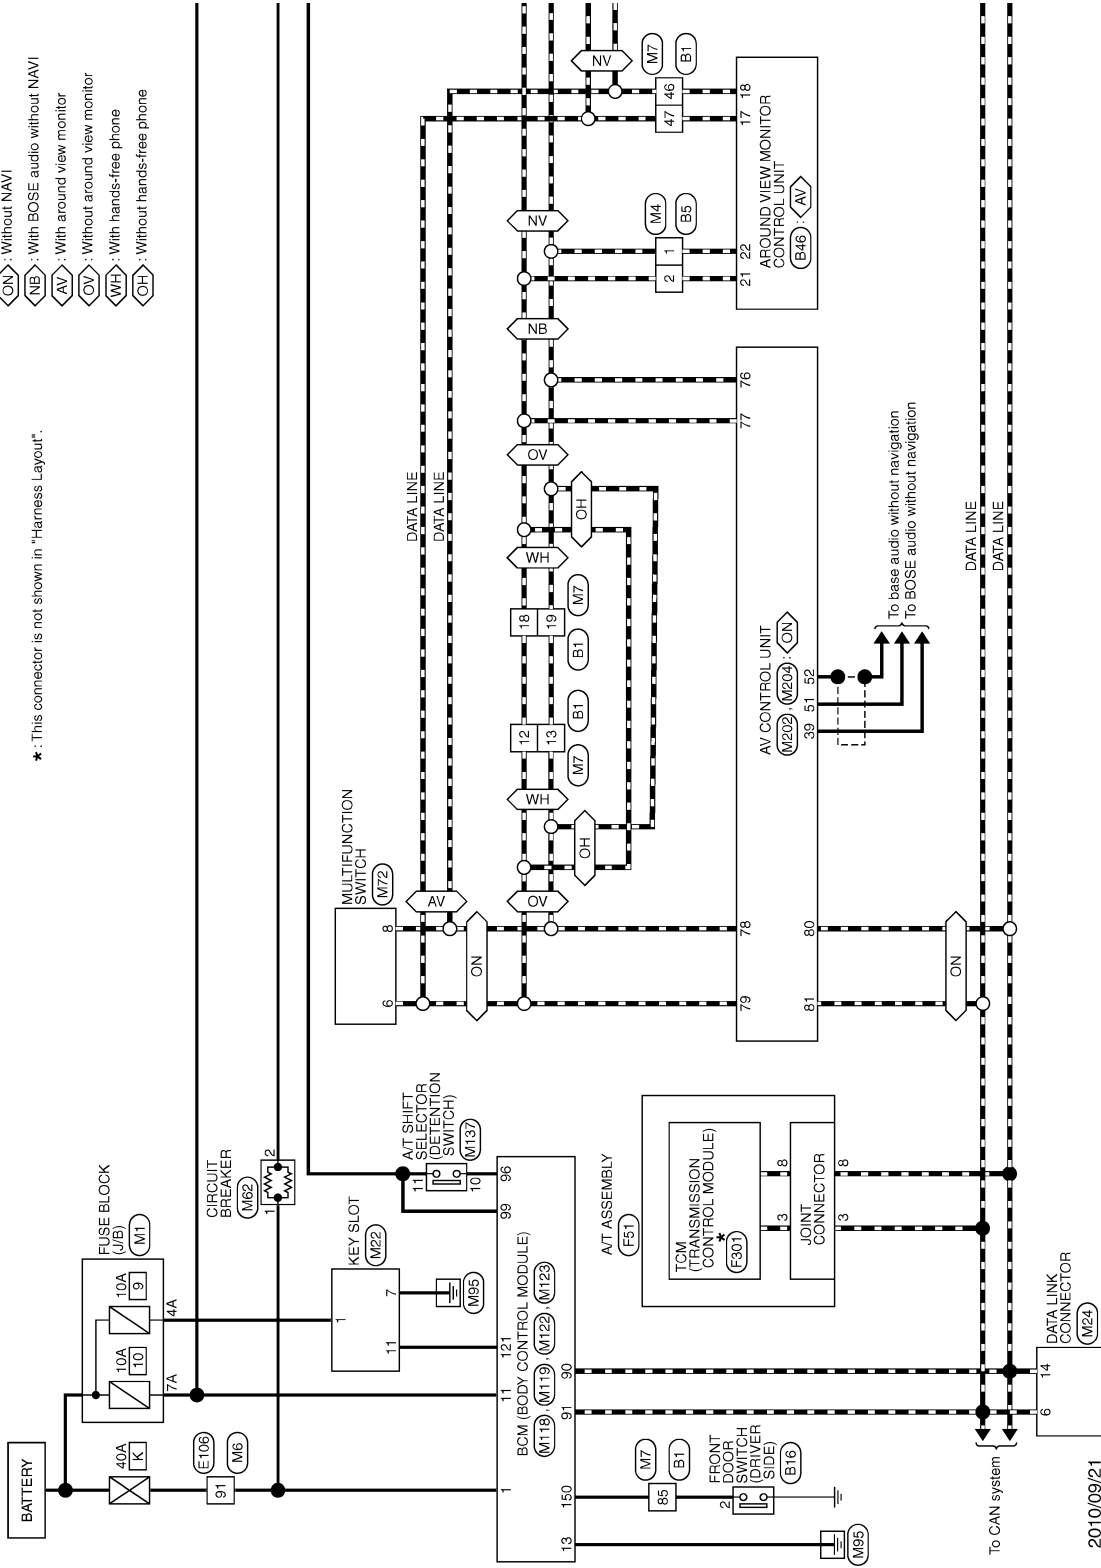


JCJWA1315GB

2010/09/21

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


(NV) : With NAVI

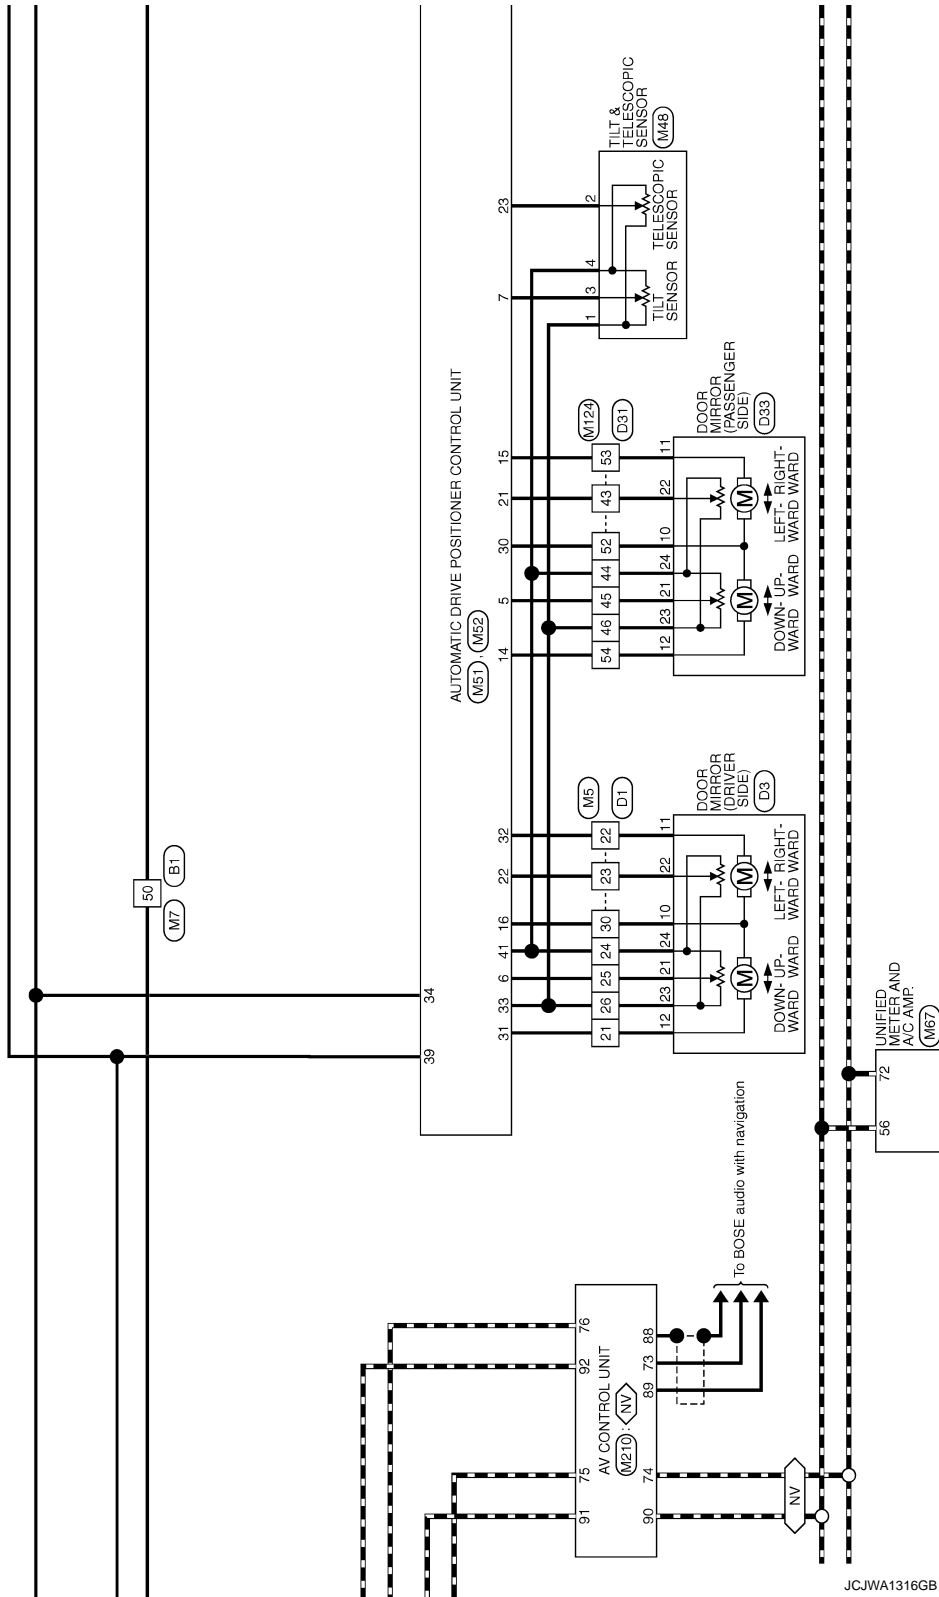

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

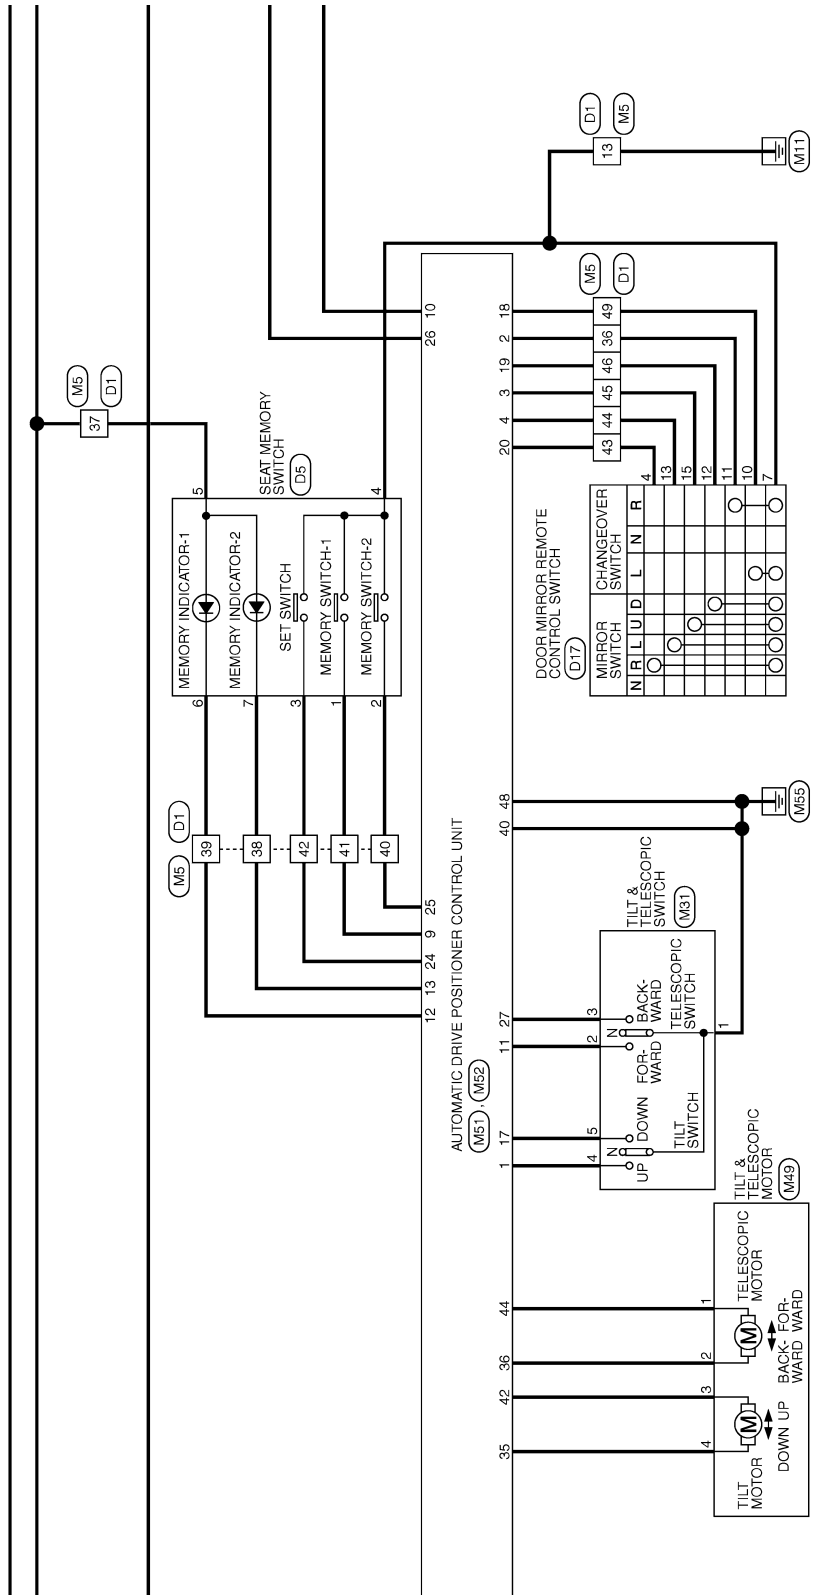


JCJWA1317GB

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

*: This connector is not shown in "Harness Layout".

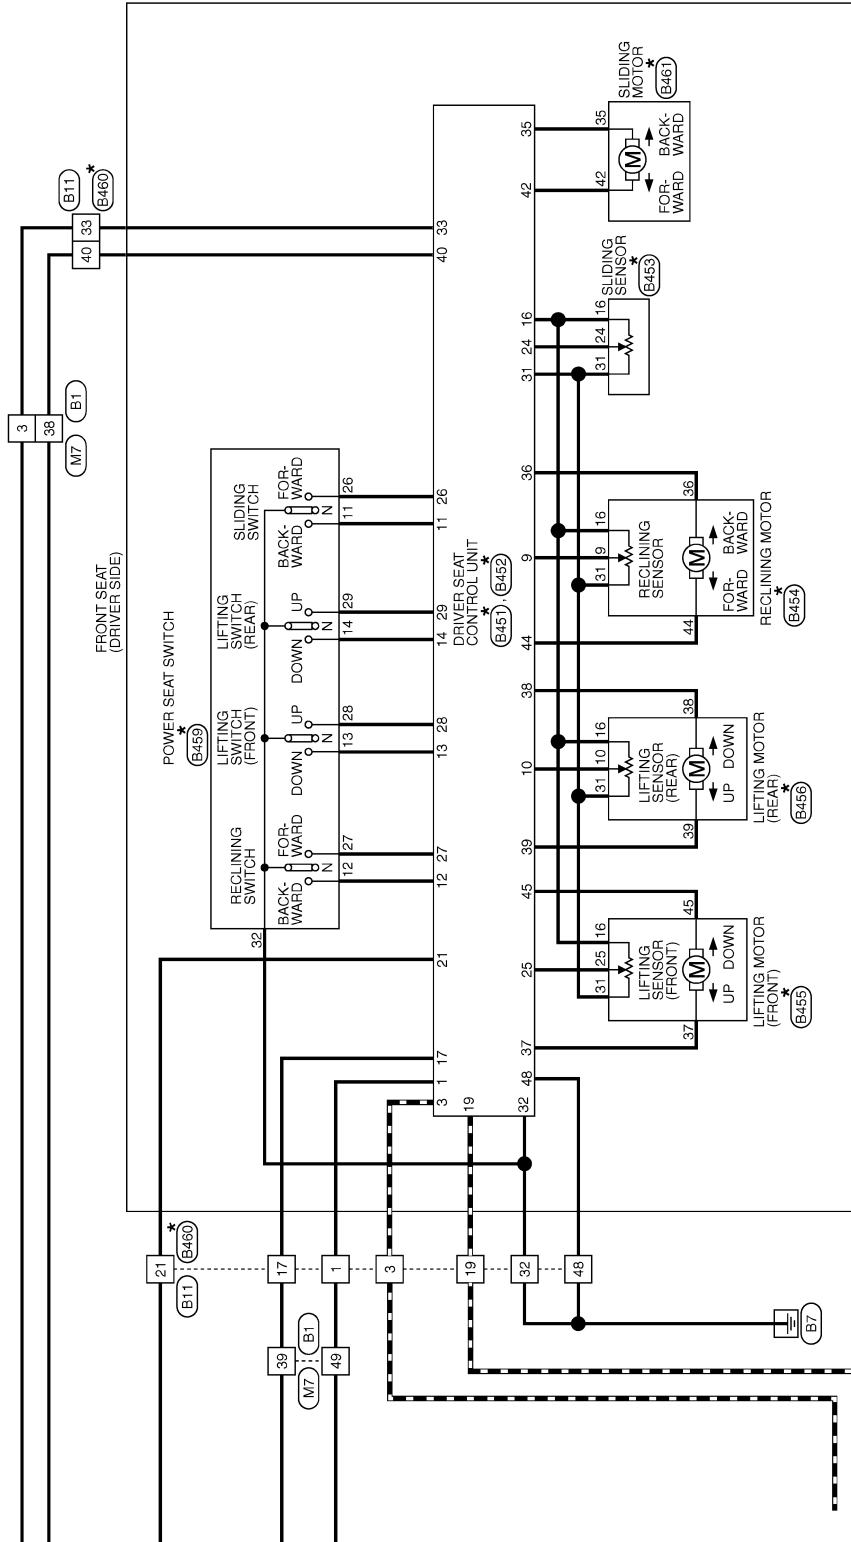

JCJWA1318GB


A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER


Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-6316-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
3	R	-
5	G	-
6	SB	-
7	V	-
8	LS	-
12	SB	-
13	SB	-
14	SB	-
15	LG	-
17	W	-
18	SB	-
19	LG	-
20	BR	-
21	SHIELD	-
22	Y	-
24	P	-
27	B	-
28	R	-
29	W	-
30	SHIELD	-
31	SHIELD	-
32	W	-
33	SB	-
34	L	-
35	P	-
36	L	-
37	P	-
38	BR	-
39	Y	-
44	V	-
45	GR	-
46	LG	-
47	SB	-
49	G	-
50	V	-


60	P	-
61	L	-
62	SHIELD	-
63	R	-
64	G	-
65	SHIELD	-
66	W	-
67	V	-
68	SB	-
69	SHIELD	-
70	W	-
73	SB	-
74	L	-
75	W	-
76	BR	-
77	R	-
78	P	-
79	GR	-
83	SB	-
85	SB	-
86	LG	-
87	Y	-
88	R	-
89	B	-
90	SB	-
91	G	-
92	BR	-
93	G	-
94	SB	-
95	G	-
96	Y	-
98	W	-
99	GR	-

Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	TH32MW-NH

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	SB	-
3	Y	-
4	R	-
5	W	-
9	G	-
8	G	-
14	SB	-
15	GR	-
16	P	-
21	G	-
22	B	-
23	SHIELD	-
24	SB	-
25	BR	-
26	Y	-
27	W	-
28	R	-
29	L	-
30	SHIELD	-
31	Y	-

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Type	NS16FW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
3	L	-
17	Y	-
19	P	-
21	V	-
22	R	-
30	BR	-
48	B	-
60	G	-
66	GR	-
67	Y	-

Connector No.	B16
Connector Name	FRONT DOORS SWITCH (DRIVER SIDE)
Connector Type	AD3FW

 

Terminal No.	Color Of Wire	Signal Name [Specification]
2	V	-

JRJWC9329GB

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

Connector No.	B46
Connector Name	ROUND VIEW MONITOR CONTROL UNIT
Connector Type	1H40PW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	Y	BATTERY
3	P	IGNITION SIGNAL
4	GR	ACC
5	BG	ILLUMINATION SIGNAL
6	SR	VEHICLE SPEED SIGNAL (PULSE)
7	V	REVERSE SIGNAL
8	GR	CONTROL SIGNAL
17	SR	AV COMM(L)
18	LG	AV COMM(U)
21	SR	AV COMM(L)
22	LG	AV COMM(U)
23	LG	AUXILIARY INWARD LED (+)
24	G	AUXILIARY INWARD LED (-)
27	W	CAMERA IMAGE SIGNAL
28	SHIELD	CAMERA IMAGE SIGNAL GND
29	Y	SIDE CAMERA RH IMAGE SIGNAL
30	G	SIDE CAMERA RH IMAGE GND
31	SHIELD	SHIELD
32	B	SIDE CAMERA RH GND
33	W	SIDE CAMERA RH COMM
34	R	SIDE CAMERA RH POWER SUPPLY
35	L	REAR CAMERA COMM
36	BR	REAR CAMERA POWER SUPPLY
37	SHIELD	SHIELD
38	R	REAR CAMERA GND
39	Y	REAR CAMERA IMAGE SIGNAL
40	W	REAR CAMERA IMAGE GND

Connector No.	B451
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	1H32FW



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/W	RK
3	R/Y	CAN-H
9	W/G	PULSE (RECLINING)
10	P/B	PULSE (LIFTING)
11	BR	SLIDING SW (BACKWARD)
12	SR	RECLINING SW (BACKWARD)
13	GR	FRONT LIFTING SW (DOWNWARD)
14	G/B	REAR LIFTING SW (DOWNWARD)
17	Y/R	TC
19	V	CAN-L
21	L/Y	P RANGE SW
24	R	PULSE (SLIDING)
25	Y/B	SLIDING SW (FORWARD)
26	Y	SLIDING SW (FORWARD)
27	R/G	RECLINING SW (UPWARD)
28	W/B	FRONT LIFTING SW (UPWARD)
29	P/L	REAR LIFTING SW (UPWARD)
31	GR	SENSOR GND
32	B/W	GND (SIGNAL)

Connector No.	B452
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	NS16FW-CS



33	35	36	37	38	39	40	42	44	45	48
----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
33	R	BAT (C/B)
35	W/R	SLIDING MOTOR (FORWARD)
36	G/Y	RECLINING MOTOR (FORWARD)
37	G/W	FRONT LIFTING MOTOR (DOWNWARD)
38	L/Y	REAR LIFTING MOTOR (UPWARD)
39	R/B	REAR LIFTING MOTOR (BACKWARD)
40	R/W	BAT (FUSE)
42	W/B	SLIDING MOTOR (SWARD)
44	L/R	RECLINING MOTOR (BACKWARD)
45	L/R	FRONT LIFTING MOTOR (UPWARD)
48	B	GND (POWER)

Connector No.	B453
Connector Name	SLIDING SENSOR
Connector Type	6D98-0241



24	31	16
----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
16	O	
25	Y/B	
31	GR	
37	G/W	
45	L/R	

Connector No.	B454
Connector Name	RECLINING MOTOR
Connector Type	NS06FW-CS



36	38	44	16	31	9
----	----	----	----	----	---

Terminal No.	Color Of Wire	Signal Name [Specification]
9	W/G	
16	O	
31	GR	
36	G/Y	
44	P	

Connector No.	B455
Connector Name	LIFTING MOTOR (FRONT)
Connector Type	NS06FW-CS



45	37	16	31	25
----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
16	O	
25	Y/B	
31	GR	
37	G/W	
45	L/R	

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

Connector No.	B455
Connector Name	LIFTING MOTOR (REAR)
Connector Type	NS06FBK-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
10	P/B	-
11	O	-
12	GR	-
13	L/Y	-
14	R/B	-

Connector No.	B459
Connector Name	POWER SEAT SWITCH
Connector Type	NS10PW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
11	BR	-
12	SR	-
13	LG/R	-
14	G/B	-
26	Y	-
27	R/G	-
28	W/B	-
29	P/L	-
32	B/W	-

Connector No.	B460
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/W	-
3	R/Y	-
17	Y/R	-
19	V	-
21	L/Y	-
32	B/W	-
42	B/W	-
48	B	-
60	V/R	-
66	B	-
67	L	-

Connector No.	B461
Connector Name	SLIDING MOTOR
Connector Type	ED98-0239



Terminal No.	Color Of Wire	Signal Name [Specification]
42	W/B	-


Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TH40PW-CS15

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-
3	V	-
4	W	-
5	L	-
9	GR	-
10	O	-
11	P	-
12	LG	-
13	B	-
14	Y	-
15	W	-
16	R	-
17	W	-
18	G	-
19	Y	-
20	W	-
21	O	-
22	P	-
23	BR	-
24	V	-
25	GR	-
26	Y	-
27	B	-
28	SHIELD	-
29	LG	-
30	G	-
31	W	-
32	G	-
33	L	-
34	W	-
35	L	-
36	B	-
37	GR	-
38	W	-
39	B	-
40	LG	-

37	R	-
38	P	-
39	O	-
40	BR	-
41	L	-
42	GR	-
43	BR	- [With automatic drive positioner]
43	O	- [Without automatic drive positioner]
44	GR	- [With automatic drive positioner]
44	W	- [Without automatic drive positioner]
45	G	- [With automatic drive positioner]
45	Y	- [Without automatic drive positioner]
46	G	- [With automatic drive positioner]
46	V	- [Without automatic drive positioner]
49	GR	-
50	B	-
52	R	-
53	SR	-
54	O	-
55	Y	-

Connector No.	D3
Connector Name	DOOR MIRROR (DRIVER SIDE)
Connector Type	1H24NW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
2	O	-
3	B	-
5	Y	-
6	R	-
7	W	-
10	G	-
11	P	-
12	O	-
14	LG	-
17	G	-
18	W	-
21	G	-
22	BR	-

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER


23	Y	-	-
24	V	-	-

Connector No.	D5
Connector Name	SEAT MEMORY SWITCH
Connector Type	ADBFW




Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	BR	-
3	GR	-
4	B	-
5	O	-
6	O	-
7	P	-

Connector No.	D17
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH
Connector Type	TKL6FR

 

Terminal No.	Color Of Wire	Signal Name [Specification]
4	BR	-
7	B	-
8	B	-
9	R	-
10	GR	-
11	LG	-
12	G	-
13	W	-
15	Y	-

Connector No.	D31
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15

 


Terminal No.	Color Of Wire	Signal Name [Specification]
7	R	-
8	BR	-
9	V	-
12	P	-
13	LG	-
14	B	-
15	W	-
16	BR	-
17	B	-
18	B	-
19	V	-
20	B	- (IMR1 ROSE audio)
21	R	- (Without ROSE audio)
22	G	- (Without ROSE audio)
23	V	- (IMR1 ROSE audio)
24	W	-
25	S8	-
26	R	-
29	SHIELD	-
30	W	-
31	LG	-
32	BR	-
33	O	-
34	GR	-
35	G	-
43	Y	-
44	V	-
45	P	-
46	W	-
52	G	-
53	GR	-
54	O	-
55	L	-

Connector No.	D33
Connector Name	DOOR MIRROR (PASSENGER SIDE)
Connector Type	TH24MW-RH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	W	SIDE CAMERA RH COMM
4	LG	SIDE CAMERA RH IMAGE SIGNAL
5	B	SIDE CAMERA RH POWER SUPPLY
6	R	-
7	L	-
10	G	-
11	GR	-
12	BR	-
17	BR	SIDE CAMERA RH IMAGE GND
18	B	SIDE CAMERA RH GND
19	B	-
21	P	-
22	Y	-
23	W	-
24	V	-

Connector No.	ELD06
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	W	-
3	B	-
4	GR	-

5	GR	-
8	Y	-
9	BR	-
10	BG	-
11	S8	-
12	BG	-
13	L	-
14	R	-
15	P	-
16	V	-
17	S8	-
18	V	-
20	BG	-
21	L	-
22	V	-
23	G	-
24	P	-
25	Y	-
26	V	-
27	W	-
28	G	-
29	BR	-
31	B	-
32	B	-
34	B	-
35	G	-
36	SHIELD	-
37	V	-
38	BR	-
39	BG	-
41	W	-
42	G	-
43	BR	-
45	W	-
49	L	-
50	P	-
51	L	-
54	BG	-
57	BR	-
59	W	-
60	LG	-
61	G	-
62	S8	-
63	W	-
64	B	-
65	G	-
66	R	-
67	SHIELD	-
68	L	-
69	LG	-

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

70	W	-	-	-	-
71	R	-	-	-	-
72	Y	-	-	-	-
73	B	-	-	-	-
74	BR	-	-	-	-
75	G	-	-	-	-
76	W	-	-	-	-
77	Y	-	-	-	-
78	R	-	-	-	-
79	L	-	-	-	-
80	SB	-	-	-	-
81	R	-	-	-	-
82	SB	-	-	-	-
83	BG	-	-	-	-
84	G	-	-	-	-
85	P	-	-	-	-
86	P	-	-	-	-
87	V	-	-	-	-
88	GR	-	-	-	-
89	GR	-	-	-	-
90	SHIELD	-	-	-	-
91	W	-	-	-	-
92	Y	-	-	-	-
93	V	-	-	-	-
94	LG	-	-	-	-
95	BG	-	-	-	-
96	P	-	-	-	-
97	R	-	-	-	-
98	SHIELD	-	-	-	-
99	L	-	-	-	-
100	P	-	-	-	-

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	BK1DFG-DG7




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	BR	-
3	L	-
4	V	-
5	B	-
6	SA	-
7	R	-
8	P	-
9	GR	-
10	B	-

Connector No.	F401
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	SP1DFG




Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	VIGN
2	-	BATT
3	-	CAN-H
4	-	K LINE
5	-	GROUND
6	-	VIGN
7	-	RET DAMP RV
8	-	CAN-L
9	-	SENS RELY
10	-	GROUND

Connector No.	M1
Connector Name	FUSE BLOCK (V/B)
Connector Type	NS06FW-W2

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1A	GR	-
2A	G	-
3A	L	-
4A	P	-
5A	V	-
6A	R	-
7A	L	-


Connector No.	M4
Connector Name	WIRE TO WIRE
Connector Type	TH32FW-WH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	SB	-
3	Y	-
4	R	-
5	W	-
6	G	-
7	LG	-
8	B	-
9	V	-
10	W	-
11	G	-
12	G	-
13	B	-
14	Y	-
15	W	-
16	R	-
17	B	-
18	G	-
19	Y	-
20	L	-
21	LG	-
22	G	-
23	W	-
24	Y	-

22	B	-	-
23	SHIELD	-	-
24	R	-	-
25	R	-	-
26	Y	-	-
27	G	-	-
28	B	-	-
29	W	-	-
30	SHIELD	-	-
31	Y	-	-

Connector No.	M5
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS35

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-
3	BR	-
4	P	-
5	L	-
6	R	-
7	R	-
8	W	-
9	G	-
10	L	-
11	G	-
12	V	-
13	B	-
14	Y	-
15	W	-
16	R	-
17	B	-
18	G	-
19	Y	-
20	L	-
21	LG	-
22	G	-
23	L	-
24	Y	-


AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

25	GR	-	-	-	-
26	R	-	-	-	-
27	W	-	-	-	-
28	SHIELD	-	-	-	-
29	Y	-	-	-	-
30	Y	-	-	-	-
31	R	-	-	-	-
32	BR	-	-	-	-
33	SR	-	-	-	-
34	Y	-	-	-	-
35	P	-	-	-	-
36	LG	-	-	-	-
37	BR	-	-	-	-
38	P	-	-	-	-
39	BG	-	-	-	-
40	SR	-	-	-	-
41	L	-	-	-	-
42	R	-	-	-	-
43	BR	-	-	-	-
44	V	-	-	-	-
45	G	-	-	-	-
46	SR	-	-	-	-
47	P	-	-	-	-
48	P	-	-	-	-
49	P	-	-	-	-
50	B	-	-	-	-
51	R	-	-	-	-
52	R	-	-	-	-
53	V	-	-	-	-
54	LG	-	-	-	-
55	SR	-	-	-	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

 

Terminal No.	Color Of Wire	Signal Name (Specification)
1	W	-
2	R	-
3	B	-
4	SHIELD	-
5	G	-

8	Y	-	-	-	-
9	BR	-	-	-	-
10	R	-	-	-	-
11	BR	-	-	-	-
12	BG	-	-	-	-
13	L	-	-	-	-
14	R	-	-	-	-
15	P	-	-	-	-
16	V	-	-	-	-
17	SR	-	-	-	-
18	V	-	-	-	-
20	BG	-	-	-	-
21	L	-	-	-	-
22	W	-	-	-	-
23	P	-	-	-	-
24	BR	-	-	-	-
25	Y	-	-	-	-
26	V	-	-	-	-
27	G	-	-	-	-
28	G	-	-	-	-
29	L	-	-	-	-
30	G	-	-	-	-
31	W	-	-	-	-
32	SHIELD	-	-	-	-
33	R	-	-	-	-
34	W	-	-	-	-
35	R	-	-	-	-
36	SHIELD	-	-	-	-
37	V	-	-	-	-
38	BG	-	-	-	-
39	BR	-	-	-	-
41	W	-	-	-	-
42	BG	-	-	-	-
43	BG	-	-	-	-
44	W	-	-	-	-
45	W	-	-	-	-
49	L	-	-	-	-
50	P	-	-	-	-
51	BR	-	-	-	-
54	Y	-	-	-	-
57	G	-	-	-	-
59	W	-	-	-	-
60	L	-	-	-	-
61	G	-	-	-	-
62	SR	-	-	-	-
63	G	-	-	-	-
64	B	-	-	-	-
65	W	-	-	-	-
66	R	-	-	-	-
67	SHIELD	-	-	-	-
68	R	-	-	-	-
69	GR	-	-	-	-
70	LG	-	-	-	-

71	LG	-	-	-	-
72	Y	-	-	-	-
73	SR	-	-	-	-
74	BR	-	-	-	-
74	L	-	-	-	-
75	G	-	-	-	-
76	GR	-	-	-	-
76	W	-	-	-	-
77	P	-	-	-	-
77	R	-	-	-	-
78	L	-	-	-	-
78	R	-	-	-	-
79	W	-	-	-	-
79	Y	-	-	-	-
80	SR	-	-	-	-
81	SR	-	-	-	-
82	SR	-	-	-	-
83	V	-	-	-	-
84	G	-	-	-	-
85	L	-	-	-	-
86	R	-	-	-	-
87	R	-	-	-	-
88	GR	-	-	-	-
89	GR	-	-	-	-
90	GR	-	-	-	-
91	SHIELD	-	-	-	-
91	W	-	-	-	-
92	Y	-	-	-	-
93	BR	-	-	-	-
94	P	-	-	-	-
95	GR	-	-	-	-
96	W	-	-	-	-
97	L	-	-	-	-
98	SHIELD	-	-	-	-
99	V	-	-	-	-
100	SR	-	-	-	-

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name (Specification)
3	SR	-
3	W	- [With automatic drive positioner]
5	G	- [Without automatic drive positioner]
6	BR	-
7	W	-
8	B	-
12	SR	-
13	LG	-
15	G	-
15	G	-
17	W	-
18	SR	-
19	LG	-
20	BR	-
21	SHIELD	-
22	Y	-
24	V	-
27	B	-
28	W	-
29	R	-
30	SHIELD	-
31	L	-
32	P	-
33	SR	-
34	L	-
35	P	-
36	L	-
37	P	-
38	BR	-
39	Y	-
44	L	-
45	GR	-
46	LG	-
47	SR	-
49	V	-
50	R	-

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP


AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER


Terminal No.	Color Of Wire	Signal Name [Specification]
60	P	-
61	L	-
62	SHIELD	-
63	R	-
64	G	-
65	SHIELD	-
66	SHIELD	-
67	V	-
68	LG	-
69	SHIELD	-
70	W	-
73	G	-
74	R	-
75	W	-
76	W	-
77	B	-
78	P	-
79	GR	-
83	BG	-
84	LG	-
87	Y	-
88	W	-
89	BR	-
90	BG	-
91	G	-
92	V	-
93	BR	-
94	V	-
95	G	-
96	Y	-
98	W	-
99	R	-

Connector No.	M22
Connector Name	KEY SLOT
Connector Type	TH12FW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	BAT
2	GR	CLOCK
3	W	DATA
5	Y	ILL BAT
6	LG	ILL
7	B	GROUND
11	BR	KEY SWITCH SIGNAL

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 

Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	V	-
8	G	-
11	SR	-
14	P	-
16	Y	-

Connector No.	M31
Connector Name	TILT & TELESCOPIC SWITCH
Connector Type	TK06FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	GR	-
3	G	-
4	Y	-
5	W	-

Connector No.	M38
Connector Name	TILT & TELESCOPIC SENSOR
Connector Type	TK04FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	P	-
3	BG	-
4	Y	-

Connector No.	M49
Connector Name	TILT & TELESCOPIC MOTOR
Connector Type	NS04FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	GR	-
3	BG	-
4	L	-

Connector No.	M51
Connector Name	AUTOMATIC DRIVE POSITIONER CONTROL UNIT
Connector Type	TH12FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	TILT SW (UPWARD)
2	LG	MIRROR SELECT SW (RH)
3	G	MIRROR SW (UPWARD)
4	V	MIRROR SW (LEFTWARD)
5	R	MIRROR SENSOR (RH VERTICAL)
6	GR	MIRROR SENSOR (LH VERTICAL)
7	BG	TILT SENSOR ADDRESS
9	L	7X (UART)
10	V	TELESCOPIC SW (FRONTWARD)
11	GR	INDI
12	BG	INDI
13	P	MIRROR MAG FOR (RH VERTICAL)
14	W	MIRROR MAG FOR (LH VERTICAL)
15	S	MIRROR MAG FOR (FRONTWARD)
16	Y	MIRROR MAG FOR (DOWNWARD)
17	W	TILT SW (DOWNWARD)

JRJWC9335GB


AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

18	P	MIRROR SELECT SW (LH)
19	SB	MIRROR SW (DOWNWARD)
20	BR	MIRROR SW (RIGHTWARD)
21	L	MIRROR MOTOR (RH HORIZONTAL)
22	G	MIRROR SENSOR (LH HORIZONTAL)
23	P	TELESCOPIC SENSOR
24	R	SET SW
25	SB	ADDRESS
26	Y	RX (UART)
27	G	TELESCOPIC SW (BACKWARD)
30	R	MIRROR MOTOR (RH COMMON)
31	LG	MIRROR MOTOR (LH VERTICAL)
32	L	MIRROR MOTOR (LH HORIZONTAL)

Connector No.	M62
Connector Name	AUTOMATIC DRIVE POSITIONER CONTROL UNIT
Connector Type	HS16FW-ES

 


Terminal No.	Color Of Wire	Signal Name [Specification]
33	R	POWER SUPPLY (SENSOR)
34	R	BAT (FUSE)
35	L	TILT MOTOR (UPWARD)
36	GR	TELESCOPIC MOTOR (FORWARD)
39	SB	BAT (C/B)
40	B	GND(SIGNAL)
41	Y	GND(SENSOR)
42	BG	TILT MOTOR (DOWNWARD)
44	G	TELESCOPIC MOTOR (BACKWARD)
48	B	GND(POWER)

Connector No.	M62
Connector Name	CIRCUIT BREAKER
Connector Type	MO2FW-P-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	
2	SB	


Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
41	V	ACC POWER SUPPLY
42	Y	FUEL LEVEL SENSOR SIGNAL
43	R	INTAKE SENSOR SIGNAL
44	LG	IN-VEHICLE SENSOR SIGNAL
45	P	SUNLOAD SENSOR SIGNAL
46	BG	SUNLOAD SENSOR SIGNAL
47	G	PHANST GAS / OUTSIDE DOOR DETECTING SENSOR SIGNAL
53	G	IGNITION POWER SUPPLY
54	Y	BATTERY POWER SUPPLY
55	B	GROUND
56	L	CAN-H
57	W	BRAKE FLUID LEVEL SWITCH SIGNAL
58	BR	FUEL LEVEL SENSOR GROUND
59	GR	INTAKE SENSOR GROUND
60	L	IN-VEHICLE SENSOR GROUND
61	BR	AMBIENT SENSOR GROUND
62	SB	SUNLOAD SENSOR GROUND
63	R	

65	BG	ECO SIGNAL
69	L	A/C LAMP SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	B	GROUND
72	P	CAN-L

Connector No.	M72
Connector Name	MULTIFUNCTION SWITCH
Connector Type	TH16FW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	R	ACC
3	Y	ILL CONT
5	V	AV COMM (H)
6	SB	AV COMM (L)
8	LG	AV COMM (U)
9	B	SW GND
14	Y	DISK EJECT SIGNAL
16	G	HAZARD ON

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MB3FB-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	W	POWER WINDOW POWER SUPPLY (BAT)
3	Y	POWER WINDOW POWER SUPPLY (RMP)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	L	PASSENGER DOOR UNLOCK OUTPUT
7	Y	STEP LAMP CONT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	BR	REAR DOOR UNLOCK OUTPUT
11	R	BAT (F/SE)
12	R	IGNITION
13	B	PUSH-BUTTON LOCK SW/ILL GND
14	Y	ACC INH
15	Y	ACC INH
17	W	TURN SIGNAL RH (FRONT)
18	BG	TURN SIGNAL LH (FRONT)
19	V	INT ROOM LAMP CONT

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
72	R	ROOM ANT2-
73	G	ROOM ANT2+
74	SB	PASSENGER DOOR ANT-
75	GR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT1-

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER

79	BR	ROOM ANTI*
80	GR	NATS ANT AMP.
81	W	NATS ANT AMP.
82	R	IGN RELAY (F/B) CONT
83	Y	KEYLESS ENTRY/RECEIVER COMB
87	BR	COMB SW INP/UT 5
88	V	COMB SW INP/UT 3
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL CONT
93	V	ON IND
94	Y	FUDDLE LAMP CONT
95	BE	ACC RELAY CONT
96	GR	A/T SHIFT SELECTOR POWER SUPPLY
99	R	SHIFT P
100	G	PASSENGER DOOR REQUEST SW
101	SB	DRIVER DOOR REQUEST SW
102	BE	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY/RECEIVER POWER SUPPLY
104	LG	COMB SW INP/UT 1
105	Y	COMB SW INP/UT 2
106	Y	COMB SW INP/UT 2
110	G	HAZARD SW


Connector No.		M123
Connector Name	BCM (BODY CONTROL MODULE)	
Connector Type	TH40FG-NH	



Terminal No.	Color Of Wire	Signal Name [Specification]
113	P	OPTICAL SENSOR
116	SB	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	BR	KEY SLOT SW
122	W	IGN-F/B
124	LG	PASSENGER DOOR SW
132	BR	POWER WINDOW SW COMB
133	BR	PUSH-BUTTON LOCKER SW ILL POWER
134	W	COMB SW INP/UT 1
137	BE	RECEIVER SENSOR GND

138	Y	RECEIVER SENSOR POWER SUPPLY
139	L	THE PRESSURE RECEIVER COMB
140	GR	SHIFT N/P
141	G	SECURITY IND LAMP CONT
142	BE	COMB SW OUTPUT 5
143	P	COMB SW OUTPUT 1
144	G	COMB SW OUTPUT 2
145	L	COMB SW OUTPUT 4
146	SB	COMB SW OUTPUT 3
150	LG	DRIVER DOOR SW
151	G	REAR WINDOW DEFROGGER RELAY CONT


Connector No.		M124
Connector Name	WIRE TO WIRE	
Connector Type	TH40MW-CS15	

 

Terminal No.	Color Of Wire	Signal Name [Specification]
7	Y	-
8	LG	-
9	Y	-
12	L	-
13	V	-
14	B	-
15	W	-
16	BR	-
17	B	-
18	R	-
19	B	-
20	W	- [Without BOSE audio]
20	Y	- [With BOSE audio]
21	G	- [With BOSE audio]
21	L	- [Without BOSE audio]
22	SB	-
23	GR	-
24	G	-
25	Y	-
26	Y	-
28	SHIELD	-
29	W	-
31	LG	-

32	G	-
33	BR	-
34	V	-
35	G	-
43	L	-
44	Y	-
45	R	-
46	W	-
52	R	-
53	G	-
54	W	-
55	BE	-

Connector No.		M137
Connector Name	A/T SHIFT SELECTOR	
Connector Type	TH12FW-NH	

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	L	-
4	B	-
5	G	-
7	R	-
8	SB	-
9	B	-
10	GR	-
11	R	-

Connector No.		M202
Connector Name	AV CONTROL UNIT	
Connector Type	TH24FW-NH	



Terminal No.	Color Of Wire	Signal Name [Specification]
36	BE	SIGNAL VCC
37	LG	SIGNAL GND
38	R	RP
39	BR	COMM (DPS->CONT)
40	B	RES AREA (S) SIGNAL
41	SHIELD	SHIELD
42	W	RES AREA (S) SIGNAL
43	Y	RES AREA (S) SIGNAL
44	G	RGB (RED) SIGNAL
45	P	RGB (GREEN) SIGNAL
46	V	RGB (BLUE) SIGNAL
47	SB	COMPOSITE IMAGE SIGNAL GND
48	Y	INVERTER VCC
49	BR	INVERTER GND
50	G	VP
51	Y	COMM (CONT->DIP)
52	SHIELD	SHIELD
57	SHIELD	SHIELD
58	SHIELD	SHIELD

Connector No.		M204
Connector Name	AV CONTROL UNIT	
Connector Type	TH32FW-NH	



JRWJC9337GB

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P


ADP

AUTOMATIC DRIVE POSITIONER

Terminal No.	Color Of Wire	Signal Name [Specification]
76	LG	AV COMM(L)
77	SR	AV COMM(H)
78	LG	AV COMM(L)
79	SR	AV COMM(H)
80	P	CAN-L
81	L	CAN-H
82	B	SW-GND
86	SHIELD	SHIELD
87	L	TEL VOICE SIGNAL (+)
88	P	TEL VOICE SIGNAL (-)
92	R	VEHICLE SPEED SIGNAL (B-PULSE)
93	V	PARKING BRAKE SIGNAL
94	BB	REVERSE SIGNAL
95	G	IGNITION SIGNAL
96	Y	DISK EFFECT SIGNAL

90	L	CAN-H
91	SR	AV COMM(H)
92	SR	AV COMM(H)

Connector No.	IMZLD
Connector Name	AV CONTROL UNIT
Connector Type	TH23FM-4H

 

Terminal No.	Color Of Wire	Signal Name [Specification]
65	V	PARKING BRAKE SIGNAL
67	G	COMPOSITE IMAGE SIGNAL-GND
68	R	COMPOSITE IMAGE SIGNAL
71	SHIELD	MICROPHONE SHIELD
72	R	MICROPHONE VCC
73	R	COMM (CONT->DISP)
74	P	CAN-L
75	LG	AV COMM(L)
76	LG	AV COMM(L)
79	R	ILLUMINATION
80	G	IGNITION SIGNAL
81	BB	REVERSE SIGNAL
82	R	VEHICLE SPEED SIGNAL (B-PULSE)
83	SHIELD	SHIELD
87	G	MICROPHONE SIGNAL
88	SHIELD	SHIELD
89	G	COMM (DISP->CONT)

JRJWC9338GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000007773676

VALUES ON THE DIAGNOSIS TOOL

CONSULT MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
RR WIPER ON	Other than rear wiper switch ON	Off
	Rear wiper switch ON	On
RR WIPER INT	Other than rear wiper switch INT	Off
	Rear wiper switch INT	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER STOP	Rear wiper is in STOP position	Off
	Rear wiper is not in STOP position	On
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
RR FOG SW	NOTE: The item is indicated, but not monitored.	Off

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
DOOR SW-DR	Driver door closed	Off	A
	Driver door opened	On	
DOOR SW-AS	Passenger door closed	Off	B
	Passenger door opened	On	
DOOR SW-RR	Rear RH door closed	Off	C
	Rear RH door opened	On	
DOOR SW-RL	Rear LH door closed	Off	D
	Rear LH door opened	On	
DOOR SW-BK	Back door closed	Off	E
	Back door opened	On	
CDL LOCK SW	Other than power door lock switch LOCK	Off	F
	Power door lock switch LOCK	On	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off	G
	Power door lock switch UNLOCK	On	
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off	H
	Driver door key cylinder LOCK position	On	
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off	I
	Driver door key cylinder UNLOCK position	On	
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off	
HAZARD SW	Hazard switch is OFF	Off	
	Hazard switch is ON	On	
REAR DEF SW	NOTE: The item is indicated, but not monitored.	Off	ADP
TR CANCEL SW	NOTE: The item is indicated, but not monitored.	Off	
TR/BD OPEN SW	Back door opener switch OFF	Off	K
	While the back door opener switch is turned ON	On	
TRNK/HAT MNTR	NOTE: The item is indicated, but not monitored.	Off	L
REVERSE SW	NOTE: The item is indicated, but not monitored.	Off	
RKE-LOCK	LOCK button of the key is not pressed	Off	M
	LOCK button of the key is pressed	On	
RKE-UNLOCK	UNLOCK button of the key is not pressed	Off	N
	UNLOCK button of the key is pressed	On	
RKE-TR/BD	NOTE: The item is indicated, but not monitored.	Off	O
RKE-PANIC	PANIC button of the key is not pressed	Off	
	PANIC button of the key is pressed	On	
RKE-P/W OPEN	UNLOCK button of the key is not pressed	Off	P
	UNLOCK button of the key is pressed and held	On	
RKE-MODE CHG	LOCK/UNLOCK button of the key is not pressed and held simultaneously	Off	
	LOCK/UNLOCK button of the key is pressed and held simultaneously	On	
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V	
	Dark outside of the vehicle	Close to 0 V	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
REQ SW -DR	Driver door request switch is not pressed	Off
	Driver door request switch is pressed	On
REQ SW -AS	Passenger door request switch is not pressed	Off
	Passenger door request switch is pressed	On
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -RL	NOTE: The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Back door request switch is not pressed	Off
	Back door request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	NOTE: The item is indicated, but not monitored.	Off
ACC RLY -F/B	NOTE: The item is indicated, but not monitored.	Off
CLUCH SW	NOTE: The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
	The brake pedal is depressed	On
DETE/CANCL SW	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK	NOTE: The item is indicated, but not monitored.	Off
S/L -UNLOCK	NOTE: The item is indicated, but not monitored.	Off
S/L RELAY-F/B	NOTE: The item is indicated, but not monitored.	Off
UNLK SEN -DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
ENGINE STATE	Engine stopped	Stop	A
	While the engine stalls	Stall	
	At engine cranking	Crank	B
	Engine running	Run	
S/L LOCK-IPDM	NOTE: The item is indicated, but not monitored.	Off	C
S/L UNLK-IPDM	NOTE: The item is indicated, but not monitored.	Off	
S/L RELAY-REQ	NOTE: The item is indicated, but not monitored.	Off	D
VEH SPEED 1	While driving	Equivalent to speedometer reading	E
VEH SPEED 2	While driving	Equivalent to speedometer reading	
DOOR STAT-DR	Driver door is locked	LOCK	F
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Driver door is unlocked	UNLOCK	G
DOOR STAT-AS	Passenger door is locked	LOCK	
	Wait with selective UNLOCK operation (5 seconds)	READY	H
	Passenger door is unlocked	UNLOCK	
ID OK FLAG	Driver side door is open after ignition switch is turned OFF (Shift position is in the P position)	Reset	I
	Ignition switch ON	Set	
PRMT ENG STRT	The engine start is prohibited	Reset	
	The engine start is permitted	Set	ADP
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset	
KEY SW -SLOT	The key is not inserted into key slot	Off	K
	The key is inserted into key slot	On	
RKE OPE COUN1	During the operation of the key	Operation frequency of the key	L
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—	
CONFIRM ID ALL	The key ID that the key slot receives does not accord with any key ID registered to BCM.	Yet	M
	The key ID that the key slot receives accords with any key ID registered to BCM.	Done	N
CONFIRM ID4	The key ID that the key slot receives does not accord with the fourth key ID registered to BCM.	Yet	
	The key ID that the key slot receives accords with the fourth key ID registered to BCM.	Done	O
CONFIRM ID3	The key ID that the key slot receives does not accord with the third key ID registered to BCM.	Yet	
	The key ID that the key slot receives accords with the third key ID registered to BCM.	Done	P
CONFIRM ID2	The key ID that the key slot receives does not accord with the second key ID registered to BCM.	Yet	
	The key ID that the key slot receives accords with the second key ID registered to BCM.	Done	

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
CONFIRM ID1	The key ID that the key slot receives does not accord with the first key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with the first key ID registered to BCM.	Done
TP 4	The ID of fourth key is not registered to BCM	Yet
	The ID of fourth key is registered to BCM	Done
TP 3	The ID of third key is not registered to BCM	Yet
	The ID of third key is registered to BCM	Done
TP 2	The ID of second key is not registered to BCM	Yet
	The ID of second key is registered to BCM	Done
TP 1	The ID of first key is not registered to BCM	Yet
	The ID of first key is registered to BCM	Done
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

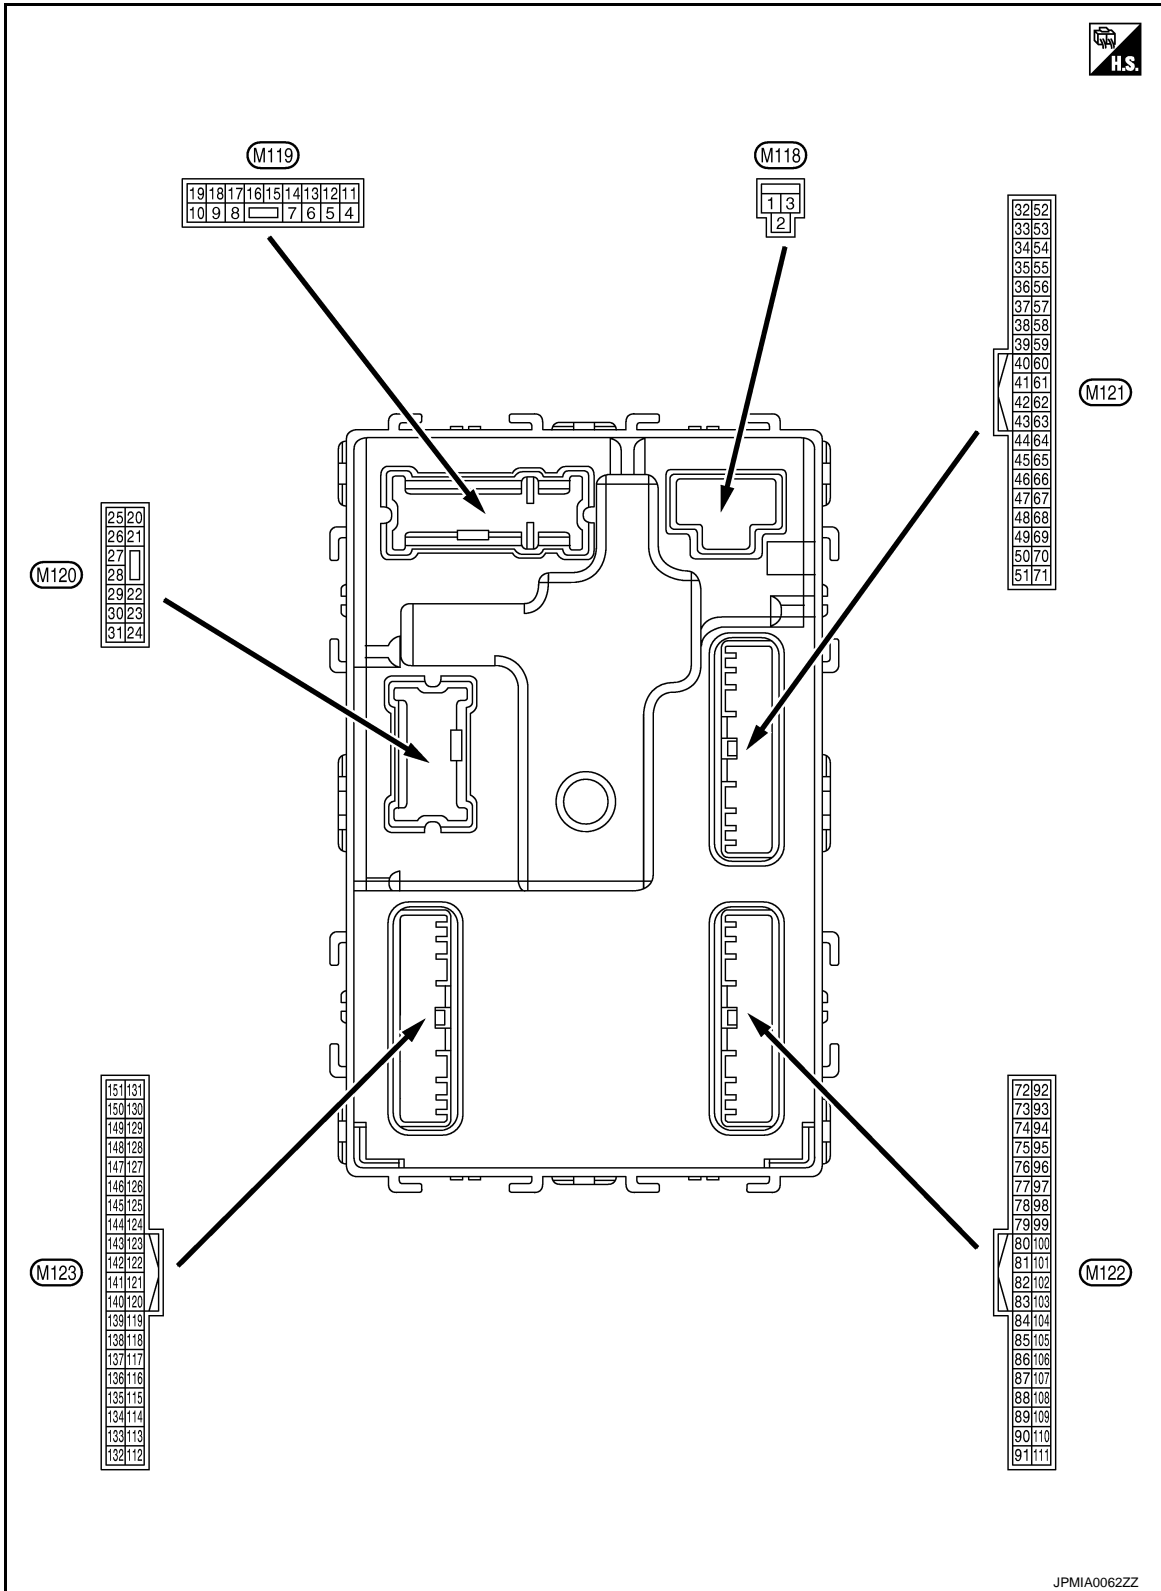


PHYSICAL VALUES

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

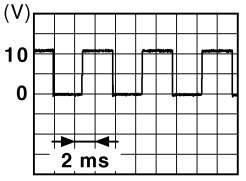Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (W)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		Battery voltage
3 (Y)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		Battery voltage
4 (LG)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		Battery voltage
5 (L)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
7 (Y)	Ground	Step lamp	Output	Step lamp	ON	0 V
					OFF	Battery voltage
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors	LOCK (Actuator is activated)	Battery voltage
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
10 (BR)	Ground	Rear RH door and rear LH door UN- LOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
11 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (W)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p>NOTE: When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF or ON	Battery voltage
					ACC	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

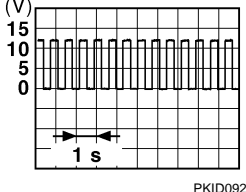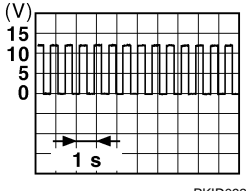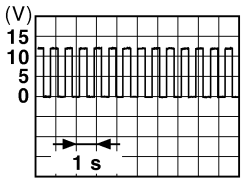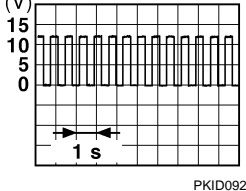Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
17 (W)	Ground	Turn signal RH (Front)	Output	Ignition switch ON	Turn signal switch OFF 0 V
				Turn signal switch RH	 6.5 V
18 (BG)	Ground	Turn signal LH (Front)	Output	Ignition switch ON	Turn signal switch OFF 0 V
				Turn signal switch LH	 6.5 V
19 (V)	Ground	Room lamp timer control	Output	Interior room lamp	OFF Battery voltage
				ON	0 V
20 (V)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch OFF 0 V
				Turn signal switch RH	 6.5 V
23 (G)	Ground	Back door open	Output	Back door	OPEN (Back door opener actuator is activated) Battery voltage
				Other than OPEN (Back door opener actuator is not activated)	0 V
25 (G)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch OFF 0 V
				Turn signal switch LH	 6.5 V
26 (G)	Ground	Rear wiper	Output	Rear wiper	OFF (Stopped) 0 V
				ON (Operated)	Battery voltage

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
34 (SB)	Ground	Luggage room antenna (-)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
35 (V)	Ground	Luggage room antenna (+)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
38 (B)	Ground	Back door antenna (-)	Output	When the back door opener request switch is operated with ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)





< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
39 (W)	Ground	Back door antenna (+)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
47 (Y)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC
				ON	Battery voltage
52 (SB)	Ground	Starter relay control	Output	Ignition switch ON	When selector lever is in P or N position
				When selector lever is not in P or N position	Battery voltage
60 (BR)	Ground	Push-button ignition switch (Push switch)	Input	Push-button ignition switch (push switch)	Pressed
				Not pressed	Battery voltage
61 (W)	Ground	Back door opener request switch	Input	Back door opener request switch	ON (Pressed)
				OFF (Not pressed)	<p style="text-align: right; font-size: small;">JPMIA0016GB</p>
64 (V)	Ground	Intelligent Key warning buzzer (Engine room)	Output	Intelligent Key warning buzzer (Engine room)	Sounding
				Not sounding	Battery voltage
65 (BG)	Ground	Rear wiper stop position	Input	Rear wiper	In stop position
				Not in stop position	<p style="text-align: right; font-size: small;">JPMIA0016GB</p>
					0 V

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

BCM (BODY CONTROL MODULE)
    
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
66 (R)	Ground	Back door switch	Input	Back door switch	OFF (Door close)	 <small>JPMIA0011GB</small> 11.8 V
					ON (Door open)	0 V
67 (GR)	Ground	Back door opener switch	Input	Back door opener switch	Pressed	0 V
					Not pressed	 <small>JPMIA0011GB</small> 11.8 V
68 (BR)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (Door close)	 <small>JPMIA0011GB</small> 11.8 V
					ON (Door open)	0 V
69 (R)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (Door close)	 <small>JPMIA0011GB</small> 11.8 V
					ON (Door open)	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
72 (R)	Ground	Room antenna 2 (-) (Center console)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
73 (G)	Ground	Room antenna 2 (+) (Center console)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
74 (SB)	Ground	Passenger door an- tenna (-)	Output	When the pas- senger door re- quest switch is operated with ig- nition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
75 (GR)	Ground	Passenger door antenna (+)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
76 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
77 (LG)	Ground	Driver door antenna (+)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)




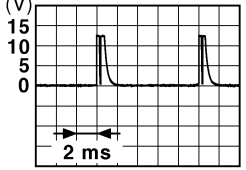

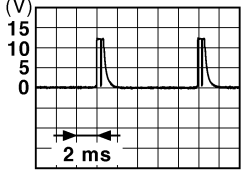
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
78 (Y)	Ground	Room antenna 1 (-) (Instrument panel)	Output	Ignition switch OFF	
				When Intelligent Key is not in the passenger compart- ment	
79 (BR)	Ground	Room antenna 1 (+) (Instrument panel)	Output	Ignition switch OFF	
				When Intelligent Key is not in the passenger compart- ment	
80 (GR)	Ground	NATS antenna amp.	Input/ Output	During waiting	Just after pressing ignition switch. Pointer of tester should move.
81 (W)	Ground	NATS antenna amp.	Input/ Output	During waiting	Just after pressing ignition switch. Pointer of tester should move.
82 (R)	Ground	Ignition relay [Fuse block (J/B)] control	Output	Ignition switch	OFF or ACC
				ON	Battery voltage

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P


 

 

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

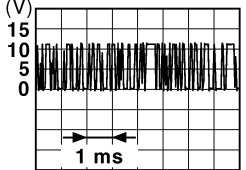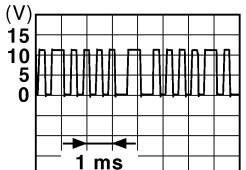Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
83 (Y)	Ground	Remote keyless entry receiver communication	Input/ Output	During waiting	 <small>JMKIA0064GB</small>	
				When operating either button on the key	 <small>JMKIA0065GB</small>	
87 (BR)	Ground	Combination switch INPUT 5	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <small>JPMIA0041GB</small> 1.4 V
					Front fog lamp switch ON (Wiper intermittent dial 4)	 <small>JPMIA0037GB</small> 1.3 V
					Rear wiper switch ON (Wiper intermittent dial 4)	 <small>JPMIA0039GB</small> 1.3 V
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7 	 <small>JPMIA0040GB</small> 1.3 V

BCM (BODY CONTROL MODULE)




< ECU DIAGNOSIS INFORMATION >

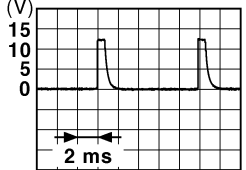Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
88 (V)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <p style="text-align: right;">1.4 V</p>
					Lighting switch HI (Wiper intermittent dial 4)	 <p style="text-align: right;">1.3 V</p>
					Lighting switch 2ND (Wiper intermittent dial 4)	 <p style="text-align: right;">1.3 V</p>
					Rear washer switch ON (Wiper intermittent dial 4)	 <p style="text-align: right;">1.3 V</p>
					Any of the conditions below with all switches OFF	 <p style="text-align: right;">1.3 V</p>
90 (P)	Ground	CAN-L	Input/ Output	—	—	
91 (L)	Ground	CAN-H	Input/ Output	—	—	

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P


 

 

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

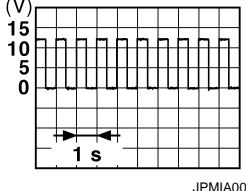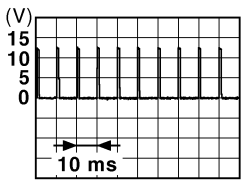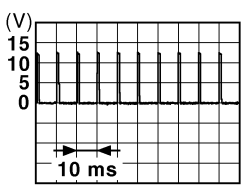Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
92 (LG)	Ground	Key slot illumination	Output	Key slot illumination	OFF	Battery voltage
					Blinking	 <p style="text-align: center;">6.5 V</p>
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V
94 (Y)	Ground	Puddle lamp control	Output	Puddle lamp	OFF	Battery voltage
					ON	0 V
95 (BG)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
96 (GR)	Ground	A/T shift selector (Detention switch) power supply	Output	—	Battery voltage	
99 (R)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	Battery voltage
100 (G)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: center;">1.0 V</p>
101 (SB)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: center;">1.0 V</p>
102 (BG)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
103 (LG)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF	Battery voltage	

BCM (BODY CONTROL MODULE)






< ECU DIAGNOSIS INFORMATION >

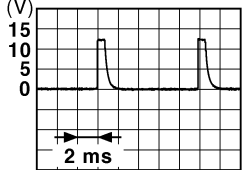Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
107 (LG)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermittent dial 4)	All switches OFF	 <p style="text-align: right;">1.4 V</p>
					Turn signal switch LH	 <p style="text-align: right;">1.3 V</p>
					Turn signal switch RH	 <p style="text-align: right;">1.3 V</p>
					Front wiper switch LO	 <p style="text-align: right;">1.3 V</p>
					Front washer switch ON	 <p style="text-align: right;">1.3 V</p>

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P




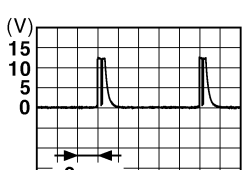

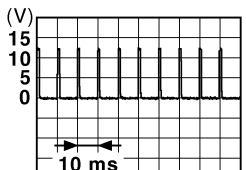
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

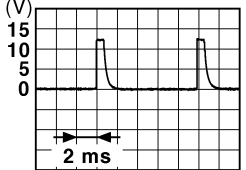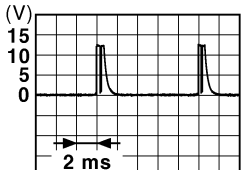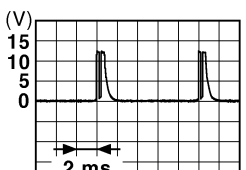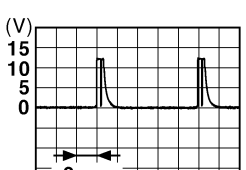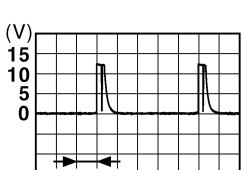Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <p>1.4 V</p>
					Lighting switch AUTO (Wiper intermittent dial 4)	 <p>1.3 V</p>
					Lighting switch 1ST (Wiper intermittent dial 4)	 <p>1.3 V</p>
					Rear wiper switch INT (Wiper intermittent dial 4)	 <p>1.3 V</p>
					Any of the conditions below with all switches OFF	<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6  <p>1.3 V</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


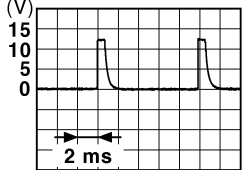
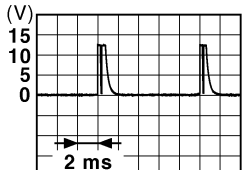
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
109 (Y)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	 <p style="text-align: right;">1.4 V</p>
					Lighting switch PASS	 <p style="text-align: right;">1.3 V</p>
					Lighting switch 2ND	 <p style="text-align: right;">1.3 V</p>
					Front wiper switch INT	 <p style="text-align: right;">1.3 V</p>
					Front wiper switch HI	 <p style="text-align: right;">1.3 V</p>
					ON	0 V
110 (G)	Ground	Hazard switch	Input	Hazard switch	OFF	 <p style="text-align: right;">1.1 V</p>

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

   ADP

 


 
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
113 (P)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
116 (SB)	Ground	Stop lamp switch 1	Input	—		Battery voltage
118 (P)	Ground	Stop lamp switch 2 (Without ICC)	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
		Stop lamp switch 2 (With ICC)		Stop lamp switch OFF (Brake pedal is not de- pressed) and ICC brake hold relay OFF		0 V
				Stop lamp switch ON (Brake pedal is de- pressed) or ICC brake hold relay ON		Battery voltage
119 (SB)	Ground	Front door lock as- sembly driver side (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	 1.1 V
					UNLOCK status (Unlock switch sensor ON)	0 V
121 (BR)	Ground	Key slot switch	Input	When the key is inserted into key slot		Battery voltage
				When the key is not inserted into key slot		0 V
123 (W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
124 (LG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (Door close)	 11.8 V
					ON (Door open)	0 V
132 (BR)	Ground	Power window switch communication	Input/ Output	Ignition switch ON	 10.2 V	
				Ignition switch OFF or ACC	Battery voltage	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

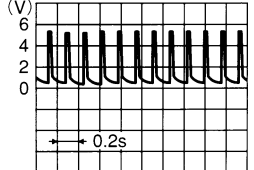Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
133 (W)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumination	ON (Tail lamps OFF)	9.5 V
					ON (Tail lamps ON)	<p>NOTE: The pulse width of this wave is varied by the illumination bright- ening/dimming level.</p>  <p style="text-align: right; font-size: small;">JPMIA0159GB</p>
134 (GR)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF	Battery voltage
					ON	0 V
137 (BG)	Ground	Receiver and sensor ground	Input	Ignition switch ON	0 V	
138 (Y)	Ground	Receiver and sensor power supply	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V
139 (L)	Ground	Tire pressure receiv- er communication	Input/ Output	Ignition switch ON	Standby state	 <p style="text-align: right; font-size: small;">OCC3881D</p>
					When receiving the signal from the transmitter	 <p style="text-align: right; font-size: small;">OCC3880D</p>
140 (GR)	Ground	Selector lever P/N position	Input	Selector lever	P or N position	Battery voltage
					Except P and N positions	0 V
141 (G)	Ground	Security indicator	Output	Security indicator	ON	0 V
					Blinking	 <p style="text-align: right; font-size: small;">JPMIA0014GB</p> <p style="text-align: center;">11.3 V</p>
					OFF	Battery voltage

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
142 (BG)	Ground	Combination switch OUTPUT 5	Output	All switches OFF	0 V
				Lighting switch 1ST	
				Lighting switch HI	
				Lighting switch 2ND	
				Turn signal switch RH	
					10.7 V
143 (P)	Ground	Combination switch OUTPUT 1	Output	All switches OFF (Wiper intermittent dial 4)	0 V
				Front wiper switch HI (Wiper intermittent dial 4)	
				Rear wiper switch INT (Wiper intermittent dial 4)	
				Any of the conditions below with all switches OFF	
				<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7 	
					10.7 V
144 (G)	Ground	Combination switch OUTPUT 2	Output	All switches OFF (Wiper intermittent dial 4)	0 V
				Front washer switch ON (Wiper intermittent dial 4)	
				Rear wiper switch ON (Wiper intermittent dial 4)	
				Rear washer switch ON (Wiper intermittent dial 4)	
				Any of the conditions below with all switches OFF	
<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 					
					10.7 V
145 (L)	Ground	Combination switch OUTPUT 3	Output	All switches OFF	0 V
				Front wiper switch INT	
				Front wiper switch LO	
				Lighting switch AUTO	
					10.7 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

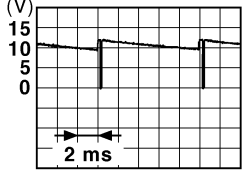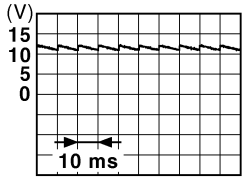Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
146 (SB)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	0 V
					Front fog lamp switch ON	
					Lighting switch 2ND	
					Lighting switch PASS	
					Turn signal switch LH	
150 (LG)	Ground	Driver door switch	Input	Driver door switch	OFF (Door close)	
					ON (Door open)	0 V
151 (G)	Ground	Rear window defog- ger relay control	Output	Rear window de- fogger	Active	0 V
				Not activated	Battery voltage	

A
B
C
D
E
F
G
H
I

ADP


K
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - BCM -

INFOID:00000000773677

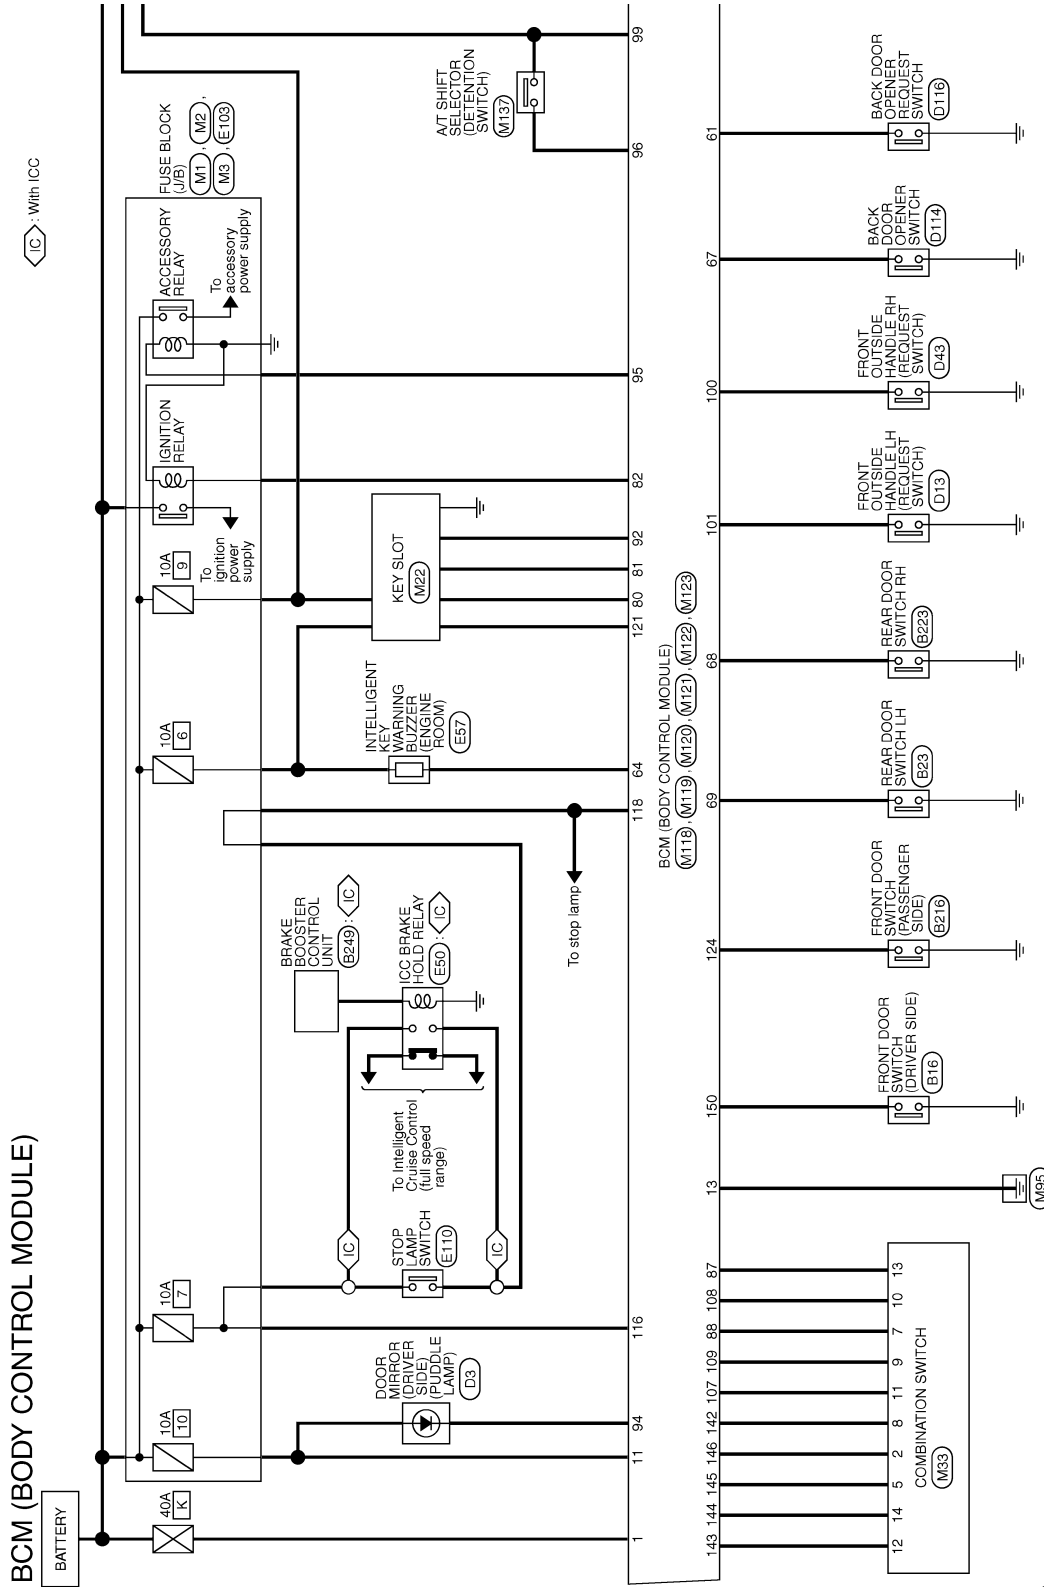


JRMWC4032GB

2011/06/24

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

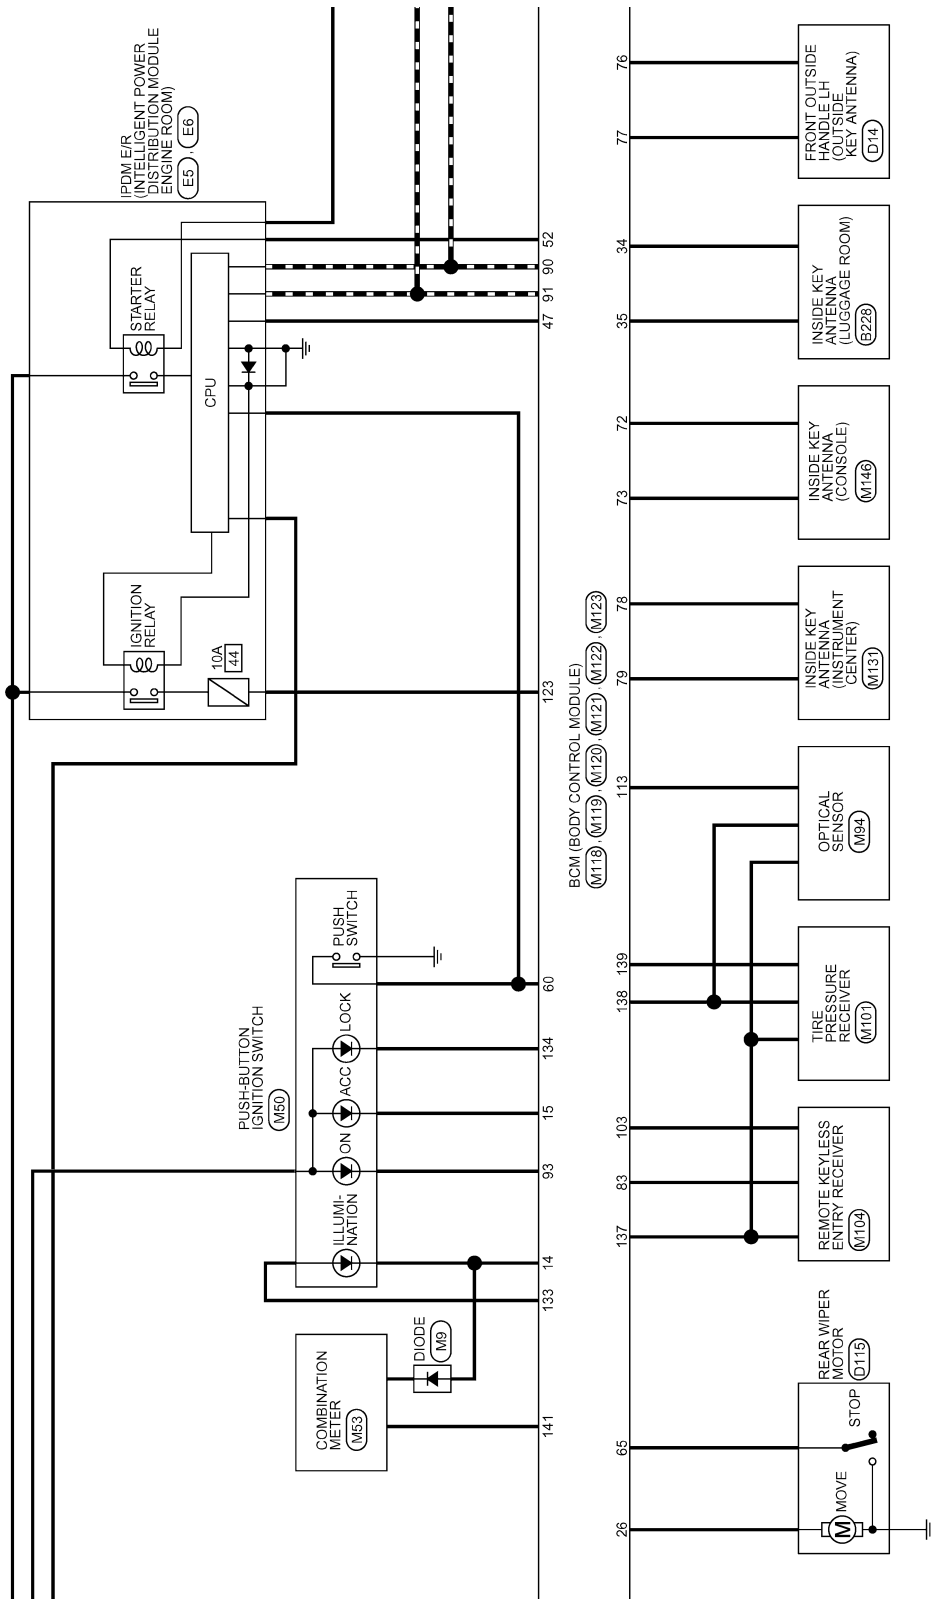



JRMWC4033GB

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

- ◊ : With sunroof
- ◊ : With automatic drive positioner
- ◊ : Without automatic drive positioner

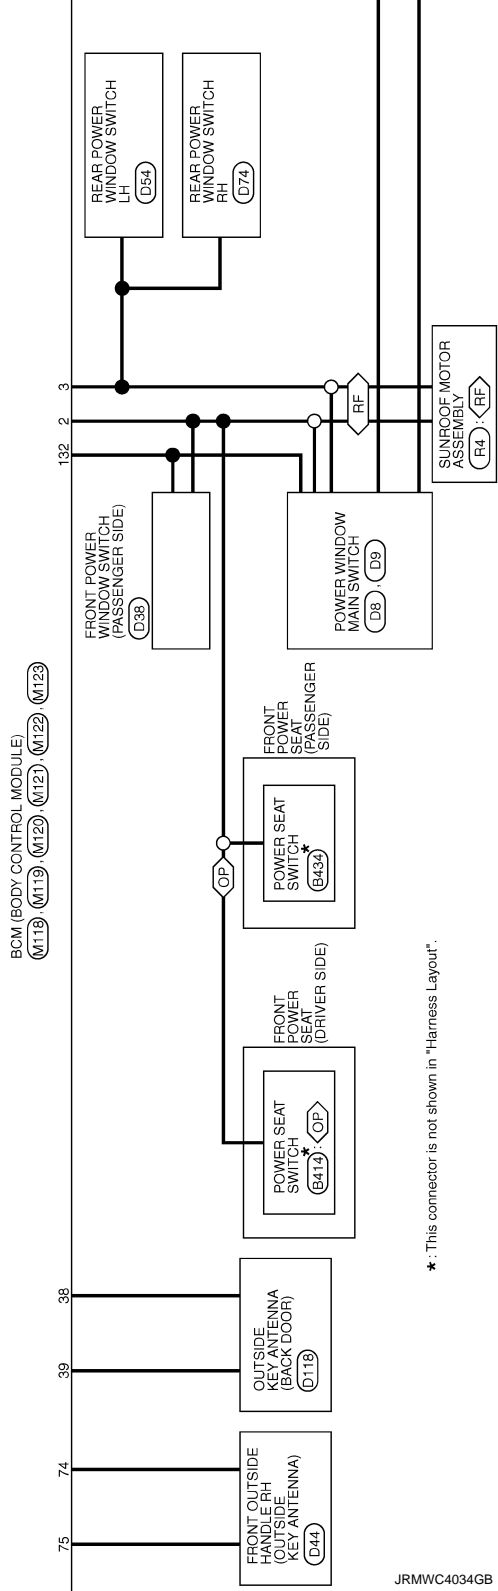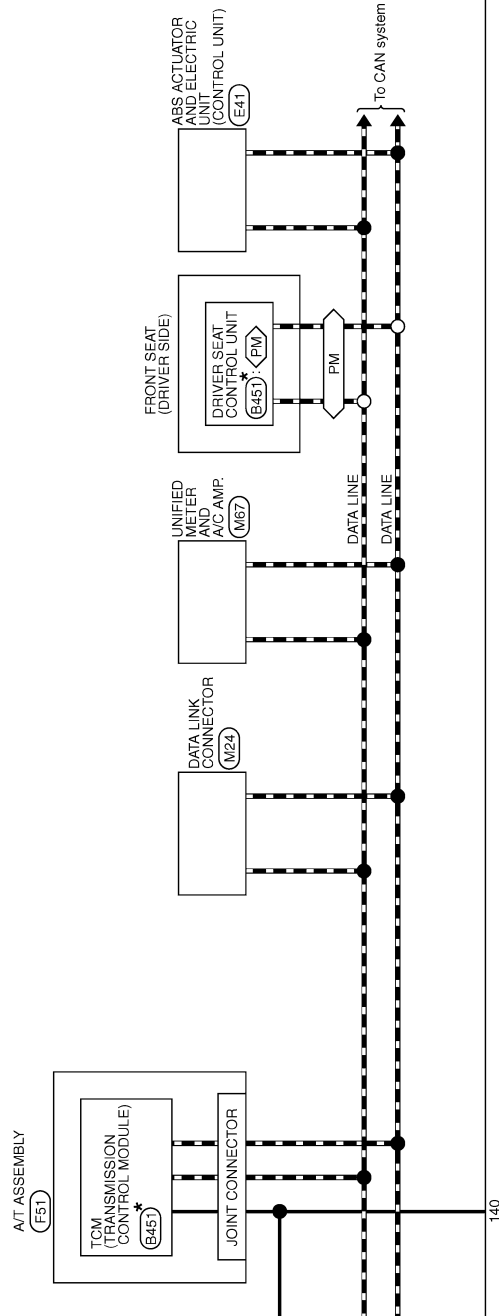


* : This connector is not shown in "Harness Layout".

JRMWC4034GB

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

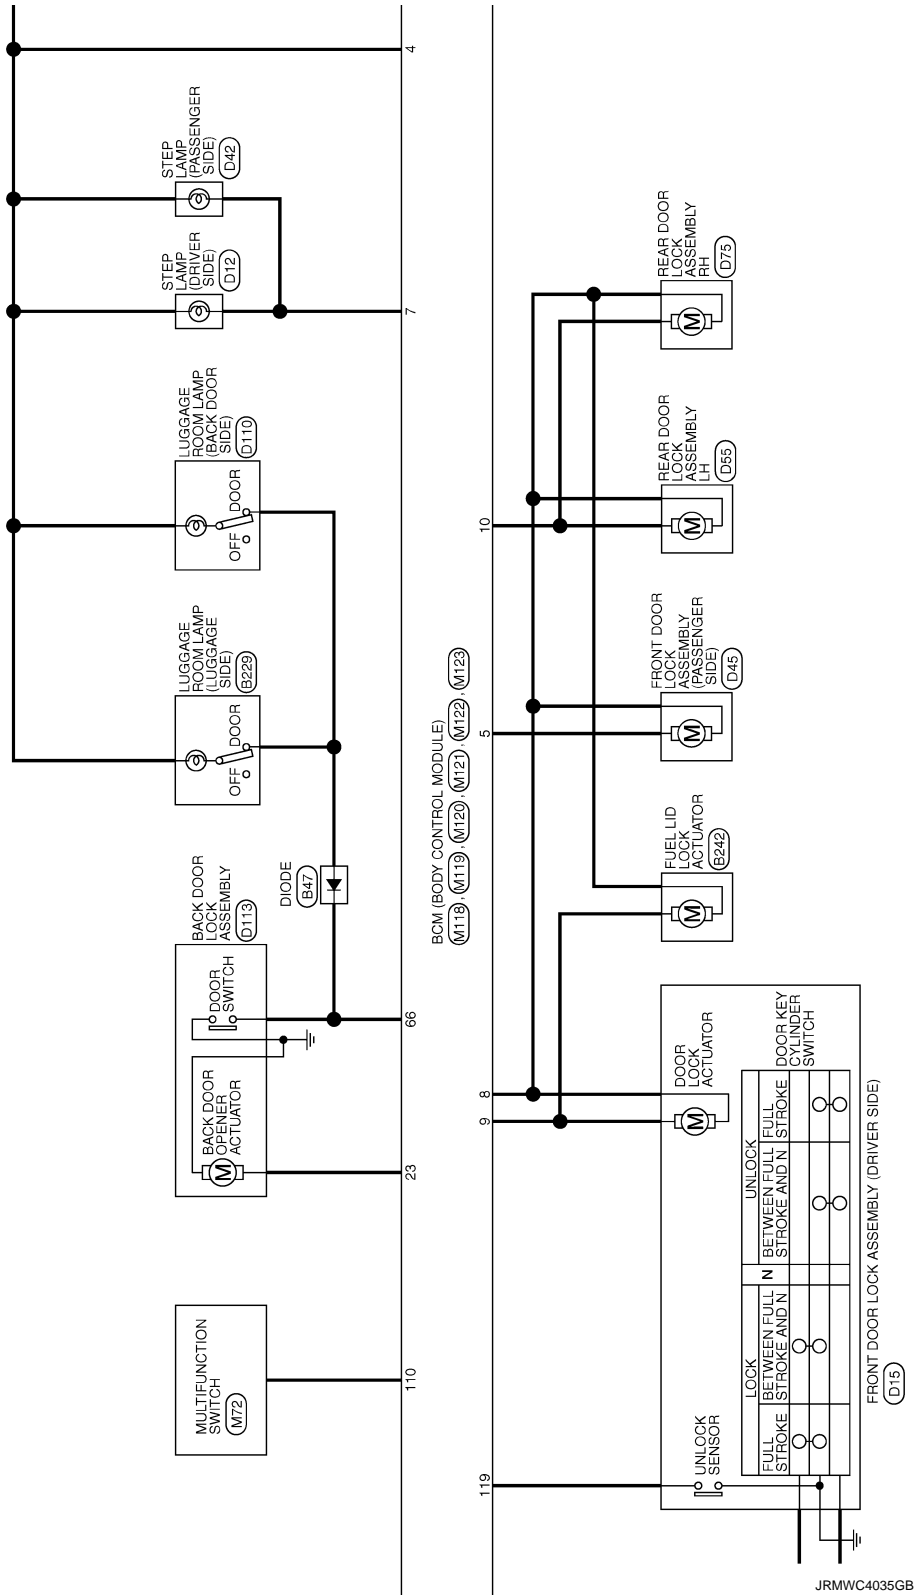

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

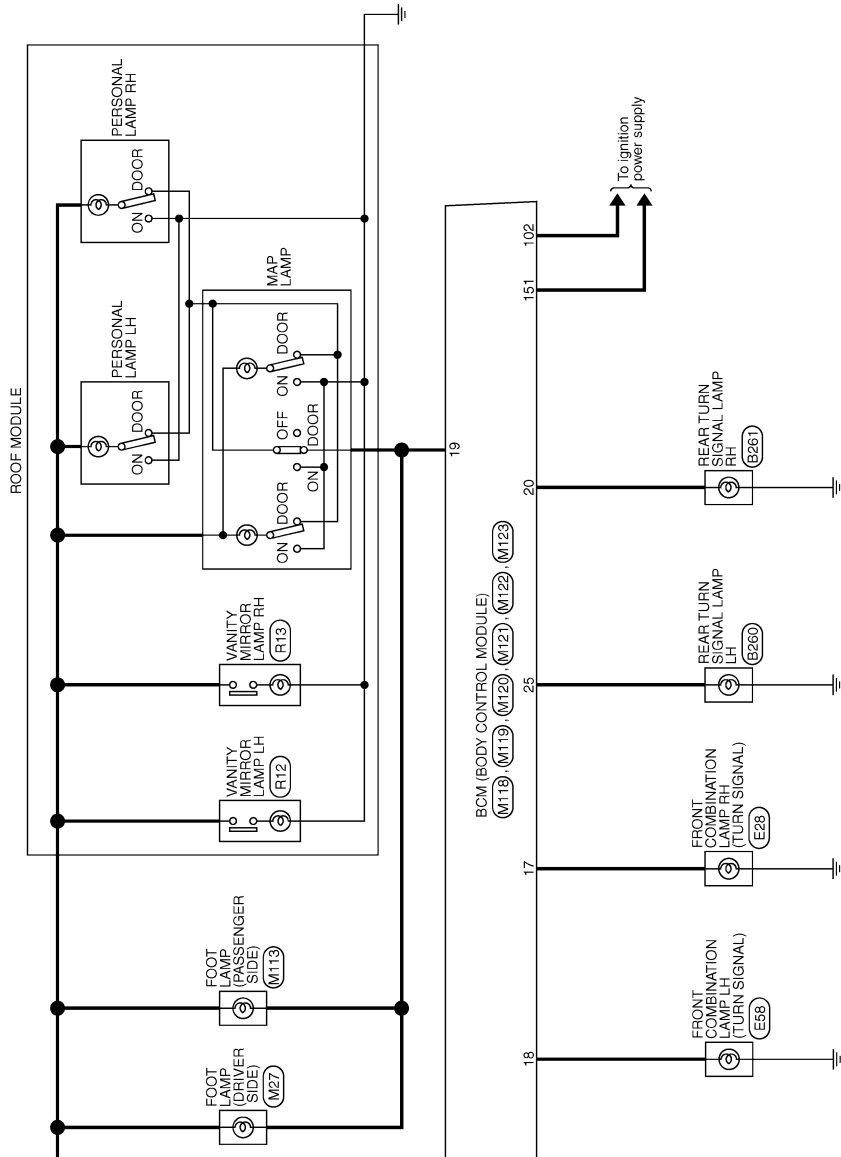

JRMWC4036GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)		
Connector No.	B242	FUEL LID LOCK ACTUATOR
Connector Name		MCHRWLC
Connector Type		
Terminal No.	1	2
Color of Wire	R	V
Signal Name [Specification]		
Connector No.	B238	INSIDE KEY ANTENNA (LUGGAGE ROOM)
Connector Name		IKO2FGY
Connector Type		
Terminal No.	1	2
Color of Wire	V	SB
Signal Name [Specification]		
Connector No.	B229	BRAKE BOOSTER CONTROL UNIT
Connector Name		PTC4FGF
Connector Type		
Terminal No.	33	40
Color of Wire	BR	SB
Signal Name [Specification]	IGNITION	IGNITION
		IBAOFF SW
		G
		GROUND
		B
		V
		BRAKE HOLD RLY DRIVE SIGNAL
Terminal No.	1	2
Color of Wire	GR	L
Signal Name [Specification]		
Connector No.	B229	LUGGAGE ROOM LAMP (LUGGAGE SIDE)
Connector Name		TKO3FW
Connector Type		
Terminal No.	1	2
Color of Wire	GR	L
Signal Name [Specification]		
Terminal No.	1	2
Color of Wire	B	L
Signal Name [Specification]		
Connector No.	B216	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Name		AD3FW
Connector Type		
Terminal No.	1	2
Color of Wire	B	L
Signal Name [Specification]		
Connector No.	B223	REAR DOOR SWITCH RH
Connector Name		AD3FW
Connector Type		
Terminal No.	1	2
Color of Wire	L	L
Signal Name [Specification]		
Connector No.	B223	REAR DOOR SWITCH LH
Connector Name		AD3FW
Connector Type		
Terminal No.	1	2
Color of Wire	LG	L
Signal Name [Specification]		
Connector No.	B47	DIODE
Connector Name		24335_CS900
Connector Type		
Terminal No.	1	2
Color of Wire		
Signal Name [Specification]		

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

JRMWG8098GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.	B260
Connector Name	REAR TURN SIGNAL LAMP LH
Connector Type	HSQ2FG-W




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-

Connector No.	B261
Connector Name	REAR TURN SIGNAL LAMP RH
Connector Type	HSQ2FG-W



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	B	-

Connector No.	B414
Connector Name	POWER SEAT SWITCH
Connector Type	NS1DFW-CS

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-
3	G/Y	-
4	P	-
5	W	-
6	U/Y	-
7	U/R	-
8	U/R	-
9	U/R	-
10	G/W	-

Connector No.	B434
Connector Name	POWER SEAT SWITCH
Connector Type	NS1DFW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-
3	G/Y	-
4	P	-
5	W	-
6	V	-
7	U/Y	-
8	U/R	-
9	U/R	-
10	G/W	-

Connector No.	B451
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH32FW

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/W	RX
2	R/Y	CAN-H
3	W/G	PULSE (RECLINING)
4	P/B	PULSE (RECLINING)
5	BR	SLIDING SW (BACKWARD)
6	BR	SLIDING SW (FORWARD)
7	GR	RECLINING SW (BACKWARD)
8	GR	RECLINING SW (FORWARD)
9	G	REAR LIFTING SW (DOWNWARD)
10	G	REAR LIFTING SW (UPWARD)
11	O	TX
12	V/R	CAN-L
13	V	P RANGE SW
14	L/Y	PULSE (SLIDING)
15	R	PULSE (SLIDING)
16	GR	PULSE (P/LIFTING)
17	Y	SLIDING SW (FORWARD)
18	Y	SLIDING SW (FORWARD)
19	R/G	RECLINING SW (FORWARD)
20	W/B	RECLINING SW (FORWARD)
21	P/L	FRONT LIFTING SW (UPWARD)
22	P/L	REAR LIFTING SW (UPWARD)
23	GR	SENSOR GND
24	B/W	GND (SIGNAL)

Connector No.	D3
Connector Name	DOOR MIRROR (DRIVER SIDE)
Connector Type	TH42NW-RH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	-
2	B	-
3	B	SIDE CAMERA LH COMV
4	Y	SIDE CAMERA LH IMAGE SIGNAL
5	R	SIDE CAMERA LH POWER SUPPLY
6	R	-
7	W	-
8	W	-
9	G	-
10	G	-
11	O	-
12	U/S	-
13	G	SIDE CAMERA LH IMAGE GND
14	W	SIDE CAMERA LH GND
15	B	-
16	GR	-
17	BR	-
18	Y	-
19	Y	-
20	V	-

Connector No.	D5
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	GR	-
3	U/R	-
4	V	-

JRMWG8099GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

5	O	-	-
6	Y	-	-
7	BR	-	-
8	L	-	-
9	O	-	-
10	Y	-	-
11	G	-	-
13	P	-	-
14	V	-	-
15	B	-	-

Connector No.	D9
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	HS3PW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
17	B	-
19	W	-

Connector No.	D12
Connector Name	STEP LAMP (DRIVER SIDE)
Connector Type	TB02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	SB	-

Connector No.	D13
Connector Name	FRONT OUTSIDE HANDLE LH (REQUEST SWITCH)
Connector Type	RK02FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B	-

Connector No.	D14
Connector Name	FRONT OUTSIDE HANDLE RH (OUTSIDE KEY ANTENNA)
Connector Type	RK02MGF



Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	-
2	SB	-

Connector No.	D15
Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)
Connector Type	ED04GY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	P	-
3	L	-
4	B	-
5	Y	-
6	V	-

Connector No.	D28
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Type	HS16PW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
3	L	-
4	G	-
8	W	-
9	G	-
10	W	-
11	B	-
12	R	-
15	O	-
16	V	-

Connector No.	D42
Connector Name	STEP LAMP (PASSENGER SIDE)
Connector Type	TB02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	SB	-

Connector No.	D43
Connector Name	FRONT OUTSIDE HANDLE RH (REQUEST SWITCH)
Connector Type	RK02FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

JRMWG8100GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


BCM (BODY CONTROL MODULE)

Connector No.	D44
Connector Name	FRONT DOOR LOCK ASSEMBLY (PASSENGER SIDE)
Connector Type	RK02MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	V	-

Connector No.	D45
Connector Name	FRONT DOOR LOCK ASSEMBLY (PASSENGER SIDE)
Connector Type	ES05GY-RS

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	LG	-

Connector No.	D54
Connector Name	REAR POWER WINDOW SWITCH LH
Connector Type	NS08FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	V	-
3	G	-
4	L	-
5	W	-
7	B	-

Connector No.	D55
Connector Name	REAR DOOR LOCK ASSEMBLY LH
Connector Type	ES05GY-RS

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	G	-

Connector No.	D74
Connector Name	REAR POWER WINDOW SWITCH RH
Connector Type	NS08FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	G	-
4	P	-
5	D	-
7	B	-

Connector No.	D75
Connector Name	REAR DOOR LOCK ASSEMBLY RH
Connector Type	ES05GY-RS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	V	-

Connector No.	D110
Connector Name	LOGO/GE LED/ML LAMP (BACK DOOR SIDE)
Connector Type	TK03FW

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	P	-

Connector No.	D113
Connector Name	BACK DOOR LOCK ASSEMBLY
Connector Type	NS04FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B	-
3	V	-
4	B	-

JRMWG8101GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.	D114
Connector Name	BACK DOOR OPENER SWITCH
Connector Type	1K02NBRP



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	
2	B	

Connector No.	D115
Connector Name	REAR WIPER MOTOR
Connector Type	CGAFW-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
2	G	
3	O	
4	B	

Connector No.	D116
Connector Name	BACK DOOR OPENER REQUEST SWITCH
Connector Type	1K02NBRP




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	
2	B	

Connector No.	D118
Connector Name	OUTSIDE KEY ANTENNA (BACK DOOR)
Connector Type	PROZFGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	
2	R	

Connector No.	E5
Connector Name	POWER (INTELLIGENT POWER) DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	1H20PW-CS12-A4-1V

 

Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	
5	L	
7	R	
12	B/W	
13	Y	
16	LG	
19	W	
22	G	
27	RG	
28	L	
30	GR	
36	G	

Connector No.	E6
Connector Name	POWER (INTELLIGENT POWER) DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	1H88FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	
40	L	
41	B/W	
43	S8	
44	BR	
45	G	
46	R	

Connector No.	E28
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RSC8FB-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
2	B	
3	B/Y	
4	B/W	
5	BG	
6	V	
7	BR	
8	P	

Connector No.	E41
Connector Name	ABS (ACTION AND ELECTRIC ANTICONTROL UNIT)
Connector Type	1BA02FB-AH24-4H



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	
2	G	GROUND
3	R	URVR
4	B	GROUND
5	Y	DSFL
6	BG	DPRL
7	BR	DPRL
9	B	DPFR
10	W	DPFR
14	P	CAP-L
25	L	BS-L
26	G	DPFL
27	GR	DPRL

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

JRMWG8102GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

28	G	UZ
29	LG	DSRR
30	SB	BLS
31	R	VDC OF SW
35	L	CAN-H
45	B	BLS-H

Connector No.	E50
Connector Name	ICC BRAKE HOLD RELAY
Connector Type	IMB6FEY-R-US



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	B	-
3	P	-
4	SB	-
6	P	-
7	R	-

Connector No.	E57
Connector Name	INTUSUBSTR ETN MOUDES/STATER (BRUKE TOON)
Connector Type	RK03FBR




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	V	-

Connector No.	E58
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	RS08FB-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
2	B	-
3	S/Y	-
4	S/W	-
5	V	-
6	G	-
8	SG	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-GS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1F	SB	-
2F	W	-
4F	G	-
6F	BR	-
8F	L	-
9F	R	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	IM34TW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	W	-
3	Y	-
4	SB	-

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	RK10FE-DSV



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	BR	-
3	L	-
4	V	-
5	B	-
6	Y	-
7	R	-
8	P	-
9	GR	-
10	B	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1A	GR	-
2A	G	-
3A	L	-
4A	P	-
5A	V	-
6A	R	-
7A	L	-
8A	-	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-GS



Terminal No.	Color Of Wire	Signal Name [Specification]
3B	P	-
4B	G	-
5B	BG	-
6B	Y	-
7B	P	-
8B	R	-
9B	SB	-

JRMWG8103GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	MS12FW-ES



Terminal No.	Color	Wire	Signal Name [Specification]
10C	L	-	-
11C	R	-	-
9C	BE	-	-
7C	R	-	-
6C	B	-	-
12C	BC	-	-

Connector No.	M9
Connector Name	DIODE
Connector Type	24235, CS990



Terminal No.	Color	Wire	Signal Name [Specification]
1	R	-	-
2	W	-	-

Connector No.	M22
Connector Name	KEY SLOT
Connector Type	TH12FW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
1	R	-	BAT
2	GR	-	CLOCK
3	W	-	DATA
5	Y	-	ILL BAT
6	LG	-	ILL
7	B	-	GROUND
11	BR	-	KEY SWITCH SIGNAL

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW




Terminal No.	Color	Wire	Signal Name [Specification]
3	LG	-	-
4	B	-	-
5	B	-	-
6	L	-	-
7	V	-	-
8	G	-	-
11	SB	-	-
14	P	-	-
15	Y	-	-

Connector No.	M27
Connector Name	FOOT LAMP (DRIVER SIDE)
Connector Type	AD21W



Terminal No.	Color	Wire	Signal Name [Specification]
1	R	-	-
2	BR	-	-

Connector No.	ME3
Connector Name	COMBINATION SWITCH
Connector Type	TH15FW-NH

 


Terminal No.	Color	Wire	Signal Name [Specification]
1	P	-	FR WASHER(O)
2	SR	-	OUTPUT 4
3	GR	-	FR WASHER(O)
4	G	-	IGN
5	L	-	OUTPUT 3
6	B	-	GROUND
7	V	-	INPUT 3
8	BG	-	OUTPUT 5
9	Y	-	INPUT 2
10	R	-	INPUT 4
11	LG	-	INPUT 1
12	P	-	OUTPUT 1
13	BR	-	INPUT 5
14	G	-	OUTPUT 2

Connector No.	MS0
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FB



Terminal No.	Color	Wire	Signal Name [Specification]
1	B	-	-
2	W	-	-
3	W	-	-
4	BR	-	-
5	GR	-	-
6	Y	-	-
7	V	-	-
8	P	-	-

Connector No.	MS3
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH

 

Terminal No.	Color	Wire	Signal Name [Specification]
1	GR	-	BATTERY POWER SUPPLY
2	LG	-	COMMUNICATION SIGNAL (METER->AMP.)
3	GR	-	COMMUNICATION SIGNAL (AMP->METER)
5	B	-	GROUND
6	P	-	ALTERNATOR SIGNAL
7	BR	-	AIR BAG SIGNAL
10	G	-	SECURITY SIGNAL
15	B	-	GROUND
16	B	-	METER CONTROL SWITCH GROUND
19	B	-	ILL GND
20	RS	-	ILL
21	RS	-	IGNITION SIGNAL

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

22	B	GROUND
24	BR	COMMUNICATION SIGNAL (LCD->AMP.)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PULSES)
27	V	PARKING BRAKE SWITCH SIGNAL
28	W	BRAKE FLUID LEVEL SWITCH SIGNAL
29	SR	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
30	G	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
31	L	WASHER LEVEL SWITCH SIGNAL
33	B	ILLUMINATION CONTROL SIGNAL
36	LG	SELECT SWITCH SIGNAL
37	SB	ENTER SWITCH SIGNAL
38	L	TRIP A/R RESET SWITCH SIGNAL
39	P	ILLUMINATION CONTROL SWITCH SIGNAL (-)
40	BS	ILLUMINATION CONTROL SWITCH SIGNAL (+)


Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FM-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
41	V	ACC POWER SUPPLY
42	Y	FUEL LEVEL SENSOR SIGNAL
43	R	INTAKE SENSOR SIGNAL
44	LG	IN-VEHICLE SENSOR SIGNAL
45	P	AMBIENT SENSOR SIGNAL
46	BS	SUNLOAD SENSOR SIGNAL
47	G	EXHAUST GAS / OUTSIDE OXYGEN DETECTING SENSOR SIGNAL
53	G	IGNITION POWER SUPPLY
54	Y	BATTERY POWER SUPPLY
55	B	GROUND
56	L	CAN-H
57	W	BRAKE FLUID LEVEL SWITCH SIGNAL
58	BR	FUEL LEVEL SENSOR GROUND
59	GR	INTAKE SENSOR GROUND
60	L	IN-VEHICLE SENSOR GROUND
61	BR	AMBIENT SENSOR GROUND
62	B	SUNLOAD SENSOR GROUND
63	BS	ECU SIGNAL

69	L	A/C LAMP SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	B	GROUND
72	P	CAN-L

Connector No.	M72
Connector Name	MULTI FUNCTION SWITCH
Connector Type	TH16FM-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
3	B	GROUND
4	R	ILL
5	Y	ILL CONT
6	SR	AV COMM (H)
8	LG	AV COMM (L)
9	B	SW GND
14	Y	DISK EJECT SIGNAL
16	G	HAZARD ON

Connector No.	M84
Connector Name	OPTICAL SENSOR
Connector Type	TK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	POWER
2	P	OUTPUT
3	B	GROUND

Connector No.	M101
Connector Name	TIRE PRESSURE RECEIVER
Connector Type	TK04FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	GROUND
2	L	SIGNAL
4	Y	BATTERY

Connector No.	M108
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	JAB04FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	GROUND
2	Y	SIGNAL OUTPUT
4	LG	BATTERY

Connector No.	M113
Connector Name	FOOT LAMP (PASSENGER SIDE)
Connector Type	AD2FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	BR	-

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MG2FP-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	W	POWER WINDOW POWER SUPPLY (BAT)
3	Y	POWER WINDOW POWER SUPPLY (RAP)

JRMWG8105GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No. M119
 Connector Name BCM (BODY CONTROL MODULE)
 Connector Type NS12FW-C5




Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	L	PASSENGER DOOR UNLOCK OUTPUT
7	Y	STEP LAMP CONT
8	V	ALL DOOR FUEL ID LOCK OUTPUT
9	G	DRIVER DOOR FUEL ID LOCK OUTPUT
10	BR	REAR DOOR UNLOCK OUTPUT
11	R	BAT (POST)
12	R	IGNITION SW (LOCK)
13	B	IGNITION SW (L/GND)
14	V	PUSH-BUTTON (ACC LOCK)
15	Y	ACC LAMP
17	W	TURN SIGNAL RH (FRONT)
18	RG	TURN SIGNAL LH (FRONT)
19	V	INT ROOM LAMP CONT

Connector No. M121
 Connector Name BCM (BODY CONTROL MODULE)
 Connector Type TH40FG-NH






Terminal No.	Color Of Wire	Signal Name [Specification]
34	SB	LUGGAGE ROOM ANT-
35	V	LUGGAGE ROOM ANT+
38	B	BACK DOOR ANT-
39	W	BACK DOOR ANT+
47	Y	IGN RELAY (PENDING) CONT
52	SB	STARTER RELAY CONT
60	BR	POWER SW
61	R	BACK DOOR SOLIST SW
62	V	TRUCK MOUNT OUTLET (REG ROOM)
65	RG	REAR WIPER STOP SWITCH (DOOR)
66	B	BACK DOOR SW
67	GR	BACK DOOR OPENER SW
68	BR	REAR RH DOOR SW
69	R	REAR LH DOOR SW

Connector No. M122
 Connector Name BCM (BODY CONTROL MODULE)
 Connector Type TH40FB-NH





Terminal No.	Color Of Wire	Signal Name [Specification]
72	R	ROOM ANT2-
73	G	ROOM ANT2+
74	SB	PASSENGER DOOR ANT-
75	GR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+

Connector No. M120
 Connector Name BCM (BODY CONTROL MODULE)
 Connector Type NS12FW-C5

Terminal No.	Color Of Wire	Signal Name [Specification]
20	V	TURN SIGNAL LH (REAR)
23	G	BACK DOOR OPEN OUTPUT
25	G	TURN SIGNAL LH (REAR)
26	G	REAR WIPER OUTPUT

Connector No. M123
 Connector Name BCM (BODY CONTROL MODULE)
 Connector Type TH40FG-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
78	Y	ROOM ANT1-
79	BR	ROOM ANT1+
80	GR	NAVS ANT AMP.
81	W	NAVS ANT AMP.
82	R	IGN RELAY (BI) CONT
83	Y	KEYLESS ENTRY RECEIVER COMM
87	BR	COMB SW INPUT 5
88	V	COMB SW INPUT 3
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL CONT
93	V	ON IND
94	Y	PUDDLE LAMP CONT
95	BG	ACC RELAY CONT
96	GR	A/T SHIFT SELECTOR POWER SUPPLY
99	R	SHIFT P
100	G	PASSENGER DOOR REQUEST SW
101	SB	DRIVER DOOR REQUEST SW
102	RG	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
107	GR	COMB SW INPUT 1
108	Y	COMB SW INPUT 2
109	V	COMB SW INPUT 4
110	G	HAZARD SW

Connector No. M137
 Connector Name A/T SHIFT SELECTOR
 Connector Type TH12FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	Y	-

Connector No. M131
 Connector Name INSIDE KEY ANTENNA (INSTRUMENT CENTER)
 Connector Type PRO2FGY




 

Terminal No.	Color Of Wire	Signal Name [Specification]
137	BG	RECEIVER/SENSOR GND
138	Y	RECEIVER/SENSOR POWER SUPPLY
139	L	TIRE PRESSURE RECEIVER COMM
140	GR	SHIFT N/P
141	G	SECURITY I/O LAMP CONT
142	RG	COMB SW OUTPUT 5
143	P	COMB SW OUTPUT 1
144	G	COMB SW OUTPUT 2
145	L	COMB SW OUTPUT 3
146	SB	COMB SW OUTPUT 4
150	LG	DRIVER DOOR SW
151	G	REAR WINDOW DEFROSTER RELAY CONT

Connector No. M137
 Connector Name A/T SHIFT SELECTOR
 Connector Type TH12FW-NH





Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	Y	-

Connector No. M123
 Connector Name BCM (BODY CONTROL MODULE)
 Connector Type TH40FG-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
113	P	OPTICAL SENSOR
116	SB	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	BR	KEY SLOT SW
123	W	IGN F78
124	LG	PASSENGER DOOR SW
132	BR	POWER WINDOW SW (DRIVE)
133	W	PUSH-BUTTON IGNITION SW ILL POWER
134	GR	LOCK IND

Connector No. M123
 Connector Name BCM (BODY CONTROL MODULE)
 Connector Type TH40FG-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
113	P	OPTICAL SENSOR
116	SB	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	BR	KEY SLOT SW
123	W	IGN F78
124	LG	PASSENGER DOOR SW
132	BR	POWER WINDOW SW (DRIVE)
133	W	PUSH-BUTTON IGNITION SW ILL POWER
134	GR	LOCK IND

Connector No. M137
 Connector Name A/T SHIFT SELECTOR
 Connector Type TH12FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	Y	-

Connector No. M137
 Connector Name A/T SHIFT SELECTOR
 Connector Type TH12FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	Y	-

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP



JRMWG8106GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


 
BCM (BODY CONTROL MODULE)			
5	G	-	-
7	R	-	-
8	SB	-	-
9	B	-	-
10	GR	-	-
11	R	-	-

Connector No.	M145
Connector Name	INSIDE KEY ANTENNA (CONSOLE)
Connector Type	RK02FGY

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	R	-

Connector No.	R4
Connector Name	SUNROOF MOTOR ASSEMBLY
Connector Type	YEA1DFG

Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	SW-BIT1
5	P	SW-BIT0
7	BR	*B
8	L	SPEED SENSOR(P)
9	Y	TIMER(+5V)
10	G	GROUND

Connector No.	RL2
Connector Name	VANITY MIRROR LAMP LH
Connector Type	MGAD3FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	RE3
Connector Name	VANITY MIRROR LAMP RH
Connector Type	MGAD3FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	-
2	-	-

JRMWG8107GB

INFOID:000000007773678

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation	
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC	A
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC	B
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC	B
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC	
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF	C
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent • Starter control relay signal • Starter relay status signal	D
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent • Starter motor relay control signal • Starter relay status signal (CAN)	E
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled • IGN relay (IPDM E/R) control signal: OFF (Battery voltage) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)	F
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled • Power position changes to ACC • Receives engine status signal (CAN)	G
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal	H
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal	
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization	I

REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal. When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

1. More than 1 minute is passed after the rear wiper stops.
2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

DTC Inspection Priority Chart

INFOID:00000000773679

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC	
1	B2562: LOW VOLTAGE	N
2	• U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)	O
3	• B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI SCANNING	P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Priority	DTC
4	<ul style="list-style-type: none"> • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2608: STARTER RELAY • B260A: IGNITION RELAY • B260F: ENG STATE SIG LOST • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26EA: KEY REGISTRATION • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED SIG
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1734: CONTROL UNIT
6	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA

DTC Index

INFOID:00000000773680

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-18. "COMMON ITEM : CONSULT Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	—	BCS-37
U1010: CONTROL UNIT (CAN)	—	—	—	—	BCS-38
U0415: VEHICLE SPEED SIG	—	—	—	—	BCS-39

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2190: NATS ANTENNA AMP	×	—	—	—	SEC-40
B2191: DIFFERENCE OF KEY	×	—	—	—	SEC-43
B2192: ID DISCORD BCM-ECM	×	—	—	—	SEC-44
B2193: CHAIN OF BCM-ECM	×	—	—	—	SEC-45
B2195: ANTI SCANNING	×	—	—	—	SEC-46
B2553: IGNITION RELAY	—	×	—	—	PCS-48
B2555: STOP LAMP	—	×	—	—	SEC-47
B2556: PUSH-BTN IGN SW	—	×	×	—	SEC-49
B2557: VEHICLE SPEED	×	×	×	—	SEC-51
B2560: STARTER CONT RELAY	×	×	×	—	SEC-52
B2562: LOW VOLTAGE	—	×	—	—	BCS-40
B2601: SHIFT POSITION	×	×	×	—	SEC-53
B2602: SHIFT POSITION	×	×	×	—	SEC-56
B2603: SHIFT POSI STATUS	×	×	×	—	SEC-59
B2604: PNP SW	×	×	×	—	SEC-62
B2605: PNP SW	×	×	×	—	SEC-64
B2608: STARTER RELAY	×	×	×	—	SEC-66
B260A: IGNITION RELAY	×	×	×	—	PCS-50
B260F: ENG STATE SIG LOST	×	×	×	—	SEC-68
B2614: ACC RELAY CIRC	—	×	×	—	PCS-52
B2615: BLOWER RELAY CIRC	—	×	×	—	PCS-55
B2616: IGN RELAY CIRC	—	×	×	—	PCS-58
B2617: STARTER RELAY CIRC	×	×	×	—	SEC-71
B2618: BCM	×	×	×	—	PCS-61
B261A: PUSH-BTN IGN SW	—	×	×	—	SEC-73
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	—	SEC-76
B2621: INSIDE ANTENNA	—	×	—	—	DLK-60
B2622: INSIDE ANTENNA	—	×	—	—	DLK-62
B2623: INSIDE ANTENNA	—	×	—	—	DLK-64
B26E1: ENG STATE NO RES	×	×	×	—	SEC-69
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	—	SEC-70
C1704: LOW PRESSURE FL	—	—	—	×	WT-23
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	
C1708: [NO DATA] FL	—	—	—	×	WT-25
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
C1716: [PRESSDATA ERR] FL	—	—	—	×	WT-28
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	WT-30
C1734: CONTROL UNIT	—	—	—	×	WT-32

MANUAL FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

MANUAL FUNCTION DOES NOT OPERATE

ALL COMPONENT

ALL COMPONENT : Diagnosis Procedure

INFOID:000000007456515

1. CHECK DRIVER SEAT CONTROL UNIT POWER SUPPLY AND GROUND CIRCUIT

Check driver seat control unit power supply and ground circuit.

Refer to [ADP-58. "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2. CHECK AUTOMATIC DRIVE POSITIONER CONTROL UNIT POWER SUPPLY AND GROUND CIRCUIT

Check automatic drive positioner control unit power supply and ground circuit.

Refer to [ADP-59. "AUTOMATIC DRIVE POSITIONER CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42. "Intermittent Incident"](#).

NO >> GO TO 1.

POWER SEAT

POWER SEAT : Diagnosis Procedure

INFOID:000000007456516

ADP

1. CHECK POWER SEAT SWITCH GROUND CIRCUIT

Check power seat switch ground circuit.

Refer to [ADP-81. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connector.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42. "Intermittent Incident"](#).

NO >> GO TO 1.

STEERING POSITION FUNCTION DOES NOT OPERATE

STEERING POSITION FUNCTION DOES NOT OPERATE : Diagnosis Procedure

INFOID:000000007456517

1. CHECK TILT & TELESCOPIC SWITCH GROUND CIRCUIT

Check tilt & telescopic switch ground circuit.

Refer to [ADP-82. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connector.

2. CONFIRM THE OPERATION

MANUAL FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

SEAT SLIDING

SEAT SLIDING : Diagnosis Procedure

INFOID:000000007456518

1.CHECK SLIDING MECHANISM

Check for the following.

- Mechanism deformation or pinched foreign materials.
- Interference with other parts because of poor installation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2.CHECK SLIDING SWITCH

Check sliding switch.

Refer to [ADP-61, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CHECK SLIDING MOTOR

Check sliding motor.

Refer to [ADP-107, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

SEAT RECLINING

SEAT RECLINING : Diagnosis Procedure

INFOID:000000007456519

1.CHECK RECLINING MECHANISM

Check for the following.

- Mechanism deformation or pinched foreign materials.
- Interference with other parts because of poor installation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2.CHECK RECLINING SWITCH

Check reclining switch.

Refer to [ADP-63, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CHECK RECLINING MOTOR

Check reclining motor.

MANUAL FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

Refer to [ADP-109. "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-42. "Intermittent Incident"](#).
NO >> GO TO 1.

SEAT LIFTING (FRONT)

SEAT LIFTING (FRONT) : Diagnosis Procedure

INFOID:000000007456520

1.CHECK LIFTING (FRONT) MECHANISM

Check for the following.

- Mechanism deformation or pinched foreign materials.
- Interference with other parts because of poor installation.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunction parts.

2.CHECK LIFTING SWITCH (FRONT)

Check lifting switch (front).

Refer to [ADP-65. "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CHECK LIFTING MOTOR (FRONT)

Check lifting motor (front).

Refer to [ADP-111. "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-42. "Intermittent Incident"](#).
NO >> GO TO 1.

SEAT LIFTING (REAR)

SEAT LIFTING (REAR) : Diagnosis Procedure

INFOID:000000007456521

1.CHECK LIFTING (REAR) MECHANISM

Check for the following.

- Mechanism deformation or pinched foreign materials.
- Interference with other parts because of poor installation.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunction parts.

2.CHECK LIFTING SWITCH (REAR)

Check lifting switch (rear).

Refer to [ADP-67. "Component Function Check"](#).

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

MANUAL FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CHECK LIFTING MOTOR (REAR)

Check lifting motor (rear).

Refer to [ADP-113, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> GO TO 1.

STEERING TILT

STEERING TILT : Diagnosis Procedure

INFOID:000000007456522

1.CHECK STEERING TILT MECHANISM

Check for the following.

- Mechanism deformation or pinched foreign materials.
- Interference with other parts because of poor installation.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunction parts.

2.CHECK TILT SWITCH

Check tilt switch.

Refer to [ADP-69, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CHECK TILT MOTOR

Check tilt motor.

Refer to [ADP-115, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> GO TO 1.

STEERING TELESCOPIC

STEERING TELESCOPIC : Diagnosis Procedure

INFOID:000000007456523

1.CHECK STEERING TELESCOPIC MECHANISM

Check for the following.

- Mechanism deformation or pinched foreign materials.
- Interference with other parts because of poor installation.

Is the inspection result normal?

MANUAL FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

- YES >> GO TO 2.
NO >> Repair or replace the malfunction parts.

2.CHECK TELESCOPIC SWITCH

Check telescopic switch.
Refer to [ADP-71. "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CHECK TELESCOPIC MOTOR

Check telescopic motor.
Refer to [ADP-117. "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-42. "Intermittent Incident"](#).
NO >> GO TO 1.

DOOR MIRROR

DOOR MIRROR : Diagnosis Procedure

INFOID:000000007456524

1.CHECK DOOR MIRROR MECHANISM

Check for the following.

- Mechanism deformation or pinched foreign materials.
- Interference with other parts because of poor installation.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunction parts.

2.CHECK MIRROR SWITCH

Check mirror switch.
Refer to [ADP-78. "MIRROR SWITCH : Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CHECK MIRROR MOTOR

Check mirror motor.
Refer to [ADP-119. "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-42. "Intermittent Incident"](#).
NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

MEMORY FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

MEMORY FUNCTION DOES NOT OPERATE

ALL COMPONENT

ALL COMPONENT : Diagnosis Procedure

INFOID:000000007456525

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2.PERFORM INITIALIZATION AND MEMORY STORING PROCEDURE

1. Perform initialization procedure.

Refer to [ADP-9. "SYSTEM INITIALIZATION : Special Repair Requirement"](#).

2. Perform memory storing procedure.

Refer to [ADP-9. "MEMORY STORING : Special Repair Requirement"](#).

3. Check memory function.

Refer to [ADP-25. "MEMORY FUNCTION : System Description"](#).

Is the inspection result normal?

YES >> Memory function is normal.

NO >> GO TO 3.

3.CHECK SEAT MEMORY SWITCH

Check seat memory switch.

Refer to [ADP-73. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace seat memory switch.

4.CHECK DETENTION SWITCH

Check detention switch.

Refer to [ADP-83. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunction parts.

5.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42. "Intermittent Incident"](#).

NO >> GO TO 1.

SEAT SLIDING

SEAT SLIDING : Diagnosis Procedure

INFOID:000000007456526

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [ADP-206. "SEAT SLIDING : Diagnosis Procedure"](#)

2.CHECK SLIDING SENSOR

Check sliding sensor.

Refer to [ADP-87. "Component Function Check"](#).

Is the inspection result normal?

MEMORY FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

- YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> GO TO 1.

SEAT RECLINING

SEAT RECLINING : Diagnosis Procedure

INFOID:000000007456527

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Refer to [ADP-206, "SEAT RECLINING : Diagnosis Procedure"](#)

2.CHECK RECLINING SENSOR

Check reclining sensor.

Refer to [ADP-90, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> GO TO 1.

SEAT LIFTING (FRONT)

SEAT LIFTING (FRONT) : Diagnosis Procedure

INFOID:000000007456528

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Refer to [ADP-207, "SEAT LIFTING \(FRONT\) : Diagnosis Procedure"](#)

2.CHECK LIFTING SENSOR (FRONT)

Check lifting sensor (front).

Refer to [ADP-93, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> GO TO 1.

SEAT LIFTING (REAR)

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

MEMORY FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

SEAT LIFTING (REAR) : Diagnosis Procedure

INFOID:000000007456529

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [ADP-207, "SEAT LIFTING \(REAR\) : Diagnosis Procedure"](#)

2.CHECK LIFTING SENSOR (REAR)

Check lifting sensor (rear).

Refer to [ADP-96, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

STEERING TELESCOPIC

STEERING TELESCOPIC : Diagnosis Procedure

INFOID:000000007456530

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [ADP-208, "STEERING TELESCOPIC : Diagnosis Procedure"](#)

2.CHECK TELESCOPIC SENSOR

Check steering telescopic sensor.

Refer to [ADP-101, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

STEERING TILT

STEERING TILT : Diagnosis Procedure

INFOID:000000007456531

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [ADP-208, "STEERING TILT : Diagnosis Procedure"](#)

2.CHECK TILT SENSOR

Check steering tilt sensor.

Refer to [ADP-99, "Component Function Check"](#).

MEMORY FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

DOOR MIRROR

DOOR MIRROR : Diagnosis Procedure

INFOID:000000007456532

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [ADP-209, "DOOR MIRROR : Diagnosis Procedure"](#)

2.CHECK MIRROR SENSOR

Check mirror sensor.

Refer to [ADP-103, "DRIVER SIDE : Component Function Check"](#). (Driver side)

Refer to [ADP-104, "PASSENGER SIDE : Component Function Check"](#). (Passenger side)

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

MEMORY INDICATE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

MEMORY INDICATE DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000007456533

1. CHECK MEMORY INDICATOR

Check memory indicator.

Refer to [ADP-122, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

SEAT SYNCHRONIZATION FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

SEAT SYNCHRONIZATION FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000007456534

1. CHECK SYSTEM SETTING

Check system setting.

Refer to [ADP-11, "SYSTEM SETTING : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> Synchronization function is normal.

NO >> GO TO 2.

2. CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

ENTRY/EXIT ASSIST FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

ENTRY/EXIT ASSIST FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000007456535

1. CHECK SYSTEM SETTING

1. Check system setting.
Refer to [ADP-11, "SYSTEM SETTING : Special Repair Requirement"](#).

2. Check the operation.

Is the inspection result normal?

YES >> Entry/Exit function is OK.

NO >> GO TO 2.

2. PERFORM SYSTEM INITIALIZATION

1. Perform system initialization.
Refer to [ADP-9, "SYSTEM INITIALIZATION : Special Repair Requirement"](#).

2. Check the operation.

Is the inspection result normal?

YES >> Entry/Exit function is OK.

NO >> GO TO 3.

3. CHECK FRONT DOOR SWITCH (DRIVER SIDE)

Check front door switch (driver side).

Refer to [ADP-85, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunction parts.

4. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.

INTELLIGENT KEY INTERLOCK FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

INTELLIGENT KEY INTERLOCK FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000007456536

1. CHECK DOOR LOCK FUNCTION

Check door lock function.

Refer to [DLK-7, "Work Flow"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2. PERFORM MEMORY STORING PROCEDURE

1. Perform memory storing procedure.

Refer to [ADP-9, "MEMORY STORING : Special Repair Requirement"](#).

2. Check Intelligent Key interlock function.

Refer to [ADP-37, "INTELLIGENT KEY INTERLOCK FUNCTION : System Description"](#).

Is the inspection result normal?

YES >> Intelligent Key interlock function is normal.

NO >> Replace driver seat control unit. Refer to [ADP-221, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

Description

INFOID:000000007456537

The following symptoms are normal operations, and they do not indicate a malfunction.

Symptom	Cause	Action to take	Reference page
Entry/exit assist function does not operate.	No initialization has been performed.	Perform initialization.	ADP-25
	Entry/exit assist function is disabled. NOTE: The entry/exit assist function are enabled before delivery (initial setting).	Change the settings.	ADP-11
Entry assist function does not operate.	Manual operation with power seat switch was performed after exit assist function execution.	Perform the memory function.	ADP-25
Seat synchronization function does not operate.	Seat synchronization function is disabled. NOTE: The entry/exit assist function are disabled before delivery (initial setting).	Change the settings.	ADP-11
	The synchronization function will not operate if the steering (tilt, telescopic) or the door mirror moves to the operating end while the seat synchronization function is operating.	Perform the memory function or drive the vehicle at more than 7 km/h (4 MPH).	ADP-25
	Seat adjustment load has exceed any of the volumes below. • Seat sliding: 76 mm • Seat reclining: 9.1 degrees • Seat lifting (rear): 20 mm	—	—
Lumbar support does not perform memory operation.	The lumbar support system are controlled independently with no link to the automatic drive positioner system.	—	Lumbar support system: SE-10
Memory function, entry/exit assist function, seat synchronization function, or Intelligent Key interlock function does not operate.	The operating conditions are not fulfilled.	Fulfill the operation conditions.	Memory function: ADP-25
			Exit assist function: ADP-29
			Entry assist function: ADP-33
			Seat synchronization function: ADP-21
			Intelligent Key interlock function: ADP-37

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000007456538

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Service

INFOID:000000007456539

- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches.
- Handle trim, molding, instruments, grille, etc. carefully during removing or installing. Be careful not to oil or damage them.
- Apply sealing compound where necessary when installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.
- When replacing any metal parts (for example body outer panel, members, etc.), be sure to take prevention measures.

Work

INFOID:000000007456540

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and keep them.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After re-installation is completed, be sure to check that each part works normally.
- Follow the steps below to clean components.
 - Water soluble foul: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the fouled area.

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

PRECAUTIONS

< PRECAUTION >

Then rub with a soft and dry cloth.

- Oily foul: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the fouled area.

Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.

- Do not use organic solvent such as thinner, benzene, alcohol, and gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

DRIVER SEAT CONTROL UNIT

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

DRIVER SEAT CONTROL UNIT

Exploded View

INFOID:000000007456541

Refer to [SE-129, "Exploded View"](#).

Removal and Installation


INFOID:000000007456542

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the driver seat (1). Refer to [SE-132, "Removal and Installation"](#).
2. Remove the mounting bolts (A).
3. Remove driver seat control unit (2).

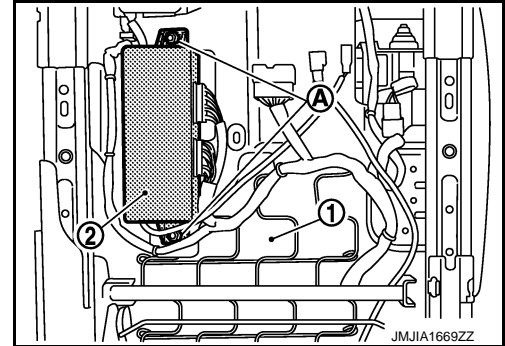

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clump the harness to the right place.

NOTE:

After installing the driver seat, perform additional service when replacing control unit. Refer to [ADP-8, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description"](#).

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< REMOVAL AND INSTALLATION >

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

Exploded View

INFOID:000000007456543

Refer to [IP-12. "Exploded View"](#).

Removal and Installation


INFOID:000000007456544

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the instrument driver lower panel. Refer to [IP-13. "Removal and Installation"](#).
2. Remove the screws (A).
3. Remove automatic drive positioner control unit (1).

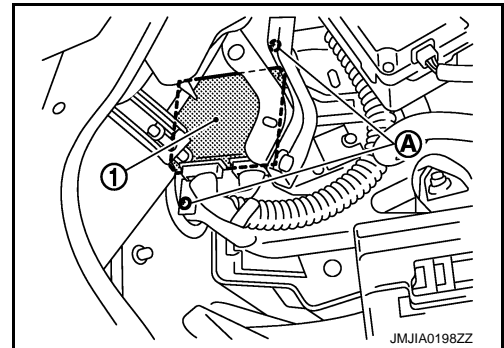

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clamp the harness to the right place.

NOTE:

After installing the driver seat, perform additional service when removing battery negative terminal. Refer to [ADP-8. "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

SEAT MEMORY SWITCH

< REMOVAL AND INSTALLATION >

SEAT MEMORY SWITCH

Exploded View

INFOID:000000007456545

Refer to [INT-11, "DRIVER SIDE : Exploded View"](#).

Removal and Installation

 
INFOID:000000007456546


REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the front door finisher (1). Refer to [INT-11, "DRIVER SIDE : Removal and Installation"](#).
2. Press pawls and remove seat memory switch (2) from front door finisher (1).

 Pawl

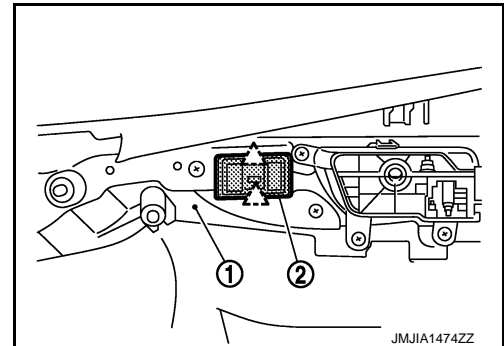

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clump the harness to the right place.

NOTE:

After installing the driver seat, perform additional service when removing battery negative terminal. Refer to [ADP-8, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

POWER SEAT SWITCH

< REMOVAL AND INSTALLATION >

POWER SEAT SWITCH

Exploded View

INFOID:000000007456547

Refer to [SE-129, "Exploded View"](#).

Removal and Installation


INFOID:000000007456548

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the seat cushion outer finisher (1). Refer to [SE-133, "Disassembly and Assembly"](#).
2. Remove the screws (A).
3. Remove the power seat switch (2) from the seat cushion outer finisher (1).

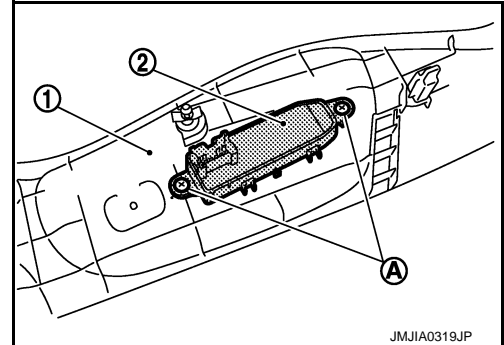

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clump the harness to the right place.

NOTE:

After installing the driver seat, perform additional service when removing battery negative terminal. Refer to [ADP-8, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

TILT&TELESCOPIC SWITCH

< REMOVAL AND INSTALLATION >

TILT&TELESCOPIC SWITCH

Exploded View

INFOID:000000007456549

Refer to [IP-12, "Exploded View"](#).

Removal and Installation


INFOID:000000007456550

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove the steering column mask (1).
Refer to [IP-13, "Removal and Installation"](#).
2. Press pawls and remove tilt & telescopic switch (2) from the steering column mask (1).

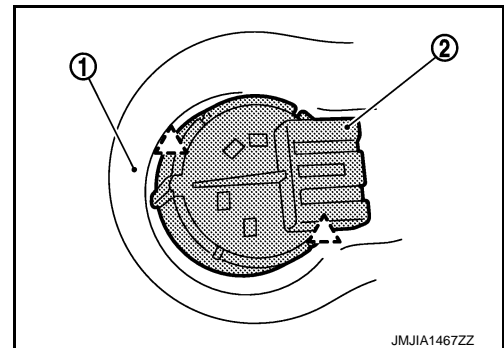

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clump the harness to the right place.

NOTE:

After installing the driver seat, perform additional service when removing battery negative terminal. Refer to [ADP-8, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP