

STR

SECTION STR
STARTING SYSTEM

CONTENTS

PRECAUTION	3	M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM	14
PRECAUTIONS	3	M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram	15
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Description	15
Precaution for Power Generation Variable Voltage Control System	3	M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location	15
Precaution for Work	3	M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Description	16
PREPARATION	5	DTC/CIRCUIT DIAGNOSIS	17
PREPARATION	5	B TERMINAL CIRCUIT	17
Special Service Tool	5	Description	17
Commercial Service Tool	5	Diagnosis Procedure	17
BASIC INSPECTION	6	S CONNECTOR CIRCUIT	19
DIAGNOSIS AND REPAIR WORKFLOW	6	Description	19
Work Flow (With GR8-1200 NI)	6	Diagnosis Procedure	19
Work Flow (Without GR8-1200 NI)	10	WIRING DIAGRAM	20
SYSTEM DESCRIPTION	12	STARTING SYSTEM	20
STARTING SYSTEM	12	Wiring Diagram - VQ40DE With Clutch Interlock Cancel System	20
A/T	12	Wiring Diagram - VQ40DE Without Clutch Interlock Cancel System	26
A/T : System Diagram	12	Wiring Diagram - QR25DE	30
A/T : System Description	12	SYMPTOM DIAGNOSIS	34
A/T : Component Parts Location	12	STARTING SYSTEM	34
A/T : Component Description	13	Symptom Table	34
M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM	13	REMOVAL AND INSTALLATION	35
M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram	13	STARTER MOTOR	35
M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Description	13	Removal and Installation (QR25DE)	35
M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location	14	Removal and Installation (VQ40DE)	36
M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Description	14		

SERVICE DATA AND SPECIFICATIONS (SDS)	37
STARTER MOTOR	37
Starter	37

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000010713409

STR

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Power Generation Variable Voltage Control System

INFOID:0000000010713410

CAUTION:

For this model, the battery current sensor that is installed to the negative battery cable measures the charging/discharging current of the battery and performs various engine controls. If an electrical component is connected directly to the negative battery terminal, the current flowing through that component will not be measured by the battery current sensor. This condition may cause a malfunction of the engine control system and battery discharge may occur. Do not connect an electrical component or ground wire directly to the battery terminal.

Precaution for Work

INFOID:0000000010713411

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
 - Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
 - Oily dirt:
 - Wipe the oily dirt off with a dry cloth.

PRECAUTIONS

< PRECAUTION >

- Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
- Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
- Then rub with a soft, dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION

< PREPARATION >

PREPARATION


PREPARATION

Special Service Tool

INFOID:0000000010713412

STR

The actual shape of the tools may differ from those illustrated here.

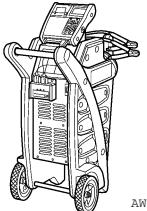Tool number (TechMate No.)	Description
— (—) Model GR8-1200 NI Multitasking battery and electrical diagnostic station	 Tests batteries, starting and charging systems and charges batteries. For operating instructions, refer to diagnostic station instruction manual. AWIIIA1239ZZ

Commercial Service Tool

INFOID:0000000010713413

Tool name	Description
Power tool	 Loosening nuts, screws and bolts PIIB1407E

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow (With GR8-1200 NI)

INFOID:0000000010713414

STARTING SYSTEM DIAGNOSIS WITH GR8-1200 NI

To test the starting system, use the following special service tool:

- GR8-1200 NI Multitasking battery and electrical diagnostic station


NOTE:

Refer to the diagnostic station Instruction Manual for proper starting system diagnosis procedures.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

OVERALL SEQUENCE

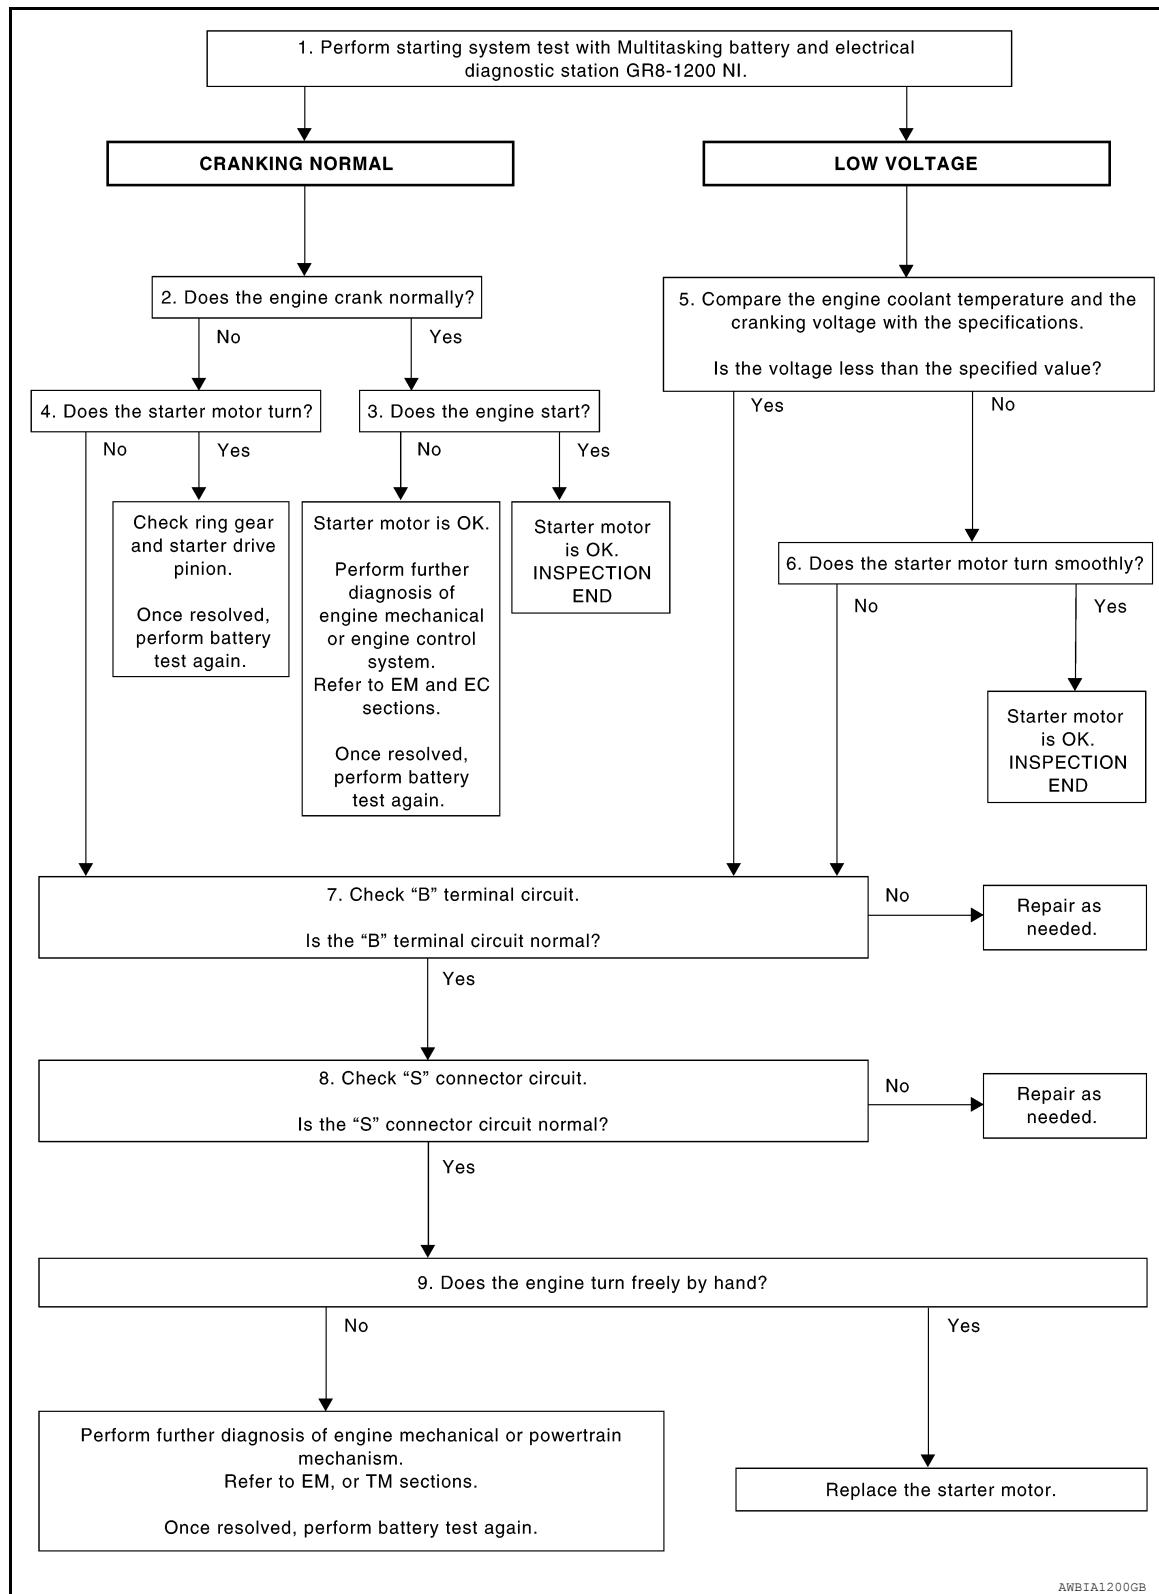

AWBIA1200GB

DETAILED FLOW

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter motor and generator test segments must be done as a set from start to finish.

1. DIAGNOSIS WITH MULTITASKING BATTERY AND ELECTRICAL DIAGNOSTIC STATION GR8-1200 NI

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Perform the starting system test with Multitasking battery and electrical diagnostic station GR8-1200 NI. For details and operating instructions, refer to diagnostic station Instruction Manual.

Test result

CRANKING NORMAL>>GO TO 2.

LOW VOLTAGE>>GO TO 5.

CHARGE BATTERY>>Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again. Refer to diagnostic station instruction manual.

REPLACE BATTERY>>Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again. Refer to diagnostic station instruction manual. If second test result is "REPLACE BATTERY", then do so. Perform battery test again to confirm repair.

2.CRANKING CHECK

Check that the starter motor operates properly.

Does the engine crank normally?

YES >> GO TO 3.

NO >> GO TO 4.

3.ENGINE START CHECK

Check that the engine starts.

Does the engine start?

YES >> Inspection End.

NO >> Perform further diagnosis of engine mechanical or engine control system. Refer to EM and EC sections. Once resolved, perform battery test again.

4.STARTER MOTOR ACTIVATION

Check that the starter motor operates.

Does the starter motor turn?

YES >> Check ring gear and starter motor drive pinion. Once resolved, perform battery test again.

NO >> GO TO 7.

5.COMPARISON BETWEEN ENGINE COOLANT AND CRANKING VOLTAGE

Compare the engine coolant temperature and verify the cranking voltage is within specifications.

Minimum Specification of Cranking Voltage Referencing Coolant Temperature

Engine coolant temperature [°C (°F)]	Voltage [V]
-30 to -20 (-22 to -4)	8.6
-19 to -10 (-2 to 14)	9.1
-9 to 0 (16 to 32)	9.5
More than 1 (More than 34)	9.9

Is the voltage less than the specified value?

YES >> GO TO 7.

NO >> GO TO 6.

6.STARTER OPERATION

Check the starter operation.

Does the starter motor turn smoothly?

YES >> Inspection End.

NO >> GO TO 7.

7.“B” TERMINAL CIRCUIT INSPECTION

Check “B” terminal circuit. Refer to [STR-17, "Diagnosis Procedure"](#).

Is “B” terminal circuit normal?

YES >> GO TO 8.

NO >> Repair as needed.

8.“S” CONNECTOR CIRCUIT INSPECTION

Check “S” connector circuit. Refer to [STR-19, "Diagnosis Procedure"](#).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Is "S" connector circuit normal?

YES >> GO TO 9.

NO >> Repair as needed.

9. ENGINE ROTATION STATUS

Check that the engine can be rotated by hand.

A

Does the engine turn freely by hand?

STR

YES >> Replace starter motor. Refer to [STR-35, "Removal and Installation \(QR25DE\)"](#) or [STR-36, "Removal and Installation \(VQ40DE\)".](#)

C

NO >> Perform further diagnosis of engine mechanical or powertrain mechanism. Once resolved, perform battery test again using Multitasking battery and electrical diagnostic station GR8-1200 NI. Refer to the diagnostic station Instruction Manual for proper testing procedures.

D

E

F

G

H

I

J

K

L

M

N

O

P


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Work Flow (Without GR8-1200 NI)

INFOID:0000000010713415

OVERALL SEQUENCE

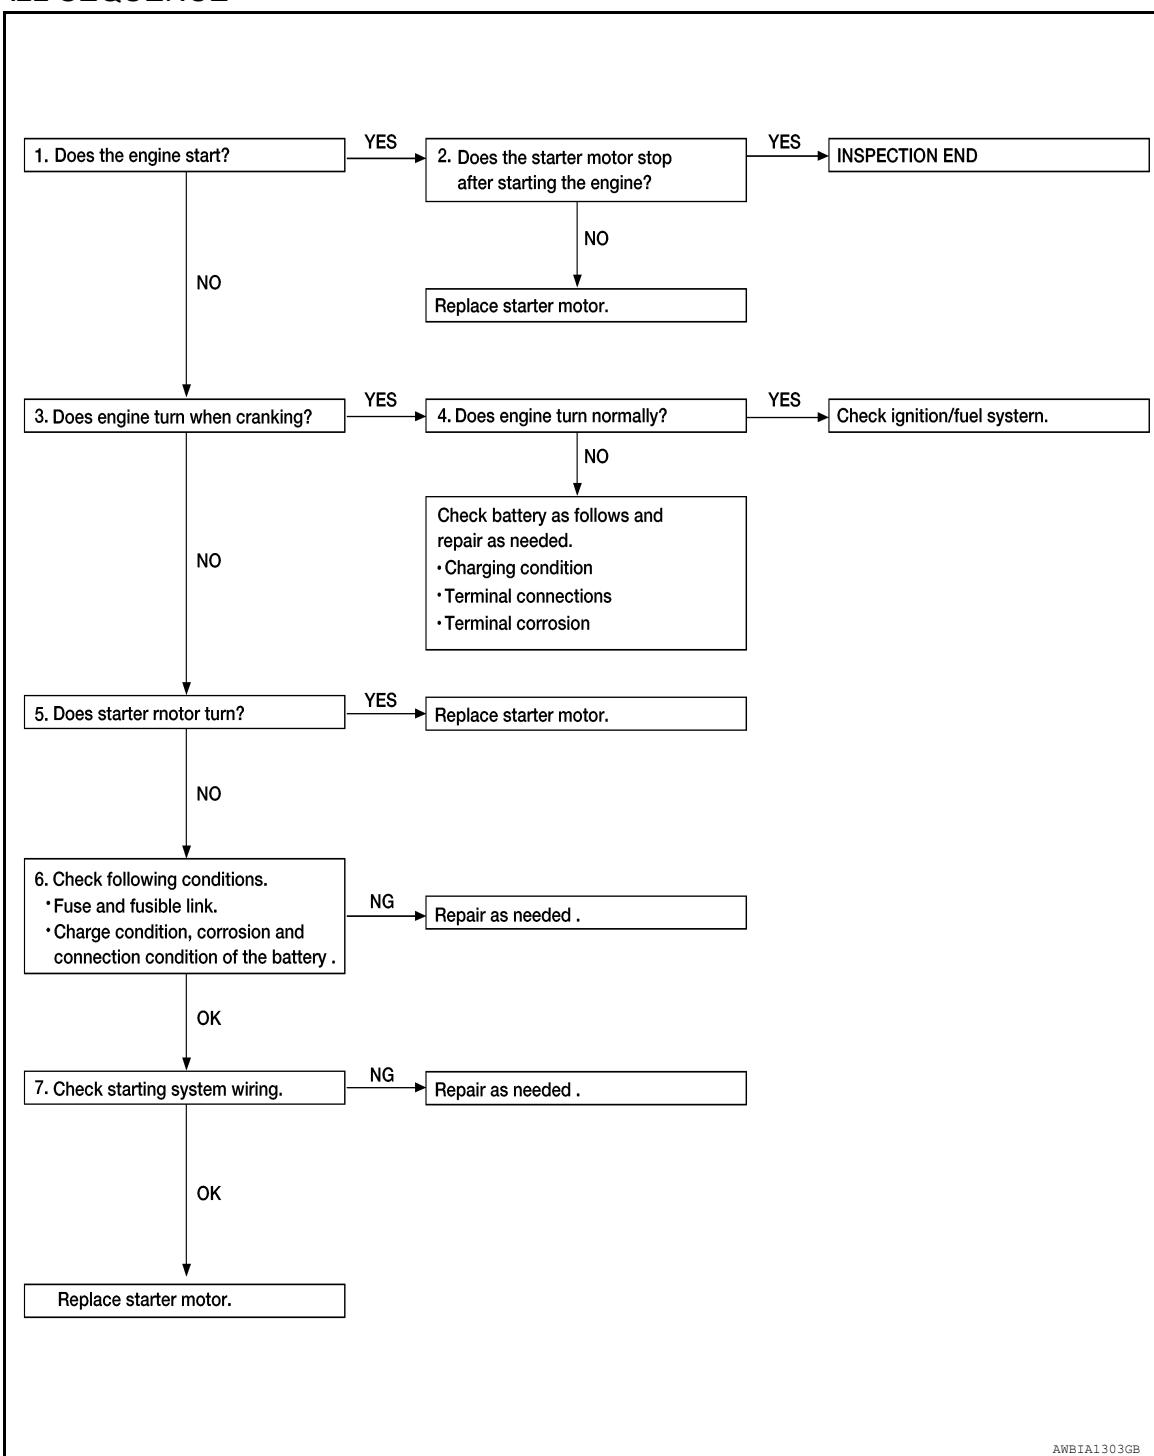

AWBIA1303GB

DETAILED FLOW

NOTE:

If any malfunction is found, immediately disconnect the battery cable from the negative terminal.

1. CHECK ENGINE START

Crank the engine and check that the engine starts.

Does the engine start?

YES >> GO TO 2.

NO >> GO TO 3.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

2.CHECK THAT THE STARTER MOTOR STOPS

Check that the starter motor stops after starting the engine.

Does the starter motor stop?

- YES >> Inspection End.
NO >> Replace starter motor. Refer to [STR-35. "Removal and Installation \(QR25DE\)"](#) or [STR-36. "Removal and Installation \(VQ40DE\)"](#).

STR

3.CHECK THAT THE ENGINE TURNS WHEN CRANKING

Check that the engine turns when cranking.

Does engine turn when cranking?

- YES >> GO TO 4.
NO >> GO TO 5.

C

4.CHECK THE ENGINE SPEED WHEN CRANKING

Check that the engine speed is not low when cranking.

Does engine turn normally?

- YES >> Check ignition/fuel system.
NO >> Check charge condition, corrosion and connection condition of the battery.

D

5.CHECK STARTER MOTOR ACTIVATION

Check that the starter motor runs at cranking.

Does starter motor turn?

- YES >> Replace starter motor. Refer to [STR-35. "Removal and Installation \(QR25DE\)"](#) or [STR-36. "Removal and Installation \(VQ40DE\)"](#).
NO >> GO TO 6.

E

6.CHECK POWER SUPPLY CIRCUIT

Check the following conditions:

- Fuse and fusible link
- Charge condition, corrosion and connection of the battery.

F

Are these inspection results normal?

- YES >> GO TO 7.
NO >> Repair as needed.

G

7.CHECK STARTING SYSTEM WIRING

Check the following:

- "B" terminal circuit. Refer to [STR-17. "Diagnosis Procedure"](#).
- "S" terminal circuit. Refer to [STR-19. "Diagnosis Procedure"](#).

H

Are the inspection results normal?

- YES >> Replace starter motor. Refer to [STR-35. "Removal and Installation \(QR25DE\)"](#) or [STR-36. "Removal and Installation \(VQ40DE\)"](#).
NO >> Repair as needed.

I

J

K

L

M

N

O

P

STARTING SYSTEM

< SYSTEM DESCRIPTION >


SYSTEM DESCRIPTION

STARTING SYSTEM

A/T

A/T : System Diagram

INFOID:0000000010713416

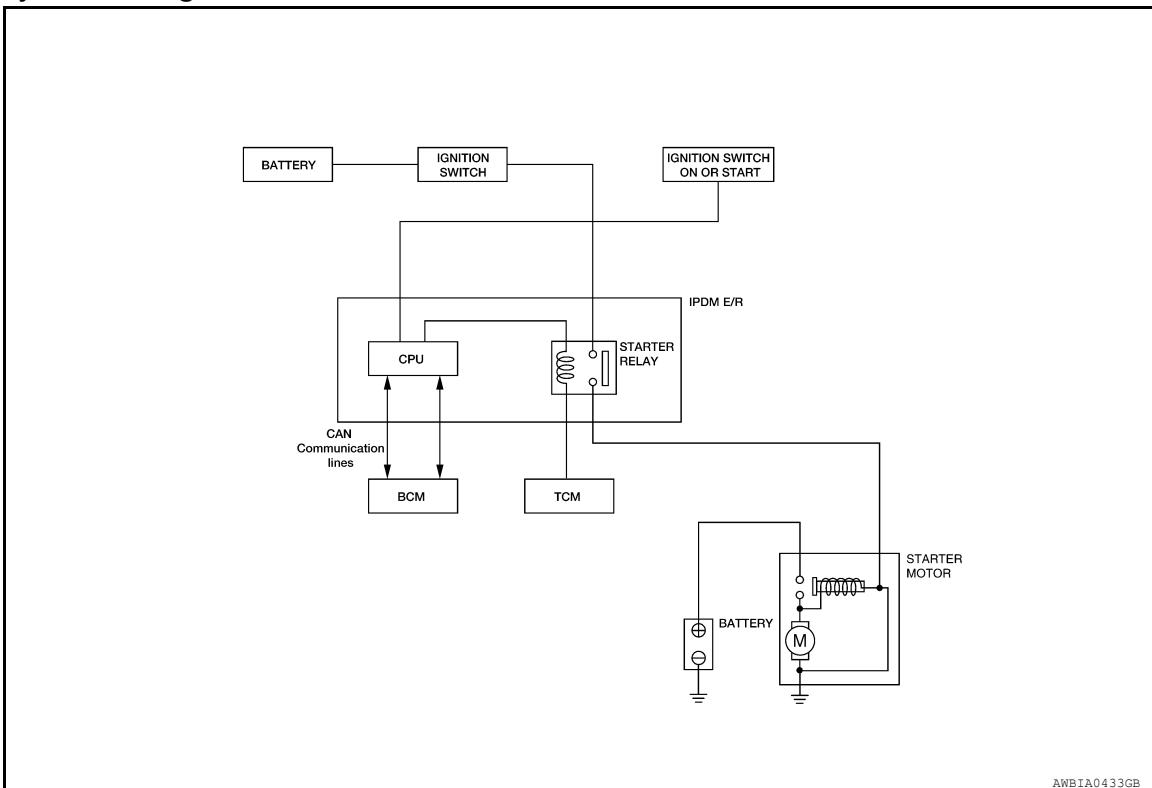

AWBIA0433GB


A/T : System Description

INFOID:0000000010713417

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

A/T : Component Parts Location

INFOID:0000000010713418

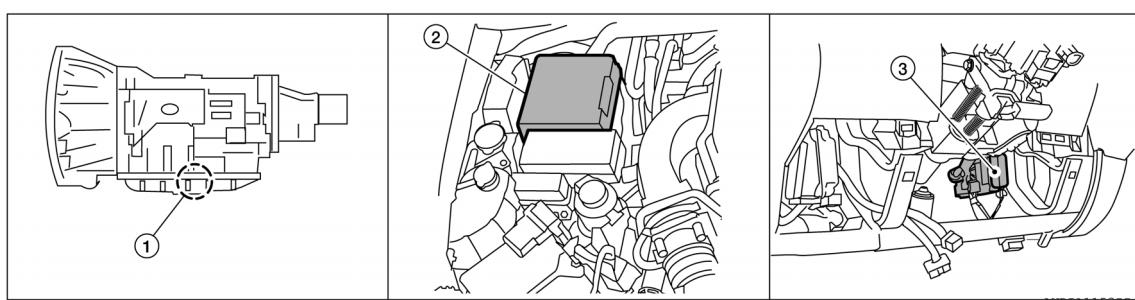

AMBIA1153ZZ

1. A/T assembly F9 (with built in TCM F502)
2. IPDM E/R E119, E120, E122, E124
3. BCM M18 (view with lower instrument panel LH removed)

STARTING SYSTEM

< SYSTEM DESCRIPTION >

A/T : Component Description

INFOID:000000010713419

A

Component part	Description
TCM	TCM supplies power to the starter relay inside the IPDM E/R when the selector lever is shifted to the P or N position.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.

STR

C

D

E

F

G

H

I

J

K

L

M

N


O

P

M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM

M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram

INFOID:000000010713420

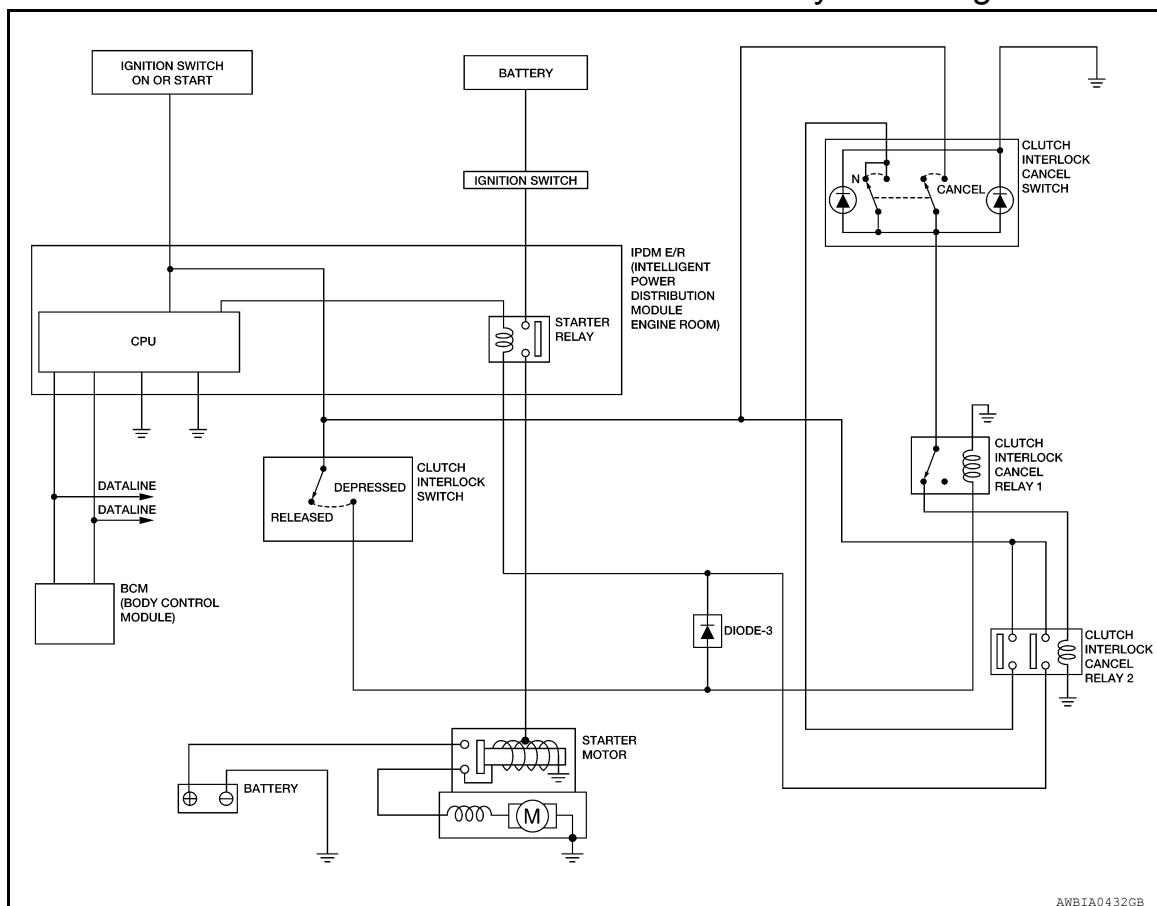

AWBIA0432GB

M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Description

INFOID:000000010713421


The clutch interlock cancel (clutch start) switch allows for starting the engine without depressing the clutch pedal by bypassing the clutch interlock switch. The clutch interlock cancel system is canceled once the ignition switch is turned OFF. Once the clutch interlock cancel system is activated, the starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

STARTING SYSTEM

< SYSTEM DESCRIPTION >

M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location

INFOID:0000000010713422

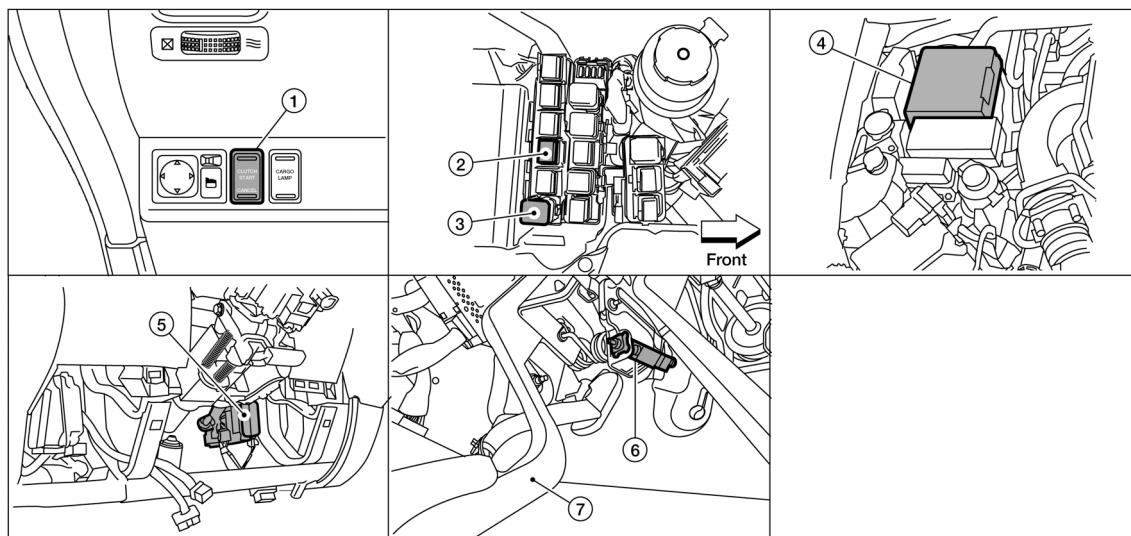

AWBIA1154ZZ

1. Clutch interlock cancel switch M163
2. Clutch interlock cancel relay 1 E171
3. Clutch interlock cancel relay 2 E166
4. IPDM E/R E119, E120, E122, E124
5. BCM M18 (view with lower instrument panel LH removed)
6. Clutch interlock switch E163
7. Clutch pedal

M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Description

INFOID:0000000010713423

Component part	Description
Clutch interlock switch	Clutch interlock switch supplies power to the coil side of the starter relay when the clutch pedal is depressed to crank the engine.
Clutch interlock cancel switch	Clutch interlock cancel switch bypasses the clutch interlock switch and supplies power to the coil side of the starter relay to crank the engine without the clutch pedal being depressed.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.


M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM

STARTING SYSTEM

< SYSTEM DESCRIPTION >

M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram

INFOID:000000010713424

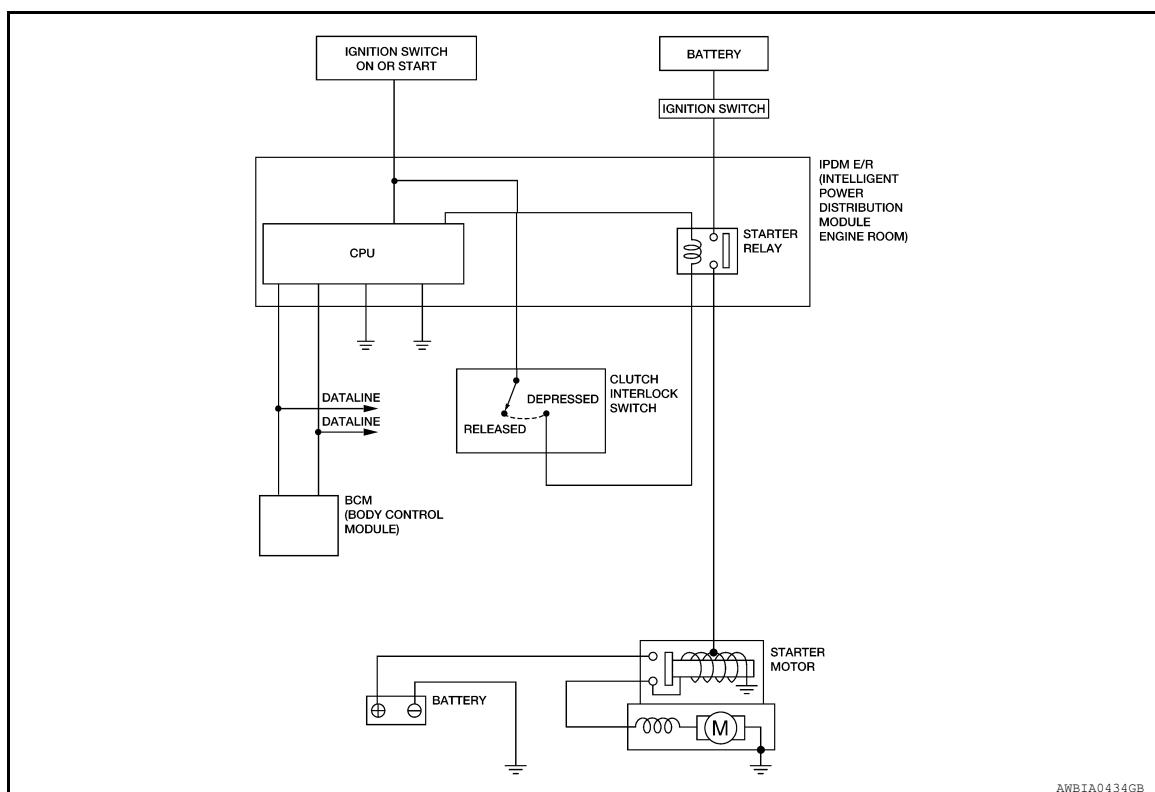


M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Description

INFOID:000000010713425

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location

INFOID:000000010713426

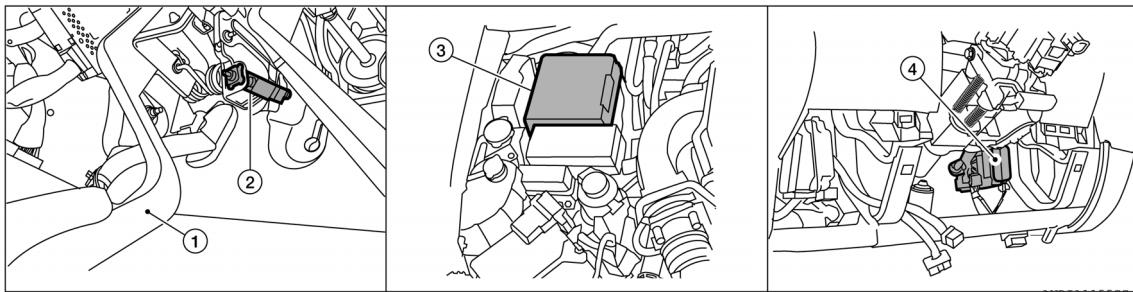

1. Clutch pedal
2. Clutch interlock switch E169
3. IPDM E/R E119, E120, E122, E124
4. BCM M18 (view with lower instrument panel LH removed)

STARTING SYSTEM

< SYSTEM DESCRIPTION >

M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Description

INFOID:000000010713427

Component part	Description
Clutch interlock switch	Clutch interlock switch supplies power to the coil side of the starter relay when the clutch pedal is depressed to crank the engine.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.

B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

B TERMINAL CIRCUIT

Description

INFOID:000000010713428

A
STR

Terminal "B" is constantly supplied with battery power.

Diagnosis Procedure

INFOID:000000010713429

C

Regarding Wiring Diagram information, refer to [STR-20, "Wiring Diagram - VQ40DE With Clutch Interlock Cancel System"](#), [STR-26, "Wiring Diagram - VQ40DE Without Clutch Interlock Cancel System"](#) or [STR-30, "Wiring Diagram - QR25DE"](#).

D

CAUTION:

Perform diagnosis under the condition that the engine cannot start by the following procedure.

E

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

F

1.CHECK "B" TERMINAL CIRCUIT

G

1. Turn ignition switch OFF.
2. Check that starter motor B" terminal connection is clean and tight.
3. Check voltage between starter motor connector E210 and ground.

H

Terminals		Voltage (Approx.)	
(+)	(-)		
Starter motor "B" terminal	Terminal		
E210	2	Ground	Battery voltage

I

Is the inspection result normal?

J

K

L

M

N

O

P

YES >> GO TO 2.

Q

NO >> Check harness between battery and starter motor for open circuit.

2.CHECK BATTERY CABLE CONNECTION STATUS (VOLTAGE DROP TEST)

R

1. Shift selector lever to P (Park) or N (Neutral) position.
2. Check voltage between battery positive terminal and starter motor B terminal.

S

Terminals		Condition	Voltage (Approx.)	
(+)	(-)			
Starter motor "B" terminal	Terminal			
Battery positive terminal	E210	2	When the ignition switch is in START position	Less than 0.5V

T

Is the inspection result normal?

U

V

YES >> GO TO 3.

W

X

Y

NO >> Check harness between the battery and starter motor for continuity.

3.CHECK GROUND CIRCUIT STATUS (VOLTAGE DROP TEST)

Z

1. Shift selector lever to P (Park) or N (Neutral) position.
2. Check voltage between starter motor case and battery negative terminal.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Starter motor case	Battery negative terminal	When the ignition switch is in START position	Less than 0.2V

Is the inspection result normal?

AA

B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

-
- YES >> "B" terminal circuit is OK. Further inspection is necessary. Refer to [STR-6, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-10, "Work Flow \(Without GR8-1200 NI\)"](#).
- NO >> Check the starter motor case to engine mounting for high resistance.

S CONNECTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

S CONNECTOR CIRCUIT

Description

INFOID:0000000010713430

A

The starter motor magnetic switch is supplied with power when the ignition switch is turned to the START position while the selector lever is in the P (Park) or N (Neutral) position.

STR

Diagnosis Procedure

INFOID:0000000010713431

C

Regarding Wiring Diagram information, refer to [STR-20, "Wiring Diagram - VQ40DE With Clutch Interlock Cancel System"](#), [STR-26, "Wiring Diagram - VQ40DE Without Clutch Interlock Cancel System"](#) or [STR-30, "Wiring Diagram - QR25DE"](#).

D

CAUTION:

Perform diagnosis under the condition that engine cannot start by the following procedure.

E

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

F

1. CHECK "S" CONNECTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter motor connector.
3. Shift selector lever to "P" (Park) or "N" (Neutral) position.
4. Check voltage between starter motor harness connector E211 (QR25DE) or E207 (VQ40DE) and ground.

G

(+) Connector		(-) Terminal	Condition	Voltage (Approx.)
E211 (QR25DE)		1	Ground	When the ignition switch is in START position
E207 (VQ40DE)				Battery voltage

H

Is the inspection result normal?

I

YES >> "S" circuit is OK. Further inspection is necessary. Refer to [STR-6, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-10, "Work Flow \(Without GR8-1200 NI\)"](#).

J

NO >> GO TO 2.

K

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

L

1. Disconnect IPDM E/R connector.
2. Check continuity between starter motor harness connector E211 (QR25DE) or E207 (VQ40DE) and the IPDM E/R harness connector E120.

M

Starter motor harness connector		IPDM E/R harness connector		Continuity
Connector	Terminal	Connector	Terminal	
E211 (QR25DE)	1	E120	19	
E207 (VQ40DE)				Yes

N

Is the inspection result normal?

O

YES >> Further inspection is necessary. Refer to [STR-6, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-10, "Work Flow \(Without GR8-1200 NI\)"](#).

P

NO >> Repair or replace the harness or connectors.

STARTING SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM

STARTING SYSTEM

Wiring Diagram - VQ40DE With Clutch Interlock Cancel System

INFOID:000000010713432

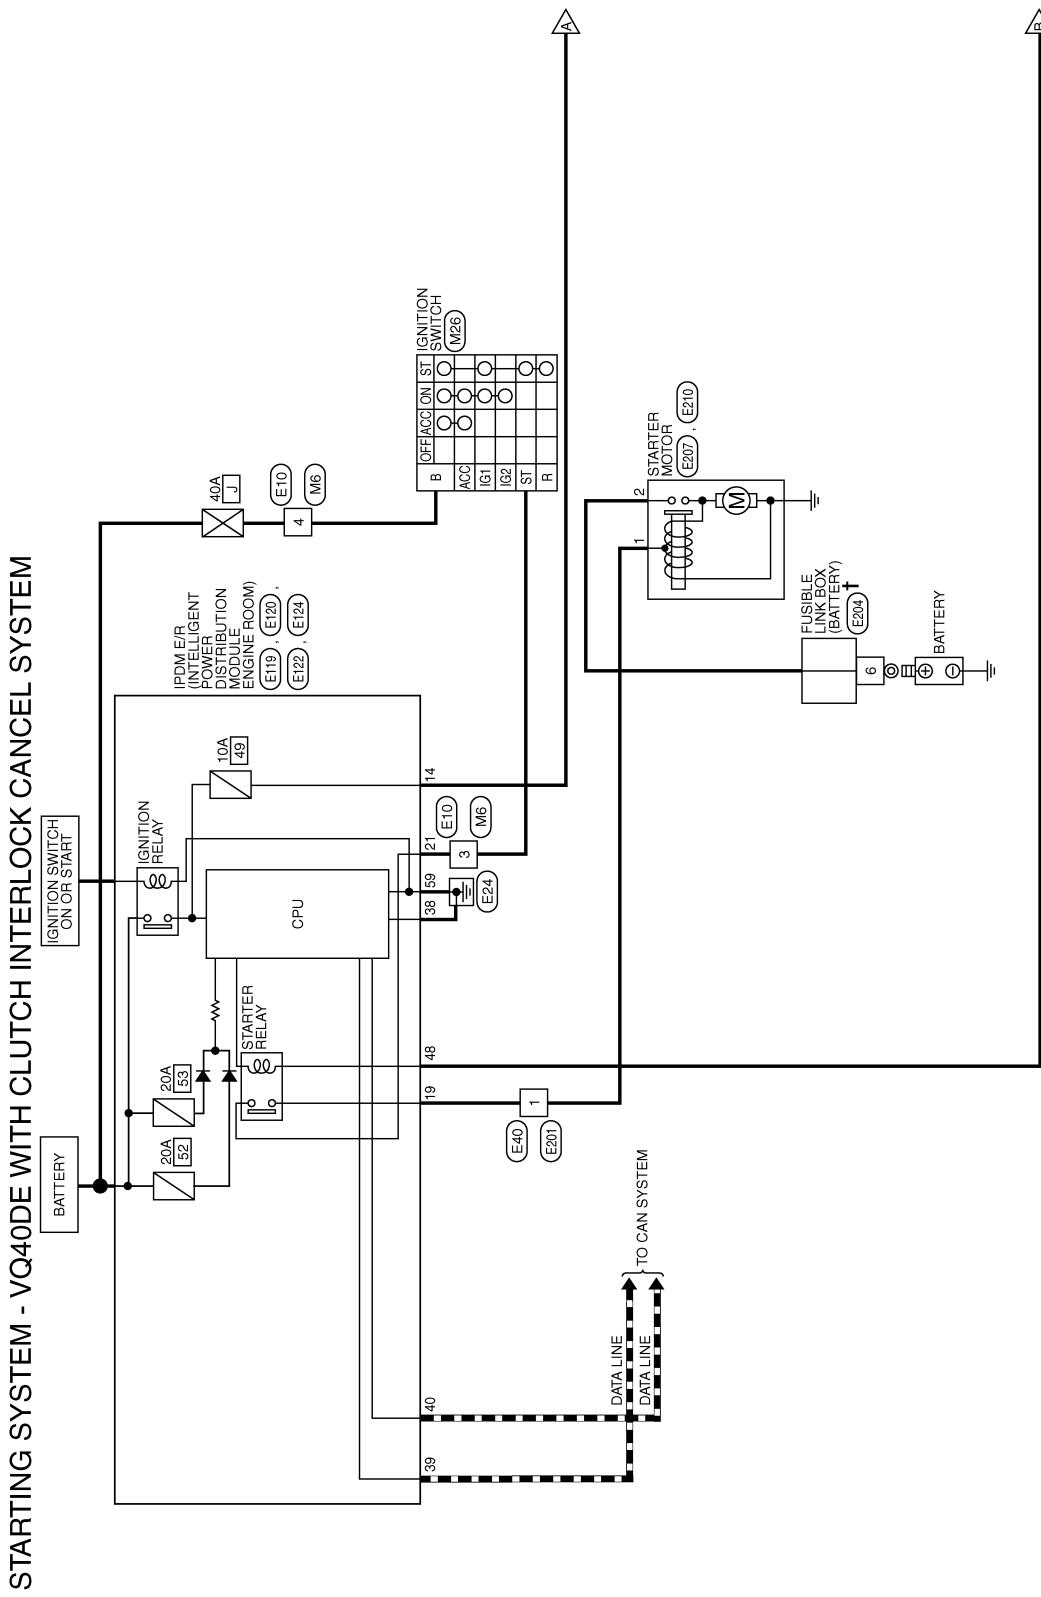


† THIS CONNECTOR IS AN INTEGRAL PART OF THE FUSIBLE LINK BOX (BATTERY).

ABBWA1404GB

STARTING SYSTEM

< WIRING DIAGRAM >

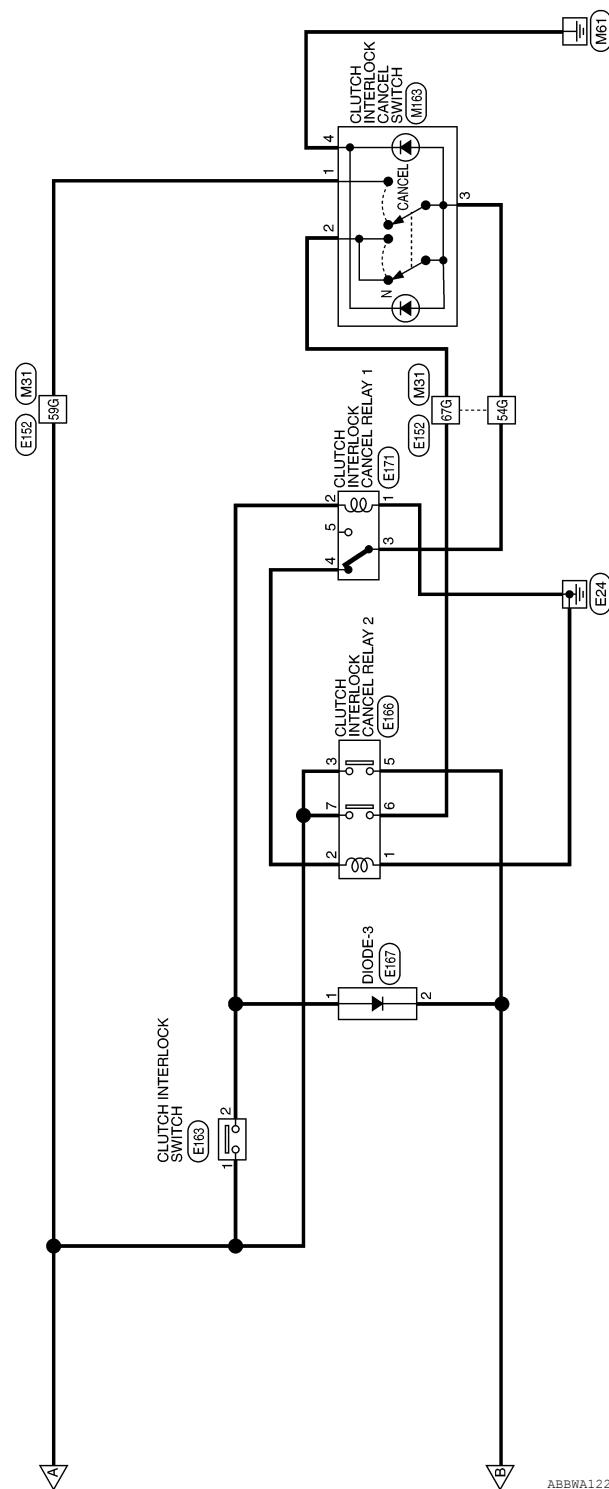

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

ABBWA1226GB

STARTING SYSTEM

< WIRING DIAGRAM >


STARTING SYSTEM CONNECTORS - VQ40DE WITH CLUTCH INTERLOCK CANCEL SYSTEM

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	GR	-
4	G	-

Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
54G	BG	-
59G	W/G	-
67G	Y	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	M163
Connector Name	CLUTCH INTERLOCK CANCEL SWITCH
Connector Color	WHITE

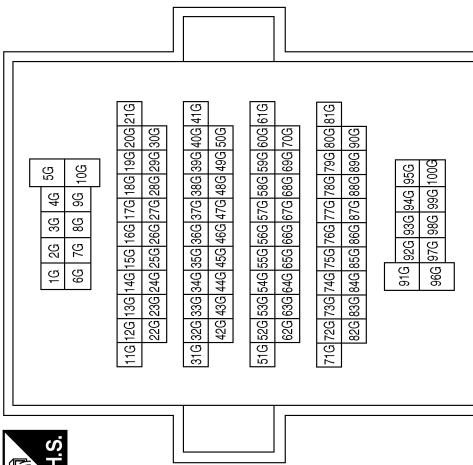

ABBIA2091GB

STARTING SYSTEM

< WIRING DIAGRAM >

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	GR	-
4	G	-

Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
14	W/G	A/T ECU IGN SUPPLY

A

STR

C

D

M

G

T

I

K

Z

M


O

P

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
19	W	STARTER MTR
21	GR	IGN SW (ST)
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
48	R	RANGE SW

ABBIA0871GB

STARTING SYSTEM


< WIRING DIAGRAM >

Connector No.	E163
Connector Name	CLUTCH INTERLOCK SWITCH (WITH CLUTCH INTERLOCK CANCEL SYSTEM)
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
54G	BG	-
59G	W/G	-
67G	Y	-

Terminal No.	Color of Wire	Signal Name
103	9G	8G
	7G	6G

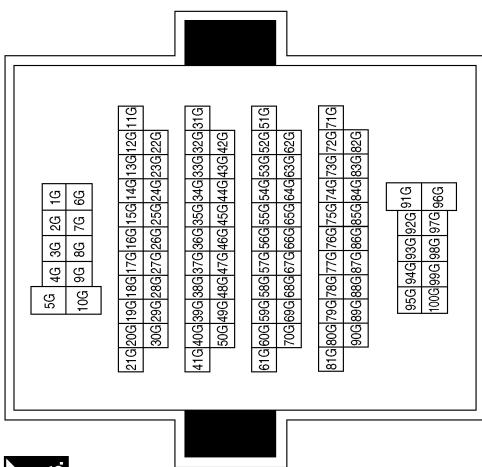

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	L	-



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W	-



Terminal No.	Color of Wire	Signal Name
1	L	-
2	R	-



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W	-
3	BG	-
4	R	-
5	-	-

Terminal No.	Color of Wire	Signal Name
1	B	-
2	W	-
3	BG	-
4	R	-
5	-	-

ABBIA2535GB

STARTING SYSTEM

< WIRING DIAGRAM >

Connector No.	E207
Connector Name	STARTER MOTOR (WITH VQ40DE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	W	-




Connector No.	E204
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	-



Terminal No.	Color of Wire	Signal Name
6	B/R	-

Connector No.	E201
Connector Name	WIRE TO WIRE
Connector Color	GRAY

 

Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E210
Connector Name	STARTER MOTOR
Connector Color	-



Terminal No.	Color of Wire	Signal Name
2	B/R	-

ABBIA1561GB

A
STR
C
D
E
F
G
H
I
J
K
L
M
N
O
P

STARTING SYSTEM


< WIRING DIAGRAM >

Wiring Diagram - VQ40DE Without Clutch Interlock Cancel System

INFOID:0000000010713433

STARTING SYSTEM - VQ40DE WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM

Ⓐ : WITH A/T
Ⓑ : WITH M/T

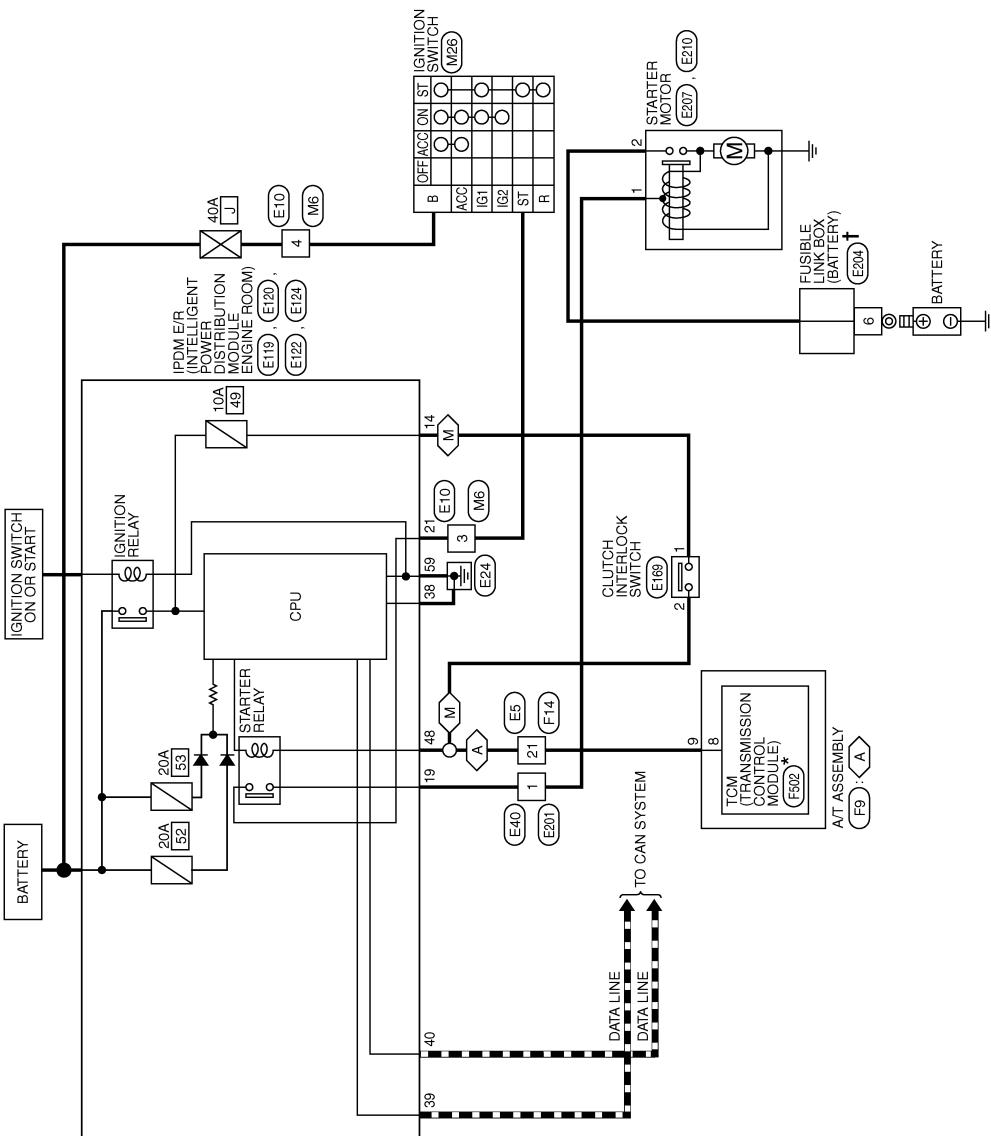

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PC SECTION.

† : THIS CONNECTOR IS AN INTEGRAL PART OF THE FUSIBLE LINK BOX (BATTERY).

ABBWA1405GB

STARTING SYSTEM


< WIRING DIAGRAM >

STARTING SYSTEM CONNECTORS - VQ40DE WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
B	G	-
ST	GR	-


Terminal No.	Color of Wire	Signal Name
3	GR	-
4	G	-

Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6
5	6	7
6	7	8
7	8	9

Terminal No.	Color of Wire	Signal Name
21	R	-

Terminal No.	Color of Wire	Signal Name
21	R	-


Connector No.	E119
Connector Name	IDPM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	E119
Connector Name	IDPM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



ABBIA0482GB

STARTING SYSTEM

< WIRING DIAGRAM >

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE
	



Terminal No.	Color of Wire	Signal Name
19	W	STARTER MTR
21	GR	IGN SW (ST)

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL-)
39	L	CAN-H
40	P	CAN-L
48	R	RANGE SW

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK
	




Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)


Terminal No.	Color of Wire	Signal Name
6		



Connector No.	E204
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	-

 

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL-)
39	L	CAN-H

 

Connector No.	E169
Connector Name	CLUTCH INTERLOCK SWITCH (WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM)
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
6	B/R	-

ABBIA1218GB

STARTING SYSTEM


< WIRING DIAGRAM >

Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN

 

Terminal No.	Color of Wire	Signal Name
9	R	—

Connector No.	E210
Connector Name	STARTER MOTOR
Connector Color	-

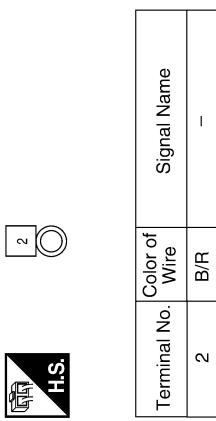


Connector No.	E207
Connector Name	STARTER MOTOR (WITH VQ40DE)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	W	—

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY

 

Terminal No.	Color of Wire	Signal Name
8	G	START-RLY

 

ABBTIA1562GB

Revision: August 2014

STARTING SYSTEM


< WIRING DIAGRAM >

Wiring Diagram - QR25DE

INFOID:0000000010713434

STARTING SYSTEM - QR25DE

: WITH AT
 : WITH MT

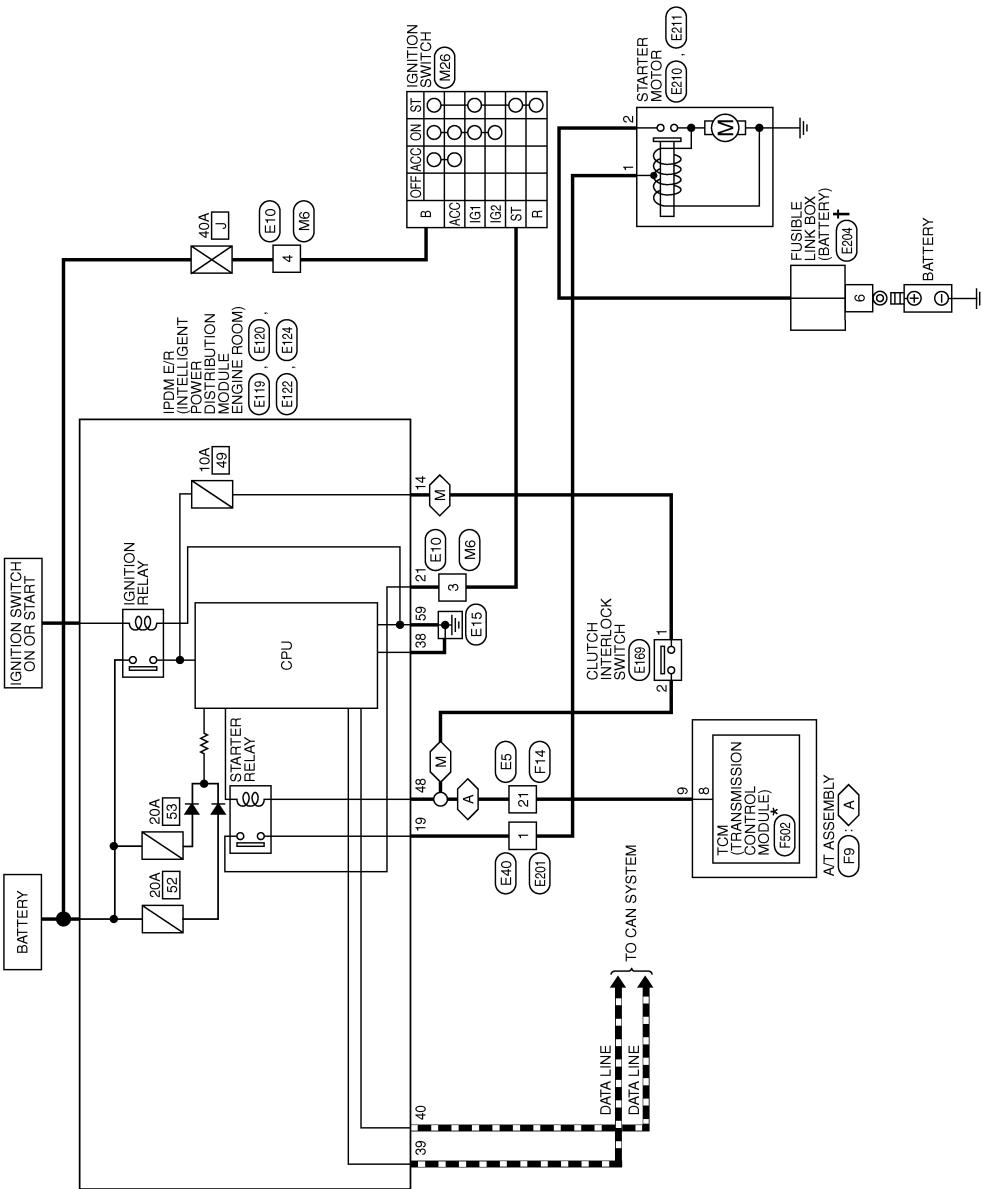

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.
†: THIS CONNECTOR IS AN INTEGRAL PART OF THE FUSIBLE LINK BOX (BATTERY).

ABBWA1406GB

STARTING SYSTEM

< WIRING DIAGRAM >

STARTING SYSTEM CONNECTORS - QR25DE

Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	GR	-
4	G	-



Terminal No.	Color of Wire	Signal Name
B	G	-
ST	GR	-



Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
21	R	-

  

Terminal No.	Color of Wire	Signal Name
14	W/G	A/T ECU IGN SUPPLY

Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	GRAY

Terminal No.	Color of Wire	Signal Name
1	2	3
6	7	8
9		

Terminal No.	Color of Wire	Signal Name
1	W	-

Terminal No.	Color of Wire	Signal Name
3	GR	-
4	G	-

Terminal No.	Color of Wire	Signal Name
13	15	16
18	19	20
21	22	23
24		

Terminal No.	Color of Wire	Signal Name
1	2	3
5	6	7
8	9	10
11	12	13
14	15	16
17	18	19
20	21	22
23	24	

P

Z M L K J C D F G

O

Y

M

D

T

F

G

A

STR


STARTING SYSTEM

< WIRING DIAGRAM >

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
48	R	RANGE SW

Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)




Terminal No.	Color of Wire	Signal Name
6	B/R	-

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
19	W	STARTER MTR
21	GR	IGN SW (ST)

Connector No.	E169
Connector Name	CLUTCH INTERLOCK SWITCH (WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM)
Connector Color	BLUE

 


Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	R	-

STARTING SYSTEM

< WIRING DIAGRAM >

Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN

 

Terminal No.	Color of Wire	Signal Name
9	R	-

Connector No.	E211
Connector Name	STARTER MOTOR (WITH QR25DE)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	W	—

Connector No.	E210
Connector Name	STARTER MOTOR
Connector Color	-




Terminal No.	Color of Wire	Signal Name
2	B/R	-

Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY

 

Terminal No.	Color of Wire	Signal Name
8	G	START-RLY

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
21	R	-

ABBI A1560GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

STARTING SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

STARTING SYSTEM

Symptom Table

INFOID:0000000010713435

Symptom	Reference
No normal cranking	Refer to STR-6. "Work Flow (With GR8-1200 NI)" or STR-10. "Work Flow (Without GR8-1200 NI)".
Starter motor does not rotate	

STARTER MOTOR


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION STARTER MOTOR

Removal and Installation (QR25DE)

INFOID:000000010713436

STR

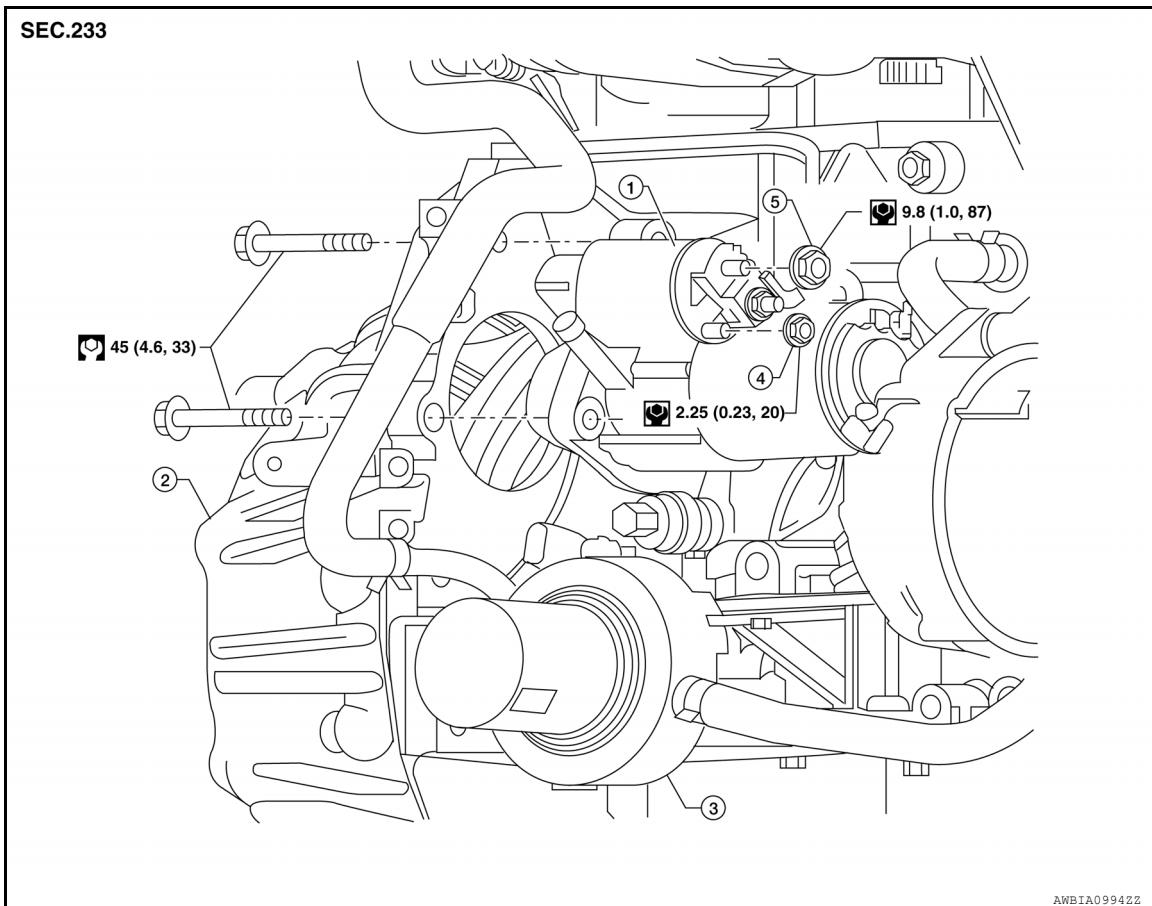

1. Starter motor assembly
2. Transmission housing
3. Engine oil cooler
4. Terminal "1" (S) nut
5. Terminal "2" (B) nut

REMOVAL

1. Disconnect the negative battery terminal. Refer to [PG-89, "Removal and Installation"](#).
2. Remove the air cleaner cover and the air cleaner to intake manifold collector duct. Refer to [EM-25, "Exploded View"](#).
3. Remove terminal "1" (S) and terminal "2" (B) nuts.
4. Remove the two starter motor bolts, using power tools.
5. Remove the starter motor.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:


Be sure to tighten terminal nuts carefully.

STARTER MOTOR

< REMOVAL AND INSTALLATION >

Removal and Installation (VQ40DE)


INFOID:0000000010713437

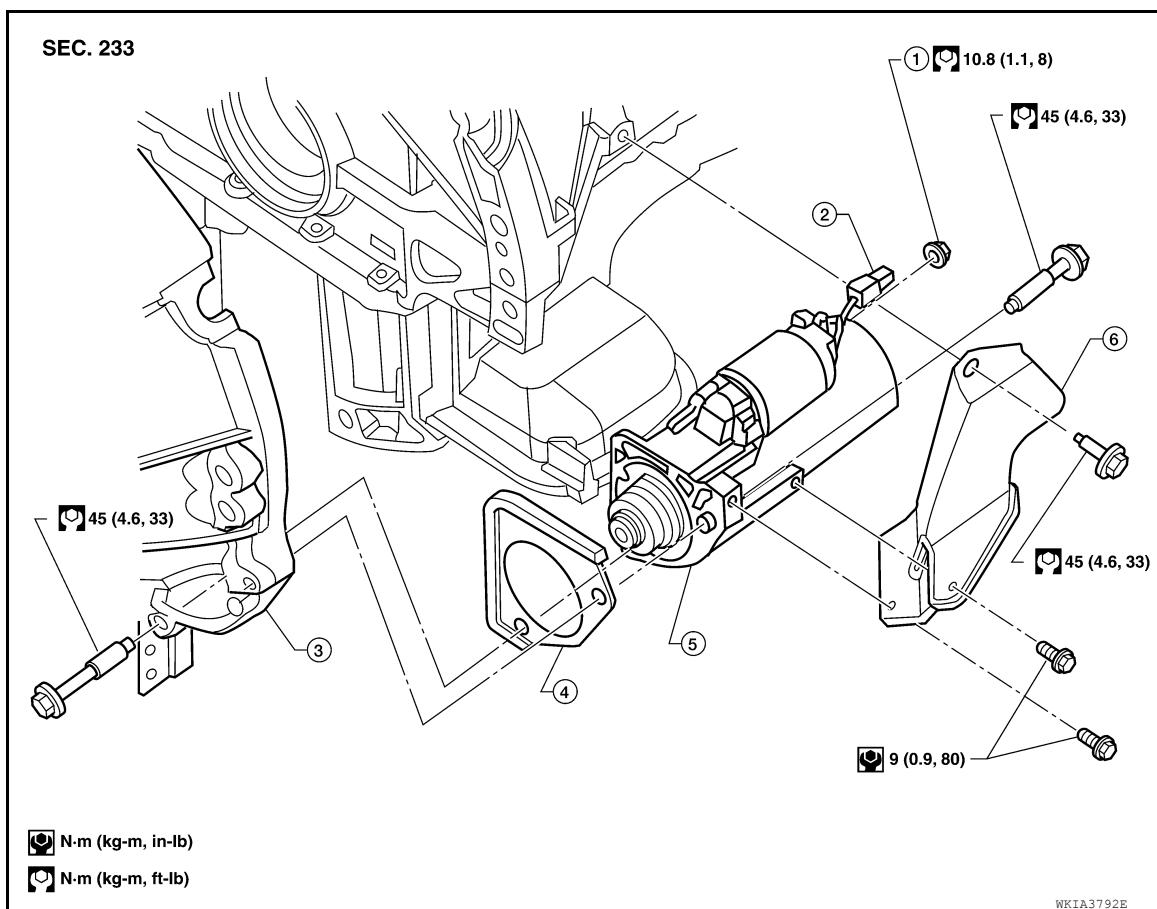

- | | | |
|-------------------------------|-------------------------------|-------------------------|
| 1. Terminal "2" (B) nut | 2. Terminal "1" (S) connector | 3. Transmission housing |
| 4. Starter cover plate (rear) | 5. Starter motor assembly | 6. Starter cover |

REMOVAL

1. Disconnect the negative battery terminal. Refer to [PG-89, "Removal and Installation"](#).
2. Remove starter cover bolts and starter cover.
3. Disconnect terminal "1" (S) connector and remove terminal "2" (B) nut.
4. Remove the two starter motor bolts, using power tools.
5. Remove the starter motor.

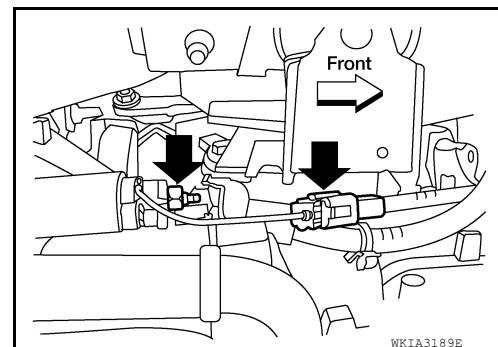

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Be sure to tighten terminal "2" nut carefully.

STARTER MOTOR

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

STARTER MOTOR

Starter

INFOID:000000010713438

STR

Application	QR25DE	VQ40DE
Type*	Mitsubishi M000T88281	Mitsubishi M001TA0072
	Reduction gear type	
System voltage	12V	
No-load	Terminal voltage	11V
	Current	Less than 90A
	Revolution	More than 2,800 rpm
More than 3,100 rpm		

*: Always check with the Parts Department for the latest parts information.