

ALPHABETICAL INDEX

SECTION **IDX**

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-339	A/T fluid temperature sensor.....	AT-96
ABS - Wiring diagram	BR-39	A/T IND - Wiring diagram.....	EL-101
ABS (anti-lock brake system).....	BR-28	AT indicator lamp	EL-101
Absolute pressure sensor	EC-130	A/T shift lock system	AT-219
A/C - Wiring diagram.....	HA-21	A/T shift lock system - Wiring diagram.....	AT-220
A/C air flow.....	HA-16	A/T Wiring diagram - AT - ENG SS	AT-104
A/C component location.....	HA-15	A/T Wiring diagram AT - 1ST	AT-109
A/C compressor clutch removal and installation.....	HA-60	A/T Wiring diagram AT - 2ND	AT-115
A/C compressor description	HA-7	A/T Wiring diagram AT - 3RD	AT-121
A/C compressor mounting.....	HA-58	A/T Wiring diagram AT - 4TH.....	AT-128
A/C compressor precaution.....	HA-7	A/T Wiring diagram AT - BA/FTS	AT-175
A/C compressor special service tool.....	HA-10	A/T Wiring diagram AT - LPSV	AT-148
A/C control operation (manual A/C).....	HA-14	A/T Wiring diagram AT - NONDTC	AT-184
A/C diagnostic work flow (manual A/C)	HA-25	A/T Wiring diagram AT - OVRCSV	AT-170
A/C harness layout (manual A/C)	HA-17	A/T Wiring diagram AT - SSV/A	AT-153
A/C HFC134a (R134a) system introduction	HA-13	A/T Wiring diagram AT - SSV/B	AT-158
A/C HFC134a (R134a) system precaution	HA-2	A/T Wiring diagram AT - TCCSIG	AT-141
A/C HFC134a (R134a) system service procedure.....	HA-51, HA-54	A/T Wiring diagram AT - TCV	AT-135
A/C HFC134a (R134a) system service tools.....	HA-8	A/T Wiring diagram AT - TPS.....	AT-164
A/C HFC134a system service equipment precaution	HA-8	A/T Wiring diagram AT - VSSMTR.....	AT-180
A/C lubricant (R134a).....	HA-56	AT/C - Wiring diagram.....	EC-350
A/C operational check.....	HA-23	ATDIAG - Wiring diagram	EC-440
A/C performance chart.....	HA-43	Audio	EL-124
A/C performance test diagnoses.....	HA-41	AUDIO - Wiring diagram	EL-125
A/C pressure switch	HA-13	Audio and A/C control removal and installation - See Instrument panel	BT-11
A/C relay.....	HA-38	Auto lock free running hub.....	FA-14
A/C trouble diagnoses (manual A/C)	HA-25	Automatic speed control system - See ASCD.....	EL-133
Accelerator control system.....	FE-3	Automatic transmission fluid replacement	MA-19
Accelerator wire adjustment.....	FE-3	Automatic transmission number.....	GI-39
Air bag	RS-9	Auxiliary air control (AAC).....	EC-335
Air bag disposal.....	RS-23	Axle housing (rear).....	RA-7
Air bag precautions	GI-2		
Air bleeding for brake system	BR-6	B	
Air bleeding (hydraulic clutch).....	CL-7	Back window	BT-22, BT-33
Air cleaner filter replacement	MA-14	BACK/L - Wiring diagram.....	EL-57
Air conditioner cut control	EC-23	Back-up lamp	EL-57
Air conditioning - See A/C.....	HA-13	Back-up lamp switch (M/T)	MT-6
Air flow meter - See Mass air flow sensor.....	EC-121	Ball joint front axle.....	FA-31
Alternator.....	EL-33	Basic inspection	EC-86
Angular tightening application.....	EM-2	Battery	EL-23
Anti-lock brake system - See ABS.....	BR-28	Baulk ring (M/T).....	MT-10
Anti-lock brake system - Wiring diagram.....	BR-39	Blower motor	HA-29
AP/SEN - Wiring diagram	EC-133	Blower relay.....	HA-17
ASC/D - Wiring diagram.....	EL-138	Blower resistor.....	HA-29
ASC/D (automatic speed control device).....	EL-133	Body alignment.....	BT-37
A/T - Wiring diagram - AT - FTS.....	AT-94	Body mounting	BT-36
A/T - Wiring diagram - AT - MAIN.....	AT-85	BPT valve	EC-296
A/T - Wiring diagram - AT - PNP/SW.....	AT-89	Brake booster.....	BR-15
A/T - Wiring diagram - AT - VSS A/T	AT-99	Brake control valve (Proportioning valve).....	BR-9
A/T control.....	EC-348	Brake fluid change	BR-5
A/T diagnosis communication line	EC-439	Brake fluid level.....	MA-22
		Brake fluid level and line check	BR-5
		Brake hydraulic line.....	BR-7

ALPHABETICAL INDEX

Brake inspection.....	MA-22
Brake lines and cables inspection	MA-22
Brake master cylinder	BR-12
Brake pedal	BR-10
Bulb specifications.....	EL-234
Bumper, front.....	BT-5
Bumper, rear.....	BT-8
BYPS/V - Wiring diagram.....	EC-429, EC-435

C

Cab body.....	BT-36
Camshaft inspection.....	EM-27
Camshaft position sensor (CMPS).....	EC-281
Canister - See EVAP canister.....	EC-24
Center bearing assembly (propeller shaft).....	PD-10
Center bearing disassembly (propeller shaft).....	PD-9
Center case (Transfer).....	TF-10
CHARGE - Wiring diagram	EL-34
Charging system	EL-33
Chassis and body maintenance.....	MA-18
CHIME - Wiring diagram.....	EL-105
CIGAR - Wiring diagram.....	EL-123
Cigarette lighter.....	EL-123
Circuit breaker.....	EL-15
CKPS - Wiring diagram.....	EC-278, EC-374
Closed loop control (Left bank).....	EC-364
Closed loop control (Right bank).....	EC-364
Closed throttle position switch	EC-342
Clutch cover	CL-13
Clutch disc.....	CL-12
Clutch fluid level.....	MA-18
Clutch master cylinder.....	CL-8
Clutch operating cylinder.....	CL-9
Clutch pedal	CL-5
Clutch release bearing	CL-10
Clutch withdrawal lever	CL-10
CMPS - Wiring diagram	EC-284
Collision diagnosis.....	RS-52
Combination lamp, front, removal and installation.....	BT-5
Combination lamp, rear, removal and installation	BT-22
Combination meter.....	EL-77
Combination meter removal and installation - See Instrument panel	BT-11
Combination switch.....	EL-38
Component location (manual A/C).....	HA-17
Compression pressure	EM-10
Compressor clutch removal and installation.....	HA-60
Compressor description	HA-7
Compressor mounting.....	HA-58
Compressor precaution.....	HA-7
Compressor special service tool.....	HA-10
Connecting rod.....	EM-42

Connecting rod bearing clearance.....	EM-46
Connecting rod bushing clearance	EM-47
Connector inspection.....	GI-17
Console box - See Instrument panel	BT-12
CONSULT for ABS	BR-45
CONSULT for engine	EC-66
CONSULT general information	GI-35
Control lever (M/T)	MT-12
Control lever (Transfer)	TF-9
Control valve (A/T)	AT-251
Converter housing installation.....	AT-230
Coolant mixture ratio.....	MA-9
COOL/F - Wiring diagram	EC-453
Cooling circuit (engine)	LC-8
Cooling fan	LC-13
Cooling fan control	EC-450
Cooling fan motor.....	EC-458
Cooling fan relay	EC-458
Counter gear (M/T).....	MT-10
Counter gear (Transfer)	TF-11
Coupling sleeve (M/T).....	MT-10
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-281
Crankcase emission control system - See positive crankcase ventilation.....	EC-30
Crankshaft	EM-45
Crankshaft position sensor (OBD)	EC-276
Crankshaft position sensor (OBD) cog chipping... ..	EC-372
Crash zone sensor.....	RS-14
Cruise control - See ASCD	EL-133
Cylinder block.....	EM-40
Cylinder block boring.....	EM-44
Cylinder head.....	EM-23
Cylinder head bolt tightening	EM-34

D

Data link connector for Consult.....	EC-66
Daytime light system.....	EL-46
Daytime running light - See Daytime light system.....	EL-46
Detonation sensor - See Knock sensor	EC-271
Diagnosis sensor unit.....	RS-14
Diagnostic trouble code (DTC) for OBD system.....	EC-2, EC-45
Diagnostic trouble code (DTC) inspection priority chart.....	EC-95
Differential carrier assembly (R200A) (H233B).....	PD-30, PD-53
Differential carrier disassembly (H233B)	PD-37
Differential gear oil replacement	MA-21
Dimensions.....	GI-40
Distributor	EC-22
Distributor ignition (DI) system.....	EC-22
D/LOCK - Wiring diagram	EL-163

ALPHABETICAL INDEX

Dome light - See Interior lamp.....	EL-69
Door, front.....	BT-10
Door glass.....	BT-10
Door glass Fitting Adjustment.....	BT-10
Door lock.....	BT-10
Door mirror.....	BT-35
Door trim.....	BT-17
Drive belt inspection.....	MA-10
Drive chain (Transfer).....	TF-11
Drive pinion diff. inspection (R200A) (H233B).....	PD-22, PD-41
Drive pinion height (R200A) (H233B).....	PD-24, PD-48
Drive plate runout.....	EM-47
Drive shaft (front).....	FA-19
Dropping resistor (A/T).....	AT-150
DTC work support.....	EC-76
DTRL - Wiring diagram.....	EL-49

E

ECM input/output signal.....	EC-106
ECTS - Wiring diagram.....	EC-147, EC-163
EGR control (EGRC) - BPT valve.....	EC-296
EGR control (EGRC) - solenoid valve.....	EC-377
EGR control valve.....	EC-288, EC-389
EGR temperature sensor.....	EC-382
EGRC1 - Wiring diagram.....	EC-292, EC-392
EGRC/V - Wiring diagram.....	EC-379
EGR/TS - Wiring diagram.....	EC-386
Electrical diagnoses.....	GI-20
Electrical ignition system.....	EC-22
Electrical unit.....	EL-214
Electrical units location.....	EL-214
Engine compartment.....	BT-38
Engine control circuit diagram.....	EC-16
Engine control component parts location.....	EC-14
Engine control module (ECM).....	EC-352
Engine control system diagram and chart.....	EC-17
Engine coolant temperature sensor (ECTS).....	EC-145, EC-161
Engine fail-safe system.....	EC-96
Engine oil filter replacement.....	MA-15
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-14
Engine On board diagnostic system.....	EC-44
Engine outer component parts.....	EM-8
Engine removal.....	EM-37
Engine room - See Engine compartment.....	BT-38
Engine serial number.....	GI-39
EVAP canister.....	EC-25
EVAP canister purge volume control solenoid valve.....	EC-24, EC-310, EC-402
EVAP canister vent control valve.....	EC-316, EC-409, EC-420

EVAP control system pressure sensor.....	EC-322
EVAP control system purge flow monitoring diagnosis.....	EC-414
EVAP control system (small leak) diagnosis.....	EC-303, EC-395
EVAP vapor lines inspection.....	MA-17
Evaporative emission (EVAP) system.....	EC-24
Exhaust gas recirculation (EGR) valve... ..	EC-288, EC-389
Exhaust system.....	FE-8
Exhaust system inspection.....	MA-18
Exterior.....	BT-22

F

Fan switch.....	HA-29, HA-38
Fast idle cam (FIC) inspection and adjustment.....	EC-33
F/FOG - Wiring diagram.....	EL-59
FICD - Wiring diagram.....	EC-478
Final drive disassembly (H233B).....	PD-37
Final drive pre-inspection (H233B).....	PD-37
Final drive removal and installation.....	PD-15
Floor trim.....	BT-14
Flow charts.....	GI-30
Fluid temperature sensor (A/T).....	AT-96
Fluids.....	MA-8
Flywheel (clutch).....	CL-13
Flywheel runout.....	EM-47
FO2H-L - Wiring diagram.....	EC-205
FO2H-R Wiring diagram.....	EC-204
Fog lamp, front.....	EL-58
Fork rod (M/T).....	MT-12
Forward clutch.....	AT-270
F/PUMP - Wiring diagram.....	EC-468
Freeze frame data.....	EC-46
FRO2LH - Wiring diagram.....	EC-170, EC-190, EC-198
FRO2RH - Wiring diagram.....	EC-169, EC-189, EC-197
Front axle.....	FA-12
Front bumper.....	BT-5
Front case (Transfer).....	TF-10
Front combination lamp removal and installation.....	BT-5
Front disc brake.....	BR-18
Front door.....	BT-10
Front drive shaft (Transfer).....	TF-11
Front final drive disassembly (4WD).....	PD-17
Front final drive pre-inspection (4WD).....	PD-17
Front final drive removal and installation (4WD)....	PD-14
Front fog lamp.....	EL-58
Front heated oxygen sensor heater (Left bank) ...	EC-202
Front heated oxygen sensor heater (Right bank).....	EC-202
Front heated oxygen sensor (HO2S) (Left bank).....	EC-166, EC-174, EC-180, EC-186, EC-194
Front heated oxygen sensor (HO2S) (Right bank).....	EC-166, EC-174, EC-180, EC-186, EC-194

ALPHABETICAL INDEX

Front oxygen sensor (O2S) monitor	EC-58
Front passenger air bag	RS-19
Front seat	BT-26
Front seat belt	RS-4
Front suspension	FA-5
Fuel cut control (at no load & high engine speed)	EC-24
Fuel filter replacement	MA-13
Fuel injection system (Left bank)	EC-247, EC-254
Fuel injection system (Right bank)	EC-247, EC-254
Fuel line inspection	MA-13
Fuel precautions	GI-6
Fuel pressure check	EC-31
Fuel pressure regulator	EC-32
Fuel pressure release	EC-31
Fuel pump	EC-467
Fuel pump and gauge	FE-7
Fuel pump relay	EC-470
Fuel system	FE-4
Fuel tank vacuum relief valve	EC-25
FUELLH - Wiring diagram	EC-250, EC-257
FUELRH - Wiring diagram	EC-249, EC-256
Fuse	EL-15
Fusible link	EL-15

G

Garage jack and safety stand	GI-42
Gauges	EL-77
Gear components (M/T)	MT-10
Generator	EL-33
Generic scan tool (GST)	EC-80
Glass	BT-10
Grease	MA-8
Grille - See Exterior	BT-5
Ground clearance	GI-40
Ground distribution	EL-16

H

Harness connector	EL-3
Harness connector inspection	GI-17
Harness layout	EL-217
Hazard warning lamp	EL-62
Headlamp	EL-41
Headlamp aiming control	EL-44
Headlamp leveler - See Headlamp aiming control	EL-44
Headlining - See Roof trim	BT-20
HEATER - Wiring diagram	HA-20
Height (Dimensions)	GI-40
HFC134a (R134a) system introduction	HA-13
HFC134a (R134a) system precaution	HA-2

HFC134a (R134a) system service procedure	HA-51, HA-54
HFC134a (R134a) system service tools	HA-8
HFC134a system service equipment precaution	HA-8
High clutch	AT-268
H/LAMP - Wiring diagram	EL-42
Hood	BT-5
Horn	EL-122
HORN - Wiring diagram	EL-122
How to erase DTC for OBD system	EC-55
Hydraulic lash adjuster inspection	EM-32

I

IACV-AAC valve	EC-335
IACV-FICD solenoid valve	EC-477
IATS - Wiring diagram	EC-142
Identification plate	GI-38
Idle air control valve (IACV)	EC-335
Idle mixture ratio	EC-35
Idle speed	EC-35
Ignition control system	EC-366
Ignition timing	EC-35
Ignition wire inspection	EC-270
IGN/SG - Wiring diagram	EC-368
ILL - Wiring diagram	EL-68
Illumination	EL-67
INJECT - Wiring diagram	EC-460
Injector	EC-459
Injector removal and installation	EC-32
Instrument panel	BT-11
Intake air temperature sensor	EC-139
Interior	BT-14
Interior lamp	EL-69
Interior lamp on-off control	EL-71
INT/L - Wiring diagram	EL-76

J

Jacking points	GI-41
Journal bearing assembly (propeller shaft)	PD-11
Journal bearing disassembly (propeller shaft)	PD-10
Jump seat	BT-29

K

Keyless entry system - See Multi-remote control system	EL-174
Knock sensor (KS)	EC-271
Knuckle spindle	FA-16
KS - Wiring diagram	EC-273

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

ALPHABETICAL INDEX

L

Leaf spring (rear).....	RA-14
Length (Dimensions).....	GI-40
License lamp.....	EL-55
Lifting points.....	GI-41
Limited slip diff. adjustment (H233B).....	PD-44
Limited slip diff. assembly (H233B).....	PD-45
Limited slip diff. disassembly (H233B).....	PD-42
Limited slip diff. inspection (H233B).....	PD-43
Line pressure solenoid valve..... AT-131, AT-144, AT-150	
Line pressure test (A/T).....	AT-58
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-214
Lock, door.....	BT-10
Low and reverse brake.....	AT-274
Lubricant (R134a) A/C.....	HA-56
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication-locks, hinges and hood latches.....	MA-24
Luggage room lamp.....	EL-76

M

MAFS - Wiring diagram.....	EC-126
Magnet clutch.....	HA-60
MAIN - Wiring diagram.....	EC-116
Main drive gear (M/T).....	MT-10
Main gear (Transfer).....	TF-11
Mainshaft (M/T).....	MT-10
Mainshaft (Transfer).....	TF-11
Maintenance.....	MA-3
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-232
Major overhaul (Transfer).....	TF-10
Malfunction indicator lamp (MIL).....	EC-57
Manual lock free running hub.....	FA-13
Manual transmission number.....	GI-39
Manual transmission oil replacement.....	MA-18
MAP/BARO switch solenoid valve.....	EC-354
Mass air flow sensor (MAFS).....	EC-121
Master cylinder (brake).....	BR-12
Master cylinder (clutch).....	CL-8
Meter.....	EL-77
METER - Wiring diagram.....	EL-82
MIL & Data link connectors circuit.....	EC-482
MIL/DL - Wiring diagram.....	EC-482
MIRROR - Wiring diagram.....	EL-132
Mirror, door.....	BT-35
Mirror, out side.....	BT-35
Misfire.....	EC-266
Model variation.....	GI-37
Molding - See Exterior.....	BT-22
M/T major overhaul.....	MT-9

M/T removal and installation.....	MT-7
Mud guard - See Exterior.....	BT-25
MULTI - Wiring diagram.....	EL-178
Multiport fuel injection (MFI) system.....	EC-20
Multiport fuel injection precautions.....	GI-5
Multi-remote control system.....	EL-174

N

NVH troubleshooting (BR).....	BR-4
NVH troubleshooting (CL).....	CL-3
NVH troubleshooting (EM).....	EM-6
NVH troubleshooting (FA).....	FA-4
NVH troubleshooting (M/T).....	MT-4
NVH troubleshooting (PD).....	PD-6
NVH troubleshooting (RA).....	RA-4
NVH troubleshooting (ST).....	ST-5
NVH troubleshooting (Transfer).....	TF-4

O

Oil change (capacity).....	MA-8
Oil change (interval).....	MA-6
Oil pan (engine).....	EM-11
Oil pressure (engine).....	LC-4
Oil pump (A/T).....	AT-247
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-21
Oil seal replacement (front final drive 4WD).....	PD-12
Operating cylinder (clutch).....	CL-9
Out side mirror.....	BT-35
Overdrive control switch.....	AT-217
Overrun clutch.....	AT-270
Overrun clutch solenoid valve..... AT-131, AT-144, AT-171	
Oversize piston.....	EM-44

P

Pantograph jack.....	GI-41
Parking brake control.....	BR-26
Parking lamp.....	EL-54
Park/neutral position switch.....	EC-442
Park/neutral position switch (A/T)..... AT-91, AT-217	
Park/neutral position switch (M/T).....	MT-6
PCV filter replacement.....	MA-17
PCV (positive crankcase ventilation).....	EC-30
PCV system inspection.....	MA-17
PGC/V - Wiring diagram.....	EC-313, EC-405
Pilot bushing replacement.....	EM-50
Pinion bearing preload diff. (R200A).....	PD-24
Pinion gear height diff. (R200A) (H233B).....	PD-24, PD-48

ALPHABETICAL INDEX

Piston assembly	EM-48
Piston pin inspection	EM-41
Piston ring inspection	EM-42
Piston to bore clearance	EM-43
PNP/SW - Wiring diagram	EC-445
POWER - Wiring diagram	EL-10
Power door lock	EL-159
Power door mirror	EL-132
Power steering fluid level	MA-23, ST-6
Power steering gear	ST-15
Power steering hydraulic pressure	ST-10
Power steering oil pressure switch	EC-472
Power steering oil pump	ST-22
Power steering system bleeding	ST-7
Power supply routing	EL-8
Power transistor & ignition coil	EC-366
Power window	EL-154
Precautions (General)	GI-3
PRE/SE - Wiring diagram	EC-325
Pressure plate - See Clutch cover	CL-13
Pressure test (A/T)	AT-58
Propeller shaft	PD-7
Propeller shaft inspection	MA-20
Propeller shaft on vehicle service	PD-8
Propeller shaft vibration	PD-8
PST/SW - Wiring diagram	EC-473

R

R134a - See HFC134a	HA-2
Radiator	LC-12
Radiator fan - See Cooling fan	LC-13
Radio - See Audio	EL-124
Rear axle	RA-7
Rear axle (drum brake type)	RA-8
Rear body	BT-36
Rear bumper	BT-8
Rear case (Transfer)	TF-10
Rear combination lamp removal and installation	BT-22
Rear drum brake	BR-22
Rear heated oxygen sensor (HO2S)	EC-208, EC-217, EC-225, EC-234
Rear heated oxygen sensor (HO2S) heater	EC-241
Rear seat	BT-29
Rear seat belt	RS-5
Rear side window	BT-32
Rear suspension	RA-13
Rear window	BT-33
Refrigerant connection precaution	HA-4
Refrigerant discharging evacuating charging	HA-54
Refrigerant general precaution	HA-3
Refrigerant lines	HA-50
Refrigeration cycle	HA-13
Release bearing (clutch)	CL-10
Removal and installation (A/T)	AT-229

Removal and installation (Transfer)	TF-8
Reverse clutch	AT-264
Reverse idler shaft (M/T)	MT-10
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-6
Reverse main gear (M/T)	MT-10
Revolution sensor (A/T)	AT-101
Ring gear diff. inspection (R200A) (H233B)	PD-22, PD-41
RO2H-L - Wiring diagram	EC-244
RO2H-R - Wiring diagram	EC-243
Road wheel size	GI-40
Roof trim	BT-20
Room lamp	EL-69
Room lamp - See Interior lamp	EL-69
ROOM/L - Wiring diagram	EL-72
Rotor disc (front)	FA-14
RRO2LH - Wiring diagram	EC-212, EC-221, EC-229, EC-237
RRO2RH - Wiring diagram	EC-211, EC-220, EC-228, EC-236

S

SAE J1930 terminology list	GI-47
Seal - See Exterior	BT-22
Seat belt, front	RS-4
Seat belt inspection	MA-25, RS-6
Seat belt, rear	RS-5
Seat, front	BT-26
Seat, rear	BT-29
Self-diagnostic results	EC-58
SHIFT - Wiring diagram	AT-220
Shift control components (M/T)	MT-12
Shift control (Transfer)	TF-12
Shift fork (M/T)	MT-12
Shift lever	MT-12
Shift lock system	AT-219
Shift schedule	AT-306
Shift solenoid valve A (A/T)	AT-111, AT-122, AT-131, AT-144, AT-154
Shift solenoid valve B (A/T)	AT-111, AT-116, AT-131, AT-144, AT-159
Shock absorber (front)	FA-25
Shock absorber (rear)	RA-14
Side bearing preload (front final drive 4WD) (R200A)	PD-23
Side trim	BT-14
Smart entrance control unit	EL-174, EL-209
Spare tire size	GI-40
Spark plug replacement	MA-15
Spiral cable	RS-15
Spot lamp	EL-76
SRS - See Supplemental Restraint System	RS-9
SRS - Wiring diagram	RS-32

ALPHABETICAL INDEX

SRS Trouble diagnoses	RS-27
S/SIG - Wiring diagram	EC-464
Stabilizer bar (front)	FA-27
Stall test (A/T)	AT-55
Standardized relay	EL-5
START - Wiring diagram	EL-29
Start signal	EC-463
Starter	EL-27
Starting system	EL-27
Steering gear and linkage inspection	MA-23
Steering knuckle	FA-16
Steering linkage	ST-25
Steering switch	EL-40
Steering wheel and column	ST-11
Steering wheel play	ST-8
Steering wheel turning force	ST-8
Stop lamp	EL-56
STOP/L - Wiring diagram	EL-56
Striking rod (M/T)	MT-12
Sub-gear (M/T)	MT-10
Sunroof	BT-30
Supplemental Restraint System	RS-9
Supplemental restraint system - Wiring diagram	RS-32
SW/V - Wiring diagram	EC-358
Symbols and abbreviations	GI-8
Symptom matrix chart	EC-97
Synchronizer (M/T)	MT-10
System readiness test (SRT) code	EC-46

T

Tail lamp	EL-54
TAIL/L - Wiring diagram	EL-54
Tank fuel temperature sensor	EC-261
TCM circuit diagram	AT-11
TCM inspection table	AT-81
Tension rod (front)	FA-29
TFTS - Wiring diagram	EC-263
THEFT - Wiring diagram	EL-195
Theft warning system	EL-189
Thermal protector	HA-37
Thermo control amp	HA-37
Thermostat	LC-11
Three way catalyst function (Left bank)	EC-300
Three way catalyst function (Right bank)	EC-300
Three way catalyst precautions	GI-5
Throttle drum adjustment	FE-3
Throttle position sensor adjustment	EC-86
Throttle position sensor (TPS)	EC-150
Throttle position switch	AT-167, AT-218, EC-342
Throwout bearing - See Clutch release bearing	CL-10
Tie-rod	ST-25
Tie-rod ball joints	ST-25
Tightening torque of standard bolts	GI-46
Timing belt	EM-14

Tire rotation	MA-21
Tire size	GI-40
Tooth contact diff. (H233B)	PD-51
Tooth contact (front final drive 4WD) (R200A)	PD-29
Torque converter clutch solenoid valve	AT-131, AT-136, AT-144
Torque converter installation	AT-230
Torsion bar spring	FA-25
Towing point	GI-45
TPS - Wiring diagram	EC-156
TP/SW - Wiring diagram	EC-344
Transfer case	TF-10
Transfer fluid replacement	MA-20
Transfer oil replacement	MA-20
Transfer serial number	GI-39
Transmission case (M/T)	MT-9
Tread-FR&RR (Dimensions)	GI-40
Trim	BT-14
Triple pressure switch	HA-37
Trouble diagnoses	GI-20
Trunk room lamp	EL-76
TURN - Wiring diagram	EL-64
Turn signal lamp	EL-62
Two trip detection logic	EC-44
Two-pole lift	GI-43

U

Under body	BT-40
Upper link (front susp.)	FA-28

V

Vacuum cut valve	EC-24, EC-438
Vacuum cut valve bypass valve	EC-24, EC-427, EC-432
Vacuum hose (brake system)	BR-17
Vacuum hose drawing (Engine control)	EC-18
Valve clearance	EM-29
Valve guide	EM-29
Valve seat	EM-30
Valve spring	EM-31
Vehicle identification number	GI-38
Vehicle speed sensor (VSS)	EC-330
Vent mode switch	HA-14
VENT/V - Wiring diagram	EC-318, EC-411, EC-423
Viscosity number (SAE)	MA-9
VSS - Wiring diagram	EC-333

W

WARN - Wiring diagram	EL-95
Warning chime	EL-102

ALPHABETICAL INDEX

Warning lamps	EL-92	Width (Dimensions).....	GI-40	GI
Washer, front.....	EL-114	WINDOW - Wiring diagram.....	EL-156	
Water pump.....	LC-10	Window, back.....	BT-22, BT-33	MA
Weatherstrip - See Exterior.....	BT-22	Window, door.....	BT-10	
Wheel alignment (front).....	FA-7	Window, rear.....	BT-33	
Wheel balance.....	MA-21	Windshield.....	BT-31	EM
Wheel bearing (front axle).....	FA-6	WIPER - Wiring diagram.....	EL-116	
Wheel bearing (rear).....	RA-6	Wiper and washer.....	EL-114	
Wheel hub (front).....	FA-14	Wiper, front.....	EL-114	LC
Wheel sensors (ABS).....	BR-31	Wiring Diagram (Cell code) list.....	EL-235	
Wheel size.....	GI-40	Wiring diagrams.....	GI-9	
Wheelbase (Dimensions).....	GI-40	Withdrawal lever (clutch).....	CL-10	EC
Wide open & closed throttle position switch.....	EC-150	Wrist pin - See Piston pin inspection.....	EM-41	

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX



PLEASE HELP MAKE THIS SERVICE MANUAL BETTER!

Your comments are important to NISSAN and will help us to improve our Service Manuals. Use this form to report any issues or comments you may have regarding our Service Manuals. Please photocopy this form and type or print your comments below. Mail or fax to:

Nissan North America, Inc.
Technical Service Information
39001 Sunrise Drive, P.O. Box 9200
Farmington Hills, MI USA 48331
FAX: (248) 488-3910

SERVICE MANUAL: Model: _____ Year: _____

PUBLICATION NO. (Please photocopy back cover): _____

VEHICLE INFORMATION VIN: _____ **Production Date:** _____

Please describe any issues or problems in detail:

Page number(s) _____ *Note: Please include a copy of each page, marked with your comments.*

Are the trouble diagnosis procedures logical and easy to use? (circle your answer) YES NO

If no, what page number(s)? _____ *Note: Please include a copy of each page, marked with your comments.*

Please describe the issue or problem in detail: _____

Is the organization of the manual clear and easy to follow? (circle your answer) YES NO

Please comment: _____

What information should be included in NISSAN Service Manuals to better support you in servicing or repairing customer vehicles?

DATE: _____ YOUR NAME: _____ POSITION: _____

DEALER: _____ DEALER NO.: _____ ADDRESS: _____

CITY: _____ STATE/PROV./COUNTRY: _____ ZIP/POSTAL CODE: _____