

SECTION BR
BRAKE SYSTEM

A
B
C
D
E

CONTENTS

PRECAUTION	3	FRONT BRAKE	14	BR
PRECAUTIONS	3	FRONT BRAKE : Inspection	14	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	REAR BRAKE	15	G
Precaution for Brake System	3	REAR BRAKE : Inspection	15	
PREPARATION	5	PERIODIC MAINTENANCE	16	H
PREPARATION	5	BRAKE PEDAL	16	
Special Service Tool	5	Inspection and Adjustment	16	I
Commercial Service Tool	5	BRAKE FLUID	18	
SYSTEM DESCRIPTION	6	On Board Inspection	18	J
NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING	6	Drain and Refill	18	
NVH Troubleshooting Chart	6	Bleeding Brake System	18	
BASIC INSPECTION	7	FRONT DISC BRAKE	20	K
FRONT DISC BRAKE	7	BRAKE PAD	20	
DISC ROTOR	7	BRAKE PAD : Inspection and Adjustment	20	L
DISC ROTOR : Inspection	7	DISC ROTOR	20	
REAR DISC BRAKE	8	DISC ROTOR : Inspection and Adjustment	20	M
DISC ROTOR	8	REAR DISC BRAKE	22	
DISC ROTOR : Inspection	8	BRAKE PAD	22	N
BRAKE BOOSTER	9	BRAKE PAD : Inspection and Adjustment	22	
Inspection	9	DISC ROTOR	22	O
VACUUM LINES	10	DISC ROTOR : Inspection and Adjustment	22	
Inspection	10	REMOVAL AND INSTALLATION	24	P
BRAKE MASTER CYLINDER	11	BRAKE PEDAL	24	
On Board Inspection	11	Exploded View	24	
BRAKE TUBE AND HOSE	12	Removal and Installation	24	
Hydraulic Circuit	12	BRAKE TUBE AND HOSE	26	
		Hydraulic Circuit	26	
		Removal and Installation of Front Brake Piping and Brake Hose	28	
		Removal and Installation of Rear Brake Piping and Brake Hose	29	

Inspection After Installation	30	UNIT DISASSEMBLY AND ASSEMBLY ...	47
BRAKE MASTER CYLINDER	32	BRAKE MASTER CYLINDER	47
Removal and Installation	32	Disassembly and Assembly	47
BRAKE BOOSTER	34	FRONT DISC BRAKE	49
Removal and Installation	34	Exploded View of Brake Caliper	49
VACUUM LINES	36	Disassembly and Assembly	49
Removal and Installation	36	REAR DISC BRAKE	52
FRONT DISC BRAKE	37	Exploded View of Brake Caliper	52
Exploded View of Brake Pads	37	Disassembly and Assembly	52
Removal and Installation of Brake Pad	37	SERVICE DATA AND SPECIFICATIONS	
Exploded View of Brake Caliper	39	(SDS)	55
Removal and Installation of Brake Caliper and		SERVICE DATA AND SPECIFICATIONS	
Disc Rotor	39	(SDS)	55
REAR DISC BRAKE	42	General Specification	55
Exploded View of Brake Pad	42	Brake Pedal	55
Removal and Installation of Brake Pad	42	Brake Booster	56
Exploded View of Brake Caliper	44	Check Valve	56
Removal and Installation of Brake Caliper and		Front Disc Brake	56
Disc Rotor	44	Rear Disc Brake	56

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012565302

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Brake System

INFOID:000000012565303

WARNING:


Clean any dust from the front brake and rear brake with a vacuum dust collector. Do not blow with compressed air.

- Brake fluid use refer to [MA-18, "FOR USA AND CANADA : Fluids and Lubricants"](#). (United States and Canada) and [MA-21, "FOR MEXICO : Fluids and Lubricants"](#) (Mexico).
- Do not reuse drained brake fluid.
- Do not spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
- Always confirm the specified tightening torque when installing the brake pipes.
- After pressing the brake pedal more deeply or harder than normal driving, such as air bleeding, inspect the brake pedal height and play. Adjust brake pedal if it is outside the standard value.
- Always clean with new brake fluid when cleaning the brake caliper and other components.
- Do not use mineral oils such as gasoline or light oil to clean. They may damage rubber parts and cause improper operation.
- Always loosen the brake tube flare nut with a flare nut wrench.

PRECAUTIONS

< PRECAUTION >

- Tighten the brake tube flare nut to the specified torque with a crow-foot (A) and torque wrench (B).
- Brake system is an important safety part. If a brake fluid leak is detected, always disassemble the affected part. If a malfunction is detected, replace part with a new one.
- Always connect the battery terminals when moving the vehicle.
- Check that no brake fluid leakage is present after replacing the parts.
- Burnish the brake contact surfaces after refinishing or replacing disc brake rotors, after replacing brake pads, or if a soft pedal occurs at very low mileage.
- Front brake pad: Refer to [BR-20, "BRAKE PAD : Inspection and Adjustment"](#).
- Front disc brake rotor: Refer to [BR-20, "DISC ROTOR : Inspection and Adjustment"](#).
- Rear brake pad: Refer to [BR-22, "BRAKE PAD : Inspection and Adjustment"](#).
- Rear disc brake rotor: Refer to [BR-22, "DISC ROTOR : Inspection and Adjustment"](#).

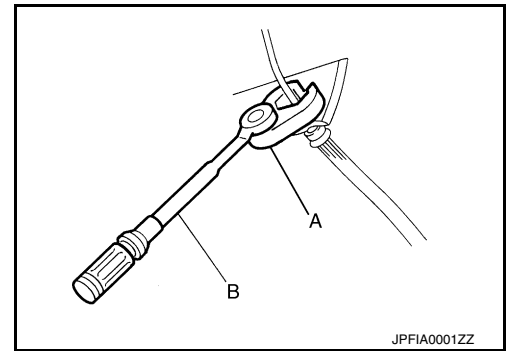

PREPARATION

< PREPARATION >



PREPARATION

PREPARATION

Special Service Tool



INFOID:0000000012565304

The actual shape of the tools may differ from those illustrated here.

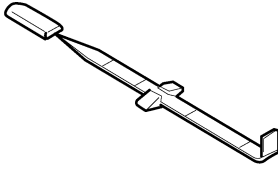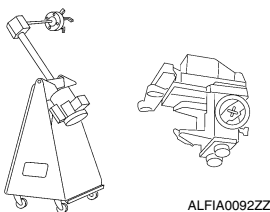Tool number (TechMate No.) Tool name	Description
<p style="text-align: center;">—</p> <p>(J-46532) Brake height tool</p>	<p>Measuring brake pedal height</p>
 <p style="text-align: center;">LFIA0227E</p>	
<p>38-PFM92 (—) ProCut™ PFM Series Lathe</p>	<p>Refinishing rotors</p>
 <p style="text-align: center;">ALFIA0092ZZ</p>	

Commercial Service Tool

INFOID:0000000012565305

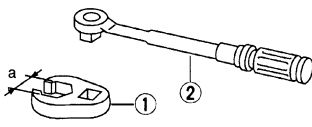Tool name	Description
<p>1. Flare nut crowfoot 2. Torque wrench</p>	<p>Tightening brake tube flare nuts a: 10 mm (0.39 in) / 12 mm (0.47 in)</p>
 <p style="text-align: center;">S-NT360</p>	
<p>Power tool</p>	<p>Loosening nuts, screws and bolts</p>
 <p style="text-align: center;">PIIB1407E</p>	

FRONT DISC BRAKE

< BASIC INSPECTION >

BASIC INSPECTION

FRONT DISC BRAKE

DISC ROTOR

DISC ROTOR : Inspection


INFOID:0000000012565308

INSPECTION

Uneven wear

Check for uneven wear of the disc brake rotor using a micrometer.
Replace the disc brake rotor if the thickness is below the wear limit.

Thickness variation : Refer to [BR-56, "Front Disc Brake"](#).
(measured at 8 positions)

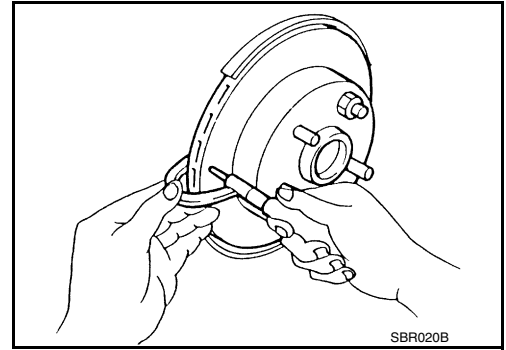

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

REAR DISC BRAKE

< BASIC INSPECTION >

REAR DISC BRAKE

DISC ROTOR

DISC ROTOR : Inspection


INFOID:000000012565310

INSPECTION

Uneven wear

Check for uneven wear of the disc brake rotor using a micrometer.
Replace the disc brake rotor if the thickness is below the wear limit.

Thickness variation : Refer to [BR-56, "Rear Disc Brake"](#).
(measured at 8 positions)

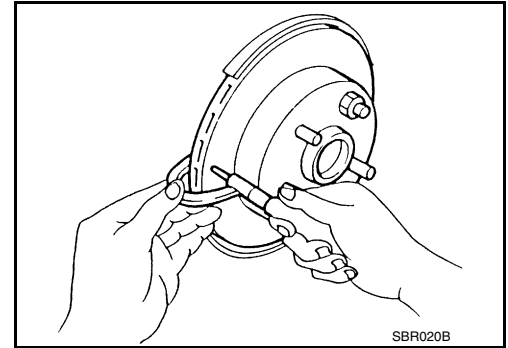

BRAKE BOOSTER

< BASIC INSPECTION >


BRAKE BOOSTER

Inspection

INFOID:000000012565311


OPERATION

With engine stopped, change vacuum to atmospheric pressure by depressing brake pedal several times. Then with brake pedal fully depressed, start engine and when vacuum pressure reaches the standard, make sure that clearance between brake pedal and floor panel decreases.

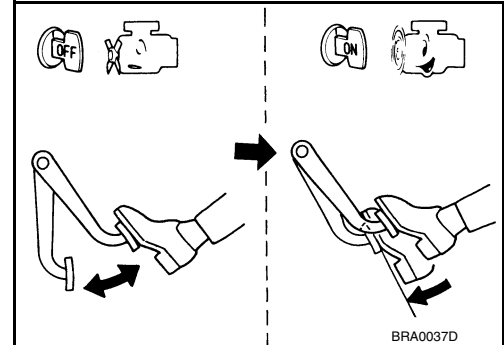

AIR TIGHT

- Run engine at idle for approximately 1 minute, and stop it after applying vacuum to booster. Depress brake pedal normally to change vacuum to atmospheric pressure. Make sure that distance at intervals of 5 seconds between brake pedal and floor panel gradually increases.

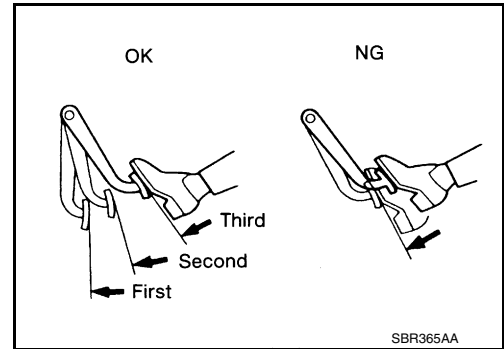

- Depress brake pedal while engine is running, and stop engine with pedal depressed. The pedal stroke should not change after holding pedal down for 30 seconds.

VACUUM LINES

< BASIC INSPECTION >

VACUUM LINES

Inspection

INFOID:000000012565312

VISUAL INSPECTION


Check for improper assembly, damage and deterioration. Replace as necessary.

CHECK VALVE INSPECTION

Airtightness Inspection

Use a suitable tool to test brake booster vacuum check valve. Connect to brake booster side of check valve.

Check valve specification : Refer to [BR-56, "Check Valve"](#).

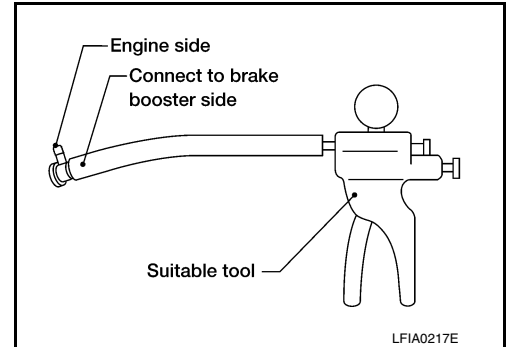

BRAKE MASTER CYLINDER

< BASIC INSPECTION >

BRAKE MASTER CYLINDER

On Board Inspection

INFOID:000000012565313

LEAK INSPECTION

Check for leaks at master cylinder to brake booster attachment point, reservoir tank, and brake tube connections.

A

B

C

D

E

BR

G

H

I

J

K

L

M

N

O

P

BRAKE TUBE AND HOSE


< BASIC INSPECTION >

BRAKE TUBE AND HOSE

Hydraulic Circuit

INFOID:000000012565314

Type 1 and Type 2 - Four Channel Hydraulic System

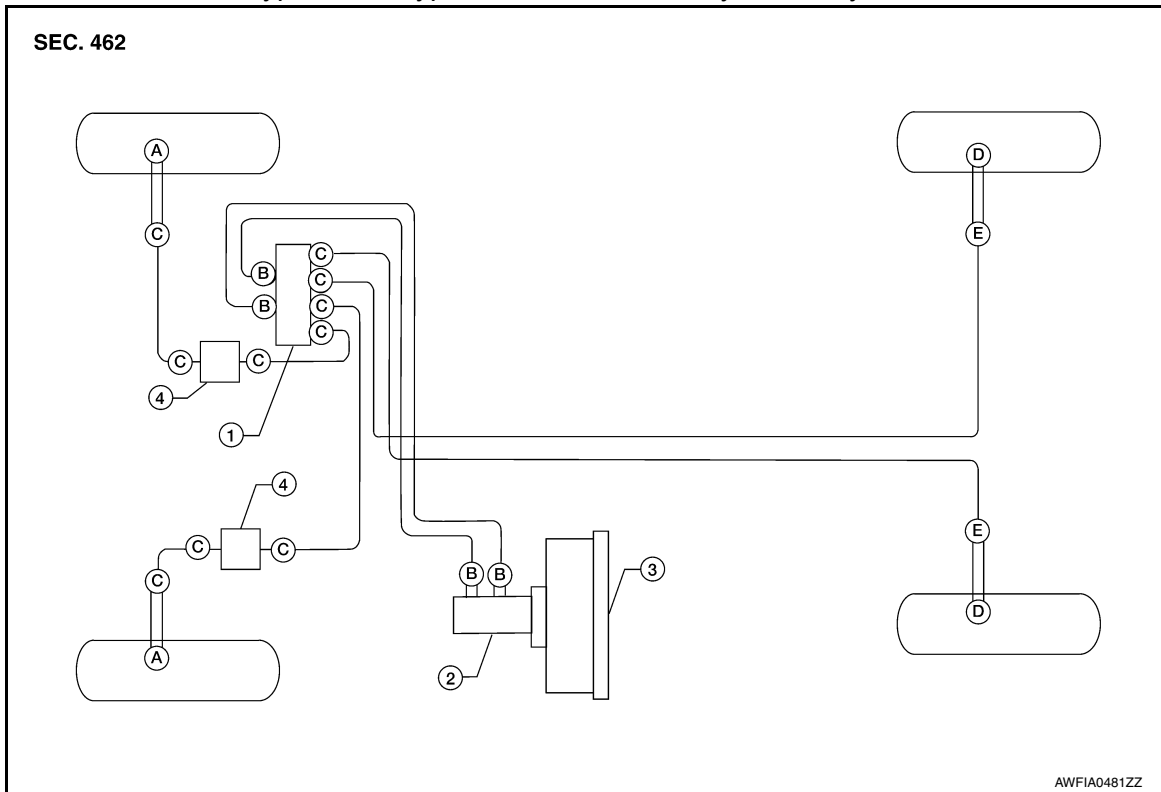


- | | | |
|---|--|--|
| 1. Actuator | 2. Master cylinder | 3. Brake booster |
| 4. Connector | A. Union bolt (front caliper)
18.2 N·m (1.9 kg-m, 13 ft-lb) | B. Flare nut M12
26.0 N·m (2.7 kg-m, 19 ft-lb) |
| C. Flare nut M10
16.2 N·m (1.7 kg-m, 12 ft-lb) | D. Union bolt (rear caliper)
18.2 N·m (1.9 kg-m, 13 ft-lb) | E. Flare nut to rear hose
16.2 N·m (1.7 kg-m, 12 ft-lb) |

BRAKE TUBE AND HOSE

< BASIC INSPECTION >

Type 1

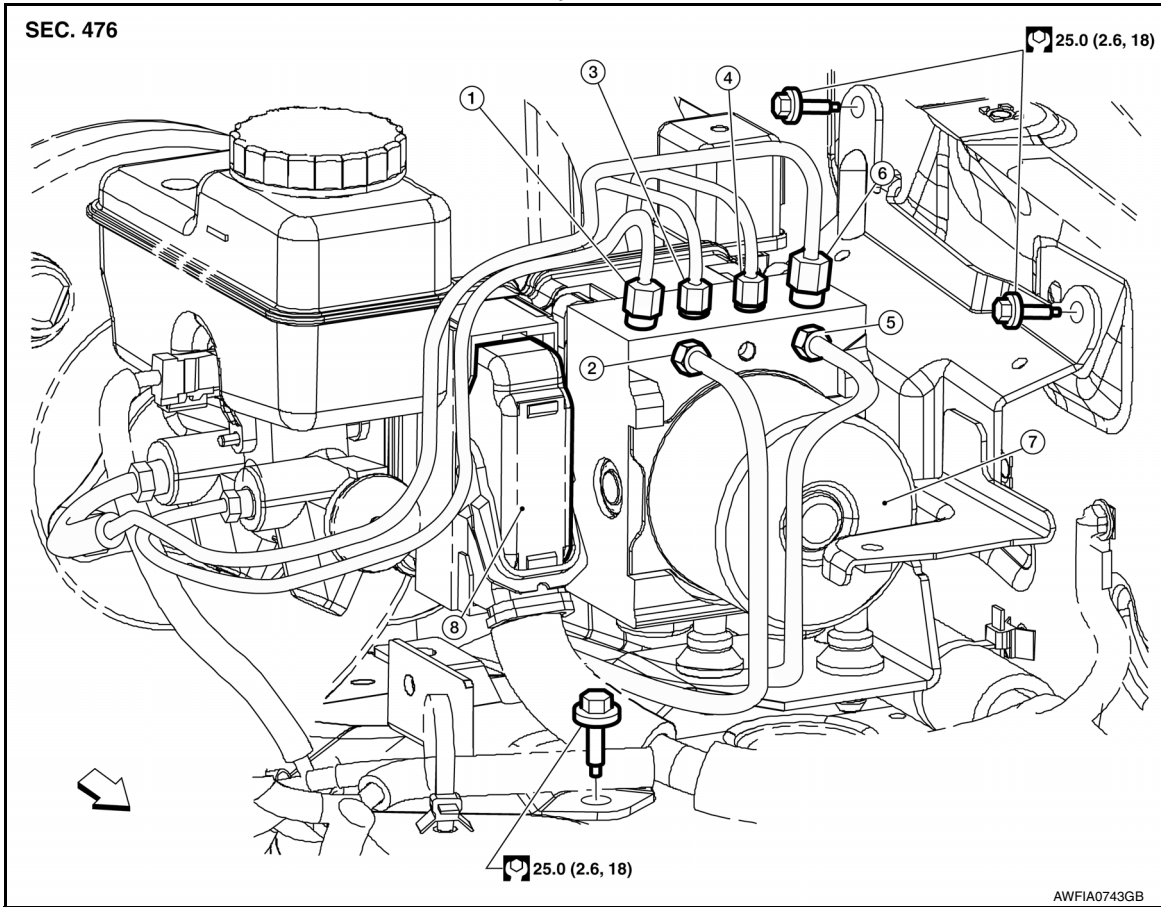


- | | | |
|---|--|---|
| 1. From the master cylinder secondary side
18.2 N·m (1.9 kg-m, 13 ft-lb) | 2. To rear right disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) | 3. To rear left disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) |
| 4. To front right disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) | 5. To front left disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) | 6. From the master cylinder primary side
18.2 N·m (1.9 kg-m, 13 ft-lb) |
| 7. ABS actuator and electric unit (control unit) | 8. Harness connector | ⇐ Front |

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

BRAKE TUBE AND HOSE

< BASIC INSPECTION >

Type 2

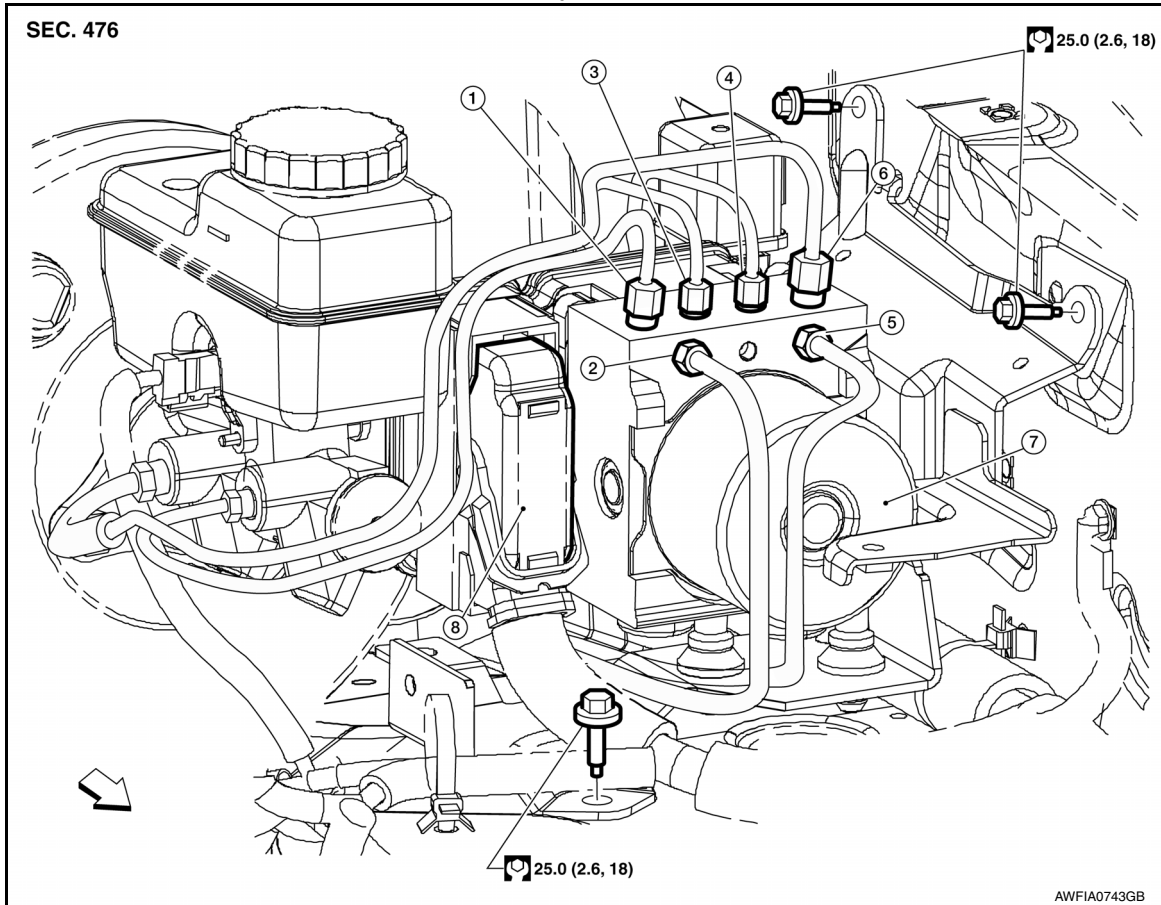

- | | | |
|---|--|---|
| 1. From master cylinder secondary side
18.2 N·m (1.9 kg-m, 13 ft-lb) | 2. To rear right disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) | 3. To rear left disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) |
| 4. To front right disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) | 5. To front left disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) | 6. From master cylinder primary side
18.2 N·m (1.9 kg-m, 13 ft-lb) |
| 7. ABS actuator and electric unit (control unit) | 8. Harness connector | ⇐ Front |

CAUTION:

- All hoses and piping (tubes) must be free from excessive bending, twisting and pulling.
- Make sure there is no interference with other parts when turning steering both clockwise and counterclockwise.
- The brake piping is an important safety part. If a brake fluid leak is detected, always disassemble the parts. Replace applicable part with a new one, if necessary.
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.
- Do not bend or twist brake hose sharply, or strongly pull it.
- When removing components, cover connections so that no dirt, dust, or other foreign matter gets in.
- Do not reuse drained brake fluid.
- After installation of the ABS actuator and electric unit (control unit), refill brake system with new brake fluid. Then bleed the air from the system. Refer to [BR-18. "Bleeding Brake System"](#).

FRONT BRAKE

FRONT BRAKE : Inspection

INFOID:000000012565315

INSPECTION AFTER REMOVAL

CAUTION:

Brake tubes and hoses are important safety parts. Always disassemble the parts and retighten their fittings, if a brake fluid leak is detected. Replace applicable part with a new one, if damaged part is detected.

BRAKE TUBE AND HOSE

< BASIC INSPECTION >

1. Check brake lines (tubes and hoses) and connections for fluid leaks, damage, twists, deformation, contact with other parts, and loose connections. Replace any parts as necessary. Refer to [BR-12, "Hydraulic Circuit"](#).
2. While depressing brake pedal under a force of 785 N (80 kg-f, 177 lb-f) with engine running for approximately 5 seconds, check each part for fluid leaks.

REAR BRAKE

REAR BRAKE : Inspection

INFOID:0000000012565316

INSPECTION AFTER REMOVAL

CAUTION:

Brake tubes and hoses are important safety parts. Always disassemble the parts and retighten their fittings, if a brake fluid leak is detected. Replace applicable part with a new one, if damaged part is detected.

1. Check brake lines (tubes and hoses) and connections for fluid leaks, damage, twists, deformation, contact with other parts, and loose connections. Replace any parts as necessary. Refer to [BR-12, "Hydraulic Circuit"](#).
2. While depressing brake pedal under a force of 785 N (80 kg-f, 177 lb-f) with engine running for approximately 5 seconds, check each part for fluid leaks.

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

BRAKE PEDAL

< PERIODIC MAINTENANCE >

PERIODIC MAINTENANCE

BRAKE PEDAL

Inspection and Adjustment


INFOID:000000012565317

INSPECTION

1. Inspect the brake pedal free height (H) from the floor using Tool at a 90° angle to the floor as shown.

Tool number : — (J-46532)

2. Adjust the brake pedal height to specifications.

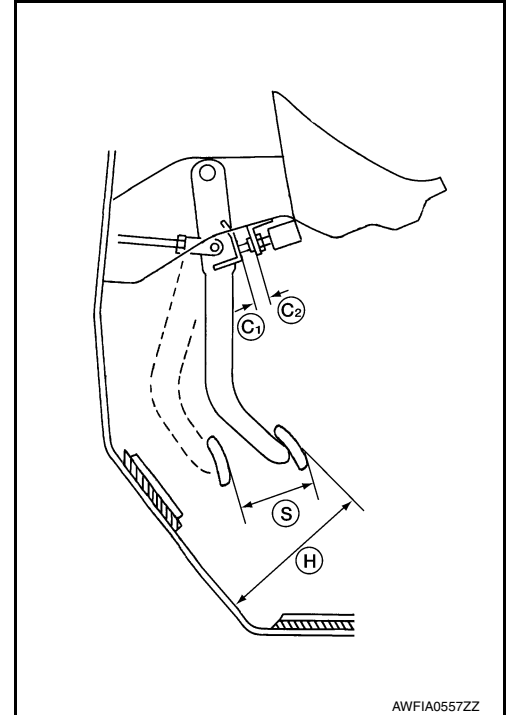

Brake Pedal Specifications		
Pedal free height (H)	M/T	Refer to BR-55. "Brake Pedal" .
	A/T	Refer to BR-55. "Brake Pedal" .
Pedal full stroke (S)		Refer to BR-55. "Brake Pedal" .
Clearance between pedal bracket (C1) and threaded end of stop lamp switch and brake pedal position switch (C2) (if equipped)		Refer to BR-55. "Brake Pedal" .

ADJUSTMENT

1. Loosen the stop lamp switch and brake pedal position switch (if equipped) by turning 45° counterclockwise.

BRAKE PEDAL

< PERIODIC MAINTENANCE >

- Loosen lock nut (A) on the input rod, then turn input rod to adjust the brake pedal to specified height. When finished adjusting, tighten lock nut (A) to specification.

Lock nut (A) : 18.7 N·m (1.9 kg-m, 14 ft-lb)

CAUTION:

Make sure that the screw portion of the end of input rod is located inside the clevis.

- With the brake pedal pulled up and held by hand, press the stop lamp switch and the brake pedal position switch (if equipped), in until threaded ends contact the brake pedal bracket.
- With the threaded ends of the stop lamp switch and brake pedal position switch (if equipped) contacting the pedal bracket, turn the switches 45° clockwise to lock in place. Check that the stop lamp switch and brake pedal position switch (if equipped) threaded end to brake pedal bracket gap (C) is within specifications.


CAUTION:

Make sure that the gap (C) between the brake pedal bracket and stop lamp switch and brake pedal position switch (if equipped) threaded ends are within specification.

- Check the brake pedal for smooth operation.

CAUTION:

Make sure that the stop lamp goes off when the brake pedal is released.

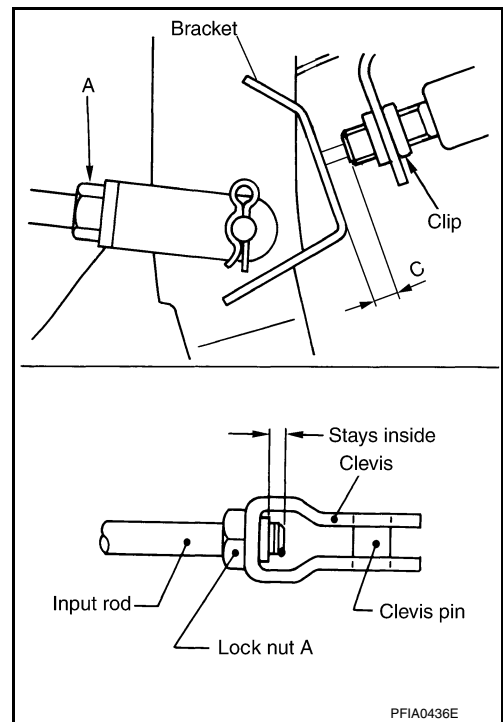

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

BRAKE FLUID

< PERIODIC MAINTENANCE >


BRAKE FLUID

On Board Inspection

INFOID:000000012565318

LEVEL CHECK

- Check that the brake fluid level in the reservoir tank is within specification, between the MAX and MIN lines as shown.
- Visually check around reservoir tank for fluid leaks.
- If fluid level is excessively low, check brake system for leaks.
- If brake warning lamp remains illuminated after the parking brake pedal is released, check the brake system for any brake fluid leaks.

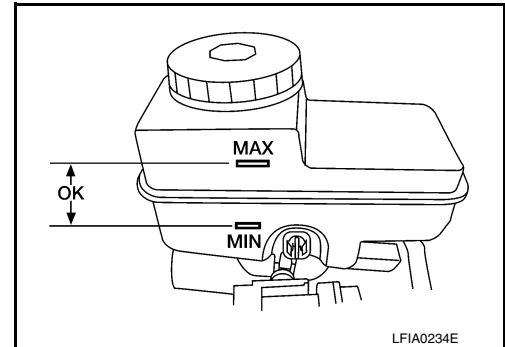


Drain and Refill


INFOID:000000012565319

CAUTION:

- Refill with new brake fluid. Refer to [MA-18, "FOR USA AND CANADA : Fluids and Lubricants"](#) (United States and Canada) and [MA-21, "FOR MEXICO : Fluids and Lubricants"](#) (Mexico).
 - Do not reuse drained brake fluid.
 - Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.
 - Before servicing, disconnect ABS actuator and electric unit (control unit) connector or battery negative terminal.
1. Turn ignition switch OFF and disconnect ABS actuator and electric unit (control unit) connector or battery negative terminal.
 2. Connect a vinyl tube to each bleed valve.
 3. Depress brake pedal, loosen each bleed valve, and gradually remove brake fluid.

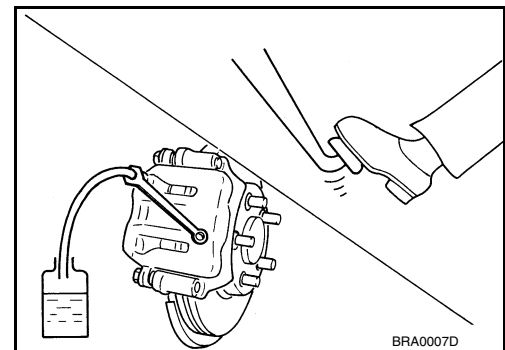

4. Make sure there is no foreign material in reservoir tank, and refill with new brake fluid.
5. Rest foot on brake pedal. Loosen bleed valve. Slowly depress brake pedal until it stops. Tighten bleed valve. Release brake pedal. Repeat the process a few times, then pause to add new brake fluid to master cylinder. Continue until the new brake fluid flows out of the bleed valve. Bleed the air out of the brake hydraulic system. Refer to [BR-18, "Bleeding Brake System"](#).

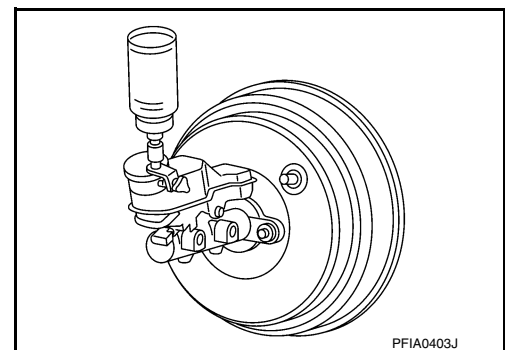

Bleeding Brake System

INFOID:000000012565320

CAUTION:

- Refill with new brake fluid. Refer to [MA-18, "FOR USA AND CANADA : Fluids and Lubricants"](#) (United States and Canada) and [MA-21, "FOR MEXICO : Fluids and Lubricants"](#) (Mexico).

BRAKE FLUID

< PERIODIC MAINTENANCE >

- Do not reuse drained brake fluid.
 - Do not let brake fluid splash on the painted surfaces of the body. This might damage the paint, so when splashing it, immediately wipe off the area and wash away with water.
 - Before servicing, disconnect ABS actuator and electric unit (control unit) connector or battery negative terminal.
1. Turn ignition switch OFF and disconnect ABS actuator and electric unit (control unit) connector or battery negative terminal.
 2. Connect a vinyl tube to the rear right bleed valve.
 3. Fully depress brake pedal 4 to 5 times.
 4. With brake pedal depressed, loosen bleed valve to let the air out, and then tighten it immediately.
 5. Repeat steps 3 and 4 until no more air comes out.
 6. Tighten bleed valve to the specified torque. Refer to [BR-39. "Exploded View of Brake Caliper"](#) (front disc brake), [BR-44. "Exploded View of Brake Caliper"](#) (rear disc brake).
 7. Perform steps 2 to 6 at each wheel, with master cylinder reservoir tank filled at least half way, bleed air from the front left, rear left, and front right bleed valve, in that order.

A
B
C
D
E

G
H
I
J
K
L
M
N
O
P

BR

FRONT DISC BRAKE

< PERIODIC MAINTENANCE >

FRONT DISC BRAKE BRAKE PAD


BRAKE PAD : Inspection and Adjustment

INFOID:000000012819064

INSPECTION

Check pad thickness from the inspection holes on cylinder body.
Check using a scale if necessary.

- Standard thickness (new)** : Refer to [BR-56, "Front Disc Brake"](#).
Repair limit thickness : Refer to [BR-56, "Front Disc Brake"](#).

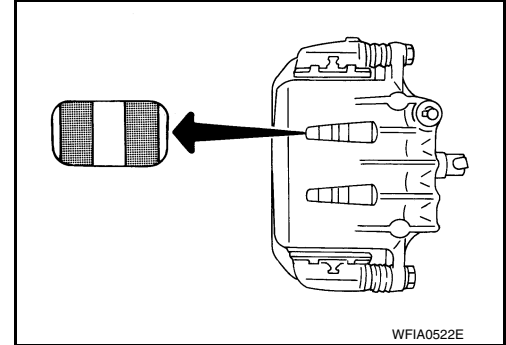

ADJUSTMENT

Burnish contact surfaces between disc brake rotor and brake pads according to the following procedure after refinishing disc brake rotors, replacing disc brake rotors, replacing brake pads, or if a soft pedal occurs at very low mileage:

CAUTION:

- **Be careful of vehicle speed because the brake pedal does not operate firmly/securely until pads and disc brake rotor are securely seated.**
 - **Only perform this procedure under safe road and traffic conditions. Use extreme caution.**
1. Drive vehicle on straight, flat road.
 2. Depress brake pedal with the power to stop vehicle within 3 to 5 seconds until the vehicle stops.
 3. Drive without depressing brake pedal for a few minutes to cool the brakes.
 4. Repeat steps 1 to 3 until pad and disc brake rotor are securely seated.

DISC ROTOR

DISC ROTOR : Inspection and Adjustment

INFOID:000000012819065

INSPECTION

Appearance

Check surface of disc rotor for uneven wear, cracks, and serious damage. Replace as necessary.

Runout

1. Attach disc rotor to wheel hub using wheel nuts at two or more positions.
2. Inspect runout using a dial gauge placed at 10 mm (0.39 in) inside the disc edge.


Runout limit : Refer to [BR-56, "Front Disc Brake"](#).

(with it attached to the vehicle)

NOTE:

Before measuring, make sure that wheel bearing axial end play is within the specification. Refer to [FAX-5, "On-Vehicle Inspection and Service"](#).

3. When runout exceeds limit value, displace mounting positions of disc rotor by one hole. And then find a position of the minimum value for runout.
4. If runout is outside the specified value after performing the above operation, refinish disc rotor using Tool.

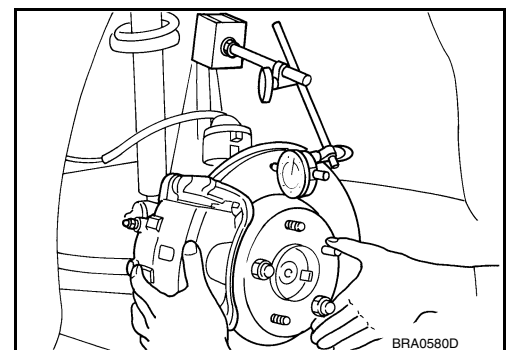

FRONT DISC BRAKE

< PERIODIC MAINTENANCE >


Tool number : 38-PFM92 (—)

Thickness

Check thickness of the disc rotor using a micrometer. Replace disc rotor if thickness is less than the repair limit thickness.

Standard thickness (new) : Refer to [BR-56, "Front Disc Brake"](#).

Repair limit thickness : Refer to [BR-56, "Front Disc Brake"](#).

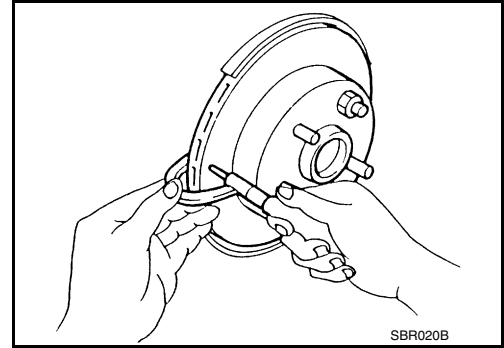

ADJUSTMENT

Burnish contact surfaces between disc brake rotor and brake pads according to the following procedure after refinishing disc brake rotors, replacing disc brake rotors, replacing brake pads, or if a soft pedal occurs at very low mileage:

CAUTION:

- Be careful of vehicle speed because the brake pedal does not operate firmly/securely until pads and disc brake rotor are securely seated.
- Only perform this procedure under safe road and traffic conditions. Use extreme caution.

1. Drive vehicle on straight, flat road.
2. Depress brake pedal with the power to stop vehicle within 3 to 5 seconds until the vehicle stops.
3. Drive without depressing brake pedal for a few minutes to cool the brakes.
4. Repeat steps 1 to 3 until pad and disc brake rotor are securely seated.

REAR DISC BRAKE

< PERIODIC MAINTENANCE >

REAR DISC BRAKE

BRAKE PAD

BRAKE PAD : Inspection and Adjustment


INFOID:000000012819066

INSPECTION

Check pad thickness from an inspection hole on cylinder body.
Check using a scale if necessary.

Standard thickness (new) : Refer to [BR-56, "Rear Disc Brake"](#).

Repair limit thickness : Refer to [BR-56, "Rear Disc Brake"](#).

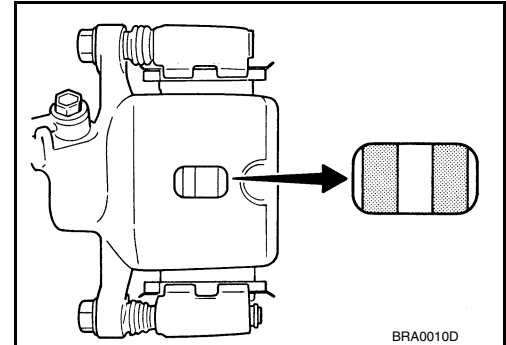

BRA0010D

ADJUSTMENT

Burnish contact surfaces between disc brake rotor and brake pads according to the following procedure after refinishing disc brake rotors, replacing disc brake rotors, replacing brake pads, or if a soft pedal occurs at very low mileage:

CAUTION:

- **Be careful of vehicle speed because the brake pedal does not operate firmly/securely until pads and disc brake rotor are securely seated.**
- **Only perform this procedure under safe road and traffic conditions. Use extreme caution.**

1. Drive vehicle on straight, flat road.
2. Depress brake pedal with the power to stop vehicle within 3 to 5 seconds until the vehicle stops.
3. Drive without depressing brake pedal for a few minutes to cool the brakes.
4. Repeat steps 1 to 3 until pad and disc brake rotor are securely seated.

DISC ROTOR

DISC ROTOR : Inspection and Adjustment

INFOID:000000012819067

INSPECTION

Appearance

Check surface of disc rotor for uneven wear, cracks, and serious damage. Replace as necessary.

Runout

1. Attach disc rotor to wheel hub using wheel nuts at two or more positions.
2. Inspect runout using dial gauge placed at 10 mm (0.39 in) inside disc edge as shown.


Runout limit : Refer to [BR-56, "Rear Disc Brake"](#).
(with it attached to the vehicle)

NOTE:

Before measuring, make sure that wheel bearing axial end play is within the specification. Refer to [RAX-6, "Rear Axle Parts"](#) (C200), [RAX-18, "Rear Axle Parts"](#) (M226).

3. If runout is outside the specified value after performing the above operation, refinish disc rotor using Tool.
4. When runout exceeds limit value, displace mounting positions of disc rotor by one hole. And then find a position of the minimum value for runout.

Tool number : 38-PFM92 (—)

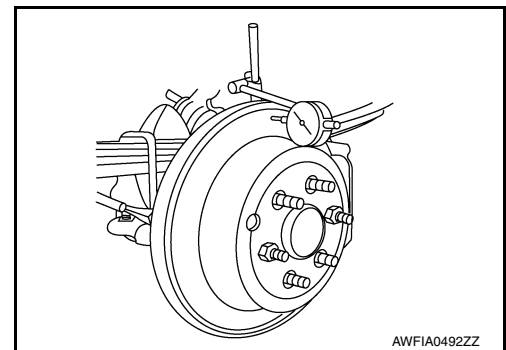

AWFIA0492ZZ


REAR DISC BRAKE

< PERIODIC MAINTENANCE >

Thickness

Check the thickness of the disc rotor using a micrometer. Replace disc rotor if the thickness is less than the repair limit thickness.

- Standard thickness (new)** : Refer to [BR-56, "Rear Disc Brake"](#).
- Repair limit thickness** : Refer to [BR-56, "Rear Disc Brake"](#).

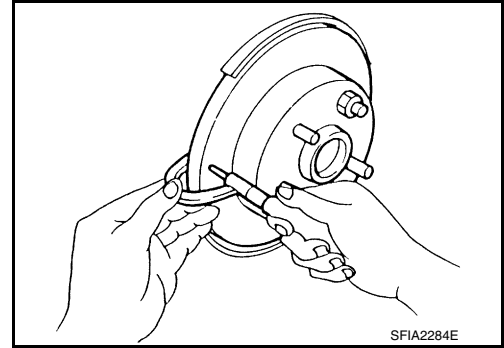

ADJUSTMENT

Burnish contact surfaces between disc brake rotor and brake pads according to the following procedure after refinishing disc brake rotors, replacing disc brake rotors, replacing brake pads, or if a soft pedal occurs at very low mileage:

CAUTION:

- **Be careful of vehicle speed because the brake pedal does not operate firmly/securely until pads and disc brake rotor are securely seated.**
 - **Only perform this procedure under safe road and traffic conditions. Use extreme caution.**
1. Drive vehicle on straight, flat road.
 2. Depress brake pedal with the power to stop vehicle within 3 to 5 seconds until the vehicle stops.
 3. Drive without depressing brake pedal for a few minutes to cool the brakes.
 4. Repeat steps 1 to 3 until pad and disc brake rotor are securely seated.

BRAKE PEDAL


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

BRAKE PEDAL

Exploded View

INFOID:000000012565321

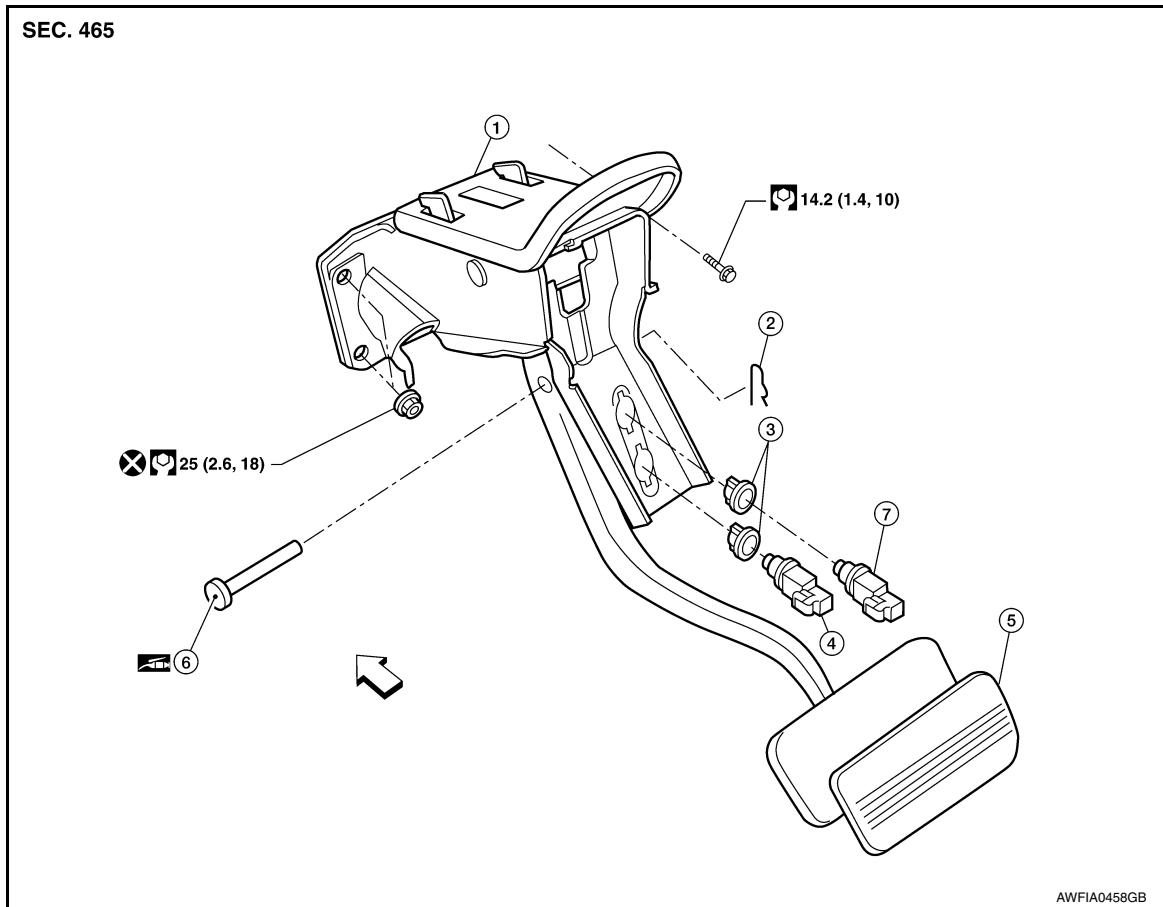

- | | | |
|--|--------------|---------------|
| 1. Brake pedal assembly | 2. Snap pin | 3. Clip |
| 4. Stop lamp switch | 5. Pedal pad | 6. Clevis pin |
| 7. Brake pedal position switch (if equipped) | ↔ Front | |

NOTE:

The clevis pin may be installed from either direction.

Removal and Installation

INFOID:000000012565322

REMOVAL

WARNING:

Do not deform the brake tube.

CAUTION:

- Do not disassemble the brake pedal assembly.
- Avoid damage from dropping the brake pedal assembly during handling.
- Keep the brake pedal assembly away from water.

1. Remove the instrument lower panel LH. Refer to [IP-18, "Removal and Installation"](#).
2. Remove the stop lamp switch and brake pedal position switch (if equipped) from the pedal assembly.
3. Remove snap pin and clevis pin from the clevis of the brake booster.
4. Remove the brake pedal assembly bolt.
5. Remove the pedal assembly nuts and discard, then remove the pedal assembly.
 - Temporarily install the nuts by hand to support the booster.

BRAKE PEDAL

< REMOVAL AND INSTALLATION >


CAUTION:

Do not reuse the nuts for installation.

INSPECTION AFTER REMOVAL

Check brake pedal for following items.

- Cracking or deformation of the clevis pin stopper
- Clevis pin deformation
- Crack of any welded portion
- Brake pedal bent or deformed

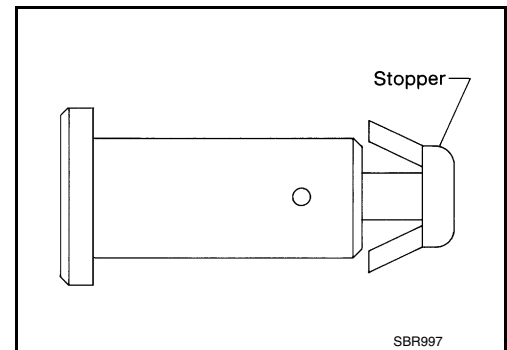

INSTALLATION

Installation is in the reverse order of removal.

- Check the brake pedal for smooth operation. There should be no binding or sticking when applying or releasing the brake pedal.
- After installing the brake pedal assembly, adjust it as necessary. Refer to [BR-16, "Inspection and Adjustment"](#).

CAUTION:

Do not reuse the nuts for installation, discard and install with new lock nuts.

BRAKE TUBE AND HOSE


< REMOVAL AND INSTALLATION >

BRAKE TUBE AND HOSE

Hydraulic Circuit

INFOID:000000012565323

Type 1 and Type 2 - Four Channel Hydraulic System

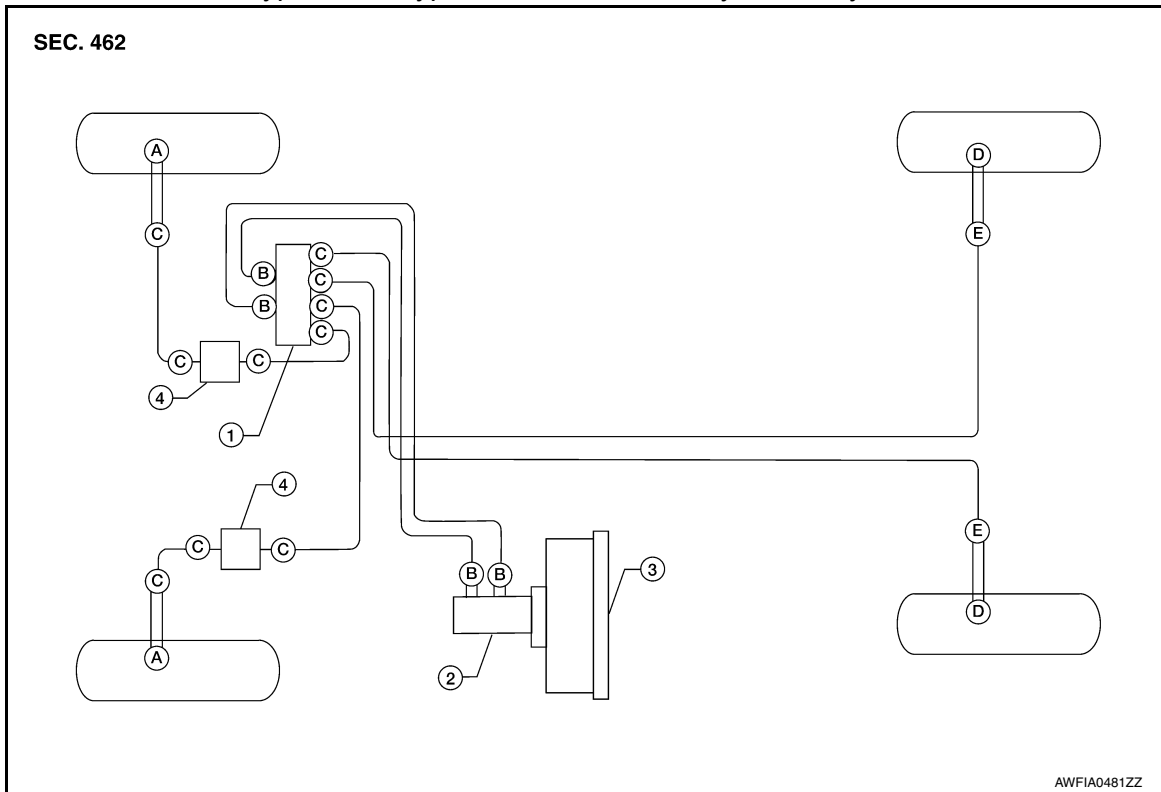


- | | | |
|---|--|--|
| 1. Actuator | 2. Master cylinder | 3. Brake booster |
| 4. Connector | A. Union bolt (front caliper)
18.2 N·m (1.9 kg-m, 13 ft-lb) | B. Flare nut M12
26.0 N·m (2.7 kg-m, 19 ft-lb) |
| C. Flare nut M10
16.2 N·m (1.7 kg-m, 12 ft-lb) | D. Union bolt (rear caliper)
18.2 N·m (1.9 kg-m, 13 ft-lb) | E. Flare nut to rear hose
16.2 N·m (1.7 kg-m, 12 ft-lb) |

BRAKE TUBE AND HOSE

< REMOVAL AND INSTALLATION >

Type 1

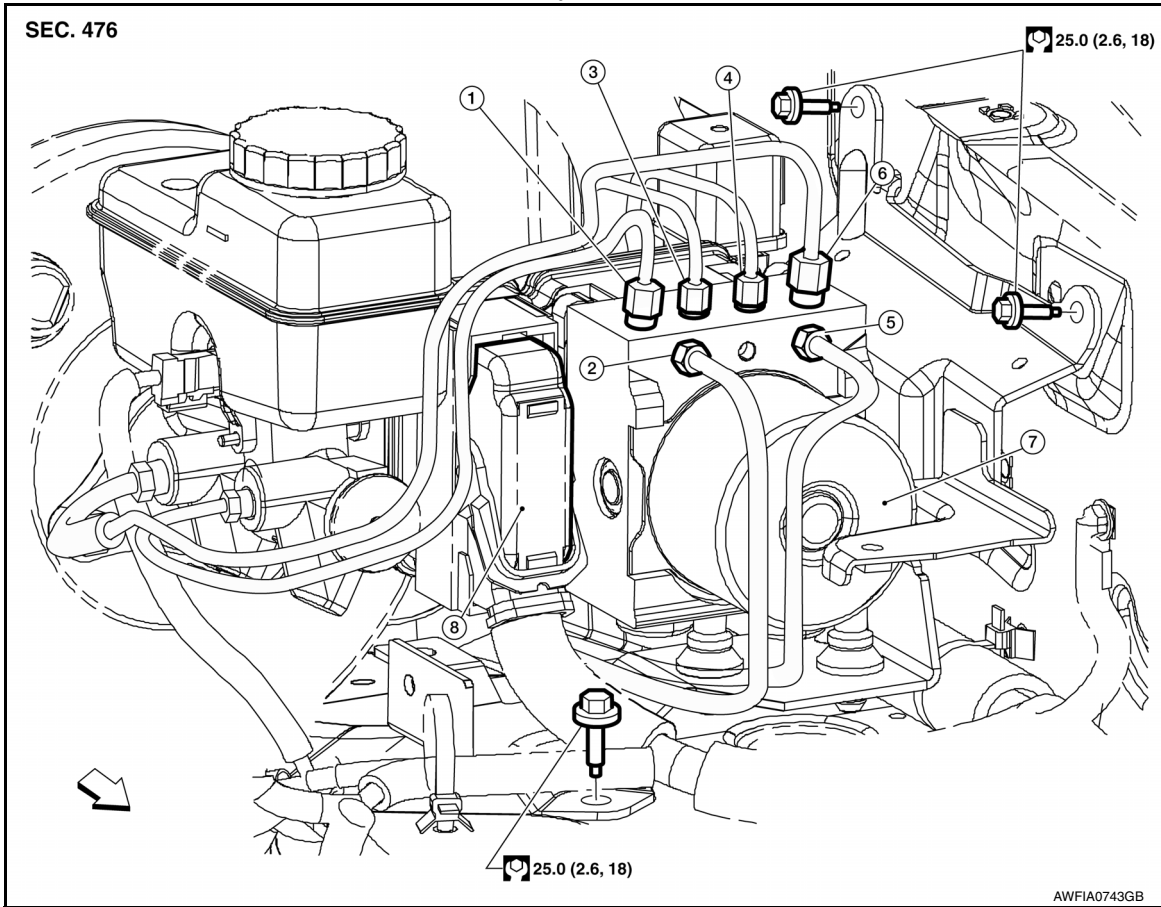


- | | | |
|---|--|---|
| 1. From master cylinder secondary side
18.2 N·m (1.9 kg-m, 13 ft-lb) | 2. To rear right disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) | 3. To rear left disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) |
| 4. To front right disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) | 5. To front left disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) | 6. From master cylinder primary side
18.2 N·m (1.9 kg-m, 13 ft-lb) |
| 7. ABS actuator and electric unit (control unit) | 8. Harness connector | ⇐ Front |

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

BRAKE TUBE AND HOSE

< REMOVAL AND INSTALLATION >

Type 2

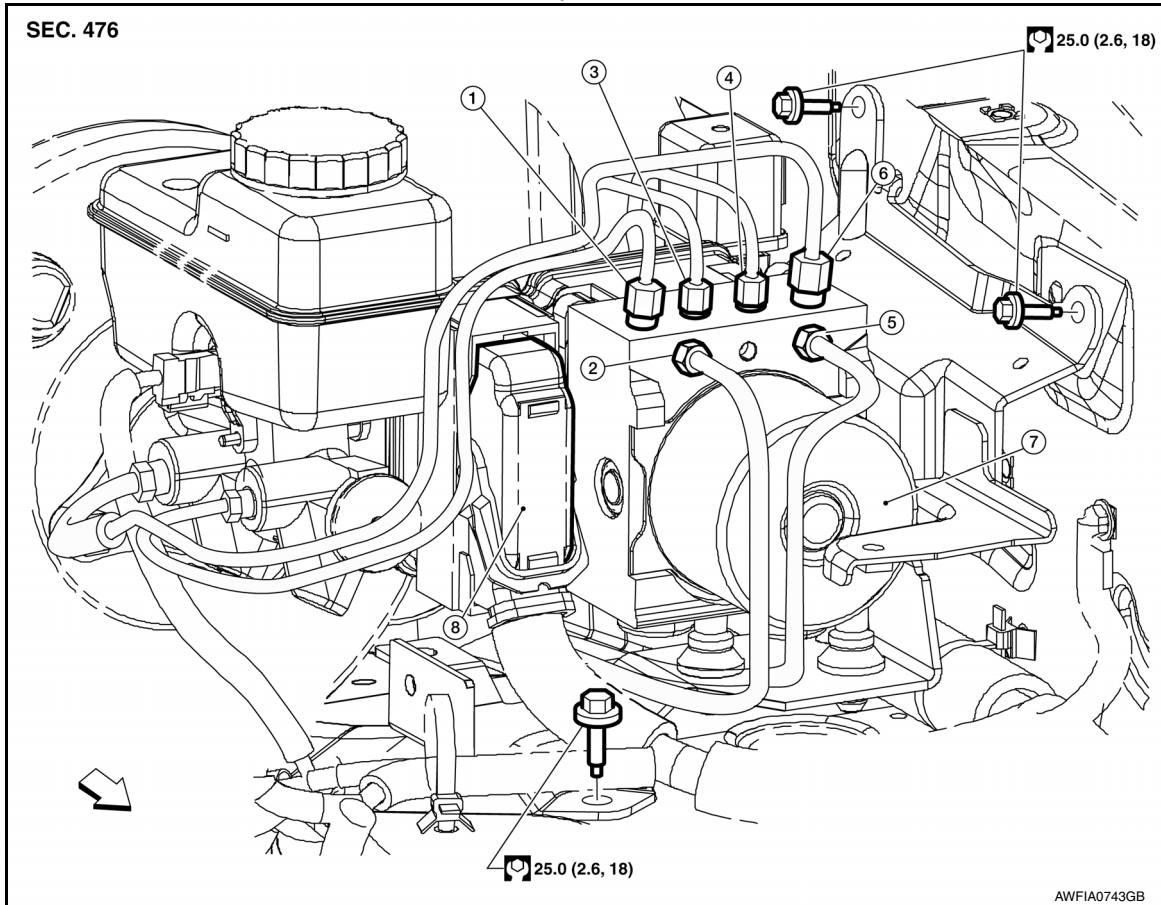

- | | | |
|---|--|---|
| 1. From master cylinder secondary side
18.2 N·m (1.9 kg-m, 13 ft-lb) | 2. To rear right disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) | 3. To rear left disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) |
| 4. To front right disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) | 5. To front left disc brake
13.0 N·m (1.3 kg-m, 10 ft-lb) | 6. From master cylinder primary side
18.2 N·m (1.9 kg-m, 13 ft-lb) |
| 7. ABS actuator and electric unit (control unit) | 8. Harness connector | ↩ Front |

CAUTION:

- All hoses and piping (tubes) must be free from excessive bending, twisting and pulling.
- Make sure there is no interference with other parts when turning steering both clockwise and counterclockwise.
- The brake piping is an important safety part. If a brake fluid leak is detected, always disassemble the parts. Replace applicable part with a new one, if necessary.
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.
- Do not bend or twist brake hose sharply, or strongly pull it.
- When removing components, cover connections so that no dirt, dust, or other foreign matter gets in.
- Do not reuse drained brake fluid.
- After installation of the ABS actuator and electric unit (control unit), refill brake system with new brake fluid. Then bleed the air from the system. Refer to [BR-18. "Bleeding Brake System"](#).

Removal and Installation of Front Brake Piping and Brake Hose

INFOID:000000012565324

NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.


REMOVAL

1. Remove front wheel and tire using power tool. Refer to [WT-48. "Adjustment"](#).
2. Remove master cylinder reservoir cap.

BRAKE TUBE AND HOSE

< REMOVAL AND INSTALLATION >


3. Remove brake tube from brake hose, using a suitable tool.
4. Remove lock plate and brake hose from bracket.

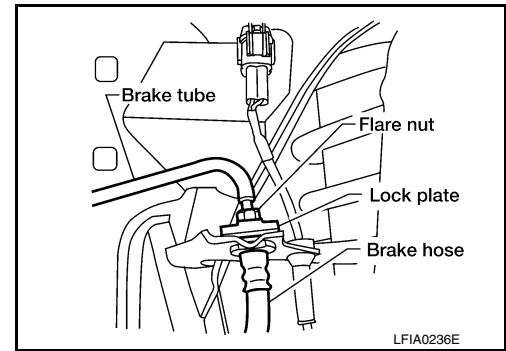

5. Remove union bolt, copper sealing washers, and brake hose from caliper assembly.

CAUTION:

Do not reuse copper sealing washers.

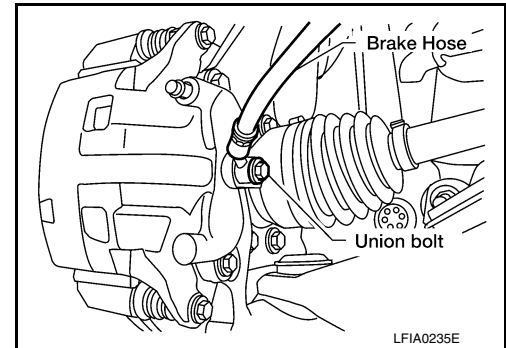


INSTALLATION


1. Install brake hose by aligning with the protrusion on caliper assembly, then install new copper sealing washers (1) and union bolt (A). Tighten union bolt (A) to specified torque. Refer to [BR-12. "Hydraulic Circuit"](#).

CAUTION:

Do not reuse copper sealing washers.

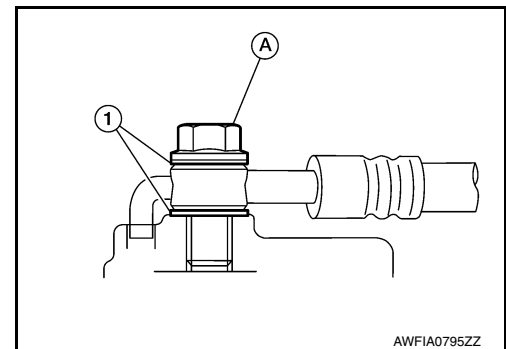

2. Insert brake hose end through bracket, then secure it to bracket with lock plate.
3. Install brake tube to brake hose, then tighten flare nut to the specified torque using a suitable tool. Refer to [BR-12. "Hydraulic Circuit"](#).

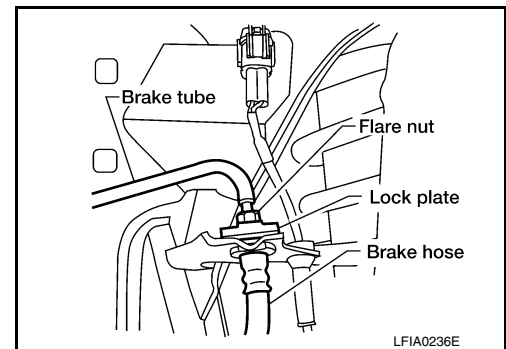

4. Refill brake fluid and bleed air. Refer to [BR-18. "Bleeding Brake System"](#).
5. Install the front wheel and tire. Refer to [WT-48. "Adjustment"](#).

Removal and Installation of Rear Brake Piping and Brake Hose

INFOID:000000012565325

NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.


REMOVAL

1. Remove rear wheel and tire using power tool. Refer to [WT-48. "Adjustment"](#).


BRAKE TUBE AND HOSE

< REMOVAL AND INSTALLATION >

2. Remove master cylinder reservoir cap.
3. Remove brake tube from brake hose, using a suitable tool.
4. Remove lock plate and brake hose from bracket.

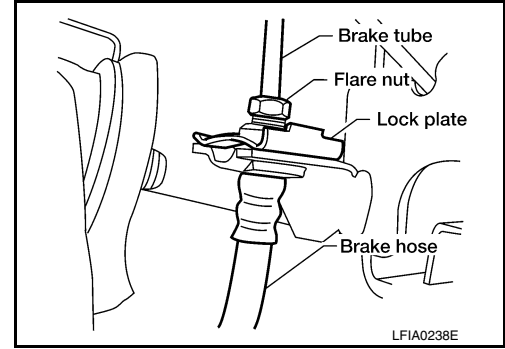


5. Remove union bolt (A) and copper sealing washers, then remove brake hose from caliper assembly.
CAUTION:
Do not reuse copper sealing washers.

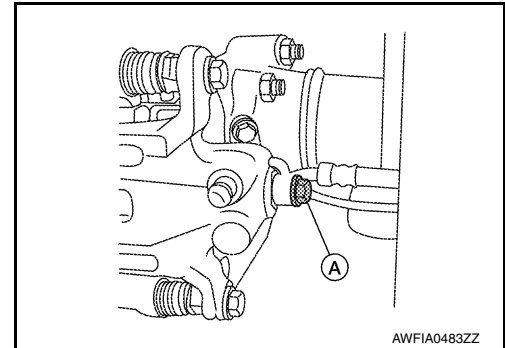


INSTALLATION

1. Install brake hose by aligning with the protrusion on caliper assembly, then install new copper sealing washers (1) and union bolt (A). Tighten union bolt (A) to specified torque. Refer to [BR-12, "Hydraulic Circuit"](#).
CAUTION:
Do not reuse copper sealing washers.

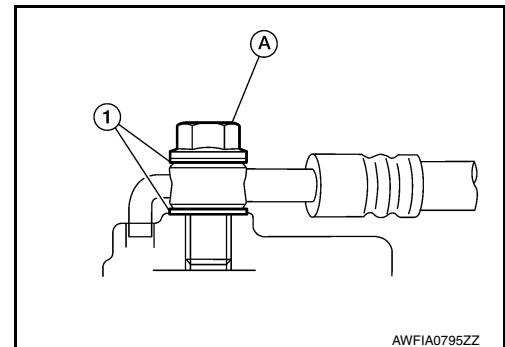

2. Insert brake hose end through bracket, then secure it to bracket with lock plate.
3. Install brake tube to brake hose, then tighten flare nut to the specified torque using a suitable tool.

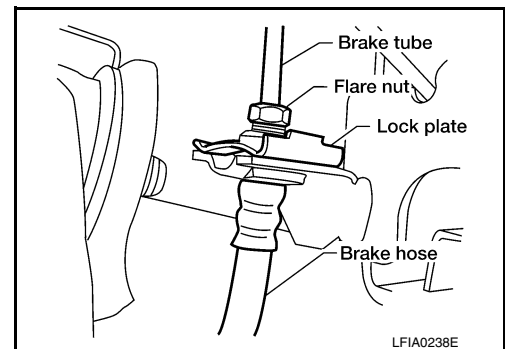

4. Refill brake fluid and bleed brake system. Refer to [BR-18, "Bleeding Brake System"](#).
5. Install the rear wheel and tire. Refer to [WT-48, "Adjustment"](#).

Inspection After Installation

INFOID:000000012565326

CAUTION:

Brake pipes and hoses are important safety parts. Always disassemble the parts and retighten their fittings if a brake fluid leak is detected. Replace applicable part with a new one, if a damaged part is detected.

BRAKE TUBE AND HOSE

< REMOVAL AND INSTALLATION >

1. Check brake pipes and hoses, and connections for fluid leaks, damage, twist, deformation, contact with other parts, and loose connections. Replace any parts as necessary. Refer to [BR-12, "Hydraulic Circuit"](#).
2. While depressing brake pedal under a force of 785 N (80 kg-f, 177 lb-f) with engine running for approximately 5 seconds, check each part for fluid leaks.

A

B

C

D

E

BR

G

H

I

J

K

L

M

N

O

P


BRAKE MASTER CYLINDER

< REMOVAL AND INSTALLATION >

BRAKE MASTER CYLINDER

Removal and Installation

INFOID:000000012565327

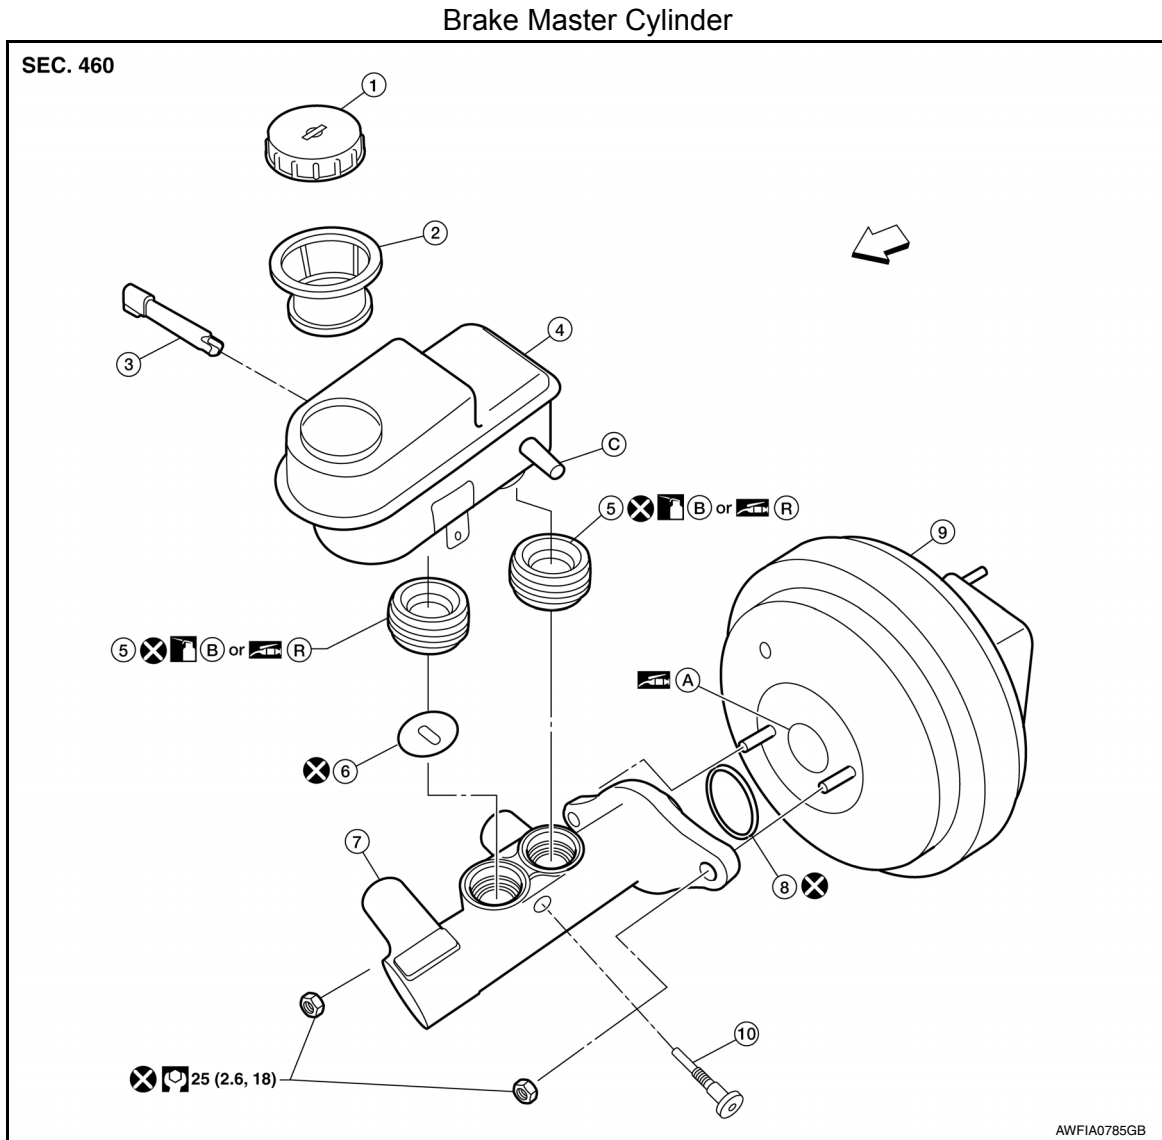

- | | | |
|---------------------------------|--|-----------------------|
| 1. Reservoir cap | 2. Strainer | 3. Fluid level sensor |
| 4. Reservoir tank | 5. Grommet | 6. Restriction washer |
| 7. Master cylinder sub-assembly | 8. O-ring | 9. Brake booster |
| 10. Pin | A. PBC (Poly Butyl Cuprysil) grease or silicone based grease | B. Brake fluid |
| C. M/T models only | R. Rubber grease | ⇐ Front |

CAUTION:

Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.

NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

REMOVAL

1. Remove master cylinder reservoir cap.
2. Disconnect the harness connector from the fluid level sensor.
3. Disconnect the brake pipes from the master cylinder assembly.

BRAKE MASTER CYLINDER

< REMOVAL AND INSTALLATION >

4. Remove brake pipes from the ABS actuator and electric unit (control unit).
5. Remove the master cylinder assembly nuts and discard.

CAUTION:

Discard the nuts, do not reuse.

6. Remove the master cylinder assembly and O-ring.

CAUTION:

Do not reuse O-ring.

INSTALLATION

Installation is in the reverse order of removal.

- Apply silicone grease to the brake booster at position (A) as shown, be sure the O-ring is in proper position when installing the master cylinder assembly to the brake booster.

CAUTION:

Do not reuse O-ring.

- Use new master cylinder assembly nuts for installation.


CAUTION:

Do not reuse the master cylinder assembly nuts.

- Refill the brake fluid and bleed the air. Refer to [BR-18, "Bleeding Brake System"](#).

CAUTION:

- **Refill using recommended brake fluid. Refer to [BR-18, "Drain and Refill"](#).**
- **Do not reuse drained brake fluid.**
- Adjust the brake pedal. Refer to [BR-16, "Inspection and Adjustment"](#).

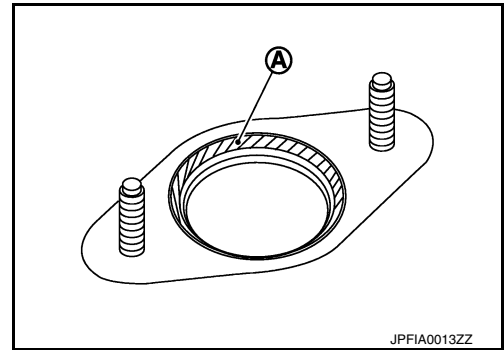

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

BRAKE BOOSTER


< REMOVAL AND INSTALLATION >

BRAKE BOOSTER

Removal and Installation

INFOID:000000012565328

Brake Booster and Vacuum Hose

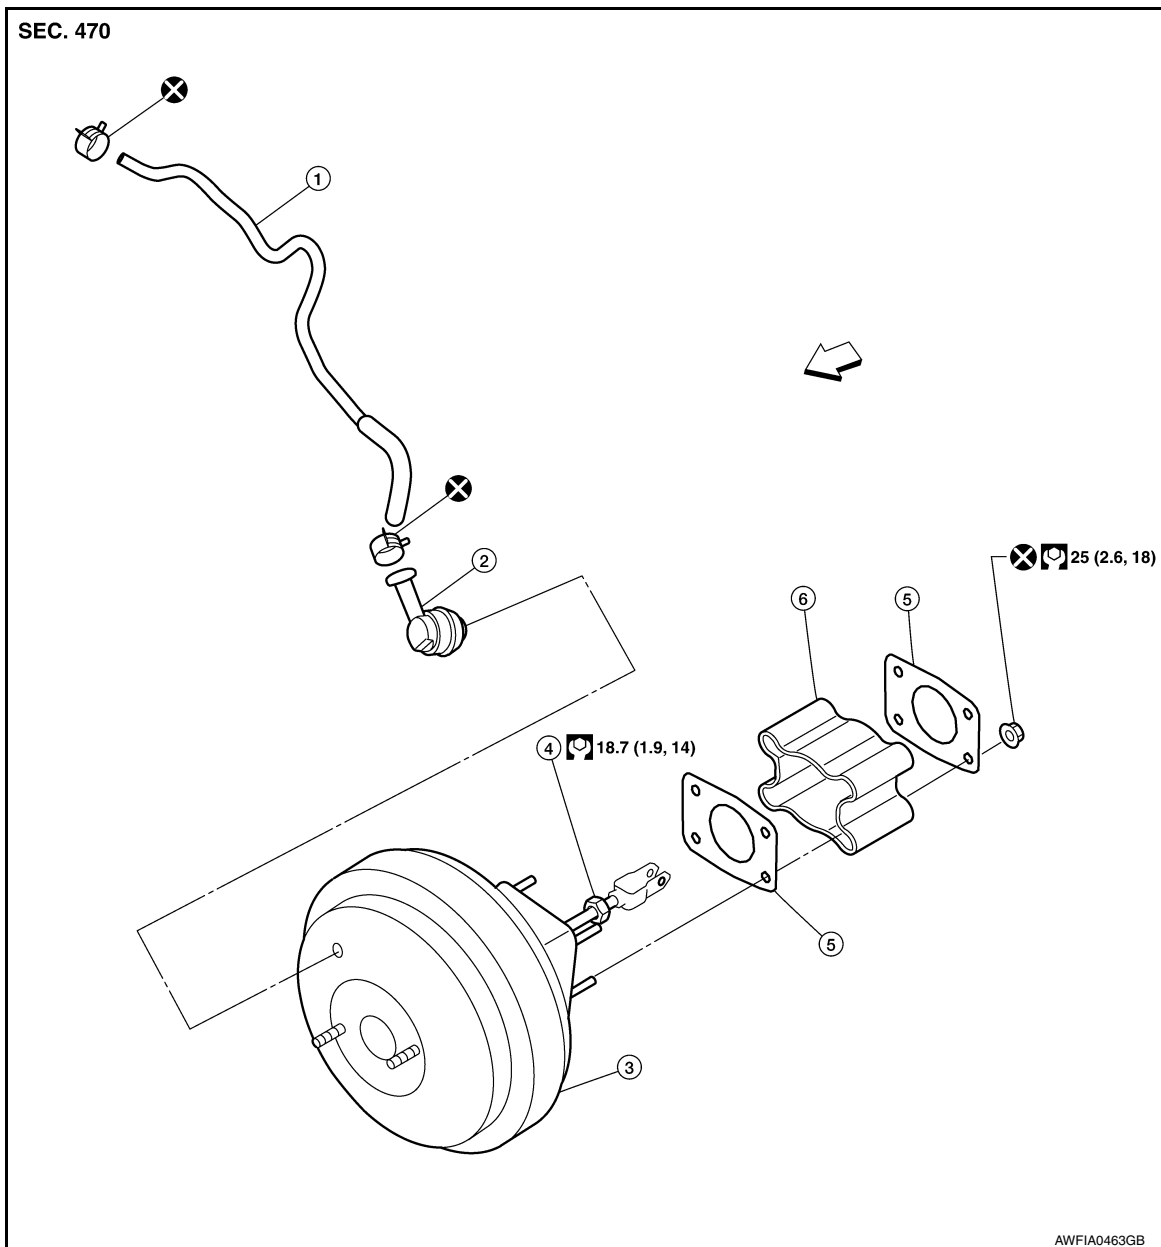

- | | | |
|------------------------------|-------------------------------------|------------------|
| 1. Brake booster vacuum hose | 2. Brake booster vacuum check valve | 3. Brake booster |
| 4. Lock nut | 5. Gasket | 6. Spacer block |

↶ Front

REMOVAL

CAUTION:


- Be careful not to deform or bend brake piping while removing and installing brake booster.
- Replace clevis pin if it is damaged.
- Be careful not to damage brake booster stud bolt threads. If brake booster is tilted or inclined during installation, dash panel may damage the threads.
- Attach the check valve in the correct direction.

1. Remove the ABS actuator and electric unit (control unit). Refer to [BRC-144, "Removal and Installation"](#) (type 1), [BRC-294, "Removal and Installation"](#) (type 2).

BRAKE BOOSTER

< REMOVAL AND INSTALLATION >

2. Remove the brake master cylinder. Refer to [BR-32, "Removal and Installation"](#).
3. Remove brake booster vacuum hose from the brake booster. Refer to [BR-36, "Removal and Installation"](#).
4. Remove instrument lower panel LH. Refer to [IP-27, "Exploded View"](#).
5. Remove the brake pedal clevis pin (2) and snap pin (1) from inside the vehicle.

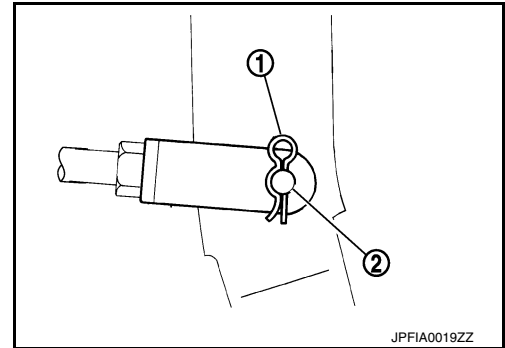


6. Remove the brake booster and brake pedal assembly nuts and discard.
CAUTION:
Do not reuse the brake booster and brake pedal assembly nuts.
7. Remove brake booster assembly from dash panel.

INSTALLATION


1. Loosen the lock nut (1) to adjust the input rod (2) so that length (A) without the spacer block is within the specified value.

Input rod (2) with lock nut (1) length (A) standard dimension : Refer to [BR-56, "Brake Booster"](#).

2. After adjusting input rod length (A), temporarily tighten the lock nut (1) and install the booster assembly to the dash panel.
 - Install gaskets and spacer block between the booster assembly and the dash panel.

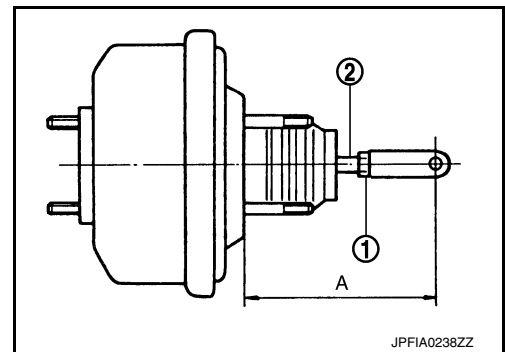

3. Connect the input rod using the brake pedal clevis pin (2) and snap pin (1) from inside the vehicle.

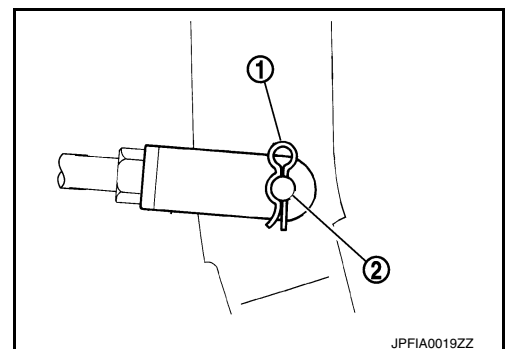

4. Install the brake booster using new nuts.
CAUTION:
Do not reuse the brake booster and brake pedal assembly nuts.
5. Install the brake master cylinder. Refer to [BR-32, "Removal and Installation"](#).
6. Connect the brake booster vacuum hose and check valve to the brake booster.
7. Adjust the brake pedal height. Refer to [BR-16, "Inspection and Adjustment"](#).
8. Install instrument lower panel LH. Refer to [IP-27, "Exploded View"](#).
9. Install dash side finisher. Refer to [INT-23, "Removal and Installation"](#).
10. Tighten the input rod lock nut to specification.
11. Install the ABS actuator and electric unit (control unit). Refer to [BRC-144, "Removal and Installation"](#) (type 1), [BRC-294, "Removal and Installation"](#) (type 2).
12. Refill with new brake fluid and bleed the brake system. Refer to [BR-18, "Bleeding Brake System"](#).


VACUUM LINES

< REMOVAL AND INSTALLATION >

VACUUM LINES

Removal and Installation

INFOID:000000012565329

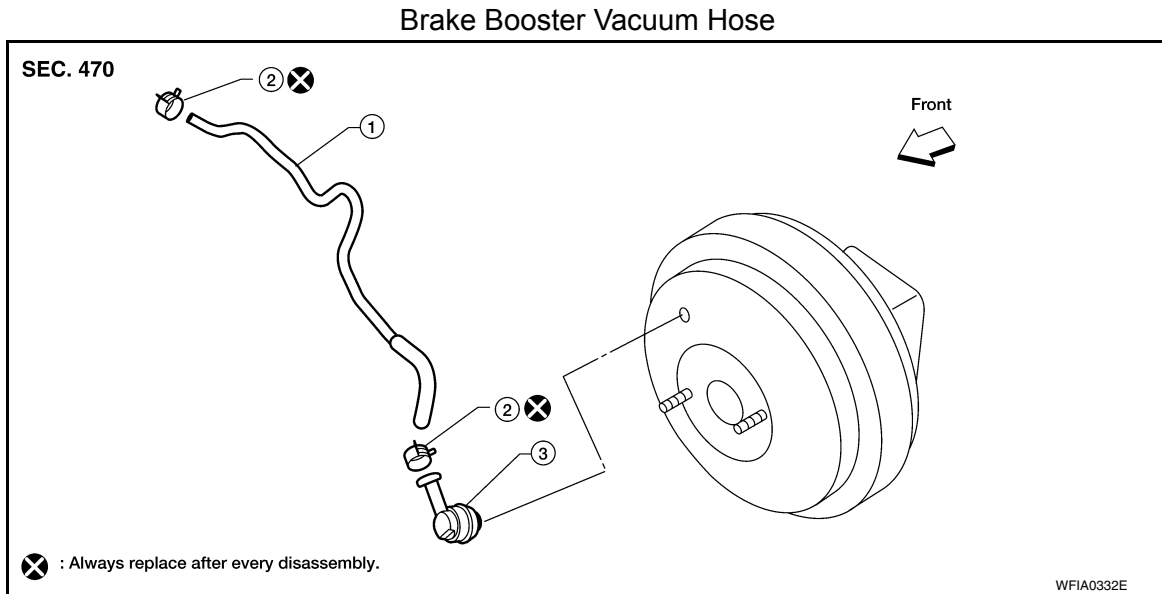

1. Brake booster hose 2. Brake booster hose clamp 3. Brake booster vacuum check valve

REMOVAL

1. Disconnect brake booster hose from hose clip bracket.
2. Release the brake booster hose clamps and remove the brake booster hose.
3. Remove the check valve from the brake booster.

INSTALLATION


Installation is in the reverse order of removal.

- Insert vacuum hose onto tube and brake booster vacuum check valve for a minimum length (A) before installing the brake booster hose clamps.

Vacuum hose length (A) : 24 mm (0.94 in) or more

CAUTION:

Do not use lubricating oil during installation.

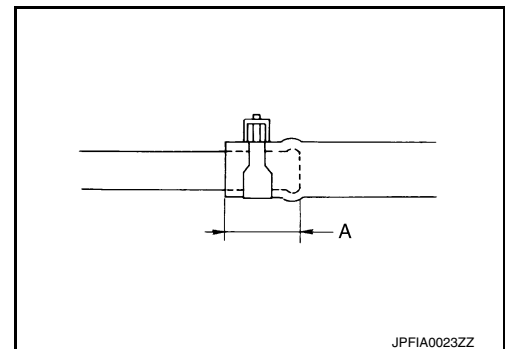

FRONT DISC BRAKE


< REMOVAL AND INSTALLATION >

FRONT DISC BRAKE

Exploded View of Brake Pads

INFOID:000000012565330

Front Brake Pads, Shims and Retainers

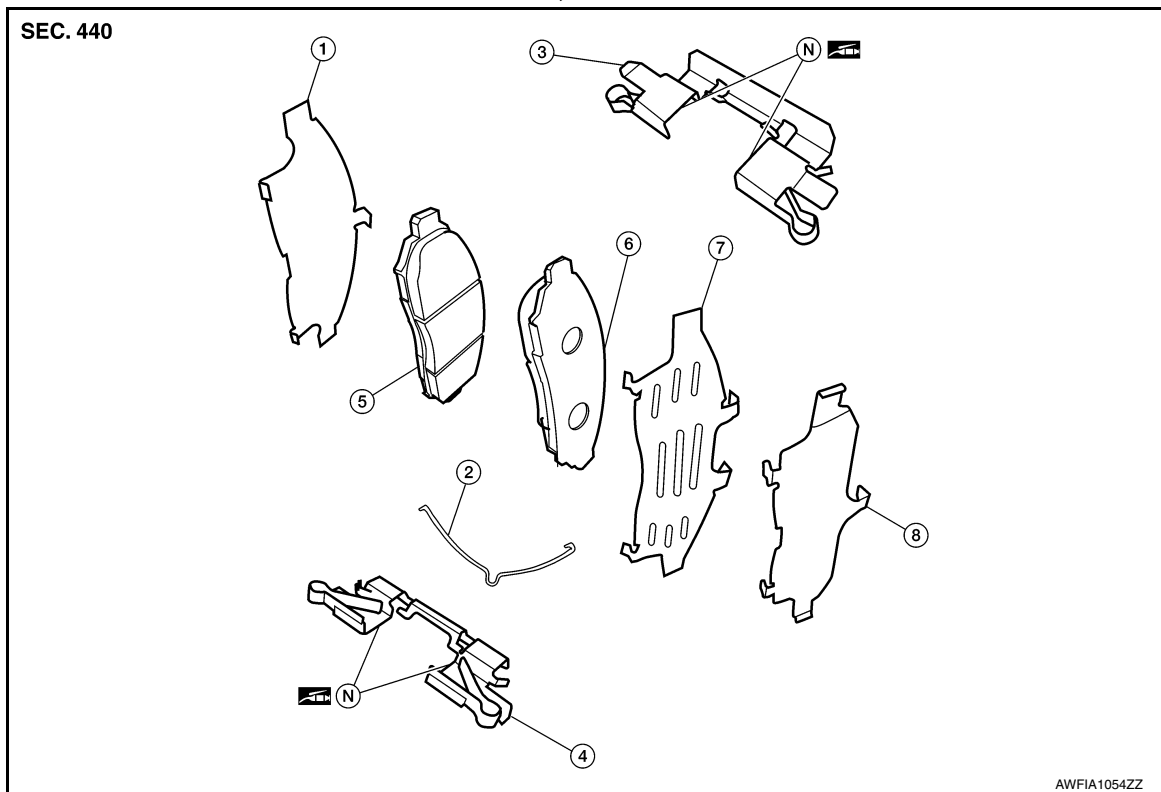

- | | | |
|-----------------------|----------------------|-------------------------|
| 1. Inner shim | 2. Pad return spring | 3. Upper pad retainer |
| 4. Lower pad retainer | 5. Inner brake pad | 6. Outer brake pad |
| 7. Outer shim | 8. Outer shim cover | N. Molykote 7439 grease |

WARNING:

Clean dust on caliper and brake pad with a vacuum dust collector to minimize the hazard of airborne particles or other materials.

CAUTION:

- While removing brake pads, do not depress brake pedal because piston will pop out.
- It is not necessary to remove bolts on torque member and brake hose except for disassembly or replacement of caliper body. In this case, hang caliper body with a wire so as not to stretch the brake hose.
- Do not damage the piston boot.
- If any shim is subject to serious corrosion, replace it with a new one.
- Always replace shim and shim cover as a set when replacing brake pads.
- Keep rotors and pads free from grease and brake fluid.
- Burnish the brake contact surface after refinishing or replacing rotors, after replacing pads, or if a soft pedal occurs at very low mileage. Refer to [BR-20, "BRAKE PAD : Inspection and Adjustment"](#).

Removal and Installation of Brake Pad

INFOID:000000012565331

REMOVAL

1. Remove the front wheel and tire using power tool. Refer to [WT-48, "Adjustment"](#).
2. Remove master cylinder reservoir cap.
3. Remove lower sliding pin bolt using power tool and swing the caliper body up to access the brake pads.
4. Support the caliper body with a suitable wire to avoid pulling on the front brake hose.
5. Remove the front inner and outer brake pads, shims, shim cover, pad return spring and retainers from the torque member.


A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

FRONT DISC BRAKE

< REMOVAL AND INSTALLATION >

INSTALLATION


1. Apply Molykote 7439 grease (A) to the pad retainers as shown.

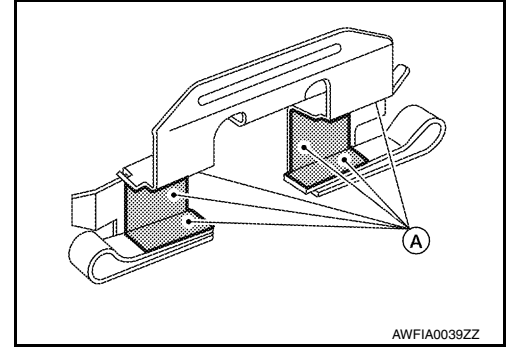

2. Attach pad retainers to torque member. then install the brake pads, shims and shim cover to the torque member.

CAUTION:

When attaching pad retainer, attach it firmly so that it is flush with torque member, as shown.

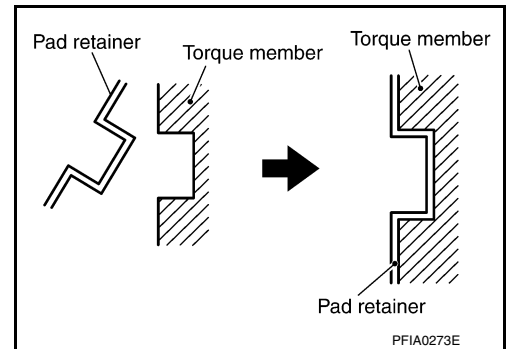

3. Using a suitable tool push pistons into caliper body.

CAUTION:

When pushing in piston, brake fluid returns to master cylinder reservoir tank. Watch the level of the brake fluid in the reservoir tank.


4. Install pad return spring to bottom edge of the brake pads in the holes provided.
5. Remove the suitable wire, then swing caliper body down over pad assemblies.
6. Install the lower sliding pin bolt and tighten to specification. Refer to [BR-39, "Exploded View of Brake Caliper"](#).
7. Check the brakes for drag.
8. Inspect the brake fluid level, then install the master cylinder reservoir cap.
9. Install the front wheel and tire. Refer to [WT-48, "Adjustment"](#).

FRONT DISC BRAKE

< REMOVAL AND INSTALLATION >

Exploded View of Brake Caliper

INFOID:000000012565333

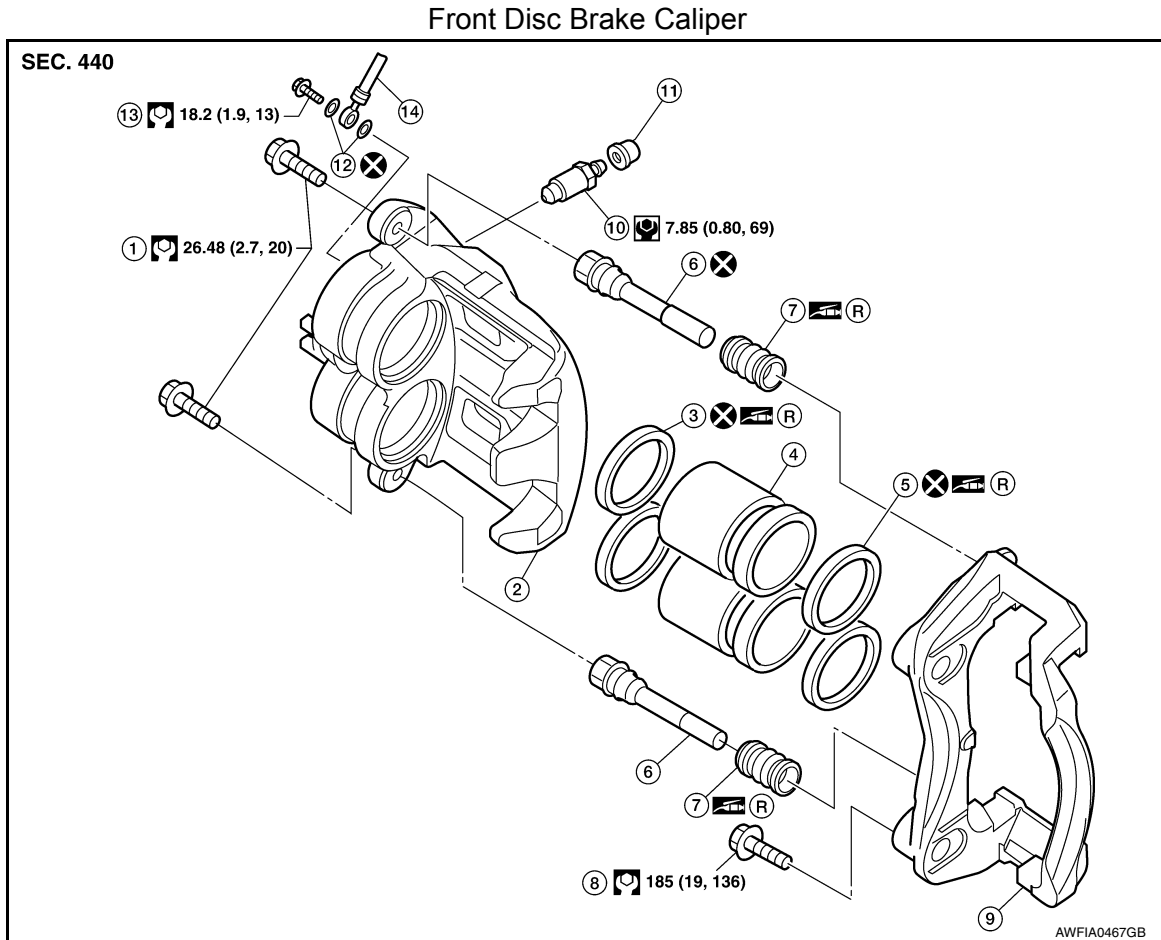

- | | | |
|---------------------|-----------------------|----------------------------|
| 1. Sliding pin bolt | 2. Caliper body | 3. Piston seal |
| 4. Piston | 5. Piston boot | 6. Sliding pin |
| 7. Sliding pin boot | 8. Torque member bolt | 9. Torque member |
| 10. Bleed valve | 11. Cap | 12. Copper sealing washers |
| 13. Union bolt | 14. Front brake hose | R. Rubber grease |

WARNING:

Clean dust on caliper and brake pad with a vacuum dust collector to minimize the hazard of airborne particles or other materials.

CAUTION:

- While removing caliper body, do not depress brake pedal because piston will pop out.
- Do not damage the piston boot.
- If any shim is subject to serious corrosion, replace it with a new one.
- Always replace shim and shim cover as a set when replacing brake pads.
- Keep rotors free from grease and brake fluid.
- Burnish the brake contact surface after refinishing or replacing rotors, after replacing pads, or if a soft pedal occurs at very low mileage. Refer to [BR-20, "BRAKE PAD : Inspection and Adjustment"](#).

Removal and Installation of Brake Caliper and Disc Rotor

INFOID:000000012565334

NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

REMOVAL

1. Remove the front wheel and tire using power tool. Refer to [WT-48, "Adjustment"](#).


FRONT DISC BRAKE

< REMOVAL AND INSTALLATION >


2. Remove the union bolt then disconnect the brake hose and discard the copper sealing washers.

CAUTION:

Do not reuse copper sealing washers.

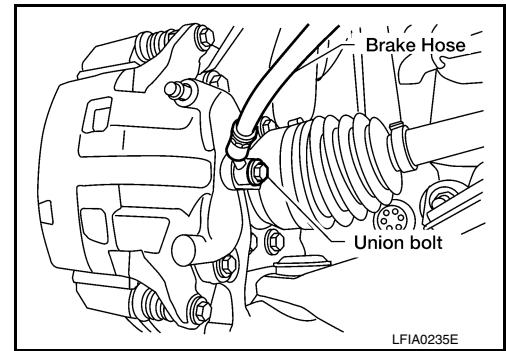


3. Remove the sliding pin bolts and remove the caliper body from the torque member.

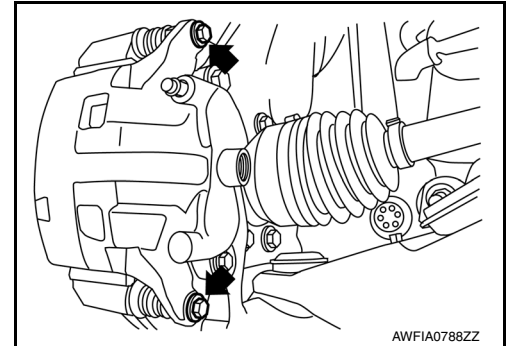

4. Remove the brake pads, shims, shim cover and retainers from the torque member.
5. Remove the torque member bolts and remove the torque member.
6. Remove the disc rotor. If reusing the disc rotor, apply a matching mark as shown for installation.

CAUTION:

Put matching marks on the wheel hub assembly and disc rotor, if reusing the disc rotor.

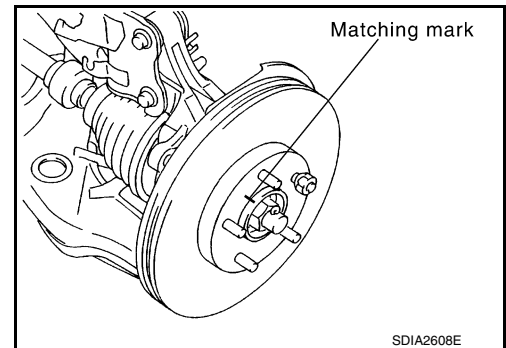


INSTALLATION

1. Install the disc rotor. If reusing the disc rotor, align the matching marks as shown for installation.

CAUTION:

Align the matching marks on the wheel hub assembly and disc rotor, if reusing the disc rotor.

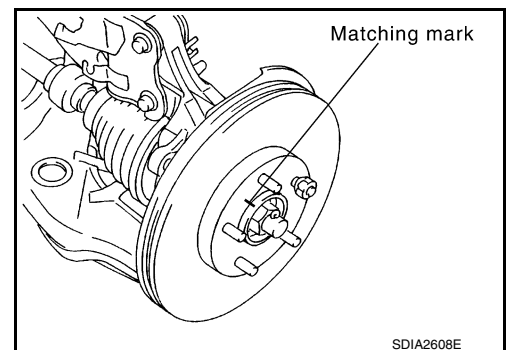

2. Install torque member and tighten the torque member bolts to specification. Refer to [BR-39. "Exploded View of Brake Caliper"](#).
3. Install the brake pads, shims, shim covers and retainers on the torque member. Refer to [BR-37. "Exploded View of Brake Pads"](#).


FRONT DISC BRAKE

< REMOVAL AND INSTALLATION >

4. Install caliper body and sliding pins, then tighten the sliding pin bolts to the specified torque. Refer to [BR-39, "Exploded View of Brake Caliper"](#).

CAUTION:


When installing the caliper body to the torque member, wipe any oil off of the knuckle, washers and caliper body attachment surfaces.

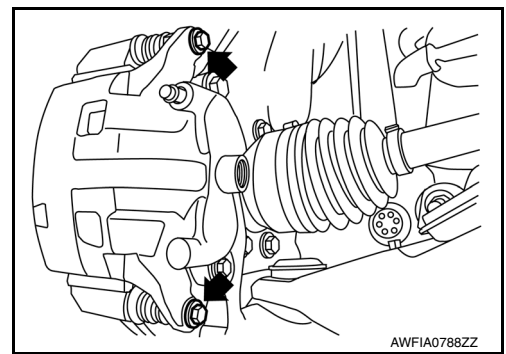

5. Install brake hose by aligning with the protrusion on caliper body, then install new copper sealing washers (1) and union bolt (A). Tighten union bolt (A) to specified torque. Refer to [BR-39, "Exploded View of Brake Caliper"](#).

CAUTION:

Do not reuse copper sealing washers.

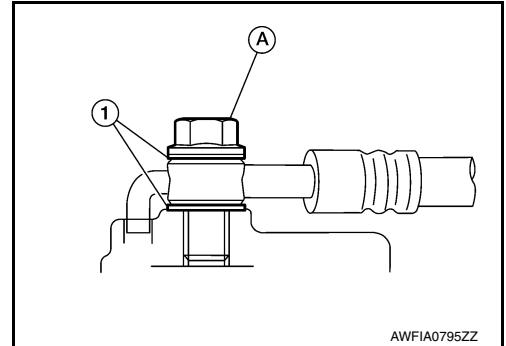

6. Refill with new brake fluid as necessary and bleed the brake system. Refer to [BR-18, "Bleeding Brake System"](#).

CAUTION:

- Refill with new brake fluid.
- Do not reuse drained brake fluid.

7. Install the front wheel and tire. Refer to [WT-48, "Adjustment"](#).

REAR DISC BRAKE


< REMOVAL AND INSTALLATION >

REAR DISC BRAKE

Exploded View of Brake Pad

INFOID:000000012565335

Rear Brake Pads, Shims and Retainers

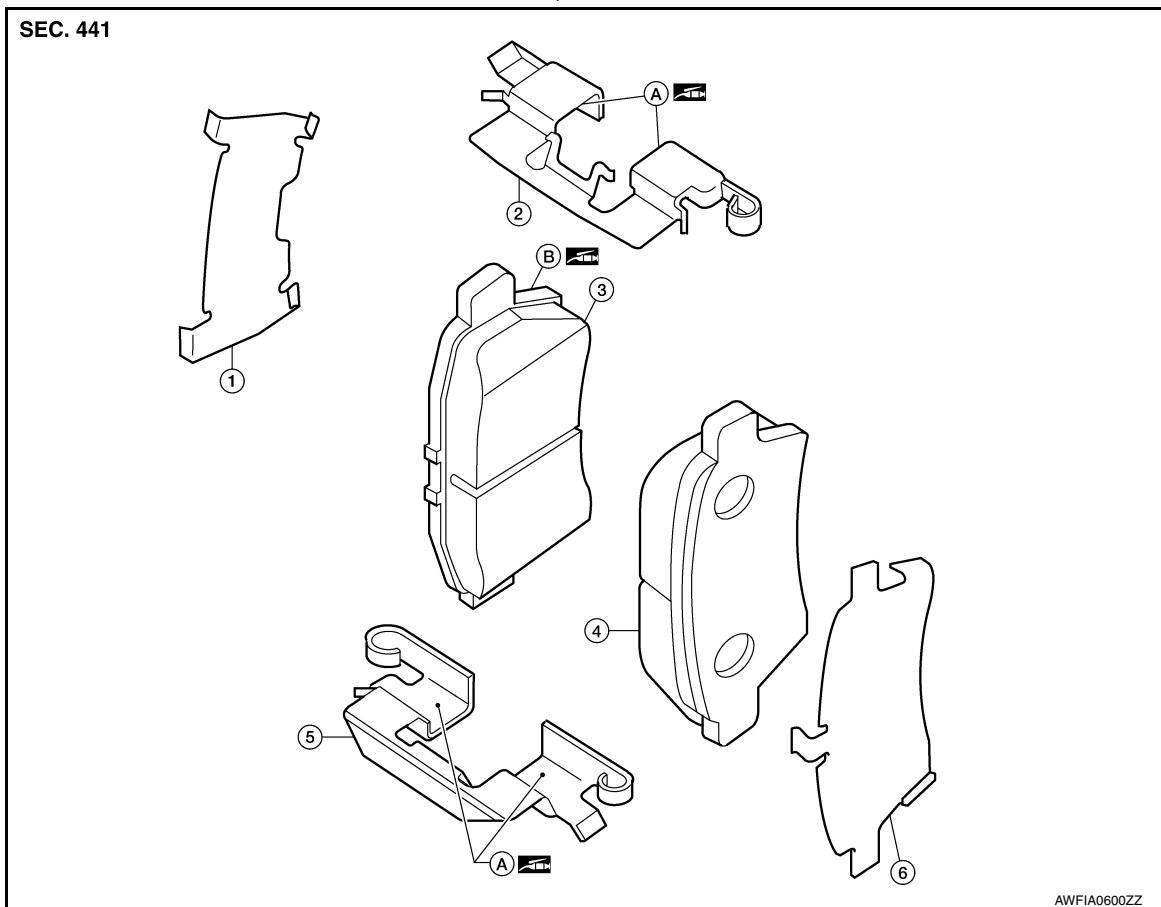

- | | | |
|-------------------------|----------------------------|--------------------|
| 1. Inner shim | 2. Upper pad retainer | 3. Inner brake pad |
| 4. Outer brake pad | 5. Lower pad retainer | 6. Outer shim |
| A. Molykote 7439 grease | B. Molykote AS-880N grease | |

WARNING:

Clean dust on caliper and brake pad with a vacuum dust collector to minimize the hazard of airborne particles or other materials.

CAUTION:

- While removing brake pads, do not depress brake pedal because piston will pop out.
- Do not damage the piston boot.
- If any shim is subject to serious corrosion, replace it with a new one.
- Always replace inner and outer shims as a set when replacing brake pads.
- Keep rotors and pads free from grease and brake fluid.
- Burnish the brake contact surface after refinishing or replacing rotors, after replacing pads, or if a soft pedal occurs at very low mileage. Refer to [BR-22, "BRAKE PAD : Inspection and Adjustment"](#).

Removal and Installation of Brake Pad

INFOID:000000012565336

REMOVAL

1. Remove the rear wheel and tire using power tool. Refer to [WT-48, "Adjustment"](#).
2. Remove master cylinder reservoir cap.
3. Remove the lower caliper sliding pin bolt using power tool and swing the caliper body up to access the brake pads.
4. Support the caliper body with a suitable wire to avoid pulling on the rear brake hose.


REAR DISC BRAKE

< REMOVAL AND INSTALLATION >

5. Remove the rear inner and outer brake pads, shims and retainers from the torque member.

INSTALLATION


1. Apply Molykote AS-880N grease between the inner brake pad back plate and shim, then attach the shims to the brake pads.
2. Apply Molykote 7439 grease (A) to the pad retainers as shown

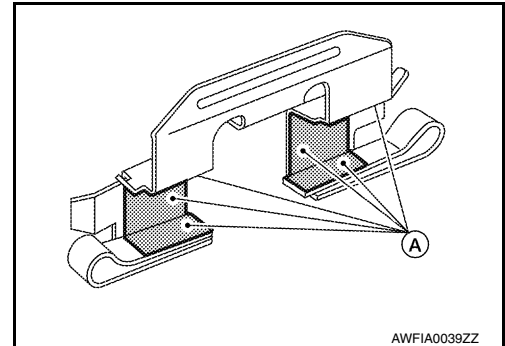

3. Attach pad retainer to torque member, then install brake pad and shim assemblies.

CAUTION:

When attaching pad retainer, attach it firmly so that it is flush with torque member, as shown.

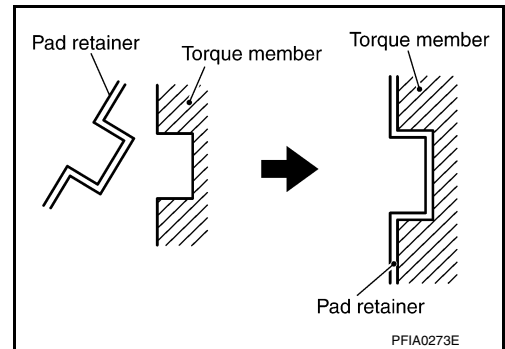


4. Using a suitable tool push piston into caliper body.
CAUTION:
By pushing in piston, brake fluid returns to master cylinder reservoir tank. Watch the level of the surface of reservoir tank.
5. Remove suitable wire then swing caliper body down over the brake pad assemblies.
6. Install the sliding pin bolts and tighten to specification. Refer to [BR-44, "Exploded View of Brake Caliper"](#).
7. Check the brakes for drag.
8. Inspect the brake fluid level, then install the master cylinder reservoir cap.
9. Install the rear wheel and tire. Refer to [WT-48, "Adjustment"](#).

REAR DISC BRAKE

< REMOVAL AND INSTALLATION >

Exploded View of Brake Caliper

INFOID:000000012565338

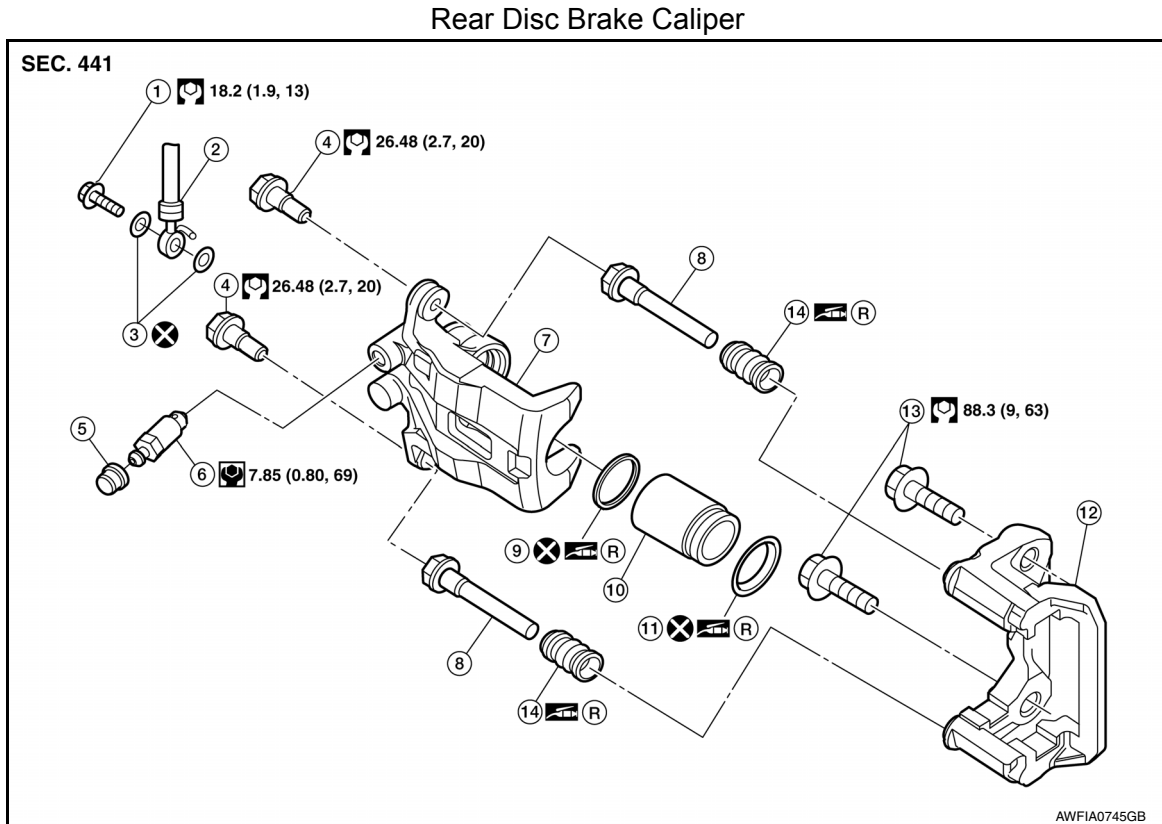

- | | | |
|------------------------|----------------------|---------------------------|
| 1. Union bolt | 2. Brake hose | 3. Copper sealing washers |
| 4. Sliding pin bolt | 5. Cap | 6. Bleed valve |
| 7. Caliper body | 8. Sliding pin | 9. Piston seal |
| 10. Piston | 11. Piston boot | 12. Torque member |
| 13. Torque member bolt | 14. Sliding pin boot | R. Rubber grease |

WARNING:

Clean dust on caliper and brake pad with a vacuum dust collector to minimize the hazard of airborne particles or other materials.

CAUTION:

- While removing caliper body, do not depress brake pedal because piston will pop out.
- It is not necessary to remove bolts on torque member and brake hose except for disassembly or replacement of caliper body. In this case, hang caliper body with a wire so as not to stretch the brake hose.
- Do not damage the piston boot.
- If any shim is subject to serious corrosion, replace it with a new one.
- Always replace shim and shim cover as a set when replacing brake pads.
- Keep rotors free from grease and brake fluid.
- Burnish the brake contact surface after refinishing or replacing rotors, after replacing pads, or if a soft pedal occurs at very low mileage. Refer to [BR-22, "BRAKE PAD : Inspection and Adjustment"](#).

Removal and Installation of Brake Caliper and Disc Rotor

INFOID:000000012565339

NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

REMOVAL

1. Remove the rear wheel and tire using power tool. Refer to [WT-48, "Adjustment"](#).


REAR DISC BRAKE

< REMOVAL AND INSTALLATION >


2. Remove the union bolt (A) then disconnect the brake hose and discard the copper sealing washers.

CAUTION:

Do not reuse copper sealing washers.

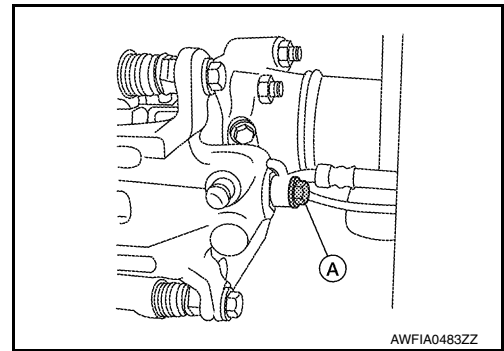


3. Remove the sliding pin bolts (A) and remove the caliper body from torque member.

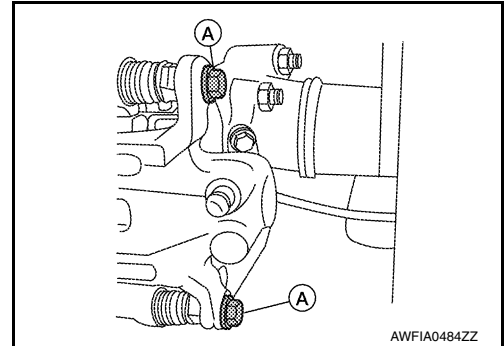

4. Remove the brake pads, shims and retainers from the torque member.
5. Remove the torque member bolts and remove the torque member.
6. Remove the disc rotor. If reusing the disc rotor, apply a matching mark (A) as shown for installation.

CAUTION:

Put matching marks on the wheel hub assembly and disc rotor, if reusing the disc rotor.

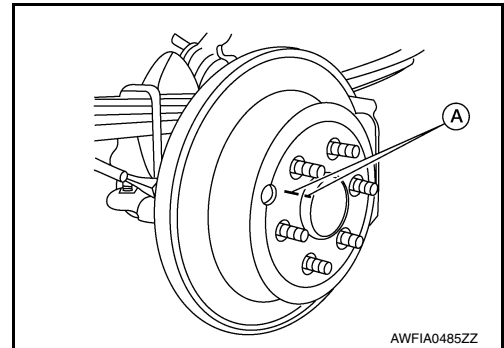


INSTALLATION

1. Install the disc rotor. If reusing the disc rotor, align the matching marks (A) as shown for installation.

CAUTION:

Align the matching marks on the wheel hub assembly and disc rotor, if reusing the disc rotor.

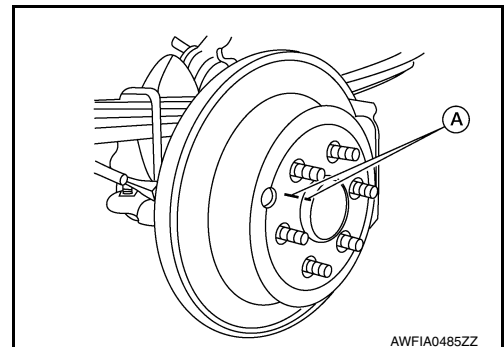

2. Install torque member and tighten the torque member bolts to specification. Refer to [BR-44, "Exploded View of Brake Caliper"](#).
3. Install the brake pads, shims and retainers on the torque member. Refer to [BR-42, "Exploded View of Brake Pad"](#).


REAR DISC BRAKE

< REMOVAL AND INSTALLATION >

4. Install caliper body and sliding pins, then tighten the sliding pin bolts (A) to the specified torque. Refer to [BR-44, "Exploded View of Brake Caliper"](#).

CAUTION:


When installing the caliper body to the torque member, wipe any oil off of the washers and caliper body attachment surfaces.

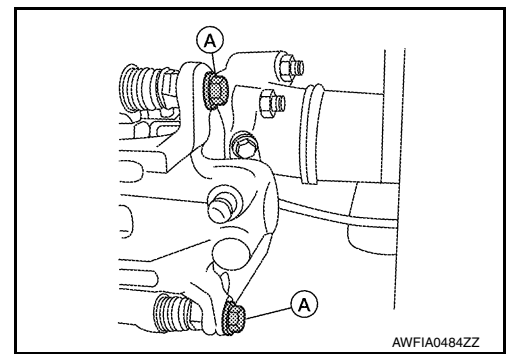

5. Install brake hose by aligning with the protrusion on caliper body, then install new copper sealing washers (1) and union bolt (A). Tighten union bolt (A) to specified torque. Refer to [BR-12, "Hydraulic Circuit"](#).

CAUTION:

Do not reuse copper sealing washers.

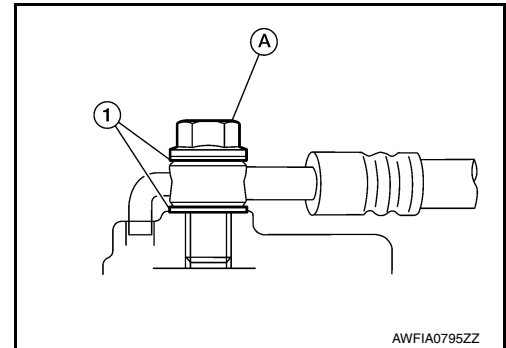

6. Refill with new brake fluid as necessary and bleed the brake system. Refer to [BR-18, "Bleeding Brake System"](#).

CAUTION:

- Refill with new brake fluid.
- Do not reuse drained brake fluid.

7. Install the rear wheel and tire. Refer to [WT-48, "Adjustment"](#).

BRAKE MASTER CYLINDER

< UNIT DISASSEMBLY AND ASSEMBLY >


UNIT DISASSEMBLY AND ASSEMBLY

BRAKE MASTER CYLINDER

Disassembly and Assembly

INFOID:0000000012565340

Brake Master Cylinder

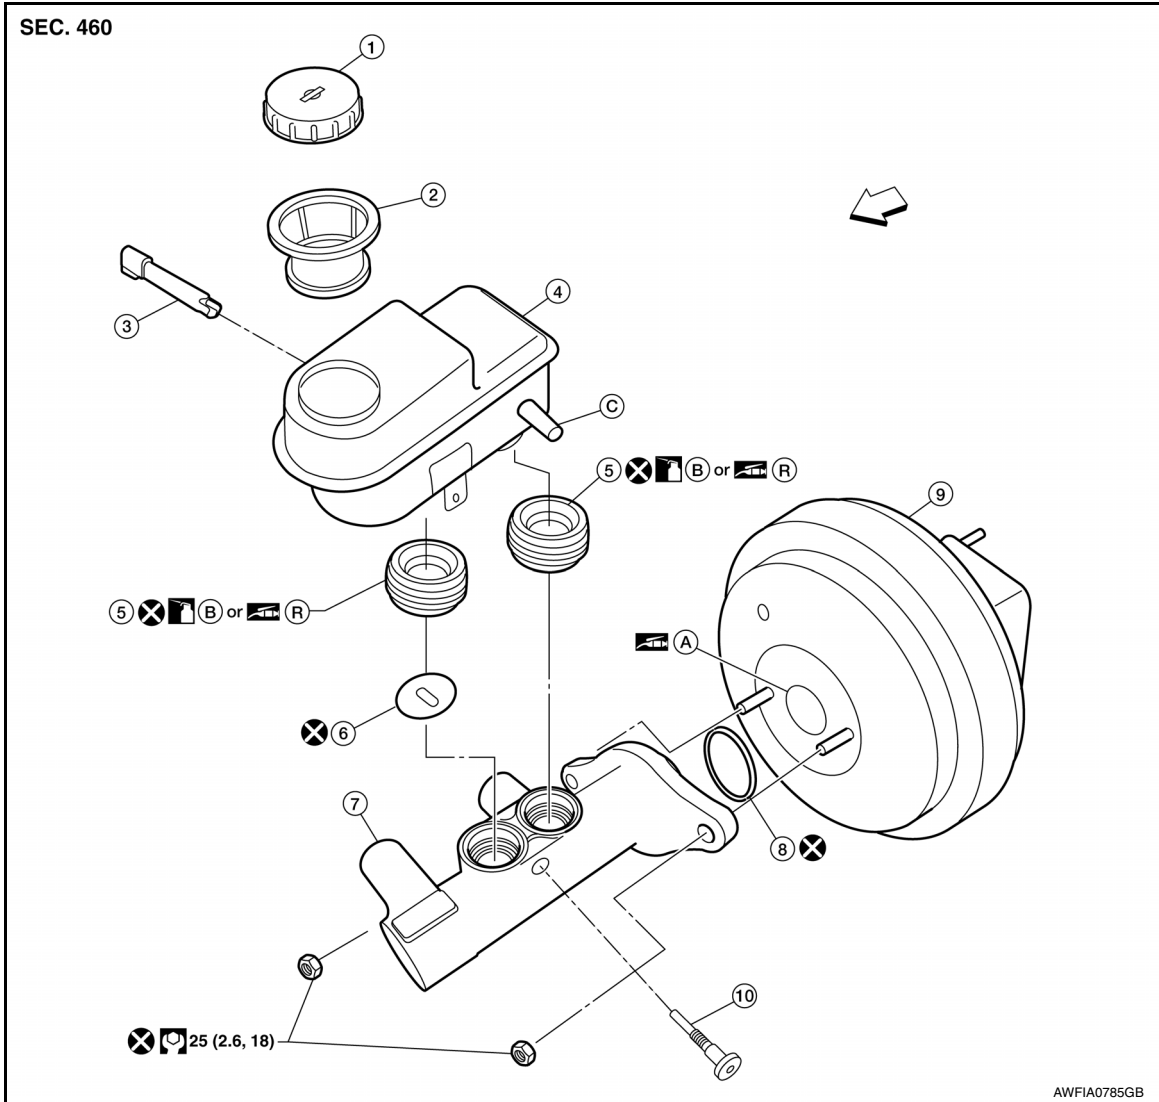

- | | | |
|---------------------------------|--|-----------------------|
| 1. Reservoir cap | 2. Strainer | 3. Fluid level sensor |
| 4. Reservoir tank | 5. Grommet | 6. Restriction washer |
| 7. Master cylinder sub-assembly | 8. O-ring | 9. Brake booster |
| 10. Pin | A. PBC (Poly Butyl Cuprysil) grease or silicone based grease | B. Brake fluid |
| C. M/T models only | R. Rubber grease | ← Front |

DISASSEMBLY

CAUTION:

- Master cylinder sub-assembly cannot be disassembled.
- Remove reservoir tank only when absolutely necessary.
- While working, cover the primary piston rod with a cloth to prevent it from being damaged.
- Do not use mineral oils such as kerosene, gasoline during the cleaning and assembly process.
- Do not drop parts. If a part is dropped, do not use it.


BRAKE MASTER CYLINDER

< UNIT DISASSEMBLY AND ASSEMBLY >

1. Secure the flange of the master cylinder sub-assembly in a vise.

CAUTION:

- Use copper plates or a cloth to cover the flange before securing it in the vise.
- When securing the master cylinder sub-assembly in a vise, be sure not to over-tighten the vise.

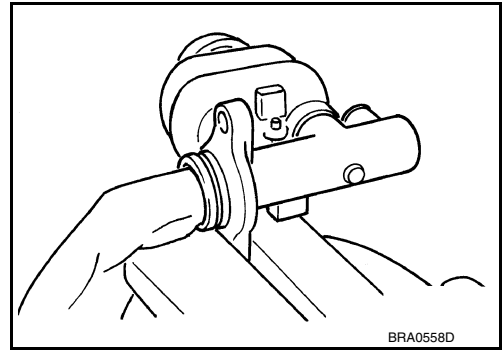

2. Remove the pin and pull the reservoir tank off of the master cylinder sub-assembly.
3. Remove the grommets from the master cylinder sub-assembly body.
CAUTION:
Do not reuse grommets.
4. Remove the restriction washer from the master cylinder sub-assembly body.
CAUTION:
Do not reuse restriction washer.
5. Remove the fluid level sensor.

ASSEMBLY

Assembly is in the reverse order of disassembly.

CAUTION:

- Master cylinder sub-assembly cannot be disassembled.
- Remove reservoir tank only when absolutely necessary.
- While working, cover the primary piston rod with a cloth to prevent it from being damaged.
- Do not use mineral oils such as kerosene, gasoline during the cleaning and assembly process.
- Do not drop parts. If a part is dropped, do not use it.
- Do not reuse O-rings.


FRONT DISC BRAKE

< UNIT DISASSEMBLY AND ASSEMBLY >

FRONT DISC BRAKE

Exploded View of Brake Caliper

INFOID:000000012565341

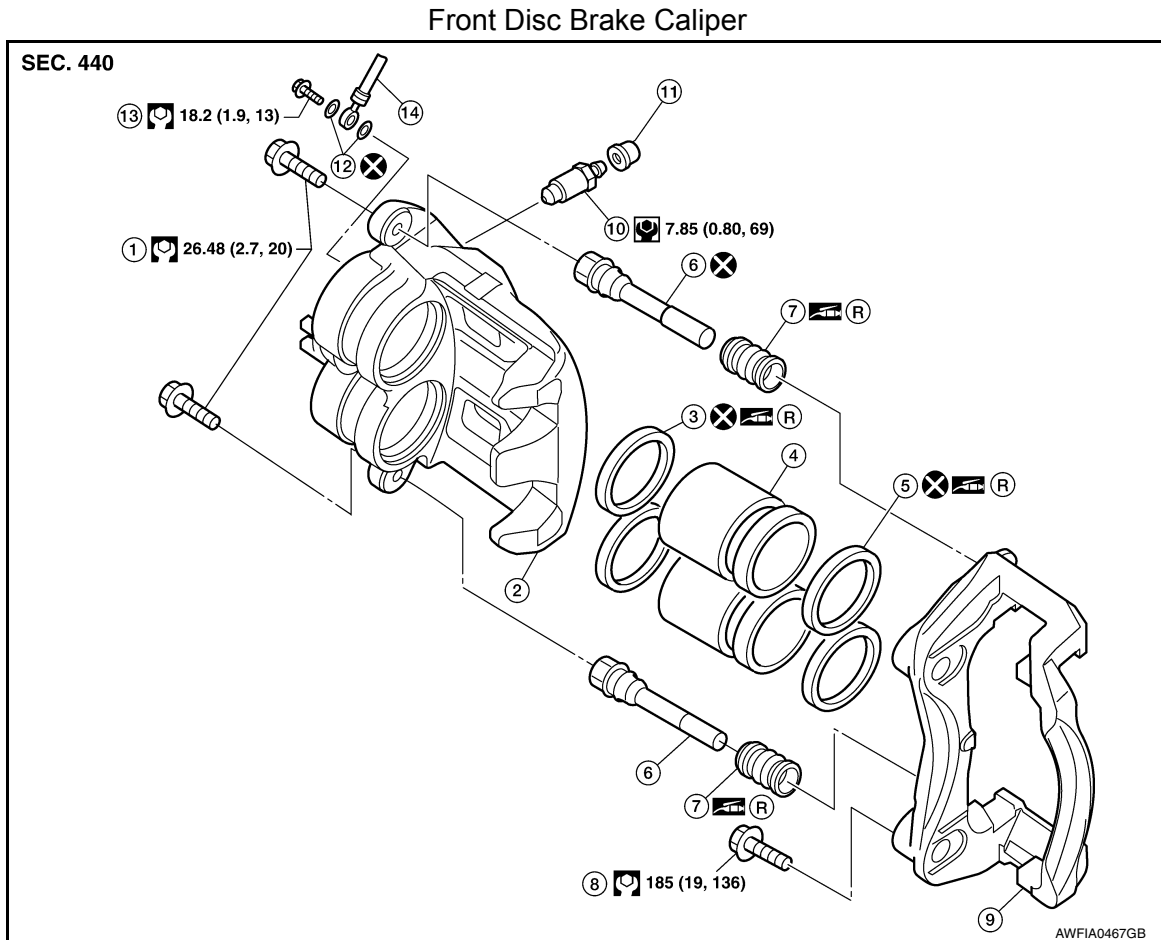

- | | | |
|---------------------|-----------------------|----------------------------|
| 1. Sliding pin bolt | 2. Caliper body | 3. Piston seal |
| 4. Piston | 5. Piston boot | 6. Sliding pin |
| 7. Sliding pin boot | 8. Torque member bolt | 9. Torque member |
| 10. Bleed valve | 11. Cap | 12. Copper sealing washers |
| 13. Union bolt | 14. Front brake hose | R. Rubber grease |

WARNING:

Clean dust on caliper and brake pad with a vacuum dust collector to minimize the hazard of airborne particles or other materials.

CAUTION:

- While removing caliper body, do not depress brake pedal because piston will pop out.
- It is not necessary to remove bolts on torque member and brake hose except for disassembly or replacement of caliper body. In this case, hang caliper body with a wire so as not to stretch the brake hose.
- Do not damage the piston boot.
- If any shim is subject to serious corrosion, replace it with a new one.
- Always replace shim and shim cover as a set when replacing brake pads.
- Keep rotors free from grease and brake fluid.
- Burnish the brake contact surface after refinishing or replacing rotors, after replacing pads, or if a soft pedal occurs at very low mileage. Refer to [BR-20, "BRAKE PAD : Inspection and Adjustment"](#).

Disassembly and Assembly

INFOID:000000012565342

DISASSEMBLY

FRONT DISC BRAKE

< UNIT DISASSEMBLY AND ASSEMBLY >

1. Remove the caliper body from the torque member. Refer to [BR-39, "Removal and Installation of Brake Caliper and Disc Rotor"](#).
2. Remove the upper sliding pin, lower sliding pin, and sliding pin boots from the torque member.


CAUTION:

Upper sliding pin must be replaced at each service.

3. Place a wooden block as shown, and then blow air from the union bolt hole to remove the pistons and piston boots.

WARNING:

Do not get your fingers caught between the pistons and wooden block.

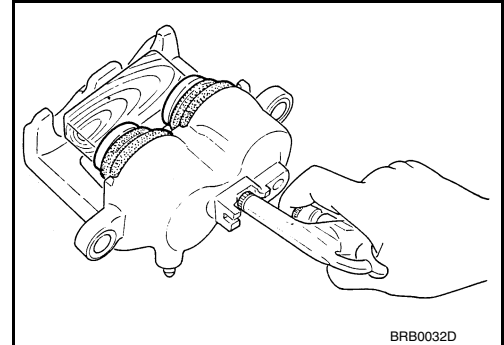

4. Remove the piston boots from the pistons.


CAUTION:

Do not reuse piston boot.

5. Remove piston seals from cylinder body, using a suitable tool.

CAUTION:

- Be careful not to damage cylinder body inner wall.
- Do not reuse piston seal.

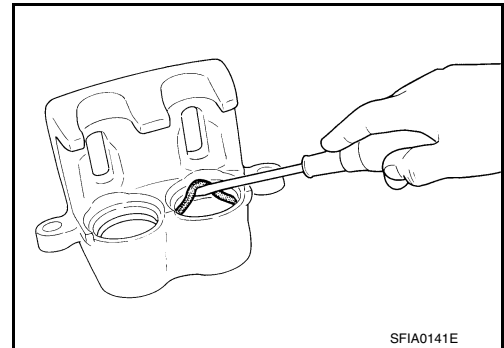

6. Remove the bleed valve and cap.

CALIPER INSPECTION

Cylinder Body

- Check the inside surface of the cylinder body for score, rust, wear, damage or foreign materials. If any of the above conditions are observed, replace the cylinder body.
- Minor damage from rust or foreign materials may be eliminated by polishing surface with a fine emery paper. Replace cylinder body if necessary.

CAUTION:

- Use new brake fluid for cleaning. Do not use mineral oils such as gasoline or kerosene.

Torque Member

Check the torque member for wear, cracks, and damage. If damage or deformation is present, replace the torque member.

Piston

Check the pistons for score, rust, wear, damage or presence of foreign materials. Replace if any of these conditions are observed.

CAUTION:

Piston sliding surface is plated, do not polish with emery paper even if rust or foreign materials are stuck to sliding surface.

Sliding Pins, and Sliding Pin Boots

Check the sliding pins and sliding pin boots for wear, damage, and cracks. If damage or deformation is present, replace the affected part.

CAUTION:

Upper sliding pin must be replaced at each service.

ASSEMBLY

FRONT DISC BRAKE

< UNIT DISASSEMBLY AND ASSEMBLY >


CAUTION:

Use NISSAN Rubber Grease when assembling.

1. Install the bleed valve and cap.
2. Apply rubber grease to the new piston seals (1) and insert the new piston seals (1) into the groove on the cylinder body.

CAUTION:


Do not reuse piston seals.

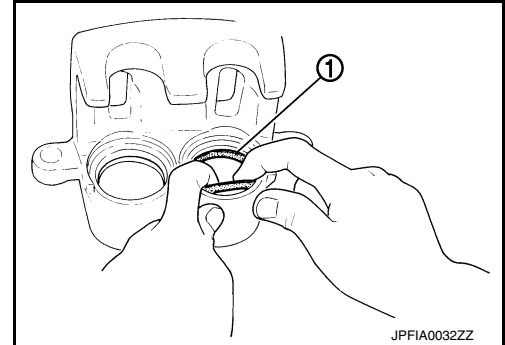

3. Apply rubber grease to the new piston boots (1). Cover the piston end (2) with the piston boot (1), and then install the cylinder side lip on the piston boot (1) securely into the groove on the cylinder body.

CAUTION:


- Do not reuse piston boot.
- Press pistons in evenly and vary the pressing points to prevent the cylinder inner wall from being damaged.

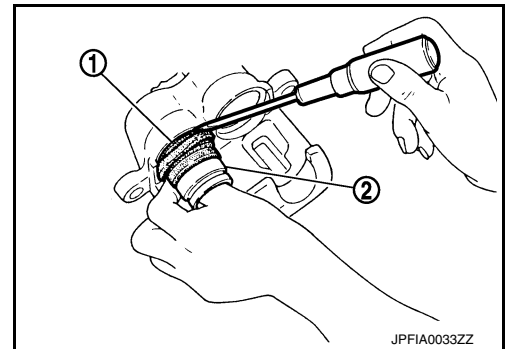

4. Install the pistons (1) into the cylinder body and insert the piston boots (2) side lip into the piston groove as shown.

CAUTION:

Press pistons in evenly and vary the pressing points to prevent the cylinder inner wall from being damaged.

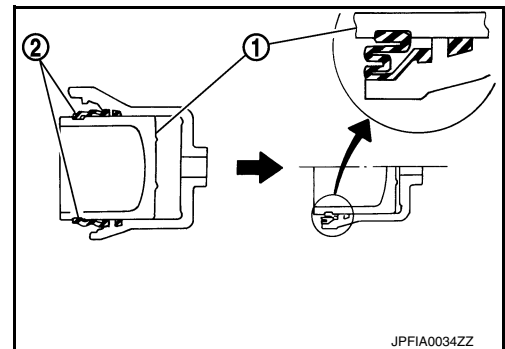

5. Apply rubber grease to the sliding pin boots, then install the new upper sliding pin, lower sliding pin, and sliding pin boots on the torque member.

CAUTION:

Upper sliding pin must be replaced at each service.

6. Install the caliper body on the torque member. Refer to [BR-39. "Removal and Installation of Brake Caliper and Disc Rotor"](#).


REAR DISC BRAKE

< UNIT DISASSEMBLY AND ASSEMBLY >

REAR DISC BRAKE

Exploded View of Brake Caliper

INFOID:000000012565343

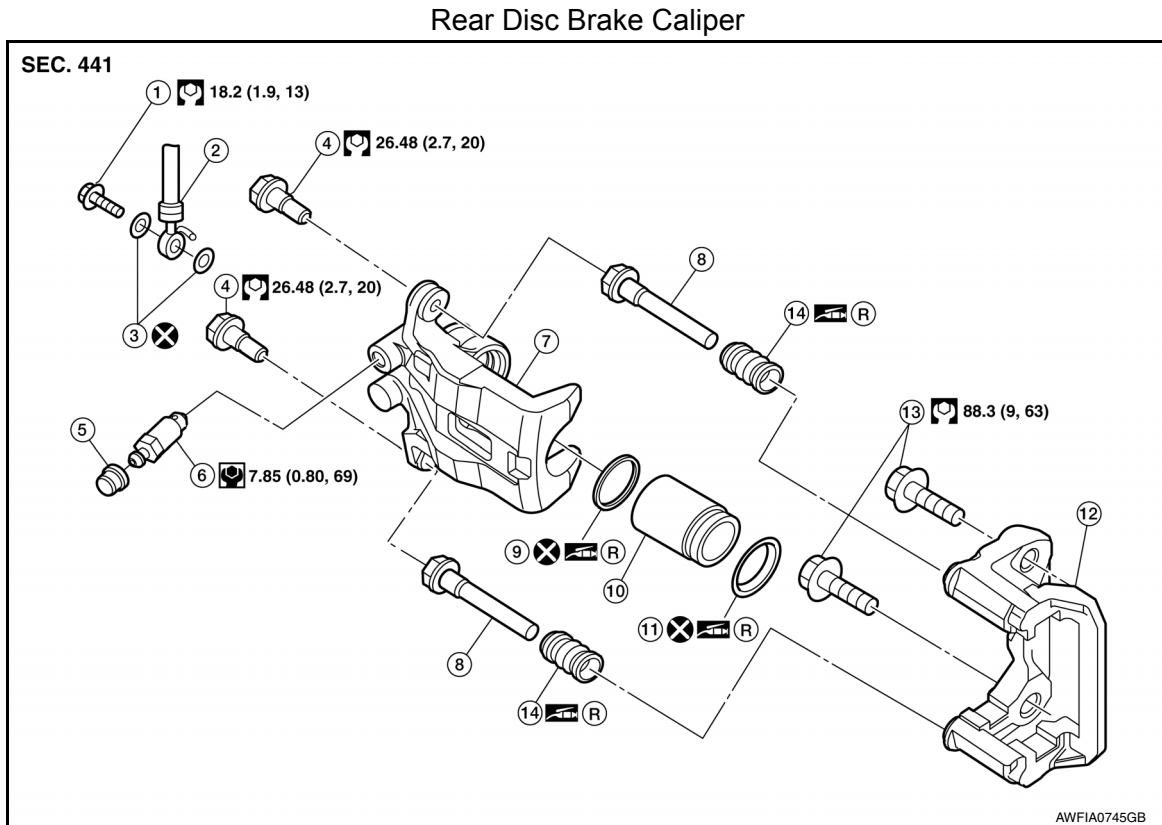

- | | | |
|------------------------|----------------------|---------------------------|
| 1. Union bolt | 2. Brake hose | 3. Copper sealing washers |
| 4. Sliding pin bolt | 5. Cap | 6. Bleed valve |
| 7. Caliper body | 8. Sliding pin | 9. Piston seal |
| 10. Piston | 11. Piston boot | 12. Torque member |
| 13. Torque member bolt | 14. Sliding pin boot | R. Rubber grease |

WARNING:

Clean dust on caliper and brake pad with a vacuum dust collector to minimize the hazard of airborne particles or other materials.

CAUTION:

- While removing caliper body, do not depress brake pedal because piston will pop out.
- It is not necessary to remove bolts on torque member and brake hose except for disassembly or replacement of caliper body. In this case, hang caliper body with a wire so as not to stretch the brake hose.
- Do not damage the piston boot.
- If any shim is subject to serious corrosion, replace it with a new one.
- Always replace shim and shim cover as a set when replacing brake pads.
- Keep rotors free from grease and brake fluid.
- Burnish the brake contact surface after refinishing or replacing rotors, after replacing pads, or if a soft pedal occurs at very low mileage. Refer to [BR-22, "BRAKE PAD : Inspection and Adjustment"](#).

Disassembly and Assembly

INFOID:000000012565344

DISASSEMBLY

1. Remove the caliper body from the torque member. Refer to [BR-44, "Removal and Installation of Brake Caliper and Disc Rotor"](#).
2. Remove the sliding pins and boots from the torque member.


REAR DISC BRAKE

< UNIT DISASSEMBLY AND ASSEMBLY >


- Place a wooden block in the cylinder body and blow air into the union bolt hole to remove the piston and piston boot as shown.

WARNING:

Do not get your fingers caught between the piston and wooden block.

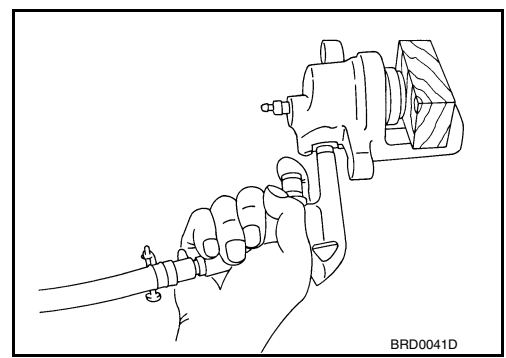

- Remove the piston boot from the piston.
CAUTION:
Do not reuse piston boot.
- Remove piston seal from cylinder body, using a suitable tool.
CAUTION:
Be careful not to damage cylinder body inner wall.

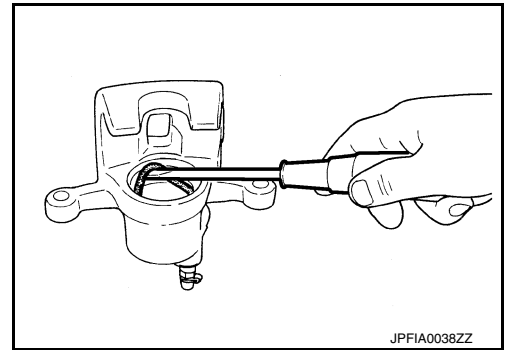

- Remove the bleed valve and cap.

CALIPER INSPECTION

Cylinder Body

- Check inside surface of cylinder for score, rust wear, damage or foreign materials. If any of the above conditions are observed, replace cylinder body.
- Minor damage from rust or foreign materials may be eliminated by polishing surface with a fine emery paper. Replace cylinder body if necessary.

CAUTION:

- Use new brake fluid for cleaning. Do not use mineral oils such as gasoline or kerosene.**

Torque Member

Check the torque member for wear, cracks, and damage. If damage or deformation is present, replace the torque member.

Piston

Check the piston for score, rust, wear, damage or presence of foreign materials. Replace if any of the above conditions are observed.

CAUTION:

Piston sliding surface is plated, do not polish with emery paper even if rust or foreign materials are stuck to sliding surface.

Sliding Pin Bolts and Sliding Pin Boots

Check the sliding pins and sliding pin boots for wear, damage, and cracks. If damage or deformation is present, replace the affected part.

ASSEMBLY

CAUTION:

Use NISSAN Rubber Grease when assembling.

- Install the bleed valve and cap.

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P


REAR DISC BRAKE

< UNIT DISASSEMBLY AND ASSEMBLY >

2. Apply rubber grease to the new piston seal (1) and insert the new piston seal (1) into the groove on the cylinder body.

CAUTION:


Do not reuse piston seal.

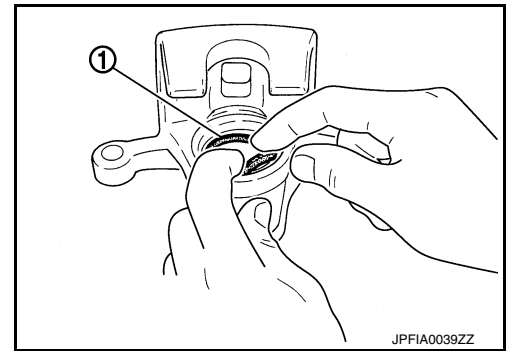

3. Apply rubber grease to the new piston boot (1). Cover the piston end (2) with the piston boot (1), and then install the cylinder side lip on the piston boot (1) securely into the groove on the cylinder body.

CAUTION:


- Do not reuse piston boot.
- Press pistons in evenly and vary the pressing points to prevent the cylinder inner wall from being damaged.

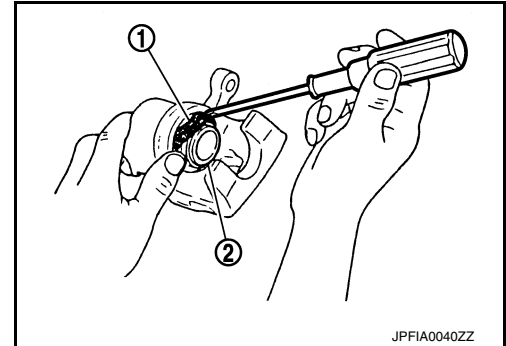

4. Install the piston (1) into the cylinder body and insert the piston boot (2) side lip into the piston groove as shown.

CAUTION:

Press pistons in evenly and vary the pressing points to prevent the cylinder inner wall from being damaged.

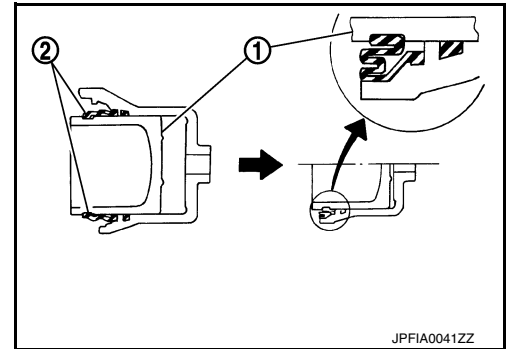

5. Apply rubber grease to the sliding pin boots, then install sliding pins and sliding pin boots on the torque member.
6. Install the caliper body on the torque member. Refer to [BR-44, "Removal and Installation of Brake Caliper and Disc Rotor"](#).

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specification

INFOID:0000000012565345


Unit: mm (in)

Engine Type		QR25DE	VQ40DE
Front brake	Brake model	CLZ33VA	
	Rotor outer diameter × thickness	283 × 28 (11.142 × 1.102)	296 × 28 (11.654 × 1.102)
	Pad Length × width × thickness	140 × 50.5 × 10 (5.51 × 1.99 × 0.39)	
	Cylinder bore diameter (each)	46.4 (1.83)	
Rear brake	Brake model	CLZ14VA	
	Rotor outer diameter × thickness	286 × 18 (11.260 × 0.709)	
	Pad length × width × thickness	87.6 × 35.5 × 11.0 (3.449 × 1.398 × 0.433)	
	Cylinder bore diameter	38.1 (1.50)	
Control valve	Valve model	Electric brake force distribution	
Brake booster	Booster model	C215T	
	Diaphragm diameter	215 (8.465)	
Recommended brake fluid		Refer to MA-18. "FOR USA AND CANADA : Fluids and Lubricants" (United States and Canada) and MA-21. "FOR MEXICO : Fluids and Lubricants" (Mexico).	

Brake Pedal

INFOID:0000000012565346

Unit: mm (in)

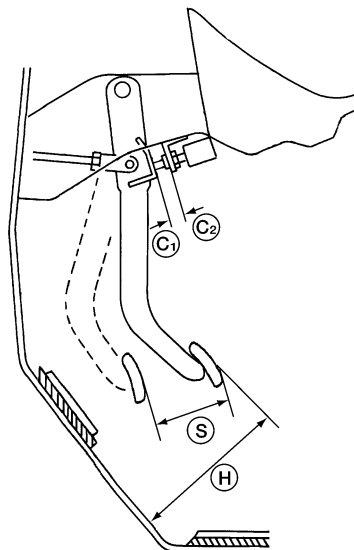

AWFIA0557ZZ

Pedal free height (H)	M/T	174.7 +10/-0 (6.88 +0.39/-0)
	A/T	182.1 +10/-0 (7.17 +0.39/-0)
Pedal full stroke (S)		153 (6.02)
Clearance between pedal stopper(C1) and threaded end of stop lamp switch and brake pedal position switch (C2) (if equipped)		0.74 - 1.96 (0.029 - 0.077)


SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

Brake Booster

INFOID:0000000012565347

Unit: mm (in)

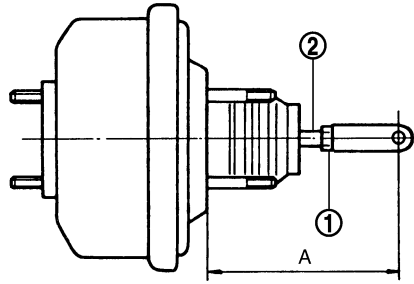

JPFIA0238ZZ

Input rod (2) with lock nut (1) length (A) standard dimension (without spacer block)	211 ± 0.5 (8.31 ± 0.02)
--	-------------------------

Check Valve

INFOID:0000000012565348

Vacuum leakage [at vacuum of -66.7 kPa (-500 mmHg, -19.69 inHg)]	Within 1.3 kPa (10 mmHg, 0.39 inHg) of vacuum for 15 seconds
---	--

Front Disc Brake

INFOID:0000000012565349

Unit: mm (in)

Engine type	QR25DE / VQ40DE	
Brake model	CLZ33VA	
Brake pad	Standard thickness (new)	10.0 (0.394)
	Minimum thickness	2.0 (0.079)
Disc rotor	Standard thickness (new)	28.0 (1.102)
	Minimum thickness	26.0 (1.024)
	Maximum uneven wear (measured at 8 positions)*	0.015 (0.0006)
	Runout limit (with it attached to the vehicle)	0.05 (0.0020)

*To check if rotor imbalance, rotor runout or rotor deformation exists.

Rear Disc Brake

INFOID:0000000012565350

Unit: mm (in)

Engine type	QR25DE / VQ40DE	
Brake model	CLZ14VA	
Brake pad	Standard thickness (new)	11.0 (0.433)
	Minimum thickness	2.0 (0.079)
Disc rotor	Standard thickness (new)	18.0 (0.709)
	Minimum thickness	16.0 (0.630)
	Maximum uneven wear (measured at 8 positions)*	0.015 (0.0006)
	Runout limit (with it attached to the vehicle)	0.05 (0.0020)

*To check if rotor imbalance, rotor runout or rotor deformation exists.