
ALPHABETICAL INDEX

Numerics

1ST POSITION SWITCH TM-227

Numerics

4WD BRANCH LINE CIRCUIT LAN-80
4WD SHIFT INDICATOR LAMP AND 4LO
INDICATOR LAMP DO NOT TURN ON DLN-74
4WD SHIFT INDICATOR LAMP KEEPS FLASHING
DLN-78
4WD SHIFT INDICATOR LAMP OR 4LO
INDICATOR LAMP DO NOT CHANGE DLN-75
4WD SYSTEM DLN-10
4WD SYSTEM SYMPTOMS DLN-72
4WD WARNING LAMP DOES NOT TURN ON
DLN-73
4WD WARNING LAMP FLASHES SLOWLY DLN-79

A

A-BAG BRANCH LINE CIRCUIT LAN-81
A/T CONTROL SYSTEM TM-133, TM-234
A/T FLUID TM-270
A/T FLUID COOLER TM-304
A/T SHIFT LOCK SYSTEM TM-155, TM-223,
TM-241
ABBREVIATIONS GI-13
ABS BRC-22, BRC-170
ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT) BRC-114, BRC-265
ABS BRANCH LINE CIRCUIT LAN-87
ABS FUNCTION DOES NOT OPERATE BRC-134,
BRC-284
ABS WARNING LAMP BRC-108, BRC-258
ACCELERATOR CONTROL SYSTEM ACC-3
ACTUATOR AND ELECTRIC UNIT (ASSEMBLY) .
BRC-144, BRC-294
ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE & TCM TM-132
ADDITIONAL SERVICE WHEN REPLACING
TRANSMISSION ASSEMBLY TM-131
AIR BREATHER HOSE DLN-99, TM-19, TM-71,
TM-301
AIR CLEANER AND AIR DUCT EM-25, EM-142
AIR CLEANER FILTER EM-17, EM-132
AIR CONDITIONER CONTROL . HAC-61, HAC-63,
HAC-72, HAC-131, HAC-133, HAC-142,
HAC-198, HAC-200, HAC-212
AIR CONDITIONING CUT CONTROL EC-37,
EC-502, EC-1005
AIR MIX DOOR MOTOR HAC-25, HAC-107,
HAC-176, VTL-22
AMBIENT SENSOR HA-35, HAC-48
AMP ON SIGNAL CIRCUIT AV-231

APPLICATION NOTICE . BRC-7, BRC-14, BRC-33,
BRC-113, BRC-129, BRC-149, BRC-156,
BRC-181, BRC-264, BRC-279
ASCD BRAKE SWITCH EC-938, EC-1361
ASCD INDICATOR EC-447, EC-945, EC-1365
ASSEMBLY TM-364
ATP SWITCH DLN-80
ATP WARNING LAMP DOES NOT TURN ON
DLN-77
AUDIO AMP AV-170
AUDIO AMP AV-258
AUDIO ANTENNA. AV-59, AV-90, AV-151, AV-266,
AV-359
AUDIO SYSTEM AV-10, AV-43, AV-63, AV-80,
AV-137
AUDIO UNIT AV-27, AV-51, AV-72, AV-86, AV-101,
AV-145
AUTO LIGHT SYSTEM EXL-15, EXL-86
AUTO OPERATION DOES NOT OPERATE. RF-39
AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATES NORMALLY (DRIVER
SIDE) PWC-68
AUTOMATIC AIR CONDITIONER SYSTEM HAC-13
AUTOMATIC DOOR LOCKS DLK-8
AUTOMATIC SPEED CONTROL DEVICE (ASCD)
CCS-3, EC-38, EC-503, EC-1006
AUXILIARY INPUT JACK AV-136, AV-155, AV-239,
AV-268, AV-336, AV-361
AV BRANCH LINE CIRCUIT LAN-78
AV CONTROL UNIT AV-166, AV-257, AV-282,
AV-353
AXLE BEARING RAX-12, RAX-23
AXLE OIL SEAL RAX-13, RAX-24
AXLE SHAFT RAX-7, RAX-19

B

B TERMINAL CIRCUIT CHG-13, STR-16
B0001, B0002 DRIVER AIRBAG MODULE SRC-19
B0010, B0011 PASSENGER AIRBAG MODULE
SRC-22
B0020 SIDE AIRBAG MODULE LH SRC-25
B0021 SIDE CURTAIN AIR BAG MODULE LH
SRC-28
B0028 SIDE AIRBAG MODULE RH SRC-31
B0029 SIDE CURTAIN AIR BAG MODULE RH
SRC-34
B0091 FRONT SIDE AIR BAG SATELLITE
SENSOR LH SRC-37
B0093 FRONT DOOR SATELLITE SENSOR LH ...
SRC-40
B0094 CRASH ZONE SENSOR SRC-43
B0096 FRONT SIDE AIR BAG SATELLITE
SENSOR RH SRC-46

B0098 FRONT DOOR SATELLITE SENSOR RH...
[SRC-49](#)
 B00A0 OCCUPANT CLASSIFICATION SYSTEM
 CONTROL UNIT [SRC-52](#)
 B00D2 FRONT PASSENGER AIR BAG ON
 INDICATOR [SRC-57](#)
 B00D5 PASSENGER AIR BAG OFF INDICATOR ..
[SRC-60](#)
 B1400, B1401, B1402, B1403, B1404, B1405 AIR
 BAG DIAGNOSIS SENSOR UNIT [SRC-63](#)
 B1406, B1407, B1408, B1409, B1410 AIR BAG
 DIAGNOSIS SENSOR UNIT [SRC-65](#)
 B1411, B1412, B1413, B1414, B1415 AIR BAG
 DIAGNOSIS SENSOR UNIT [SRC-67](#)
 B1416, B1417, B1418, B1419, B1420 AIR BAG
 DIAGNOSIS SENSOR UNIT [SRC-69](#)
 B1428 SEAT BELT BUCKLE SWITCH LH . [SRC-76](#)
 B1429 SEAT BELT BUCKLE SWITCH RH. [SRC-79](#)
 B142A IGNITION VOLTAGE [SRC-71](#)
 B142B IGNITION VOLTAGE [SRC-73](#)
 B142X COLLISION DETECTION [SRC-75](#)
 B1430 SEAT BELT PRE-TENSIONER [SRC-82](#)
 B1431 SEAT BELT PRE-TENSIONER [SRC-85](#)
 B1500 DOOR SATELLITE SENSOR [SRC-88](#)
 B2190, P1614 NATS ANTENNA AMP. [SEC-18](#)
 B2191, P1615 DIFFERENCE OF KEY [SEC-21](#)
 B2192, P1611 ID DISCORD, IMMU-ECM .. [SEC-22](#)
 B2193, P1612 CHAIN OF ECM-IMMU [SEC-24](#)
 BACK-UP LAMP [EXL-115](#)
 BASE AUDIO SYSTEM [AV-32](#), [AV-74](#)
 BATTERY [PG-80](#), [PG-89](#)
 BATTERY SAVER OUTPUT/POWER SUPPLY
 CIRCUIT [INL-16](#)
 BATTERY TERMINAL WITH FUSIBLE LINK [PG-90](#)
 BCM (BODY CONTROL MODULE) [BCS-38](#),
[BCS-49](#), [BCS-56](#), [DEF-18](#), [DLK-64](#), [EXL-57](#),
[INL-26](#), [INL-84](#), [MWI-42](#), [PWC-38](#), [RF-21](#),
[SEC-34](#), [WCS-27](#), [WT-24](#), [WW-25](#)
 BCM BRANCH LINE CIRCUIT [LAN-82](#)
 BED RAILS AND TRIM [EXT-36](#)
 BLOWER MOTOR [HAC-115](#), [HAC-182](#), [VTL-11](#)
 BLOWER MOTOR CONTROL SYSTEM ... [HAC-36](#)
 BLOWER MOTOR RESISTOR [VTL-13](#)
 BLUETOOTH CONTROL UNIT [AV-56](#)
 BLUETOOTH® CONTROL UNIT [AV-30](#)
 BODY ALIGNMENT [BRM-25](#)
 BODY COMPONENT PARTS [BRM-9](#)
 BODY CONSTRUCTION [BRM-23](#)
 BODY CONTROL SYSTEM [BCS-8](#)
 BODY EXTERIOR PAINT COLOR [BRM-2](#)
 BODY SIDE TRIM [INT-18](#)
 BOTH SIDE FRONT FOG LAMPS ARE NOT
 TURNED ON [EXL-135](#)
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ON [EXL-133](#)

BOTH SIDE HEADLAMPS DO NOT SWITCH TO
 HIGH BEAM [EXL-131](#)
 BRAKE BOOSTER [BR-9](#), [BR-34](#)
 BRAKE CONTROL SYSTEM - VDC [BRC-120](#),
[BRC-271](#)
 BRAKE FLUID [BR-18](#)
 BRAKE MASTER CYLINDER [BR-11](#), [BR-32](#), [BR-47](#)
 BRAKE PEDAL [BR-16](#), [BR-24](#)
 BRAKE PEDAL POSITION SWITCH [EC-443](#)
 BRAKE SIGNAL CIRCUIT [TM-222](#)
 BRAKE TUBE AND HOSE [BR-12](#), [BR-26](#)
 BRAKE WARNING LAMP [BRC-109](#), [BRC-259](#)
 BULB SPECIFICATIONS [INL-67](#), [INL-121](#)
 BUZZER [SN-27](#)

C

C1101, C1102, C1103, C1104 WHEEL SENSOR ...
[BRC-34](#), [BRC-182](#)
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...
[BRC-39](#), [BRC-187](#)
 C1109 POWER AND GROUND SYSTEM [BRC-46](#),
[BRC-194](#)
 C1110 CONTROL FAILURE [BRC-48](#), [BRC-196](#)
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM
[BRC-50](#), [BRC-198](#)
 C1113, C1145, C1146 YAW RATE/SIDE/DECEL G
 SENSOR [BRC-53](#), [BRC-201](#)
 C1115 WHEEL SENSOR [BRC-57](#), [BRC-205](#)
 C1116 STOP LAMP SWITCH [BRC-64](#), [BRC-212](#)
 C1120, C1122, C1124, C1126 ABS IN VALVE
 SYSTEM [BRC-69](#), [BRC-217](#)
 C1121, C1123, C1125, C1127 ABS OUT VALVE
 SYSTEM [BRC-71](#), [BRC-219](#)
 C1130, C1131, C1132, C1133, C1136 ENGINE
 SIGNAL [BRC-73](#), [BRC-221](#)
 C1140 ACTUATOR RELAY SYSTEM [BRC-75](#),
[BRC-223](#)
 C1142 PRESS SENSOR [BRC-77](#), [BRC-225](#)
 C1143 STEERING ANGLE SENSOR [BRC-80](#),
[BRC-228](#)
 C1144 INCOMPLETE STEERING ANGLE SENSOR
 ADJUSTMENT [BRC-84](#), [BRC-232](#)
 C1155 BRAKE FLUID LEVEL SWITCH [BRC-86](#),
[BRC-234](#)
 C1156 STEERING ANGLE SENSOR (CAN)
[BRC-90](#), [BRC-238](#)
 C1160 INCOMPLETE DECEL G SENSOR
 CALIBRATION [BRC-92](#), [BRC-240](#)
 C1163 ST ANGLE SEN SAFE ... [BRC-94](#), [BRC-242](#)
 C1164, C1165 CV SYSTEM [BRC-95](#), [BRC-243](#)
 C1166, C1167 SV SYSTEM [BRC-97](#), [BRC-245](#)
 C1170 VARIANT CODING [BRC-99](#), [BRC-247](#)
 C1187 DIFFERENTIAL LOCK CONTROL UNIT
[BRC-100](#), [BRC-248](#)
 C1203 ABS SYSTEM [DLN-293](#)

C1708 - C1711 DATA FROM TRANSMITTER NOT BEING RECEIVED WT-15

C1712 - C1715, C1720 - C1723, C1724 - C1727 TRANSMITTER MALFUNCTION WT-17

C1716 - C1719 TRANSMITTER PRESSURE MALFUNCTION WT-19

C1729 VEHICLE SPEED SIGNAL WT-21

C1735 IGNITION SIGNAL WT-22

CAMSHAFT EM-55, EM-195

CAMSHAFT VALVE CLEARANCE EM-20, EM-135

CAN COMMUNICATION. EC-40, EC-505, EC-1008

CAN COMMUNICATION CIRCUIT LAN-89

CAN COMMUNICATION SYSTEM LAN-4, LAN-53, LAN-68

CAN SYSTEM LAN-61

CARGO LAMP CONTROL CIRCUIT INL-20, INL-80

CARRIER COVER .. DLN-190, DLN-223, DLN-254, DLN-318

CASE COMPONENTS TM-30, TM-83

CENTER CONSOLE IP-26

CENTER CONSOLE ASSEMBLY IP-29

CHARGING SYSTEM CHG-8, CHG-18, CHG-25

CHARGING SYSTEM PRELIMINARY INSPECTION CHG-10

CHASSIS AND BODY MAINTENANCE MA-43

CLOSED THROTTLE POSITION AND WIDE OPEN THROTTLE POSITION CIRCUIT TM-221

CLUSTER LID A IP-17

CLUSTER LID C IP-19

CLUSTER LID D IP-21

CLUTCH DISC, CLUTCH COVER CL-19

CLUTCH FLUID CL-8

CLUTCH MASTER CYLINDER CL-10

CLUTCH PEDAL CL-7, CL-9

CLUTCH PIPING CL-13

CLUTCH RELEASE MECHANISM CL-14

CLUTCH RESERVOIR CL-11

COIL SPRING AND SHOCK ABSORBER. FSU-14, FSU-23

COLLISION DIAGNOSIS SR-4

COMBINATION METER MWI-39, MWI-91, WCS-24

COMBINATION SWITCH INPUT CIRCUIT. BCS-35

COMBINATION SWITCH OUTPUT CIRCUIT BCS-36

COMBINATION SWITCH READING SYSTEM BCS-10, EXL-25

COMBINATION SWITCH SYSTEM SYMPTOMS... BCS-53

COMPASS MWI-23, MWI-60

COMPRESSION PRESSURE EM-23, EM-139

COMPRESSOR HA-25

CONDENSER HA-34

CONTROL UNIT VTL-7

CONTROL VALVE WITH TCM TM-289

COOLING FAN CO-19, EC-946, EC-1366

COOLING FAN CONTROL EC-506, EC-1009

COOLING SYSTEM CO-7, CO-35

CORROSION PROTECTION BRM-17

COWL TOP EXT-24

CRASH ZONE SENSOR SR-20

CYLINDER HEAD EM-68, EM-208

D

DAYTIME LIGHT RELAY CIRCUIT EXL-46

DAYTIME LIGHT SYSTEM EXL-12, EXL-79

DAYTIME LIGHT SYSTEM INOPERATIVE EXL-132

DIAG ON CAN LAN-6

DIAGNOSIS AND REPAIR WORK FLOW .. BRC-8, BRC-150, EC-114, SRC-3

DIAGNOSIS SENSOR UNIT SR-22, SRC-90

DIAGNOSIS SYSTEM (AUDIO UNIT) AV-96

DIAGNOSIS SYSTEM (AV CONTROL UNIT) AV-163, AV-279

DIAGNOSIS SYSTEM (BCM) BCS-19, DEF-6, DLK-20, EXL-29, HAC-18, HAC-99, HAC-169, INL-11, INL-76, PWC-8, RF-8, SEC-14, WCS-15, WT-12, WW-8

DIAGNOSIS SYSTEM (DIFFERENTIAL LOCK CONTROL UNIT) DLN-273

DIAGNOSIS SYSTEM (ECM) EC-48, EC-518, EC-1020

DIAGNOSIS SYSTEM (HVAC) HAC-17

DIAGNOSIS SYSTEM (IPDM E/R) EXL-32, PCS-9, WW-10

DIAGNOSIS SYSTEM (METER). MWI-25, WCS-11

DIAGNOSIS SYSTEM (TCM) TM-158

DIAGNOSIS SYSTEM (TRANSFER CONTROL UNIT) DLN-17

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)] .. BRC-28, BRC-176

DIFF BRANCH LINE CIRCUIT LAN-83

DIFF LOCK INDICATOR LAMP DOES NOT TURN ON WITH DIFFERENTIAL LOCK SWITCHED ON DLN-304

DIFF LOCK INDICATOR LAMP FLASHES WHILE DRIVING DLN-305

DIFF LOCK INDICATOR LAMP INOPERATIVE DLN-303

DIFFERENTIAL GEAR OIL DLN-186, DLN-220, DLN-251, DLN-310

DIFFERENTIAL LOCK CONTROL UNIT .DLN-296, DLN-311

DIFFERENTIAL LOCK POSITION SWITCH DLN-312

DIFFERENTIAL LOCK SYSTEM DLN-269

DIRECT CLUTCH TM-361

DISASSEMBLY TM-325

DISPLAY AUDIO AV-104

DLC BRANCH LINE CIRCUIT LAN-84

DOES NOT STOP FULLY-OPEN OR FULLY-CLOSED POSITION RF-40

DOOR.....	DLK-132
DOOR FINISHER.....	INT-15
DOOR LOCK.....	DLK-116
DOOR LOCK ACTUATOR.....	DLK-43
DOOR LOCK AND UNLOCK SWITCH.....	DLK-32
DOOR LOCK FUNCTION.....	DLK-12
DOOR MIRROR.....	MIR-2, MIR-24, MIR-26
DOOR MIRROR DEFOGGER DOES NOT OPERATE.....	DEF-36
DOOR MIRROR DEFOGGER LH.....	DEF-14
DOOR MIRROR DEFOGGER RH.....	DEF-16
DOOR MIRROR REMOTE CONTROL SWITCH....	MIR-14
DOOR OUTSIDE MOLDING.....	EXT-33
DOOR SWITCH.....	DLK-27, PWC-31, RF-16
DRIVE BELTS.....	EM-14, EM-130
DRIVE SHAFT.....	FAX-6, FAX-10
DRIVER AIR BAG MODULE.....	SR-11
DRIVER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.....	DEF-37
DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE.....	PWC-64
DTC B2205 VEHICLE SPEED CIRCUIT....	MWI-30
DTC U1000 CAN COMMUNICATION.....	MWI-29
DUCTS AND GRILLES.....	VTL-25

E

EBD.....	BRC-25, BRC-173
ECM BRANCH LINE CIRCUIT.....	LAN-76
ELECTRIC IGNITION SYSTEM....	EC-36, EC-501, EC-1004
ELECTRICAL LEAK DETECTOR.....	HA-20
ELECTRICAL LOAD SIGNAL.....	EC-448, EC-948, EC-1368
ELECTRICAL UNITS LOCATION.....	PG-5
ENGINE ASSEMBLY.....	EM-78, EM-219
ENGINE CONTROL SYSTEM.....	EC-26, EC-96, EC-489, EC-569, EC-993, EC-1066
ENGINE CONTROL SYSTEM SYMPTOM.....	SEC-471, EC-976, EC-1397
ENGINE COOLANT.....	CO-11, CO-39
ENGINE COOLING FAN.....	CO-47
ENGINE MAINTENANCE (QR25DE ENGINE).....	MA-24
ENGINE MAINTENANCE (VQ40DE).....	MA-33
ENGINE OIL.....	LU-9, LU-22
ENGINE ROOM COVER.....	EM-141
ENGINE UNIT.....	EM-81, EM-222
EVAP CANISTER.....	FL-15
EVAP LEAK CHECK.....	EC-479, EC-983, EC-1404
EVAPORATIVE EMISSION SYSTEM.....	EC-41, EC-507, EC-1010
EVAPORATOR.....	VTL-16
EXCESSIVE ABS FUNCTION OPERATION FREQUENCY.....	BRC-131, BRC-281

EXHAUST MANIFOLD AND THREE WAY CATALYST.....	EM-31, EM-148
EXHAUST SYSTEM.....	EX-4, EX-5
EXPANSION VALVE.....	HA-37, VTL-18
EXTERIOR LIGHTING SYSTEM SYMPTOMS.....	EXL-128

F

FENDER PROTECTOR.....	EXT-26
FILAMENT.....	DEF-41
FLOOR TRIM.....	INT-23
FLUORESCENT LEAK DETECTOR.....	HA-18
FRONT BUMPER.....	EXT-15
FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR.....	TM-349
FRONT COMBINATION LAMP.....	EXL-149
FRONT DISC BRAKE.....	BR-7, BR-20, BR-37, BR-49
FRONT DOOR GLASS AND REGULATOR.....	GW-16
FRONT DOOR LOCK.....	DLK-137
FRONT DOOR SPEAKER....	AV-17, AV-53, AV-66, AV-88, AV-123, AV-147, AV-216, AV-260, AV-323, AV-355
FRONT DRIVE SHAFT.....	DLN-124
FRONT FENDER.....	EXT-25
FRONT FINAL DRIVE.....	DLN-193
FRONT FINAL DRIVE ASSEMBLY.....	DLN-191
FRONT FOG LAMP.....	EXL-18, EXL-94, EXL-138, EXL-142
FRONT FOG LAMP CIRCUIT.....	EXL-48
FRONT GRILLE.....	EXT-23
FRONT OIL SEAL....	DLN-93, DLN-187, DLN-221, DLN-252, DLN-316
FRONT PASSENGER AIR BAG MODULE ..	SR-15
FRONT PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE.....	PWC-65
FRONT POWER WINDOW SWITCH.....	PWC-75
FRONT SEAT.....	SE-27, SE-39
FRONT SEAT BELT.....	SB-6
FRONT SEAT BELT PRE-TENSIONER.....	SR-21
FRONT SUN GEAR, 3RD ONE-WAY CLUTCH.....	TM-347
FRONT SUSPENSION ASSEMBLY.....	FSU-13
FRONT TIMING CHAIN CASE.....	EM-170
FRONT TWEETER....	AV-19, AV-52, AV-68, AV-87, AV-125, AV-146, AV-219, AV-259, AV-325, AV-354
FRONT WASHER NOZZLE.....	WW-57
FRONT WASHER TUBE.....	WW-56
FRONT WIPER AND WASHER SYSTEM....	WW-4, WW-43
FRONT WIPER ARM.....	WW-54
FRONT WIPER AUTO STOP SIGNAL CIRCUIT....	WW-19
FRONT WIPER DOES NOT OPERATE.....	WW-51
FRONT WIPER DRIVE ASSEMBLY.....	WW-55

FRONT WIPER MOTOR GROUND CIRCUIT
[WW-21](#)
 FRONT WIPER MOTOR HI CIRCUIT [WW-17](#)
 FRONT WIPER MOTOR LO CIRCUIT [WW-15](#)
 FUEL FILLER CAP WARNING SYSTEM [EC-45](#),
[EC-511](#), [EC-1014](#)
 FUEL INJECTOR [EC-449](#), [EC-950](#), [EC-1370](#)
 FUEL INJECTOR AND FUEL TUBE [EM-40](#), [EM-164](#)
 FUEL LEVEL SENSOR SIGNAL CIRCUIT .[MWI-34](#)
 FUEL LEVEL SENSOR UNIT, FUEL FILTER AND
 FUEL PUMP ASSEMBLY [FL-11](#), [FL-17](#)
 FUEL PRESSURE [EC-476](#), [EC-981](#), [EC-1402](#)
 FUEL PUMP [EC-452](#), [EC-954](#), [EC-1374](#)
 FUEL SYSTEM [FL-5](#)
 FUEL TANK [FL-6](#)
 FUNCTION INFORMATION [HAC-8](#), [HAC-92](#),
[HAC-162](#)
 FUSE AND RELAY BOX [PG-78](#)
 FUSE BLOCK - JUNCTION BOX (J/B) [PG-76](#)
 FUSE INSPECTION [PG-84](#)
 FUSE, FUSIBLE LINK AND RELAY BOX [PG-77](#)
 FUSIBLE LINK INSPECTION [PG-88](#)

G

GEAR COMPONENTS [TM-37](#), [TM-102](#)
 GENERAL MAINTENANCE [MA-7](#)
 GENERATOR [CHG-28](#)
 GPS ANTENNA [AV-270](#), [AV-363](#)
 GROUND [PG-32](#)

H

HANDLING PRECAUTIONS [BRM-6](#)
 HARNESS [PG-44](#)
 HAZARD FUNCTION [DLK-56](#)
 HAZARD SWITCH [EXL-147](#)
 HAZARD WARNING LAMPS FLASH [WT-42](#)
 HEADLAMP .. [EXL-10](#), [EXL-75](#), [EXL-136](#), [EXL-140](#)
 HEADLAMP (HI) CIRCUIT [EXL-39](#)
 HEADLAMP (LO) CIRCUIT [EXL-42](#)
 HEADLAMP FUNCTION [DLK-57](#)
 HEADLINING [INT-25](#)
 HEATED SEAT [SE-8](#), [SE-16](#)
 HEATER & COOLING UNIT ASSEMBLY ... [VTL-14](#)
 HEATER CORE [VTL-19](#)
 HIGH AND LOW REVERSE CLUTCH [TM-359](#)
 HIGH-PRESSURE FLEXIBLE HOSE [HA-30](#)
 HIGH-PRESSURE PIPE [HA-31](#)
 HILL DESCENT CONTROL SWITCH [BRC-299](#)
 HOMELINK UNIVERSAL TRANSCEIVER [DLK-19](#),
[DLK-62](#)
 HOOD [DLK-128](#)
 HORN [HRN-3](#), [HRN-5](#)
 HORN FUNCTION [DLK-53](#), [SEC-31](#)
 HOW TO ERASE PERMANENT DTC [EC-135](#),
[EC-614](#)

HOW TO FOLLOW TROUBLE DIAGNOSES .. [GI-6](#)
 HOW TO READ WIRING DIAGRAMS [GI-9](#)
 HOW TO SELECT PISTON AND BEARING [EM-102](#),
[EM-246](#)
 HOW TO SET SRT CODE [EC-129](#), [EC-608](#),
[EC-1101](#)
 HOW TO USE THIS MANUAL [GI-3](#)
 HOW TO USE THIS SECTION [LAN-36](#)
 HVAC BRANCH LINE CIRCUIT [LAN-79](#)
 HYDRAULIC LINE [ST-22](#)
 Hill descent control [BRC-157](#)
 Hill descent control INDICATOR LAMP ... [BRC-260](#)
 Hill descent control SWITCH [BRC-254](#)
 Hill start assist [BRC-161](#)

I

ID REGISTRATION CANNOT BE COMPLETED....
[WT-43](#)
 ID REGISTRATION PROCEDURE [WT-6](#)
 IDENTIFICATION INFORMATION [GI-22](#)
 IGNITION COIL [EM-37](#), [EM-159](#)
 IGNITION KEYHOLE ILLUMINATION CONTROL
 CIRCUIT [INL-24](#)
 IGNITION SIGNAL [EC-456](#), [EC-957](#), [EC-1378](#)
 ILLUMINATION .. [INL-50](#), [INL-66](#), [INL-104](#), [INL-120](#)
 ILLUMINATION CONTROL SYSTEM [INL-9](#), [INL-74](#)
 IN-CABIN MICROFILTER [VTL-5](#), [VTL-6](#)
 IN-VEHICLE SENSOR [HAC-51](#), [VTL-8](#)
 INSIDE MIRROR [MIR-8](#), [MIR-23](#)
 INSPECTIONS BEFORE TROUBLE DIAGNOSIS .
[TM-276](#)
 INSTRUMENT LOWER PANEL LH [IP-18](#)
 INSTRUMENT LOWER PANEL RH AND GLOVE
 BOX [IP-24](#), [IP-27](#)
 INSTRUMENT PANEL ASSEMBLY [IP-14](#)
 INSUFFICIENT COOLING [HAC-73](#), [HAC-143](#),
[HAC-213](#)
 INSUFFICIENT HEATING [HAC-81](#), [HAC-151](#),
[HAC-221](#)
 INTAKE DOOR MOTOR [HAC-33](#), [HAC-112](#),
[HAC-180](#), [VTL-20](#)
 INTAKE MANIFOLD [EM-27](#), [EM-146](#)
 INTAKE MANIFOLD COLLECTOR [EM-143](#)
 INTAKE SENSOR [HAC-56](#), [HAC-125](#), [HAC-192](#),
[VTL-10](#)
 INTAKE VALVE TIMING CONTROL [EC-44](#), [EC-510](#),
[EC-1013](#), [EM-45](#), [EM-169](#)
 INTEGRATED HOMELINK TRANSMITTER [DLK-75](#)
 INTERIOR LIGHTING SYSTEM SYMPTOMS
[INL-60](#), [INL-114](#)
 INTERIOR ROOM LAMP ... [INL-37](#), [INL-63](#), [INL-71](#),
[INL-78](#), [INL-95](#), [INL-117](#)
 INTERIOR ROOM LAMP CONTROL CIRCUIT
[INL-18](#)
 INTERIOR ROOM LAMP CONTROL SYSTEM [INL-6](#)
 INTERMITTENT INCIDENT [SRC-5](#)

IPDM E/R (INTELLIGENT POWER DISTRIBUTION
MODULE ENGINE ROOM)... EXL-68, MWI-53,
PCS-15, PCS-22, PCS-28, PG-79, SEC-45,
WW-36
IPDM-E BRANCH LINE CIRCUITLAN-88

K

KEY CYLINDER SWITCH DLK-39, SEC-28
KEY INTERLOCK CABLE TM-298
KEY SWITCH (BCM INPUT)DLK-42
KEY SWITCH SIGNAL CIRCUIT WCS-22
KEYFOB BATTERY AND FUNCTION.....DLK-51
KEYFOB ID SET UP WITH CONSULTDLK-59
KEYFOB ID SET UP WITHOUT CONSULT DLK-60
KNUCKLE FSU-12, FSU-20

L

L TERMINAL CIRCUIT (OPEN)CHG-14
L TERMINAL CIRCUIT (SHORT).....CHG-16
LATCH (LOWER ANCHORS AND TETHER FOR
CHILDREN) SYSTEMSB-13
LEAF SPRING RSU-9
LICENSE PLATE LAMP EXL-144
LIFTING POINT GI-34
LIGHTING & TURN SIGNAL SWITCHEXL-146
LOCK INDICATOR LAMP..... DLN-294
LOW TIRE PRESSURE WARNING LAMP BLINKS
WT-41
LOW TIRE PRESSURE WARNING LAMP DOES
NOT TURN ON WT-39
LOW TIRE PRESSURE WARNING LAMP STAYS
ON WT-40
LOW-PRESSURE FLEXIBLE HOSE.....HA-32
LOW-PRESSURE PIPEHA-33
LOWER LINK FSU-18
LUBRICATION SYSTEM..... LU-7, LU-21

M

M&A BRANCH LINE CIRCUITLAN-85
M/T OIL..... TM-14, TM-65
MAGNET CLUTCH... HAC-43, HAC-121, HAC-188
MAIN LINE BETWEEN DLC AND ABS CIRCUIT ...
LAN-75
MAIN LINE BETWEEN HVAC AND DLC CIRCUIT .
LAN-74
MAIN LINE BETWEEN TCM AND DLC CIRCUIT...
LAN-72
MAIN LINE BETWEEN TCM AND HVAC CIRCUIT
LAN-70
MAIN POWER SUPPLY AND GROUND CIRCUIT .
TM-219
MALFUNCTION AREA CHART.....LAN-69

MANUAL A/C IDENTIFICATION TABLE ...HAC-88,
HAC-91, HAC-102, HAC-130, HAC-141,
HAC-157, HAC-161, HAC-171, HAC-197,
HAC-211

MANUAL AIR CONDITIONER SYSTEM...HAC-95,
HAC-165

MAP LAMP AND IGNITION KEYHOLE
ILLUMINATION FUNCTION DLK-58

MEMORY FUNCTION DOES NOT OPERATE
HAC-85

METER MWI-66

METER BUZZER CIRCUIT WCS-19

METER SYSTEM MWI-5

MICROPHONEAV-58, AV-150, AV-265, AV-358

MICROPHONE SIGNAL CIRCUIT . AV-25, AV-133,
AV-236, AV-333

MID SUN GEAR, REAR SUN GEAR, HIGH AND
LOW REVERSE CLUTCH HUB TM-354

MIXTURE RATIO SELF-LEARNING VALUE CLEAR
EC-607

MODE DOOR MOTOR HAC-21, HAC-103,
HAC-172, VTL-21

MUDGUARD..... EXT-29

MULTI AV SYSTEM AV-240, AV-337

MULTIPOINT FUEL INJECTION SYSTEM .. EC-33,
EC-498, EC-1001

N

NATS ANTENNA AMP SEC-79

NAVIGATION WITH AMPLIFIER AV-173

NAVIGATION WITHOUT AMPLIFIER AV-286

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS
SYMPTOMS SEC-77

NOISE..... HAC-83, HAC-153, HAC-223

NOISE, VIBRATION AND HARSHNESS (NVH)
TROUBLESHOOTINGCL-3, DLN-20, DLN-150,
DLN-161, DLN-172, DLN-184, DLN-218,
DLN-250, DLN-274, EM-12, EM-128, FSU-5,
RAX-5, RAX-17, ST-5, TM-12, TM-62

NONE OF THE POWER WINDOWS CAN BE
OPERATED USING ANY SWITCH PWC-63

NORMAL OPERATING CONDITION AV-46, AV-82,
AV-140, AV-245, AV-341, BCS-54, BRC-137,
BRC-287, EC-475, EC-980, EC-1401, EXL-130,
MWI-88, WW-50

NVIS SEC-72

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-
NATS) SEC-8

O

OCCUPANT CLASSIFICATION SYSTEM.. SRC-10

OCCUPANT CLASSIFICATION SYSTEM
CONTROL UNIT SR-24

OIL HA-16

OIL COOLER..... LU-14, LU-27

OIL FILTERLU-12, LU-25
OIL PANEM-34, TM-287
OIL PAN AND OIL STRAINER.....EM-153
OIL PRESSURE SWITCH SIGNAL CIRCUIT.....
MWI-37
OIL PUMP LU-30, LU-32, TM-344
OIL SEALEM-64, EM-205
ON BOARD DIAGNOSTIC (OBD) SYSTEM EC-47,
EC-517, EC-1019, SRC-13, TM-156
ON BOARD REFUELING VAPOR RECOVERY
(ORVR)EC-461, EC-962, EC-1383
ON-VEHICLE SERVICEFSU-6, RAX-6, RAX-18
OPERATING CYLINDER CL-12
OPTICAL SENSOR..... EXL-56, EXL-148, HAC-54,
VTL-9
OVERDRIVE CONTROL SWITCH TM-225
OVERHAUL TM-314
OVERHEATING CAUSE ANALYSIS..CO-9, CO-37

P

P0011 IVT CONTROL EC-155
P0011, P0021 IVT CONTROL EC-634, EC-1120
P0030, P0031, P0032 A/F SENSOR 1 HEATER....
EC-158
P0031, P0032, P0051, P0052 A/F SENSOR 1
HEATER..... EC-637, EC-1123
P0037, P0038 HO2S2 HEATER EC-161
P0037, P0038, P0057, P0058 HO2S2 HEATER
EC-640, EC-1126
P0075 IVT CONTROL SOLENOID VALVE . EC-164
P0075, P0081 IVT CONTROL SOLENOID VALVE.
EC-643, EC-1130
P0101 MAF SENSOR EC-167, EC-646
P0102, P0103 MAF SENSOR..... EC-171, EC-650,
EC-1133
P0111 IAT SENSOR EC-176, EC-654
P0112, P0113 IAT SENSOR EC-179, EC-657,
EC-1138
P0116 ECT SENSOR..... EC-182, EC-660
P0117, P0118 ECT SENSOR..... EC-185, EC-663,
EC-1141
P0122, P0123 TP SENSOR..... EC-188, EC-666,
EC-1145
P0125 ECT SENSOR EC-192, EC-670
P0127 IAT SENSOR EC-195, EC-673, EC-1149
P0128 THERMOSTAT FUNCTION EC-198, EC-676
P0130 A/F SENSOR 1 EC-201
P0130, P0150 A/F SENSOR 1.... EC-679, EC-1152
P0131 A/F SENSOR 1 EC-205
P0131, P0151 A/F SENSOR 1.... EC-683, EC-1156
P0132 A/F SENSOR 1 EC-208
P0132, P0152 A/F SENSOR 1.... EC-686, EC-1160
P0133, P0153 A/F SENSOR 1..... EC-1164
P0137 HO2S2 EC-211
P0137, P0157 HO2S2..... EC-689, EC-1170
P0138 HO2S2 EC-215

P0138, P0158 HO2S2 EC-694, EC-1176
P0139 HO2S2 EC-221
P0139, P0159 HO2S2..... EC-702, EC-1184
P014C, P014D, P014E, P014F, P015A, P015B,
P015C, P015D A/F SENSOR 1 EC-708
P014C, P014D, P015A, P015B, A/F SENSOR 1....
EC-227
P0171 FUEL INJECTION SYSTEM FUNCTION
EC-232
P0171, P0174 FUEL INJECTION SYSTEM
FUNCTION..... EC-714, EC-1190
P0172 FUEL INJECTION SYSTEM FUNCTION
EC-237
P0172, P0175 FUEL INJECTION SYSTEM
FUNCTION..... EC-720, EC-1196
P0181 FTT SENSOR EC-241, EC-726
P0182, P0183 FTT SENSOR..... EC-246, EC-731,
EC-1202
P0196 EOT SENSOR EC-734
P0197, P0198 EOT SENSOR EC-738
P0222, P0223 TP SENSOR..... EC-249, EC-740,
EC-1205
P0300, P0301, P0302, P0303, P0304 MISFIRE.....
EC-253
P0300, P0301, P0302, P0303, P0304, P0305,
P0306 MISFIRE EC-744, EC-1209
P0327, P0328 KS EC-259
P0327, P0328, P0332, P0333 KSEC-752, EC-1217
P0335 CKP SENSOR (POS) EC-262, EC-755,
EC-1220
P0340 CMP SENSOR (PHASE) EC-266
P0340, P0345 CMP SENSOR (PHASE).... EC-758,
EC-1224
P0420 THREE WAY CATALYST FUNCTION EC-270
P0420, P0430 THREE WAY CATALYST FUNCTION
EC-762, EC-1228
P0441 EVAP CONTROL SYSTEM EC-274, EC-766
P0442 EVAP CONTROL SYSTEM EC-279, EC-771,
EC-1233
P0443 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVE EC-286, EC-778,
EC-1242
P0444 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVE EC-1249
P0444, P0445 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVE EC-291, EC-784
P0447 EVAP CANISTER VENT CONTROL VALVE
EC-294, EC-787
P0448 EVAP CANISTER VENT CONTROL VALVE
EC-298, EC-791
P0451 EVAP CONTROL SYSTEM PRESSURE
SENSOR EC-302, EC-796, EC-1252
P0452 EVAP CONTROL SYSTEM PRESSURE
SENSOR EC-306, EC-799
P0453 EVAP CONTROL SYSTEM PRESSURE
SENSOR EC-310, EC-803

P0455 EVAP CONTROL SYSTEM	EC-315, EC-808	P1564 ASCD STEERING SWITCH	EC-382, EC-876, EC-1311
P0456 EVAP CONTROL SYSTEM	EC-322, EC-815, EC-1256	P1572 ASCD BRAKE SWITCH	EC-386, EC-879, EC-1315
P0460 FUEL LEVEL SENSOR	EC-330, EC-823	P1574 ASCD VEHICLE SPEED SENSOR	EC-394, EC-887, EC-1320
P0461 FUEL LEVEL SENSOR	EC-332, EC-825	P1610 LOCK MODE	SEC-25
P0462, P0463 FUEL LEVEL SENSOR	EC-334, EC-827	P1705 TP SENSOR	TM-196
P0500 VSS	EC-336, EC-829, EC-1264	P1710 TRANSMISSION FLUID TEMPERATURE SENSOR	TM-198
P0506 ISC SYSTEM	EC-340, EC-831, EC-1266	P1715 INPUT SPEED SENSOR	EC-396, EC-889, EC-1322
P0507 ISC SYSTEM	EC-342, EC-833, EC-1268	P1721 VEHICLE SPEED SIGNAL	TM-201
P050A, P050E COLD START CONTROL	EC-344, EC-835	P1730 INTERLOCK	TM-203
P0550 PSP SENSOR	EC-346, EC-837, EC-1270	P1731 1ST ENGINE BRAKING	TM-205
P0603 ECM	EC-840, EC-1273	P1752 INPUT CLUTCH SOLENOID	TM-207
P0603 ECM POWER SUPPLY	EC-349	P1757 FRONT BRAKE SOLENOID	TM-209
P0604 ECM	EC-841, EC-1274	P1762 DIRECT CLUTCH SOLENOID	TM-211
P0605 ECM	EC-351, EC-842, EC-1275	P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID	TM-213
P0606 ECM	EC-843, EC-1276	P1772 LOW COAST BRAKE SOLENOID	TM-215
P0607 ECM	EC-353, EC-844, EC-1277	P1774 LOW COAST BRAKE SOLENOID	TM-217
P060A ECM	EC-845, EC-1278	P1800 VIAS CONTROL SOLENOID VALVE 1	EC-890, EC-1323
P060B ECM	EC-846, EC-1279	P1801, P1811 POWER SUPPLY CIRCUIT FOR TRANSFER CONTROL UNIT	DLN-21
P0615 STARTER RELAY	TM-168	P1802 – P1804, P1809 TRANSFER CONTROL UNIT	DLN-24
P0643 SENSOR POWER SUPPLY	EC-354, EC-847, EC-1280	P1805 BRAKE SWITCH	EC-397, EC-893, EC-1326
P0700 TRANSMISSION CONTROL	TM-170	P1807 VEHICLE SPEED SENSOR (A/T)	DLN-26
P0705 TRANSMISSION RANGE SENSOR A	TM-171	P1808 VEHICLE SPEED SENSOR (ABS)	DLN-27
P0717 INPUT SPEED SENSOR A	TM-173	P1810 4 LO SWITCH	DLN-28
P0720 OUTPUT SPEED SENSOR	TM-175	P1813 4WD SHIFT SWITCH	DLN-31
P0725 ENGINE SPEED	TM-178	P1814 WAIT DETECTION SWITCH	DLN-34
P0731 1GR INCORRECT RATIO	TM-180	P1816 PNP SWITCH (A/T)	DLN-37
P0732 2GR INCORRECT RATIO	TM-182	P1816 PNP SWITCH (M/T)	DLN-38
P0733 3GR INCORRECT RATIO	TM-184	P1817 ACTUATOR MOTOR	DLN-41
P0734 4GR INCORRECT RATIO	TM-186	P1818 ACTUATOR POSITION SWITCH	DLN-47
P0735 5GR INCORRECT RATIO	TM-188	P1819 TRANSFER CONTROL DEVICE	DLN-50
P0740 TORQUE CONVERTER	TM-190	P1820 ENGINE SPEED SIGNAL	DLN-53
P0744 TORQUE CONVERTER	TM-192	P1833 INITIAL START	DLN-276
P0745 PRESSURE CONTROL SOLENOID A	TM-194	P1834 CONTROL UNIT 1	DLN-277
P0850 PNP SWITCH	EC-357, EC-850, EC-1283	P1835 CONTROL UNIT 2	DLN-278
P1148 CLOSED LOOP CONTROL	EC-361	P1836 CONTROL UNIT 3	DLN-279
P1148, P1168 CLOSED LOOP CONTROL	EC-854	P1837 CONTROL UNIT 4	DLN-280
P1212 TCS COMMUNICATION LINE	EC-362, EC-855, EC-1286	P1838 ON SWITCH	DLN-281
P1217 ENGINE OVER TEMPERATURE	EC-363, EC-856, EC-1287	P1839 POSITION SWITCH ON	DLN-283
P1225 TP SENSOR	EC-366, EC-860, EC-1291	P1844 RELAY	DLN-285
P1226 TP SENSOR	EC-368, EC-862, EC-1293	P1847 SOLENOID CIRCUIT	DLN-286
P1550 BATTERY CURRENT SENSOR	EC-370, EC-864, EC-1295	P1848 SOLENOID DISCONNECT	DLN-287
P1551, P1552 BATTERY CURRENT SENSOR	EC-373, EC-867, EC-1299	P1849 SOLENOID SHORT	DLN-289
P1553 BATTERY CURRENT SENSOR	EC-376, EC-870, EC-1303	P1850 SOLENOID CURRENT	DLN-291
P1554 BATTERY CURRENT SENSOR	EC-379, EC-873, EC-1307	P2004 INTAKE MANIFOLD RUNNER CONTROL VALVE	EC-896

P2014, P2016, P2017, P2018 INTAKE MANIFOLD RUNNER CONTROL VALVE POSITION SENSOR.....	EC-899	POWER SEAT FOR PASSENGER SIDE.....	SE-13
P2096, P2097 A/F SENSOR 1.....	EC-400	POWER SOCKET	PWO-2, PWO-7
P2096, P2097, P2098, P2099 A/F SENSOR 1.....	EC-902, EC-1329	POWER STEERING FLUID	ST-6
P2100, P2103 THROTTLE CONTROL MOTOR RELAY	EC-405, EC-907, EC-1335	POWER STEERING GEAR AND LINKAGE .	ST-16
P2101 ELECTRIC THROTTLE CONTROL FUNCTION	EC-408, EC-910, EC-1338	POWER STEERING OIL PUMP	ST-8, ST-19, ST-26
P2118 THROTTLE CONTROL MOTOR	EC-412, EC-914, EC-1342	POWER SUPPLY AND GROUND CIRCUIT FOR CONTROLLER....	HAC-59, HAC-128, HAC-195
P2119 ELECTRIC THROTTLE CONTROL ACTUATOR.....	EC-414, EC-916, EC-1344	POWER SUPPLY ROUTING CIRCUIT.....	PG-14
P2122, P2123 APP SENSOR.....	EC-416, EC-918, EC-1346	POWER WINDOW LOCK SWITCH	PWC-36
P2127, P2128 APP SENSOR.....	EC-419, EC-921, EC-1349	POWER WINDOW LOCK SWITCH DOES NOT FUNCTION.....	PWC-70
P2135 TP SENSOR	EC-423, EC-925, EC-1353	POWER WINDOW MAIN SWITCH.....	PWC-73
P2138 APP SENSOR ...	EC-427, EC-929, EC-1357	POWER WINDOW MOTOR.....	PWC-24
P219A AIR FUEL RATIO	EC-431	POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY	PWC-69
P219A, P219B AIR FUEL RATIO.....	EC-933	POWER WINDOW SYSTEM	PWC-4, PWC-37, PWC-49
P219C, P219D, P219E, P219F AIR FUEL RATIO..	EC-437	PRE-INSPECTION FOR DIAGNOSTIC	SEC-6
PARKING BRAKE CONTROL	PB-5	PRECAUTION	HRN-2, SN-24, WW-53
PARKING BRAKE SHOE	PB-7	PRECAUTIONS	ACC-2, AV-48, AV-83, AV-142, AV-254, AV-350, BCS-55, BR-3, BRC-138, BRC-288, BRM-5, CCS-2, CHG-26, CL-4, CO-3, CO-31, DEF-40, DLK-125, DLN-83, DLN-130, DLN-139, DLN-148, DLN-159, DLN-170, DLN-180, DLN-214, DLN-246, DLN-306, EC-20, EC-483, EC-986, EM-4, EM-120, EX-2, EXL-4, EXT-2, FAX-2, FL-2, FSU-2, GI-28, GW-8, HA-2, HAC-86, HAC-155, HAC-225, INL-61, INL-115, INT-2, IP-2, LAN-3, LAN-37, LU-3, LU-17, MA-4, MIR-21, MWI-89, PB-2, PCS-27, PG-3, PWC-71, PWO-5, RAX-2, RAX-15, RF-49, RSU-2, SB-2, SE-21, SEC-78, SR-2, SRC-124, ST-2, STR-3, TM-7, TM-56, TM-265, VTL-2, WCS-47, WT-45
PARKING BRAKE SYSTEM	PB-4	PROPELLER SHAFT	DLN-134, DLN-136, DLN-143, DLN-145
PARKING LAMP CIRCUIT	EXL-50	PROPELLER SHAFT ASSEMBLY	DLN-133, DLN-142, DLN-151, DLN-162, DLN-173
PARKING, LICENSE PLATE AND TAIL LAMPS	EXL-21		
PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON	EXL-134		
PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM	EXL-104		
PART TIME 4WD SYSTEM.....	DLN-63		
PASSENGER SEAT BELT WARNING SYSTEM	SRC-12, SRC-123		
PASSENGER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.	DEF-38		
PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS	BRC-135, BRC-285		
PERIODIC MAINTENANCE.....	MA-11		
PLANETARY CARRIER.....	DLN-120		
POSITION SWITCH.....	TM-16, TM-68		
POSITIVE CRANKCASE VENTILATION... ..	EC-466, EC-967, EC-1388		
POWER CONSUMPTION CONTROL SYSTEM	BCS-15, PCS-7		
POWER CONTROL SYSTEM	PCS-5		
POWER DOOR LOCK SYSTEM	DLK-77		
POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM.....	CHG-9		
POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION	CHG-11		
POWER SEAT FOR DRIVER SIDE	SE-9		

R

RADIATOR	CO-16, CO-44
REAR BUMPER	EXT-21
REAR COMBINATION LAMP	EXL-145
REAR DISC BRAKE... ..	BR-8, BR-22, BR-42, BR-52
REAR DOOR GLASS AND REGULATOR... ..	GW-20
REAR DOOR LOCK.....	DLK-140
REAR DOOR SPEAKER.....	AV-21, AV-54, AV-70, AV-89, AV-127, AV-148, AV-222, AV-261, AV-327, AV-356
REAR FINAL DRIVEDLN-224, DLN-225, DLN-298, DLN-321	
REAR FINAL DRIVE ASSEMBLY	DLN-255, DLN-256, DLN-319
REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE.....	PWC-66
REAR OIL SEAL .	DLN-95, TM-15, TM-66, TM-297

REAR POWER WINDOW SWITCH PWC-76
 REAR PROPELLER SHAFT ... DLN-152, DLN-154,
 DLN-163, DLN-165, DLN-174, DLN-176
 REAR RH SIDE POWER WINDOW ALONE DOES
 NOT OPERATE PWC-67
 REAR SEAT SE-36, SE-48
 REAR SEAT BELT SB-10
 REAR SONAR SYSTEM SN-5
 REAR SUSPENSION ASSEMBLY .. RSU-5, RSU-6
 REAR TIMING CHAIN CASE EM-190
 REAR TWEETER AV-225, AV-262
 REAR VIEW CAMERA AV-156, AV-272, AV-365
 REAR VIEW CAMERA IMAGE SIGNAL CIRCUIT..
 AV-129, AV-232, AV-329
 REAR WINDOW DEFOGGER DEF-27
 REAR WINDOW DEFOGGER DOES NOT
 OPERATE DEF-35
 REAR WINDOW DEFOGGER FEEDBACK SIGNAL
 DEF-13
 REAR WINDOW DEFOGGER POWER SUPPLY
 AND GROUND CIRCUIT DEF-11
 REAR WINDOW DEFOGGER RELAY DEF-10
 REAR WINDOW DEFOGGER SWITCH DEF-8
 REAR WINDOW DEFOGGER SWITCH DOES NOT
 LIGHT, BUT REAR WINDOW DEFOGGER
 OPERATES DEF-39
 REAR WINDOW DEFOGGER SYSTEM DEF-4
 REAR WINDOW GLASS AND MOLDING .. GW-14
 RECOMMENDED CHEMICAL PRODUCTS AND
 SEALANTS GI-21
 RECOMMENDED FLUIDS AND LUBRICANTS
 MA-18
 REFRIGERANT PRESSURE SENSOR EC-468,
 EC-969, EC-1390, HA-36
 REFRIGERATION SYSTEM HA-13, HA-14, HA-23,
 HAC-11, HAC-94, HAC-164
 RELAY CONTROL SYSTEM PCS-2
 REMOTE KEYLESS ENTRY RECEIVER .. DLK-49,
 SEC-80
 REMOTE KEYLESS ENTRY SYSTEM DLK-98,
 DLK-117
 REPAIRING HIGH STRENGTH STEEL BRM-51
 REPLACEMENT OPERATIONS BRM-54
 RETAINED POWER OPERATION DOES NOT
 OPERATE PROPERLY RF-41
 ROAD TEST TM-280
 ROCKER COVER EM-38, EM-160
 ROOF RACK EXT-32
 RUNNING BOARDS EXT-30

S

S CONNECTOR CIRCUIT STR-18
 S TERMINAL CIRCUIT CHG-17
 SATELLITE RADIO ANTENNA AV-153, AV-269,
 AV-362
 SATELLITE SENSOR SR-25

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT..
 WCS-20
 SELF-DIAGNOSIS FUNCTION . HAC-20, HAC-101
 SENSOR ROTOR BRC-143, BRC-293
 SERVICE DATA AND SPECIFICATIONS (SDS)
 ACC-5, BR-55, CHG-30, CL-25, CO-30, CO-60,
 DLN-129, DLN-138, DLN-147, DLN-158,
 DLN-169, DLN-179, DLN-212, DLN-244,
 DLN-265, DLN-331, EC-481, EC-984, EC-1405,
 EM-109, EM-251, EXL-150, FAX-16, FL-18,
 FSU-25, HA-38, LU-16, LU-34, PB-10, PG-91,
 RAX-14, RAX-25, RSU-12, ST-32, TM-53,
 TM-125, TM-386, WT-54, WW-63
 SERVICE INFORMATION FOR ELECTRICAL
 INCIDENT GI-39
 SHIFT CONTROL DLN-126, TM-17, TM-69
 SHIFT CONTROL COMPONENTS .. TM-35, TM-94
 SHIFT CONTROL SYSTEM TM-285
 SHIFT SELECTOR FINISHER IP-25
 SHIPPING MODE CANCEL OPERATION ... BCS-6
 SHOCK ABSORBER RSU-8
 SIDE AIR BAG MODULE SE-33
 SIDE CURTAIN AIR BAG MODULE SR-18
 SIDE GUARD MOLDING EXT-34
 SIDE OIL SEAL DLN-189
 SIDE WINDOW GLASS GW-24
 SIGNAL BUFFER SYSTEM BCS-14, PCS-6
 SLIP INDICATOR LAMP BRC-112, BRC-263
 SONAR BUZZER CIRCUIT INSPECTION ... SN-11
 SONAR CONTROL UNIT SN-14, SN-26
 SONAR SENSOR SN-25
 SONAR SENSOR CIRCUIT INSPECTION .. SN-10
 SONAR SYSTEM SN-16
 SONAR SYSTEM OFF SWITCH CIRCUIT
 INSPECTION SN-12
 SONAR SYSTEM SYMPTOMS SN-22
 SPARK PLUG EM-18, EM-133
 SPIRAL CABLE SR-13
 SQUEAK AND RATTLE TROUBLE DIAGNOSES ..
 DLK-119, EXT-9, GW-2, INT-9, IP-8, MIR-15,
 RF-43, SE-2
 SRS AIR BAG CONTROL SYSTEM SRC-97
 SRS AIR BAG SYSTEM SRC-6, SRC-121
 STABILIZER BAR FSU-15
 STARTER MOTOR STR-34, STR-36
 STARTING SYSTEM STR-11, STR-19, STR-33
 STEERING ANGLE SENSOR . BRC-146, BRC-296
 STEERING COLUMN ST-12, ST-24
 STEERING COLUMN COVERS IP-16
 STEERING GEAR AND LINKAGE ST-29
 STEERING LOCK UNIT DLK-145
 STEERING SWITCH AV-23, AV-55, AV-131, AV-149,
 AV-234, AV-264, AV-331, AV-357
 STEERING WHEEL ST-9, ST-11
 STOP LAMP EXL-110, EXL-143
 STRG BRANCH LINE CIRCUIT LAN-86

SUBWOOFER.....AV-228, AV-263
 SUNROOF RF-33
 SUNROOF DOES NOT OPERATE ANTI-PINCH
 FUNCTION RF-42
 SUNROOF DOES NOT OPERATE PROPERLY
 RF-38
 SUNROOF MOTOR ASSEMBLY RF-32
 SUNROOF SWITCH CIRCUIT RF-13
 SUNROOF SYSTEM RF-6, RF-51
 SYSTEM SYMPTOM TM-243

T

TAIL GATE DLK-144
 TAIL GATE FINISHER.....EXT-38
 TCM TM-229
 TCM BRANCH LINE CIRCUIT..... LAN-77
 TCS BRC-19, BRC-167
 THE BRAKING DISTANCE IS LONG BRC-133,
 BRC-283
 THE FUEL GAUGE POINTER DOES NOT MOVE
 MWI-84
 THE FUEL GAUGE POINTER DOES NOT MOVE
 TO
 THE KEY WARNING DOES NOT SOUND WCS-46
 THE LIGHT REMINDER WARNING DOES NOT
 SOUND WCS-44
 THE OIL PRESSURE WARNING LAMP DOES NOT
 TURN OFF MWI-87
 THE OIL PRESSURE WARNING LAMP DOES NOT
 TURN ON MWI-86
 THE SEAT BELT WARNING CONTINUES
 SOUNDING, OR DOES NOT SOUND .WCS-45
 THERMOSTAT AND THERMOSTAT HOUSING
 CO-23
 TIGHTENING TORQUE OF STANDARD BOLTS...
 GI-18
 TIMING CHAIN EM-46, EM-179
 TIMING CHAIN TENSIONER EM-187
 TIRE PRESSURE MONITORING SYSTEM WT-35
 TOP TETHER STRAP CHILD RESTRAINT . SB-14
 TOW TRUCK TOWING GI-36
 TPMS WT-9, WT-38
 TRAILER TOW EXL-23, EXL-119
 TRANSFER ASSEMBLY DLN-101, DLN-103
 TRANSFER CONTROL DEVICE DLN-97
 TRANSFER CONTROL UNIT DLN-56, DLN-92
 TRANSFER FLUID DLN-90
 TRANSIT MODE CANCEL OPERATION BCS-7
 TRANSMISSION ASSEMBLY TM-21, TM-23, TM-72,
 TM-77, TM-305
 TRANSMITTER WT-50
 TROUBLE DIAGNOSIS LAN-7, LAN-56
 TROUBLE DIAGNOSIS - SPECIFICATION VALUE
 EC-141, EC-620, EC-1106
 TUMBLE CONTROL VALVE CONTROL EC-513

TURN SIGNAL AND HAZARD WARNING LAMP
 SYSTEM EXL-98
 TURN SIGNAL AND HAZARD WARNING LAMPS
 EXL-19
 TURN SIGNAL LAMP CIRCUIT EXL-53

U

U0100 LOST COMMUNICATION (ECM A). TM-166
 U0101 CAN COMM CIRCUIT EC-153, EC-632,
 EC-1118
 U1000 CAN COMM CIRCUIT AV-196, AV-305,
 BCS-31, BRC-102, BRC-250, DLK-23, DLN-54,
 DLN-275, PCS-13, SEC-16, SRC-17, TM-167
 U1001 CAN COMM CIRCUIT EC-154, EC-633,
 EC-1119
 U1010 CONTROL UNIT (CAN) AV-197, AV-306,
 BCS-32, DLK-24, DLN-55, SEC-17, SRC-18
 U1217 AV CONTROL UNIT AV-198, AV-307
 U1229 AV CONTROL UNIT AV-199, AV-308
 U122F AV CONTROL UNIT AV-200, AV-309
 U1244 GPS ANTENNA AV-201, AV-310
 U1258 SATELLITE RADIO ANTENNA AV-202,
 AV-311
 U1263 USB AV-203, AV-312
 U1265 AUDIO AMP AV-204
 U12AA CONFIGURATION ERROR AV-205, AV-313
 U12AB ANTENNA AV-206, AV-314
 U12AC AV CONTROL UNIT AV-207, AV-315
 U12AD AV CONTROL UNIT AV-208, AV-316
 U12AE AV CONTROL UNIT AV-209, AV-317
 U12AF AV CONTROL UNIT AV-210, AV-318
 U12B0 POWER SUPPLY VOLTAGE AV-211, AV-319
 U12B1 POWER SUPPLY VOLTAGE AV-212, AV-320
 U1310 AV CONTROL UNIT AV-213, AV-321
 UNEXPECTED PEDAL REACTION BRC-132,
 BRC-282
 UPPER BALL JOINT AND LOWER BALL JOINT ...
 FSU-10, FSU-19
 UPPER GLOVE BOX IP-23
 UPPER LINK FSU-16
 USB CONNECTOR AV-135, AV-154, AV-238,
 AV-271, AV-335, AV-364

V

VACUUM LINES BR-10, BR-36
 VARIABLE BLOWER CONTROL VTL-12
 VARIABLE INDUCTION AIR SYSTEM EC-514,
 EC-1016
 VDC BRC-15, BRC-164
 VDC OFF INDICATOR LAMP .. BRC-110, BRC-261
 VDC OFF SWITCH BRC-106, BRC-148, BRC-256,
 BRC-298
 VDC/TCS/ABS BRC-130, BRC-280
 VEHICLE JERKS DURING VDC/TCS/ABS
 CONTROL BRC-136, BRC-286

VEHICLE SECURITY INDICATOR..... SEC-32
VEHICLE SECURITY SYSTEM ...SEC-11, SEC-52
VEHICLE SECURITY SYSTEM SYMPTOMS.....
SEC-76
VEHICLE SPEED SIGNAL CIRCUITRF-15
VIAS EC-972, EC-1393

W

WARNING CHIME FUNCTIONDLK-55
WARNING CHIME SYSTEMWCS-4, WCS-38
WASHER LEVEL SWITCH.....WW-62
WASHER MOTOR CIRCUITWW-23
WASHER PUMP.....WW-60
WASHER SWITCH.....WW-22
WASHER TANK.....WW-58
WATER CONTROL VALVE CO-26
WATER INLET AND THERMOSTAT ASSEMBLY ...
CO-56
WATER OUTLET AND WATER PIPING CO-28,
CO-58
WATER PUMPCO-21, CO-50
WHEEL..... WT-47
WHEEL AND TIRE ASSEMBLY WT-48
WHEEL HUBFAX-5, FAX-8
WHEEL SENSOR..... BRC-142, BRC-292
WINDSHIELD GLASS GW-10
WIPER & WASHER SWITCH.....WW-61
WIPER AND WASHER FUSE.....WW-14
WIPER AND WASHER SYSTEM SYMPTOMS
WW-48

Y

YAW RATE/SIDE/DECEL G SENSORBRC-147,
BRC-297

