

PCS

SECTION
POWER CONTROL SYSTEM

A
B
C
D
E

CONTENTS

IPDM E/R	
SYSTEM DESCRIPTION	2
RELAY CONTROL SYSTEM	2
System Diagram	2
System Description	3
Component Parts Location	4
POWER CONTROL SYSTEM	5
System Diagram	5
System Description	5
SIGNAL BUFFER SYSTEM	6
System Diagram	6
System Description	6
POWER CONSUMPTION CONTROL SYSTEM	7
System Diagram	7
System Description	7
Component Parts Location	8
DIAGNOSIS SYSTEM (IPDM E/R)	9
Diagnosis Description	9
CONSULT Function (IPDM E/R)	11
DTC/CIRCUIT DIAGNOSIS	13
U1000 CAN COMM CIRCUIT	13
Description	13
DTC Logic	13
Diagnosis Procedure	13
POWER SUPPLY AND GROUND CIRCUIT	14
Diagnosis Procedure	14
ECU DIAGNOSIS INFORMATION	15
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	15
Reference Value	15
Terminal Layout	16
Physical Values	17
Fail Safe	20
DTC Index	21
WIRING DIAGRAM	22
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	22
Wiring Diagram	22
PRECAUTION	27
PRECAUTIONS	27
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	27
REMOVAL AND INSTALLATION	28
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	28
Removal and Installation of IPDM E/R	28


PCS

N
O
P

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION**RELAY CONTROL SYSTEM****System Diagram**

INFOID:000000012563511

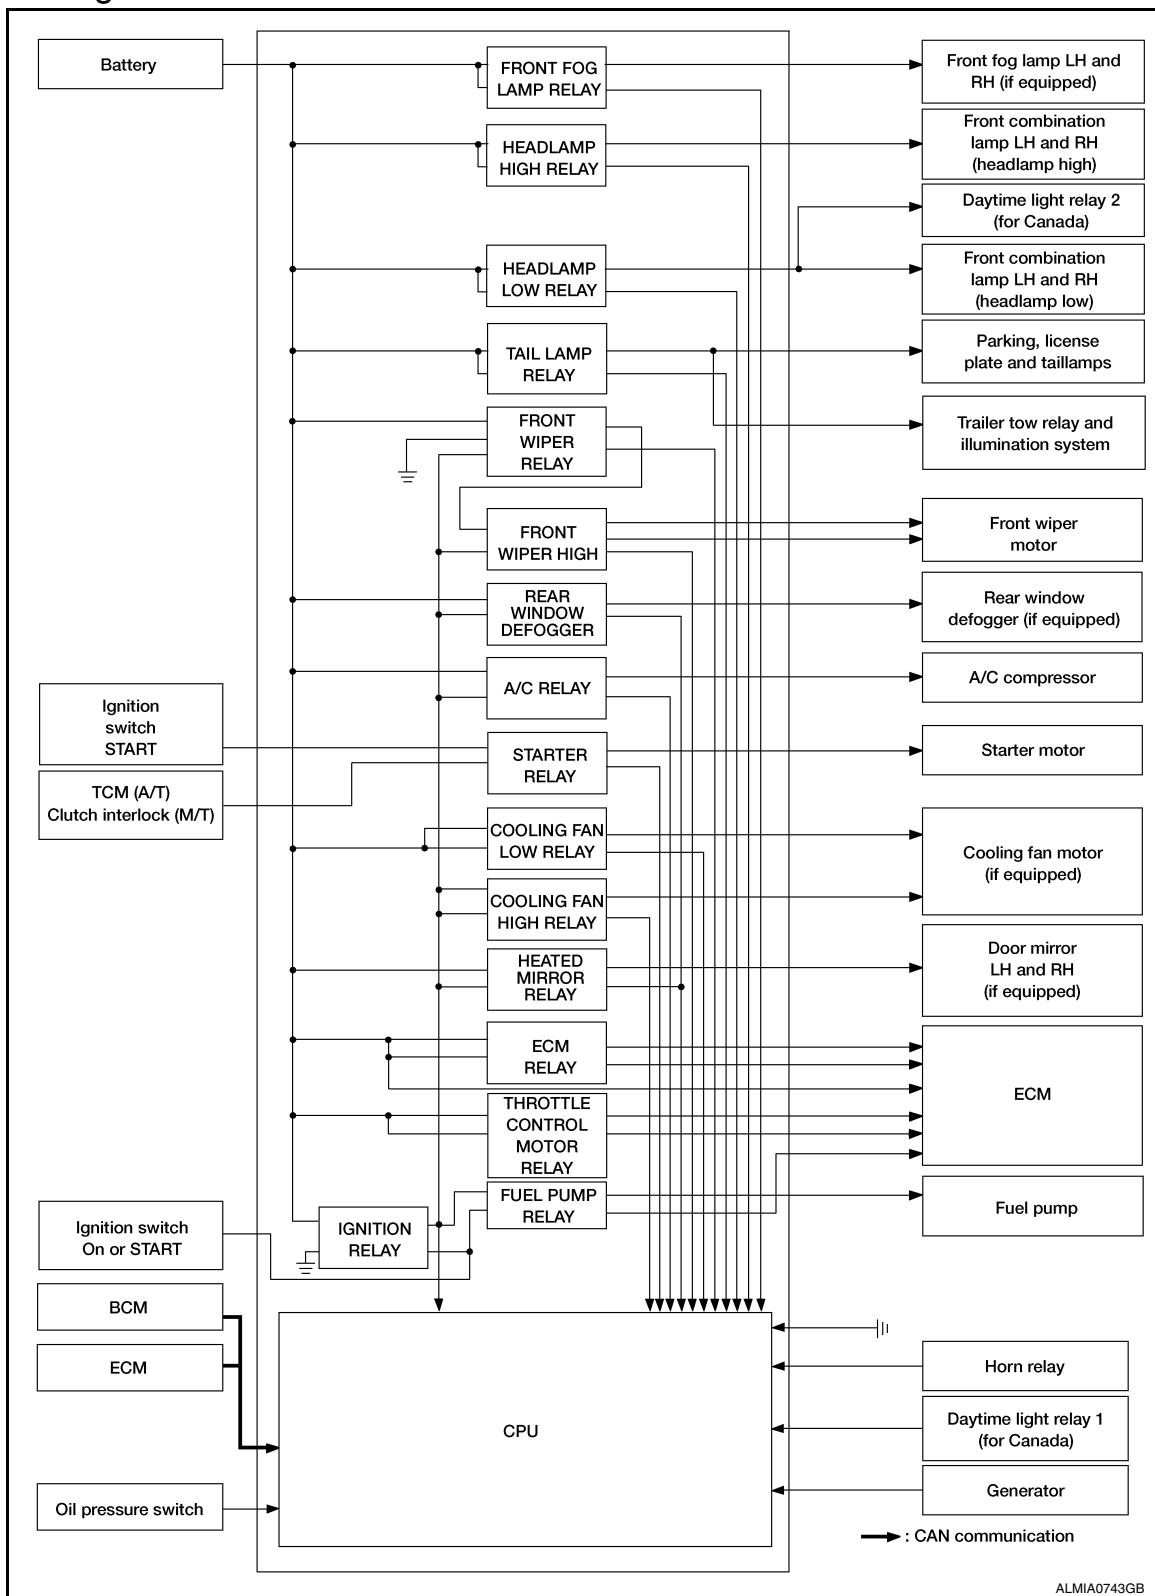

ALMIA0743GB

RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

System Description

INFOID:000000012563512

IPDM E/R activates the internal control circuit to perform the relay ON-OFF control according to the input signals from various sensors and the request signals received from control units via CAN communication.

CAUTION:

IPDM E/R integrated relays cannot be removed.

Control relay	Input/output	Transmit unit	Control part	Reference page
Front fog lamp relay (if equipped)	Front fog lamp request signal	BCM (CAN)	Front fog lamps (if equipped)	EXL-48
• Headlamp high relay • Headlamp low relay	• High beam request signal • Low beam request signal	BCM (CAN)	• Headlamp high • Headlamp low	EXL-10 EXL-42
Tail lamp relay	Position light request signal	BCM (CAN)	• Parking lamps • License plate lamps • Tail lamps • Trailer tow relay • Illumination system	EXL-50
• Front wiper relay • Front wiper high relay	Front wiper request signal	BCM (CAN)	Front wiper motor	WW-48
Rear window defogger relay (if equipped)	Rear window defogger request signal	BCM (CAN)	Rear window defogger (if equipped)	DEF-4
A/C relay	A/C request signal	• BCM (CAN) • ECM (CAN)	A/C compressor	HAC-121
Starter relay	Ignition switch START signal	• TCM (A/T) • Clutch interlock (M/T)	Starter motor	STR-11 (A/T) STR-12 (M/T with clutch interlock cancel sys- tem) STR-14 (M/T without clutch inter- lock cancel system)
Cooling fan relays (if equipped)	Cooling fan request signal	ECM (CAN)	Cooling fan relay (if equipped)	EC-506 (For USA and Canada) EC-1009 (For Mexico)
Heated mirror relay (if equipped)	Heated mirror request signal	BCM (CAN)	Door mirrors (if equipped)	DEF-4
ECM relay	ECM relay control signal	ECM (CAN)	ECM relay	EC-26 (QR25DE) EC-489 (VQ40DE for USA and Canada) EC-993 (VQ40DE for Mexico)
Throttle control motor relay	Throttle control motor control signal	ECM (CAN)	Throttle control motor relay	EC-33 (QR25DE) EC-498 (VQ40DE for USA and Canada) EC-1001 (VQ40DE for Mexico)

RELAY CONTROL SYSTEM


[IPDM E/R]

< SYSTEM DESCRIPTION >

Control relay	Input/output	Transmit unit	Control part	Reference page
Fuel pump relay	Fuel pump request signal	ECM (CAN)	Fuel pump	EC-452 (QR25DE) EC-954 (VQ40DE for USA and Canada) EC-1374 (VQ40DE for Mexico)
Ignition relay	Ignition switch ON signal	Ignition switch	Ignition relay	EC-456 (QR25DE) EC-957 (VQ40DE for USA and Canada) EC-1378 (VQ40DE for Mexico)

Component Parts Location

INFOID:000000012563513

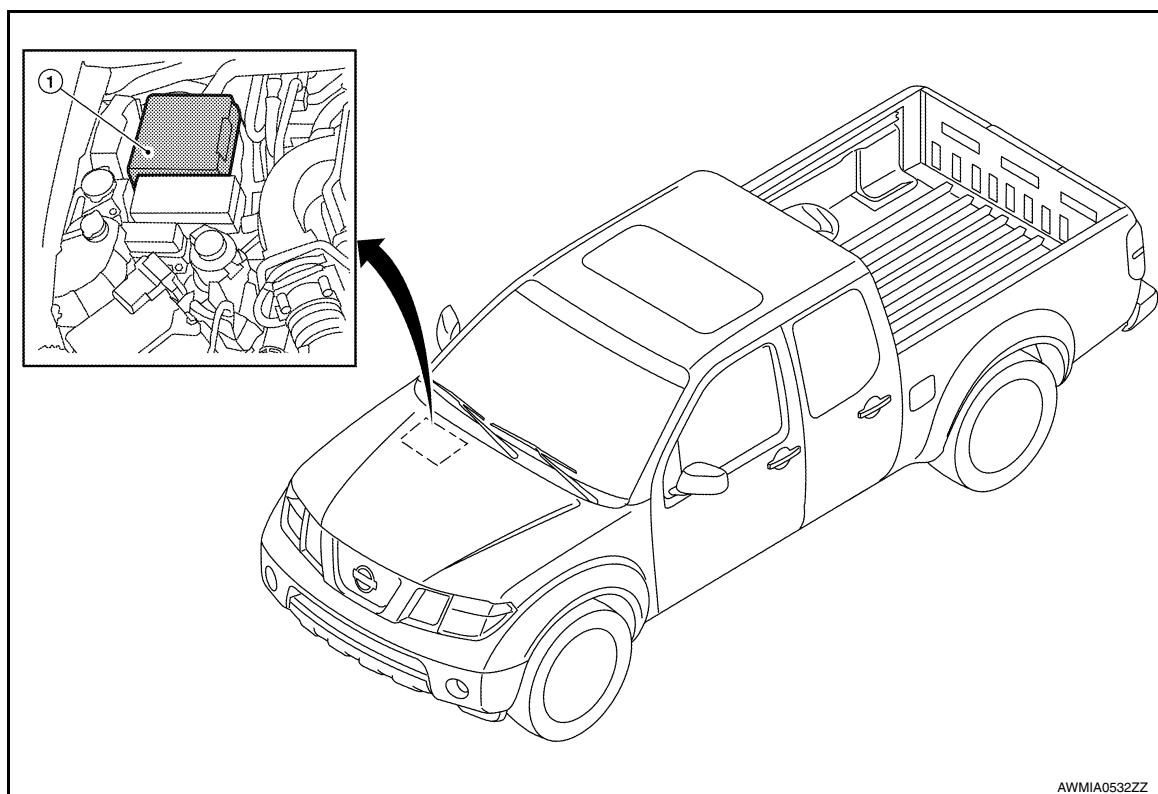

1. IPDM E/R E118, E119, E120, E121, E122, E123, E124

POWER CONTROL SYSTEM


[IPDM E/R]

< SYSTEM DESCRIPTION >

POWER CONTROL SYSTEM

System Diagram

INFOID:000000012563514

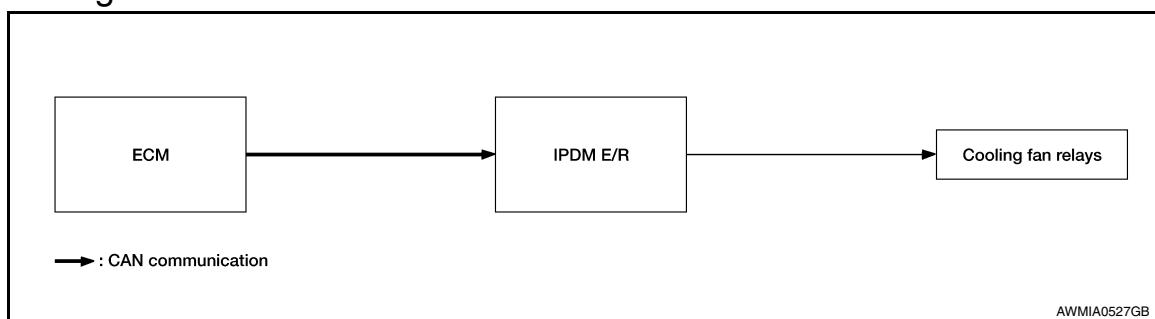

System Description

INFOID:000000012563515

COOLING FAN CONTROL

IPDM E/R controls the cooling fan according to the status of the cooling fan speed request signal received from ECM via CAN communication. Refer to [LAN-4, "System Description"](#).

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

SIGNAL BUFFER SYSTEM


[IPDM E/R]

< SYSTEM DESCRIPTION >

SIGNAL BUFFER SYSTEM

System Diagram

INFOID:000000012797943

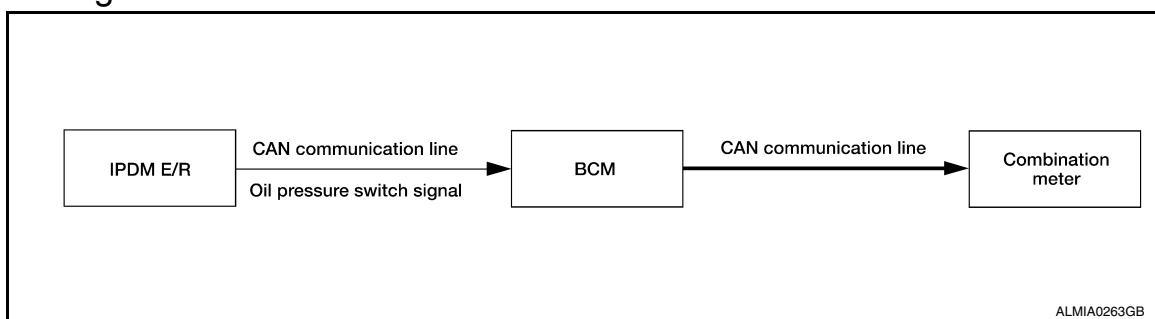

ALMIA0263GB

System Description

INFOID:000000012797944

OUTLINE

BCM has the signal transmission function that outputs/transmits each input/received signal to each unit.

Signal transmission function list

Signal name	Input	Output	Description
Oil pressure switch signal	IPDM E/R (CAN)	Combination meter (CAN)	Transmits the received oil pressure switch signal via CAN communication.

POWER CONSUMPTION CONTROL SYSTEM


< SYSTEM DESCRIPTION >

[IPDM E/R]

POWER CONSUMPTION CONTROL SYSTEM

System Diagram

INFOID:0000000012797945

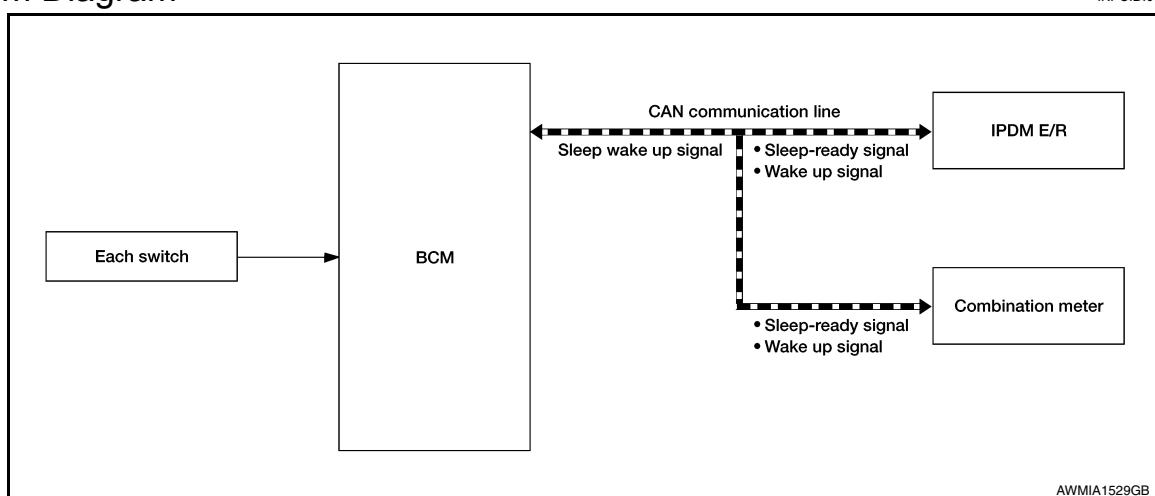

System Description

INFOID:0000000012797946

OUTLINE

- BCM incorporates a power consumption control function that reduces the power consumption according to the vehicle status.
- BCM switches the status (control mode) by itself with the power saving control function. It performs the sleep request to each unit (IPDM E/R and combination meter) that operates with the ignition switch OFF.

Normal mode (wake-up)

- CAN communication is normally performed with other units
- Each control with BCM is operating properly

CAN communication sleep mode (CAN sleep)

- CAN transmission is stopped
- Control with BCM only is operating

Low power consumption mode (BCM sleep)

- Low power consumption control is active
- CAN transmission is stopped

LOW POWER CONSUMPTION CONTROL WITH BCM

BCM reduces the power consumption with the following operation in the low power consumption mode.

- The reading interval of the each switches changes from 10 ms interval to 20 ms interval.

Sleep mode activation

- BCM receives the sleep-ready signal (ready) from IPDM E/R and combination meter via CAN communication.
- BCM transmits the sleep wake up signal (sleep) to each unit when all of the CAN sleep conditions are fulfilled.
- Each unit stops the transmission of CAN communication with the sleep wake up signal. BCM is in CAN communication sleep mode.
- BCM is in the low power consumption mode and perform the low power consumption control when all of the BCM sleep conditions are fulfilled with CAN sleep condition.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

Sleep condition

CAN sleep condition	BCM sleep condition
<ul style="list-style-type: none"> Receiving the sleep-ready signal (ready) from all units Ignition switch: OFF Vehicle security system alarm: No operation Warning lamp: No operation Warning chime: No operation Stop lamp switch: OFF Key switch status: No change for 2 seconds Hazard warning lamp: No operation Exterior lamp: OFF Door lock status: No change for 2 seconds CONSULT communication status: No communication Door switch status: No change for 2 seconds 	The controls only BCM are completed. (Interior room lamp battery saver: Time out etc.)

Wake-up operation

- BCM transmits sleep wake up signal (wake up) to each unit when any condition listed below is established, and then goes into normal mode from low power consumption mode.
- Each unit starts transmissions with CAN communication by receiving sleep wake up signals. Each unit transmits wake up signals to BCM with CAN communication to convey the start of CAN communication.


Wake-up condition

BCM wake-up condition

- Ignition switch: OFF → ACC or ON
- Stop lamp switch: ON (Depress brake pedal)
- Any door switch: OFF → ON
- Lighting switch: OFF → 1ST or PASS
- Hazard switch: OFF → ON
- Remote keyless entry receiver: Receiving (with remote keyless entry)

Component Parts Location

INFOID:000000012797947

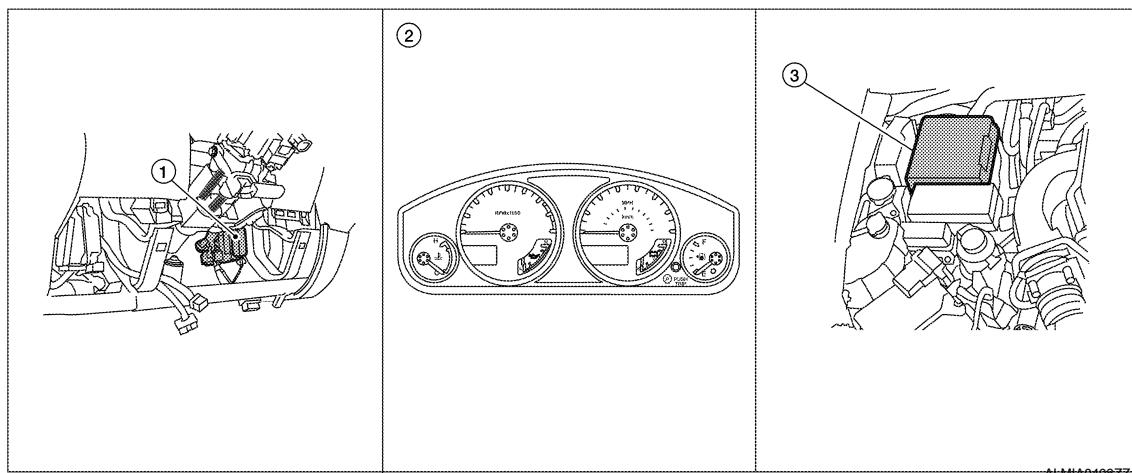

1. BCM M18, M19, M20 (view with lower instrument panel LH removed)

2. Combination meter M24

3. IPDM E/R

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (IPDM E/R)**Diagnosis Description**

INFOID:000000012563521

AUTO ACTIVE TEST**Description**

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure low warning indicator
- Oil pressure gauge (if equipped)
- Rear window defogger (if equipped)
- Front wipers
- Tail, license and parking lamps
- Front fog lamps (if equipped)
- Headlamps (Hi, Lo)
- A/C compressor (magnetic clutch)
- Cooling fan (if equipped)

Operation Procedure

1. Close the hood and front door RH, and lift the wiper arms from the windshield (to prevent windshield damage due to wiper operation).

NOTE:

When auto active test is performed with hood opened, sprinkle water on windshield before hand.

2. Turn ignition switch OFF.
3. Turn the ignition switch ON and, within 20 seconds, press the front door switch LH 10 times. Then turn the ignition switch OFF.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:


When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

CAUTION:

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-27, "KING CAB : Description"](#) (king cab) or [DLK-29, "CREW CAB : Description"](#) (crew cab).
- Do not start the engine.

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 7 steps are repeated 3 times.

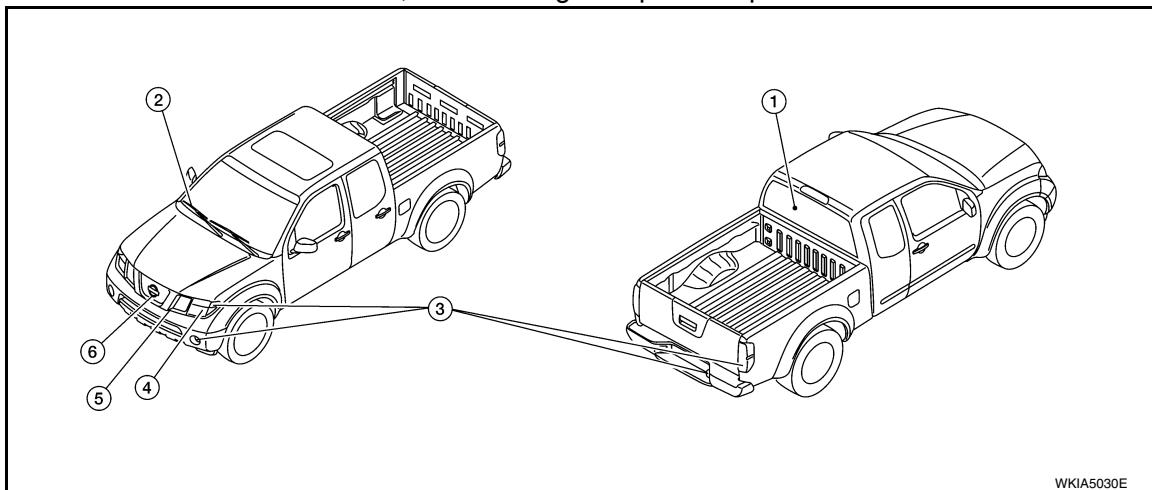

Item Number	Test Item	Operation Time/Frequency
1	Rear window defogger (if equipped)	10 seconds
2	Front wipers	LOW 5 seconds then HIGH 5 seconds
3	Tail, license plate, front fog and parking lamps	10 seconds


DIAGNOSIS SYSTEM (IPDM E/R)

[IPDM E/R]

< SYSTEM DESCRIPTION >

Item Number	Test Item	Operation Time/Frequency
4	Headlamps	Low ON for 10 seconds, then High ON-OFF five times.
5	A/C compressor (magnet clutch)	ON-OFF 5 times
6	Cooling fan (if equipped)	LOW 5 seconds then HIGH 5 seconds

Concept of auto active test

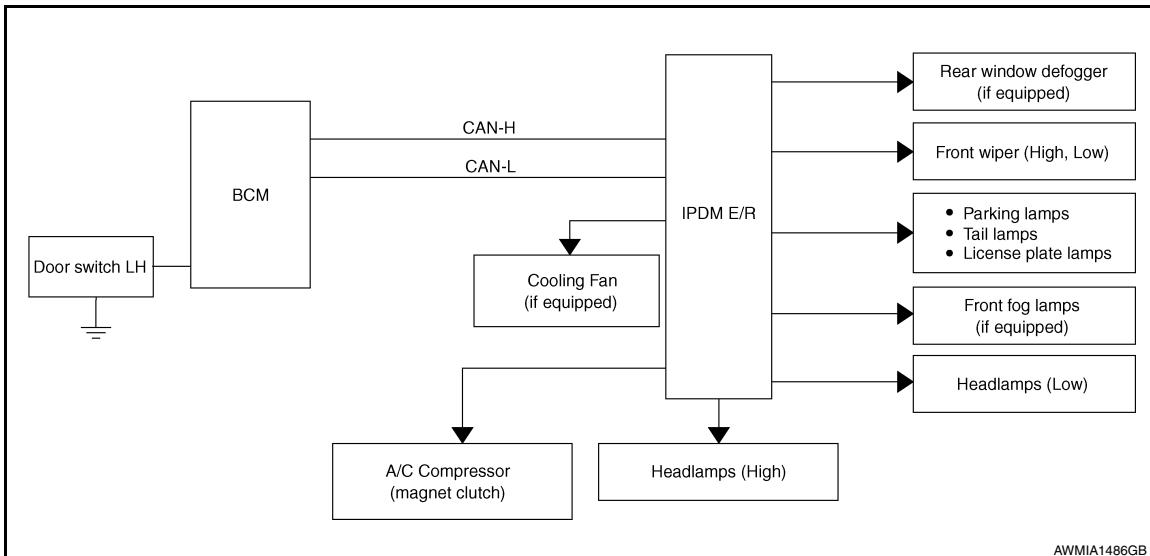

AWMIA1488GB

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Oil pressure low warning indicator does not operate	Perform auto active test. Does the oil pressure low warning indicator operate?	YES
		NO
Oil pressure gauge does not operate	Perform auto active test. Does the oil pressure gauge operate?	YES
		NO
Rear window defogger does not operate	Perform auto active test. Does the rear window defogger operate?	YES
		NO

DIAGNOSIS SYSTEM (IPDM E/R)

[IPDM E/R]

< SYSTEM DESCRIPTION >

Symptom	Inspection contents	Possible cause
Any of the following components do not operate • Front wipers • Tail lamps • License plate lamps • Parking lamps • Front fog lamps (if equipped) • Headlamps (Hi, Lo)	Perform auto active test. Does the applicable system operate?	YES BCM signal input system
		NO <ul style="list-style-type: none"> Lamp or front wiper motor malfunction Lamp or front wiper motor ground circuit Harness or connector between IPDM E/R and applicable system IPDM E/R (integrated relay malfunction)
A/C compressor does not operate	Perform auto active test. Does the A/C compressor operate?	YES <ul style="list-style-type: none"> BCM signal input circuit CAN communication signal between BCM and ECM CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> Magnetic clutch malfunction Harness or connector between IPDM E/R and magnetic clutch IPDM E/R (integrated relay malfunction)
Cooling fan does not operate (if equipped)	Perform auto active test. Does the cooling fan operate?	YES <ul style="list-style-type: none"> ECM signal input circuit CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> Cooling fan motor malfunction Harness or connector between IPDM E/R and cooling fan IPDM E/R (integrated relay malfunction)

CONSULT Function (IPDM E/R)

INFOID:000000012563522

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Direct Diagnostic Mode	Description
Self Diagnostic Result	The IPDM E/R self diagnostic results are displayed.
Data Monitor	The IPDM E/R input/output data is displayed in real time.
Active Test	The IPDM E/R activates outputs to test components.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

PCS

SELF DIAGNOSTIC RESULT

Refer to [PCS-21, "DTC Index"](#).

DATA MONITOR

N

O

P

Monitor Item [Unit]	Main Signals	Description
MOTOR FAN REQ [1/2/3/4]	×	Indicates cooling fan speed signal received from ECM on CAN communication line
AC COMP REQ [On/Off]	×	Indicates A/C compressor request signal received from ECM on CAN communication line

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Monitor Item [Unit]	Main Signals	Description
TAIL&CLR REQ [On/Off]	×	Indicates position light request signal received from BCM on CAN communication line
HL LO REQ [On/Off]	×	Indicates low beam request signal received from BCM on CAN communication line
HL HI REQ [On/Off]	×	Indicates high beam request signal received from BCM on CAN communication line
FR FOG REQ [On/Off]	×	Indicates front fog light request signal received from BCM on CAN communication line
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Indicates front wiper request signal received from BCM on CAN communication line
WIP AUTO STOP [STOP P/ACT P]	×	Indicates condition of front wiper auto stop signal
WIP PROT [Off/BLOCK]	×	Indicates condition of front wiper fail-safe operation
ST RLY REQ [On/Off]		Indicates starter request signal received from ECM on CAN communication line
IGN RLY [On/Off]	×	Indicates condition of ignition relay
RR DEF REQ [On/Off]	×	Indicates rear defogger request signal received from BCM on CAN communication line
OIL P SW [Open/Close]		Indicates condition of oil pressure switch
DTRL REQ [Off]		Indicates daytime light request signal received from BCM on CAN communication line
THFT HRN REQ [On/Off]		Indicates theft warning horn request signal received from BCM on CAN communication line
HORN CHIRP [On/Off]		Indicates horn reminder signal received from BCM on CAN communication line

ACTIVE TEST

Test item	Description
REAR DEFOGGER	This test is able to check rear defogger operation [On/Off].
FRONT WIPER	This test is able to check wiper motor operation [Hi/Lo/Off].
MOTOR FAN	This test is able to check cooling fan operation [4/3/2/1].
EXTERNAL LAMPS	This test is able to check external lamp operation [Fog/Hi/Lo/TAIL/Off].
HORN	This test is able to check horn operation [On].

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000012563523

Refer to [LAN-4, "System Description"](#).

DTC Logic

INFOID:000000012563524

DTC DETECTION LOGIC

DTC	CONSULT display de- scription	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	In CAN communication system, any item (or items) of the following listed below is malfunctioning. • Receiving (TCM) • Receiving (ECM) • Receiving (BCM) • Receiving (Combination meter)

DTC CONFIRMATION PROCEDURE

Diagnosis Procedure

INFOID:000000012563525

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "SELF-DIAG RESULTS" of IPDM E/R.

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).
 NO >> Refer to [GI-43, "Intermittent Incident"](#).

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000012563526

Regarding Wiring Diagram information, refer to [PCS-22, "Wiring Diagram"](#).

1. CHECK FUSIBLE LINKS

Check that the following IPDM E/R fusible links are not blown.

Terminal No.	Signal name	Fusible link No.
1	Battery	A, D
2		C
22		A, E, I


Is the fusible link blown?

- YES >> Replace the blown fusible link after repairing the affected circuit.
NO >> GO TO 2

2. CHECK BATTERY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect IPDM E/R.
- Check voltage between IPDM E/R harness connectors and ground.

Terminals		Ignition switch posi- tion	Voltage (V) (Approx.)
(+)	(-)		
Connector	Terminal		
E118 (A)	1	Ground	Battery voltage
	2		
E120 (B)	22		

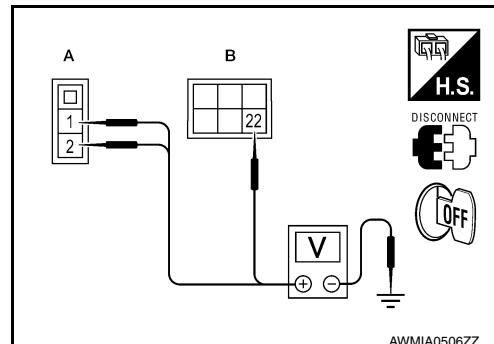

Is there voltage on all pins?

- YES >> GO TO 3
NO >> Repair or replace harness.


3. CHECK GROUND CIRCUIT

- Turn ignition switch OFF.
- Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E122 (A)	38		
E124 (B)	59		Yes

Does continuity exist?

- YES >> Inspection End.
NO >> Repair or replace harness.

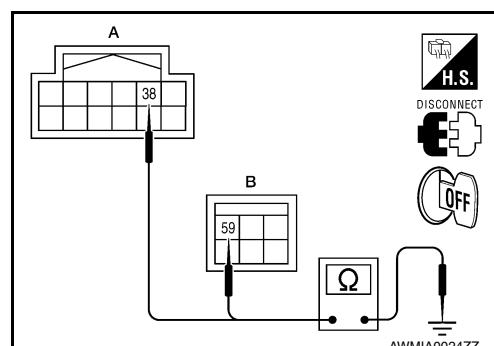

ECU DIAGNOSIS INFORMATION

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:0000000012563527

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.
A/C COMP REQ	A/C switch OFF	Off
	A/C switch ON	On
TAIL&CLR REQ	Lighting switch OFF	Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)	On
HL LO REQ	Lighting switch OFF	Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)	On
HL HI REQ	Lighting switch OFF	Off
	Lighting switch HI	On
FR FOG REQ	Lighting switch 2ND	Front fog lamp switch OFF
		Front fog lamp switch ON
FR WIP REQ	Ignition switch ON	Front wiper switch OFF
		Stop
		1LOW
		Low
WIP AUTO STOP	Ignition switch ON	Front wiper switch HI
		HI
WIP PROT	Ignition switch ON	Front wiper stop position
		STOP P
ST RLY REQ	Ignition switch ON	Any position other than front wiper stop position
		ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally
		Off
IGN RLY	Ignition switch ON	Front wiper stops at fail-safe operation
		BLOCK
RR DEF REQ	Ignition switch OFF or ACC	
	Ignition switch START	
OIL P SW	Ignition switch OFF or ACC	
	Ignition switch ON	
DTRL REQ	Rear defogger switch OFF	
	Rear defogger switch ON	
THFT HRN REQ	Ignition switch OFF, ACC or engine running	
	Ignition switch ON	
	Daytime light system requested OFF with CONSULT.	
	Daytime light system requested ON with CONSULT.	
	Not operated	
	<ul style="list-style-type: none"> • Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 	
		On

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Monitor Item	Condition	Value/Status
HORN CHIRP	Not operated	Off
	Door locking with keyfob (horn chirp mode)	On

Terminal Layout

INFOID:000000012563528

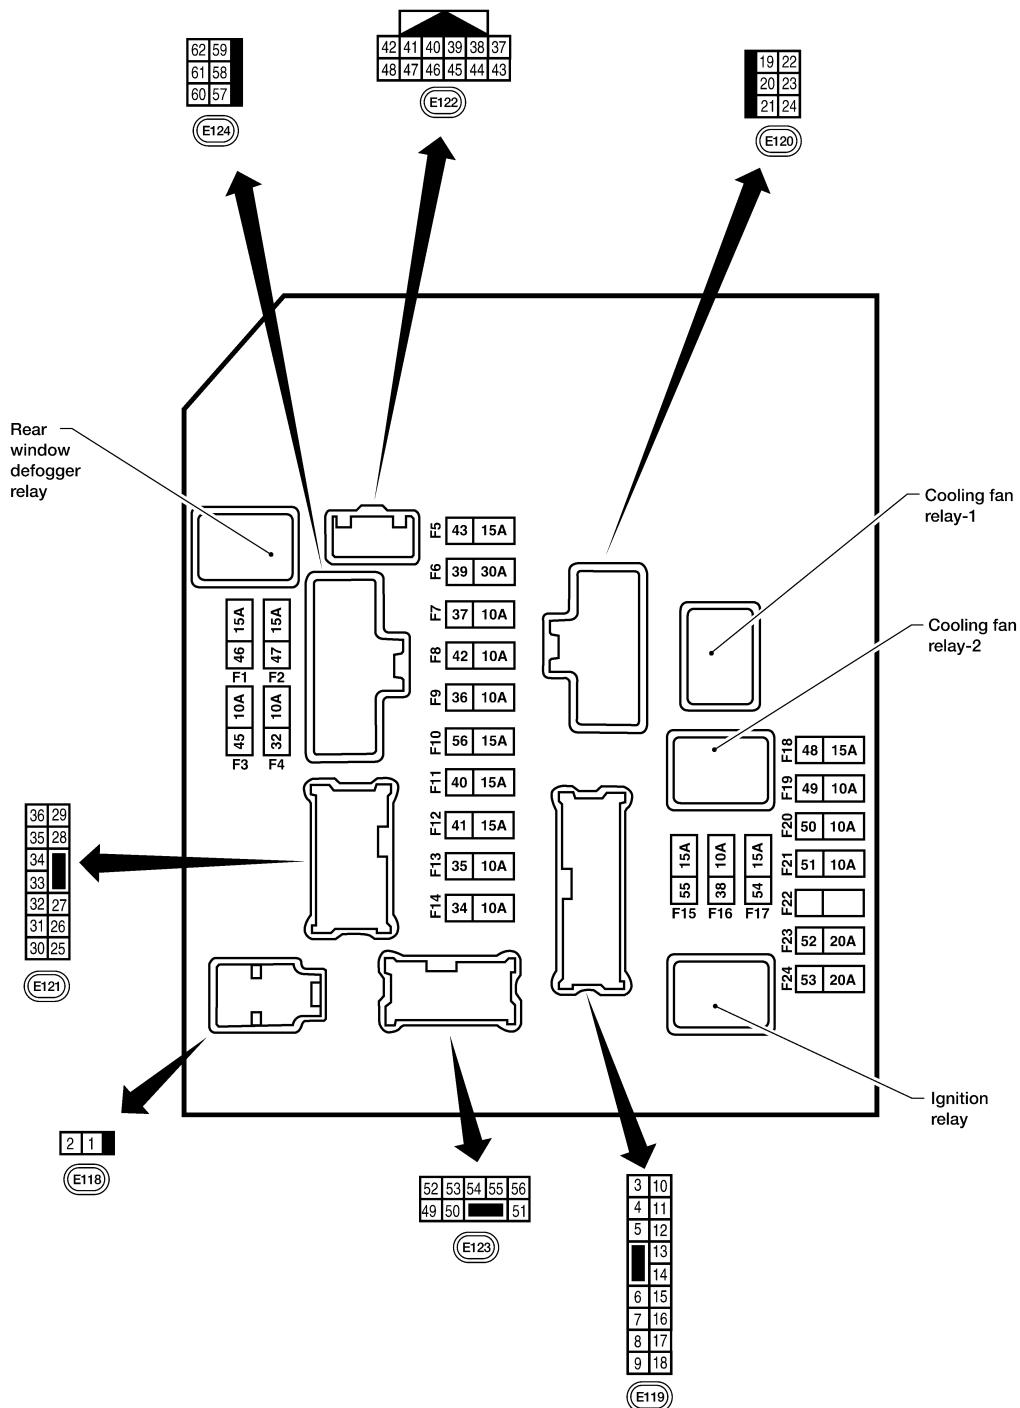

AAMIA0386GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Physical Values

INFOID:000000012563529

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P




PHYSICAL VALUES

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
1	W	Battery power supply	Input	OFF	—	Battery voltage
2	R	Battery power supply	Input	OFF	—	Battery voltage
3	G	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
4	P ¹ R ²	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
6	V	Throttle control motor relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
7	BR	ECM relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
8	W/R	Fuse 54-Air fuel ratio sensor 1, Heated oxygen sensor 2	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
10	R/B	Fuse 45-Daytime light relay 1	Output	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
11	Y	A/C compressor	Output	ON or START	A/C switch ON or defrost A/C switch	Battery voltage
					A/C switch OFF or defrost A/C switch	0V
12	W/G	Ignition switch supplied power	Input	—	OFF or ACC	0V
					ON or START	Battery voltage
13	R	Fuel pump relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
14	W/G	Fuse 49- Clutch interlock switch, clutch interlock cancel switch, clutch interlock cancel relay 2, TCM	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
15	W/R	Fuse 50-ABS actuator, steering angle sensor	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
16	W/G	Fuse 51-Backup lamp switch, back up lamp relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
17	W/G	Fuse 55-Fuel injectors	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
19	W	Starter motor	Output	START	—	Battery voltage
20	BR	Cooling fan motor (low)	Output	ON or START	—	Battery voltage
21	GR	Ignition switch supplied power	Input	—	OFF or ACC	0V
					START	Battery voltage
22	G	Battery power supply	Output	OFF	—	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

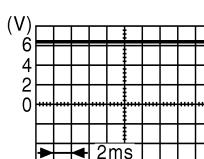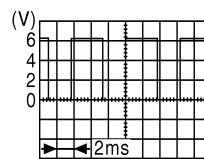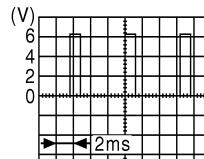Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
23	LG	Door mirror defogger output signal	Output	—	When rear defogger switch is ON	Battery voltage
					When raker defogger switch is OFF	0V
24	P	Cooling fan motor (high)	Output	—	Conditions correct for cooling fan operation	Battery voltage
					Conditions not correct for cooling fan operation	0V
27	W/G	Fuse 38-Back up lamp relay, back up lamp switch	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
28	R	LH front parking and front side marker lamp	Output	OFF	Lighting switch 1st position	0V
					ON	Battery voltage
29	G	Trailer tow relay	Output	ON	Lighting switch 1st position	0V
					ON	Battery voltage
30	R/B	Fuse 53-ECM, NATS antenna amp.	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
32	GR	Wiper low speed signal	Output	ON or START	Wiper switch	0V
					OFF	Battery voltage
35	L	Wiper high speed signal	Output	ON or START	Wiper switch	0V
					OFF, LO, INT	Battery voltage
37	Y	Power generation command signal	Output	—	Ignition switch ON	 6.3 V JPMIA0001GB
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	 3.8 V JPMIA0002GB
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	 1.4 V JPMIA0003GB
38	B	Ground	Input	—	—	0V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
39	L	CAN-H	—	ON	—	—
40	P	CAN-L	—	ON	—	—
42	GR	Oil pressure switch	Input	—	Engine running	Battery voltage
					Engine stopped	0V
43	G	Wiper auto stop signal	Input	ON or START	Wiper switch OFF, LO, INT	Battery voltage
44	R	Daytime light relay control (Canada only)	Input	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
45	LG	Horn relay control	Input	ON	When door locks are operated using keyfob (OFF → ON) ³	Battery voltage → 0V
46	V	Fuel pump relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
47	W ¹ BG ²	Throttle control motor relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
48	R	Starter relay (inhibit switch)	Input	ON or START	Selector lever in "P" or "N"	0V
					Selector lever any other position	Battery voltage
49	GR	Front RH parking and front side marker lamp	Output	OFF	Lighting switch 1st position	0V
					ON	Battery voltage
50	W	Front fog lamp (LH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	0V
						Battery voltage
51	V	Front fog lamp (RH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	0V
						Battery voltage
52	P	LH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage
54	R	RH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage
55	G	LH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
56	L	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
57	GR	Parking, license, and tail lamp	Output	ON	Lighting switch 1st position	0V
						Battery voltage
59	B	Ground	Input	—	—	0V

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
60	GR	Rear window defogger relay	Output	ON or START	Rear defogger switch ON	Battery voltage
					Rear defogger switch OFF	0V
61	R/B	Fuse 32-Trailer tow relay 1	Output	OFF	—	

1: For Mexico

2: Except for Mexico

3: When horn reminder is ON

Fail Safe

INFOID:0000000012563530

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

Control part	Fail-safe in operation
Cooling fan (if equipped)	<ul style="list-style-type: none"> Turns ON the cooling fan relay when the ignition switch is turned ON Turns OFF the cooling fan relay when the ignition switch is turned OFF

If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none"> Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp (LH/RH) high relays OFF
Parking lamps License plate lamps Tail lamps	<ul style="list-style-type: none"> Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Rear window defogger	Rear window defogger relay OFF
A/C compressor	A/C relay OFF
Front fog lamps (if equipped)	Front fog lamp relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Ignition switch	Ignition relay	Tail lamp relay
ON	ON	—
OFF	OFF	—

NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 second activation and 20 second stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “DATA MONITOR” that displays “Block” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:000000012563531

CONSULT display	Fail-safe	TIME ^{NOTE}	Refer to
No DTC is detected. further testing may be required.	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39

NOTE:

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 → 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O


P

WIRING DIAGRAM

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Wiring Diagram

INFOID:0000000012563532

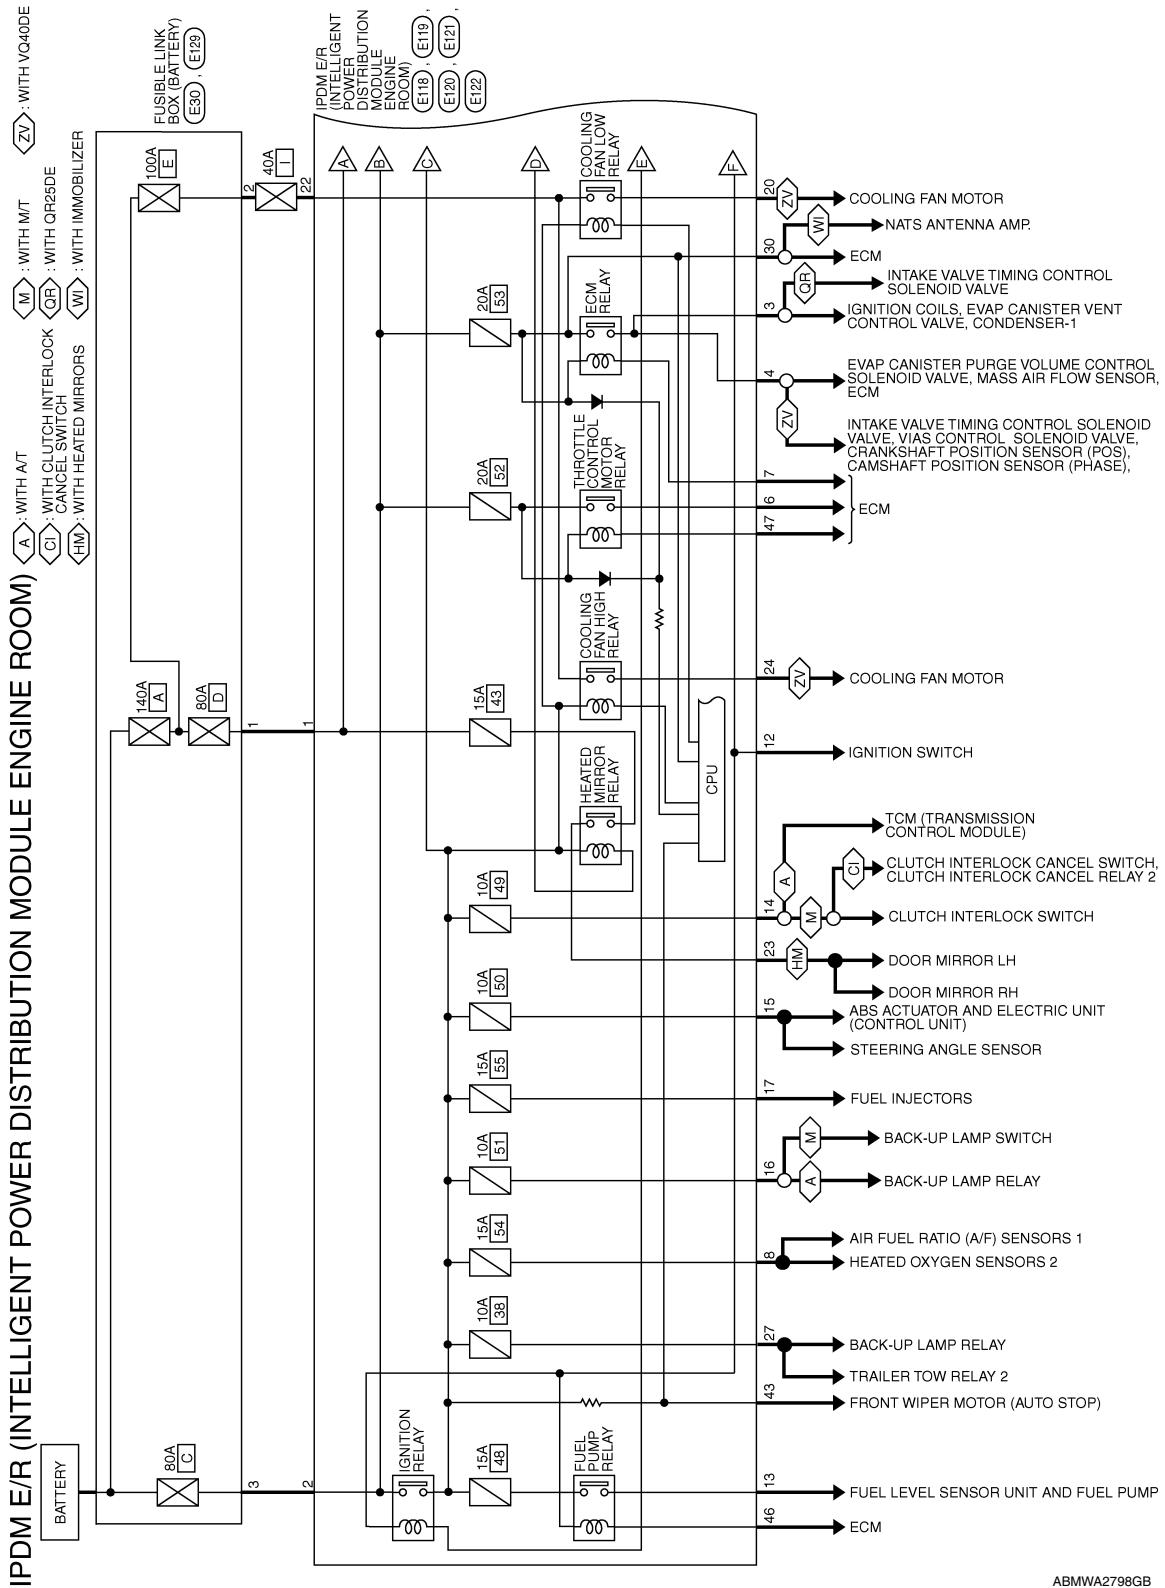


ABMWA2798GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< WIRING DIAGRAM >

[IPDM E/R]

- : EXCEPT FOR CANADA
- : WITHOUT CLUTCH INTERLOCK CANCEL SWITCH
- : MANUAL WITH TYPE 2
- : WITH VQ40DE
- : WITH OR25DE
- : WITH REMOTE KEYLESS ENTRY SYSTEM
- : WITH REAR WINDOW DEFROGGER
- : WITH A/T
- : WITH CLUTCH INTERLOCK CANCEL SWITCH
- : WITH FRONT FOG LAMPS
- : WITH M/T

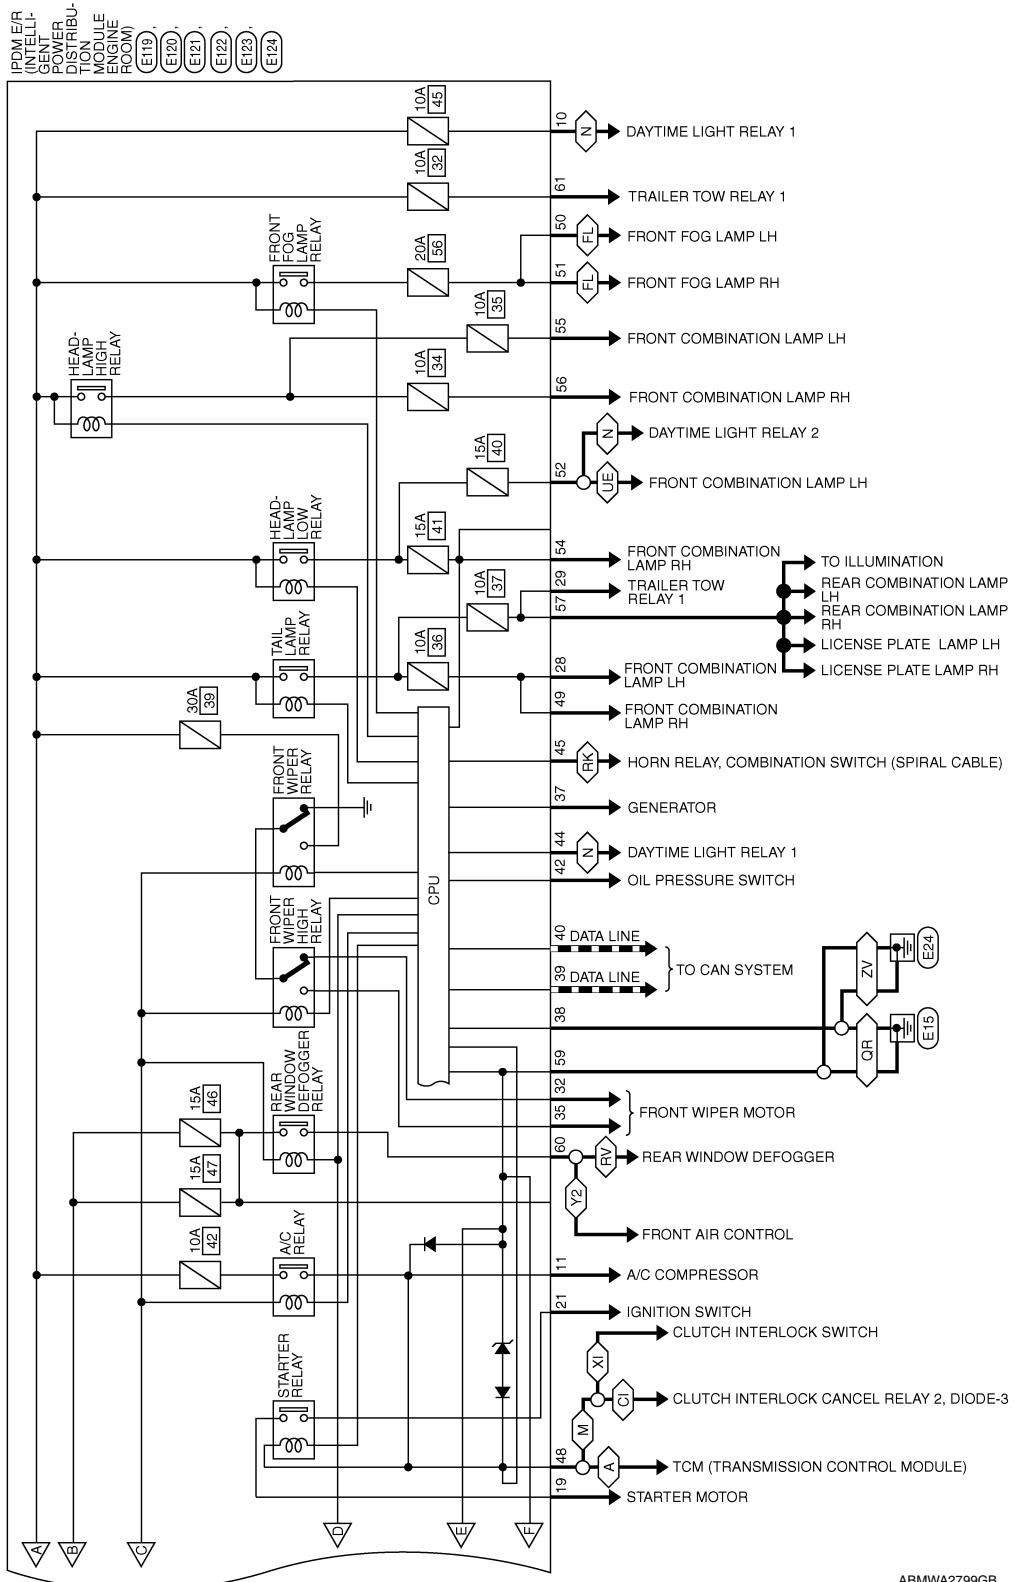

ABMWA2799GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) CONNECTORS


Connector No.	E30	Connector No.	E118
Connector Name	FUSIBLE LINK BOX (BATTERY)	Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	—	Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	R	—


Terminal No.	Color of Wire	Signal Name
1	W	F/L USM
2	R	F/L MAIN

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
7	BR	ECM RLY CONT
8	W/R	O2 SENSOR
9	—	—
10	R/B	DTRL RLY SUPPLY
11	Y	A/C COMPRESSOR
12	W/G	IGN SW (IG)
13	R	FUEL PUMP
14	W/G	A/T ECU IGN SUPPLY
15	W/R	ABS IGN SUPPLY
16	W/G	REVERSE LAMP
17	W/G	INJECTOR
18	—	—
19	W	STARTER MTR
20	BR	MOTOR FAN 1
21	GR	IGN SW (ST)
22	G	F/L MOTOR FAN
23	LG	HEATED MIRROR
24	P	MOTOR FAN 2

Terminal No.	Color of Wire	Signal Name
3	G	IGN COIL
4	P	ECM (FOR MEXICO)
4	R	ECM (EXCEPT FOR MEXICO)
5	—	—
6	V	ETC

 

ABMIA4355GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< WIRING DIAGRAM >

[IPDM E/R]

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN
	


Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
37	Y	ALT-C CONT	49	GR	CLEARANCE FRONT RH
38	B	GND (SIGNAL)	50	W	FR FOG LAMP LH
39	L	CAN-H	51	V	FR FOG LAMP RH
40	P	CAN-L	52	P	H/LAMP LO LH
41	-	-	53	-	-
42	GR	OIL PRESSURE SW	54	R	H/LAMP LO RH
43	G	AUTO STOP SW	55	G	H/LAMP HI LH
44	R	DTR/LRY CONT	56	L	H/LAMP HI RH
45	LG	ANT THEFT HORN			
46	V	FUEL PUMP RLY			
47	W	ETC RLY CONT (FOR MEXICO)			
48	R	RANGE SW			

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
25	-	-	37	Y	ALT-C CONT
26	-	-	38	B	GND (SIGNAL)
27	W/G	T TOW REV LAMP	39	L	CAN-H
28	R	CLEARANCE FRONT LH	40	P	CAN-L
29	G	TRAILER RLY CONT	41	-	-
30	R/B	ECM BAT	42	GR	OIL PRESSURE SW
31	-	-	43	G	AUTO STOP SW
32	GR	FR WIPER LO	44	R	DTR/LRY CONT
33	-	-	45	LG	ANT THEFT HORN
34	-	-	46	V	FUEL PUMP RLY
35	L	FR WIPER HI	47	W	ETC RLY CONT (FOR MEXICO)
36	-	-	48	R	RANGE SW

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN

 

PCS

Z

O

P

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z

ABMIA5517GB

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Connector No.	E124
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
57	GR	TAIL LAMP	1	W	-
58	-	-	2	R	-

Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)
60	GR	RR DEF
61	R/B	TRAIL RLY SUPPLY
62	-	-

ABMIA1430GB

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000012563533

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

REMOVAL AND INSTALLATION

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Removal and Installation of IPDM E/R


INFOID:0000000012563534

REMOVAL


CAUTION:

Do not remove the relays from the IPDM E/R. Tampering with the relays may cause additional incidents with the vehicle.

1. Disconnect negative battery terminal. Refer to [PG-89, "Removal and Installation"](#).
2. Remove IPDM E/R upper cover.

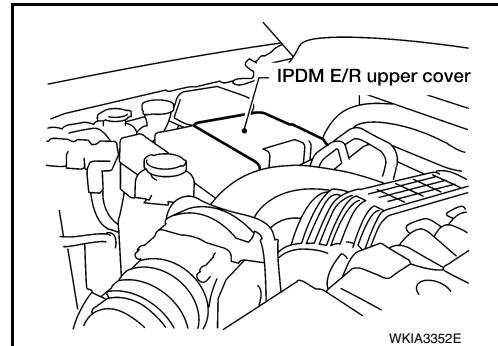

3. Release 2 clips and pull IPDM E/R up from case.
4. Disconnect the harness connectors from IPDM E/R and remove.

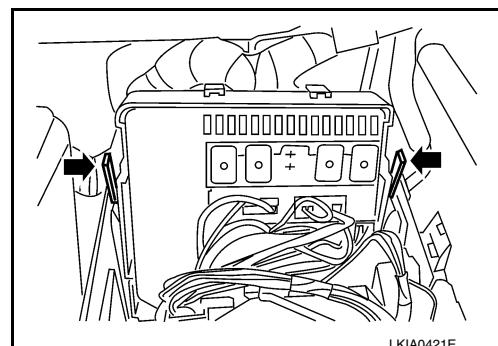

INSTALLATION

Installation is in the reverse order of removal.