


SUPER MULTIPLE JUNCTION (SMJ)

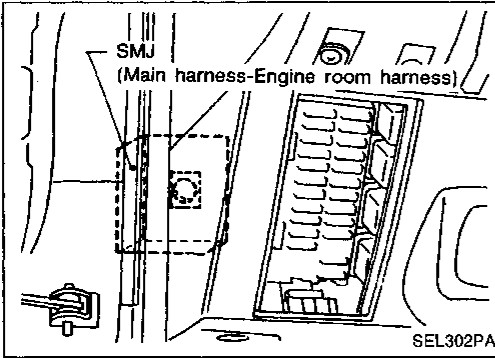


INSTALLATION

To install SMJ, tighten to specified torque as required.

: 3 - 5 N·m
(0.3 - 0.5 kg-m, 2.2 - 3.6 ft-lb)

CAUTION:


Do not overtighten bolts, otherwise, they may be damaged.

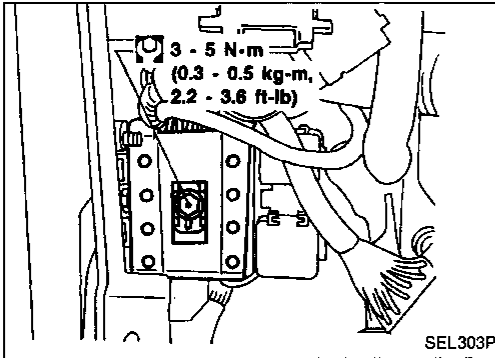


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement


MAIN HARNESS

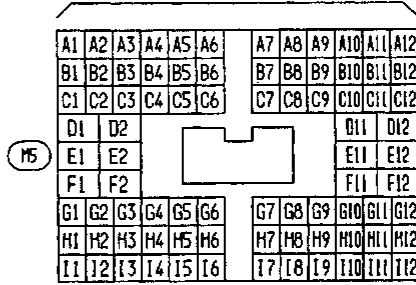

ENGINE ROOM HARNESS

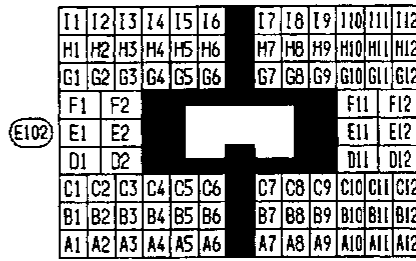


AIRBAG DIAGNOSIS UNIT

 

View from harness side

 ABS CONTROL UNIT




View from harness side

A/T CONTROL UNIT



View from harness side

ECM (ECCS CONTROL MODULE)

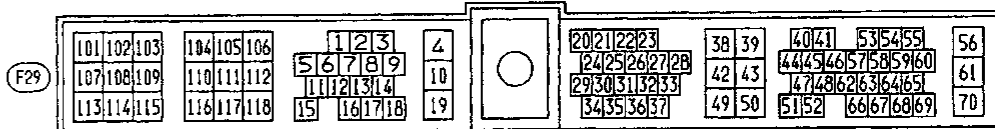

View from harness side

JOINT CONNECTOR

Terminal Arrangement

