

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

**IDX**

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram.....	EC-318	A/C system description (auto A/C).....	HA-18
ABS (anti-lock brake system) .....	BR-33	A/C trouble diagnoses (auto A/C).....	HA-22
ABS - Wiring diagram .....	BR-38	A/C, A - Wiring diagram (auto A/C).....	HA-25
Absolute pressure sensor .....	EC-125	A/C, M - Wiring diagram (manual A/C).....	HA-125
A/C air flow (auto A/C).....	HA-20	Accelerator control system.....	FE-2
A/C air flow (manual A/C).....	HA-120	Accelerator wire adjustment.....	FE-2
A/C component location (auto A/C).....	HA-14	Air bag.....	RS-10
A/C component location (manual A/C).....	HA-118	Air bag disposal .....	RS-23
A/C compressor clutch removal and installation (auto A/C).....	HA-97	Air bag precautions .....	GI-2
A/C compressor clutch removal and installation (manual A/C).....	HA-171	Air bleeding (hydraulic clutch).....	CL-7
A/C compressor precaution (auto A/C).....	HA-6	Air bleeding for brake system.....	BR-7
A/C compressor precaution (manual A/C).....	HA-110	Air cleaner filter replacement.....	MA-17
A/C compressor special service tool (auto A/C).....	HA-9	Air conditioner cut control.....	EC-26
A/C compressor special service tool (manual A/C).....	HA-113	Air flow meter - See Mass air flow sensor.....	EC-116
A/C control linkage adjustment (manual A/C).....	HA-137, 141	Air mix door control linkage adjustment (auto A/C).....	HA-49
A/C control operation (auto A/C).....	HA-18	Air mix door control linkage adjustment (manual A/C).....	HA-146
A/C control operation (manual A/C).....	HA-119	Air mix. door motor (auto A/C).....	HA-47, 91
A/C diagnostic work flow (auto A/C).....	HA-36	Air mix. door motor (manual A/C).....	HA-143
A/C diagnostic work flow (manual A/C).....	HA-129	Air spoiler, rear .....	BT-24
A/C HFC134a (R134a) system precau- tion (auto A/C).....	HA-2	AIRREG - Wiring diagram.....	EC-466
A/C HFC134a (R134a) system precau- tion (manual A/C).....	HA-106	Alternator.....	SC-14
A/C HFC134a (R134a) system service procedure (auto A/C).....	HA-92	Ambient sensor (auto A/C).....	HA-81
A/C HFC134a (R134a) system service procedure (manual A/C).....	HA-167	Angular tightening application .....	EM-2
A/C HFC134a (R134a) system service tools (auto A/C).....	HA-10	Antenna - See Power antenna .....	EL-107
A/C HFC134a (R134a) system service tools (manual A/C).....	HA-114	Anti-lock brake system - See ABS.....	BR-33
A/C HFC134a system service equip- ment precaution (auto A/C).....	HA-6	Anti-lock brake system - Wiring diagram.....	BR-38
A/C HFC134a system service equip- ment precaution (manual A/C).....	HA-110	AP/SEN - Wiring diagram .....	EC-128
A/C lubricant (R134a) (auto A/C).....	HA-94	ASCD (automatic speed control device).....	EL-115
A/C lubricant (R134a) (manual A/C).....	HA-169	ASCD - Wiring diagram .....	EL-119
A/C operational check (auto A/C).....	HA-37	A/T - Wiring diagram - AT - FTS.....	AT-99
A/C operational check (manual A/C).....	HA-130	A/T - Wiring diagram - AT - MAIN.....	AT-90
A/C performance chart (auto A/C).....	HA-72	A/T - Wiring diagram - AT - PNP/SW.....	AT-94
A/C performance chart (manual A/C).....	HA-161	A/T - Wiring diagram - AT - VSS A/T.....	AT-105
A/C performance test diagnoses (auto A/C).....	HA-70	A/T control.....	EC-325
A/C performance test diagnoses (manual A/C).....	HA-159	A/T diagnosis communication line .....	EC-428
A/C push control (manual A/C).....	HA-119	A/T fluid temperature sensor.....	AT-102
A/C relay (auto A/C).....	HA-67	A/T shift lock system.....	AT-227
A/C relay (manual A/C).....	HA-157	A/T shift lock system - Wiring diagram.....	AT-228
A/C self-diagnoses (auto A/C).....	HA-30	A/T trouble diagnoses .....	AT-52
A/C service data specification (manual A/C).....	HA-181	A/T Wiring diagram - AT - ENG SS.....	AT-110
		A/T Wiring diagram AT - 1ST.....	AT-115
		A/T Wiring diagram AT - 2ND.....	AT-121
		A/T Wiring diagram AT - 3RD.....	AT-127
		A/T Wiring diagram AT - 4TH.....	AT-134
		A/T Wiring diagram AT - BA/FTS.....	AT-183
		A/T Wiring diagram AT - LPSV.....	AT-154
		A/T Wiring diagram AT - NONDTC.....	AT-193
		A/T Wiring diagram AT - OVRCSV.....	AT-178
		A/T Wiring diagram AT - SSV/A.....	AT-160
		A/T Wiring diagram AT - SSV/B.....	AT-165
		A/T Wiring diagram AT - TCCSIG.....	AT-147
		A/T Wiring diagram AT - TCV.....	AT-141
		A/T Wiring diagram AT - TPS.....	AT-171
		A/T Wiring diagram AT - VSSMTR.....	AT-189
		AT/C - Wiring diagram.....	EC-327
		ATDIAG - Wiring diagram .....	EC-429
		Audio.....	EL-102

# ALPHABETICAL INDEX

AUDIO - Wiring diagram..... EL-103  
 Audio and A/C control removal and  
 installation - See Instrument panel..... BT-13  
 Auto air conditioner - Wiring diagram  
 (auto A/C)..... HA-25  
 Automatic amplifier (auto A/C)..... HA-28, 40  
 Automatic speed control system - See  
 ASCD..... EL-115  
 Automatic transaxle number..... GI-39  
 Automatic transmission fluid  
 replacement..... MA-23  
 Auxiliary air control (AAC) valve..... EC-315

## B

Back door..... BT-8  
 Back door opener - See Back door..... BT-8  
 Back door trim..... BT-23  
 Back-up lamp..... EL-42  
 Back-up lamp switch (M/T)..... MT-9  
 BACK/L - Wiring diagram..... EL-42  
 Ball joint (front)..... SU-14  
 Basic inspection..... EC-83  
 Battery..... SC-3  
 Baulk ring (M/T)..... MT-16  
 Blower motor (auto A/C)..... HA-57  
 Blower motor (manual A/C)..... HA-151  
 Blower resistor (manual A/C)..... HA-151  
 Board-on lift..... GI-41  
 Body alignment..... BT-45  
 Boring/horning cylinder block..... EM-57  
 BPT valve..... EC-274, 278, 371  
 Brake booster..... BR-16  
 Brake fluid change..... BR-6  
 Brake fluid level..... MA-24  
 Brake fluid level and line check..... BR-6  
 Brake hydraulic line..... BR-8  
 Brake inspection..... MA-24  
 Brake lines and cables inspection..... MA-24  
 Brake master cylinder..... BR-13  
 Brake pedal..... BR-11  
 Bulb specifications..... EL-216  
 Bumper, front..... BT-5  
 Bumper, rear..... BT-8  
 BYPS/V - Wiring diagram..... EC-404

## C

Camshaft inspection..... EM-39  
 Camshaft position sensor (CMPS)..... EC-260  
 CANI/V - Wiring diagram..... EC-417  
 Canister - See EVAP canister..... EC-27  
 CHARGE - Wiring diagram..... SC-12  
 Charging system..... SC-11  
 Chassis and body maintenance..... MA-22  
 CHIME - Wiring diagram..... EL-84  
 CIGAR - Wiring diagram..... EL-94  
 Cigarette lighter..... EL-94

Circuit breaker..... EL-15  
 CKPS - Wiring diagram..... EC-257, 352  
 Closed loop control..... EC-341 GI  
 Closed throttle position switch..... EC-320  
 Clutch cover..... CL-19  
 Clutch damper..... CL-11 MA  
 Clutch disc..... CL-19  
 Clutch fluid level..... MA-22  
 Clutch master cylinder..... CL-8 EM  
 Clutch operating cylinder..... CL-13  
 Clutch pedal..... CL-6  
 Clutch release bearing..... CL-16 LC  
 Clutch release mechanism..... CL-16  
 Clutch withdrawal lever..... CL-16  
 CMPS - Wiring diagram..... EC-263 EC  
 Coil spring (front)..... SU-9  
 Coil spring (rear)..... SU-20  
 Collision diagnosis..... RS-59 FE  
 Combination lamp, front, removal and  
 installation..... BT-5  
 Combination lamp, rear, removal and  
 installation..... BT-24 AT  
 Combination meter..... EL-62 TF  
 Combination meter removal and instal-  
 lation - See Instrument panel..... BT-13  
 Combination switch..... EL-25 PD  
 Component Location (auto A/C)..... HA-22  
 Component Location (manual A/C)..... HA-122  
 Compressor clutch removal and instal-  
 lation (auto A/C)..... HA-97 AX  
 Compressor clutch removal and instal-  
 lation (manual A/C)..... HA-171 SU  
 Compressor precaution (auto A/C)..... HA-6  
 Compressor precaution (manual A/C)..... HA-110  
 Compressor special service tool (auto  
 A/C)..... HA-9 BR  
 Compressor special service tool  
 (manual A/C)..... HA-113 ST  
 Connecting rod..... EM-55  
 Connecting rod bearing clearance..... EM-59  
 Connecting rod bushing clearance..... EM-60 RS  
 Connector inspection..... GI-18  
 Console box - See Instrument panel..... BT-13  
 CONSULT for engine..... EC-64 BT  
 CONSULT general information..... GI-35  
 Control lever (M/T)..... MT-14  
 Control valve (A/T)..... AT-266 HA  
 Converter housing installation..... AT-238  
 COOL/F - Wiring diagram..... EC-439  
 Coolant mixture ratio..... MA-12 SC  
 Coolant replacement..... MA-14  
 Cooling circuit (engine)..... LC-9  
 Cooling fan control..... EC-436 EL  
 Cooling fan motor..... EC-449  
 Cooling fan relay..... EC-449  
 Coupling sleeve (M/T)..... MT-16  
 Crank angle sensor built into distributor  
 - See Camshaft position sensor..... EC-260  
 Crankcase emission control system -  
 See positive crankcase ventilation..... EC-33

# ALPHABETICAL INDEX

Crankcase ventilation system - See	
Positive crankcase ventilation .....	EC-33
Crankshaft .....	EM-57
Crankshaft position sensor (OBD) .....	EC-255, 350
Crankshaft position sensor (OBD) cog	
chipping .....	EC-350
Cruise control - See ASCD .....	EL-115
Cylinder block .....	EM-53
Cylinder block boring .....	EM-57
Cylinder head .....	EM-35
Cylinder head bolt tightening .....	EM-26

## D

Data link connector for Consult .....	EC-34
Daytime light system .....	EL-33
Daytime running light - See Daytime	
light system .....	EL-33
DEF - Wiring diagram .....	EL-97
Detonation sensor - See Knock sensor .....	EC-250
Diagnosis sensor unit .....	RS-15
Diagnostic trouble code (DTC) for OBD	
system .....	EC-2
Diagnostic trouble code (DTC) inspec-	
tion priority chart .....	EC-90
Differential gear (FF A/T) .....	AT-315
Differential gear (FF M/T) .....	MT-16
Dimensions .....	GI-40
Distributor .....	EC-25
Distributor ignition (DI) system .....	EC-25
D/LOCK - Wiring diagram .....	EL-144
Dome light - See Interior lamp .....	EL-56
Door glass .....	BT-11
Door lock .....	BT-11
Door mirror .....	BT-44
Door trim .....	BT-19
Door, front .....	BT-11
Door, rear .....	BT-12
Drive belt inspection .....	MA-13
Drive plate runout .....	EM-61
Drive shaft (front) .....	AX-10
Dropping resistor (A/T) .....	AT-157
DTC WORK SUPPORT .....	EC-73
DTRL - Wiring diagram .....	EL-35

## E

ECM input/output signal .....	EC-101
ECTS - Wiring diagram .....	EC-142, 158
EGR control (EGRC) - BPT valve .....	EC-275
EGR control (EGRC) - solenoid valve .....	EC-355
EGR control valve .....	EC-274, 371
EGR temperature sensor .....	EC-360
EGR/TS - Wiring diagram .....	EC-363
EGRC/V - Wiring diagram .....	EC-357
EGRC1 - Wiring diagram .....	EC-271, 369
Electric sun roof .....	EL-111
Electrical diagnoses .....	GI-21

Electrical ignition system .....	EC-25
Electrical unit .....	Foldout
Electrical units location .....	EL-197
Electronic ignition (EI) system .....	EC-25
Engine compartment .....	BT-46
Engine control circuit diagram .....	EC-18
Engine control component parts	
location .....	EC-13
Engine control module (ECM) .....	EC-329
Engine control system diagram and	
chart .....	EC-20
Engine coolant temperature sensor	
(ECTS) .....	EC-140, 156
Engine fail-safe system .....	EC-91
Engine oil filter replacement .....	MA-18
Engine oil precautions .....	GI-5
Engine oil replacement .....	MA-17
Engine outer component parts .....	EM-9
Engine removal .....	EM-50
Engine room - See Engine	
compartment .....	BT-46
Engine serial number .....	GI-39
EVAP canister .....	EC-28
EVAP canister purge control solenoid	
valve .....	EC-414, 420
EVAP canister purge control valve .....	EC-414, 420
EVAP canister purge volume control	
valve .....	EC-291, 380
EVAP canister vent control	
valve .....	EC-296, 386, 397
EVAP control system (small leak)	
diagnosis .....	EC-30, 283, 372
EVAP control system pressure sensor .....	EC-302
EVAP control system purge flow moni-	
toring diagnosis .....	EC-390
EVAP system close mode .....	EC-30
EVAP vapor lines inspection .....	MA-21
Evaporative emission (EVAP) system .....	EC-27
Exhaust gas recirculation (EGR)	
valve .....	EC-267, 366
Exhaust system .....	FE-6
Exhaust system inspection .....	MA-22
Exterior .....	BT-24

## F

Fan control amp. (auto A/C) .....	HA-59
Fan switch (manual A/C) .....	HA-151
F/FOG - Wiring diagram .....	EL-44
FICD - Wiring diagram .....	EC-470
Final drive (FF A/T) .....	AT-315
Final drive (FF M/T) .....	MT-30
Finisher, interior - See Trim .....	BT-17
Fluid temperature sensor (A/T) .....	AT-102
Fluids .....	MA-11
Flywheel (clutch) .....	CL-19
Flywheel runout .....	EM-61
Fog lamp, front .....	EL-43
Fog lamp, front, removal and	
installation .....	BT-5

# ALPHABETICAL INDEX

Forward clutch.....	AT-290
F/PUMP - Wiring diagram.....	EC-458
Freeze frame data.....	EC-46
FRO2 - Wiring diagram.....	EC-164, 180, 187
FRO2/H - Wiring diagram.....	EC-192
Front axle.....	AX-2
Front bumper.....	BT-5
Front combination lamp removal and installation.....	BT-5
Front disc brake.....	BR-19
Front door.....	BT-11
Front fog lamp.....	EL-43
Front fog lamp removal and installation.....	BT-5
Front heated oxygen sensor (HO2S).....	EC-161, 167, 172, 177, 184
Front heated oxygen sensor (HO2S) heater.....	EC-190
Front seat.....	BT-29
Front seat belt.....	RS-3
Front suspension.....	SU-2
Front washer.....	EL-88
Front wiper.....	EL-88
FUEL - Wiring diagram.....	EC-231, 237
Fuel cut control (at no load & high engine speed).....	EC-27
Fuel filler lid.....	BT-8
Fuel filter.....	EC-34
Fuel filter replacement.....	MA-16
Fuel gauge.....	EL-62
Fuel injection system.....	EC-229, 235
Fuel injector.....	EC-450
Fuel line inspection.....	MA-16
Fuel precautions.....	GI-5
Fuel pressure check.....	EC-34
Fuel pressure regulator.....	EC-35
Fuel pressure release.....	EC-34
Fuel pump.....	EC-457
Fuel pump relay.....	EC-457
Fuel system.....	FE-3
Fuel tank vacuum relief valve.....	EC-28
Fuse.....	EL-15
Fuse block.....	Foldout
Fusible link.....	EL-15

## G

Garage jack and safety stand.....	GI-42
Gauges.....	EL-62
Gear components (M/T).....	MT-16
Generator - See Alternator.....	SC-14
Generic scan tool (GST).....	EC-77
Glass.....	BT-11
Grease.....	MA-11
Ground distribution.....	EL-16

## H

Harness connector.....	EL-3
------------------------	------

Harness connector inspection.....	GI-18
Harness layout.....	EL-200
Hazard warning lamp.....	EL-46
Headlamp.....	EL-28
Headlining - See Roof trim.....	BT-21
Heated oxygen sensor (HO2S) (front).....	EC-161, 167, 172, 177, 184
Heated oxygen sensor (HO2S) heater (front).....	EC-190
Heated oxygen sensor (HO2S) heater (rear).....	EC-224
Heated oxygen sensor (rear).....	EC-195, 203, 210, 218
Heated seat.....	BT-31, EL-114
Height (Dimensions).....	GI-40
HFC134a (R134a) system precaution (auto A/C).....	HA-2
HFC134a (R134a) system precaution (manual A/C).....	HA-106
HFC134a (R134a) system service pro- cedure (auto A/C).....	HA-92
HFC134a (R134a) system service pro- cedure (manual A/C).....	HA-167
HFC134a (R134a) system service tools (auto A/C).....	HA-10
HFC134a (R134a) system service tools (manual A/C).....	HA-114
HFC134a system service equipment precaution (auto A/C).....	HA-6
HFC134a system service equipment precaution (manual A/C).....	HA-110
High clutch.....	AT-285
H/LAMP - Wiring diagram.....	EL-29
Hood.....	BT-5
Horn.....	EL-93
HORN - Wiring diagram.....	EL-93
How to erase DTC for OBD system.....	EC-54
HSEAT - Wiring diagram.....	EL-114
Hydraulic lash adjuster inspection.....	EM-44

## I

IACV - air regulator.....	EC-465
IACV-AAC valve.....	EC-315
IACV-FICD solenoid valve.....	EC-469
IATS - Wiring diagram.....	EC-137
Identification plate.....	GI-39
Idle air control (IAC) system.....	EC-315
Idle air control valve (IACV).....	EC-315
Idle mixture ratio.....	EC-36
Idle speed.....	EC-36
IGN/SG - Wiring diagram.....	EC-346
Ignition coil.....	EC-348
Ignition control system.....	EC-343
Ignition timing.....	EC-36
Ignition wire inspection.....	EC-249
ILL - Wiring diagram.....	EL-53
Illumination.....	EL-51
In vehicle sensor (auto A/C).....	HA-84
Inhibitor switch.....	EC-431

# ALPHABETICAL INDEX

INJECT - Wiring diagram .....	EC-451
Injector removal and installation .....	EC-35
Input shaft (FF M/T) .....	MT-16
Instrument panel .....	BT-13
INT/L - Wiring diagram .....	EL-61
Intake air temperature sensor .....	EC-134
Intake door control linkage adjustment (auto A/C) .....	HA-56
Intake door control linkage adjustment (manual A/C) .....	HA-137
Intake door motor (auto A/C) .....	HA-51
Intake door motor (manual A/C) .....	HA-134
Integrated homelink transmitter .....	EL-195
Interior .....	BT-17
Interior lamp .....	EL-56, 60
Interior lamp on-off control .....	EL-57

## J

Jacking points .....	GI-42
Joint connector (J/C) .....	Foldout
Junction box (J/B) .....	Foldout

## K

Keyless entry system - See Multi-re- mote control system .....	EL-154
Knock sensor (KS) .....	EC-250, 252
Knuckle spindle .....	AX-5

## L

Length (Dimensions) .....	GI-40
License lamp .....	EL-39
Line pressure solenoid valve .....	AT-138
Line pressure test (A/T) .....	AT-62
Liquid gasket application .....	EM-2
Location of electrical units .....	EL-197
Lock, door .....	BT-11
Low and reverse brake .....	AT-297
Lubricant (R134a) A/C (auto A/C) .....	HA-94
Lubricant (R134a) A/C (manual A/C) .....	HA-169
Lubricants .....	MA-11
Lubrication circuit (engine) .....	LC-3
Lubrication-locks, hinges and hood latches .....	MA-26
Luggage room lamp .....	EL-60

## M

MAFS - Wiring diagram .....	EC-121
Magnet clutch (auto A/C) .....	HA-63, 97
Magnet clutch (manual A/C) .....	HA-171
MAIN - Wiring diagram .....	EC-111
Mainshaft (M/T) .....	MT-16

Maintenance (engine) .....	MA-13
MAJOR OVERHAUL .....	AT-240
Malfunction indicator lamp (MIL) .....	EC-55
Manual air conditioner - Wiring diagram (manual A/C) .....	HA-125
Manual transaxle number .....	GI-39
Manual transmission oil replacement .....	MA-22
MAP/BARO switch solenoid valve .....	EC-331
Mass air flow sensor (MAFS) .....	EC-116
Master cylinder (brake) .....	BR-13
Master cylinder (clutch) .....	CL-8
Meter .....	EL-62
METER - Wiring diagram .....	EL-65
MIL & Data link connectors circuit .....	EC-475
MIL/DL - Wiring diagram .....	EC-475
MIRROR - Wiring diagram .....	EL-112
Mirror defogger .....	EL-95
Mirror, door .....	BT-44
Mirror, out side .....	BT-44
Misfire .....	EC-245
Mode door control linkage adjustment (auto A/C) .....	HA-46
Mode door control linkage adjustment (manual A/C) .....	HA-141
Mode door motor (auto A/C) .....	HA-42
Model variation .....	GI-37
Molding - See Exterior .....	BT-24
M/T major overhaul .....	MT-14
M/T removal and installation .....	MT-11
MULTI - Wiring diagram .....	EL-156
Multi-remote control system .....	EL-154
Multipoint fuel injection (MFI) system .....	EC-23
Multipoint fuel injection precautions .....	GI-4

## N

Neutral position switch .....	EC-431
NVH troubleshooting (AX) .....	AX-3
NVH troubleshooting (BR) .....	BR-5
NVH troubleshooting (CL) .....	CL-4
NVH troubleshooting (M/T) .....	MT-5
NVH troubleshooting (ST) .....	ST-5
NVH troubleshooting (SU) .....	SU-15

## O

Oil change (capacity) .....	MA-11
Oil pan (engine) .....	EM-13
Oil pressure (engine) .....	LC-4
Oil pump (A/T) .....	AT-262
Oil pump (engine) .....	LC-4
Oil pump regulator valve (engine) .....	LC-6
Oil seal replacement (engine) .....	EM-33
On board diagnostic system .....	EC-44
Operating cylinder (clutch) .....	CL-13
Out side mirror .....	BT-44
Overdrive control switch .....	AT-225
Overrun clutch .....	AT-290

# ALPHABETICAL INDEX

Overrun clutch solenoid valve..... AT-138  
 Oversize piston ..... EM-57

## P

P/ANT - Wiring diagram..... EL-108  
 Park/Neutral position switch..... EC-431  
 Park/neutral position switch (M/T) ..... MT-9  
 Parking brake control ..... BR-31  
 Parking lamp ..... EL-39  
 PCV (positive crankcase ventilation) ..... EC-33  
 PGC/V - Wiring diagram ..... EC-293  
 Pilot bushing replacement ..... EM-61  
 Piston assembly..... EM-62  
 Piston pin inspection..... EM-54  
 Piston ring inspection ..... EM-55  
 Piston to bore clearance..... EM-56  
 PNP switch..... AT-92  
 PNP/SW - Wiring diagram ..... EC-433  
 POWER - Wiring diagram ..... EL-8  
 Power antenna..... EL-107  
 Power door lock..... EL-142  
 Power door mirror ..... EL-112  
 Power seat ..... EL-113  
 Power steering fluid level..... MA-25, ST-7  
 Power steering gear ..... ST-15  
 Power steering hydraulic pressure ..... ST-8  
 Power steering oil pressure switch ..... EC-461  
 Power steering oil pump..... ST-26  
 Power steering system bleeding ..... ST-7  
 Power supply routing ..... EL-7  
 Power transistor ..... EC-349  
 Power transistor & ignition coil ..... EC-343  
 Power window..... EL-135  
 PRE/SE - Wiring diagram ..... EC-305  
 Precautions (General) ..... GI-3  
 Pressure plate - See Clutch cover ..... CL-19  
 Pressure test (A/T) ..... AT-62  
 PST/SW - Wiring diagram..... EC-462

## R

Radiator ..... LC-14  
 Radiator fan - See Cooling fan ..... LC-14  
 Radio - See Audio ..... EL-102  
 Rear air spoiler ..... BT-24  
 Rear axle ..... AX-20  
 Rear bumper..... BT-8  
 Rear combination lamp removal and  
 installation ..... BT-24  
 Rear disc brake ..... BR-23  
 Rear door ..... BT-12  
 Rear heated oxygen sensor  
 (HO2S) ..... EC-195, 203, 210, 218  
 Rear heated oxygen sensor (HO2S)  
 heater ..... EC-224  
 Rear seat ..... BT-32  
 Rear seat belt..... RS-5

Rear suspension ..... SU-15  
 Rear window defogger..... EL-95  
 Refrigerant connection precaution (auto  
 A/C)..... HA-3 GI  
 Refrigerant connection precaution  
 (manual A/C)..... HA-107 MA  
 Refrigerant discharging evacuating  
 charging (auto A/C) ..... HA-92 EM  
 Refrigerant general precaution (auto  
 A/C)..... HA-3  
 Refrigerant general precaution (manual  
 A/C)..... HA-107 LC  
 Refrigerant lines (auto A/C) ..... HA-101  
 Refrigerant lines (manual A/C)..... HA-176 EC  
 Refrigeration cycle (auto A/C) ..... HA-13  
 Refrigeration cycle (manual A/C) ..... HA-117  
 Release bearing (clutch) ..... CL-16 FE  
 Removal and installation (A/T)..... AT-237  
 Resistor ..... EC-349  
 Reverse clutch..... AT-281 AT  
 Reverse idler shaft (M/T) ..... MT-15  
 Reverse lamp switch (M/T) - See  
 Back-up lamp switch (M/T)..... MT-9 TF  
 Reverse main gear (M/T) ..... MT-16  
 Revolution sensor (A/T) ..... AT-107  
 Road wheel size ..... GI-40 PD  
 Roof trim ..... BT-21  
 Room lamp - See Interior lamp ..... EL-56  
 ROOM/L - Wiring diagram ..... EL-58 AX  
 RRO2 - Wiring diagram..... EC-198, 206, 213, 220  
 RRO2/H - Wiring diagram ..... EC-226

## S

SAE J1930 terminology list ..... GI-47  
 Seal - See Exterior ..... BT-24  
 SEAT - Wiring diagram ..... EL-113 ST  
 Seat belt inspection..... MA-26, RS-7  
 Seat belt pre-tensioner..... RS-2  
 Seat belt pre-tensioner disposal ..... RS-23 RS  
 Seat belt, front..... RS-3  
 Seat belt, rear ..... RS-5  
 Seat, front ..... BT-29 BT  
 Seat, rear ..... BT-32  
 Self-diagnostic results ..... EC-56  
 SFT, RE - Wiring diagram ..... AT-228 HA  
 SHIFT - Wiring diagram ..... AT-228  
 Shift control components (M/T)..... MT-17  
 Shift fork (M/T) ..... MT-17 SC  
 Shift lever ..... MT-14  
 Shift lock system ..... AT-227  
 Shift schedule..... AT-343  
 Shift solenoid valve A (A/T)..... AT-112, 117, 129  
 Shift solenoid valve B (A/T)..... AT-112, 117  
 Shock absorber (front) ..... SU-10  
 Shock absorber (rear) ..... SU-20  
 Side air bag ..... RS-21  
 Side trim..... BT-17  
 Smart entrance control unit ..... EL-190  
 SMJ (super multiple junction)..... Foldout

# ALPHABETICAL INDEX

Spare tire size .....	GI-40
Spark plug replacement.....	MA-19
Speedometer .....	EL-62
Spot lamp.....	EL-60
Spring (Wheelarch) height.....	SU-5
SROOF - Wiring diagram.....	EL-111
SRS - See Supplemental Restraint System.....	RS-10
SRS - Wiring diagram .....	RS-35
S/SIG - Wiring diagram.....	EC-455
Stabilizer bar (front) .....	SU-13
Stall test (A/T) .....	AT-58
Standardized relay .....	EL-5
START - Wiring diagram .....	SC-8
Start signal .....	EC-454
Starter.....	SC-10
Starting system .....	SC-6
Steering gear, linkage and transfer gear inspection.....	MA-25
Steering linkage .....	ST-15
Steering switch .....	EL-27
Steering wheel and column .....	ST-10
Steering wheel play .....	ST-6
Steering wheel turning force.....	ST-8
Stop lamp.....	EL-41
STOP/L - Wiring diagram .....	EL-41
Striking rod (M/T) .....	MT-17
Strut (front) .....	SU-9
Sun roof, electric .....	EL-111
Sunload sensor (auto A/C).....	HA-86
Sunroof .....	BT-33
Supplemental Restraint System.....	RS-10
Supplemental restraint system - Wiring diagram.....	RS-35
SW/V - Wiring diagram .....	EC-335
Symbols and abbreviations .....	GI-8
Symptom matrix chart.....	EC-92
Synchronizer (M/T).....	MT-16
System readiness test (SRT) code.....	EC-46

## T

Tachometer .....	EL-62
Tail lamp.....	EL-39
TAIL/L - Wiring diagram.....	EL-39
Tank fuel temperature sensor .....	EC-241
TCM circuit diagram .....	AT-13
TCM inspection table .....	AT-86
TFTS - Wiring diagram .....	EC-243
THEFT - Wiring diagram.....	EL-173
Theft warning system .....	EL-168
Thermostat.....	LC-12
Three way catalyst.....	EC-279
Three way catalyst precautions .....	GI-4
Throttle bodies .....	EM-10
Throttle position sensor (TPS).....	EC-145
Throttle position sensor adjustment.....	EC-83
Throttle position switch.....	EC-320, AT-175, 225
Throwout bearing - See Clutch release bearing.....	CL-16

Tie-rod ball joints .....	ST-19
Tightening torque of standard bolts .....	GI-46
Timing belt .....	EM-18
Tire rotation.....	MA-24
Tire size .....	GI-40
Torque converter installation .....	AT-238
Torque convertor clutch solenoid valve.....	AT-138
Tow truck towing.....	GI-43
TP/SW - Wiring diagram .....	EC-322
TPS - Wiring diagram .....	EC-152
Transmission case (M/T).....	MT-15
TRANSMT - Wiring diagram.....	EL-195
Tread-FR&RR (Dimensions) .....	GI-40
Trim .....	BT-17
Triple pressure switch (auto A/C).....	HA-68
Trouble diagnoses .....	GI-31
TURN - Wiring diagram .....	EL-48
Turn signal lamp .....	EL-46
Two trip detection logic .....	EC-44
Two-pole lift .....	GI-43

## U

Under body .....	BT-48
------------------	-------

## V

Vacuum cut valve .....	EC-413
Vacuum cut valve bypass valve.....	EC-402, 407
Vacuum hose drawing (Engine control).....	EC-21
Valve guide .....	EM-40
Valve seat .....	EM-42
Valve spring .....	EM-44
Vehicle identification number .....	GI-38
Vehicle recovery (freeing a stuck vehicle).....	GI-45
Vehicle speed sensor (VSS) .....	EC-310
Vent mode switch (manual A/C).....	HA-119
VENT/V - Wiring diagram .....	EC-298
Viscosity number (SAE) .....	MA-11
Viscous coupling (FF A/T).....	AT-315
Viscous coupling (FF M/T).....	MT-10
VSS - Wiring diagram .....	EC-313

## W

WARN - Wiring diagram .....	EL-76
Warning chime .....	EL-82
Warning lamps .....	EL-75
Washer, front.....	EL-88
Water cock control rod adjustment (manual A/C).....	HA-146
Water pump .....	LC-10
Water temperature gauge.....	EL-62
Weatherstrip - See Exterior .....	BT-24
Wheel alignment (front).....	SU-6
Wheel alignment (rear) .....	SU-17

# ALPHABETICAL INDEX

---

Wheel balance .....	MA-24	WINDOW - Wiring diagram .....	EL-138
Wheel bearing (front).....	AX-4	Window, door .....	BT-11
Wheel bearing (rear) .....	AX-21	Windshield .....	BT-42
Wheel hub (front).....	AX-5	WIPER - Wiring diagram .....	EL-90
Wheel hub (rear) .....	AX-21	Wiper, front .....	EL-88
Wheel size .....	GI-40	Wiring Diagram (Cell code) list.....	EL-217
Wheelarch height .....	SU-5	Wiring diagrams .....	GI-9
Wheelbase (Dimensions) .....	GI-40	Withdrawal lever (clutch) .....	CL-16
Wide open & closed throttle position switch.....	EC-145	Wrist pin - See Piston pin inspection .....	EM-54
Width (Dimensions) .....	GI-40		

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

**IDX**