

**SECTION IDX
ALPHABETICAL INDEX**

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

A

A/C air flow [ATC-35](#)
 A/C and audio controller [ATC-113](#)
 A/C component layout [ATC-24](#)
 A/C compressor clutch removal and installation
[ATC-137](#)
 A/C compressor mounting [ATC-136](#), [ATC-137](#),
[ATC-140](#), [ATC-141](#), [ATC-142](#), [ATC-143](#), [ATC-144](#),
[ATC-146](#), [ATC-147](#), [ATC-148](#), [ATC-149](#), [ATC-150](#)
 A/C compressor precaution [ATC-11](#)
 A/C compressor special service tool [ATC-15](#)
 A/C control operation (auto A/C) [ATC-32](#)
 A/C diagnostic work flow (auto A/C) [ATC-99](#)
 A/C evaporator [ATC-149](#)
 A/C HFC134a (R134a) system precaution [ATC-5](#)
 A/C HFC134a (R134a) system service procedure
[ATC-134](#)
 A/C HFC134a (R134a) system service tools ... [ATC-16](#)
 A/C HFC134a system service equipment precaution ...
[ATC-12](#)
 A/C lubricant (R134a) [ATC-25](#)
 A/C lubrication oil [ATC-155](#)
 A/C operational check [ATC-60](#)
 A/C self-diagnoses (auto A/C) [ATC-51](#), [ATC-99](#)
 A/C service data specification [ATC-155](#)
 A/C system description (auto A/C) [ATC-28](#)
 A/C trouble diagnoses (auto A/C) [ATC-38](#)
 A/C, A - Wiring diagram [ATC-43](#)
 A/T fluid checking [AT-12](#), [AT-50](#)
 A/T fluid cooler cleaning [AT-14](#)
 A/T fluid replacement [AT-12](#)
 A/T fluid temperature sensor [AT-128](#)
 A/T IND - Wiring diagram [DI-35](#)
 A/T self-diagnoses [AT-95](#)
 A/T shift lock system [AT-217](#)
 A/T shift lock system - Wiring diagram [AT-218](#)
 A/T trouble diagnoses [AT-41](#)
 Accelerator control system [ACC-3](#)
 Accelerator pedal position (APP) sensor [EC-592](#),
[EC-599](#), [EC-613](#)
 Accelerator pedal released position learning [EC-79](#)
 AF1B1-Wiring diagram [EC-250](#), [EC-259](#), [EC-268](#),
[EC-278](#), [EC-623](#)
 AF1B2-Wiring diagram [EC-252](#), [EC-261](#), [EC-270](#),
[EC-280](#), [EC-625](#)
 AF1HB1-Wiring diagram [EC-177](#)
 AF1HB2-Wiring diagram [EC-179](#)
 Air bag [SRS-3](#)
 Air bag precautions [SRS-3](#)
 Air bleeding (hydraulic clutch) [CL-7](#)
 Air bleeding for brake system [BR-10](#)
 Air cleaner and air duct [EM-16](#)
 Air cleaner filter replacement [MA-15](#)
 Air conditioner cut control [EC-28](#)
 Air flow meter - See Mass air flow sensor [EC-207](#),
[EC-216](#)
 Air fuel ratio sensor 1 [EC-247](#), [EC-257](#), [EC-266](#),
[EC-275](#), [EC-621](#)

Air fuel ratio sensor 1 heater [EC-176](#)
 Air mix. door motor [ATC-130](#)
 Ambient sensor [ATC-100](#), [ATC-115](#)
 Angular tightening application [EM-5](#)
 APPS1 - Wiring diagram [EC-594](#)
 APPS2 - Wiring diagram [EC-601](#)
 APPS3 - Wiring diagram [EC-615](#)
 ASC/BS - Wiring diagram [EC-552](#)
 ASC/SW - Wiring diagram [EC-543](#)
 ASCBOF - Wiring diagram [EC-634](#)
 ASCD [EC-29](#)
 ASCD (automatic speed control device) [ACS-2](#)
 ASCD brake switch [EC-549](#), [EC-633](#)
 ASCD indicator lamp [EC-647](#)
 ASCD steering switch [EC-541](#)
 ASCIND - Wiring diagram [EC-648](#)
 AT indicator lamp [DI-34](#)
 Audio [AV-6](#)
 Auto air conditioner - Wiring diagram [ATC-43](#)
 Auto amp [ATC-114](#)
 Auto anti-dazzling inside mirror [GW-56](#)
 Automatic amplifier [ATC-48](#), [ATC-61](#), [ATC-114](#)
 Automatic transmission fluid replacement [MA-22](#)
 Axle [MA-27](#)
 Axle housing (rear) [RAX-8](#)

B

BACK/L - Wiring diagram [LT-106](#)
 Back-up lamp [LT-106](#)
 Back-up lamp switch (M/T) [MT-11](#)
 Basic inspection [EC-71](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-15](#),
[SC-23](#)
 Blower motor [ATC-77](#), [ATC-121](#)
 Blower unit [ATC-119](#)
 Bose speaker amp. [AV-6](#)
 Brake booster [BR-17](#)
 Brake fluid change [BR-9](#), [BR-10](#)
 Brake fluid level [MA-24](#)
 Brake fluid level and line check [BR-9](#)
 Brake hydraulic line [BR-11](#)
 Brake inspection [MA-25](#)
 Brake lines and cables inspection [MA-25](#)
 Brake master cylinder [BR-14](#)
 Brake pedal [BR-6](#)
 Brake switch [EC-568](#)
 BRK/SW - Wiring diagram [EC-569](#)
 Bulb specifications [LT-166](#)

C

Camshaft [EM-100](#)
 Camshaft inspection [EM-102](#)
 Camshaft position sensor (PHASE) [EC-382](#)
 CAN [DI-57](#)
 CAN - Wiring diagram [EC-162](#), [AT-99](#)
 CAN (Controller Area Network) . [BL-94](#), [BL-192](#), [SE-18](#)

ALPHABETICAL INDEX

CAN communication . EC-31 , EC-161 , EC-164 , AT-30 , AT-98 , BL-94 , BL-192 , SE-18 , WW-9	Door glass Fitting Adjustment(Front)	GW-54
Center bearing assembly (propeller shaft)	Door mirror	GW-81 , GW-82
Center bearing disassembly (propeller shaft)	Door trim	EI-29
CHARGE - Wiring diagram	Door, front	BL-159 , GW-52
Charging system	Door, rear	BL-159
Chassis and body maintenance	Drive belt	EM-14
CHIME - Wiring diagram	Drive shaft (rear)	RAX-10
CIGAR - Wiring diagram	Driver air bag	SRS-42
Cigarette lighter	DTRL - Wiring diagram	LT-39
Circuit breaker	Duct and grilles	ATC-131
Clock	E	
Closed loop control	ECM power supply	EC-152 , EC-492
Clutch master cylinder	ECM/PW - Wiring diagram	EC-493
Clutch operating cylinder	ECTS - Wiring diagram	EC-229
Clutch pedal	Electric sunroof	RF-10
Clutch release bearing	Electric throttle control actuator	EC-579 , EC-590
Clutch release mechanism	Electrical load signal circuit	EC-650
Clutch withdrawal lever	Electrical unit	PG-68
Coil spring (front)	Electrical units location	PG-61
Collision diagnosis	Electronic ignition (EI) system	EC-26
Combination lamp, rear, removal and installation	Engine control circuit diagram	EC-109
LT-126	Engine control component parts location	EC-96 , EC-102
Combination meter	Engine control module (ECM)	EC-496
COMPAS - Wiring diagram	Engine control system diagram	EC-22 , EC-23
Compass	Engine coolant	CO-10
Component Location (auto A/C)	Engine coolant temperature sensor (ECTS) ...	EC-227 , EC-239
Compression pressure	Engine fail-safe system	EC-91
Compressor clutch removal and installation ..	Engine oil	LU-7
Compressor special service tool	Engine oil filter replacement	MA-16
Condenser	Engine oil precautions	GI-8
CONSULT-II Reference value (A/T)	ETC1 - Wiring diagram	EC-580
Control units (terminal arrangement)	ETC2 - Wiring diagram	EC-575
Control valve (A/T)	ETC3 - Wiring diagram	EC-586
Controller Area Network (CAN) BL-94 , BL-192 , SE-18	EVAP canister	EC-35
Converter housing installation	EVAP canister purge volume control solenoid valve	EC-411 , EC-419
COOL/F - Wiring diagram	EVAP canister vent control valve	EC-426 , EC-433
Cooling circuit (engine)	EVAP control system (small leak) diagnosis ...	EC-403
Cooling fan	EVAP control system pressure sensor	EC-440 , EC-443 , EC-449
Cooling fan motor	EVAP control system purge flow monitoring diagnosis	EC-398
Crankcase ventilation system - See Positive crankcase ventilation	EVAP vapor lines inspection	MA-18
Crankshaft position sensor (POS)	Evaporative emission (EVAP) system	EC-32
Crash zone sensor	Evaporator	ATC-149
Cylinder head	EVCB1 - Wiring diagram	EC-200
D		
D/LOCK - Wiring diagram	EVCB2 - Wiring diagram	EC-202
Daytime light system	EVCSB1 - Wiring diagram	EC-513
Daytime running light - See Daytime light system	EVCSB2 - Wiring diagram	EC-515
Diagnosis sensor unit	Exhaust manifold	EM-25
Diagnostic trouble code (DTC) for OBD system .	Exhaust system	EX-3
EC-8 , EC-48	Exhaust system inspection	EX-3 , MA-19
Diagnostic trouble code (DTC) inspection priority chart EC-89	Exhaust valve timing control (Bank 1)	EC-171
Direct clutch solenoid valve	Exhaust valve timing control (Bank 2)	EC-171
Display and amp.assembly	Exhaust valve timing control learning	EC-78
Door glass		

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

Exhaust valve timing control magnet retarder (Bank 1)	
EC-199	
Exhaust valve timing control magnet retarder (Bank 2)	
EC-199	
Exhaust valve timing control position sensor (Bank 1) .	
EC-512	
Exhaust valve timing control position sensor (Bank 2) .	
EC-512	
Expansion valve	ATC-150

F

F/FOG - Wiring diagram	LT-66
F/PUMP - Wiring diagram	EC-660
Final drive pre-inspection	RFD-20, RFD-40
Floor trim	EI-34
Flow charts	GI-27
Fluid temperature sensor (A/T)	AT-128
Fluorescent leak detector	ATC-151
Flywheel runout	EM-165
Fog lamp, front	LT-64
Freeze frame data	EC-52
Front brake solenoid valve	AT-144, AT-146
Front door	BL-159, GW-52
Front fog lamp	LT-64
Front passenger air bag	SRS-46
Front seat	SE-134
Front seat belt	SB-4
Front seat belt pre-tensioner	SB-2, SRS-3, SRS-51
Front suspension	FSU-5
Front washer	WW-4
Front wiper	WW-4
FTS - Wiring diagram	AT-129
FTTS - Wiring diagram	EC-346, EC-350
Fuel cut control (at no load high engine speed) .	EC-27
Fuel filter replacement	FL-5
Fuel gauge	DI-4
Fuel injection system (Bank 1)	EC-321, EC-333
Fuel injection system (Bank 2)	EC-321, EC-333
Fuel injector	EC-652
Fuel level sensor	EC-474, EC-476, EC-478
Fuel line inspection	FL-4, MA-15
Fuel precautions	GI-6
Fuel pressure check	EC-82
Fuel pressure release	EC-81
Fuel pump	EC-659
Fuel pump and gauge	FL-5
Fuel system	FL-4
Fuel tank	FL-11
Fuel tank temperature sensor	EC-344, EC-349
Fuel tank vacuum relief valve	EC-35
FUELB1 - Wiring diagram	EC-323, EC-335
FUELB2 - Wiring diagram	EC-325, EC-337
Fuse	PG-15
Fuse and fusible link box	PG-74
Fusible link	PG-15

G

Gauges	DI-4
Generic scan tool (GST)	EC-133
Glass	GW-11, GW-13, GW-52
Ground distribution	PG-28

H

H/LAMP - Wiring diagram	LT-9
Harness connector	PG-65
Harness layout	PG-40
Hazard warning lamp	LT-77
Headlining - See Roof trim	EI-36
Heated oxygen sensor 2 (bank 1)	EC-287, EC-298, EC-310
Heated oxygen sensor 2 (bank 2)	EC-287, EC-298, EC-310
Heated oxygen sensor 2 heater (bank 1)	EC-183
Heated oxygen sensor 2 heater (bank 2)	EC-183
Heated seat	SE-126
Heater and cooling unit (Heater core)	ATC-124
HFC134a (R134a) system precaution	ATC-5
HFC134a (R134a) system service procedure	ATC-134
HFC134a (R134a) system service tools	ATC-16
HFC134a system service equipment precaution	ATC-12
High and low reverse clutch solenoid valve	AT-152, AT-154
Hood	BL-13
Hood lock system	BL-16
Horn	WW-44
HORN - Wiring diagram	WW-44
How to erase DTC for OBD system	EC-61
HSEAT - Wiring diagram	SE-128

I

IATS - Wiring diagram	EC-224
Idle air volume learning	EC-79
Idle speed	EC-76
Idle speed control (ISC)	EC-483, EC-485
Ignition coil	EM-35, EC-665
Ignition control system	EC-665
Ignition timing	EC-76
IGNSYS - Wiring diagram	EC-666
In vehicle sensor	ATC-103, ATC-116
INJECT - Wiring diagram	EC-653
Input clutch solenoid valve	AT-140, AT-142
Intake air temperature sensor	EC-223, EC-242
Intake door control linkage adjustment	ATC-76
Intake door motor	ATC-74, ATC-122
Intake manifold	EM-23
Intake manifold collector	EM-18
Intake sensor	ATC-109, ATC-118
Intake valve timing control (Bank 1)	EC-166
Intake valve timing control (Bank 2)	EC-166
Intake valve timing control solenoid valve (Bank 1)	EC-191

ALPHABETICAL INDEX

Intake valve timing control solenoid valve (Bank 2)	EC-191
Integrated homelink transmitter	BL-238
Interior	EI-31
Interior lamp	LT-127
IVCB1 - Wiring diagram	EC-192
IVCB2 - Wiring diagram	EC-194
IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3

K

KEYLES - Wiring diagram	BL-55
Knock sensor (KS)	EC-370
KS - Wiring diagram	EC-371

L

LAN system circuit	ATC-64
Latch (lower anchors and tether for children) system ...	SB-10
Line pressure solenoid valve	AT-123
Line pressure test (A/T)	AT-52
Liquid gasket application	LU-2 , CO-2
Location of electrical units	PG-61
Low coast brake solenoid valve	AT-156 , AT-158
Lubricant (R134a) A/C	ATC-25
Lubrication circuit (engine)	LU-4
Lubrication oil A/C	ATC-155
Luggage compartment trim	EI-38

M

M/T oil replacement	MT-9
MAFS - Wiring diagram	EC-210 , EC-218
Magnet clutch	ATC-82 , ATC-137
MAIN - Wiring diagram	EC-152 , AT-172
Maintenance (engine)	MA-12
Malfunction indicator lamp (MIL)	EC-62
Manual transmission oil replacement ...	MA-19 , MA-20
Mass air flow sensor (MAFS)	EC-207 , EC-216
Master cylinder (brake)	BR-14
Master cylinder (clutch)	CL-8
Meter	DI-4
METER - Wiring diagram	DI-11
MIL data link connectors circuit	EC-683
MIL/DL - Wiring diagram	EC-683
Mirror, door	GW-81 , GW-82
Mirror, out side	GW-81 , GW-82
Misfire	EC-360
MMSW - Wiring diagram	AT-161
Mode door control linkage adjustment	ATC-70
Mode door motor	ATC-68 , ATC-129
Multiplex communication	ATC-111
Multiport fuel injection (MFI) system	EC-24
Multiport fuel injection precautions	GI-7

N

NATS - Wiring diagram	BL-218
NAVI - Wiring diagram	AV-46
Navigation system	AV-41
NONDTC - Wiring diagram	AT-179
NVH troubleshooting (BR)	BR-5
NVH troubleshooting (Final drive)	RFD-7
NVH troubleshooting (Propeller shaft)	PR-3
NVH troubleshooting (WT)	WT-5
NVIS (Nissan vehicle immobilizer system) precautions	GI-3

O

O2H2B1 - Wiring diagram	EC-185
O2H2B2 - Wiring diagram	EC-187
O2S2B1 - Wiring diagram ...	EC-290 , EC-300 , EC-313
O2S2B2 - Wiring diagram ...	EC-292 , EC-302 , EC-315
Oil cooler (engine)	LU-11
Oil filter	LU-10
Oil pan (engine)	EM-29
Oil pressure (engine)	LU-8
Oil pump (A/T)	AT-279
Oil pump (engine)	LU-13
Oil pump regulator valve (engine)	LU-13
Oil seal replacement (front of final drive)	RFD-10
Oil seal replacement (side of final drive)	RFD-15
On board diagnostic system	EC-47
Operating cylinder (clutch)	CL-11
ORVR (On-board Refueling Vapor Recovery) ...	EC-39
Out side mirror	GW-81 , GW-82
Overheat	EC-523

P

P/SCKT - Wiring diagram	WW-42
Park/Neutral position switch	EC-504
Park/neutral position switch (A/T)	AT-106
Parking brake control	PB-6
Parking drum brake	PB-8
PCV (positive crankcase ventilation)	EC-44
PGC/V - Wiring diagram	EC-413 , EC-421
PHSB1 - Wiring diagram	EC-384
PHSB2 - Wiring diagram	EC-386
PNP/SW - Wiring diagram ...	EC-506 , EC-508 , AT-107
POS - Wiring diagram	EC-377
POWER - Wiring diagram	PG-4
Power door lock	BL-21
Power seat	SE-84
Power socket	WW-42
Power steering fluid level	PS-7 , MA-26
Power steering gear	PS-19
Power steering hydraulic pressure	PS-31
Power steering oil pump	PS-31
Power steering pressure (PSP) sensor	EC-487
Power steering system bleeding	PS-7
Power supply routing	PG-3
Power window	GW-17

A

B

C

D

E

F

G

H

I

K

L

IDX

ALPHABETICAL INDEX

PRE/SE - Wiring diagram	EC-445 , EC-451	Side air bag (satellite) sensor	SRS-50
Precations for Leak detection dye	ATC-13	Side curtain air bag	SRS-47
Precautions (General)	GI-5	Side trim	EI-31
Pressure switch 1	AT-164	SMJ (super multiple junction)	PG-69
Pressure switch 2	AT-158	Spark plug	EM-36
Pressure switch 3	AT-166	Spark plug replacement	MA-17
Pressure switch 5	AT-168	Specification value	EC-141
Pressure switch 6	AT-170	Speedometer	DI-4
Pressure test (A/T)	AT-52	Spiral cable	SRS-44
Propeller shaft	PR-4	Spot lamp	LT-149
Propeller shaft on vehicle service	PR-4	SROOF - Wiring diagram	RF-12
Propeller shaft vibration	PR-4	SRS - See Supplemental Restraint System	SRS-5
PS/SEN - Wiring diagram	EC-488	SRS Trouble diagnoses	SRS-9
R			
Radiator	CO-13	Stabilizer bar (rear)	RSU-16
Radio - See Audio	AV-6	Stall test (A/T)	AT-50
Rear axle	RAX-6	Standardized relay	PG-71
Rear combination lamp removal and installation		START - Wiring diagram	SC-12
LT-126		Starter	SC-10
Rear parcel shelf finisher	EI-33	Starting system	SC-10
Rear seat	SE-140	Steering gear and linkage inspection	MA-26
Rear suspension	RSU-5	Steering linkage	PS-19
Rear window	GW-13	Steering wheel and column	PS-9 , PS-13
Rear window defogger	GW-58	Steering wheel play	PS-9
Refrigerant connection precaution	ATC-7	Steering wheel turning force	PS-9
Refrigerant discharging evacuating charging	ATC-134	Stop lamp	LT-103
Refrigerant general precaution	ATC-6	Stop lamp switch	EC-568
Refrigerant lines	ATC-134	STOP/L - Wiring diagram	LT-103
Refrigerant pressure sensor	EC-678 , ATC-88 , ATC-148	STSIG - Wiring diagram	AT-102
Refrigeration cycle	ATC-19	Sun roof, electric	RF-10
Release bearing (clutch)	CL-14	Sunload sensor	ATC-106 , ATC-117
Remote keyless entry system	BL-50	Sunroof	RF-10 , RF-24
Removal and installation (A/T)	AT-251	Supplemental Restraint System	SRS-5
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-11	Suspension	MA-27
Revolution sensor (A/T)	AT-112 , AT-244	Symbols and abbreviations	GI-10 , GI-23
Rocker cover	EM-44	Symptom matrix chart	EC-92
Room lamp - See Interior lamp	LT-127	System readiness test (SRT) code	EC-53
ROOM/L - Wiring diagram	LT-134	T	
RP/SEN - Wiring diagram	EC-679	Tachometer	DI-4
S			
SAE J1979 - Service \$01 - 09	EC-47	TCM circuit diagram	AT-49
SEAT - Wiring diagram	SE-87	TCM inspection table	AT-83
Seat belt inspection	SB-7	Three way catalyst	EM-25
Seat belt, front	SB-4	Three way catalyst function (Bank 1)	EC-392
Seat, front	SE-134	Three way catalyst function (Bank 2)	EC-392
Seat, rear	SE-140	Three way catalyst precautions	GI-6
Self-diagnostic results	EC-65	Throttle body	EM-22
SEN/PW - Wiring diagram	EC-500	Throttle control motor	EC-585
SHIFT - Wiring diagram	AT-218	Throttle control motor relay	EC-573
Shift lock system	AT-217	Throttle position sensor (TPS)	EC-232 , EC-353 , EC-535 , EC-537 , EC-606
Shift schedule	AT-319	Throttle valve closed position learning	EC-79
Shock absorber (front)	FSU-10	Throwout bearing - See Clutch release bearing	CL-14
Shock absorber (rear)	RSU-9	Tie-rod	PS-19

ALPHABETICAL INDEX

TPS1 - Wiring diagram	EC-355	Wiring diagrams	GI-15
TPS2 - Wiring diagram	EC-234	Withdrawal lever (clutch)	CL-14
TPS3 - Wiring diagram	EC-608	WT-T/WARN - Wiring diagram	WT-14
Transverse link (front)	FSU-13		
TRNSCV - Wiring diagram	BL-238		
Trouble diagnoses	GI-11		
Trunk lid	BL-165		
Trunk lid opener - See Trunk lid	BL-170		
Trunk lid trim	EI-38		
Trunk room trim	EI-38		
TURN - Wiring diagram	LT-81		
Turn signal lamp	LT-77		
Two trip detection logic	EC-47		
Tyre pressure monitoring system - trouble diagnoses ..			
WT-12			

U

Upper link (front susp.)	FSU-14
--------------------------------	------------------------

V

Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-108
Valve clearance	EM-111
Valve guide	EM-127
Valve lifter	EM-104
Valve seat	EM-129
Valve spring	EM-130
VDC -Wiring diagram	BRC-15
Vehicle security (theft warning) system	BL-188
Vehicle speed sensor (VSS)	EC-480, EC-567
VEHSEC - Wiring diagram	BL-194
VENT/V - Wiring diagram	EC-428, EC-435
VIN registration	EC-77
VSS A/T - Wiring diagram	AT-114

W

W/ANT - Wiring diagram	AV-37
WARN - Wiring diagram	DI-23
Warning chime	DI-37
Warning lamps	DI-21
Washer, front	WW-4
Water pump	CO-23
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-5
Wheel balance	WT-7, MA-23
Wheel bearing (rear)	RAX-6
Wheel hub (rear)	RAX-6
Wheel sensor (VDC)	BRC-58
WINDOW - Wiring diagram	GW-23
Window, door	GW-52
Window, rear	GW-13
Windshield	GW-11
WIPER - Wiring diagram	WW-11
Wiper, front	WW-4
Wiring Diagram (Cell code) list	PG-58

A

B

C

D

E

F

G

H

I

J

K

L

IDX