

TM
SECTION
TRANSAXLE & TRANSMISSION

A
B
C

TM

CONTENTS

E

6MT: FS6R31A	ON-VEHICLE REPAIR17	
FUNCTION DIAGNOSIS 6	REAR OIL SEAL17	F
M/T SYSTEM 6	Exploded View17	G
System Diagram6	Removal and Installation17	
System Description6	SHIFT CONTROL18	H
COMPONENT DIAGNOSIS 8	Exploded View18	H
BACK-UP LAMP SWITCH 8	Removal and Installation18	
Component Parts Location8	Inspection23	I
Component Inspection8	AIR BREATHER HOSE24	I
PARK/NEUTRAL POSITION SWITCH 9	Exploded View24	J
Component Parts Location9	Removal and Installation24	
Component Inspection9	REMOVAL AND INSTALLATION26	J
SYMPTOM DIAGNOSIS10	TRANSMISSION ASSEMBLY26	K
NOISE, VIBRATION AND HARSHNESS	Exploded View26	K
(NVH) TROUBLESHOOTING10	Removal and Installation26	
NVH Troubleshooting Chart10	DISASSEMBLY AND ASSEMBLY30	L
PRECAUTION11	TRANSMISSION ASSEMBLY30	M
PRECAUTIONS11	Exploded View30	M
Service Notice or Precautions for Manual Trans-	Disassembly35	
mission 11	Assembly44	N
PREPARATION12	MAIN DRIVE GEAR56	N
PREPARATION12	Exploded View56	O
Special Service Tools12	Disassembly56	
Commercial Service Tools14	Assembly56	O
ON-VEHICLE MAINTENANCE16	Inspection57	
M/T OIL16	MAINSHAFT AND GEAR59	P
Exploded View16	Exploded View59	P
Draining16	Disassembly59	
Refilling16	Assembly59	
Inspection16	Inspection64	
	COUNTER SHAFT AND GEAR67	
	Exploded View67	
	Disassembly67	

Assembly	67	Description	120
Inspection	69	DTC Logic	120
REVERSE IDLER SHAFT AND GEAR	73	Diagnosis Procedure	120
Exploded View	73	P0615 START SIGNAL	121
Disassembly	73	Description	121
Assembly	73	DTC Logic	121
Inspection	73	Diagnosis Procedure	121
SHIFT FORK AND FORK ROD	74	P0700 TCM	123
Exploded View	74	Description	123
Disassembly	74	DTC Logic	123
Assembly	74	Diagnosis Procedure	123
Inspection	74	P0705 PARK/NEUTRAL POSITION SWITCH.	124
SERVICE DATA AND SPECIFICATIONS		Description	124
(SDS)	75	DTC Logic	124
SERVICE DATA AND SPECIFICATIONS		Diagnosis Procedure	124
(SDS)	75	P0717 TURBINE REVOLUTION SENSOR	126
General Specification	75	Description	126
End Play	75	DTC Logic	126
Baulk Ring Clearance	76	Diagnosis Procedure	126
5AT: RE5R05A			
BASIC INSPECTION	77	P0720 VEHICLE SPEED SENSOR A/T (REV- OLUTION SENSOR)	128
DIAGNOSIS AND REPAIR WORKFLOW	77	Description	128
Work Flow	77	DTC Logic	128
Diagnostic Work Sheet	78	Diagnosis Procedure	129
FUNCTION DIAGNOSIS	80	P0725 ENGINE SPEED SIGNAL	131
A/T CONTROL SYSTEM	80	Description	131
System Diagram	80	DTC Logic	131
System Description	81	Diagnosis Procedure	131
Component Parts Location	87	P0731 A/T 1ST GEAR FUNCTION	133
Component Description	89	Description	133
SHIFT MECHANISM	92	DTC Logic	133
Cross-Sectional View	92	Diagnosis Procedure	134
System Diagram	93	P0732 A/T 2ND GEAR FUNCTION	135
System Description	94	Description	135
Component Parts Location	104	DTC Logic	135
Component Description	106	Diagnosis Procedure	136
SHIFT LOCK SYSTEM	108	P0733 A/T 3RD GEAR FUNCTION	137
System Description	108	Description	137
Component Parts Location	109	DTC Logic	137
Component Description	109	Diagnosis Procedure	138
ON BOARD DIAGNOSTIC (OBD) SYSTEM ..	110	P0734 A/T 4TH GEAR FUNCTION	139
Diagnosis Description	110	Description	139
DIAGNOSIS SYSTEM (TCM)	113	DTC Logic	139
Diagnosis Description	113	Diagnosis Procedure	140
CONSULT-III Function (TRANSMISSION)	114	P0735 A/T 5TH GEAR FUNCTION	141
COMPONENT DIAGNOSIS	120	Description	141
U1000 CAN COMM CIRCUIT	120	DTC Logic	141
		Diagnosis Procedure	142
		P0740 TORQUE CONVERTER CLUTCH SO- LENOID VALVE	143

Description	143	Description	159	A
DTC Logic	143	DTC Logic	159	B
Diagnosis Procedure	143	Diagnosis Procedure	159	C
P0744 A/T TCC S/V FUNCTION (LOCK -UP)..	144	P1772 LOW COAST BRAKE SOLENOID		
Description	144	VALVE	161	
DTC Logic	144	Description	161	
Diagnosis Procedure	144	DTC Logic	161	
P0745 LINE PRESSURE SOLENOID VALVE.	145	Diagnosis Procedure	161	
Description	145	P1774 LOW COAST BRAKE SOLENOID		
DTC Logic	145	VALVE FUNCTION	162	TM
Diagnosis Procedure	145	Description	162	
P1705 THROTTLE POSITION SENSOR	146	DTC Logic	162	
Description	146	Diagnosis Procedure	162	E
DTC Logic	146	P1815 MANUAL MODE SWITCH	164	
Diagnosis Procedure	146	Description	164	
P1710 A/T FLUID TEMPERATURE SENSOR.	147	DTC Logic	164	F
Description	147	Diagnosis Procedure	164	
DTC Logic	147	Component Inspection (Manual Mode Switch)	167	
Diagnosis Procedure	147	Component Inspection (Paddle Shifter)	167	G
Component Inspection (A/T fluid temperature sensor 1)	148	MAIN POWER SUPPLY AND GROUND CIRCUIT	168	
Component Inspection (A/T fluid temperature sensor 2)	149	Description	168	H
P1721 VEHICLE SPEED SENSOR MTR	150	Diagnosis Procedure	168	
Description	150	SHIFT POSITION INDICATOR CIRCUIT	170	
DTC Logic	150	Description	170	I
Diagnosis Procedure	150	Component Function Check	170	
P1730 A/T INTERLOCK	151	Diagnosis Procedure	170	J
Description	151	SHIFT LOCK SYSTEM	171	
DTC Logic	151	Description	171	
Judgment of A/T Interlock	151	Wiring Diagram — A/T SHIFT LOCK SYSTEM —	171	K
Diagnosis Procedure	151	Component Function Check	174	
P1731 A/T 1ST ENGINE BRAKEING	152	Diagnosis Procedure	175	
Description	152	Component Inspection (Shift lock solenoid)	177	L
DTC Logic	152	Component Inspection (Shift lock relay)	177	
Diagnosis Procedure	152	Component Inspection (Stop lamp switch)	177	
P1752 INPUT CLUTCH SOLENOID VALVE ..	153	SELECTOR LEVER POSITION INDICATOR .	179	M
Description	153	Description	179	
DTC Logic	153	Wiring Diagram	179	
Diagnosis Procedure	153	Component Inspection	179	N
P1757 FRONT BRAKE SOLENOID VALVE ...	155	ECU DIAGNOSIS	180	
Description	155	TCM	180	O
DTC Logic	155	Reference Value	180	
Diagnosis Procedure	155	Wiring Diagram — A/T CONTROL SYSTEM —	182	
P1762 DIRECT CLUTCH SOLENOID VALVE.	157	Fail-Safe	187	
Description	157	DTC Inspection Priority Chart	189	P
DTC Logic	157	DTC Index	189	
Diagnosis Procedure	157	SYMPTOM DIAGNOSIS	191	
P1767 HIGH AND LOW REVERSE CLUTCH		SYSTEM SYMPTOM	191	
SORENOID VALVE	159	Symptom Table	191	

PRECAUTION	213	CONTROL ROD	236
PRECAUTIONS	213	2WD	236
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	213	2WD : Exploded View	236
On Board Diagnosis (OBD) System of A/T and Engine	213	2WD : Removal and Installation	236
General Precautions	213	2WD : Inspection and Adjustment	236
Service Notice or Precaution	214	AWD	236
PREPARATION	215	AWD : Exploded View	236
PREPARATION	215	AWD : Removal and Installation	237
Special Service Tool	215	AWD : Inspection and Adjustment	237
Commercial Service Tool	216	PADDLE SHIFTER	238
ON-VEHICLE MAINTENANCE	217	Exploded View	238
A/T FLUID	217	Removal and Installation	238
Inspection	217	CONTROL VALVE WITH TCM	240
Changing	218	Exploded View	240
A/T FLUID COOLER	220	Removal and Installation	240
Cleaning	220	Inspection	248
Inspection	222	A/T FLUID TEMPERATURE SENSOR 2	249
STALL TEST	223	Exploded View	249
Inspection and Judgment	223	Removal and Installation	249
LINE PRESSURE TEST	224	Inspection	252
Inspection and Judgment	224	PARKING COMPONENTS	253
ROAD TEST	226	2WD	253
Description	226	2WD : Exploded View	253
Check Before Engine Is Started	226	2WD : Removal and Installation	253
Check Starting The Engine	226	2WD : Inspection	259
Cruise Test - Part 1	227	REAR OIL SEAL	260
Cruise Test - Part 2	228	2WD	260
Cruise Test - Part 3	228	2WD : Exploded View	260
A/T POSITION	230	2WD : Removal and Installation	260
2WD	230	2WD : Inspection	260
2WD : Inspection and Adjustment	230	AWD	260
AWD	230	AWD : Exploded View	260
AWD : Inspection and Adjustment	230	AWD : Removal and Installation	260
ON-VEHICLE REPAIR	232	AWD : Inspection	261
CONTROL DEVICE	232	REVOLUTION SENSOR	262
2WD	232	2WD	262
2WD : Exploded View	232	2WD : Exploded View	262
2WD : Removal and Installation	232	2WD : Removal and Installation	262
2WD : Inspection and Adjustment	233	2WD : Inspection	266
AWD	233	AIR BREATHER HOSE	268
AWD : Exploded View	233	2WD	268
AWD : Removal and Installation	234	2WD : Exploded View	268
AWD : Inspection and Adjustment	235	2WD : Removal and Installation	268
CONTROL ROD	236	AWD	269
2WD	236	AWD : Exploded View	269
2WD : Exploded View	236	AWD : Removal and Installation	269
2WD : Removal and Installation	236	A/T FLUID COOLER TUBE	271
2WD : Inspection and Adjustment	236		

2WD	271	FRONT CARRIER, INPUT CLUTCH, REAR	
2WD : Exploded View	271	INTERNAL GEAR	339
2WD : Removal and Installation	271	Exploded View	339
2WD : Inspection	272	Disassembly	339
AWD	272	Assembly	341
AWD : Exploded View	272	Inspection	343
AWD : Removal and Installation	273	MID SUN GEAR, REAR SUN GEAR, HIGH	
AWD : Inspection	274	AND LOW REVERSE CLUTCH HUB	344
REMOVAL AND INSTALLATION	275	Exploded View	344
TRANSMISSION ASSEMBLY	275	Disassembly	344
2WD	275	Assembly	346
2WD : Exploded View	275	Inspection	348
2WD : Removal and Installation	275	HIGH AND LOW REVERSE CLUTCH	349
2WD : Inspection	277	Exploded View	349
AWD	277	Disassembly	349
AWD : Exploded View	277	Assembly	349
AWD : Removal and Installation	278	Inspection	350
AWD : Inspection	280	DIRECT CLUTCH	351
DISASSEMBLY AND ASSEMBLY	281	Exploded View	351
TRANSMISSION ASSEMBLY	281	Disassembly	351
Exploded View	281	Assembly	351
Oil Channel	287	Inspection	352
Location of Adjusting Shims, Needle Bearings,		SERVICE DATA AND SPECIFICATIONS	
Thrust Washers and Snap Rings	289	(SDS)	353
Disassembly	291	SERVICE DATA AND SPECIFICATIONS	
Assembly	309	(SDS)	353
Inspection	332	General Specification	353
OIL PUMP	334	Vehicle Speed at Which Gear Shifting Occurs	353
Exploded View	334	Vehicle Speed at Which Lock-up Occurs/Releas-	
Disassembly	334	es	353
Assembly	335	Stall Speed	353
FRONT SUN GEAR, 3RD ONE-WAY		Line Pressure	353
CLUTCH	337	Turbine Revolution Sensor	354
Exploded View	337	Vehicle Speed Sensor A/T (Revolution Sensor) ...	354
Disassembly	337	Reverse Brake	354
Assembly	337	Total End Play	354
Inspection	338	Torque Converter	354


FUNCTION DIAGNOSIS

M/T SYSTEM

System Diagram

INFOID:000000000956945

CROSS-SECTIONAL VIEW

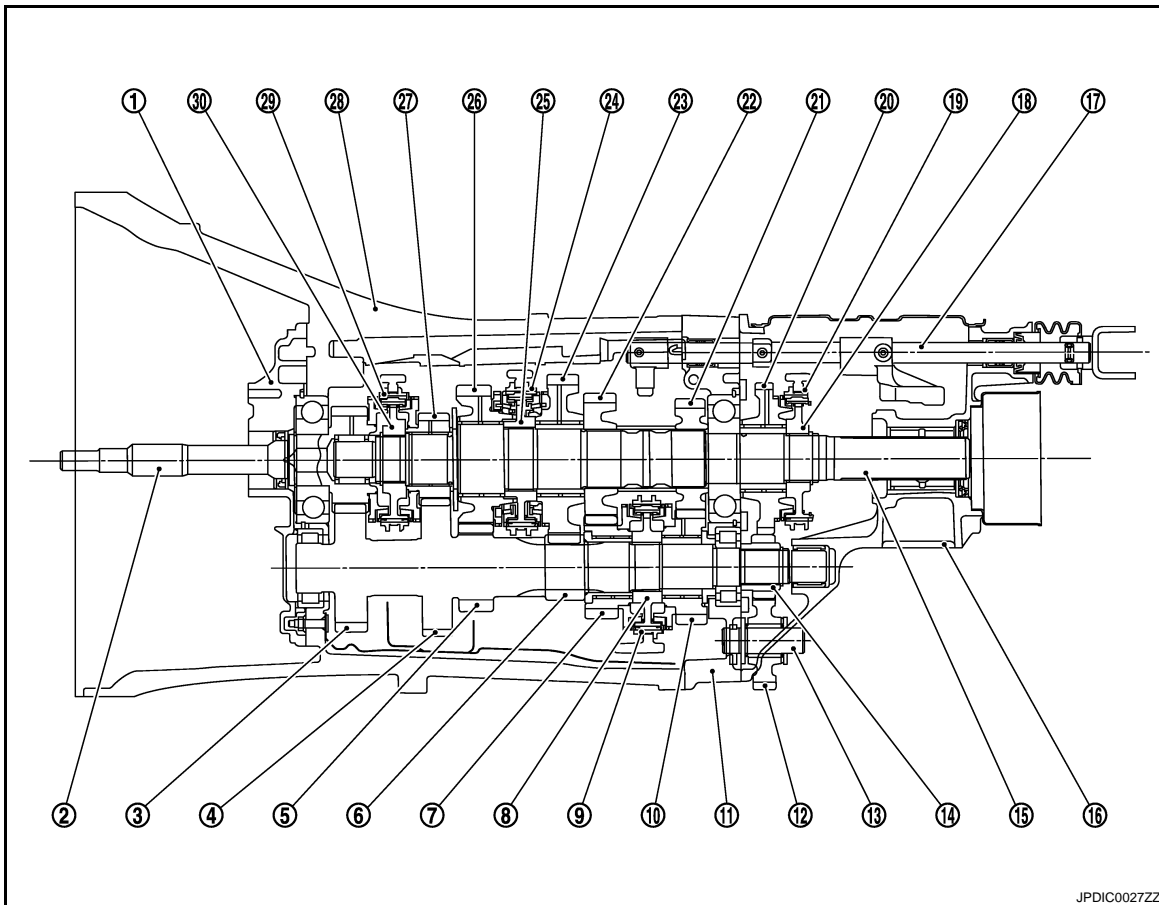

JPDIC0027ZZ

- | | | |
|------------------------------|-----------------------------|------------------------------|
| 1. Front cover | 2. Main drive gear | 3. Counter shaft |
| 4. 6th counter gear | 5. 2nd counter gear | 6. 1st counter gear |
| 7. 3rd counter gear | 8. 3rd-4th synchronizer hub | 9. 3rd-4th coupling sleeve |
| 10. 4th counter gear | 11. Adapter plate | 12. Reverse idler gear |
| 13. Reverse idler shaft | 14. Reverse counter gear | 15. Mainshaft |
| 16. Rear extension | 17. Striking rod | 18. Reverse synchronizer hub |
| 19. Reverse coupling sleeve | 20. Reverse main gear | 21. 4th main gear |
| 22. 3rd main gear | 23. 1st main gear | 24. 1st-2nd coupling sleeve |
| 25. 1st-2nd synchronizer hub | 26. 2nd main gear | 27. 6th main gear |
| 28. Transmission case | 29. 5th-6th coupling sleeve | 30. 5th-6th synchronizer hub |

System Description

INFOID:000000000956946

DOUBLE-CONE SYNCHRONIZER

The 4th gear is equipped with a double-cone synchronizer to reduce the operating force of the control lever.


TRIPLE-CONE SYNCHRONIZER

M/T SYSTEM

< FUNCTION DIAGNOSIS >

[6MT: FS6R31A]

The 1st, 2nd and 3rd gears are equipped with a triple-cone synchronizer to reduce the operating force of the control lever.

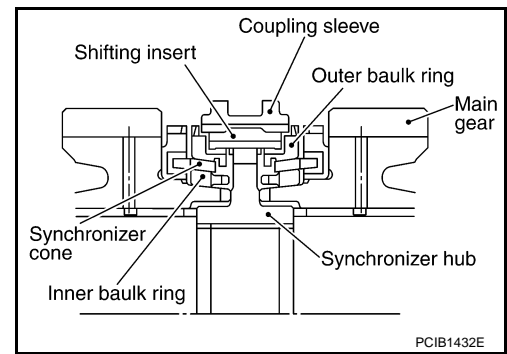

A
B
C

TM

E
F
G
H
I
J
K
L
M
N
O
P

BACK-UP LAMP SWITCH


< COMPONENT DIAGNOSIS >

[6MT: FS6R31A]

COMPONENT DIAGNOSIS

BACK-UP LAMP SWITCH

Component Parts Location

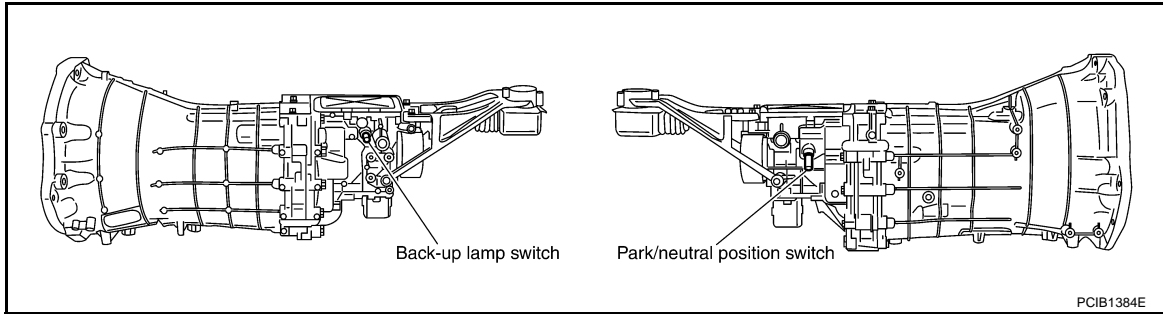

Component Inspection

INFOID:000000000956948

1. CHECK BACK-UP LAMP SWITCH


Check continuity between back-up lamp switch terminals with control lever turned to 1st to 6th and reverse position.

Terminals	Gear position	Continuity
1 - 2	Reverse	Existed
	Except reverse	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace back up lamp switch. Refer to [TM-30](#), "[Exploded View](#)".

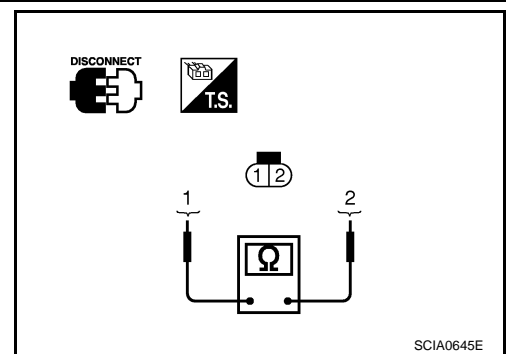


PARK/NEUTRAL POSITION SWITCH

< COMPONENT DIAGNOSIS >

[6MT: FS6R31A]

PARK/NEUTRAL POSITION SWITCH

Component Parts Location

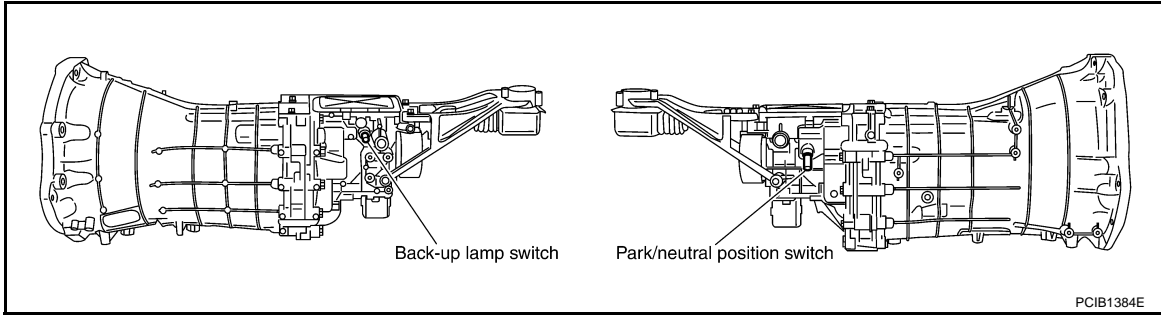

Component Inspection

INFOID:000000000956950

1. CHECK PARK/NEUTRAL POSITION (PNP) SWITCH


Check continuity between park/neutral position (PNP) switch terminals with control lever turned to 1st to 6th and reverse position.

Terminals	Gear position	Continuity
1 - 2	Neutral	Existed
	Except neutral	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace park/neutral position (PNP) switch. Refer to [TM-30, "Exploded View"](#).

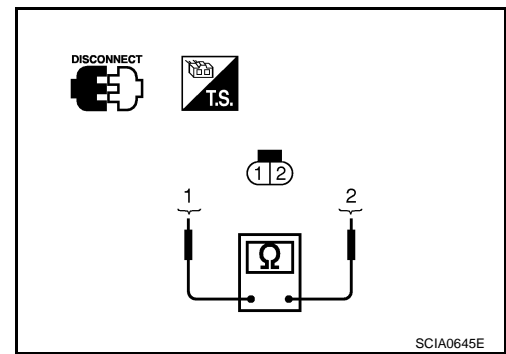

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[6MT: FS6R31A]

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000000956951

Use the chart below to help you find the cause of the symptom. The numbers indicate the order of the inspection. If necessary, repair or replace these parts.

Reference	TM-16			TM-30		TM-18	TM-30		TM-30			
SUSPECTED PARTS (Possible cause)	OIL (Oil level is low.)	OIL (Wrong oil.)	OIL (Oil level is high.)	GASKET (Damaged)	OIL SEAL (Worn or damaged)	SHIFT CONTROL LINKAGE (Worn)	CHECK PLUG RETURN SPRING AND CHECK BALL (Worn or damaged)	SHIFT FORK (Worn)	GEAR (Worn or damaged)	BEARING (Worn or damaged)	BAULK RING (Worn or damaged)	INSERT SPRING (Damaged)
Symptoms	Noise	1	2						3	3		
	Oil leakage		3	1	2	2						
	Hard to shift or will not shift		1	1			2				2	2
	Jumps out of gear						1	1	2	2		

PRECAUTION

PRECAUTIONS

Service Notice or Precautions for Manual Transmission

INFOID:000000000956952

CAUTION:

- If transmission assembly is removed from the vehicle, always replace CSC (Concentric Slave Cylinder) body and CSC tube. Return CSC body insert to original position to remove transmission assembly. Dust on clutch disc sliding parts may damage seal of CSC body and may cause clutch fluid leakage.
- Do not reuse transmission oil, once it has been drained.
- Check oil level or replace oil with vehicle on level ground.
- During removal or installation, keep inside of transmission clear of dust or dirt.
- Check for the correct installation status prior to removal or disassembly. If matching marks are required, be certain they do not interfere with the function of the parts they are applied.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, observe it.
- Be careful not to damage sliding surfaces and mating surfaces.
- Do not hold control lever housing to prevent bushing of control lever housing from deformation when moving transmission assembly.

A
B
C
E
F
G
H
I
J
K
L
M
N
O
P

TM

PREPARATION

< PREPARATION >

[6MT: FS6R31A]







PREPARATION

PREPARATION

Special Service Tools

INFOID:000000000956953



The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

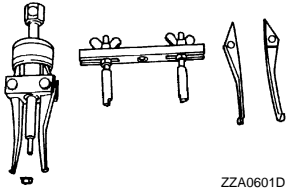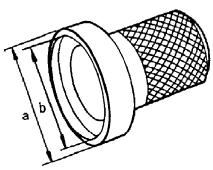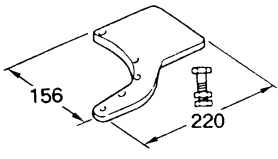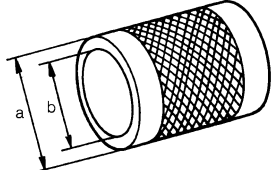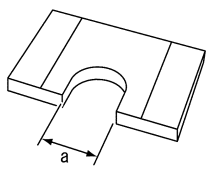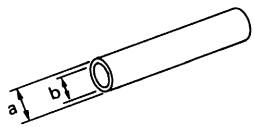Tool number (Kent-Moore No.) Tool name	Description
KV381054S0 (J-34286) Puller  ZZA0601D	Removing rear oil seal
ST33400001 (J-26082) Drift a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia.  ZZA0814D	Installing rear oil seal
ST22490000 (—) Adapter setting plate  ZZC0465D	Holding a adapter plate
ST33200000 (J-26082) Drift a: 60 mm (2.36 in) dia. b: 44.5 mm (1.752 in) dia.  ZZA1002D	Installing counter rear bearing
KV32103300 (J-46529) Press plate a: 73 mm (2.87 in)  PCIB0165J	Installing reverse synchronizer assembly
ST01530000 (—) Drift a: 50 mm (1.97 in) dia. b: 41 mm (1.61 in) dia.  ZZA0534D	Installing reverse synchronizer assembly

PREPARATION

< PREPARATION >

[6MT: FS6R31A]


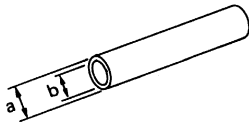
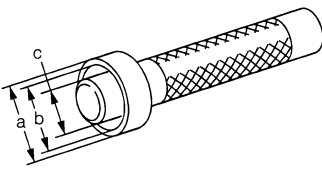
Tool number (Kent-Moore No.) Tool name	Description	
ST23860000 (—) Drift a: 38 mm (1.50 in) dia. b: 33 mm (1.30 in) dia.		ZZA0534D
Installing reverse counter gear		ZZA1046D
KV38102100 (J-25803-01) Drift a: 44 mm (1.73 in) dia. b: 36 mm (1.42 in) dia. c: 24.5 mm (0.965 in) dia.	Installing front cover oil seal	ZZA1046D
ST33061000 (J-8107-2) Drift a: 28.5 mm (1.122 in) dia. b: 38 mm (1.50 in) dia.	Installing striking rod oil seal	ZZA1023D
KV32102700 (—) Drift a: 48.6 mm (1.913 in) dia. b: 41.6 mm (1.638 in) dia.	Installing main drive gear bearing	ZZA0534D
ST30911000 (—) Inserter a: 98 mm (3.86 in) dia. b: 40.5 mm (1.594 in) dia.	<ul style="list-style-type: none"> • Installing 5th-6th synchronizer assembly • Installing mainshaft bearing • Installing reverse main gear bushing • Installing 3rd gear bushing • Installing 3rd-4th synchronizer assembly 	ZZA0920D
ST27861000 (—) Support ring a: 62 mm (2.44 in) dia. b: 52 mm (2.05 in) dia.	<ul style="list-style-type: none"> • Installing 1st-2nd synchronizer assembly • Installing 1st gear bushing 	ZZA0832D
ST30022000 (—) Inserter a: 110 mm (4.33 in) dia. b: 46 mm (1.81 in) dia.	<ul style="list-style-type: none"> • Installing 3rd main gear • Installing 4th main gear 	ZZA0920D

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

PREPARATION



< PREPARATION >

[6MT: FS6R31A]

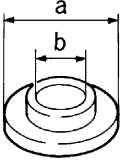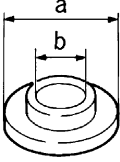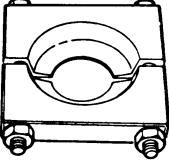Tool number (Kent-Moore No.) Tool name		Description
KV40100630 (J-26092) Inserter a: 67.5 mm (2.657 in) dia. b: 38.5 mm (1.516 in) dia.	 <p style="text-align: center; font-size: small;">ZZA0920D</p>	Installing 4th counter gear thrust washer
ST30032000 (J-26010-01) Inserter a: 80 mm (3.15 in) dia. b: 31 mm (1.22 in) dia.	 <p style="text-align: center; font-size: small;">ZZA0920D</p>	Installing counter rear bearing inner race
ST30031000 (J-22912-01) Puller	 <p style="text-align: center; font-size: small;">ZZA0537D</p>	Measuring wear of inner baulk ring

Commercial Service Tools



INFOID:000000000956954

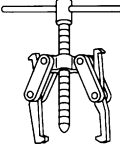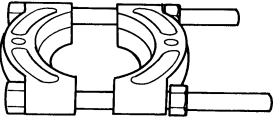Tool name		Description
Puller	 <p style="text-align: center; font-size: small;">NT077</p>	<ul style="list-style-type: none"> Removing reverse main gear Removing reverse synchronizer assembly Removing reverse counter gear
Puller	 <p style="text-align: center; font-size: small;">ZZB0823D</p>	Removing each bearing, gear and bushing

PREPARATION

< PREPARATION >

[6MT: FS6R31A]

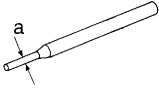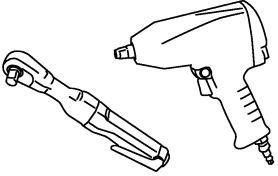Tool name	Description
<p>Pin punch a: 6.0 mm (0.24 in) dia.</p>  <p>NT410</p>	<p>Removing and installing each retaining pin</p>
<p>Power tool</p>  <p>PBIC0190E</p>	<p>Loosening bolts and nuts</p>

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

ON-VEHICLE MAINTENANCE

M/T OIL

Exploded View

INFOID:000000000956955

Refer to [TM-30, "Exploded View"](#).

Draining

INFOID:000000000956956

1. Start the engine and warm up the transmission unit sufficiently.
2. After stopping engine, remove filler plug and drain plug to drain oil.
3. Set a gasket on drain plug and install it to transmission. Tighten drain plug to the specified torque.

CAUTION:

Do not reuse gasket.

Refilling

INFOID:000000000956957

1. Fill new oil into the transmission to the level of the filler plug mounting hole.


Oil grade and viscosity : Refer to [MA-10, "Fluids and Lubricants"](#).

Oil capacity : Refer to [TM-75, "General Specification"](#).

2. After refilling oil, check oil level.
3. Set a gasket on filler plug and then install it to transmission. Tighten filler plug to the specified torque.

CAUTION:

Do not reuse gasket.

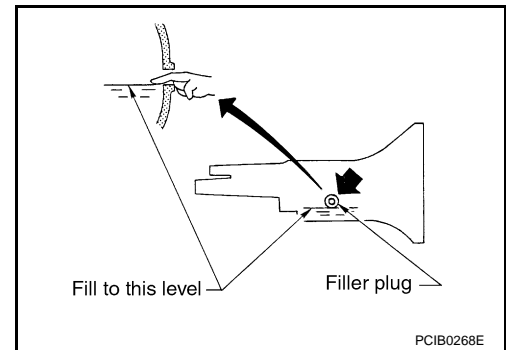

Inspection

INFOID:000000000956958

LEAKAGE

- Check if oil is leaking from transmission or around it.

LEVEL

- Check oil level from filler plug mounting hole as shown in the figure.


CAUTION:

Never start engine while checking oil level.

- When screwing in filler plug, first screw into the transmission by hand, then tighten to the specified torque.

CAUTION:

Do not reuse gasket.

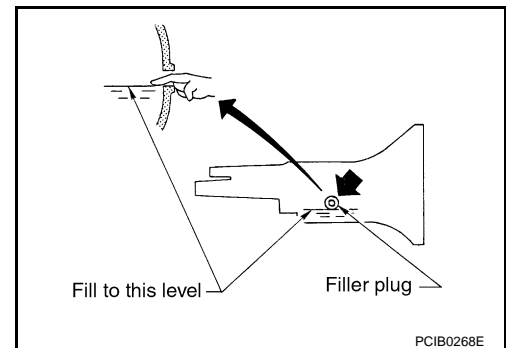

ON-VEHICLE REPAIR

REAR OIL SEAL

Exploded View

INFOID:000000000956959


Refer to [TM-30, "Exploded View"](#).

Removal and Installation

INFOID:000000000956960

REMOVAL

1. Remove propeller shaft assembly. Refer to [DLN-86, "Removal and Installation"](#).
2. Remove rear oil seal using a puller [SST: KV381054S0 (J-34286)].

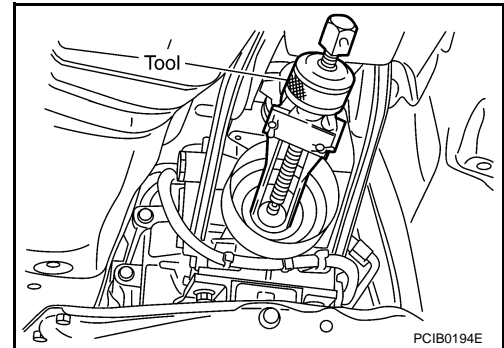

INSTALLATION

1. Apply multi-purpose grease to lip of rear oil seal (1). Drive in rear oil seal to rear extension using the drift (A) [SST: ST33400001 (J-26082)].

Dimension "H" : 1.2 - 2.2 mm (0.047 - 0.087 in)



CAUTION:

- Do not reuse rear oil seal.
- When installing, do not incline rear oil seal.

2. Install propeller shaft assembly. Refer to [DLN-86, "Removal and Installation"](#).

CAUTION:

- If lubricant leak has occurred during the repair work, check oil level after finishing work. Refer to [TM-16, "Inspection"](#).

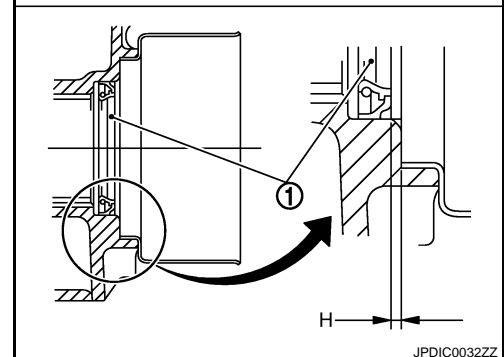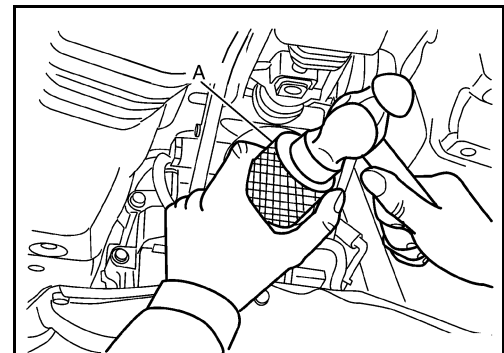

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT CONTROL


< ON-VEHICLE REPAIR >

[6MT: FS6R31A]


SHIFT CONTROL


Exploded View

INFOID:000000000956961

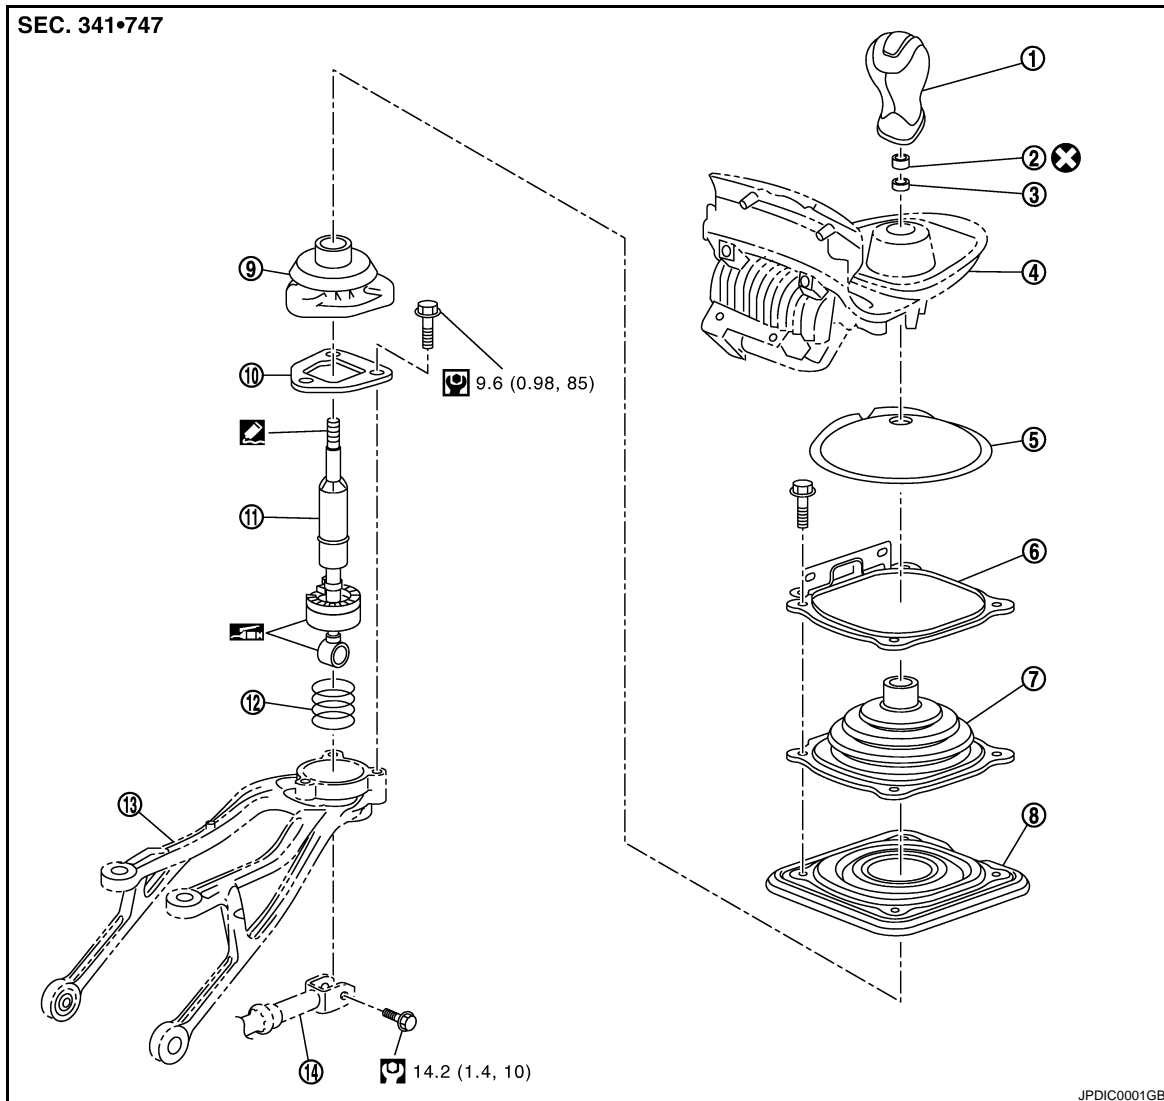

- | | | |
|------------------------------|----------------------------|--------------------------|
| 1. Shift knob | 2. Insulator | 3. Seat |
| 4. Console finisher assembly | 5. Felt | 6. Hole cover |
| 7. Control lever boot B | 8. Hole insulator | 9. Control lever boot A |
| 10. Guide plate | 11. Control lever assembly | 12. Control lever spring |
| 13. Control lever housing | 14. Control rod | |

 Apply multi-purpose grease.

 Apply Genuine Medium Strength Thread Locking Sealant or an equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).

Refer to [GI-4, "Components"](#) for symbols not described on the above.

Removal and Installation

INFOID:000000000956962

REMOVAL

1. Remove shift knob with the following procedure.
 - a. Release metal clips on console finisher assembly. Refer to [IP-12, "Removal and Installation"](#).

SHIFT CONTROL


< ON-VEHICLE REPAIR >

[6MT: FS6R31A]

- b. Lift console finisher assembly and then set a suitable pliers to control lever assembly.

CAUTION:


Put waste cloth (A) between a suitable pliers and control lever assembly to avoid damaging control lever assembly.

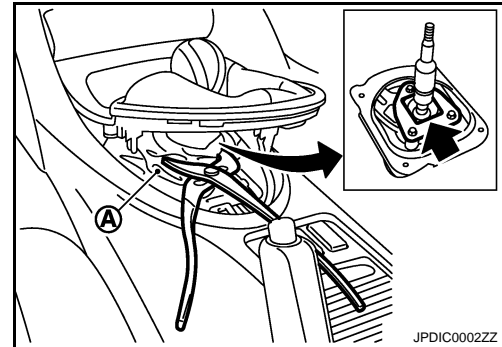

- c. Set a suitable pliers to shift knob.

CAUTION:

Put waste cloth (A) between a suitable pliers and shift knob to avoid damaging shift knob.

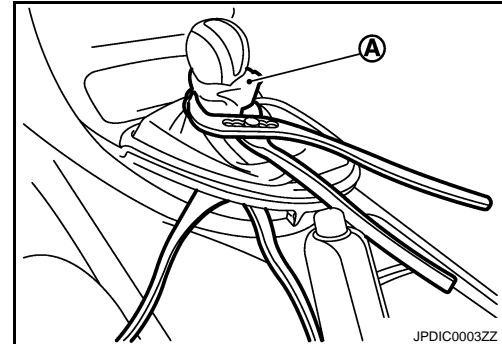

- d. Keeping control lever assembly in place with a suitable pliers, loosen shift knob with a suitable pliers.

NOTE:

Remove shift knob from control lever assembly keeping a suitable pliers in place because a certain power to turn shift knob is still necessary even after adhesive is peeled.



- e. Remove shift knob from control lever assembly.

2. Remove insulator and seat from control lever assembly.


3. Remove console finisher assembly.

4. Remove center console assembly. Refer to [IP-12, "Removal and Installation"](#).

5. Remove felt.

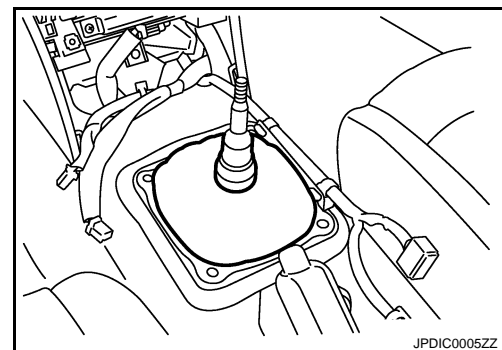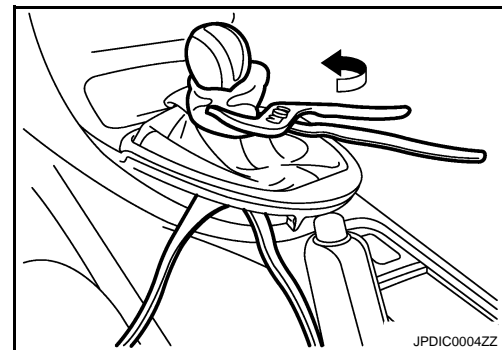

6. Release boot from control lever housing. Then remove control rod mounting bolt and then separate control lever assembly and control rod.

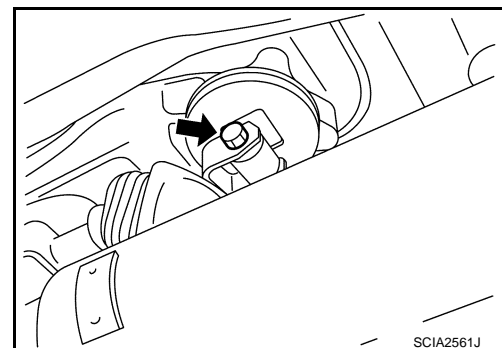


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT CONTROL


< ON-VEHICLE REPAIR >

[6MT: FS6R31A]


7. Remove hole cover mounting bolts and then remove hole cover.

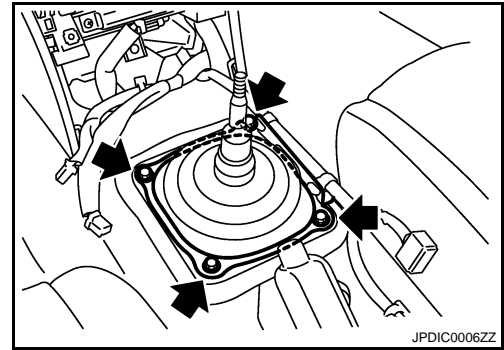

8. Remove control lever boot B and hole insulator.

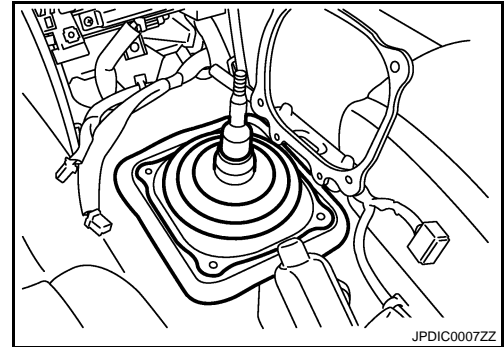


9. Remove control lever boot A.

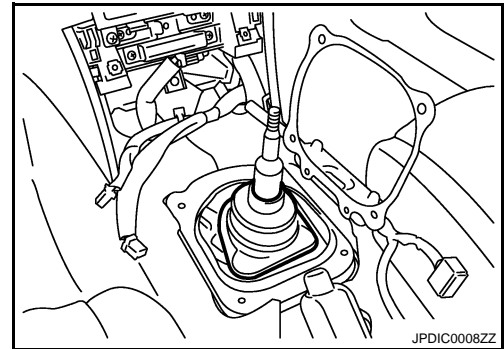

10. Remove guide plate mounting bolts and then remove control lever assembly and control lever spring from control lever housing.

CAUTION:

Restrain guide plate while doing this because there is a danger control lever assembly will fly out of control lever housing.

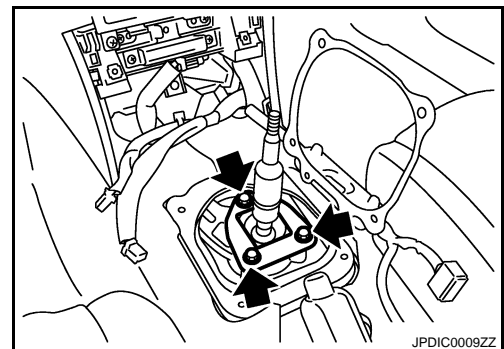

INSTALLATION

1. Set control lever spring, control lever assembly, and guide plate to control lever housing and then temporarily tightening guide plate mounting bolts.

CAUTION:

Restrain guide plate while doing this because there is a danger control lever assembly will fly out of control lever housing.

SHIFT CONTROL


< ON-VEHICLE REPAIR >

[6MT: FS6R31A]


2. Install control lever assembly to control rod and then tighten bolt to the specified torque.
3. Install boot to control lever housing.

CAUTION:


Fit the boot to the groove on the control lever housing.

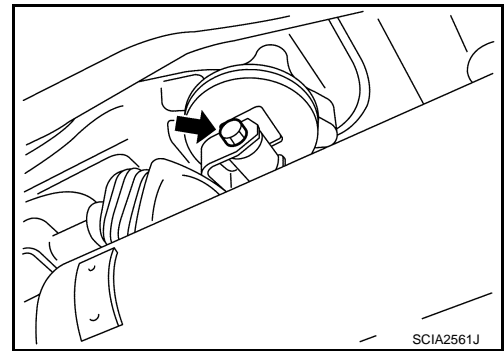

4. Install guide plate with the following procedure.
 - a. After shifting control lever assembly into 6th gear, push it toward reverse gear (to the right) until it comes to a stop.
 - b. At the point where control lever assembly stops, bring guide plate closer until guide plate stopper contacts control lever assembly claw and then temporarily tighten mounting bolt A.

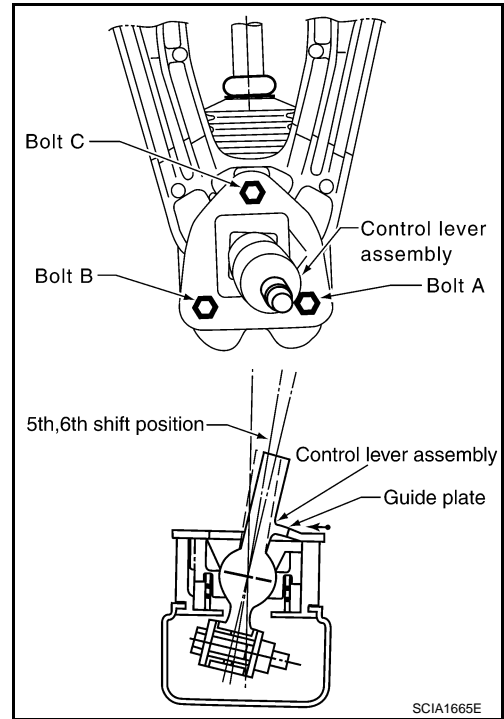

- c. After shifting control lever assembly into 5th gear, push it toward reverse gear (to the right) until it comes to a stop.
 - d. At the point where control lever assembly stops, bring guide plate closer until guide plate stopper contacts control lever assembly claw and then tighten mounting bolt C to the specified torque.
 - e. Tighten guide plate mounting bolts A and B to the specified torque.

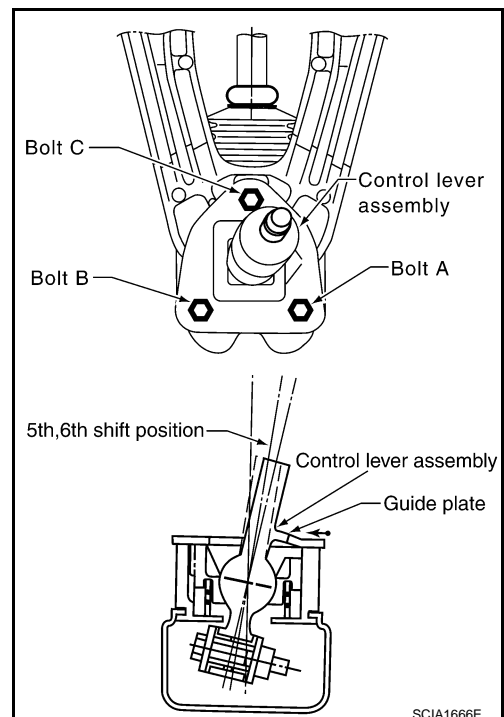

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT CONTROL


< ON-VEHICLE REPAIR >

[6MT: FS6R31A]


5. Install control lever boot A.

CAUTION:


Fit the control lever boot A to the groove on the control lever housing.

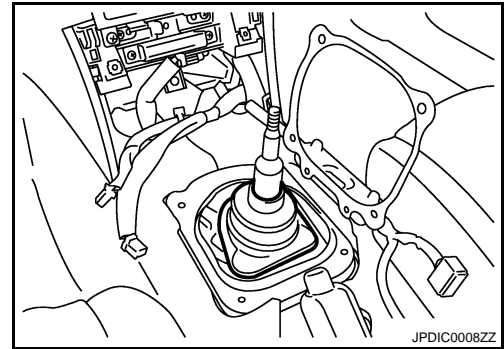

6. Install hole insulator and control lever boot B.

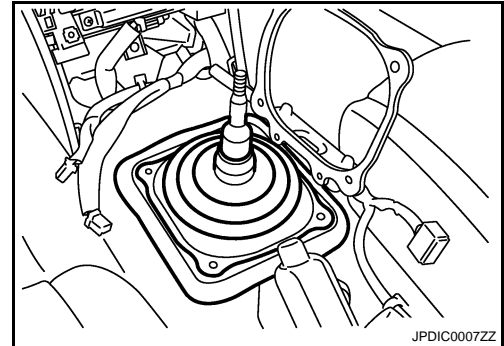


7. Install hole cover and then tighten hole cover mounting bolts to the specified torque.

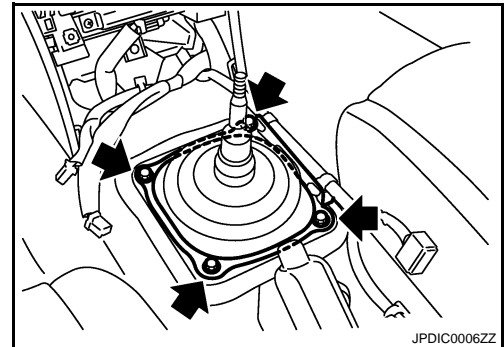

8. Install felt.

9. Install center console assembly. Refer to [IP-12, "Removal and Installation"](#).

10. Install console finisher assembly. Refer to [IP-12, "Removal and Installation"](#).

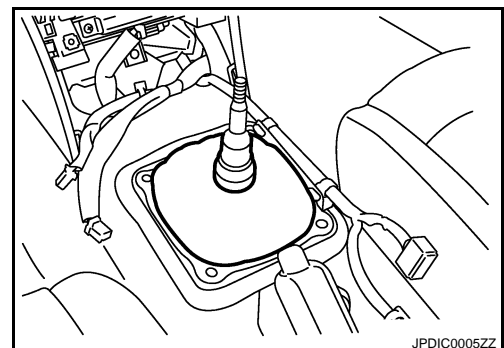

11. Install seat and insulator to control lever assembly.


CAUTION:

- Be careful with the orientation of seat.
- Do not reuse insulator.

12. Apply thread locking sealant to control lever assembly threads and then install shift knob.

- Use Genuine Medium Strength Thread Locking Sealant or an equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).

CAUTION:

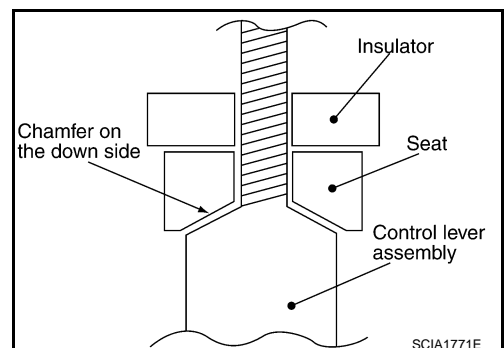

SHIFT CONTROL

< ON-VEHICLE REPAIR >

[6MT: FS6R31A]

Remove the remaining adhesive on control lever assembly and shift knob threads.

13. Put shift knob in the correct position as the following indicates.


a. When tightening shift knob, if shift knob comes to the proper position within 1/2 turn from the position at which resistance begins to be felt, tighten it 1 more turn to set it in the proper position.

- A : Proper position
- B : Start position on reaction force
- ↶ : Vehicle front

b. If it takes more than 1/2 turn from the position at which resistance begins to be felt, tighten it to set it in the proper position.

CAUTION:

- Do not adjust shift knob with loosening.
- After adjusting to the proper position, until 30 minutes pass, do not operate the shift intensely such as screwing or turning shift knob to opposite direction since a locking sealant because stiff.

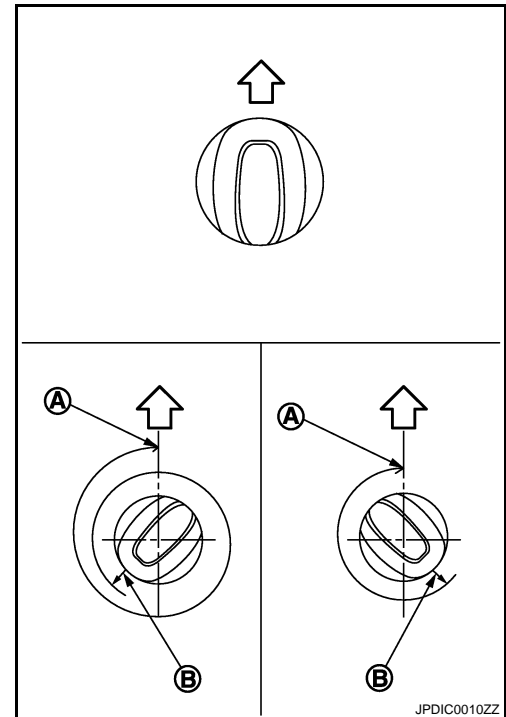

Inspection

After installing, confirm the following items:

- When control lever assembly is shifted to each position, make sure there is no binding or disconnection in each boot.
- When shifted to each position, make sure there is no noise, binding, and backlash. Especially when control lever assembly is shifted to 5th, 6th without pressing downward, check for binding.
- When control lever assembly is shifted to 1st-2nd side and 5th-6th side, confirm control lever assembly returns to neutral position smoothly.
- In any position other than reverse, confirm that control lever assembly can be pressed downward.
- With control lever assembly pressed downward, confirm that it can be shifted to reverse.
- When shifted from reverse to neutral position, confirm control lever assembly returns to neutral position smoothly with spring power.
- Without control lever assembly pressed downward, confirm that it cannot be shifted to reverse.

AIR BREATHER HOSE


< ON-VEHICLE REPAIR >

[6MT: FS6R31A]

AIR BREATHER HOSE

Exploded View

INFOID:000000000956964

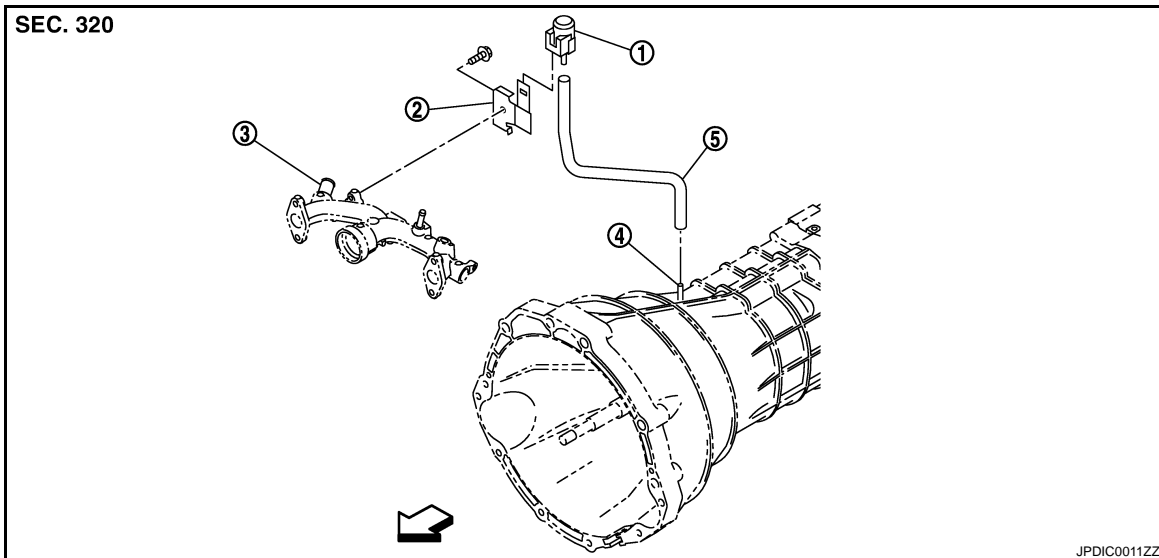

- | | | |
|------------------|----------------------|------------------------|
| 1. Breather | 2. Bracket | 3. Water outlet (rear) |
| 4. Breather tube | 5. Air breather hose | |

↙: Vehicle front

Removal and Installation

INFOID:000000000956965

REMOVAL


Refer to the figure for removal procedure.

INSTALLATION

Refer to the figure for installation procedure.

CAUTION:

- Make sure there are no pinched or restricted areas on the air breather hose caused by bending or winding when installing it.
- Be sure to insert air breather hose into breather tube until hose end reaches the tube's base.
- Be sure to insert air breather hose into breather until hose end reaches the breather's base.

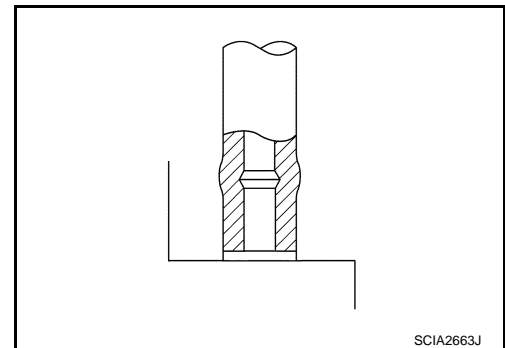

AIR BREATHER HOSE


< ON-VEHICLE REPAIR >

[6MT: FS6R31A]

- Set air breather hose with painted mark facing backward.



: Painted mark

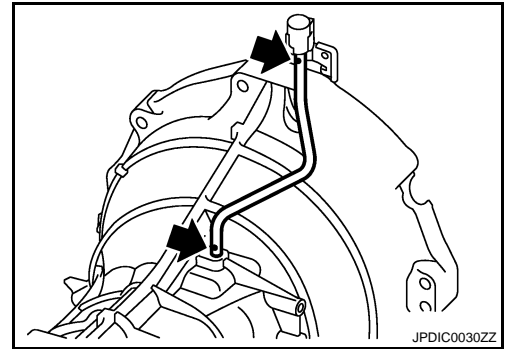

A
B
C

TM

E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< REMOVAL AND INSTALLATION >


[6MT: FS6R31A]

REMOVAL AND INSTALLATION

TRANSMISSION ASSEMBLY

Exploded View

INFOID:000000000956966

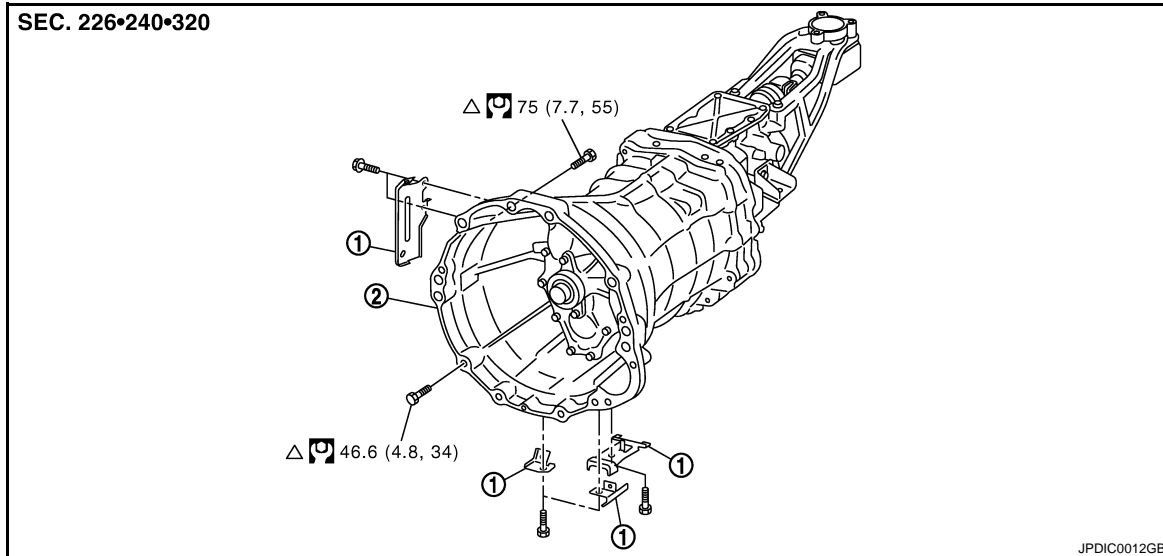

1. Harness bracket
2. Transmission assembly

△: For the bolt mounting positions, refer to "INSTALLATION".

CAUTION:

If transmission assembly is removed from the vehicle, always replace CSC (Concentric Slave Cylinder) body and CSC tube. Return CSC body insert to original position to remove transmission assembly. Dust on clutch disc sliding parts may damage seal of CSC body and may cause clutch fluid leakage.

Removal and Installation

INFOID:000000000956967

CAUTION:

If transmission assembly is removed from the vehicle, always replace CSC (Concentric Slave Cylinder) body and CSC tube. Return CSC body insert to original position to remove transmission assembly. Dust on clutch disc sliding parts may damage seal of CSC body and may cause clutch fluid leakage.

REMOVAL

1. Disconnect the battery cable from the negative terminal.
2. Remove exhaust mounting bracket. Refer to [EX-5, "Removal and Installation"](#).
3. Remove suspension member stay. Refer to [FSU-20, "Removal and Installation"](#).
4. Remove exhaust front tube, center muffler, main muffler (RH), and main muffler (LH). Refer to [EX-5, "Removal and Installation"](#).
5. Remove propeller shaft assembly. Refer to [DLN-86, "Removal and Installation"](#).

NOTE:

Insert a suitable plug into rear oil seal of transmission assembly after removing propeller shaft assembly.


6. Remove control lever assembly with the following procedure.

TRANSMISSION ASSEMBLY


< REMOVAL AND INSTALLATION >

[6MT: FS6R31A]


- a. Remove control rod mounting bolt and then separate control lever assembly from control rod.

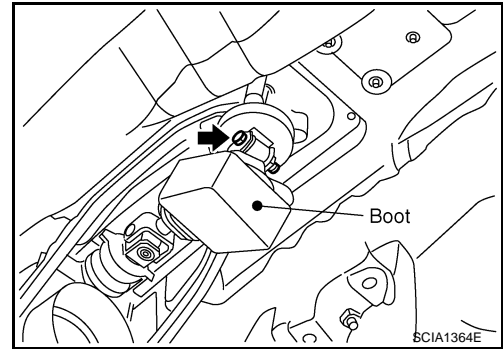


- b. Remove console finisher assembly as shown in the figure. Refer to [IP-12, "Removal and Installation"](#).

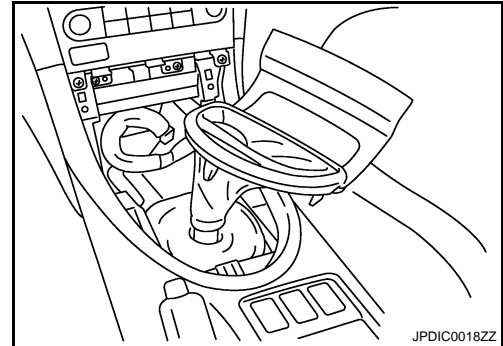

- c. Remove felt as shown in the figure.

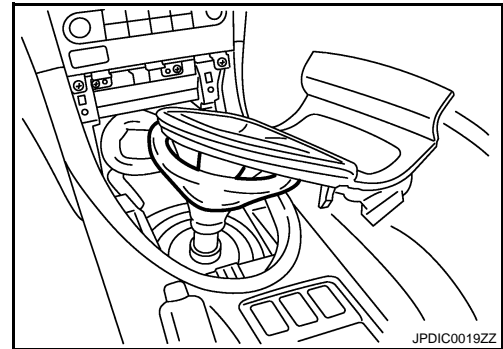


- d. Remove center console assembly to remove hole cover as shown in the figure. Refer to [IP-12, "Removal and Installation"](#).

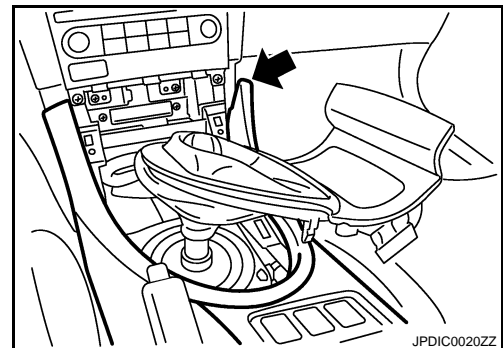

- e. Remove hole cover.

- f. Remove control lever boot B, hole insulator, and control lever boot A.

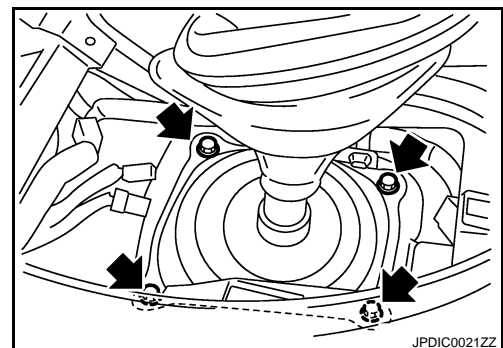

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< REMOVAL AND INSTALLATION >

[6MT: FS6R31A]

- g. Remove guide plate mounting bolts and then remove control lever assembly and control lever spring from control lever housing.

CAUTION:

Restrain guide plate while doing this because there is a danger control lever assembly will fly out of control lever housing.

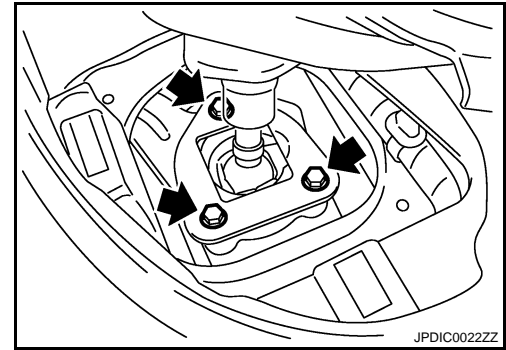

7. Remove clutch tube (1), clutch hose (2), and lock plate (3). Refer to [CL-13, "Removal and Installation"](#).


⇐ : Vehicle front

CAUTION:

- Keep painted surface on the body or other parts free of clutch fluid. If it spills, wipe up immediately and wash the affected area with water.
- Do not depress clutch pedal during removal procedure.

NOTE:

Insert a suitable plug into clutch hose and CSC (Concentric Slave Cylinder) tube after removing clutch tube.

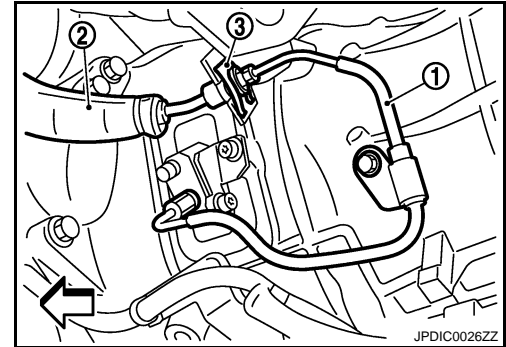

8. Remove crankshaft position sensor (POS). Refer to [EM-114, "Disassembly and Assembly"](#).

CAUTION:

- Handle carefully to avoid dropping and shocks.
- Do not disassemble.
- Do not allow metal powder to adhere to magnetic part at sensor tip.
- Do not place sensors in a location where they are exposed to magnetism.


9. Remove starter motor. Refer to [STR-16, "Removal and Installation"](#).

10. Remove rear plate cover. Refer to [EM-42, "Removal and Installation"](#).

11. Disconnect park/neutral position (PNP) switch harness connector.

12. Disconnect heated oxygen sensor 2 (bank 1) and heated oxygen sensor 2 (bank 2) harness connectors. Refer to [EX-5, "Removal and Installation"](#).

13. Remove harness brackets.

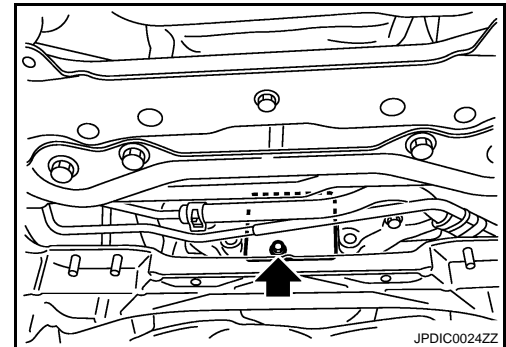

14. Set a suitable jack to the transmission assembly.

CAUTION:

When setting a suitable jack, be careful so that it does not contact with the switch.

15. Remove engine mounting insulator (rear) mounting nuts. Refer to [EM-77, "2WD : Removal and Installation"](#).


16. Remove rear engine mounting member. Refer to [EM-77, "2WD : Removal and Installation"](#).

17. Remove engine and transmission mounting bolts with power tool.

18. Lower a suitable jack to the position where the back-up lamp switch harness connector can be disconnect. Then disconnect back-up lamp switch harness connector.

19. Remove transmission assembly from the vehicle.

CAUTION:

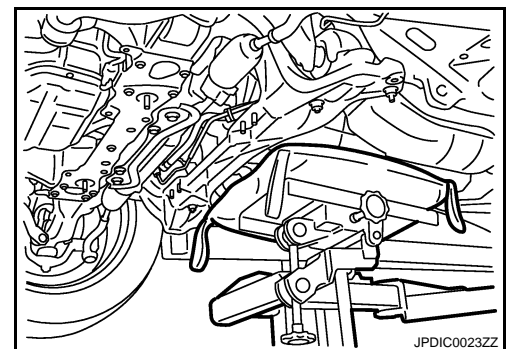

TRANSMISSION ASSEMBLY

< REMOVAL AND INSTALLATION >

[6MT: FS6R31A]

- Secure transmission assembly to a suitable jack while removing it.
- The transmission assembly must not interfere with the three way catalyst (right bank) and three way catalyst (left bank).
- The transmission assembly must not interfere with the wire harnesses and clutch hose.
- Do not hold control lever housing to prevent bushing of control lever housing from deformation when moving transmission assembly.

20. Remove CSC (Concentric Slave Cylinder) body and CSC tube. Refer to [CL-15. "Removal and Installation"](#).

CAUTION:

If transmission assembly is removed from the vehicle, always replace CSC (Concentric Slave Cylinder) body and CSC tube. Return CSC body insert to original position to remove transmission assembly. Dust on clutch disc sliding parts may damage seal of CSC body and may cause clutch fluid leakage.

21. Remove dynamic damper. Refer to [EM-77. "2WD : Removal and Installation"](#).


INSTALLATION

Note the following, and install in the reverse order of removal.

- Tighten transmission assembly mounting bolts to the specified torque. The figure is the view from the vehicle forward.

- ⊙ : Transmission to engine
- ⊗ : Engine to transmission

Bolt symbol	A	B
Quantity	8	4
" ℓ " mm (in)	65 (2.56)	35 (1.38)

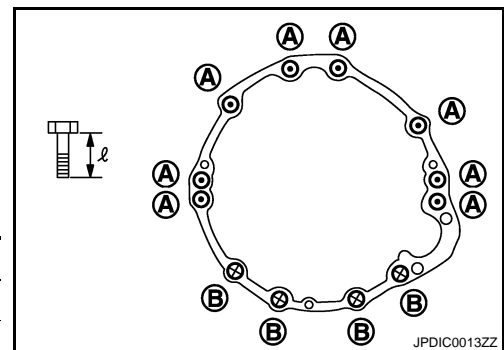

CAUTION:

- The transmission assembly must not interfere with the three way catalyst (right bank) and three way catalyst (left bank).
- The transmission assembly must not interfere with the wire harnesses and clutch hose.
- When installing transmission assembly, be careful not to bring main drive gear into contact with clutch cover.
- Do not hold control lever housing to prevent bushing of control lever housing from deformation when moving transmission assembly.
- Refer to [CL-15. "Removal and Installation"](#) for CSC (Concentric Slave Cylinder) body and CSC tube installation procedure.
- Refer to [CL-13. "Removal and Installation"](#) for clutch tube and clutch hose installation procedure.
- Refer to [TM-18. "Removal and Installation"](#) for control lever assembly installation procedure.
- After installation, check for oil leakage and oil level. Refer to [TM-16. "Inspection"](#).
- If flywheel is removed, align dowel pin with the smallest hole of flywheel. Refer to [EM-114. "Disassembly and Assembly"](#).

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]


DISASSEMBLY AND ASSEMBLY

TRANSMISSION ASSEMBLY

Exploded View

INFOID:000000000956968

CASE AND EXTENSION

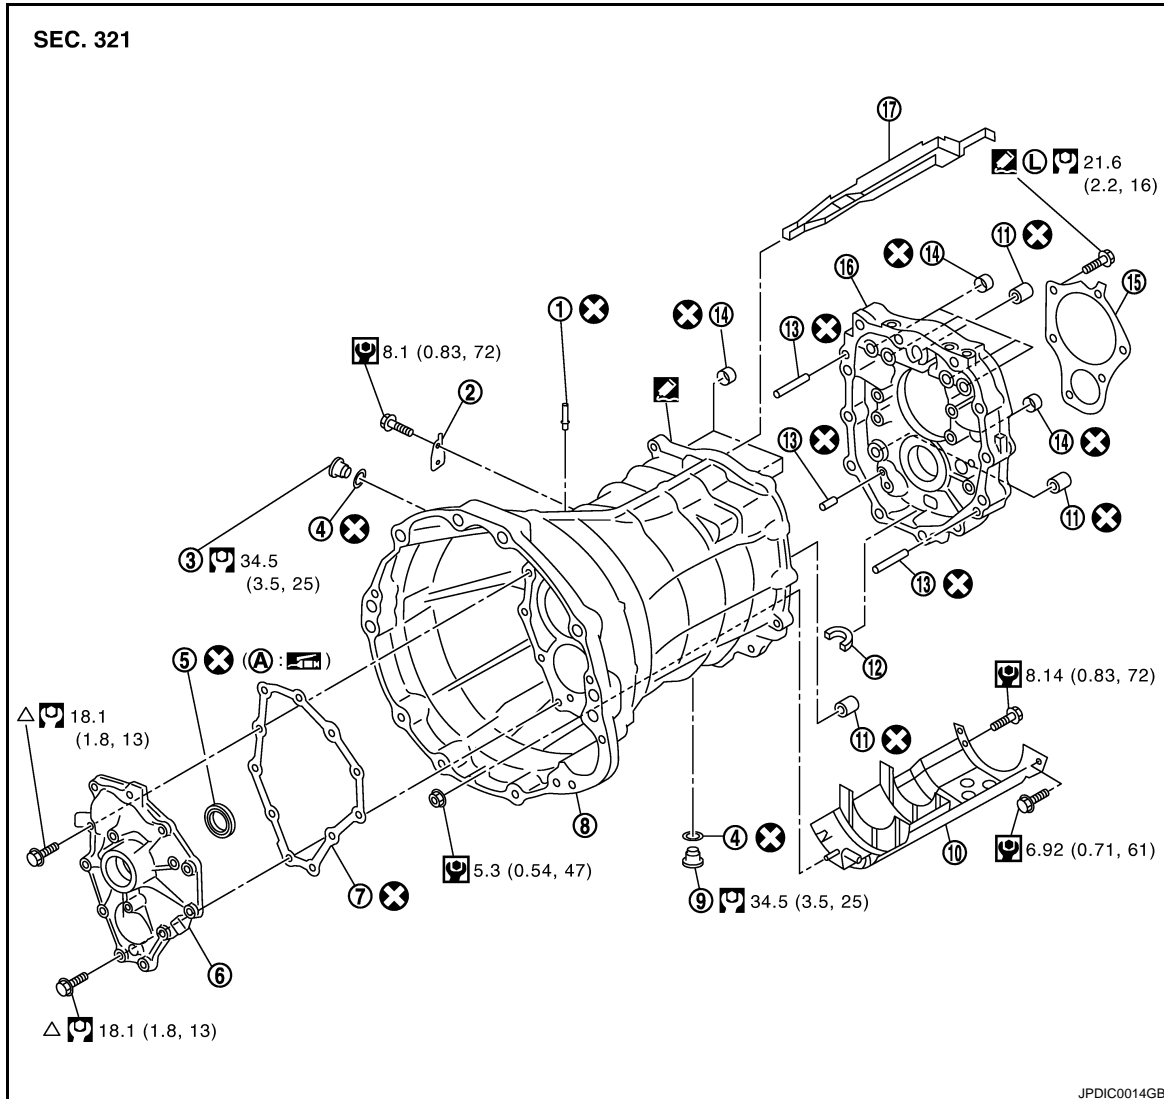

- | | | |
|-----------------------|--------------------------|--------------------------------|
| 1. Breather tube | 2. Bracket | 3. Filler plug |
| 4. Gasket | 5. Front cover oil seal | 6. Front cover |
| 7. Front cover gasket | 8. Transmission case | 9. Drain plug |
| 10. Baffle plate | 11. Sliding ball bearing | 12. Magnet |
| 13. Dowel pin | 14. Bushing | 15. Mainshaft bearing retainer |
| 16. Adapter plate | 17. Oil gutter | |
| A. Seal lip | | |

: Apply multi-purpose grease.

: Apply Genuine Silicone RTV or an equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).

: Apply Genuine Medium Strength Thread Locking Sealant or an equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).


TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

△: For the bolt mounting positions, refer to [TM-44. "Assembly"](#).

Refer to [GI-4. "Components"](#) for symbols not described on the above.

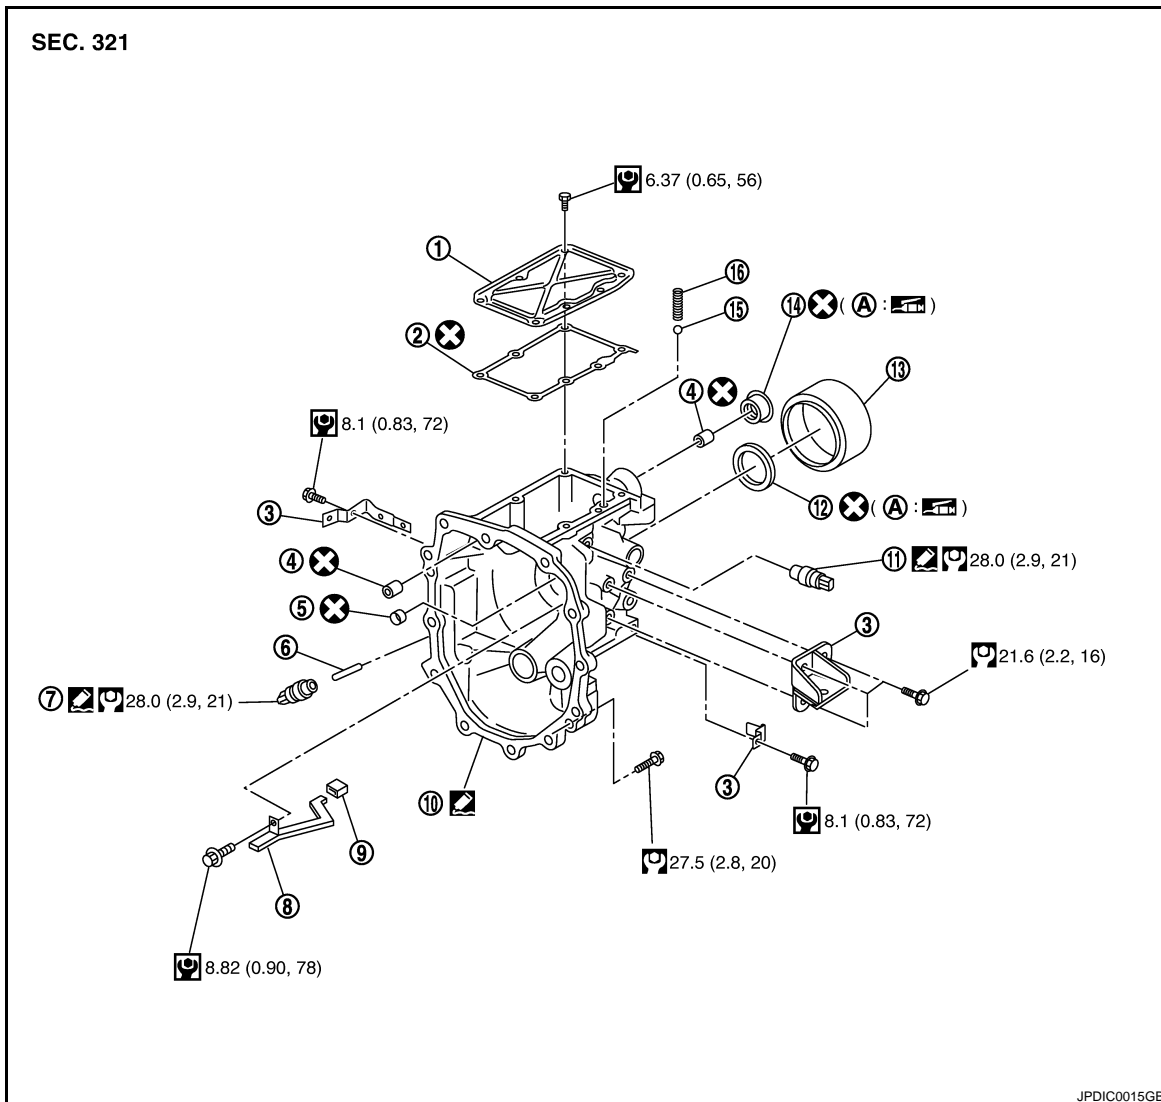

- | | | |
|---------------------------------------|--------------------------------------|-------------------|
| 1. Rear extension upper cover | 2. Rear extension upper cover gasket | 3. Bracket |
| 4. Sliding ball bearing | 5. Bushing | 6. Plunger |
| 7. Park/Neutral position (PNP) switch | 8. Rear extension oil gutter | 9. Cap |
| 10. Rear extension | 11. Back-up lamp switch | 12. Rear oil seal |
| 13. Rear extension dust cover | 14. Striking rod oil seal | 15. Check ball |
| 16. Check select spring | | |
| A. Seal lip | | |

: Apply multi-purpose grease.

: Apply Genuine Silicone RTV or an equivalent. Refer to [GI-15. "Recommended Chemical Products and Sealants"](#).


Refer to [GI-4. "Components"](#) for symbols not described on the above.

SHAFT AND GEAR

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

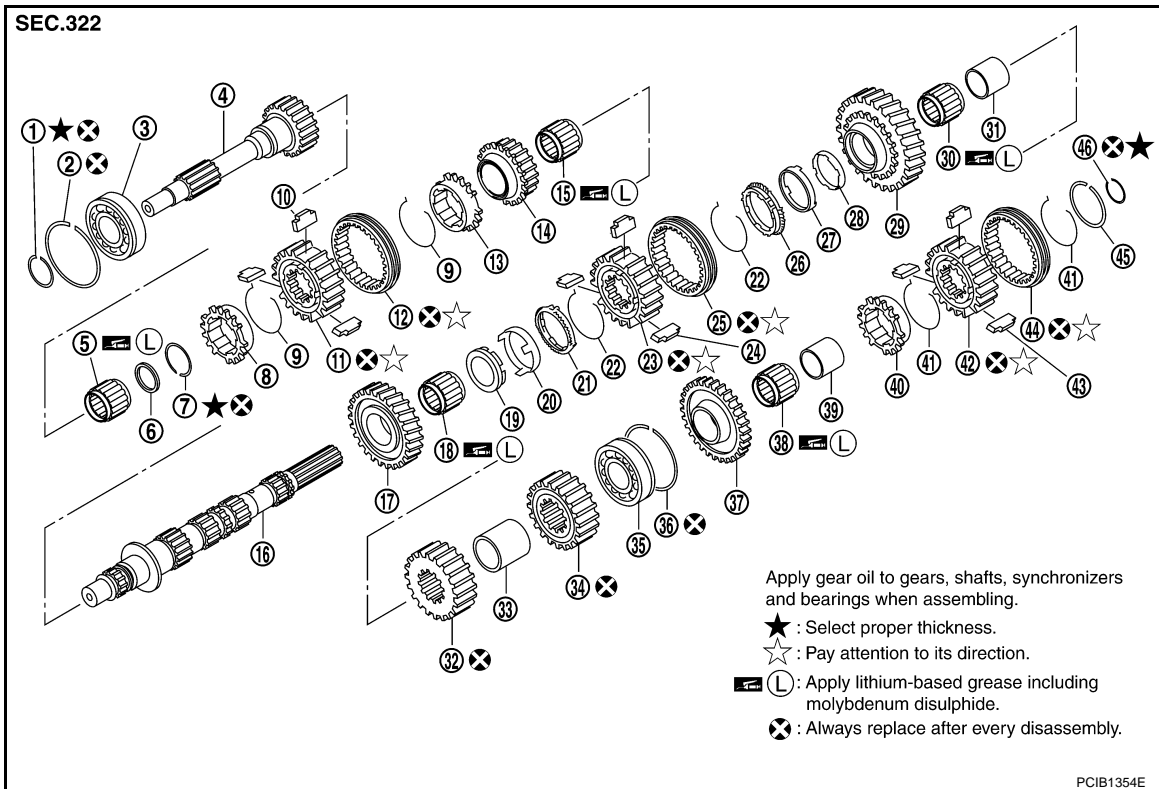


PCIB1354E

- | | | |
|-----------------------------|---------------------------------|-------------------------------|
| 1. Snap ring | 2. Snap ring | 3. Main drive gear bearing |
| 4. Main drive gear | 5. Main pilot bearing | 6. Pilot bearing spacer |
| 7. Snap ring | 8. 5th baulk ring | 9. 5th-6th spread spring |
| 10. 5th-6th shifting insert | 11. 5th-6th synchronizer hub | 12. 5th-6th coupling sleeve |
| 13. 6th baulk ring | 14. 6th main gear | 15. 6th needle bearing |
| 16. Mainshaft | 17. 2nd main gear | 18. 2nd needle bearing |
| 19. 2nd inner baulk ring | 20. 2nd synchronizer cone | 21. 2nd outer baulk ring |
| 22. 1st-2nd spread spring | 23. 1st-2nd synchronizer hub | 24. 1st-2nd shifting insert |
| 25. 1st-2nd coupling sleeve | 26. 1st outer baulk ring | 27. 1st synchronizer cone |
| 28. 1st inner baulk ring | 29. 1st main gear | 30. 1st needle bearing |
| 31. 1st gear bushing | 32. 3rd main gear | 33. 3rd-4th main spacer |
| 34. 4th main gear | 35. Mainshaft bearing | 36. Snap ring |
| 37. Reverse main gear | 38. Reverse main needle bearing | 39. Reverse main gear bushing |
| 40. Reverse baulk ring | 41. Reverse spread spring | 42. Reverse synchronizer hub |
| 43. Reverse shifting insert | 44. Reverse coupling sleeve | 45. Snap ring |
| 46. Snap ring | | |

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

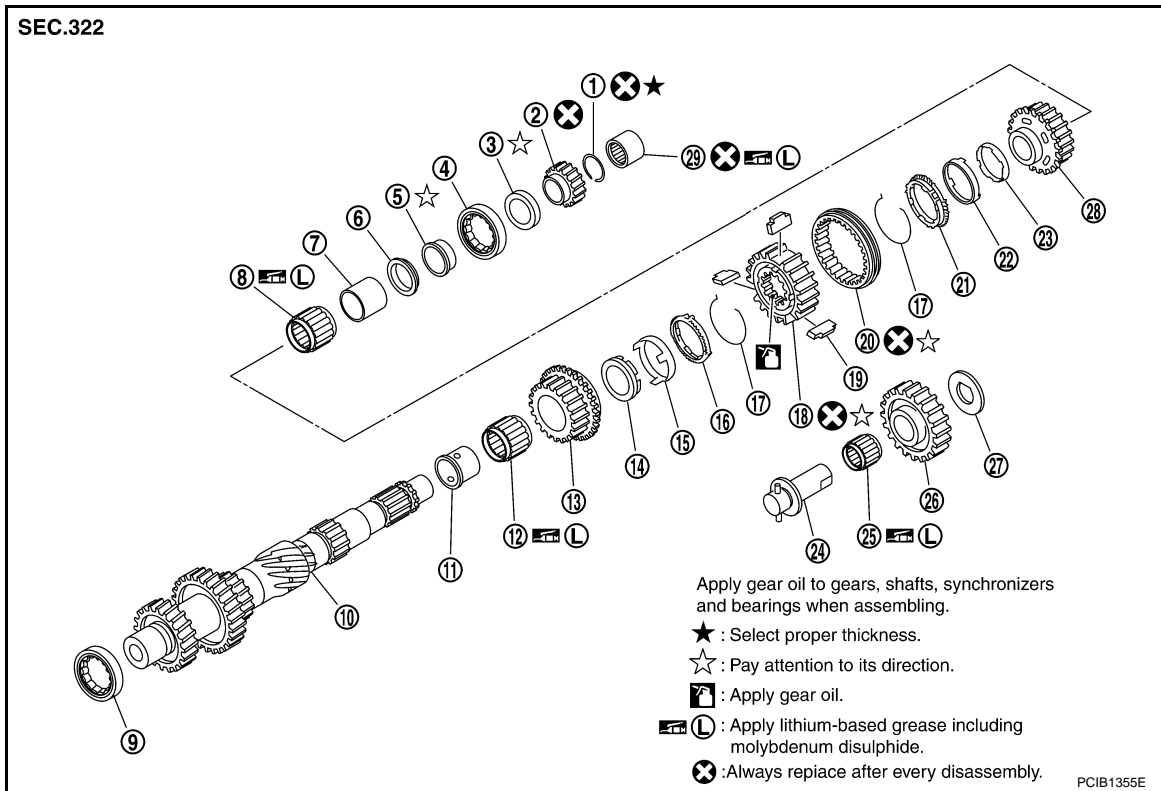

- | | | |
|----------------------------------|------------------------------------|-----------------------------------|
| 1. Snap ring | 2. Reverse counter gear | 3. Counter rear bearing spacer |
| 4. Counter rear bearing | 5. Counter rear bearing inner race | 6. 4th counter gear thrust washer |
| 7. 4th gear bushing | 8. 4th needle bearing | 9. Counter front bearing |
| 10. Counter shaft | 11. 3rd gear bushing | 12. 3rd needle bearing |
| 13. 3rd counter gear | 14. 3rd inner baulk ring | 15. 3rd synchronizer cone |
| 16. 3rd outer baulk ring | 17. 3rd-4th spread spring | 18. 3rd-4th synchronizer hub |
| 19. 3rd-4th shifting insert | 20. 3rd-4th coupling sleeve | 21. 4th outer baulk ring |
| 22. 4th synchronizer cone | 23. 4th inner baulk ring | 24. Reverse idler shaft |
| 25. Reverse idler needle bearing | 26. Reverse idler gear | 27. Reverse idler thrust washer |
| 28. 4th counter gear | 29. Counter end bearing | |


SHIFT FORK AND FORK ROD

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

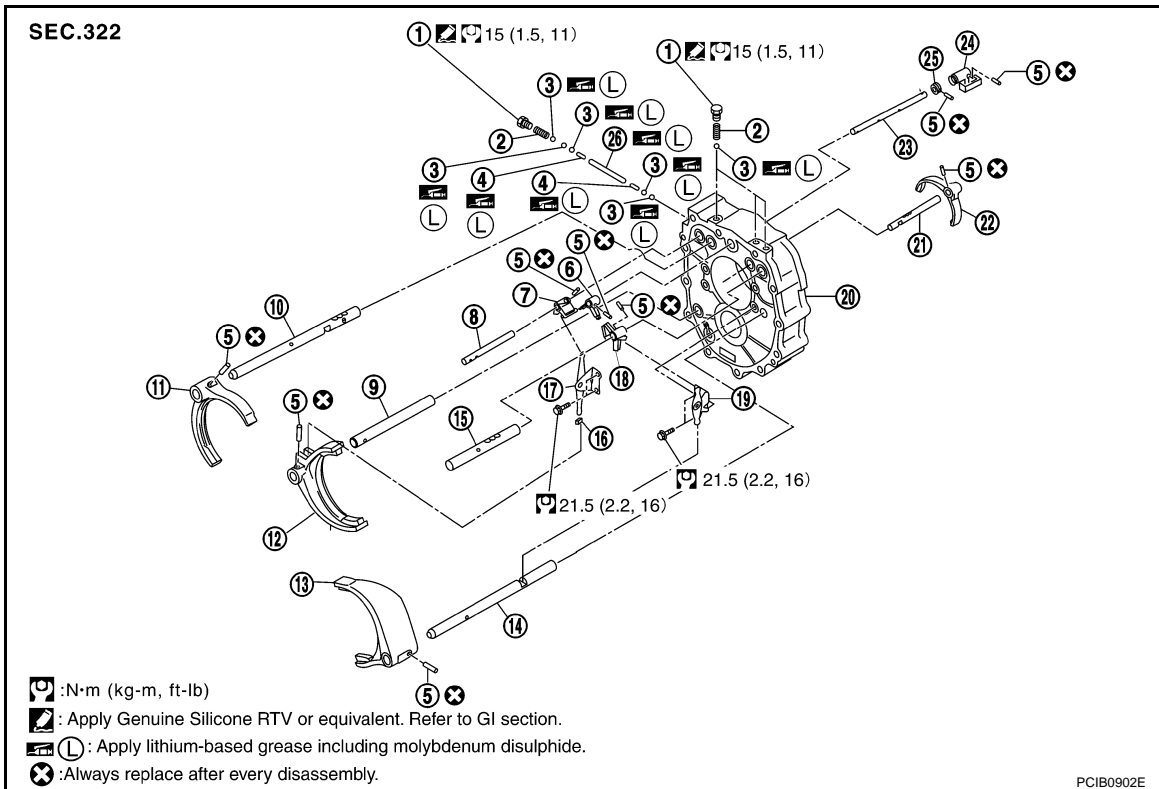


- | | | |
|-----------------------------|--------------------------------------|-------------------------------------|
| 1. Check ball plug | 2. Check ball spring | 3. Check ball |
| 4. Interlock pin | 5. Retaining pin | 6. Striking lever |
| 7. 3rd-4th fork rod bracket | 8. 3rd-4th fork rod | 9. 3rd-4th fork rod (reversal side) |
| 10. 1st-2nd fork rod | 11. 1st-2nd shift fork | 12. 3rd-4th shift fork |
| 13. 5th-6th shift fork | 14. 5th-6th fork rod (reversal side) | 15. 5th-6th fork rod |
| 16. Shifter cap | 17. 3rd-4th control lever | 18. 5th-6th fork rod bracket |
| 19. 5th-6th control lever | 20. Adapter plate | 21. Reverse fork rod |
| 22. Reverse shift fork | 23. Striking rod | 24. Low/high control lever |
| 25. Stopper ring | 26. Interlock plunger | |

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

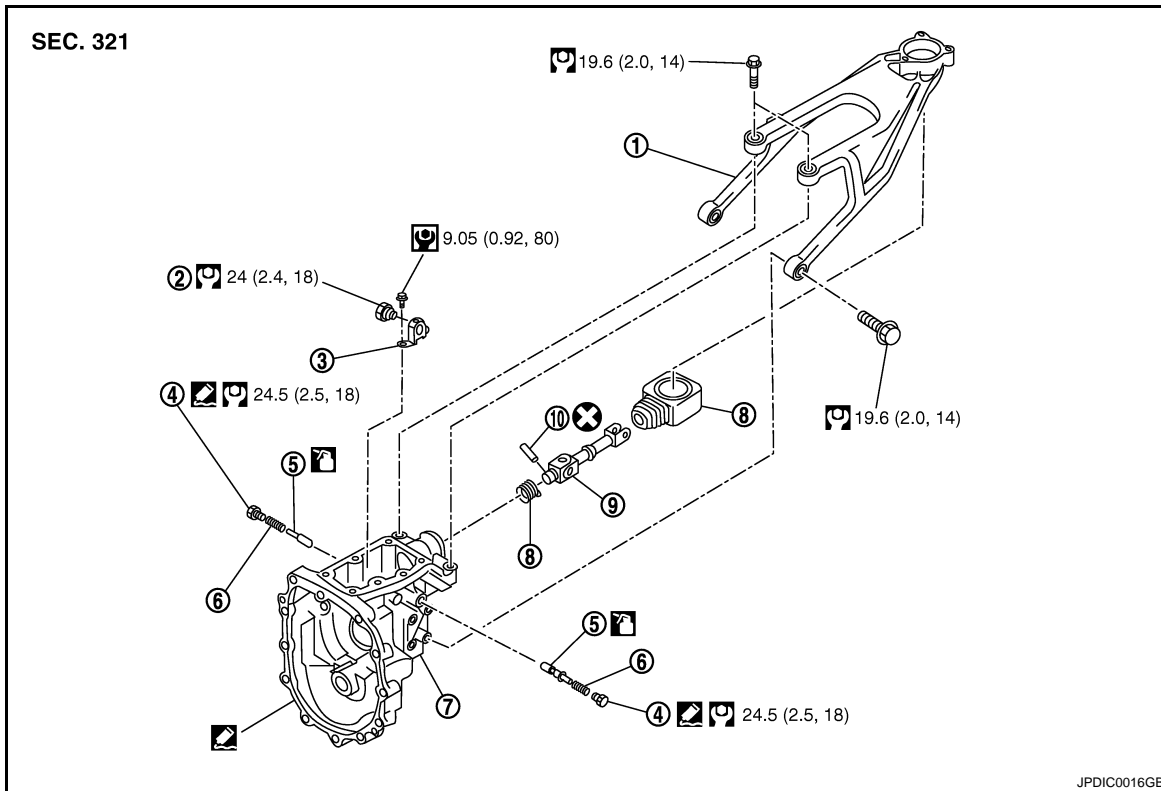

- | | | |
|--------------------------|--------------------------|--------------------|
| 1. Control lever housing | 2. Check shift pin | 3. Control bracket |
| 4. Return spring plug | 5. Return spring plunger | 6. Return spring |
| 7. Rear extension | 8. Boot | 9. Control rod |
| 10. Retaining pin | | |

: Apply gear oil.

: Apply Genuine Silicone RTV or an equivalent. Refer to [GI-15. "Recommended Chemical Products and Sealants"](#).


Refer to [GI-4. "Components"](#) for symbols not described on the above.

Disassembly

INFOID:000000000956969

CASE AND EXTENSION

1. Remove rear extension upper cover mounting bolts.
2. Remove rear extension upper cover and rear extension upper cover gasket from rear extension.

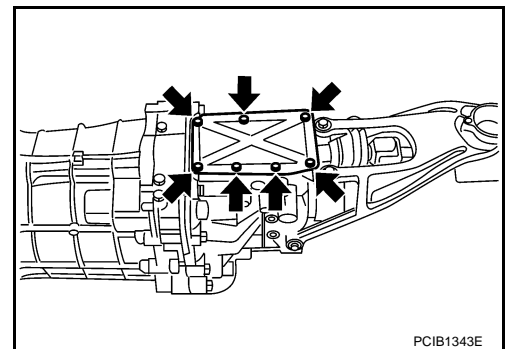


PCIB1343E

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]


3. Remove check select spring and check ball from rear extension.

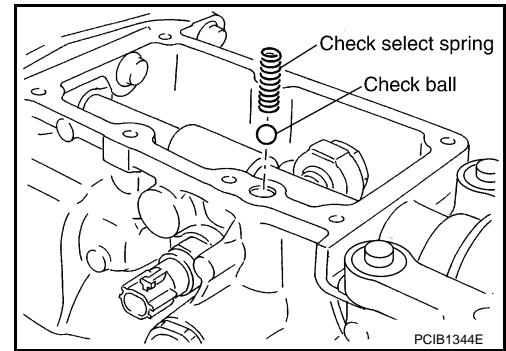

4. Remove retaining pin using a pin punch and then remove control rod and boots.
5. Remove park/neutral position (PNP) switch, plunger, and back-up lamp switch from rear extension.

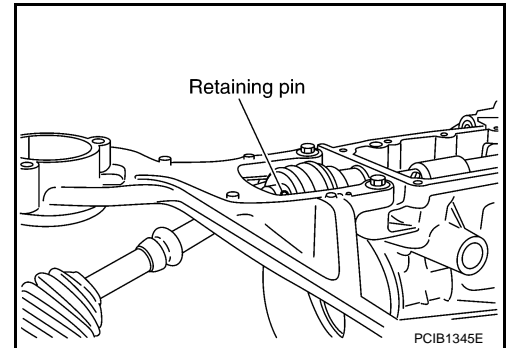

6. Remove control bracket mounting bolts and then remove check shift pin and control bracket as one unit from rear extension.

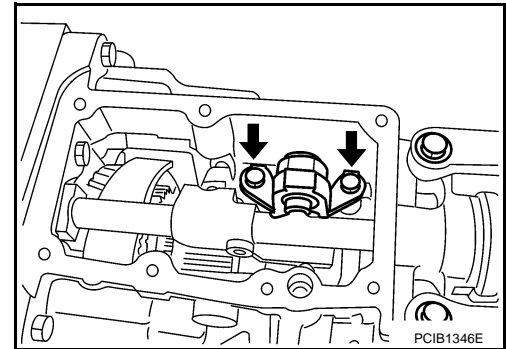


7. Remove right and left return spring plugs and then remove return springs and return spring plungers from rear extension.

CAUTION:

Return spring and return spring plunger have different lengths for right and left sides. Identify right and left side and then store.


8. Remove bracket mounting bolts and then remove brackets from rear extension.

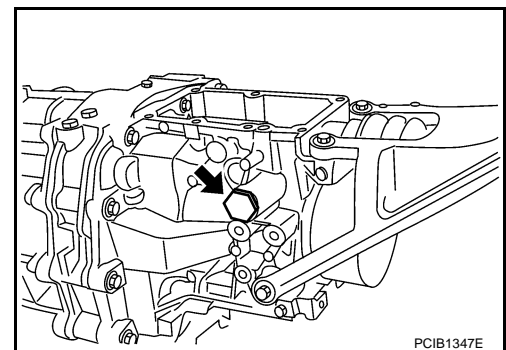

9. Remove rear oil seal from rear extension using a puller [SST: KV381054S0 (J-34286)].

CAUTION:

Be careful not to damage rear extension.

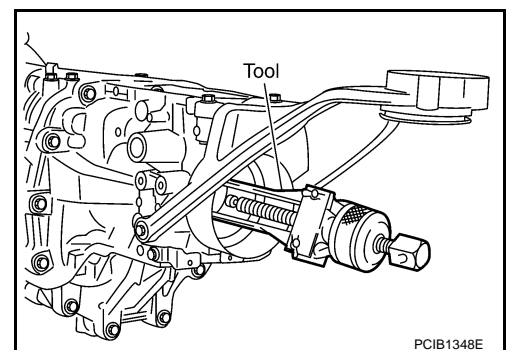

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

10. Remove rear extension mounting bolts and then remove rear extension assembly using a soft hammer.

CAUTION:



Do not hold control lever housing to prevent bushing of control lever housing from deformation when moving transmission assembly.

11. Remove control lever housing mounting bolts and then remove control lever housing from rear extension.
12. Remove striking rod oil seal from rear extension.


CAUTION:

Be careful not to damage rear extension.

13. Remove rear extension oil gutter and cap from rear extension.
14. Remove reverse idler thrust washer, reverse idler gear and reverse idler needle bearing from reverse idler shaft.
15. Remove reverse idler shaft from adapter plate.

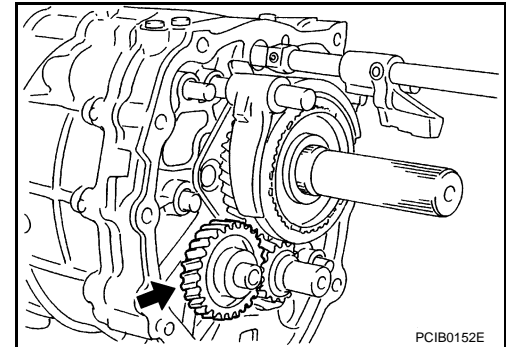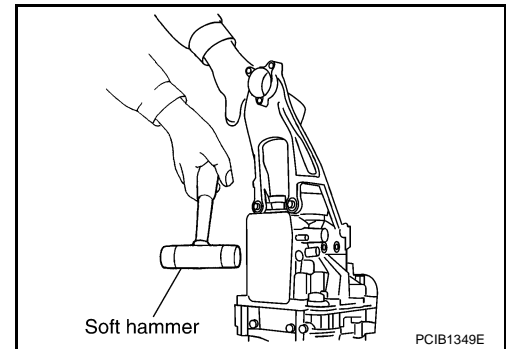


16. Remove front cover mounting bolts and then remove front cover and front cover gasket from transmission case.

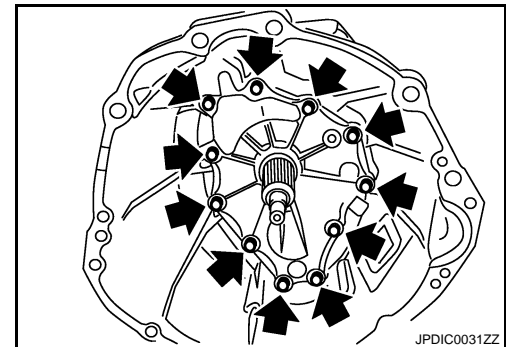

17. Remove front cover oil seal from front cover assembly using a flat-bladed screwdriver.

CAUTION:

Be careful not to damage front cover mating surface.

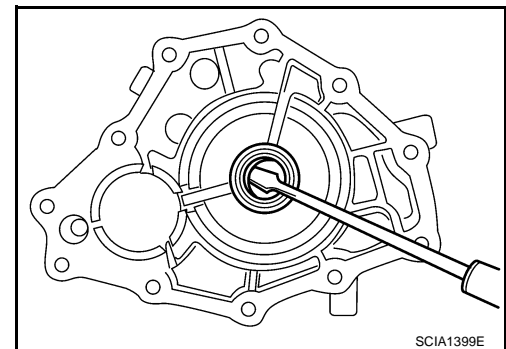


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]


18. Remove baffle plate mounting nut from transmission case.

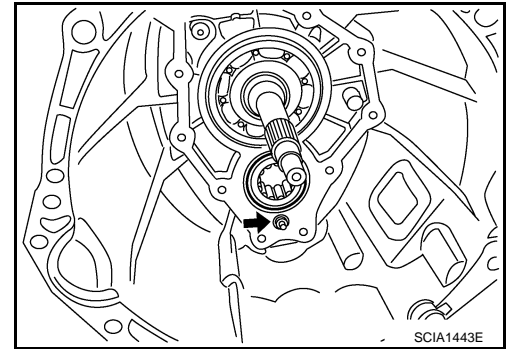

19. Remove snap ring from main drive gear bearing using snap ring pliers.

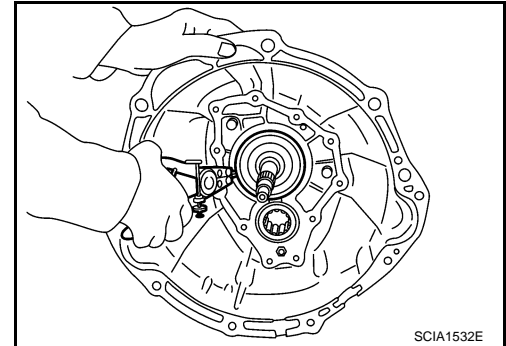

20. Using a soft hammer to carefully tap mainshaft and counter shaft from transmission case side and then separate adapter plate and transmission case.

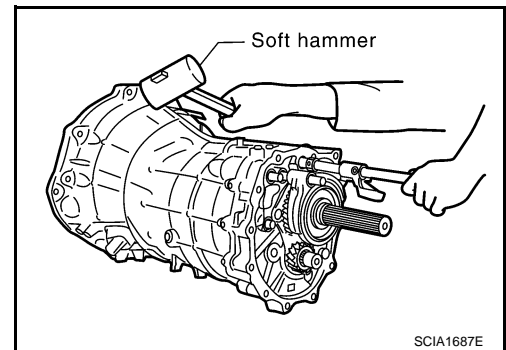


21. Remove counter front bearing from transmission case.

22. Remove oil gutter and breather tube from transmission case.

23. Remove filler plug, drain plug, and gaskets from transmission case.

24. Remove bracket mounting bolt and then remove bracket from transmission case.

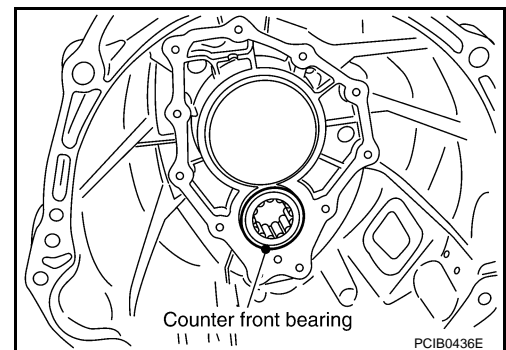

SHIFT FORK AND FORK ROD

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]


1. Install adapter setting plate [SST: ST22490000 (—)] to adapter plate and then fixing in adapter setting plate using a vise.

CAUTION:


Do not directly secure the surface in a vise.

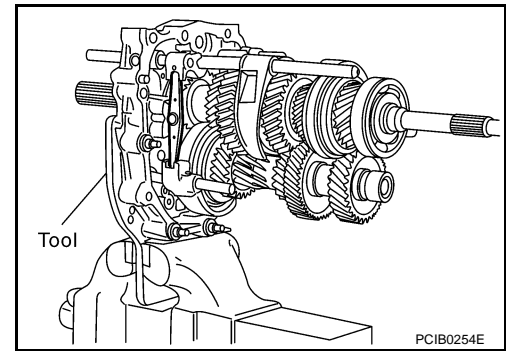


2. Remove baffle plate mounting bolts and then remove baffle plate from adapter plate.

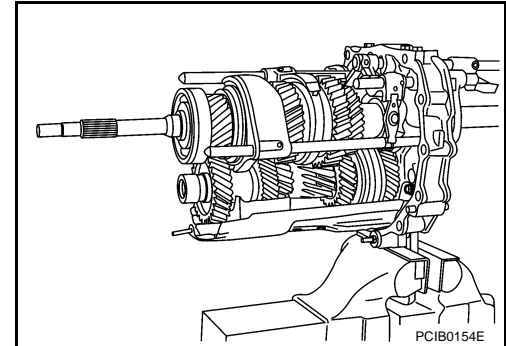

3. Remove retaining pin using a pin punch and then remove striking lever and striking rod.

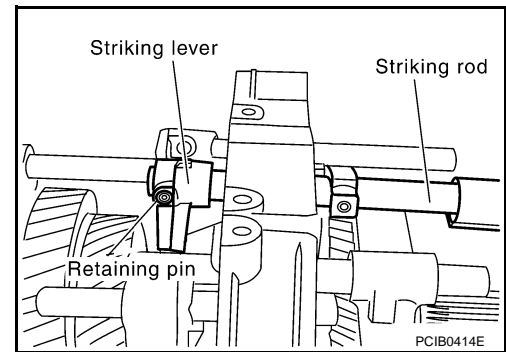


4. Remove check ball plugs and then remove check ball springs and check balls from adapter plate.

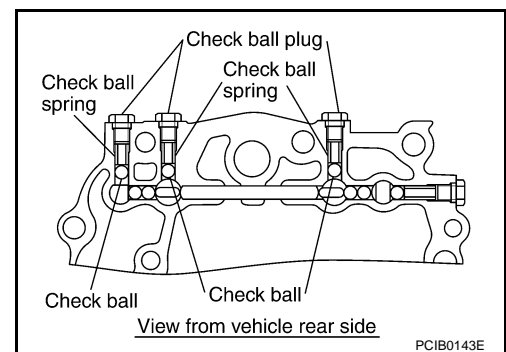

5. Remove 3rd-4th control lever mounting bolts and then remove 3rd-4th control lever and shifter cap.

CAUTION:

Be careful not to lose shifter cap.

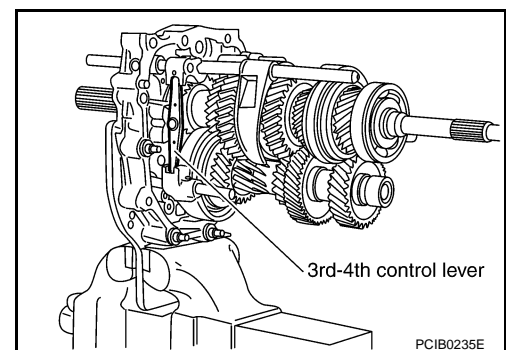


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]


6. Remove check ball plug and then remove check ball spring and check ball from adapter plate.

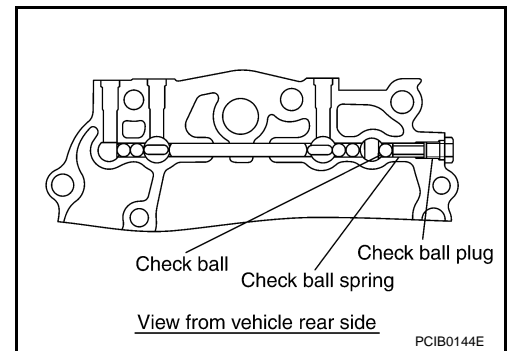


7. Remove retaining pin using a pin punch and then remove 3rd-4th fork rod bracket and 3rd-4th fork rod.

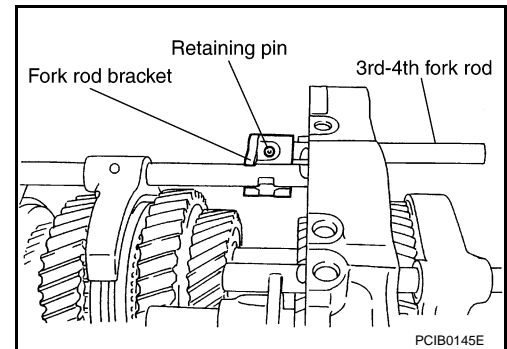


8. Remove retaining pin using a pin punch and then remove 3rd-4th shift fork and 3rd-4th fork rod (reversal side).

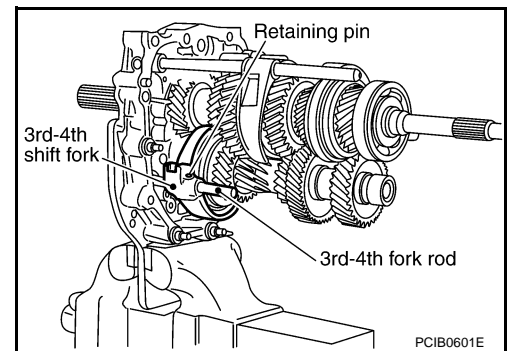

9. Remove check balls and interlock pin from adapter plate.

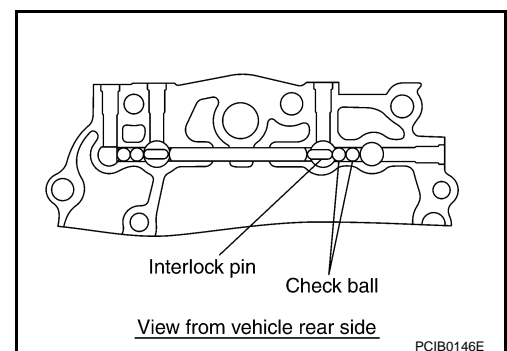

10. Remove retaining pin using a pin punch and then remove 1st-2nd shift fork and 1st-2nd fork rod.

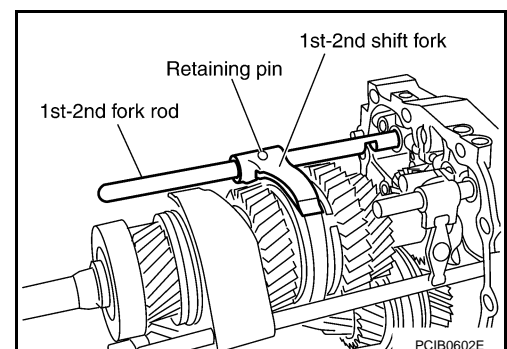


TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]


11. Remove interlock plunger and interlock pin from adapter plate.

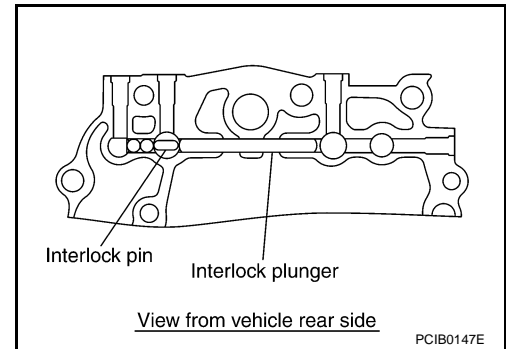


12. Remove retaining pin using a pin punch and then remove reverse shift fork and reverse fork rod.

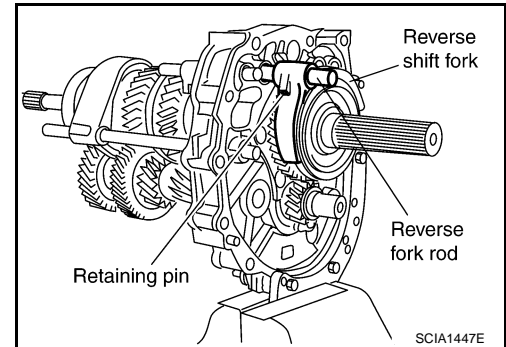


13. Remove check balls from adapter plate.

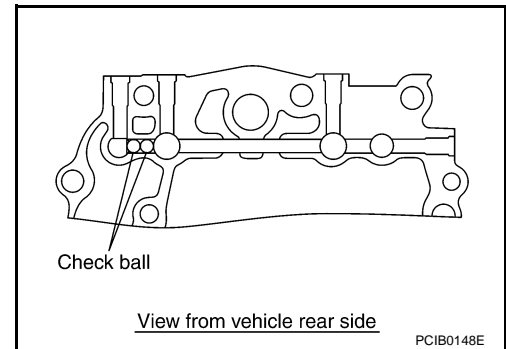

14. Remove 5th-6th control lever mounting bolts and then remove 5th-6th control lever from adapter plate.

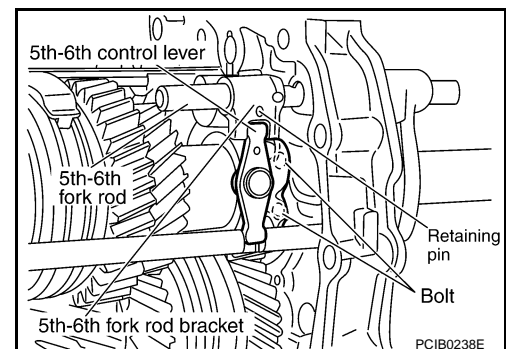

15. Remove retaining pin using a pin punch and then remove 5th-6th fork rod bracket and 5th-6th fork rod.

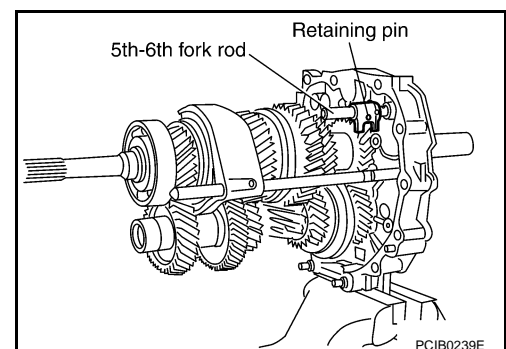


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

16. Remove retaining pin using a pin punch and then remove 5th-6th fork rod (reversal side) and 5th-6th shift fork.

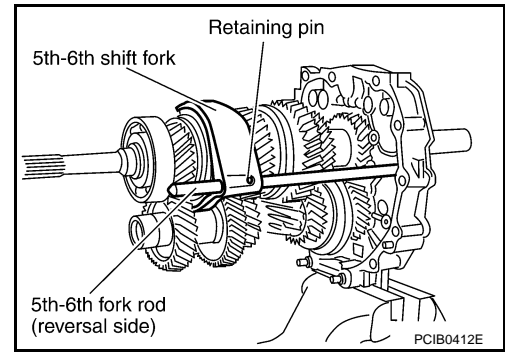


SHAFT AND GEAR

1. Before disassembly, measure end play for each position. If the end play is outside the specifications, disassemble and inspect.


- Mainshaft

End play standard value : Refer to [TM-75, "End Play"](#).

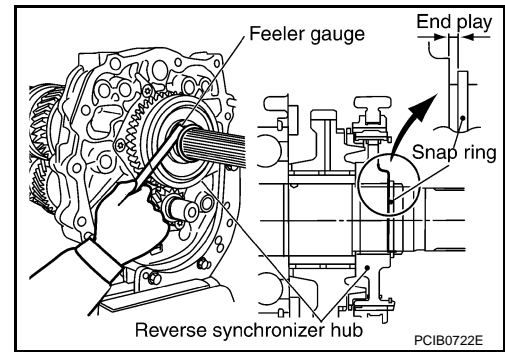


- Counter shaft

End play standard value : Refer to [TM-75, "End Play"](#).

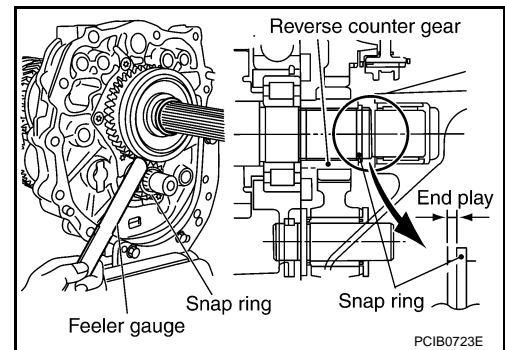

2. After removing snap ring and reverse coupling snap ring, using a puller to remove reverse main gear and reverse synchronizer assembly.
3. Remove reverse main needle bearing.

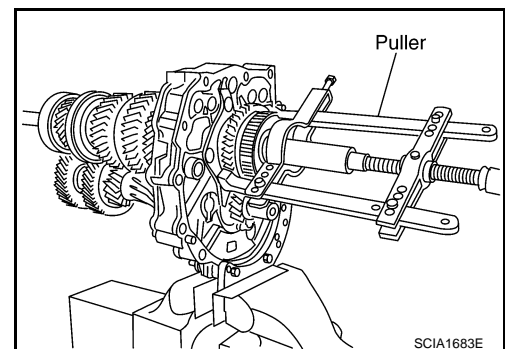


TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]


4. After removing snap ring, using the puller to remove reverse counter gear and counter rear bearing spacer.

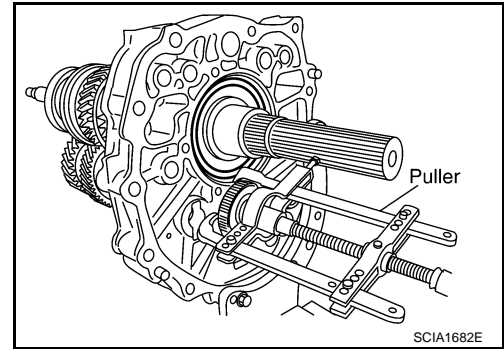

5. Remove mainshaft bearing retainer mounting bolts and then remove mainshaft bearing retainer.

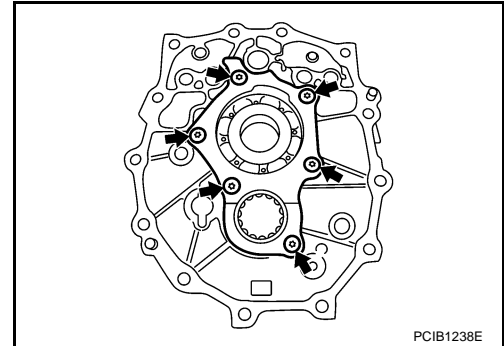


6. Remove snap ring from mainshaft bearing.

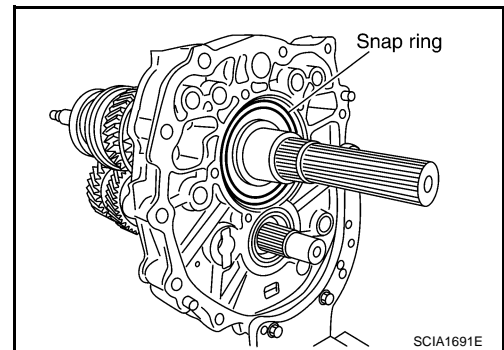


7. Carefully tap mainshaft with a plastic hammer and then remove mainshaft assembly, main drive gear assembly and counter shaft assembly from adapter plate.

8. Remove main pilot bearing, pilot bearing spacer and 5th baulk ring.

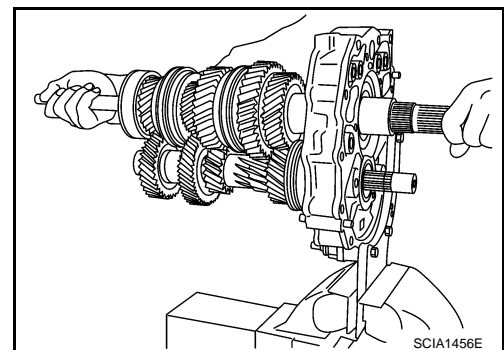

9. Remove counter rear bearing from adapter plate.

10. Remove magnet from adapter plate.

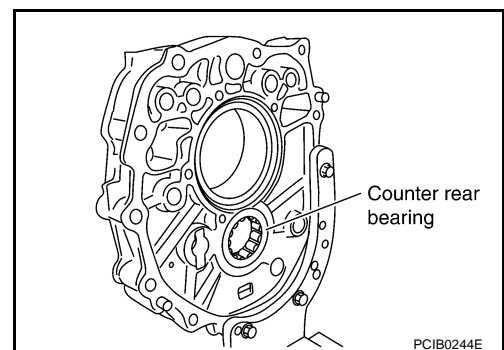

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >


[6MT: FS6R31A]

Assembly

INFOID:00000000956970


SHAFT AND GEAR

1. Install main drive gear assembly, mainshaft assembly and counter gear assembly according to the following.
 - a. Install main pilot bearing, pilot bearing spacer and 5th baulk ring to main drive gear.
 - b. Install main drive gear assembly, mainshaft assembly, and counter shaft assembly combined in one unit to adapter plate using brass bar.

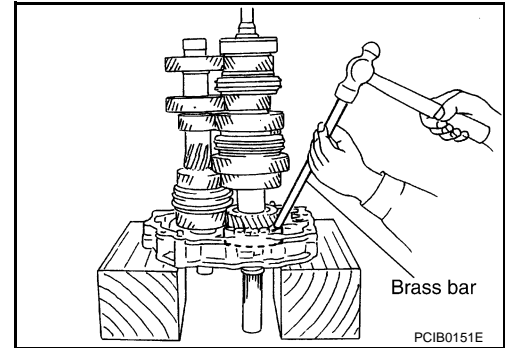


2. Install the adapter setting plate to adapter plate and then fixing in adapter setting plate using a vise.

CAUTION:
Do not directly secure the surface in a vise.
3. Install magnet to adapter plate.

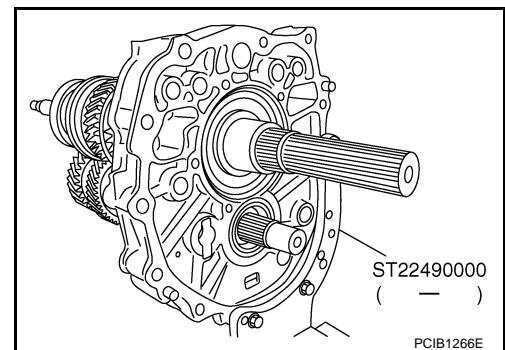


4. Install snap ring to mainshaft bearing.

CAUTION:
Do not reuse snap ring.

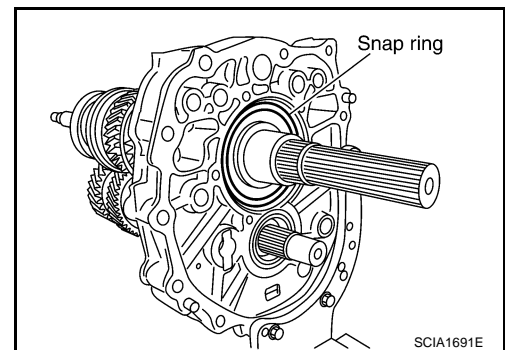

5. Install counter rear bearing onto adapter plate using the drift.

CAUTION:
Replace counter rear bearing inner race, counter rear bearing and counter rear bearing spacer as a set.

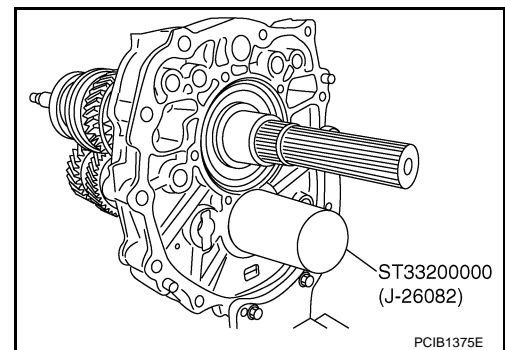

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >


[6MT: FS6R31A]

6. Apply thread locking sealant to the end of bolts (first 3 to 4 threads).
 - Use Genuine Medium Strength Thread Locking Sealant or an equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).

CAUTION:


Remove old sealant and oil adhering to threads.

7. Install bolts into mainshaft bearing retainer and tighten bolts to the specified torque.

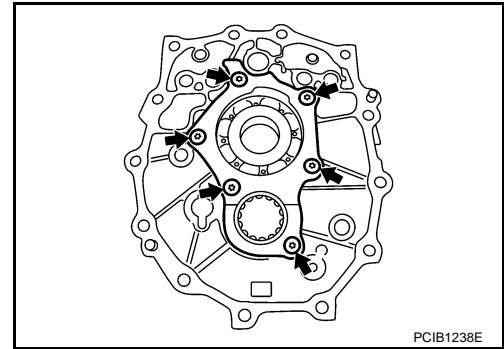


8. Install reverse coupling sleeve and reverse shifting inserts into reverse synchronizer hub.
 - Install reverse coupling sleeve with the flat flange on the rear side.
 - Do not reuse reverse coupling sleeve and reverse synchronizer hub.
 - Replace reverse coupling sleeve and reverse synchronizer hub as a set.

CAUTION:

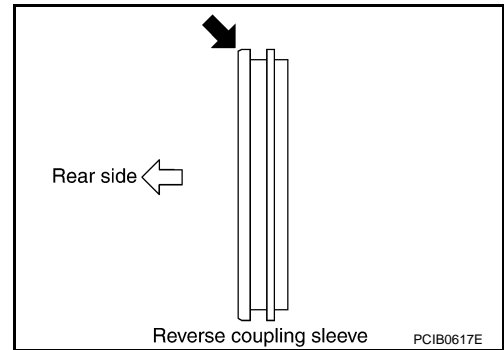


9. Install reverse spread springs in reverse shifting inserts.
 - Do not install reverse spread spring hook onto the same reverse shifting insert.

CAUTION:

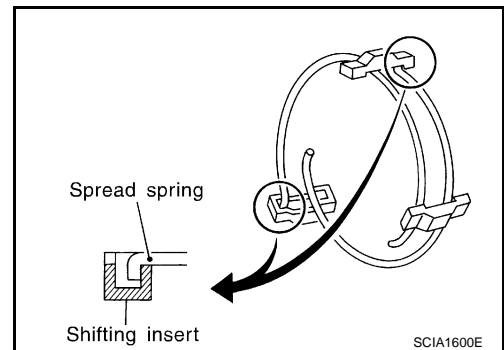

- Be careful with the shape of 1st-2nd, 3rd-4th and 5th-6th shifting insert to avoid misassembly.

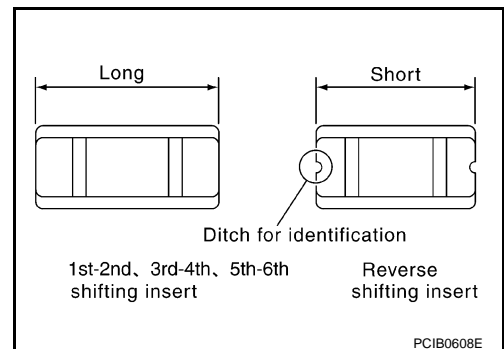

10. Install snap ring to reverse synchronizer hub.
 - Do not install reverse spread spring hook onto the same reverse shifting insert.

CAUTION:


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]


- Do not align snap ring notch with synchronizer hub groove when assembling.
- Do not reuse snap ring.

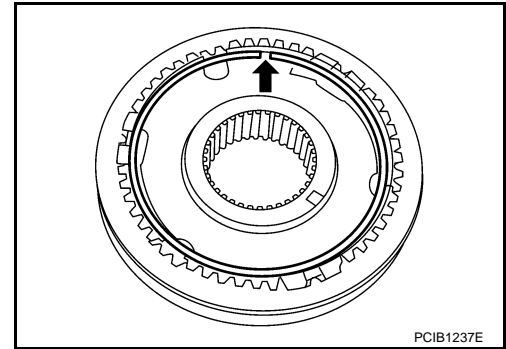

11. Apply recommended grease to reverse main needle bearing.
12. After installing reverse main gear bushing, reverse main needle bearing, reverse main gear and reverse baulk ring onto main-shaft using the press plate (A) [SST: KV32103300 (J-46529)] and drift (B) [SST: ST01530000 (—)] and a press to press fit reverse synchronizer assembly.

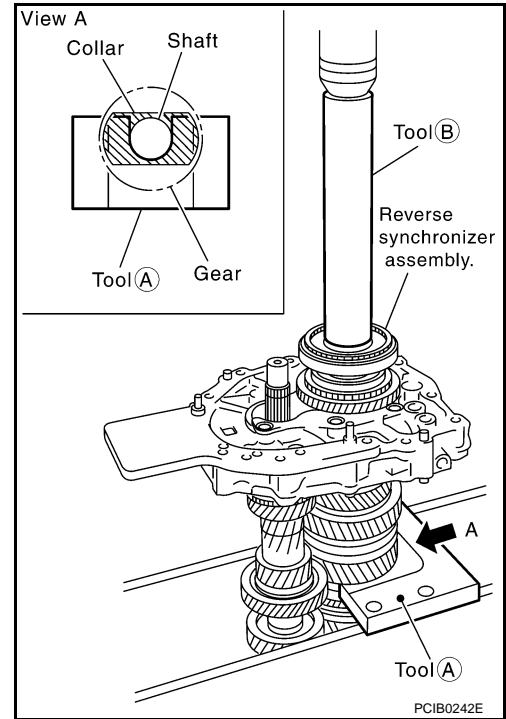

CAUTION:
When installing, face the side with three ditches to the front side.

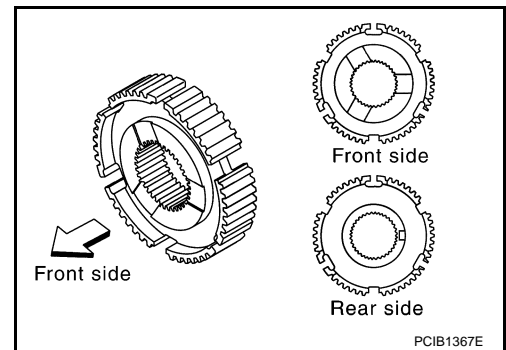


NOTE:

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

Reverse baulk ring has three spaces that two gear teeth are missing, and each space has small ditch for identification as shown in the figure.

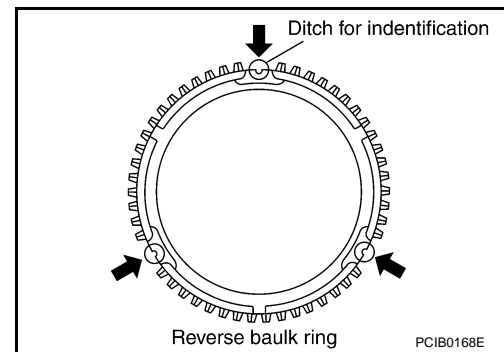


13. Select and install a snap ring so that the end play comes within the standard value.

End play standard value : Refer to [TM-75, "End Play"](#).

CAUTION:


Do not reuse snap ring.

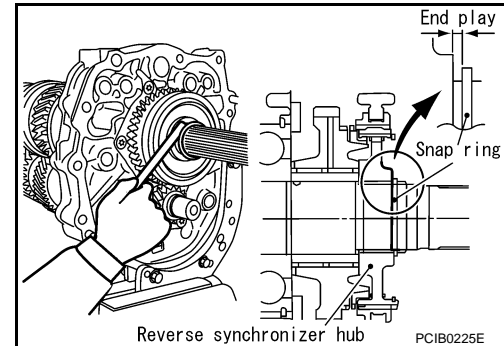

14. After installing counter rear bearing spacer, press and fit reverse counter gear onto counter shaft with drift [SST: ST23860000 (—)] and press.

CAUTION:

- Do not reuse reverse counter gear.
- When installing counter rear bearing spacer, identification ditch should face to the rear side.
- Replace counter rear bearing inner race, counter rear bearing and counter rear bearing spacer as a set.

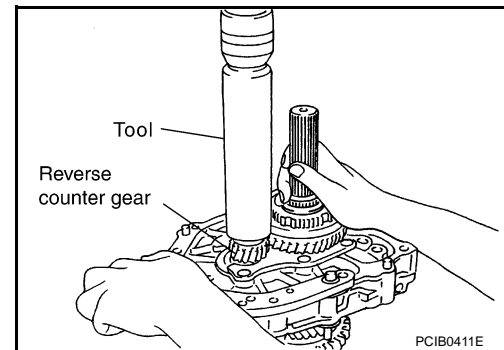


15. Select and install a snap ring so that the end play comes within the standard value.

End play standard value : Refer to [TM-75, "End Play"](#).

CAUTION:

Do not reuse snap ring.

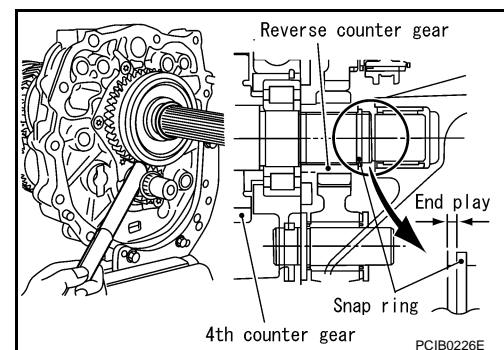

SHIFT FORK AND FORK ROD

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

1. Install 5th-6th shift fork to 5th-6th coupling sleeve.
2. Install 5th-6th fork rod (reversal side) to 5th-6th shift fork.
3. Using a pin punch to tap retaining pin into 5th-6th shift fork.

CAUTION:


Do not reuse retaining pin.

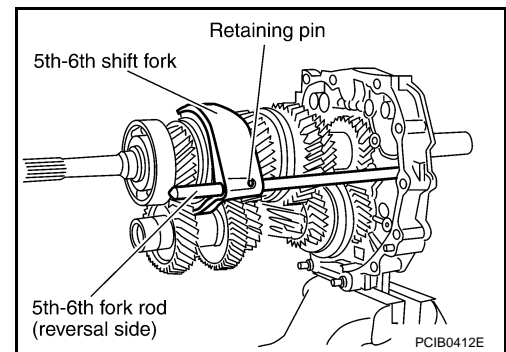

4. Install 5th-6th fork rod to adapter plate.
5. Install 5th-6th fork rod bracket to 5th-6th fork rod.
6. Using a pin punch to tap retaining pin into 5th-6th fork rod bracket.

CAUTION:


Do not reuse retaining pin.

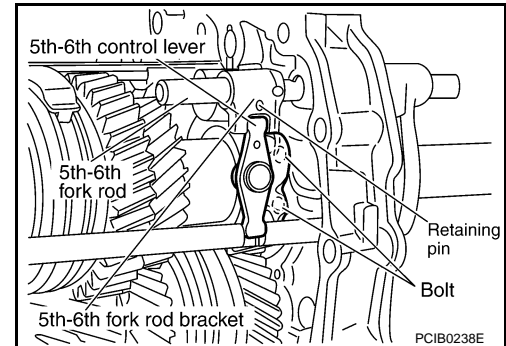


7. Install 5th-6th control lever to adapter plate and then tighten mounting bolts to the specified torque.

CAUTION:

Set the projection upward.

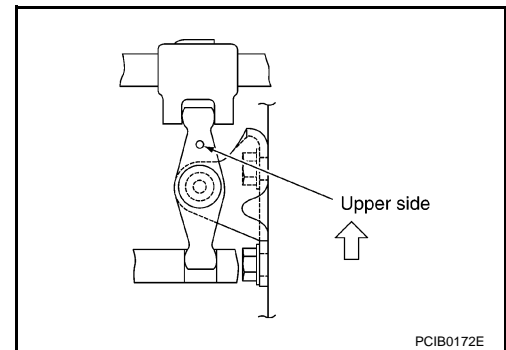


8. Apply recommended grease check balls and then install check balls to adapter plate.

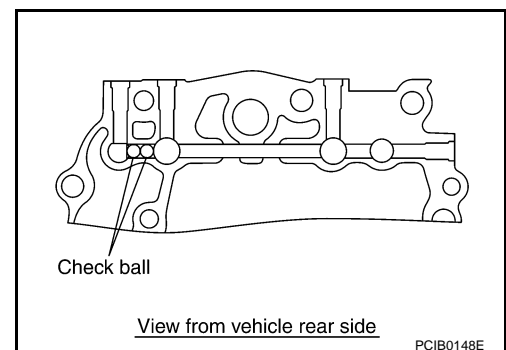

9. Install reverse shift fork to reverse coupling sleeve.
10. Install reverse fork rod to reverse shift fork.
11. Using a pin punch to tap retaining pin into reverse shift fork.

CAUTION:

Do not reuse retaining pin.

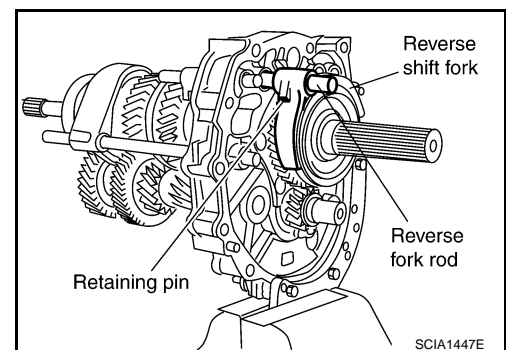


TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]


12. Apply recommended grease to interlock pin and interlock plunger.
13. Install interlock pin and interlock plunger to adapter plate.

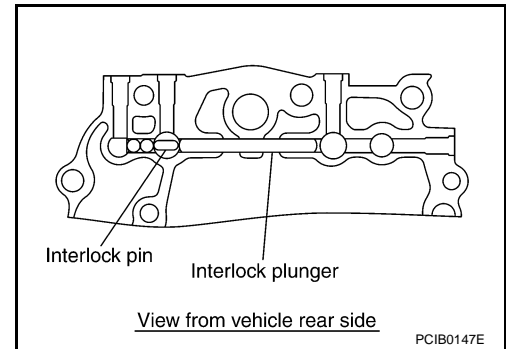


14. Install 1st-2nd shift fork to 1st-2nd coupling sleeve.
15. Install 1st-2nd fork rod to 1st-2nd shift fork.
16. Using a pin punch to tap retaining pin into 1st-2nd shift fork.
CAUTION:
Do not reuse retaining pin.

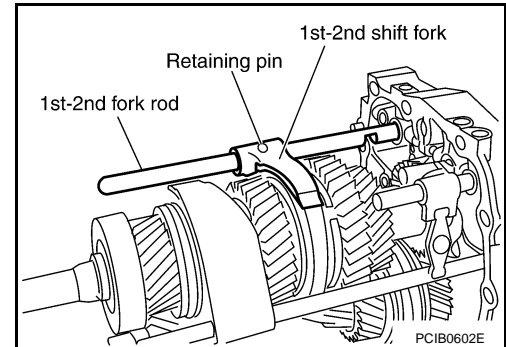


17. Install 3rd-4th shift fork to 3rd-4th coupling sleeve.
18. Install 3rd-4th fork rod (reversal side) to 3rd-4th shift fork.
19. Using a pin punch to tap retaining pin into 3rd-4th shift fork (reversal side).
CAUTION:
Do not reuse retaining pin.

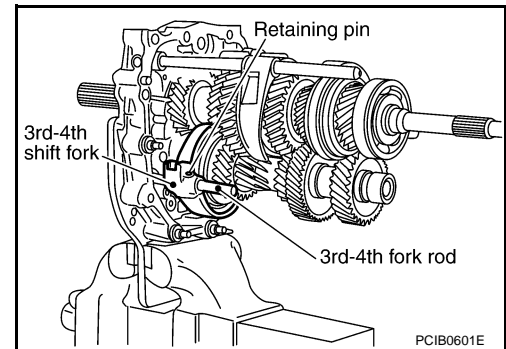

20. Apply recommended grease to interlock pin and check balls.
21. Install interlock pin and check balls to adapter plate.

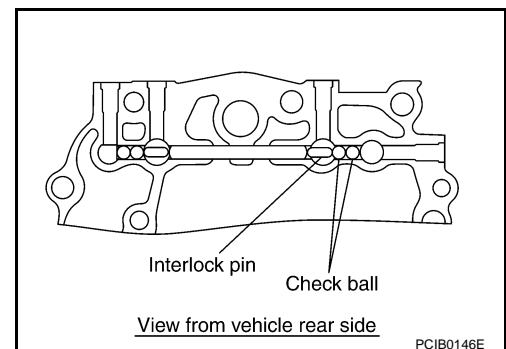

22. Install 3rd-4th fork rod to adapter plate.
23. Install 3rd-4th fork rod bracket to 3rd-4th fork rod.
24. Using a pin punch to tap retaining pin into 3rd-4th fork rod bracket.
CAUTION:
Do not reuse retaining pin.

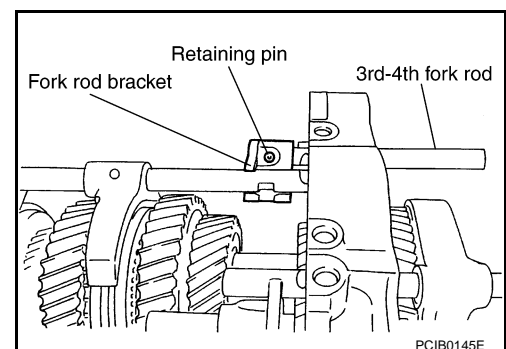

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >


[6MT: FS6R31A]

25. Apply recommended grease to check ball and then install check ball and check ball spring into adapter plate.
26. Apply recommended sealant to threads of check ball plugs and then tighten check ball plug to the specified torque.

- Use Genuine Silicone RTV or an equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).

CAUTION:


Remove old sealant and oil adhering to threads.

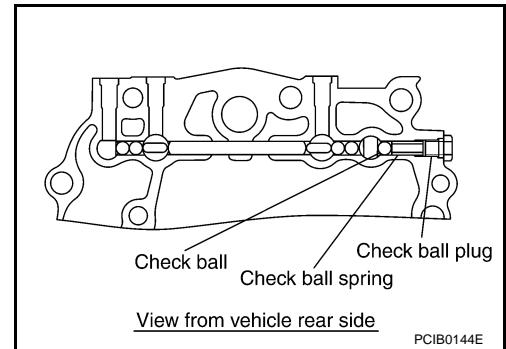

27. Install 3rd-4th control lever to adapter plate and then tighten mounting bolts to the specified torque.

CAUTION:

- Make sure the top and bottom are oriented correctly.
- Do not drop shifter cap.

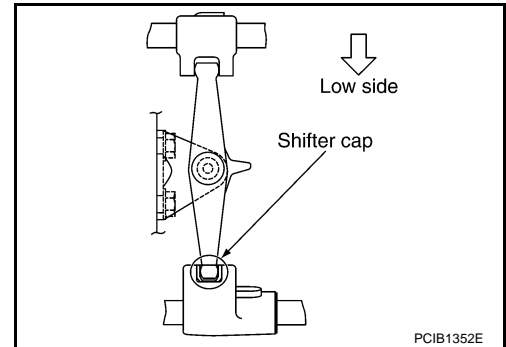


28. Apply recommended grease to check ball and then install check balls and check ball springs into adapter plate.
29. Apply recommended sealant to threads of check ball plugs and then tighten check ball plugs to the specified torque.

- Use Genuine Silicone RTV or an equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).

CAUTION:


Remove old sealant and oil adhering to threads.

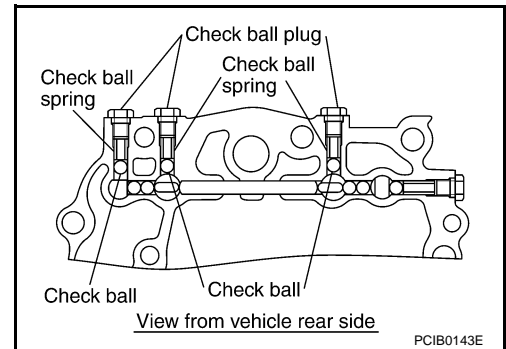


30. Install striking rod to adapter plate.
31. Install striking lever to striking rod.
32. Using a pin punch to tap retaining pin into striking lever.

CAUTION:

Do not reuse retaining pin.

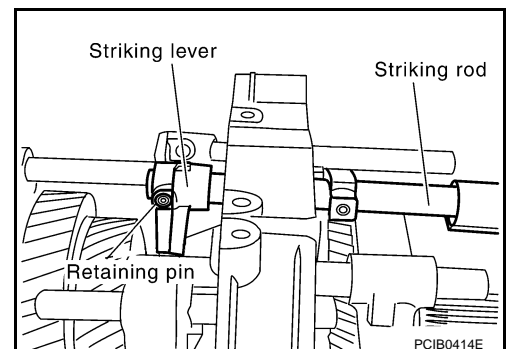

33. Install baffle plate to adapter plate and then tighten mounting bolts to the specified torque.

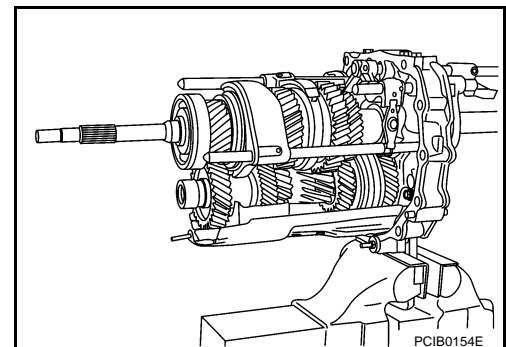

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >


[6MT: FS6R31A]

CASE AND EXTENSION

1. Install counter front bearing to transmission case.
2. Install oil gutter to transmission case.
3. Install breather tube to transmission case.

CAUTION:


Do not reuse breather tube.

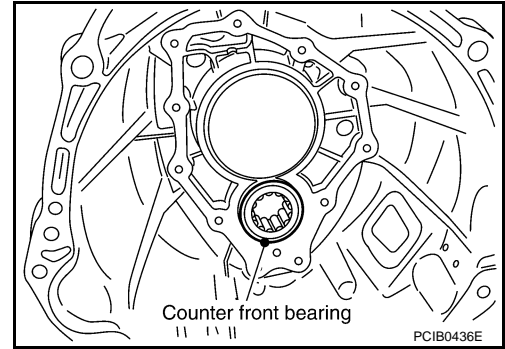


4. Apply recommended sealant to transmission case adapter plate mounting surface as shown in the figure.
 - Use Genuine Silicone RTV or an equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).

CAUTION:

Remove old sealant adhering to the mounting surfaces. Also remove any moisture, oil, or foreign material adhering to both mounting surfaces.

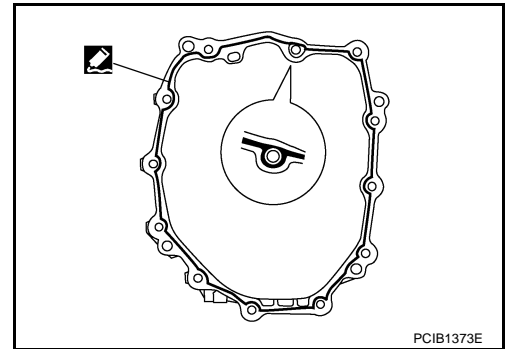


5. Place adapter plate in transmission case using a soft hammer to tap adapter plate to install it into transmission case.

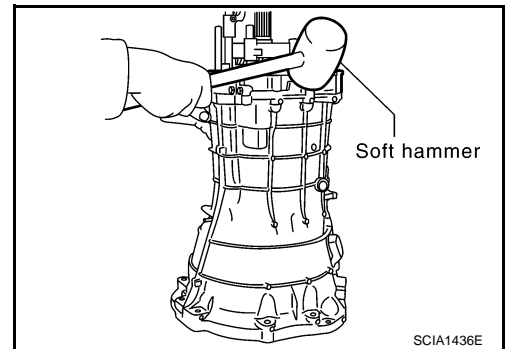

6. Install snap ring to main drive gear bearing using snap ring pliers.

CAUTION:

Do not reuse snap ring.

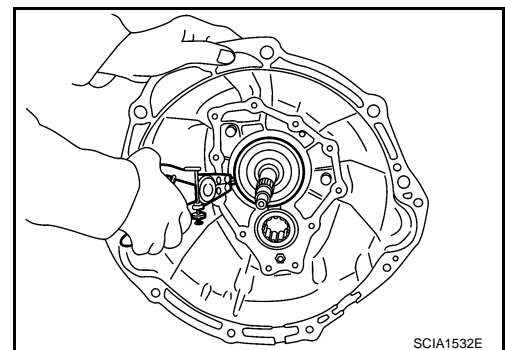


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

7. Tighten baffle plate mounting nut to the specified torque.

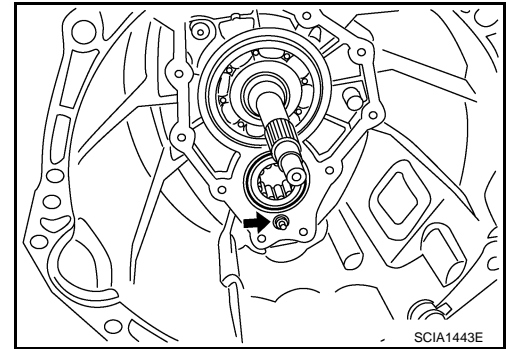


8. Apply multi-purpose grease to lip of front cover oil seal (1).
9. Install front cover oil seal to front cover using the drift (A) [SST: KV38102100 (J-25803-01)].

Dimension "H" : 8.55 - 9.55 mm (0.3366 - 0.3760 in)

CAUTION:

- Do not reuse front cover oil seal.
- When installing, do not incline front cover oil seal.

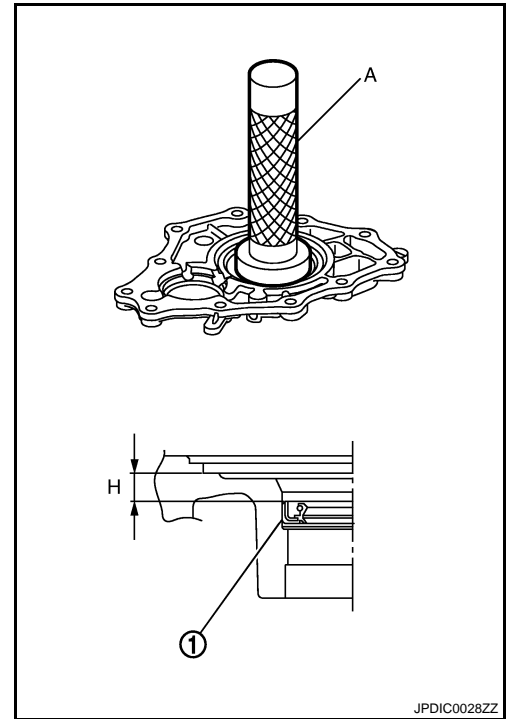


10. Install front cover gasket and front cover to transmission case.

CAUTION:

- Do not reuse front cover gasket.
- Do not damage front cover oil seal.

11. Temporary tightening 2 bolts in the positions shown in the figure.

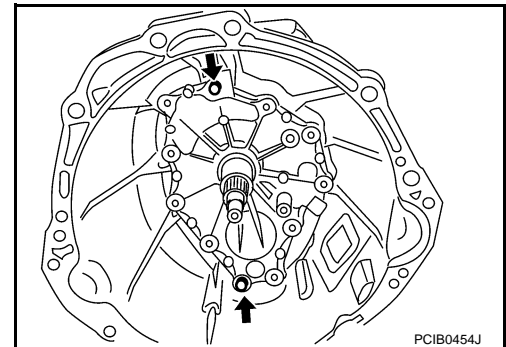

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

12. Temporary tightening remaining 9 bolts.

CAUTION:

Four bolts pointed by arrows in the figure are not reusable.

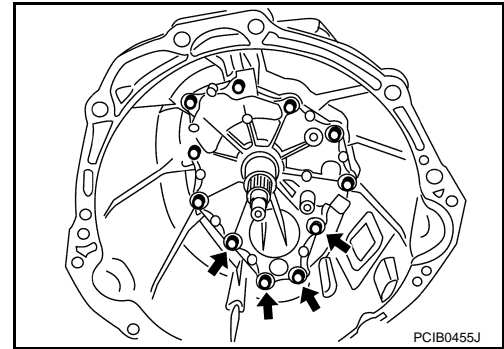


13. Tighten bolts to the specified torque in order as shown on the figure.

14. Install rear extension oil gutter and cap to rear extension and then tighten mounting bolt to specified torque.

15. Install bracket to transmission case and then tighten mounting bolt to specified torque.

16. Apply recommended grease to reverse idler needle bearing.

17. Install reverse idler shaft, reverse idler needle bearing, reverse idler gear and reverse idler thrust washer to adapter plate.

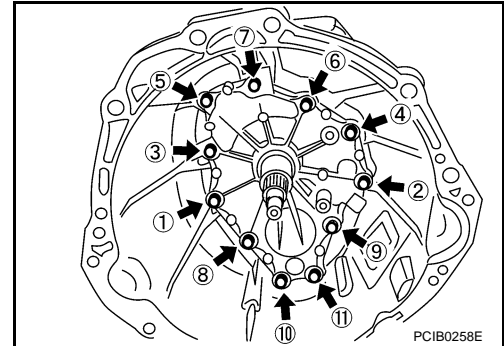

18. Apply multi-purpose grease to striking rod oil seal lip.


CAUTION:

Do not reuse striking rod oil seal.

19. Install striking rod oil seal to rear extension using the drift [SST: ST33061000 (J-8107-2)].

CAUTION:

When installing, do not incline striking rod oil seal.

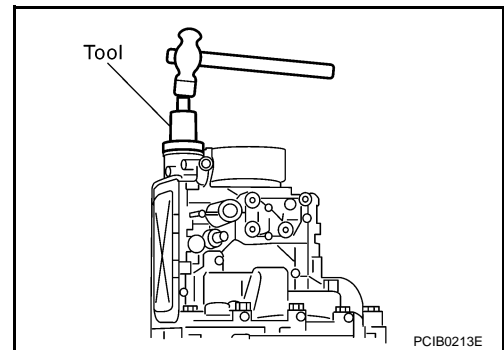

20. Apply multi-purpose grease to lip of rear oil seal (1).

CAUTION:


Do not reuse rear oil seal.

21. Install rear oil seal to rear extension using the drift [SST: ST33400001 (J-26082)].

Dimension "H" : 1.2 - 2.2 mm (0.047 - 0.087 in)

CAUTION:

When installing, do not incline rear oil seal.

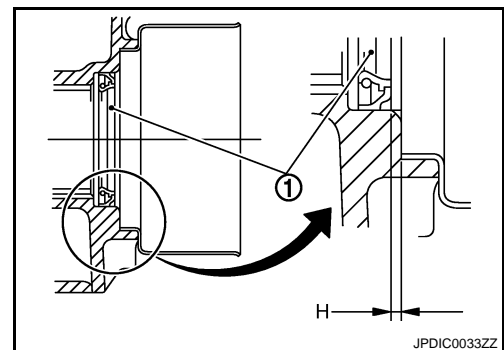


22. Apply recommended sealant to adapter plate rear extension mounting surface as shown in the figure.

- Use Genuine Silicone RTV or an equivalent. Refer to [GI-15. "Recommended Chemical Products and Sealants"](#).

CAUTION:

Remove old sealant adhering to the mounting surfaces. Also remove any moisture, oil, or foreign material adhering to both mounting surfaces.

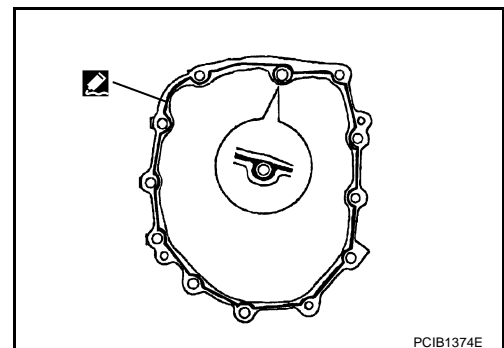

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

23. Install rear extension to adapter plate and then tighten mounting bolts to the specified torque in order as shown on the figure.


CAUTION:

Do not damage rear oil seal and striking rod oil seal.

24. Install control lever housing to rear extension and then tighten mounting bolts to the specified torque.

CAUTION:

Do not hold control lever housing to prevent bushing of control lever housing from deformation when moving transmission assembly.

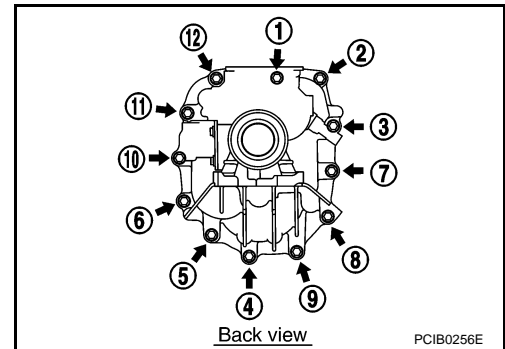


25. Apply gear oil to return spring plungers.

26. Install return spring plungers and return springs into rear extension.

Region	Return spring identification mark	Plunger groove
RH	Brown	No
LH	Blue	Yes

CAUTION:

The right and left return springs and return spring plungers are different, so make sure they are installed correctly.

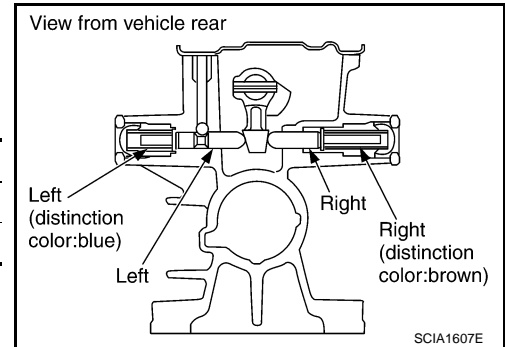

27. Apply recommended sealant to threads of return spring plugs and then tighten return spring plugs to the specified torque.

- Use Genuine Silicone RTV or an equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).

CAUTION:

Remove old sealant and oil adhering to threads.

28. Install shift check pin as a one unit with control bracket to rear extension and then tighten mounting bolts to the specified torque.


29. Install plunger to rear extension and then screwing park/neutral position (PNP) switch and back-up lamp switch to rear extension with 1 - 2 pitches.

30. Apply recommended sealant to threads of switches and tighten switches to the specified torque.

- Use Genuine Silicone RTV or an equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).

CAUTION:

Remove old sealant and oil adhering to threads.

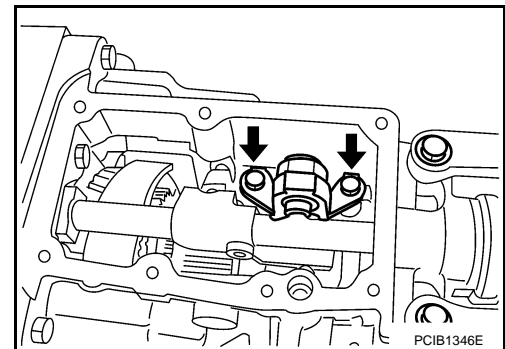

31. Install brackets to rear extension and then tighten bracket mounting bolts to the specified torque.

32. Install boot and control rod to striking rod.

33. Install the retaining pin into the control rod using a pin punch. Then fit the boot to the striking rod oil seal and the groove on the control rod.


CAUTION:

Do not reuse retaining pin.

34. Install boot to control rod.

CAUTION:

Fit the boot to the groove on the control rod.

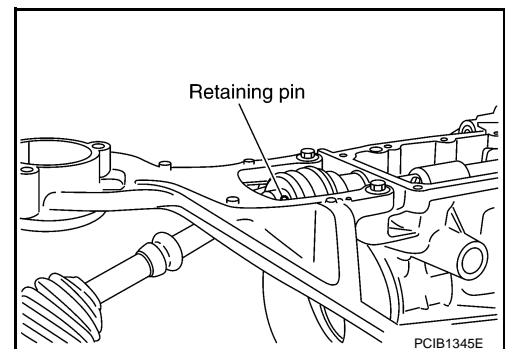


TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

35. Install check ball and check select spring into rear extension.

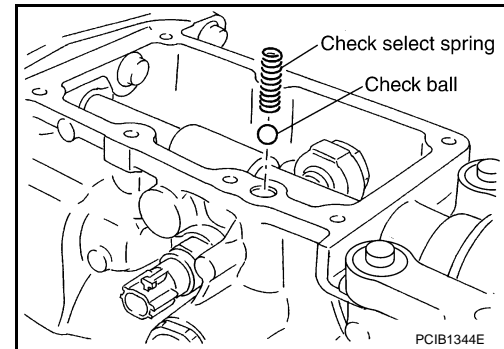

36. Install rear extension upper cover gasket and rear extension upper cover to rear extension.

CAUTION:

- Do not reuse rear extension upper cover gasket.
- Avoid tangling check select spring.

37. Tighten rear extension upper cover bolts to the specified torque in order as shown on the figure.

38. Install gasket to drain plug and then install it to transmission case. Tighten drain plug to the specified torque.


CAUTION:

Do not reuse gasket.

39. Install gasket to filler plug and then install it to transmission case. Tighten filler plug to the specified torque.

CAUTION:

- Do not reuse gasket.
- After oil is filled, tighten filler plug to specified torque.

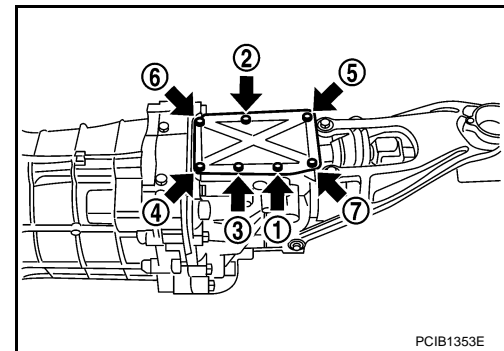

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

MAIN DRIVE GEAR

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

MAIN DRIVE GEAR

Exploded View

INFOID:000000000956971


Refer to [TM-30, "Exploded View"](#).

Disassembly


INFOID:000000000956972

1. Before disassembly, measure end play. If the end play is outside the specifications, disassemble and inspect.


End play standard value : Refer to [TM-75, "End Play"](#).

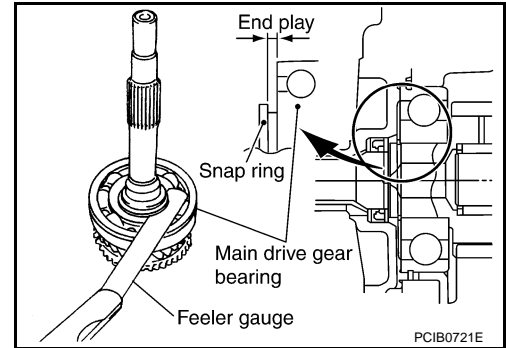

2. Remove snap ring from main drive gear using snap ring pliers.

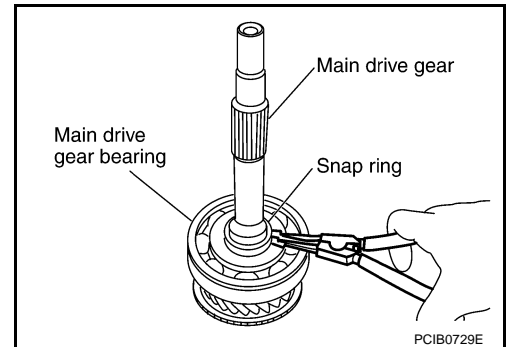


3. Set a puller on main drive gear bearing, and remove main drive gear bearing from main drive gear using a press.

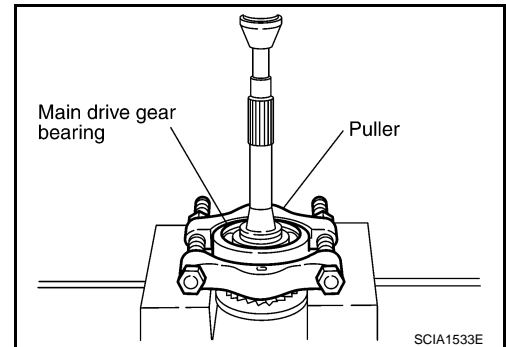

Assembly

INFOID:000000000956973

1. Using the drift [SST: KV32102700 (—)] and a press to press fit main drive gear bearing onto main drive gear.

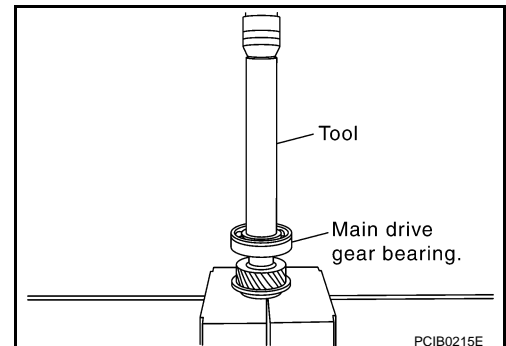

MAIN DRIVE GEAR

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]


2. Select and install a snap ring to main drive gear bearing so that the end play comes within the standard value.

End play standard value : Refer to [TM-75, "End Play"](#).

CAUTION:

Do not reuse snap ring.

3. Apply recommended grease to main pilot bearing.
4. Install main pilot bearing, pilot bearing spacer and 5th baulk ring to main drive gear.

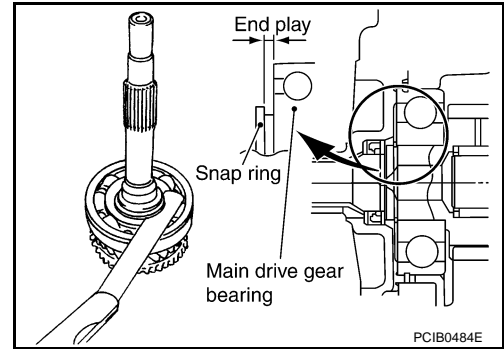


INFOID:000000000956974

Inspection

MAIN DRIVE GEAR


If the contact surface on main drive gear, etc. has damage, peeling, abrasion, dent, bent, or any other damage, replace the components.

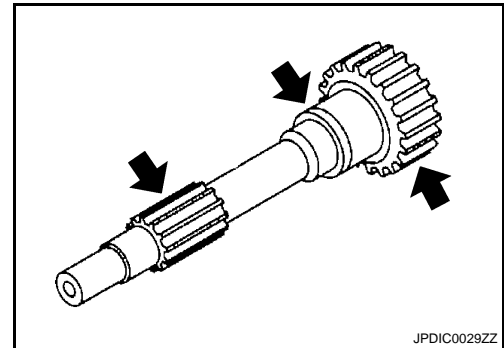

SYNCHRONIZER

Baulk Ring

- If the cam surface on baulk ring or contact surface on insert has damage or excessive wear, replace with a new one.

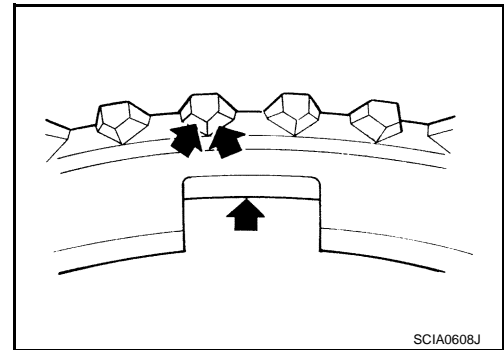


Baulk Ring Clearance for Single Cone Synchronizer (5th)

- Push baulk ring on the cone, and measure the clearance between baulk ring and cone. If the measurement is below limit, replace it with a new one.

Clearance

Standard value : Refer to [TM-76, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-76, "Baulk Ring Clearance"](#).

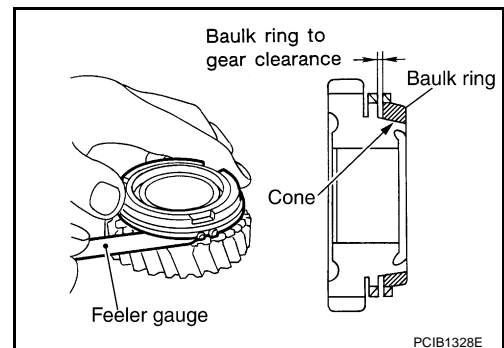

BEARING


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

MAIN DRIVE GEAR

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

If the bearing does not rotate smoothly or the contact surface on ball or race is damaged or peeled, replace with new ones.

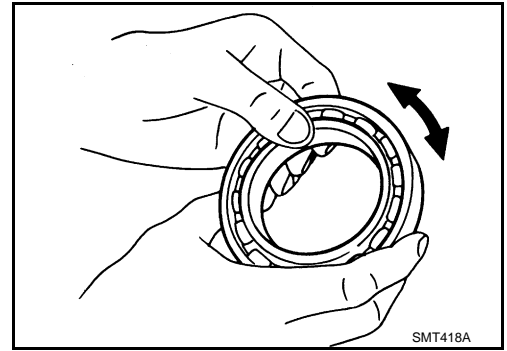

MAINSHAFT AND GEAR

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

MAINSHAFT AND GEAR

Exploded View


INFOID:000000000956975

Refer to [TM-30](#), "Exploded View".


Disassembly

INFOID:000000000956976


1. Using a press to remove reverse main gear bushing, mainshaft bearing and 4th main gear.
2. Remove 3rd-4th main spacer.

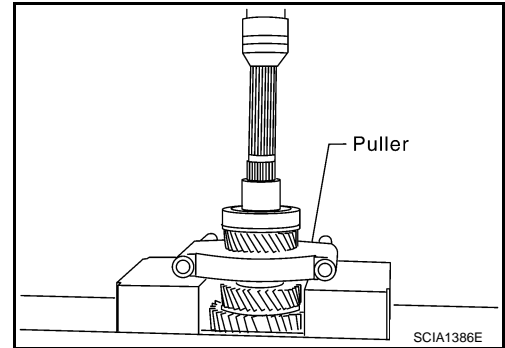


3. Using a press to remove 1st main gear and 3rd main gear.
CAUTION:
Be careful not to damage baulk ring.
4. Remove 1st needle bearing.

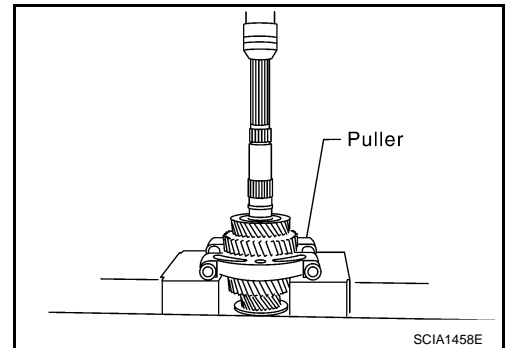

5. Using a press to remove 1st gear bushing, 1st-2nd synchronizer assembly and 2nd main gear.
CAUTION:
Be aware that when using the press, if mainshaft gear positioner catches on the V-block, etc., mainshaft could be damaged.
6. Remove 2nd needle bearing.

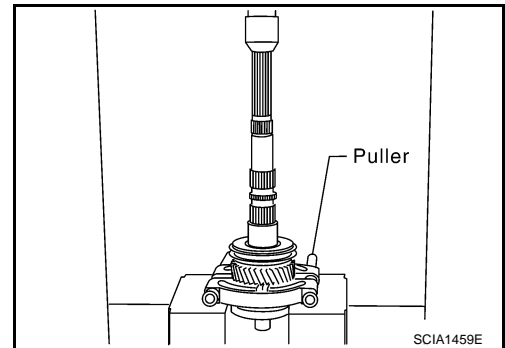

7. After removing snap ring, using a press to remove 6th main gear and 5th-6th synchronizer assembly.
8. Remove 6th needle bearing.

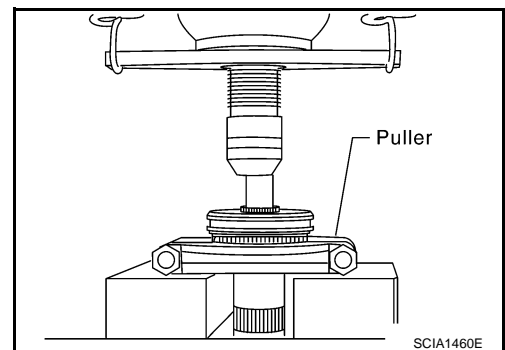

Assembly

INFOID:000000000956977

1. Install 5th-6th coupling sleeve and 5th-6th shifting inserts in 5th-6th synchronizer hub.
CAUTION:


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

MAINSHAFT AND GEAR

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]


- Install 5th-6th coupling sleeve with the large chamfer on the rear side.
- Do not reuse 5th-6th coupling sleeve and 5th-6th synchronizer hub.
- Replace 5th-6th coupling sleeve and 5th-6th synchronizer hub as a set.

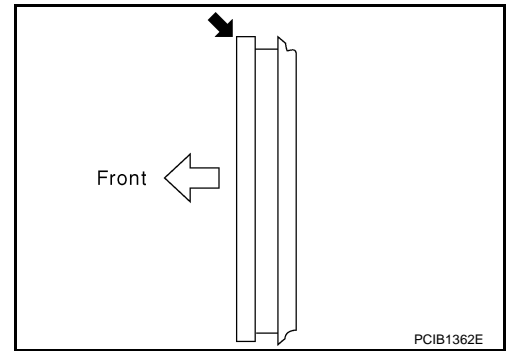


2. Install 5th-6th spread springs in 5th-6th shifting inserts.

CAUTION:


- Do not install 5th-6th spread spring hook onto the same 5th-6th shifting insert.

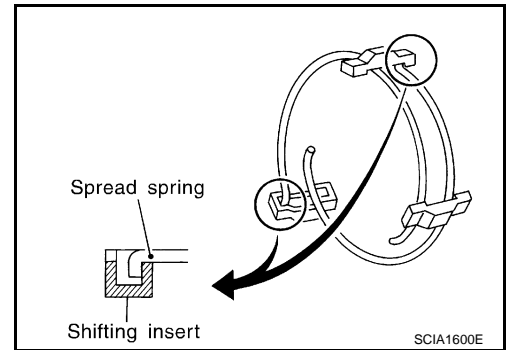

- Be careful with the shape of reverse shifting insert to avoid misassembly.

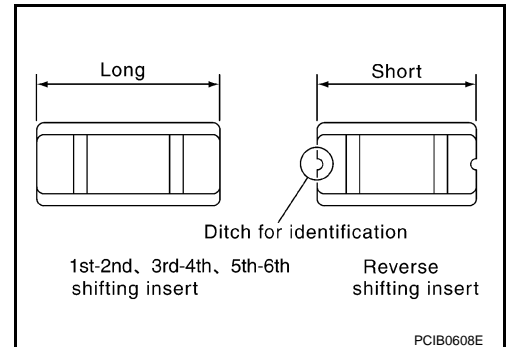

3. Apply recommended grease to 6th needle bearing.
4. Install 6th needle bearing, 6th main gear and 6th baulk ring on mainshaft and then using an inserter [SST: ST30911000 (—)] and a press to press fit 5th-6th synchronizer assembly.

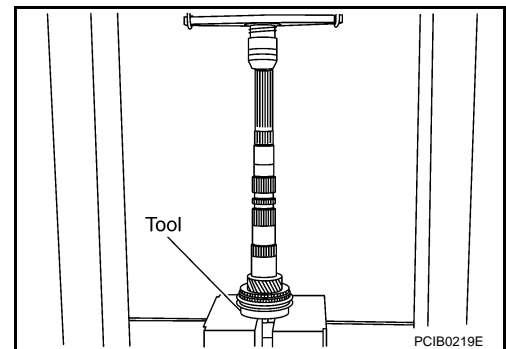


CAUTION:

MAINSHAFT AND GEAR

< DISASSEMBLY AND ASSEMBLY >


[6MT: FS6R31A]

- When press fitting, install with the side having the three boss edge oil grooves facing the rear side.

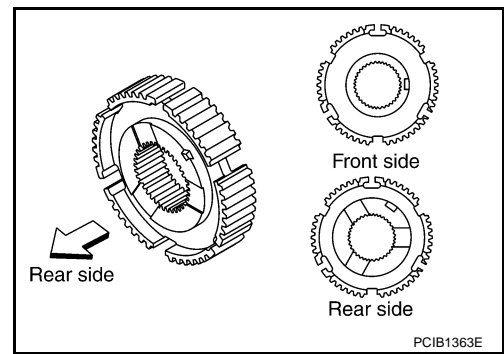

NOTE:

5th and 6th baulk rings have three spaces that four gear teeth are missing as shown in the figure.

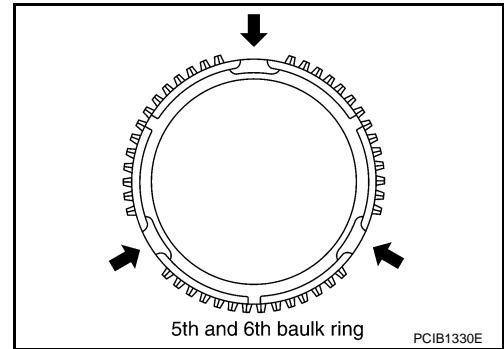


5. Select and install a snap ring so that the end play comes within the standard value.

End play : Refer to [TM-75, "End Play"](#).

CAUTION:


Do not reuse snap ring.

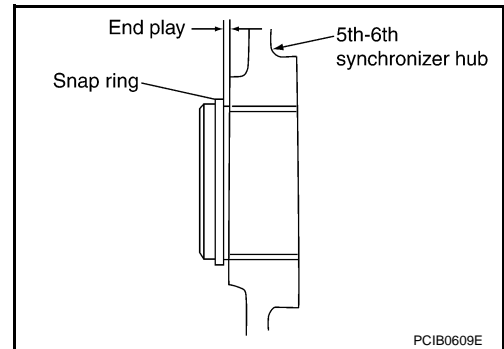

6. Install 1st-2nd coupling sleeve and 1st-2nd shifting inserts into 1st-2nd synchronizer hub.

CAUTION:

- Install 1st-2nd coupling sleeve with the thicker flange faced the front side.
- Do not reuse 1st-2nd coupling sleeve and 1st-2nd synchronizer hub.
- Replace 1st-2nd coupling sleeve and 1st-2nd synchronizer hub as a set.

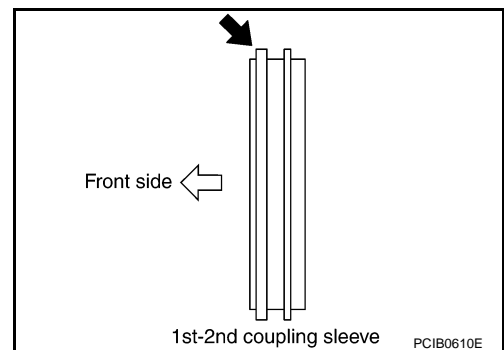

7. Install 1st-2nd spread springs in 1st-2nd shifting inserts.

CAUTION:


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

MAINSHAFT AND GEAR


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

- Do not install 1st-2nd spread spring hook onto the same 1st-2nd shifting insert.

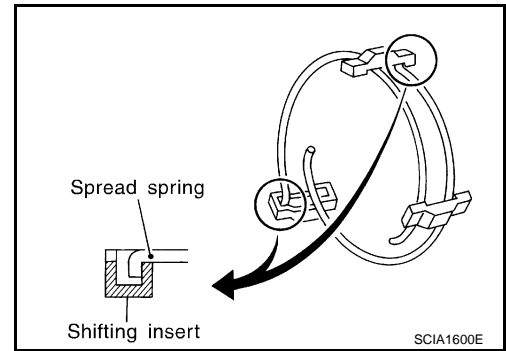


- Be careful with the shape of reverse shifting insert to avoid misassembly.

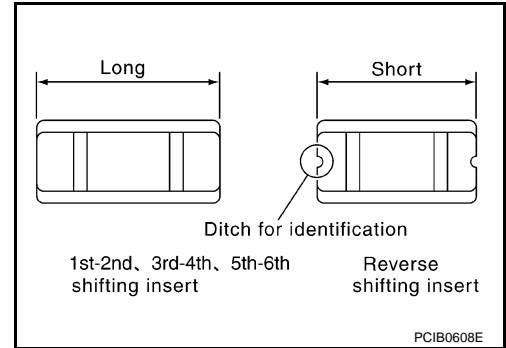


- Apply recommended grease to 2nd needle bearing.
- Install 2nd main gear, 2nd needle bearing, 2nd inner baulk ring, 2nd synchronizer cone and 2nd outer baulk ring on mainshaft and then using a support ring [SST: ST27861000 (—)] and a press to press fit 1st-2nd synchronizer assembly.

CAUTION:

- Replace 2nd inner baulk ring, 2nd synchronizer cone and 2nd outer baulk ring as a set.

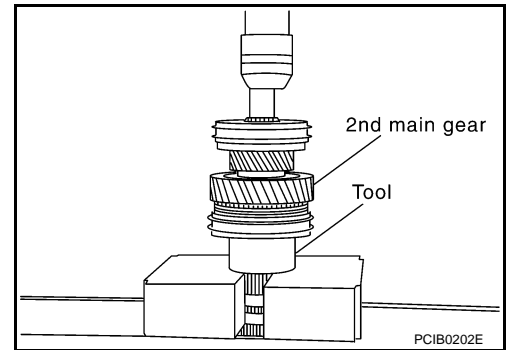

- When press fitting, install with the side having the three boss edge oil grooves facing the front side.

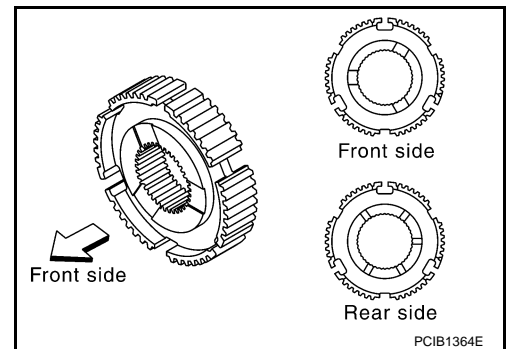


NOTE:

MAINSHAFT AND GEAR


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

1st baulk ring has three spaces that four gear tooth is missing and 2nd baulk ring has three spaces that two gear teeth are missing.

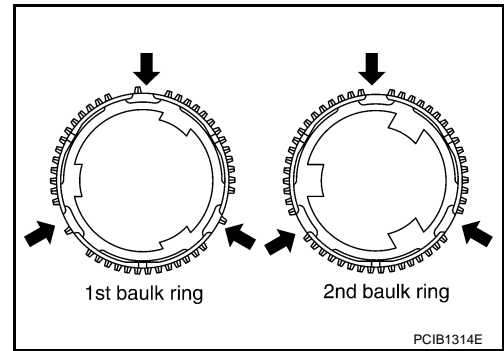


10. Using a support ring [SST: ST27861000 (—)] and a press to press fit 1st gear bushing.

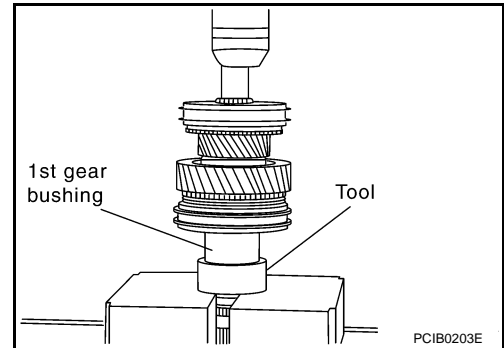

11. Apply recommended grease to 1st needle bearing.
 12. Install 1st outer baulk ring, 1st synchronizer cone, 1st inner baulk ring, 1st needle bearing and 1st main gear on mainshaft and then using the inserter [SST: ST30022000 (—)] and a press to press fit 3rd main gear.

CAUTION:


- Do not reuse 3rd main gear.
- Replace 1st outer baulk ring, 1st synchronizer cone and 1st inner baulk ring as a set.

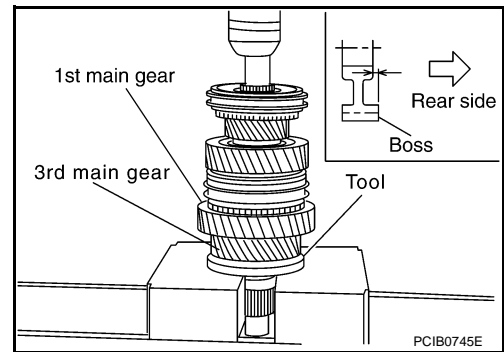


13. Install 3rd-4th main spacer on mainshaft and then using the inserter [SST: ST30022000 (—)] and a press to press fit 4th main gear.

CAUTION:

- Do not reuse 4th main gear.
- When installing, set boss to rear side.

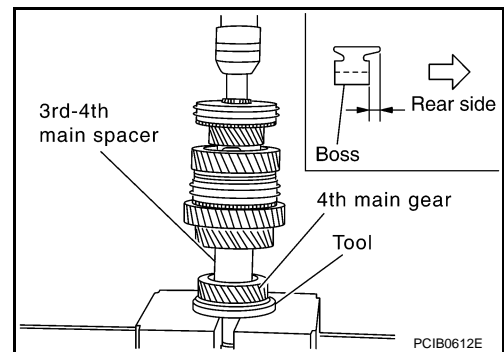

14. Using the inserter and a press to press fit mainshaft bearing onto mainshaft.

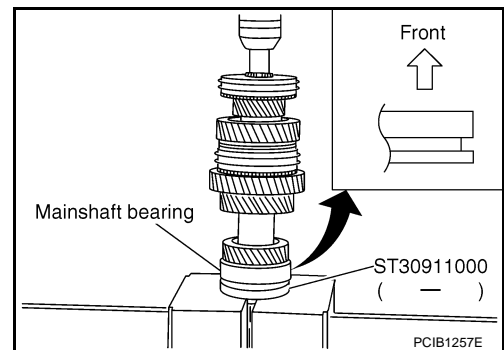


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

MAINSHAFT AND GEAR

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

- 15. Using the inserter [SST: ST30911000 (—)] and a press to press fit reverse main gear bushing onto mainshaft.

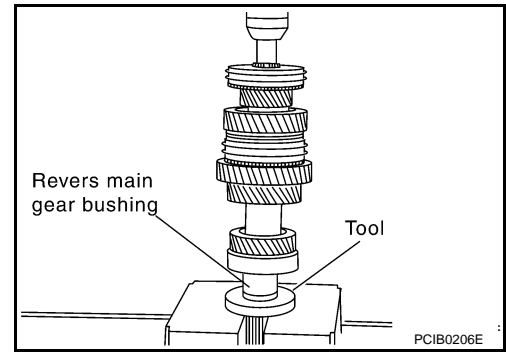


INFOID:000000000956978

Inspection

MAINSHAFT AND GEAR


If the contact surface on each gear and mainshaft, etc. has damage, peeling, abrasion, dent, bent, or any other damage, replace the components.

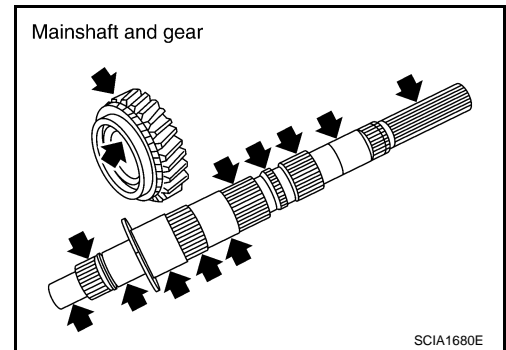

SYNCHRONIZER


Synchronizer Hub and Coupling Sleeve

- If the contact surface on coupling sleeve, synchronizer hub and shifting insert has damage or abrasion, replace the components.
- Coupling sleeve and synchronizer hub shall move smoothly.

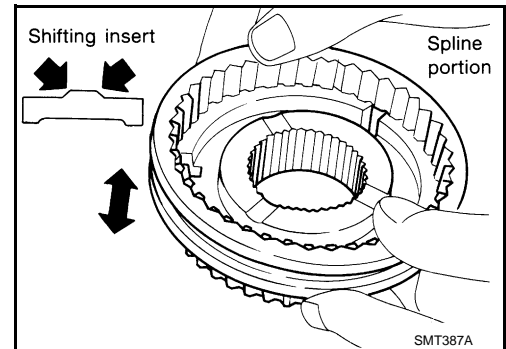

Baulk Ring and Spread Spring

- If the cam surface on baulk ring or contact surface on insert has damage or excessive wear, replace with a new one.
- If spread spring is damaged, replace with a new one.

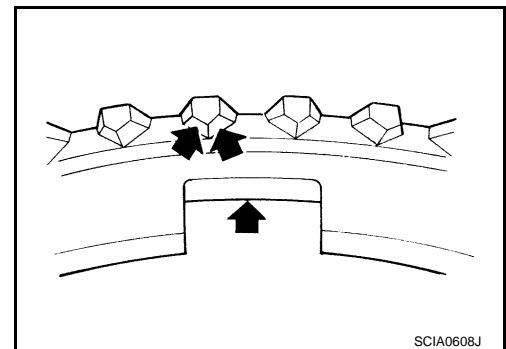

Baulk Ring Clearance for Single Cone Synchronizer (6th and Reverse)

MAINSHAFT AND GEAR

< DISASSEMBLY AND ASSEMBLY >


[6MT: FS6R31A]

- Push baulk ring on the cone and measure the clearance between baulk ring and cone. If the measurement is below limit, replace it with a new one.

Clearance

Standard value : Refer to [TM-76, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-76, "Baulk Ring Clearance"](#).

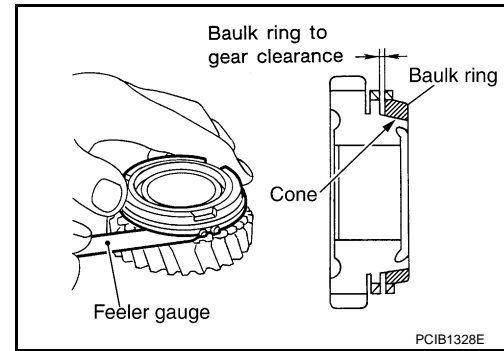


Baulk Ring Clearance for Triple Cone Synchronizer (1st and 2nd)

- Check the clearance between outer baulk ring, synchronizer cone and inner baulk ring as follows.

CAUTION:

The clearances "A", "B" and "C" are controlled with outer baulk ring, synchronizer cone, and inner baulk ring as a set. Replace them as a set if the clearances are outside the limit value.

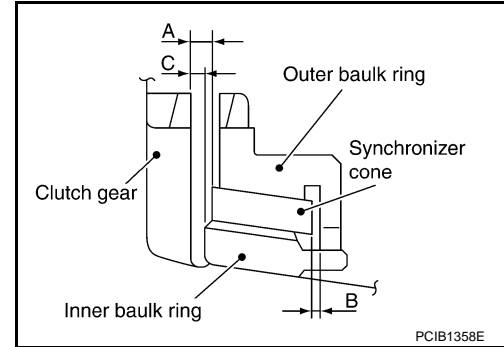


1. Measure the clearance "A" at 2 points or more diagonally opposite using a feeler gauge (B) when pressing outer baulk ring (1), synchronizer cone (2), and inner baulk ring (3) toward gear taper cone (C). And then calculate mean value.

Clearance "A"

Standard value : Refer to [TM-76, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-76, "Baulk Ring Clearance"](#).

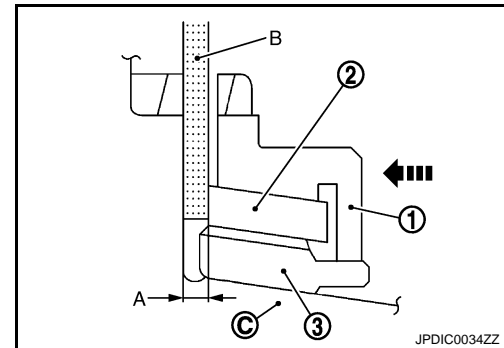


2. Measure the clearance "B" at 2 points or more diagonally opposite using a feeler gauge. And then calculate mean value.

Clearance "B"

Standard value : Refer to [TM-76, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-76, "Baulk Ring Clearance"](#).

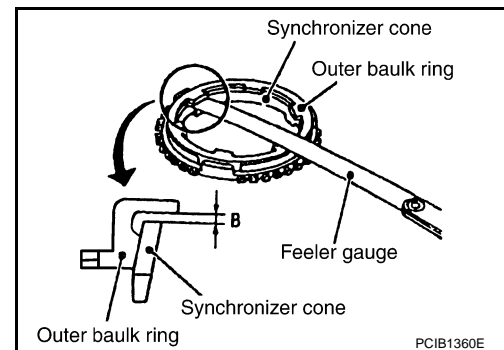

MAINSHAFT AND GEAR

< DISASSEMBLY AND ASSEMBLY >


[6MT: FS6R31A]

3. Measure the clearance "C" at 2 points or more diagonally opposite using a feeler gauge (A) when pressing outer baulk ring (1), synchronizer cone (2), and inner baulk ring (3) toward gear taper cone (B). And then calculate mean value.

Clearance "C"


Standard value : Refer to [TM-76, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-76, "Baulk Ring Clearance"](#).

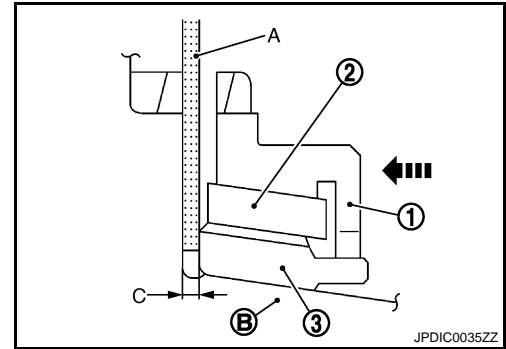

Bearing

If the bearing does not rotate smoothly or the contact surface on ball or race is damaged or peeled, replace with new ones.

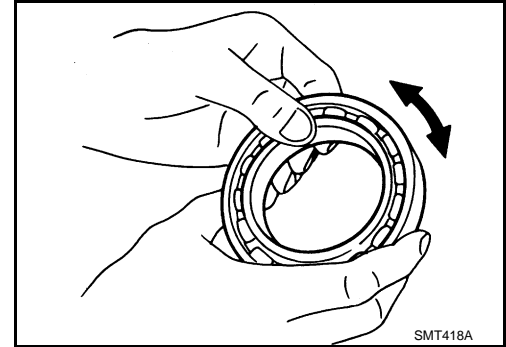

COUNTER SHAFT AND GEAR

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

COUNTER SHAFT AND GEAR

Exploded View


INFOID:000000000956979

Refer to [TM-30](#), "Exploded View".


Disassembly

INFOID:000000000956980

1. Using a press to remove 3rd counter gear, 3rd-4th synchronizer assembly, 4th counter gear, 4th needle bearing, 4th gear bushing, 4th counter gear thrust washer and counter rear bearing inner race.
2. Remove 3rd needle bearing.

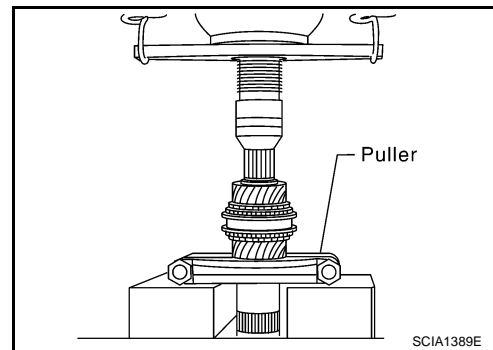


3. Using a press to remove 3rd gear bushing.
CAUTION:
Do not use oil hole of 3rd gear bushing when press out.

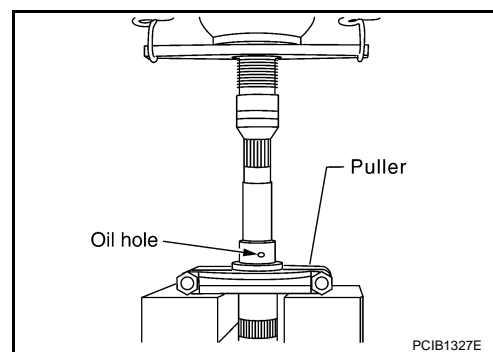

Assembly

INFOID:000000000956981


1. Using the inserter [SST: ST30911000 (—)] and a press to press fit 3rd gear bushing onto counter shaft.

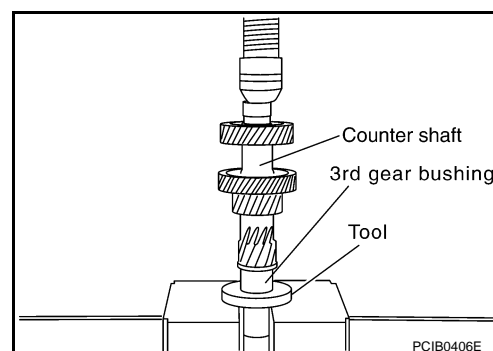

2. Install 3rd-4th coupling sleeve and 3rd-4th shifting inserts into 3rd-4th synchronizer hub.

CAUTION:

- Install 3rd-4th coupling sleeve with the thicker flange faced the front side.
- Do not reuse 3rd-4th coupling sleeve and 3rd-4th synchronizer hub.
- Replace 3rd-4th coupling sleeve and 3rd-4th synchronizer hub as a set.

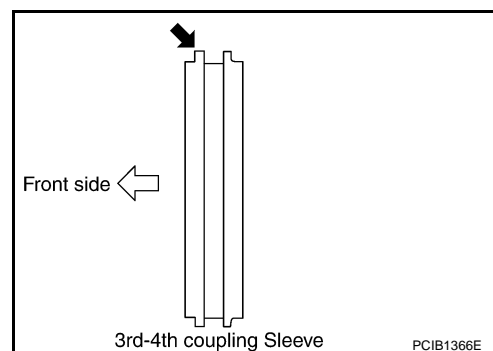

COUNTER SHAFT AND GEAR


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]


3. Install 3rd-4th spread springs in 3rd-4th shifting inserts.

CAUTION:

- Do not install 3rd-4th spread spring hook onto the same 3rd-4th shifting insert.

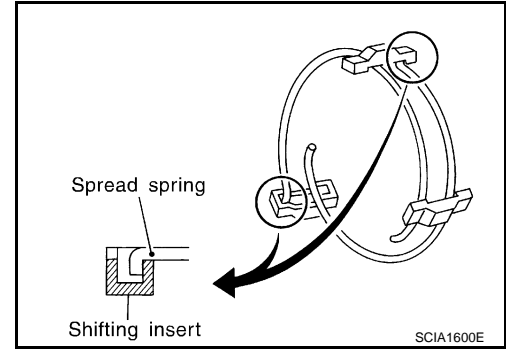


- Be careful with the shape of reverse shifting insert to avoid misassembly.

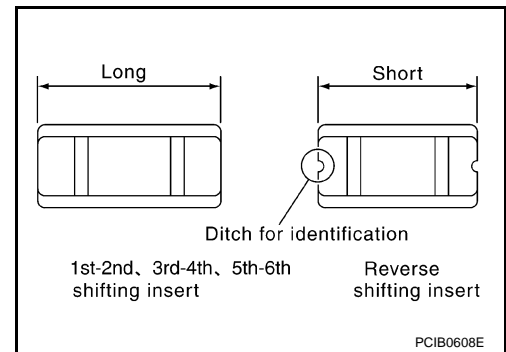

4. Apply recommended grease to 3rd needle bearing.
5. Apply gear oil to the hole spline press fitting side of 3rd-4th synchronizer hub.
6. Install 3rd needle bearing, 3rd counter gear, 3rd inner baulk ring, 3rd synchronizer cone and 3rd outer baulk ring on counter shaft and then using the inserter [SST: ST30911000 (—)] and a press to press fit 3rd-4th synchronizer assembly.


CAUTION:

Replace 3rd inner baulk ring, 3rd synchronizer cone and 3rd outer baulk ring as a set.

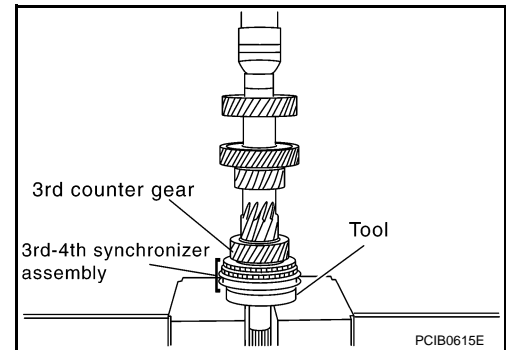

NOTE:

4th baulk ring has three spaces that one gear tooth is missing but 3rd baulk ring doesn't.

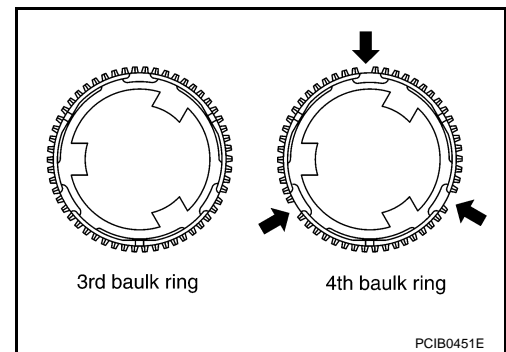

COUNTER SHAFT AND GEAR


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

7. Apply recommended grease to 4th needle bearing.
8. Install 4th outer baulk ring, 4th synchronizer cone, 4th inner baulk ring, 4th needle bearing and 4th counter gear onto counter shaft and then using the inserter [SST: KV40100630 (J-26092)] and a press to press fit 4th gear bushing and 4th counter gear thrust washer.

CAUTION:


Replace 4th outer baulk ring, 4th synchronizer cone and 4th inner baulk ring as a set.

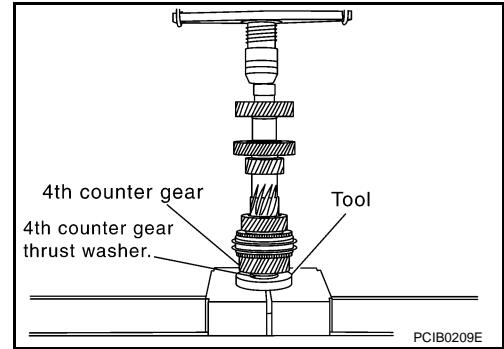

9. Using the inserter [SST: ST30032000 (J-26010-01)] and a press to press fit counter rear bearing inner race onto counter shaft.

CAUTION:


Replace counter rear bearing inner race, counter rear bearing and counter rear bearing spacer as a set.

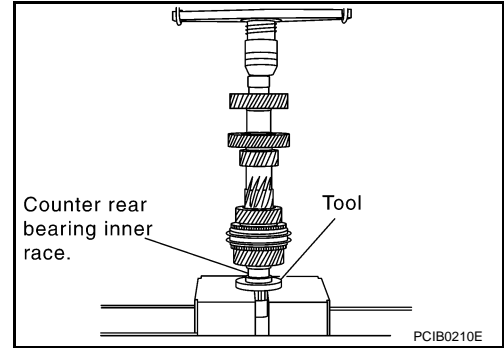

Inspection

COUNTER SHAFT AND GEAR


If the contact surface on each gear and counter shaft, etc. has damage, peeling, abrasion, dent, bent, or any other damage, replace the components.

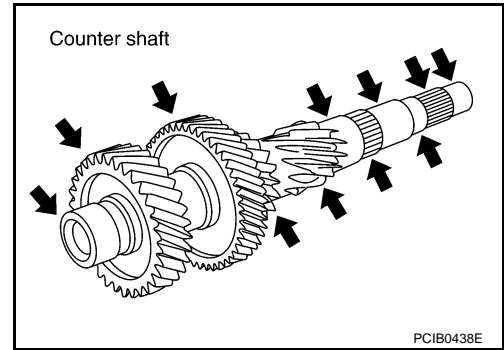

SYNCHRONIZER

Synchronizer Hub and Coupling Sleeve

- If the contact surface on coupling sleeve, synchronizer hub, and shifting insert has damage or abrasion, replace the components.
- Coupling sleeve and synchronizer hub shall move smoothly.

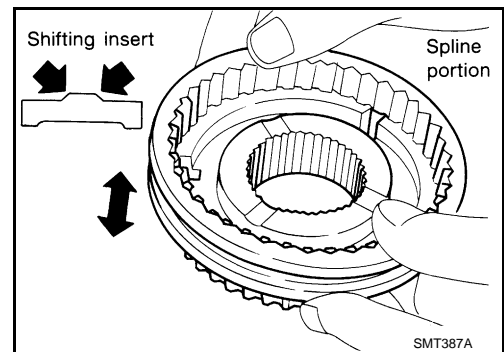

Baulk Ring and Spread Spring


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

COUNTER SHAFT AND GEAR

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

- If the cam surface on baulk ring or contact surface on insert has damage or excessive wear, replace with a new one.
- If spread spring is damaged, replace with a new one.

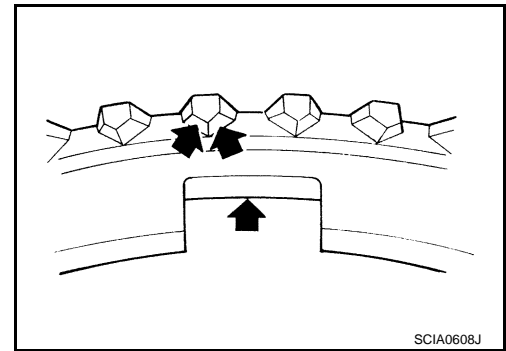


Baulk Ring Clearance for Double Cone Synchronizer (4th)

- Check the clearance between outer baulk ring, synchronizer cone, and inner baulk ring as follows.

CAUTION:

The clearances “A” and “B” are controlled with outer baulk ring, synchronizer cone, and inner baulk ring as a set. Replace them as a set if the clearances are outside the limit value.

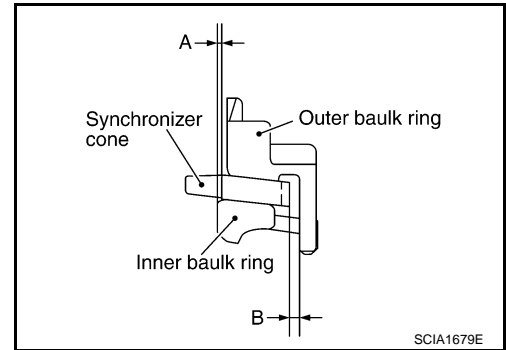


1. Measure the clearance “A” at 2 points or more diagonally opposite using a dial indicator. And then calculate mean value.

Clearance “A”

Standard value : Refer to [TM-76, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-76, "Baulk Ring Clearance"](#).

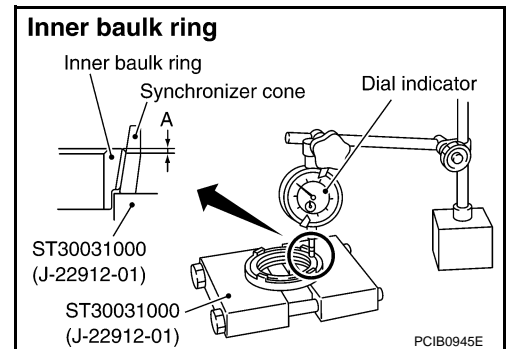


2. Measure the clearance “B” at 2 points or more diagonally opposite using a feeler gauge. And then calculate mean value.

Clearance “B”

Standard value : Refer to [TM-76, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-76, "Baulk Ring Clearance"](#).

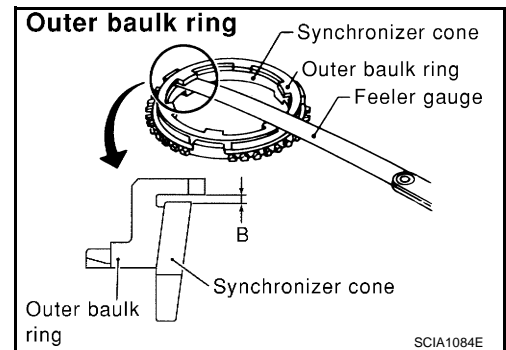

Baulk Ring Clearance for Triple Cone Synchronizer (3rd)

COUNTER SHAFT AND GEAR


< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

- Check the clearance between outer baulk ring, synchronizer cone and inner baulk ring as follows.

CAUTION:

The clearances “A”, “B” and “C” are controlled with outer baulk ring, synchronizer cone, and inner baulk ring as a set. Replace them as a set if the clearances are outside the limit value.

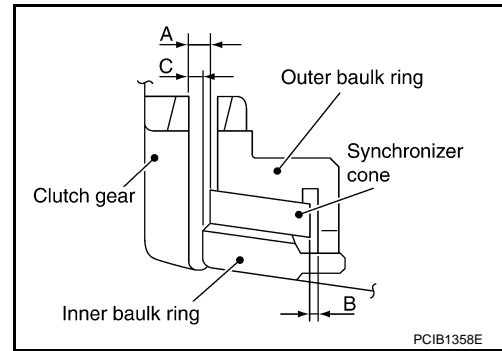


1. Measure the clearance “A” at 2 points or more diagonally opposite using a feeler gauge (B) when pressing outer baulk ring (1), synchronizer cone (2), and inner baulk ring (3) toward gear taper cone (C). And then calculate mean value.

Clearance “A”

Standard value : Refer to [TM-76, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-76, "Baulk Ring Clearance"](#).

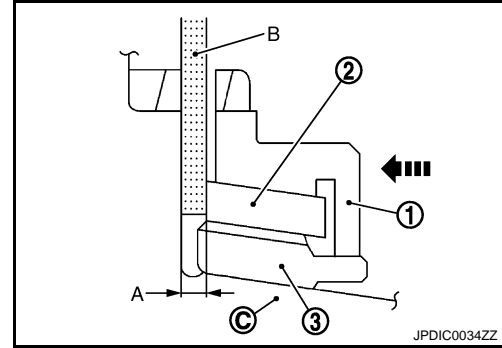


2. Measure the clearance “B” at 2 points or more diagonally opposite using a feeler gauge. And then calculate mean value.

Clearance “B”

Standard value : Refer to [TM-76, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-76, "Baulk Ring Clearance"](#).

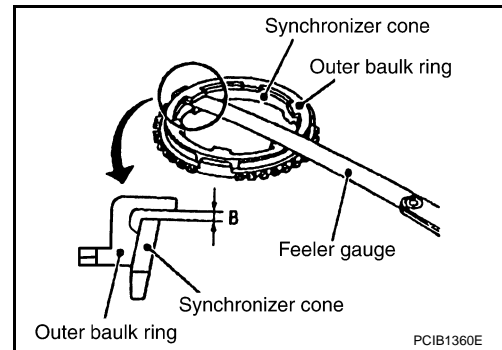


3. Measure the clearance “C” at 2 points or more diagonally opposite using a feeler gauge (A) when pressing outer baulk ring (1), synchronizer cone (2), and inner baulk ring (3) toward gear taper cone (B). And then calculate mean value.

Clearance “C”

Standard value : Refer to [TM-76, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-76, "Baulk Ring Clearance"](#).

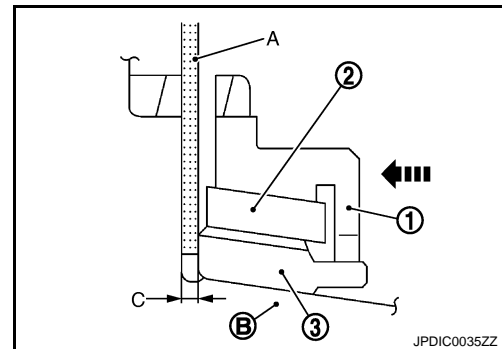

BEARING


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

COUNTER SHAFT AND GEAR

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

If the bearing does not rotate smoothly or the contact surface on ball or race is damaged or peeled, replace with new ones.

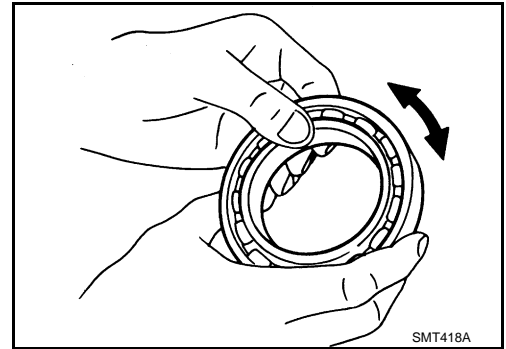

REVERSE IDLER SHAFT AND GEAR

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

REVERSE IDLER SHAFT AND GEAR

Exploded View

INFOID:000000000956983

Refer to [TM-30. "Exploded View"](#).

Disassembly

INFOID:000000000956984

Remove reverse idler thrust washer, reverse idler gear and reverse idler needle bearing from reverse idler shaft.

Assembly

INFOID:000000000956985

Assembly in the reverse order of disassembly.

CAUTION:

Apply recommended grease to reverse idler needle bearing.

Inspection

INFOID:000000000956986

REVERSE IDLER SHAFT AND GEAR

If the contact surface on reverse idler gear and reverse idler shaft has damage, peeling, abrasion, dent, bent, or any other damage, replace the components.

BEARING

If the bearing does not rotate smoothly or the contact surface on roller or race is damaged or peeled, replace with new ones.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

SHIFT FORK AND FORK ROD

< DISASSEMBLY AND ASSEMBLY >

[6MT: FS6R31A]

SHIFT FORK AND FORK ROD

Exploded View

INFOID:000000000956987

Refer to [TM-30, "Exploded View"](#).

Disassembly

INFOID:000000000956988

Refer to [TM-35, "Disassembly"](#) for disassembly procedure.

Assembly


INFOID:000000000956989

Refer to [TM-44, "Assembly"](#) for assembly procedure.

Inspection

INFOID:000000000956990

If the contact surface on striking lever, fork rod, shift fork, etc. has excessive wear, abrasion, bend, or any other damage, replace the components.

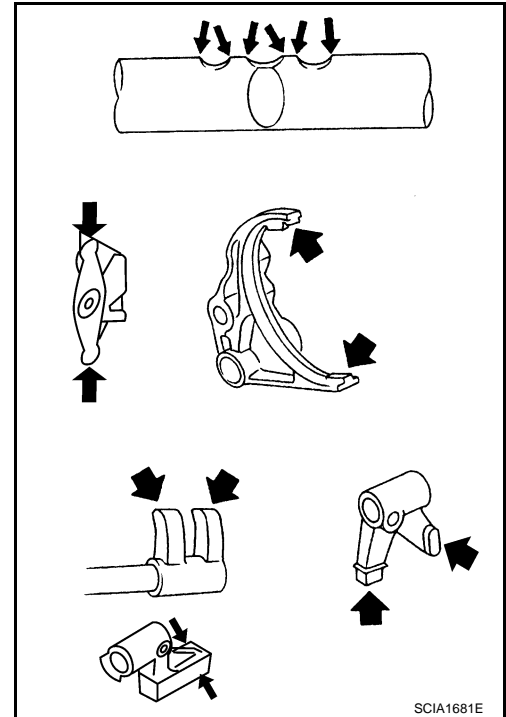

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)


[6MT: FS6R31A]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specification

INFOID:000000000956991

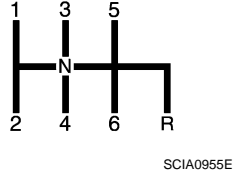Engine type	VQ35HR	
Transmission	FS6R31A	
Model code number	JK400	
Number of speed	6	
Shift pattern		
Synchromesh type	Warner	
Gear ratio	1st	3.794
	2nd	2.324
	3rd	1.624
	4th	1.271
	5th	1.000
	6th	0.794
	Reverse	3.446
Main gear (Number of teeth)	Drive	26
	1st	37
	2nd	34
	3rd	33
	4th	31
	6th	31
	Reverse	42
Counter shaft gear (Number of teeth)	Drive	32
	1st	12
	2nd	18
	3rd	25
	4th	30
	6th	48
	Reverse	15
Reverse idler gear (Number of teeth)	26	
Oil capacity	ℓ (US pt, Imp pt)	Approx. 2.93 (6-1/4, 5-1/8)
Remarks	Reverse synchronizer	Installed
	Double cone synchronizer	4th
	Triple cone synchronizer	1st, 2nd, and 3rd

End Play

INFOID:000000000956992

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[6MT: FS6R31A]



Unit: mm (in)

Item	Standard value
Counter shaft	0 - 0.10 (0 - 0.004)
Main drive gear	0 - 0.10 (0 - 0.004)
Mainshaft	0 - 0.10 (0 - 0.004)

Baulk Ring Clearance

INFOID:000000000956993

Unit: mm (in)

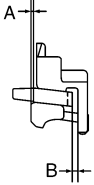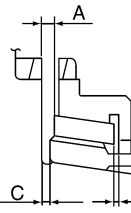Measurement point	Standard value	Limit value
4th (Double-cone synchronizer)  PCIB0249E	Clearance between synchronizer cone and inner baulk ring end face "A" 0.50 - 0.70 (0.020 - 0.028)	0.3 (0.012)
	Clearance between outer baulk ring pawl and synchronizer cone "B" 0.85 - 1.35 (0.033 - 0.053)	0.7 (0.028)
1st, 2nd, and 3rd (Triple-cone synchronizer)  PCIB0835J	Clearance between synchronizer cone and clutch gear end face "A" 1st: 0.65 - 1.25 (0.026 - 0.049) 2nd: 0.60 - 1.30 (0.024 - 0.051) 3rd: 0.60 - 1.30 (0.024 - 0.051)	0.3 (0.012) 0.3 (0.012) 0.3 (0.012)
	Clearance between outer baulk ring pawl and synchronizer cone "B" 0.85 - 1.35 (0.033 - 0.053)	0.7 (0.028)
	Clearance between inner baulk ring and clutch gear end face "C" 1st: 0.80 - 1.2 (0.031 - 0.047) 2nd: 0.75 - 1.25 (0.030 - 0.049) 3rd: 0.75 - 1.25 (0.030 - 0.049)	0.3 (0.012) 0.3 (0.012) 0.3 (0.012)
5th and 6th	0.70 - 1.35 (0.028 - 0.053)	0.5 (0.020)
Reverse	0.75 - 1.20 (0.030 - 0.047)	0.5 (0.020)

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow


INFOID:000000000956994

INTRODUCTION

The TCM receives a signal from the vehicle speed sensor, accelerator pedal position sensor (throttle position sensor) or PNP switch and provides shift control or lock-up control via A/T solenoid valves.


The TCM also communicates with the ECM by means of a signal sent from sensing elements used with the OBD-related parts of the A/T system for malfunction-diagnostic purposes. The TCM is capable of diagnosing malfunctioning parts while the ECM can store malfunctions in its memory.

Input and output signals must always be correct and stable in the operation of the A/T system. The A/T system must be in good operating condition and be free of valve seizure, solenoid valve malfunction, etc.

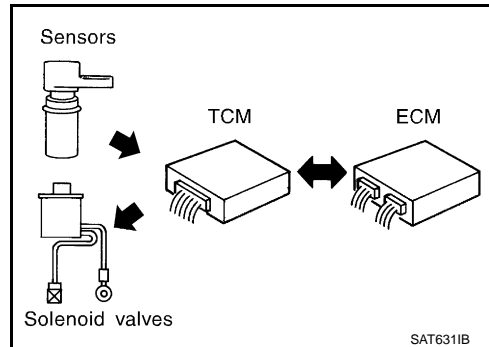

It is much more difficult to diagnose a error that occurs intermittently rather than continuously. Most intermittent errors are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.


A visual check only may not find the cause of the errors. A road test with CONSULT-III (or GST) or a circuit tester connected should be performed. Follow the "DETAILED FLOW".

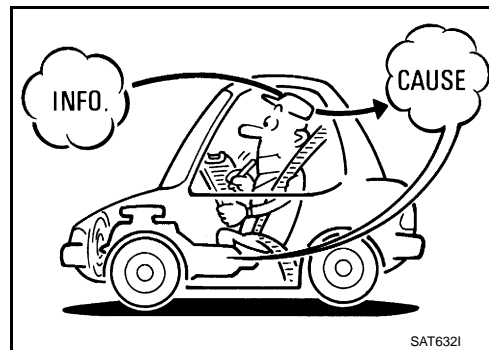

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such errors, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic work sheet" as shown on the example (Refer to [TM-78](#)) should be used.

Start your diagnosis by looking for "conventional" errors first. This will help troubleshoot driveability errors on an electronically controlled engine vehicle.

Also check related Service bulletins.

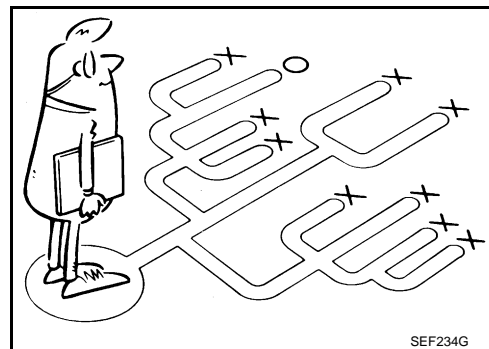

DETAILED FLOW

1.COLLECT THE INFORMATION FROM THE CUSTOMER

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using diagnosis worksheet. Refer to [TM-78, "Diagnostic Work Sheet"](#).

>> GO TO 2.

2.CHECK SYMPTOM 1

Check the following items based on the information obtained from the customer.

- Fail-safe. Refer to [TM-187, "Fail-Safe"](#).
- A/T fluid inspection. Refer to [TM-217, "Inspection"](#).
- Line pressure test. Refer to [TM-224, "Inspection and Judgment"](#).
- Stall test. Refer to [TM-224, "Inspection and Judgment"](#).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[5AT: RE5R05A]

>> GO TO 3.

3. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC.
 - Erase DTC. Refer to [TM-110, "Diagnosis Description"](#).

Is any DTC detected?

YES >> GO TO 4.

NO >> GO TO 5.

4. PERFORM DIAGNOSTIC PROCEDURE

Perform "Diagnostic Procedure" for the displayed DTC.

>> GO TO 5.

5. CHECK SYMPTOM 2

Try to confirm the symptom described by the customer.

Is any malfunction present?

YES >> GO TO 6.

NO >> INSPECTION END

6. RODE TEST

Perform "RODE TEST". Refer to [TM-226, "Description"](#).

>> GO TO 7.

7. CHECK SYMPTOM 3

Try to confirm the symptom described by the customer.

Is any malfunction present?

YES >> GO TO 2.

NO >> INSPECTION END

Diagnostic Work Sheet

INFOID:000000000956995

INFORMATION FROM CUSTOMER

KEY POINTS

- **WHAT**..... Vehicle and A/T model
- **WHEN**..... Date, Frequencies
- **WHERE**..... Road conditions
- **HOW**..... Operating conditions, Symptoms

Customer name MR/MS	Model and Year	VIN
Trans. Model	Engine	Mileage
Malfunction Date	Manuf. Date	In Service Date
Frequency	<input type="checkbox"/> Continuous <input type="checkbox"/> Intermittent (times a day)	

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[5AT: RE5R05A]

Symptoms	<input type="checkbox"/> Vehicle does not move. (<input type="checkbox"/> Any position <input type="checkbox"/> Particular position)	
	<input type="checkbox"/> No up-shift (<input type="checkbox"/> 1st → 2nd <input type="checkbox"/> 2nd → 3rd <input type="checkbox"/> 3rd → 4th <input type="checkbox"/> 4th → 5th)	
	<input type="checkbox"/> No down-shift (<input type="checkbox"/> 5th → 4th <input type="checkbox"/> 4th → 3rd <input type="checkbox"/> 3rd → 2nd <input type="checkbox"/> 2nd → 1st)	
	<input type="checkbox"/> Lock-up malfunction	
	<input type="checkbox"/> Shift point too high or too low.	
	<input type="checkbox"/> Shift shock or slip (<input type="checkbox"/> N → D <input type="checkbox"/> N → R <input type="checkbox"/> Lock-up <input type="checkbox"/> Any drive position)	
	<input type="checkbox"/> Noise or vibration	
	<input type="checkbox"/> No kick down	
	<input type="checkbox"/> No pattern select	
<input type="checkbox"/> Others ()		
A/T CHECK indicator lamp	<input type="checkbox"/> Continuously lit	<input type="checkbox"/> Not lit
Malfunction indicator lamp (MIL)	<input type="checkbox"/> Continuously lit	<input type="checkbox"/> Not lit

DIAGNOSTIC WORK SHEET

1	o Read the item on cautions concerning fail-safe and understand the customer's complaint.		TM-187	
2	<input type="checkbox"/> A/T fluid inspection, stall test and line pressure test		TM-217	
	<input type="checkbox"/> A/T fluid inspection	<input type="checkbox"/> Leak (Repair leak location.) <input type="checkbox"/> State <input type="checkbox"/> Amount		
	<input type="checkbox"/> Stall test	<input type="checkbox"/> Torque converter one-way clutch <input type="checkbox"/> Front brake <input type="checkbox"/> High and low reverse clutch <input type="checkbox"/> Low coast brake <input type="checkbox"/> Forward brake <input type="checkbox"/> Reverse brake <input type="checkbox"/> Forward one-way clutch	TM-223	
	<input type="checkbox"/> Line pressure test - Suspected part:		TM-224	
3	<input type="checkbox"/> Perform self-diagnosis. — Check detected items to repair or replace malfunctioning part.		TM-114	
4	<input type="checkbox"/> Perform rode test.		TM-226	
	5-1	<input type="checkbox"/> Check before engine is started		
	5-2	<input type="checkbox"/> Check at idle	TM-226	
	5-3	Cruise test	<input type="checkbox"/> Part 1	TM-227
			<input type="checkbox"/> Part 2	TM-228
<input type="checkbox"/> Part 3			TM-228	
<input type="checkbox"/> After completing all rode test, check malfunction phenomena to repair or replace malfunctioning part. Refer to TM-191 , "Symptom Table".				
5	<input type="checkbox"/> Drive vehicle to check that the malfunction phenomenon has been resolved.			
6	<input type="checkbox"/> Erase the results of the self-diagnosis from the TCM and the ECM.		TM-110	


FUNCTION DIAGNOSIS

A/T CONTROL SYSTEM


System Diagram

INFOID:000000000956996

Without Paddle Shifter

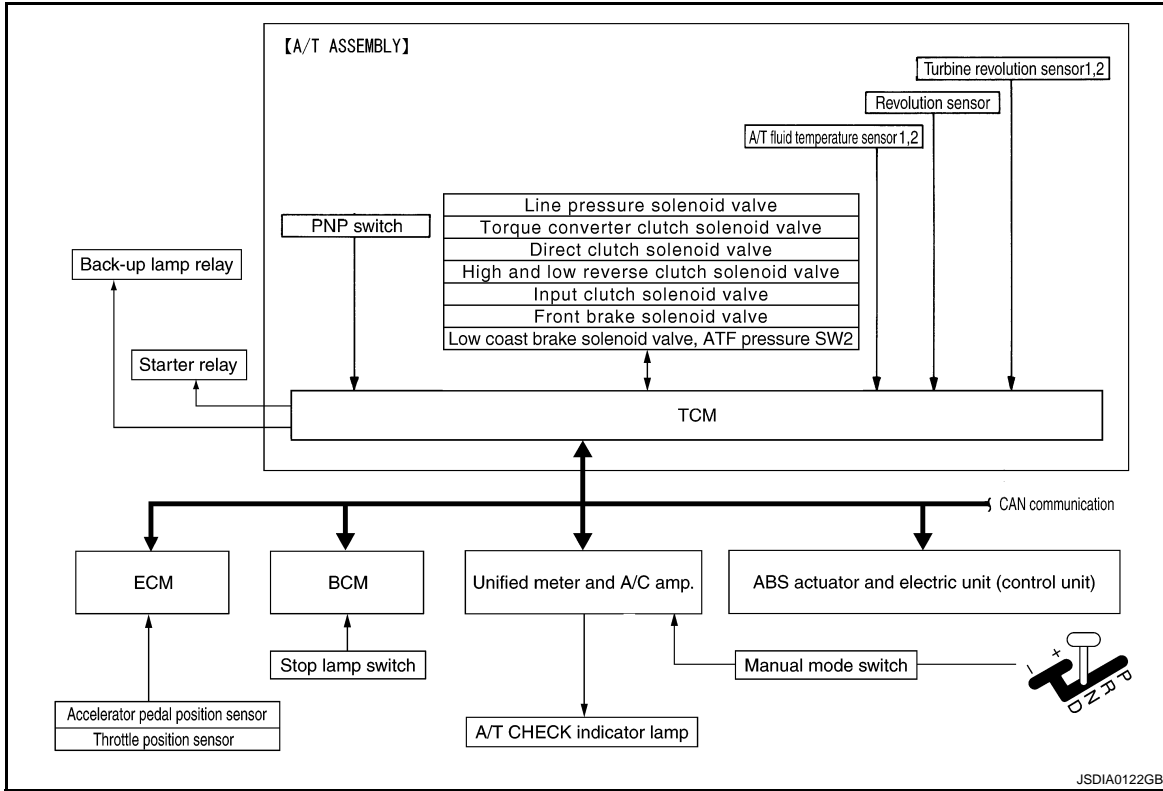

With Paddle Shifter

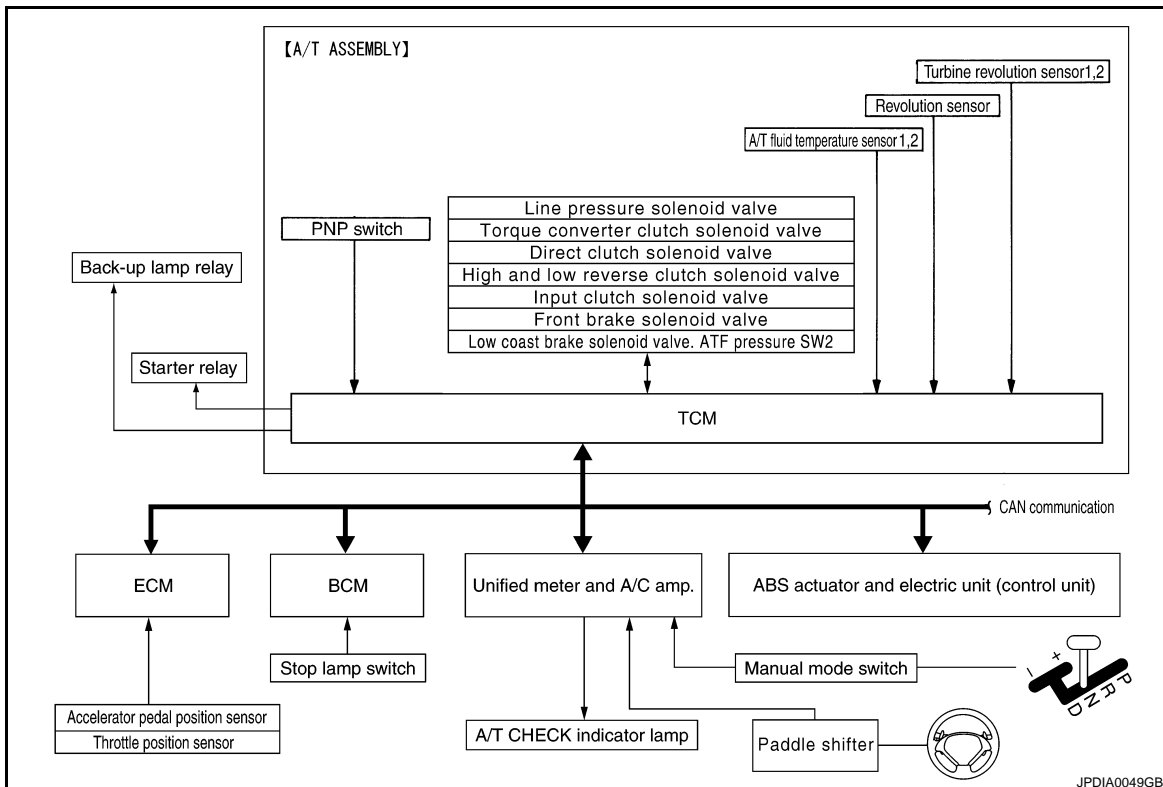

A/T CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

System Description

INFOID:00000000956997

The A/T senses vehicle operating conditions through various sensors or signals. It always controls the optimum shift position and reduces shifting and lock-up shocks.

TCM FUNCTION

The function of the TCM is to:

- Receive input signals sent from various switches and sensors.
- Determine required line pressure, shifting point, lock-up operation, engine brake operation, etc.
- Send required output signals to the respective solenoids.

SENSORS (or SIGNAL)		TCM		ACTUATORS
PNP switch Accelerator pedal position signal Closed throttle position signal Wide open throttle position signal Engine speed signal A/T fluid temperature sensor Revolution sensor Vehicle speed signal Manual mode switch signal Stop lamp switch signal Turbine revolution sensor ATF pressure switch	⇒	Shift control Line pressure control Lock-up control Engine brake control Timing control Fail-safe control Self-diagnosis CONSULT-III communication line Duet-EA control CAN system	⇒	Input clutch solenoid valve Direct clutch solenoid valve Front brake solenoid valve High and low reverse clutch solenoid valve Low coast brake solenoid valve Torque converter clutch solenoid valve Line pressure solenoid valve A/T CHECK indicator lamp Back-up lamp relay Starter relay

Input/Output Signal of TCM

Control item		Line pressure control	Vehicle speed control	Shift control	Lock-up control	Engine brake control	Fail-safe function (*3)	Self-diagnos- tics function
Input	Accelerator pedal position signal ^(*5)	X	X	X	X	X	X	X
	Vehicle speed sensor A/T (revolution sensor)	X	X	X	X	X	X	X
	Vehicle speed sensor MTR ^(*1) (*5)						X	
	Closed throttle position signal ^(*5)		X ^(*2)	X	X		X	X ^(*4)
	Wide open throttle position signal ^(*5)						X	X ^(*4)
	Turbine revolution sensor 1		X		X	X	X	X
	Turbine revolution sensor 2 (for 4th speed only)		X		X	X	X	X
	Engine speed signals ^(*5)	X	X	X	X	X	X	X
	Stop lamp switch signal ^(*5)		X	X	X			X ^(*4)
	A/T fluid temperature sensors 1, 2	X	X	X	X		X	X
	ASCD or ICC sensor inte- grated unit	Operation signal ^(*5)		X	X	X		
Overdrive cancel signal ^(*5)			X					

A/T CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

Control item		Line pressure control	Vehicle speed control	Shift control	Lock-up control	Engine brake control	Fail-safe function (*3)	Self-diagnos- tics function
Output	Direct clutch solenoid		X	X			X	X
	Input clutch solenoid		X	X			X	X
	High and low reverse clutch solenoid		X	X			X	X
	Front brake solenoid		X	X			X	X
	Low coast brake solenoid (ATF pressure switch 2)		X	X		X	X	X
	Line pressure solenoid	X	X	X	X	X	X	X
	TCC solenoid				X		X	X
	Self-diagnostics table(*6)							X
	Starter relay						X	X


- *1: Spare for vehicle speed sensor-A/T (revolution sensor)
- *2: Spare for accelerator pedal position signal
- *3: If these input and output signals are different, the TCM triggers the fail-safe function.
- *4: Used as a condition for starting self-diagnostics; if self-diagnostics are not started, it is judged that there is some kind of error.
- *5: Input by CAN communications.
- *6: Output by CAN communications.

CAN COMMUNICATION

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. Refer to [LAN-28, "CAN Communication Signal Chart"](#).

LINE PRESSURE CONTROL

- When an input torque signal equivalent to the engine drive force is sent from the ECM to the TCM, the TCM controls the line pressure solenoid valve.
- This line pressure solenoid valve controls the pressure regulator valve as the signal pressure and adjusts the pressure of the operating oil discharged from the oil pump to the line pressure most appropriate to the driving state.

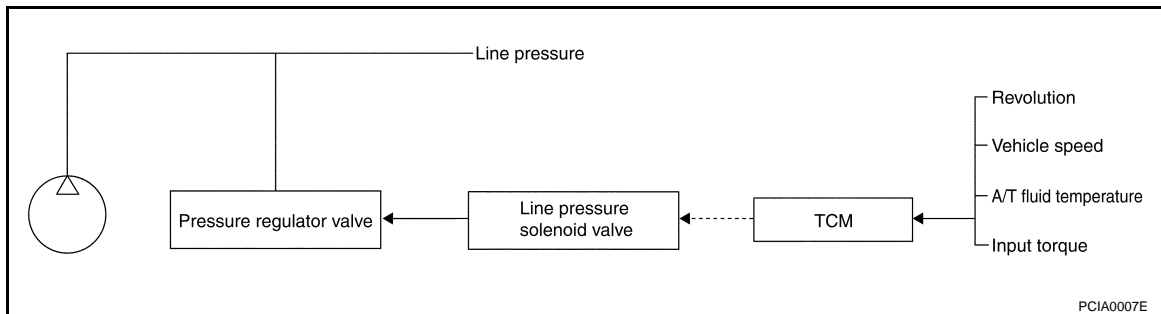

Line Pressure Control is Based On The TCM Line Pressure Characteristic Pattern

- The TCM has stored in memory a number of patterns for the optimum line pressure characteristic for the driving state.
- In order to obtain the most appropriate line pressure characteristic to meet the current driving state, the TCM controls the line pressure solenoid current value and thus controls the line pressure.


Normal Control

A/T CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

- Each clutch is adjusted to the necessary pressure to match the engine drive force.

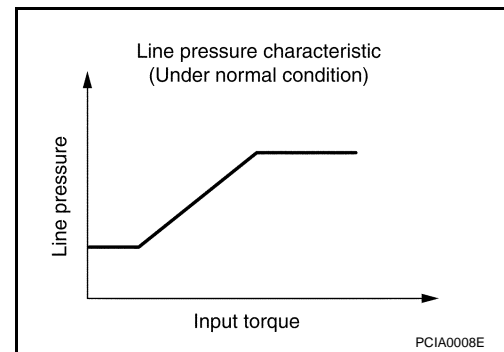


A
B
C

TM

Back-up Control (Engine Brake)

- When the select operation is performed during driving and the A/T is shifted down, the line pressure is set according to the vehicle speed.

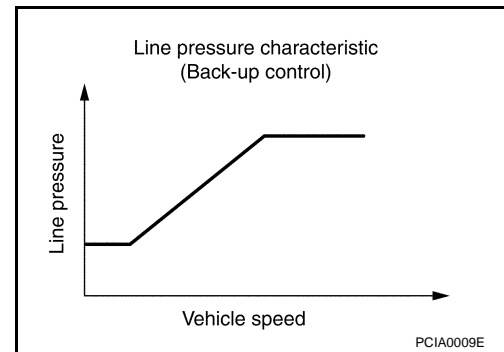


E
F
G

H

During Shift Change

- The necessary and adequate line pressure for shift change is set. For this reason, line pressure pattern setting corresponds to input torque and gearshift selection. Also, line pressure characteristic is according to engine speed, during engine brake operation.

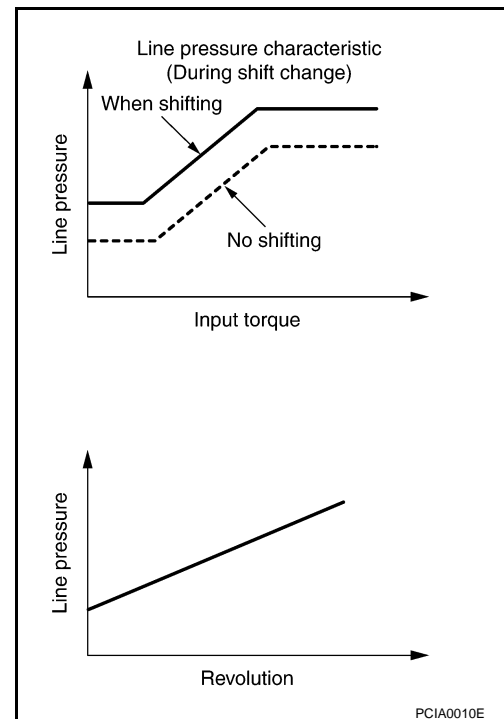

I
J
K

L

M

N

O

At Low Fluid Temperature


P

A/T CONTROL SYSTEM

< FUNCTION DIAGNOSIS >


[5AT: RE5R05A]

- When the A/T fluid temperature drops below the prescribed temperature, in order to speed up the action of each friction element, the line pressure is set higher than the normal line pressure characteristic.

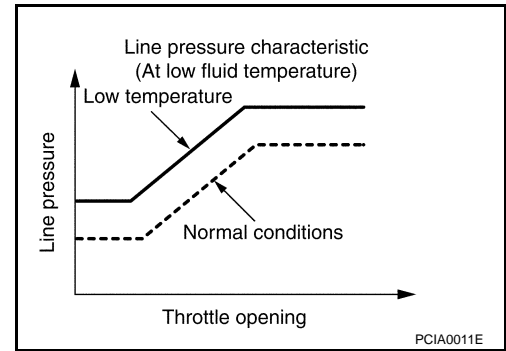

SHIFT CONTROL


The clutch pressure control solenoid is controlled by the signals from the switches and sensors. Thus, the clutch pressure is adjusted to be appropriate to the engine load state and vehicle driving state. It becomes possible to finely control the clutch hydraulic pressure with high precision and a smoother shift change characteristic is attained.

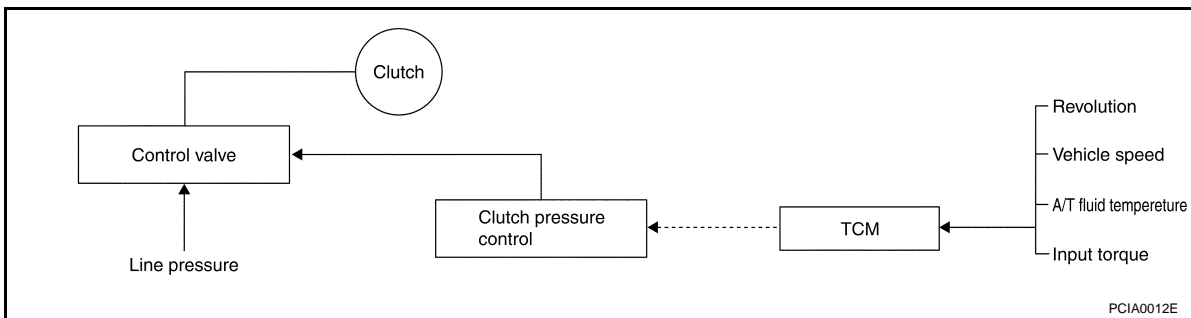

Shift Change

The clutch is controlled with the optimum timing and oil pressure by the engine speed, engine torque information, etc.

Shift Change System Diagram

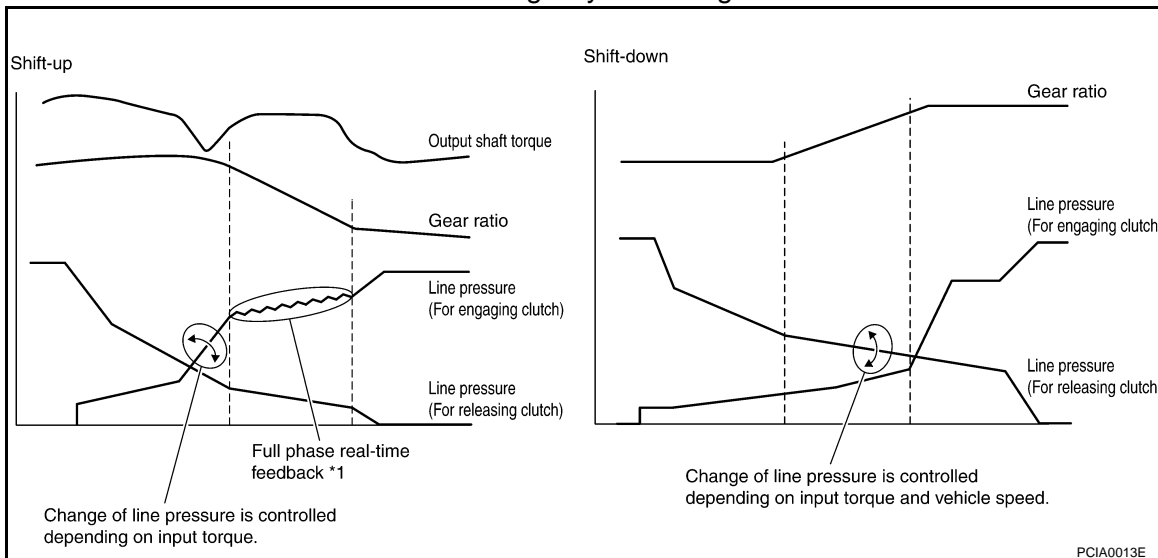

*1: Full phase real-time feedback control monitors movement of gear ratio at gear change, and controls oil pressure at real-time to achieve the best gear ratio.

Blipping Control

This system makes transmission clutch engage readily by controlling (synchronizing) engine revolution according to the (calculation of) engine revolution after shifting down.

- “BLIPPING CONTROL” functions.
 - When downshifting by accelerator pedal depression at “D” position.
 - When downshifting under the manual mode.
- TCM selects “BLIPPING CONTROL” or “NORMAL SHIFT CONTROL” according to the gear position, the selector lever position, the engine torque and the speed when accelerating by pedal depression.


A/T CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]


- Revolution control demand signal is transmitted from TCM to ECM under “BLIPPING CONTROL”.
- TCM synchronizes engine revolution according to the revolution control demand signal.

Shift Change System Diagram

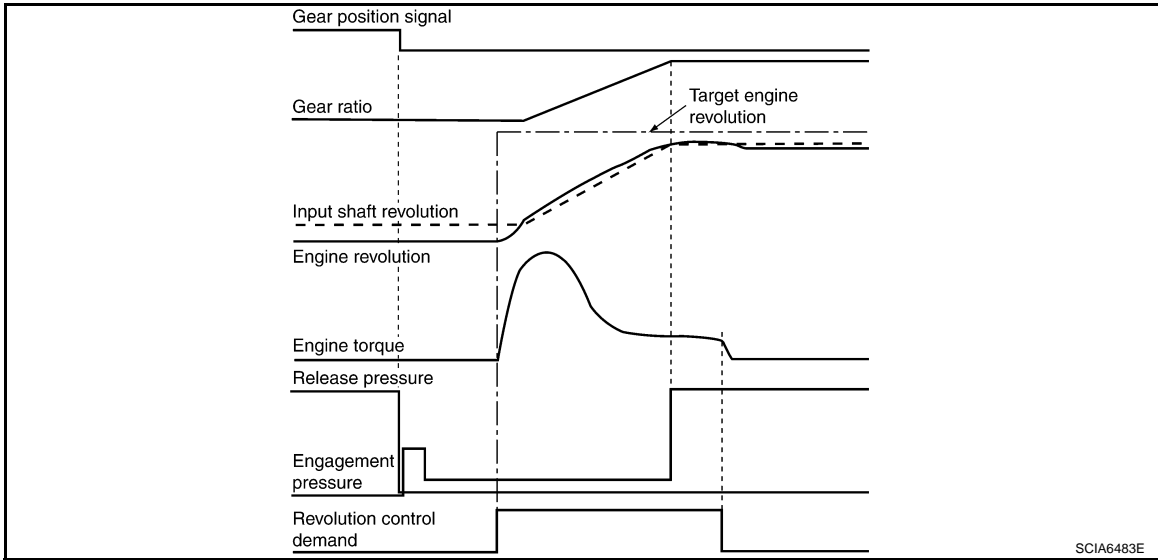

ASC (Adoptive Shift Control)

ASC automatically shifts or hold at the 2nd, 3rd or 4th gear on certain roads (up/down slope and curve) and driving condition.

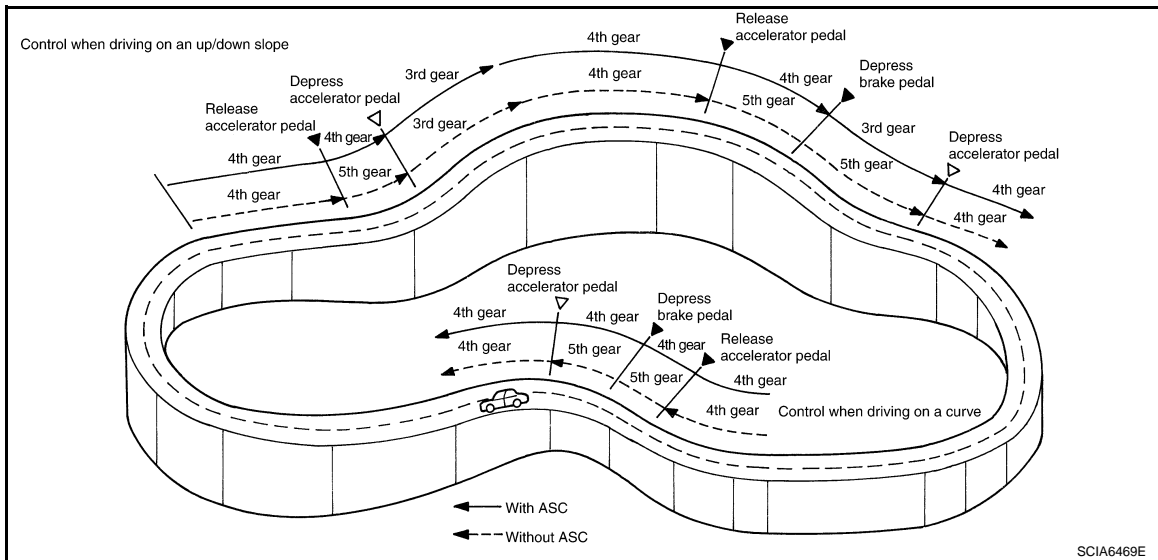

When Driving On an Up/Down Slope

- ASC judges up/down slope according to engine torque data transmitted from the ECM and vehicle speed. Holding gear at the 3rd or 4th on an up-slope prevents shift hunting and controls the vehicle to gain optimum driving force. On a down-slope, automatic shift-down to the 3rd or 4th gear controls to gain optimum engine brake.

When Driving On a Curve

- TCM receives the lateral G sensor signal from the ABS actuator control unit. It locks the gear to the 3rd or 4th position in moderate cornering or to the 2nd position in sharp cornering based on this signal. This prevents any upshift and kickdown during cornering, maintaining smooth vehicle travel.

DS Mode

- Changes to the shift schedule that mainly utilizes the high engine speed zone when ASC is active.
- DS mode can be switched according to the following method.
 - When the selector lever is in the “D” position, shifting the selector lever to manual shift gate enables switching to DS mode.
 - When in DS mode, shifting the selector lever to the main gate enables to cancel DS mode.

A/T CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

- After switching to manual mode with paddle shifter, switching to DS mode can not be enabled even when the selector lever is shifted to the manual gate. (With paddle shifter)

LOCK-UP CONTROL

The torque converter clutch piston in the torque converter is engaged to eliminate torque converter slip to increase power transmission efficiency.


The torque converter clutch control valve operation is controlled by the torque converter clutch solenoid valve, which is controlled by a signal from TCM, and the torque converter clutch control valve engages or releases the torque converter clutch piston.

Lock-up operation condition table

Selector lever	"D" position			"M" position		
	5	4	3	5	4	3
Gear position	5	4	3	5	4	3
Lock-up	×	–	–	×	×	×
Slip lock-up	×	×	×	–	–	–

Torque Converter Clutch Control Valve Control

Lock-up control system diagram

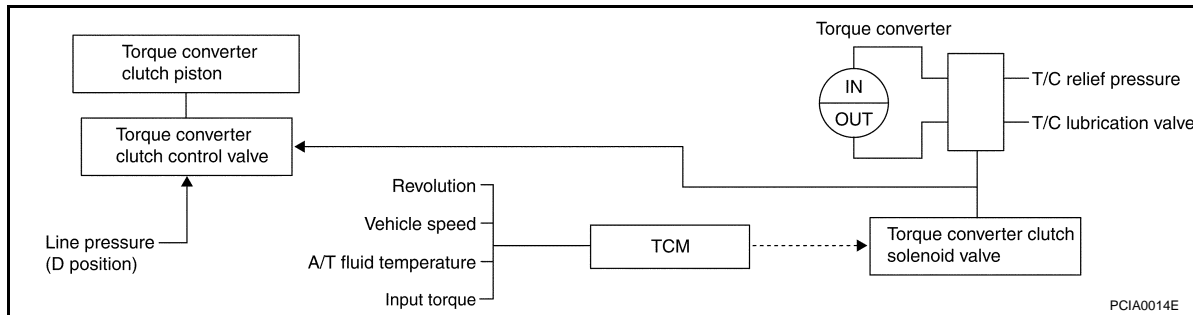

Lock-up Released

- In the lock-up released state, the torque converter clutch control valve is set into the unlocked state by the torque converter clutch solenoid and the lock-up apply pressure is drained. In this way, the torque converter clutch piston is not coupled.

Lock-up Applied

- In the lock-up applied state, the torque converter clutch control valve is set into the locked state by the torque converter clutch solenoid and lock-up apply pressure is generated. In this way, the torque converter clutch piston is pressed and coupled.

Smooth Lock-up Control

When shifting from the lock-up released state to the lock-up applied state, the current output to the torque converter clutch solenoid is controlled with the TCM. In this way, when shifting to the lock-up applied state, the torque converter clutch is temporarily set to the half-clutched state to reduce the shock.

Half-clutched State


- The current output from the TCM to the torque converter clutch solenoid is varied to steadily increase the torque converter clutch solenoid pressure. In this way, the lock-up apply pressure gradually rises and while the torque converter clutch piston is put into half-clutched states, the torque converter clutch piston operating pressure is increased and the coupling is completed smoothly.

Slip Lock-up Control

- In the slip region, the torque converter clutch solenoid current is controlled with the TCM to put it into the half-clutched state. This absorbs the engine torque fluctuation and lock-up operates from low speed. This raises the fuel efficiency for 3rd, 4th and 5th gears at both low speed and when the accelerator has a low degree of opening.

ENGINE BRAKE CONTROL

- The forward one-way clutch transmits the drive force from the engine to the rear wheels. But the reverse drive from the rear wheels is not transmitted to the engine because the one-way clutch is idling. Therefore, the low coast brake solenoid is operated to prevent the forward one-way clutch from idling and the engine brake is operated in the same manner as conventionally.

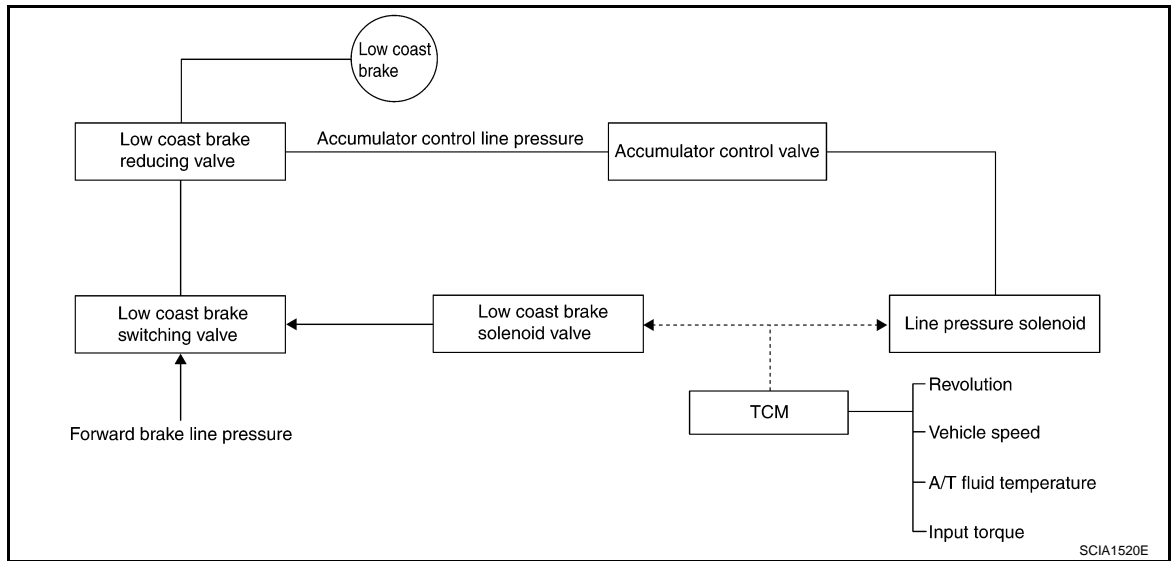

- The operation of the low coast brake solenoid switches the low coast brake switching valve and controls the coupling and releasing of the low coast brake.
The low coast brake reducing valve controls the low coast brake coupling force.

Component Parts Location


INFOID:000000000956998

A/T CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

Without Paddle Shifter

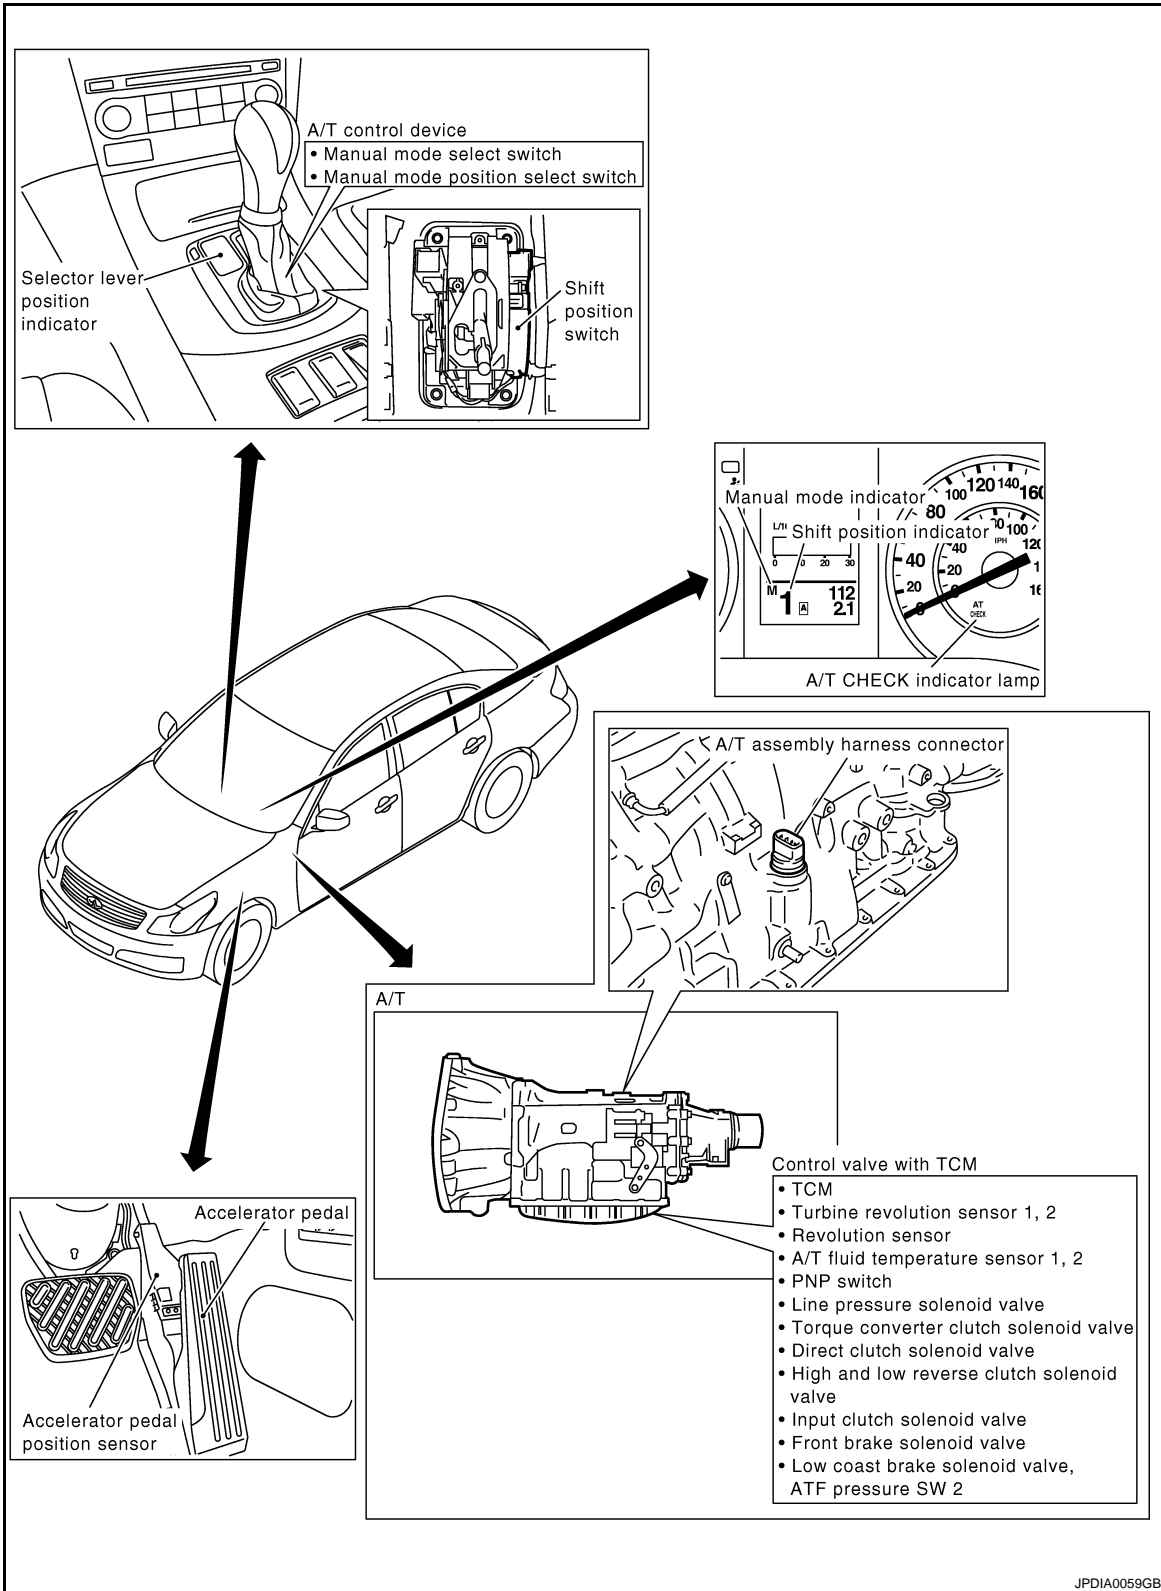


A/T CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

With Paddle Shifter

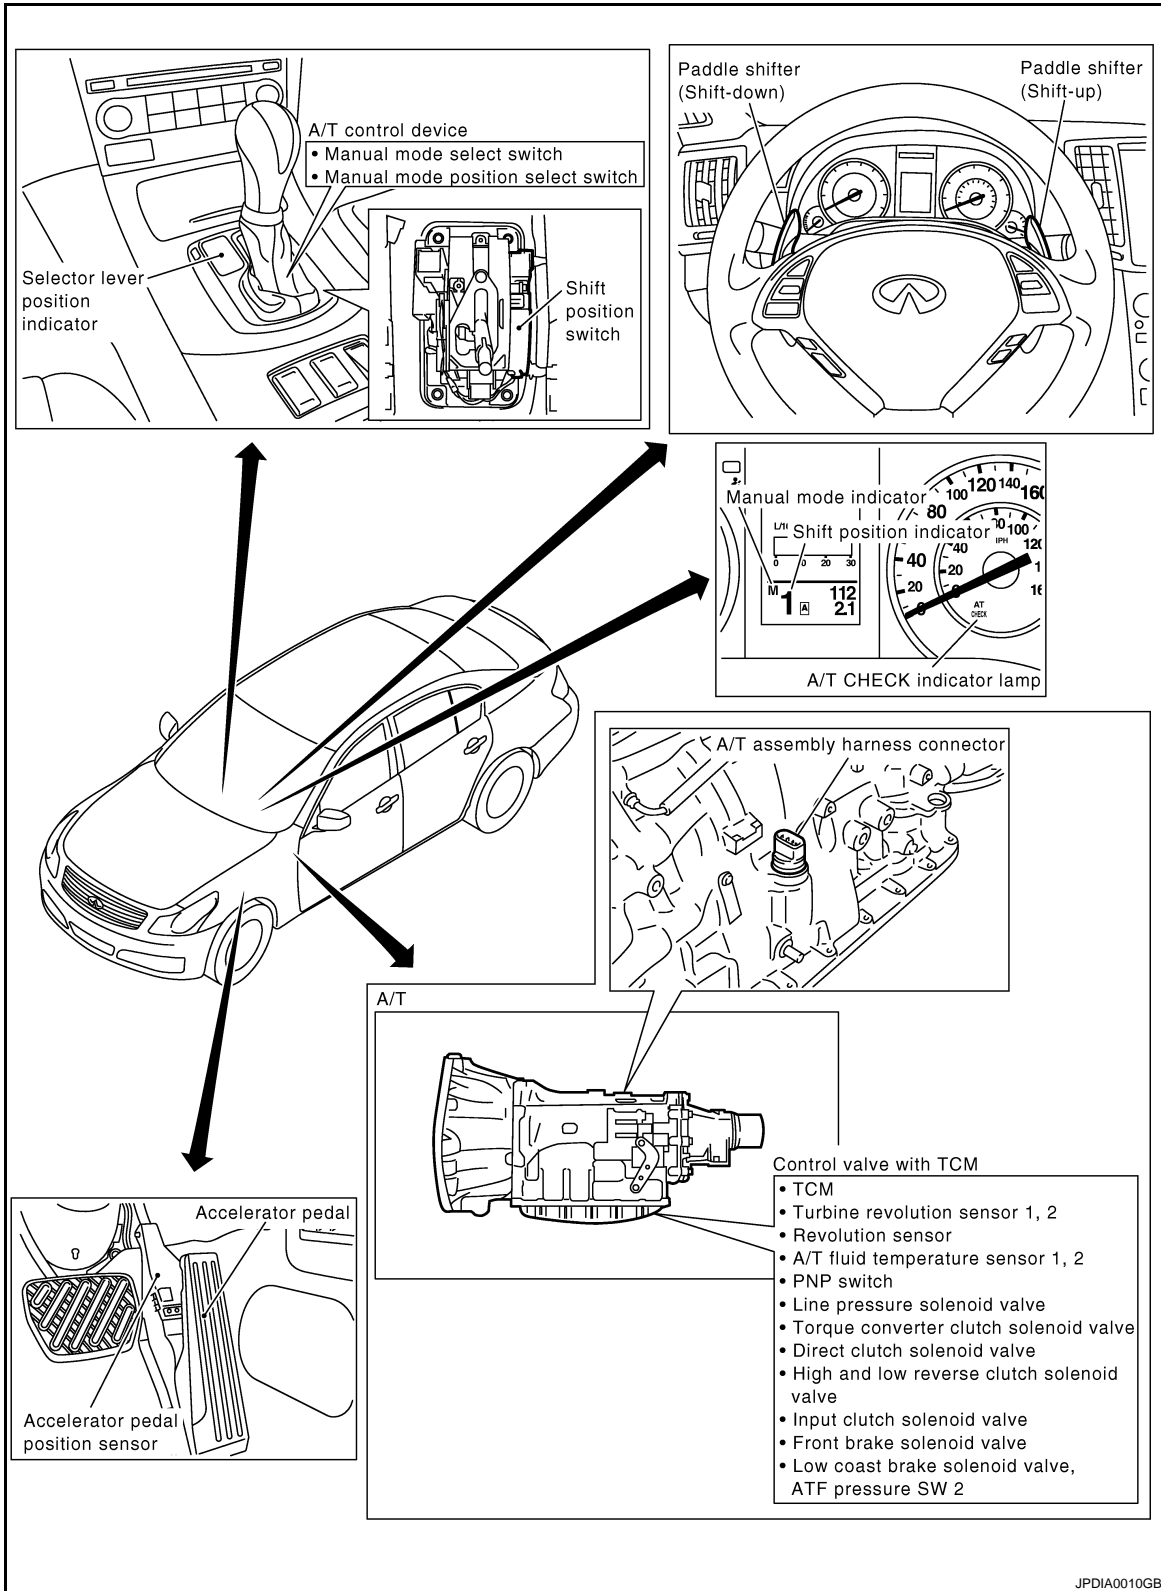

Component Description

A/T ASSEMBLY

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

A/T CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

Name	Function
TCM	TM-123. "Description"
Input clutch solenoid valve	TM-153. "Description"
Front brake solenoid valve	TM-155. "Description"
Direct clutch solenoid valve	TM-157. "Description"
High and low reverse clutch solenoid valve	TM-159. "Description"
Low coast brake solenoid valve	TM-161. "Description"
ATF pressure switch 2 (LC/B)	Detects any malfunction in the low coast brake hydraulic pressure. When it detects any malfunction, it puts the system into fail-safe mode.
Torque converter regulator valve	In order to prevent the pressure supplied to the torque converter from being excessive, the line pressure is adjusted to the optimum pressure (torque converter operating pressure).
Pressure regulator valve Pressure regulator plug Pressure regulator sleeve	Adjusts the oil discharged from the oil pump to the optimum pressure (line pressure) for the driving state.
Front brake control valve	When the front brake is coupled, adjusts the line pressure to the optimum pressure (front brake pressure) and supplies it to the front brake. (In 1st, 2nd, 3rd, and 5th gears, adjusts the clutch pressure.)
Accumulator control valve	Adjusts the pressure (accumulator control pressure) acting on the accumulator piston and low coast reducing valve to the pressure appropriate to the driving state.
Pilot valve A	Adjusts the line pressure and produces the constant pressure (pilot pressure) required for line pressure control, shift change control, and lock-up control.
Pilot valve B	Adjusts the line pressure and produces the constant pressure (pilot pressure) required for shift change control.
Low coast brake switching valve	During engine braking, supplies the line pressure to the low coast brake reducing valve.
Low coast brake reducing valve	When the low coast brake is coupled, adjusts the line pressure to the optimum pressure (low coast brake pressure) and supplies it to the low coast brake.
N-R accumulator	Produces the stabilizing pressure for when N-R is selected.
Direct clutch piston switching valve	Operates in 4th gear and switches the direct clutch coupling capacity.
High and low reverse clutch control valve	When the high and low reverse clutch is coupled, adjusts the line pressure to the optimum pressure (high and low reverse clutch pressure) and supplies it to the high and low reverse clutch. (In 1st, 3rd, 4th and 5th gears, adjusts the clutch pressure.)
Input clutch control valve	When the input clutch is coupled, adjusts the line pressure to the optimum pressure (input clutch pressure) and supplies it to the input clutch. (In 4th and 5th gears, adjusts the clutch pressure.)
Direct clutch control valve	When the direct clutch is coupled, adjusts the line pressure to the optimum pressure (direct clutch pressure) and supplies it to the direct clutch. (In 2nd, 3rd, and 4th gears, adjusts the clutch pressure.)
TCC control valve TCC control plug TCC control sleeve	Switches the lock-up to operating or released. Also, by performing the lock-up operation transiently, lock-up smoothly.
Torque converter lubrication valve	Operates during lock-up to switch the torque converter, cooling, and lubrication system oil passage.
Cool bypass valve	Allows excess oil to bypass cooler circuit without being fed into it.
Line pressure relief valve	Discharges excess oil from line pressure circuit.
N-D accumulator	Produces the stabilizing pressure for when N-D is selected.
Manual valve	Sends line pressure to each circuit according to the select position. The circuits to which the line pressure is not sent drain.
PNP switch	TM-124. "Description"
Vehicle speed sensor A/T (Revolution sensor)	TM-128. "Description"

A/T CONTROL SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

Name	Function	
Turbine revolution sensor 1	TM-126. "Description"	A
Turbine revolution sensor 2		B
A/T fluid temperature sensor 1	TM-147. "Description"	B
A/T fluid temperature sensor 2		C

EXCEPT A/T ASSEMBLY

Name	Function	
Accelerator pedal position sensor	TM-146. "Description"	TM
Throttle position sensor		E
Manual mode switch	TM-164. "Description"	E
Paddle shifter	TM-164. "Description"	E
Starter relay	TM-121. "Description"	F

A
B
C
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >


[5AT: RE5R05A]

SHIFT MECHANISM

Cross-Sectional View

INFOID:000000000957000

2WD MODELS

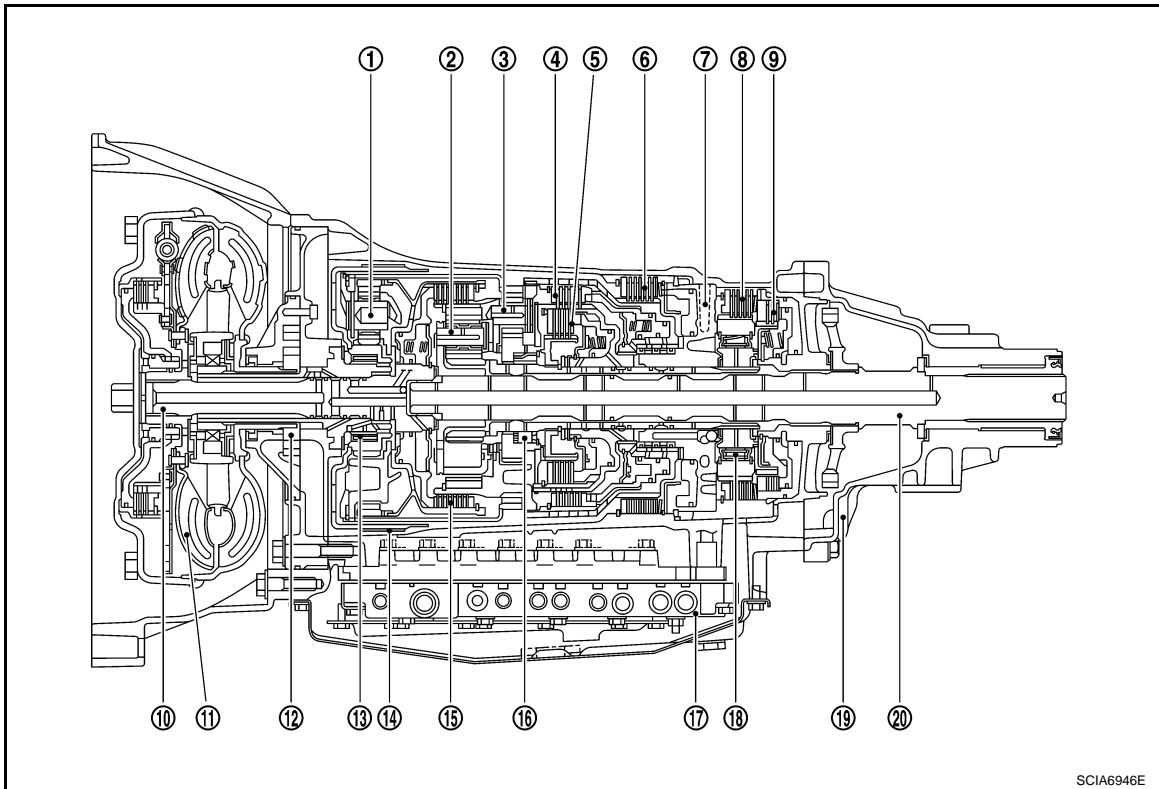


- | | | |
|-------------------------|--------------------------------|----------------------------|
| 1. Front planetary gear | 2. Mid planetary gear | 3. Rear planetary gear |
| 4. Direct clutch | 5. High and low reverse clutch | 6. Reverse brake |
| 7. Drum support | 8. Forward brake | 9. Low coast brake |
| 10. Input shaft | 11. Torque converter | 12. Oil pump |
| 13. 3rd one-way clutch | 14. Front brake | 15. Input clutch |
| 16. 1st one-way clutch | 17. Control valve with TCM | 18. Forward one-way clutch |
| 19. Rear extension | 20. Output shaft | |

AWD MODELS

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >


[5AT: RE5R05A]

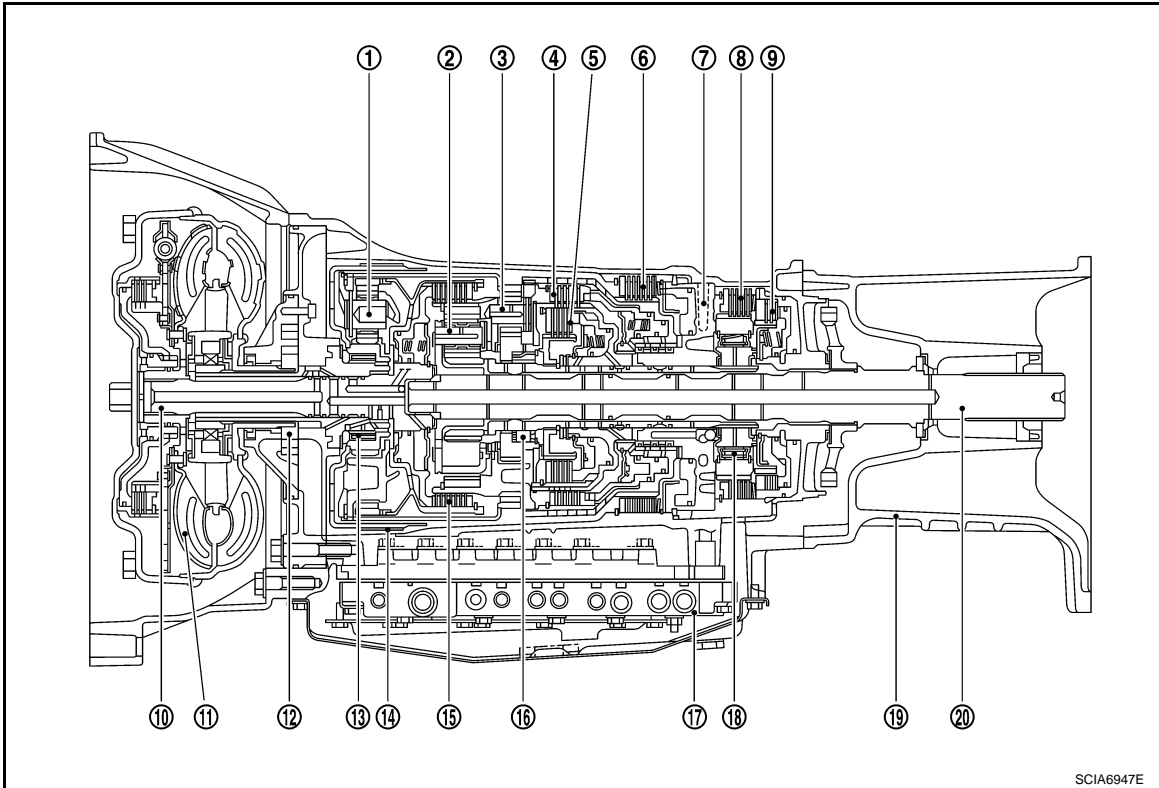

- | | | |
|-------------------------|--------------------------------|----------------------------|
| 1. Front planetary gear | 2. Mid planetary gear | 3. Rear planetary gear |
| 4. Direct clutch | 5. High and low reverse clutch | 6. Reverse brake |
| 7. Drum support | 8. Forward brake | 9. Low coast brake |
| 10. Input shaft | 11. Torque converter | 12. Oil pump |
| 13. 3rd one-way clutch | 14. Front brake | 15. Input clutch |
| 16. 1st one-way clutch | 17. Control valve with TCM | 18. Forward one-way clutch |
| 19. Adapter case | 20. Output shaft | |

System Diagram

INFOID:000000000957001

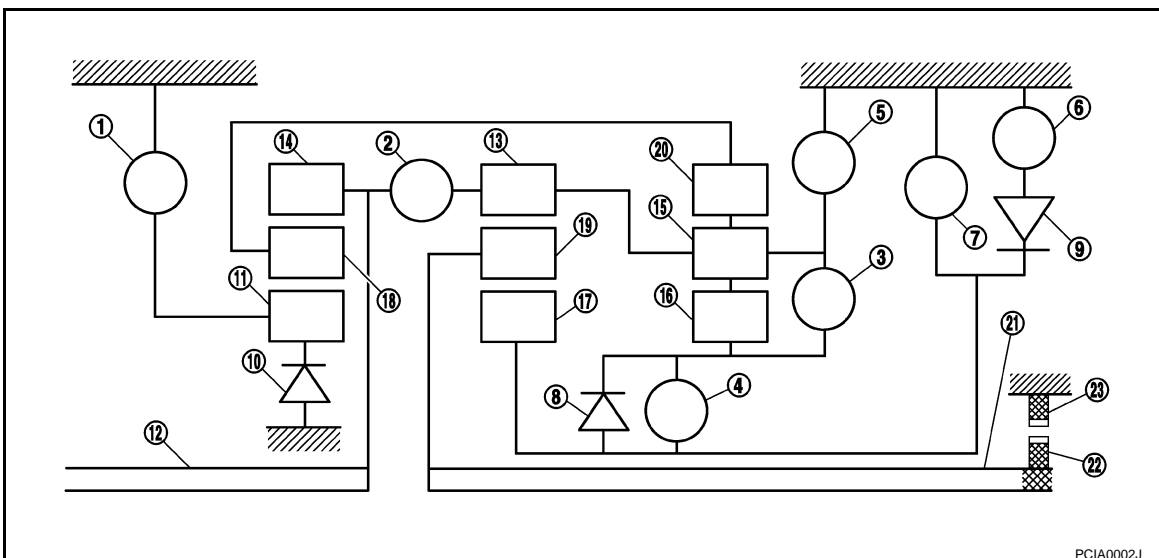

- | | | |
|--------------------------------|------------------|------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

-
- | | | |
|------------------------|-------------------------|---------------------------|
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

System Description

INFOID:000000000957002

DESCRIPTION

With the use of three sets of planetary gears, A/T enables 5-speed transmission for forward and 1-speed transmission for backward, depending on the combination of 3 sets of multiple-disc clutches, 3 sets of multiple-disc brakes, a brake band, and 3 sets of one-way clutches.

CLUTCH AND BAND CHART


SHIFT MECHANISM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

Shift position	I/C	HLR/C	D/C	R/B	FR/B	LC/B	Fwd/B	1st OWC	Fwd OWC	3rd OWC	Remarks
P		△			△						PARK POSITION
R		○		○	○			◎		◎	REVERSE POSITION
N		△			△						NEUTRAL POSITION
D,DS	1 st		△ *		△	△ **	○	◎	◎	◎	Automatic shift 1→2→3→4→5
	2 nd			○	△		○		◎	◎	
	3 rd		○	○		○	△	◇		◎	
	4 th	○	○	○			△	◇			
	5 th	○	○			○	△	◇		◇	
M5		○	○			○	△	◇		◇	Locks* (held stationary) in 5th gear
M4		○	○	○			△	◇			Locks* (held stationary) in 4th gear
M3			○	○		○	△	◇		◎	Locks* (held stationary) in 3rd gear
M2				○		○	○		◎	◎	Locks* (held stationary) in 2nd gear
M1					○	○	○	◎	◎	◎	Locks* (held stationary) in 1st gear

- – Operates
- ◎ – Operates during “progressive” acceleration.
- ◇ – Operates and affects power transmission while coasting.
- △ – Line pressure is applied but does not affect power transmission.
- △ * – Operates under conditions shown in illustration ①.
- △ ** – Operates under conditions shown in illustration ②. Delay control is applied during D(4,3,2,1) → N shift

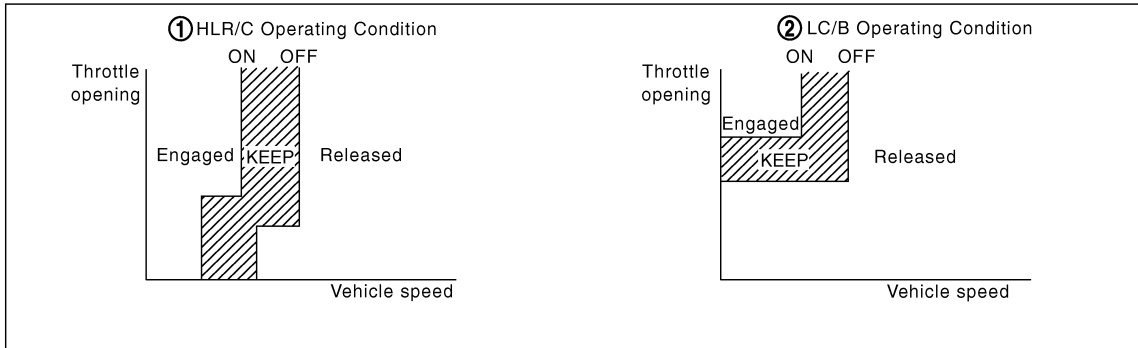

JPDIA0096GB

POWER TRANSMISSION

“N” Position

Since both the forward brake and the reverse brake are released, torque from the input shaft drive is not transmitted to the output shaft.


“P” Position

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

- The same as for the “N” position, both the forward brake and the reverse brake are released, so torque from the input shaft drive is not transmitted to the output shaft.
- The parking pawl linked with the selector lever meshes with the parking gear and fastens the output shaft mechanically.

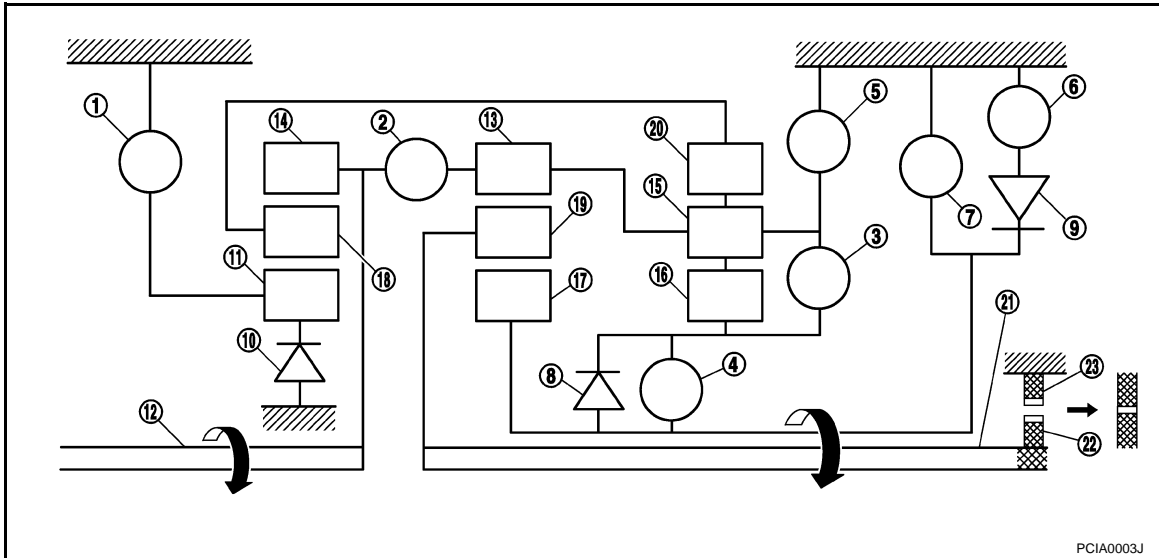

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |


“D1”, “DS1” Position

- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- The 1st one-way clutch regulates reverse rotation of the rear sun gear.
- The 3rd one-way clutch regulates reverse rotation of the front sun gear.
- During deceleration, the mid sun gear turns forward, so the forward one-way clutch idles and the engine brake is not activated.

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

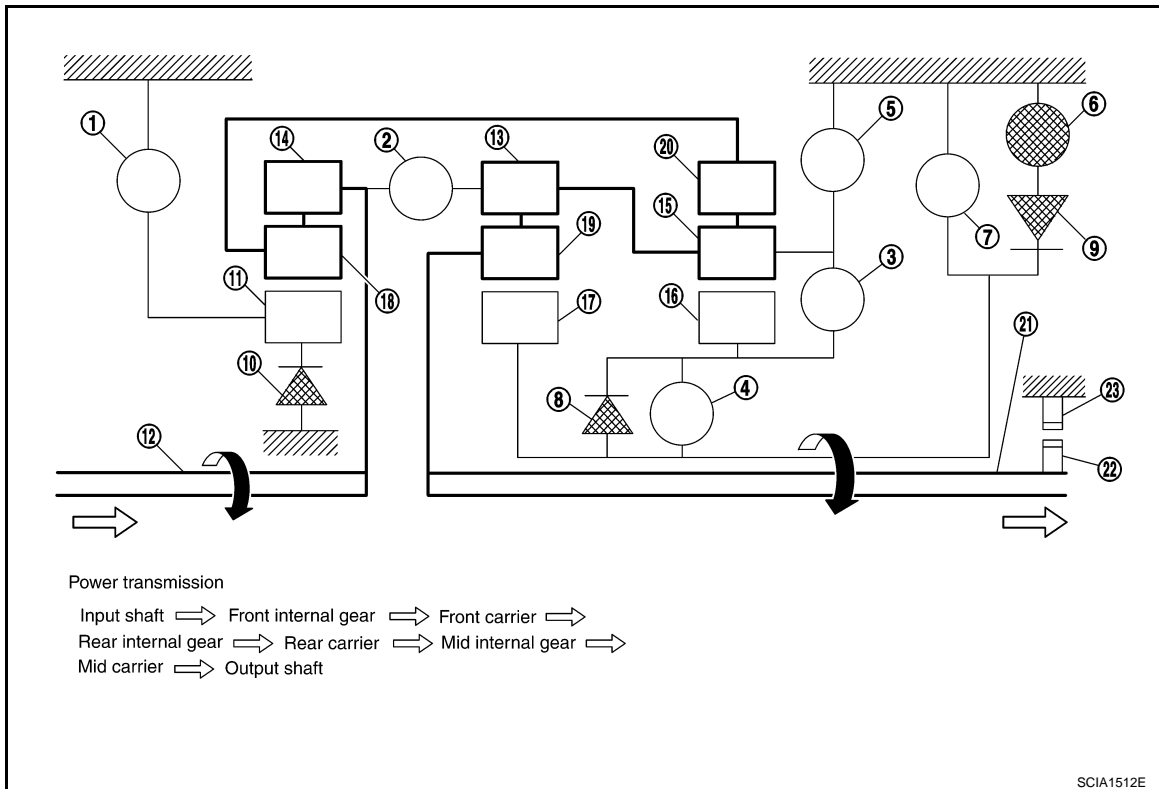

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |


“M1” Position

- The front brake fastens the front sun gear.
- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- High and low reverse clutch connects the rear sun gear and the mid sun gear.
- The low coast brake fastens the mid sun gear.
- During deceleration, the low coast brake regulates forward rotation of the mid sun gear and the engine brake functions.

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

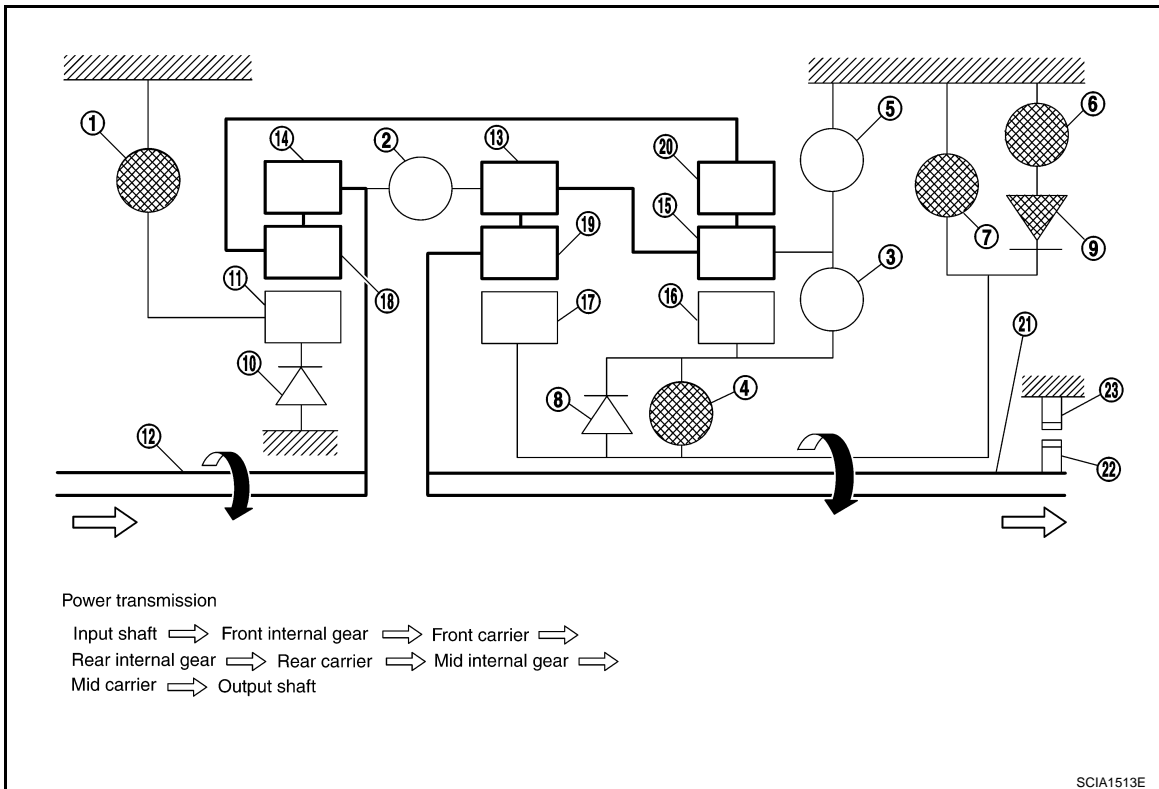

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |


“D2”, “DS2” Position

- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- The 3rd one-way clutch regulates reverse rotation of the front sun gear.
- The direct clutch is coupled, and the rear carrier and rear sun gear are connected.
- During deceleration, the mid sun gear turns forward, so the forward one-way clutch idles and engine brake is not activated.

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

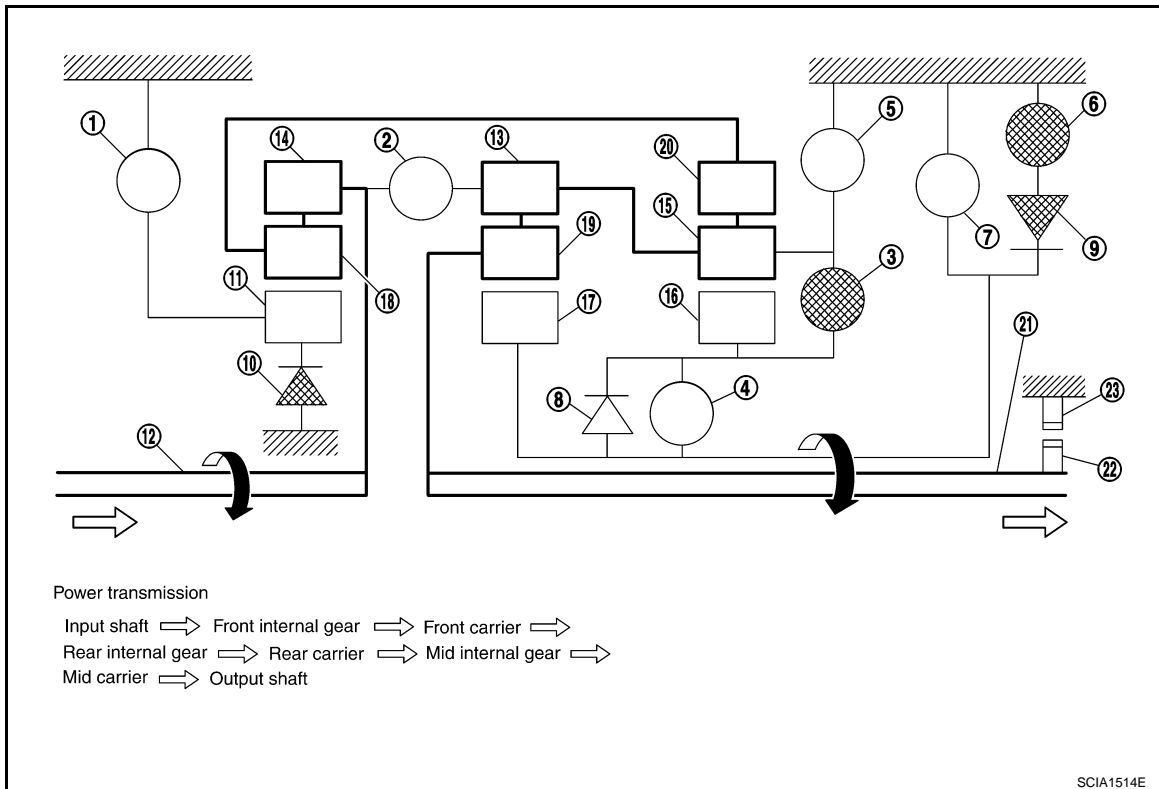

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |


"M2" Position

- The front brake fastens the front sun gear.
- The forward brake and the forward one-way clutch regulate reverse rotation of the mid sun gear.
- The direct clutch is coupled, and the rear carrier and rear sun gear are connected.
- The low coast brake fastens the mid sun gear.
- During deceleration, the low coast brake regulates forward rotation of the mid sun gear and the engine brake functions.

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

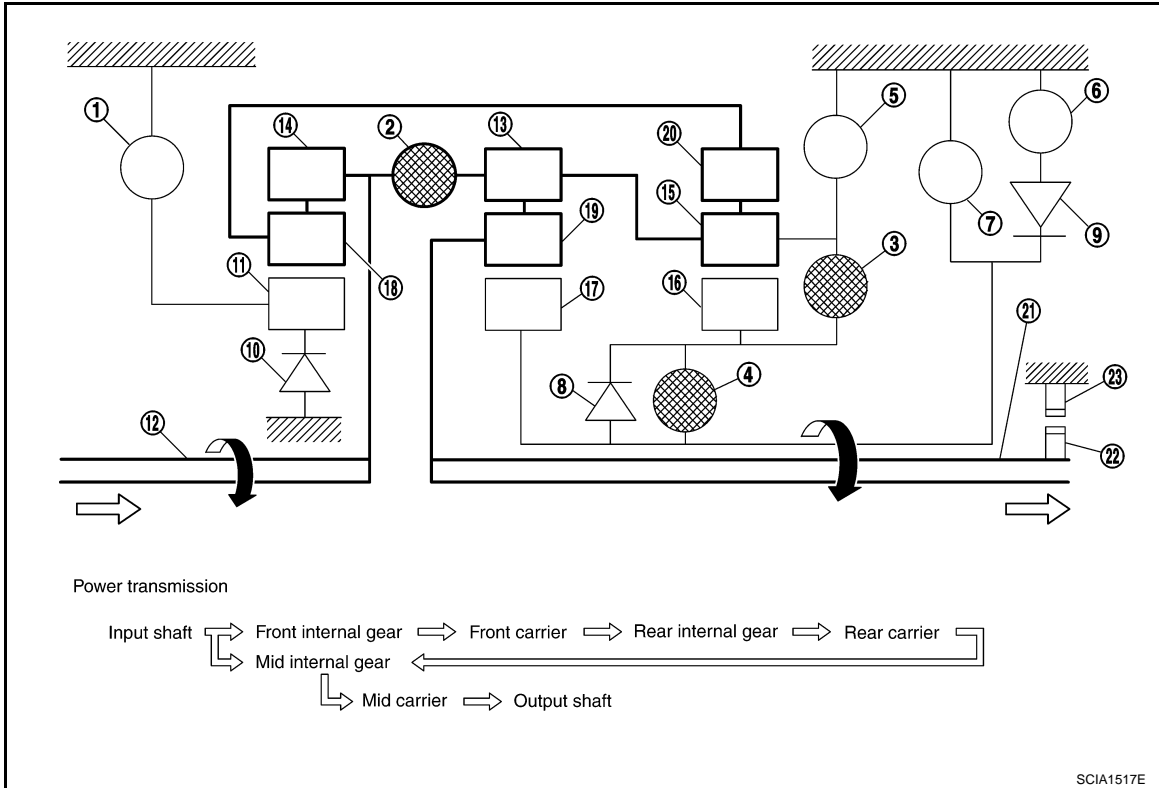

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |


"D5", "DS5" and "M5" Positions

- The front brake fastens the front sun gear.
- The input clutch is coupled, and the front internal gear and mid internal gear are connected.
- The high and low reverse clutch is coupled, and the mid sun gear and rear sun gear are connected.

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

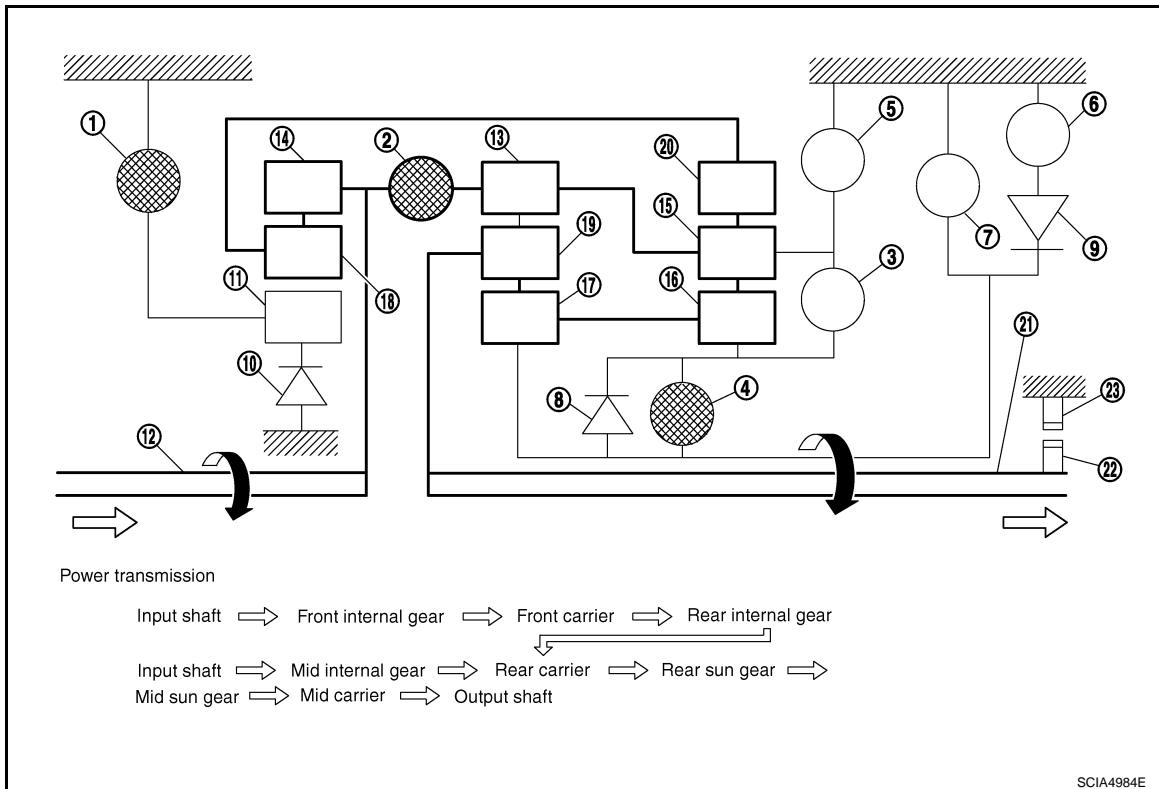

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |


“R” Position

- The front brake fastens the front sun gear.
- The high and low reverse clutch is coupled, and the mid sun gear and rear sun gear are connected.
- The reverse brake fastens the rear carrier.

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

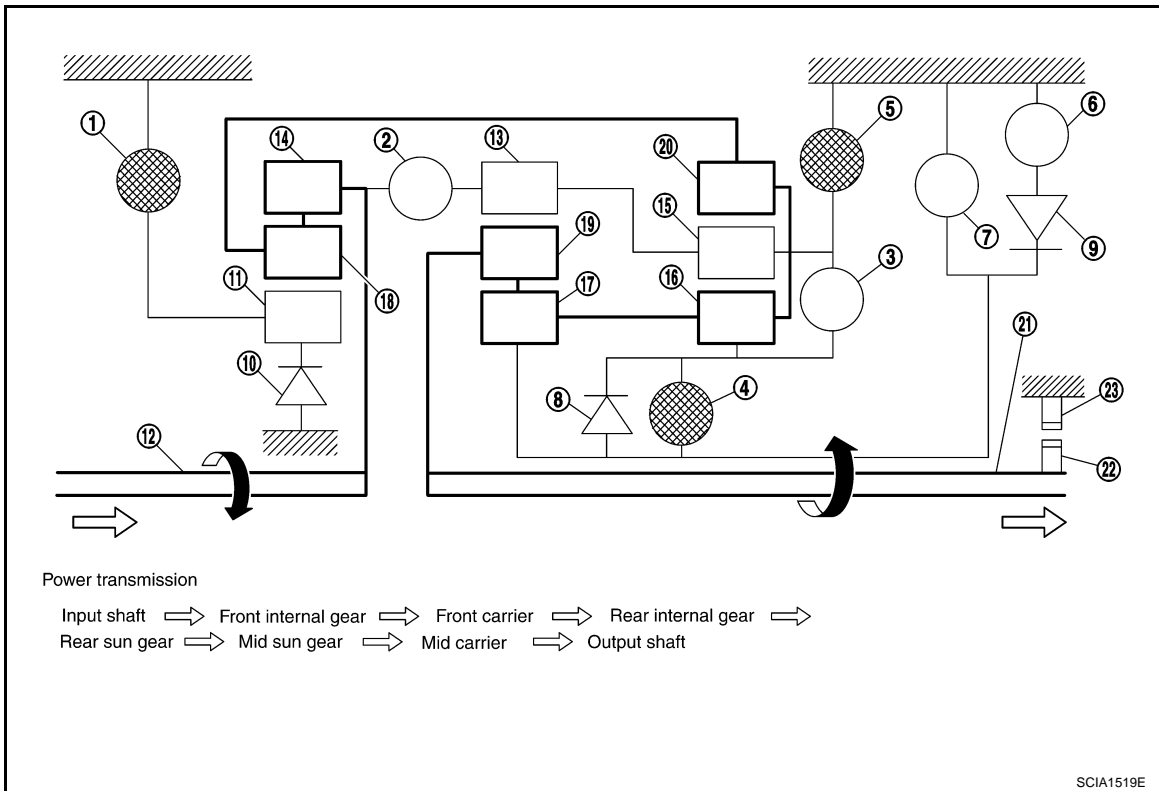

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Front brake | 2. Input clutch | 3. Direct clutch |
| 4. High and low reverse clutch | 5. Reverse brake | 6. Forward brake |
| 7. Low coast brake | 8. 1st one-way clutch | 9. Forward one-way clutch |
| 10. 3rd one-way clutch | 11. Front sun gear | 12. Input shaft |
| 13. Mid internal gear | 14. Front internal gear | 15. Rear carrier |
| 16. Rear sun gear | 17. Mid sun gear | 18. Front carrier |
| 19. Mid carrier | 20. Rear internal gear | 21. Output shaft |
| 22. Parking gear | 23. Parking pawl | |

Component Parts Location


INFOID:000000000957003

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

Without Paddle Shifter

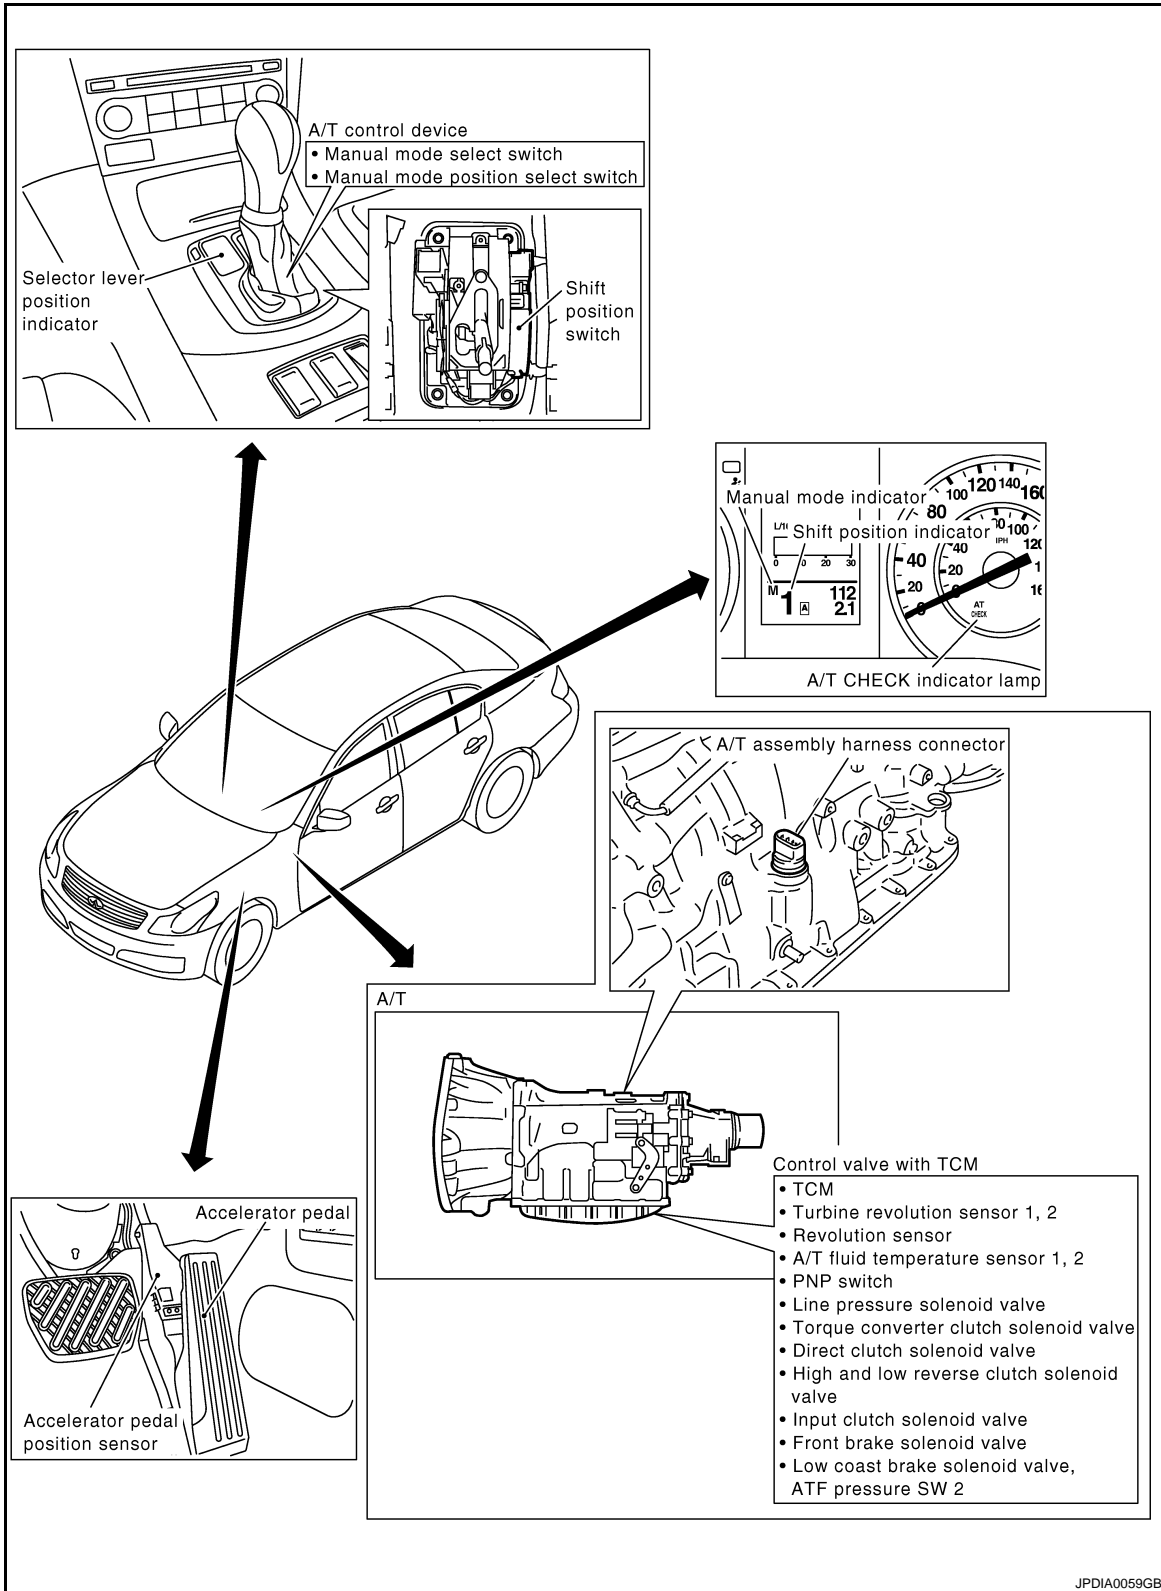


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

With Paddle Shifter

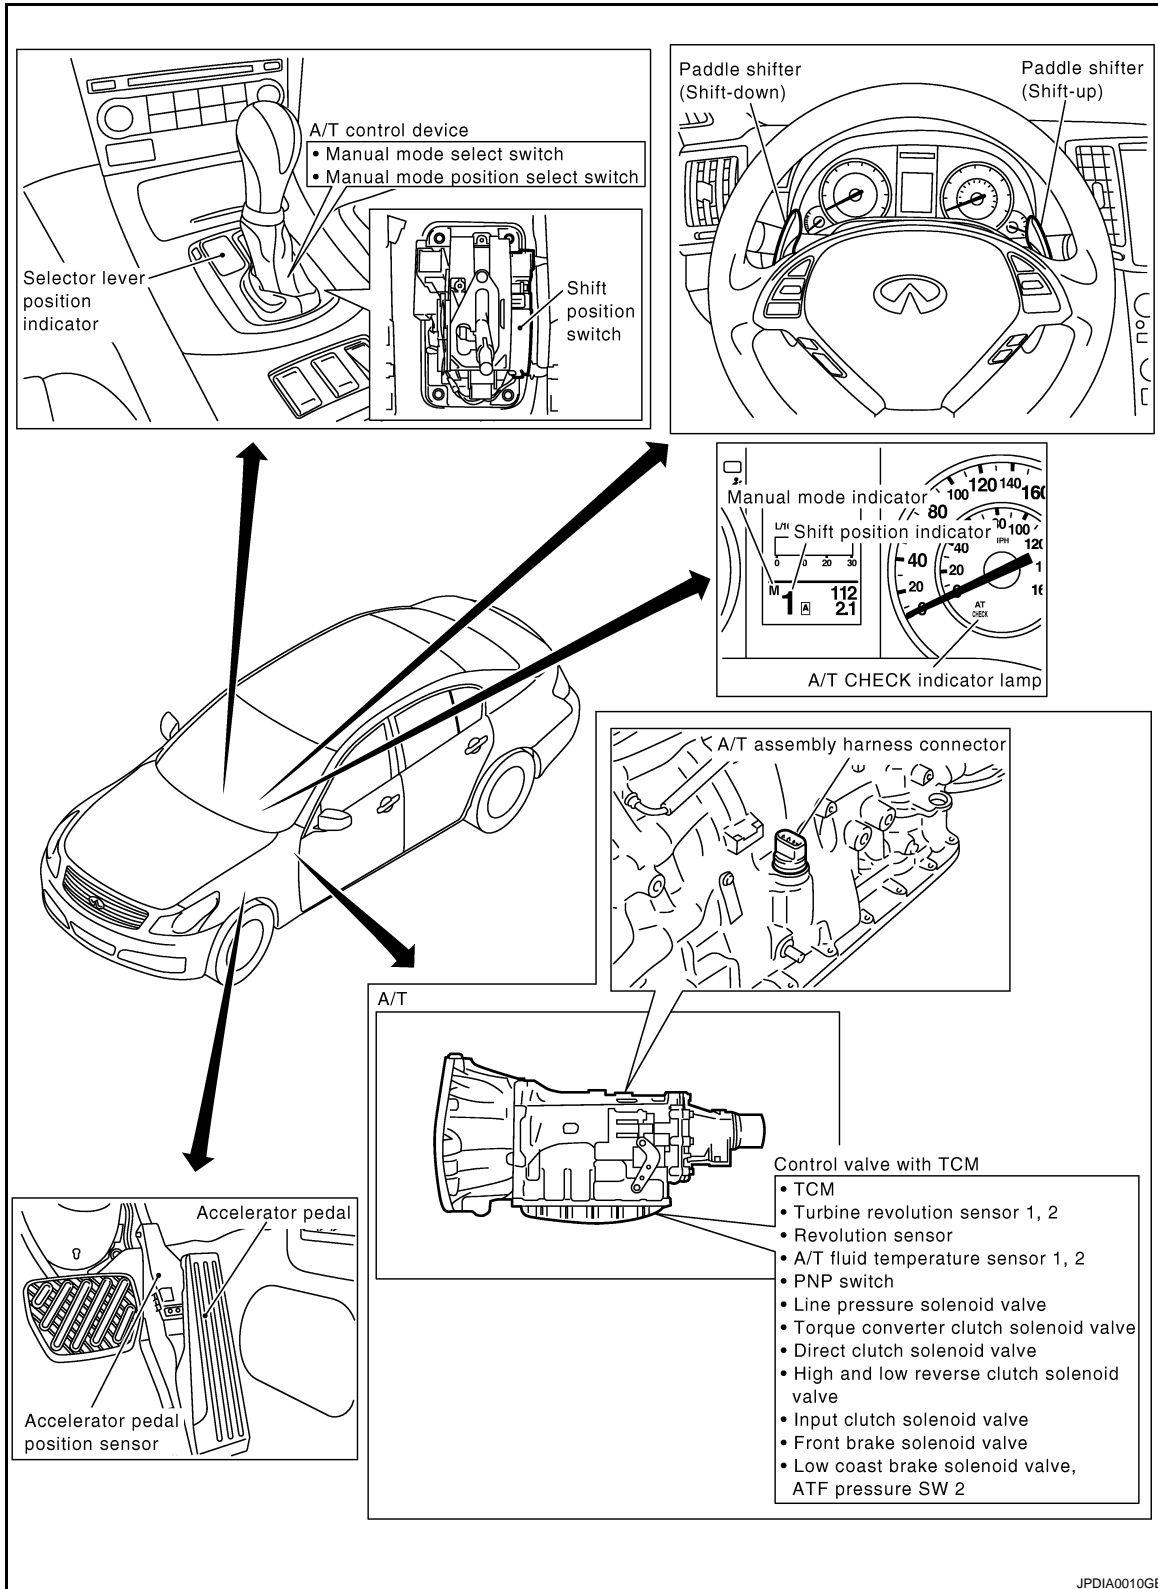

Component Description

INFOID:000000000957004

Name of the Part (Abbreviation)	Function
Front brake (FR/B)	Fastens the front sun gear.
Input clutch (I/C)	Connects the input shaft, the front internal gear and the mid internal gear.

SHIFT MECHANISM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

Name of the Part (Abbreviation)	Function
Direct clutch (D/C)	Connects the rear carrier and the rear sun gear.
High and low reverse clutch (HLR/C)	Connects the mid sun gear and the rear sun gear.
Reverse brake (R/B)	Fastens the rear carrier.
Forward brake (Fwd/B)	Fastens the mid sun gear.
Low coast brake (LC/B)	Fastens the mid sun gear.
1st one-way clutch (1st OWC)	Allows the rear sun gear to turn freely forward relative to the mid sun gear but fastens it for reverse rotation.
Forward one-way clutch (Fwd OWC)	Allows the mid sun gear to turn freely in the forward direction but fastens it for reverse rotation.
3rd one-way clutch (3rd OWC)	Allows the front sun gear to turn freely in the forward direction but fastens it for reverse rotation.
Torque converter	Amplifies driving force the engine, and transmits it to transmission input shaft.
Oil pump	Driven by the engine, oil pump supplies oil to torque converter, control valve assembly, and each lubricating system.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT LOCK SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

SHIFT LOCK SYSTEM

System Description

INFOID:00000000957005

The selector lever cannot be shifted from the “P” position unless the brake pedal is depressed while the ignition switch ON.

The shift lock is unlocked by the shift lock unit that is activated when the ignition switch ON and the stop lamp switch is turned ON (brake pedal is depressed).

Therefore, the shift lock unit receives no ON signal and the shift lock remains locked if the above conditions are not fulfilled. (However, a shift operation is allowed if the shift lock release button is pressed.)


SHIFT LOCK OPERATION AT “P” POSITION

When Brake Pedal Is Not Depressed (No Shift Operation Allowed)

The shift lock solenoid (A) inside the shift lock unit is not energized if the brake pedal is not depressed while the ignition switch ON.

The lock plate (B) lowers according to the downward movement of the position pin (C) when the selector button (D) is pressed, and presses only slider B (E) into the shift lock unit. Slider A (F) located below the lock plate prevents the downward movement of the lock plate with the spring force. The selector lever cannot be shifted from the “P” position for this reason.

However, slider A is forcibly pressed into the shift lock unit, allowing the selector lever to shift if the shift lock release button is pressed.

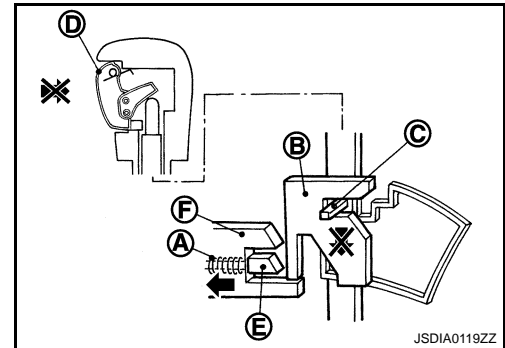


When Brake Pedal Is Depressed (Shift Operation Allowed)

The shift lock solenoid (A) inside the shift lock unit is energized and the relative positions of sliders A (B) and B (C) are maintained when the brake pedal is depressed while the ignition switch ON.

The lock plate (D) lowers according to the downward movement of the position pin (E), thrusting away sliders A and B, when the selector button (F) is pressed.


The position pin lowers to the position that allows shift operation for this reason. As a result, the selector lever can be shifted out of the P position.

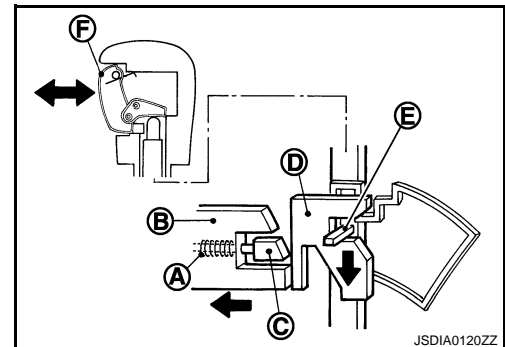

OPERATION AT OTHER THAN “P” POSITION

The shift lock function will not operate at any position other than “P” because the lock plate (A) is only set for the “P” position. Accordingly, the selector lever can be shifted to any position regardless of the brake operation.

The position pin (B) enters the “P” position thrusting away the lock plate when the selector lever is shifted to the “P” position. Then, the shift mechanism is locked when the selector button (C) is released.

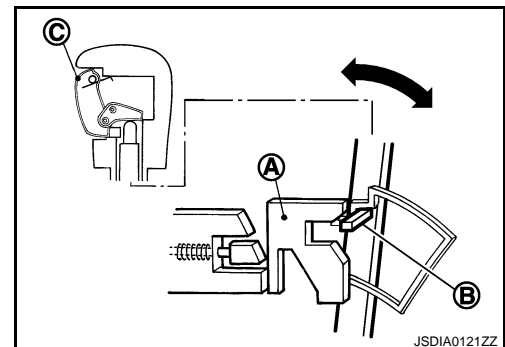

“P” POSITION RETAINING MECHANISM (IGNITION SWITCH LOCK)

When ignition switch is not in the ON position, power is not applied to the shift lock solenoid in the shift lock unit. This causes shift lock state, and then “P” position is retained.

When an actuating system in the shift lock unit has a malfunction, selector lever is unable to operate from the “P” position even when pressing the brake pedal with the ignition switch ON. However, when pressing the shift lock release button, slider A is forcibly pressed into the shift lock unit. This allows shift lock to be released and selector lever enables the select operation from the “P” position.

CAUTION:

Do not use the shift lock release button except when the select lever is inoperative even when pressing the brake pedal with the ignition switch ON.


SHIFT LOCK SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

Component Parts Location

INFOID:000000000957006

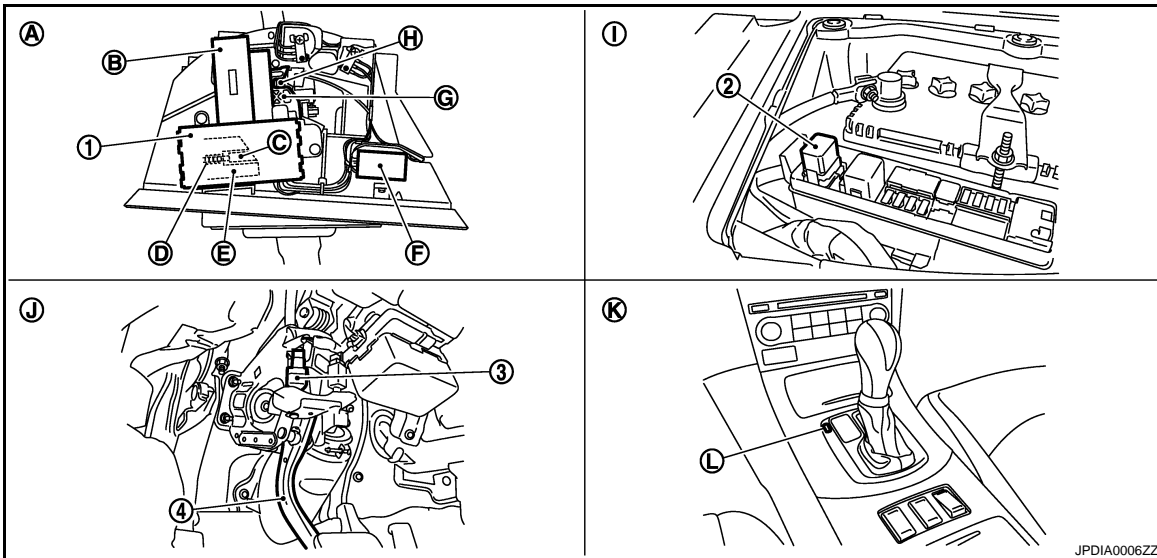

- | | | |
|----------------------------|------------------------------|-------------------------------------|
| 1. Shift lock unit | 2. Shift lock relay | 3. Stop lamp switch |
| 4. Brake pedal | | |
| A. Control device assembly | B. Shift lock release button | C. Slider A |
| D. Shift lock solenoid | E. Slider B | F. A/T device harness connector |
| G. Lock plate | H. Position pin | I. Fuse, fusible link and relay box |
| J. Brake pedal, upper | K. A/T console finisher | L. Shift lock cover * |

*: Shift lock release button becomes operative by removing shift lock cover.

Component Description

INFOID:000000000957007

Component		Function
Control device assembly	Shift lock solenoid	TM-171, "Description"
	Lock plate	The lock plate restricts the position pin stroke by selector button operation according to the shift lock unit status.
	Shift lock release button	Pressing the shift lock release button cancels the shift lock forcibly.
	Position pin	The position pin, linking with the selector button, restricts the selector lever movement.
Shift lock relay		TM-171, "Description"
Stop lamp switch		

ON BOARD DIAGNOSTIC (OBD) SYSTEM

Diagnosis Description

INFOID:00000000957008

DESCRIPTION

The A/T system has two self-diagnostic systems.

The first is the emission-related on board diagnostic system (OBD-II) performed by the TCM in combination with the ECM. The malfunction is indicated by the MIL (malfunction indicator lamp) and is stored as a DTC in the ECM memory but not the TCM memory.

The second is the TCM original self-diagnosis indicated by the A/T CHECK indicator lamp. The malfunction is stored in the TCM memory. The detected items are overlapped with OBD-II self-diagnostic items. For detail, refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

OBD-II FUNCTION

The ECM provides emission-related on board diagnostic (OBD-II) functions for the A/T system. One function is to receive a signal from the TCM used with OBD-related parts of the A/T system. The signal is sent to the ECM when a malfunction occurs in the corresponding OBD-related part. The other function is to indicate a diagnostic result by means of the MIL (malfunction indicator lamp) on the instrument panel. Sensors, switches and solenoid valves are used as sensing elements.

The MIL automatically illuminates in "One or Two Trip Detection Logic" when a malfunction is sensed in relation to A/T system parts.

ONE OR TWO TRIP DETECTION LOGIC OF OBD-II

One Trip Detection Logic

If a malfunction is sensed during the first test drive, the MIL will illuminate and the malfunction will be stored in the ECM memory as a DTC. The TCM is not provided with such a memory function.

Two Trip Detection Logic

When a malfunction is sensed during the first test drive, it is stored in the ECM memory as a 1st trip DTC (diagnostic trouble code) or 1st trip freeze frame data. At this point, the MIL will not illuminate. — 1st trip

If the same malfunction as that experienced during the first test drive is sensed during the second test drive, the MIL will illuminate. — 2nd trip

The "trip" in the "One or Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation.

OBD-II DIAGNOSTIC TROUBLE (DTC)

How to Read DTC and 1st Trip DTC

DTC and 1st trip DTC can be read by the following methods.

( with **CONSULT-III** or ( **GST**) CONSULT-III or GST (Generic Scan Tool) Examples: P0705, P0720 etc.

These DTC are prescribed by SAE J2012.

(CONSULT-III also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of the diagnostic trouble code indicates that the indicated circuit has a malfunction. However, in case of the Mode II and GST, they do not indicate whether the malfunction is still occurring or occurred in the past and returned to normal.**
CONSULT-III can identify them as shown below, therefore, CONSULT-III (if available) is recommended.

Freeze Frame Data and 1st Trip Freeze Frame Data

The ECM has a memory function, which stores the driving condition such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed and vehicle speed at the moment the ECM detects a malfunction.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data, and the data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-III or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-III screen, not on the GST. For detail, refer to [EC-113, "CONSULT-III Function"](#).

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items	
1	Freeze frame data	Misfire — DTC: P0300 - P0306 Fuel Injection System Function — DTC: P0171, P0172, P0174, P0175
2		Except the above items (Includes A/T related items)
3	1st trip freeze frame data	

Both 1st trip freeze frame data and freeze frame data (along with the DTC) are cleared when the ECM memory is erased.

How to Ease DTC

The diagnostic trouble code can be erased by CONSULT-III, GST or ECM DIAGNOSTIC TEST MODE as described following.

- **If the battery cable is disconnected from the terminal, the DTC will be lost within 24 hours.**
- **When you erase the DTC, using CONSULT-III or GST is easier and quicker than switching the mode selector on the ECM.**

The following emission-related diagnostic information is cleared from the ECM memory when erasing DTC related to OBD-II. For details, refer to [EC-521, "DTC Index"](#).

- **Diagnostic trouble codes (DTC)**
- **1st trip diagnostic trouble codes (1st trip DTC)**
- **Freeze frame data**
- **1st trip freeze frame data**
- **System readiness test (SRT) codes**
- **Test values**

How to Erase DTC (With CONSULT-III)

1. The emission related diagnostic information in the TCM and ECM can be erased by selecting "ALL Erase" in the "Description" of "FINAL CHECK" mode with CONSULT-III.

How to Erase DTC (With GST)

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
2. Perform [TM-113, "Diagnosis Description"](#).
3. Perform "How to Erase DTC (WITH GST)". Refer to [EC-101, "Diagnosis Description"](#).

How to Erase DTC (No tools)

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
2. Perform [TM-113, "Diagnosis Description"](#).
3. Perform "How to Erase DTC (No tools)". Refer to [EC-101, "Diagnosis Description"](#).

OBD-II SELF-DIAGNOSTIC PROCEDURE (WITH GST)

Refer to [EC-122, "Diagnosis Tool Function"](#).

OBD-II SELF-DIAGNOSTIC PROCEDURE (NO TOOLS)

Refer to "MALFUNCTION INDICATOR LAMP (MIL)". Refer to [EC-101, "Diagnosis Description"](#).

MALFUNCTION INDICATOR LAMP (MIL)


Description

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

- The MIL is located on the combination meters.
1. The MIL will light up when the ignition switch is turned ON without the engine running. This is a bulb check. If the MIL does not light up, refer to [EC-471. "Component Function Check"](#).
 2. When the engine is started, the MIL should go off. If the MIL remains on, the on board diagnostic system has detected engine system malfunction.

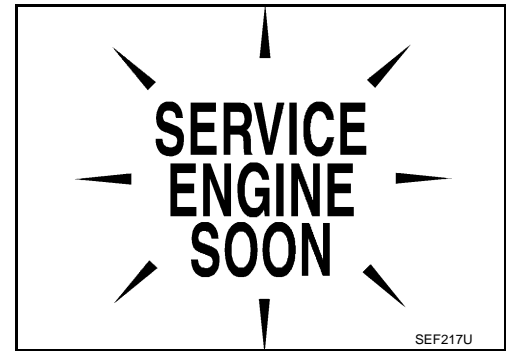

DIAGNOSIS SYSTEM (TCM)

Diagnosis Description

INFOID:000000000957009

 TCM SELF-DIAGNOSTIC PROCEDURE (NO TOOLS)

Description

As a method for locating the suspect circuit, when the self-diagnostics start signal is input, the memory for the malfunction location is output and the A/T CHECK indicator lamp flashes to display the corresponding DTC.

Operation Procedure

1. CHECK A/T CHECK INDICATOR LAMP

1. Start the engine with selector lever in "P" position. Warm engine to normal operating temperature.
2. Turn ignition switch ON and OFF at least twice, then leave it in the OFF position.
3. Wait 10 seconds.
4. Turn ignition switch ON. (Do not start engine.)

Does A/T CHECK indicator lamp come on for about 2 seconds?

YES >> GO TO 2.

NO >> Go to [TM-191, "Symptom Table"](#).

2. JUDGMENT PROCEDURE

1. Turn ignition switch OFF.
2. Keep pressing shift lock release button.
3. Move selector lever from "P" to "D" position.
4. Release accelerator pedal. (Set the closed throttle position signal ON.)
5. Depress brake pedal. (Stop lamp switch signal ON.)
6. Turn ignition switch ON. (Do not start engine.)
7. Wait 3 seconds.
8. Move the selector lever to the manual shift gate side. (Manual mode signal ON.)
9. Release brake pedal. (Stop lamp switch signal ON.)
10. Move the selector lever to "D" position. (Manual mode signal OFF.)
11. Depress brake pedal. (Stop lamp switch signal ON.)
12. Release brake pedal. (Stop lamp switch signal OFF.)
13. Depress accelerator pedal fully and release it.

>> GO TO 3.

3. CHECK SELF-DIAGNOSIS CODE

Check A/T CHECK indicator lamp. Refer to "Judgment Self-diagnosis Code".
If the system does not go into self-diagnosis, refer to [TM-191, "Symptom Table"](#).

>> DIAGNOSIS END

Judgment Self-diagnosis Cord


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

DIAGNOSIS SYSTEM (TCM)

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

If there is a malfunction, the lamp lights up for the time corresponding to the suspect circuit.

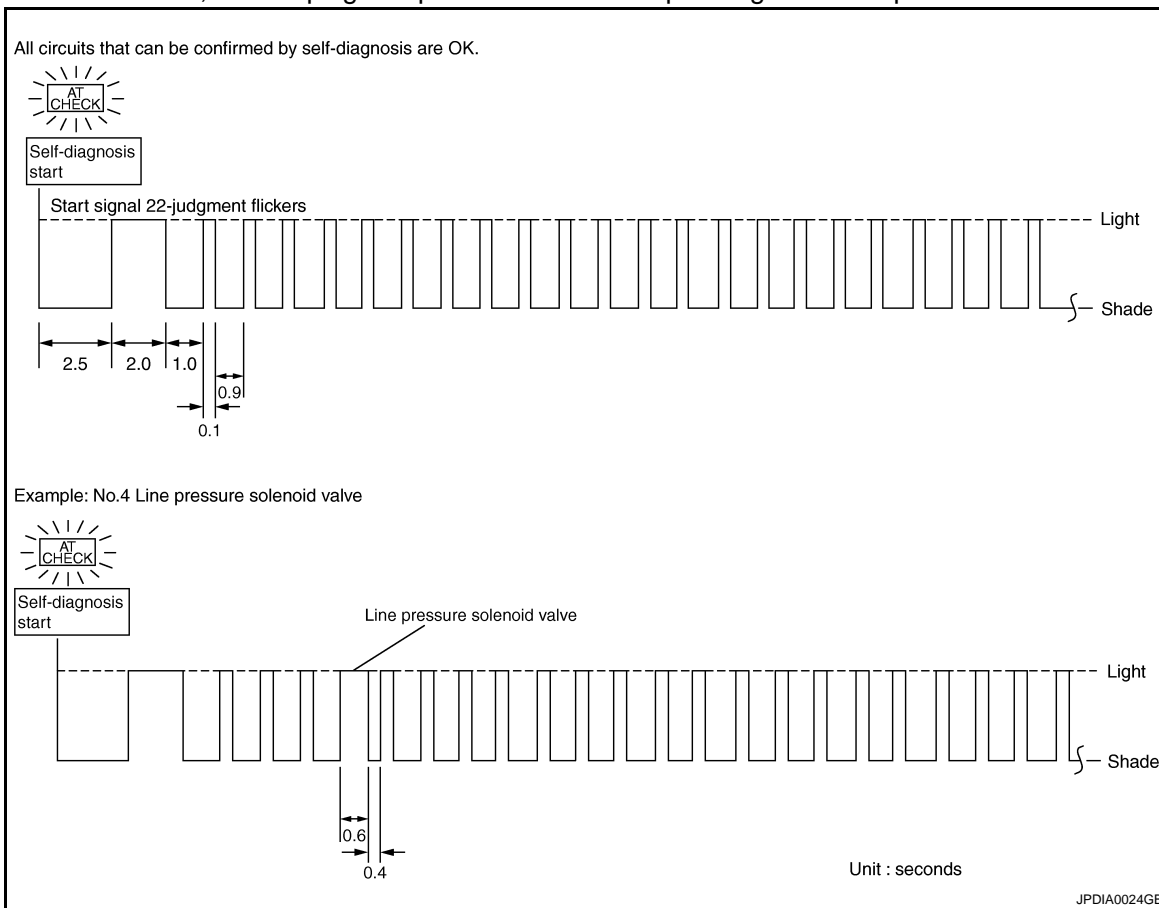

No.	Malfunctioning item	No.	Malfunctioning item
1	Revolution sensor TM-128	12	A/T interlock TM-151
2	Direct clutch solenoid valve TM-157	13	A/T 1st engine braking TM-152
3	Torque converter clutch solenoid valve TM-143 , TM-144	14	Start signal TM-121
4	Line pressure solenoid valve TM-145	15	Accelerator pedal position sensor TM-146
5	Input clutch solenoid valve TM-153	16	Engine speed signal TM-131
6	Front brake solenoid valve TM-155	17	CAN communication line TM-120
7	Low coast brake solenoid valve TM-161 , TM-162	18	1st gear function TM-133
8	High and low reverse clutch solenoid valve TM-159	19	2nd gear function TM-135
9	PNP switch TM-124	20	3rd gear function TM-137
10	A/T fluid temperature sensor TM-147	21	4th gear function TM-139
11	Turbine revolution sensor TM-126	22	5th gear function TM-141

Erase Self-diagnosis

In order to make it easier to find the cause of hard-to-duplicate malfunctions, malfunction information is stored into the control unit as necessary during use by the user. This memory is not erased no matter how many times the ignition switch is turned ON and OFF.

However, this information is erased by turning ignition switch OFF after performing self-diagnostics or by erasing the memory using the CONSULT-III.

CONSULT-III Function (TRANSMISSION)

INFOID:000000000957010

CONSULT-III APPLICATION ITEMS

DIAGNOSIS SYSTEM (TCM)

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT-III.
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.
Data monitor	Input/Output data in the ECU can be read.
CAN diagnostic support monitor	The results of transmit/receive diagnosis of CAN communication can be read.
Function test	Performed by CONSULT-III instead of a technician to determine whether each system is "OK" or "NG".
DTC work support	The operating condition to confirm Diagnostic Trouble Codes can be selected.
ECU part number	TCM part number can be read.

SELF-DIAGNOSTIC RESULTS

Display Items List

X: Applicable, —: Not applicable

Items (CONSULT-III screen terms)	TCM self-diagnosis	OBD-II (DTC)	Reference page
	"A/T" with CONSULT-III	MIL*1, "ENGINE" with CONSULT-III or GST	
CAN COMM CIRCUIT	U1000	U1000	TM-120
STARTER RELAY/CIRC	P0615	—	TM-121
TCM	P0700	P0700	TM-123
PNP SW/CIRC	P0705	P0705	TM-124
TURBINE REV S/CIRC	P0717	P0717	TM-126
VEH SPD SEN/CIR AT	P0720	P0720	TM-128
ENGINE SPEED SIG	P0725	P0725	TM-131
AT 1ST GR FNCTN	P0731	P0731	TM-133
AT 2ND GR FNCTN	P0732	P0732	TM-135
AT 3RD GR FNCTN	P0733	P0733	TM-137
AT 4TH GR FNCTN	P0734	P0734	TM-139
AT 5TH GR FNCTN	P0735	P0735	TM-141
TCC SOLENOID/CIRC	P0740	P0740	TM-143
A/T TCC S/V FNCTN	P0744	P0744*2	TM-144
L/PRESS SOL/CIRC	P0745	P0745	TM-145
TP SEN/CIRC A/T	P1705	—	TM-146
ATF TEMP SEN/CIRC	P1710	P0710	TM-147
VEH SPD SE/CIR-MTR	P1721	—	TM-150
A/T INTERLOCK	P1730	P1730	TM-151
A/T 1ST E/BRAKING	P1731	—	TM-152
I/C SOLENOID/CIRC	P1752	P1752	TM-153
FR/B SOLENOID/CIRC	P1757	P1757	TM-155
D/C SOLENOID/CIRC	P1762	P1762	TM-157
HLR/C SOL/CIRC	P1767	P1767	TM-159
LC/B SOLENOID/CIRC	P1772	P1772	TM-161
LC/B SOLENOID FNCT	P1774	P1774	TM-162
MANU MODE SW/CIRC	P1815	—	TM-164
NO DTC IS DETECTED FURTHER TESTING MAY BE REQUIRED	X	X	—

DIAGNOSIS SYSTEM (TCM)

[5AT: RE5R05A]

< FUNCTION DIAGNOSIS >

- *1: Refer to [TM-110, "Diagnosis Description"](#).
- *2: These malfunctions cannot be displayed MIL if another malfunction is assigned to MIL.

DATA MONITOR

Display Items List

X: Standard, —: Not applicable, ▼: Option

Monitored item (Unit)	Monitor Item Selection			Remarks
	TCM IN-PUT SIG-NALS	MAIN SIG-NALS	SELEC-TION FROM MENU	
VHCL/S SE-A/T (km/h)	X	X	▼	Revolution sensor
VHCL/S SE-MTR (km/h)	X	—	▼	—
ACCELE POSI (0.0/8)	X	—	▼	Accelerator pedal position signal
THROTTLE POSI (0.0/8)	X	X	▼	Degree of opening for accelerator recognized by the TCM. For fail-safe operation, the specific value used for control is displayed.
CLSD THL POS (ON/OFF)	X	—	▼	Signal input with CAN communications.
W/O THL POS (ON/OFF)	X	—	▼	
BRAKE SW (ON/OFF)	X	—	▼	Stop lamp switch
GEAR	—	X	▼	Gear position recognized by the TCM updated after gear-shifting.
ENGINE SPEED (rpm)	X	X	▼	—
TURBINE REV (rpm)	X	X	▼	—
OUTPUT REV (rpm)	X	X	▼	—
GEAR RATIO	—	X	▼	—
TC SLIP SPEED (rpm)	—	X	▼	Difference between engine speed and torque converter input shaft speed.
F SUN GR REV (rpm)	—	—	▼	—
F CARR GR REV (rpm)	—	—	▼	—
ATF TEMP SE 1 (V)	X	—	▼	—
ATF TEMP SE 2 (V)	X	—	▼	—
ATF TEMP 1 (°C)	—	X	▼	—
ATF TEMP 2 (°C)	—	X	▼	—
BATTERY VOLT (V)	X	—	▼	—
ATF PRES SW 1 (ON/OFF)	X	X	▼	—
ATF PRES SW 2 (ON/OFF)	X	X	▼	(for LC/B solenoid)
ATF PRES SW 3 (ON/OFF)	X	X	▼	—
ATF PRES SW 5 (ON/OFF)	X	X	▼	—
ATF PRES SW 6 (ON/OFF)	X	X	▼	—
PNP SW 1 (ON/OFF)	X	—	▼	—
PNP SW 2 (ON/OFF)	X	—	▼	—
PNP SW 3 (ON/OFF)	X	—	▼	—

DIAGNOSIS SYSTEM (TCM)

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

Monitored item (Unit)	Monitor Item Selection			Remarks
	TCM IN- PUT SIG- NALS	MAIN SIG- NALS	SELEC- TION FROM MENU	
PNP SW 4 (ON/OFF)	X	—	▼	—
1 POSITION SW (ON/OFF)	X	—	▼	—
SLCT LVR POSI	—	X	▼	Selector lever position is recognized by the TCM. For fail-safe operation, the specific value used for control is displayed.
OD CONT SW (ON/OFF)	X	—	▼	Not mounted but displayed.
POWERSHIFT SW (ON/OFF)	X	—	▼	
HOLD SW (ON/OFF)	X	—	▼	
DS RANGE (ON/OFF)	X	—	▼	—
MANU MODE SW (ON/OFF)	X	—	▼	—
NON M-MODE SW (ON/OFF)	X	—	▼	—
UP SW LEVER (ON/OFF)	X	—	▼	—
DOWN SW LEVER (ON/OFF)	X	—	▼	—
SFT UP ST SW (ON/OFF)	—	—	▼	—
SFT DWN ST SW (ON/OFF)	—	—	▼	—
ASCD-OD CUT (ON/OFF)	—	—	▼	—
ASCD-CRUISE (ON/OFF)	—	—	▼	—
ABS SIGNAL (ON/OFF)	—	—	▼	—
ACC OD CUT (ON/OFF)	—	—	▼	Intelligent cruise control (ICC) system
ACC SIGNAL (ON/OFF)	—	—	▼	
TCS GR/P KEEP (ON/OFF)	—	—	▼	—
TCS SIGNAL 2 (ON/OFF)	—	—	▼	—
TCS SIGNAL 1 (ON/OFF)	—	—	▼	—
TCC SOLENOID (A)	—	X	▼	—
LINE PRES SOL (A)	—	X	▼	—
I/C SOLENOID (A)	—	X	▼	—
FR/B SOLENOID (A)	—	X	▼	—
D/C SOLENOID (A)	—	X	▼	—
HLR/C SOL (A)	—	X	▼	—
ON OFF SOL (ON/OFF)	—	—	▼	LC/B solenoid
TCC SOL MON (A)	—	—	▼	—
L/P SOL MON (A)	—	—	▼	—
I/C SL MON (A)	—	—	▼	—
FR/B SOL MON (A)	—	—	▼	—
D/C SOL MON (A)	—	—	▼	—
HLR/C SOL MON (A)	—	—	▼	—

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

DIAGNOSIS SYSTEM (TCM)

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

Monitored item (Unit)	Monitor Item Selection			Remarks
	TCM INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
ON OFF SOL MON (ON/OFF)	—	—	▼	LC/B solenoid
P POSI IND (ON/OFF)	—	—	▼	—
R POSI IND (ON/OFF)	—	—	▼	—
N POSI IND (ON/OFF)	—	—	▼	—
D POSI IND (ON/OFF)	—	—	▼	—
4TH POSI IND (ON/OFF)	—	—	▼	—
3RD POSI IND (ON/OFF)	—	—	▼	—
2ND POSI IND (ON/OFF)	—	—	▼	—
1ST POSI IND (ON/OFF)	—	—	▼	—
MANU MODE IND (ON/OFF)	—	—	▼	—
POWER M LAMP (ON/OFF)	—	—	▼	—
F-SAFE IND/L (ON/OFF)	—	—	▼	—
ATF WARN LAMP (ON/OFF)	—	—	▼	Not mounted but displayed.
BACK-UP LAMP (ON/OFF)	—	—	▼	—
STARTER RELAY (ON/OFF)	—	—	▼	—
PNP SW3 MON (ON/OFF)	—	—	▼	—
C/V CLB ID1	—	—	▼	—
C/V CLB ID2	—	—	▼	—
C/V CLB ID3	—	—	▼	—
UNIT CLB ID1	—	—	▼	—
UNIT CLB ID2	—	—	▼	—
UNIT CLB ID3	—	—	▼	—
TRGT GR RATIO	—	—	▼	—
TRGT PRES TCC (kPa)	—	—	▼	—
TRGT PRES L/P (kPa)	—	—	▼	—
TRGT PRES I/C (kPa)	—	—	▼	—
TRGT PRE FR/B (kPa)	—	—	▼	—
TRGT PRES D/C (kPa)	—	—	▼	—
TRG PRE HLR/C (kPa)	—	—	▼	—
SHIFT PATTERN	—	—	▼	—
DRV CST JUDGE	—	—	▼	—
START RLY MON	—	—	▼	—
NEXT GR POSI	—	—	▼	—
SHIFT MODE	—	—	▼	—
MANU GR POSI	—	—	▼	—

DIAGNOSIS SYSTEM (TCM)

< FUNCTION DIAGNOSIS >

[5AT: RE5R05A]

Monitored item (Unit)	Monitor Item Selection			Remarks
	TCM IN-PUT SIG-NALS	MAIN SIG-NALS	SELEC-TION FROM MENU	
VEHICLE SPEED (km/h)	—	X	▼	Vehicle speed recognized by the TCM.
Voltage (V)	—	—	▼	Displays the value measured by the voltage probe.
Frequency (Hz)	—	—	▼	The value measured by the pulse probe is displayed.
DUTY-HI (high) (%)	—	—	▼	
DUTY-LOW (low) (%)	—	—	▼	
PLS WIDTH-HI (ms)	—	—	▼	
PLS WIDTH-LOW (ms)	—	—	▼	

DTC WORK SUPPORT

Display Items List

DTC work support item	Description	Check item
1ST GR FUNCTN P0731	Following items for "1st gear function" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	<ul style="list-style-type: none"> • Input clutch solenoid valve • Front brake solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Each clutch • Hydraulic control circuit
2ND GR FUNCTN P0732	Following items for "2nd gear function" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	
3RD GR FUNCTN P0733	Following items for "3rd gear function" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	
4TH GR FUNCTN P0734	Following items for "4th gear function" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	
5TH GR FUNCTN P0735	Following items for "5th gear function" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	

COMPONENT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000000957011

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000000957012

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
U1000*	CAN COMM CIRCUIT	17th	When TCM is not transmitting or receiving CAN communication signal for 2 seconds or more.	Harness or connectors (CAN communication line is open or shorted.)

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

NOTE:

If “DTC CONFIRMATION PROCEDURE” has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Run engine for at least 2 consecutive seconds at idle speed.
3. Perform “SELF-DIAG RESULTS” mode for “TRANSMISSION”. Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

With GST

Follow the procedure “With CONSULT-III”

Is “U1000 CAN COMM CIRCUIT” detected?

- YES >> Go to [TM-120, "Diagnosis Procedure"](#).
- NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957013

1. CHECK CAN COMMUNICATION CIRCUIT

With CONSULT-III

1. Start the engine.
2. Perform “SELF-DIAG RESULTS” mode for “TRANSMISSION”.

Is any malfunction of the “U1000 CAN COMM CIRCUIT” indicated?

- YES >> Go to LAN section. Refer to [LAN-18, "Trouble Diagnosis Flow Chart"](#).
- NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

P0615 START SIGNAL

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0615 START SIGNAL

Description

INFOID:000000000957014

TCM prohibits cranking other than at "P" or "N" position.

DTC Logic

INFOID:000000000957015

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is de- tected when...	Possible cause
P0615*	STARTER TELAY/CIRC	14th	If this signal is ON other than in "P" or "N" position, this is judged to be a malfunction. (And if it is OFF in "P" or "N" position, this too is judged to be a malfunction.)	<ul style="list-style-type: none"> • Harness or connectors (Starter relay and TCM circuit is open or shorted.) • Starter relay circuit

*: This is not an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".

STARTER RELAY

3. Drive vehicle for at least 2 consecutive seconds.

Is "P0615 STARTER RELAY/CIRC" detected?

- YES >> Go to [TM-121, "Diagnosis Procedure"](#).
NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957016

1. CHECK HARNESS BETWEEN A/T ASSEMBLY HARNESS CONNECTOR AND IPDM E/R CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect A/T assembly harness connector and IPDM E/R connector.
3. Check the continuity between A/T assembly harness connector and IPDM E/R connector.

A/T assembly harness connector		IPDM E/R connector		Continuity
Connector	Terminal	Connector	Terminal	
F51	9	E5	30	Existed

4. If OK, check harness for short to ground and short to power.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair open circuit or short to ground or short to power in harness or connectors.

2. CHECK TERMINAL CORD ASSEMBLY

1. Remove control valve with TCM. Refer to [TM-240, "Exploded View"](#).
2. Disconnect A/T assembly harness connector and TCM connector.

P0615 START SIGNAL

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

3. Check continuity between A/T assembly harness connector and TCM connector.

A/T assembly harness connector		TCM connector		Continuity
Connector	Terminal	Connector	Terminal	
F51	9	F151	8	Existed

4. If OK, check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

3.CHECK STARTER RELAY

Check starter relay. Refer to [SEC-68, "Description"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

NO >> Repair or replace damaged parts.

P0700 TCM

Description

INFOID:000000000957017

The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.

DTC Logic

INFOID:000000000957018

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	Diagnostic item is detected when...	Possible cause
P0700*	TCM	TCM is malfunctioning.	TCM

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

 With CONSULT-III

1. Start the engine.
2. Run engine for at least 2 consecutive seconds at idle speed.
3. Perform "SELF-DIAG RESULTS" mode for "TRANSMISSION". Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

 With GST

Follow the procedure "With CONSULT-III".

Is "P0700 TCM" detected?

- YES >> Go to [TM-123, "Diagnosis Procedure"](#).
- NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957019

1. CHECK DTC

 With CONSULT-III

1. Turn ignition switch ON.
2. Select "SELF-DIAG RESULTS" mode for "TRANSMISSION".
3. Touch "ERASE".
4. Turn ignition switch OFF and wait for at least 10 seconds.
5. Check the DTC again. Refer to [TM-123, "DTC Logic"](#)

Is the "P0700 TCM" detected again?

- YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).
- NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

P0705 PARK/NEUTRAL POSITION SWITCH

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0705 PARK/NEUTRAL POSITION SWITCH

Description

INFOID:000000000957020

- The park/neutral position (PNP) switch includes the transmission range switch.
- The transmission range switch detects the selector lever position and transmits a signal to the TCM.

DTC Logic

INFOID:000000000957021

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is de- tected when...	Possible cause
P0705*	PNP SW/CIRC	9th	<ul style="list-style-type: none">• PNP switch 1 – 4 signals input with impossible pattern.• P position is detected from N position without any other position being detected in between.	<ul style="list-style-type: none">• Harness or connectors [Park/neutral position (PNP) switches 1, 2, 3, 4 and TCM circuit is open or shorted.]• Park/neutral position (PNP) switches 1, 2, 3 and 4

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC CONFIRMATION PROCEDURE” has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select “DATA MONITOR”.
3. Drive vehicle and maintain the following conditions for least 2 consecutive seconds.

ACCELE POSI : More than 1.0/8

With GST

Follow the procedure “With CONSULT-III”.

Is “P0705 PNP SW/CIRC” detected?

- YES >> Go to [TM-124, "Diagnosis Procedure"](#).
- NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957022

1. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair or replace damaged parts.

2. CHECK PARK/NEUTRAL POSITION SWITCH HARNESS CONNECTOR AND TCM HARNESS CONNECTOR

1. Remove control valve with TCM. Refer to [TM-240, "Exploded View"](#).
2. Disconnect park/neutral position switch connector and TCM connector.
3. Check continuity between park/neutral position switch connector and TCM connector.

P0705 PARK/NEUTRAL POSITION SWITCH

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

Park/neutral position switch connector		TCM connector		Continuity
Connector	Terminal	Connector	Terminal	
F154	1	F152	13	Existed
	2		11	Existed
	3		12	Existed
	5		14	Existed

4. If OK, check harness for short to ground and short to power.

Is the inspection result normal?

- YES >> Replace the control valve with TCM. Refer to [TM-240. "Exploded View"](#).
- NO >> Replace open circuit or short to ground and short to power in harness or connectors.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

P0717 TURBINE REVOLUTION SENSOR

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0717 TURBINE REVOLUTION SENSOR

Description

INFOID:000000000957023

The turbine revolution sensor detects input shaft rpm (revolutions per minute). It is located on the input side of the A/T. Monitors revolution of sensor 1 and sensor 2 for non-standard conditions.

DTC Logic

INFOID:000000000957024

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is de- tected when...	Possible cause
P0717*	TURBINE REV S/CIRC	11th	<ul style="list-style-type: none">• TCM does not receive the proper voltage signal from the sensor.• TCM detects an irregularity only at position of 4th gear for turbine revolution sensor 2.	<ul style="list-style-type: none">• Harness or connectors (Sensor circuit is open or shorted.)• Turbine revolution sensor 1 and/or 2

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

VHCL/S SE-A/T : 40 km/h (25 MPH) or more

ACCELE POSI : More than 0.5/8

ENGINE SPEED : 1,500 rpm or more

SLCT LVR POSI : "D" position

GEAR (Turbine revo-
lution sensor 1) : "4" or "5" position

GEAR (Turbine revo-
lution sensor 2) : All positions

Driving location : Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

With GST

Follow the procedure "With CONSULT-III".

Is "P0717 TURBINE REV S/CIRC" detected?

YES >> Go to [TM-126, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957025

1. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

P0717 TURBINE REVOLUTION SENSOR

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

- YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).
- NO >> Repair or replace damaged parts.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

Description

INFOID:000000000957026

The revolution sensor detects the revolution of the parking gear and emits a pulse signal. The pulse signal is sent to the TCM which converts it into vehicle speed.

DTC Logic

INFOID:000000000957027

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is de- tected when...	Possible cause
P0720*	VEH SPD SEN/CIR AT	1st	<ul style="list-style-type: none">Signal from vehicle speed sensor A/T (revolution sensor) not input due to cut line or the like.Unexpected signal input during running.After ignition switch is turned ON, unexpected signal input from vehicle speed sensor MTR before the vehicle starts moving.	<ul style="list-style-type: none">Harness or connectors (Sensor circuit is open or shorted.)Revolution sensorVehicle speed sensor MTR

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK REVOLUTION SENSOR AND VEHICLE SPEED SENSOR MTR

④ With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and check for an increase of "VHCL/S SE-A/T" value in response to "VHCL/S SE-MTR" value.

VHCL/S SE-A/T : Approximately matches the speed meter reading.

VHCL/S SE-MTR : Approximately matches the speed meter reading.

Are "VHCL/S SE-A/T" and "VHCL/S SE-MTR" values correct?

YES >> GO TO 2.

NO >> Go to [TM-129, "Diagnosis Procedure"](#).

2. CHECK DTC DETECTION 1

④ With CONSULT-III

1. Select "DATA MONITOR".
2. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

VHCL/S SE-A/T : 30 km/h (19 MPH) or more

ACCELE POSI : More than 1.0/8

P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

SLCT LVR POSI : "D" position

Drive location : Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

With GST

Follow the procedure "With CONSULT-III".

Is "P0720 VEH SPD SEN/CIR AT" detected?

YES >> Go to [TM-129, "Diagnosis Procedure"](#).

NO >> GO TO 3.

3.CHECK DTC DETECTION 2

With CONSULT-III

1. Select "DATA MONITOR".

2. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

ACCELE POSI : More than 1.0/8

ENGINE SPEED : 3,500 rpm or more

SLCT LVR POSI : "D" position

Drive location : Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

With GST

Follow the procedure "With CONSULT-III".

Is "P0720 VEH SPD SEN/CIR AT" detected?

YES >> Go to [TM-129, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957028

1.CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2.CHECK SUB-HARNESS

1. Remove control valve with TCM. Refer to [TM-240, "Exploded View"](#).

2. Disconnect park/neutral position switch connector and TCM connector.

3. Check continuity between park/neutral position switch connector and TCM connector.

Park/neutral position switch connector		TCM connector		Continuity
Connector	Terminal	Connector	Terminal	
F154	8	F152	20	Existed
	9		17	Existed
	10		16	Existed

4. If OK, check harness for short to ground and short to power.

5. Reinstall any part removed.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace open circuit or short to ground and short to power in harness or connectors.

3.REPLACE THE REVOLUTION SENSOR AND CHECK DTC

1. Replace the revolution sensor. Refer to [TM-262, "2WD : Exploded View"](#) (2WD) or [TM-281, "Exploded View"](#), [TM-291, "Disassembly"](#) (AWD).

2. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-128, "DTC Logic"](#).

Is the inspection result normal?

P0720 VEHICLE SPEED SENSOR A/T (REVOLUTION SENSOR)

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

YES >> INSPECTION END

NO >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

P0725 ENGINE SPEED SIGNAL

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0725 ENGINE SPEED SIGNAL

Description

INFOID:000000000957029

The engine speed signal is sent from the ECM to the TCM with CAN communication line.

DTC Logic

INFOID:000000000957030

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is de- tected when...	Possible cause
P0725*	ENGINE SPEED SIG	16th	TCM does not receive the CAN communication signal from the ECM.	Harness or connectors (ECM to TCM circuit is open or shorted.)

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and maintain the following conditions for at least 10 consecutive seconds.

VHCL/S SE-A/T : 10 km/h (6 MPH) or more

ACCELE POSI : More than 1.0/8

SLCT LVR POSI : "D" position:

With GST

Follow the procedure "With CONSULT-III".

Is "P0725 ENGINE SPEED SIG" detected?

YES >> Go to [TM-131, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957031

1. CHECK DTC OF ECM

With CONSULT-III

1. Turn ignition switch ON.
2. Perform "SELF-DIAG RESULTS" mode for "ENGINE". Refer to [EC-113, "CONSULT-III Function"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check DTC detected item. Refer to [EC-113, "CONSULT-III Function"](#).

2. CHECK DTC OF TCM

With CONSULT-III

1. Perform "SELF-DIAG RESULTS" mode for "TRANSMISSION". Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

Is the inspection result normal?

YES >> GO TO 3.

P0725 ENGINE SPEED SIGNAL

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

NO >> Check DTC detected item. Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

3. CHECK THE IGNITION SIGNAL CIRCUIT

1. Start the engine.
2. Select "DATA MONITOR".
3. While monitoring "ENGINE SPEED", check for engine speed change corresponding to "ACCELE POSI".

Item name	Condition	Value
ENGINE SPEED	Engine running	Closely matches the tachometer reading.
ACCELE POSI	Released accelerator pedal.	0.0/8
	Fully depressed accelerator pedal	8.0/8

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check ignition signal circuit. Refer to [EC-466, "Description"](#).

4. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

NO >> Repair or replace damaged parts.

P0731 A/T 1ST GEAR FUNCTION

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0731 A/T 1ST GEAR FUNCTION

Description

INFOID:000000000957032

This malfunction is detected when the A/T does not shift into 1st gear position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

DTC Logic

INFOID:000000000957033

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
P0731*	AT 1ST GR FNCTN	18th	TCM detects any inconsistency in the actual gear ratio.	<ul style="list-style-type: none"> • Harness or connectors (Solenoid circuits are open or shorted.) • Input clutch solenoid valve • Front brake solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Each clutch • Hydraulic control circuit

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK ATF TEMPERATURE

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Check ATF temperature is in the following range.

ATF TEMP 1 : 20°C – 140°C

Is ATF temperature within specified range?

YES >> GO TO 2.

NO >> Drive vehicle to warm ATF or stop engine to cool ATF.

2. CHECK SYMPTOM 1

With CONSULT-III

1. Select "1ST GR FNCTN P0731" of "DTC WORK SUPPORT".
2. Drive vehicle and maintain the following conditions.

VEHICLE SPEED : 10 km/h (6 MPH) or more

ACCELE POSI : 0.6/8 or more

ENGINE SPEED : TURBINE REV – 50 rpm or more

TURBINE REV : 300 rpm or more

P0731 A/T 1ST GEAR FUNCTION

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

GEAR : "1" position
Manual mode : ON

3. Keep the current driving status for at least 5 consecutive seconds if CONSULT-III screen changes from "OUT OF CONDITION" to "TESTING".

CAUTION:

If "TESTING" does not appear on CONSULT-III for a long time, select "SELF-DIAG RESULTS". In case a 1st trip DTC other than P0731 is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".

Is "STOP VEHICLE" or "COMPLETED RESULT NG" displayed?

"STOP VEHICLE">>GO TO 3.

"COMPLETED RESULT NG">>Go to [TM-134, "Diagnosis Procedure"](#).

3.CHECK SYMPTOM 2

With CONSULT-III

1. Stop vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1st to 5th gear and check shift timing and shift shock.

Is the inspection result normal?

YES >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> Go to [TM-134, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000000957034

1.CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2.REPLACE CONTROL VALVE WITH TCM

1. Replace control valve with TCM. Refer to [TM-240, "Exploded View"](#).
2. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-133, "DTC Logic"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Confirm malfunction phenomena by "ROAD TEST" to repair malfunctioning part. Refer to [TM-226, "Description"](#).

P0732 A/T 2ND GEAR FUNCTION

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0732 A/T 2ND GEAR FUNCTION

Description

INFOID:000000000957035

This malfunction is detected when the A/T does not shift into 2nd gear position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

DTC Logic

INFOID:000000000957036

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
P0732*	AT 2ND GR FNCTN	19th	TCM detects any inconsistency in the actual gear ratio.	<ul style="list-style-type: none"> • Harness or connectors (Solenoid circuits are open or shorted.) • Input clutch solenoid valve • Front brake solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Each clutch • Hydraulic control circuit

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK ATF TEMPERATURE

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Check ATF temperature is in the following range.

ATF TEMP 1 : 20°C – 140°C

Is ATF temperature within specified range?

YES >> GO TO 2.

NO >> Drive vehicle to warm ATF or stop engine to cool ATF.

2. CHECK SYMPTOM 1

With CONSULT-III

1. Select "2ND GR FNCTN P0732" of "DTC WORK SUPPORT".
2. Drive vehicle and maintain the following conditions.

VEHICLE SPEED : 10 km/h (6 MPH) or more

ACCELE POSI : 0.6/8 or more

ENGINE SPEED : TURBINE REV – 50 rpm or more

TURBINE REV : 300 rpm or more

P0732 A/T 2ND GEAR FUNCTION

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

GEAR : "2" position
Manual mode : ON

3. Keep the current driving status for at least 5 consecutive seconds if CONSULT-III screen changes from "OUT OF CONDITION" to "TESTING".

CAUTION:

If "TESTING" does not appear on CONSULT-III for a long time, select "SELF-DIAG RESULTS". In case a 1st trip DTC other than P0732 is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".

Is "STOP VEHICLE" or "COMPLETED RESULT NG" displayed?

"STOP VEHICLE">>GO TO 3.

"COMPLETED RESULT NG">>Go to [TM-136, "Diagnosis Procedure"](#).

3.CHECK SYMPTOM 2

With CONSULT-III

1. Stop vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1st to 5th gear and check shift timing and shift shock.

Is the inspection result normal?

YES >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> Go to [TM-136, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000000957037

1.CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2.REPLACE CONTROL VALVE WITH TCM

1. Replace control valve with TCM. Refer to [TM-240, "Exploded View"](#).
2. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-135, "DTC Logic"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Confirm malfunction phenomena by "ROAD TEST" to repair malfunctioning part. Refer to [TM-226, "Description"](#).

P0733 A/T 3RD GEAR FUNCTION

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0733 A/T 3RD GEAR FUNCTION

Description

INFOID:000000000957038

This malfunction is detected when the A/T does not shift into 3rd gear position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

DTC Logic

INFOID:000000000957039

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
P0733*	AT 3RD GR FNCTN	20th	TCM detects any inconsistency in the actual gear ratio.	<ul style="list-style-type: none"> • Harness or connectors (Solenoid circuits are open or shorted.) • Input clutch solenoid valve • Front brake solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Each clutch • Hydraulic control circuit

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC CONFIRMATION PROCEDURE” has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK ATF TEMPERATURE

With CONSULT-III

1. Start the engine.
2. Select “DATA MONITOR”.
3. Check ATF temperature is in the following range.

ATF TEMP 1 : 20°C – 140°C

Is ATF temperature within specified range?

YES >> GO TO 2.

NO >> Drive vehicle to warm ATF or stop engine to cool ATF.

2. CHECK SYMPTOM 1

With CONSULT-III

1. Select “3RD GR FNCTN P0733” of “DTC WORK SUPPORT”.
2. Drive vehicle and maintain the following conditions.

VEHICLE SPEED : 10 km/h (6 MPH) or more

ACCELE POSI : 0.6/8 or more

ENGINE SPEED : TURBINE REV – 50 rpm or more

TURBINE REV : 300 rpm or more

P0733 A/T 3RD GEAR FUNCTION

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

GEAR : "3" position
Manual mode : ON

3. Keep the current driving status for at least 5 consecutive seconds if CONSULT-III screen changes from "OUT OF CONDITION" to "TESTING".

CAUTION:

If "TESTING" does not appear on CONSULT-III for a long time, select "SELF-DIAG RESULTS". In case a 1st trip DTC other than P0733 is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".

Is "STOP VEHICLE" or "COMPLETED RESULT NG" displayed?

"STOP VEHICLE">>GO TO 3.

"COMPLETED RESULT NG">>Go to [TM-138, "Diagnosis Procedure"](#).

3.CHECK SYMPTOM 2

With CONSULT-III

1. Stop vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1st to 5th gear and check shift timing and shift shock.

Is the inspection result normal?

YES >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> Go to [TM-138, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000000957040

1.CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2.REPLACE CONTROL VALVE WITH TCM

1. Replace control valve with TCM. Refer to [TM-240, "Exploded View"](#).
2. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-137, "DTC Logic"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Confirm malfunction phenomena by "ROAD TEST" to repair malfunctioning part. Refer to [TM-226, "Description"](#).

P0734 A/T 4TH GEAR FUNCTION

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0734 A/T 4TH GEAR FUNCTION

Description

INFOID:000000000957041

This malfunction is detected when the A/T does not shift into 4th gear position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

DTC Logic

INFOID:000000000957042

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
P0734*	AT 4TH GR FNCTN	21th	TCM detects any inconsistency in the actual gear ratio.	<ul style="list-style-type: none"> • Harness or connectors (Solenoid circuits are open or shorted.) • Input clutch solenoid valve • Front brake solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Each clutch • Hydraulic control circuit

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK ATF TEMPERATURE

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Check ATF temperature is in the following range.

ATF TEMP 1 : 20°C – 140°C

Is ATF temperature within specified range?

YES >> GO TO 2.

NO >> Drive vehicle to warm ATF or stop engine to cool ATF.

2. CHECK SYMPTOM 1

With CONSULT-III

1. Select "4TH GR FNCTN P0734" of "DTC WORK SUPPORT".
2. Drive vehicle and maintain the following conditions.

VEHICLE SPEED : 10 km/h (6 MPH) or more

ACCELE POSI : 0.6/8 or more

ENGINE SPEED : TURBINE REV – 50 rpm or more

TURBINE REV : 300 rpm or more

P0734 A/T 4TH GEAR FUNCTION

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

GEAR : "4" position
Manual mode : ON

3. Keep the current driving status for at least 5 consecutive seconds if CONSULT-III screen changes from "OUT OF CONDITION" to "TESTING".

CAUTION:

If "TESTING" does not appear on CONSULT-III for a long time, select "SELF-DIAG RESULTS". In case a 1st trip DTC other than P0734 is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".

Is "STOP VEHICLE" or "COMPLETED RESULT NG" displayed?

"STOP VEHICLE">>GO TO 3.

"COMPLETED RESULT NG">>Go to [TM-140, "Diagnosis Procedure"](#).

3.CHECK SYMPTOM 2

With CONSULT-III

1. Stop vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1st to 5th gear and check shift timing and shift shock.

Is the inspection result normal?

YES >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> Go to [TM-140, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000000957043

1.CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2.REPLACE CONTROL VALVE WITH TCM

1. Replace control valve with TCM. Refer to [TM-240, "Exploded View"](#).
2. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-139, "DTC Logic"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Confirm malfunction phenomena by "ROAD TEST" to repair malfunctioning part. Refer to [TM-226, "Description"](#).

P0735 A/T 5TH GEAR FUNCTION

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0735 A/T 5TH GEAR FUNCTION

Description

INFOID:000000000957044

This malfunction is detected when the A/T does not shift into 5th gear position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

DTC Logic

INFOID:000000000957045

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
P0735*	AT 5TH GR FNCTN	22th	TCM detects any inconsistency in the actual gear ratio.	<ul style="list-style-type: none"> • Harness or connectors (Solenoid circuits are open or shorted.) • Input clutch solenoid valve • Front brake solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Each clutch • Hydraulic control circuit

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK ATF TEMPERATURE

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Check ATF temperature is in the following range.

ATF TEMP 1 : 20°C – 140°C

Is ATF temperature within specified range?

YES >> GO TO 2.

NO >> Drive vehicle to warm ATF or stop engine to cool ATF.

2. CHECK SYMPTOM 1

With CONSULT-III

1. Select "5TH GR FNCTN P0735" of "DTC WORK SUPPORT".
2. Drive vehicle and maintain the following conditions.

VEHICLE SPEED : 10 km/h (6 MPH) or more

ACCELE POSI : 0.6/8 or more

ENGINE SPEED : TURBINE REV – 50 rpm or more

TURBINE REV : 300 rpm or more

P0735 A/T 5TH GEAR FUNCTION

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

GEAR : "5" position
Manual mode : ON

3. Keep the current driving status for at least 5 consecutive seconds if CONSULT-III screen changes from "OUT OF CONDITION" to "TESTING".

CAUTION:

If "TESTING" does not appear on CONSULT-III for a long time, select "SELF-DIAG RESULTS". In case a 1st trip DTC other than P0735 is shown, refer to applicable "TROUBLE DIAGNOSIS FOR DTC".

Is "STOP VEHICLE" or "COMPLETED RESULT NG" displayed?

"STOP VEHICLE">>GO TO 3.

"COMPLETED RESULT NG">>Go to [TM-142, "Diagnosis Procedure"](#).

3.CHECK SYMPTOM 2

With CONSULT-III

1. Stop vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1st to 5th gear and check shift timing and shift shock.

Is the inspection result normal?

YES >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> Go to [TM-142, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000000957046

1.CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2.REPLACE CONTROL VALVE WITH TCM

1. Replace control valve with TCM. Refer to [TM-240, "Exploded View"](#)
2. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-141, "DTC Logic"](#).

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Confirm malfunction phenomena by "ROAD TEST" to repair malfunctioning part. Refer to [TM-226, "Description"](#).

P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

Description

INFOID:000000000957047

- The torque converter clutch solenoid valve is activated, with the gear in D3, D4, D5, M3, M4 and M5 by the TCM in response to signals sent from the vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Torque converter clutch piston operation will then be controlled.
- Lock-up operation, however, is prohibited when A/T fluid temperature is too low.
- When the accelerator pedal is depressed (less than 1.0/8) in lock-up condition, the engine speed should not change abruptly. If there is a big jump in engine speed, there is no lock-up.

DTC Logic

INFOID:000000000957048

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is de- tected when...	Possible cause
P0740*	TCC SOLENOID/CIRC	3rd	Normal voltage not ap- plied to solenoid due to cut line, short, or the like.	<ul style="list-style-type: none">• Harness or connectors (Solenoid circuit is open or shorted.)• Torque converter clutch solenoid valve

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

VHCL/S SE-A/T : 80 km/h (50 MPH) or more

ACCELE POSI : 0.5/8 – 1.0/8

SLCT LVR POSI : "D" position

Drive location : Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

With GST

Follow the procedure "With CONSULT-III".

Is "P0740 TCC SOLENOID/CIRC" detected?

YES >> Go to [TM-143, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957049

1. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

NO >> Repair or replace damaged parts.

P0744 A/T TCC S/V FUNCTION (LOCK -UP)

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0744 A/T TCC S/V FUNCTION (LOCK -UP)

Description

INFOID:000000000957050

This malfunction is detected when the A/T does not shift into 5th gear position or the torque converter clutch does not lock-up as instructed by the TCM. This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000000957051

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is de- tected when...	Possible cause
P0744*	A/T TCC S/V FUNTN	3rd	<ul style="list-style-type: none">A/T cannot perform lock-up even if electrical circuit is good.TCM detects as irregular by comparing difference value with slip rotation.	<ul style="list-style-type: none">Harness or connectors (Sensor circuit is open or shorted.)Torque converter clutch solenoid valveHydraulic control circuit

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

- Start the engine.
- Select "DATA MONITOR".
- Drive vehicle and maintain the following conditions for at least 30 consecutive seconds.

ACCELE POSI : More than 1.0/8

SLCT LVR POSI : "D" position

TCC SOLENOID : 0.4 – 0.6 A

VEHICLE SPEED : 80 km/h (50 MPH) or more

Driving location : Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

With GST

Follow the procedure "With CONSULT-III".

Is "P0744 A/T TCC S/V FUNTN" detected?

YES >> Go to [TM-144, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957052

1. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

OK >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

NG >> Repair or replace damaged parts.

P0745 LINE PRESSURE SOLENOID VALVE

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P0745 LINE PRESSURE SOLENOID VALVE

Description

INFOID:000000000957053

The line pressure solenoid valve regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

DTC Logic

INFOID:000000000957054

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
P0745*	L/PRESS COL/CIRC	4th	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to cut line, short, or the like. TCM detects as irregular by comparing target value with monitor value. 	<ul style="list-style-type: none"> Harness or connectors (Sensor circuit is open or shorted.) Line pressure solenoid valve

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

- Start the engine and wait for at least 5 seconds.
- Perform "SELF-DIAG RESULTS" mode for "TRANSMISSION". Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

With GST

Follow the procedure "With CONSULT-III".

Is "P0745 L/PRESS SOL/CIRC" detected?

YES >> Go to [TM-145, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957055

1. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

NO >> Repair or replace damaged parts.

P1705 THROTTLE POSITION SENSOR

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P1705 THROTTLE POSITION SENSOR

Description

INFOID:000000000957056

Electric throttle control actuator consists of throttle control motor, accelerator pedal position sensor, throttle position sensor, etc. The actuator transmits a signal to the ECM, and ECM transmits signals to TCM with CAN communication.

DTC Logic

INFOID:000000000957057

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is de- tected when...	Possible cause
P1705*	TP SEN/CIRC A/T	15th	TCM does not receive the proper accelerator pedal position signals (input by CAN communi- cation) from ECM.	Harness or connectors (Sensor circuit is open or shorted.)

*: This is not an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

④ With CONSULT-III

1. Start the engine and let it idle for 1 second.
2. Perform "SELF-DIAG RESULTS" mode for "TRANSMISSION". Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

Is "P1705 TP SEN/CIRC A/T" detected?

- YES >> Go to [TM-146, "Diagnosis Procedure"](#).
NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957058

1. CHECK DTC OF ECM

④ With CONSULT-III

1. Turn ignition switch ON.
2. Perform "SELF-DIAG RESULTS" mode for "ENGINE". Refer to [EC-113, "CONSULT-III Function"](#).

Is any DTC detected?

- YES >> GO TO 2.
NO >> Check DTC detected item. Refer to [EC-113, "CONSULT-III Function"](#).

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).
NO >> Repair or replace damaged parts.

P1710 A/T FLUID TEMPERATURE SENSOR

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P1710 A/T FLUID TEMPERATURE SENSOR

Description

INFOID:000000000957059

The A/T fluid temperature sensor detects the A/T fluid temperature and transmits a signal to the TCM.

DTC Logic

INFOID:000000000957060

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is de- tected when...	Possible cause
<ul style="list-style-type: none"> •P1710 (A/T) •P0710* (ENGINE) 	ATF TEMP SEN/CIRC	10th	During running, the A/T fluid temperature sensor signal voltage is excessively high or low.	<ul style="list-style-type: none"> • Harness or connectors (Sensor circuit is open or shorted.) • A/T fluid temperature sensors 1 and/or 2

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and maintain the following conditions for at least 10 minutes (Total). (It is not necessary to maintain continuously.)

VHCL/S SE-A/T : 10 km/h (6 MPH) or more

ACCELE POSI : More than 1.0/8

SLCT LVR POSI : "D" position

With GST

Follow the procedure "With CONSULT-III".

Is "P1710 ATF TEMP SEN/CIRC" detected?

YES >> Go to [TM-147, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957061

1. CHECK A/T FLUID TEMPERATURE SENSOR 1 SIGNAL

With CONSULT-III

1. Start engine.
2. Select "DATA MONITOR".
3. Check "ATF TEMP SE 1" and "ATF TEMP SE 2" values.

Item name	Condition °C (°F)	Value (Approx.)
ATF TEMP SE 1	0 (32) – 20 (68) – 80 (176)	3.3 – 2.7 – 0.9 V
ATF TEMP SE 2	0 (32) – 20 (68) – 80 (176)	3.3 – 2.5 – 0.7 V

Which item is abnormal?

ATF TEMP SE 1 >> GO TO 2.

P1710 A/T FLUID TEMPERATURE SENSOR

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

ATF TEMP SE 2>>GO TO 4.

2.CHECK A/T FLUID TEMPERATURE SENSOR 1

Check A/T fluid temperature sensor 1. Refer to [TM-148, "Component Inspection \(A/T fluid temperature sensor 1\)"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

3.CHECK SUB-HARNESS

1. Disconnect park/neutral position switch connector and TCM connector.
2. Check continuity between park/neutral position switch connector and TCM connector.

Park/neutral position switch connector		TCM connector		Continuity
Connector	Terminal	Connector	Terminal	
F154	6	F152	19	Existed
	7		18	Existed

3. If OK, check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace open circuit or short to ground and short to power in harness or connectors.

4.CHECK A/T FLUID TEMPERATURE SENSOR 2

Check A/T fluid temperature sensor 2. Refer to [TM-149, "Component Inspection \(A/T fluid temperature sensor 2\)"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace the A/T fluid temperature sensor 2. Refer to [TM-249, "Exploded View"](#).

5.CHECK TERMINAL CORD ASSEMBLY

1. Disconnect A/T fluid temperature sensor 2 connector and TCM connector.
2. Check continuity between A/T fluid temperature sensor 2 connector terminals and TCM connector terminals.

A/T fluid temperature sensor 2 connector		TCM connector		Continuity
Connector	Terminal	Connector	Terminal	
F156	1	F151	3	Existed
	2		5	Existed

3. If OK, check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace open circuit or short to ground and short to power in harness or connectors.

6.CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

NO >> Repair or replace damaged parts.

Component Inspection (A/T fluid temperature sensor 1)

INFOID:00000000957062

1.CHECK A/T FLUID TEMPERATURE SENSOR 2

1. Remove control valve with TCM. Refer to [TM-240, "Exploded View"](#).
2. Check resistance between park/neutral position switch connector terminals.

P1710 A/T FLUID TEMPERATURE SENSOR

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

Park/neutral position switch connector				Temperature °C (°F)	Resistance (Approx.)
Connector	Terminal	Connector	Terminal		
F154	6	F154	7	0 (32)	15 kΩ
				20 (68)	6.5 kΩ
				80 (176)	0.9 kΩ

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace control valve with TCM. Refer to [TM-240, "Exploded View"](#).

Component Inspection (A/T fluid temperature sensor 2)

INFOID:000000000957063

1. CHECK A/T FLUID TEMPERATURE SENSOR 2

1. Remove A/T fluid temperature sensor 2. Refer to [TM-249, "Exploded View"](#).
2. Check resistance between A/T fluid temperature sensor 2 connector terminals.

A/T fluid temperature sensor 2 connector				Temperature °C (°F)	Resistance (Approx.)
Connector	Terminal	Connector	Terminal		
F156	1	F156	2	0 (32)	10 kΩ
				20 (68)	4 kΩ
				80 (176)	0.5 kΩ

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the A/T fluid temperature sensor 2. Refer to [TM-249, "Exploded View"](#).

P1721 VEHICLE SPEED SENSOR MTR

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P1721 VEHICLE SPEED SENSOR MTR

Description

INFOID:000000000957064

The vehicle speed sensor-MTR signal is transmitted from unified meter and A/C amp. combination meter to TCM by CAN communication line. The signal functions as an auxiliary device to the revolution sensor when it is malfunctioning. The TCM will then use the vehicle speed sensor-MTR signal.

DTC Logic

INFOID:000000000957065

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	Diagnostic item is detected when...	Possible cause
P1721*	VEH SPD SE/CIR-MTR	<ul style="list-style-type: none">Signal (CAN communication) from vehicle speed sensor MTR not input due to cut line or the like.Unexpected signal input during running.	Harness or connectors (Sensor circuit is open or shorted.)

*: This is not an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

Ⓟ With CONSULT-III

- Start the engine.
- Select "DATA MONITOR".
- Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

VHCL/S SE-MTR : 30 km/h (19 MPH) or more

ACCELE POSI : 1.0/8 or less

Is "P1721 VEH SPD SE/CIR-MTR" detected?

YES >> Go to [TM-150, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957066

1. CHECK UNIFIED METER AND A/C AMP.

Check unified meter and A/C amp. Refer [MWI-46, "Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

NO >> Repair or replace damaged parts.

P1730 A/T INTERLOCK

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P1730 A/T INTERLOCK

Description

INFOID:000000000957067

Fail-safe function to detect interlock conditions.

DTC Logic

INFOID:000000000957068

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
P1730*	A/T INTERLOCK	12th	Except during shift change, the gear position and ATF pressure switch states are monitored and comparative judgment made.	<ul style="list-style-type: none"> • Harness or connectors (Solenoid and switch circuit is open or shorted.) • Low coast brake solenoid valve • ATF pressure switch 2

*: This is an OBD-II self-diagnostic item.

NOTE:

When the vehicle is driven fixed in 2nd gear, a turbine revolution sensor malfunction is displayed, but this is not a turbine revolution sensor malfunction.

DTC CONFIRMATION PROCEDURE

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1.CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.

SLCT LVR POSI : "D" position

With GST

Follow the procedure "With CONSULT-III".

Is "P1730 A/T INTERLOCK" detected?

- YES >> Go to [TM-151, "Diagnosis Procedure"](#).
- NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Judgment of A/T Interlock

INFOID:000000000957069

Refer to [TM-187, "Fail-Safe"](#).

Diagnosis Procedure

INFOID:000000000957070

1.CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).
- NO >> Repair or replace damaged parts.

P1731 A/T 1ST ENGINE BRAKEING

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P1731 A/T 1ST ENGINE BRAKEING

Description

INFOID:000000000957071

Fail-safe function to prevent sudden decrease in speed by engine brake other than at M1 position.

DTC Logic

INFOID:000000000957072

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is de- tected when...	Possible cause
P1731*	A/T 1ST E/BRAKING	13th	Each ATF pressure switch and solenoid current is monitor and if a pattern is detected having engine braking 1st gear other than in the M1 position, a malfunction is detected.	<ul style="list-style-type: none">• Harness or connectors (Sensor circuit is open or shorted.)• Low coast brake solenoid valve• ATF pressure switch 2

*: This is not an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously preformed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.

ENGINE SPEED : 1,200 rpm

GEAR : "1" position

MANU MODE SW : ON

Is "P1731 A/T 1ST E/BRAKING" detected?

YES >> Go to [TM-152, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957073

1. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

NO >> Repair or replace damaged parts.

P1752 INPUT CLUTCH SOLENOID VALVE

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P1752 INPUT CLUTCH SOLENOID VALVE

Description

INFOID:000000000957074

- The Input clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- The Input clutch solenoid valve controls the input clutch control valve in response to a signal sent from the TCM.

DTC Logic

INFOID:000000000957075

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
P1752*	I/C SOLENOID/CIRC	5th	<ul style="list-style-type: none">• Normal voltage not applied to solenoid due to cut line, short, or the like.• TCM detects as irregular by comparing target value with monitor value.	<ul style="list-style-type: none">• Harness or connectors (Solenoid circuit is open or shorted.)• Input clutch solenoid valve

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

ACCELE POSI : 1.5/8 – 2.0/8

GEAR : "3" ⇒ "4" (I/C ON/OFF)

SLCT LVR POSI : "D" position

Driving location : Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

With GST

Follow the procedure "With CONSULT-III".

Is "P1752 I/C SOLENOID/CIRC" detected?

YES >> Go to [TM-153, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957076

1. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

P1752 INPUT CLUTCH SOLENOID VALVE

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

NO >> Repair or replace damaged parts.

P1757 FRONT BRAKE SOLENOID VALVE

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P1757 FRONT BRAKE SOLENOID VALVE

Description

INFOID:000000000957077

- The front brake solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- The front brake solenoid valve controls the front brake control valve in response to a signal sent from the TCM.

DTC Logic

INFOID:000000000957078

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
P1757*	FR/B SOLENOID/CIRC	6th	<ul style="list-style-type: none"> • Normal voltage not applied to solenoid due to cut line, short, or the like. • TCM detects as irregular by comparing target value with monitor value. 	<ul style="list-style-type: none"> • Harness or connectors (Solenoid circuit is open or shorted.) • Front brake solenoid valve

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

ACCELE POSI : 1.5/8 – 2.0/8

GEAR : "3" ⇒ "4" (FR/B ON/OFF)

SLCT LVR POSI : "D" position

Drive location : Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

With GST

Follow the procedure "With CONSULT-III".

Is "P1757 FR/B SOLENOID/CIRC" detected?

YES >> Go to [TM-155, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957079

1. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

P1757 FRONT BRAKE SOLENOID VALVE

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

NO >> Repair or replace damaged parts.

P1762 DIRECT CLUTCH SOLENOID VALVE

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P1762 DIRECT CLUTCH SOLENOID VALVE

Description

INFOID:000000000957080

- The direct clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- The direct clutch solenoid valve controls the direct clutch control valve in response to a signal sent from the TCM.

DTC Logic

INFOID:000000000957081

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
P1762*	D/C SOLENOID/CIRC	2nd	<ul style="list-style-type: none">• Normal voltage not applied to solenoid due to cut line, short, or the like.• TCM detects as irregular by comparing target value with monitor value.	<ul style="list-style-type: none">• Harness or connectors (Solenoid circuit is open or shorted.)• Direct clutch solenoid valve

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

ACCELE POSI : 1.5/8 – 2.0/8

GEAR : "1" ⇒ "2" (D/C ON/OFF)

SLCT LVR POSI : "D" position

Driving location : Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

With GST

Follow the procedure "With CONSULT-III".

Is "P1762 D/C SOLENOID/CIRC" detected?

YES >> Go to [TM-157, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957082

1. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

P1762 DIRECT CLUTCH SOLENOID VALVE

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

NO >> Repair or replace damaged parts.

P1767 HIGH AND LOW REVERSE CLUTCH SORENOID VALVE

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P1767 HIGH AND LOW REVERSE CLUTCH SORENOID VALVE

Description

INFOID:000000000957083

- The high and low reverse clutch solenoid valve is controlled by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- The high and low reverse clutch solenoid valve controls the high and low reverse clutch control valve in response to a signal sent from the TCM.

DTC Logic

INFOID:000000000957084

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
P1767*	HLR/C SOL/CIRC	8th	<ul style="list-style-type: none">• Normal voltage not applied to solenoid due to cut line, short, or the like.• TCM detects as irregular by comparing target value with monitor value.	<ul style="list-style-type: none">• Harness or connectors (Solenoid circuit is open or shorted.)• High and low reverse clutch solenoid valve

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

ACCELE POSI : 1.5/8 – 2.0/8

GEAR : "2" ⇒ "3" (HLR/C ON/OFF)

SLCT LVR POSI : "D" position

Driving location : Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

With GST

Follow the procedure "With CONSULT-III".

Is "P1767 HLR/C SOL/CIRC" detected?

YES >> Go to [TM-159, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957085

1. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

P1767 HIGH AND LOW REVERSE CLUTCH SORENOID VALVE

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

NO >> Repair or replace damaged parts.

P1772 LOW COAST BRAKE SOLENOID VALVE

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P1772 LOW COAST BRAKE SOLENOID VALVE

Description

INFOID:000000000957086

- The low coast brake solenoid valve is turned ON or OFF by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- The low coast brake solenoid valve controls the low coast brake control valve in response to a signal sent from the TCM.

DTC Logic

INFOID:000000000957087

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is de- tected when...	Possible cause
P1772*	LC/B SOLENOID/CIRC	7th	Normal voltage not ap- plied to solenoid due to cut line, short, or the like.	<ul style="list-style-type: none">• Harness or connectors (Solenoid circuit is open or shorted.)• Low coast brake sole- noid valve

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and maintain the following conditions for at least 5 consecutive seconds.

GEAR : "1" or "2" (LC/B ON/OFF)

MANU MODE SW : ON

With GST

Follow the procedure "With CONSULT-III".

Is "P1772 LC/B SOLENOID/CIRC" detected?

YES >> Go to [TM-161, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957088

1. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

NO >> Repair or replace damaged parts.

P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

Description

INFOID:000000000957089

- Low coast brake solenoid valve is turned ON or OFF by the TCM in response to signals sent from the PNP switch, vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation.

DTC Logic

INFOID:000000000957090

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	A/T CHECK indicator lamp judgment flicker	Diagnostic item is detected when...	Possible cause
P1774*	LC/B SOLENOID FNCT	7th	<ul style="list-style-type: none">• TCM detects an improper voltage drop when it tries to operate the solenoid valve.• Condition of ATF pressure switch 2 is different from monitor value, and relation between gear position and actual gear ratio is irregular.	<ul style="list-style-type: none">• Harness or connectors (Solenoid and switch circuit is open or shorted.)• Low coast brake solenoid valve• ATF pressure switch 2

*: This is an OBD-II self-diagnostic item.

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

1. Start the engine.
2. Select "DATA MONITOR".
3. Drive vehicle and maintain the following conditions.

GEAR : "1" or "2" (LC/B ON/OFF)

MANU MODE SW : ON

4. Stop vehicle.
5. Turn ignition switch OFF, then perform step 1 to 3 again.

With GST

Follow the procedure "With CONSULT-III".

Is "P1774 LC/B SOLENOID FNCT" detected?

YES >> Go to [TM-162, "Diagnosis Procedure"](#).

NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957091

1. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

P1774 LOW COAST BRAKE SOLENOID VALVE FUNCTION

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

- YES >> Replace the control valve with TCM. Refer to [TM-240. "Exploded View"](#).
- NO >> Repair or replace damaged parts.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

P1815 MANUAL MODE SWITCH

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

P1815 MANUAL MODE SWITCH

Description

INFOID:000000000957092

Manual mode switch is installed in A/T device. It transmits manual mode switch, shift up and shift down switch signals to unified meter and A/C amp. then unified meter and A/C amp. transmits signals to TCM with CAN communication.

Paddle shifter transmits shift up and shift down switch signals to unified meter and A/C amp., then unified meter and A/C amp. transmits signals to TCM with CAN communication. (With paddle shifter)

TCM transmits the switch signals to unified meter and A/C amp. by CAN communication line. Then manual mode switch position is indicated on the A/T indicator. For inspection, refer to [TM-170](#).

DTC Logic

INFOID:000000000957093

DTC DETECTION LOGIC

DTC	Item (CONSULT-III screen terms)	Diagnostic item is detected when...	Possible cause
P1815*1	MANU MODE SW/CIRC	<ul style="list-style-type: none">TCM monitors manual mode, non manual mode, up or down switch signal, and detects as irregular when impossible input pattern occurs 2 second or more.When shift up/down signal of paddle shifter continuously remains ON for 60 seconds. (With paddle shifter)	<ul style="list-style-type: none">Harness or connectors (These switches circuit is open or shorted.)Manual mode select switch (Into control device)Manual mode position select switch (Into control device)Paddle shifter*2

*1: This is not an OBD-II self-diagnostic item.

*2: With paddle shifter

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC CONFIRMATION PROCEDURE” has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

1. CHECK DTC DETECTION

With CONSULT-III

- Start the engine.
- Select “DATA MONITOR”.
- Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.

MANU MODE SW : ON

Is “P1815 MANU MODE SW/CIRC” detected?

- YES >> Go to [TM-164, "Diagnosis Procedure"](#).
NO >> Check Intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000000957094

1. CHECK MANUAL MODE SWITCH CIRCUIT

With CONSULT-III

- Turn ignition switch ON.
- Select “DATA MONITOR”.
- Check the ON/OFF operations of each monitor item.

P1815 MANUAL MODE SWITCH

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

Item	Monitor Item	Condition	Status
Manual mode switch	MANU MODE SW	Manual shift gate position (neutral)	ON
		Other than the above	OFF
	NON M-MODE SW	Manual shift gate position	OFF
		Other than the above	ON
	UP SW LEVER	Selector lever: UP (+ side)	ON
		Other than the above	OFF
DOWN SW LEVER	Selector lever: DOWN (- side)	ON	
	Other than the above	OFF	
Paddle shifter*	SFT UP ST SW	Paddle shifter: UP (+ side)	ON
		Other than the above	OFF
	SFT DWN ST SW	Paddle shifter: DOWN (- side)	ON
		Other than the above	OFF

*: With paddle shifter

Without CONSULT-III

Drive the vehicle in the manual mode and shift the select lever and paddle shifter* to "UP (+ side)" or "DOWN (- side)" side (1st ↔ 5th gear). Check that the meter indicator coincides with the actual gear position.

*: With paddle shifter

Which item is abnormal?

A/T device >> GO TO 2.

Paddle shifter >> GO TO 5.

2. CHECK MANUAL MODE SWITCH

Check manual mode switch. Refer to [TM-167. "Component Inspection \(Manual Mode Switch\)"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

3. CHECK HARNESS BETWEEN A/T DEVICE HARNESS CONNECTOR AND UNIFIED METER AND A/C AMP. HARNESS CONNECTOR

1. Disconnect A/T device harness connector and unified meter and A/C amp. harness connector.
2. Check continuity between A/T device harness connector and unified meter and A/C amp. harness connector.

A/T device harness connector		Unified meter and A/C amp. harness connector		Continuity
Connector	Terminal	Connector	Terminal	
M137	1	M66	10	Existed
	2		25	Existed
	3		5	Existed
	5		11	Existed

3. If OK, check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace open circuit or short to ground and short to power in harness or connectors.

4. CHECK GROUND CIRCUIT

1. Check continuity between A/T device harness connector and ground.

P1815 MANUAL MODE SWITCH

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

A/T device harness connector		Ground	Continuity
Connector	Terminal		
M137	4		Existed

2. If OK, check harness for short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace open circuit or short to ground and short to power in harness or connectors.

5.CHECK PADDLE SHIFTER

Check paddle shifter. Refer to [TM-167, "Component Inspection \(Paddle Shifter\)"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace damaged parts.

6.CHECK HARNESS BETWEEN PADDLE SHIFTER HARNESS CONNECTR AND UNIFIED METER AND A/C AMP. HARNESS CONNECTOR

1. Disconnect paddle shifter harness connector and unified meter and a/c amp. harness connector.

2. Check continuity between paddle shifter harness connector and unified meter and A/C amp. harness connector.

Paddle shifter harness connector		Unified meter and A/C amp. harness connector		Continuity
Connector	Terminal	Connector	Terminal	
M32	3	M66	26	Existed
M39	3		6	Existed

3. If OK, check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace open circuit or short to ground and short to power in harness or connectors.

7.CHECK GROUND CIRCUIT

1. Check continuity between paddle shifter harness connector and ground.

Paddle shifter harness connector		Ground	Continuity
Connector	Terminal		
M32	1		Existed
M39	1	Existed	

2. If OK, check harness for short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace open circuit or short to ground and short to power in harness or connectors.

8.CHECK UNIFIED METER AND A/C AMP.

Check unified meter and A/C amp. Refer to [MWI-20, "SHIFT POSITION INDICATOR : System Diagram"](#).

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace damaged parts.

9.CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

NO >> Repair or replace damaged parts.

P1815 MANUAL MODE SWITCH

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

Component Inspection (Manual Mode Switch)

INFOID:000000000957095

1.CHECK MANUAL MODE SWITCH

Check continuity between terminals.

A/T device harness connector				Condition	Continuity
Connector	Terminal	Connector	Terminal		
M137	4	M137	5	Selector lever: Auto	Existed
				Other than the above	No existed
	1		4	Selector lever: Manual (Neutral)	Existed
				Other than the above	No existed
	3		4	Selector lever: UP (+ side)	Existed
				Other than the above	No existed
	2		4	Selector lever: DOWN (- side)	Existed
				Other than the above	No existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace damaged parts. Refer to [TM-232. "2WD : Exploded View"](#) (2WD), [TM-233. "AWD : Exploded View"](#) (AWD).

Component Inspection (Paddle Shifter)

INFOID:000000000957096

1.CHECK PADDLE SHIFTER

1. Remove paddle shifter. Refer to [TM-238. "Exploded View"](#).
2. Check continuity between terminals.

Paddle shifter (shift-up)				Condition	Continuity
Connector	Terminal	Connector	Terminal		
M39	1	M39	3	UP (+ side)	Existed
				Other than the above	Not existed

Paddle shifter (shift-down)				Condition	Continuity
Connector	Terminal	Connector	Terminal		
M32	1	M32	3	DOWN (- side)	Existed
				Other than the above	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace damaged parts. Refer to [TM-238. "Exploded View"](#).

MAIN POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

MAIN POWER SUPPLY AND GROUND CIRCUIT

Description

INFOID:000000000957097

Supply power to TCM.

Diagnosis Procedure

INFOID:000000000957098

1. CHECK TCM POWER SOURCE STEP 1

1. Turn ignition switch OFF.
2. Disconnect A/T assembly harness connector.
3. Check voltage between A/T assembly harness connector and ground.

(+)		(-)	Voltage (Approx.)	
A/T assembly harness connector		Ground		
Connector	Terminal			
F51	1		Ground	Battery voltage
	2			
	6	0 V		

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check the following. If NG, repair or replace damaged parts.

- Check harness for short or open between battery and A/T assembly harness connector terminals 1, 2.
- Harness for short between ignition switch and A/T assembly harness connector terminal 6.
- 10 A fuse (No. 36, located in the fuse, fusible link and relay box)

2. CHECK TCM POWER SOURCE STEP 2

1. Disconnect A/T assembly harness connector.
2. Turn ignition switch ON. (Do not start engine.)
3. Check voltage between A/T assembly harness connector and ground.

(+)		(-)	Voltage (Approx.)	
A/T assembly harness connector		Ground		
Connector	Terminal			
F51	1		Ground	Battery voltage
	2			
	6			

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the following. If NG, repair or replace damaged parts.

- Harness for short or open between battery and A/T assembly harness connector terminals 1, 2.
- Harness for short or open between ignition switch and A/T assembly harness connector terminal 6.
- 10A fuse (No. 36, located in the fuse, fusible link and relay box) and 10A fuse (No. 43, located in the IPDM E/R)
- Push-button ignition switch. Refer to [PG-50, "Wiring Diagram — Ignition Power Supply —"](#).

3. CHECK TCM GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/T assembly harness connector.
3. Check continuity between A/T assembly harness connector terminals and ground.

MAIN POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

A/T assembly harness connector		Ground	Continuity
Connector	Terminal		
F51	5		
	10		

If OK, check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. DETECT MALFUNCTIONING ITEM

Check the A/T assembly harness connector terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

5. CHECK TERMINAL CORD ASSEMBLY

1. Remove control valve with TCM. Refer to [TM-240, "Exploded View"](#).
2. Disconnect A/T assembly harness connector and TCM connector.
3. Check continuity between A/T assembly harness connector and TCM connector.

A/T assembly harness connector		TCM connector		Continuity
Connector	Terminal	Connector	Terminal	
F51	1	F151	9	Existed
	2		10	Existed
	6		4	Existed

4. Check continuity between A/T assembly harness connector and TCM connector.

A/T assembly harness connector		TCM connector		Continuity
Connector	Terminal	Connector	Terminal	
F51	5	F153	21	Existed
	10		22	Existed

5. If OK, check harness for short to ground and short to power.

Is the inspection result normal?

YES >> Replace the control valve with TCM. Refer to [TM-240, "Exploded View"](#).

NO >> Replace open circuit or short to ground and short to power in harness or connectors.

SHIFT POSITION INDICATOR CIRCUIT

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

SHIFT POSITION INDICATOR CIRCUIT

Description

INFOID:000000000957099

TCM sends the switch signals to unified meter and A/C amp. by CAN communication line. Then manual mode switch position is indicated on the shift position indicator.

Component Function Check

INFOID:000000000957100

1. CHECK A/T INDICATOR

1. Start the engine.
2. Drive vehicle in the manual mode, and confirm that the actual gear position and the meter's indication of the position mutually coincide when the selector lever is shifted to the "UP (+ side)" or "DOWN (- side)" side (1st ↔ 5th gear).

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Go to [TM-170, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000000957101

1. CHECK INPUT SIGNALS

Ⓟ With CONSULT-III

1. Start the engine.
2. Select "GEAR" on "DATA MONITOR" and read out the value.
3. Drive vehicle in the manual mode, and confirm that the actual gear position and the meter's indication of the position mutually coincide when the selector lever is shifted to the "UP (+ side)" or "DOWN (- side)" side (1st ↔ 5th gear).

Is the inspection result normal?

- YES >> INSPECTION END
- NO-1 >> The actual gear position does not change, or shifting into the manual mode is not possible (no gear shifting in the manual mode possible). Or the shift position indicator is not indicated.
- Check manual mode switch. Refer to [TM-167, "Component Inspection \(Manual Mode Switch\)"](#).
 - Check A/T main system (Fail-safe function actuated).
 - Perform "SELF-DIAG RESULTS" mode for "TRANSMISSION". Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).
- NO-2 >> The actual gear position changes, but the shift position indicator is not indicated.
- Perform "SELF-DIAG RESULTS" mode for "TRANSMISSION". Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).
- NO-3 >> The actual gear position and the indication on the shift position indicator do not coincide.
- Perform "SELF-DIAG RESULTS" mode for "TRANSMISSION". Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).
- NO-4 >> Only a specific position or positions is/are not indicated on the shift position indicator.
- Check the unified meter and A/C amp. Refer to [MWI-20, "SHIFT POSITION INDICATOR : System Diagram"](#).

SHIFT LOCK SYSTEM

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

SHIFT LOCK SYSTEM

Description

INFOID:000000000957102

Shift lock system circuit consists of the following part.

Component	Function
Shift lock solenoid	Activated by the ignition switch and stop lamp signals, it holds the relative positions of sliders A and B.
Shift lock relay	Current flow to stop lamp switch allows shift lock solenoid contact ON, and then power is applied to shift lock solenoid.
Stop lamp switch	Depressing the brake pedal turns ON the stop lamp switch and energizes the shift lock relay.

Wiring Diagram —A/T SHIFT LOCK SYSTEM —

INFOID:000000000957103

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


SHIFT LOCK SYSTEM

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

A/T SHIFT LOCK SYSTEM

◊ : With ICC

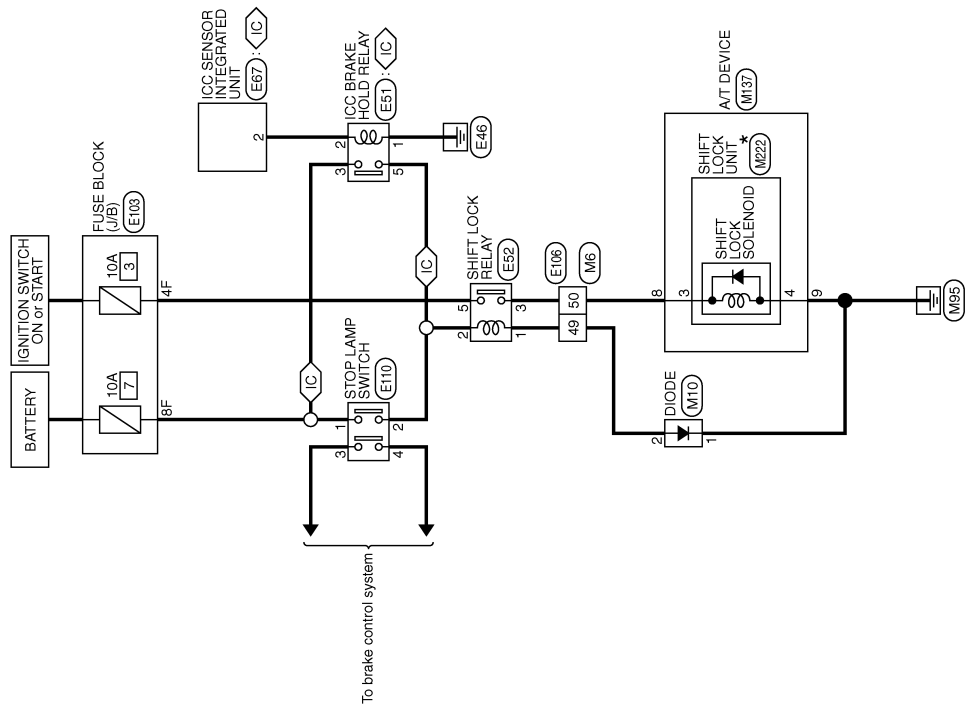

*: This connector is not shown in "Harness Layout".

2006/09/15

JCDWA0006G

SHIFT LOCK SYSTEM

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

A/T SHIFT LOCK SYSTEM

Connector No.	E106
Connector Name	ICC BRAKE HOLD RELAY
Connector Type	MS22EL-M2

Terminal No.	Color of Wire	Signal Name
1	B	-
2	V	-
3	R	-
4	P	-

Connector No.	E52
Connector Name	SHIFT LOCK RELAY
Connector Type	MS22EL-M2

Terminal No.	Color of Wire	Signal Name
1	O	-
2	P	-
3	W	-
4	Y	-

Connector No.	E07
Connector Name	ICC SENSOR INTEGRATED UNIT
Connector Type	RS06FB-FR

Terminal No.	Color of Wire	Signal Name
2	V	BRK LMP RLY

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS18FW-CS

Terminal No.	Color of Wire	Signal Name
4F	G	-
8F	L	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

Terminal No.	Color of Wire	Signal Name
49	O	-
50	W	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	M06FW-LC

Terminal No.	Color of Wire	Signal Name
1	L	-
2	W	-
3	L	-
4	SB	-

Connector No.	M10
Connector Name	DIODE
Connector Type	24335_C9902

Terminal No.	Color of Wire	Signal Name
1	B	-
2	O	-


JCDWA0007G

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT LOCK SYSTEM

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

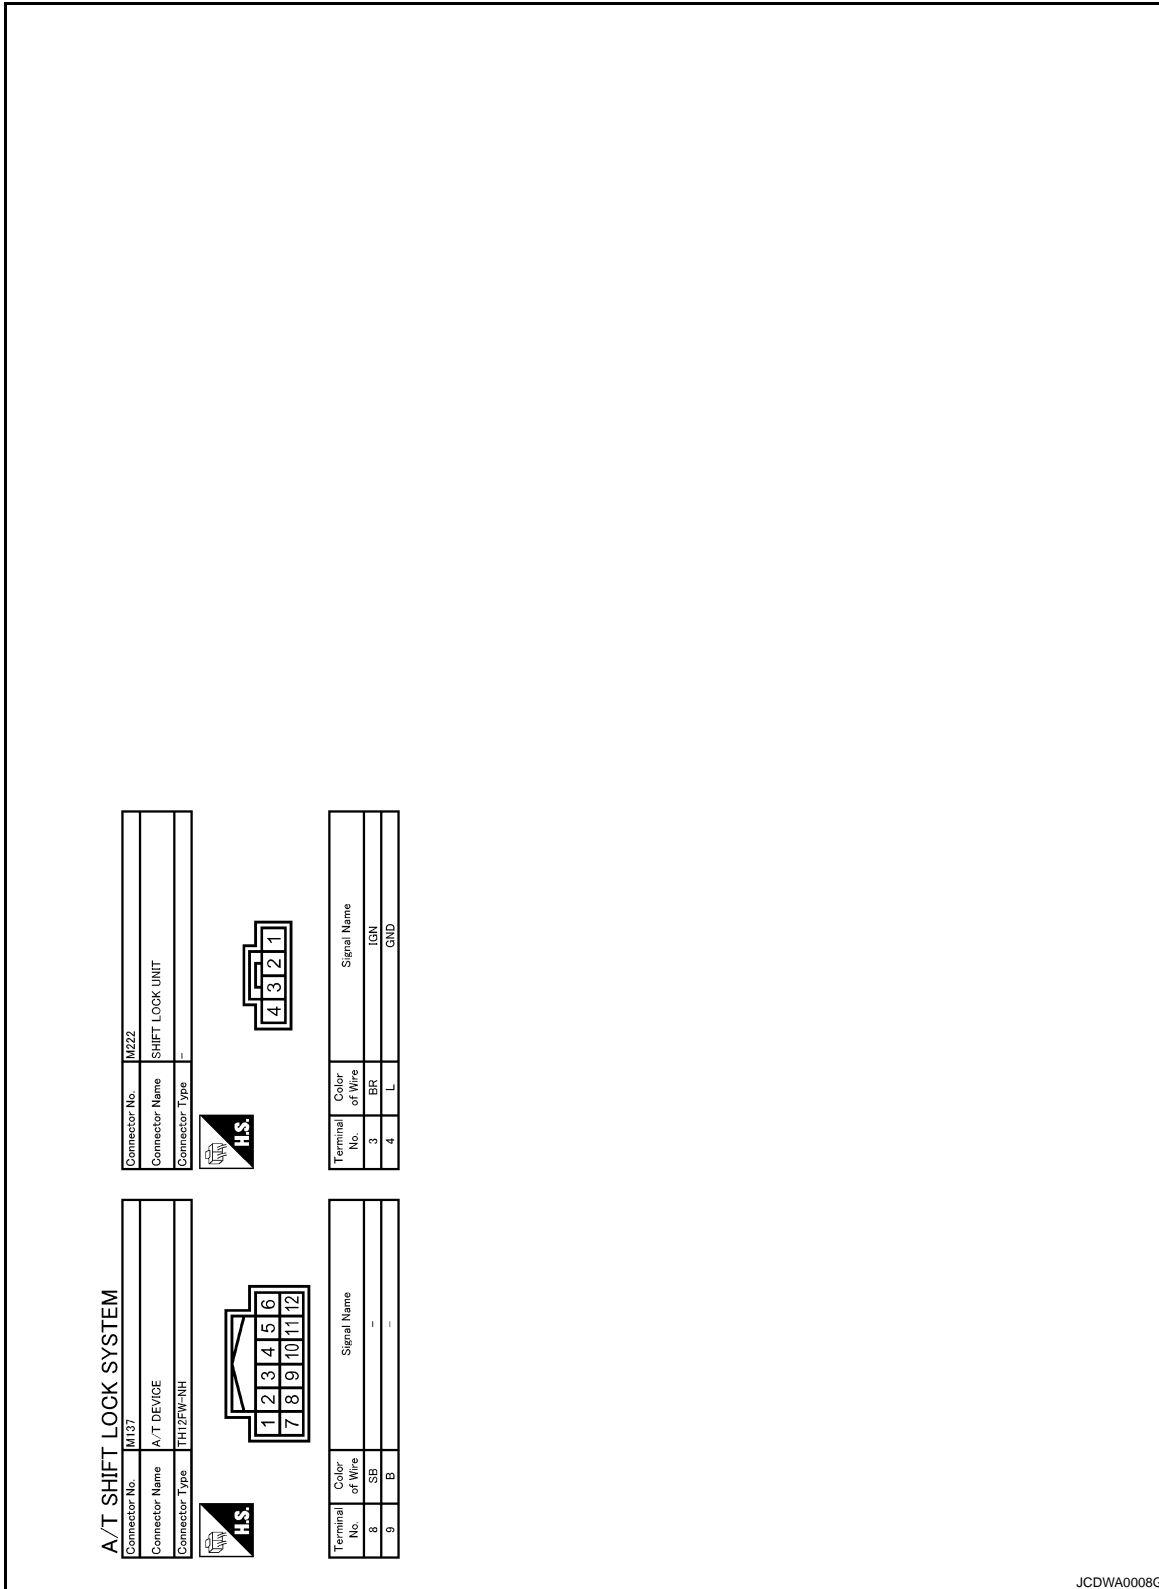

Component Function Check

INFOID:000000000957104

1. CHECK A/T SHIFT LOCK OPERATION

1. Turn ignition switch ON.
2. Shift the selector lever to the "P" position.
3. Attempt to shift the selector lever to any other position with the brake pedal released.

Can the selector lever be shifted to any other position?

SHIFT LOCK SYSTEM

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

- YES >> Go to [TM-175, "Diagnosis Procedure"](#).
- NO >> GO TO 2.

2.CHECK A/T SHIFT LOCK OPERATION

Attempt to shift the selector lever to any other position with the brake pedal depressed.

Can the selector lever be shifted to any other position?

- YES >> INSPECTION END
- NO >> Go to [TM-175, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000000957105

1.CHECK SELECTOR LEVER POSITION

Check the selector lever position for damage. Refer to [TM-230, "2WD : Inspection and Adjustment"](#) (2WD), [TM-230, "AWD : Inspection and Adjustment"](#) (AWD)

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Adjust control linkage. Refer to [TM-230, "2WD : Inspection and Adjustment"](#) (2WD), [TM-230, "AWD : Inspection and Adjustment"](#) (AWD).

2.CHECK POWER SOURCE

1. Turn ignition switch OFF.
2. Disconnect shift lock relay.
3. Check voltage between shift lock relay harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)	
Connector	Terminal	Ground			
E52	2		Ground	Depressed brake pedal.	Battery voltage
				Released brake pedal.	0 V

Is the inspection result normal?

- YES >> GO TO 7.
- NO-1 >> When pressing the brake pedal, the voltage is 0 V.: GO TO 2.
- NO-2 >> When releasing the brake pedal, the voltage is battery voltage.: GO TO 5.

3.CHECK POWER SOURCE

1. Disconnect stop lamp switch harness connector.
2. Check voltage between stop lamp switch harness connector and ground.

(+)		(-)	Voltage (Approx.)	
Connector	Terminal	Ground		
E110	1		Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Check the following. If NG, repair or replace damaged parts.
 - 10 A fuse [No. 7, located in the fuse block (J/B)]
 - Harness for short or open between battery and stop lamp switch harness connector terminal 1

4.CHECK STOP LAMP SWITCH

Check stop lamp switch. Refer to [TM-177, "Component Inspection \(Stop lamp switch\)"](#).

Is the inspection result normal?

- YES >> Repair or replace harness connector between stop lamp switch and shift lock relay.
- NO >> Replace stop lamp switch. Refer to [BR-19, "Exploded View"](#).

5.CHECK STOP LAMP SWITCH

SHIFT LOCK SYSTEM

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

Check stop lamp switch. Refer to [TM-177, "Component Inspection \(Stop lamp switch\)"](#).

Is the inspection result normal?

YES-1 >> Without ICC: Repair or replace harness between stop lamp switch and shift lock relay.

YES-2 >> With ICC: GO TO 6.

NO >> Replace stop lamp switch. Refer to [BR-19, "Exploded View"](#).

6. CHECK DTC WITH ICC

 With CONSULT-III

Check the DTC of "ICC". Refer to [CCS-24, "CONSULT-III Function \(ICC\)"](#).

Is any malfunction detected?

YES >> Check the DTC detected item. Refer to [CCS-24, "CONSULT-III Function \(ICC\)"](#).

NO >> Repair open circuit or short to power in harness or connectors.

7. CHECK GROUND CIRCUIT

1. Check continuity between shift lock relay harness connector and ground.

Shift lock relay harness connector		Ground	Continuity
Connector	Terminal		Existed
E52	1		Existed

2. If OK, check harness for short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to power in harness or connectors.

8. CHECK SHIFT LOCK RELAY

Check shift lock relay. Refer to [TM-177, "Component Inspection \(Shift lock relay\)"](#).

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace shift lock relay.

9. CHECK POWER SOURCE

1. Turn ignition switch ON.

2. Check voltage between shift lock relay harness connector and ground.

Shift lock relay harness connector		Ground	Voltage (Approx.)
Connector	Terminal		Battery voltage
E52	5		

Is the inspection result normal?

YES >> GO TO 10.

NO >> Check the following. If NG, repair or replace damaged parts.

- 10 A fuse [No. 3, located in the fuse block (J/B)]
- Harness for short or open between ignition switch and shift lock relay harness connector terminal 5

10. CHECK GROUND CIRCUIT

1. Disconnect A/T device harness connector.

2. Check continuity between A/T device harness connector and ground.

A/T device harness connector		Ground	Continuity
Connector	Terminal		Existed
M137	9		Existed

3. If OK, check harness for short to power.

Is the inspection result normal?

SHIFT LOCK SYSTEM

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

- YES >> GO TO 11.
 NO >> Repair open circuit or short to power in harness or connectors.

11. CHECK SHIFT LOCK SOLENOID

Check shift lock solenoid. Refer to [TM-177. "Component Inspection \(Shift lock solenoid\)".](#)

Is the inspection result normal?

- YES >> Check the following. If NG, repair or replace damaged parts.
- Harness for short or open between shift lock relay harness connector terminal 3 and A/T device harness connector terminal 8
 - Harness for short or open between A/T device harness conductor terminal 8 and shift lock unit harness connector terminal 3
 - Harness for short or open between A/T device harness conductor terminal 9 and shift lock unit harness connector terminal 4
- NO >> Replace shift lock unit. Refer to [TM-232. "2WD : Exploded View"](#) (2WD), [TM-233. "AWD : Exploded View"](#) (AWD).

Component Inspection (Shift lock solenoid)

INFOID:000000000957106

1. CHECK SHIFT LOCK SOLENOID

1. Remove shift lock unit. Refer to [TM-232. "2WD : Exploded View"](#) (2WD), [TM-233. "AWD : Exploded View"](#) (AWD).
2. Apply voltage to terminals 3 and 4 of shift lock unit connector, and then check that shift lock solenoid is activated.

CAUTION:

Connect the fuse between the terminals when applying the voltage.

(+ (fuse))		(-)		Condition	Status
Shift lock unit connector					
Connector	Terminal	Connector	Terminal		
M222	3	M222	4	Apply 12 V direct current between terminals 3 and 4.	Shift lock solenoid operates

Can the lock plate be moved up and down?

- YES >> INSPECTION END
 NO >> Replace shift lock unit. Refer to [TM-232. "2WD : Exploded View"](#) (2WD), [TM-233. "AWD : Exploded View"](#) (AWD).

Component Inspection (Shift lock relay)

INFOID:000000000957107

1. CHECK SHIFT LOCK RELAY

1. Disconnect shift lock relay.
2. Check continuity between shift lock relay terminal 3 and 5.

CAUTION:

Connect the fuse between the terminals when applying the voltage.

Shift lock relay connector				Condition	Continuity
Connector	Terminal	Connector	Terminal		
E52	3	E52	5	Apply 12 V direct current between terminals 1 and 2.	Existed
				OFF	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> Replace shift lock relay.

Component Inspection (Stop lamp switch)

INFOID:000000000957108

SHIFT LOCK SYSTEM

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

1. CHECK STOP LAMP SWITCH

1. Disconnect stop lamp switch harness connector.
2. Check continuity between stop lamp switch connector terminal 1 and 2.

Stop lamp switch connector				Condition	Continuity
Connector	Terminal	Connector	Terminal		
E110	1	E110	2	Brake pedal depressed	Existed
				Brake pedal not depressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch. Refer to [BR-19. "Exploded View"](#).

SELECTOR LEVER POSITION INDICATOR

< COMPONENT DIAGNOSIS >

[5AT: RE5R05A]

SELECTOR LEVER POSITION INDICATOR

Description

INFOID:000000000957109

Displays selector lever position.

Wiring Diagram

INFOID:000000000957110

Refer to [TM-182. "Wiring Diagram — A/T CONTROL SYSTEM —"](#).

Component Inspection

INFOID:000000000957111

1. CHECK SELECTOR LEVER POSITION INDICATOR

Check that selector lever position indicator lamps turn on.

CAUTION:

Connect the fuse between the terminals when applying the voltage.

(+ (fuse))		(-)		Condition	Status
Selector lever position indicator					
Connector	Terminal	Connector	Terminal		
M221	5	M221	7	Apply 12 V direct current between terminals 5 and 7.	"P" position indicator lamp illuminates
	4		7	Apply 12 V direct current between terminals 4 and 7.	"R" position indicator lamp illuminates
	2		7	Apply 12 V direct current between terminals 2 and 7.	"N" position indicator lamp illuminates
	3		7	Apply 12 V direct current between terminals 3 and 7.	"D" position indicator lamp illuminates
	6		9	Apply 12 V direct current between terminals 6 and 9.	"M" mode indicator lamp illuminates
	10		11	Apply 12 V direct current between terminals 10 and 11.	Night lamp illuminates

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the malfunctioning part. Refer to [TM-232. "2WD : Exploded View"](#) (2WD), [TM-233. "AWD : Exploded View"](#) (AWD).

ECU DIAGNOSIS

TCM

Reference Value

INFOID:000000000957112

VALUES ON DIAGNOSIS TOOL

NOTE:

- The CONSULT-III electrically displays shift timing and lock-up timing (that is, operation timing of each solenoid).
Check for time difference between actual shift timing and the CONSULT-III display. If the difference is noticeable, mechanical parts (except solenoids, sensors, etc.) may be malfunctioning. Check mechanical parts using applicable diagnostic procedures.
- Shift schedule (which implies gear position) displayed on CONSULT-III and that indicated in Service Manual may differ slightly. This occurs because of the following reasons:
 - Actual shift schedule has more or less tolerance or allowance,
 - Shift schedule indicated in Service Manual refers to the point where shifts start, and
 - Gear position displayed on CONSULT-III indicates the point where shifts are completed.
- Display of solenoid valves on CONSULT-III changes at the start of shifting, while gear position is displayed upon completion of shifting (which is computed by TCM).

Item name	Condition	Value / Status (Approx.)
VHCL/S SE-A/T	During driving	Approximately matches the speed meter reading.
VHCL/S SE-MTR	During driving	Approximately matches the speed meter reading.
ACCELE POSI	Released accelerator pedal.	0.0/8
	Fully depressed accelerator pedal.	8.0/8
CLSD THL POS	Released accelerator pedal.	ON
	Fully depressed accelerator pedal.	OFF
W/O THL POS	Fully depressed accelerator pedal.	ON
	Released accelerator pedal.	OFF
BRAKE SW	Depressed brake pedal.	ON
	Released brake pedal.	OFF
GEAR	During driving	1, 2, 3, 4, 5
ENGINE SPEED	Engine running	Closely matches the tachometer reading.
TURBINE REV	During driving (lockup ON)	Approximately matches the engine speed.
ATF TEMP SE 1	0°C (32° F) – 20°C (68°F) – 80°C (176°F)	3.3 – 2.7 – 0.9 V
ATF TEMP SE 2	0°C (32° F) – 20°C (68°F) – 80°C (176°F)	3.3 – 2.5 – 0.7 V
ATF TEMP 1	Ignition switch ON	Measured ATF temperature is displayed.
ATF PRES SW 2	Low coast brake engaged. Refer to TM-94 .	ON
	Low coast brake disengaged. Refer to TM-94 .	OFF

TCM

< ECU DIAGNOSIS >

[5AT: RE5R05A]


Item name	Condition	Value / Status (Approx.)	
SLCT LVR POSI	Selector lever in "N" and "P" positions	N/P	A
	Selector lever in "R" position	R	B
	Selector lever in "D" position	D	C
	Selector lever in "M" position: 5th gear	5	TM
	Selector lever in "M" position: 4th gear	4	
	Selector lever in "M" position: 3rd gear	3	
	Selector lever in "M" position: 2nd gear	2	
MANU MODE SW	Manual shift gate position (neutral)	ON	E
	Other than the above	OFF	
NON M-MODE SW	Manual shift gate position	OFF	F
	Other than the above	ON	
UP SW LEVER	Selector lever: UP (+ side)	ON	G
	Other than the above	OFF	
DOWN SW LEVER	Selector lever: DOWN (- side)	ON	H
	Other than the above	OFF	
SFT UP ST SW	Paddle shifter: UP (+ side)	ON	I
	Other than the above	OFF	
SFT DWN ST SW	Paddle shifter: DOWN (- side)	ON	J
	Other than the above	OFF	
TCC SOLENOID	Slip lock-up is active	0.2 – 0.4 A	K
	Lock-up is active	0.4 – 0.6 A	
	Other than the above	0 – 0.05 A	
LINE PRES SOL	During driving	0.2 – 0.6 A	L
FR/B SOLENOID	Front brake engaged. Refer to TM-94 .	0.6 – 0.8 A	M
	Front brake disengaged. Refer to TM-94 .	0 – 0.05 A	
I/C SOLENOID	Input clutch disengaged. Refer to TM-94 .	0.6 – 0.8 A	N
	Input clutch engaged. Refer to TM-94 .	0 – 0.05 A	
D/C SOLENOID	Direct clutch disengaged. Refer to TM-94 .	0.6 – 0.8 A	O
	Direct clutch engaged. Refer to TM-94 .	0 – 0.05 A	
HLR/C SOL	High and low reverse clutch disengaged. Refer to TM-94 .	0.6 – 0.8 A	P
	High and low reverse clutch engaged. Refer to TM-94 .	0 – 0.05 A	
ON OFF SOL	Low coast brake engaged. Refer to TM-94 .	ON	P
	Low coast brake disengaged. Refer to TM-94 .	OFF	
STARTER RELAY	Selector lever in "N" and "P" positions.	ON	P
	Selector lever in "R" and "D" positions.	OFF	
VEHICLE SPEED	During driving	Approximately matches the speed meter reading.	

TERMINAL LAYOUT

TCM

< ECU DIAGNOSIS >

[5AT: RE5R05A]

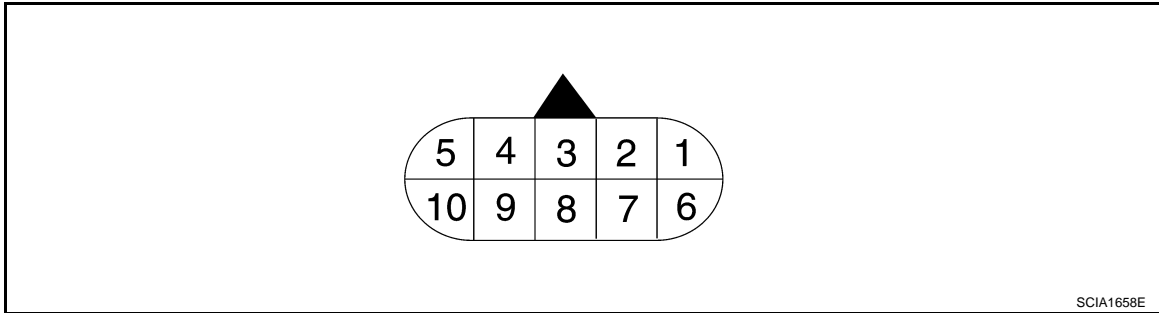


PHYSICAL VALUES

Terminal		Wire color	Description		Condition	Value (Approx.)
+	-		Signal name	Input/Output		
1	Ground	BR	Power supply (Memory back-up)	Input	Always	Battery voltage
2	Ground	BR	Power supply (Memory back-up)	Input	Always	Battery voltage
3	—	L	CAN-H	Input/Output	—	—
4	—	V	K-line (CONSULT-III signal)	Input/Output	—	—
5	Ground	B	Ground	Output	Always	0 V
6	Ground	Y	Power supply	Input	Ignition switch ON	Battery voltage
					Ignition switch OFF	0 V
7	Ground	R	Back-up lamp relay	Input	Ignition switch ON	Selector lever in "R" position. 0 V
						Selector lever in other positions. Battery voltage
8	—	P	CAN-L	Input/Output	—	—
9	Ground	GR	Starter relay	Output	Ignition switch ON	Selector lever in "N" and "P" positions. Battery voltage
						Selector lever in other positions. 0 V
10	Ground	B	Ground	Output	Always	0 V

Wiring Diagram — A/T CONTROL SYSTEM —

INFOID:000000000957113

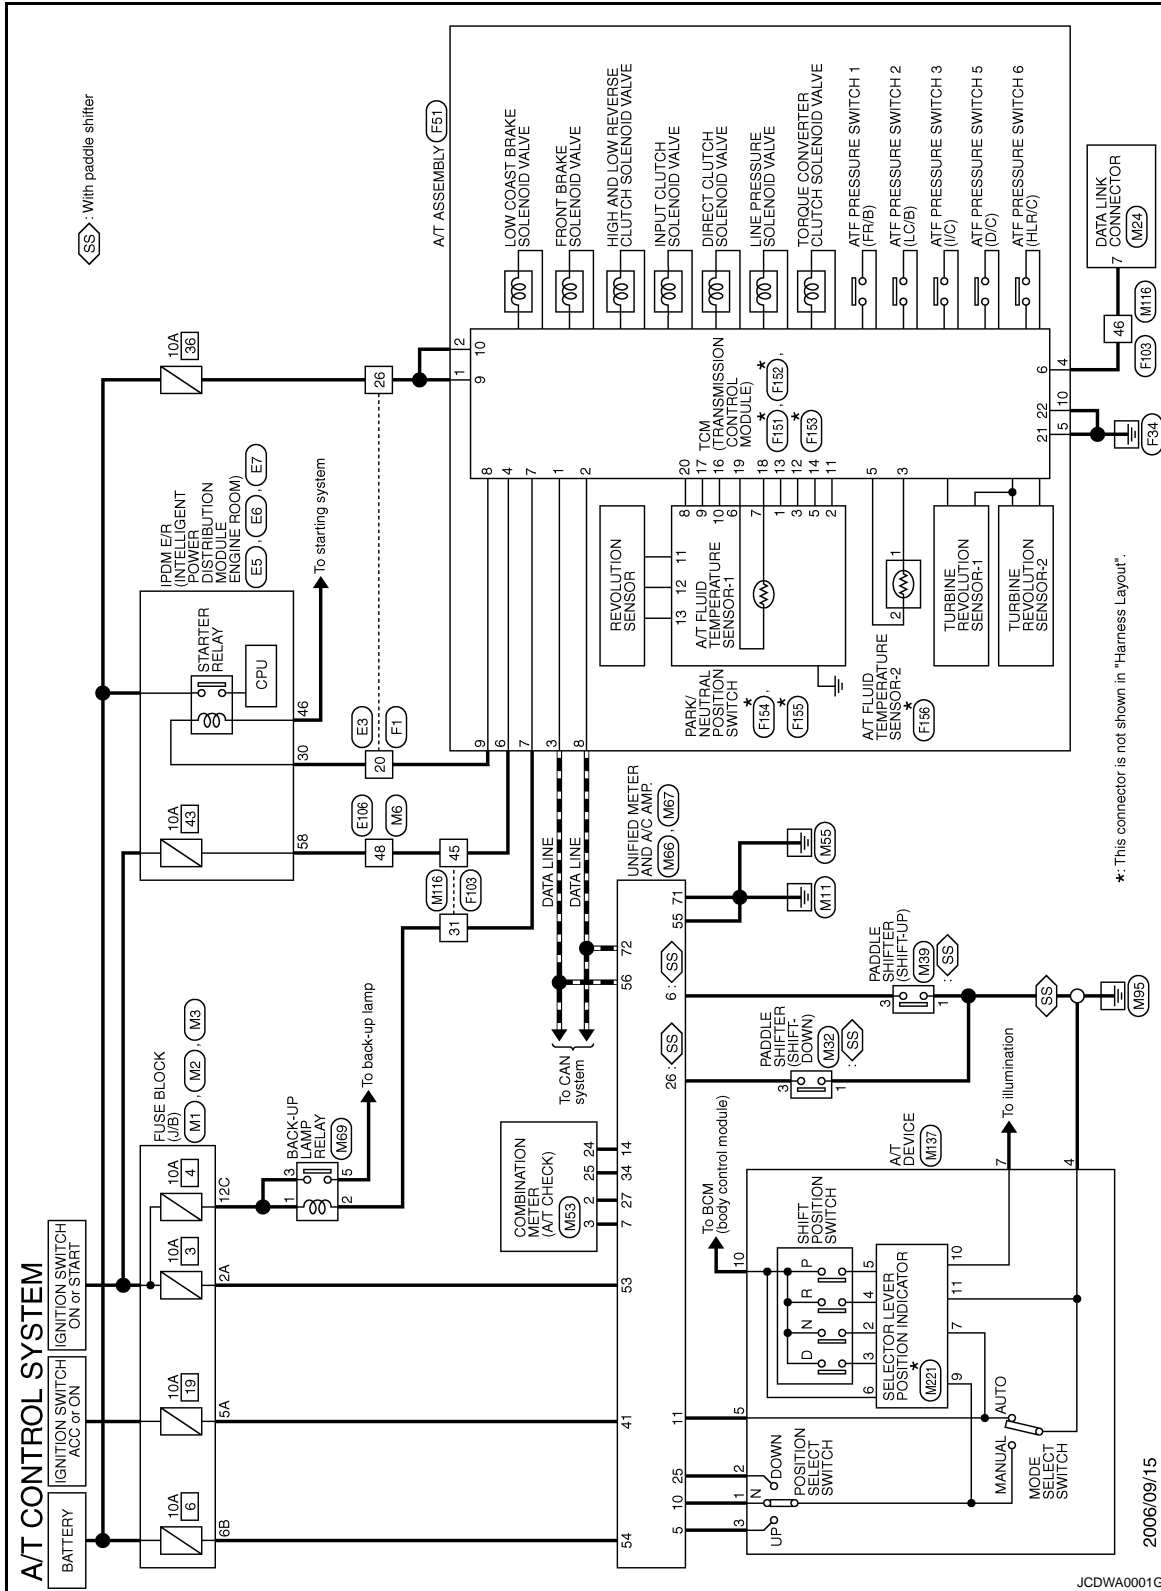

*: This connector is not shown in "Harness Layout".

2006/09/15


JCDWA0001G

A B C D E F G H I J K L M N O P

TM


A/T CONTROL SYSTEM

Connector No.	E3
Connector Name	WIRE TO WIRE
Connector Type	SAA38MB-RS10-SJZZ

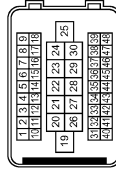


Terminal No.	Color of Wire	Signal Name
20	GR	-
26	R	-

Connector No.	E5
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-MA4-1V

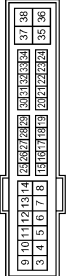


Terminal No.	Color of Wire	Signal Name
30	GR	-

Connector No.	E6
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH88FW-NH




Terminal No.	Color of Wire	Signal Name
46	BR	-

Connector No.	E7
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-M4

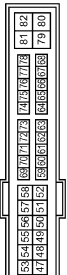


Terminal No.	Color of Wire	Signal Name
58	Y	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

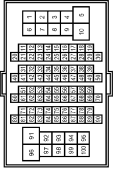


Terminal No.	Color of Wire	Signal Name
48	P	-

Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Type	SAA38FB-RS10-SJZZ

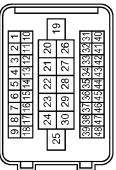


Terminal No.	Color of Wire	Signal Name
20	GR	-
26	BR	-

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	RK10FG-DGY




Terminal No.	Color of Wire	Signal Name
1	BR	-
2	BR	-
3	L	-
4	V	-
5	B	-
6	Y	-
7	R	-
8	P	-
9	GR	-
10	B	-

Connector No.	F03
Connector Name	WIRE TO WIRE
Connector Type	TK36FW-NS10



Terminal No.	Color of Wire	Signal Name
31	R	-
45	Y	-
46	V	-

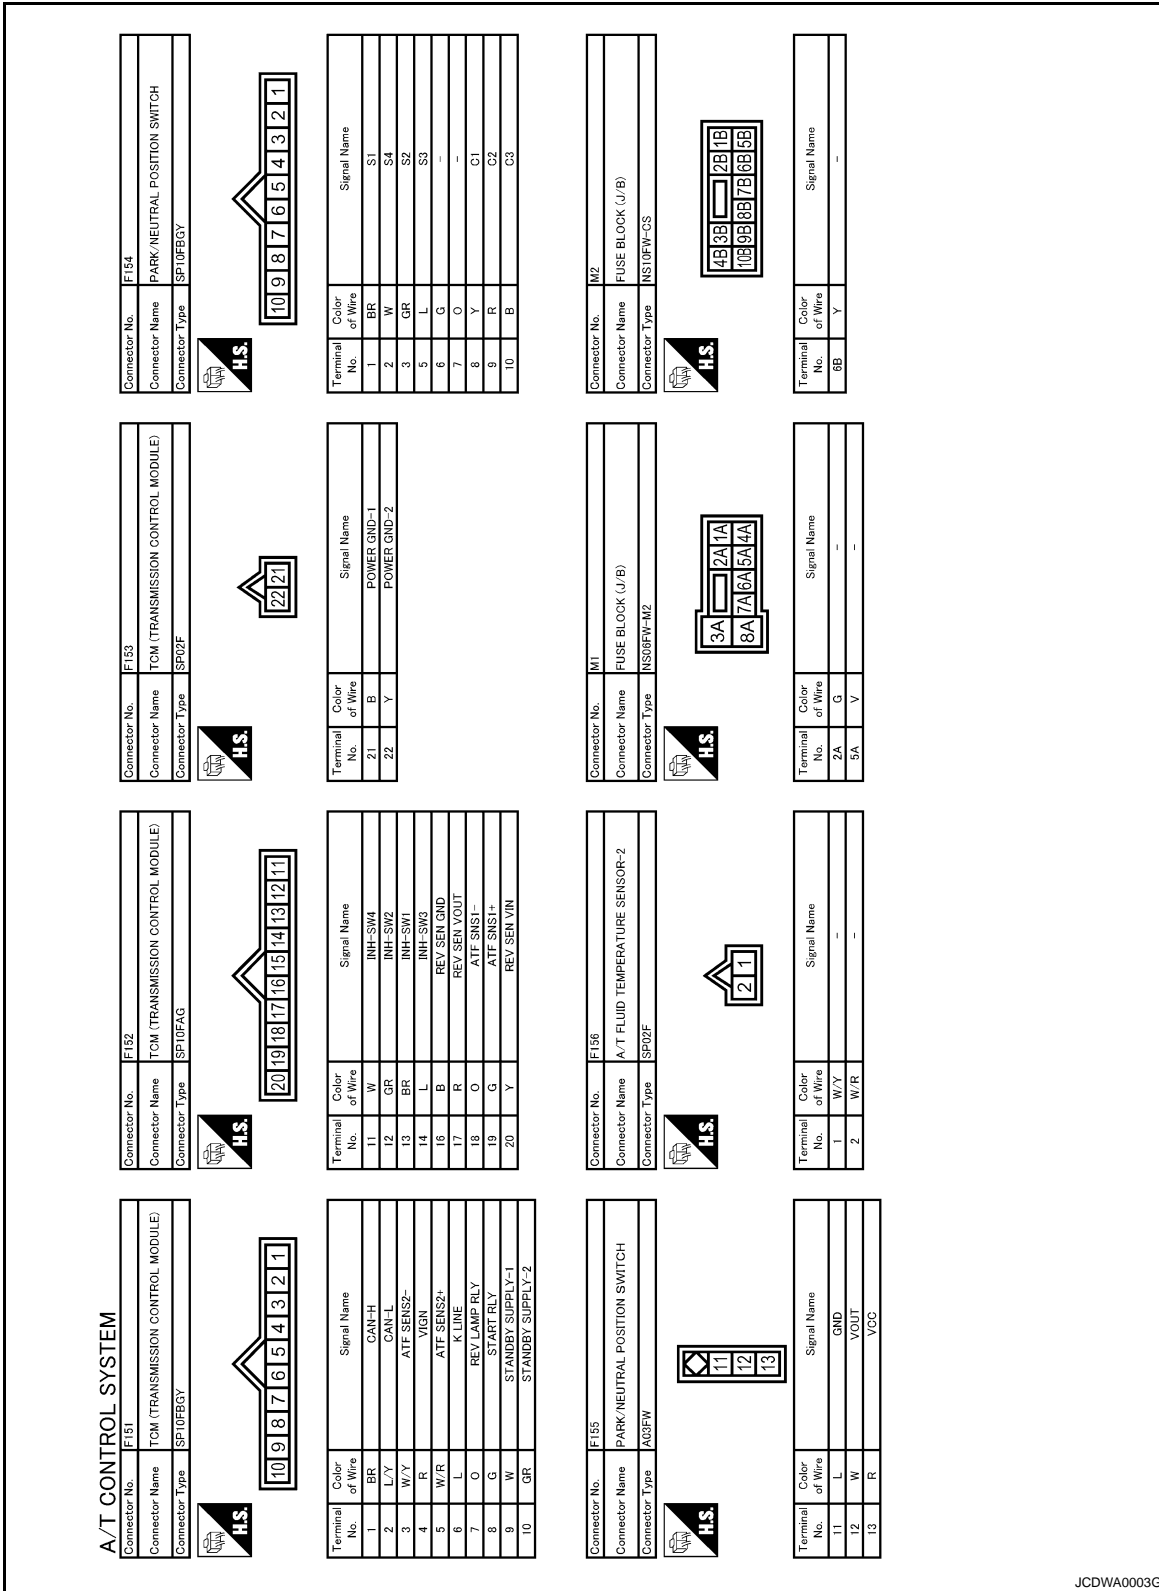

JCDWA0003G


A/T CONTROL SYSTEM

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-GS




Terminal No.	12C	Color of Wire	R	Signal Name	-
--------------	-----	---------------	---	-------------	---

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-GS16-TM4

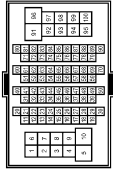 


Terminal No.	48	Color of Wire	BR	Signal Name	-
--------------	----	---------------	----	-------------	---

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

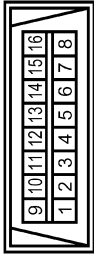 

Terminal No.	7	Color of Wire	V	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	M32
Connector Name	PADDLE SHIFTER (SHIFT DOWN)
Connector Type	AG3FW

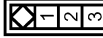 

Terminal No.	1	Color of Wire	W	Signal Name	-
	3	Color of Wire	G	Signal Name	-

Connector No.	M39
Connector Name	PADDLE SHIFTER (SHIFT UP)
Connector Type	AQ4FW



Terminal No.	1	Color of Wire	W	Signal Name	-
	3	Color of Wire	O	Signal Name	-

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	SA840FW




Terminal No.	2	Color of Wire	LG	Signal Name	COMM (METER->AMP.)
	3	Color of Wire	GR	Signal Name	COMM (AMP->METER)
	24	Color of Wire	BR	Signal Name	COMM (LCD->AMP.)
	25	Color of Wire	Y	Signal Name	COMM (AMP->LCD)

Connector No.	M66
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH40FW-NH



Terminal No.	5	Color of Wire	L	Signal Name	SHIFT UP SW
	6	Color of Wire	O	Signal Name	PADDLE UP
	7	Color of Wire	GR	Signal Name	COMM (AMP->METER)
	10	Color of Wire	W	Signal Name	MANUAL MODE SW
	11	Color of Wire	G	Signal Name	AUTO MODE SW
	14	Color of Wire	BR	Signal Name	COMM (LCD->AMP.)
	25	Color of Wire	V	Signal Name	SHIFT DOWN SW
	27	Color of Wire	LG	Signal Name	PADDLE DOWN
	34	Color of Wire	Y	Signal Name	COMM (AMP->LCD)

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FW-NH

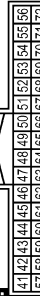 

Terminal No.	41	Color of Wire	V	Signal Name	AGC
	53	Color of Wire	G	Signal Name	IGN
	54	Color of Wire	Y	Signal Name	BAT
	55	Color of Wire	B	Signal Name	GND
	56	Color of Wire	L	Signal Name	CAN-H
	71	Color of Wire	B	Signal Name	GND
	72	Color of Wire	P	Signal Name	CAN-L

A

B

C

TM

E

F

G

H

I

J

K

L

M


N

O

P


A/T CONTROL SYSTEM

Connector No.	M89
Connector Name	BACK-UP LAMP RELAY
Connector Type	MS02EL-M2

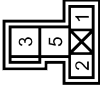


Terminal No.	Color of Wire	Signal Name
1	R	-
2	W	-
3	LG	-
5	O	-

Connector No.	M116
Connector Name	WIRE TO WIRE
Connector Type	TK36MW-HS10




Terminal No.	Color of Wire	Signal Name
31	W	-
45	BR	-
46	O	-

Connector No.	M137
Connector Name	A/T DEVICE
Connector Type	TH12FEW-4H

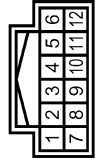

Terminal No.	Color of Wire	Signal Name
1	W	-
2	V	-
3	L	-
4	B	-
5	G	-
7	R	-
10	GR	-

Connector No.	M221
Connector Name	SELECTOR LEVER POSITION INDICATOR
Connector Type	TH12FEW

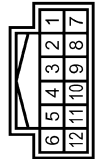

Terminal No.	Color of Wire	Signal Name
2	L	N
3	BR	D
4	G	R
5	P	P
6	V	M
7	O	AT
9	Y	MT
10	R	ILL
11	B	GND

JCDWA0005G

Fail-Safe

INFOID:000000000957114

The TCM has an electrical fail-safe mode. This mode makes it possible to operate even if there is an error in a main electronic control input/output signal circuit.

In fail-safe mode, even if the selector lever is "D" or "M" mode, the A/T is fixed in 2nd, 4th and 5th (depending on the breakdown position), so the customer should feel "slipping" or "poor acceleration".

Even when the electronic circuits are normal, under special conditions (for example, when slamming on the brake with the wheels spinning drastically and stopping the tire rotation), the A/T can go into fail-safe mode. If

TM-187

this happens, switch OFF the ignition switch for 10 seconds, then switch it ON again to return to the normal shift pattern. Therefore, the customer's vehicle has returned to normal, so handle according to the "Work Flow" (Refer to [TM-77. "Work Flow"](#)).

FAIL-SAFE FUNCTION

If any malfunction occurs in a sensor or solenoid, this function controls the A/T to mark driving possible.

Vehicle Speed Sensor

Signals are input from two systems - from vehicle speed sensor A/T (revolution sensor) installed on the A/T and from combination meter so normal driving is possible even if there is a malfunction in one of the systems. And if vehicle speed sensor A/T (revolution sensor) has unusual cases, 5th gear and manual mode are prohibited.

Accelerator Pedal Position Sensor

If there is a malfunction in one of the systems, the accelerator opening angle is controlled by ECM according to a pre-determined accelerator angle to make driving possible. And if there are malfunctions in tow systems, the engine speed is fixed by ECM to a pre-determined engine speed to make driving possible.

Throttle Position Sensor

If there is a malfunction in one of the systems, the accelerator opening angle is controlled by ECM according to a pre-determined accelerator angle to make driving possible. And if there are malfunctions in tow systems, the accelerator opening angle is controlled by the idle signal sent from the ECM which is based on input indicating either idle condition or off-idle condition (pre-determined accelerator opening) in order to make driving possible.

PNP Switch

In the unlikely event that a malfunction signal enters the TCM, the position indicator is switched OFF, the starter relay is switched OFF (starter starting is disabled), the back-up lamp relay switched OFF (back-up lamp is OFF) and the position is fixed to the "D" position to make driving possible.

Starter Relay

The starter relay is switched OFF. (Starter starting is disabled.)

A/T Interlock

- If there is an A/T interlock judgment malfunction, the A/T is fixed in 2nd gear to make driving possible.

NOTE:

When the vehicle is driven fixed in 2nd gear, a turbine revolution sensor malfunction is displayed, but this is not a turbine revolution sensor malfunction.

- When interlock is detected at the 3rd gear or more, it is locked at the 2nd gear.

A/T 1st Engine Braking

When there is an A/T first gear engine brake judgment malfunction, the low coast brake solenoid is switched OFF to avoid the engine brake operation.

Line Pressure Solenoid

The solenoid is switched OFF and the line pressure is set to the maximum hydraulic pressure to make driving possible.

Torque Converter Clutch Solenoid

The solenoid is switched OFF to release the lock-up.

Low Coast Brake Solenoid

When a malfunction (electrical or functional) occurs, in order to make driving possible. If the solenoid is ON, the A/T is held in 2nd gear. If the solenoid is OFF, the A/T is held in 4th gear. (Engine brake is not applied in 1st and 2nd gear.)

Input Clutch Solenoid

If a malfunction (electrical or functional) occurs with the solenoid either ON or OFF, the A/T is held in 4th gear to make driving possible.

Direct Clutch Solenoid

If a malfunction (electrical or functional) occurs with the solenoid either ON or OFF, the A/T is held in 4th gear to make driving possible.

Front Brake Solenoid

If a malfunction (electrical or functional) occurs with the solenoid ON, in order to make driving possible. The A/T is held in 5th gear. If the solenoid is OFF, the A/T is 4th gear.

< ECU DIAGNOSIS >

High and Low Reverse Clutch Solenoid

If a (electrical or functional) malfunction occurs with the solenoid either ON or OFF, the A/T is held in 4th gear to make driving possible.

Turbine Revolution Sensor 1 or 2

The control is the same as if there were no turbine revolution sensors, 5th gear and manual mode are prohibited.

DTC Inspection Priority Chart

INFOID:000000000957115

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

NOTE:

If DTC “U1000 CAN COMM CIRCUIT” is displayed with other DTC, first perform the trouble diagnosis for “DTC U1000 CAN COMMUNICATION LINE”. Refer to [TM-120, "Description"](#).

Priority	Detected items (DTC)
1	U1000 CAN communication line
2	Except above

DTC Index

INFOID:000000000957116

NOTE:

If DTC “U1000” is displayed with other DTC, first perform the trouble diagnosis for “DTC U1000 CAN COMMUNICATION LINE”. Refer to [TM-120, "Description"](#).

DTC		Items (CONSULT-III screen terms)	Reference page
OBD-II	Except OBD-II		
CONSULT-III or GST*1	CONSULT-III only "A/T"		
—	P0615	STARTER RELAY/CIRC	TM-121
P0700	P0700	TCM	TM-123
P0705	P0705	PNP SW/CIRC	TM-124
P0710	P1710	ATF TEMP SEN/CIRC	TM-147
P0717	P0717	TURBINE REV S/CIRC	TM-126
P0720	P0720	VEH SPD SEN/CIR AT	TM-128
P0725	P0725	ENGINE SPEED SIG	TM-131
P0731	P0731	A/T 1ST GR FNCTN	TM-133
P0732	P0732	A/T 2ND GR FNCTN	TM-135
P0733	P0733	A/T 3RD GR FNCTN	TM-137
P0734	P0734	A/T 4TH GR FNCTN	TM-139
P0735	P0735	A/T 5TH GR FNCTN	TM-141
P0740	P0740	TCC SOLENOID/CIRC	TM-143
P0744	P0744	A/T TCC S/V FNCTN	TM-144
P0745	P0745	L/PRESS SOL/CIRC	TM-145
—	P1705	TP SEN/CIRC A/T	TM-146
—	P1721	VEH SPD SE/CIR-MTR	TM-150
P1730	P1730	A/T INTERLOCK	TM-151
—	P1731	A/T 1ST E/BRAKING	TM-152
P1752	P1752	I/C SOLENOID/CIRC	TM-153
P1757	P1757	FR/B SOLENOID/CIRC	TM-155
P1762	P1762	D/C SOLENOID/CIRC	TM-157

TCM

< ECU DIAGNOSIS >

[5AT: RE5R05A]

DTC		Items (CONSULT-III screen terms)	Reference page
OBD-II	Except OBD-II		
CONSULT-III or GST*1	CONSULT-III only "A/T"		
P1767	P1767	HLR/C SOL/CIRC	TM-159
P1772	P1772	LC/B SOLENOID/CIRC	TM-161
P1774	P1774	LC/B SOLENOID FNCT	TM-162
—	P1815	MANU MODE SW/CIRC	TM-164
U1000	U1000	CAN COMM CIRCUIT	TM-120

*1: These numbers are prescribed by SAE J2012.

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

SYMPTOM DIAGNOSIS

SYSTEM SYMPTOM

Symptom Table

INFOID:000000000957117

- The diagnostics item numbers show the sequence for inspection. Inspect in order from item 1.
- Overhaul and inspection inside the A/T only if A/T fluid condition is NG. Refer to [TM-217, "Inspection"](#).

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
1	Shift Shock	Large shock. ("N" → "D" position)	ON vehicle	1. Engine idle speed	EC-16
				2. Engine speed signal	TM-131
				3. Accelerator pedal position sensor	TM-146
				4. A/T position	TM-230 (2WD), TM-230 (AWD)
				5. A/T fluid temperature sensor	TM-147
				6. Front brake solenoid valve	TM-155
				7. CAN communication line	TM-120
				8. A/T fluid level and state	TM-217
				9. Line pressure test	TM-224
				10. Control valve with TCM	TM-240
			OFF vehicle	11. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92, "Cross-Sectional View" .)	TM-291
2		Shock is too large when changing D1 → D2 or M1 → M2.	ON vehicle	1. Accelerator pedal position sensor	TM-146
				2. A/T position	TM-230 (2WD), TM-230 (AWD)
				3. Direct clutch solenoid valve	TM-157
				4. CAN communication line	TM-120
				5. Engine speed signal	TM-131
				6. Turbine revolution sensor	TM-126
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128, TM-150
				8. A/T fluid level and state	TM-217
				9. Control valve with TCM	TM-240
			OFF vehicle	10. Direct clutch	TM-351

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
3		Shock is too large when changing D2 → D3 or M2 → M3.	ON vehicle	1. Accelerator pedal position sensor	TM-146
				2. A/T position	TM-230 (2WD), TM-230 (AWD)
				3. High and low reverse clutch solenoid valve	TM-159
				4. CAN communication line	TM-120
				5. Engine speed signal	TM-131
				6. Turbine revolution sensor	TM-126
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				8. A/T fluid level and state	TM-217
				9. Control valve with TCM	TM-240
			OFF vehicle	10. High and low reverse clutch	TM-349
4	Shift Shock	Shock is too large when changing D3 → D4 or M3 → M4.	ON vehicle	1. Accelerator pedal position sensor	TM-146
				2. A/T position	TM-230 (2WD), TM-230 (AWD)
				3. Input clutch solenoid valve	TM-153
				4. CAN communication line	TM-120
				5. Engine speed signal	TM-131
				6. Turbine revolution sensor	TM-126
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				8. A/T fluid level and state	TM-217
				9. Control valve with TCM	TM-240
			OFF vehicle	10. Input clutch	TM-339
5		Shock is too large when changing D4 → D5 or M4 → M5.	ON vehicle	1. Accelerator pedal position sensor	TM-146
				2. A/T position	TM-230 (2WD), TM-230 (AWD)
				3. Front brake solenoid valve	TM-155
				4. CAN communication line	TM-120
				5. Engine speed signal	TM-131
				6. Turbine revolution sensor	TM-126
				7. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				8. A/T fluid level and state	TM-217
				9. Control valve with TCM	TM-240
			OFF vehicle	10. Front brake (brake band)	TM-291
			11. Input clutch	TM-339	

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
6		Shock is too large for downshift when accelerator pedal is pressed.	ON vehicle	1. Accelerator pedal position sensor	TM-146
				2. A/T position	TM-230 (2WD), TM-230 (AWD)
				3. CAN communication line	TM-120
				4. Engine speed signal	TM-131
				5. Turbine revolution sensor	TM-126
				6. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				7. A/T fluid level and state	TM-217
				8. Control valve with TCM	TM-240
			OFF vehicle	9. Front brake (brake band)	TM-291
				10. Input clutch	TM-339
				11. High and low reverse clutch	TM-349
				12. Direct clutch	TM-351
7	Shift Shock	Shock is too large for upshift when accelerator pedal is released.	ON vehicle	1. Accelerator pedal position sensor	TM-146
				2. A/T position	TM-230 (2WD), TM-230 (AWD)
				3. Engine speed signal	TM-131
				4. CAN communication line	TM-120
				5. Turbine revolution sensor	TM-126
				6. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				7. A/T fluid level and state	TM-217
				8. Control valve with TCM	TM-240
			OFF vehicle	9. Front brake (brake band)	TM-291
				10. Input clutch	TM-339
				11. High and low reverse clutch	TM-349
				12. Direct clutch	TM-351
8		Shock is too large for lock-up.	ON vehicle	1. Accelerator pedal position sensor	TM-146
				2. A/T position	TM-230 (2WD), TM-230 (AWD)
				3. Engine speed signal	TM-131
				4. CAN communication line	TM-120
				5. Turbine revolution sensor	TM-126
				6. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				7. Torque converter clutch solenoid valve	TM-143
				8. A/T fluid level and state	TM-217
				9. Control valve with TCM	TM-240
			OFF vehicle	10. Torque converter	TM-332

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
9	Shift Shock	Shock is too large during engine brake.	ON vehicle	1. Accelerator pedal position sensor	TM-146
				2. A/T position	TM-230 (2WD), TM-230 (AWD)
				3. CAN communication line	TM-120
				4. A/T fluid level and state	TM-217
				5. Control valve with TCM	TM-240
			OFF vehicle	6. Front brake (brake band)	TM-291
				7. Input clutch	TM-339
				8. High and low reverse clutch	TM-349
				9. Direct clutch	TM-351
10	No Up Shift	Gear does not change from D1 → D2 or from M1 → M2.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Direct clutch solenoid valve	TM-157
				4. Line pressure test	TM-224
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
		OFF vehicle	7. Direct clutch	TM-351	
11	No Up Shift	Gear does not change from D2 → D3 or from M2 → M3.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. High and low reverse clutch solenoid valve	TM-159
				4. Line pressure test	TM-224
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
		OFF vehicle	7. High and low reverse clutch	TM-349	
12	No Up Shift	Gear does not change from D3 → D4 or from M3 → M4.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Input clutch solenoid valve	TM-153
				4. Front brake solenoid valve	TM-155
				5. Line pressure test	TM-224
				6. CAN communication line	TM-120
				7. Control valve with TCM	TM-240
		OFF vehicle	8. Input clutch	TM-339	

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
13	No Up Shift	Gear does not change from D4 → D5 or from M4 → M5.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Front brake solenoid valve	TM-155
				4. Direct clutch solenoid valve	TM-157
				5. Turbine revolution sensor	TM-126
				6. Line pressure test	TM-224
				7. CAN communication line	TM-120
				8. Control valve with TCM	TM-240
			OFF vehicle	9. Front brake (brake band)	TM-291
				10. Input clutch	TM-339
14		In "D" or "M" position, does not downshift to 4th gear.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Front brake solenoid valve	TM-155
				4. Direct clutch solenoid valve	TM-157
				5. CAN communication line	TM-120
				6. Line pressure test	TM-224
				7. Control valve with TCM	TM-240
			OFF vehicle	8. Front brake (brake band)	TM-291
				9. Input clutch	TM-339
15	No Down Shift	In "D" or "M" position, does not downshift to 3rd gear.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Input clutch solenoid valve	TM-153
				4. Front brake solenoid valve	TM-155
				5. CAN communication line	TM-120
				6. Line pressure test	TM-224
				7. Control valve with TCM	TM-240
			OFF vehicle	8. Input clutch	TM-339
16		In "D" or "M" position, does not downshift to 2nd gear.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. High and low reverse clutch solenoid valve	TM-159
				4. CAN communication line	TM-120
				5. Line pressure test	TM-224
				6. Control valve with TCM	TM-240
			OFF vehicle	7. High and low reverse clutch	TM-349

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
17	No Down Shift	In "D" or "M" position, does not downshift to 1st gear.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Direct clutch solenoid valve	TM-157
				4. CAN communication line	TM-120
				5. Line pressure test	TM-224
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Direct clutch	TM-351
18	Slips/Will Not Engage	When "D" or "M" position, remains in 1st gear.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Direct clutch solenoid valve	TM-157
				4. Line pressure test	TM-224
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
			OFF vehicle	7. 3rd one-way clutch	TM-337
				8. 1st one-way clutch	TM-344
				9. Gear system	TM-281
				10. Reverse brake	TM-291
				11. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 . "Cross-Sectional View".)	TM-291
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 . "Cross-Sectional View".)	TM-291
19		When "D" or "M" position, remains in 2nd gear.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Low coast brake solenoid valve	TM-161
				4. Line pressure test	TM-224
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
			OFF vehicle	7. 3rd one-way clutch	TM-337
				8. Gear system	TM-281
				9. Direct clutch	TM-351
				10. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 . "Cross-Sectional View".)	TM-291

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page	
20		When "D" or "M" position, remains in 3rd gear.	ON vehicle	1. A/T fluid level and state	TM-217	A
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150	B
				3. Line pressure test	TM-224	C
				4. CAN communication line	TM-120	
				5. Control valve with TCM	TM-240	
			OFF vehicle	6. 3rd one-way clutch	TM-337	TM
				7. Gear system	TM-281	E
				8. High and low reverse clutch	TM-349	
				9. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , "Cross-Sectional View".)	TM-291	F
				10. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , "Cross-Sectional View".)	TM-291	
21	Slips/Will Not Engage	When "D" or "M" position, remains in 4th gear.	ON vehicle	1. A/T fluid level and state	TM-217	G
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150	H
				3. Input clutch solenoid valve	TM-153	
				4. Direct clutch solenoid valve	TM-157	
				5. High and low reverse clutch solenoid valve	TM-159	I
				6. Low coast brake solenoid valve	TM-161	
				7. Front brake solenoid valve	TM-155	J
				8. Line pressure test	TM-224	
				9. CAN communication line	TM-120	K
				10. Control valve with TCM	TM-240	
			OFF vehicle	11. Input clutch	TM-339	L
				12. Gear system	TM-281	
				13. High and low reverse clutch	TM-349	M
				14. Direct clutch	TM-351	
22		When "D" or "M" position, remains in 5th gear.	ON vehicle	1. A/T fluid level and state	TM-217	N
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150	O
				3. Front brake solenoid valve	TM-155	
				4. Line pressure test	TM-224	P
				5. CAN communication line	TM-120	
				6. Control valve with TCM	TM-240	
			OFF vehicle	7. Front brake (brake band)	TM-291	
				8. Input clutch	TM-339	
				9. Gear system	TM-281	
				10. High and low reverse clutch	TM-349	

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page				
23		Vehicle cannot be started from D1.	ON vehicle	1. A/T fluid level and state	TM-217				
				2. Accelerator pedal position sensor	TM-146				
				3. Line pressure test	TM-224				
				4. CAN communication line	TM-120				
				5. Control valve with TCM	TM-240				
			OFF vehicle	6. Torque converter	TM-332				
				7. Oil pump assembly	TM-334				
				8. 3rd one-way clutch	TM-337				
				9. 1st one-way clutch	TM-344				
				10. Gear system	TM-281				
				11. Reverse brake	TM-291				
				12. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291				
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291				
24	Slips/Will Not Engage	Does not lock-up.	ON vehicle	1. A/T fluid level and state	TM-217				
				2. Line pressure test	TM-224				
				3. Engine speed signal	TM-131				
				4. Turbine revolution sensor	TM-126				
				5. Torque converter clutch solenoid valve	TM-143				
				6. CAN communication line	TM-120				
				7. Control valve with TCM	TM-240				
			OFF vehicle	8. Torque converter	TM-332				
				9. Oil pump assembly	TM-334				
				25		Does not hold lock-up condition.	ON vehicle	1. A/T fluid level and state	TM-217
								2. Line pressure test	TM-224
								3. Engine speed signal	TM-131
								4. Turbine revolution sensor	TM-126
5. Torque converter clutch solenoid valve	TM-143								
6. CAN communication line	TM-120								
7. Control valve with TCM	TM-240								
OFF vehicle	8. Torque converter	TM-332							
	9. Oil pump assembly	TM-334							
	26		Lock-up is not released.				ON vehicle	1. A/T fluid level and state	TM-217
								2. Line pressure test	TM-224
								3. Engine speed signal	TM-131
								4. Turbine revolution sensor	TM-126
5. Torque converter clutch solenoid valve				TM-143					
6. CAN communication line				TM-120					
7. Control valve with TCM				TM-240					
OFF vehicle				8. Torque converter	TM-332				
				9. Oil pump assembly	TM-334				

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
27		No shock at all or the clutch slips when vehicle changes speed D1 → D2 or M1 → M2.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Direct clutch solenoid valve	TM-157
				4. CAN communication line	TM-120
				5. Line pressure test	TM-224
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Torque converter	TM-332
				8. Oil pump assembly	TM-334
				9. 3rd one-way clutch	TM-337
				10. Gear system	TM-281
				11. Direct clutch	TM-351
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
28	Slips/Will Not Engage	No shock at all or the clutch slips when vehicle changes speed D2 → D3 or M2 → M3.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. High and low reverse clutch solenoid valve	TM-159
				4. CAN communication line	TM-120
				5. Line pressure test	TM-224
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Torque converter	TM-332
				8. Oil pump assembly	TM-334
				9. 3rd one-way clutch	TM-337
				10. Gear system	TM-281
				11. High and low reverse clutch	TM-349
				12. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291				
29		No shock at all or the clutch slips when vehicle changes speed D3 → D4 or M3 → M4.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Input clutch solenoid valve	TM-153
				4. Front brake solenoid valve	TM-155
				5. CAN communication line	TM-120
				6. Line pressure test	TM-224
				7. Control valve with TCM	TM-240
			OFF vehicle	8. Torque converter	TM-332
				9. Oil pump assembly	TM-334
				10. Input clutch	TM-339
				11. Gear system	TM-281
				12. High and low reverse clutch	TM-349
				13. Direct clutch	TM-351

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
30	Slips/Will Not Engage	No shock at all or the clutch slips when vehicle changes speed D4 → D5 or M4 → M5.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Front brake solenoid valve	TM-155
				4. Direct clutch solenoid valve	TM-157
				5. CAN communication line	TM-120
				6. Line pressure test	TM-224
				7. Control valve with TCM	TM-240
			OFF vehicle	8. Torque converter	TM-332
				9. Oil pump assembly	TM-334
				10. Front brake (brake band)	TM-291
				11. Input clutch	TM-339
				12. Gear system	TM-281
				13. High and low reverse clutch	TM-349
31	Slips/Will Not Engage	When you press the accelerator pedal and shift speed D5 → D4 or M5 → M4 the engine idles or the A/T slips.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Front brake solenoid valve	TM-155
				4. Direct clutch solenoid valve	TM-157
				5. CAN communication line	TM-120
				6. Line pressure test	TM-224
				7. Control valve with TCM	TM-240
			OFF vehicle	8. Torque converter	TM-332
				9. Oil pump assembly	TM-334
				10. Input clutch	TM-339
				11. Gear system	TM-281
				12. High and low reverse clutch	TM-349
				13. Direct clutch	TM-351

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
32	Slips/Will Not Engage	When you press the accelerator pedal and shift speed D4 → D3 or M4 → M3 the engine idles or the A/T slips.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Input clutch solenoid valve	TM-153
				4. Front brake solenoid valve	TM-155
				5. CAN communication line	TM-120
				6. Line pressure test	TM-224
				7. Control valve with TCM	TM-240
			OFF vehicle	8. Torque converter	TM-332
				9. Oil pump assembly	TM-334
				10. 3rd one-way clutch	TM-337
				11. Gear system	TM-281
				12. High and low reverse clutch	TM-349
				13. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
33		When you press the accelerator pedal and shift speed D3 → D2 or M3 → M2 the engine idles or the A/T slips.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. High and low reverse clutch solenoid valve	TM-159
				4. Direct clutch solenoid valve	TM-157
				5. CAN communication line	TM-120
				6. Line pressure test	TM-224
				7. Control valve with TCM	TM-240
			OFF vehicle	8. Torque converter	TM-332
				9. Oil pump assembly	TM-334
				10. 3rd one-way clutch	TM-337
				11. Gear system	TM-281
				12. Direct clutch	TM-351
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
34		When you press the accelerator pedal and shift speed D2 → D1 or M2 → M1 the engine idles or the A/T slips.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				3. Direct clutch solenoid valve	TM-157
				4. CAN communication line	TM-120
				5. Line pressure test	TM-224
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Torque converter	TM-332
				8. Oil pump assembly	TM-334
				9. 3rd one-way clutch	TM-337
				10. 1st one-way clutch	TM-344
				11. Gear system	TM-281
				12. Reverse brake	TM-291
				13. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
35	Slips/Will Not Engage	With selector lever in "D" position, acceleration is extremely poor.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. Accelerator pedal position sensor	TM-146
				4. CAN communication line	TM-120
				5. PNP switch	TM-124
				6. A/T position	TM-230 (2WD), TM-230 (AWD)
				7. Control valve with TCM	TM-240
			OFF vehicle	8. Torque converter	TM-332
				9. Oil pump assembly	TM-334
				10. 1st one-way clutch	TM-344
				11. Gear system	TM-281
				12. Reverse brake	TM-291
				13. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
36		With selector lever in "R" position, acceleration is extremely poor.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. Accelerator pedal position sensor	TM-146
				4. High and low reverse clutch solenoid valve	TM-159
				5. CAN communication line	TM-120
				6. PNP switch	TM-124
				7. A/T position	TM-230 (2WD), TM-230 (AWD)
				8. Control valve with TCM	TM-240
			OFF vehicle	9. Gear system	TM-281
				10. Output shaft	TM-291
				11. Reverse brake	TM-291
37	Slips/Will Not Engage	While starting off by accelerating in 1st, engine races or slippage occurs.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. Accelerator pedal position sensor	TM-146
				4. CAN communication line	TM-120
				5. Control valve with TCM	TM-240
			OFF vehicle	6. Torque converter	TM-332
				7. Oil pump assembly	TM-334
				8. 3rd one-way clutch	TM-337
				9. 1st one-way clutch	TM-344
				10. Gear system	TM-281
				11. Reverse brake	TM-291
				12. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
38		While accelerating in 2nd, engine races or slippage occurs.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. Accelerator pedal position sensor	TM-146
				4. CAN communication line	TM-120
				5. Direct clutch solenoid valve	TM-157
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Torque converter	TM-332
				8. Oil pump assembly	TM-334
				9. 3rd one-way clutch	TM-337
				10. Gear system	TM-281
				11. Direct clutch	TM-351
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
39		While accelerating in 3rd, engine races or slippage occurs.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. Accelerator pedal position sensor	TM-146
				4. CAN communication line	TM-120
				5. High and low reverse clutch solenoid valve	TM-159
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Torque converter	TM-332
				8. Oil pump assembly	TM-334
				9. 3rd one-way clutch	TM-337
				10. Gear system	TM-281
				11. High and low reverse clutch	TM-349
				12. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
				13. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
40	Slips/Will Not Engage	While accelerating in 4th, engine races or slippage occurs.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. Accelerator pedal position sensor	TM-146
				4. CAN communication line	TM-120
				5. Input clutch solenoid valve	TM-153
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Torque converter	TM-332
				8. Oil pump assembly	TM-334
				9. Input clutch	TM-339
				10. Gear system	TM-281
				11. High and low reverse clutch	TM-349
				12. Direct clutch	TM-351
41		While accelerating in 5th, engine races or slippage occurs.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. Accelerator pedal position sensor	TM-146
				4. CAN communication line	TM-120
				5. Front brake solenoid valve	TM-155
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Torque converter	TM-332
				8. Oil pump assembly	TM-334
				9. Front brake (brake band)	TM-291
				10. Input clutch	TM-339
				11. Gear system	TM-281
				12. High and low reverse clutch	TM-349

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
42		Slips at lock-up.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. Engine speed signal	TM-131
				4. Turbine revolution sensor	TM-126
				5. Torque converter clutch solenoid valve	TM-143
				6. CAN communication line	TM-120
				7. Control valve with TCM	TM-240
			OFF vehicle	8. Torque converter	TM-332
				9. Oil pump assembly	TM-334
43	Slips/Will Not Engage	No creep at all.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. Accelerator pedal position sensor	TM-146
				4. Direct clutch solenoid valve	TM-157
				5. PNP switch	TM-124
				6. CAN communication line	TM-120
				7. A/T position	TM-230 (2WD), TM-230 (AWD)
				8. Control valve with TCM	TM-240
			OFF vehicle	9. Torque converter	TM-332
				10. Oil pump assembly	TM-334
				11. 1st one-way clutch	TM-344
				12. Gear system	TM-281
				13. Reverse brake	TM-291
				14. Direct clutch	TM-351
				15. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , "Cross-Sectional View".)	TM-291
				16. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , "Cross-Sectional View".)	TM-291
44		Vehicle cannot run in all positions.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. PNP switch	TM-124
				4. A/T position	TM-230 (2WD), TM-230 (AWD)
				5. Control valve with TCM	TM-240
			OFF vehicle	6. Oil pump assembly	TM-334
				7. Gear system	TM-281
				8. Output shaft	TM-291

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
45	Slips/Will Not Engage	With selector lever in "D" position, driving is not possible.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. PNP switch	TM-124
				4. A/T position	TM-230 (2WD), TM-230 (AWD)
				5. Control valve with TCM	TM-240
			OFF vehicle	6. Torque converter	TM-332
				7. Oil pump assembly	TM-334
				8. 1st one-way clutch	TM-344
				9. Gear system	TM-281
				10. Reverse brake	TM-291
				11. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , "Cross-Sectional View".)	TM-291
				12. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , "Cross-Sectional View".)	TM-291
46		With selector lever in "R" position, driving is not possible.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. PNP switch	TM-124
				4. A/T position	TM-230 (2WD), TM-230 (AWD)
				5. Control valve with TCM	TM-240
			OFF vehicle	6. Gear system	TM-281
				7. Output shaft	TM-291
				8. Reverse brake	TM-291
47	Does Not Change	Does not change M5 → M4.	ON vehicle	1. PNP switch	TM-124
				2. A/T fluid level and state	TM-217
				3. A/T position	TM-230 (2WD), TM-230 (AWD)
				4. Manual mode switch	TM-164
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Front brake (brake band)	TM-291

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
48		Does not change M4 → M3.	ON vehicle	1. PNP switch	TM-124
				2. A/T fluid level and state	TM-217
				3. A/T position	TM-230 (2WD), TM-230 (AWD)
				4. Manual mode switch	TM-164
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Front brake (brake band)	TM-291
				8. Input clutch	TM-339
49	Does Not Change	Does not change M3 → M2.	ON vehicle	1. PNP switch	TM-124
				2. A/T fluid level and state	TM-217
				3. A/T position	TM-230 (2WD), TM-230 (AWD)
				4. Manual mode switch	TM-164
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Front brake (brake band)	TM-291
				8. Input clutch	TM-339
				9. High and low reverse clutch	TM-349
50		Does not change M2 → M1.	ON vehicle	1. PNP switch	TM-124
				2. A/T fluid level and state	TM-217
				3. A/T position	TM-230 (2WD), TM-230 (AWD)
				4. Manual mode switch	TM-164
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Input clutch	TM-339
				8. High and low reverse clutch	TM-349
				9. Direct clutch	TM-351
51		Cannot be changed to manual mode.	ON vehicle	1. Manual mode switch	TM-164
				2. Turbine revolution sensor	TM-126
				3. CAN communication line	TM-120

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
52		Shift point is high in "D" position.	ON vehicle	1. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				2. Accelerator pedal position sensor	TM-146
				3. CAN communication line	TM-120
				4. A/T fluid temperature sensor	TM-147
				5. Control valve with TCM	TM-240
53		Shift point is low in "D" position.	ON vehicle	1. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				2. Accelerator pedal position sensor	TM-146
				3. CAN communication line	TM-120
				4. Control valve with TCM	TM-240
54	Others	Judder occurs during lock-up.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Engine speed signal	TM-131
				3. Turbine revolution sensor	TM-126
				4. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				5. Accelerator pedal position sensor	TM-146
				6. CAN communication line	TM-120
				7. Torque converter clutch solenoid valve	TM-143
				8. Control valve with TCM	TM-240
			OFF vehicle	9. Torque converter	TM-332
			55		Strange noise in "R" position.
2. Engine speed signal	TM-131				
3. CAN communication line	TM-120				
4. Control valve with TCM	TM-240				
OFF vehicle	5. Torque converter	TM-332			
	6. Oil pump assembly	TM-334			
	7. Gear system	TM-281			
	8. High and low reverse clutch	TM-349			
	9. Reverse brake	TM-291			
56		Strange noise in "N" position.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Engine speed signal	TM-131
				3. CAN communication line	TM-120
				4. Control valve with TCM	TM-240
			OFF vehicle	5. Torque converter	TM-332
				6. Oil pump assembly	TM-334
				7. Gear system	TM-281

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
57		Strange noise in "D" position.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Engine speed signal	TM-131
				3. CAN communication line	TM-120
				4. Control valve with TCM	TM-240
			OFF vehicle	5. Torque converter	TM-332
				6. Oil pump assembly	TM-334
				7. Gear system	TM-281
				8. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , "Cross-Sectional View".)	TM-291
58	Others	Vehicle dose not decelerate by engine brake.	ON vehicle	1. PNP switch	TM-124
				2. A/T fluid level and state	TM-217
				3. A/T position	TM-230 (2WD), TM-230 (AWD)
				4. Manual mode switch	TM-164
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Input clutch	TM-339
				8. High and low reverse clutch	TM-349
				9. Direct clutch	TM-351
				59	
2. A/T fluid level and state	TM-217				
3. A/T position	TM-230 (2WD), TM-230 (AWD)				
4. Manual mode switch	TM-164				
5. CAN communication line	TM-120				
6. Control valve with TCM	TM-240				
OFF vehicle	7. Front brake (brake band)	TM-291			
60		Engine brake does not work M4 → M3.	ON vehicle	1. PNP switch	TM-124
				2. A/T fluid level and state	TM-217
				3. A/T position	TM-230 (2WD), TM-230 (AWD)
				4. Manual mode switch	TM-164
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Front brake (brake band)	TM-291
				8. Input clutch	TM-339

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
61		Engine brake does not work M3 → M2.	ON vehicle	1. PNP switch	TM-124
				2. A/T fluid level and state	TM-217
				3. A/T position	TM-230 (2WD), TM-230 (AWD)
				4. Manual mode switch	TM-164
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Front brake (brake band)	TM-291
				8. Input clutch	TM-339
				9. High and low reverse clutch	TM-349
62	Others	Engine brake does not work M2 → M1.	ON vehicle	1. PNP switch	TM-124
				2. A/T fluid level and state	TM-217
				3. A/T position	TM-230 (2WD), TM-230 (AWD)
				4. Manual mode switch	TM-164
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Input clutch	TM-339
				8. High and low reverse clutch	TM-349
				9. Direct clutch	TM-351
63		Maximum speed low.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Line pressure test	TM-224
				3. Accelerator pedal position sensor	TM-146
				4. CAN communication line	TM-120
				5. Direct clutch solenoid valve	TM-157
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Torque converter	TM-332
				8. Oil pump assembly	TM-334
				9. Input clutch	TM-339
				10. Gear system	TM-281
				11. High and low reverse clutch	TM-349
				12. Direct clutch	TM-351
				13. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
				14. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 , " Cross-Sectional View ".)	TM-291
64		Extremely large creep.	ON vehicle	1. Engine idle speed	EC-16
			OFF vehicle	2. CAN communication line	TM-120
				3. Torque converter	TM-332

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
65		With selector lever in "P" position, vehicle does not enter parking condition or, with selector lever in another position, parking condition is not cancelled.	ON vehicle	1. PNP switch	TM-124
				2. A/T position	TM-230 (2WD), TM-230 (AWD)
			OFF vehicle	3. Parking components	TM-253 (2WD), TM-281 (AWD)
66		Vehicle runs with A/T in "P" position.	ON vehicle	1. PNP switch	TM-124
				2. A/T fluid level and state	TM-217
				3. A/T position	TM-230 (2WD), TM-230 (AWD)
				4. Control valve with TCM	TM-240
			OFF vehicle	5. Parking components	TM-253 (2WD), TM-281 (AWD)
				6. Gear system	TM-281
67	Others	Vehicle runs with A/T in "N" position.	ON vehicle	1. PNP switch	TM-124
				2. A/T fluid level and state	TM-217
				3. A/T position	TM-230 (2WD), TM-230 (AWD)
				4. Control valve with TCM	TM-240
			OFF vehicle	5. Input clutch	TM-339
				6. Gear system	TM-281
				7. Direct clutch	TM-351
				8. Reverse brake	TM-291
				9. Forward one-way clutch (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 . "Cross-Sectional View".)	TM-291
				10. Forward brake (Parts behind drum support is impossible to perform inspection by disassembly. Refer to TM-92 . "Cross-Sectional View".)	TM-291
68		Engine does not start in "N" or "P" position.	ON vehicle	1. Push-button ignition switch and starter	PG-50 , STR-5
				2. A/T position	TM-230 (2WD), TM-230 (AWD)
				3. PNP switch	TM-124
69		Engine starts in positions other than "N" or "P".	ON vehicle	1. Push-button ignition switch and starter	PG-50 , STR-5
				2. A/T position	TM-230 (2WD), TM-230 (AWD)
				3. PNP switch	TM-124

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[5AT: RE5R05A]

No.	Item	Symptom	Condition	Diagnostic Item	Reference page
70		Engine stall.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Engine speed signal	TM-131
				3. Turbine revolution sensor	TM-126
				4. Torque converter clutch solenoid valve	TM-143
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Torque converter	TM-332
71		Engine stalls when selector lever shifted "N" → "D" or "R".	ON vehicle	1. A/T fluid level and state	TM-217
				2. Engine speed signal	TM-131
				3. Turbine revolution sensor	TM-126
				4. Torque converter clutch solenoid valve	TM-143
				5. CAN communication line	TM-120
				6. Control valve with TCM	TM-240
			OFF vehicle	7. Torque converter	TM-332
72	Others	Engine speed does not return to idle.	ON vehicle	1. A/T fluid level and state	TM-217
				2. Direct clutch solenoid valve	TM-157
				3. Front brake solenoid valve	TM-155
				4. Accelerator pedal position sensor	TM-146
				5. Vehicle speed sensor A/T and vehicle speed sensor MTR	TM-128 , TM-150
				6. CAN communication line	TM-120
				7. Control valve with TCM	TM-240
			OFF vehicle	8. Front brake (brake band)	TM-291
			9. Direct clutch	TM-351	
73		A/T CHECK indicator lamp does not come on.	ON vehicle	1. CAN communication line	TM-120
				2. Combination meters	MWI-5
				3. TCM power supply and ground	TM-168
74		Unable to perform self-diagnosis.	ON vehicle	1. CAN communication line	TM-120
				2. PNP switch	TM-124
				3. Manual mode switch	TM-164
				4. Closed throttle and wide open throttle position signal	EC-434
				5. Stop lamp switch signal	SEC-47
75		When brake pedal is depressed with ignition switch ON, selector lever cannot be shifted from "P" position to other position.	ON vehicle	1. Stop lamp switch	TM-171
				2. Shift lock relay	
				3. Shift lock solenoid	
76		When brake pedal is not depressed with ignition switch ON, selector lever can be shifted from "P" position to other position.	ON vehicle	1. Stop lamp switch	TM-171
				2. ICC brake hold relay (with ICC)	
				3. ICC sensor integrated unit (with ICC)	
				4. Shift lock relay	
				5. Shift lock solenoid	

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000000957118

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

On Board Diagnosis (OBD) System of A/T and Engine

INFOID:000000000957119

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.


CAUTION:

- Be sure to turn the ignition switch OFF and disconnect the battery cable from the negative terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. may cause the MIL to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

General Precautions

INFOID:000000000957120

- Before connecting or disconnecting the A/T assembly harness connector, turn ignition switch OFF and disconnect the battery cable from the negative terminal. Because battery voltage is applied to TCM even if ignition switch is turned OFF.

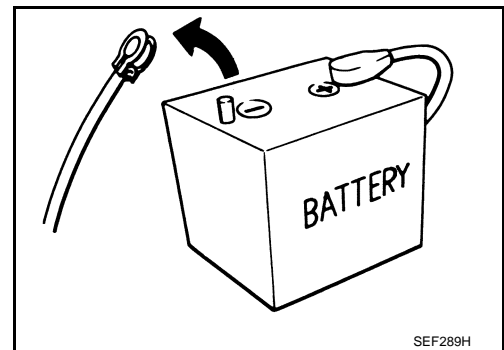


PRECAUTIONS

[5AT: RE5R05A]

< PRECAUTION >

- **After performing each TROUBLE DIAGNOSIS, perform “DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE”.** If the repair is completed DTC should not be displayed in the “DTC CONFIRMATION PROCEDURE”.
- Always use the specified brand of ATF. Refer to [MA-10, "Fluids and Lubricants"](#).
- Use lint-free paper not cloth rags during work.
- After replacing the ATF, dispose of the waste oil using the methods prescribed by law, ordinance, etc.
- Before proceeding with disassembly, thoroughly clean the outside of the transmission. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free paper or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transmission.
- Place disassembled parts in order for easier and proper assembly.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the A/T is disassembled.
- It is very important to perform functional tests whenever they are indicated.
- The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place disassembled valve body parts in order for easier and proper assembly. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along bores in valve body under their own weight.
- Before assembly, apply a coat of recommended ATF to all parts. Apply petroleum jelly to protect O-rings and seals, or hold bearings and washers in place during assembly. Do not use grease.
- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- Clean or replace ATF cooler if excessive foreign material is found in oil pan or clogging strainer. Refer to [TM-214, "Service Notice or Precaution"](#).
- After overhaul, refill the transmission with new ATF.
- When the A/T drain plug is removed, only some of the ATF is drained. Old ATF will remain in torque converter and ATF cooling system.
Always follow the procedures under “Inspection” and “Changing” when changing ATF. Refer to [TM-217, "Inspection"](#), [TM-218, "Changing"](#).

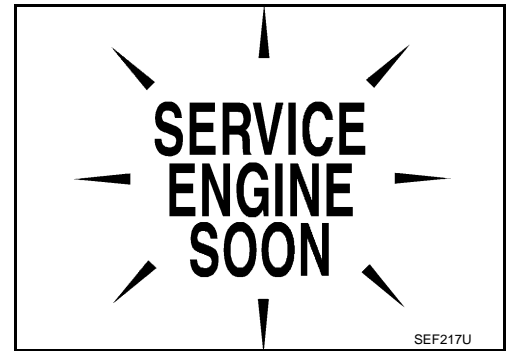

Service Notice or Precaution

INFOID:000000000957121

ATF COOLER SERVICE

If ATF contains frictional material (clutches, bands, etc.), or if an A/T is repaired, overhauled, or replaced, inspect and clean the A/T fluid cooler mounted in the radiator or replace the radiator. Flush cooler lines using cleaning solvent and compressed air after repair. For A/T fluid cooler cleaning procedure, refer to [TM-220, "Cleaning"](#). For radiator replacement, refer to [CO-14, "Exploded View"](#).

OBD-II SELF-DIAGNOSIS

- A/T self-diagnosis is performed by the TCM in combination with the ECM. The results can be read through the blinking pattern of the A/T CHECK indicator or the malfunction indicator lamp (MIL). Refer to the table on [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#) for the indicator used to display each self-diagnostic result.
 - The self-diagnostic results indicated by the MIL are automatically stored in both the ECM and TCM memories.
Always perform the procedure on [TM-110, "Diagnosis Description"](#) to complete the repair and avoid unnecessary blinking of the MIL.
- For details of OBD-II, refer to [EC-101, "Diagnosis Description"](#).
- **Certain systems and components, especially those related to OBD, may use the new style slide-locking type harness connector. For description and how to disconnect, refer to [PG-88, "Description"](#).**

PREPARATION

< PREPARATION >

[5AT: RE5R05A]






PREPARATION

PREPARATION

Special Service Tool

INFOID:000000000957122

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

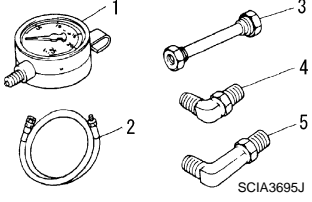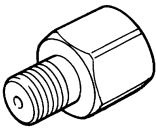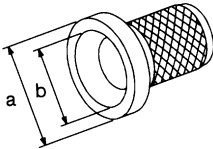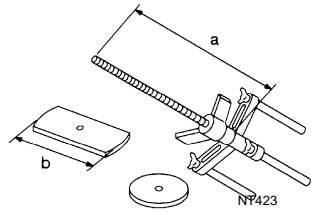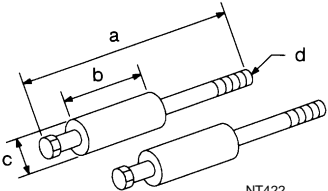Tool number (Kent-Moore No.) Tool name	Description
ST2505S001 (J-34301-C) Oil pressure gauge set 1. ST25051001 (—) Oil pressure gauge 2. ST25052000 (—) Hose 3. ST25053000 (—) Joint pipe 4. ST25054000 (—) Adapter 5. ST25055000 (—) Adapter	 <p>Measuring line pressure</p>
KV31103600 (J-45674) Joint pipe adapter (With ST25054000)	 <p>Measuring line pressure</p>
ST33400001 (J-26082) Drift a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia.	 <ul style="list-style-type: none"> • Installing rear oil seal (2WD) • Installing oil pump housing oil seal
KV31102400 (J-34285 and J-34285-87) Clutch spring compressor a: 320 mm (12.60 in) b: 174 mm (6.85 in)	 <p>Installing reverse brake return spring retainer</p>
ST25850000 (J-25721-A) Sliding hammer a: 179 mm (7.05 in) b: 70 mm (2.76 in) c: 40 mm (1.57 in) d: M12X1.75P	 <p>Remove oil pump assembly</p>

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P





PREPARATION

< PREPARATION >

[5AT: RE5R05A]

Commercial Service Tool

INFOID:000000000957123

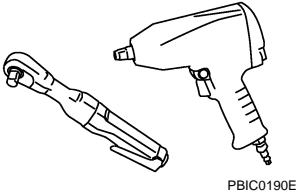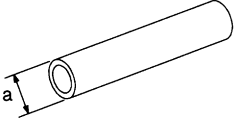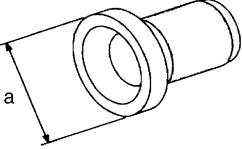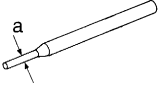Tool name	Description
<p>Power tool</p>  <p>PBI0190E</p>	<p>Loosening bolts and nuts</p>
<p>Drift a: 22 mm (0.87 in) dia.</p>  <p>NT083</p>	<p>Installing manual shaft oil seals</p>
<p>Drift a: 64 mm (2.52 in) dia.</p>  <p>SCIA5338E</p>	<p>Installing rear oil seal (AWD models)</p>
<p>Pin punch a: 4 mm (0.16 in) dia.</p>  <p>NT410</p>	<p>Remove retaining pin</p>

ON-VEHICLE MAINTENANCE

A/T FLUID

Inspection

INFOID:000000000957124

A/T FLUID LEAKAGE AND A/T FLUID LEVEL CHECK

1. Warm up engine.
2. Check for A/T fluid leakage.
3. Loosen the level gauge bolt.
4. Before driving, A/T fluid level can be checked at A/T fluid temperatures of 30 to 50°C (86 to 122°F) using “COLD” range on A/T fluid level gauge as follows.
 - a. Park vehicle on level surface and set parking brake.
 - b. Start engine and move selector lever through each gear position. Leave selector lever in “P” position.
 - c. Check A/T fluid level with engine idling.
 - d. Remove A/T fluid level gauge and wipe clean with lint-free paper.

CAUTION:

When wiping away the A/T fluid level gauge, always use lint-free paper, not a cloth one.

- e. Re-insert A/T fluid level gauge into A/T fluid charging pipe as far as it will go.

CAUTION:

To check A/T fluid level, insert the A/T fluid level gauge until the cap contacts the end of the A/T fluid charging pipe, with the A/T fluid level gauge reversed from the normal attachment conditions.

- f. Remove A/T fluid level gauge and note reading. If reading is at low side of range, add ATF to the A/T fluid charging pipe.



CAUTION:

Do not overfill.

5. Drive vehicle for approximately 5 minutes in urban areas.
6. Make the A/T fluid temperature approximately 65°C (149°F).

NOTE:

A/T fluid level will be greatly affected by temperature as shown in figure. Therefore, be certain to perform operation while checking data with CONSULT-III.

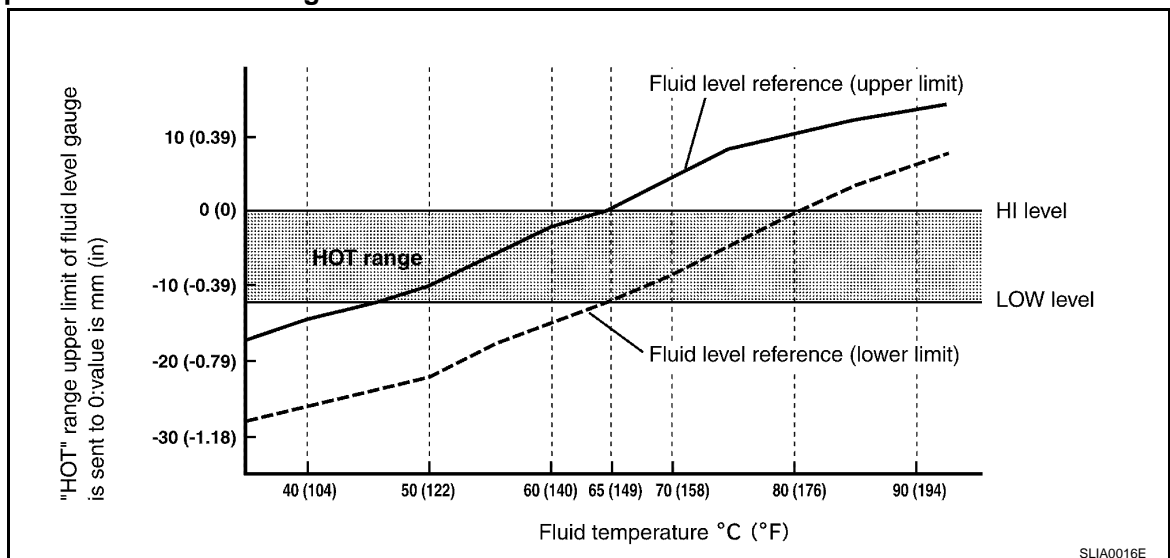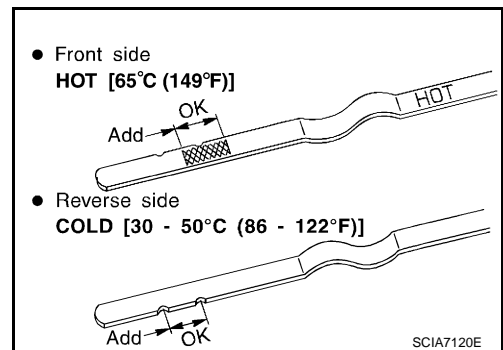

- a. Connect CONSULT-III to data link connector.
- b. Select “DATA MONITOR”.
- c. Read out the value of “ATF TEMP 1”.

A/T FLUID


< ON-VEHICLE MAINTENANCE >

[5AT: RE5R05A]


- Re-check A/T fluid level at A/T fluid temperatures of approximately 65°C (149°F) using "HOT" range on A/T fluid level gauge.

CAUTION:

- When wiping away the A/T fluid level gauge, always use lint-free paper, not a cloth one.
- To check A/T fluid level, insert the A/T fluid level gauge until the cap contacts the end of the A/T fluid charging pipe, with the A/T fluid level gauge reversed from the normal attachment conditions as shown.

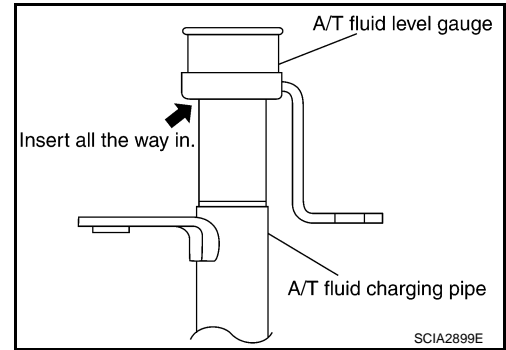


- Install the removed A/T fluid level gauge in the A/T fluid charging pipe.
- Tighten level gauge bolt. Refer to [TM-275, "2WD : Exploded View"](#) (2WD), [TM-277, "AWD : Exploded View"](#) (AWD).

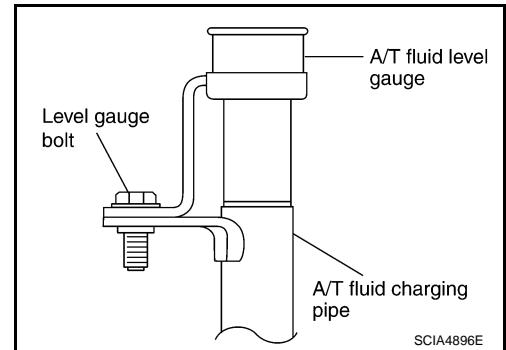

A/T FLUID CONDITION CHECK

Check the A/T fluid condition.

Fluid condition	Conceivable Cause	Required Operation
Varnished (viscous varnish state)	Clutch, brake scorched	Replace the ATF and check the A/T main unit and the vehicle for mal-functions (wire harnesses, cooler pipes, etc.)
Milky white or cloudy	Water in the fluid	Replace the ATF and check for places where water is getting in.
Large amount of metal powder mixed in	Unusual wear of sliding parts within A/T	Replace the ATF and check for improper operation of the A/T.

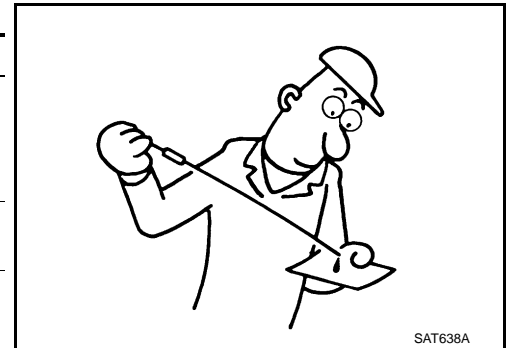


SAT638A

Changing

INFOID:000000000957125

- Warm up ATF.
- Stop engine.
- Loosen the level gauge bolt.
- Drain ATF from drain plug and refill with new ATF. Always refill same volume with drained ATF.
 - To replace the ATF, pour in new ATF at the A/T fluid charging pipe with the engine idling and at the same time drain the old ATF from the radiator cooler hose return side.
 - When the color of the ATF coming out is about the same as the color of the new ATF, the replacement is complete. The amount of new ATF to use should be 30 to 50% increase of the stipulated amount.

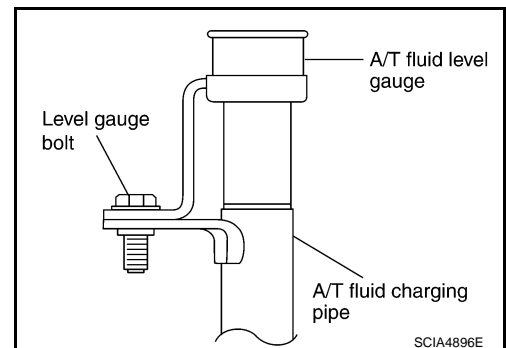

A/T FLUID

< ON-VEHICLE MAINTENANCE >

[5AT: RE5R05A]

ATF : Refer to [TM-353, "General Specification"](#).

Fluid capacity : Refer to [TM-353, "General Specification"](#).

CAUTION:

- Use only Genuine NISSAN Matic J ATF. Do not mix with other ATF.
- Using ATF other than Genuine NISSAN Matic J ATF will cause deterioration in driveability and A/T durability, and may damage the A/T, which is not covered by the NISSAN new vehicle limited warranty.
- When filling ATF, take care not to scatter heat generating parts such as exhaust.
- Do not reuse drain plug gasket.

Drain plug - tightening torque : Refer to [TM-240, "Exploded View"](#).

5. Run engine at idle speed for 5 minutes.
6. Check A/T fluid level and condition. Refer to [TM-217, "Inspection"](#). If ATF is still dirty, repeat step 2. through 5.
7. Install the removed A/T fluid level gauge into A/T fluid charging pipe.
8. Tighten the level gauge bolt. Refer to [TM-275, "2WD : Exploded View"](#) (2WD), [TM-277, "AWD : Exploded View"](#) (AWD).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

A/T FLUID COOLER

< ON-VEHICLE MAINTENANCE >

[5AT: RE5R05A]

A/T FLUID COOLER

Cleaning

INFOID:00000000957126

Whenever an A/T is replaced, the A/T fluid cooler mounted in the radiator must be inspected and cleaned. Metal debris and friction material, if present, can become trapped in the A/T fluid cooler. This debris can contaminate the newly serviced A/T or, in severe cases, can block or restrict the flow of ATF. In either case, malfunction of the newly serviced A/T may result.

Debris, if present, may build up as ATF enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


CLEANING PROCEDURE

1. Position an oil pan under the A/T inlet and outlet cooler hoses.
2. Identify the inlet and outlet fluid cooler hoses.
3. Disconnect the A/T fluid cooler inlet and outlet rubber hoses from the steel cooler tubes or bypass valve.

NOTE:

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Allow any ATF that remains in the cooler hoses to drain into the oil pan.

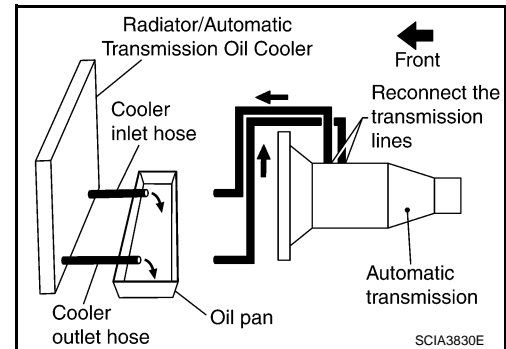


5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.


CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray Transmission Cooler Cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Do not breath vapors or spray mist.

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until ATF flows out of the cooler inlet hose for 5 seconds.

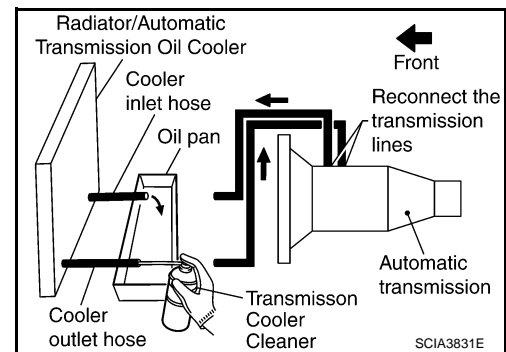

7. Insert the tip of an air gun into the end of the cooler outlet hose.
8. Wrap a shop rag around the air gun tip and of the cooler outlet hose.
9. Blow compressed air regulated to 5 to 9 kg/cm² (70 to 130 psi) through the cooler outlet hose for 10 seconds to force out any remaining ATF.
10. Repeat steps 5 through 9 three additional times.

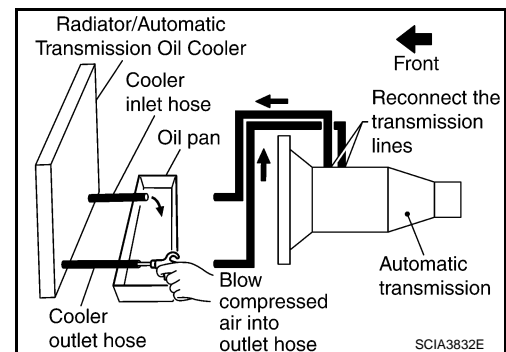

11. Position an oil pan under the banjo bolts that connect the A/T fluid cooler steel lines to the A/T.
12. Remove the banjo bolts.
13. Flush each steel line from the cooler side back toward the A/T by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.
14. Blow compressed air regulated to 5 to 9 kg/cm² (70 to 130 psi) through each steel line from the cooler side back toward the A/T for 10 seconds to force out any remaining ATF.
15. Ensure all debris is removed from the steel cooler lines.
16. Ensure all debris is removed from the banjo bolts and fittings.
17. Perform "DIAGNOSIS PROCEDURE".

A/T FLUID COOLER

< ON-VEHICLE MAINTENANCE >

[5AT: RE5R05A]

DIAGNOSIS PROCEDURE

NOTE:



Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.

1. Position an oil pan under the A/T inlet and outlet cooler hoses.
2. Clean the exterior and tip of the cooler inlet hose.
3. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.


CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray Transmission Cooler Cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Do not breath vapors or spray mist.

4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until ATF flows out of the cooler inlet hose for 5 seconds.
5. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.

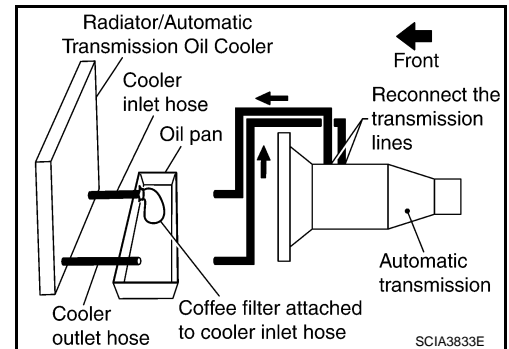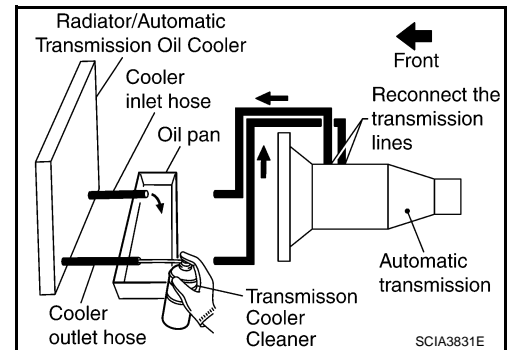


6. Insert the tip of an air gun into the end of the cooler outlet hose.
7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
8. Blow compressed air regulated to 5 to 9 kg/cm² (70 to 130 psi) through the cooler outlet hose to force any remaining ATF into the coffee filter.
9. Remove the coffee filter from the end of the cooler inlet hose.
10. Perform "INSPECTION PROCEDURE".

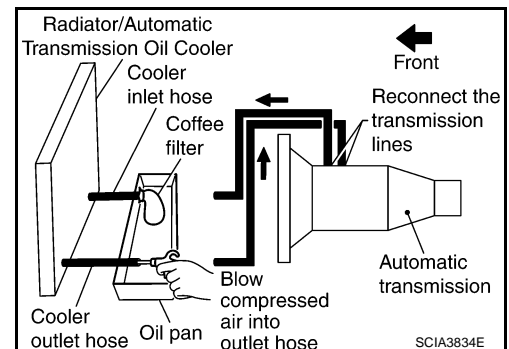

INSPECTION PROCEDURE

1. Inspect the coffee filter for debris.
 - a. If small metal debris less than 1 mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the A/T fluid cooler/radiator can be re-used and the procedure is ended.

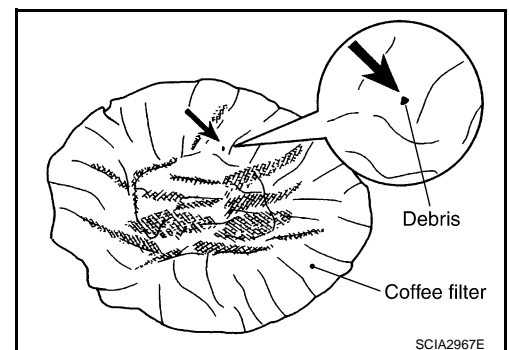


A/T FLUID COOLER

< ON-VEHICLE MAINTENANCE >

[5AT: RE5R05A]

- b. If one or more pieces of debris are found that are over 1 mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the A/T fluid cooler is not serviceable. The A/T fluid cooler/radiator must be replaced and the inspection procedure is ended. Refer to [CO-14, "Exploded View"](#).

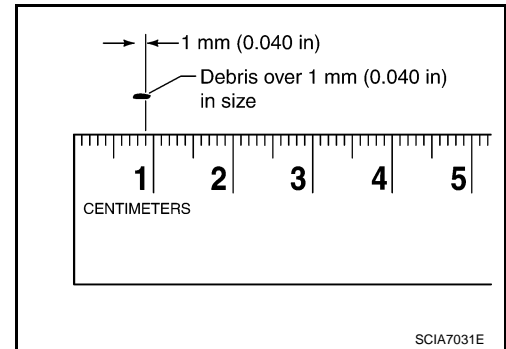

Inspection

INFOID:000000000957127

After performing all procedures, ensure that all remaining oil is cleaned from all components.

STALL TEST

< ON-VEHICLE MAINTENANCE >

[5AT: RE5R05A]

STALL TEST

Inspection and Judgment

INFOID:000000000957128

INSPECTION

1. Inspect the amount of engine oil. Replenish the engine oil if necessary.
2. Drive for about 10 minutes to warm up the vehicle so that the A/T fluid temperature is 50 to 80°C (122 to 176°F). Inspect the amount of ATF. Replenish if necessary.
3. Securely engage the parking brake so that the tires do not turn.
4. Start the engine, apply foot brake, and place selector lever in "D" position.
5. While holding down the foot brake, gradually press down the accelerator pedal.
6. Quickly read off the stall speed, then quickly remove your foot from the accelerator pedal.

CAUTION:

Do not hold down the accelerator pedal for more than 5 seconds during this test.

Stall speed : Refer to [TM-353, "Stall Speed"](#).

7. Move the selector lever to the "N" position.
 8. Cool down the ATF.
- CAUTION:**
Run the engine at idle for at least 1 minute.
9. Repeat steps 5 through 8 with selector lever in "R" position.

JUDGMENT OF STALL TEST

	Selector lever position		Possible location of malfunction
	"D", "M"	"R"	
Stall speed	H	O	<ul style="list-style-type: none"> • Forward brake • Forward one-way clutch • 1st one-way clutch • 3rd one-way clutch
	O	H	<ul style="list-style-type: none"> • Reverse brake
	L	L	<ul style="list-style-type: none"> • Engine and torque converter one-way clutch
	H	H	<ul style="list-style-type: none"> • Line pressure low

O: Stall speed within standard value position

H: Stall speed higher than standard value

L: Stall speed lower than standard value

Stall test standard value position

Does not shift-up "D" or "M" position 1 → 2	Slipping in 2nd, 3rd or 4th gear	Direct clutch slippage
Does not shift-up "D" or "M" position 2 → 3	Slipping in 3rd, 4th or 5th gear	High and low reverse clutch slippage
Does not shift-up "D" or "M" position 3 → 4	Slipping in 4th or 5th gear	Input clutch slippage
Does not shift-up "D" or "M" position 4 → 5	Slipping in 5th gear	Front brake slippage

LINE PRESSURE TEST

< ON-VEHICLE MAINTENANCE >

[5AT: RE5R05A]


LINE PRESSURE TEST

Inspection and Judgment

INFOID:000000000957129

INSPECTION

Line Pressure Test Port

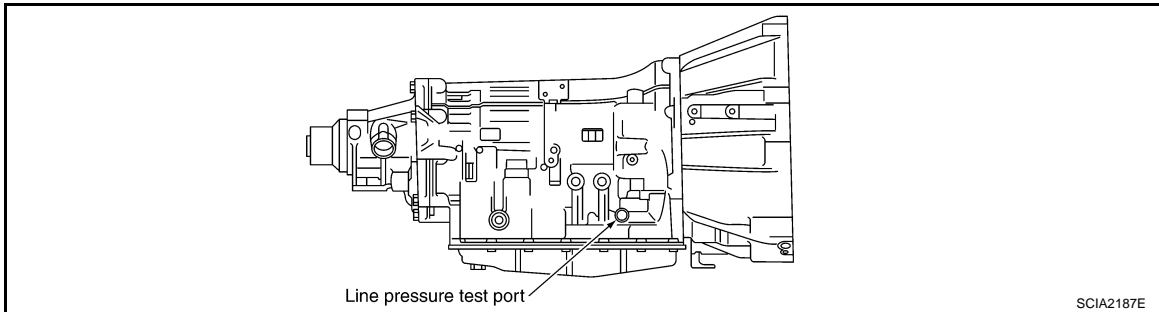

Line Pressure Test Procedure

1. Inspect the amount of engine oil and replenish if necessary.
2. Drive the car for about 10 minutes to warm it up so that the ATF reaches in range of 50 to 80°C (122 to 176°F), then inspect the amount of ATF and replenish if necessary.

NOTE:

The A/T fluid temperature rises in range of 50 to 80°C (122 to 176°F) during 10 minutes of driving.

3. Remove the front propeller shaft from vehicle (with AWD models). Refer to [DLN-80, "Exploded View"](#).
4. After warming up remove the oil pressure detection plug and install the oil pressure gauge [SST: ST2505S001(J-34301-C)].


CAUTION:

When using the oil pressure gauge, be sure to use the O-ring attached to the oil pressure detection plug.

5. Securely engage the parking brake so that the tires do not turn.
6. Start the engine, then measure the line pressure at both idle and the stall speed.

CAUTION:

- Keep the brake pedal pressed all the way down during measurement.
- When measuring the line pressure at the stall speed, refer to [TM-223, "Inspection and Judgment"](#).

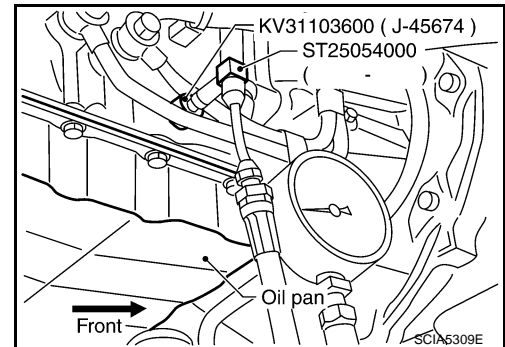

LINE PRESSURE : Refer to [TM-353, "Line Pressure"](#).

7. After the measurements are complete, install the oil pressure detection plug and tighten to the specified torque. Refer to [TM-281, "Exploded View"](#).

CAUTION:

- Do not reuse O-ring.
- Apply ATF to O-ring.

JUDGMENT OF LINE PRESSURE TEST

LINE PRESSURE TEST

< ON-VEHICLE MAINTENANCE >

[5AT: RE5R05A]

Judgment		Possible cause
Idle speed	Low for all positions ("P", "R", "N", "D", "M")	Possible causes include malfunctions in the pressure supply system and low oil pump output. For example <ul style="list-style-type: none"> • Oil pump wear • Pressure regulator valve or plug sticking or spring fatigue • Oil strainer ⇒ oil pump ⇒ pressure regulator valve passage oil leak • Engine idle speed too low
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.
	High	Possible causes include a sensor malfunction or malfunction in the line pressure adjustment function. For example <ul style="list-style-type: none"> • Accelerator pedal position signal malfunction • A/T fluid temperature sensor malfunction • Line pressure solenoid malfunction (sticking in OFF state, filter clog, cut line) • Pressure regulator valve or plug sticking
Stall speed	Oil pressure does not rise higher than the oil pressure for idle.	Possible causes include a sensor malfunction or malfunction in the pressure adjustment function. For example <ul style="list-style-type: none"> • Accelerator pedal position signal malfunction • TCM breakdown • Line pressure solenoid malfunction (shorting, sticking in ON state) • Pressure regulator valve or plug sticking • Pilot valve sticking or pilot filter clogged
	The pressure rises, but does not enter the standard position.	Possible causes include malfunctions in the pressure supply system and malfunction in the pressure adjustment function. For example <ul style="list-style-type: none"> • Accelerator pedal position signal malfunction • Line pressure solenoid malfunction (sticking, filter clog) • Pressure regulator valve or plug sticking • Pilot valve sticking or pilot filter clogged
	Only low for a specific position	Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

ROAD TEST

Description

INFOID:000000000957130

- The road test inspects overall performance of the A/T and analyzes possible malfunction causes.
 - The road test is performed out in the following three stages.
 1. [TM-226, "Check Before Engine Is Started"](#).
 2. [TM-226, "Check Starting The Engine"](#).
 3. Cruise test
 - [TM-227, "Cruise Test - Part 1"](#)
 - [TM-228, "Cruise Test - Part 2"](#)
 - [TM-228, "Cruise Test - Part 3"](#)
- CAUTION:**
Always drive vehicle at a safe speed.
- Before beginning the road test, check the test procedure and inspection items.
 - Test all inspection items until the symptom is uncovered. Diagnose NG items when all road tests are complete.

Check Before Engine Is Started

INFOID:000000000957131

1. CHECK A/T CHECK INDICATOR LAMP

1. Park vehicle on level surface.
2. Shift the selector lever to "P" position.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Turn ignition switch ON. (Do not start engine.)

Does A/T CHECK indicator lamp light up for about 2 seconds?

- YES >> Go to [TM-226, "Check Starting The Engine"](#).
 NO >> Stop the road test and go to [TM-191, "Symptom Table"](#).

Check Starting The Engine

INFOID:000000000957132

1. CHECK STARTING THE ENGINE

1. Park vehicle on level surface.
2. Shift the selector lever to "P" or "N" position.
3. Turn ignition switch OFF.
4. Start the engine.

Does the engine start?

- YES >> GO TO 2.
 NO >> Stop the road test and go to [TM-191, "Symptom Table"](#).

2. CHECK STARTING THE ENGINE

1. Turn ignition switch ON. (Do not start engine.)
2. Shift the selector lever to "D", "M" or "R" position.
3. Start the engine.

Does the engine start in any positions?

- YES >> Stop the road test and go to [TM-191, "Symptom Table"](#).
 NO >> GO TO 3.

3. CHECK "P" POSITION FUNCTIONS

1. Shift the selector lever to "P" position.
2. Turn ignition switch OFF.
3. Release the parking brake.
4. Push the vehicle forward or backward.
5. Engage the parking brake.

When you push the vehicle with disengaging the parking brake, does it move?

- YES >> Record the malfunction, then continue the road test.
 NO >> GO TO 4.

4.CHECK "N" POSITION FUNCTIONS

1. Start the engine.
2. Shift the selector lever to "N" position.
3. Release the parking brake.

Does vehicle move forward or backward?

YES >> Record the malfunction, then continue the rode test.

NO >> GO TO 5.

5.CHECK SHIFT SHOCK

1. Engage the brake.
2. Shift the selector lever to "D" position.

When the A/T is shifted from "N" to "D", is there an excessive shock?

YES >> Record the malfunction, then continue the rode test.

NO >> GO TO 6.

6.CHECK "R" POSITION FUNCTIONS

1. Shift the selector lever to "R" position.
2. Release the brake for 4 to 5 seconds.

Does the vehicle creep backward?

YES >> GO TO 7.

NO >> Record the malfunction, then continue the rode test.

7.CHECK "D" POSITION FUNCTIONS

Inspect whether the vehicle creep forward when the A/T is put into the "D" position.

Does the vehicle creep forward in the "D" position?

YES >> Go to [TM-227, "Cruise Test - Part 1"](#).

NO >> Record the malfunction and go to [TM-227, "Cruise Test - Part 1"](#).

Cruise Test - Part 1

INFOID:000000000957133

1.CHECK STARTING OUT FROM D1

1. Drive the vehicle for about 10 minutes to warm up the engine oil and ATF.
Appropriate temperature for the ATF: 50 to 80°C (122 to 176°F)
2. Park the vehicle on a level surface.
3. Shift the selector lever to "D" position.
4. Press the accelerator pedal about half way down to accelerate the vehicle.

 **With CONSULT-III**

Read the value of "GEAR" with "DATA MONITOR" mode. Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

Starts from D1?

YES >> GO TO 2.

NO >> Record the malfunction, then continue the road test.

2.CHECK SHIFT-UP

Depress the accelerator pedal about half-way and inspect if the vehicle shifts up (D1 → D2 → D3 → D4 → D5) at the appropriate speed. Refer to [TM-353, "Vehicle Speed at Which Gear Shifting Occurs"](#).

 **With CONSULT-III**

Read the value of "GEAR", "ACCELE POSI" and "VEHICLE SPEED" with "DATA MONITOR" mode. Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Record the malfunction, then continue the road test.

3.CHECK LOCK-UP

When releasing accelerator pedal (closed throttle position signal OFF) from D5, check lock-up from D5 to L/U. Refer to [TM-353, "Vehicle Speed at Which Lock-up Occurs/Releases"](#).

④ With CONSULT-III

Select "TCC SOLENOID" with "DATA MONITOR" mode. Refer to [TM-180, "Reference Value"](#).

Does it lock-up?

YES >> GO TO 4.

NO >> Record the malfunction, then continue the road test.

4.CHECK LOCK-UP HOLD

Check hold lock-up.

④ With CONSULT-III

Select "TCC SOLENOID" with "DATA MONITOR" mode. Refer to [TM-180, "Reference Value"](#).

Does it maintain lock-up status?

YES >> GO TO 5.

NO >> Record the malfunction, then continue the road test.

5.CHECK LOCK-UP RELEASE

Check lock-up cancellation by depressing brake pedal lightly to decelerate.

④ With CONSULT-III

Select "TCC SOLENOID" with "DATA MONITOR" mode. Refer to [TM-180, "Reference Value"](#).

Does lock-up cancel?

YES >> GO TO 6.

NO >> Record the malfunction, then continue the road test.

6.CHECK SHIFT-DOWN D₅ → D₄

Decelerate by pressing lightly on the brake pedal.

④ With CONSULT-III

Read the value of "GEAR" and "ENGINE SPEED" with "DATA MONITOR" mode. Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

When the A/T shift-down D₅ → D₄, does the engine speed drop smoothly back to idle?

YES >> 1. Stop the vehicle.

2. Go to [TM-228, "Cruise Test - Part 2"](#).

NO >> Record the malfunction and go to [TM-228, "Cruise Test - Part 2"](#).

Cruise Test - Part 2

INFOID:000000000957134

1.CHECK SHIFT-UP

Depress the accelerator pedal down all the way and inspect whether or not the A/T shifts up (D₁ → D₂ → D₃) at the correct speed. Refer to [TM-353, "Vehicle Speed at Which Gear Shifting Occurs"](#).

④ With CONSULT-III

Read the value of "GEAR", "ACCELE POSI" and "VEHICLE SPEED" with "DATA MONITOR" mode. Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Record the malfunction, then continue the road test.

2.CHECK SHIFT-UP D₃ → D₄ AND ENGINE BRAKE

When the A/T changes speed D₃ → D₄, release the accelerator pedal.

④ With CONSULT-III

Read the value of "GEAR" with "DATA MONITOR" mode. Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

Does the A/T shift-up D₃ → D₄ and apply the engine brake?

YES >> 1. Stop the vehicle.

2. Go to [TM-228, "Cruise Test - Part 3"](#).

NO >> Record the malfunction and go to [TM-228, "Cruise Test - Part 3"](#).

Cruise Test - Part 3

INFOID:000000000957135

ROAD TEST

< ON-VEHICLE MAINTENANCE >

[5AT: RE5R05A]

1. MANUAL MODE FUNCTION

Shift the selector lever to manual mode from "D" position.

Does it switch to manual mode?

YES >> GO TO 2.

NO >> Record the malfunction, then continue the road test.

2. CHECK SHIFT-DOWN

During manual mode driving, is downshift from M5 → M4 → M3 → M2 → M1 performed?

Ⓜ **With CONSULT-III**

Read the value of "GEAR" and "ENGINE SPEED" with "DATA MONITOR" mode. Refer to [TM-114, "CONSULT-III Function \(TRANSMISSION\)"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Record the malfunction, then continue the road test.

3. CHECK ENGINE BRAKE

Check engine brake.

Does engine braking effectively reduce speed in M1 position?

YES >> Check malfunction phenomena to repair or replace malfunctioning part. Refer to [TM-191, "Symptom Table"](#).

NO >> 1. Record the malfunction.

2. Check malfunction phenomena to repair or replace malfunctioning part. Refer to [TM-191, "Symptom Table"](#).

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

A/T POSITION


2WD

2WD : Inspection and Adjustment

INFOID:000000000957136


INSPECTION

1. Place selector lever in "P" position, and turn ignition switch ON.
2. Make sure that selector lever can be shifted to other than "P" position when brake pedal is depressed. Also make sure that selector lever can be shifted from "P" position only when brake pedal is depressed.
3. Move the selector lever and check for excessive effort, sticking, noise or rattle.
4. Confirm the selector lever stops at each position with the feel of engagement when it is moved through all the positions. Check whether or not the actual position the selector lever is in matches the position shown by the shift position indicator and the A/T body.
5. The method of operating the lever to individual positions correctly should be as shown in the figure.
6. When selector button is pressed in "P", "R", or "N" position without applying forward/backward force to selector lever, check button operation for sticking.
7. Confirm the back-up lamps illuminate only when lever is placed in the "R" position. Confirm the back-up lamps does not illuminate when selector lever is pushed against "R" position in the "P" or "N" position.
8. Confirm the engine can only be started with the selector lever in the "P" and "N" positions. (With selector lever in the "P" position, engine can be started even when selector lever is moved forward and backward.)
9. Make sure that A/T is locked completely in "P" position.
10. When selector lever is set to manual shift gate, make sure that manual mode is displayed on combination meter.
Shift selector lever to "+" and "-" sides, and check that set shift position changes.

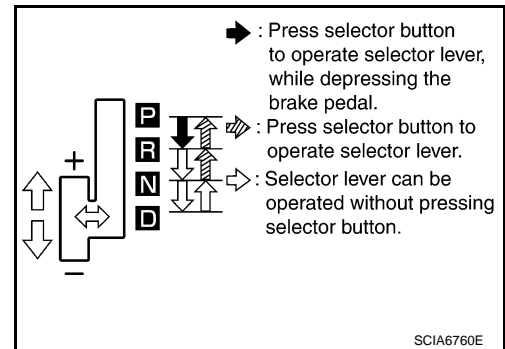

ADJUSTMENT

1. Loosen nut (←) of pivot pin (1).
2. Place PNP switch and selector lever in "P" position.
3. While pressing lower lever (A) toward rear of vehicle (in "P" position direction), tighten nut (←) to specified torque. Refer to [TM-232, "2WD : Exploded View"](#).

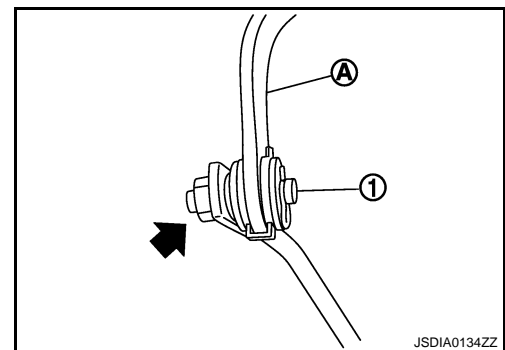

AWD

AWD : Inspection and Adjustment

INFOID:000000000957137

INSPECTION


1. Place selector lever in "P" position, and turn ignition switch ON.
2. Make sure that selector lever can be shifted to other than "P" position when brake pedal is depressed. Also make sure that selector lever can be shifted from "P" position only when brake pedal is depressed.
3. Move the selector lever and check for excessive effort, sticking, noise or rattle.
4. Confirm the selector lever stops at each position with the feel of engagement when it is moved through all the positions. Check whether or not the actual position the selector lever is in matches the position shown by the shift position indicator and the A/T body.

A/T POSITION

< ON-VEHICLE MAINTENANCE >


[5AT: RE5R05A]

- The method of operating the lever to individual positions correctly should be as shown in the figure.
- When selector button is pressed in "P", "R", or "N" position without applying forward/backward force to selector lever, check button operation for sticking.
- Confirm the back-up lamps illuminate only when lever is placed in the "R" position. Confirm the back-up lamps does not illuminate when selector lever is pushed against "P" position in the "P" or "N" position.
- Confirm the engine can only be started with the selector lever in the "P" and "N" positions. (With selector lever in the "P" position, engine can be started even when selector lever is moved forward and backward.)
- Make sure that A/T is locked completely in "P" position.
- When selector lever is set to manual shift gate, make sure that manual mode is displayed on combination meter.
Shift selector lever to "+" and "-" sides, and check that set shift position changes.

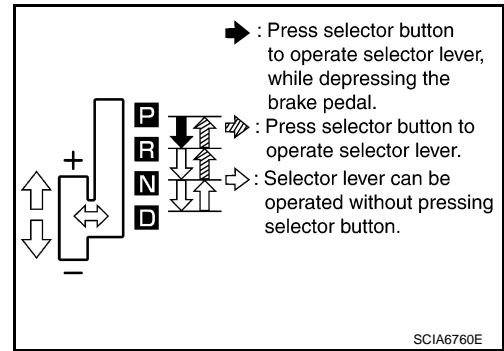

ADJUSTMENT

- Loosen nut (←) of bracket (1).
- Place PNP switch and selector lever in "P" position.
- While pressing lower lever (A) toward rear of vehicle (in "P" position direction), tighten nut (←) to specified torque. Refer to [TM-233. "AWD : Exploded View"](#).

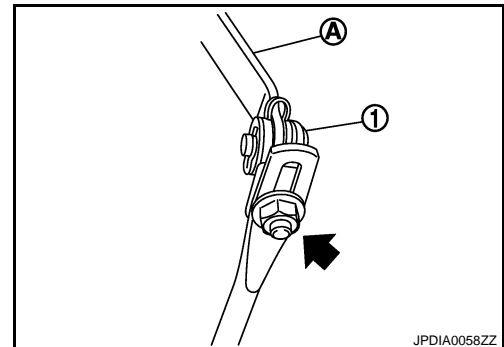


ON-VEHICLE REPAIR

CONTROL DEVICE

2WD

2WD : Exploded View

INFOID:000000000957138

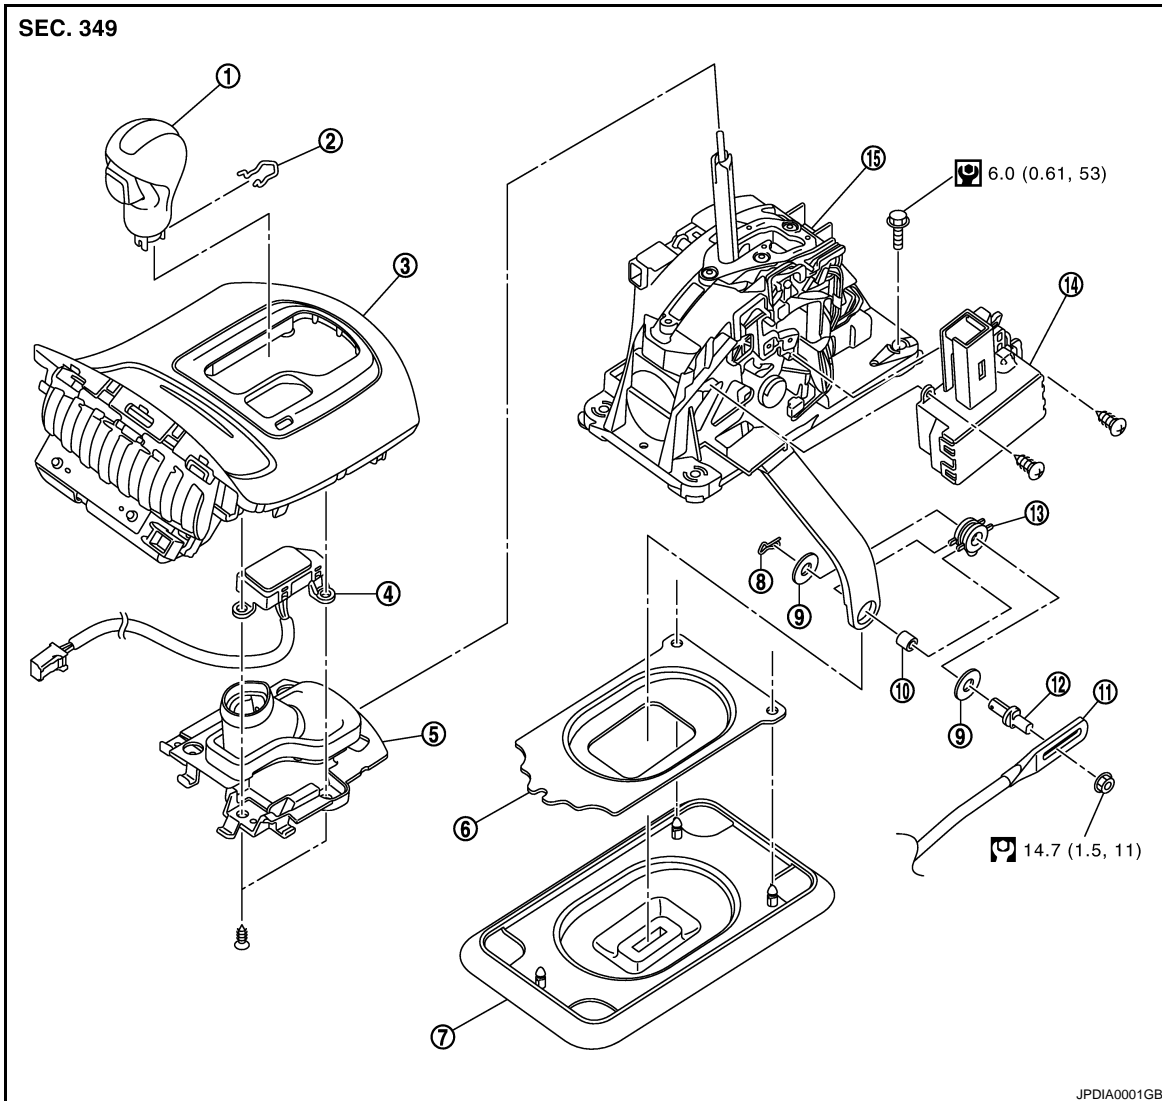

- | | | |
|--------------------------------------|---------------------|-----------------------------|
| 1. Selector lever knob | 2. Lock pin | 3. Console finisher |
| 4. Selector lever position indicator | 5. Insert finisher | 6. Dust cover plate |
| 7. Dust cover | 8. Snap pin | 9. Plain washer |
| 10. Collar | 11. Control rod | 12. Pivot pin |
| 13. Insulator | 14. Shift lock unit | 15. Control device assembly |

Refer to [GI-4, "Components"](#) for symbols in the figure.

2WD : Removal and Installation

INFOID:000000000957139

REMOVAL

1. Disconnect lower lever of control device and control rod.
2. Move selector lever to "N" position.



CONTROL DEVICE

[5AT: RE5R05A]

< ON-VEHICLE REPAIR >

3. Remove knob cover (A) below selector lever downward.
4. Pull lock pin (1) out of selector lever knob (2).
5. Remove selector lever knob (2).
6. Remove console finisher assembly, rear upper console assembly and front console bracket. Refer to [IP-22, "Exploded View"](#).
7. Remove the center console assembly (with rear ventilator). Refer to [IP-22, "Exploded View"](#).
8. Remove the rear ventilator duct 2 (with rear ventilator). Refer to [VTL-53, "REAR FLOOR DUCT 1 & REAR VENTILATOR DUCT 1\(WITH REAR VENTILATOR\) : Exploded View"](#).
9. Disconnect A/T device harness connector.
10. Remove control device assembly.
11. Remove the following parts if necessary.
 - a. Selector lever position indicator
 - i. Remove the cigarette lighter harness connector (A) from the console finisher assembly.

← : Screw
 - ii. Remove the insert finisher (1) from the console finisher.
 - iii. Remove the selector lever position indicator.
 - b. Shift lock unit
 - i. Remove the shift lock unit from the control device assembly.

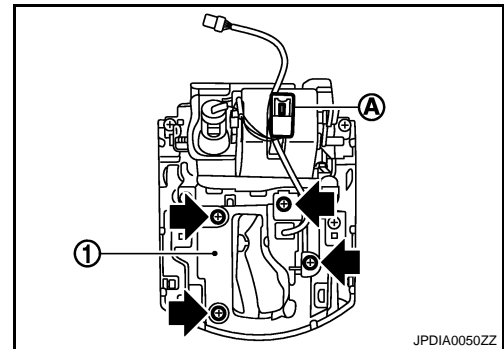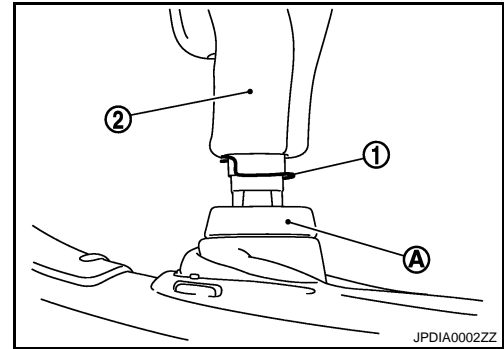

INSTALLATION

Install in the reverse order of removal.

2WD : Inspection and Adjustment

INFOID:000000000957140

ADJUSTMENT AFTER INSTALLATION

Adjust the A/T positions after installing the control device. Refer to [TM-230, "2WD : Inspection and Adjustment"](#).

INSPECTION AFTER INSTALLATION

Check the A/T positions after adjusting the A/T positions. Refer to [TM-230, "2WD : Inspection and Adjustment"](#).

AWD

AWD : Exploded View


INFOID:000000000957141

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

CONTROL DEVICE

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

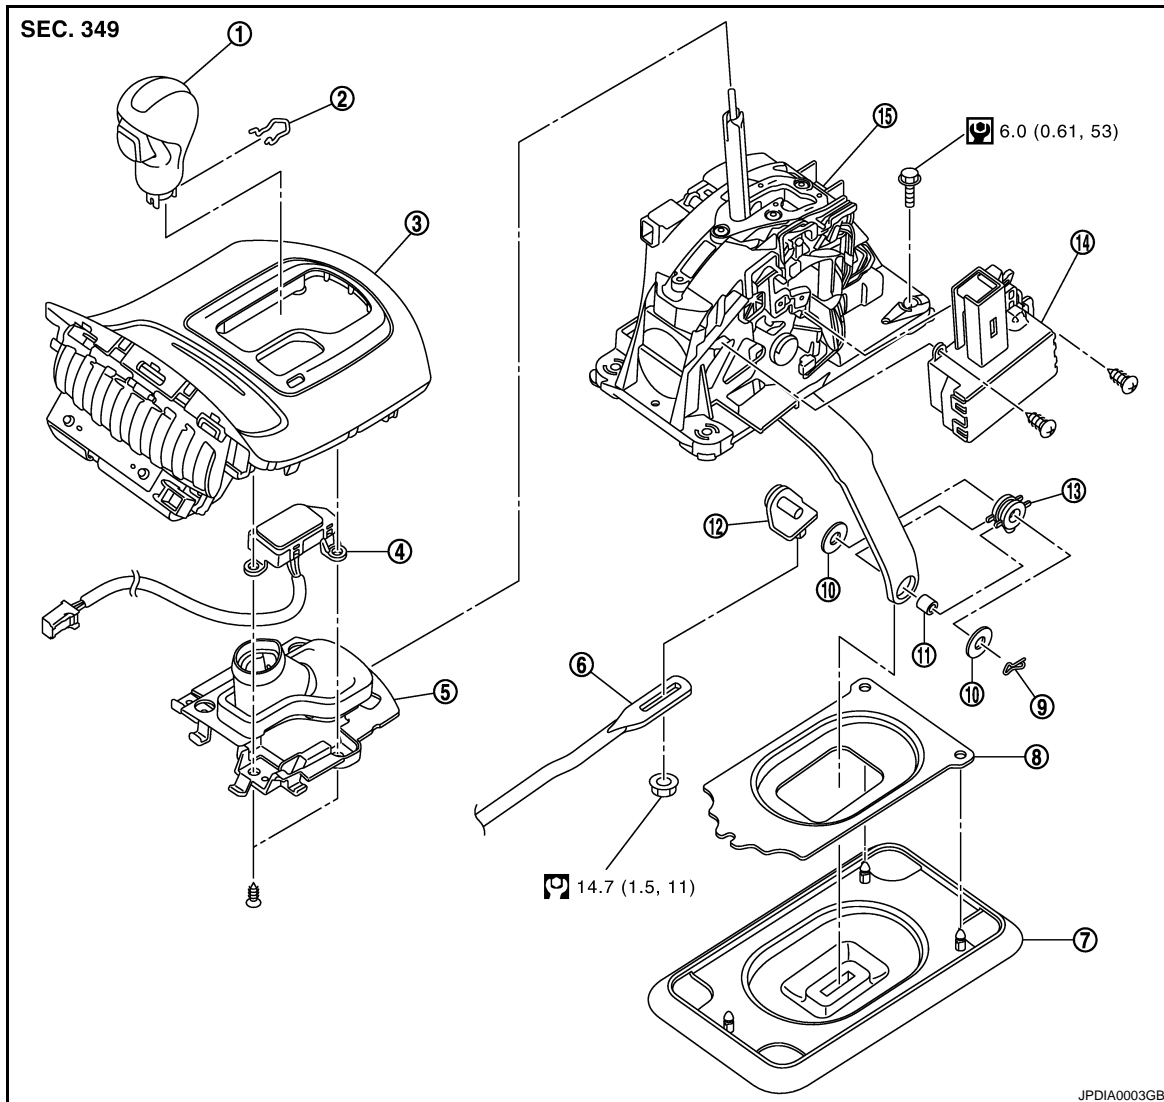

- | | | |
|--------------------------------------|---------------------|-----------------------------|
| 1. Selector lever knob | 2. Lock pin | 3. Console finisher |
| 4. Selector lever position indicator | 5. Insert finisher | 6. Control rod |
| 7. Dust cover | 8. Dust cover plate | 9. Snap pin |
| 10. Plain washer | 11. Collar | 12. Bracket |
| 13. Insulator | 14. Shift lock unit | 15. Control device assembly |

Refer to [GI-4, "Components"](#) for symbols in the figure.

AWD : Removal and Installation

INFOID:000000000957142

REMOVAL



1. Disconnect lower lever of control device and control rod.
2. Move selector lever to "N" position.

CONTROL DEVICE

[5AT: RE5R05A]


< ON-VEHICLE REPAIR >

3. Remove knob cover (A) below selector lever downward.
4. Pull lock pin (1) out of selector lever knob (2).
5. Remove selector lever knob (2).
6. Remove console finisher assembly, rear upper console assembly and console front bracket. Refer to [IP-22, "Exploded View"](#).
7. Remove center console assembly. Refer to [IP-22, "Exploded View"](#).
8. Remove the rear ventilator duct 2 (with rear ventilator). Refer to [VTL-53, "REAR FLOOR DUCT 1 & REAR VENTILATOR DUCT 1\(WITH REAR VENTILATOR\) : Exploded View"](#).
9. Disconnect A/T device harness connector.
10. Move selector lever to "P" position.
11. Move passenger's seat to the end.
12. Remove control device assembly mounting bolts.
13. Slightly lift the control device assembly (1) and slide it rightward. Then pull it out in the diagonally right direction.

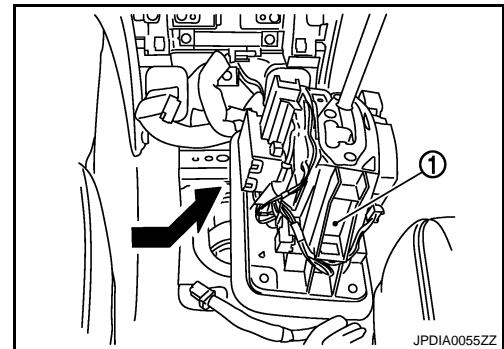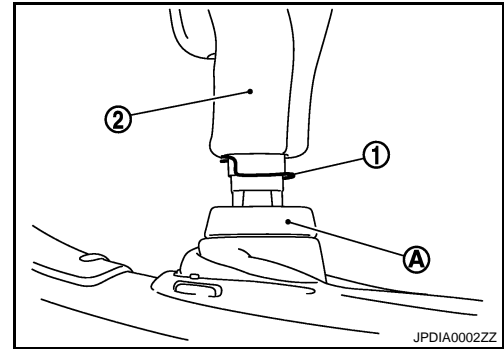

14. Remove the following parts if necessary.
 - a. Selector lever position indicator
 - i. Remove the cigarette lighter harness connector (A) from the console finisher.

← : Screw
 - ii. Remove the insert finisher (1) from the console finisher.
 - iii. Remove the selector lever position indicator.
 - b. Shift lock unit
 - i. Remove the shift lock unit from the control device assembly.

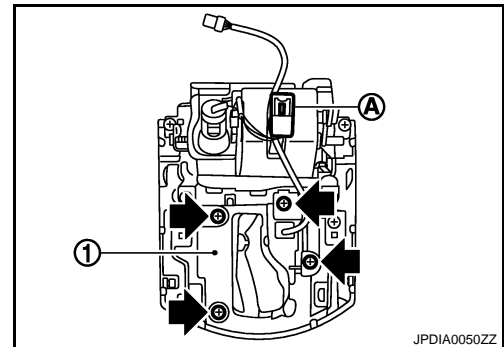

INSTALLATION

Install in the reverse order of removal.

AWD : Inspection and Adjustment

INFOID:000000000957143

ADJUSTMENT AFTER INSTALLATION

Adjust the A/T positions after installing the control device. Refer to [TM-230, "AWD : Inspection and Adjustment"](#).

INSPECTION AFTER INSTALLATION

Check the A/T positions after adjusting the A/T positions. Refer to [TM-230, "AWD : Inspection and Adjustment"](#).

CONTROL ROD

< ON-VEHICLE REPAIR >


[5AT: RE5R05A]

CONTROL ROD

2WD

2WD : Exploded View

INFOID:000000000957144

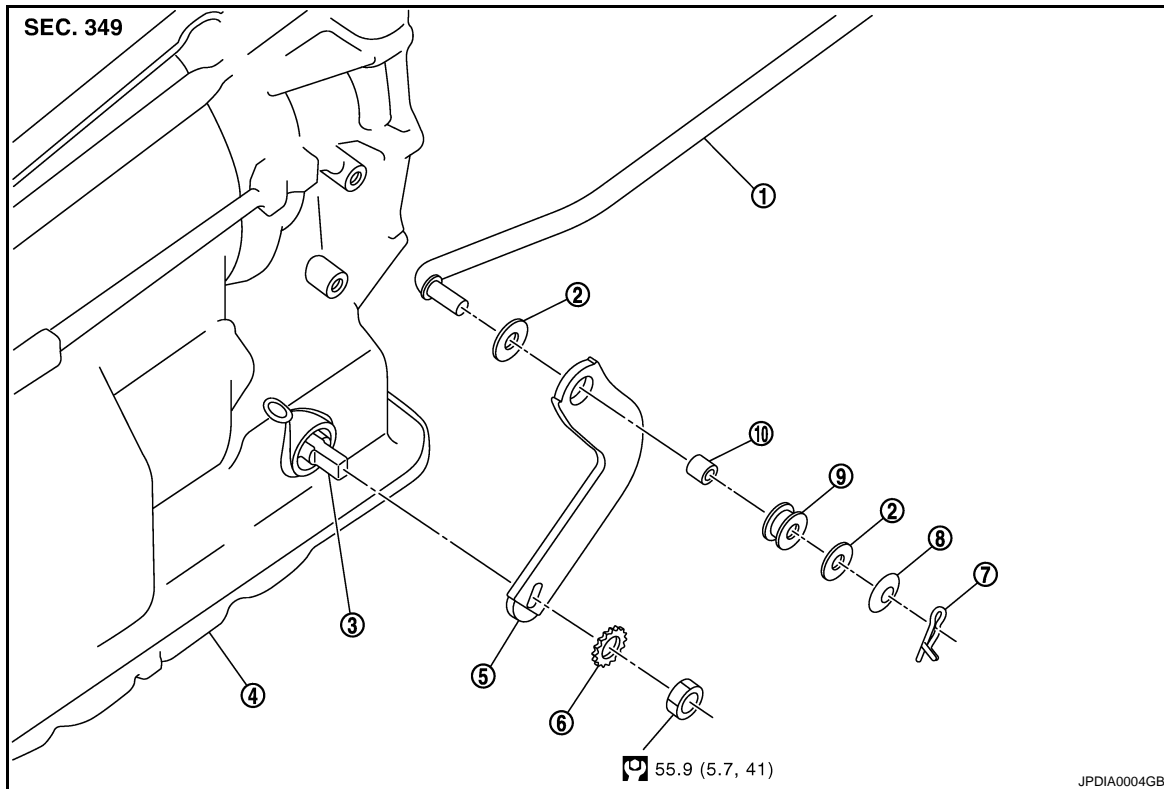

- | | | |
|-----------------|-------------------|-----------------|
| 1. Control rod | 2. Plain washer | 3. Manual shaft |
| 4. A/T assembly | 5. Manual lever | 6. Washer |
| 7. Snap pin | 8. Conical washer | 9. Insulator |
| 10. Collar | | |

Refer to [GI-4. "Components"](#) for symbols in the figure.

2WD : Removal and Installation

INFOID:000000000957145

REMOVAL

1. Disconnect control device and control rod. Refer to [TM-232. "2WD : Exploded View"](#).
2. Remove manual lever from A/T assembly.
3. Remove control rod from manual lever.

INSTALLATION

Install in the reverse order of removal.

2WD : Inspection and Adjustment

INFOID:000000000957146

ADJUSTMENT AFTER INSTALLATION

Adjust A/T positions after installing control rod. Refer to [TM-230. "2WD : Inspection and Adjustment"](#).

INSPECTION AFTER INSTALLATION

Check A/T positions after adjusting A/T positions. Refer to [TM-230. "2WD : Inspection and Adjustment"](#).

AWD


AWD : Exploded View

INFOID:000000000957147

CONTROL ROD

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

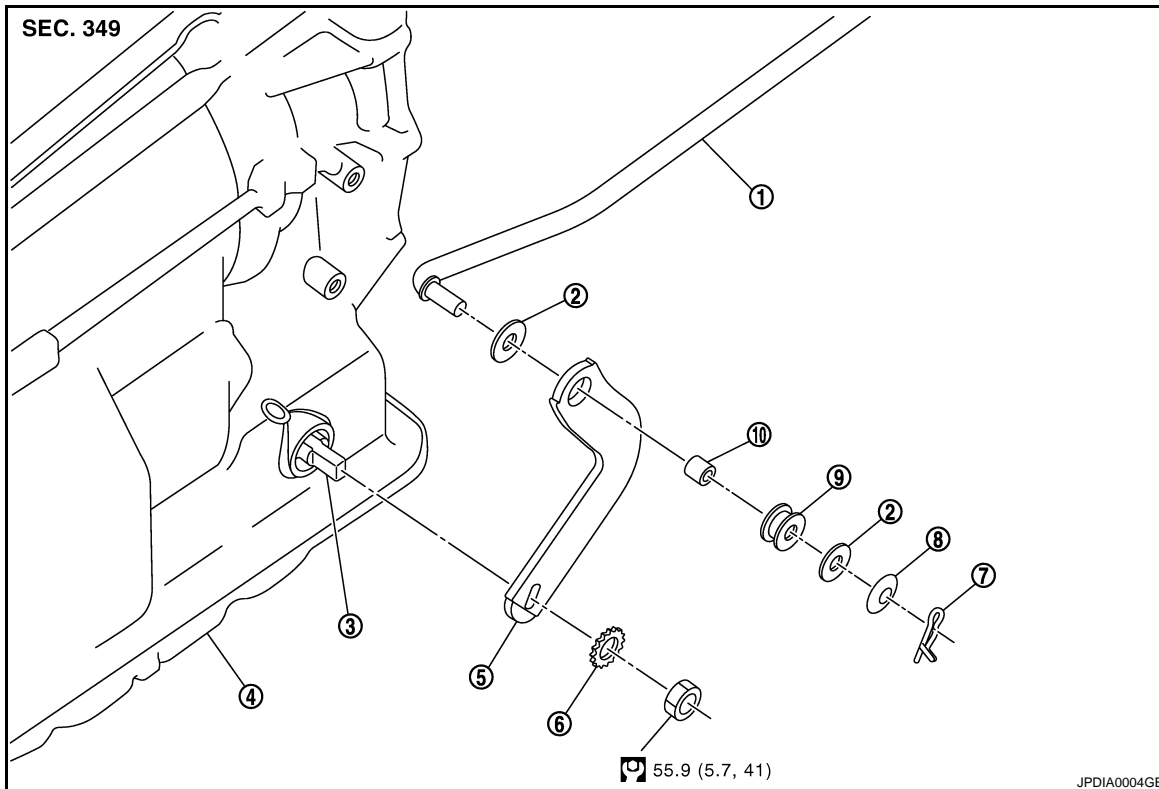

- | | | |
|-----------------|-------------------|-----------------|
| 1. Control rod | 2. Plain washer | 3. Manual shaft |
| 4. A/T assembly | 5. Manual lever | 6. Washer |
| 7. Snap pin | 8. Conical washer | 9. Insulator |
| 10. Collar | | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

AWD : Removal and Installation

INFOID:000000000957148

REMOVAL

1. Disconnect control device and control rod. Refer to [TM-233, "AWD : Exploded View"](#).
2. Remove manual lever from A/T assembly.
3. Remove control rod from manual lever.

INSTALLATION

Install in the reverse order of removal.

AWD : Inspection and Adjustment

INFOID:000000000957149

ADJUSTMENT AFTER INSTALLATION

Adjust A/T positions after installing control rod. Refer to [TM-230, "AWD : Inspection and Adjustment"](#).

INSPECTION AFTER INSTALLATION

Check A/T positions after adjusting A/T positions. Refer to [TM-230, "AWD : Inspection and Adjustment"](#).

PADDLE SHIFTER


< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

PADDLE SHIFTER

Exploded View

INFOID:000000000957150

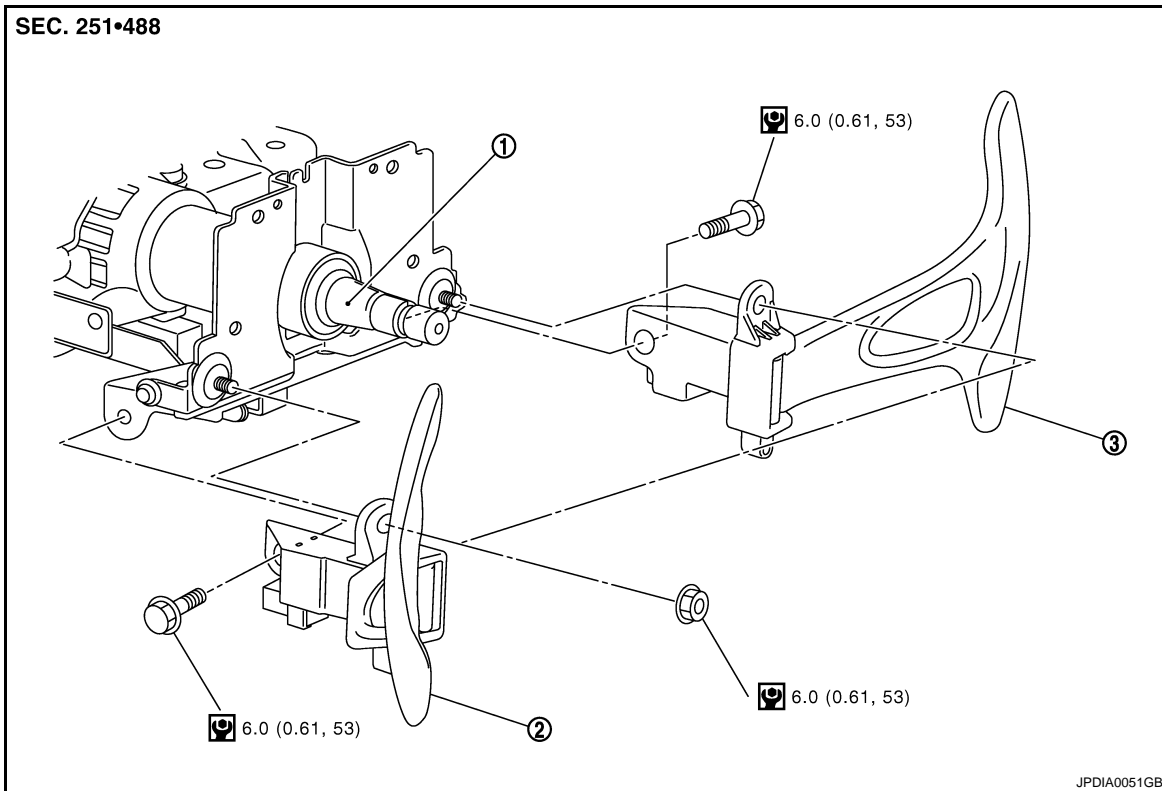

1. Steering column assembly 2. Paddle shifter (shift-down) 3. Paddle shifter (shift-up)

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000000957151

REMOVAL


1. Park the vehicle on a level surface.
2. Remove the driver air bag module. Refer to [SR-4, "Exploded View"](#).
3. Remove the steering wheel. Refer to [ST-15, "Exploded View"](#).
4. Remove the column cover. Refer to [IP-11, "Exploded View"](#).

PADDLE SHIFTER

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

5. Remove the vehicle harness connector (C) and (D) from paddle shifter.
 - A : Side of paddle shifter (shift-down)
 - B : Side of paddle shifter (shift-up)
6. Remove the paddle shifter mounting bolts (E) and nuts (F).
7. Remove the paddle shifter from the steering column assembly.

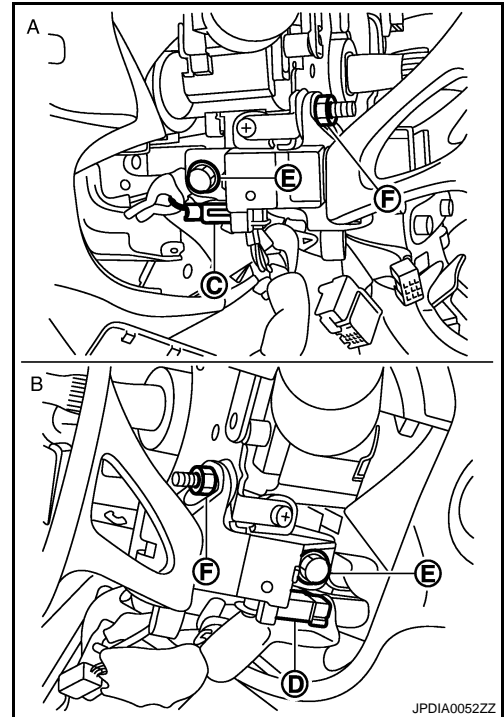

INSTALLATION

Install in the reverse order of removal.

CONTROL VALVE WITH TCM


< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

CONTROL VALVE WITH TCM

Exploded View

INFOID:000000000957152

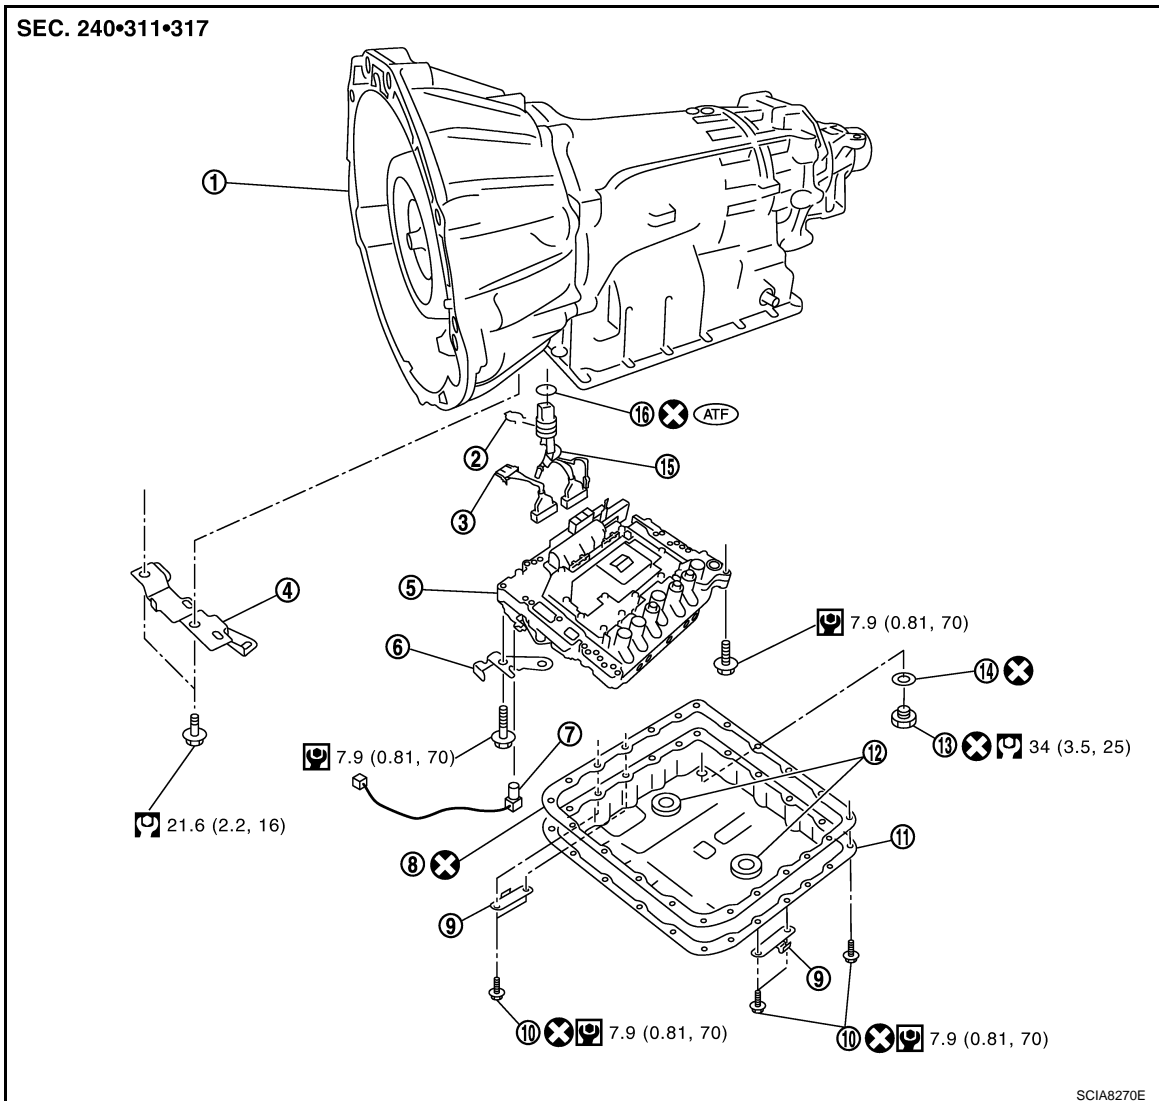

- | | | |
|-----------------------------------|---------------------------|----------------------------|
| 1. A/T | 2. Snap ring | 3. Sub-harness |
| 4. Bracket | 5. Control valve with TCM | 6. Bracket |
| 7. A/T fluid temperature sensor 2 | 8. Oil pan gasket | 9. Clip |
| 10. Oil pan mounting bolt | 11. Oil pan | 12. Magnet |
| 13. Drain plug | 14. Drain plug gasket | 15. Terminal cord assembly |
| 16. O-ring | | |

Refer to [GI-4. "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000000957153

REMOVAL

1. Disconnect the battery cable from the negative terminal.
2. Drain ATF through drain plug.
3. Remove exhaust mounting bracket. Refer to [EX-5. "Exploded View"](#).

CONTROL VALVE WITH TCM

[5AT: RE5R05A]


< ON-VEHICLE REPAIR >

- Disconnect heated oxygen sensor 2 harness connectors (A).


↔ : Vehicle front

◀ : Bolt

- Remove heated oxygen sensor 2 harness (B) from clips (1).
- Remove bracket (2) from transmission assembly.
- Disconnect A/T assembly harness connector.

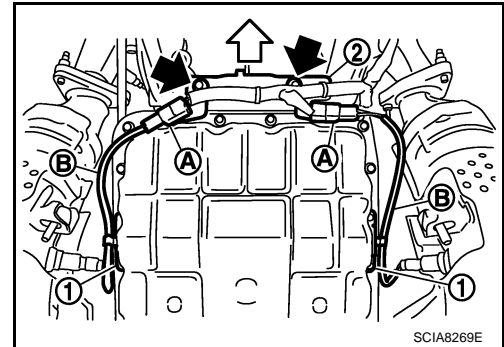


- Remove snap ring (1) from A/T assembly harness connector (A).

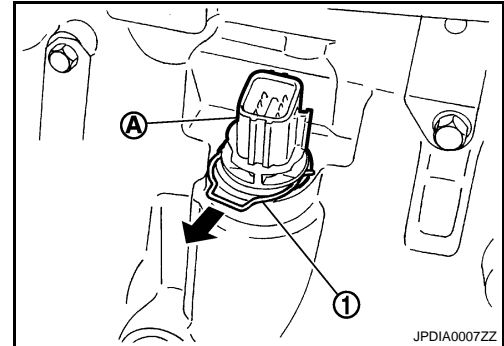

- Push A/T assembly harness connector (A).

CAUTION:

Be careful not to damage connector.

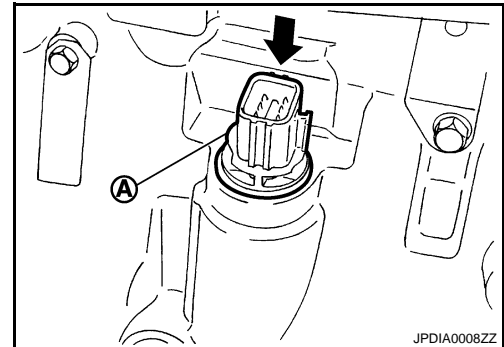


- Remove clips (1).

3 : Drain plug


↔ : Vehicle front

◀ : Oil pan mounting bolt

- Remove oil pan (2) and oil pan gasket.

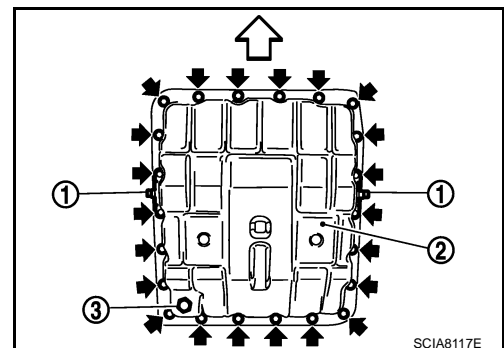

- Remove magnets (1) from oil pan.

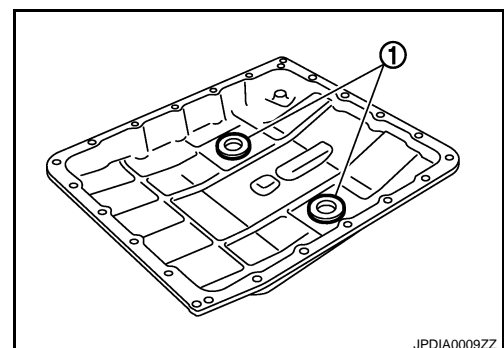

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

CONTROL VALVE WITH TCM

[5AT: RE5R05A]


< ON-VEHICLE REPAIR >

13. Disconnect A/T fluid temperature sensor 2 connector (A).

CAUTION:

Be careful not to damage connector.

14. Disengage terminal clips (←).

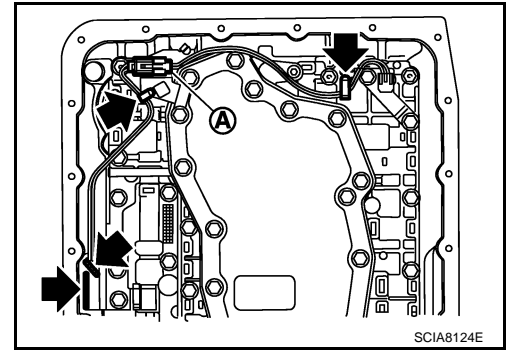


15. Disconnect revolution sensor connector (A).

CAUTION:

Be careful not to damage connector.


16. Disengage terminal clip (←).

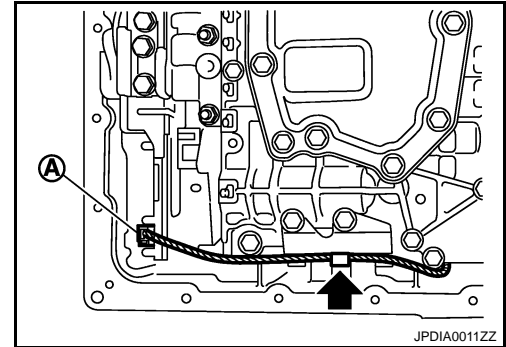

17. Remove bolts A, B and C from control valve with TCM.

← : Vehicle front


Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

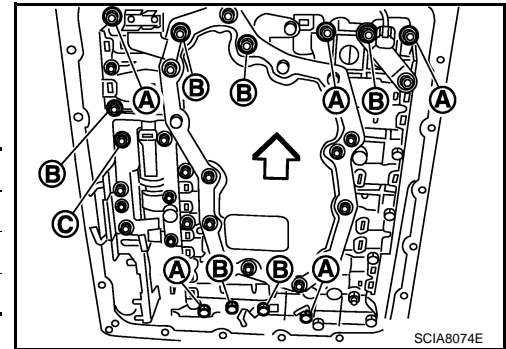

18. Remove control valve with TCM from transmission case.


CAUTION:

When removing, be careful with the manual valve (1) notch and manual plate (2) height. Remove it vertically.

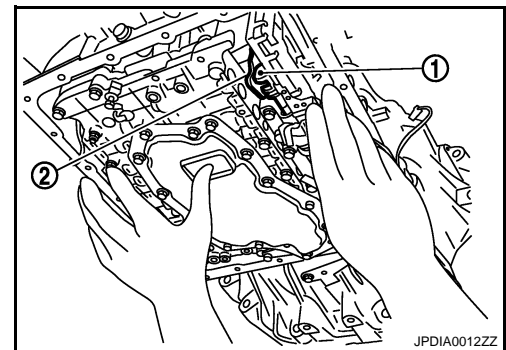

19. Remove A/T fluid temperature sensor 2 (1) with bracket (2) from control valve with TCM.

← : Bolt

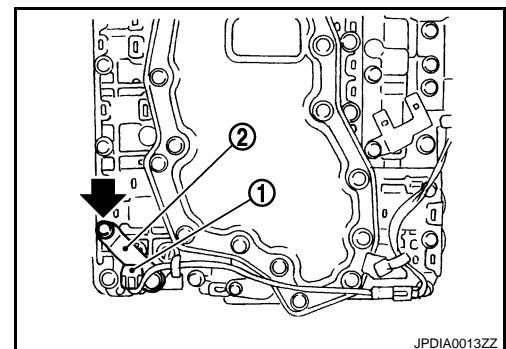


CONTROL VALVE WITH TCM


< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

20. Remove bracket (1) from A/T fluid temperature sensor 2 (2).

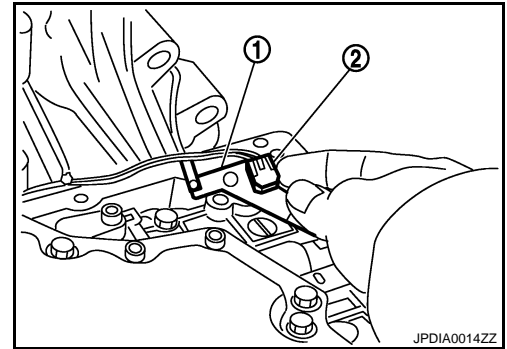


21. Remove O-ring (1) from A/T assembly harness connector (A).

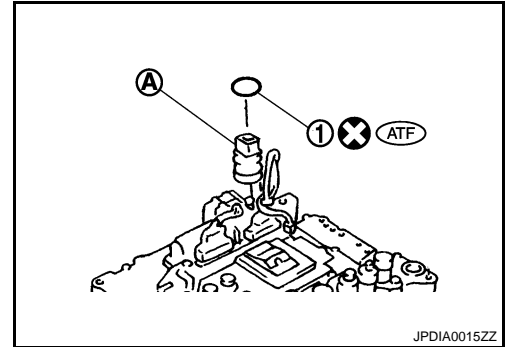


22. Disconnect TCM connectors (A) and (B).

CAUTION:

Be careful not to damage connectors.

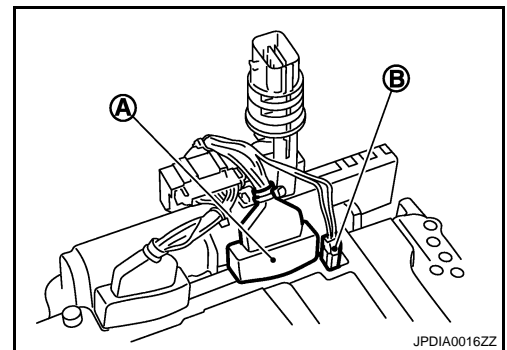


23. Remove A/T assembly harness connector (A) from control valve with TCM using flat-blade screwdriver (B).

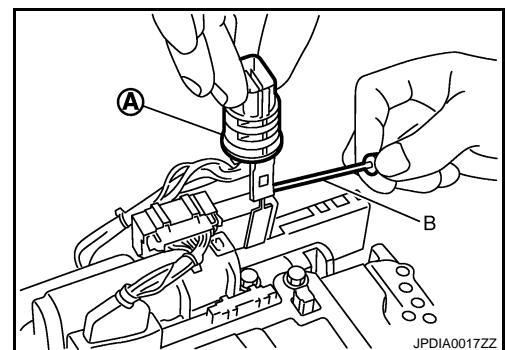

24. Disconnect TCM connector (A) and park/neutral position switch connector (B).

CAUTION:

Be careful not to damage connectors.

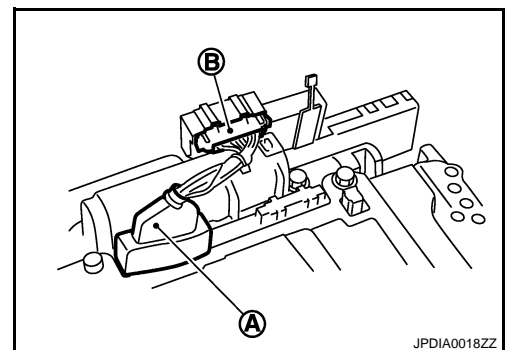

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


CONTROL VALVE WITH TCM

< ON-VEHICLE REPAIR >


[5AT: RE5R05A]

INSTALLATION


1. Connect TCM connector (A) and park/neutral position switch connector (B).

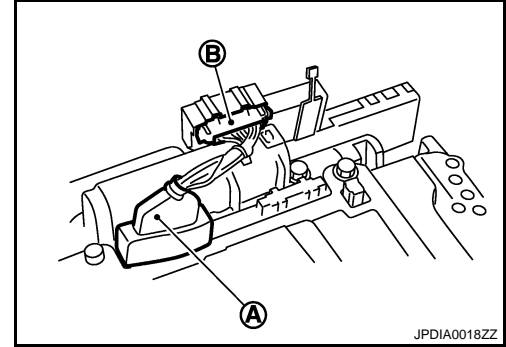


2. Install A/T assembly harness connector (A) to control valve with TCM.

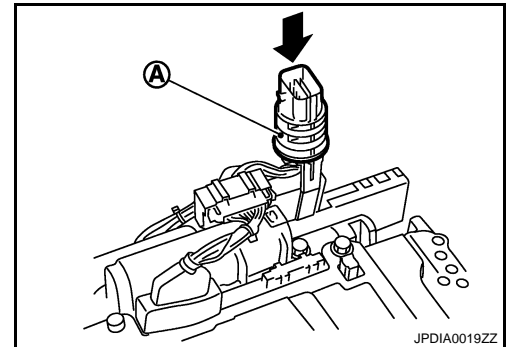

3. Connect TCM connectors (A) and (B).

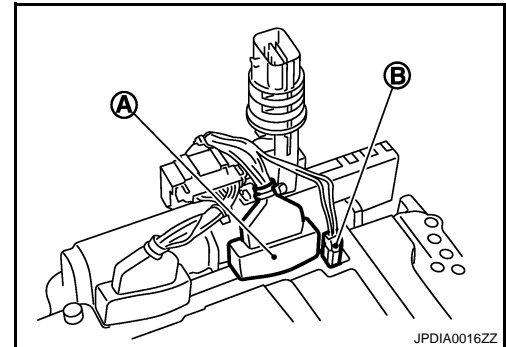

4. Install new O-ring (1) in A/T assembly harness connector (A).

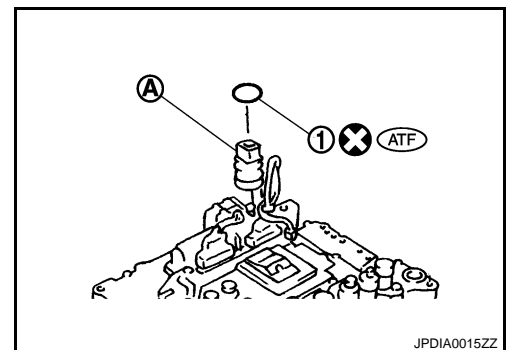


CONTROL VALVE WITH TCM

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

5. Install bracket (1) to A/T fluid temperature sensor 2 (2).

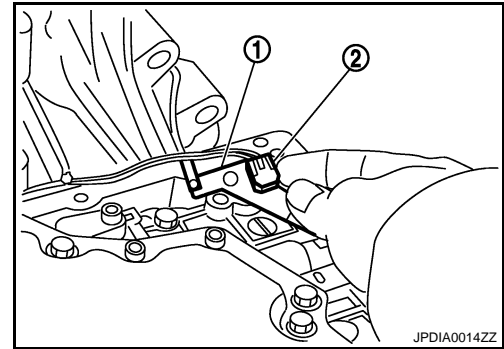


6. Install A/T fluid temperature sensor 2 (1) with bracket (2) in control valve with TCM. Tighten A/T fluid temperature sensor 2 bolt to the specified torque.

← : Bolt

CAUTION:

Adjust bolt hole of bracket to bolt hole of control valve with TCM.

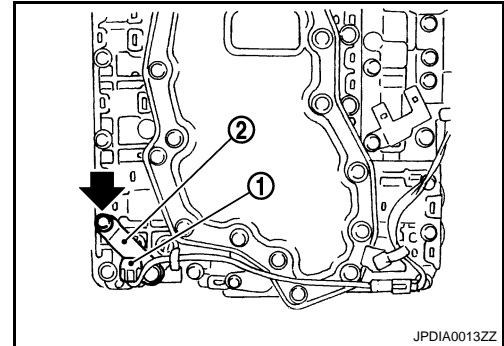


7. Install control valve with TCM in transmission case.

CAUTION:


- Make sure that turbine revolution sensor securely installs turbine revolution sensor hole (B).

A : Brake band

- Hang down revolution sensor harness toward outside so as not to disturb installation of control valve with TCM.
- Adjust A/T assembly harness connector of control valve with TCM to terminal hole of transmission case.

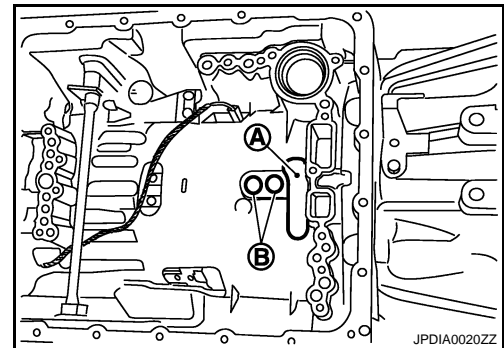

- Assemble it so that manual valve (1) cutout is engaged with manual plate (2) projection.

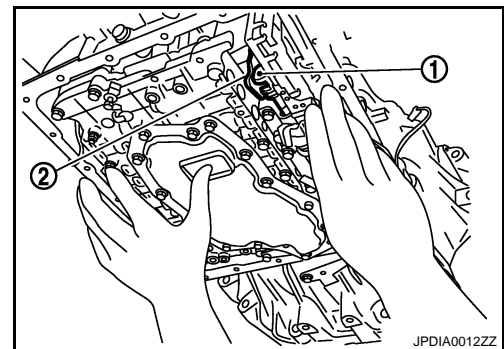

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

CONTROL VALVE WITH TCM


< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

8. Install bolts A, B and C in control valve with TCM.


↔ : Vehicle front

Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

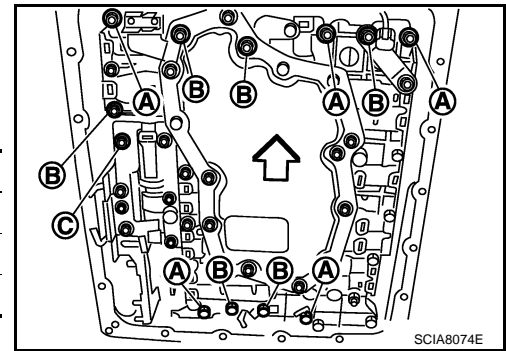


9. Tighten bolt 1, 2 and 3 temporarily to prevent dislocation. After that tighten them in order (1 → 2 → 3), and then tighten other bolts. Tighten control valve with TCM bolts to the specified torque.

↔ : Vehicle front

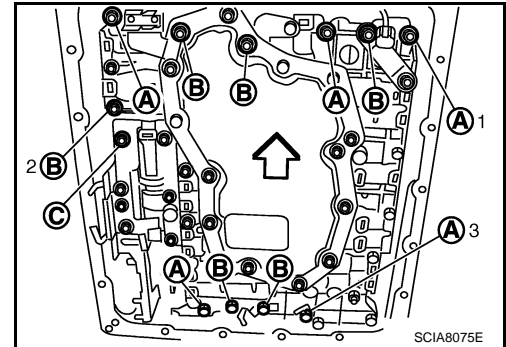


10. Connect A/T fluid temperature sensor 2 connector (A).

11. Engage terminal cord assembly and A/T fluid temperature sensor 2 harness with terminal clips (↔).

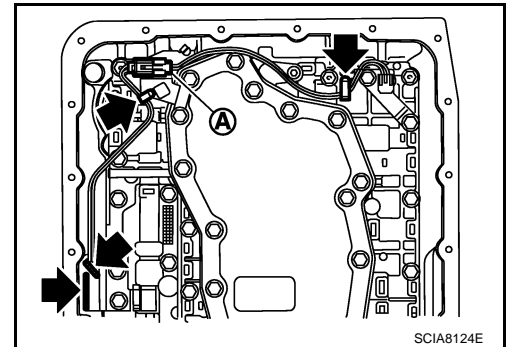

12. Connect revolution sensor connector (A).

13. Engage revolution sensor harness with terminal clip (↔).

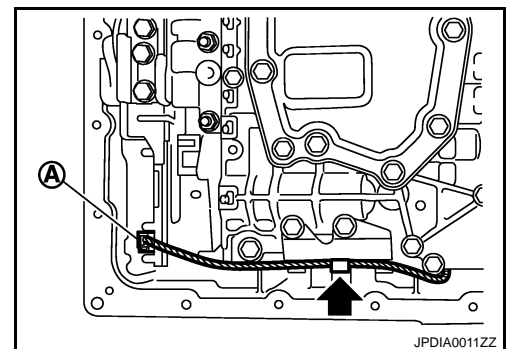


14. Install magnets (1) in oil pan.

15. Install oil pan gasket to oil pan.

CAUTION:

- Do not reuse oil pan gasket.
- Install it in the direction to align hole positions.
- Complete remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.

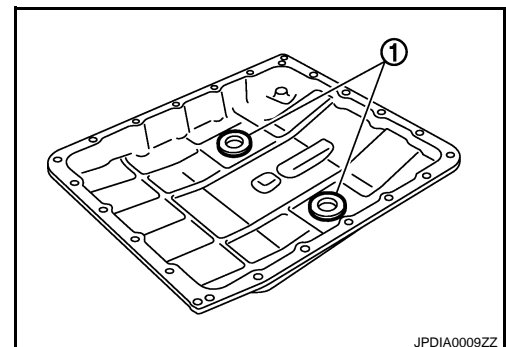

CONTROL VALVE WITH TCM

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]


16. Install oil pan (2) (with oil pan gasket) and clips (1) to transmission case.

↔ : Vehicle front

◀ : Oil pan mounting bolt

CAUTION:

- Install it so that drain plug (3) comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Completely remove all moisture, oil and old gasket, etc. from oil pan mounting surface.

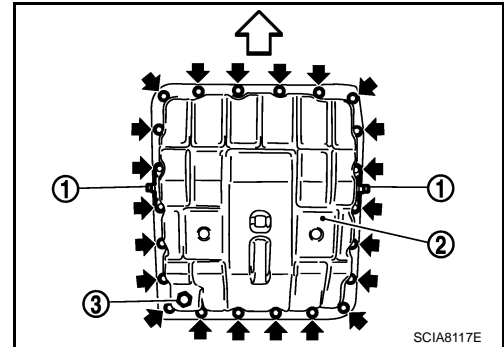

17. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them. Tighten oil pan mounting bolts to the specified torque.

↔ : Vehicle front


CAUTION:

Do not reuse oil pan mounting bolts.

18. Install drain plug to oil pan. Tighten drain plug to the specified torque.

CAUTION:


Do not reuse drain plug gasket.

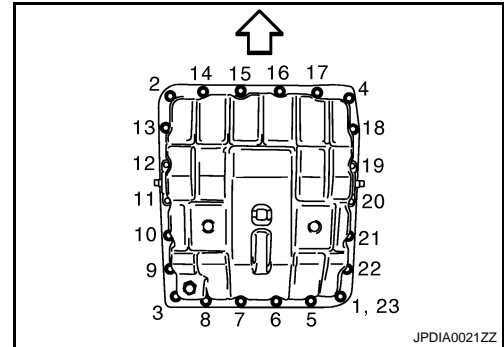

19. Pull up A/T assembly harness connector (A).


CAUTION:

Be careful not to damage connector.

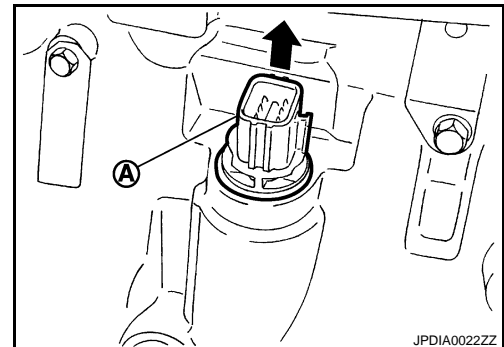

20. Install snap ring (1) to A/T assembly harness connector (A).

21. Connect A/T assembly harness connector.

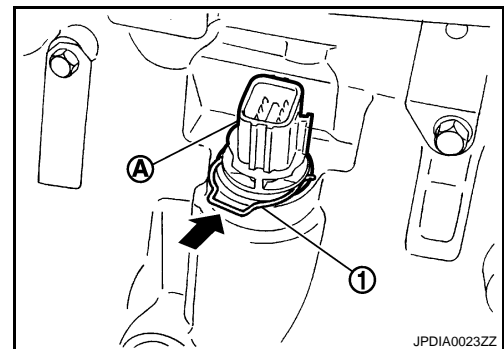

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

CONTROL VALVE WITH TCM

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

22. Install bracket (2) to transmission assembly.

⇐ : Vehicle front

← : Bolt


23. Install heated oxygen sensor 2 harness (B) to clips (1).

24. Connect heated oxygen sensor 2 harness connector (A).

25. Install exhaust mounting bracket. Refer to [EX-5. "Exploded View"](#).

26. Pour ATF into A/T assembly. Refer to [TM-218. "Changing"](#).

27. Connect the battery cable to the negative terminal.

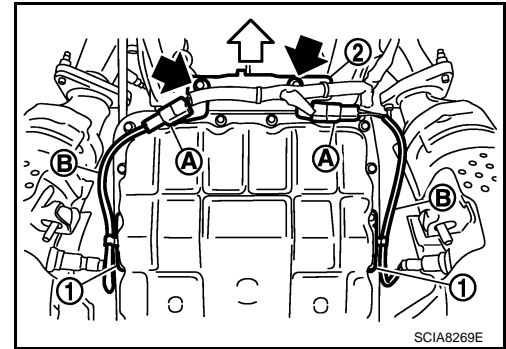


INFOID:000000000957154

Inspection

INSPECTION AFTER REMOVAL

Check foreign materials in oil pan to help determine causes of malfunction. If the ATF is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

- If frictional material is detected, perform A/T fluid cooler cleaning. Refer to [TM-220. "Cleaning"](#).

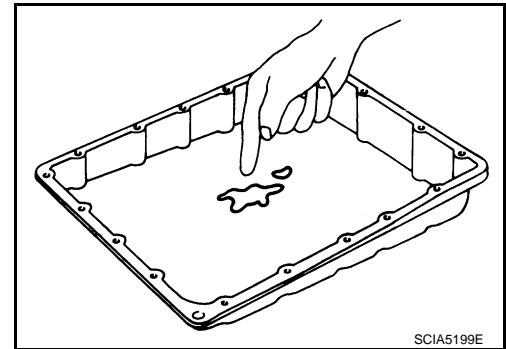

INSPECTION AFTER INSTALLATION

After completing installation, check for A/T fluid leakage and A/T fluid level. Refer to [TM-217. "Inspection"](#).

A/T FLUID TEMPERATURE SENSOR 2


< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

A/T FLUID TEMPERATURE SENSOR 2

Exploded View

INFOID:000000000957155

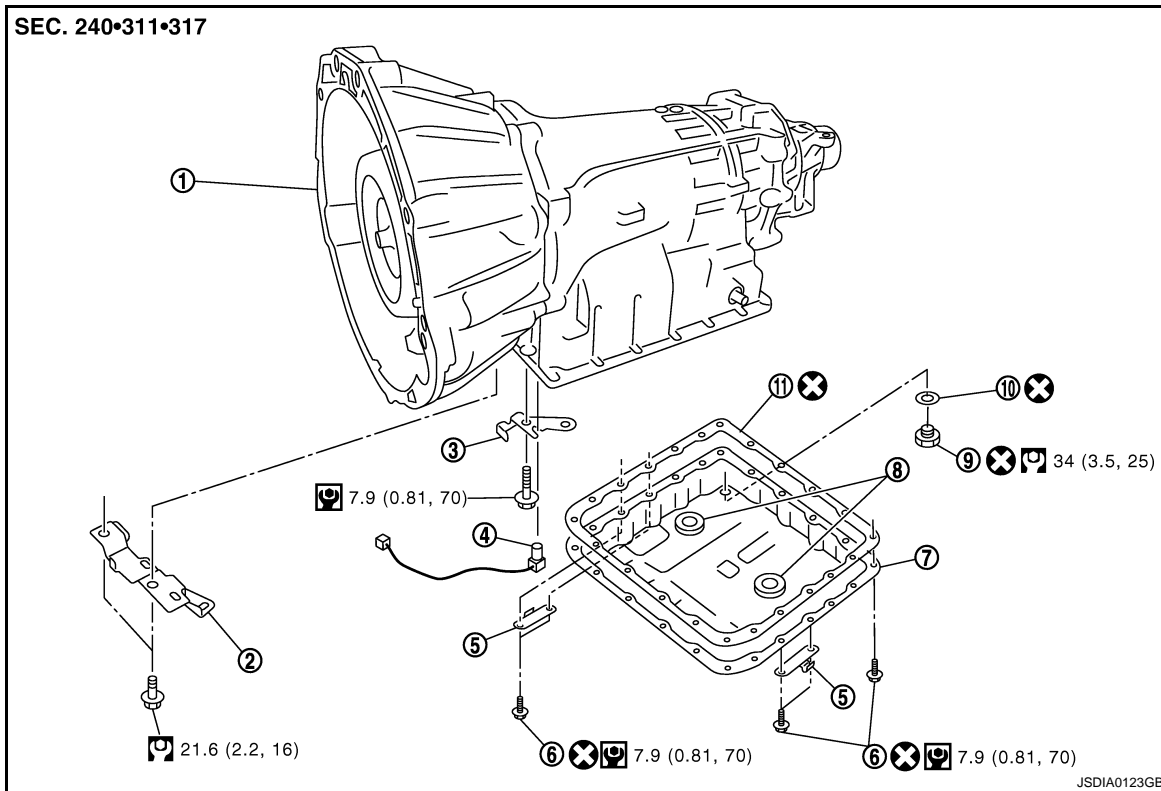

- | | | |
|-----------------------------------|--------------------|--------------------------|
| 1. A/T | 2. Bracket | 3. Bracket |
| 4. A/T fluid temperature sensor 2 | 5. Clip | 6. Oil pan mounting bolt |
| 7. Oil pan | 8. Magnet | 9. Drain plug |
| 10. Drain plug gasket | 11. Oil pan gasket | |

Refer to [GI-4. "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000000957156


REMOVAL

1. Disconnect the battery cable from the negative terminal.
2. Drain ATF through drain plug.
3. Remove exhaust mounting bracket. Refer to [EX-5. "Exploded View"](#).
4. Disconnect heated oxygen sensor 2 harness connectors (A).

↔ : Vehicle front

← : Bolt

5. Remove heated oxygen sensor 2 harness (B) from clips (1).
6. Remove bracket (2) from transmission assembly.

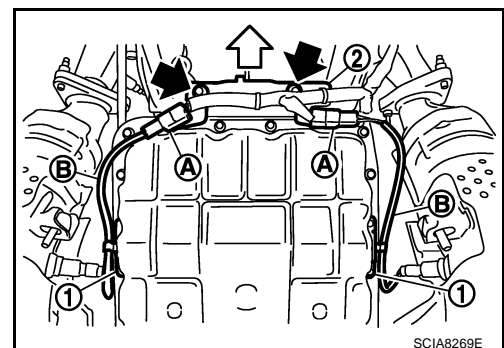

SCIA8269E

A/T FLUID TEMPERATURE SENSOR 2

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

7. Remove clips (1).

3 : Drain plug

⇐ : Vehicle front

⇐ : Oil pan mounting bolt

8. Remove oil pan (2) and oil pan gasket.

9. Remove magnets (1) from oil pan.

10. Disconnect A/T fluid temperature sensor 2 connector (A).

CAUTION:






Be careful not to damage connector.

11. Disengage terminal clip (⇐).

12. Remove A/T fluid temperature sensor 2 (1) with bracket (2) from control valve with TCM.

⇐ : Bolt

13. Remove bracket (1) from A/T fluid temperature sensor 2 (2).

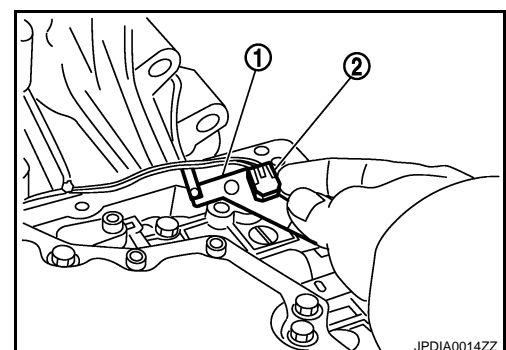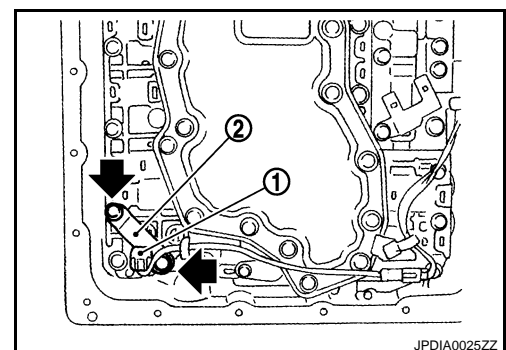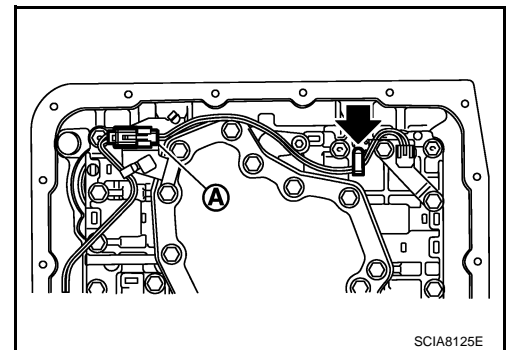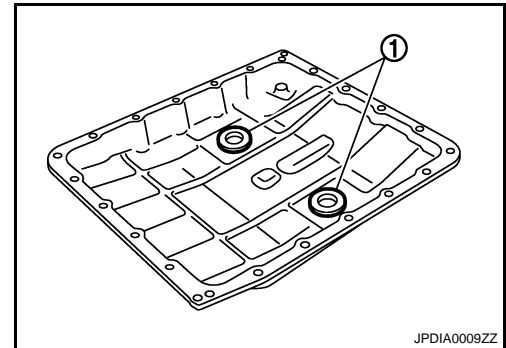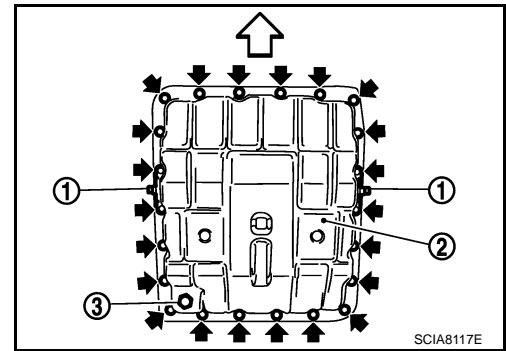


A/T FLUID TEMPERATURE SENSOR 2

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]


INSTALLATION

1. Install bracket (1) to A/T fluid temperature sensor 2 (2).

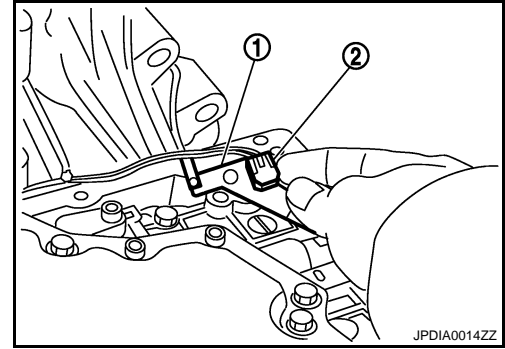


2. Install A/T fluid temperature sensor 2 (1) with bracket (2) in control valve with TCM. Tighten A/T fluid temperature sensor 2 bolts to the specified torque.

← : Bolt

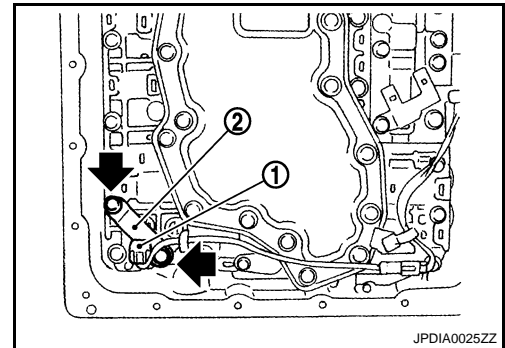


3. Connect A/T fluid temperature sensor 2 connector (A).
4. Engage A/T fluid temperature sensor 2 harness with terminal clip (←).

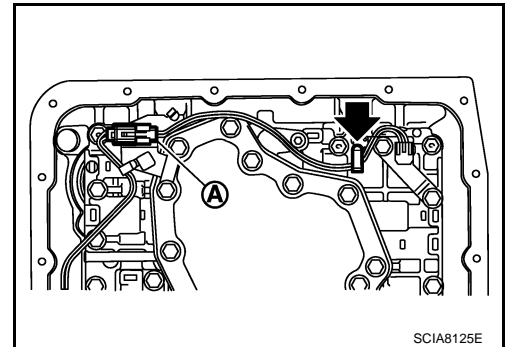

5. Install magnets (1) in oil pan.
6. Install oil pan gasket to oil pan.

CAUTION:

- Do not reuse oil pan gasket.
- Install it in the direction to align hole positions.
- Complete remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.

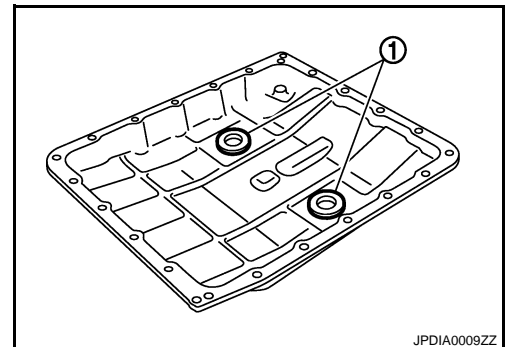

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

A/T FLUID TEMPERATURE SENSOR 2

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]


7. Install oil pan (2) (with oil pan gasket) and clips (1) to transmission case.

↔ : Vehicle front

← : Oil pan mounting bolt

CAUTION:

- Install it so that drain plug (3) comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Completely remove all moisture, oil and old gasket, etc. from oil pan mounting surface.

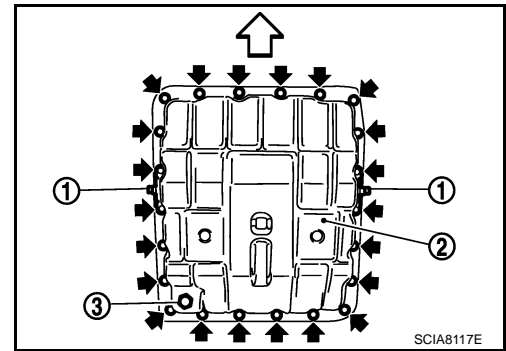

8. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them. Tighten oil pan mounting bolts to the specified torque.

↔ : Vehicle front

CAUTION:

Do not reuse oil pan mounting bolts.

9. Install drain plug to oil pan. Tighten drain plug to the specified torque.

CAUTION:



Do not reuse drain plug gasket.

10. Install bracket (2) to transmission assembly.

↔ : Vehicle front

← : Bolt

11. Install heated oxygen sensor 2 harness (B) to clips (1).
 12. Connect heated oxygen sensor 2 harness connector (A).
 13. Install exhaust mounting bracket. Refer to [EX-5. "Exploded View"](#).
 14. Pour ATF into A/T assembly. Refer to [TM-218. "Changing"](#).
 15. Connect the battery cable to the negative terminal.

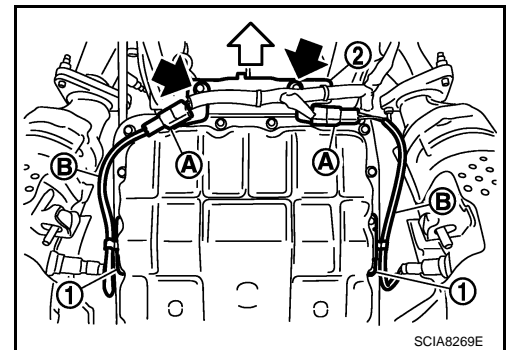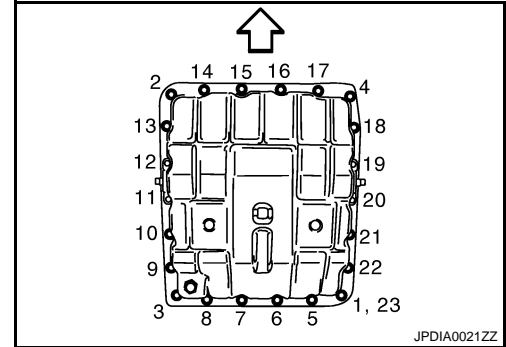


Inspection

INFOID:000000000957157

INSPECTION AFTER REMOVAL

Check foreign materials in oil pan to help determine causes of malfunction. If the ATF is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

- If frictional material is detected, perform A/T fluid cooler cleaning. Refer to [TM-220. "Cleaning"](#).

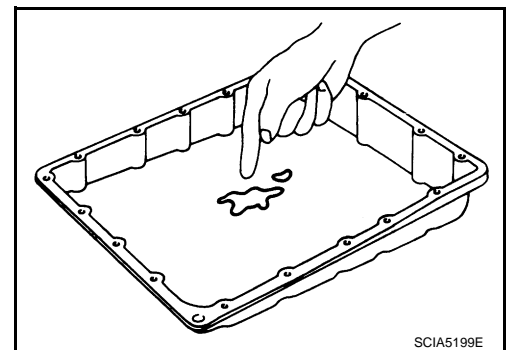

INSPECTION AFTER INSTALLATION

After completing installation, check for A/T fluid leakage and A/T fluid level. Refer to [TM-217. "Inspection"](#).

PARKING COMPONENTS

< ON-VEHICLE REPAIR >


[5AT: RE5R05A]

PARKING COMPONENTS

2WD

2WD : Exploded View

INFOID:000000000957158

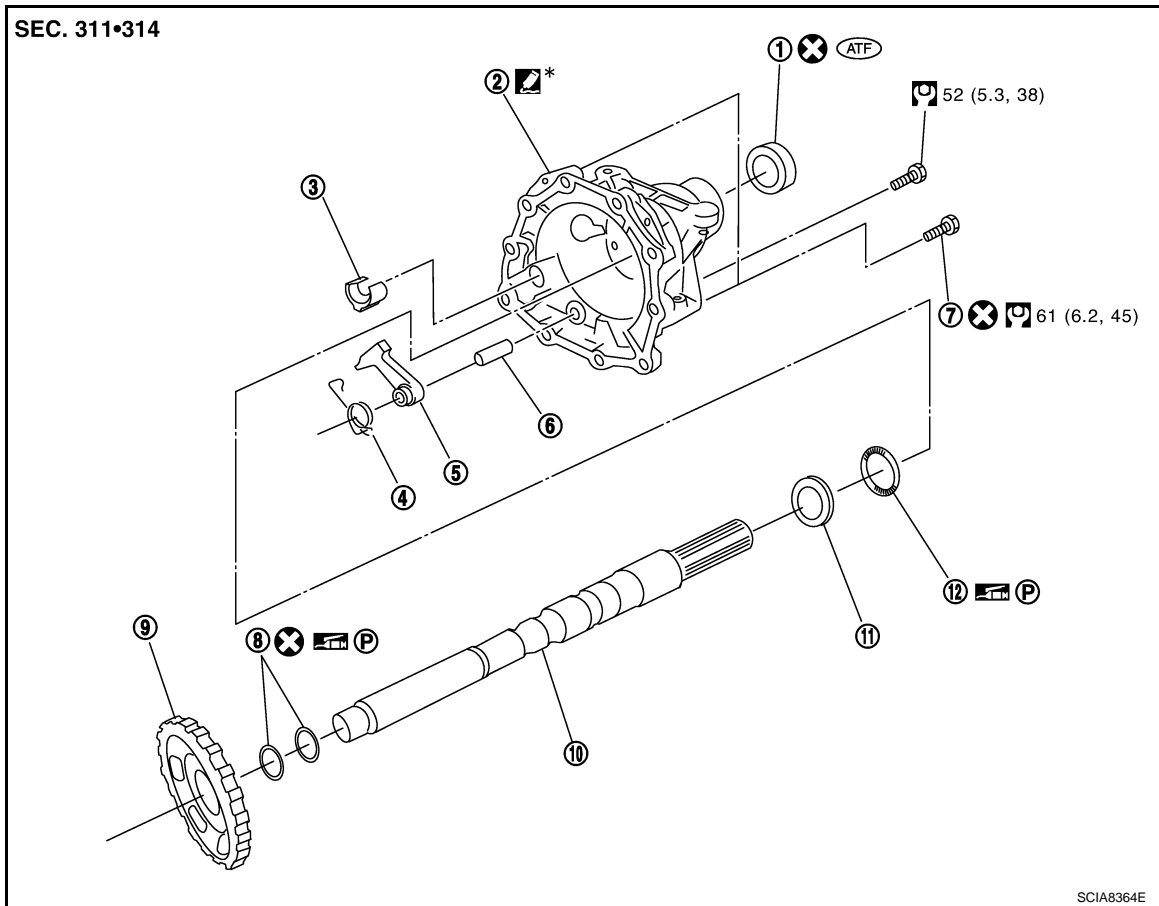

- | | | |
|----------------------|-------------------|-----------------------------|
| 1. Rear oil seal | 2. Rear extension | 3. Parking actuator support |
| 4. Return spring | 5. Parking pawl | 6. Pawl shaft |
| 7. Self-sealing bolt | 8. Seal ring | 9. Parking gear |
| 10. Output shaft | 11. Bearing race | 12. Needle bearing |

: Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).
Refer to [GI-4, "Components"](#) for symbols not described on the above.

2WD : Removal and Installation

INFOID:000000000957159

REMOVAL

1. Drain ATF through drain plug.
2. Remove exhaust front tube and center muffler with power tool. Refer to [EX-5, "Exploded View"](#).
3. Remove rear propeller shaft. Refer to [DLN-93, "Exploded View"](#).
4. Remove control rod. Refer to [TM-236, "2WD : Exploded View"](#).
5. Support A/T assembly with a transmission jack.
CAUTION:
When setting transmission jack, be careful not to allow it to collide against the drain plug.
6. Remove rear engine mounting member with power tool. Refer to [EM-77, "2WD : Exploded View"](#).
7. Remove engine mounting insulator (rear). Refer to [EM-77, "2WD : Exploded View"](#).

PARKING COMPONENTS


< ON-VEHICLE REPAIR >

[5AT: RE5R05A]


8. Remove tightening bolts for rear extension assembly and transmission case.

1 : Self-sealing bolt


A : Bolt

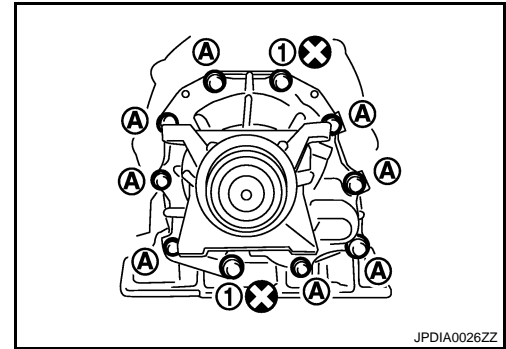


9. Tap rear extension assembly with a soft hammer (A).

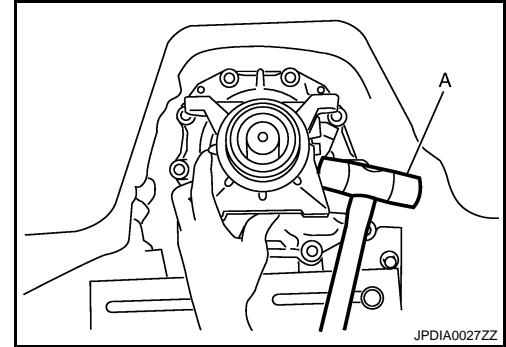


10. Remove rear extension assembly (with needle bearing) from transmission case.

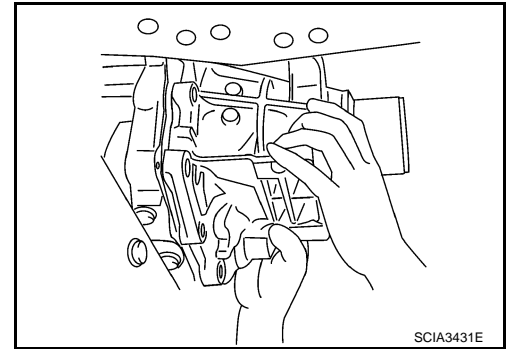

11. Remove bearing race (1) from output shaft (2).

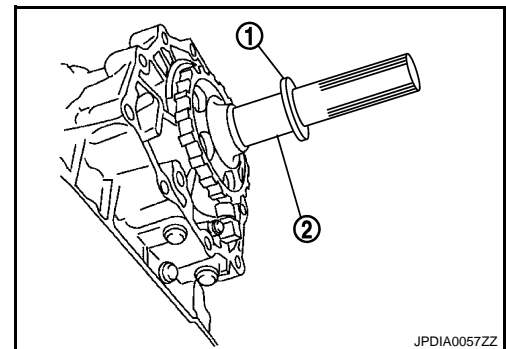

12. Remove output shaft (1) from transmission case by rotating left/right.

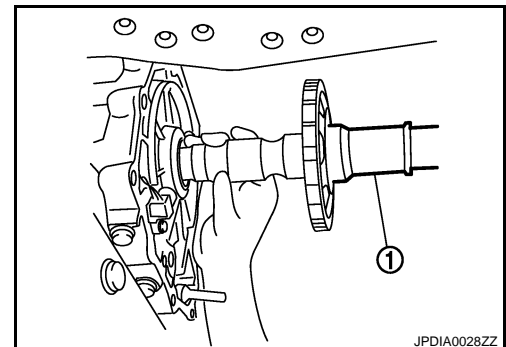


PARKING COMPONENTS


< ON-VEHICLE REPAIR >

[5AT: RE5R05A]


13. Remove parking gear (1) from output shaft (2).

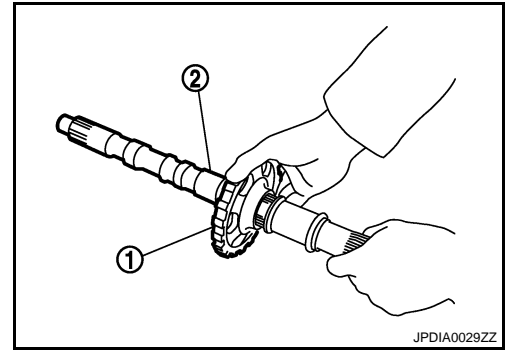


14. Remove seal rings (1) from output shaft.

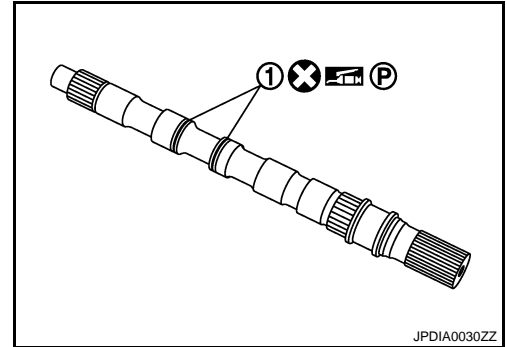


15. Remove needle bearing (1) from rear extension.

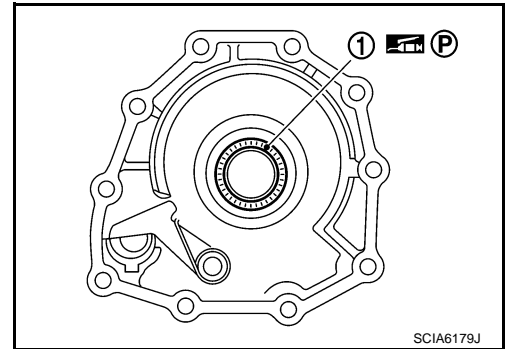

16. Remove parking actuator support (1) from rear extension.

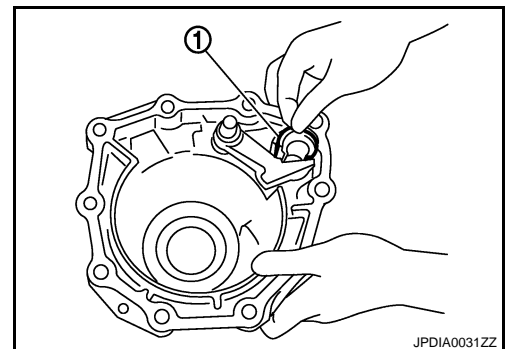

17. Remove parking pawl (with return spring) (1) and pawl shaft (2) from rear extension.

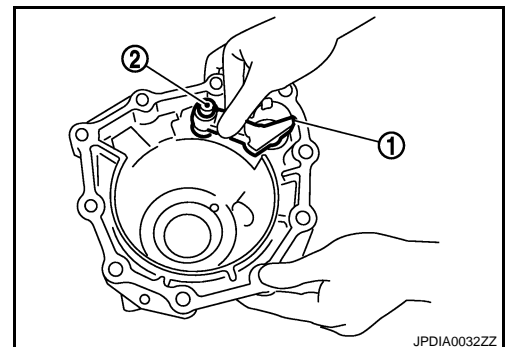


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

PARKING COMPONENTS

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]


18. Remove return spring (1) from parking pawl (2).

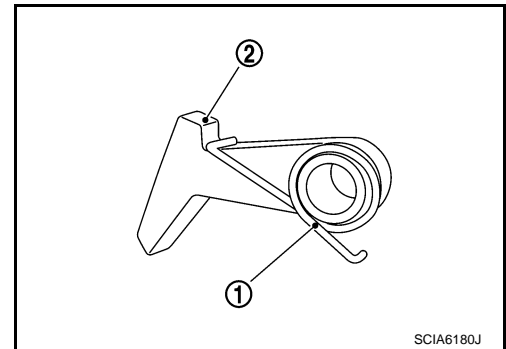

19. Remove rear oil seal (1) from rear extension using flat-blade screwdriver (A).

CAUTION:

Be careful not to scratch rear extension.

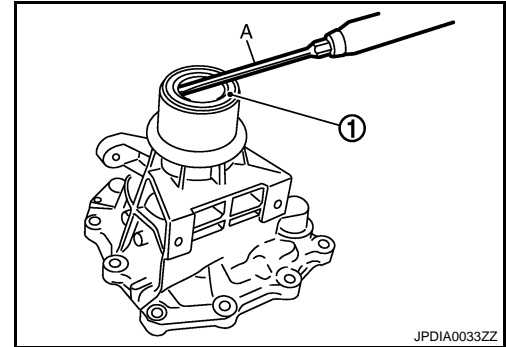


INSTALLATION


1. As shown in the figure, use a drift [SST: ST33400001 (J-26082)] (A) to drive rear oil seal into the rear extension until it is flush.

CAUTION:

- Do not reuse rear oil seal.
- Apply ATF to rear oil seal.

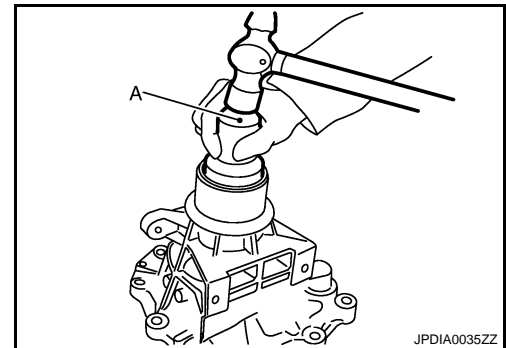

2. Install return spring (1) to parking pawl (2).

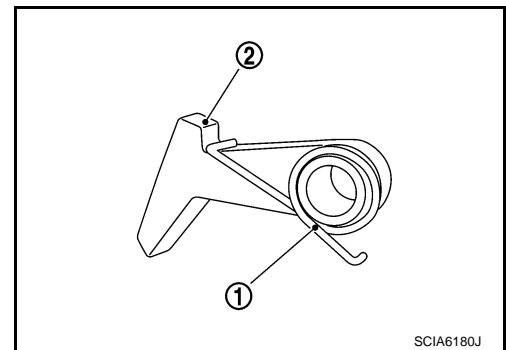


PARKING COMPONENTS


< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

3. Install parking pawl (with return spring) (1) and pawl shaft (2) to rear extension.

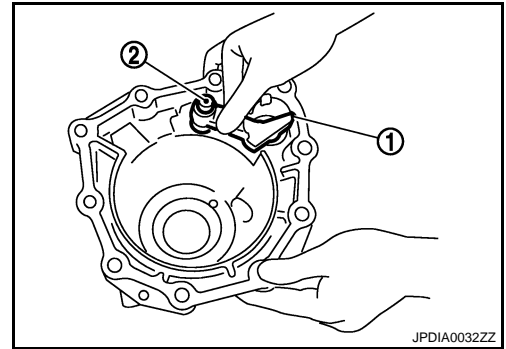


4. Install parking actuator support (1) to rear extension.

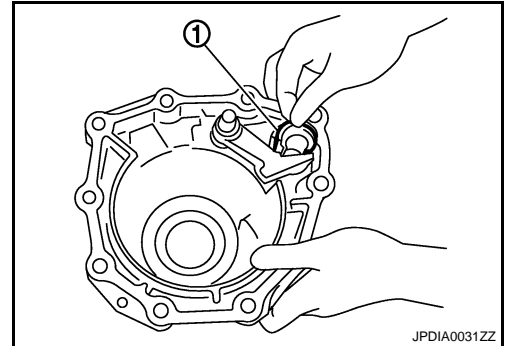


5. Install bearing (1) to rear extension.

CAUTION:


Take care with the direction of needle bearing. Refer to [TM-289](#), "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings".

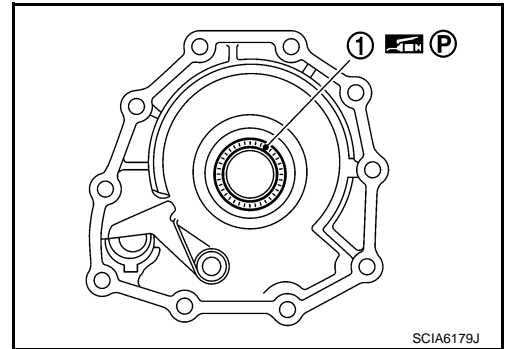

6. Install seal rings (1) to output shaft.

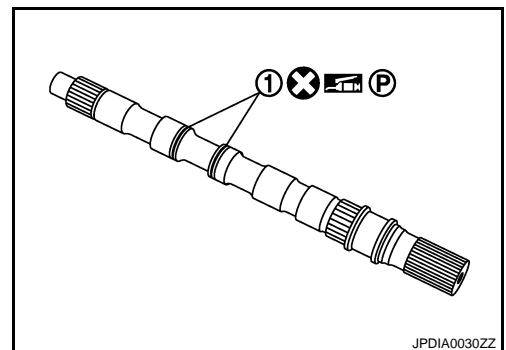

7. Install parking gear (1) to output shaft (2).

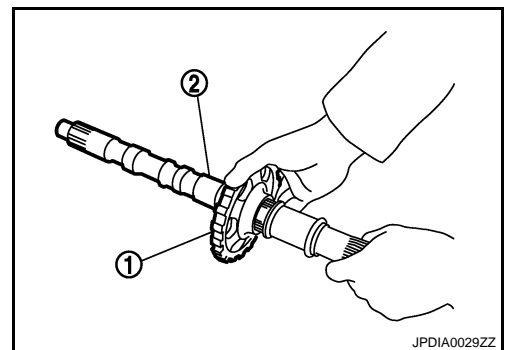


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

PARKING COMPONENTS


< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

8. Install output shaft (1) in transmission case.

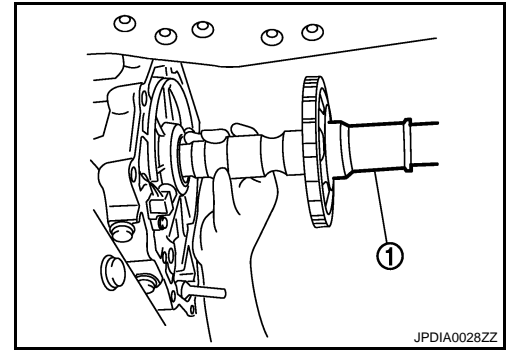


9. Install bearing race (1) to output shaft (2).

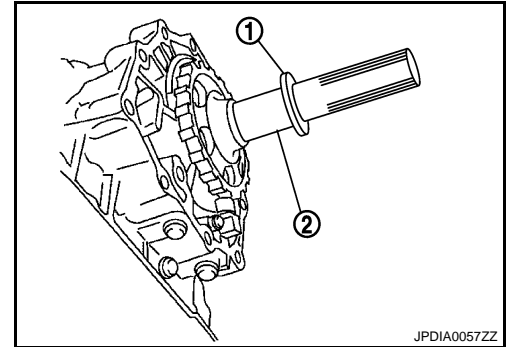

10. Apply recommended sealant (Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-15. "Recommended Chemical Products and Sealants"](#).) to rear extension assembly as shown in the figure.


- A** : Start and finish point shall be in the center of two bolts.
- B** : 3 – 5 mm (0.12 – 0.20 in)
- Sealant width (C)** : 1.0 – 2.0 mm (0.04 – 0.08 in)
- Sealant height (C)** : 0.4 – 1.0 mm (0.016 – 0.04 in)

CAUTION:
Completely remove all moisture, oil and old sealant, etc. from the transmission case and rear extension assembly mounting surfaces.

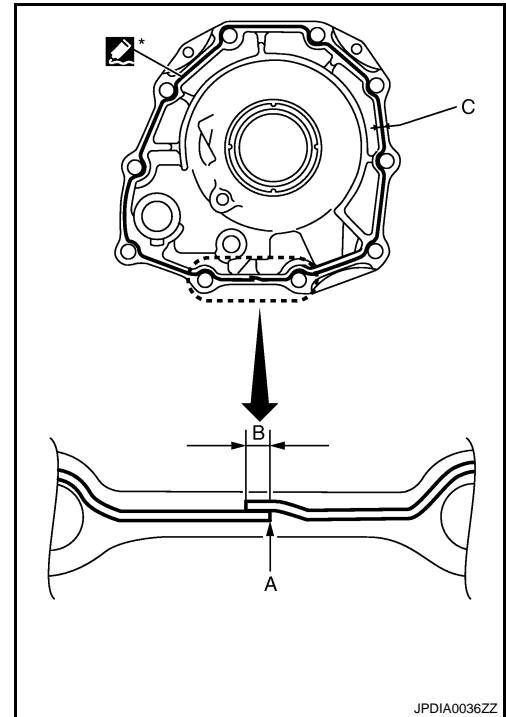

11. Install rear extension assembly (with needle bearing) to transmission case.

CAUTION:
Insert the tip of parking rod between the parking pawl and the parking actuator support when assembling the rear extension assembly.

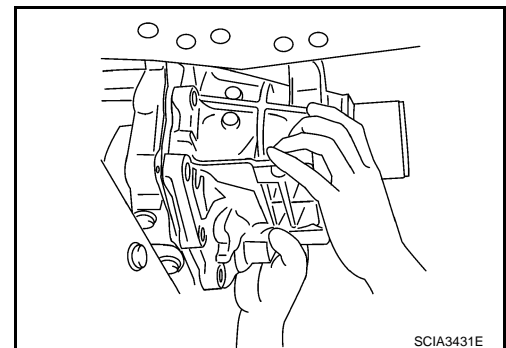

PARKING COMPONENTS

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

12. Tighten rear extension assembly bolts to the specified torque.

- 1 : Self-sealing bolt
- A : Bolt

13. Install engine mounting insulator (rear). Refer to [EM-77, "2WD : Exploded View"](#).

14. Install rear engine mounting member. Refer to [EM-77, "2WD : Exploded View"](#).

15. Install control rod. Refer to [TM-236, "2WD : Exploded View"](#).

16. Install rear propeller shaft. Refer to [DLN-93, "Exploded View"](#).

17. Install exhaust front tube and center muffler. Refer to [EX-5, "Exploded View"](#).

18. Install drain plug to oil pan. Tighten a necessary drain plug with specified torque. Refer to [TM-240, "Exploded View"](#).

CAUTION:

Do not reuse drain plug gasket.



19. Pour ATF into A/T assembly. Refer to [TM-218, "Changing"](#).

2WD : Inspection

INFOID:000000000957160

INSPECTION AFTER REMOVAL

If the contact surface on parking actuator support (1), parking pawl (2) and etc. has excessive wear, abrasion, bend, or any other damage, replace the components.

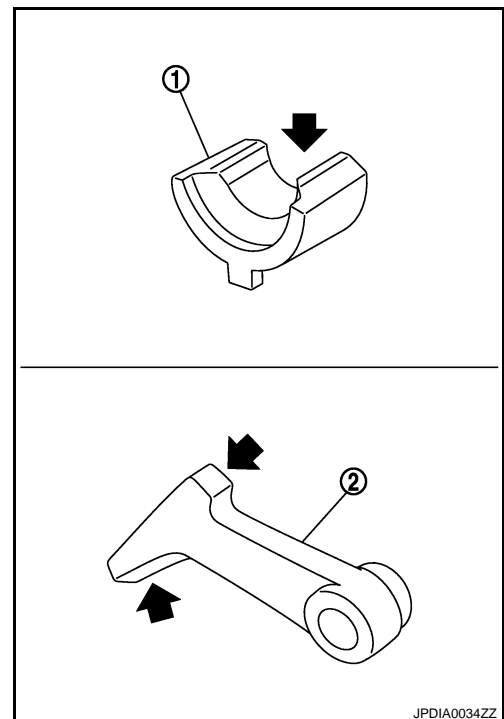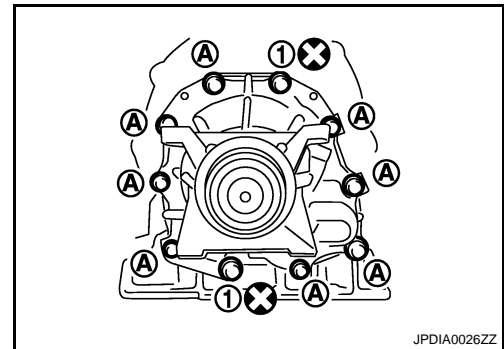

INSPECTION AFTER INSTALLATION

After completing installation, check the following item.

- A/T fluid leakage and A/T fluid level. Refer to [TM-217, "Inspection"](#).
- A/T position. Refer to [TM-230, "2WD : Inspection and Adjustment"](#).

REAR OIL SEAL

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

REAR OIL SEAL

2WD

2WD : Exploded View

INFOID:000000000957161

Refer to [TM-281, "Exploded View"](#) (2WD).

2WD : Removal and Installation


INFOID:000000000957162

REMOVAL

1. Remove exhaust front tube and center muffler with power tool. Refer to [EX-5, "Exploded View"](#).
2. Remove rear propeller shaft. Refer to [DLN-93, "Exploded View"](#).
3. Remove rear oil seal (1) using a flat-bladed screwdriver (A).

CAUTION:

Be careful not to scratch rear extension assembly.

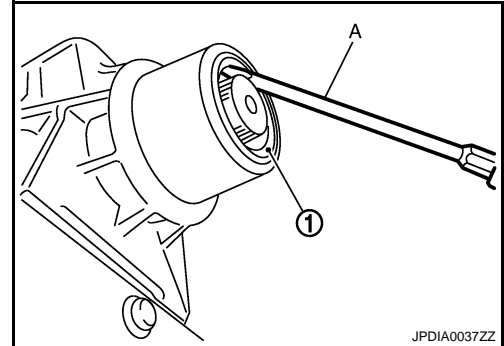


INSTALLATION

1. As shown in the figure, use the drift [SST: ST33400001 (J-26082)] (A) to drive rear oil seal into rear extension assembly until it is flush.

CAUTION:

- Do not reuse rear oil seal.
- Apply ATF to rear oil seal.

2. Install rear propeller shaft. Refer to [DLN-93, "Exploded View"](#).
3. Install exhaust front tube and center muffler. Refer to [EX-5, "Exploded View"](#).

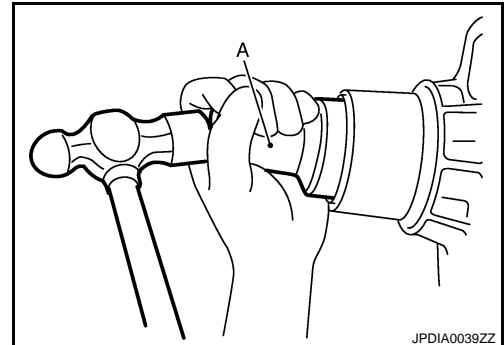

2WD : Inspection

INFOID:000000000957163

INSPECTION AFTER INSTALLATION

After completing installation, check A/T fluid leakage and A/T fluid level. Refer to [TM-217, "Inspection"](#).

AWD

AWD : Exploded View

INFOID:000000000957164

Refer to [TM-281, "Exploded View"](#) (AWD).

AWD : Removal and Installation

INFOID:000000000957165

REMOVAL

1. Remove exhaust front tube and center muffler with power tool. Refer to [EX-5, "Exploded View"](#).

REAR OIL SEAL


< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

2. Remove rear propeller shaft. Refer to [DLN-101. "Exploded View"](#).
3. Remove transfer assembly from A/T assembly. Refer to [DLN-55. "Exploded View"](#).
4. Remove rear oil seal (1) using a flat-bladed screwdriver (A).

CAUTION:

Be careful not to scratch adapter case assembly.

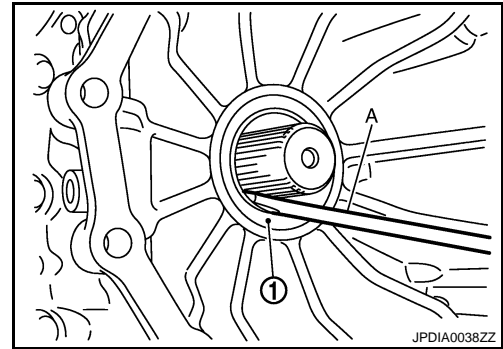


INSTALLATION

1. As shown in the figure, use the drift [64 mm (2.52 in) dia. commercial service tool] (A) to drive rear oil seal into adapter case assembly until it is flush.

CAUTION:

- Do not reuse rear oil seal.
- Apply ATF to rear oil seal.

2. Install transfer assembly to A/T assembly. Refer to [DLN-55. "Exploded View"](#).
3. Install rear propeller shaft. Refer to [DLN-101. "Exploded View"](#).
4. Install exhaust front tube and center muffler. Refer to [EX-5. "Exploded View"](#).

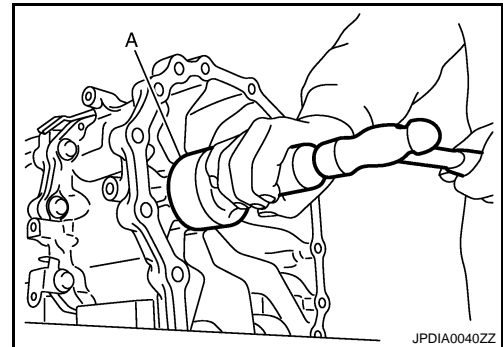

AWD : Inspection

INFOID:000000000957166

INSPECTION AFTER INSTALLATION

After completing installation, check for A/T fluid leakage and A/T fluid level. Refer to [TM-217. "Inspection"](#).

REVOLUTION SENSOR

< ON-VEHICLE REPAIR >


[5AT: RE5R05A]

REVOLUTION SENSOR

2WD

2WD : Exploded View

INFOID:000000000957167

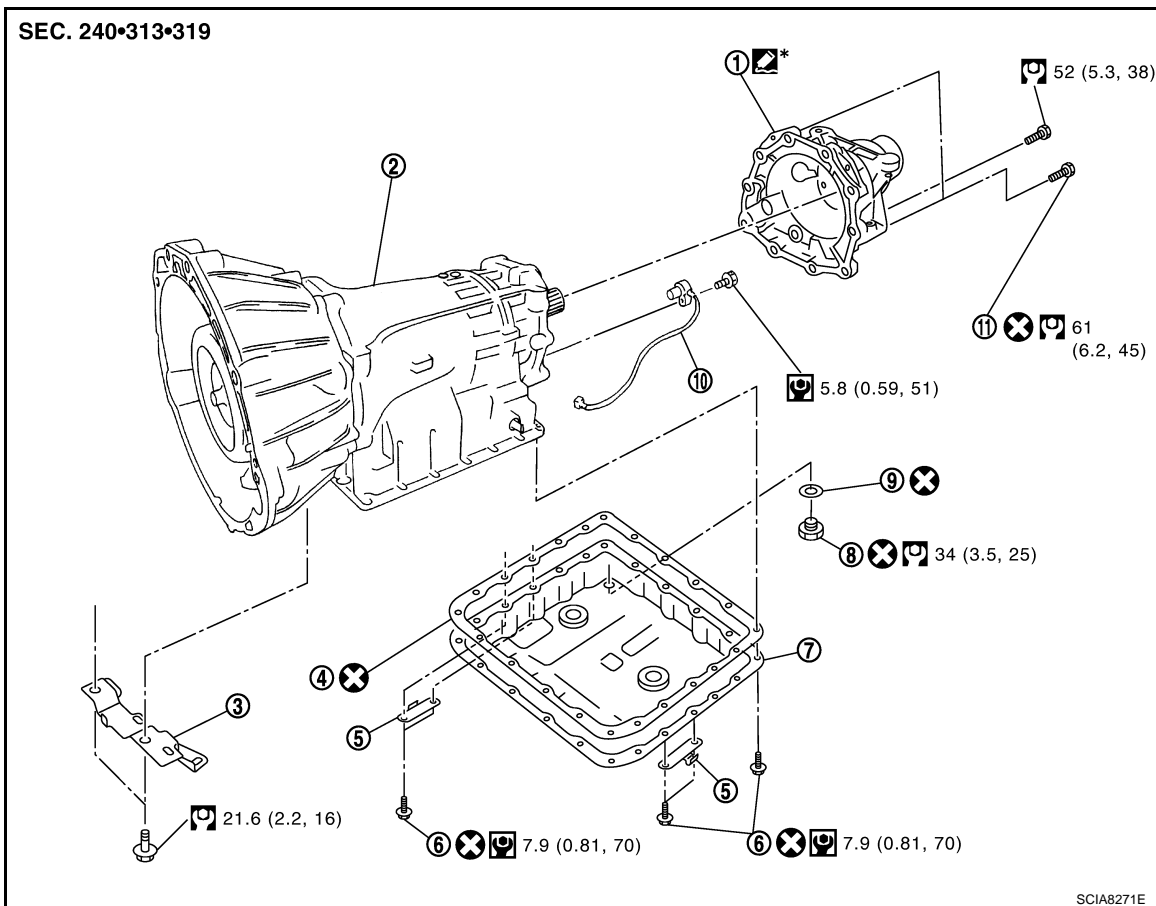

- | | | |
|-----------------------|-----------------------|--------------------------|
| 1. Rear extension | 2. A/T | 3. Bracket |
| 4. Oil pan gasket | 5. Clip | 6. Oil pan mounting bolt |
| 7. Oil pan | 8. Drain plug | 9. Drain plug gasket |
| 10. Revolution sensor | 11. Self-sealing bolt | |

: Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).
Refer to [GI-4, "Components"](#) for symbols not described on the above.

2WD : Removal and Installation

INFOID:000000000957168

REMOVAL

1. Disconnect the battery cable from the negative terminal.
2. Drain ATF through drain plug.
3. Remove exhaust front tube and center muffler with power tool. Refer to [EX-5, "Exploded View"](#).
4. Remove rear propeller shaft. Refer to [DLN-93, "Exploded View"](#).
5. Remove control rod. Refer to [TM-236, "2WD : Exploded View"](#).
6. Remove exhaust mounting bracket. Refer to [EX-5, "Exploded View"](#).

REVOLUTION SENSOR

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]


7. Disconnect heated oxygen sensor 2 harness connectors (A).

↔ : Vehicle front

← : Bolt

8. Remove heated oxygen sensor 2 harness (B) from clips (1).

9. Remove bracket (2) from transmission assembly.

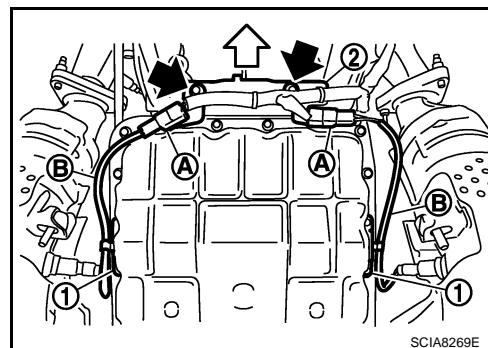

10. Remove clips (1).

3 : Drain plug

↔ : Vehicle front


← : Oil pan mounting bolt

11. Remove oil pan (2) and oil pan gasket.

12. Support A/T assembly with a transmission jack.

CAUTION:

When setting transmission jack, place wooden blocks to prevent from damaging control valve with TCM and transmission case.

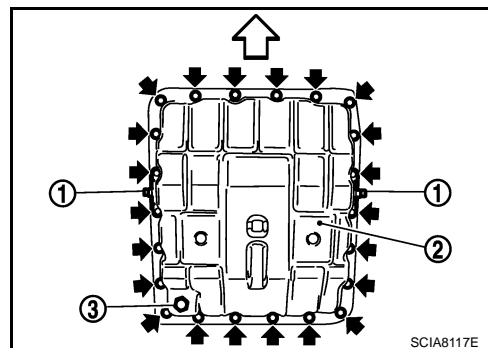


13. Remove rear engine mounting member with power tool. Refer to [TM-275. "2WD : Exploded View"](#).

14. Remove engine mounting insulator (rear). Refer to [TM-275. "2WD : Exploded View"](#).


15. Remove tightening bolts for rear extension assembly and transmission case.

1 : Self-sealing bolt

A : Bolt

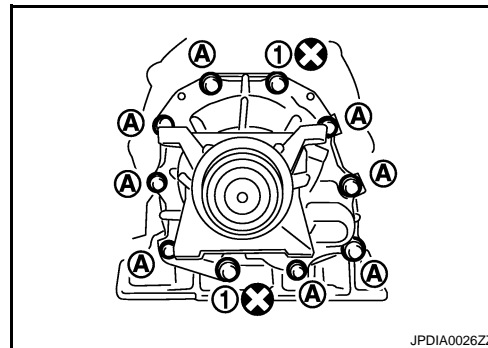

16. Tap rear extension assembly with a soft hammer (A).

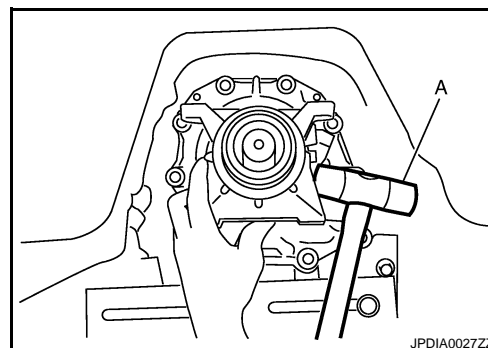


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

REVOLUTION SENSOR

[5AT: RE5R05A]

< ON-VEHICLE REPAIR >

17. Remove rear extension assembly (With needle bearing) from transmission case.

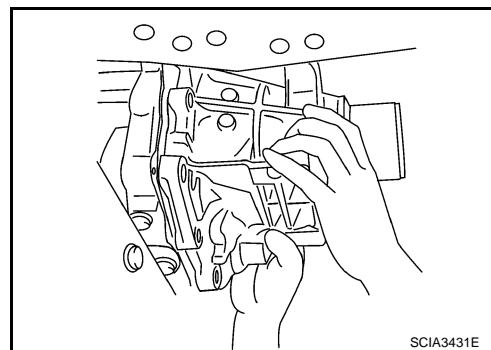


18. Disconnect revolution sensor connector (A).

CAUTION:

Be careful not to damage connector

19. Disengage terminal clip (←).

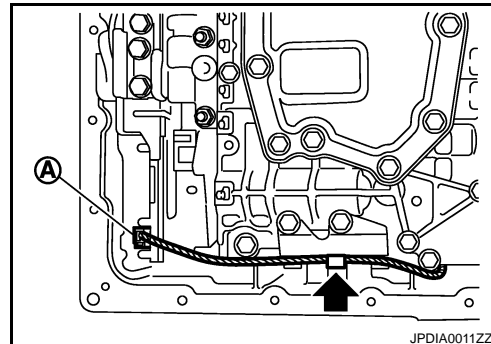


20. Remove revolution sensor (1) from transmission case.

← : Bolt

CAUTION:

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc. to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

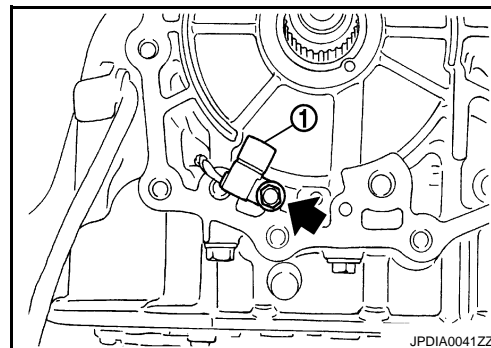


INSTALLATION

1. Install revolution sensor (1) in transmission case. Tighten a necessary bolt for revolution sensor with specified torque.

← : Bolt

CAUTION:

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc. to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

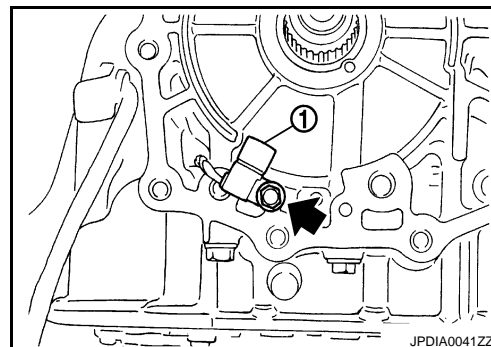


REVOLUTION SENSOR

[5AT: RE5R05A]

< ON-VEHICLE REPAIR >

2. Connect revolution sensor connector (A).
3. Engage revolution sensor harness with clip (◄).

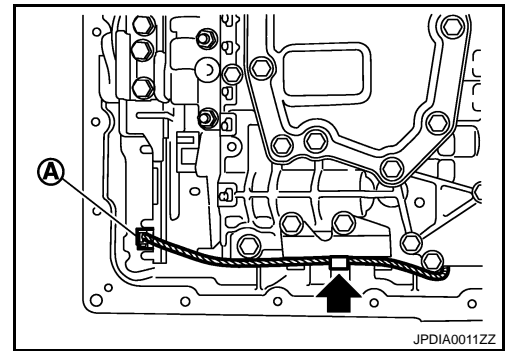

4. Apply recommended sealant (Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).) to rear extension assembly as shown in the figure.

A : Start and finish point shall be in the center of two bolts.


B : 3 – 5 mm (0.12 – 0.20 in)

Sealant width (C) : 1.0 – 2.0 mm (0.04 – 0.08 in)

Sealant height (C) : 0.4 – 1.0 mm (0.016 – 0.04 in)

CAUTION:


Completely remove all moisture, oil and old sealant, etc. from transmission case and rear extension assembly mounting surfaces.

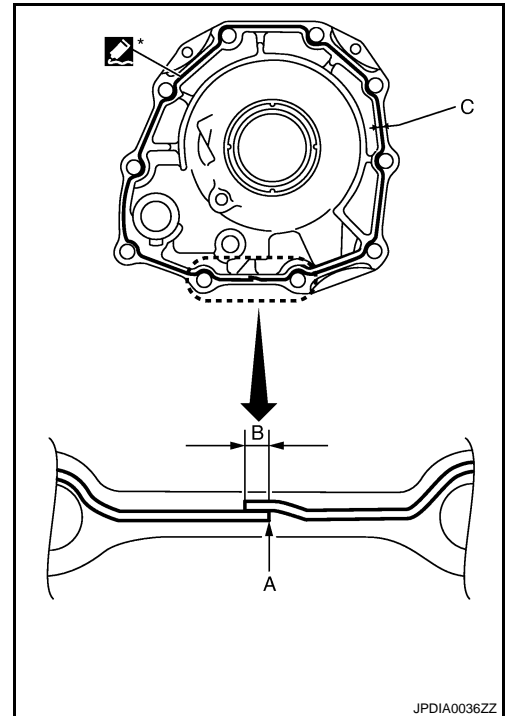

5. Install rear extension assembly (with needle bearing) to transmission case.

CAUTION:

Insert the tip of parking rod between the parking pole and the parking actuator support when assembling the rear extension assembly.

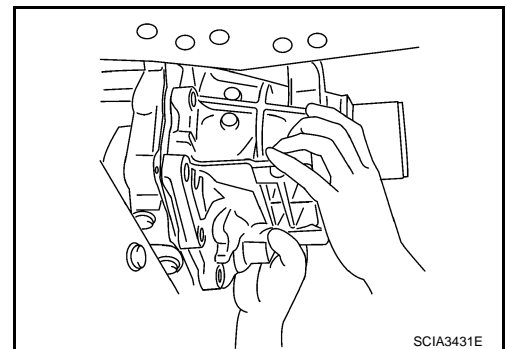

6. Tighten rear extension assembly bolts to the specified torque.

1 : Self-searing bolt


A : Bolt

7. Install rear engine mounting member. Refer to [TM-275, "2WD : Exploded View"](#).

8. Install oil pan gasket to oil pan.

CAUTION:

- Do not reuse oil pan gasket.
- Install it in the direction to align hole positions.

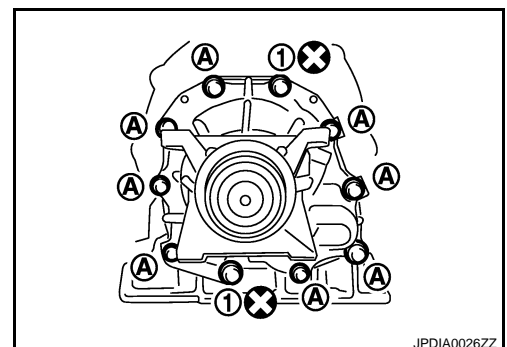

REVOLUTION SENSOR

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

- Complete remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.


9. Install oil pan (2) (with oil pan gasket) and clips (1) to transmission case.

↔ : Vehicle front

← : Oil pan mounting bolt

CAUTION:

- Install it so that drain plug (3) comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Completely remove all moisture, oil and old gasket, etc. from oil pan mounting surface.

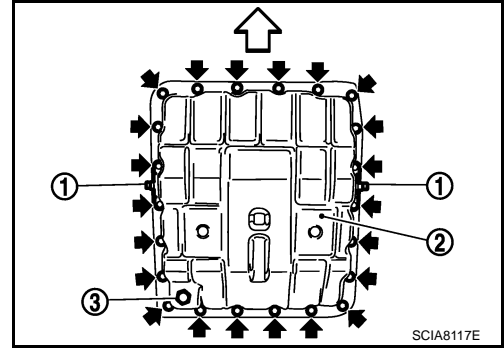

SCIA8117E

10. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them. Tighten necessary oil pan mounting bolts with specified torque.

↔ : Vehicle front


CAUTION:

Do not reuse oil pan mounting bolts.

11. Install drain plug to oil pan. Tighten a necessary drain plug with specified torque.

CAUTION:

Do not reuse drain plug gasket.

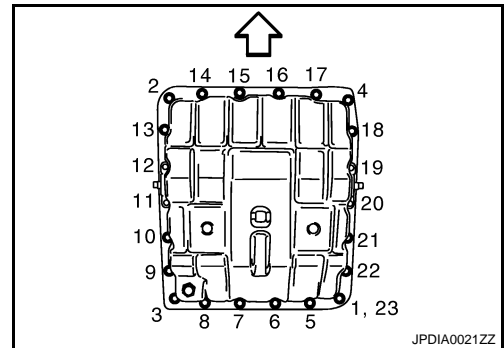

JPDIA0021ZZ

12. Install bracket (2) to transmission assembly.

↔ : Vehicle front

← : Bolt

13. Install heated oxygen sensor 2 harness (B) to clips (1).

14. Connect heated oxygen sensor 2 harness connector (A).

15. Install exhaust mounting bracket. Refer to [EX-5. "Exploded View"](#).


16. Install control rod. Refer to [TM-236. "2WD : Exploded View"](#).

17. Install rear propeller shaft. Refer to [DLN-93. "Exploded View"](#).

18. Install exhaust front tube and center muffler. Refer to [EX-5. "Exploded View"](#).

19. Pour ATF into A/T assembly. Refer to [TM-218. "Changing"](#).

20. Connect the battery cable to the negative terminal.

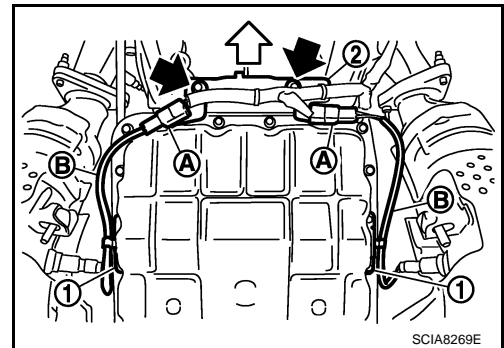

SCIA8269E


2WD : Inspection

INFOID:000000000957169

INSPECTION AFTER REMOVAL

Check foreign materials in oil pan to help determine causes of malfunction. If the ATF is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

- If frictional material is detected, perform A/T fluid cooler cleaning. Refer to [TM-220. "Cleaning"](#).

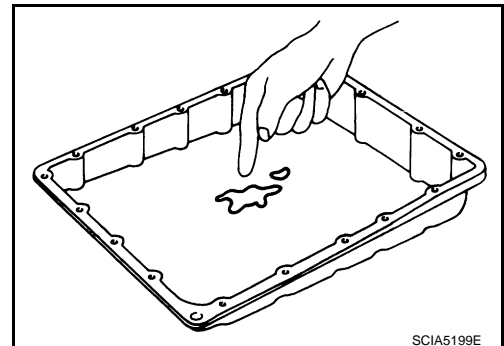

SCIA5199E

INSPECTION AFTER INSTALLATION

After completing installation, check the following item.

REVOLUTION SENSOR

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

- A/T fluid leakage and A/T fluid level. Refer to [TM-217, "Inspection"](#).
- A/T position. Refer to [TM-230, "2WD : Inspection and Adjustment"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

AIR BREATHER HOSE

< ON-VEHICLE REPAIR >


[5AT: RE5R05A]

AIR BREATHER HOSE

2WD

2WD : Exploded View

INFOID:000000000957170

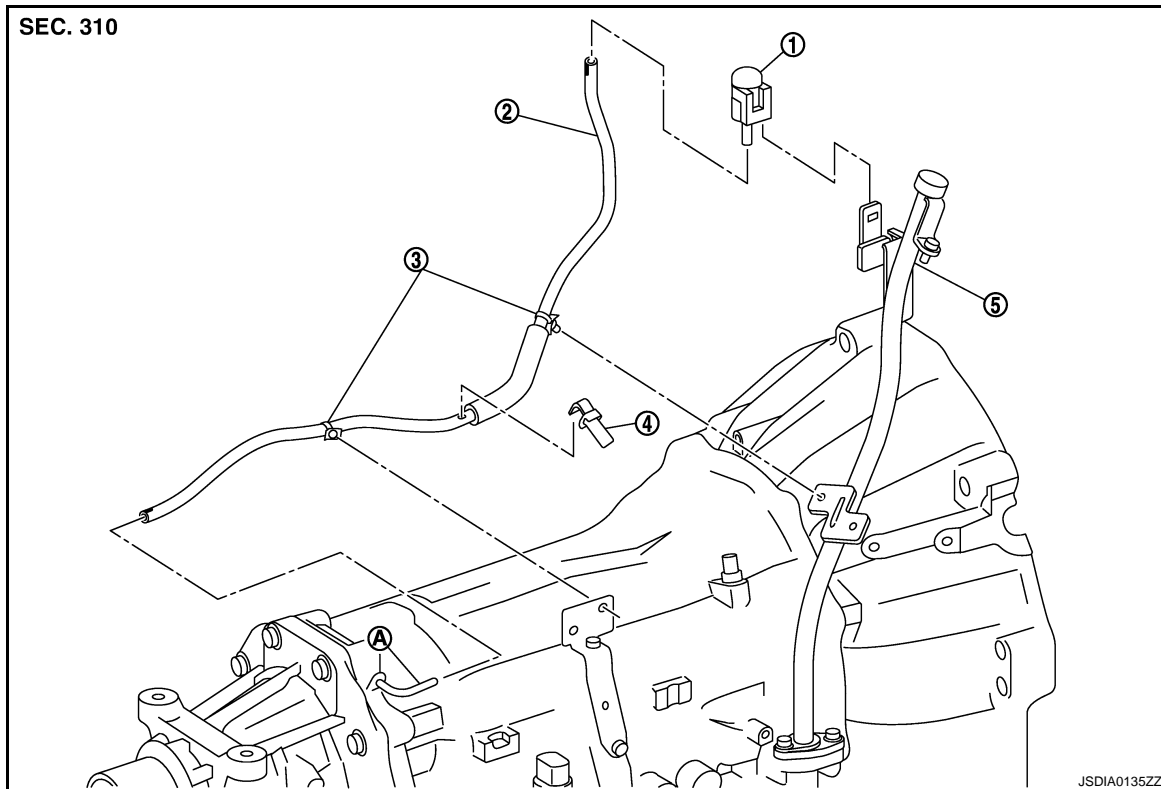

- | | | |
|----------------------|----------------------------|---------|
| 1. A/T breather box | 2. Air breather hose | 3. Clip |
| 4. Clip | 5. A/T fluid charging pipe | |
| A. Air breather tube | | |

2WD : Removal and Installation

INFOID:000000000957171

REMOVAL

1. Remove air cleaner case (RH). Refer to [EM-25, "Exploded View"](#).
2. Remove exhaust front tube and center muffler with power tool. Refer to [EX-5, "Exploded View"](#).
3. Remove exhaust mounting bracket. Refer to [EX-5, "Exploded View"](#).
4. Disconnect heated oxygen sensor (bank 1) harness connector. Refer to [EX-5, "Exploded View"](#).
5. Remove three way catalyst (right bank). Refer to [EX-5, "Exploded View"](#).
6. Remove air breather hose.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

- When installing an air breather hose, do not to crush or block by folding or bending the hose.
- When inserting an air breather hose to the air breather tube, be sure to insert it fully until its end reaches the tube bend "R" portion.
- Install A/T air breather hose to air breather tube so that the paint mark is facing upward.
- Ensure clips are securely installed to brackets when installing A/T breather hose to brackets.
- When inserting air breather hose to air breather box, be sure to insert it fully until its end reaches the stop.
- Install A/T air breather hose to air breather box so that the paint mark is facing backward.


AIR BREATHER HOSE

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

- Install clip (1) at the paint mark (A).


2 : Air breather hose
3 : Harness

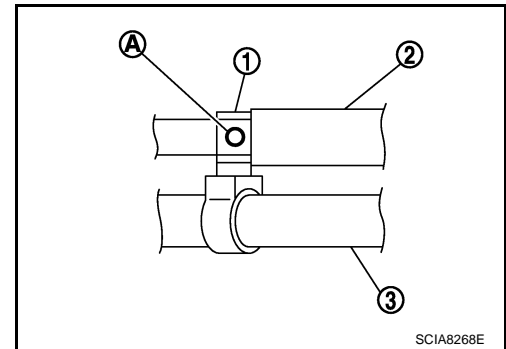

AWD

AWD : Exploded View

INFOID:000000000957172

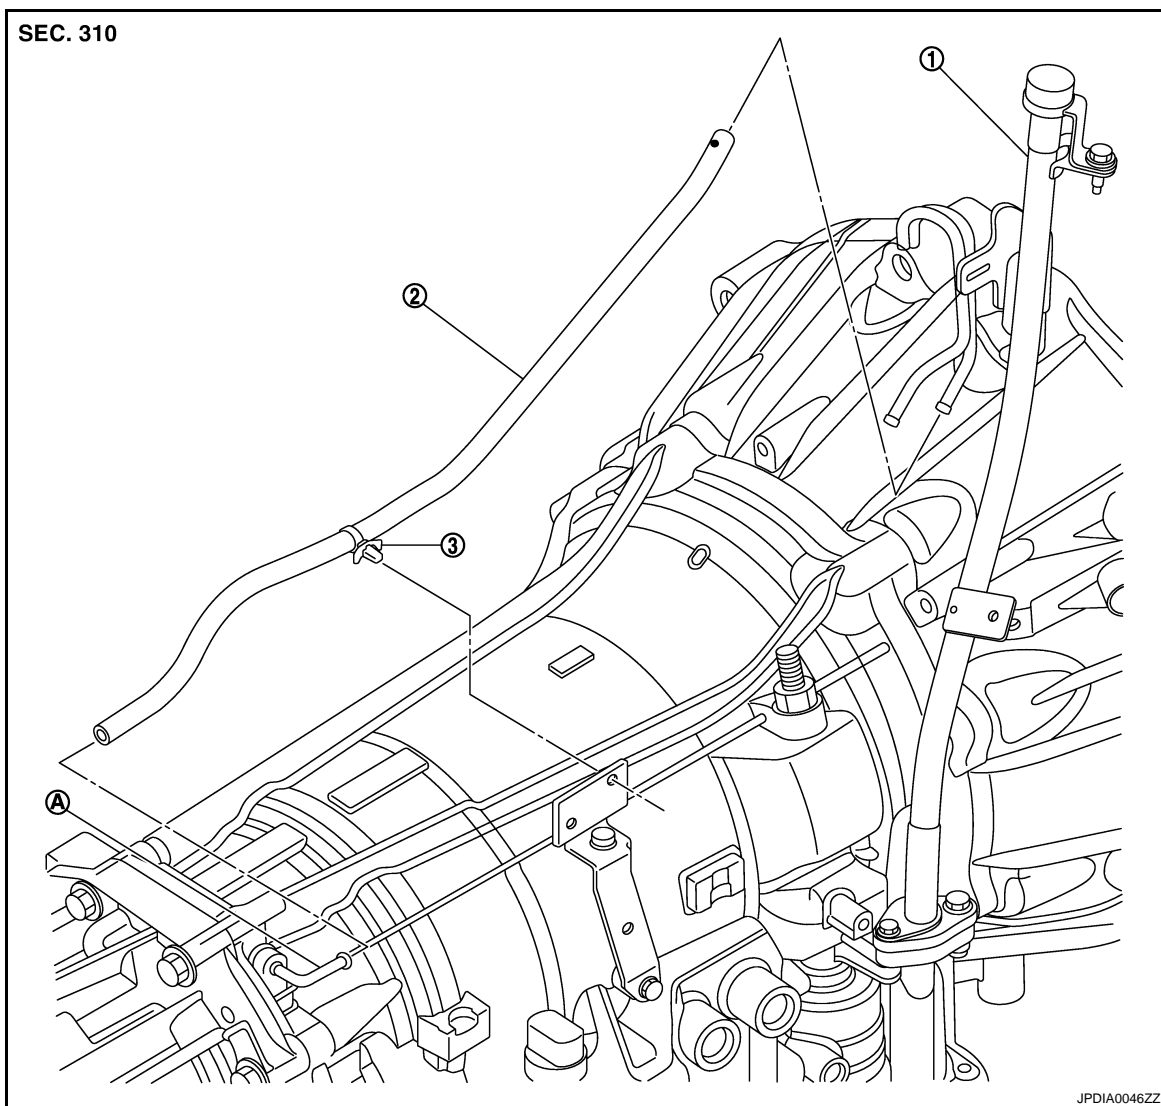

1. A/T fluid charging pipe
2. Air breather hose
3. Clip
A. Air breather tube

AWD : Removal and Installation

INFOID:000000000957173

REMOVAL

1. Remove air cleaner case (RH). Refer to [EM-25. "Exploded View"](#).

AIR BREATHER HOSE

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

2. Remove exhaust front tube and center muffler with power tool. Refer to [EX-5, "Exploded View"](#).
3. Remove exhaust mounting bracket. Refer to [EX-5, "Exploded View"](#).
4. Disconnect heated oxygen sensor (bank 1) harness connector. Refer to [EX-5, "Exploded View"](#).
5. Remove three way catalyst (right bank). Refer to [EX-5, "Exploded View"](#).
6. Remove air breather hose.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

- **When installing an air breather hose, be careful not to be crushed or blocked by folding or bending the hose.**
- **When inserting an air breather hose to the air breather tube, be sure to insert it fully until its end reaches the tube bend "R" portion.**
- **Install air breather hose to air breather tube so that the paint mark is facing upward.**

A/T FLUID COOLER TUBE

< ON-VEHICLE REPAIR >


[5AT: RE5R05A]

A/T FLUID COOLER TUBE

2WD

2WD : Exploded View

INFOID:000000000957174

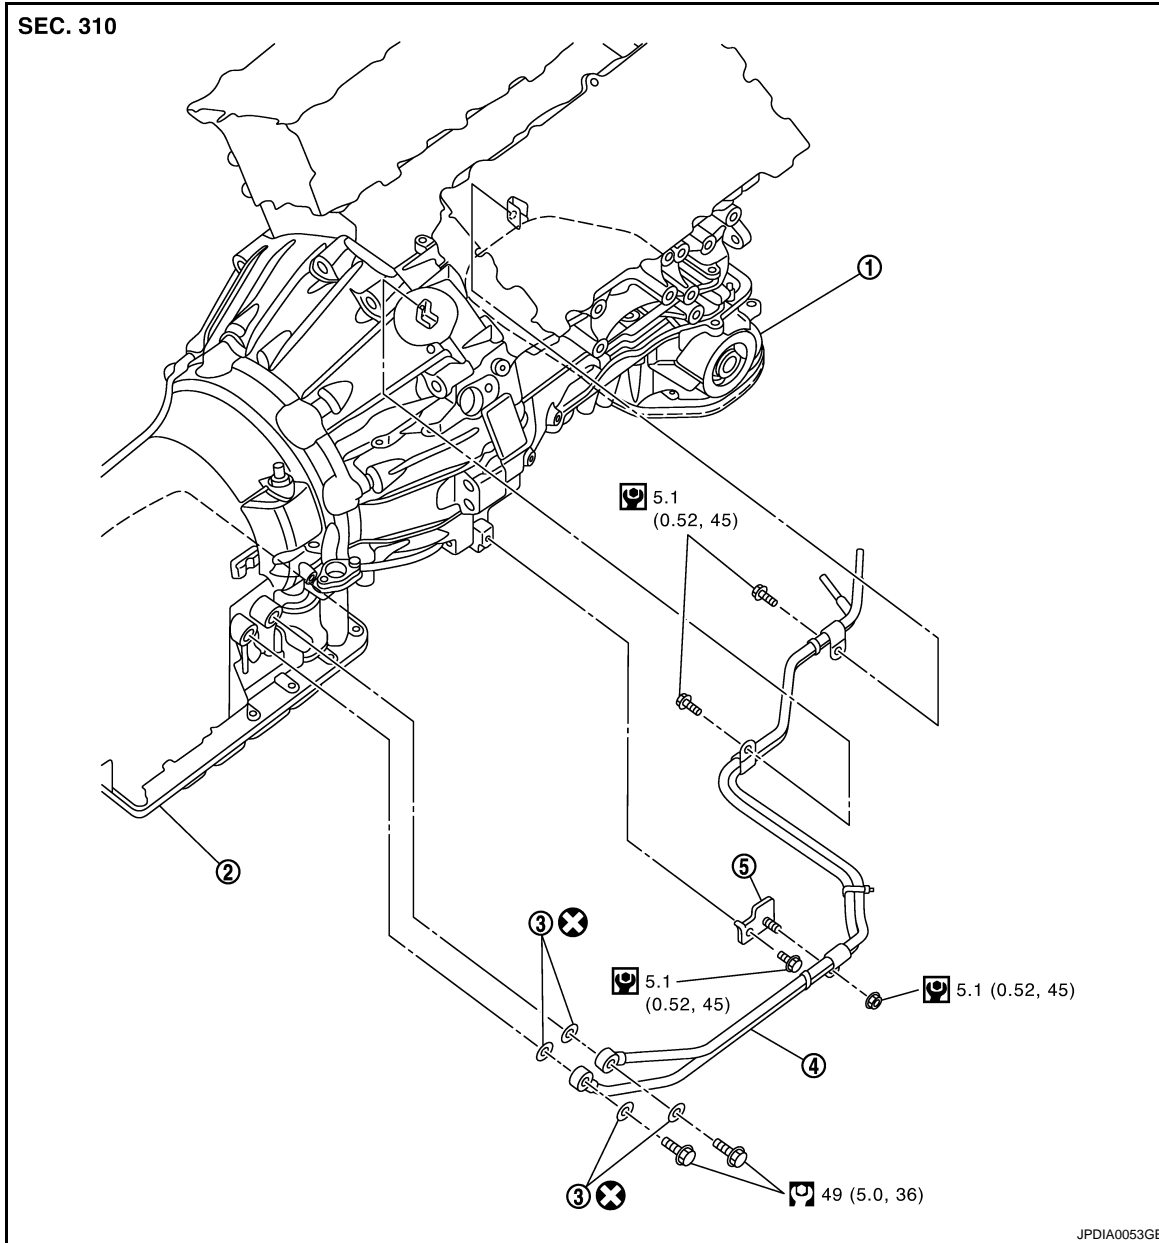

- | | | |
|--------------------------|-----------------|------------------|
| 1. Engine assembly | 2. A/T assembly | 3. Copper washer |
| 4. A/T fluid cooler tube | 5. Bracket | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

2WD : Removal and Installation

INFOID:000000000957175

REMOVAL

1. Remove the front and rear engine undercover with power tool.
2. Remove the exhaust mounting bracket. Refer to [EX-5, "Exploded View"](#).
3. Remove the suspension member stay. Refer to [FSU-19, "Exploded View"](#).
4. Pull out the A/T fluid cooler hose from the A/T fluid cooler tube. Refer to [CO-14, "Exploded View"](#)

A/T FLUID COOLER TUBE

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

5. Remove the A/T fluid cooler tube from the A/T assembly and engine assembly.
6. Remove the stabilizer bar. Refer to [FSU-19, "Exploded View"](#).
7. Loosen the lower mounting nuts for the engine mounting insulators (RH and LH). Refer to [EM-77, "2WD : Exploded View"](#).
8. Set an engine stand to the engine assembly and slightly lift the engine assembly.
CAUTION:
Do not pull the harnesses, hoses, etc. excessively.
9. Remove the A/T fluid cooler tube from the vehicle.
CAUTION:
Be careful not to bend A/T fluid cooler tube.

INSTALLATION

Install in the reverse order of removal.

2WD : Inspection

INFOID:000000000957176

INSPECTION AFTER INSTALLATION

After completing installation, check for A/T fluid leakage and A/T fluid level. Refer to [TM-217, "Inspection"](#).

AWD


AWD : Exploded View

INFOID:000000000957177

A/T FLUID COOLER TUBE

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

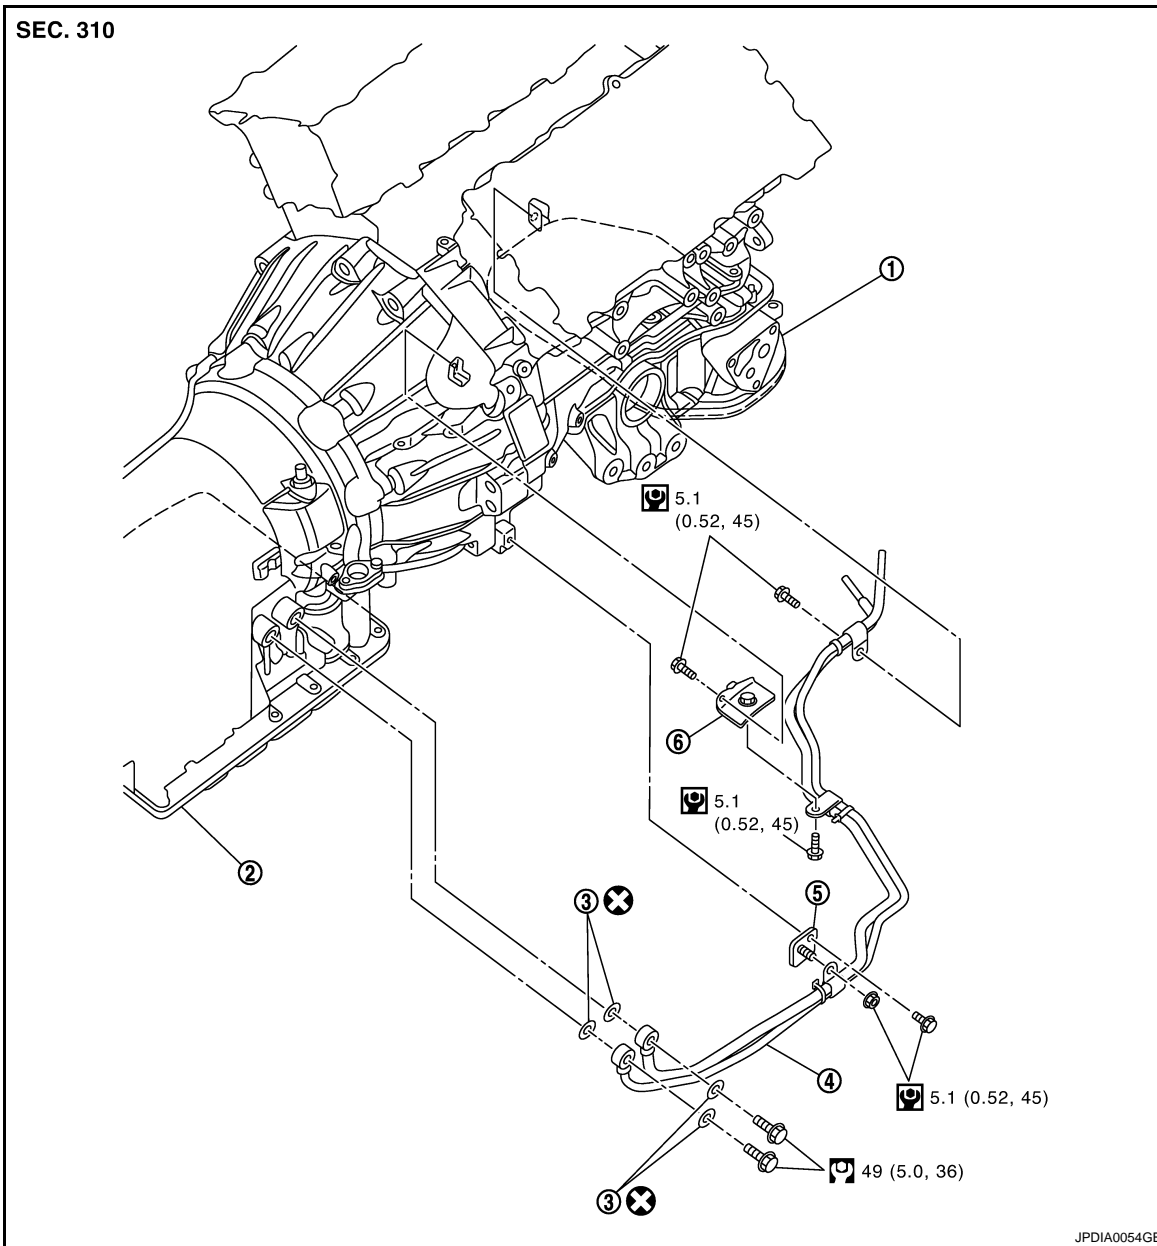

- | | | |
|--------------------------|-----------------|------------------|
| 1. Engine assembly | 2. A/T assembly | 3. Copper washer |
| 4. A/T fluid cooler tube | 5. Bracket | 6. Bracket |

Refer to [GI-4, "Components"](#) for symbols in the figure.

AWD : Removal and Installation

INFOID:000000000957178

REMOVAL

1. Remove the front and rear engine undercover with power tool.
2. Remove the front suspension member. Refer to [FSU-19, "Exploded View"](#).
3. Remove exhaust front tube and center muffler with power tool. Refer to [EX-5, "Exploded View"](#).
4. Remove exhaust mounting bracket. Refer to [EX-5, "Exploded View"](#).
5. Remove the three way catalyst (right bank). Refer to [EX-5, "Exploded View"](#).
6. Remove front propeller shaft. Refer to [DLN-80, "Exploded View"](#).
7. Pull out the A/T fluid cooler hose from the A/T fluid cooler tube. Refer to [CO-14, "Exploded View"](#).
8. Remove the A/T fluid cooler tube from the A/T assembly and engine assembly.

CAUTION:

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

A/T FLUID COOLER TUBE

< ON-VEHICLE REPAIR >

[5AT: RE5R05A]

Be careful not to bend A/T fluid cooler tube.

INSTALLATION

Install in the reverse order of removal.

AWD : Inspection

INFOID:000000000957179

INSPECTION AFTER INSTALLATION

After completing installation, check for A/T fluid leakage and A/T fluid level. Refer to [TM-217. "Inspection"](#).

TRANSMISSION ASSEMBLY

< REMOVAL AND INSTALLATION >

[5AT: RE5R05A]


REMOVAL AND INSTALLATION

TRANSMISSION ASSEMBLY

2WD

2WD : Exploded View

INFOID:000000000957180

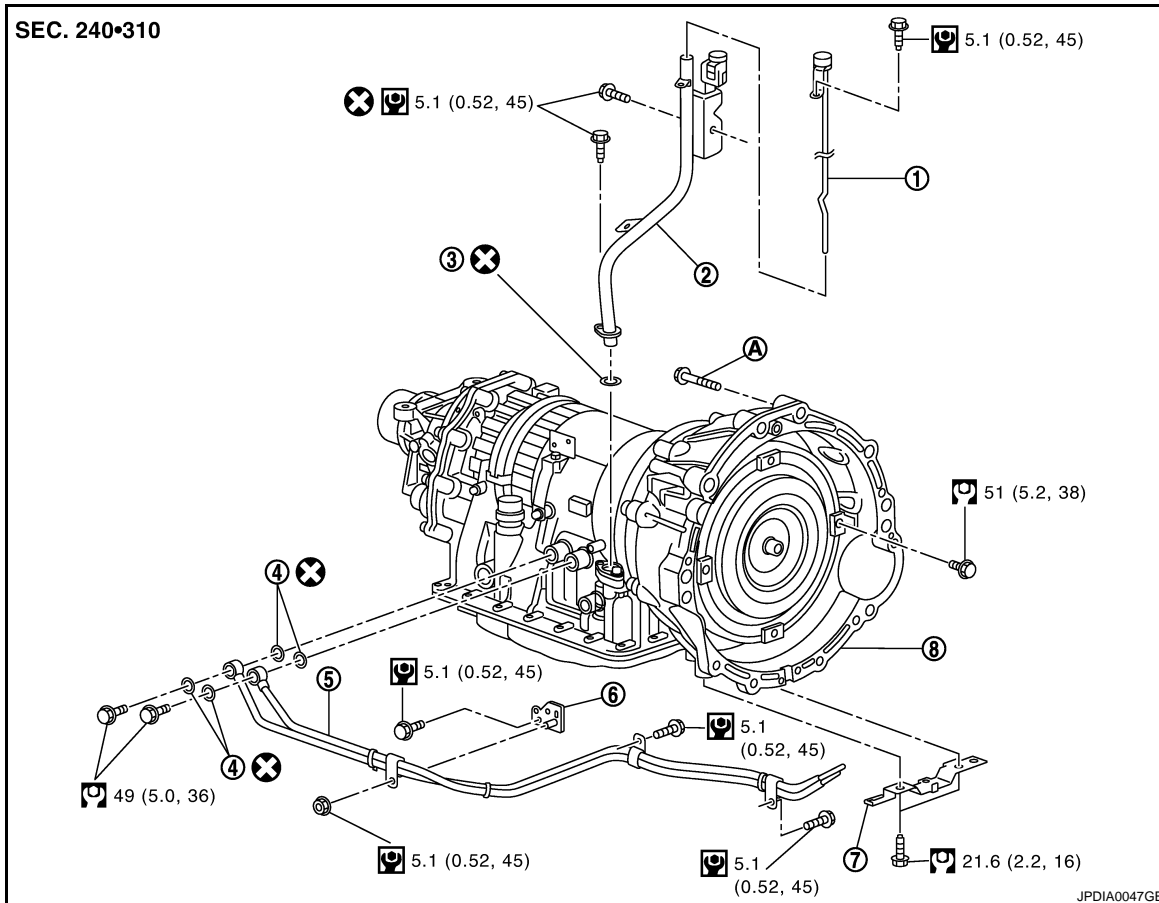

- | | | |
|--------------------------|----------------------------|------------|
| 1. A/T fluid level gauge | 2. A/T fluid charging pipe | 3. O-ring |
| 4. Copper washer | 5. A/T fluid cooler tube | 6. Bracket |
| 7. Bracket | 8. A/T assembly | |

A. For tightening torque, refer to [TM-275, "2WD : Removal and Installation"](#).

Refer to [GI-4, "Components"](#) for symbols in the figure.

2WD : Removal and Installation

INFOID:000000000957181

REMOVAL

CAUTION:

- When removing the A/T assembly from engine, first remove the crankshaft position sensor (POS) from the A/T assembly.
- Be careful not to damage sensor edge.

1. Disconnect the battery cable from the negative terminal.
2. Remove A/T fluid level gauge.
3. Remove air cleaner case (RH). Refer to [EM-25, "Exploded View"](#).
4. Remove engine under cover with power tool.
5. Remove exhaust front tube and center muffler with power tool. Refer to [EX-5, "Exploded View"](#).

TRANSMISSION ASSEMBLY

< REMOVAL AND INSTALLATION >


[5AT: RE5R05A]

6. Remove heat insulator.
7. Remove rear propeller shaft. Refer to [DLN-93, "Exploded View"](#).
8. Remove suspension member stay. Refer to [FSU-19, "Exploded View"](#).
9. Remove exhaust mounting bracket. Refer to [EX-5, "Exploded View"](#).
10. Disconnect heated oxygen sensor 2 harness connectors (A).

↔ : Vehicle front

← : Bolt

11. Remove heated oxygen sensor 2 harness (B) from clips (1).
12. Remove bracket (2) from transmission assembly.
13. Remove control rod. Refer to [TM-236, "2WD : Exploded View"](#).
14. Remove crankshaft position sensor (POS) from A/T assembly. Refer to [EM-114, "Exploded View"](#).

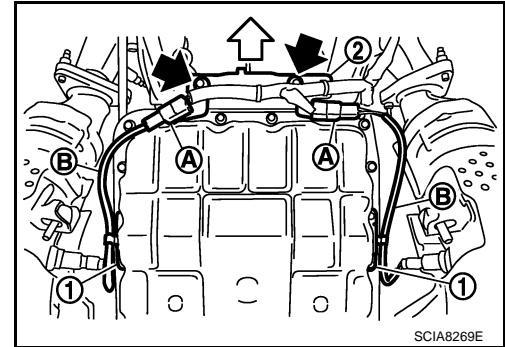

CAUTION:

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc. to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

15. Remove starter motor. Refer to [STR-15, "Exploded View"](#).
16. Remove rear plate cover. Refer to [EM-41, "Exploded View \(2WD\)"](#).
17. Turn crankshaft, and remove the four tightening bolts for drive plate and torque converter.

CAUTION:


When turning the crankshaft, turn it clockwise as viewed from the front of the engine.

18. Support A/T assembly with a transmission jack.

CAUTION:

When setting the transmission jack, be careful not to allow it to collide against the drain plug.


19. Remove rear engine mounting member with power tool. Refer to [EM-77, "2WD : Exploded View"](#).
20. Remove engine mounting insulator (rear). Refer to [EM-77, "2WD : Exploded View"](#).

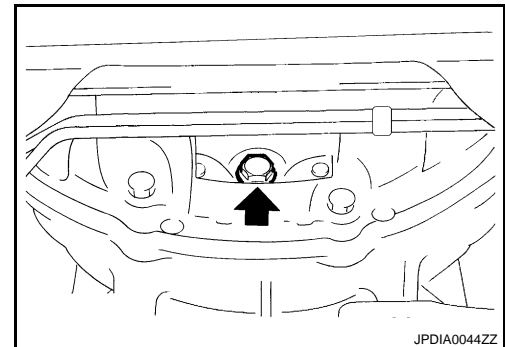

21. Remove dynamic damper. Refer to [EM-77, "2WD : Exploded View"](#).
22. Disconnect A/T assembly harness connector.
23. Remove air breather hose. Refer to [TM-268, "2WD : Exploded View"](#).
24. Remove A/T fluid charging pipe from A/T assembly.
25. Remove O-ring from A/T fluid charging pipe.
26. Disconnect fluid cooler tube from A/T assembly.
27. Plug up openings such as the A/T fluid charging pipe hole, etc.
28. Remove bolts fixing A/T assembly to engine assembly with power tool.
29. Remove A/T assembly from vehicle.

CAUTION:

- Secure torque converter to prevent it from dropping.
- Secure A/T assembly to a transmission jack.

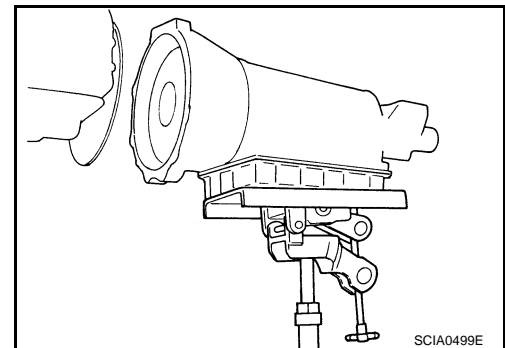

INSTALLATION

TRANSMISSION ASSEMBLY

< REMOVAL AND INSTALLATION >

[5AT: RE5R05A]

Install the removed parts in the reverse order of the removal, while paying attention to the following work.


- When installing A/T assembly to the engine assembly, attach the fixing bolts in accordance with the following standard.

A : View from vehicle front

● : Transmission to engine

⊗ : Engine to transmission


Bolt No.	B	C
Number of bolts	8	4
Bolt length mm (in)	65 (2.56)	35 (1.38)
Tightening torque N·m (kg·m, ft·lb)	75 (7.7, 55)	46.6 (4.8, 34)

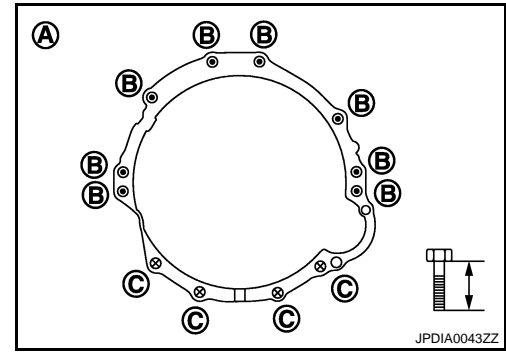

- Align the positions of tightening bolts for drive plate with those of the torque converter, and temporarily tighten the bolts. Then, tighten the bolts with the specified torque.

CAUTION:

- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- When tightening the tightening bolts for the torque converter after fixing the crankshaft pulley bolts, be sure to confirm the tightening torque of the crankshaft pulley mounting bolts. Refer to [EM-48, "Exploded View"](#).
- After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that A/T rotates freely without binding.
- Install crankshaft position sensor (POS). Refer to [EM-114, "Exploded View"](#).

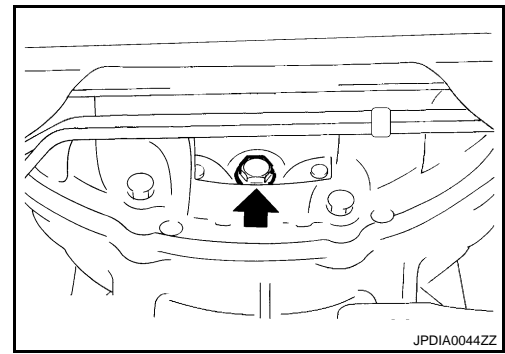

2WD : Inspection

INFOID:000000000957182


INSPECTION AFTER INSTALLATION

- Installation and Inspection of Torque Converter
 - After inserting a torque converter to a A/T, be sure to check distance (A) to ensure it is within the reference value limit.

B : Scale

C : Straightedge

Distance (A) : Refer to [TM-354, "Torque Converter"](#)

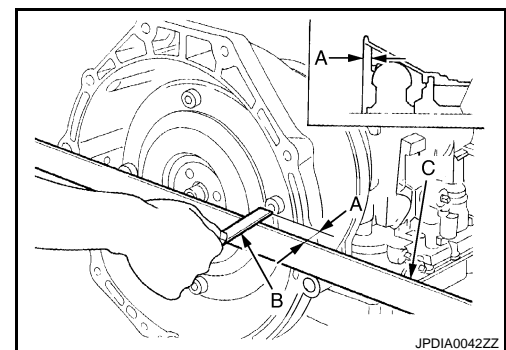

- After completing installation, check the following item.
 - A/T fluid leakage and A/T fluid level. Refer to [TM-217, "Inspection"](#).
 - A/T position. Refer to [TM-230, "2WD : Inspection and Adjustment"](#).

AWD


AWD : Exploded View

INFOID:000000000957183

TRANSMISSION ASSEMBLY

< REMOVAL AND INSTALLATION >

[5AT: RE5R05A]

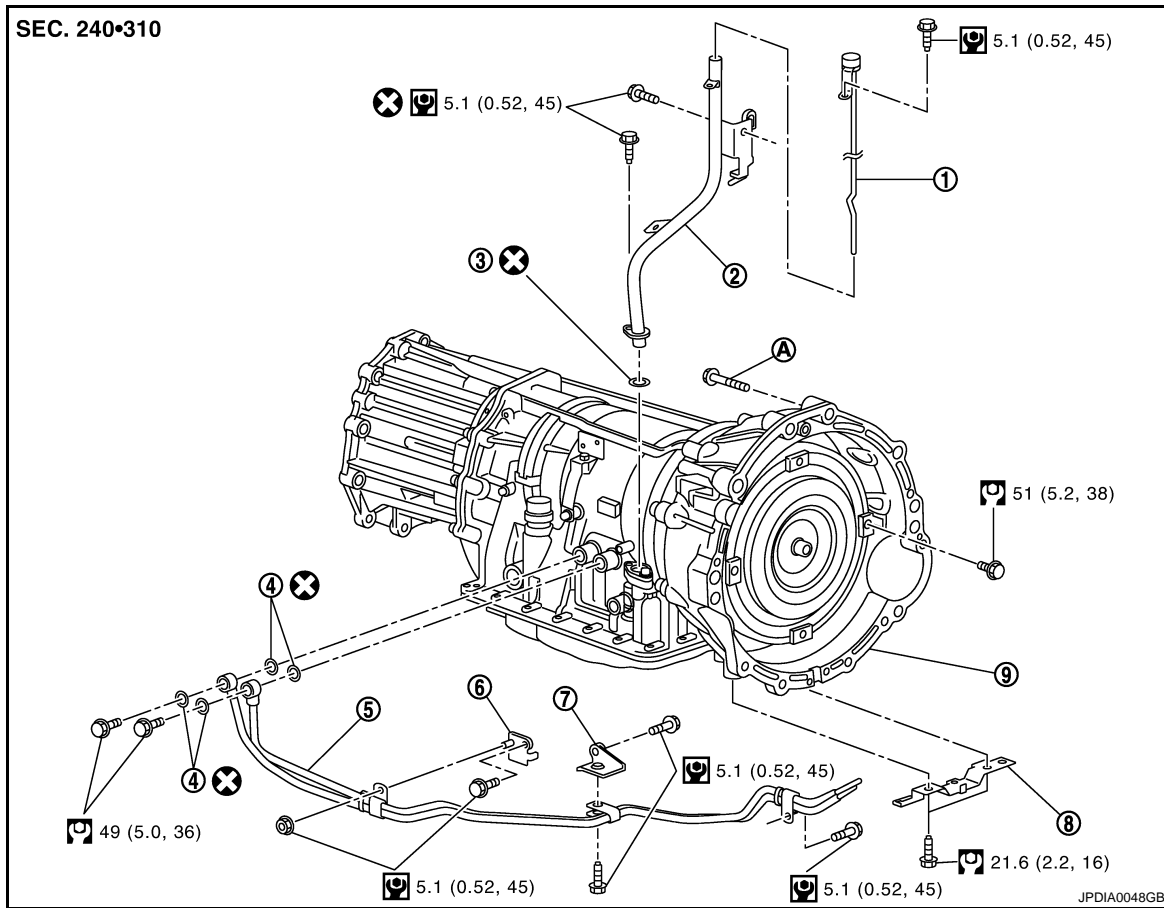

- | | | |
|--------------------------|----------------------------|-----------------|
| 1. A/T fluid level gauge | 2. A/T fluid charging pipe | 3. O-ring |
| 4. Copper washer | 5. A/T fluid cooler tube | 6. Bracket |
| 7. Bracket | 8. Bracket | 9. A/T assembly |

A. For tightening torque, Refer to [TM-275, "2WD : Removal and Installation"](#).

Refer to [GI-4, "Components"](#) for symbols in the figure.

AWD : Removal and Installation

INFOID:000000000957184

REMOVAL

CAUTION:

- When removing the A/T assembly from engine, first remove the crankshaft position sensor (POS) from the A/T assembly.
- Be careful not to damage sensor edge.

1. Disconnect the battery cable from the negative terminal.
2. Remove A/T fluid level gauge.
3. Remove air cleaner case (RH). Refer to [EM-25, "Exploded View"](#).
4. Remove engine under cover with power tool.
5. Remove exhaust front tube and center muffler and with power tool. Refer to [EX-5, "Exploded View"](#).
6. Remove heat insulator.
7. Remove rear propeller shaft. Refer to [DLN-101, "Exploded View"](#).
8. Remove front cross bar with power tool. Refer to [FSU-39, "Exploded View"](#).
9. Remove exhaust mounting bracket. Refer to [EX-5, "Exploded View"](#).

TRANSMISSION ASSEMBLY

< REMOVAL AND INSTALLATION >


[5AT: RE5R05A]

10. Disconnect heated oxygen sensor 2 harness connectors (A).

↔ : Vehicle front

◀ : Bolt

11. Remove heated oxygen sensor 2 harness (B) from clips (1).
12. Remove bracket (2) from transmission assembly.

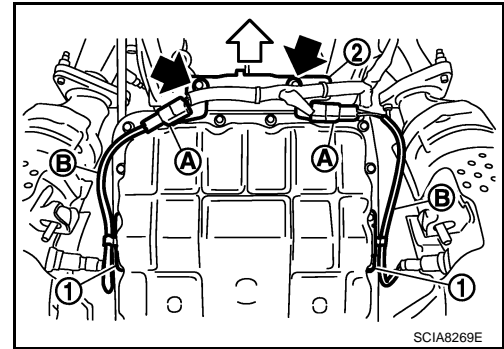

13. Remove three way catalyst (right bank). Refer to [EX-5, "Exploded View"](#).
14. Remove front propeller shaft. Refer to [DLN-80, "Exploded View"](#).
15. Remove control rod. Refer to [TM-236, "AWD : Exploded View"](#).
16. Remove crankshaft position sensor (POS) from A/T assembly. Refer to [EM-114, "Exploded View"](#).

CAUTION:

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc. to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

17. Remove starter motor. Refer to [STR-15, "Exploded View"](#).
18. Remove rear plate cover. Refer to [EM-41, "Exploded View \(AWD\)"](#).
19. Turn crankshaft, and remove the four tightening bolts for drive plate and torque converter.

CAUTION:


When turning the crankshaft, turn it clockwise as viewed from the front of the engine.

20. Support A/T assembly with a transmission jack.

CAUTION:

When setting the transmission jack, be careful not to allow it to collide against the drain plug.

21. Remove rear engine mounting member with power tool. Refer to [EM-81, "AWD : Exploded View"](#).
22. Remove engine mounting insulator (rear). Refer to [EM-81, "AWD : Exploded View"](#).

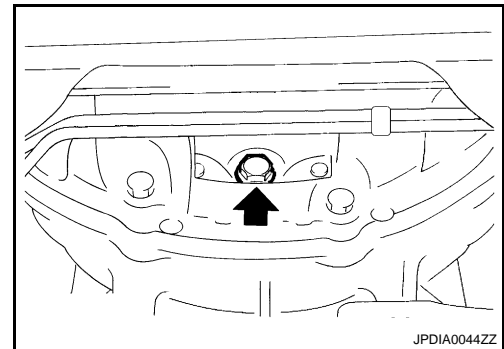


23. Remove dynamic damper. Refer to [EM-81, "AWD : Exploded View"](#).
24. Disconnect A/T assembly harness connector.
25. Remove air breather hose. Refer to [TM-269, "AWD : Exploded View"](#).
26. Remove A/T fluid charging pipe from A/T assembly.
27. Remove O-ring from A/T fluid charging pipe.
28. Disconnect fluid cooler tube from the A/T assembly.
29. Plug up openings such as the A/T fluid charging pipe hole, etc.
30. Remove bolts fixing A/T assembly to engine assembly with power tool.

31. Remove A/T assembly with transfer assembly from vehicle.

CAUTION:

- Secure torque converter to prevent it from dropping.
- Secure A/T assembly to a transmission jack.

32. Remove transfer assembly from A/T assembly with power tool.

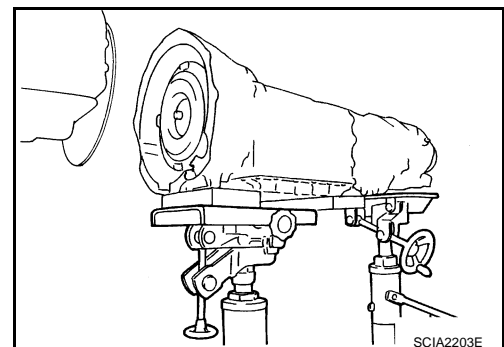

TRANSMISSION ASSEMBLY

< REMOVAL AND INSTALLATION >

[5AT: RE5R05A]


INSTALLATION

Install the removed parts in the reverse order of the removal, while paying attention to the following work.

- When installing A/T assembly to the engine assembly, attach the fixing bolts in accordance with the following standard.

- A : View from vehicle front
- ⊙ : Transmission to engine
- ⊗ : Engine to transmission


Bolt No.	B	C
Number of bolts	8	4
Bolt length "mm (in)	65 (2.56)	35 (1.38)
Tightening torque N·m (kg·m, ft·lb)	75 (7.7, 55)	46.6 (4.8, 34)

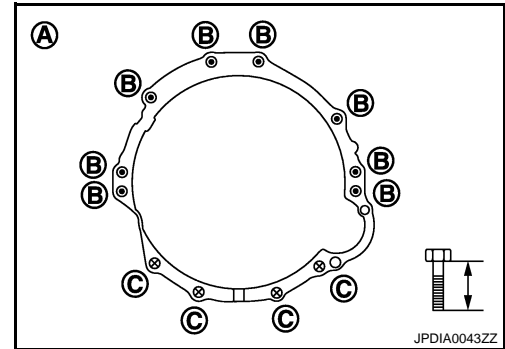

- Align the positions of tightening bolts for drive plate with those of the torque converter, and temporarily tighten the bolts. Then, tighten the bolts with the specified torque.

CAUTION:

- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- When tightening the tightening bolts for the torque converter after fixing the crankshaft pulley bolts, be sure to confirm the tightening torque of the crankshaft pulley mounting bolts. Refer to [EM-48, "Exploded View"](#).
- After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that A/T rotates freely without binding.
- Install crankshaft position sensor (POS). Refer to [EM-114, "Exploded View"](#).

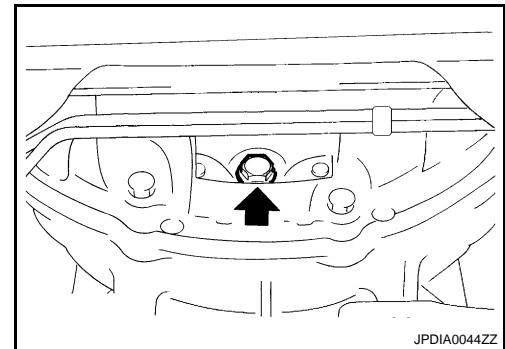

AWD : Inspection


INFOID:000000000957185

INSPECTION AFTER INSTALLATION

- Installation and Inspection of Torque Converter
 - After inserting a torque converter to a A/T, be sure to check distance (A) to ensure it is within the reference value limit.

- B : Scale
- C : Straightedge

Distance (A) : Refer to [TM-354, "Torque Converter"](#).

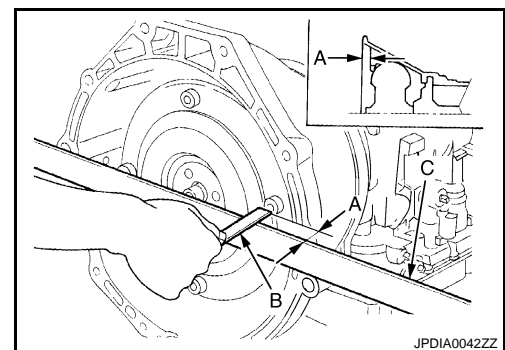

- After completing installation, check the following item.
 - A/T fluid leakage and A/T fluid level. Refer to [TM-217, "Inspection"](#).
 - A/T position. Refer to [TM-230, "AWD : Inspection and Adjustment"](#).

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >


[5AT: RE5R05A]

DISASSEMBLY AND ASSEMBLY

TRANSMISSION ASSEMBLY

Exploded View

INFOID:000000000957186

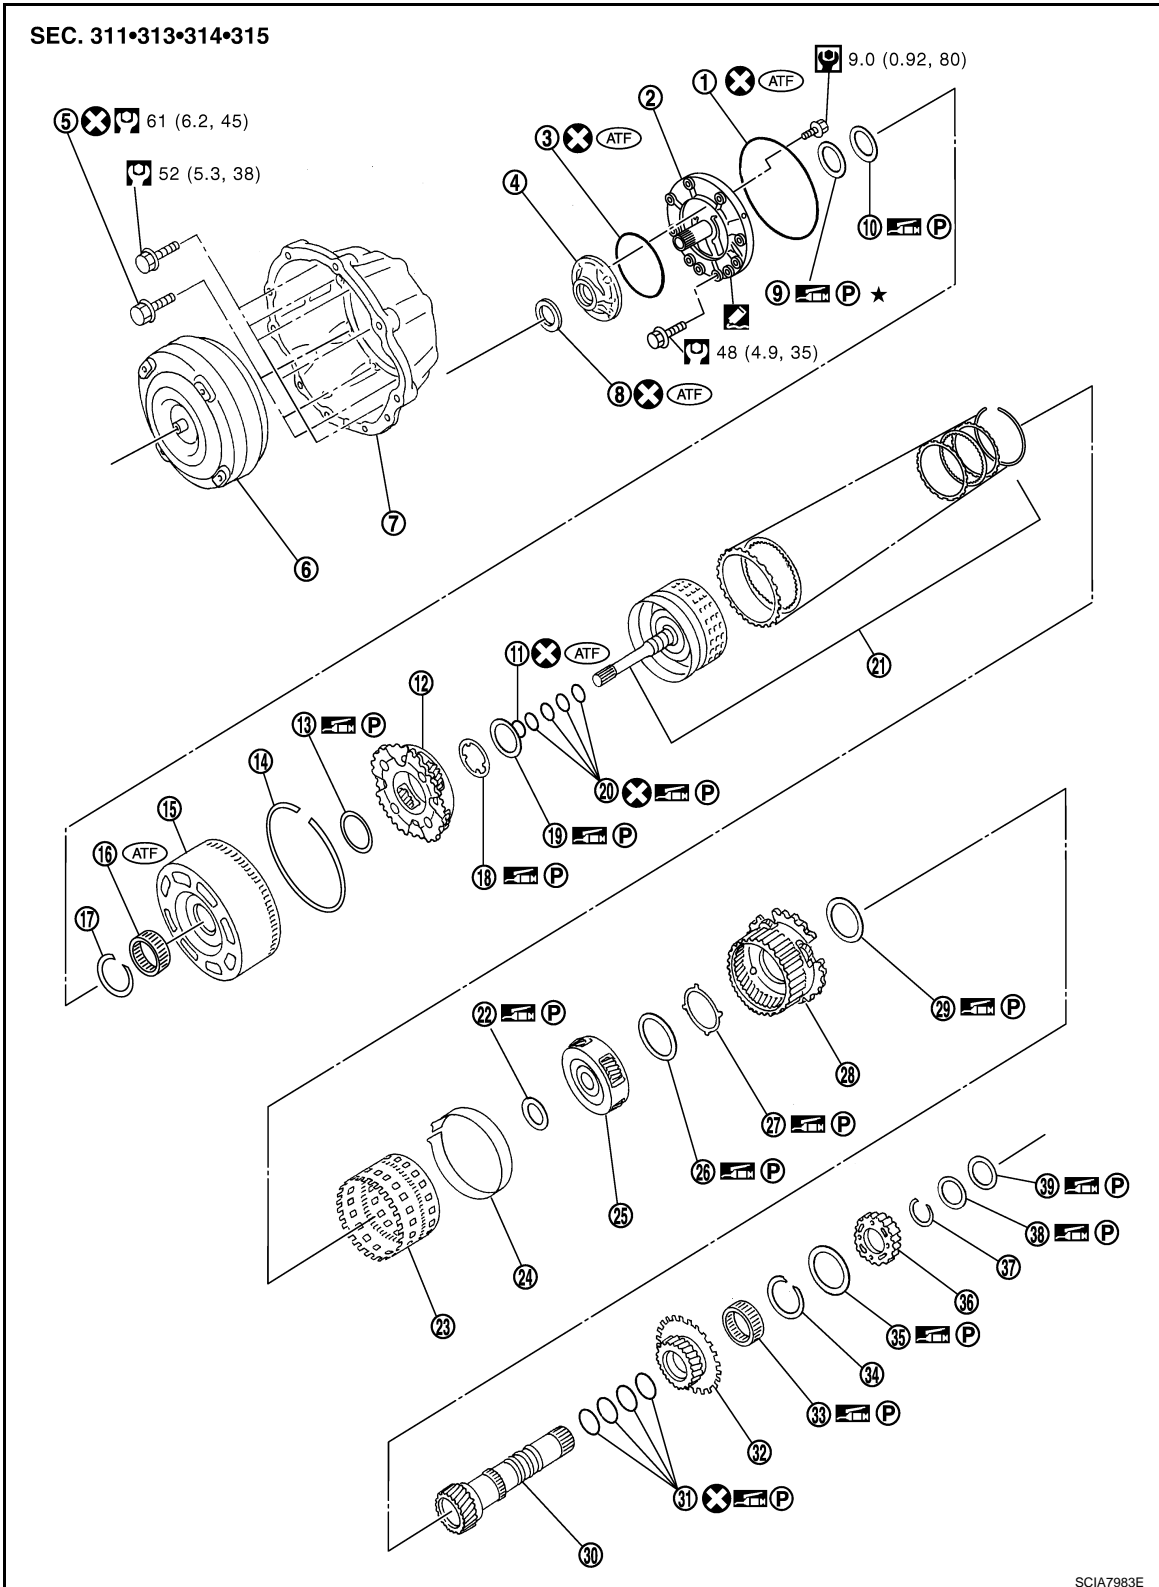


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

- | | | |
|---------------------------|------------------------------|-------------------------------------|
| 1. O-ring | 2. Oil pump cover | 3. O-ring |
| 4. Oil pump housing | 5. Self-sealing bolt | 6. Torque converter |
| 7. Converter housing | 8. Oil pump housing oil seal | 9. Bearing race |
| 10. Needle bearing | 11. O-ring | 12. Front carrier assembly |
| 13. Needle bearing | 14. Snap ring | 15. Front sun gear |
| 16. 3rd one-way clutch | 17. Snap ring | 18. Bearing race |
| 19. Needle bearing | 20. Seal ring | 21. Input clutch assembly |
| 22. Needle bearing | 23. Rear internal gear | 24. Brake band |
| 25. Mid carrier assembly | 26. Needle bearing | 27. Bearing race |
| 28. Rear carrier assembly | 29. Needle bearing | 30. Mid sun gear |
| 31. Seal ring | 32. Rear sun gear | 33. 1st one-way clutch |
| 34. Snap ring | 35. Needle bearing | 36. High and low reverse clutch hub |
| 37. Snap ring | 38. Bearing race | 39. Needle bearing |


: Apply Genuine RTV silicone sealant or equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).

Refer to [GI-4, "Components"](#) for symbols not described on the above.

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

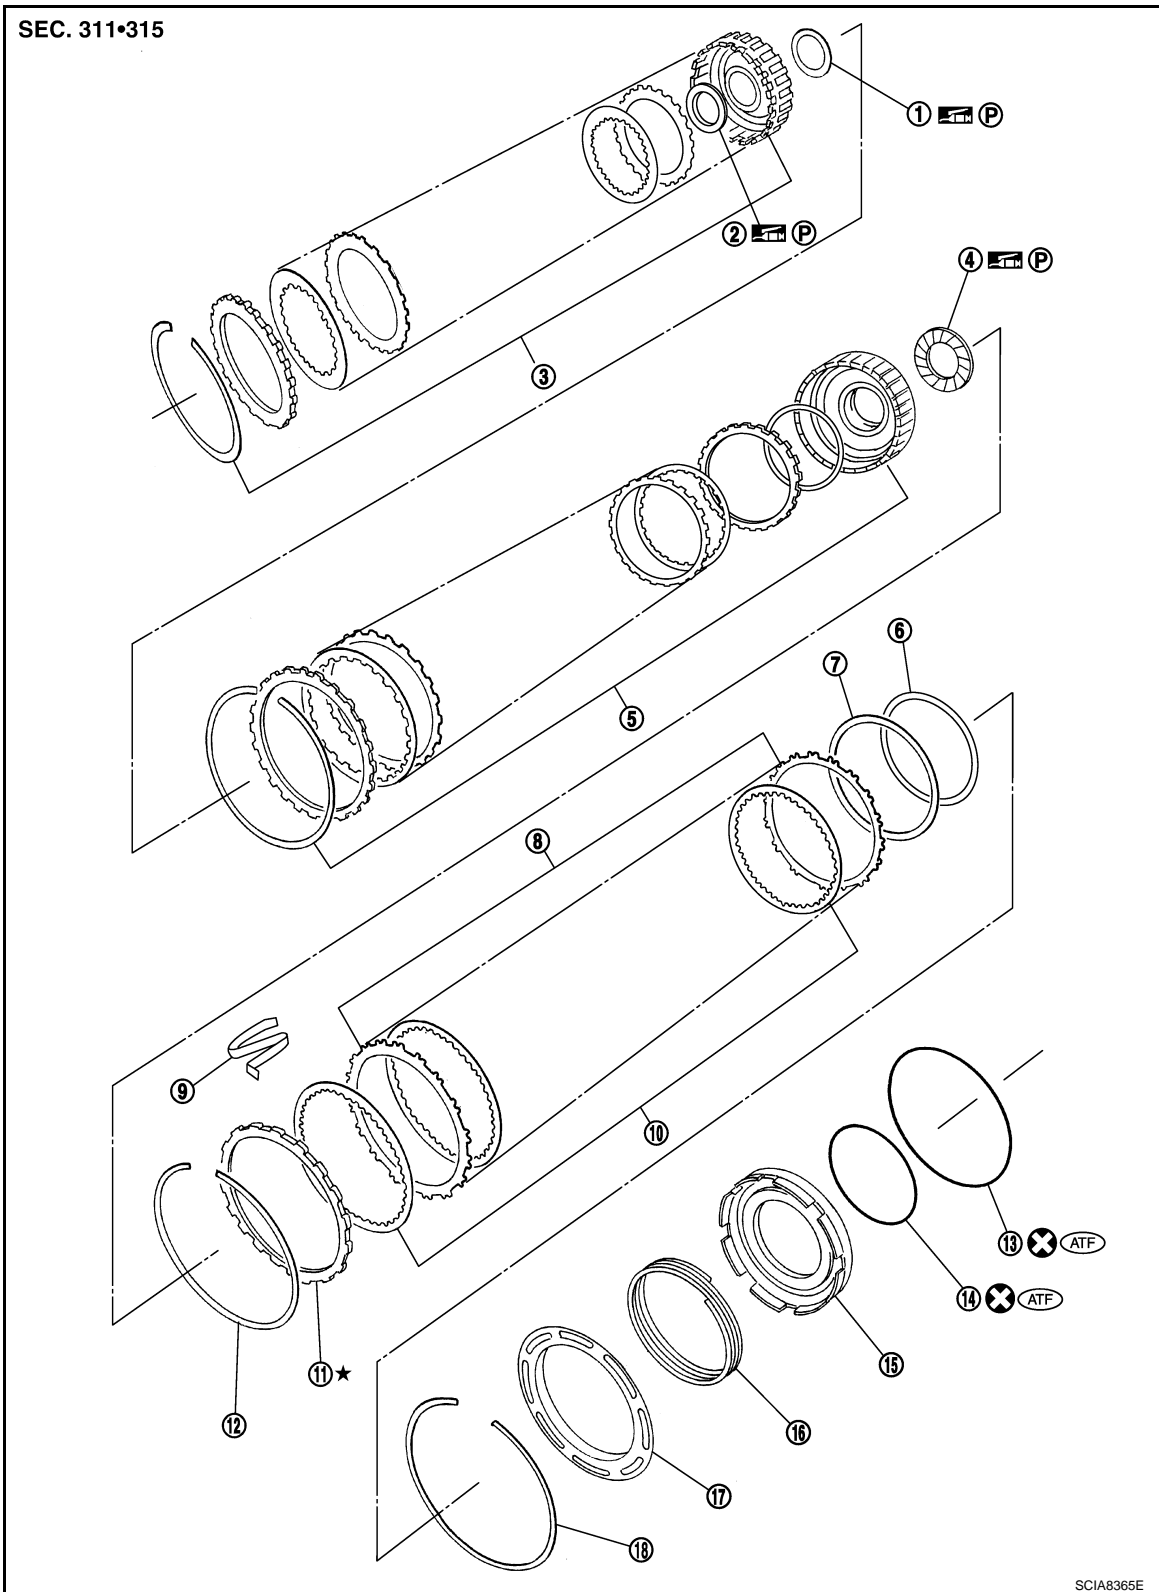

- | | | |
|-------------------------------|-----------------------------------|---|
| 1. Needle bearing | 2. Bearing race | 3. High and low reverse clutch assembly |
| 4. Needle bearing | 5. Direct clutch assembly | 6. Reverse brake dish plate |
| 7. Reverse brake dish plate | 8. Reverse brake driven plate | 9. N-spring |
| 10. Reverse brake drive plate | 11. Reverse brake retaining plate | 12. Snap ring |
| 13. D-ring | 14. D-ring | 15. Reverse brake piston |

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


16. Return spring

17. Spring retainer

18. Snap ring

Refer to [GI-4, "Components"](#) for symbols in the figure.

2WD

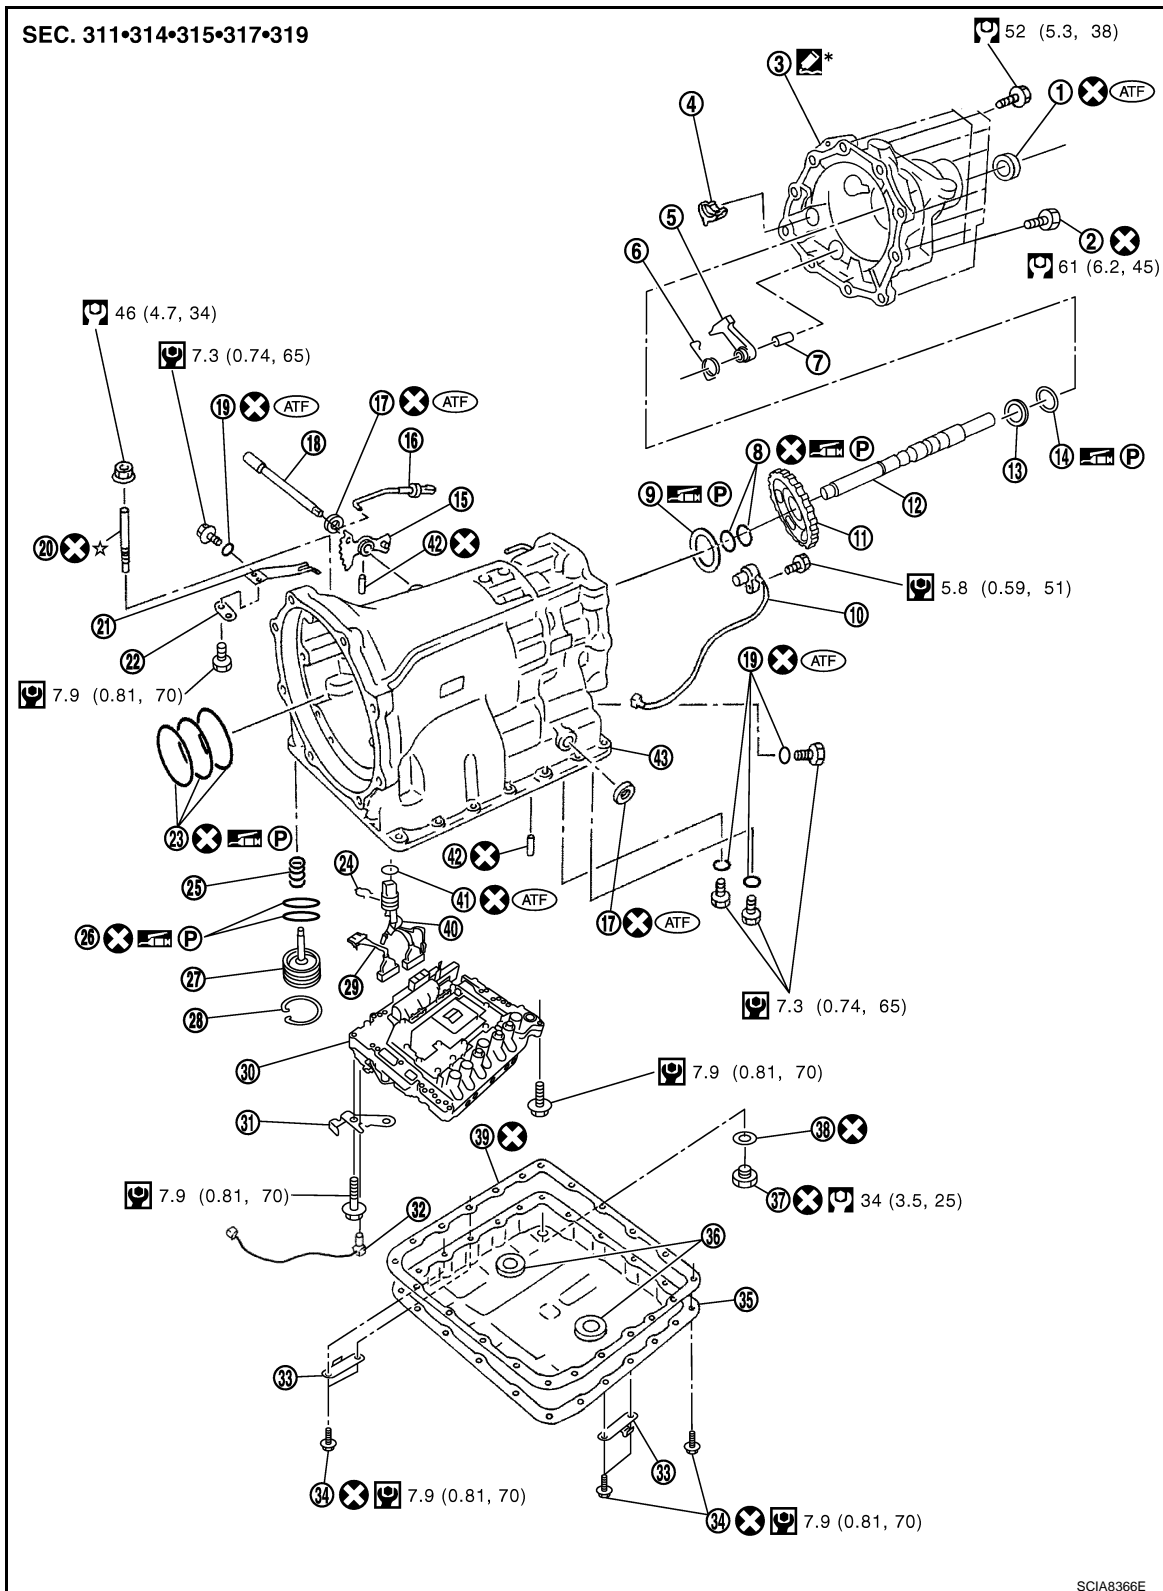

SCIA8366E

1. Rear oil seal

2. Self-sealing bolt

3. Rear extension

4. Parking actuator support

5. Parking pawl

6. Return spring

7. Pawl shaft

8. Seal ring

9. Needle bearing

10. Revolution sensor

11. Parking gear


12. Output shaft

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

- | | | |
|----------------------------|------------------------------------|----------------------------|
| 13. Bearing race | 14. Needle bearing | 15. Manual plate |
| 16. Parking rod | 17. Manual shaft oil seal | 18. Manual shaft |
| 19. O-ring | 20. Band servo anchor end pin | 21. Detent spring |
| 22. Spacer | 23. Seal ring | 24. Snap ring |
| 25. Return spring | 26. O-ring | 27. Servo assembly |
| 28. Snap ring | 29. Sub-harness | 30. Control valve with TCM |
| 31. Bracket | 32. A/T fluid temperature sensor 2 | 33. Clip |
| 34. Oil pan mounting bolt | 35. Oil pan | 36. Magnet |
| 37. Drain plug | 38. Drain plug gasket | 39. Oil pan gasket |
| 40. Terminal cord assembly | 41. O-ring | 42. Retaining pin |
| 43. Transmission case | | |

: Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#). Refer to [GI-4, "Components"](#) for symbols not described on the above.

A
B
C
TM


E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

AWD

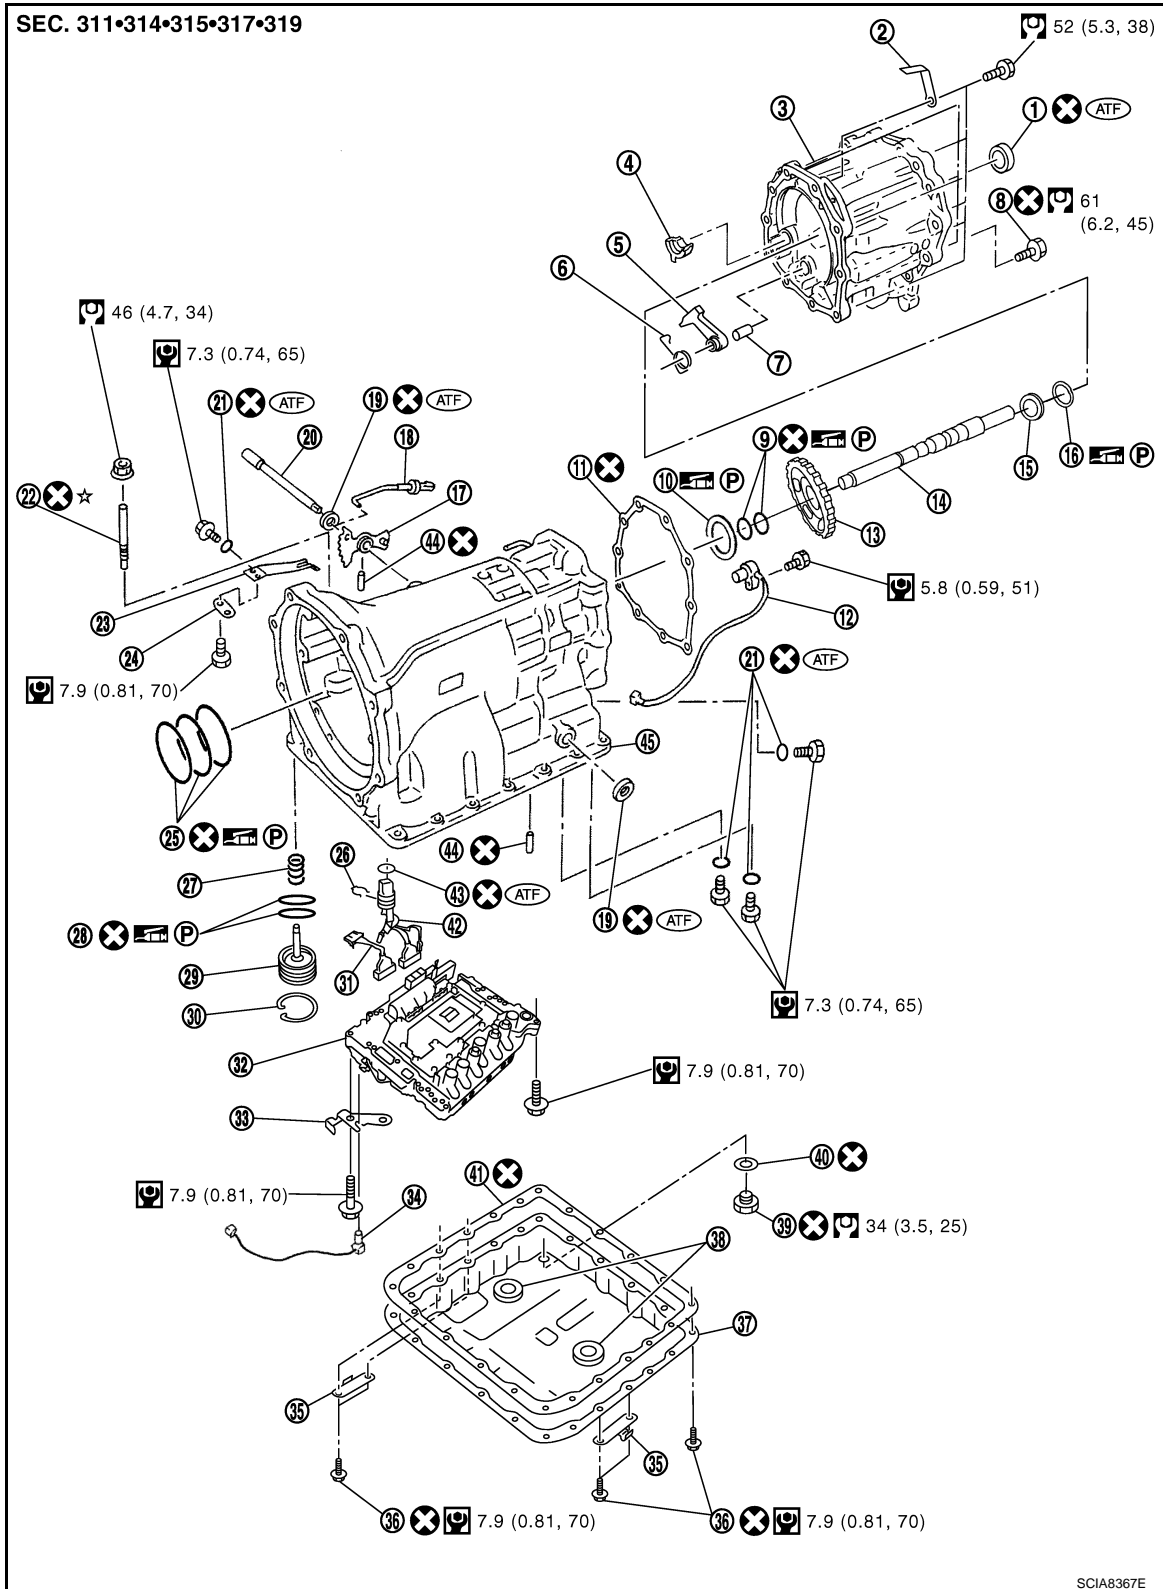

SCIA8367E

- | | | |
|-----------------------------|----------------------|-----------------------|
| 1. Rear oil seal | 2. Bracket | 3. Adapter case |
| 4. Parking actuator support | 5. Parking pawl | 6. Return spring |
| 7. Pawl shaft | 8. Self-sealing bolt | 9. Seal ring |
| 10. Needle bearing | 11. Gasket | 12. Revolution sensor |
| 13. Parking gear | 14. Output shaft | 15. Bearing race |
| 16. Needle bearing | 17. Manual plate | 18. Parking rod |

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

- | | | |
|------------------------------------|----------------------------|----------------------------|
| 19. Manual shaft oil seal | 20. Manual shaft | 21. O-ring |
| 22. Band servo anchor end pin | 23. Detent spring | 24. Spacer |
| 25. Seal ring | 26. Snap ring | 27. Return spring |
| 28. O-ring | 29. Servo assembly | 30. Snap ring |
| 31. Sub-harness | 32. Control valve with TCM | 33. Bracket |
| 34. A/T fluid temperature sensor 2 | 35. Clip | 36. Oil pan mounting bolt |
| 37. Oil pan | 38. Magnet | 39. Drain plug |
| 40. Drain plug gasket | 41. Oil pan gasket | 42. Terminal cord assembly |
| 43. O-ring | 44. Retaining pin | 45. Transmission case |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Oil Channel

INFOID:000000000957187

TM

E

F

G

H

I

J

K

L

M

N

O


P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

2WD

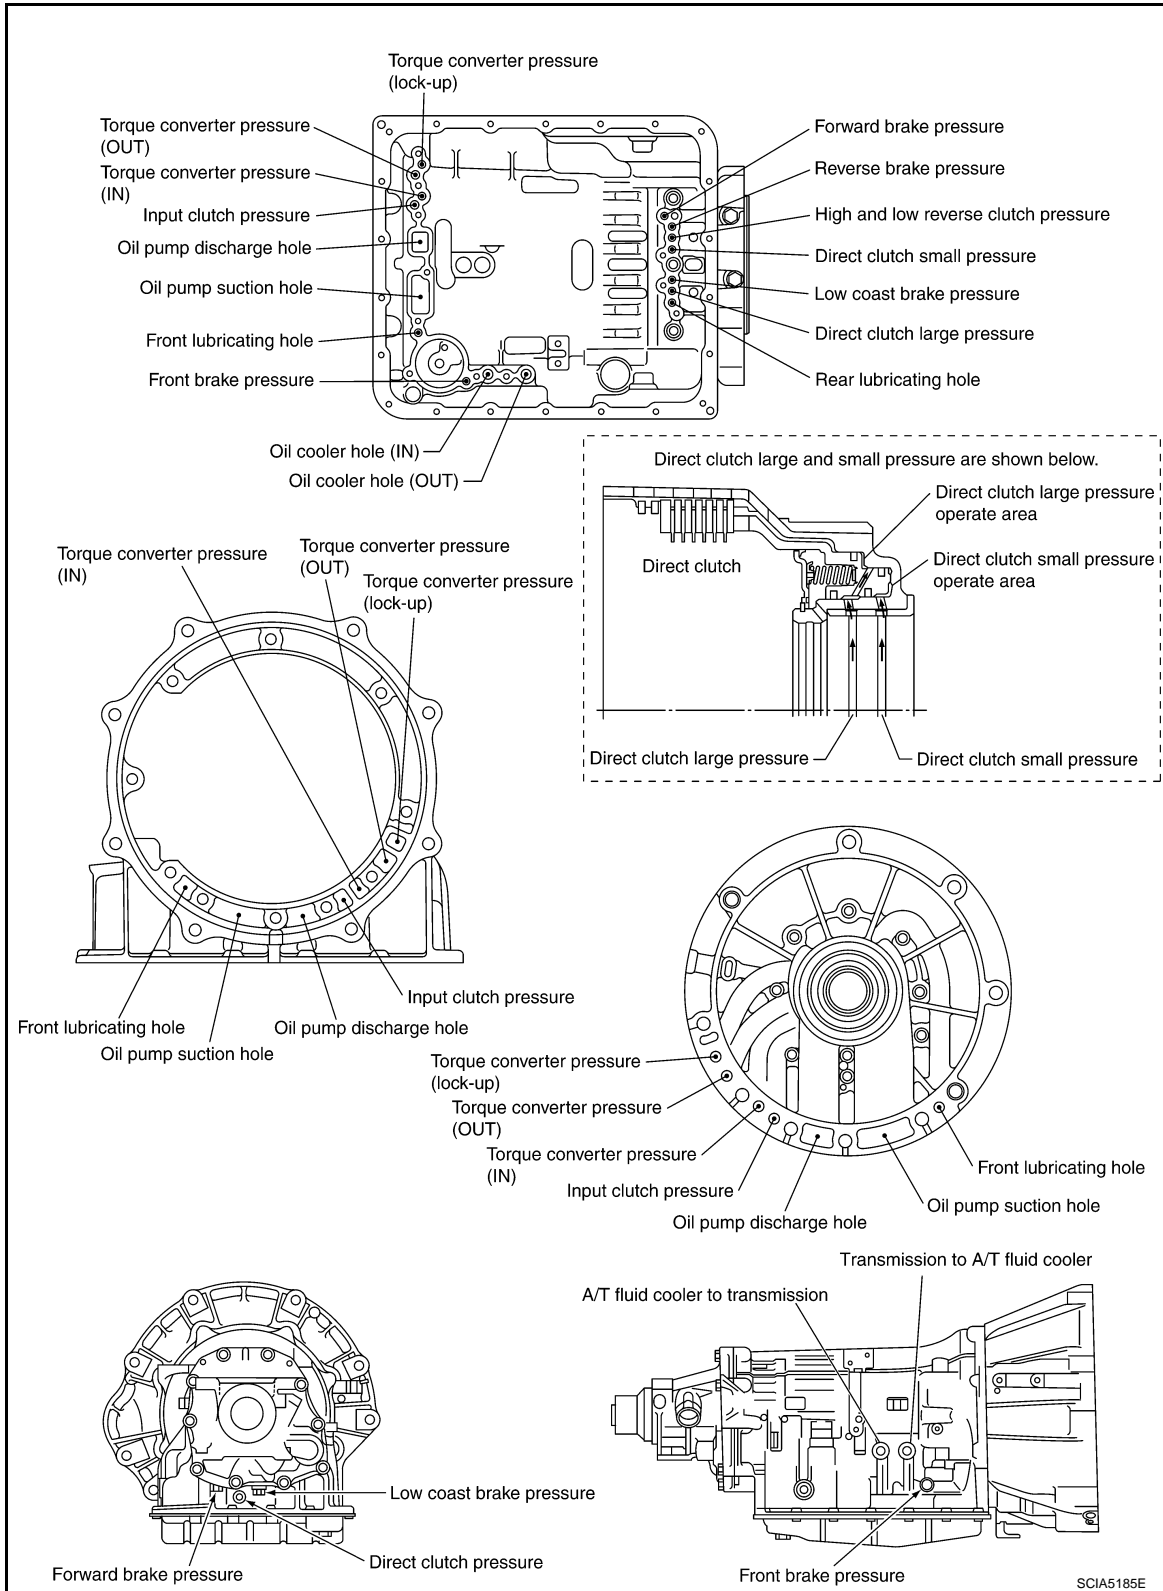


TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

AWD

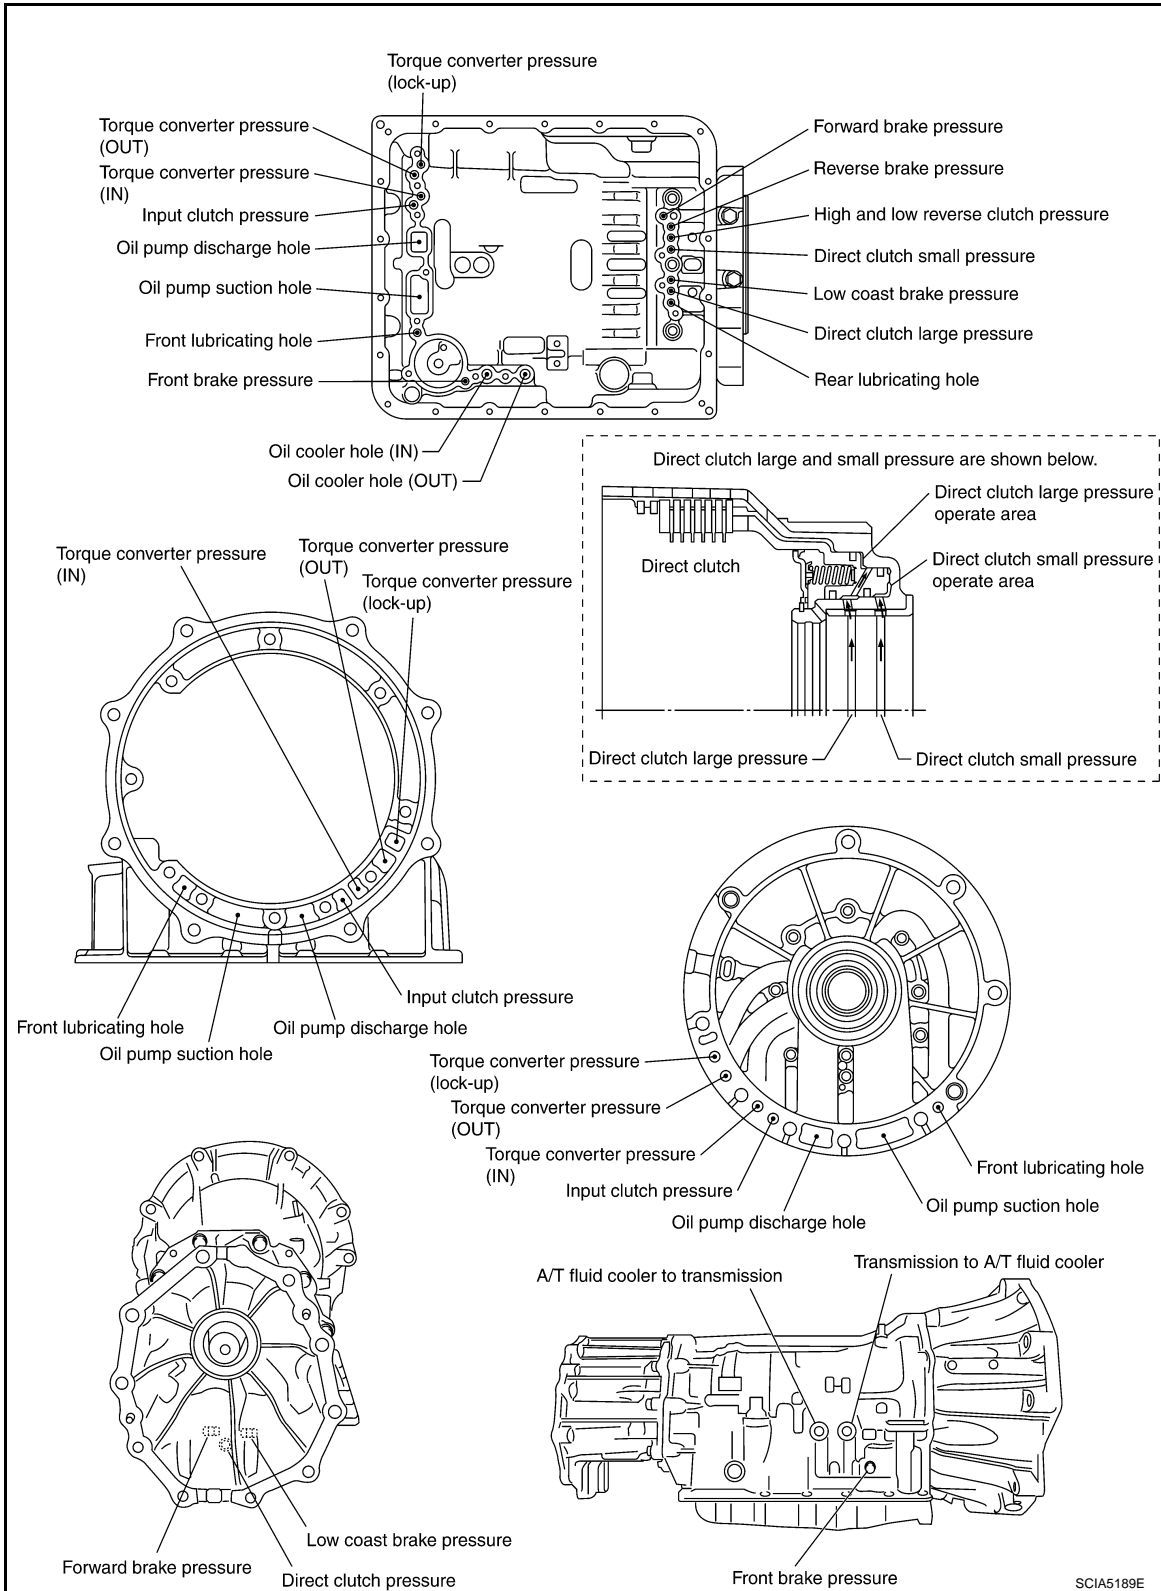

Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings


INFOID:000000000957188

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

2WD

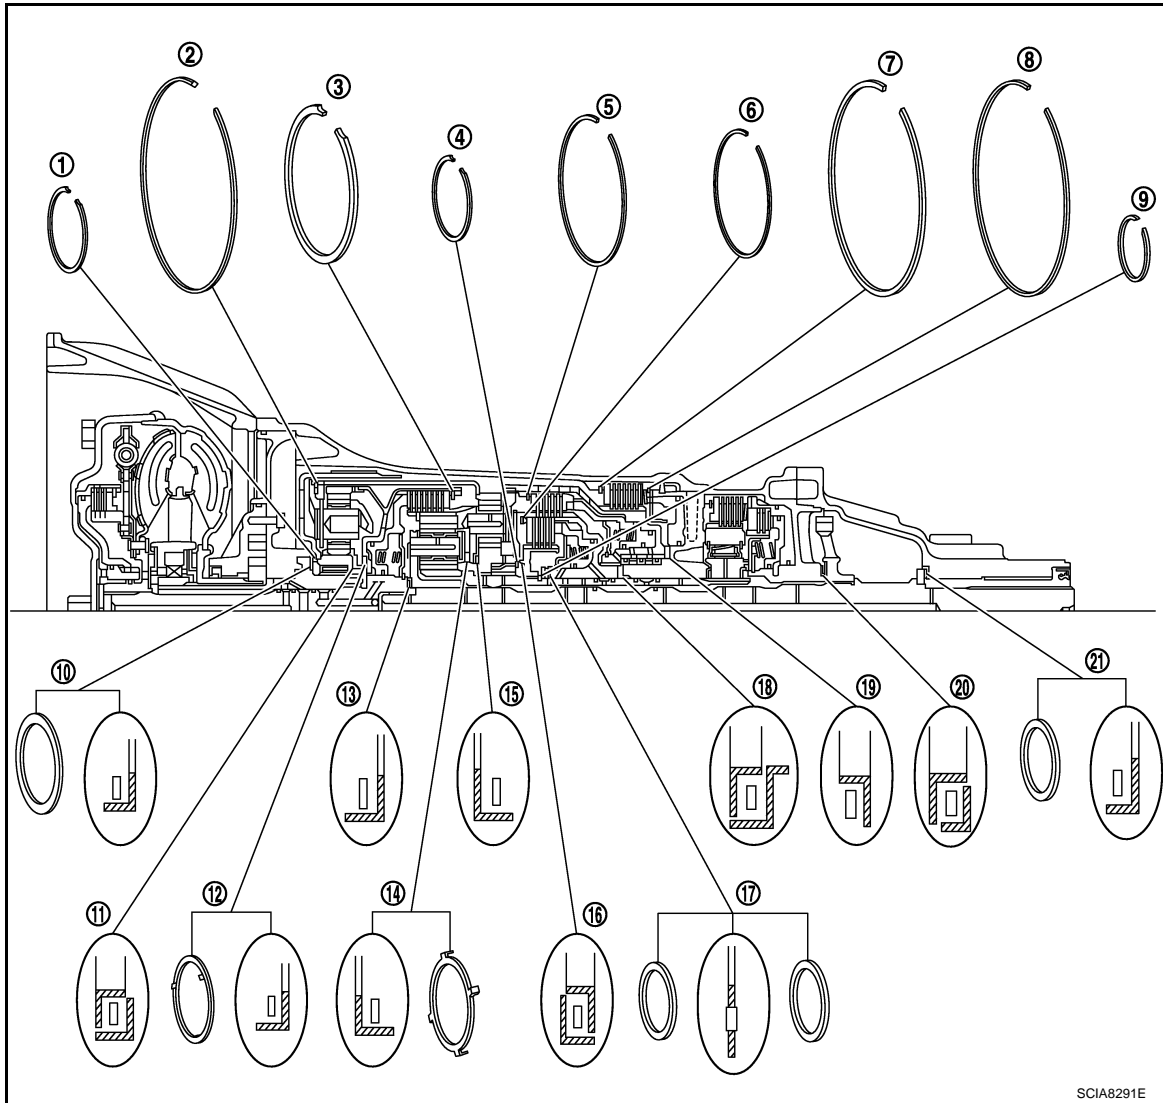

SCIA8291E


Snap ring		Needle bearing	
Item number	Outer diameter mm (in)	Item number	Outer diameter mm (in)
1	67.5 (2.657)	10	80 (3.149)
2	182.4 (7.181)	11	77 (3.031)
3	171.5 (6.751)	12	77 (3.031)
4	70.5 (2.776)	13	47 (1.850)
5	169 (6.653)	14	84 (3.307)
6	134.3 (5.287)	15	84 (3.307)
7	180.5 (7.106)	16	92 (3.622)
8	181 (7.125)	17	60 (2.362)
9	48.4 (1.906)	18	63 (2.480)
—	—	19	92 (3.622)
—	—	20	65 (2.559)
—	—	21	60 (2.362)

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

AWD

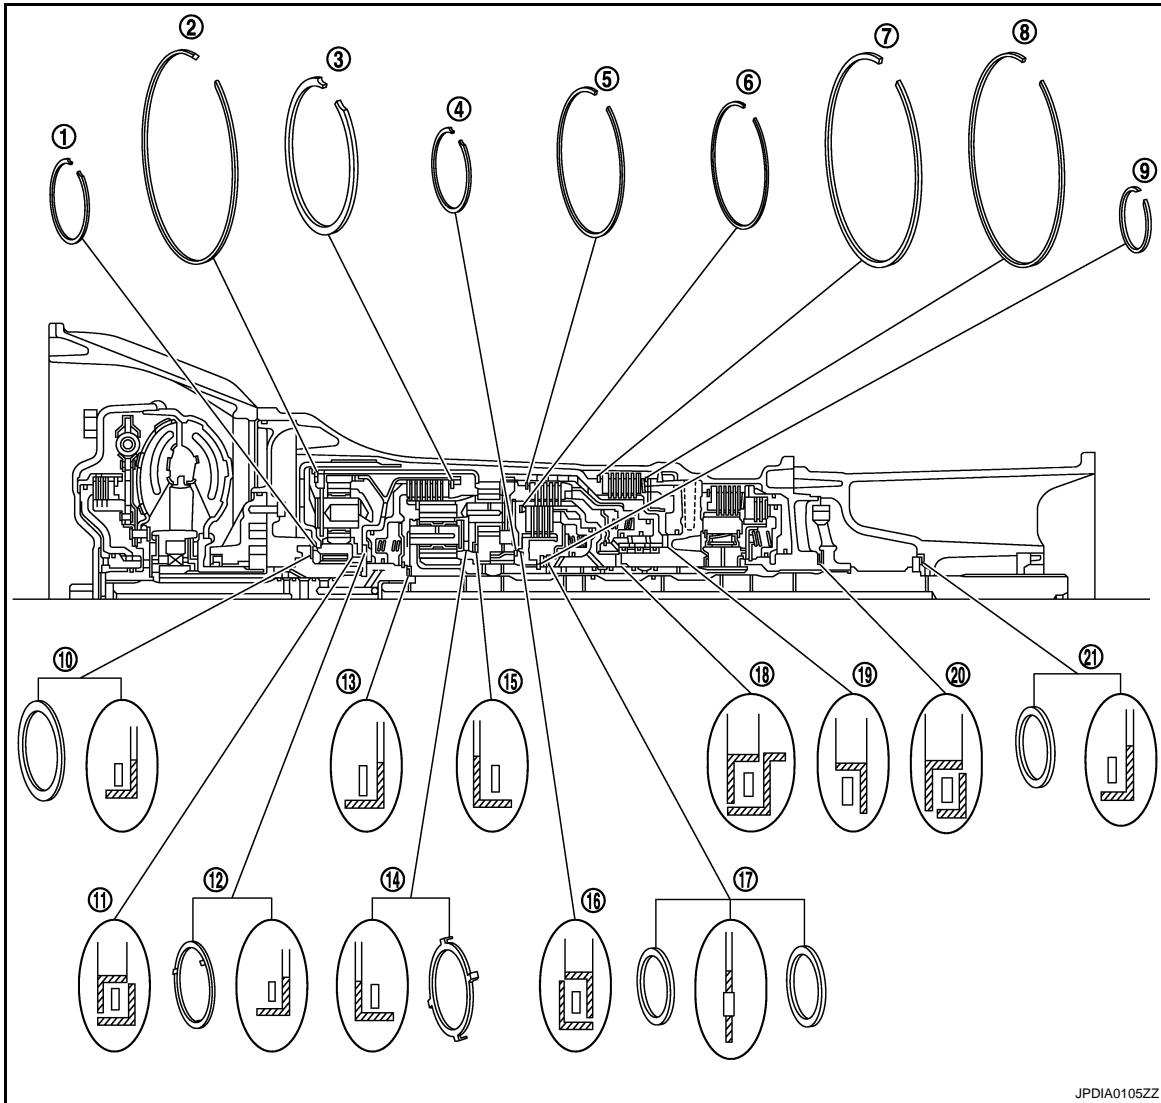

JPDIA0105ZZ

Snap ring		Needle bearing	
Item number	Outer diameter mm (in)	Item number	Outer diameter mm (in)
1	67.5 (2.657)	10	80 (3.149)
2	182.4 (7.181)	11	77 (3.031)
3	171.5 (6.751)	12	77 (3.031)
4	70.5 (2.776)	13	47 (1.850)
5	169 (6.653)	14	84 (3.307)
6	134.3 (5.287)	15	84 (3.307)
7	180.5 (7.106)	16	92 (3.622)
8	181 (7.125)	17	60 (2.362)
9	48.4 (1.906)	18	63 (2.480)
—	—	19	92 (3.622)
—	—	20	65 (2.559)
—	—	21	60 (2.362)

Disassembly

INFOID:000000000957189


CAUTION:
Do not disassemble parts behind Drum Support. Refer to [TM-92, "Cross-Sectional View"](#).

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


1. Drain ATF through drain plug.
2. Remove torque converter by holding it firmly and turning while pulling straight out.

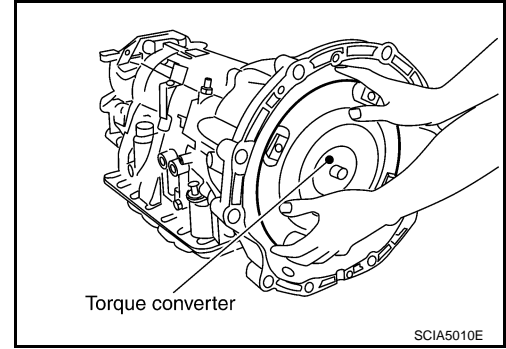


3. Remove tightening bolts (⬅) for converter housing and transmission case.
4. Remove converter housing from transmission case.
CAUTION:
Be careful not to scratch converter housing.

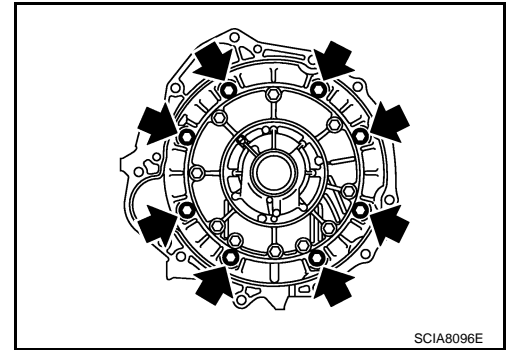

5. Remove O-ring from input clutch assembly.

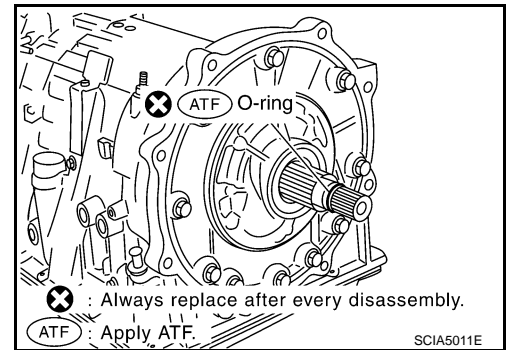

6. Remove tightening bolts for oil pump assembly and transmission case.

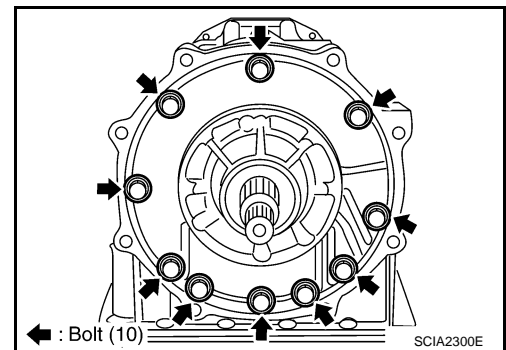

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


7. Attach the sliding hammers to oil pump assembly and extract it evenly from transmission case.

CAUTION:


- Fully tighten the sliding hammer screws.
- Make sure that bearing race is installed to the oil pump assembly edge surface.

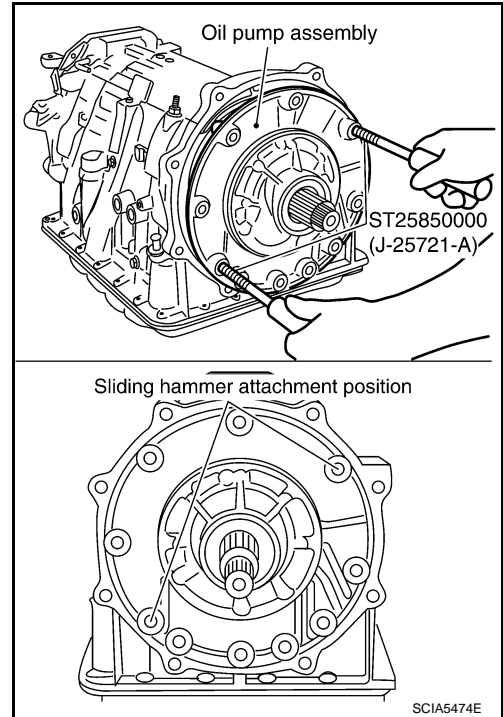


8. Remove O-ring from oil pump assembly.

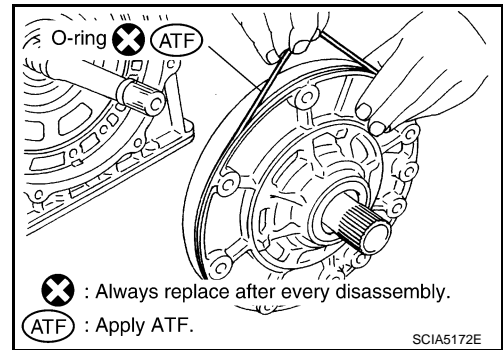

9. Remove bearing race from oil pump assembly.

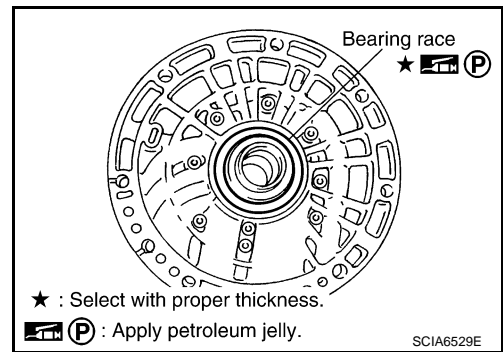

10. Remove needle bearing from front sun gear.

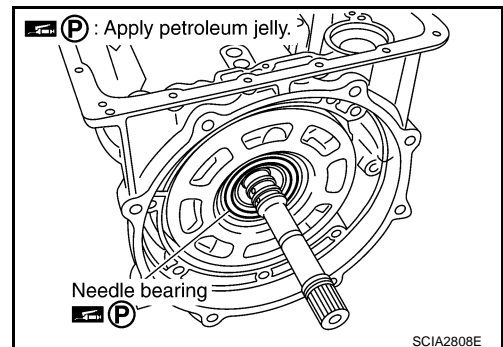

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


11. Remove front sun gear assembly from front carrier assembly.

NOTE:

Remove front sun gear by rotating left/right.

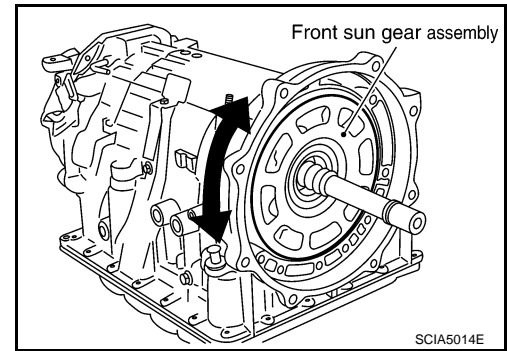


12. Remove seal rings from input clutch assembly.

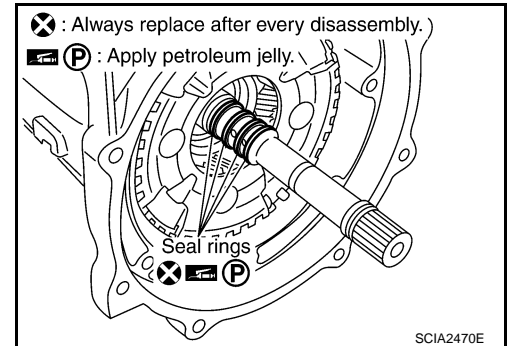


13. Remove front carrier assembly from rear carrier assembly. (With input clutch assembly and rear internal gear.)

CAUTION:


Be careful to remove it with needle bearing.

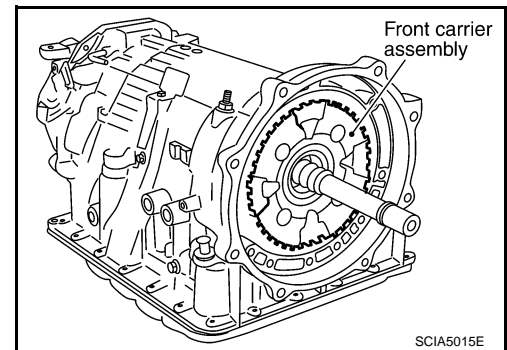

14. Loosen lock nut and remove band servo anchor end pin from transmission case.

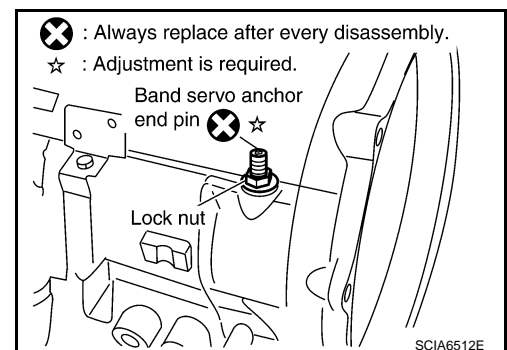

15. Remove brake band from transmission case.

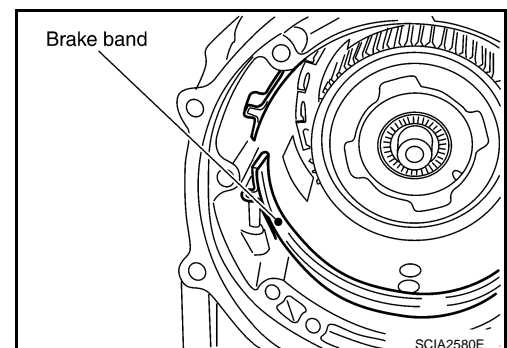


TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


- To prevent brake linings from cracking or peeling, do not stretch the flexible band unnecessarily. When removing the brake band, always secure it with a clip as shown in the figure at right. Leave the clip in position after removing the brake band.
- Check brake band facing for damage, cracks, wear or burns.

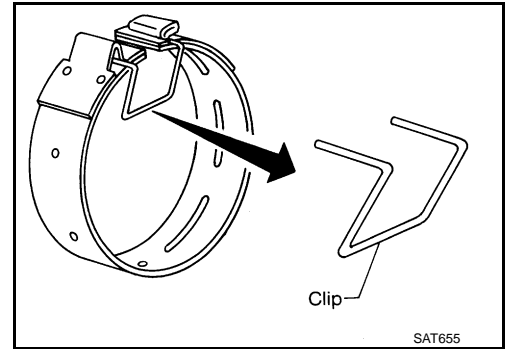


16. Remove mid carrier assembly and rear carrier assembly as a unit.

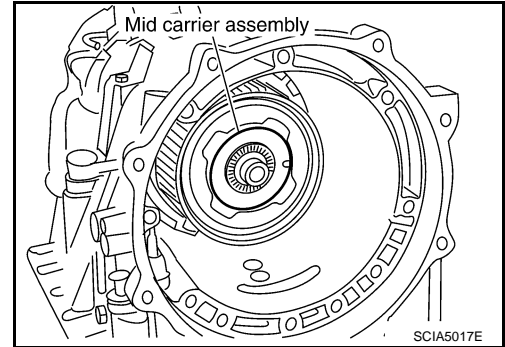


17. Remove mid carrier assembly from rear carrier assembly.

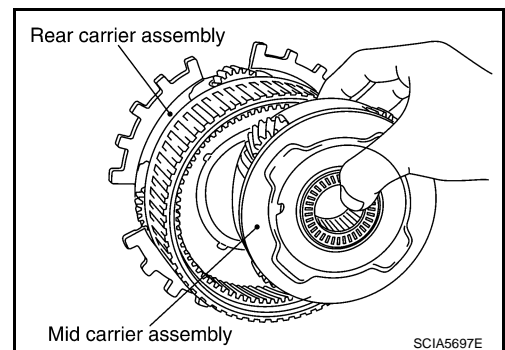

18. Remove needle bearing (front side) from mid carrier assembly.

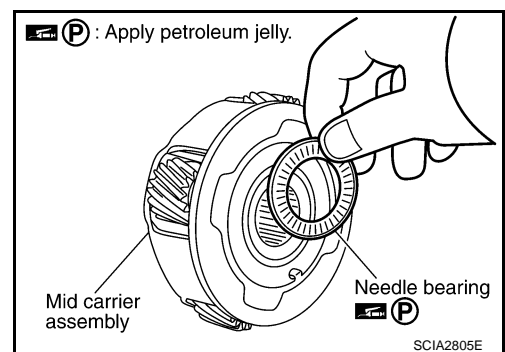

19. Remove needle bearing (rear side) from mid carrier assembly.

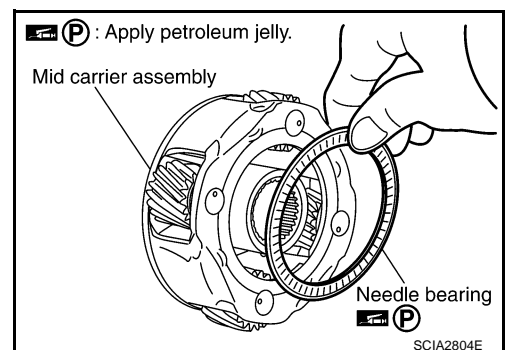


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

20. Remove bearing race from rear carrier assembly.

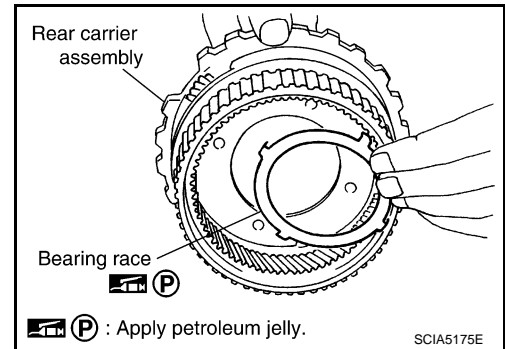


21. Remove needle bearing from rear carrier assembly.

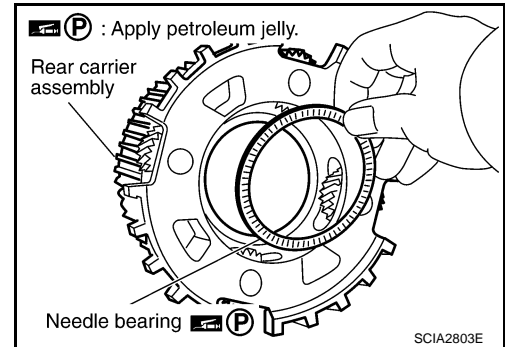

22. Remove mid sun gear assembly, rear sun gear assembly and high and low reverse clutch hub as a unit.

CAUTION:


Be careful to remove them with bearing race and needle bearing.

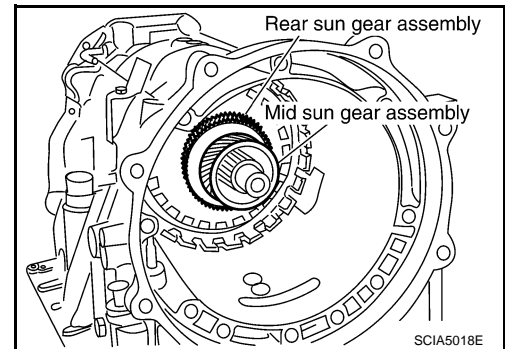


23. Remove high and low reverse clutch assembly from direct clutch assembly.

CAUTION:

Make sure that needle bearing is installed to the high and low reverse clutch assembly edge surface.

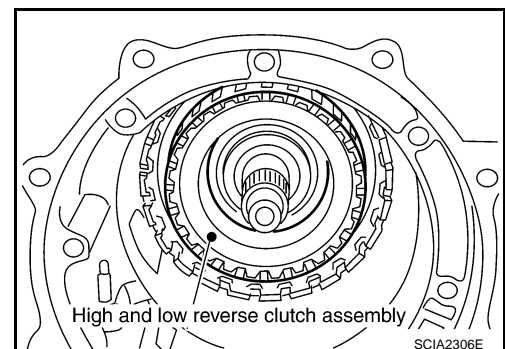

24. Remove direct clutch assembly from reverse brake.

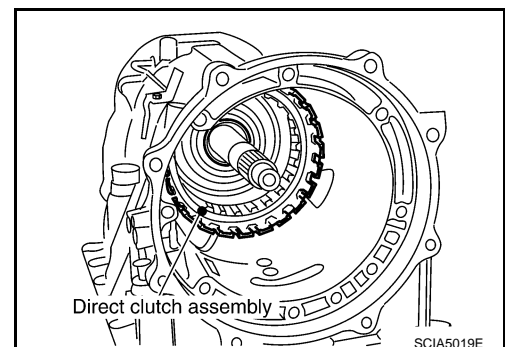


TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

25. Remove needle bearing from drum support.

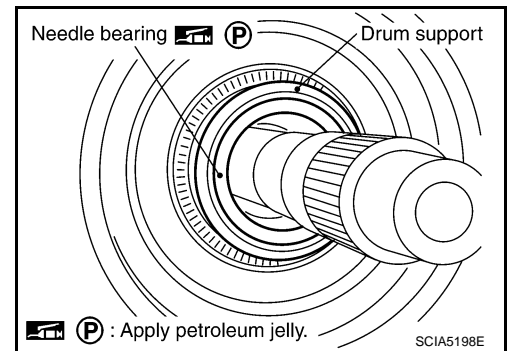


26. Remove snap ring (1) from A/T assembly harness connector (A).

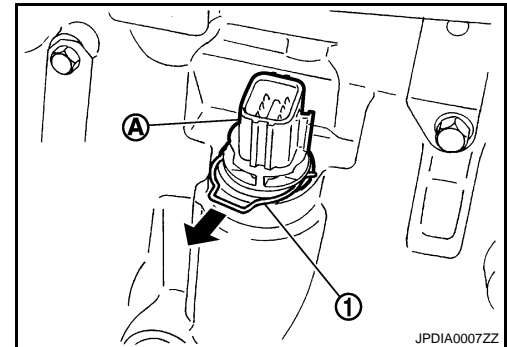

27. Push A/T assembly harness connector (A).

CAUTION:

Be careful not to damage connector.

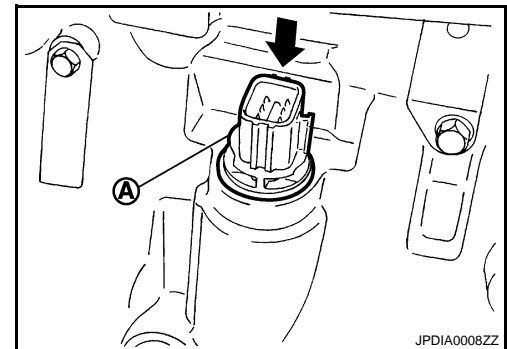


28. Remove clips (1).

3 : Drain plug


⇐ : Front

⬅ : Oil pan mounting bolt

29. Remove oil pan (2) and oil pan gasket.

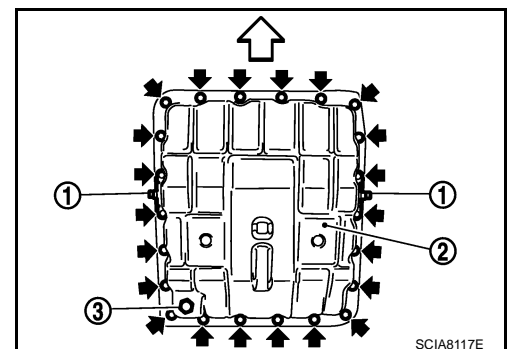

30. Remove magnets (1) from oil pan.

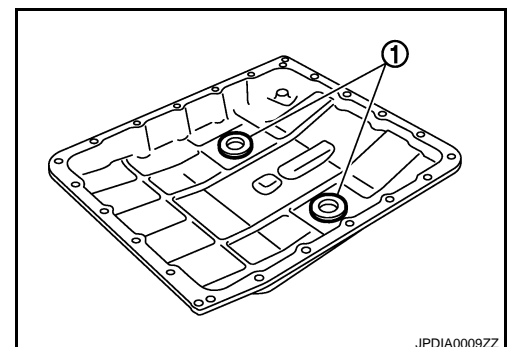

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >


[5AT: RE5R05A]

31. Disconnect A/T fluid temperature sensor 2 connector (A).

CAUTION:

Be careful not to damage connector.

32. Disengage terminal clips (←).

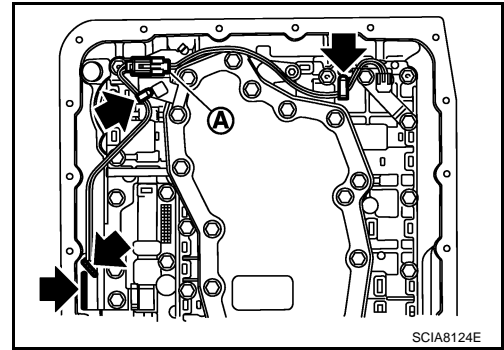


33. Disconnect revolution sensor connector (A).

CAUTION:

Be careful not to damage connector.


34. Disengage terminal clip (←).

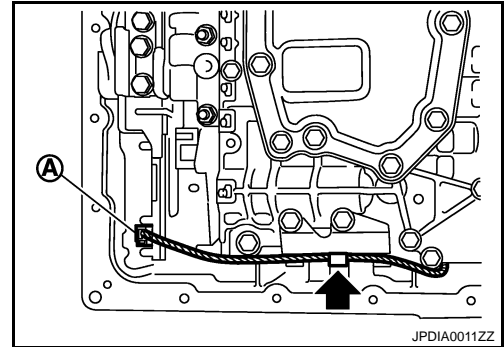

35. Remove bolts A, B and C from control valve with TCM.

← : Front


Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

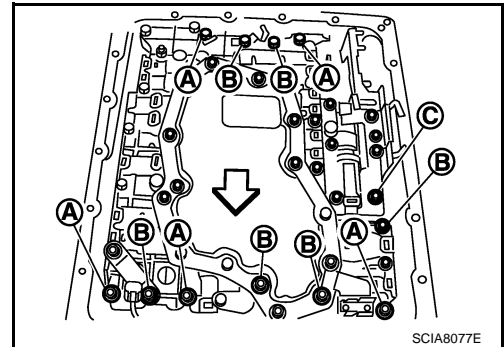

36. Remove control valve with TCM from transmission case.


CAUTION:

When removing, be careful with the manual valve notch and manual plate height. Remove it vertically.

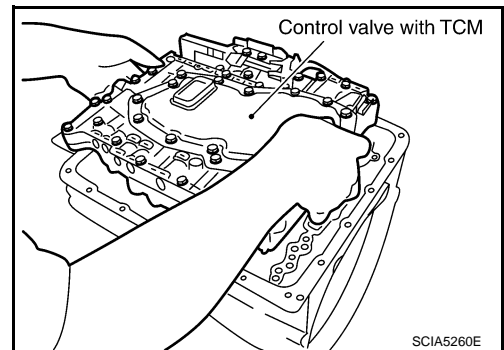

37. Remove A/T fluid temperature sensor 2 (1) with bracket (2) from control valve with TCM.

← : Bolt

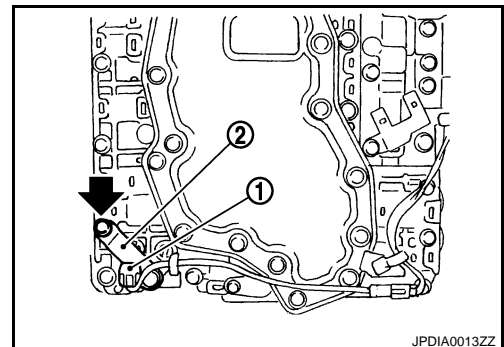


TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

38. Remove bracket (1) from A/T fluid temperature sensor 2 (2).

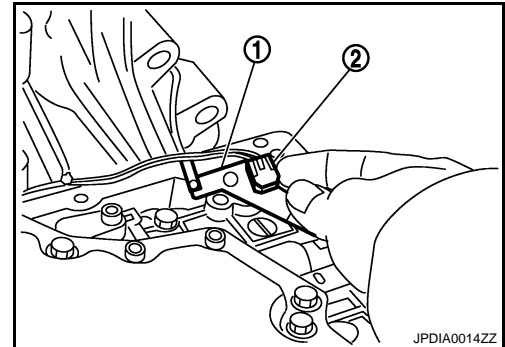


39. Remove O-ring (1) from A/T assembly harness connector (A).

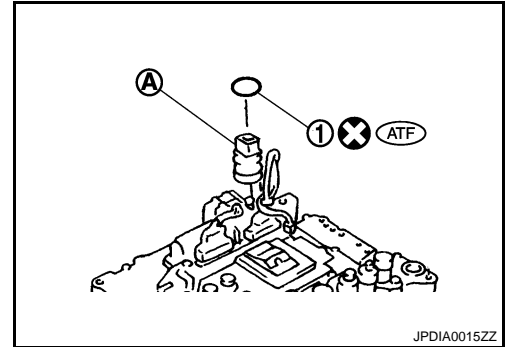


40. Disconnect TCM connectors (A) and (B).

CAUTION:

Be careful not to damage connectors.

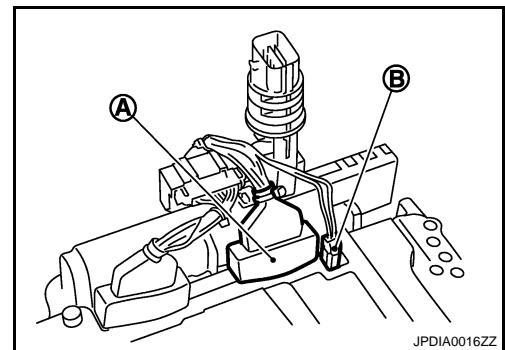


41. Remove A/T assembly harness connector (A) from control valve with TCM using a flat-bladed screwdriver (B).

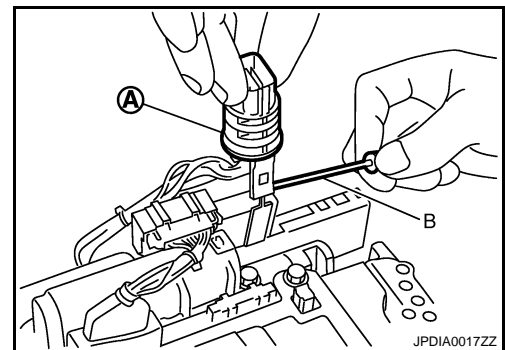

42. Disconnect TCM connector (A) and park/neutral position switch connector (B).

CAUTION:

Be careful not to damage connectors.

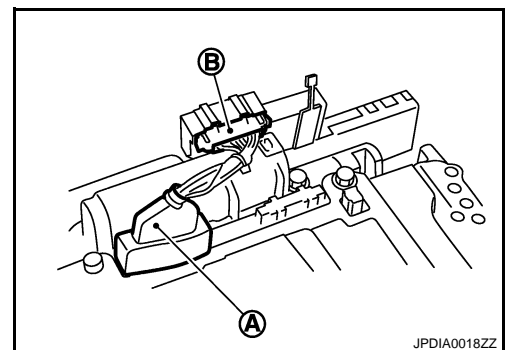

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


43. Remove rear extension assembly (2WD) or adapter case assembly (AWD) according to the following procedures.

a. **2WD**


i. Remove tightening bolts for rear extension assembly and transmission case.

1 : Self-sealing bolt


A : Bolt

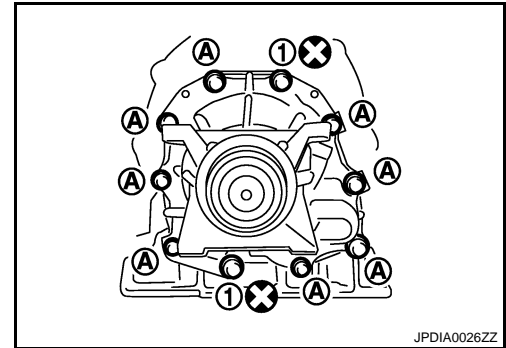


ii. Tap rear extension assembly with a soft hammer.

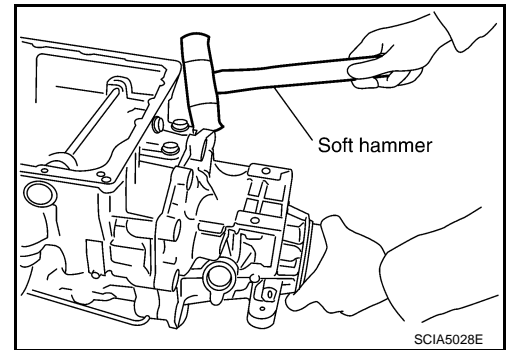

iii. Remove rear extension assembly from transmission case. (With needle bearing).

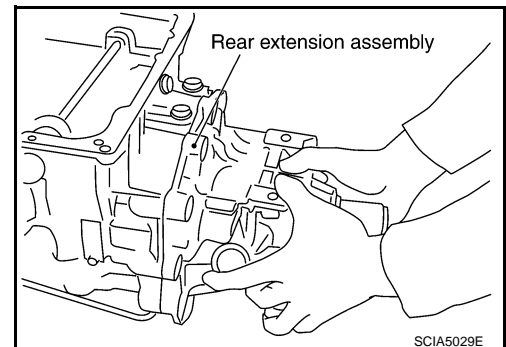

iv. Remove bearing race from output shaft.

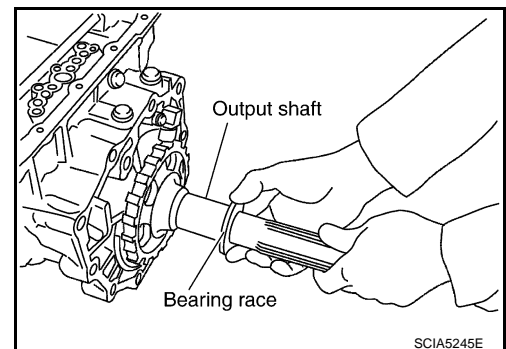


TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


- v. Remove output shaft from transmission case by rotating left/right.

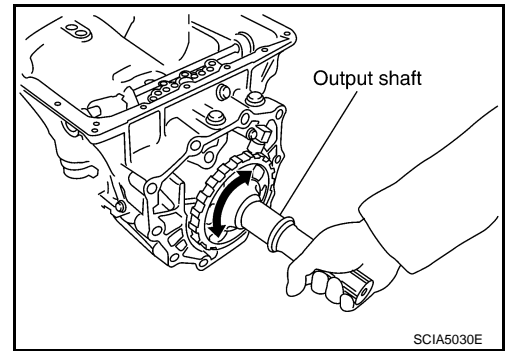

- vi. Remove parking gear (1) from output shaft (2).

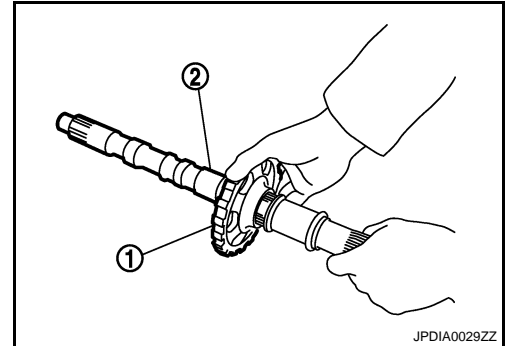

- vii. Remove seal rings (1) from output shaft.

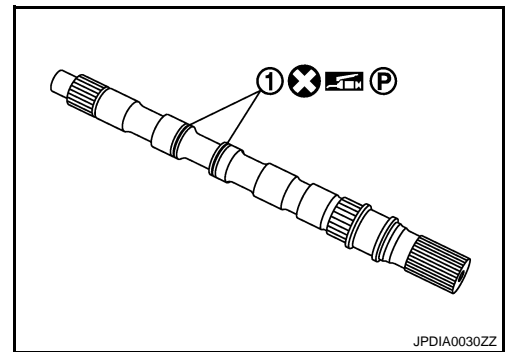

- b. AWD

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


- i. Remove tightening bolts (1) for adapter case assembly and transmission case. [With bracket (2).]

3 : Self-sealing bolt


← : Bolt

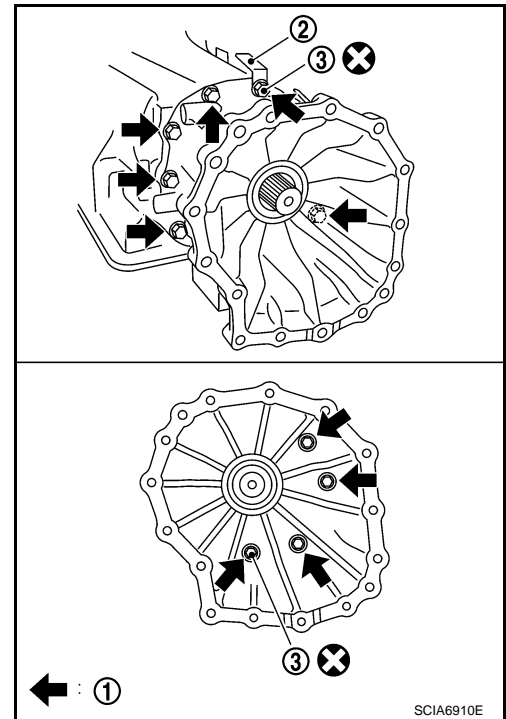


- ii. Tap adapter case assembly with a soft hammer.

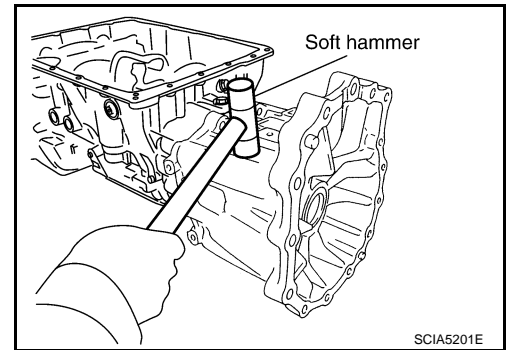

- iii. Remove adapter case assembly from transmission case. (With needle bearing)

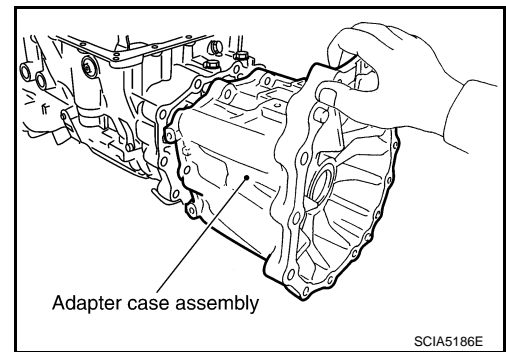

- iv. Remove gasket from transmission case.

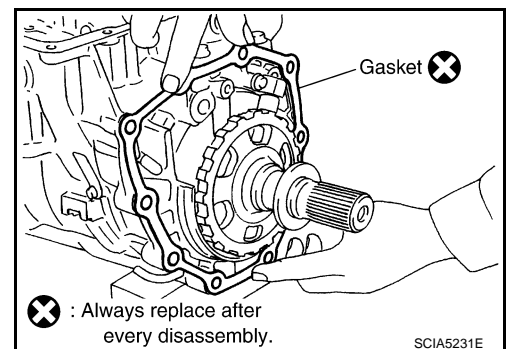


TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


v. Remove bearing race from output shaft.

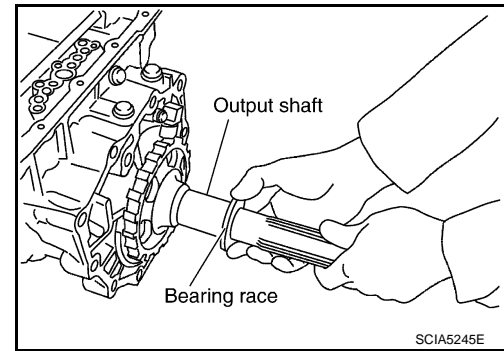


vi. Remove output shaft from transmission case by rotating left/right.

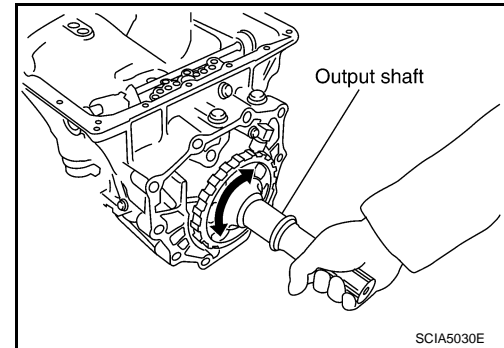


vii. Remove parking gear (1) from output shaft (2).

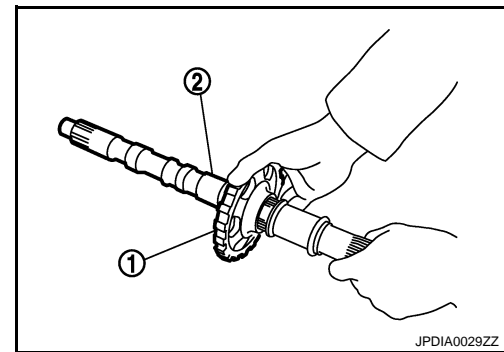

viii. Remove seal rings (1) from output shaft.

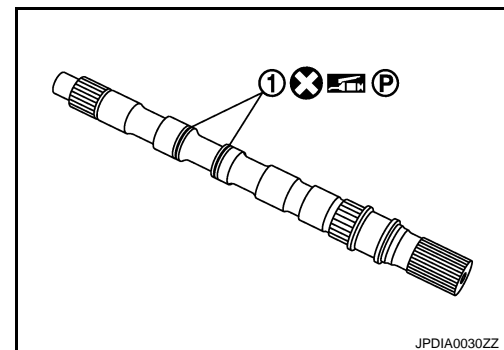

44. Remove needle bearing from transmission case.

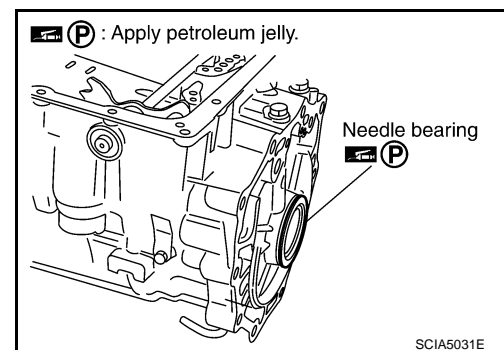

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

45. Remove revolution sensor from transmission case.

CAUTION:

- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc. to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

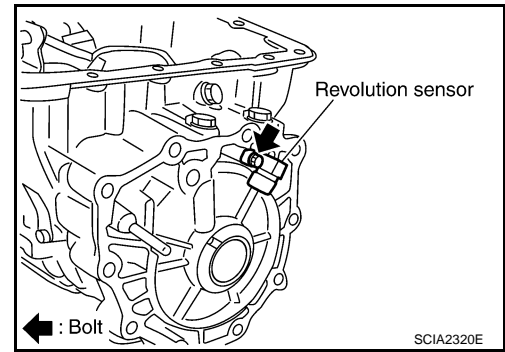


46. Remove reverse brake snap ring (fixing plate) using 2 flat-bladed screwdrivers.

NOTE:


Press out snap ring from the transmission case oil pan side gap using a flat-bladed screwdriver, and remove it using a another screwdriver.

47. Remove reverse brake retaining plate from transmission case.

- Check facing for burns, cracks or damage. If necessary, replace the plate.

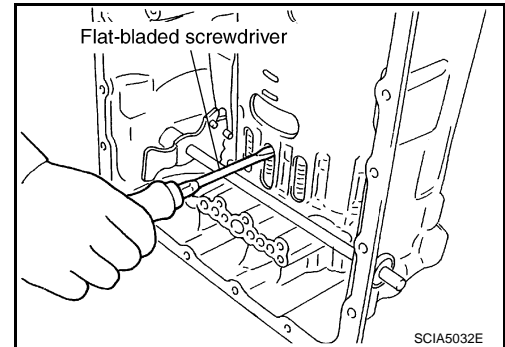


48. Remove N-spring from transmission case.

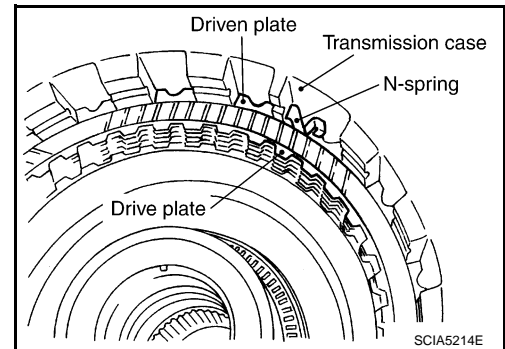


49. Remove reverse brake drive plates, driven plates, dish plates and retaining plate transmission case.

- Check facing for burns, cracks or damage. If necessary, replace the plate.

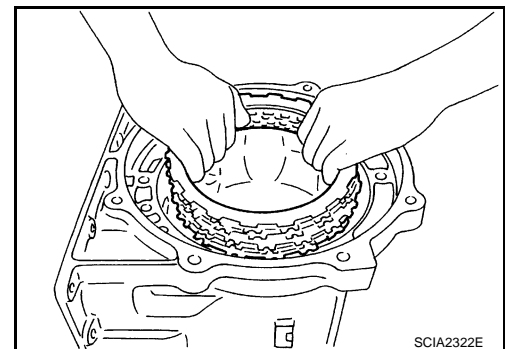

50. Remove snap ring (fixing spring retainer) using a flat-bladed screwdriver.

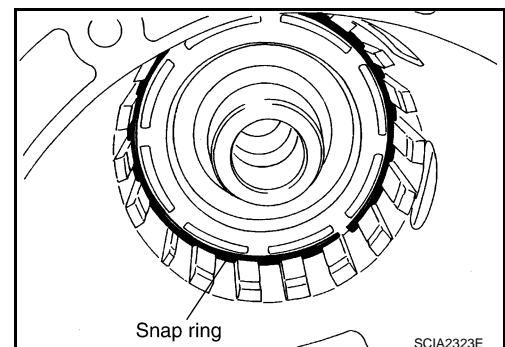


TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


51. Remove spring retainer and return spring from transmission case.

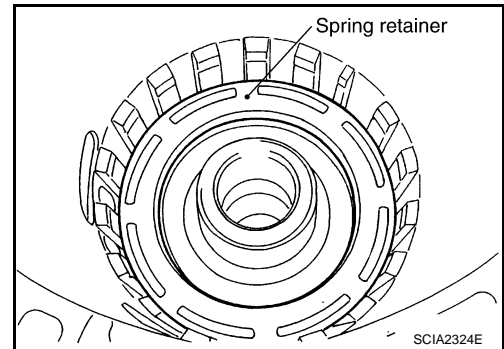

52. Remove seal rings from drum support.

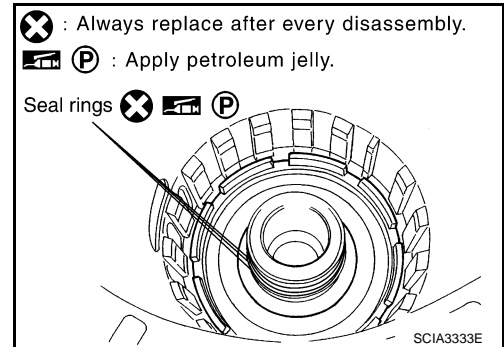


53. Remove needle bearing from drum support edge surface.

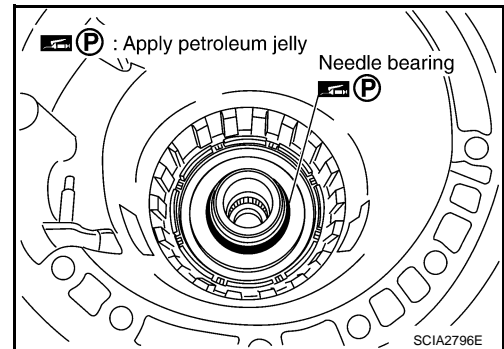

54. Remove reverse brake piston from transmission case with compressed air. Refer to [TM-287. "Oil Channel"](#).

CAUTION:

Care should be taken not to abruptly blow air. It makes pistons incline, as the result, it becomes hard to disassemble the pistons.

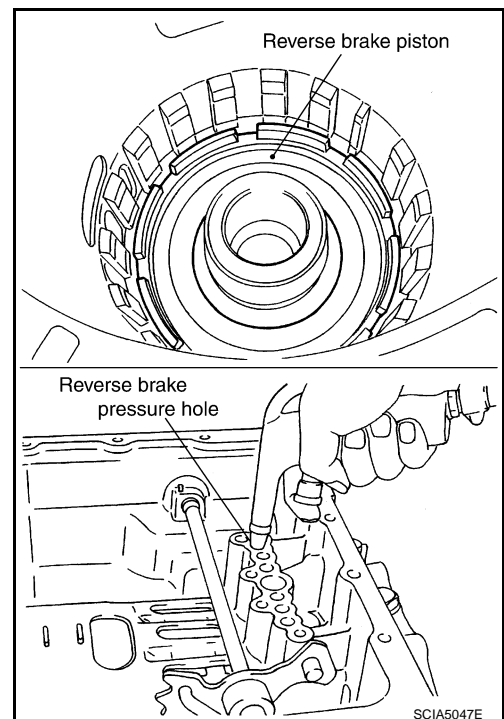


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


55. Remove D-rings from reverse brake piston.

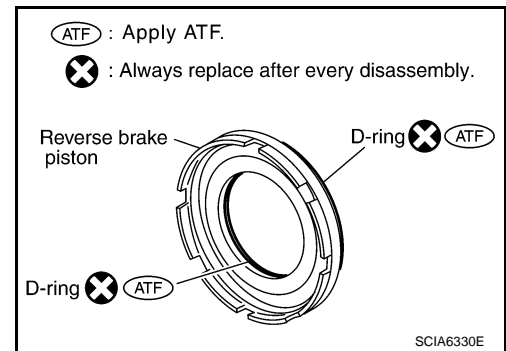


56. Use a pin punch [4 mm (0.16 in) dia. commercial service tool] to knock out retaining pin.

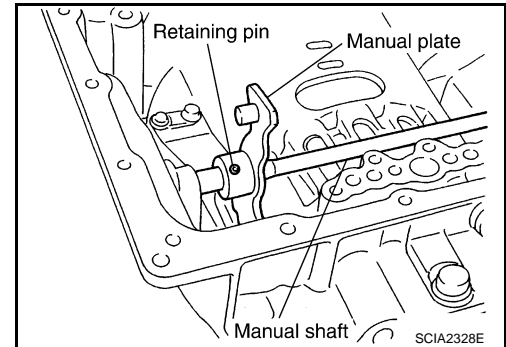


57. Remove manual shaft retaining pin with pair of nippers.

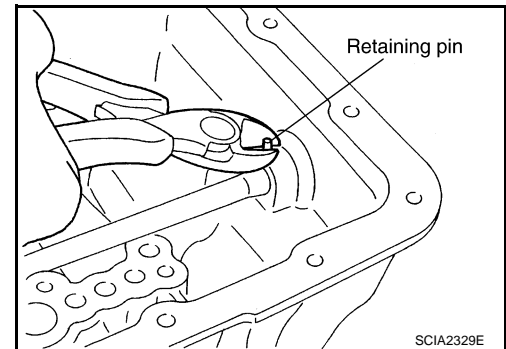

58. Remove manual plate (with parking rod) from manual shaft.

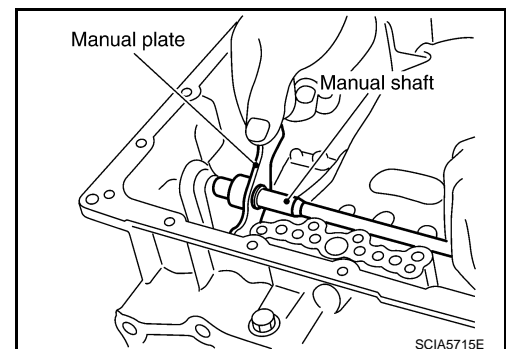

59. Remove parking rod from manual plate.

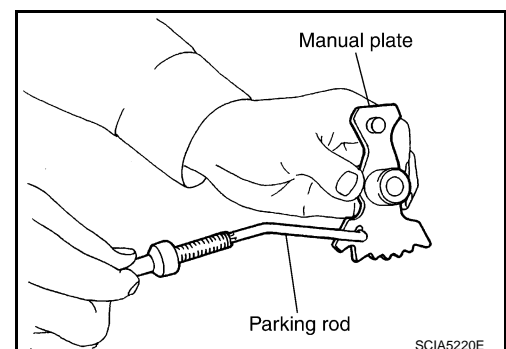


TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


60. Remove manual shaft from transmission case.

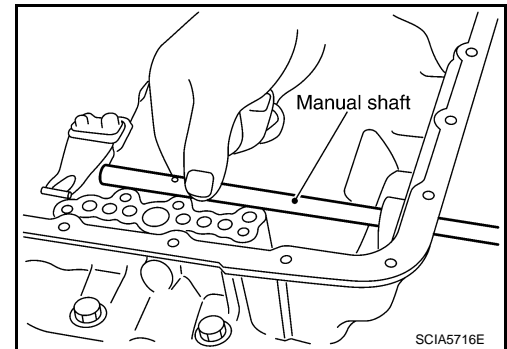


61. Remove manual shaft oil seals using a flat-bladed screwdriver.

CAUTION:


Be careful not to scratch transmission case.

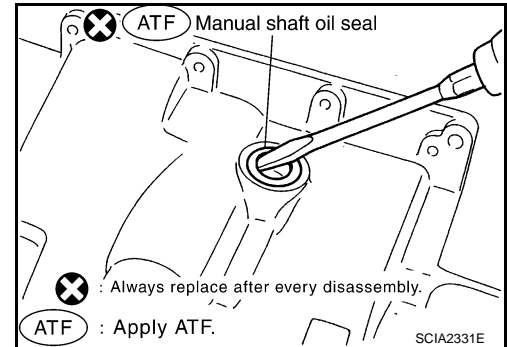


62. Remove detent spring and spacer from transmission case.

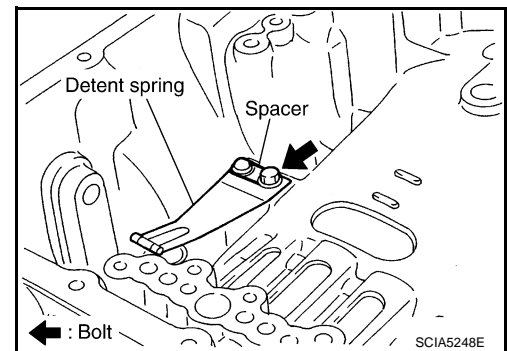

63. Using pair of snap ring pliers, remove snap ring from transmission case.

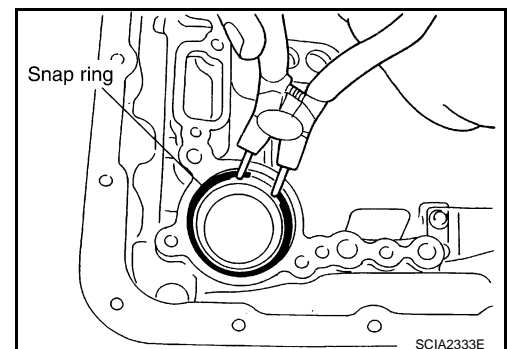

64. Remove servo assembly (with return spring) from transmission case.

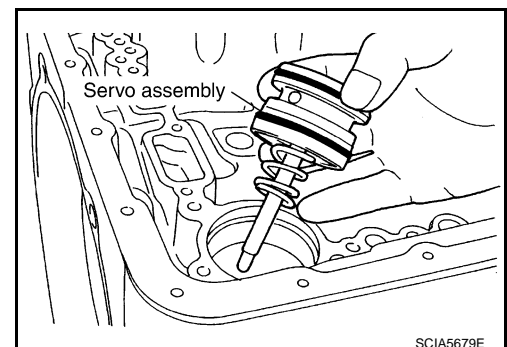


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


65. Remove return spring from servo assembly.

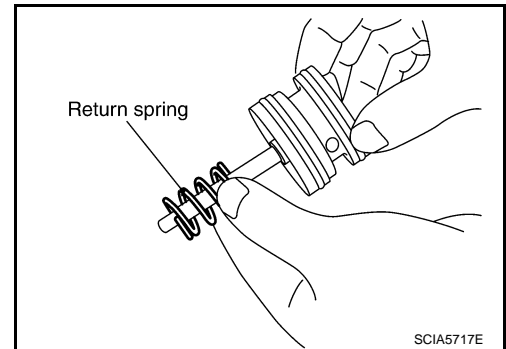


66. Remove O-rings from servo assembly.

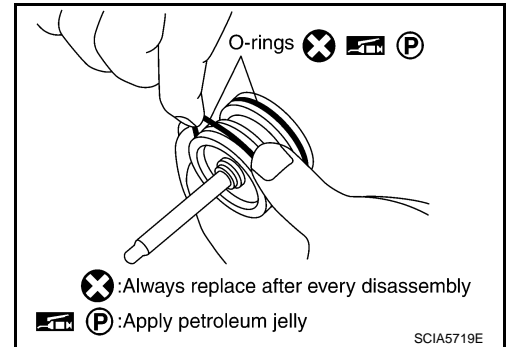


67. Remove needle bearing (1) from rear extension (2WD) or adapter case (AWD).

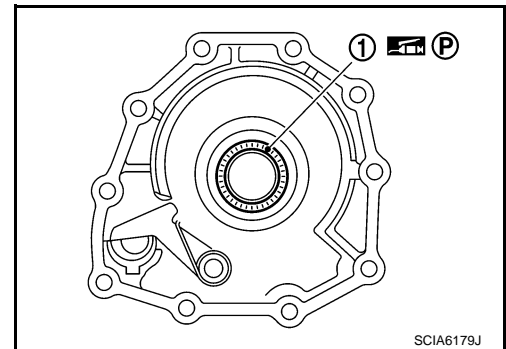

68. Remove parking actuator support from rear extension (2WD) or adapter case (AWD).

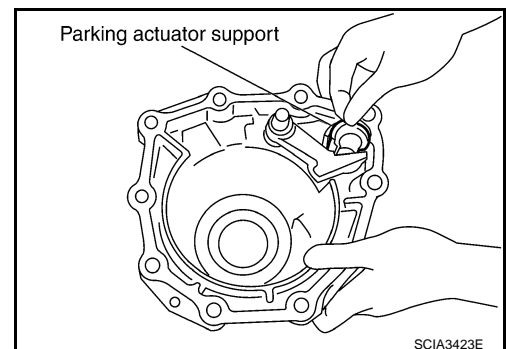

69. Remove parking pawl (with return spring) and pawl shaft from rear extension (2WD) or adapter case (AWD).

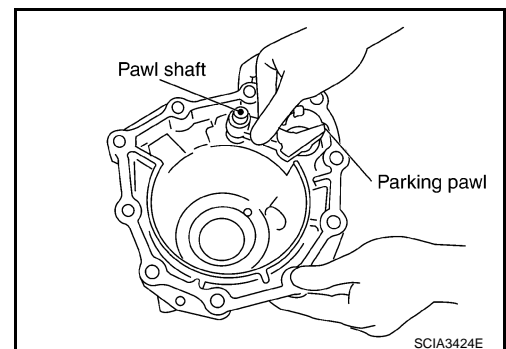


TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


70. Remove return spring (1) from parking pawl (2).

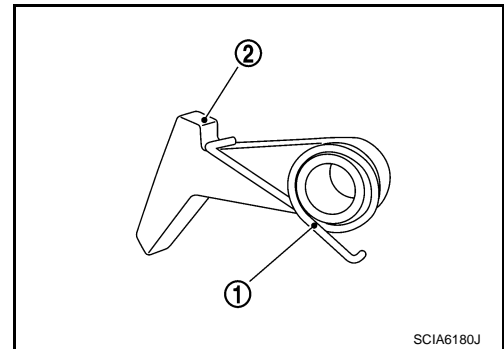

71. Remove rear oil seal from rear extension (2WD) or adapter case (AWD).

CAUTION:

Be careful not to scratch rear extension (2WD) or adapter case (AWD).

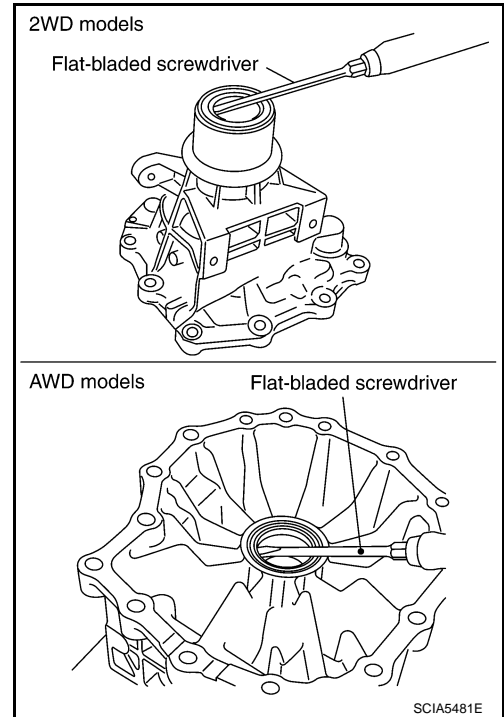


Assembly

INFOID:000000000957190

1. As shown in the figure, use a drift [22 mm (0.87 in) dia. commercial service tool] to drive manual shaft oil seals into the transmission case until it is flush.

CAUTION:

- Do not reuse manual shaft oil seals.
- Apply ATF to manual shaft oil seals.

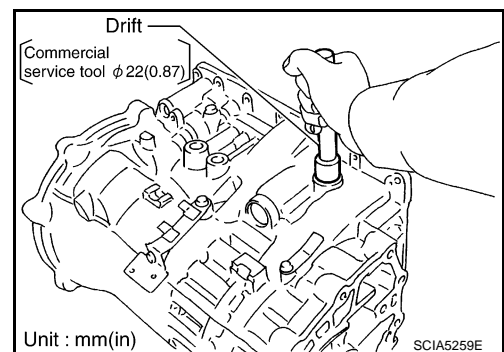


TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


2. Install detent spring and spacer in transmission case. Tighten detent spring and spacer bolt to the specified torque.

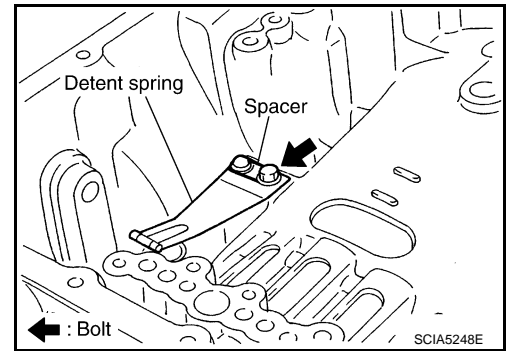


3. Install manual shaft to transmission case.

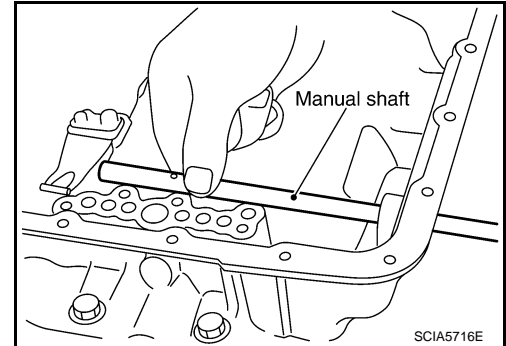


4. Install parking rod to manual plate.

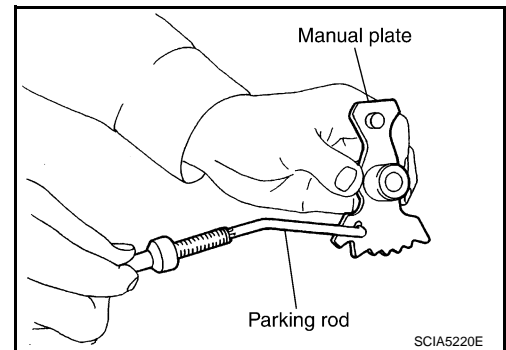

5. Install manual plate (with parking rod) to manual shaft.

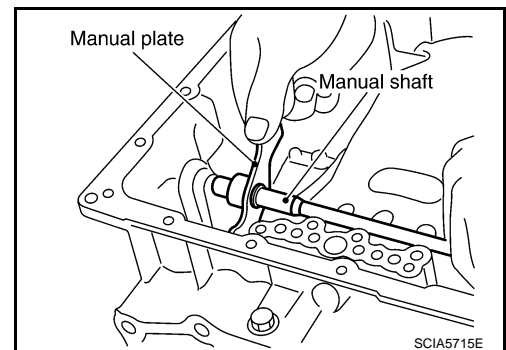

6. Install retaining pin into the manual plate and manual shaft.
 - a. Fit pinhole of the manual plate to pinhole of the manual shaft with a pin punch.
 - b. Use a hammer to tap the retaining pin into the manual plate.
CAUTION:
Drive retaining pin to 2 ± 0.5 mm (0.08 ± 0.020 in) over the manual plate.

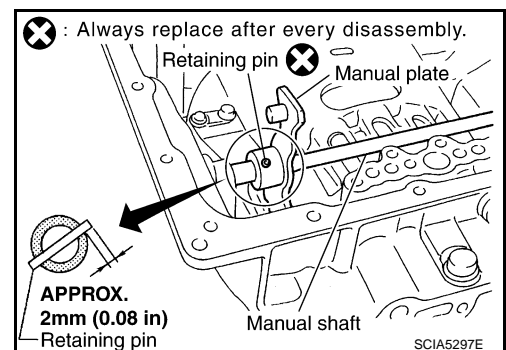

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


7. Install retaining pin into the transmission case and manual shaft.
 - a. Fit pinhole of the transmission case to pinhole of the manual shaft with a pin punch.
 - b. Use a hammer to tap the retaining pin into the transmission case.

CAUTION:


Drive retaining pin to 5 ± 1 mm (0.20 ± 0.04 in) over the transmission case.

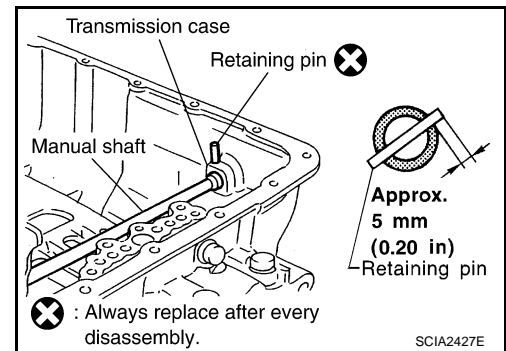


8. Install O-rings to servo assembly.

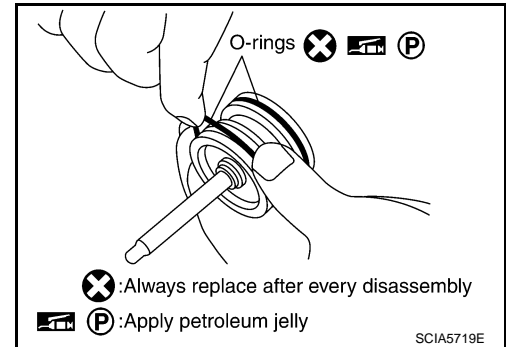


9. Install return spring to servo assembly.

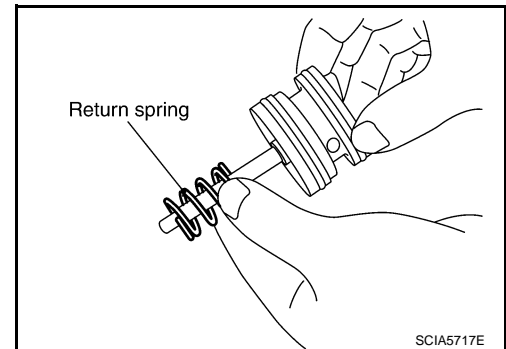

10. Install servo assembly in transmission case.

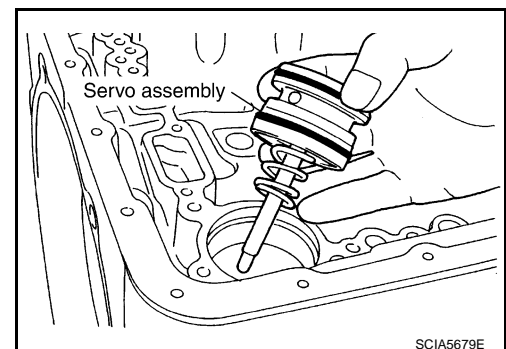

11. Using a pair of snap ring pliers, install snap ring to transmission case.

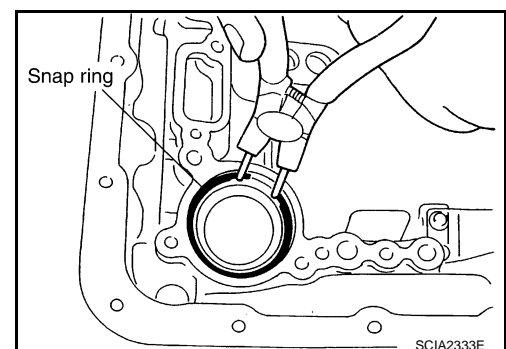


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

12. Install D-rings in reverse brake piston.

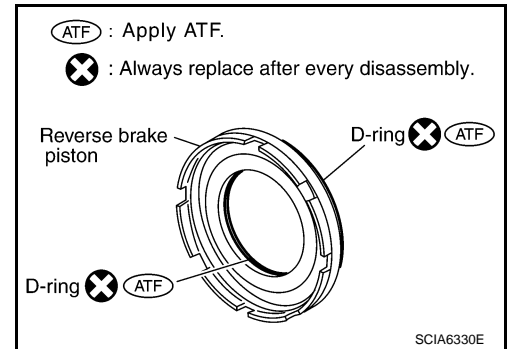


13. Install reverse brake piston in transmission case.

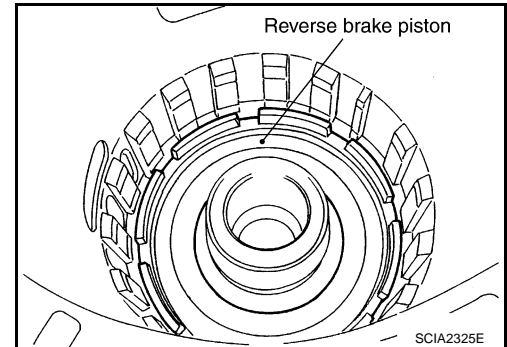


14. Install needle bearing to drum support edge surface.

CAUTION:


Take care with the direction of needle bearing. Refer to [TM-289, "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings"](#).

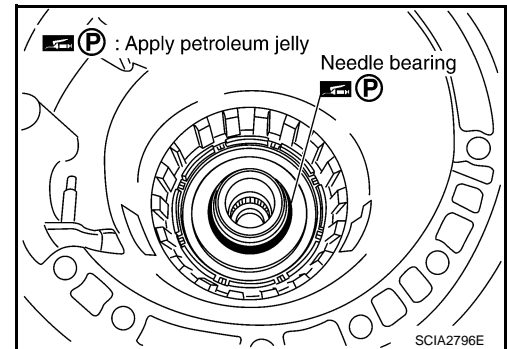

15. Install seal rings to drum support.

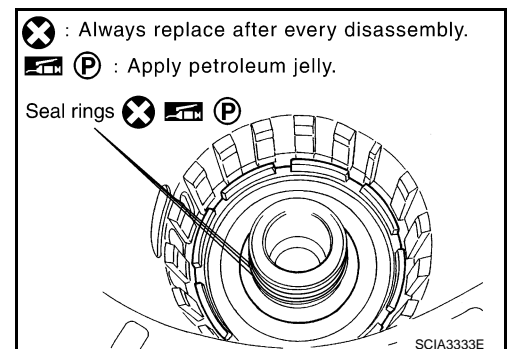

16. Install spring retainer and return spring in transmission case.

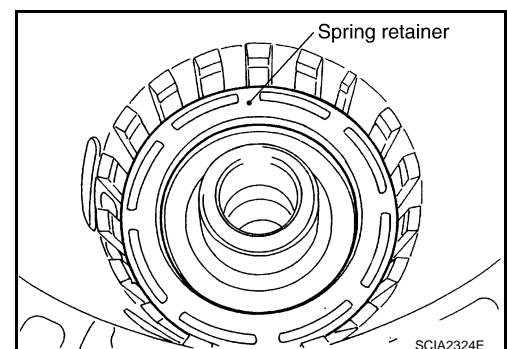

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

17. Set the SST on spring retainer and install snap ring (fixing spring retainer) in transmission case while compressing return spring.


CAUTION:

Securely assemble them using a flat-bladed screwdriver so that snap ring tension is slightly weak.

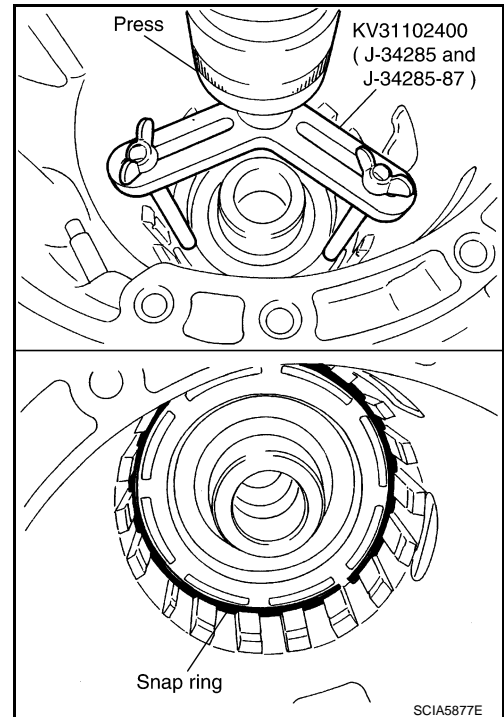

18. Install reverse brake drive plates, driven plates, dish plates and retaining plate in transmission case.

- 1 : Snap ring
- 2 : Retaining plate
- 3 : Drive plate
- 4 : Driven plate
- 5 : Dish plate
- Drive plate /
Driven plate : 6/6

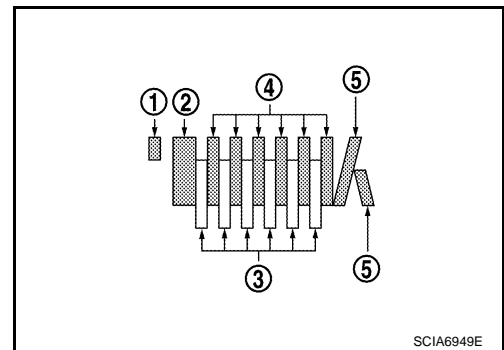

CAUTION:

Take care with order of plates.


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

- 19. Assemble N-spring.
- 20. Install reverse brake retaining plate in transmission case.

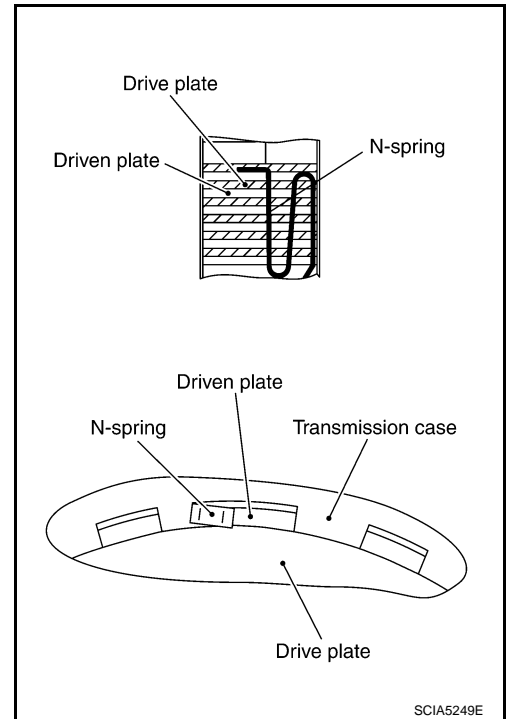

- 21. Install snap ring in transmission case.

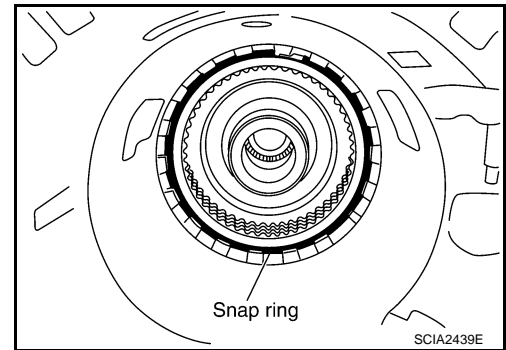


- 22. Measure clearance between retaining plate and snap ring. If not within specified clearance, select proper retaining plate.

Specified clearance "A"

Standard: [TM-354, "Reverse Brake"](#).


Retaining plate: Refer to [TM-354, "Reverse Brake"](#)

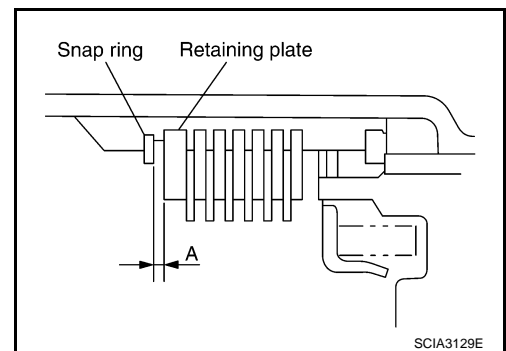

- 23. Install needle bearing to transmission case.

CAUTION:

Take care with the direction of needle bearing. Refer to [TM-289, "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings"](#).

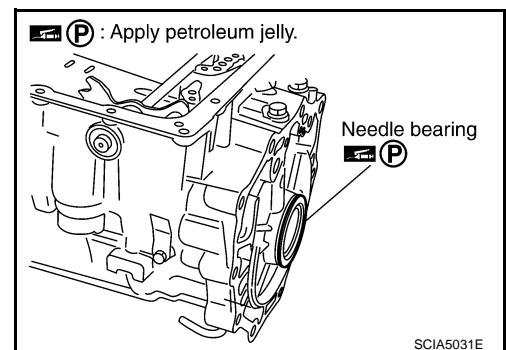

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

24. Install revolution sensor to transmission case. Tighten revolution sensor bolt to the specified torque.

CAUTION:


- Do not subject it to impact by dropping or hitting it.
- Do not disassemble.
- Do not allow metal filings, etc. to get on the sensor's front edge magnetic area.
- Do not place in an area affected by magnetism.

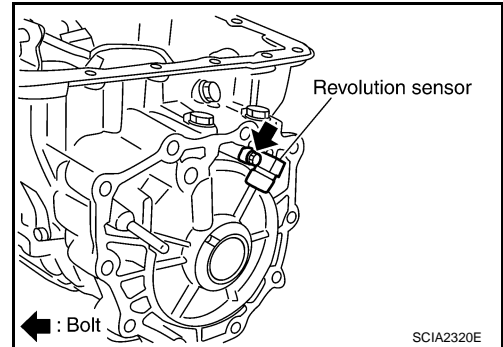


25. As shown in the figure, use the drift to drive rear oil seal into the rear extension (2WD) or adapter case (AWD) until it is flush.

CAUTION:


- Do not reuse rear oil seal.
- Apply ATF to rear oil seal.

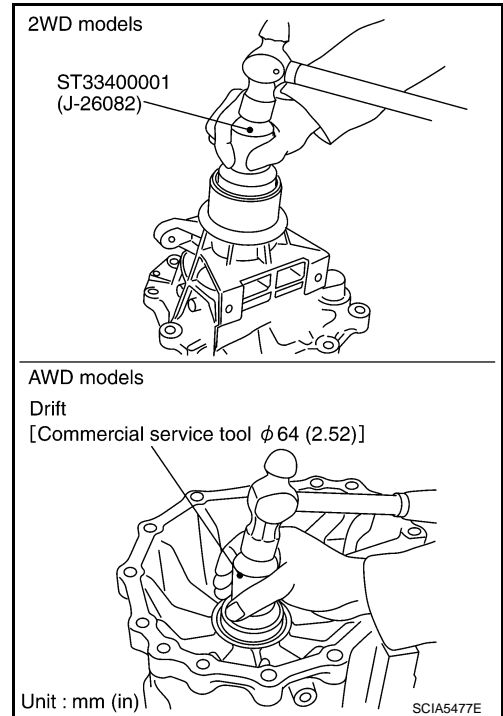

26. Install return spring (1) to parking pawl (2).

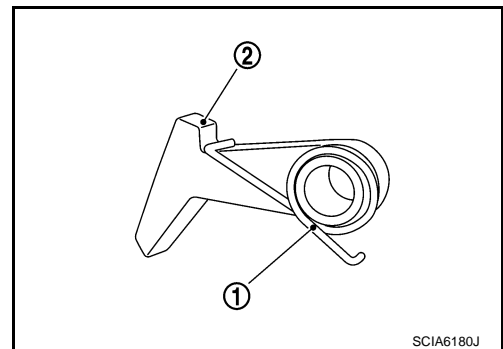

27. Install parking pawl (with return spring) and pawl shaft to rear extension (2WD) or adapter case (AWD).

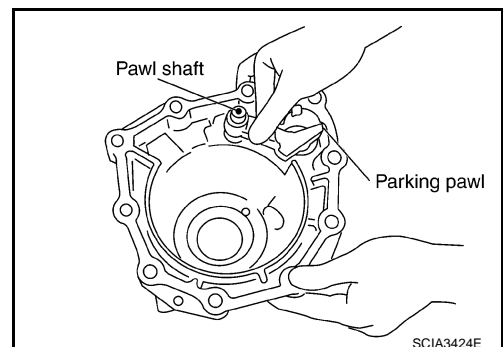

A
B
C
TM

E
F
G
H
I
J
K


L
M
N
O
P

TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


28. Install parking actuator support from rear extension (2WD) or adapter case (AWD).

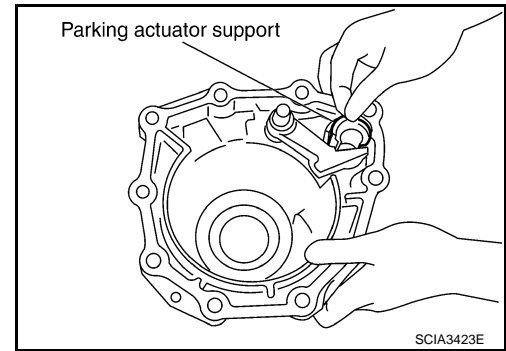

29. Install needle bearing (1) to rear extension (2WD) or adapter case (AWD).

CAUTION:


Take care with the direction of needle bearing. Refer to [TM-289, "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings"](#).

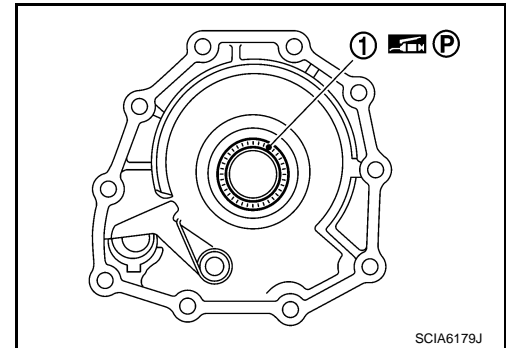


30. Install rear extension assembly (2WD) or adapter case assembly (AWD) according to the following procedures.

a. **2WD**

- i. Install seal rings (1) to output shaft.

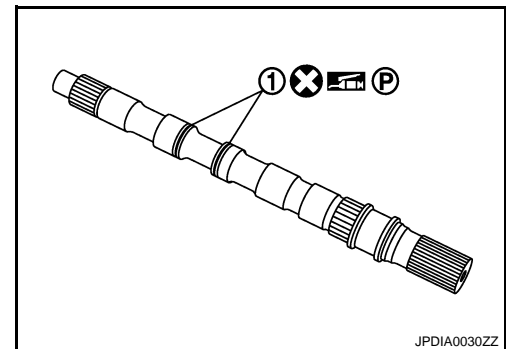

- ii. Install parking gear (1) to output shaft (2).

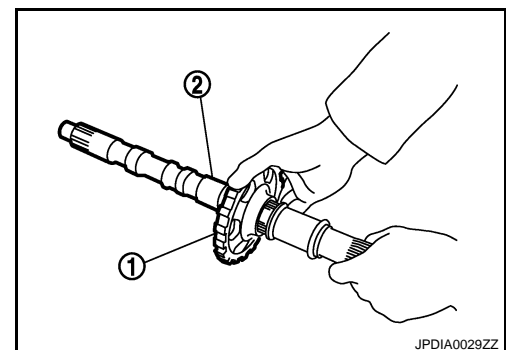

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


- iii. Install output shaft in transmission case.

CAUTION:

Be careful not to mistake front for rear because both sides looks similar. (Thinner end is front side.)

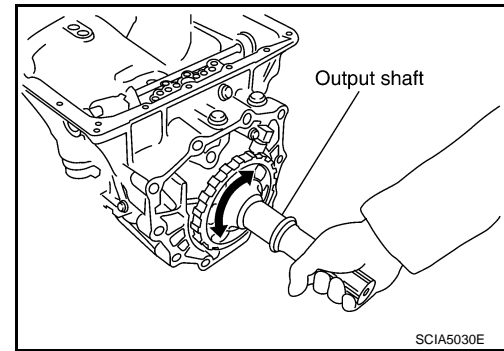

- iv. Install bearing race to output shaft.

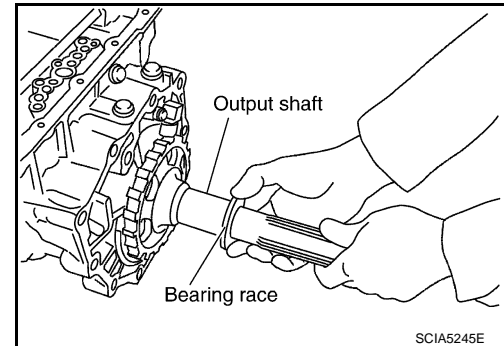

- v. Apply recommended sealant (Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-15. "Recommended Chemical Products and Sealants."](#)) to rear extension assembly as shown in the figure.

A : Start and finish point shall be in the center of two bolts.


B : 3 – 5 mm (0.12 – 0.20 in)

Sealant width (C) : 1.0 – 2.0 mm (0.04 – 0.08 in)

Sealant height (C) : 0.4 – 1.0 mm (0.016 – 0.04 in)

CAUTION:


Completely remove all moisture, oil and old sealant, etc. from the transmission case and rear extension assembly mounting surfaces.

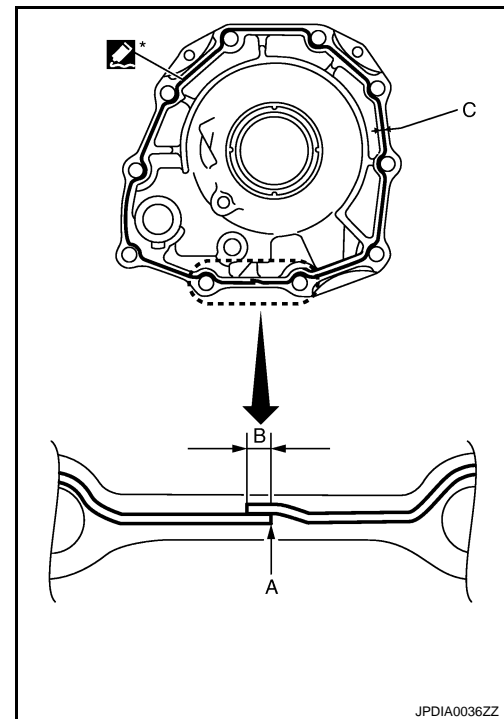

- vi. Install rear extension assembly to transmission case.

CAUTION:

Insert the tip of parking rod between the parking pawl and the parking actuator support when assembling the rear extension assembly.

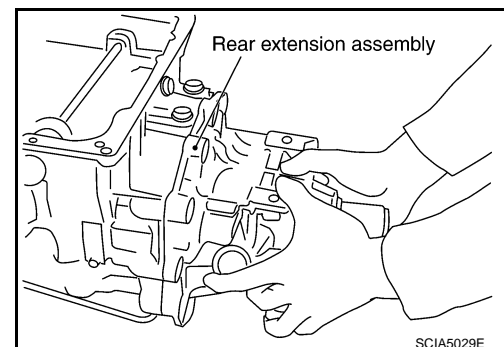

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

vii. Tighten rear extension assembly bolts to the specified torque.


1 : Self-sealing bolt

A : Bolt

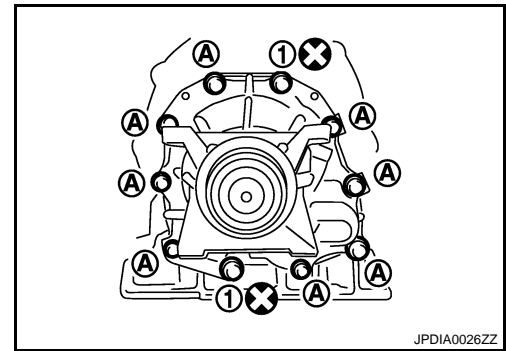


b. **AWD**

i. Install seal rings (1) to output shaft.

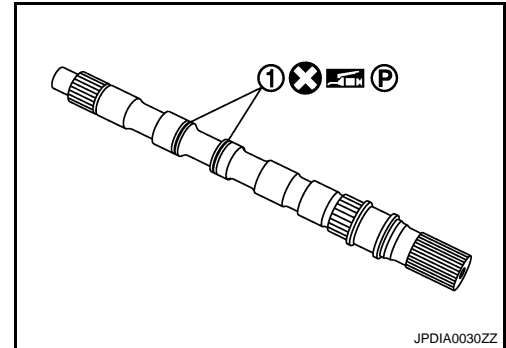


ii. Install parking gear (1) to output shaft (2).

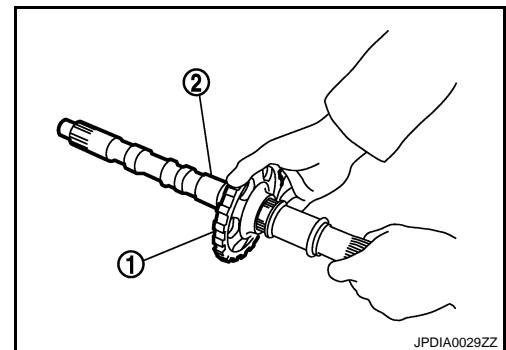

iii. Install output shaft in transmission case.

CAUTION:

Be careful not to mistake front for rear because both sides looks similar. (Thinner end is front side.)

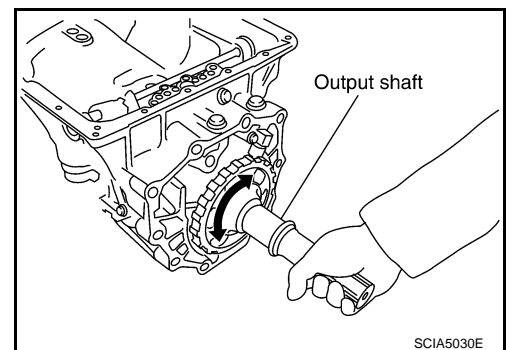


TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


iv. Install bearing race to output shaft.

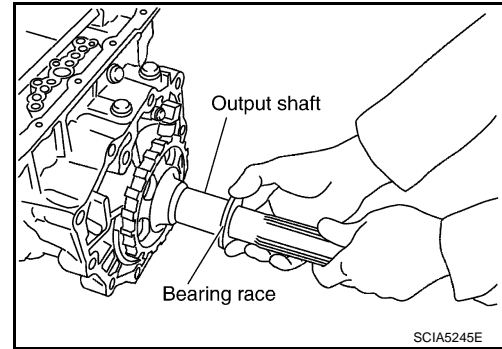

v. Install gasket onto transmission case.

CAUTION:

- Completely remove all moisture, oil and old gasket, etc. from the transmission case and adapter case assembly mounting surfaces.
- Do not reuse gasket.

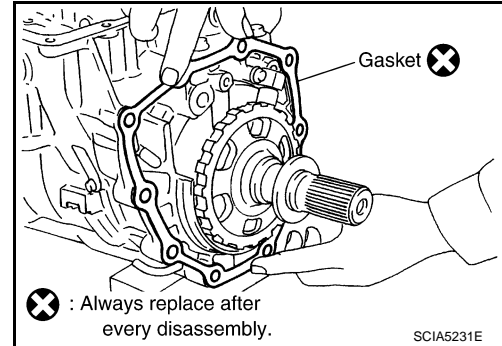


⊗ : Always replace after every disassembly.

vi. Install adapter case assembly to transmission case.

CAUTION:


Insert the tip of parking rod between the parking pawl and the parking actuator support when assembling the adapter case assembly.

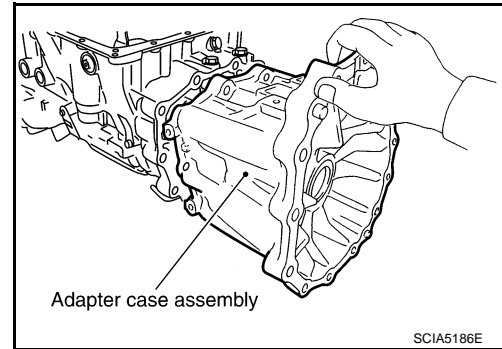

vii. Tighten adapter case assembly bolts (1) to the specified torque. [With bracket (2).]

3 : Self-sealing bolt

← : Bolt

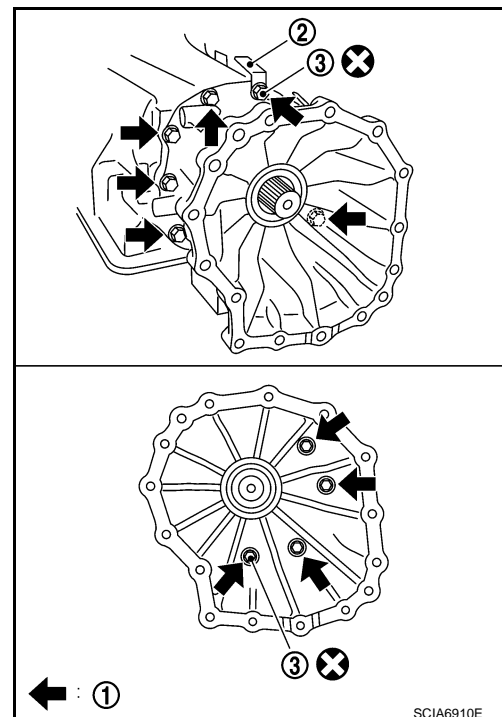

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

31. Install needle bearing in drum support.

CAUTION:


Take care with the direction of needle bearing. Refer to [TM-289](#), "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings".

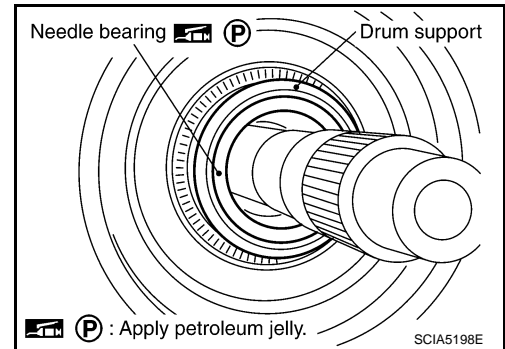


32. Install direct clutch assembly in reverse brake.

CAUTION:


Make sure that drum support edge surface and direct clutch inner boss edge surface come to almost same place.

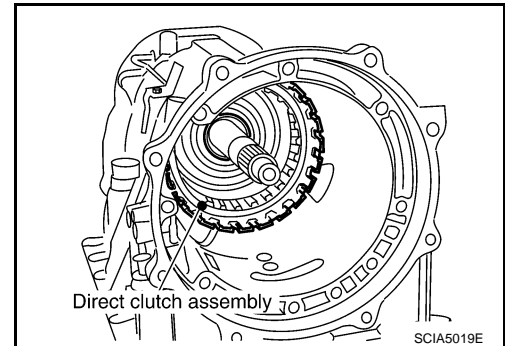


33. Install high and low reverse clutch assembly in direct clutch.

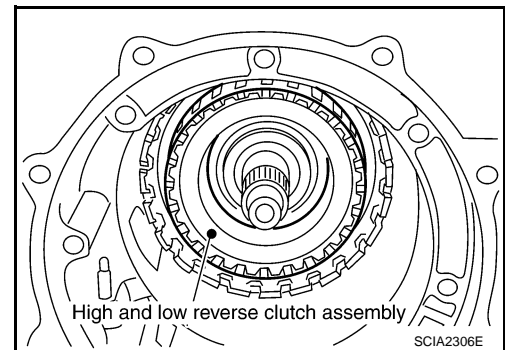

34. Using a flat-bladed screwdriver, align the drive plate.

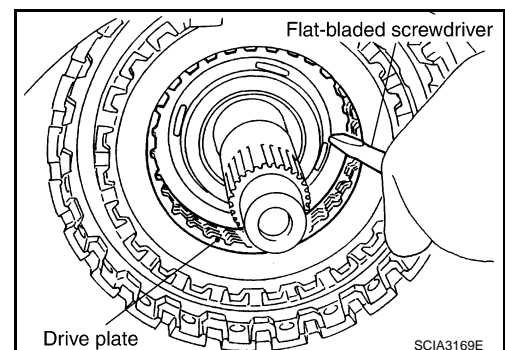

35. Install high and low reverse clutch hub, mid sun gear assembly and rear sun gear assembly as a unit.

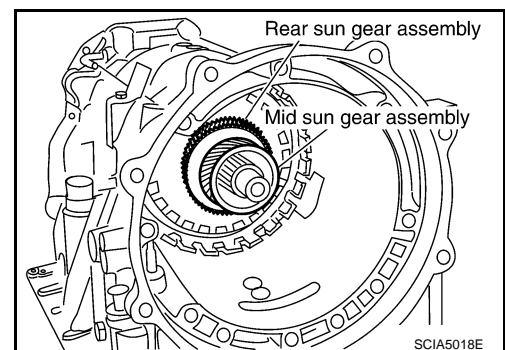


TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

CAUTION:


Make sure that portion "A" of high and low reverse clutch drum protrudes approximately 2 mm (0.08 in) beyond portion "B" of rear sun gear.

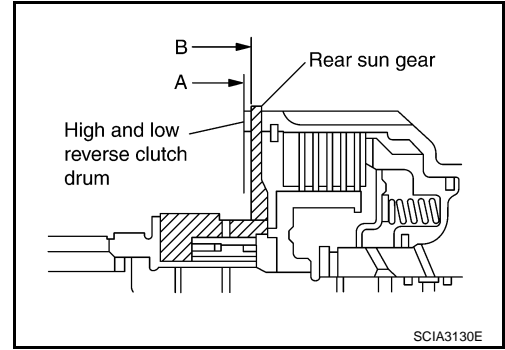

36. Install needle bearing in rear carrier assembly.

CAUTION:


Take care with the direction of needle bearing. Refer to [TM-289, "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings"](#).

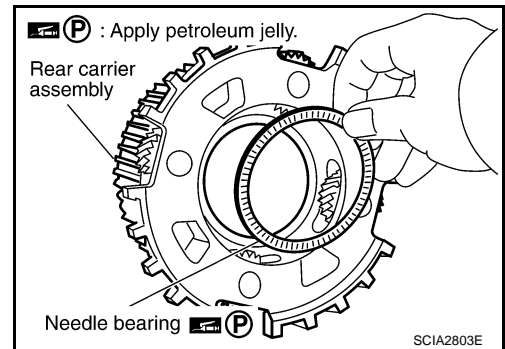


37. Install bearing race in rear carrier assembly.

CAUTION:

Take care with the direction of needle bearing. Refer to [TM-289, "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings"](#).

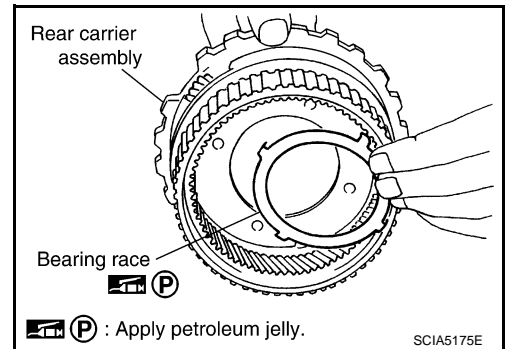

38. Install rear carrier assembly in direct clutch drum.

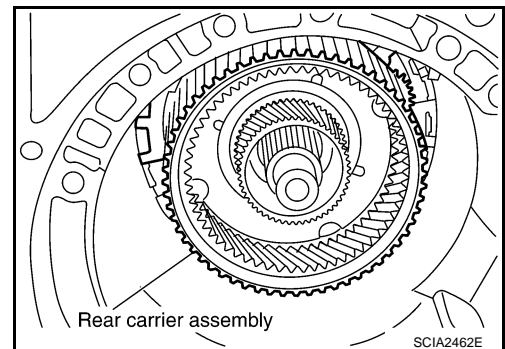

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

39. Install needle bearing (rear side) to mid carrier assembly.

CAUTION:


Take care with the direction of needle bearing. Refer to [TM-289](#), "[Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings](#)".

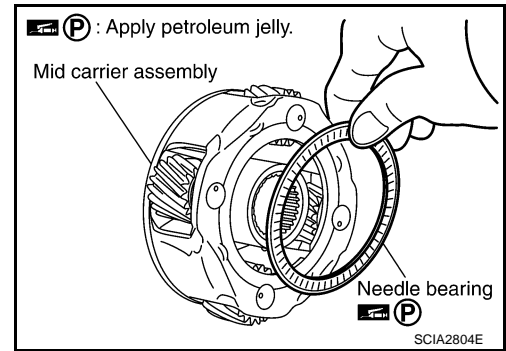


40. Install needle bearing (front side) to mid carrier assembly.

CAUTION:


Take care with the direction of needle bearing. Refer to [TM-289](#), "[Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings](#)".

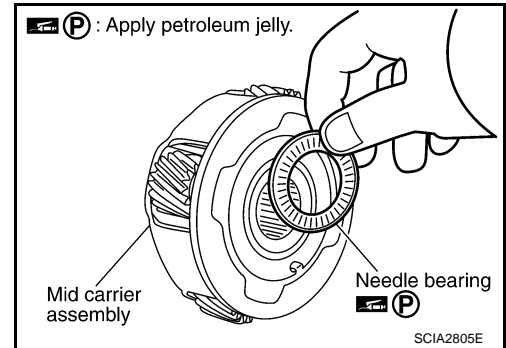


41. Install mid carrier assembly in rear carrier assembly.

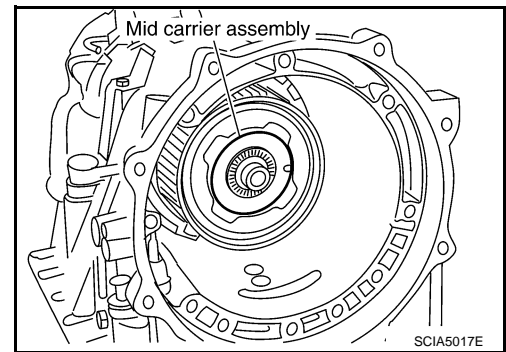

42. Install front carrier assembly, input clutch assembly and rear internal gear as a unit.

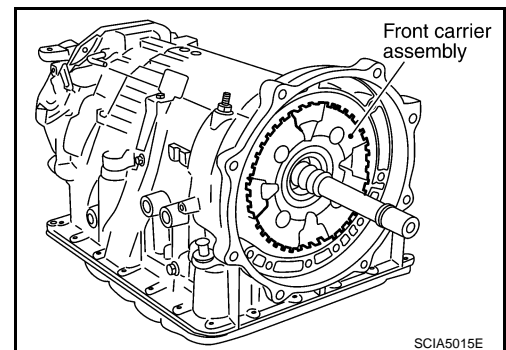

43. Install seal rings in input clutch assembly.

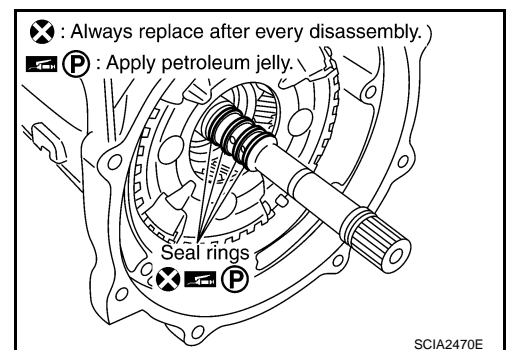


TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


44. Install band servo anchor end pin and lock nut in transmission case.

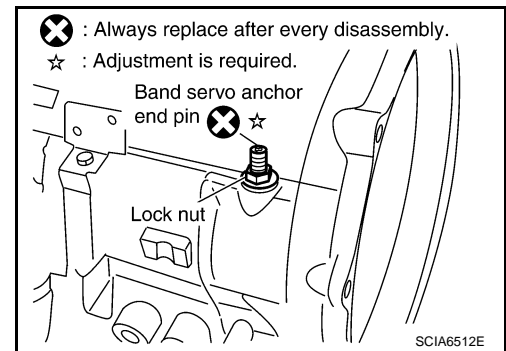

45. Install brake band in transmission case.

CAUTION:


Assemble it so that identification to avoid incorrect installation faces servo side.

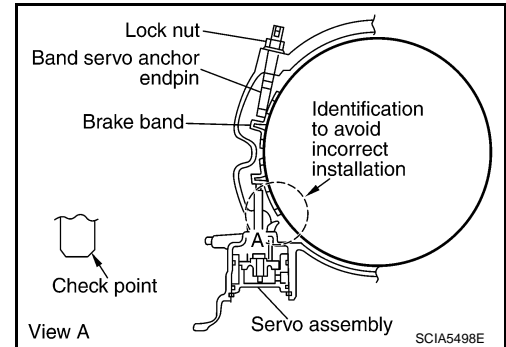

46. Install front sun gear to front carrier assembly.

CAUTION:


Apply ATF to front sun gear bearing and 3rd one-way clutch end bearing.

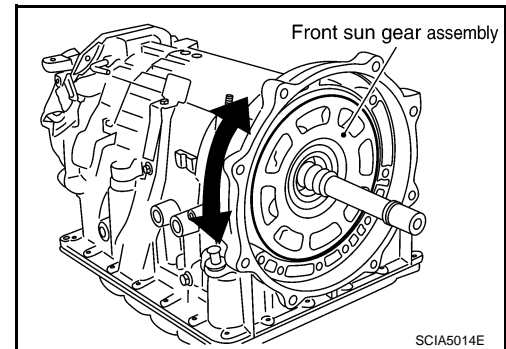


47. Install needle bearing to front sun gear.

CAUTION:

Take care with the direction of needle bearing. Refer to [TM-289, "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings"](#).

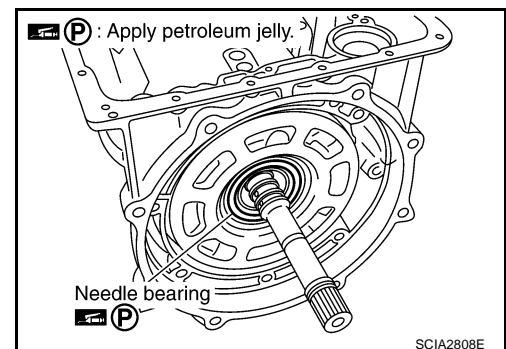

48. Adjust brake band tilting using a clip so that brake band contacts front sun gear drum evenly.

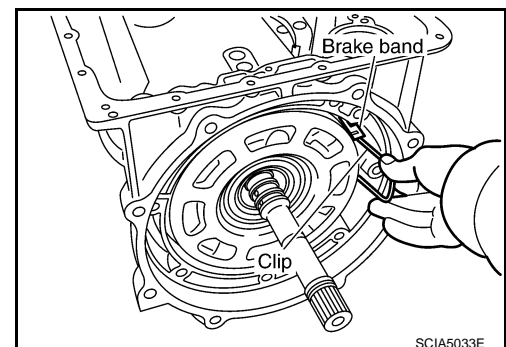

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


49. Adjust brake band.
 - a. Loosen lock nut.
 - b. Tighten band servo anchor end pin to specified torque.

 : 5.0 N·m (0.51 kg-m, 44 in-lb)


- c. Back of band servo anchor end pin three turns.
 - d. Holding band servo anchor end pin, tighten lock nut to the specified torque.

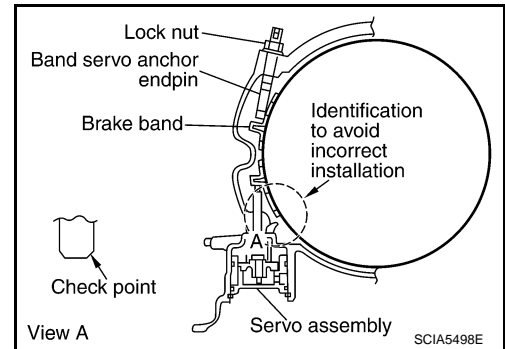


50. Adjustment of total end play.
 - Measure clearance between front sun gear and bearing race for oil pump cover.
 - Select proper thickness of bearing race so that end play is within specifications.

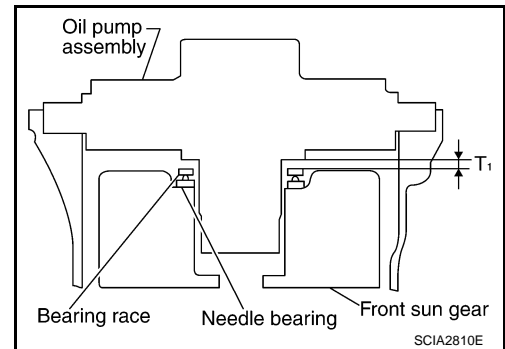

- a. Measure dimensions "K" and "L" and then calculate dimension "J".

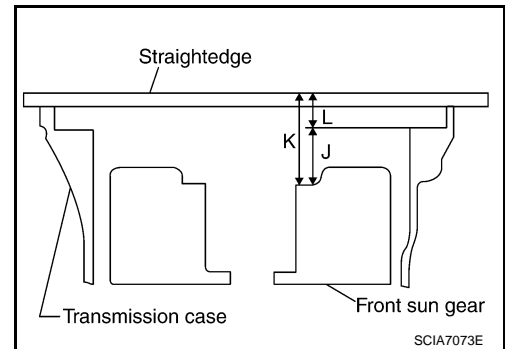

- i. Measure dimension "K".

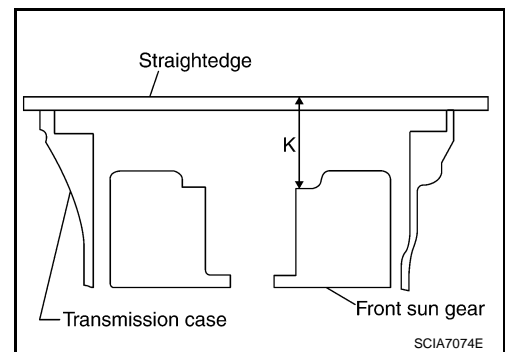

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


- ii. Measure dimension "L".
- iii. Calculate dimension "J".

"J" : Distance between oil pump fitting surface of transmission case and needle bearing mating surface of front sun gear.


$$J = K - L$$

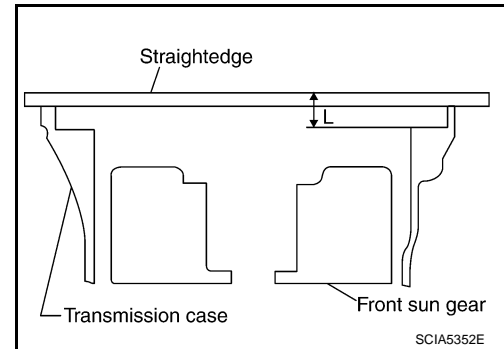


- b. Measure dimensions "M1" and "M2" and then calculate dimension "M".

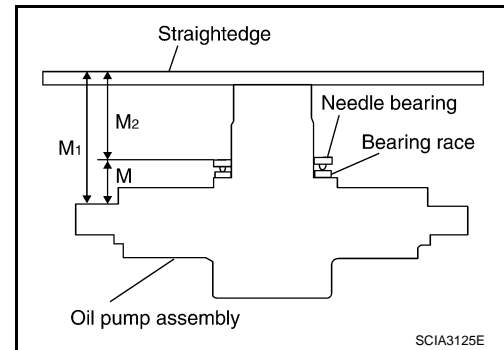


- i. Place bearing race and needle bearing on oil pump assembly.

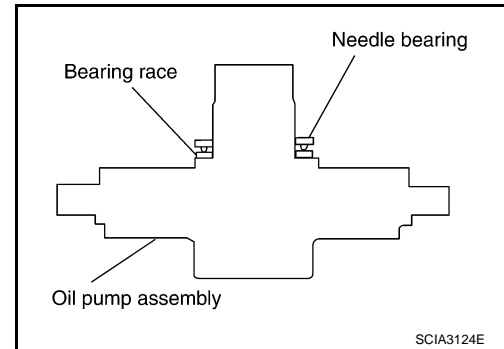

- ii. Measure dimension "M1".

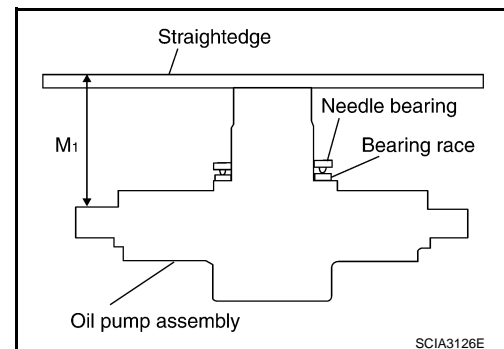

- iii. Measure dimension "M2".

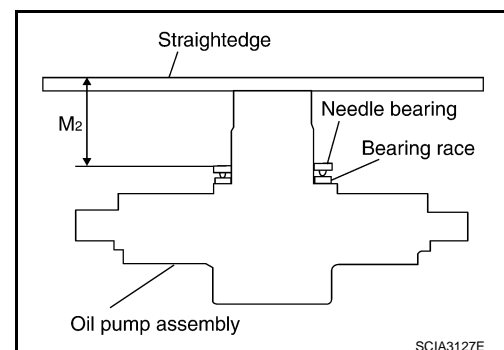

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

iv. Calculate dimension "M".

"M" : Distance between transmission case fitting surface of oil pump and needle bearing on oil pump.

$$M = M_1 - M_2$$

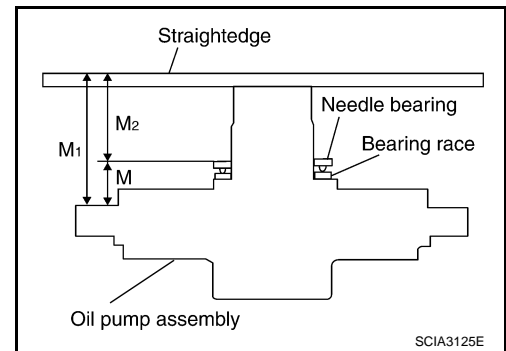


c. Adjust total end play "T₁".

$$T_1 = J - M$$


Total end play "T₁" : Refer to [TM-354, "Total End Play"](#).

- Select proper thickness of bearing race so that total end play is within specifications.


Bearing races : Refer to [TM-354, "Total End Play"](#).

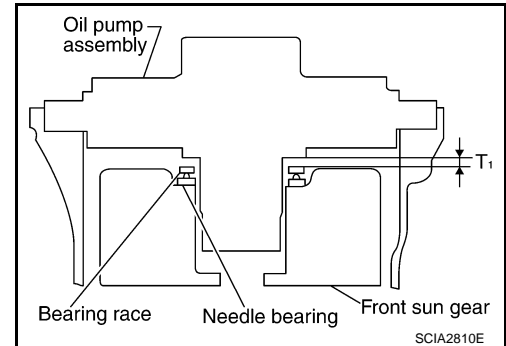

51. Install O-ring to oil pump assembly.

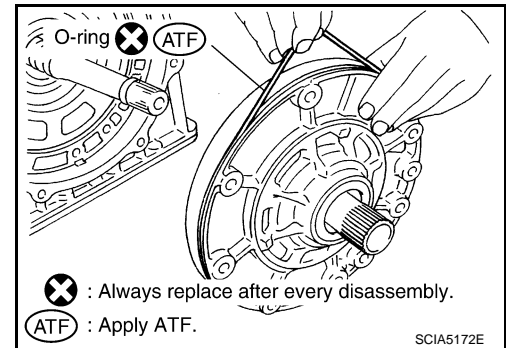


52. Install bearing race to oil pump assembly.

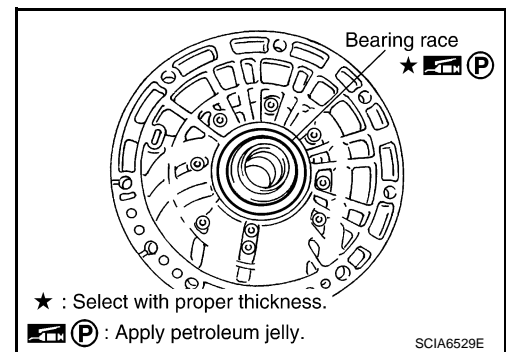

53. Install oil pump assembly in transmission case.

CAUTION:
Apply ATF to oil pump bearing.

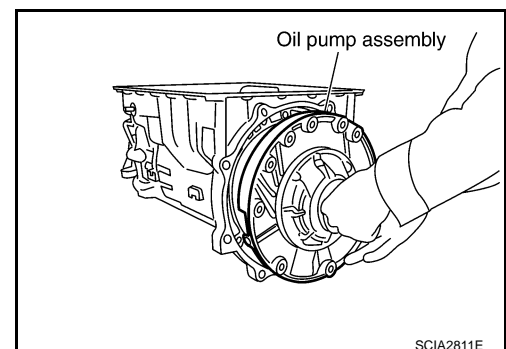

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

54. Apply recommended sealant (Genuine RTV Silicone Sealant or equivalent. Refer to [GI-15, "Recommended Chemical Products and Sealants"](#).) to oil pump assembly as shown in the figure.

CAUTION:


Completely remove all moisture, oil and old sealant, etc. from the oil pump mounting bolts and oil pump mounting bolt mounting surfaces.

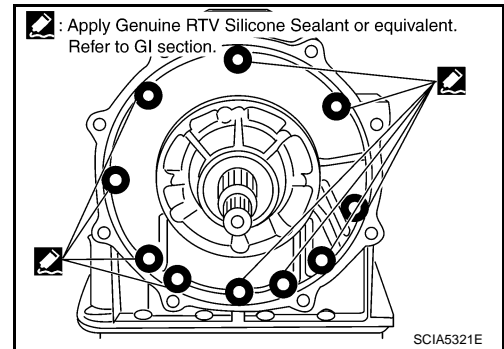


55. Tighten oil pump bolts to the specified torque.

CAUTION:


Apply ATF to oil pump bushing.

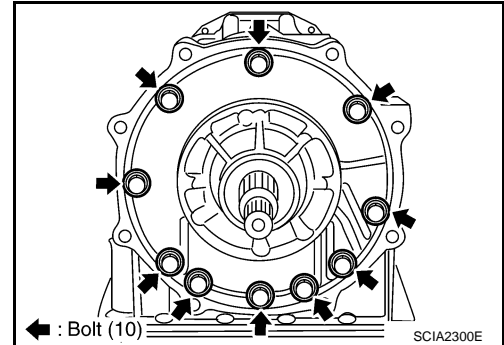


56. Install O-ring to input clutch assembly.

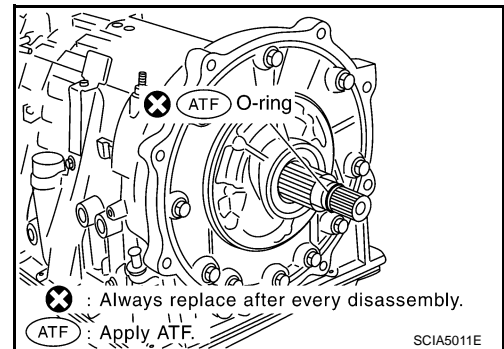

57. Install converter housing to transmission case, and then tighten converter housing bolts (A) and self-sealing bolt (B) to the specified torque.

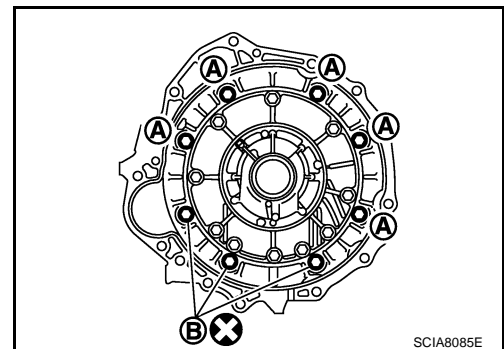

58. Make sure that brake band (A) does not close turbine revolution sensor hole (B).

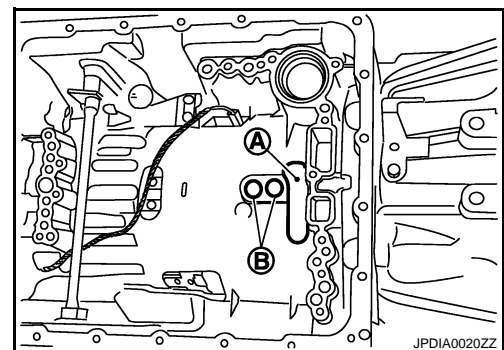


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


59. Connect TCM connector (A) and park/neutral position switch connector (B).

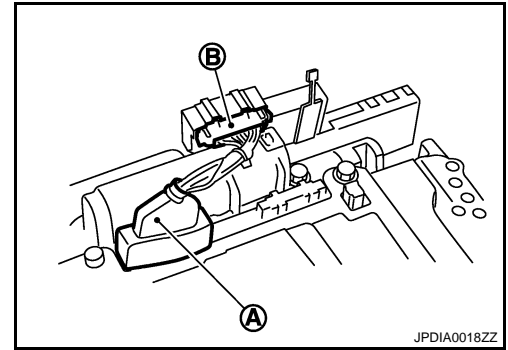


60. Install A/T assembly harness connector (A) to control valve with TCM.

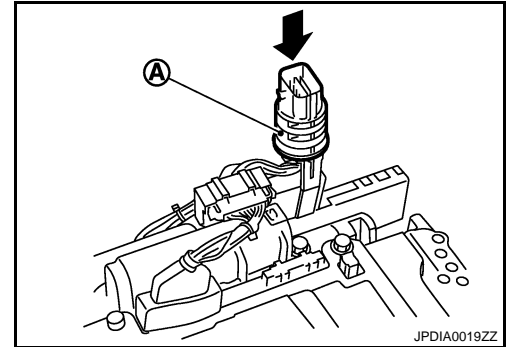


61. Connect TCM connectors (A) and (B).

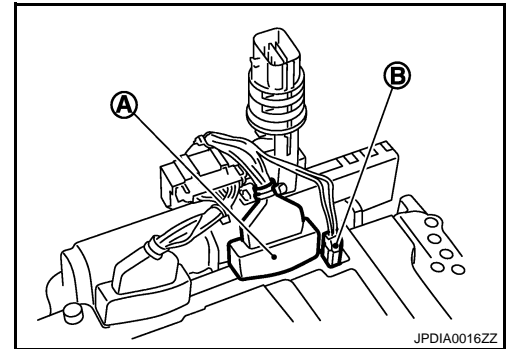

62. Install O-ring (1) to A/T assembly harness connector (A).

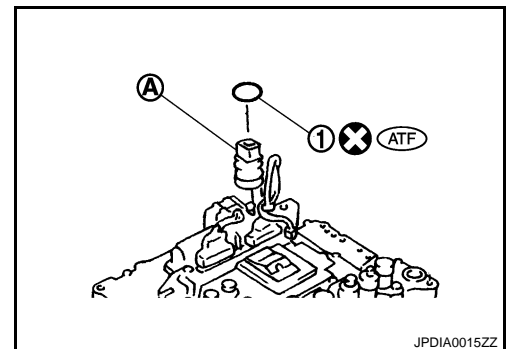

63. Install bracket (1) to A/T fluid temperature sensor 2 (2).

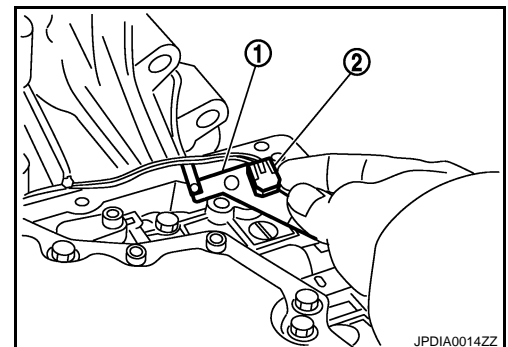

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

64. Install A/T fluid temperature sensor 2 (1) [with bracket (2)] in control valve with TCM. Tighten A/T fluid temperature sensor 2 bolt to the specified torque.

CAUTION:

Adjust bolt hole of bracket to bolt hole of control valve.

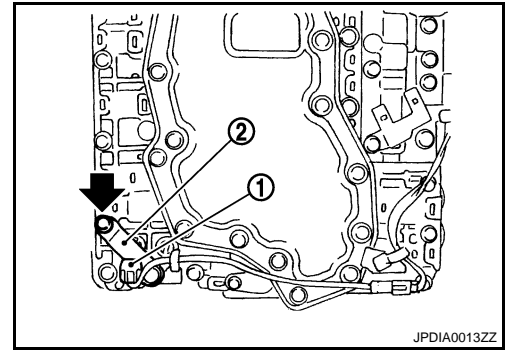


65. Install control valve with TCM in transmission case.

CAUTION:


• Make sure that turbine revolution sensor securely installs turbine revolution sensor hole (B).

A : Brake band

- Hang down revolution sensor harness toward outside so as not to disturb installation of control valve with TCM.
- Adjust A/T assembly harness connector of control valve with TCM to terminal hole of transmission case.

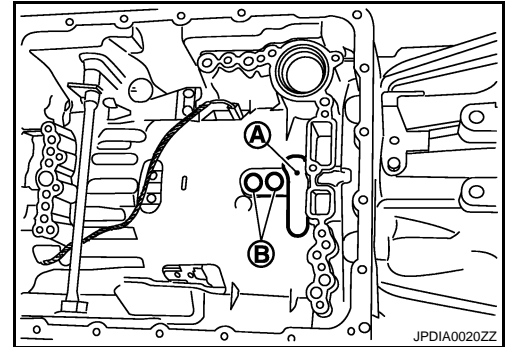


• Assemble it so that manual valve cutout is engaged with manual plate projection.

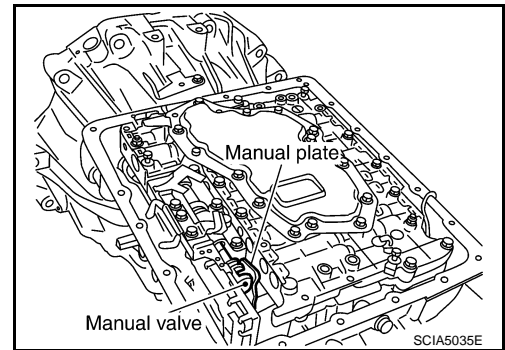

66. Install bolts A, B and C to control valve with TCM.

← : Front

Bolt symbol	Length mm (in)	Number of bolts
A	42 (1.65)	5
B	55 (2.17)	6
C	40 (1.57)	1

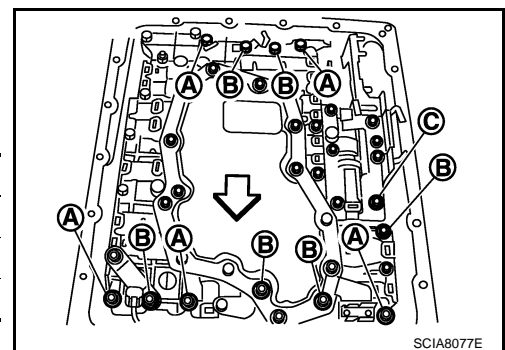

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


67. Tighten bolt 1, 2 and 3 temporarily to prevent dislocation. After that tighten them in order (1 → 2 → 3), and then tighten other bolts. Tighten control valve bolts to the TCM with specified torque.

⇐ : Front

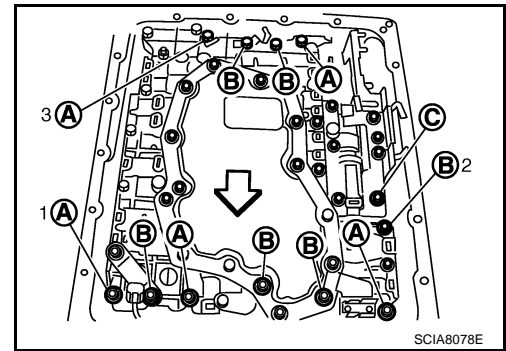


68. Connect A/T fluid temperature sensor 2 connector (A).

69. Engage terminal cord assembly and A/T fluid temperature sensor 2 harness with terminal clips (⇐).

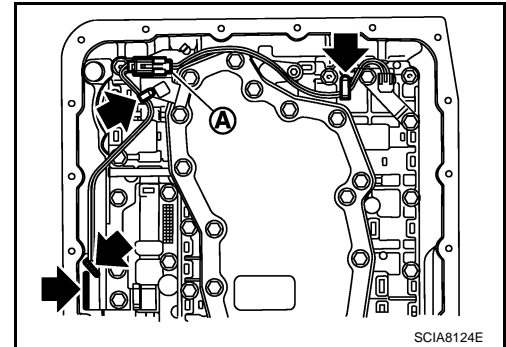


70. Connect revolution sensor connector (A).

71. Engage revolution sensor harness with terminal clip (⇐).

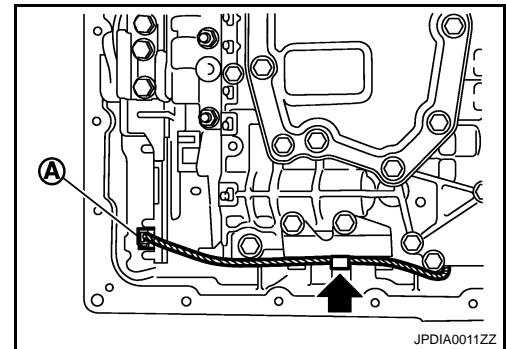


72. Pull down A/T assembly harness connector.

CAUTION:
Be careful not to damage connector.

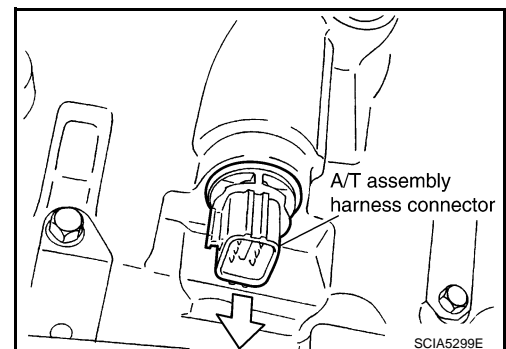

73. Install snap ring to A/T assembly harness connector.

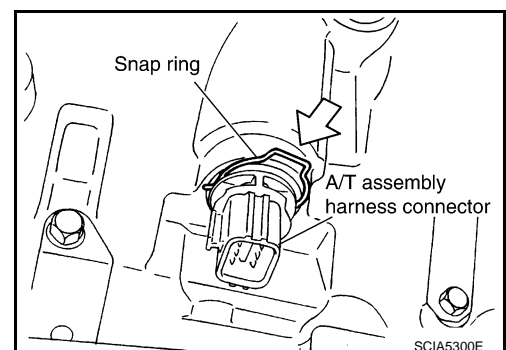


TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

74. Install magnets (1) in oil pan.

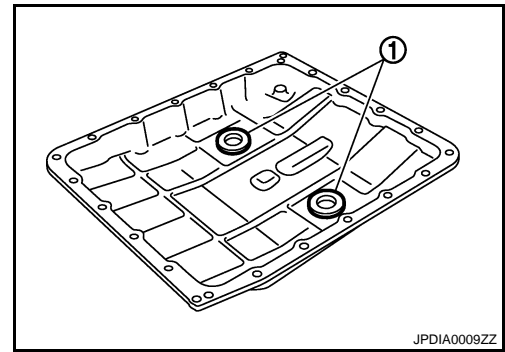

JPDIA0009ZZ

75. Install oil pan gasket to transmission case.

CAUTION:

- Do not reuse oil pan gasket.
- Install it in the direction to align hole positions.
- Complete remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.


76. Install oil pan (2) and clips (1) to transmission case.

⇐ : Front

◀ : Oil pan mounting bolt

CAUTION:

- Install it so that drain plug (3) comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Completely remove all moisture, oil and old gasket, etc. from oil pan mounting surface.

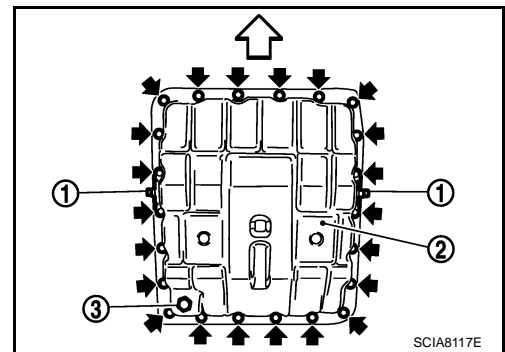

SCIA8117E

77. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them. Tighten oil pan mounting bolts to the specified torque.

⇐ : Front

CAUTION:

Do not reuse oil pan mounting bolts.


78. Install drain plug to oil pan. Tighten drain plug to the specified torque.

CAUTION:


Do not reuse drain plug gasket.

79. Pour ATF into torque converter.

- Approximately 2 liter (2-1/8 US qt, 1-3/4 Imp qt) of ATF is required for a new torque converter.
- When reusing old torque converter, add the same amount of ATF as was drained.

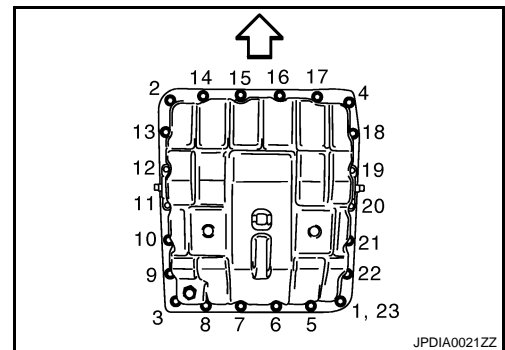

JPDIA0021ZZ

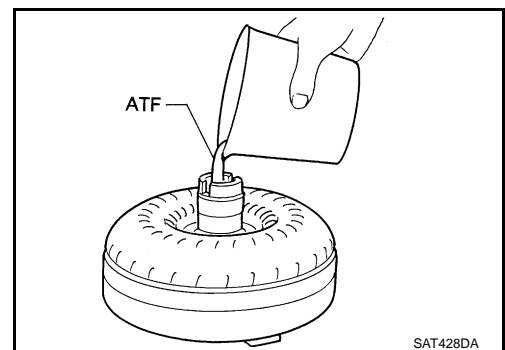

SAT428DA

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

80. Install torque converter while aligning notches of torque converter with notches of oil pump.

CAUTION:

Install torque converter while rotating it.

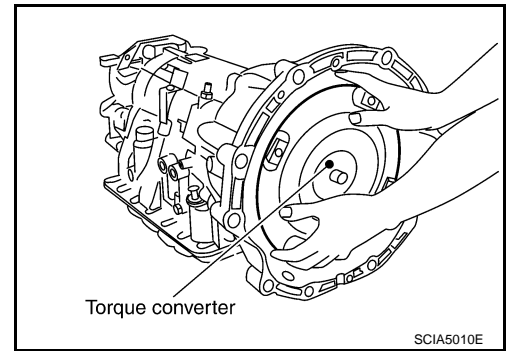


81. Measure distance (A) to make sure that torque converter is in proper position.

B : Scale

C : Straightedge

Distance (A) : Refer to [TM-354, "Torque Converter"](#).

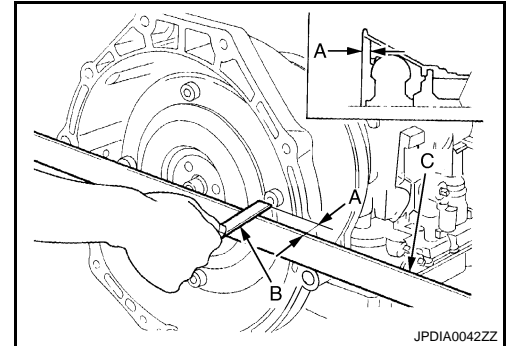


Inspection

INFOID:000000000957191

INSPECTION AFTER REMOVAL

- Check foreign materials in oil pan to help determine causes of malfunction. If the ATF is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.
- **If frictional material is detected, perform A/T fluid cooler cleaning. Refer to [TM-220, "Cleaning"](#).**

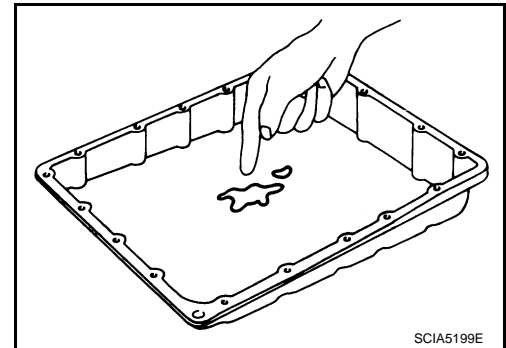


TRANSMISSION ASSEMBLY

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

- Check torque converter one-way clutch using a check tool as shown at figure.
1. Insert a check tool into the groove of bearing support built into one-way clutch outer race.
 2. When fixing bearing support with a check tool, rotate one-way clutch spline using a screwdriver.
 3. Make sure that inner race rotates clockwise only. If not, replace torque converter assembly.

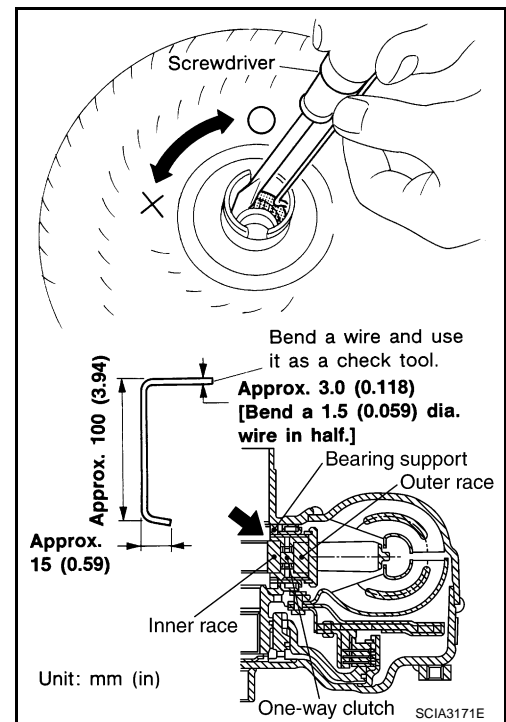

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

OIL PUMP


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

OIL PUMP

Exploded View

INFOID:000000000957192

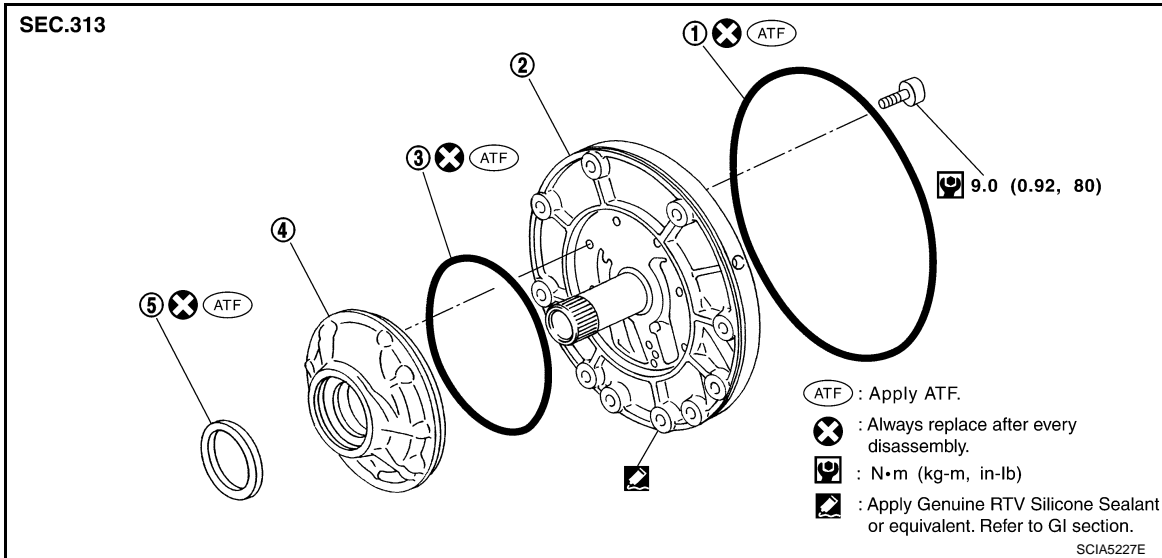


- | | | |
|---------------------|------------------------------|-----------|
| 1. O-ring | 2. Oil pump cover | 3. O-ring |
| 4. Oil pump housing | 5. Oil pump housing oil seal | |

Disassembly

INFOID:000000000957193


1. Remove oil pump housing from oil pump cover.

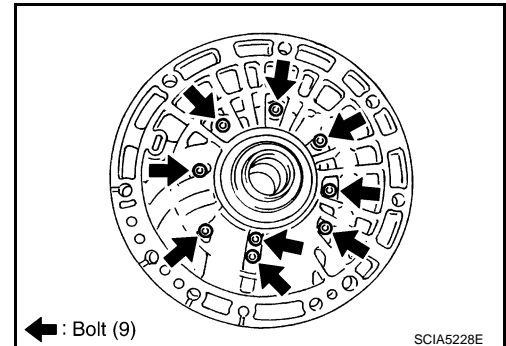

2. Remove oil pump housing oil seal using a flat-bladed screwdriver.

CAUTION:

Be careful not to scratch oil pump housing.

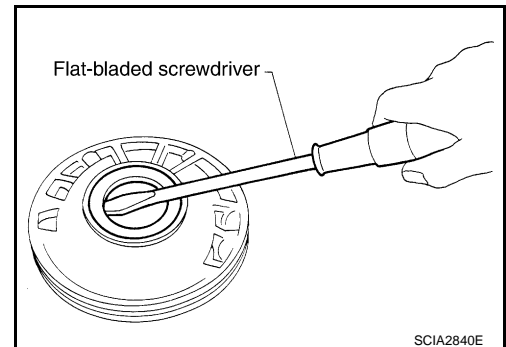


OIL PUMP


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

3. Remove O-ring from oil pump housing.

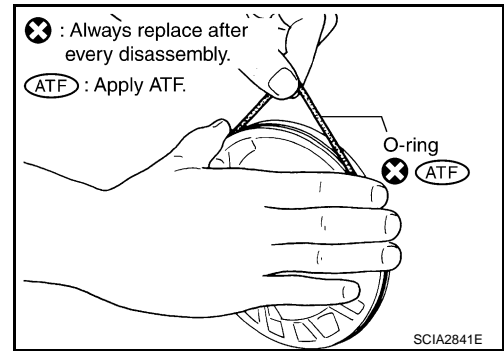


4. Remove O-ring from oil pump cover.

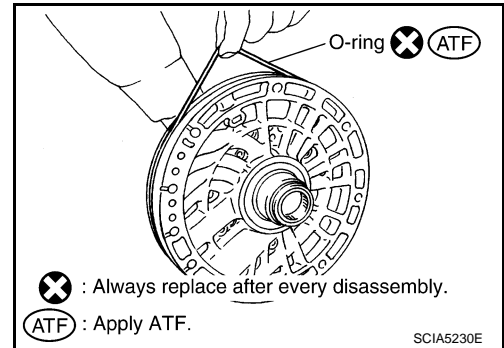


Assembly

INFOID:000000000957194

1. Install O-ring to oil pump cover.

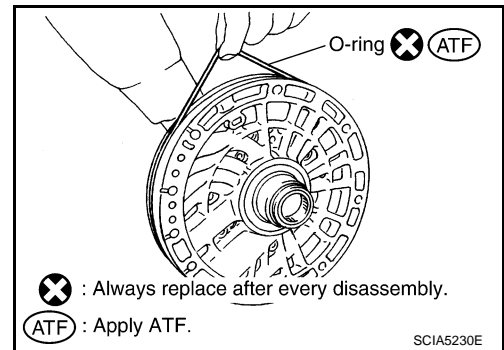

2. Install O-ring to oil pump housing.

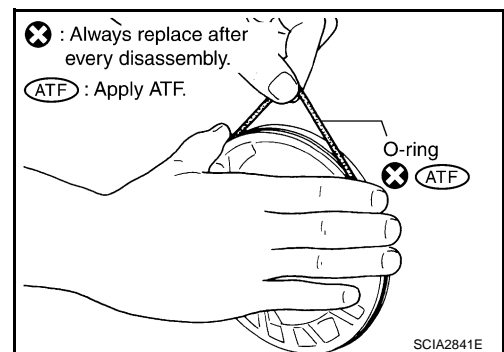

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

OIL PUMP


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


- Using the drift, install oil pump housing oil seal to the oil pump housing until it is flush.

CAUTION:

- Do not reuse oil seal.
- Apply ATF to oil seal.

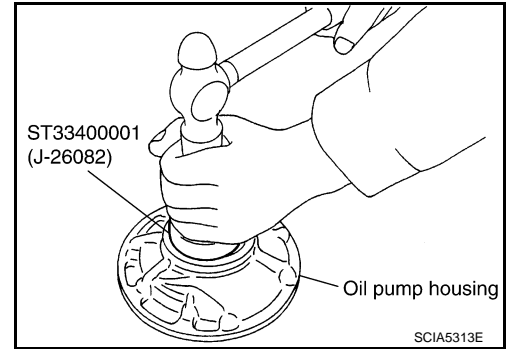

- Install oil pump housing to oil pump cover.
- Tighten bolts (←) to the specified torque in numerical order shown in the figure after temporarily tightening them.

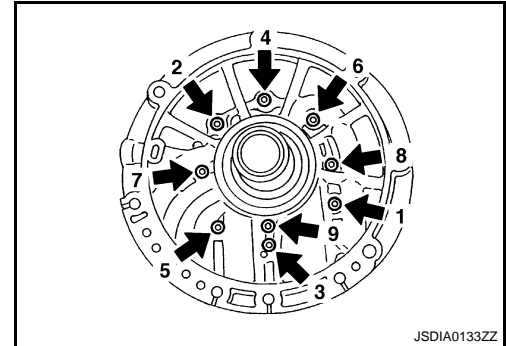

FRONT SUN GEAR, 3RD ONE-WAY CLUTCH


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

FRONT SUN GEAR, 3RD ONE-WAY CLUTCH

Exploded View

INFOID:000000000957195

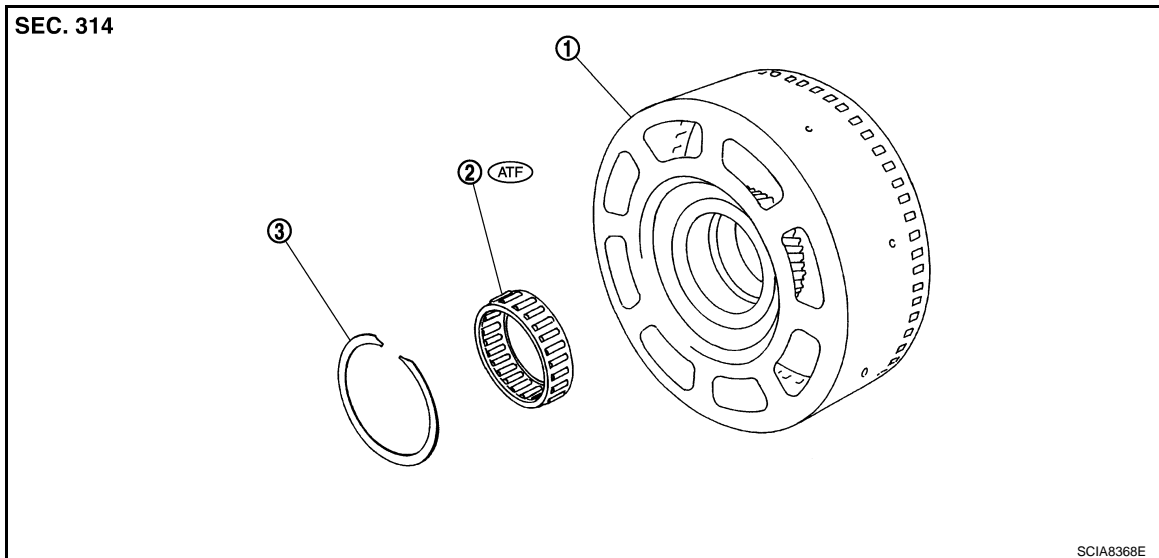


1. Front sun gear
2. 3rd one-way clutch
3. Snap ring

Refer to [GI-4, "Components"](#) for symbols in the figure.


Disassembly

INFOID:000000000957196

1. Using a flat-bladed screwdriver, remove snap ring from front sun gear.

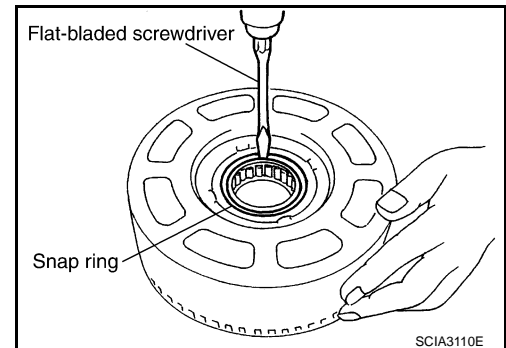

2. Remove 3rd one-way clutch from front sun gear.

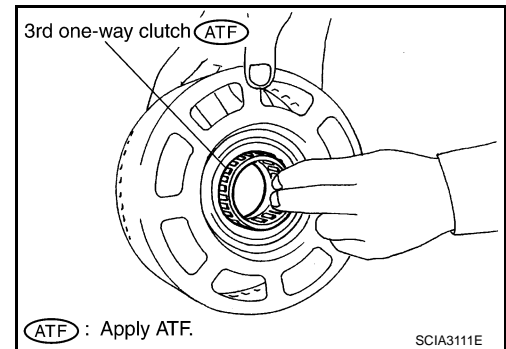

Assembly

INFOID:000000000957197


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

FRONT SUN GEAR, 3RD ONE-WAY CLUTCH


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

1. Install 3rd one-way clutch in front sun gear.

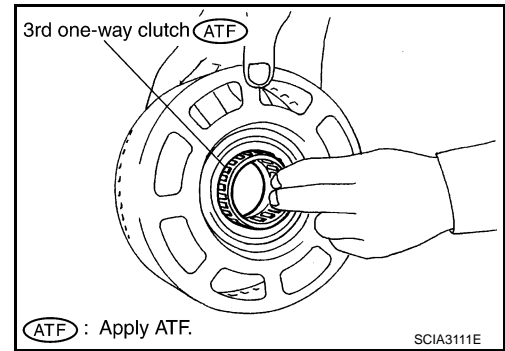


2. Using a flat-bladed screwdriver, install snap ring in front sun gear.

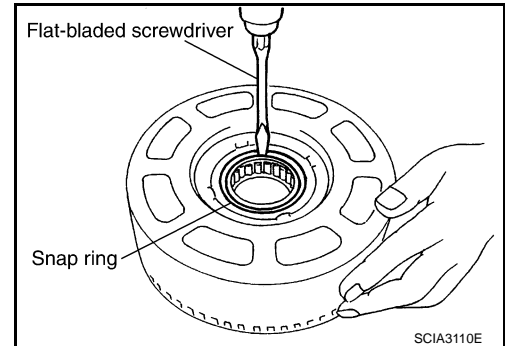

3. Check operation of 3rd one-way clutch.
 - a. Hold oil pump assembly and turn front sun gear.
 - b. Check 3rd one-way clutch for correct locking and unlocking directions.

CAUTION:

If not as shown in figure, check installation direction of 3rd one-way clutch.

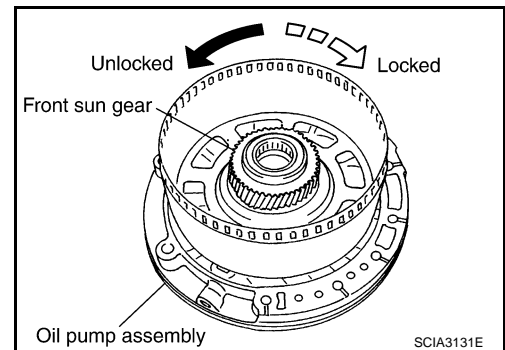

Inspection

- 3rd One-way Clutch
Check frictional surface for wear or damage.
CAUTION:
If necessary, replace the 3rd one-way clutch.
- Front Sun Gear Snap Ring
Check for deformation, fatigue or damage.
CAUTION:
If necessary, replace the snap ring.
- Front Sun Gear
Check for deformation, fatigue or damage.
CAUTION:
If necessary, replace the front sun gear.

INFOID:000000000957198

FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR

Exploded View

INFOID:000000000957199

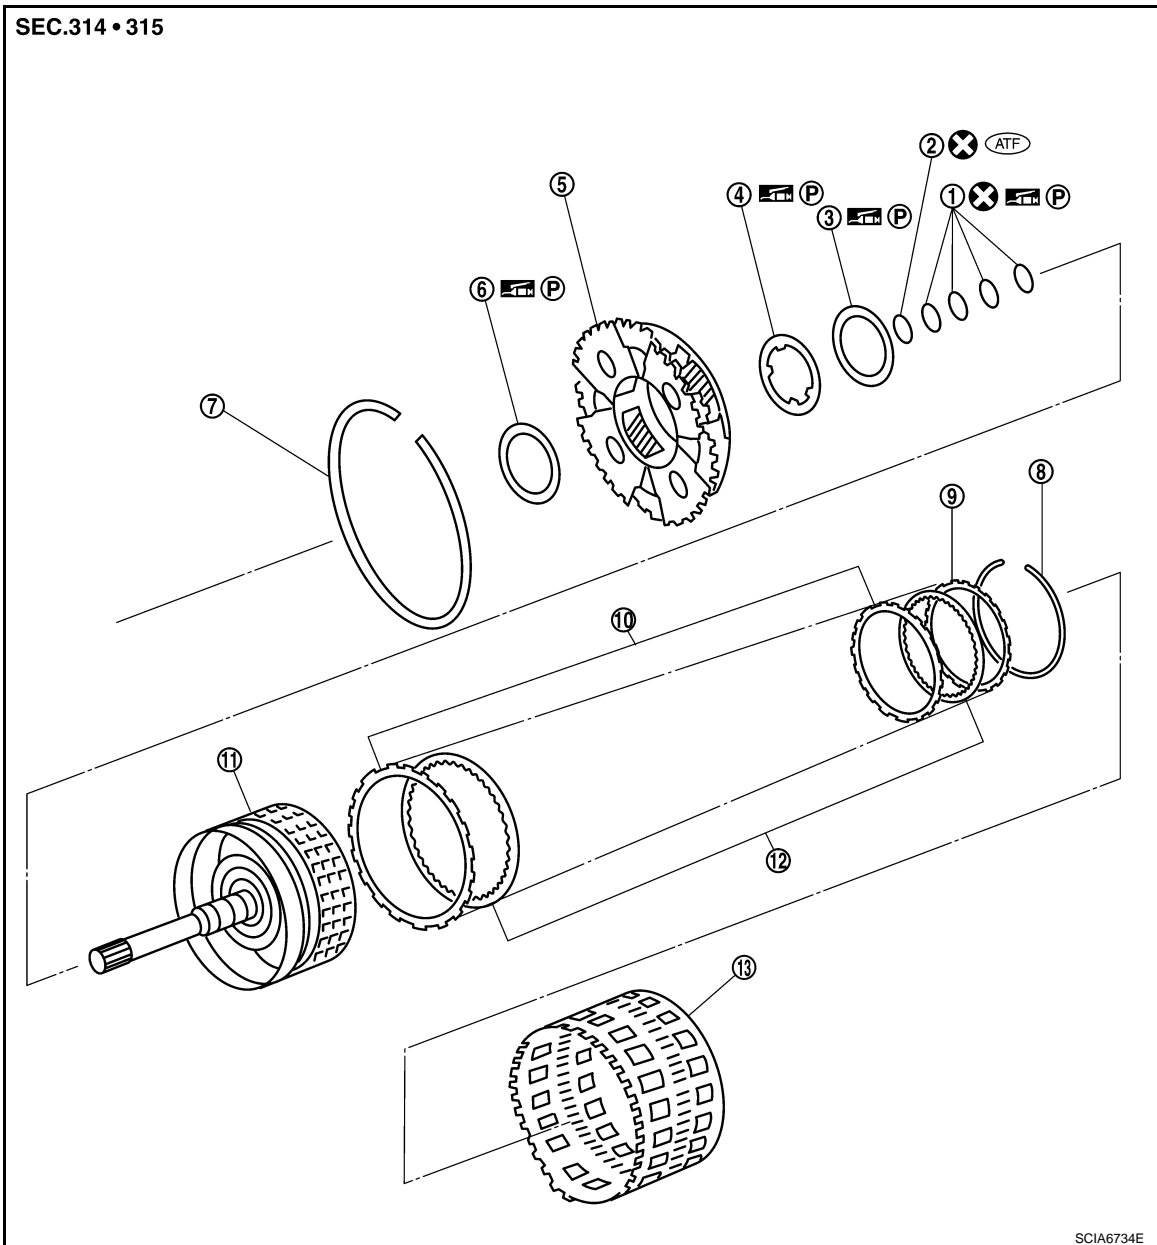

- | | | |
|------------------------|---------------------------|--------------------|
| 1. Seal ring | 2. O-ring | 3. Needle bearing |
| 4. Bearing race | 5. Front carrier assembly | 6. Needle bearing |
| 7. Snap ring | 8. Snap ring | 9. Retaining plate |
| 10. Driven plate | 11. Input clutch drum | 12. Drive plate |
| 13. Rear internal gear | | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Disassembly

INFOID:000000000957200


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


1. Compress snap ring using 2 flat-bladed screwdrivers.
2. Remove front carrier assembly and input clutch assembly from rear internal gear.
3. Remove front carrier assembly from input clutch assembly.

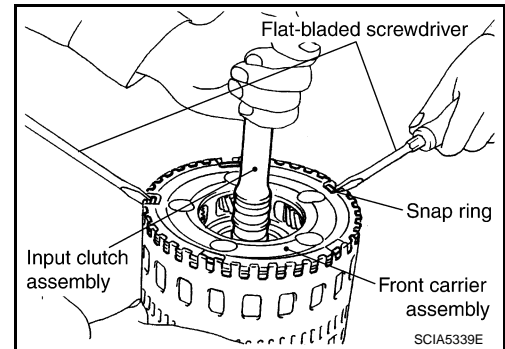


4. Remove bearing race from front carrier assembly.

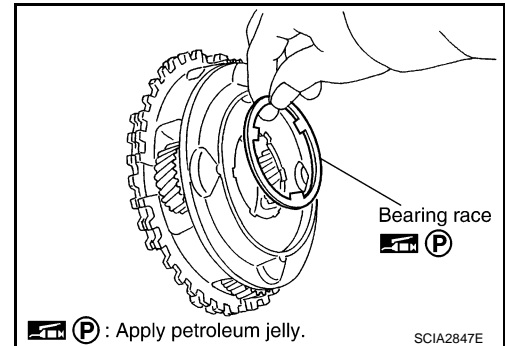


5. Remove needle bearing from front carrier assembly.

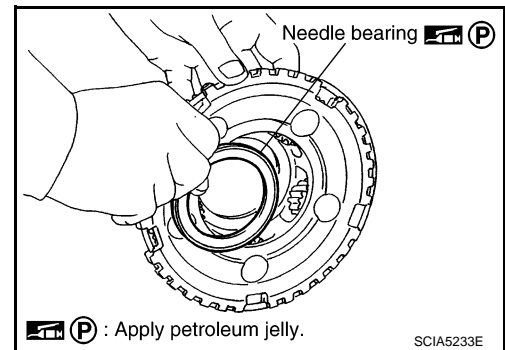

6. Remove snap ring from front carrier assembly.
CAUTION:
Do not expand snap ring excessively.

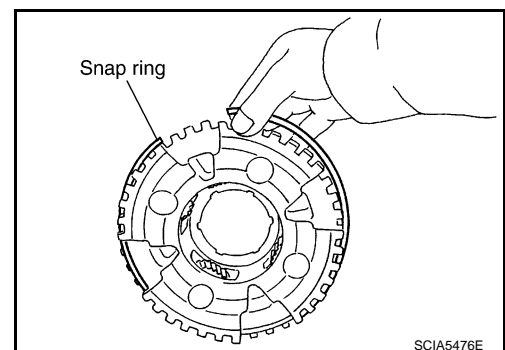

7. Remove O-ring and seal rings from input clutch assembly.

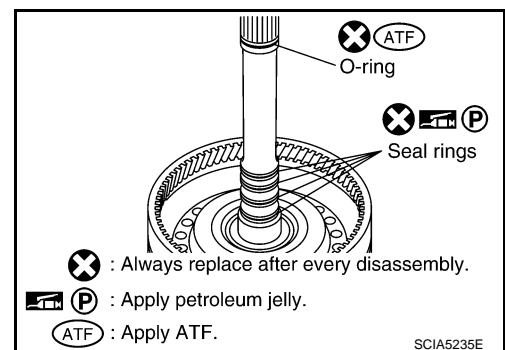


FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR

< DISASSEMBLY AND ASSEMBLY >


[5AT: RE5R05A]

8. Remove needle bearing from input clutch assembly.

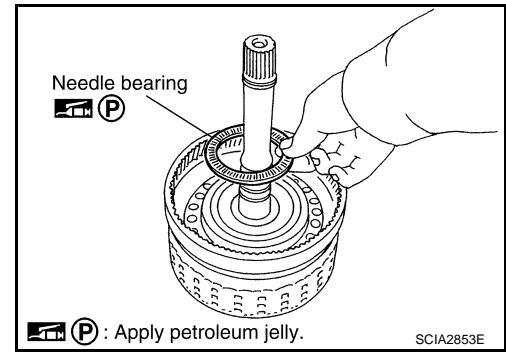

9. Using a flat-bladed screwdriver, remove snap ring from input clutch drum.

10. Remove drive plates, driven plates and retaining plate from input clutch drum.

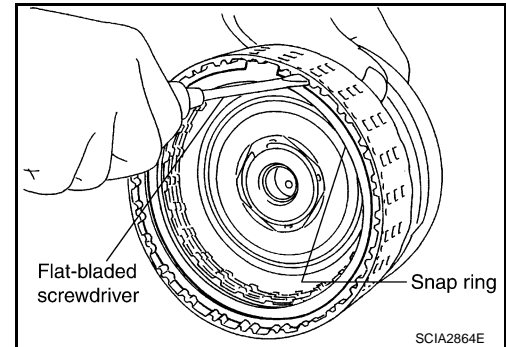


Assembly

INFOID:000000000957201


1. Install drive plates, driven plates and retaining plate in input clutch drum.

- 1 : Snap ring
- 2 : Retaining plate
- 3 : Drive plate
- 4 : Driven plate
- Drive plate / Driven plate : 7/7

CAUTION:
Take care with order of plates.

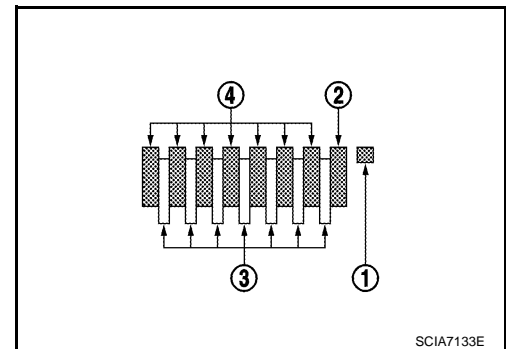

2. Using a flat-bladed screwdriver, install snap ring in input clutch drum.

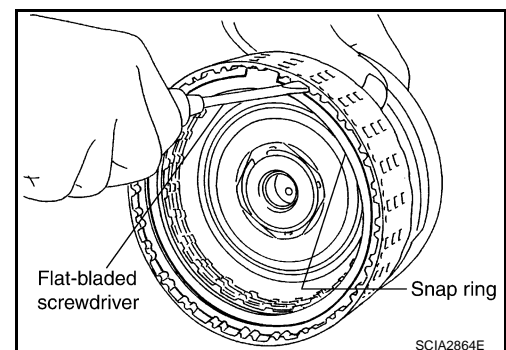

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


3. Install needle bearing in input clutch assembly.

CAUTION:

Take care with the direction of needle bearing. Refer to [TM-289](#), "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings".

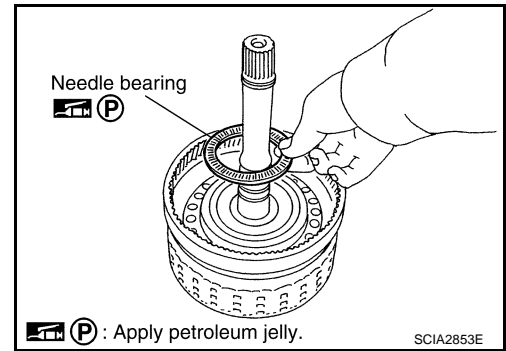


4. Install O-ring and seal rings in input clutch assembly.

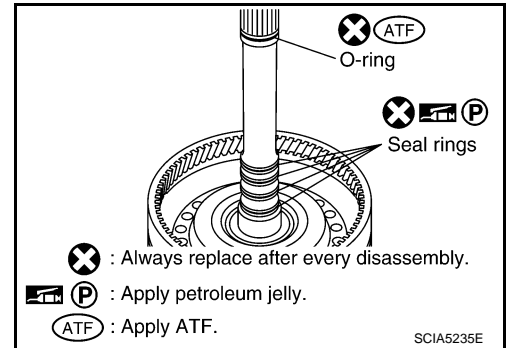

5. Install snap ring to front carrier assembly.

CAUTION:


Do not expand snap ring excessively.

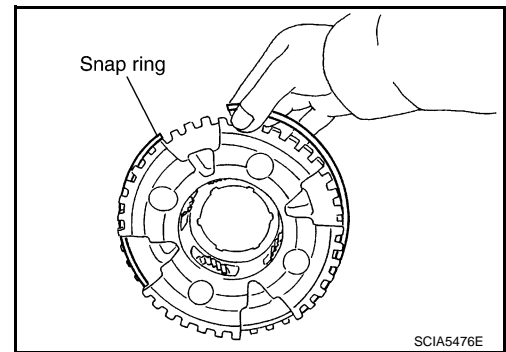

6. Install needle bearing in front carrier assembly.


CAUTION:

Take care with the direction of needle bearing. Refer to [TM-289](#), "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings".

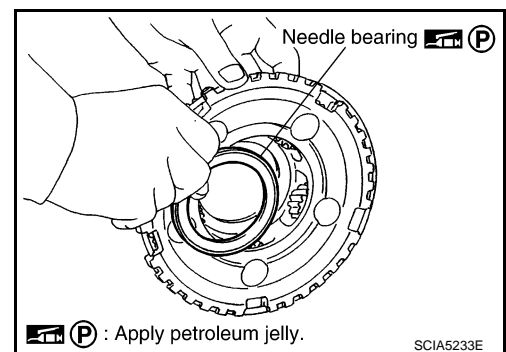

7. Install bearing race in front carrier assembly.

8. Install front carrier assembly to input clutch assembly.

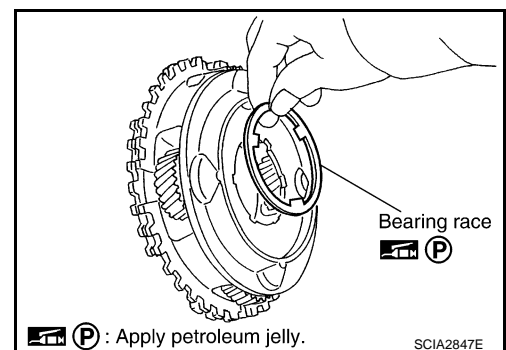


FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

9. Compress snap ring using 2 flat-bladed screwdrivers.
10. Install front carrier assembly and input clutch assembly to rear internal gear.

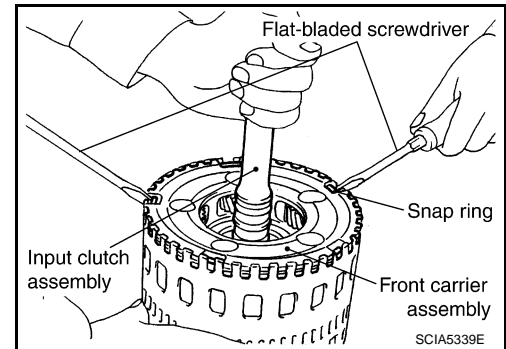

Inspection

- Front Carrier Snap Ring
Check for deformation, fatigue or damage.
CAUTION:
If necessary, replace the snap ring.
- Input Clutch Snap Ring
Check for deformation, fatigue or damage.
CAUTION:
If necessary, replace the input clutch assembly.
- Input Clutch Drum
Check for deformation, fatigue or damage or burns.
CAUTION:
If necessary, replace the input clutch assembly.
- Input Clutch Drive Plates
Check facing for burns, cracks or damage.
CAUTION:
If necessary, replace the input clutch assembly.
- Input Clutch Retaining Plate and Driven Plates
Check facing for burns, cracks or damage.
CAUTION:
If necessary, replace the input clutch assembly.
- Front Carrier
Check for deformation, fatigue or damage.
CAUTION:
If necessary, replace the front carrier assembly.
- Rear Internal Gear
Check for deformation, fatigue or damage.
CAUTION:
If necessary, replace the rear internal gear.

INFOID:000000000957202

A
B
C
TM

E
F
G
H
I
J
K
L
M
N
O
P

MID SUN GEAR, REAR SUN GEAR, HIGH AND LOW REVERSE CLUTCH HUB


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

MID SUN GEAR, REAR SUN GEAR, HIGH AND LOW REVERSE CLUTCH HUB

Exploded View

INFOID:000000000957203

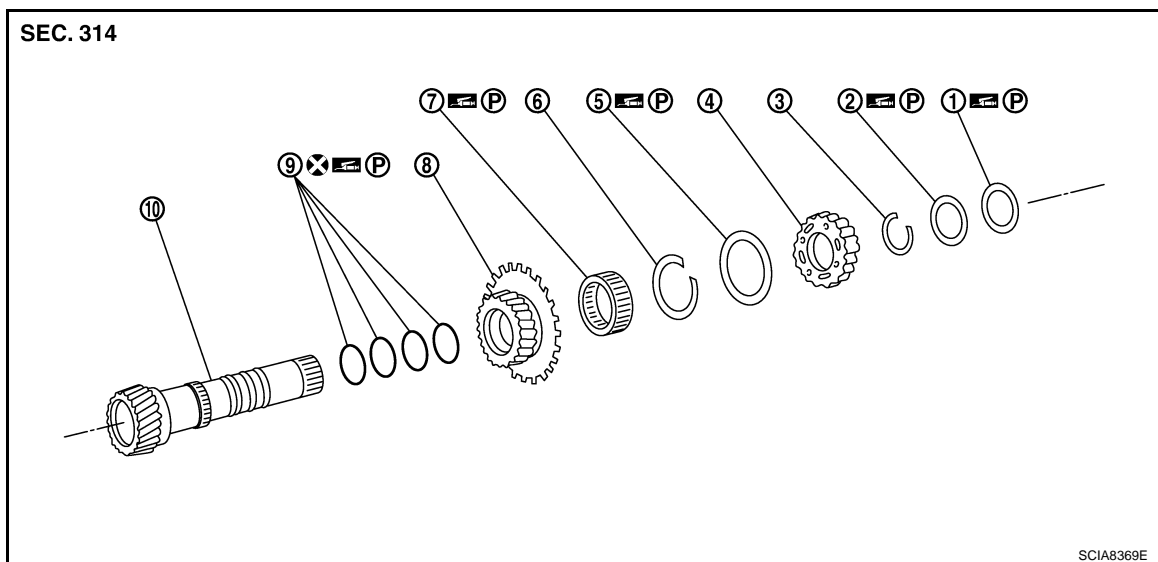


- | | | |
|------------------------------------|-------------------|--------------|
| 1. Needle bearing | 2. Bearing race | 3. Snap ring |
| 4. High and low reverse clutch hub | 5. Needle bearing | 6. Snap ring |
| 7. 1st one-way clutch | 8. Rear sun gear | 9. Seal ring |
| 10. Mid sun gear | | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Disassembly

INFOID:000000000957204


1. Remove needle bearing and bearing race from high and low reverse clutch hub.

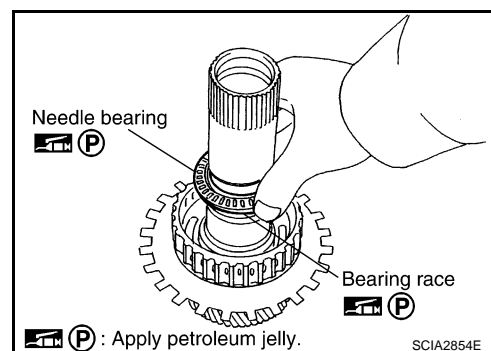

2. Using pair of snap ring pliers, remove snap ring from mid sun gear assembly.

CAUTION:

Do not expand snap ring excessively.

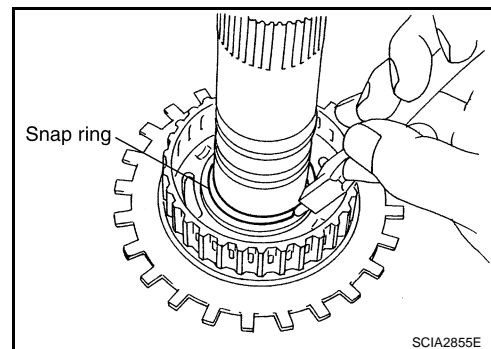


MID SUN GEAR, REAR SUN GEAR, HIGH AND LOW REVERSE CLUTCH HUB


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


3. Remove high and low reverse clutch hub from mid sun gear assembly.

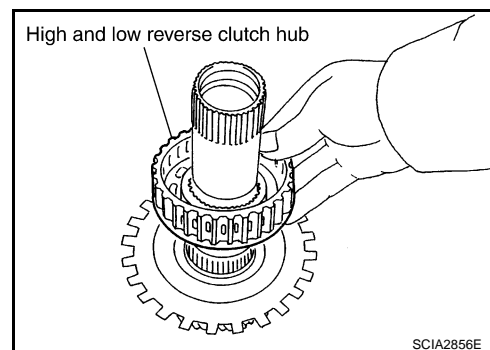


4. Remove needle bearing from high and low reverse clutch hub.

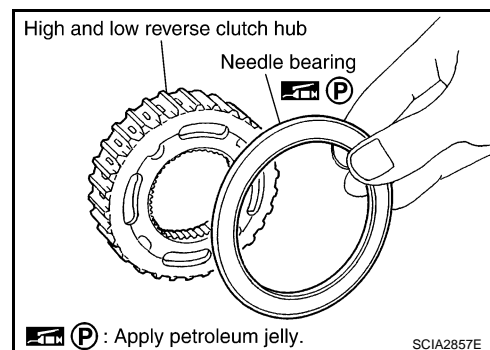


5. Remove rear sun gear assembly from mid sun gear assembly.

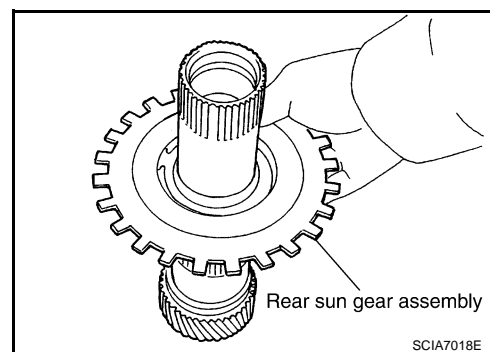

6. Using a flat-bladed screwdriver, remove snap ring from rear sun gear.

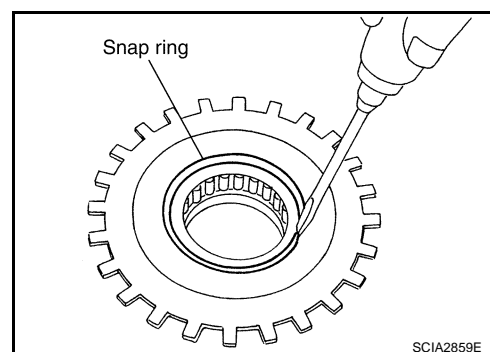

7. Remove 1st one-way clutch from rear sun gear.

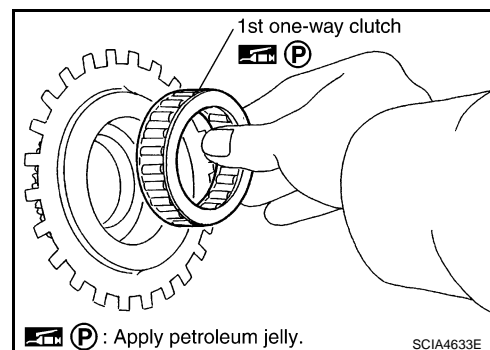


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

MID SUN GEAR, REAR SUN GEAR, HIGH AND LOW REVERSE CLUTCH HUB

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


8. Remove seal rings from mid sun gear.

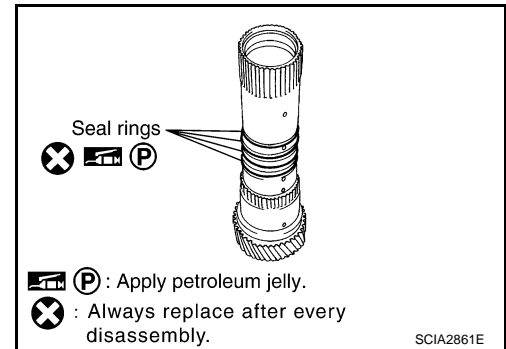


Assembly

INFOID:000000000957205


1. Install seal rings to mid sun gear.

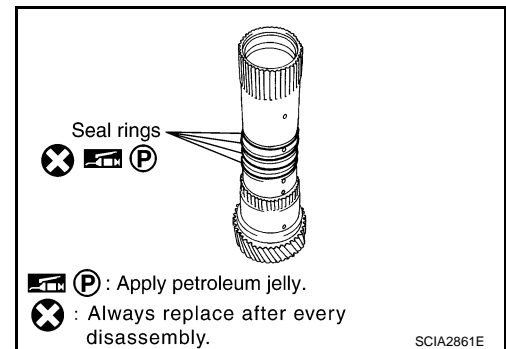

2. Install 1st one-way clutch to rear sun gear.

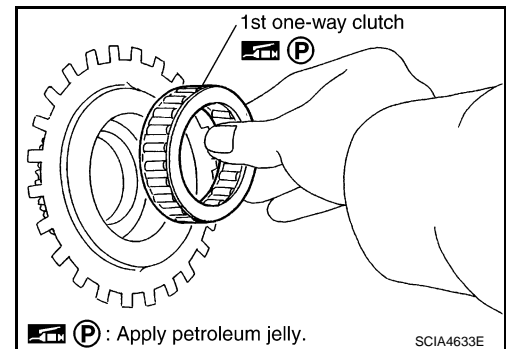

3. Using a flat-bladed screwdriver, install snap ring to rear sun gear.

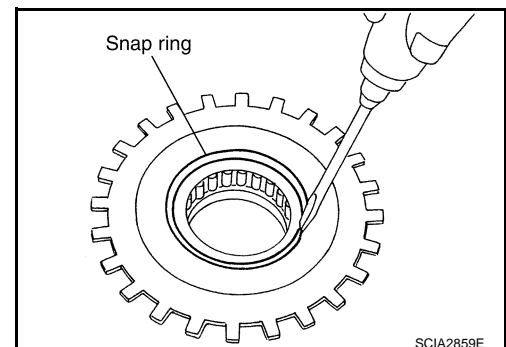


MID SUN GEAR, REAR SUN GEAR, HIGH AND LOW REVERSE CLUTCH HUB

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]


4. Install rear sun gear assembly to mid sun gear assembly.

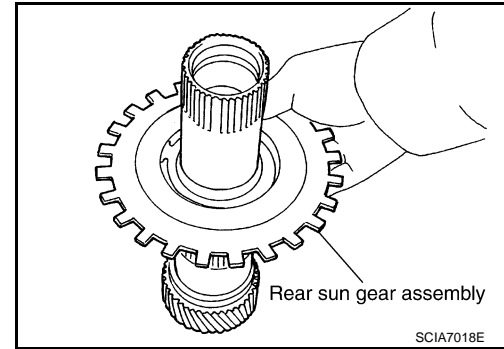


5. Install needle bearing to high and low reverse clutch hub.

CAUTION:

Take care with the direction of needle bearing. Refer to [TM-289, "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings"](#).

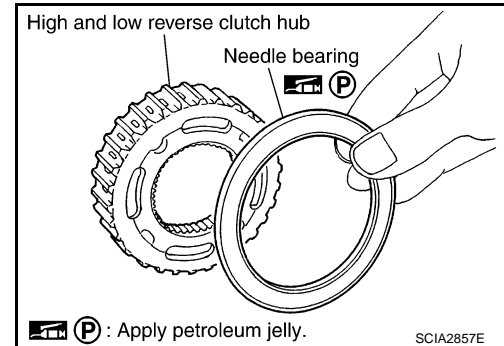


6. Install high and low reverse clutch hub to mid sun gear assembly.

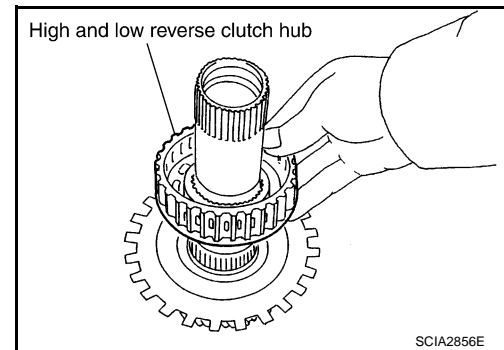

7. Using pair of snap ring pliers, install snap ring to mid sun gear assembly.

CAUTION:

Do not expand snap ring excessively.

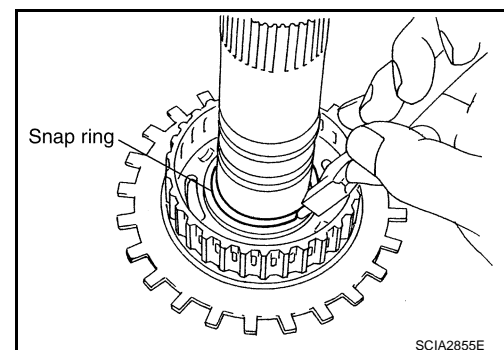


8. Check operation of 1st one-way clutch.

- a. Hold mid sun gear and turn rear sun gear.

- b. Check 1st one-way clutch for correct locking and unlocking directions.

CAUTION:

If not as shown in the figure, check installation direction of 1st one-way clutch.

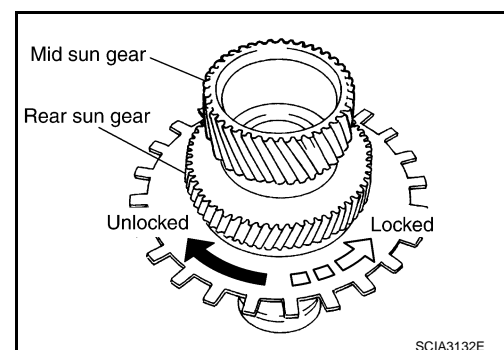

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

MID SUN GEAR, REAR SUN GEAR, HIGH AND LOW REVERSE CLUTCH HUB


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

9. Install needle bearing and bearing race to high and low reverse clutch hub.

CAUTION:

Take care with the direction of needle bearing. Refer to [TM-289, "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings"](#).

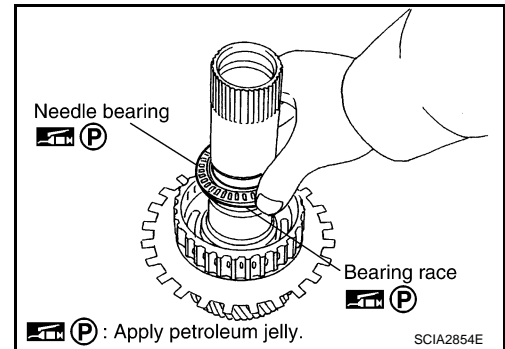

Inspection

INFOID:000000000957206

- High and Low Reverse Clutch Hub Snap Ring, Rear Sun Gear Snap Ring
Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the snap ring.

- 1st One-way Clutch
Check frictional surface for wear or damage.

CAUTION:

If necessary, replace the 1st one-way clutch.

- Mid Sun Gear
Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the mid sun gear.

- Rear Sun Gear
Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the rear sun gear.

- High and Low Reverse Clutch Hub
Check for deformation, fatigue or damage.

CAUTION:

If necessary, replace the high and low reverse clutch hub.

HIGH AND LOW REVERSE CLUTCH


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

HIGH AND LOW REVERSE CLUTCH

Exploded View

INFOID:000000000957207

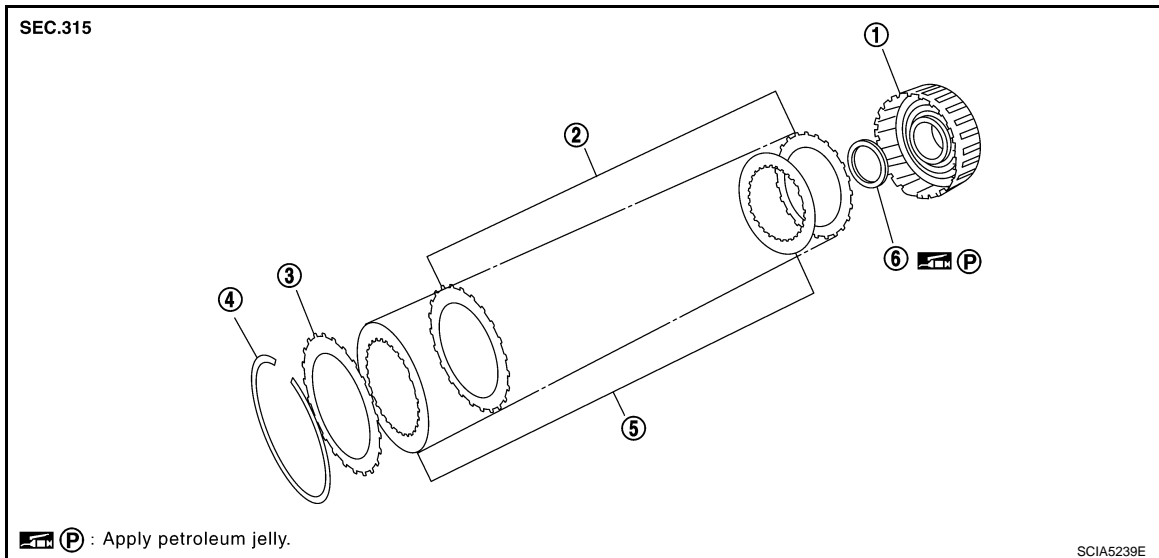


- | | | |
|-------------------------------------|-----------------|--------------------|
| 1. High and low reverse clutch drum | 2. Driven plate | 3. Retaining plate |
| 4. Snap ring | 5. Drive plate | 6. Bearing race |


Disassembly

INFOID:000000000957208

1. Remove bearing race from high and low reverse clutch drum.

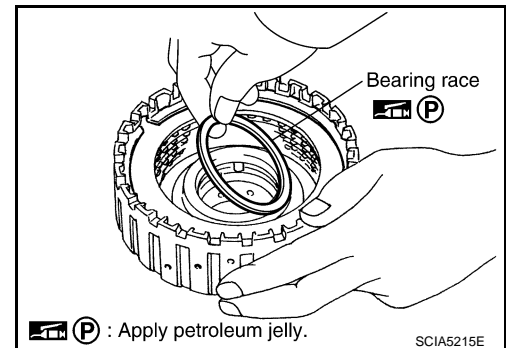

2. Using a flat-bladed screwdriver, remove snap ring from high and low reverse clutch drum.
3. Remove drive plates, driven plates and retaining plate from high and low reverse clutch drum.

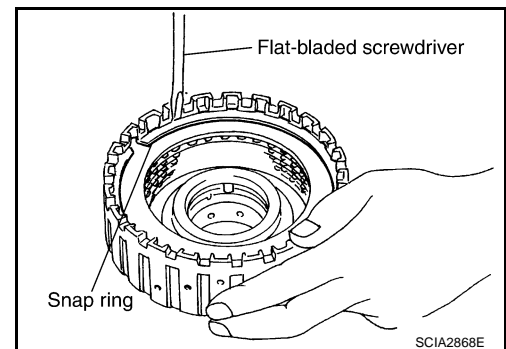

Assembly

INFOID:000000000957209

1. Install drive plates, driven plates and retaining plate in high and low reverse clutch drum.

CAUTION:

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


HIGH AND LOW REVERSE CLUTCH

< DISASSEMBLY AND ASSEMBLY >


[5AT: RE5R05A]

Take care with the order of plates.

- 1 : Snap ring
 - 2 : Retaining plate
 - 3 : Drive plate
 - 4 : Driven plate
- Drive plate /
Driven plate : 4/4

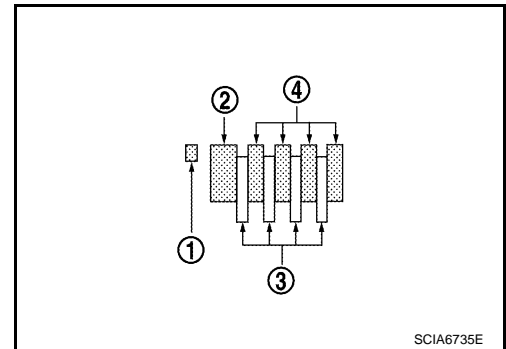


2. Using a flat-bladed screwdriver, install snap ring in high and low reverse clutch drum.

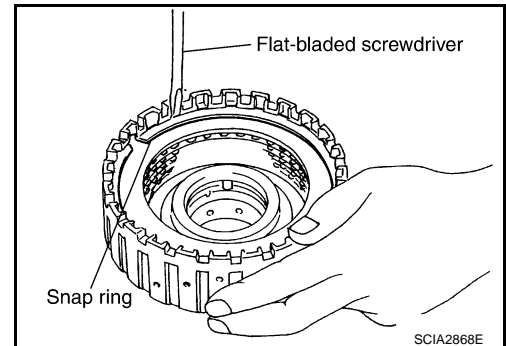

3. Install bearing race to high and low reverse clutch drum.

CAUTION:
Take care with the direction of needle bearing. Refer to [TM-289, "Location of Adjusting Shims, Needle Bearings, Thrust Washers and Snap Rings"](#).

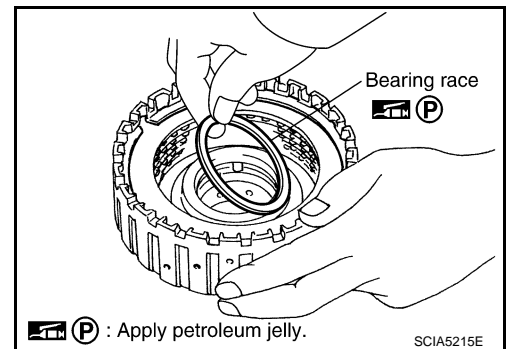

Inspection

INFOID:000000000957210

Check the following, and replace transmission assembly if necessary.

- High and Low Reverse Clutch Snap Ring
Check for deformation, fatigue or damage.
- High and Low Reverse Clutch Drive Plates
Check facing for burns, cracks or damage.
- High and Low Reverse Clutch Retaining Plate and Driven Plates
Check facing for burns, cracks or damage.

DIRECT CLUTCH


< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

DIRECT CLUTCH

Exploded View

INFOID:000000000957211

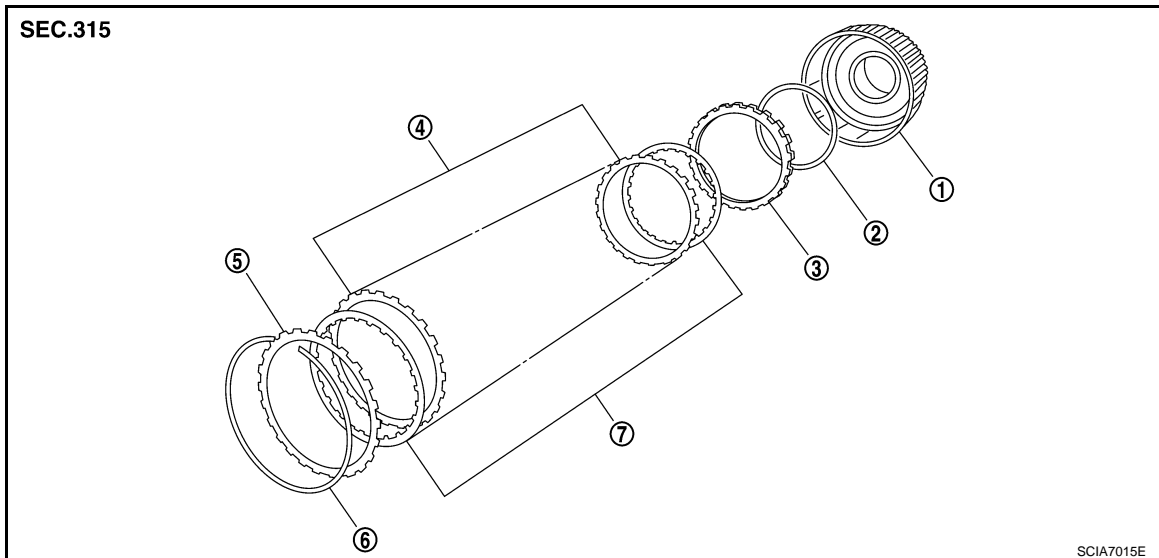


- | | | |
|-----------------------|--------------------|--------------------|
| 1. Direct clutch drum | 2. Dish plate | 3. Retaining plate |
| 4. Driven plate | 5. Retaining plate | 6. Snap ring |
| 7. Drive plate | | |

Disassembly

INFOID:000000000957212

- Using a flat-bladed screwdriver, remove snap ring from direct clutch drum.
- Remove drive plates, driven plates, dish plate and retaining plates from direct clutch drum.

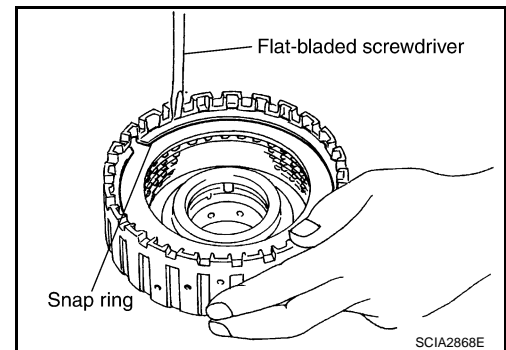

Assembly


INFOID:000000000957213

- Install drive plates, driven plates, dish plate and retaining plates in direct clutch drum.

CAUTION:

Take care with the order of plates.

- | | |
|---------------|-------------------|
| 1 | : Snap ring |
| 2 | : Retaining plate |
| 3 | : Drive plate |
| 4 | : Driven plate |
| 5 | : Dish plate |
| Drive plate / | : 5/4 |
| Driven plate | |

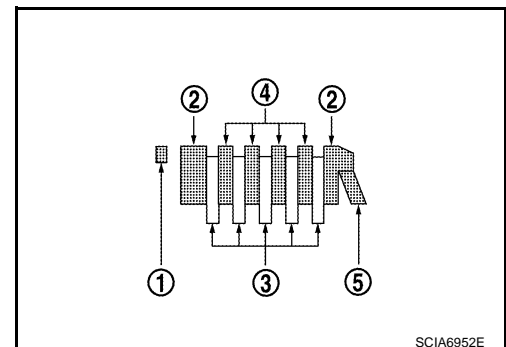


DIRECT CLUTCH

< DISASSEMBLY AND ASSEMBLY >

[5AT: RE5R05A]

- Using a flat-bladed screwdriver, install snap ring in direct clutch drum.

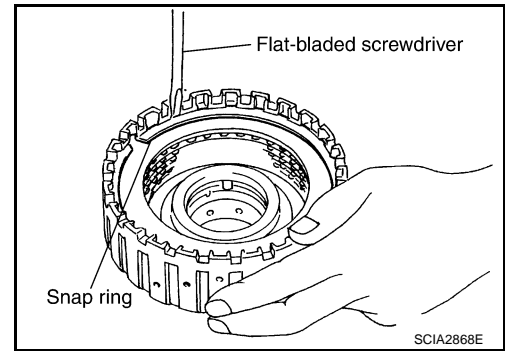

Inspection

INFOID:000000000957214

Check the following, and replace direct clutch assembly if necessary.

- Direct Clutch Snap Ring
Check for deformation, fatigue or damage.
- Direct Clutch Drive Plates and Driven Plates
Check facing for burns, cracks or damage.
- Direct Clutch Dish Plate and Retaining Plates
Check facing for burns, cracks or damage.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[5AT: RE5R05A]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specification

INFOID:000000000957215

Applied model	VQ35HR engine	
	2WD	AWD
Automatic transmission model	RE5R05A	
Transmission model code number	97X2E	97X3A
Stall torque ratio	1.74 : 1	
Transmission gear ratio	1st	3.842
	2nd	2.353
	3rd	1.529
	4th	1.000
	5th	0.839
	Reverse	2.765
Recommended fluid	Genuine NISSAN Matic J ATF*1	
Fluid capacity	10.3 liter (10-7/8 US qt, 9-1/8 Imp qt)*2	

CAUTION:

- Use only Genuine NISSAN Matic J ATF. Do not mix with other fluid.
- Using ATF other than Genuine NISSAN Matic J ATF will cause deterioration driveability and A/T durability, and may damage the A/T, which is not covered by the NISSAN new vehicle limited warranty.

*1: Refer to [MA-10, "Fluids and Lubricants"](#).

*2: The fluid capacity is the reference value. Check the fluid level with A/T fluid level gauge.

Vehicle Speed at Which Gear Shifting Occurs

INFOID:000000000957216

Throttle position	Vehicle speed km/h (MPH)							
	D1→D2	D2→D3	D3→D4	D4→D5	D5→D4	D4→D3	D3→D2	D2→D1
Full throttle	57 – 61 (35 – 38)	93 – 101 (58 – 63)	140 – 150 (87 – 93)	202 – 212 (126 – 132)	198 – 208 (123 – 129)	130 – 140 (81 – 87)	79 – 87 (49 – 54)	31 – 35 (19 – 22)
Half throttle	39 – 43 (24 – 27)	71 – 77 (44 – 48)	108 – 116 (67 – 72)	139 – 147 (86 – 91)	105 – 113 (65 – 70)	47 – 55 (29 – 34)	30 – 36 (19 – 22)	9 – 13 (6 – 8)

- At half throttle, the accelerator opening is 4/8 of the full opening.

Vehicle Speed at Which Lock-up Occurs/Releases

INFOID:000000000957217

Throttle position	Vehicle speed km/h (MPH)	
	Lock-up ON	Lock-up OFF
Closed throttle	50 – 58 (31 – 36)	47 – 55 (29 – 34)
Half throttle	139 – 147 (86 – 91)	105 – 113 (65 – 70)

- At closed throttle, the accelerator opening is less than 1/8 condition. (Closed throttle position signal OFF)
- At half throttle, the accelerator opening is 4/8 of the full opening.

Stall Speed

INFOID:000000000957218

Stall speed	2,700 – 3,000 rpm
-------------	-------------------

Line Pressure

INFOID:000000000957219

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[5AT: RE5R05A]

Engine speed	Line pressure kPa (kg/cm ² , psi)	
	"R" position	"D" and "M" positions
At idle speed	425 – 465 (4.3 – 4.7, 62 – 67)	379 – 428 (3.9 – 4.4, 55 – 62)
At stall speed	1,605 – 1,950 (16.4 – 19.9, 233 – 283)	1,310 – 1,500 (13.4 – 15.3, 190 – 218)

Turbine Revolution Sensor

INFOID:000000000957220

Name	Condition	Data (Approx.)
Turbine revolution sensor 1	When running at 50 km/h (31 MPH) in 4th speed with the closed throttle position signal OFF.	1.3 kHz
Turbine revolution sensor 2	When running at 20 km/h (12 MPH) in 1st speed with the closed throttle position signal OFF.	

Vehicle Speed Sensor A/T (Revolution Sensor)

INFOID:000000000957221

Name	Condition	Data (Approx.)
Revolution sensor	When running at 20 km/h (12 MPH).	185 Hz

Reverse Brake

INFOID:000000000957222

Model code number	97X2E, 97X3A	
Number of drive plates	6	
Number of driven plates	6	
Clearance mm (in)	Standard	0.7 – 1.1 (0.028 – 0.043)
Thickness of retaining plates	Thickness mm (in)	
	4.2 (0.165)	
	4.4 (0.173)	
	4.6 (0.181)	
	4.8 (0.189)	
	5.0 (0.197)	
		5.2 (0.205)

Total End Play

INFOID:000000000957223

Total end play mm (in)	0.25 – 0.55 (0.0098 – 0.0217)
------------------------	-------------------------------

BEARING RACE FOR ADJUSTING TOTAL END PLAY

Thickness mm (in)
0.8 (0.031)
1.0 (0.039)
1.2 (0.047)
1.4 (0.055)
1.6 (0.063)
1.8 (0.071)

Torque Converter

INFOID:000000000957224

Distance between end of converter housing and torque converter mm (in)	25.0 (0.98) or more
--	---------------------