

SECTION **CHG**
CHARGING SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CONTENTS

| | | | |
|---|----|--|----|
| BASIC INSPECTION | 3 | CHARGING SYSTEM | 21 |
| DIAGNOSIS AND REPAIR WORKFLOW | 3 | Symptom Table | 21 |
| Work Flow | 3 | PRECAUTION | 22 |
| SYSTEM DESCRIPTION | 6 | PRECAUTIONS | 22 |
| CHARGING SYSTEM | 6 | Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 22 |
| System Diagram | 6 | Service Procedure Precautions for Models with a Pop-up Roll Bar | 22 |
| System Description | 6 | Precaution for Power Generation Voltage Variable Control System | 22 |
| Component Parts Location | 6 | Precaution for Battery Service | 22 |
| Component Description | 7 | PREPARATION | 24 |
| POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM | 8 | PREPARATION | 24 |
| System Diagram | 8 | Special Service Tools | 24 |
| System Description | 8 | Commercial Service Tools | 24 |
| Component Parts Location | 8 | PERIODIC MAINTENANCE | 25 |
| Component Description | 9 | CHARGING SYSTEM PRELIMINARY INSPECTION | 25 |
| DTC/CIRCUIT DIAGNOSIS | 10 | Inspection Procedure | 25 |
| B TERMINAL CIRCUIT | 10 | POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION | 26 |
| Description | 10 | Inspection Procedure | 26 |
| Diagnosis Procedure | 10 | REMOVAL AND INSTALLATION | 28 |
| L TERMINAL CIRCUIT (OPEN) | 11 | ALTERNATOR | 28 |
| Description | 11 | Exploded View | 28 |
| Diagnosis Procedure | 11 | Removal and Installation | 29 |
| L TERMINAL CIRCUIT (SHORT) | 13 | Inspection | 30 |
| Description | 13 | SERVICE DATA AND SPECIFICATIONS (SDS) | 31 |
| Diagnosis Procedure | 13 | | |
| S TERMINAL CIRCUIT | 14 | | |
| Description | 14 | | |
| Diagnosis Procedure | 14 | | |
| CHARGING SYSTEM | 15 | | |
| Wiring Diagram - CHARGING SYSTEM - | 15 | | |
| SYMPTOM DIAGNOSIS | 21 | | |

CHG

SERVICE DATA AND SPECIFICATIONS
(SDS) 31

Alternator 31

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000005622434

OVEROALL SEQUENCE

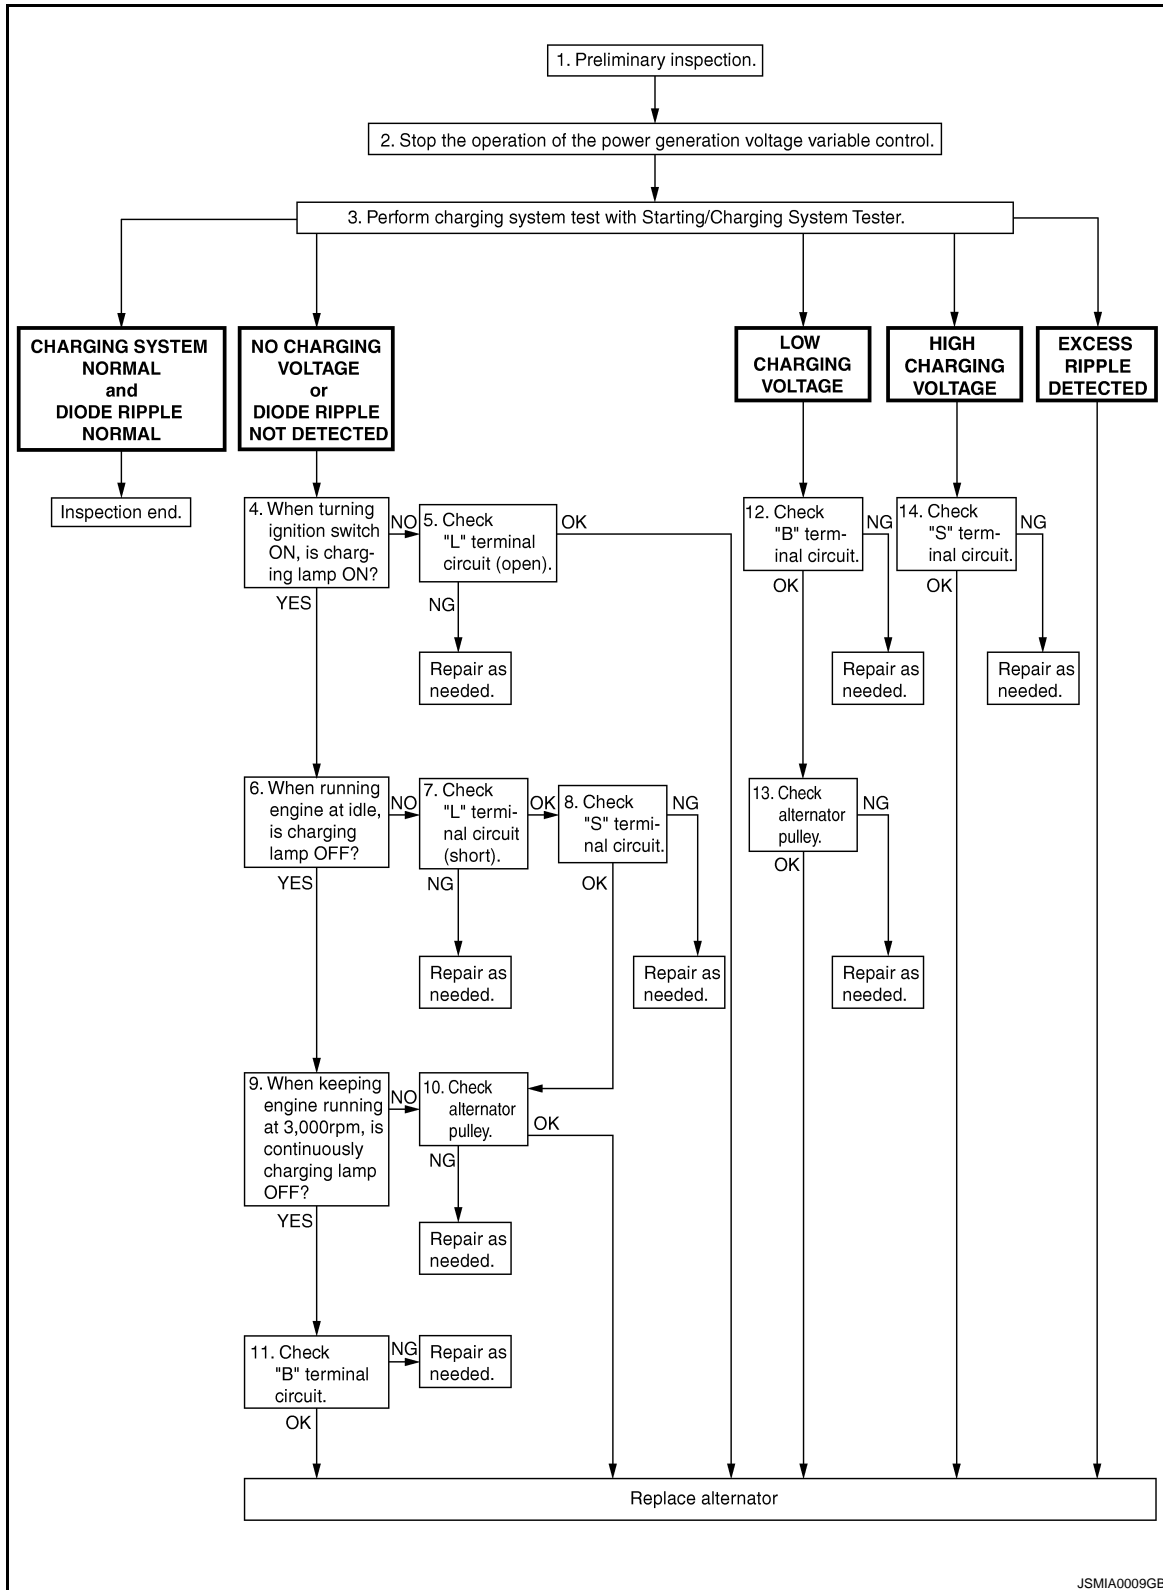

DETAILED FLOW

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter and alternator test segments must be done as a set from start to finish.

1. PRELIMINARY INSPECTION

Perform the preliminary inspection. Refer to [CHG-25, "Inspection Procedure"](#).

>> GO TO 2.

2. STOP POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

Stop the operation of the power generation voltage variable control in either of the following procedures.

- After selecting "ENGINE" of "SELECT SYSTEM" using CONSULT-III, set the DUTY value of "ALTERNATOR DUTY" to 0 % by selecting "ALTERNATOR DUTY" of "Active Test". Continue "Active Test" until the end of inspection. (When the DUTY value is 0 or 100 %, the normal power generation is performed according to the characteristic of the IC voltage regulator of the alternator.)
- Turn the ignition switch OFF, and disconnect the battery current sensor connector. [However, DTC (P1550 - P1554) of the engine might remain. After finishing the inspection, connect the battery current sensor connector and erase the self-diagnostic results history of the engine using CONSULT-III.]

>> GO TO 3.

3. DIAGNOSIS WITH STARTING/CHARGING SYSTEM TESTER

Perform the charging system test using Starting/Charging System Tester (SST: J-44373). For details and operating instructions, refer to Technical Service Bulletin.

Test result

CHARGING SYSTEM NORMAL>>Charging system is normal and will also show "DIODE RIPPLE" test result.

NO CHARGING VOLTAGE>>GO TO 4.

LOW CHARGING VOLTAGE>>GO TO 12.

HIGH CHARGING VOLTAGE>>GO TO 14.

DIODE RIPPLE NORMAL>>Diode ripple is OK and will also show "CHARGING VOLTAGE" test result.

EXCESS RIPPLE DETECTED>>Replace the alternator. Perform "DIODE RIPPLE" test again using Starting/Charging System Tester (SST: J-44373) to confirm repair.

DIODE RIPPLE NOT DETECTED>>GO TO 4.

4. INSPECTION WITH CHARGE WARNING LAMP (IGNITION SWITCH IS ON)

Turn the ignition switch ON.

Does the charge warning lamp illuminate?

YES >> GO TO 6.

NO >> GO TO 5.

5. "L" TERMINAL CIRCUIT (OPEN) INSPECTION

Check "L" terminal circuit (open). Refer to [CHG-11, "Diagnosis Procedure"](#).

Is the "L" terminal circuit normal?

YES >> Replace alternator.

NO >> Repair as needed.

6. INSPECTION WITH CHARGE WARNING LAMP (IDLING)

Start the engine and run it at idle.

Does the charge warning lamp turn OFF?

YES >> GO TO 9.

NO >> GO TO 7.

7. "L" TERMINAL CIRCUIT (SHORT) INSPECTION

Check "L" terminal circuit (short). Refer to [CHG-13, "Diagnosis Procedure"](#).

Is the "L" terminal circuit normal?

YES >> GO TO 8.

NO >> Repair as needed.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

8. "S" TERMINAL CIRCUIT INSPECTION

Check "S" terminal circuit. Refer to [CHG-14. "Diagnosis Procedure"](#).

Is the "S" terminal circuit normal?

YES >> GO TO 10.

NO >> Repair as needed.

9. INSPECTION WITH CHARGE WARNING LAMP (ENGINE AT 3,000 RPM)

Increase and maintain the engine speed at 3,000 rpm.

Does the charge warning lamp remain off?

YES >> GO TO 11.

NO >> GO TO 10.

10. INSPECTION OF ALTERNATOR PULLEY

Check alternator pulley. Refer to [CHG-30. "Inspection"](#).

Is alternator pulley normal?

YES >> Replace alternator.

NO >> Repair as needed.

11. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [CHG-10. "Diagnosis Procedure"](#).

Is "B" terminal circuit normal?

YES >> Replace alternator.

NO >> Repair as needed.

12. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [CHG-10. "Diagnosis Procedure"](#).

Is "B" terminal circuit normal?

YES >> GO TO 13.

NO >> Repair as needed.

13. INSPECTION OF ALTERNATOR PULLEY

Check alternator pulley. Refer to [CHG-30. "Inspection"](#).

Is alternator pulley normal?

YES >> Replace alternator.

NO >> Repair as needed.

14. "S" TERMINAL CIRCUIT INSPECTION

Check "S" terminal circuit. Refer to [CHG-14. "Diagnosis Procedure"](#).

Is the "S" terminal circuit normal?

YES >> Replace alternator.

NO >> Repair as needed.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

CHARGING SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

CHARGING SYSTEM

System Diagram

INFOID:000000005622435

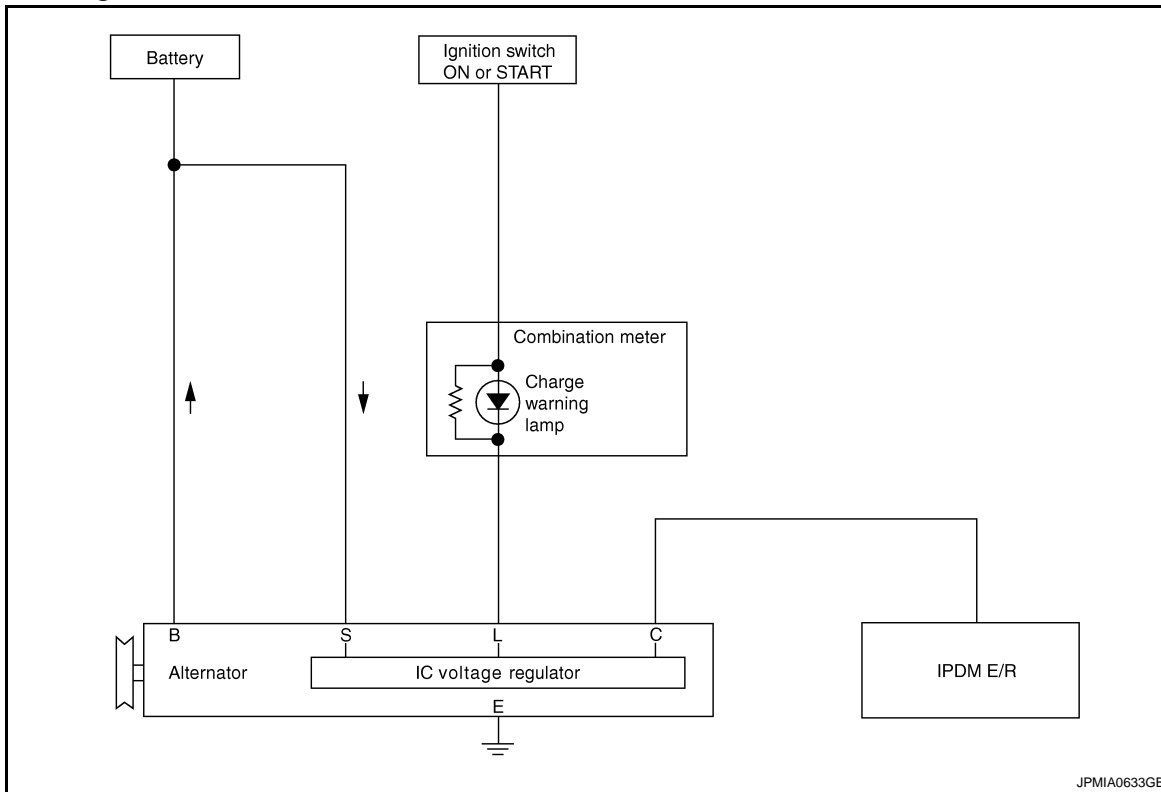

JPMIA0633GB


System Description

INFOID:000000005622436

The alternator provides DC voltage to operate the vehicle's electrical system and to keep the battery charged. The voltage output is controlled by the IC voltage regulator.

Component Parts Location

INFOID:000000005622437

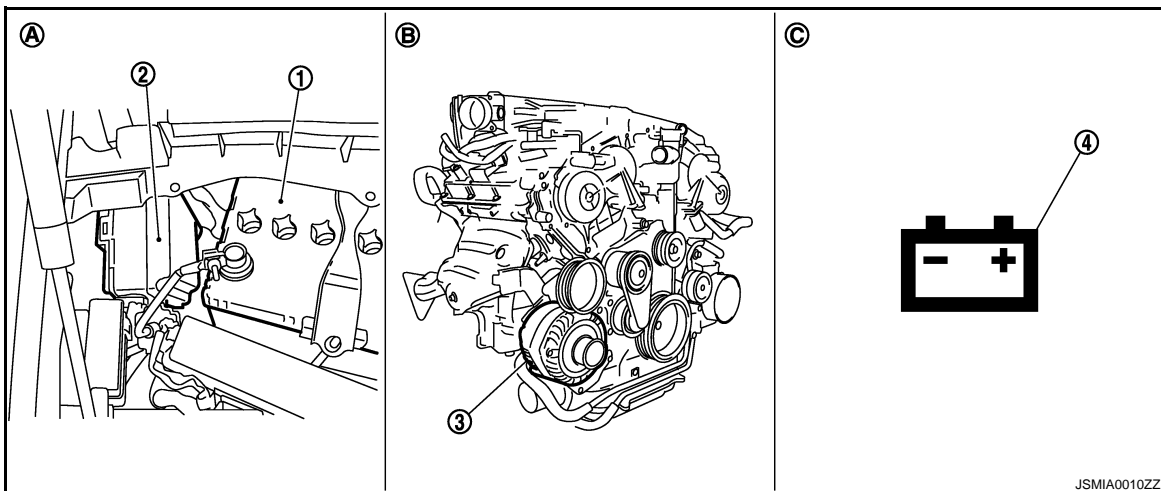

JSMIA0010ZZ

1. Battery

2. IPDM E/R

3. Alternator

4. Charge warning lamp

B. Engine

C. Combination meter

A. Engine room dash panel (RH)

CHARGING SYSTEM

< SYSTEM DESCRIPTION >

Component Description

INFOID:000000005622438

| Component part | | Description |
|---|--------------|--|
| Alternator | "B" terminal | Refer to CHG-10, "Description" . |
| | "S" terminal | Refer to CHG-14, "Description" . |
| | "L" terminal | Refer to CHG-11, "Description" . |
| | "C" terminal | Used for the power generation voltage variable control system. Refer to CHG-8, "System Description" . |
| Combination meter (Charge warning lamp) | | The IC voltage regulator warning function activates to illuminate the charge warning lamp, if any of the following symptoms occur while alternator is operating: <ul style="list-style-type: none"> • Excessive voltage is produced. • No voltage is produced. |
| IPDM E/R | | Used for the power generation voltage variable control system. Refer to CHG-8, "System Description" . |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG


POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

< SYSTEM DESCRIPTION >

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

System Diagram

INFOID:000000005622439

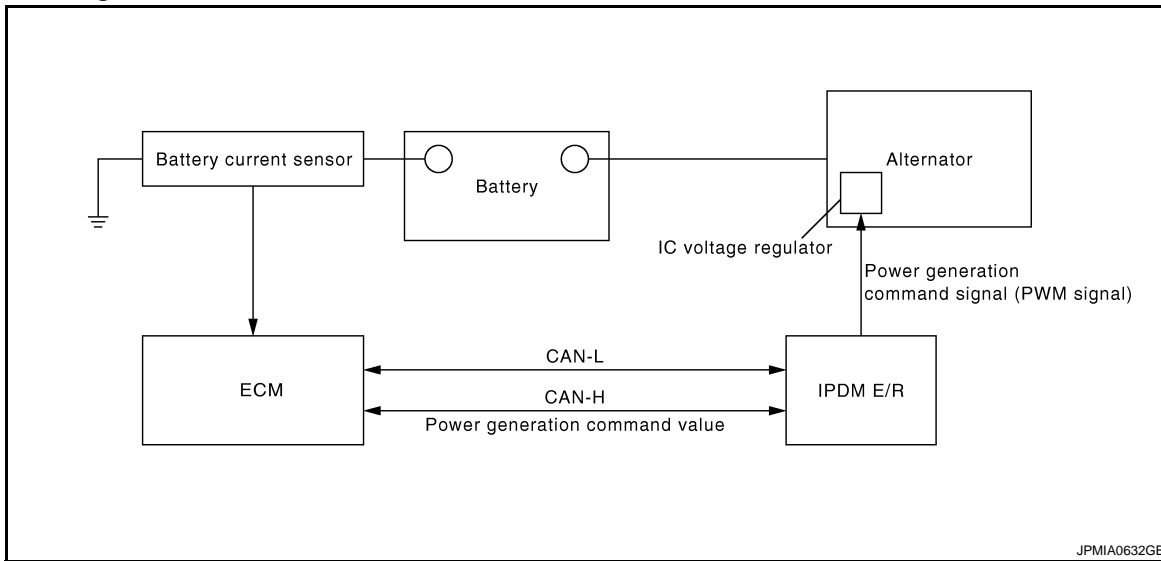

System Description

INFOID:000000005622440

By performing the power generation voltage variable control, the engine load due to the power generation of the alternator is reduced and fuel consumption is decreased.

NOTE:

When any malfunction is detected in the power generation voltage variable control system, the power generation is performed according to the characteristic of the IC voltage regulator of the alternator.

Component Parts Location

INFOID:000000005622441



- | | | |
|--------------------------------|---------------------|---------------------------|
| 1. Battery | 2. IPDM E/R | 3. Battery current sensor |
| 4. ECM | 5. Alternator | |
| A. Engine room dash panel (RH) | B. Behind glove box | C. Engine |

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

< SYSTEM DESCRIPTION >

Component Description

INFOID:000000005622442

| Component part | Description |
|-----------------------------------|---|
| Battery current sensor | Battery current sensor is installed to the battery cable at the negative terminal, and it detects the charging/discharging current of the battery and sends the voltage signal to ECM according to the current value. |
| ECM | Battery current sensor detects the charging/discharging current of the battery. ECM judges the battery condition based on this signal. ECM judges whether to perform the power generation voltage variable control according to the battery condition. When performing the power generation voltage variable control, ECM calculates the target power generation voltage according to the battery condition and sends the calculated value as the power generation command value to IPDM E/R. |
| IPDM E/R | IPDM E/R converts the received power generation command value into the power generation command signal (PWM signal) and sends it to the IC voltage regulator. |
| Alternator (IC voltage regulator) | IC voltage regulator controls the power generation voltage by the target power generation voltage based on the received power generation command signal. When there is no power generation command signal, the alternator performs the normal power generation according to the characteristic of the IC voltage regulator. |

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

B TERMINAL CIRCUIT

Description

INFOID:000000005622443

"B" terminal circuit supplies power to charge the battery and to operate the vehicle's electrical system.

Diagnosis Procedure

INFOID:000000005622444

1. CHECK "B" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "B" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "B" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2. CHECK "B" TERMINAL CIRCUIT

Check voltage between alternator "B" terminal and ground.

| Terminals | | | Voltage (Approx.) |
|-------------------------|----------|--------|-------------------|
| (+) | (-) | | |
| Alternator "B" terminal | Terminal | | Battery voltage |
| E203 | 1 | Ground | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness for open between alternator and fusible link.

3. CHECK "B" TERMINAL CONNECTION (VOLTAGE DROP TEST)

1. Start engine, then engine running at idle and warm.
2. Check voltage between battery positive terminal and alternator "B" terminal.

| Terminals | | | Voltage (Approx.) |
|---------------------------|-------------------------|----------|-------------------|
| (+) | (-) | | |
| Battery positive terminal | Alternator "B" terminal | Terminal | Less than 0.2 V |
| | E203 | 1 | |

Is the inspection result normal?

YES >> "B" terminal circuit is normal. Refer to [CHG-3, "Work Flow"](#).

NO >> Check harness between battery and alternator for poor continuity.

L TERMINAL CIRCUIT (OPEN)

< DTC/CIRCUIT DIAGNOSIS >

L TERMINAL CIRCUIT (OPEN)

Description

INFOID:000000005622445

The "L" terminal circuit controls the charge warning lamp. The charge warning lamp illuminates when the ignition switch is set to ON or START. When the alternator is providing sufficient voltage with the engine running, the charge warning lamp will go off. If the charge warning lamp illuminates with the engine running, a malfunction is indicated.

Diagnosis Procedure

INFOID:000000005622446

1. CHECK "L" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "L" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "L" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2. CHECK "L" TERMINAL CIRCUIT (OPEN)

1. Disconnect alternator connector.
2. Apply ground to alternator harness connector terminal.
3. Check condition of the charge warning lamp with the ignition switch in the ON position.

| Alternator harness connector | Terminal | Ground | Condition | |
|------------------------------|----------|--------|--------------------------|---------------------|
| | | | Ignition switch position | Charge warning lamp |
| F36 | 2 | | ON | illuminate |

Does it illuminate?

YES >> "L" terminal circuit is normal. Refer to [CHG-3. "Work Flow"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the battery cable from the negative terminal.
2. Disconnect the combination meter connector.
3. Check continuity between alternator harness connector and combination meter harness connector.

| Alternator harness connector | | Combination meter harness connector | | Continuity |
|------------------------------|--------------|-------------------------------------|--------------|------------|
| Connector No. | Terminal No. | Connector No. | Terminal No. | |
| F36 | 2 | M53 | 6 | Existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the harness or connector.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check continuity between combination meter harness connector and fuse block.

| Combination meter harness connector | | Fuse block | | Continuity |
|-------------------------------------|--------------|---------------|--------------|------------|
| Connector No. | Terminal No. | Connector No. | Terminal No. | |
| M53 | 21 | M3 | 12C | Existed |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harness.

5. CHECK POWER SUPPLY CIRCUIT

1. Connect the battery cable to the negative terminal.

A
B
C
D
E
F
G
H
I
J
K
L

CHG

N
O
P

L TERMINAL CIRCUIT (OPEN)

< DTC/CIRCUIT DIAGNOSIS >

2. Check voltage between combination meter harness connector and ground.

| Terminals | | (-) | Condition | Voltage (Approx.) |
|-------------------------------------|----------|--------|--|-------------------|
| (+) | Terminal | | | |
| Combination meter harness connector | | | | |
| M53 | 21 | Ground | When the ignition switch is in ON position | Battery voltage |

Is the inspection result normal?

YES >> Replace combination meter.

NO >> Inspect the power supply circuit. Refer to [PG-70, "Wiring Diagram - IGNITION POWER SUPPLY -](#)

["](#)

L TERMINAL CIRCUIT (SHORT)

< DTC/CIRCUIT DIAGNOSIS >

L TERMINAL CIRCUIT (SHORT)

Description

INFOID:000000005622447

The "L" terminal circuit controls the charge warning lamp. The charge warning lamp illuminates when the ignition switch is set to ON or START. When the alternator is providing sufficient voltage with the engine running, the charge warning lamp will go off. If the charge warning lamp illuminates with the engine running, a malfunction is indicated.

Diagnosis Procedure

INFOID:000000005622448

1. CHECK "L" TERMINAL CIRCUIT (SHORT)

1. Turn ignition switch OFF.
2. Disconnect alternator connector.
3. Turn ignition switch ON.

Does charge warning lamp illuminate?

YES >> GO TO 2.

NO >> Refer to [CHG-3. "Work Flow"](#).

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect combination meter connector.
4. Check continuity between combination meter harness connector and ground.

| Combination meter harness connector | | Ground | Continuity |
|-------------------------------------|--------------|--------|-------------|
| Connector No. | Terminal No. | | |
| M53 | 6 | | Not existed |

Is the inspection result normal?

YES >> Replace combination meter.

NO >> Repair the harness.

A
B
C
D
E
F
G
H
I
J
K
L

CHG

N
O
P

S TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

S TERMINAL CIRCUIT

Description

INFOID:000000005622449

The output voltage of the alternator is controlled by the IC voltage regulator at the "S" terminal detecting the input voltage.

The "S" terminal circuit detects the battery voltage to adjust the alternator output voltage with the IC voltage regulator.

Diagnosis Procedure

INFOID:000000005622450

1. CHECK "S" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "S" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "S" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2. CHECK "S" TERMINAL CIRCUIT

Check voltage between alternator harness connector and ground.

| Terminals | | Voltage (Approx.) |
|------------------------------|----------|-------------------|
| (+) | (-) | |
| Alternator harness connector | Terminal | Battery voltage |
| F36 | 3 | |
| | Ground | |

Is the inspection result normal?

YES >> Refer to [CHG-3, "Work Flow"](#).

NO >> Check harness for open between alternator and fuse.

CHARGING SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

CHARGING SYSTEM

Wiring Diagram - CHARGING SYSTEM -

INFOID:000000005622451

CHARGING SYSTEM

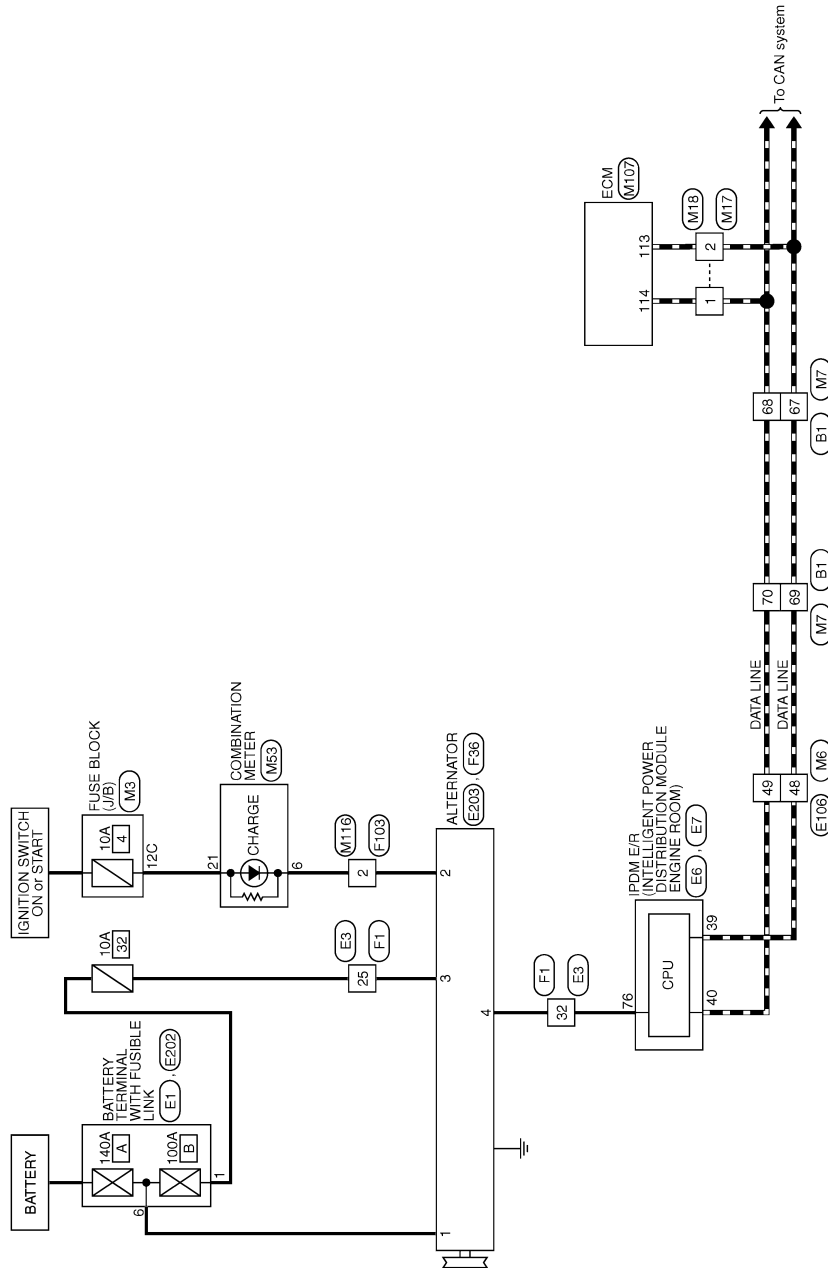

2009/11/10

JCMWM6310GI

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG

CHARGING SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

CHARGING SYSTEM

| | |
|----------------|-------------------|
| Connector No. | B1 |
| Connector Name | WIRE TO WIRE |
| Connector Type | THB07V-CST16-TM44 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-------------------------------------|
| 1 | W | |
| 2 | L | |
| 3 | R | |
| 4 | V | |
| 5 | W | |
| 6 | B | |
| 7 | G | |
| 8 | BR | |
| 9 | SHIELD | |
| 10 | BR | |
| 11 | Y | |
| 12 | L | |
| 13 | W | |
| 14 | R | |
| 15 | W | |
| 16 | W | |
| 17 | BR | |
| 18 | G | |
| 19 | SB | |
| 20 | GR | |
| 21 | SB | |
| 22 | GR | |
| 23 | W | |
| 24 | SB | |
| 25 | BR | |
| 26 | LG | |
| 27 | Y | |
| 28 | R | |
| 29 | Y | |
| 30 | SHIELD | |
| 31 | G | |
| 32 | R | |
| 33 | R | |
| 34 | BG | |
| 35 | GR | |
| 36 | BR | |
| 37 | P | - [With climate controlled seat] |
| 38 | Y | - [Without climate controlled seat] |
| 39 | Y | - [With climate controlled seat] |
| 40 | GR | - [Without climate controlled seat] |
| 41 | SHIELD | |
| 42 | L | |
| 43 | P | |
| 44 | SHIELD | |

| | |
|----------------|------------------------------------|
| Connector No. | E1 |
| Connector Name | BATTERY TERMINAL WITH FUSIBLE LINK |
| Connector Type | L02FER-MC |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | W | |
| 2 | R | |


| | |
|----------------|------------------|
| Connector No. | E3 |
| Connector Name | WIRE TO WIRE |
| Connector Type | SAA30MB-RS8-SH28 |

 

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | L/Y | |
| 2 | SHIELD | |
| 3 | L/B | |
| 4 | SHIELD | |
| 5 | BR | |
| 6 | G | |
| 7 | W | |
| 8 | W | |
| 9 | W | |
| 10 | Y | |
| 11 | P | |
| 12 | SB | |
| 13 | BR | |
| 14 | G | |
| 15 | R | |
| 16 | LG | |
| 17 | P | |
| 18 | Y | |
| 19 | BG | |
| 20 | B | |
| 21 | SB | |

| | | |
|----|--------|--|
| 22 | W | |
| 23 | L | |
| 24 | G | |
| 25 | V | |
| 26 | G | |
| 27 | GR | |
| 28 | V | |
| 29 | P | |
| 30 | R | |
| 31 | BR | |
| 32 | Y | |
| 33 | G | |
| 34 | BG | |
| 37 | SHIELD | |
| 38 | L | |
| 39 | P | |
| 40 | R | |
| 41 | W | |
| 42 | LG | |
| 43 | G | |
| 46 | SHIELD | |
| 47 | W | |
| 48 | BR | |
| 49 | G | |
| 50 | B | |
| 51 | SB | |
| 52 | R | |

| | |
|----------------|--|
| Connector No. | E6 |
| Connector Name | FROM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) |
| Connector Type | TH08FW-NH |

 

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 39 | P | |
| 40 | L | |
| 41 | B/W | |
| 42 | Y | |
| 43 | SB | |
| 44 | LG | |
| 45 | G | |
| 46 | W | |

CHARGING SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


CHARGING SYSTEM

| | |
|----------------|--|
| Connector No. | E7 |
| Connector Name | SMALL INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | TH80PW-CS12-M4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 48 | BR | - |
| 49 | EG | - |
| 51 | Y | - |
| 53 | W | - |
| 54 | P | - |
| 55 | SB | - |
| 56 | LG | - |
| 57 | G | - |
| 58 | GR | - |
| 69 | BR | - |
| 70 | EG | - |
| 73 | P | - |
| 74 | G | - |
| 75 | SB | - |
| 76 | Y | - |
| 77 | R | - |
| 80 | W | - |

| | |
|----------------|-----------------|
| Connector No. | E106 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80PW-CS16-1M4 |

 

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | GR | - |
| 3 | EG | - |
| 4 | B/W | - |
| 5 | G | - |
| 6 | EG | - |

| | | |
|----|----|---|
| 7 | LG | - |
| 8 | G | - |
| 10 | W | - |
| 11 | V | - |
| 12 | R | - |
| 13 | L | - |
| 14 | GR | - |
| 15 | P | - |
| 16 | W | - |
| 17 | V | - |
| 18 | EG | - |
| 19 | GR | - |
| 20 | LG | - |
| 30 | R | - |
| 31 | L | - |
| 32 | EG | - |
| 33 | P | - |
| 34 | V | - |
| 35 | BR | - |
| 36 | W | - |
| 37 | Y | - |
| 38 | R | - |
| 39 | B | - |
| 40 | G | - |
| 41 | W | - |
| 42 | LG | - |
| 43 | SB | - |
| 44 | GR | - |
| 45 | EG | - |
| 46 | LG | - |
| 47 | V | - |
| 48 | P | - |
| 49 | L | - |
| 59 | B | - |
| 66 | LG | - |
| 67 | SB | - |
| 68 | R | - |
| 69 | W | - |
| 70 | G | - |
| 80 | W | - |
| 81 | P | - |
| 82 | G | - |
| 83 | V | - |
| 84 | L | - |
| 85 | EG | - |
| 86 | LG | - |
| 87 | Y | - |
| 88 | GR | - |
| 89 | W | - |
| 90 | W | - |
| 91 | G | - |
| 91 | G | - |
| 92 | B | - |

| | | |
|-----|--------|---|
| 93 | GR | - |
| 94 | V | - |
| 95 | Y | - |
| 97 | BR | - |
| 98 | SHIELD | - |
| 99 | L | - |
| 100 | P | - |

| | |
|----------------|------------------------------------|
| Connector No. | E202 |
| Connector Name | BATTERY TERMINAL WITH FUSIBLE LINK |
| Connector Type | 24340 78905 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6 | B/GR | - |

| | |
|----------------|-------------|
| Connector No. | E203 |
| Connector Name | ALTERNATOR |
| Connector Type | 24340 65F45 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | B/GR | B |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


CHG

CHARGING SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

CHARGING SYSTEM

| | |
|----------------|-----------------|
| Connector No. | F1 |
| Connector Name | WIRE TO WIRE |
| Connector Type | SA33FE-RSS-S1Z3 |

 

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | L/Y | - |
| 2 | SHIELD | - |
| 3 | L/B | - |
| 4 | SHIELD | - |
| 5 | BR | - |
| 7 | G | - |
| 8 | W | - |
| 9 | W | - |
| 10 | G | - |
| 11 | R | - |
| 12 | P | - |
| 13 | L | - |
| 14 | LG | - |
| 15 | R | - |
| 16 | Y | - |
| 17 | W | - |
| 18 | LG | - |
| 19 | P | - |
| 20 | O | - |
| 21 | BR | - |
| 22 | G | - |
| 23 | Y | - |
| 24 | LG | - |
| 25 | V | - |
| 27 | GR | - |
| 28 | BR | - |
| 28 | L | - |
| 30 | R | - |
| 31 | P | - |
| 32 | W | - |
| 33 | SB | - |
| 34 | O | - |
| 37 | B | - |
| 38 | W | - |
| 39 | Y | - |
| 40 | G | - |
| 41 | B | - |
| 42 | GR | - |


| | | |
|----|--------|---|
| 43 | R | - |
| 46 | SHIELD | - |
| 47 | W/L | - |
| 48 | LG | - |
| 49 | O/L | - |
| 50 | L/Y | - |
| 51 | W | - |
| 52 | L/G | - |

| | |
|----------------|------------|
| Connector No. | F36 |
| Connector Name | ALTERNATOR |
| Connector Type | HS03FB |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2 | G | L |
| 3 | V | S |
| 4 | Y | C |


| | |
|----------------|--------------|
| Connector No. | F03 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TK36FW-NS10 |

 

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2 | G | - |
| 3 | W | - |
| 4 | R | - |
| 5 | B | - |
| 9 | Y | - |
| 10 | GR | - |
| 19 | O | - |
| 20 | Y | - |
| 28 | B | - |

| | | |
|----|----|---|
| 28 | LG | - |
| 30 | R | - |
| 31 | R | - |
| 41 | O | - |
| 42 | BR | - |
| 43 | P | - |
| 44 | L | - |
| 45 | Y | - |
| 48 | V | - |

| | |
|----------------|------------------|
| Connector No. | M3 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS12FW-CS |

 

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6C | R | - |
| 7C | B | - |
| 8C | W | - |
| 9C | BG | - |
| 10C | L | - |
| 11C | LG | - |
| 12C | R | - |

JCMW6313G

CHARGING SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

CHARGING SYSTEM


| | |
|----------------|-------------------|
| Connector No. | M6 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80MW-CS (F-TM4) |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|------------------------------|
| 1 | BG | - |
| 3 | R | - |
| 4 | G | - |
| 5 | G | - |
| 6 | BR | - |
| 7 | BR | - |
| 8 | Y | - |
| 10 | W | - |
| 11 | GR | - |
| 12 | R | - |
| 13 | L | - |
| 14 | G | - |
| 15 | P | - |
| 16 | W | - |
| 17 | BR | - |
| 18 | V | - |
| 19 | BG | - |
| 20 | L | - |
| 30 | R | - |
| 31 | L | - |
| 32 | Y | - |
| 33 | GR | - |
| 34 | P | - |
| 35 | BR | - |
| 36 | BR | - |
| 37 | Y | - |
| 38 | LG | - |
| 39 | SB | - |
| 40 | G | - |
| 41 | W | - |
| 42 | LG | - |
| 43 | P | - |
| 44 | GR | - [With A/T] - [With M/T] |
| 45 | R | - |
| 46 | EG | - |
| 9 | L | - |
| 10 | BR | - |
| 47 | P | - |
| 48 | P | - |

| | | |
|-----|--------|---|
| 49 | L | - |
| 59 | B | - |
| 66 | Y | - |
| 67 | G | - |
| 68 | R | - |
| 69 | W | - |
| 70 | G | - |
| 80 | SB | - |
| 81 | R | - |
| 82 | V | - |
| 83 | W | - |
| 84 | L | - |
| 85 | BG | - |
| 86 | G | - |
| 87 | V | - |
| 88 | B | - |
| 89 | SB | - |
| 90 | G | - |
| 91 | W | - |
| 92 | B | - |
| 93 | G | - |
| 94 | L | - |
| 95 | BR | - |
| 97 | P | - |
| 98 | SHIELD | - |
| 99 | V | - |
| 100 | SB | - |

| | |
|----------------|-------------------|
| Connector No. | M7 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80MW-CS (F-TM4) |

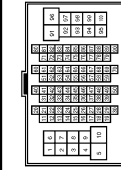

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | BG | - |
| 2 | LG | - |
| 3 | G | - |
| 4 | V | - |
| 5 | L | - |
| 6 | B | - |
| 9 | L | - |
| 10 | BR | - |
| 12 | SHIELD | - |

| | | |
|----|--------|---|
| 13 | V | - |
| 14 | BR | - |
| 15 | GR | - |
| 16 | LG | - |
| 17 | L | - |
| 20 | BR | - |
| 21 | G | - |
| 22 | R | - |
| 23 | SB | - |
| 24 | B | - |
| 25 | W | - |
| 26 | Y | - |
| 27 | V | - |
| 28 | P | - |
| 29 | V | - |
| 31 | SHIELD | - |
| 32 | G | - |
| 33 | R | - |
| 34 | BG | - |
| 35 | GR | - |
| 36 | GR | - |
| 37 | P | - |
| 37 | L | - [With climate controlled seat] - [Without climate controlled seat] |
| 38 | V | - |
| 38 | GR | - [Without climate controlled seat] |
| 40 | SHIELD | - |
| 41 | L | - |
| 42 | P | - |
| 43 | SHIELD | - |
| 44 | Y | - |
| 45 | BR | - |
| 46 | SB | - |
| 47 | SB | - |
| 48 | LG | - |
| 48 | LG | - [With BOSE system] - [Without BOSE system] |
| 49 | SB | - [With BOSE system] - [Without BOSE system] |
| 50 | LG | - [Without BOSE system] |
| 51 | R | - |
| 52 | V | - |
| 53 | P | - |
| 54 | BR | - |
| 55 | Y | - [With A/T] - [With M/T] |
| 55 | BG | - [With A/T] - [With M/T] |
| 56 | L | - |
| 57 | V | - |
| 60 | LG | - |
| 61 | BG | - |
| 62 | B | - |
| 63 | V | - |
| 64 | SR | - |
| 65 | BR | - |

| | | |
|-----|-----|---|
| 66 | Y | - |
| 67 | P | - |
| 68 | L | - |
| 69 | P | - |
| 70 | L | - |
| 80 | G | - |
| 81 | LG | - |
| 82 | Y | - |
| 83 | BR | - |
| 84 | B | - |
| 85 | L | - |
| 86 | Y | - |
| 87 | GR | - |
| 91 | R | - |
| 93 | G | - |
| 94 | P | - |
| 95 | GR | - |
| 96 | Y | - |
| 97 | SB | - |
| 99 | Y/B | - |
| 100 | Y/B | - |

| | |
|----------------|--------------|
| Connector No. | M17 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TK02FW |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | L | - |
| 2 | P | - |

JCMW6314G

A
B
C
D
E
F
G
H
I
J
K
L
CHG
N
O
P

CHARGING SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

CHARGING SYSTEM

| | |
|----------------|--------------|
| Connector No. | M18 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TK22NW |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | L | - |
| 2 | P | - |


| | |
|----------------|-------------------|
| Connector No. | M53 |
| Connector Name | COMBINATION METER |
| Connector Type | SAB40PW |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|--|
| 1 | V | BATTERY POWER SUPPLY |
| 2 | LG | COMMUNICATION SIGNAL (METER->AMP) |
| 3 | GR | COMMUNICATION SIGNAL (AMP->METER) |
| 5 | B | GROUND |
| 8 | W | ALTERNATOR SIGNAL |
| 7 | LG | AIR BAG SIGNAL |
| 10 | R | SECURITY SIGNAL |
| 15 | B | GROUND |
| 16 | B | METER CONTROL SWITCH GROUND |
| 18 | GR | ILL GND |
| 19 | B | ILL GND |
| 20 | R | ILL |
| 21 | R | IGNITION SIGNAL |
| 22 | B | GROUND |
| 24 | SB | COMMUNICATION SIGNAL (LCD->AMP) |
| 25 | B | COMMUNICATION SIGNAL (AMP->LCD) |
| 26 | R | VEHICLE SPEED SIGNAL (8-PUL/SEC) |
| 27 | V | PARKING BRAKE SWITCH SIGNAL |
| 28 | SB | BRAKE FLUID LEVEL SWITCH SIGNAL |
| 28 | L | SEAT BELT BUCKLE SW SIGNAL (DRIVER SIDE) |

| | | |
|----|----|---|
| 30 | G | SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE) |
| 31 | L | WASHER LEVEL SWITCH SIGNAL |
| 33 | R | ILLUMINATION CONTROL SIGNAL |
| 36 | LG | SELECT SWITCH SIGNAL |
| 37 | SB | ENTER SWITCH SIGNAL |
| 38 | L | TRIP A/B RESET SWITCH SIGNAL |
| 38 | P | ILLUMINATION CONTROL SWITCH (-) |
| 40 | BG | ILLUMINATION CONTROL SWITCH (+) |

| | |
|----------------|--------------------|
| Connector No. | M107 |
| Connector Name | ECM |
| Connector Type | RH24FCY-RZ8-R-LH-Z |

 

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 97 | R | APS 1 |
| 98 | P | APS 2 |
| 99 | L | AVCC-APS 1 |
| 100 | W | GND-APS 1 |
| 101 | SB | ASCDSW |
| 102 | G | FTPRS |
| 103 | G | AVCC P-APS 2 |
| 104 | GR | GND-APS 2 |
| 105 | L | PDPRESS |
| 106 | LG | TF |
| 107 | BR | AVCC-PDPRES |
| 108 | Y | GND-ASCDSW |
| 109 | G | NEUT-H |
| 110 | BR | TACHO |
| 112 | R | GND-PDPRES |
| 113 | P | VEHCAN-L1 |
| 114 | L | VEHCAN-H1 |
| 117 | V | KLINE |
| 121 | LG | ODCV |
| 122 | P | BRAKE |
| 123 | B | GND |
| 124 | B | GND |
| 125 | R | VBR |
| 126 | BR | BNGSW |
| 127 | B | GND |
| 128 | B | GND |

| | |
|----------------|--------------|
| Connector No. | M116 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TK38MW-AS10 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2 | W | - |
| 3 | BG | - |
| 4 | R | - |
| 5 | B | - |
| 9 | R | - |
| 10 | R | - |
| 18 | BG | - |
| 20 | Y | - |
| 28 | GR | - |
| 29 | LG | - |
| 30 | LG | - |
| 31 | W | - |
| 41 | BG | - |
| 42 | G | - |
| 43 | P | - |
| 44 | L | - |
| 45 | G | - |
| 46 | Y | - |

CHARGING SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

CHARGING SYSTEM

Symptom Table

INFOID:000000005622452

| Symptom | Reference |
|--|---|
| Discharged battery | Refer to CHG-3, "Work Flow" . |
| The charge warning lamp does not illuminate when the ignition switch is set to ON. | |
| The charge warning lamp does not turn OFF after the engine starts. | |
| The charging warning lamp turns ON when increasing the engine speed. | |

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005622453

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Service Procedure Precautions for Models with a Pop-up Roll Bar

INFOID:000000005622454

WARNING:

- Risk of passenger injury or death may increase if the pop-up roll bar does not deploy during a roll over collision. In order to reduce the chance of an incident where the pop-up roll bar is inoperative, all maintenance must be performed by a NISSAN or INFINITI dealer.
- Before removing and installing the pop-up roll bar component parts and harness, always turn the ignition switch OFF, disconnect the battery negative terminal, and wait for 3 minutes or more. (The purpose of this operation is to discharge electricity that is accumulated in the auxiliary power supply circuit in the air bag diagnosis sensor unit.)
- When repairing, removing, and installing a pop-up roll bar, always refer to SRS AIR BAG and SRS AIR BAG CONTROL warnings in the Service Manual.

Precaution for Power Generation Voltage Variable Control System

INFOID:000000005622455

CAUTION:

For this model, the battery current sensor that is installed to the battery cable at the negative terminal measures the charging/discharging current of the battery, and performs various controls. If the electrical component or the ground wire is connected directly to the battery terminal, the current other than that being measured with the battery current sensor is charging to or discharging from the battery. This condition causes the malfunction of the control, and then the battery discharge may occur. Do not connect the electrical component or the ground wire directly to the battery terminal.

Precaution for Battery Service

INFOID:000000005622456

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the

PRECAUTIONS

< PRECAUTION >

Window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

PREPARATION


< PREPARATION >

PREPARATION

PREPARATION


Special Service Tools

INFOID:000000005622457
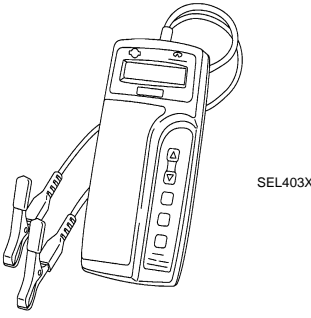
| Tool number (Kent-Moore No.) Tool name | Description |
|--|--|
| <p>— (J-44373 Model MCR620) Starting/Charging System Tester</p>  <p>SEL403X</p> | <p>Tests starting and charging systems. For operating instructions, refer to Technical Service Bulletin.</p> |

Commercial Service Tools

INFOID:000000005622458

| Tool name | Description |
|--|---|
| <p>Power tool</p>  <p>PIIB1407E</p> | <p>Loosening bolts, nuts and screws</p> |

CHARGING SYSTEM PRELIMINARY INSPECTION

< PERIODIC MAINTENANCE >

PERIODIC MAINTENANCE

CHARGING SYSTEM PRELIMINARY INSPECTION

Inspection Procedure

INFOID:000000005622459

1. CHECK BATTERY TERMINALS CONNECTION

Check if battery terminals are clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair battery terminals connection.

2. CHECK FUSE

Check for blown fuse and fusible link.

| Unit | Power source (Power supply terminals) | Fuse No. |
|-------------------|---------------------------------------|----------|
| Alternator | Battery ("S" terminal) | 32 |
| Combination meter | Ignition switch ON ("L" terminal) | 4 |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Be sure to eliminate the cause of malfunction before installing new fuse.

3. CHECK "E" TERMINAL CONNECTION (ALTERNATOR GROUND)

Check if "E" terminal (alternator ground) is clean and tight.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair "E" terminal (alternator ground) connection.

4. CHECK DRIVE BELT TENSION

Check drive belt tension. Refer to [EM-13. "Checking"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair as needed.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< PERIODIC MAINTENANCE >

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

Inspection Procedure

INFOID:000000005622460

CAUTION:

When performing this inspection, always use a charged battery that has completed the battery inspection. (When the charging rate of the battery is low, the response speed of the voltage change will become slow. This can cause an incorrect inspection.)

1. CHECK ECM (CONSULT-III)

Perform ECM self-diagnosis with CONSULT-III. Refer to [EC-121, "CONSULT-III Function"](#).

Self-diagnostic results content

No malfunction detected>> GO TO 2.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

2. CHECK OPERATION OF POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

1. Connect CONSULT-III and start the engine.
2. The selector lever is in "P" or "N" position and all of the electric loads and A/C, etc. are turned OFF. (A/T models)
The clutch pedal is depressed and all of the electric loads and A/C, etc. are turned OFF. (M/T models)
3. Select "ALTERNATOR DUTY" at "Active Test" of "ENGINE", and then check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 40.0%.

"BATTERY VOLT"

2 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 40.0% : 12 - 13.6 V

4. Check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 80.0%.

"BATTERY VOLT"

20 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 80.0% : +0.5 V or more against the value of "BATTERY VOLT" monitor when DUTY value is 40.0%

Is the measurement value within the specification?

YES >> INSPECTION END

NO >> GO TO 3.

3. CHECK IPDM E/R (CONSULT-III)

Perform IPDM E/R self-diagnosis with CONSULT-III. Refer to [PCS-11, "CONSULT-III Function \(IPDM E/R\)"](#).

Self-diagnostic results content

No malfunction detected>> GO TO 4.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

4. CHECK HARNESS BETWEEN ALTERNATOR AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect alternator connector and IPDM E/R connector.
3. Check continuity between alternator harness connector and IPDM E/R harness connector.

| Alternator harness connector | | IPDM E/R harness connector | | Continuity |
|------------------------------|----------|----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| F36 | 4 | E7 | 76 | Existed |

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< PERIODIC MAINTENANCE >

4. Check continuity between alternator harness connector and ground.

| Alternator harness connector | | Ground | Continuity |
|------------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| F36 | 4 | | Not existed |

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Repair harness or connector between IPDM E/R and alternator.

A
B
C
D
E
F
G
H
I
J
K
L

CHG

N
O
P

ALTERNATOR

< REMOVAL AND INSTALLATION >


REMOVAL AND INSTALLATION

ALTERNATOR

Exploded View

INFOID:000000005622461

REMOVAL

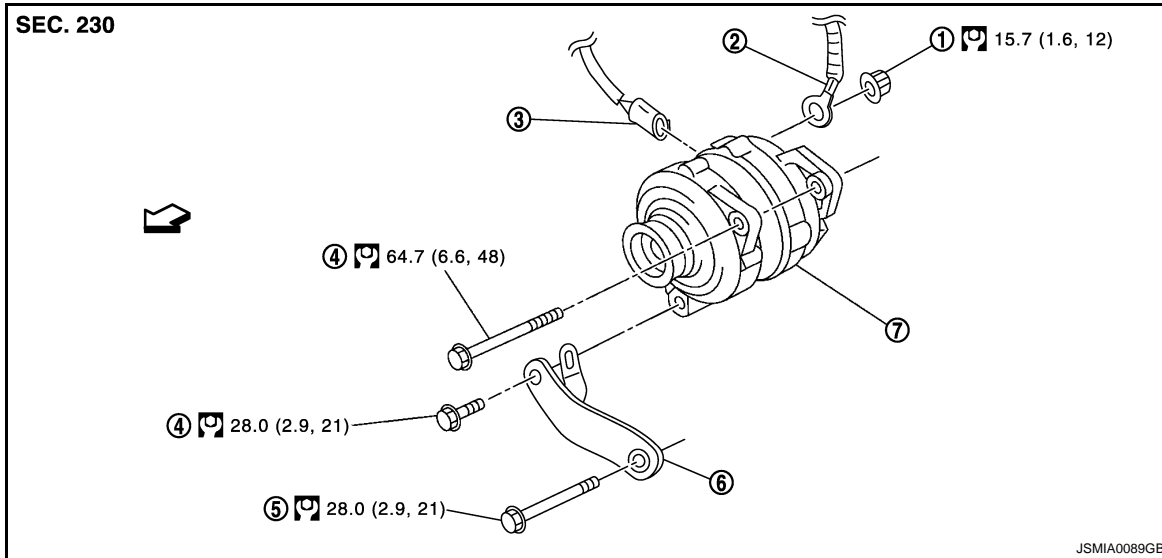

- | | | |
|-----------------------------|----------------------------------|-------------------------|
| 1. "B" terminal nut | 2. "B" terminal harness | 3. Alternator connector |
| 4. Alternator mounting bolt | 5. Alternator stay mounting bolt | 6. Alternator stay |
| 7. Alternator | | |

↔ : Engine front


Refer to [GI-4, "Components"](#) for symbols in the figure.

DISASSEMBLY

ALTERNATOR

< REMOVAL AND INSTALLATION >

Type: A003TJ1991

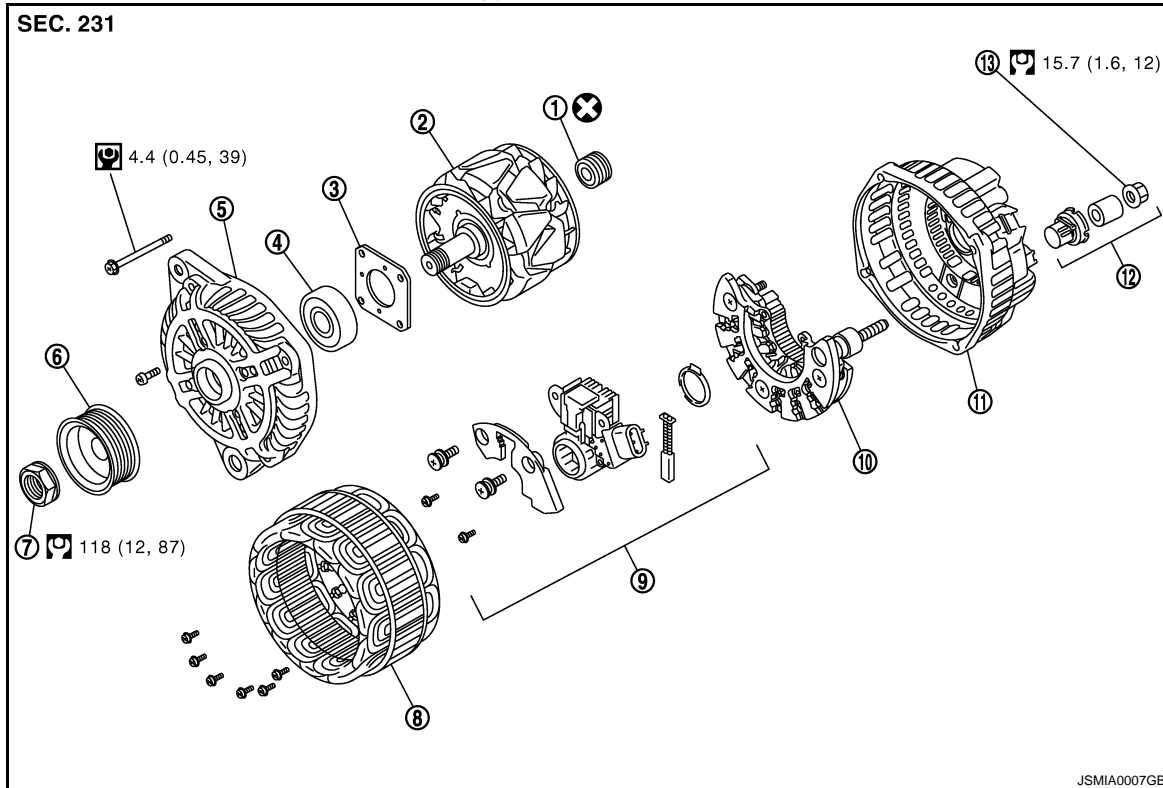

- | | | |
|----------------------|---------------------------|----------------------------------|
| 1. Rear bearing | 2. Rotor assembly | 3. Retainer |
| 4. Front bearing | 5. Front bracket assembly | 6. Pulley |
| 7. Pulley nut | 8. Stator assembly | 9. IC voltage regulator assembly |
| 10. Diode assembly | 11. Rear bracket assembly | 12. Terminal set |
| 13. "B" terminal nut | | |


Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:0000000005622462

REMOVAL


1. Disconnect the battery cable from the negative terminal.
2. Remove engine front undercover, using power tools.
3. Remove radiator cooling fan assembly. Refer to [CO-16, "Exploded View"](#).
4. Remove drive belt. Refer to [EM-13, "Removal and Installation"](#).
5. Disconnect alternator connector (1).
6. Remove "B" terminal nut (2).
7. Remove the harness bracket bolts (A).

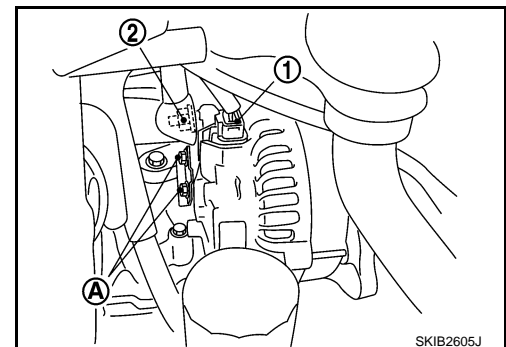

ALTERNATOR

< REMOVAL AND INSTALLATION >

8. Remove oil pressure switch harness clip (C) from alternator stay (1).
9. Disconnect oil pressure switch connector (D) and oil temperature sensor connector (E).
10. Remove alternator mounting bolt (B) and alternator stay mounting bolt (F) using power tools, then remove alternator stay.
11. Remove alternator mounting bolt (A), using power tools.

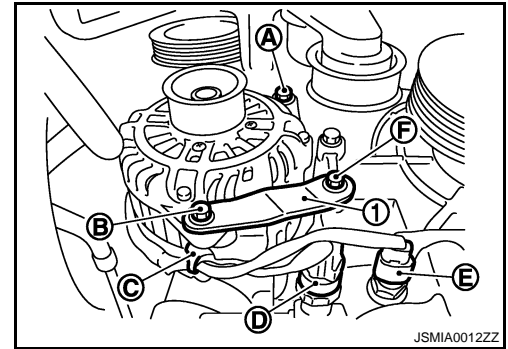

12. Remove alternator assembly downward from the vehicle.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to tighten "B" terminal nut carefully.

- Install alternator, and check tension of belt. Refer to [EM-13, "Checking"](#).
- For this model, the power generation voltage variable control system that controls the power generation voltage of the alternator has been adopted. Therefore, the power generation voltage variable control system operation inspection should be performed after replacing the alternator, and then make sure that the system operates normally. Refer to [CHG-26, "Inspection Procedure"](#).

Inspection

INFOID:000000005622463

ALTERNATOR PULLEY INSPECTION

Perform the following.

- Make sure that alternator pulley does not rattle.
- Make sure that alternator pulley nut is tight. Refer to [CHG-28, "Exploded View"](#).

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Alternator

INFOID:0000000005622464

| | | |
|---|-------------|--|
| Type | | A003TJ1991 |
| | | mitsubishi make |
| Nominal rating | [V - A] | 12 -150 |
| Ground polarity | | Negative |
| Minimum revolution under no-load (When 13.5 V is applied) | [rpm] | Less than 1,300 |
| Hot output current (When 13.5 V is applied) | [A/rpm] | More than 31/1,300 More than 122/2,500 More than 144/5,000 |
| Regulated output voltage | [V] | 14.1 - 14.7* |
| Minimum length of brush | [mm (in)] | More than 5.00 (0.197) |
| Brush spring pressure | [N (g, oz)] | 4.1 - 5.3 (418 - 541, 14.7 - 19.1) |
| Slip ring minimum outer diameter | [mm (in)] | More than 22.1 (0.870) |
| Rotor (Field coil) resistance | [Ω] | 1.7 - 2.0 |

*: Adjustment range of power generation voltage variable control is 11.4 - 15.6 V.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG