

SECTION **PWO**  
POWER OUTLET

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

CONTENTS

<b>DTC/CIRCUIT DIAGNOSIS</b> .....	2	Precaution for Battery Service .....	6
<b>CIGARETTE LIGHTER</b> .....	2	Service Procedure Precautions for Models with a	
Wiring Diagram - CIGARETTE LIGHTER - .....	2	Pop-up Roll Bar .....	6
<b>POWER SOCKET</b> .....	4	<b>REMOVAL AND INSTALLATION</b> .....	7
Wiring Diagram - POWER SOCKET - .....	4	<b>CIGARETTE LIGHTER</b> .....	7
<b>PRECAUTION</b> .....	6	Exploded View .....	7
<b>PRECAUTIONS</b> .....	6	Removal and Installation .....	7
Precaution for Supplemental Restraint System		<b>POWER SOCKET</b> .....	8
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-		Exploded View .....	8
SIONER" .....	6	Removal and Installation .....	8

PWO

# CIGARETTE LIGHTER


< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### CIGARETTE LIGHTER

#### Wiring Diagram - CIGARETTE LIGHTER -

INFOID:000000004371924

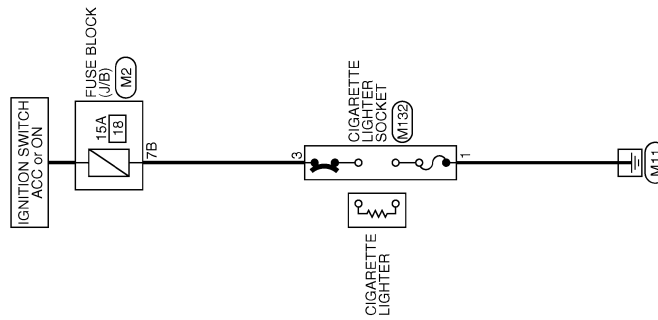



CIGARETTE LIGHTER

2009/02/27



JCMWA4245GB

# CIGARETTE LIGHTER

## < DTC/CIRCUIT DIAGNOSIS >

CIGARETTE LIGHTER			
Connector No.	M2		
Connector Name	FUSE BLOCK (L/B)		
Connector Type	NS10FW-GS		
 			
Terminal No.	7B	P	
Color of Wire			
Signal Name [Specification]			

CIGARETTE LIGHTER SOCKET			
Connector No.	M132		
Connector Name	CIGARETTE LIGHTER SOCKET		
Connector Type	NS03FW-CS		
 			
Terminal No.	1	B	
Color of Wire			
Signal Name [Specification]			
Terminal No.	3	P	
Color of Wire			
Signal Name [Specification]			

JCMWA4246GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PWO

# POWER SOCKET


< DTC/CIRCUIT DIAGNOSIS >

## POWER SOCKET

### Wiring Diagram - POWER SOCKET -

INFOID:000000004371925

- : With A/T
- : With M/T
- : Up to October 2009 production
- : From October 2009 production

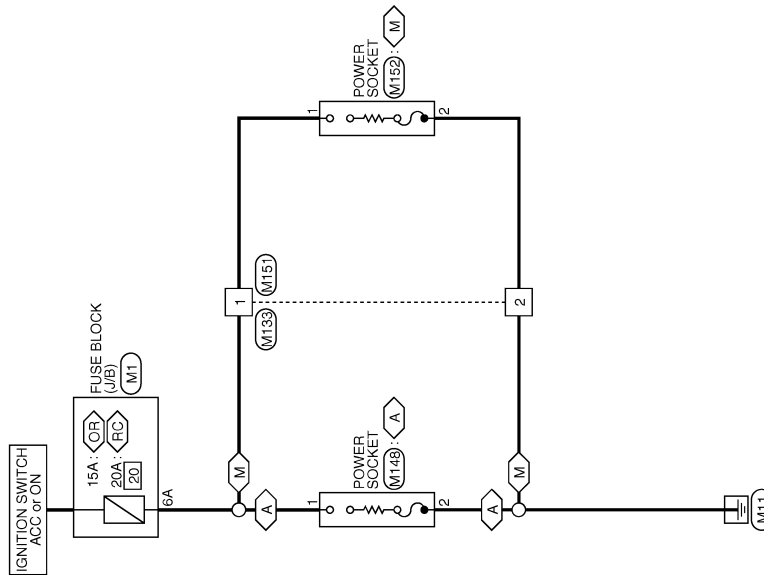

POWER SOCKET

2010/02/24



JCMWA5747GB

# POWER SOCKET

< DTC/CIRCUIT DIAGNOSIS >



## POWER SOCKET

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	ISO6FW-M2



Terminal No.	6A	Y	—	—
Color of Wire	Y	—	—	—
Signal Name [Specification]				

Connector No.	M152
Connector Name	POWER SOCKET (WITH M/T)
Connector Type	PO2FB-Z



Terminal No.	1	R	—	—
Color of Wire	R	—	—	—
Signal Name [Specification]				

Connector No.	M133
Connector Name	WIRE TO WIRE
Connector Type	MO2FB-LC



Terminal No.	1	Y	—	—
Color of Wire	Y	—	—	—
Signal Name [Specification]				

Connector No.	M148
Connector Name	POWER SOCKET (WITH A/T)
Connector Type	PO2FB-Z

Terminal No.	1	Y	—	—
Color of Wire	Y	—	—	—
Signal Name [Specification]				

Connector No.	M151
Connector Name	WIRE TO WIRE
Connector Type	MO2MB-P-LC

Terminal No.	1	R	—	—
Color of Wire	R	—	—	—
Signal Name [Specification]				

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PWO

JCMWA4248GB

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005142608

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Battery Service

INFOID:000000005142609

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

#### Service Procedure Precautions for Models with a Pop-up Roll Bar

INFOID:000000005167691

#### **WARNING:**

- Risk of passenger injury or death may increase if the pop-up roll bar does not deploy during a roll over collision. In order to reduce the chance of an incident where the pop-up roll bar is inoperative, all maintenance must be performed by a NISSAN or INFINITI dealer.
- Before removing and installing the pop-up roll bar component parts and harness, always turn the ignition switch OFF, disconnect the battery negative terminal, and wait for 3 minutes or more. (The purpose of this operation is to discharge electricity that is accumulated in the auxiliary power supply circuit in the air bag diagnosis sensor unit.)
- When repairing, removing, and installing a pop-up roll bar, always refer to SRS AIR BAG and SRS AIR BAG CONTROL warnings in the Service Manual.

# CIGARETTE LIGHTER


< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### CIGARETTE LIGHTER

#### Exploded View


- 1 : Cigarette lighter
- 2 : Cigarette lighter socket
- 3 : Cigarette lighter ring

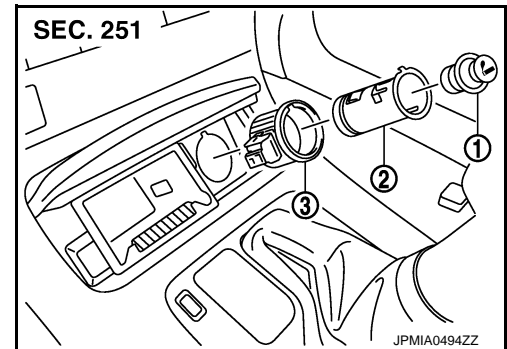

#### Removal and Installation

##### REMOVAL


1. Remove console finisher assembly. Refer to [IP-24, "Exploded View"](#).
2. Remove the screws (A) from reverse side cigarette lighter socket (1).

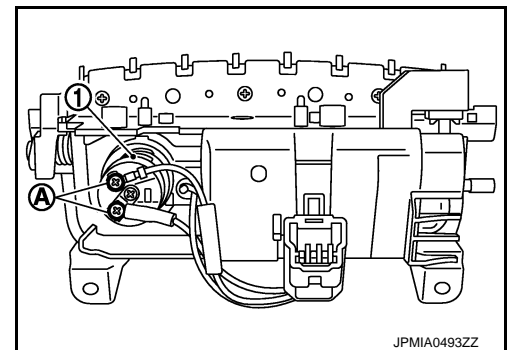

3. Pull out cigarette lighter (1).

A : Cut out

4. Pull out cigarette lighter socket (2) by pushing the cigarette lighter ring pawl (C) from the cigarette lighter socket hole (square) (B).
5. Remove cigarette lighter ring (3) from console finisher assembly while pressing pawls.

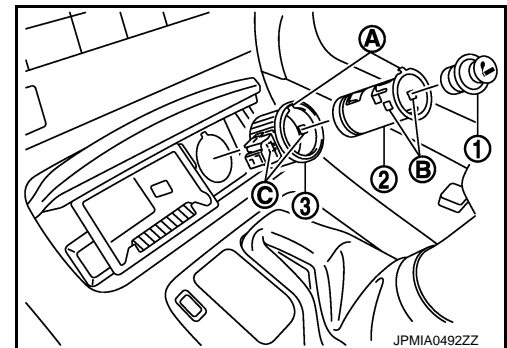

##### INSTALLATION

Install in the reverse order of removal.

##### NOTE:

Align the cut outs of cigarette lighter socket and cigarette lighter ring.

# POWER SOCKET


< REMOVAL AND INSTALLATION >

## POWER SOCKET

### Exploded View

INFOID:000000004371930

- 1 : Ring
- 2 : Inner socket

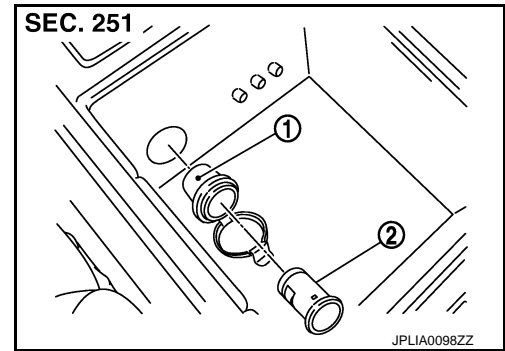

### Removal and Installation


INFOID:000000004371931

#### REMOVAL

1. Remove rear upper console assembly (A/T models) or center console assembly (M/T models). Refer to [IP-24, "Exploded View"](#).
2. Disconnect power socket connector (A).

C : Cut out

3. Pull out inner socket (2) by pushing the ring pawl (B) from the inner socket hole (square) (D).
4. Remove ring (1) from console box while pressing pawls.

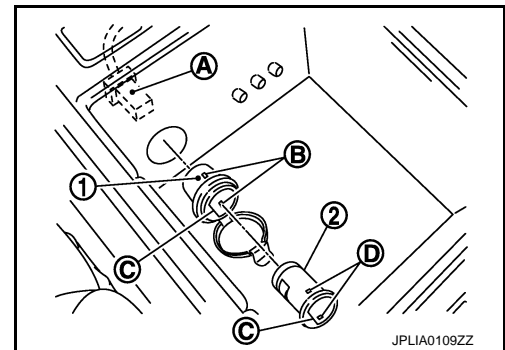

#### INSTALLATION

Install in the reverse order of removal.

**NOTE:**

Align the cut outs of inner socket and ring.