

SECTION PCS

POWER CONTROL SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CONTENTS

| | | |
|---|--|----|
| IPDM E/R | Diagnosis Procedure | 16 |
| SYSTEM DESCRIPTION | POWER SUPPLY AND GROUND CIRCUIT | 17 |
| RELAY CONTROL SYSTEM | Diagnosis Procedure | 17 |
| System Diagram | ECU DIAGNOSIS INFORMATION | 18 |
| System Description | IPDM E/R (INTELLIGENT POWER DISTRI- | |
| Component Parts Location | BUTION MODULE ENGINE ROOM) | 18 |
| POWER CONTROL SYSTEM | Reference Value | 18 |
| System Diagram | Wiring Diagram - IPDM E/R - | 25 |
| System Description | Fail-safe | 27 |
| SIGNAL BUFFER SYSTEM | DTC Index | 29 |
| System Diagram | PRECAUTION | 30 |
| System Description | PRECAUTIONS | 30 |
| POWER CONSUMPTION CONTROL SYS- | Precaution for Supplemental Restraint System | |
| TEM | (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- | |
| System Diagram | SIONER" | 30 |
| System Description | Precaution for Battery Service | 30 |
| Component Parts Location | REMOVAL AND INSTALLATION | 31 |
| DIAGNOSIS SYSTEM (IPDM E/R) | IPDM E/R (INTELLIGENT POWER DISTRI- | |
| Diagnosis Description | BUTION MODULE ENGINE ROOM) | 31 |
| CONSULT Function (IPDM E/R) | Exploded View | 31 |
| DTC/CIRCUIT DIAGNOSIS | Removal and Installation | 31 |
| U1000 CAN COMM CIRCUIT | POWER DISTRIBUTION SYSTEM | |
| Description | BASIC INSPECTION | 33 |
| DTC Logic | DIAGNOSIS AND REPAIR WORK FLOW | 33 |
| Diagnosis Procedure | Work Flow | 33 |
| B2098 IGNITION RELAY ON STUCK | SYSTEM DESCRIPTION | 36 |
| Description | POWER DISTRIBUTION SYSTEM | 36 |
| DTC Logic | System Description | 36 |
| Diagnosis Procedure | Component Parts Location | 38 |
| B2099 IGNITION RELAY OFF STUCK | Component Description | 39 |
| Description | DIAGNOSIS SYSTEM (BCM) | 40 |
| DTC Logic | | |

PCS

| | | | |
|---|-----------|--|------------|
| COMMON ITEM | 40 | Diagnosis Procedure | 59 |
| COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) | 40 | POWER SUPPLY AND GROUND CIRCUIT | 61 |
| INTELLIGENT KEY | 41 | BCM | 61 |
| INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY) | 41 | BCM : Diagnosis Procedure | 61 |
| DTC/CIRCUIT DIAGNOSIS | 46 | PUSH-BUTTON IGNITION SWITCH | 62 |
| U1000 CAN COMM CIRCUIT | 46 | Description | 62 |
| Description | 46 | Component Function Check | 62 |
| DTC Logic | 46 | Diagnosis Procedure | 62 |
| Diagnosis Procedure | 46 | Component Inspection | 63 |
| U1010 CONTROL UNIT (CAN) | 47 | PUSH-BUTTON IGNITION SWITCH POSI- TION INDICATOR | 64 |
| DTC Logic | 47 | Description | 64 |
| Diagnosis Procedure | 47 | Component Function Check | 64 |
| Special Repair Requirement | 47 | Diagnosis Procedure | 64 |
| B2553 IGNITION RELAY | 48 | POWER DISTRIBUTION SYSTEM | 66 |
| Description | 48 | Wiring Diagram - PDS (POWER DISTRIBUTION SYSTEM) - | 66 |
| DTC Logic | 48 | ECU DIAGNOSIS INFORMATION | 68 |
| Diagnosis Procedure | 48 | BCM (BODY CONTROL MODULE) | 68 |
| B260A IGNITION RELAY | 50 | Reference Value | 68 |
| Description | 50 | Wiring Diagram - BCM - | 91 |
| DTC Logic | 50 | Fail-safe | 94 |
| Diagnosis Procedure | 50 | DTC Inspection Priority Chart | 95 |
| B2614 ACC RELAY CIRCUIT | 52 | DTC Index | 96 |
| Description | 52 | PRECAUTION | 99 |
| DTC Logic | 52 | PRECAUTIONS | 99 |
| Diagnosis Procedure | 52 | Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" | 99 |
| Component Inspection | 53 | Precaution for Battery Service | 99 |
| B2615 BLOWER RELAY CIRCUIT | 54 | SYMPTOM DIAGNOSIS | 100 |
| Description | 54 | PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE | 100 |
| DTC Logic | 54 | Description | 100 |
| Diagnosis Procedure | 54 | Diagnosis Procedure | 100 |
| Component Inspection | 55 | PUSH-BUTTON IGNITION SWITCH POSI- TION INDICATOR DOES NOT ILLUMINATE .. | 101 |
| B2616 IGNITION RELAY CIRCUIT | 56 | Description | 101 |
| Description | 56 | Diagnosis Procedure | 101 |
| DTC Logic | 56 | REMOVAL AND INSTALLATION | 102 |
| Diagnosis Procedure | 56 | PUSH BUTTON IGNITION SWITCH | 102 |
| Component Inspection | 57 | Removal and Installation | 102 |
| B2618 BCM | 58 | | |
| Description | 58 | | |
| DTC Logic | 58 | | |
| Diagnosis Procedure | 58 | | |
| B261A PUSH-BUTTON IGNITION SWITCH | 59 | | |
| Description | 59 | | |
| DTC Logic | 59 | | |

RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

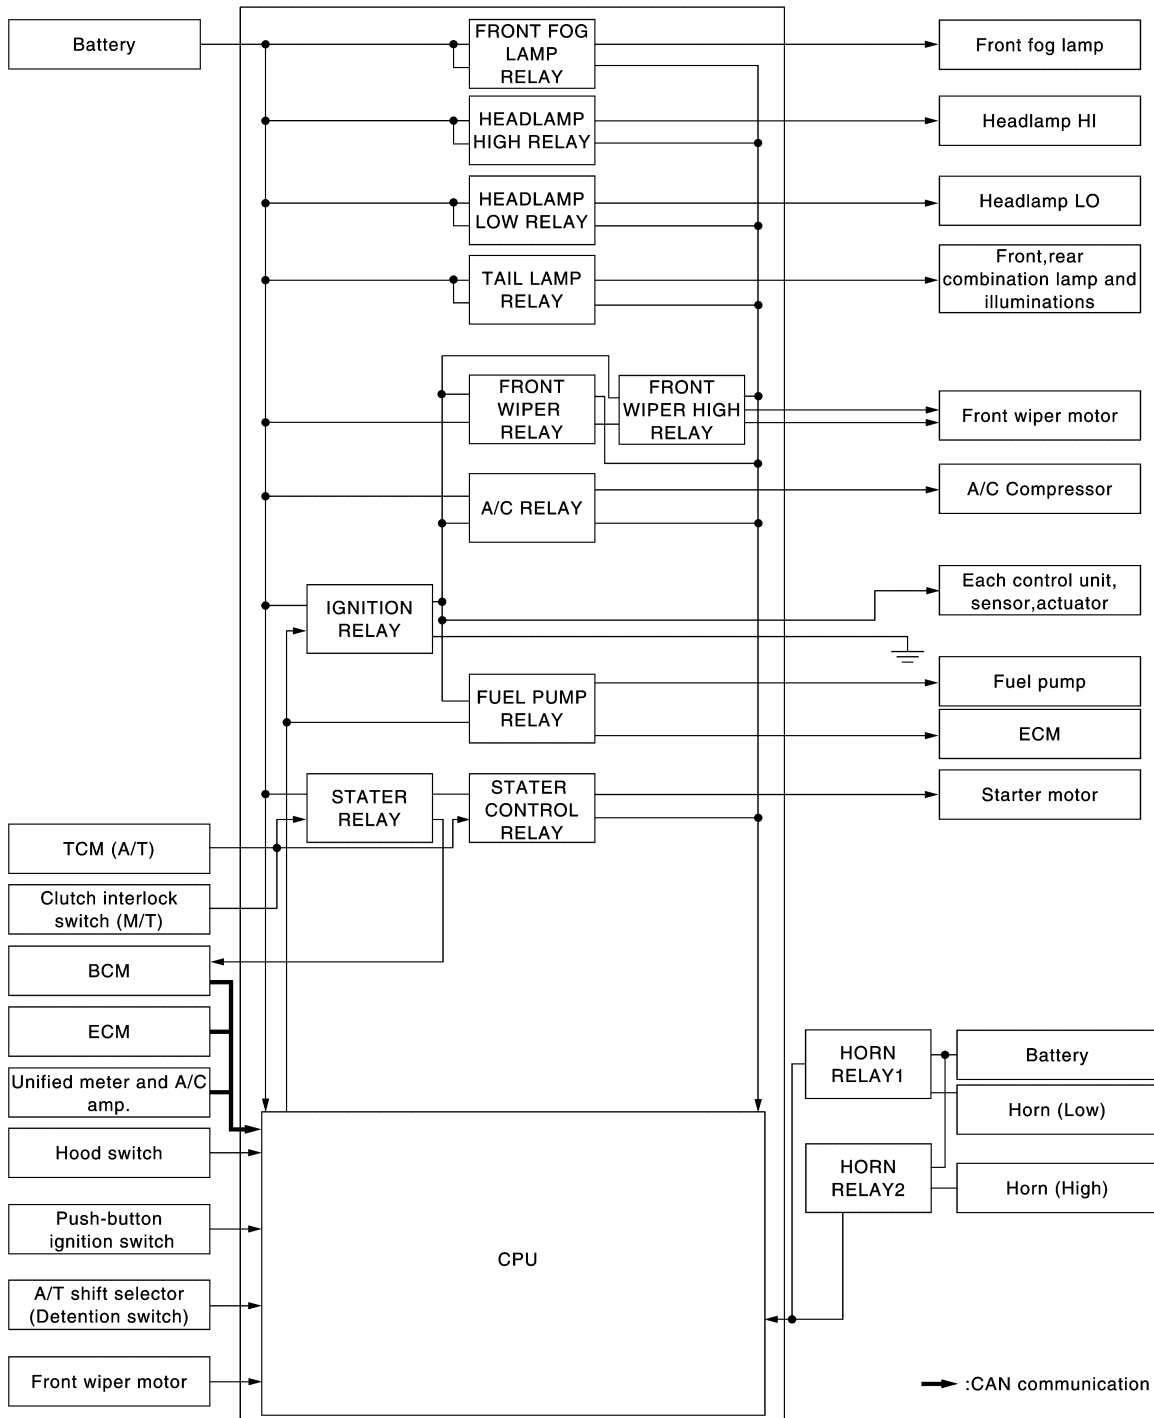
[IPDM E/R]

SYSTEM DESCRIPTION

RELAY CONTROL SYSTEM

System Diagram

INFOID:000000007469477



JMMIA0994GB

System Description

INFOID:000000007469478

IPDM E/R activates the internal control circuit to perform the relay ON-OFF control according to the input signals from various sensors and the request signals received from control units via CAN communication.

CAUTION:

IPDM E/R integrated relays cannot be removed.

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]


| Control relay | Input/output | Transmit unit | Control part | Reference page |
|---|---|----------------------------------|---|--|
| <ul style="list-style-type: none"> Headlamp low relay Headlamp high relay | <ul style="list-style-type: none"> Low beam request signal High beam request signal | BCM (CAN) | <ul style="list-style-type: none"> Headlamp low Headlamp high | EXL-7 |
| Front fog lamp relay | Front fog light request signal | BCM (CAN) | Front fog lamp | EXL-17 |
| Tail lamp relay | Position light request signal | BCM (CAN) | <ul style="list-style-type: none"> Parking lamp Side marker lamp License plate lamp Tail lamp | EXL-21 |
| | | | Illuminations | INL-13 |
| <ul style="list-style-type: none"> Front wiper relay Front wiper high relay | Front wiper request signal | BCM (CAN) | Front wiper | WW-8 |
| | Front wiper stop position signal | Front wiper motor | | |
| <ul style="list-style-type: none"> Horn relay 1 Horn relay 2 | <ul style="list-style-type: none"> Theft warning horn request signal Horn reminder signal | BCM (CAN) | <ul style="list-style-type: none"> Horn (low) Horn (high) | SEC-22 |
| <ul style="list-style-type: none"> Starter relay^{NOTE} Starter control relay | Starter control relay signal | BCM (CAN) | Starter motor | SEC-90 , SEC-88 |
| | Starter relay control signal | TCM | | |
| | | Clutch interlock switch | | |
| A/C relay | A/C compressor request signal | ECM (CAN) | A/C compressor (magnet clutch) | HAC-59 |
| Ignition relay | Ignition switch ON signal | BCM (CAN) | Ignition relay | PCS-15 |
| | Vehicle speed signal | Unified meter and A/C amp. (CAN) | | |
| | Push-button ignition switch signal | Push-button ignition switch | | |

NOTE:

BCM controls the starter relay.

Component Parts Location

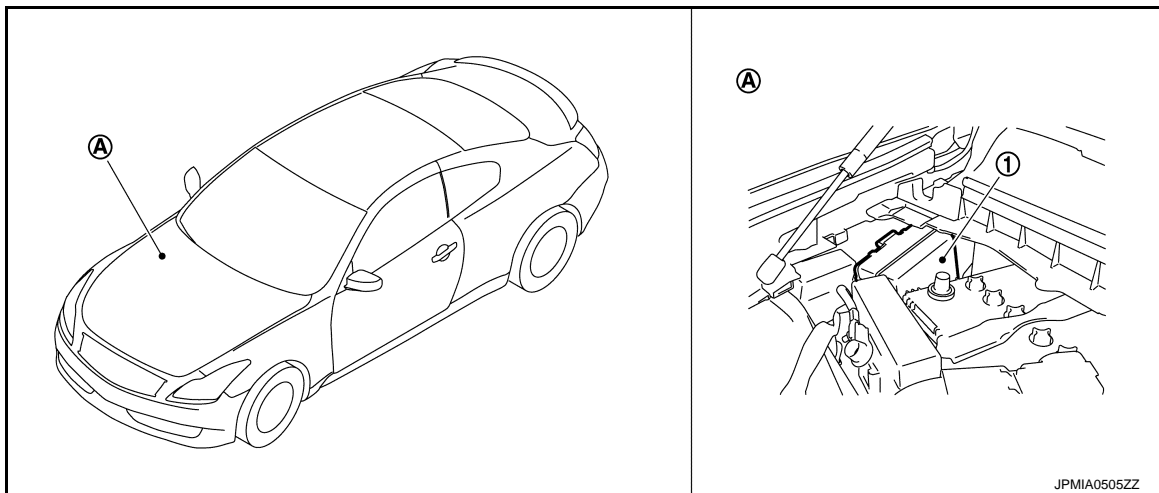
INFOID:000000007469479



- 1. IPDM E/R
- A. Engine room dash panel (RH)

POWER CONTROL SYSTEM

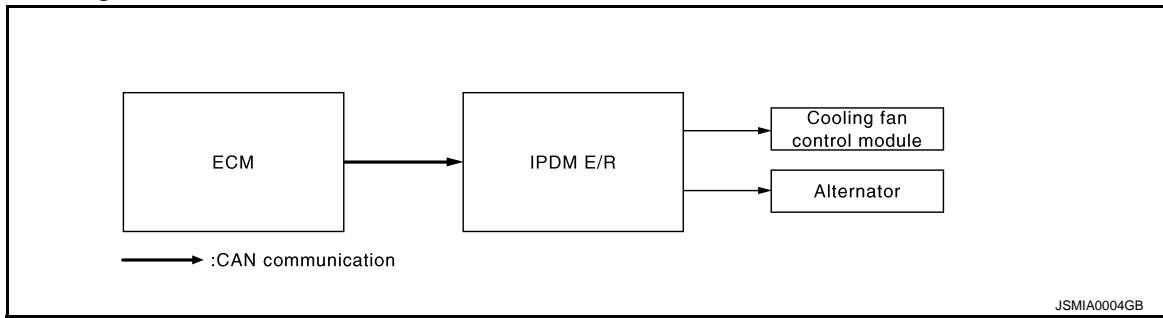System Diagram



System Description

INFOID:000000007469481

COOLING FAN CONTROL

IPDM E/R outputs pulse duty signal (PWM signal) to the cooling fan control module according to the status of the cooling fan speed request signal received from ECM via CAN communication. Refer to [EC-94, "System Diagram"](#).

ALTERNATOR CONTROL

IPDM E/R outputs power generation command signal (PWM signal) to the alternator according to the status of the power generation command value signal received from ECM via CAN communication. Refer to [CHG-12, "System Diagram"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

SIGNAL BUFFER SYSTEM

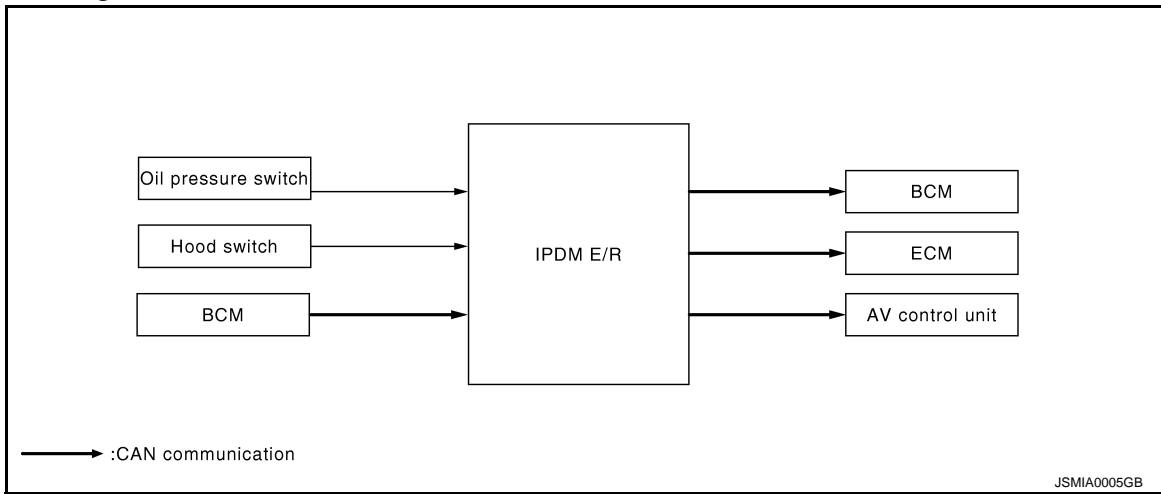
[IPDM E/R]

< SYSTEM DESCRIPTION >

SIGNAL BUFFER SYSTEM

System Diagram

INFOID:000000007469482




System Description

INFOID:000000007469483

- IPDM E/R reads the status of the oil pressure switch and transmits the oil pressure switch signal to BCM via CAN communication. Refer to [MWI-23, "WARNING LAMPS/INDICATOR LAMPS : System Diagram"](#).
- IPDM E/R reads the status of the hood switch and transmits the hood switch signal to BCM via CAN communication. Refer to [SEC-102, "Description"](#).
- IPDM E/R receives the rear window defogger control signal from BCM via CAN communication and transmits it to ECM and AV control unit via CAN communication. Refer to [DEF-4, "System Diagram"](#).

POWER CONSUMPTION CONTROL SYSTEM

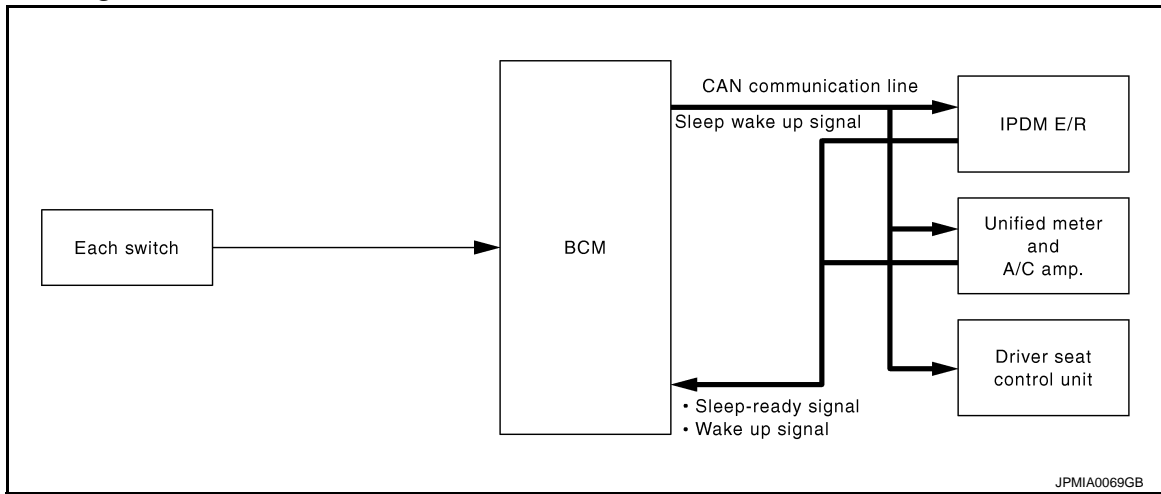System Diagram



System Description

INFOID:000000007469485

OUTLINE

- IPDM E/R incorporates a power consumption control function that reduces the power consumption according to the vehicle status.
- IPDM E/R changes its status (control mode) with the sleep wake up signal received from BCM via CAN communication.

Normal mode (wake-up)

- CAN communication is normally performed with other control units.
- Individual unit control by IPDM E/R is normally performed.

Low power consumption mode (sleep)

- Low power consumption control is active.
- CAN transmission is stopped.

SLEEP MODE ACTIVATION

- IPDM E/R judges that the sleep-ready conditions are fulfilled when the ignition switch is OFF and none of the conditions below are present. Then it transmits a sleep-ready signal (ready) to BCM via CAN communication.
 - Outputting signals to actuators
 - Switches or relays operating
 - Hood switch status is kept 50 ms or less.
 - Output requests are being received from control units via CAN communication.
- IPDM E/R stops CAN communication and enters the low power consumption mode when it receives a sleep wake up signal (sleep) from BCM and the sleep-ready conditions are fulfilled.

WAKE-UP OPERATION

- IPDM E/R changes from the low power consumption mode to the normal mode when it receives a sleep wake-up signal (wake up) from BCM or any of the following conditions is fulfilled. In addition, it transmits a sleep-ready signal (not-ready) to BCM via CAN communication to report the CAN communication start.
 - Ignition switch ON
 - The hood switch status changes.
 - An output request is received from a control unit via CAN communication.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

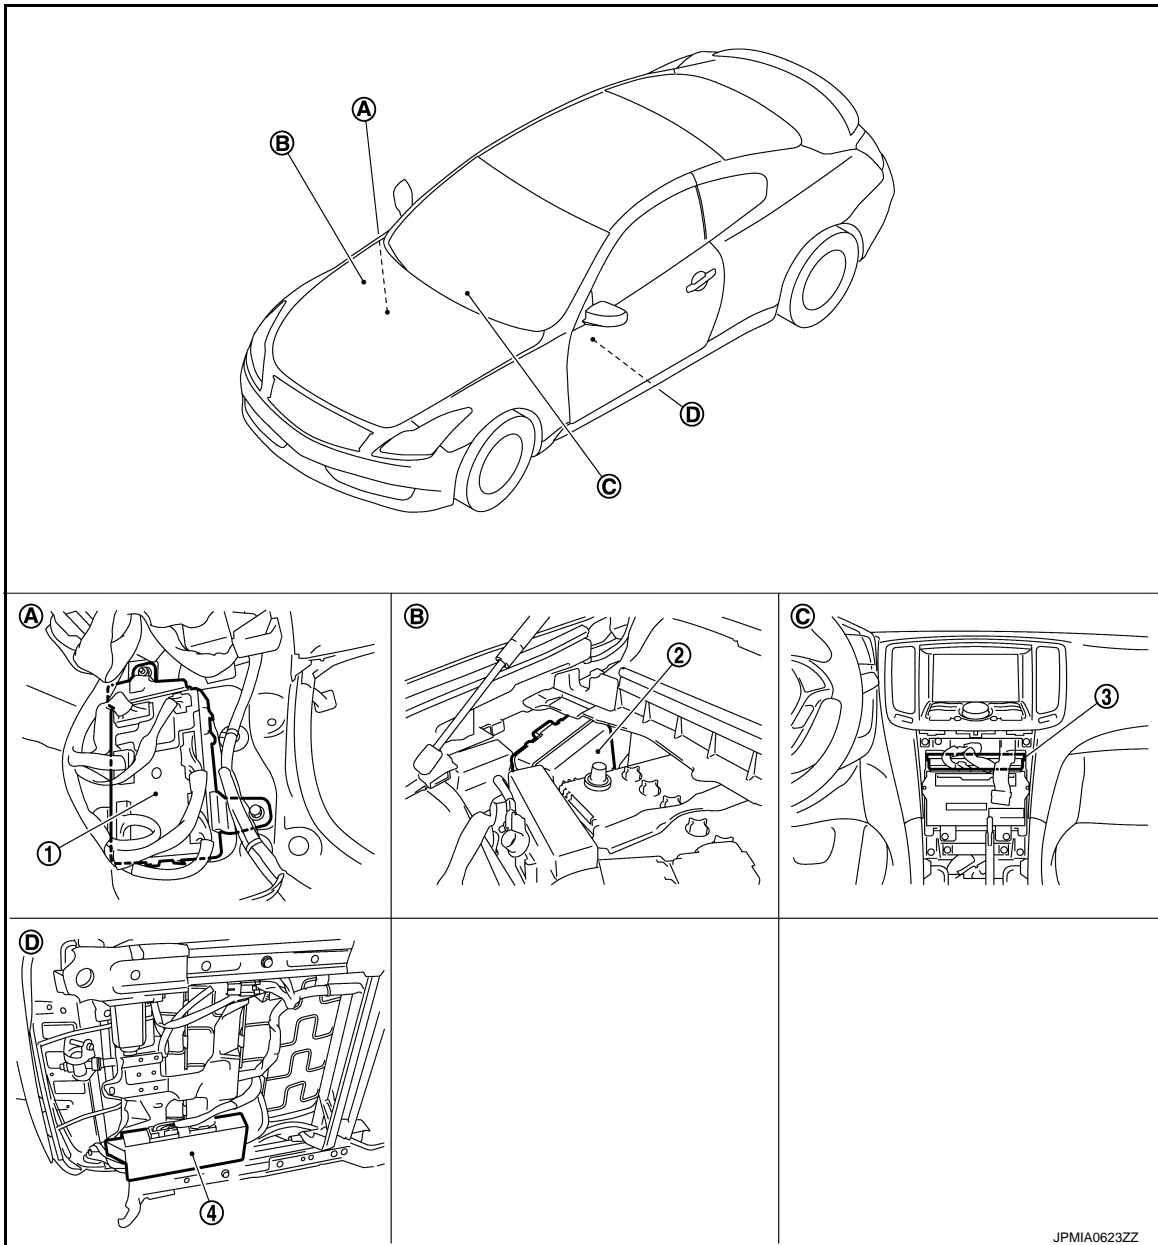
POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

Component Parts Location

INFOID:000000007469486



- | | | |
|---|--------------------------------|-------------------------------|
| 1. BCM | 2. IPDM E/R | 3. Unified meter and A/C amp. |
| 4. Driver seat control unit | | |
| A. Dash side lower (passenger side) | B. Engine room dash panel (RH) | C. Behind Cluster lid C |
| D. Backside of the seat cushion (driver seat) | | |

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:000000007469487

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Side maker lamps
- Tail lamps
- Front fog lamps
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan (cooling fan control module)

Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)
NOTE:
 When auto active test is performed with hood opened, sprinkle water on windshield beforehand.
2. Turn the ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the front door switch (driver side) 10 times. Then turn the ignition switch OFF.
CAUTION:
Close passenger door.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

When auto active test mode has to be cancelled halfway through test, turn the ignition switch OFF.

CAUTION:

- **If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-62, "Component Function Check"](#).**
- **Do not start the engine.**

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 6 steps are repeated 3 times.

| Operation sequence | Inspection location | Operation |
|--------------------|---|--|
| 1 | Oil pressure warning lamp | Blinks continuously during operation of auto active test |
| 2 | Front wiper | LO for 5 seconds → HI for 5 seconds |
| 3 | <ul style="list-style-type: none"> • Parking lamps • License plate lamps • Side maker lamps • Tail lamps • Front fog lamps | 10 seconds |
| 4 | Headlamps | LO ↔ HI 5 times |
| 5 | A/C compressor (magnet clutch) | ON ↔ OFF 5 times |
| 6* | Cooling fan | MID for 5 seconds → HI for 5 seconds |

*: Outputs duty ratio of 50% for 5 seconds → duty ratio of 100% for 5 seconds on the cooling fan control module.

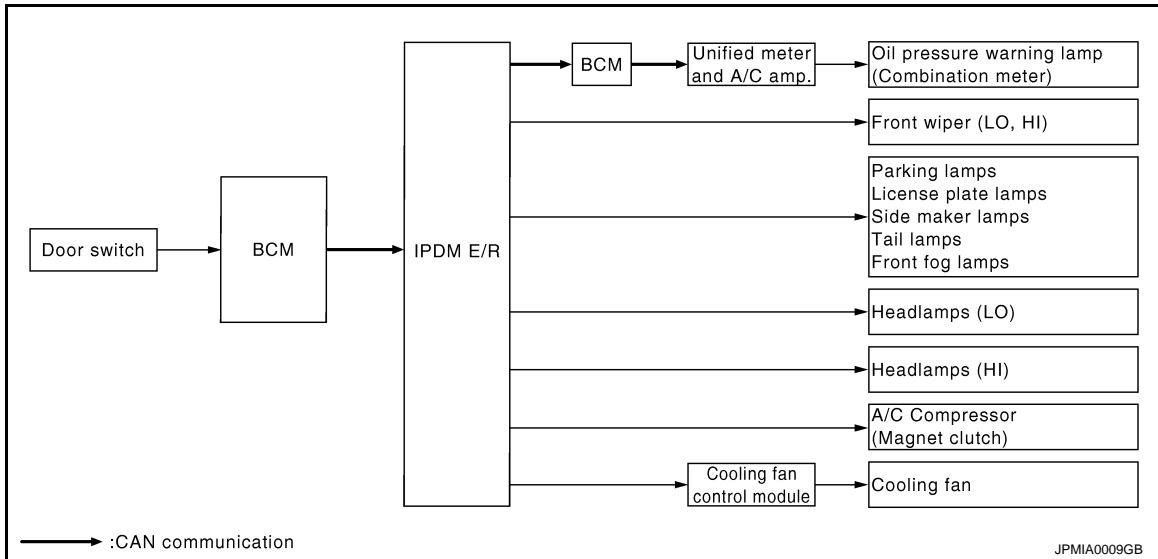
A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

DIAGNOSIS SYSTEM (IPDM E/R)

[IPDM E/R]

< SYSTEM DESCRIPTION >

Concept of auto active test



- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

| Symptom | Inspection contents | Possible cause |
|---|--|--|
| Any of the following components do not operate <ul style="list-style-type: none"> • Parking lamps • License plate lamps • Side maker lamps • Tail lamps • Front fog lamps • Headlamp (HI, LO) • Front wiper (HI, LO) | Perform auto active test. Does the applicable system operate? | YES BCM signal input circuit |
| | | NO <ul style="list-style-type: none"> • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R |
| A/C compressor does not operate | Perform auto active test. Does the magnet clutch operate? | YES <ul style="list-style-type: none"> • Unified meter and A/C amp. signal input circuit • CAN communication signal between unified meter and A/C amp. and ECM • CAN communication signal between ECM and IPDM E/R |
| | | NO <ul style="list-style-type: none"> • Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R |
| Oil pressure warning lamp does not operate | Perform auto active test. Does the oil pressure warning lamp blink? | YES <ul style="list-style-type: none"> • Harness or connector between IPDM E/R and oil pressure switch • Oil pressure switch • IPDM E/R |
| | | NO <ul style="list-style-type: none"> • CAN communication signal between IPDM E/R and BCM • CAN communication signal between BCM and unified meter and A/C amp. • Combination meter |

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

| Symptom | Inspection contents | Possible cause |
|------------------------------|--|--|
| Cooling fan does not operate | Perform auto active test. Does the cooling fan operate? | YES <ul style="list-style-type: none"> • ECM signal input circuit • CAN communication signal between ECM and IPDM E/R |
| | | NO <ul style="list-style-type: none"> • Cooling fan • Harness or connector between cooling fan and cooling fan control module • Cooling fan control module • Harness or connector between IPDM E/R and cooling fan control module • Cooling fan relay • Harness or connector between IPDM E/R and cooling fan relay • IPDM E/R |

CONSULT Function (IPDM E/R)

INFOID:000000007469488

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

| Diagnosis mode | Description |
|--------------------------|---|
| Ecu Identification | Allows confirmation of IPDM E/R part number. |
| Self Diagnostic Result | Displays the diagnosis results judged by IPDM E/R. |
| Data Monitor | Displays the real-time input/output data from IPDM E/R input/output data. |
| Active Test | IPDM E/R can provide a drive signal to electronic components to check their operations. |
| CAN Diag Support Monitor | The results of transmit/receive diagnosis of CAN communication can be read. |

SELF DIAGNOSTIC RESULT

Refer to [PCS-29, "DTC Index"](#).

DATA MONITOR

Monitor item

| Monitor Item [Unit] | MAIN SIGNALS | Description |
|-------------------------------|--------------|--|
| RAD FAN REQ [%] | × | Displays the value of the cooling fan speed signal received from ECM via CAN communication. |
| AC COMP REQ [Off/On] | × | Displays the status of the A/C compressor request signal received from ECM via CAN communication. |
| TAIL&CLR REQ [Off/On] | × | Displays the status of the position light request signal received from BCM via CAN communication. |
| HL LO REQ [Off/On] | × | Displays the status of the low beam request signal received from BCM via CAN communication. |
| HL HI REQ [Off/On] | × | Displays the status of the high beam request signal received from BCM via CAN communication. |
| FR FOG REQ [Off/On] | × | Displays the status of the front fog light request signal received from BCM via CAN communication. |
| FR WIP REQ [Stop/1LOW/Low/Hi] | × | Displays the status of the front wiper request signal received from BCM via CAN communication. |
| WIP AUTO STOP [STOP P/ACT P] | × | Displays the status of the front wiper auto stop signal judged by IPDM E/R. |
| WIP PROT [Off/BLOCK] | × | Displays the status of the front wiper fail-safe operation judged by IPDM E/R. |

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

| Monitor Item [Unit] | MAIN SIG- NALS | Description |
|---|-------------------|--|
| IGN RLY1 -REQ [Off/On] | | Displays the status of the ignition switch ON signal received from BCM via CAN communication. |
| IGN RLY [Off/On] | × | Displays the status of the ignition relay judged by IPDM E/R. |
| PUSH SW [Off/On] | | Displays the status of the push-button ignition switch judged by IPDM E/R. |
| INTER/NP SW [Off/On] | | Displays the status of the clutch interlock switch (M/T models) or shift position (A/T models) judged by IPDM E/R. |
| ST RLY CONT [Off/On] | | Displays the status of the starter relay status signal received from BCM via CAN communication. |
| IHBT RLY -REQ [Off/On] | | Displays the status of the starter control relay signal received from BCM via CAN communication. |
| ST/INH RLY [Off/ ST ON/INH ON/UNKWN] | | Displays the status of the starter relay and starter control relay judged by IPDM E/R. |
| DETENT SW [Off/On] | | Displays the status of the A/T shift selector (detention switch) judged by IPDM E/R. |
| S/L RLY -REQ [Off/On] | | NOTE: The item is indicated, but not monitored. |
| S/L STATE [LOCK/UNLOCK/UNKWN] | | NOTE: The item is indicated, but not monitored. |
| DTRL REQ [Off/On] | | NOTE: The item is indicated, but not monitored. |
| OIL P SW [Open/Close] | | Displays the status of the oil pressure switch judged by IPDM E/R. |
| HOOD SW [Off/On] | | Displays the status of the hood switch judged by IPDM E/R. |
| HL WASHER REQ [Off/On] | | NOTE: The item is indicated, but not monitored. |
| THFT HRN REQ [Off/On] | | Displays the status of the theft warning horn request signal received from BCM via CAN communication. |
| HORN CHIRP [Off/On] | | Displays the status of the horn reminder signal received from BCM via CAN communication. |
| CRNRNG LMP REQ [Off/On] | | NOTE: The item is indicated, but not monitored. |

ACTIVE TEST

Test item

| Test item | Operation | Description |
|----------------|-----------|--|
| CORNERING LAMP | Off | NOTE: The item is indicated, but cannot be tested. |
| | LH | |
| | RH | |
| HORN | On | Operates horn relay 1 and horn relay 2 for 20 ms. |
| FRONT WIPER | Off | OFF |
| | Lo | Operates the front wiper relay. |
| | Hi | Operates the front wiper relay and front wiper high relay. |
| MOTOR FAN | 1 | OFF |
| | 2 | Outputs 50% pulse duty signal (PWM signal) to the cooling fan control module. |
| | 3 | Outputs 80% pulse duty signal (PWM signal) to the cooling fan control module. |
| | 4 | Outputs 100% pulse duty signal (PWM signal) to the cooling fan control module. |

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

| Test item | Operation | Description |
|------------------|-----------|---|
| HEAD LAMP WASHER | On | NOTE: The item is indicated, but cannot be tested. |
| | Off | OFF |
| EXTERNAL LAMPS | TAIL | Operates the tail lamp relay. |
| | Lo | Operates the headlamp low relay. |
| | Hi | Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals. |
| | Fog | Operates the front fog lamp relay. |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000007469489

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.
 CAN Communication Signal Chart. Refer to [LAN-25, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:000000007469490

DTC DETECTION LOGIC

| DTC | CONSULT display description | DTC Detection Condition | Possible cause |
|-------|-----------------------------|--|--|
| U1000 | CAN COMM CIRCUIT | When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more | In CAN communication system, any item (or items) of the following listed below is malfunctioning. <ul style="list-style-type: none"> • Transmission • Receiving (ECM) • Receiving (BCM) • Receiving (Unified meter and A/C amp.) |

Diagnosis Procedure

INFOID:000000007469491

1. PERFORM SELF DIAGNOSTIC

1. Turn the ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of IPDM E/R.

Is DTC "U1000" displayed?

- YES >> Refer to [LAN-16, "Trouble Diagnosis Flow Chart"](#).
 NO >> Refer to [GI-43, "Intermittent Incident"](#).

B2098 IGNITION RELAY ON STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

B2098 IGNITION RELAY ON STUCK

Description

INFOID:000000007469492

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter and A/C amp.(Emergency OFF)
 - Press and hold the push-button ignition switch for 2 seconds or more.
 - Press the push-button ignition switch 3 times within 1.5 seconds.

NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

DTC Logic

INFOID:000000007469493

DTC DETECTION LOGIC

| DTC | CONSULT display description | DTC Detection Condition | Possible causes |
|-------|-----------------------------|---|----------------------------|
| B2098 | IGN RELAY ON | The ignition relay ON is detected for 1 second at ignition switch OFF (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it) | Ignition relay malfunction |

Diagnosis Procedure

INFOID:000000007469494

1.PERFORM SELF DIAGNOSIS

1. Turn the ignition switch ON.
2. Erase "Self Diagnostic Result" of IPDM E/R.
3. Turn the ignition switch OFF, and wait for 1 second or more.
4. Turn the ignition switch ON. Check "Self Diagnostic Result" again.

Is DTC "B2098" displayed?

- YES >> Replace IPDM E/R.
NO >> Refer to [GI-43, "Intermittent Incident"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

B2099 IGNITION RELAY OFF STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

B2099 IGNITION RELAY OFF STUCK

Description

INFOID:000000007469495

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter and A/C amp.(Emergency OFF)
 - Press and hold the push-button ignition switch for 2 seconds or more.
 - Press the push-button ignition switch 3 times within 1.5 seconds.

NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

DTC Logic

INFOID:000000007469496

DTC DETECTION LOGIC

| DTC | CONSULT display description | DTC Detection Condition | Possible causes |
|-------|-----------------------------|---|----------------------------|
| B2099 | IGN RELAY OFF | The ignition relay OFF is detected for 1 second at ignition switch ON (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it) | Ignition relay malfunction |

NOTE:

When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the "DTC: B2099" may be detected.

Diagnosis Procedure

INFOID:000000007469497

1. PERFORM SELF DIAGNOSIS

1. Turn the ignition switch ON.
2. Erase "Self Diagnostic Result".
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON. Check "Self Diagnostic Result" again.

Is DTC "B2099" displayed?

- YES >> Replace IPDM E/R.
NO >> Refer to [GI-43, "Intermittent Incident"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000007469498

1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

| Signal name | Fuses and fusible link No. |
|----------------------|----------------------------|
| Battery power supply | C |
| | 50 |
| | 51 |

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

| Terminals | | Voltage (Approx.) |
|-----------|----------|-------------------|
| (+) | (-) | |
| IPDM E/R | | Battery voltage |
| Connector | Terminal | |
| E4 | 1 | |

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and the ground.

| IPDM E/R | | Ground | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal | | |
| E5 | 12 | | Existed |
| E6 | 41 | | |

Does continuity exist?

YES >> INSPECTION END

NO >> Repair the harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

ECU DIAGNOSIS INFORMATION

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000007469499

VALUES ON THE DIAGNOSIS TOOL

| Monitor Item | Condition | | Value/Status |
|---------------|---|---|--------------|
| RAD FAN REQ | Engine idle speed | Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc. | 0 - 100 % |
| AC COMP REQ | Engine running | A/C switch OFF | Off |
| | | A/C switch ON (Compressor is operating) | On |
| TAIL&CLR REQ | Lighting switch OFF | | Off |
| | Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated) | | On |
| HL LO REQ | Lighting switch OFF | | Off |
| | Lighting switch 2ND HI or AUTO (Light is illuminated) | | On |
| HL HI REQ | Lighting switch OFF | | Off |
| | Lighting switch HI | | On |
| FR FOG REQ | Lighting switch 2ND or AUTO (Light is illuminated) | Front fog lamp switch OFF | Off |
| | | <ul style="list-style-type: none"> • Front fog lamp switch ON • Daytime running light activated (Only for Canada) | On |
| FR WIP REQ | Ignition switch ON | Front wiper switch OFF | Stop |
| | | Front wiper switch INT | 1LOW |
| | | Front wiper switch LO | Low |
| | | Front wiper switch HI | Hi |
| WIP AUTO STOP | Ignition switch ON | Front wiper stop position | STOP P |
| | | Any position other than front wiper stop position | ACT P |
| WIP PROT | Ignition switch ON | Front wiper operates normally | Off |
| | | Front wiper stops at fail-safe operation | BLOCK |
| IGN RLY1 -REQ | Ignition switch OFF or ACC | | Off |
| | Ignition switch ON | | On |
| IGN RLY | Ignition switch OFF or ACC | | Off |
| | Ignition switch ON | | On |
| PUSH SW | Release the push-button ignition switch | | Off |
| | Press the push-button ignition switch | | On |
| INTER/NP SW | Ignition switch ON | Selector lever in any position other than P or N (A/T models) | Off |
| | | Release clutch pedal (M/T models) | |
| | Ignition switch ON | Selector lever in P or N position (A/T models) | On |
| | | Depress clutch pedal (M/T models) | |

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

| Monitor Item | Condition | Value/Status |
|----------------|---|-----------------|
| ST RLY CONT | Ignition switch ON | Off |
| | At engine cranking | On |
| IHBT RLY -REQ | Ignition switch ON | Off |
| | At engine cranking | On |
| ST/INHI RLY | Ignition switch ON | Off |
| | At engine cranking | INHI ON → ST ON |
| | The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF | UNKWN |
| DETENT SW | Ignition switch ON <ul style="list-style-type: none"> • Press the selector button with selector lever in P position • Selector lever in any position other than P | Off |
| | Release the selector button with selector lever in P position NOTE: Fixed On for M/T models | On |
| S/L RLY -REQ | NOTE: The item is indicated, but not monitored. | Off |
| S/L STATE | NOTE: The item is indicated, but not monitored. | UNLOCK |
| DTRL REQ | NOTE: The item is indicated, but not monitored. | Off |
| OIL P SW | Ignition switch OFF, ACC or engine running | Open |
| | Ignition switch ON | Close |
| HOOD SW | Close the hood | Off |
| | Open the hood | On |
| HL WASHER REQ | NOTE: The item is indicated, but not monitored. | Off |
| THFT HRN REQ | Not operation | Off |
| | <ul style="list-style-type: none"> • Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM | On |
| HORN CHIRP | Not operating | Off |
| | Door locking with Intelligent Key (horn chirp mode) | On |
| CRNRNG LMP REQ | NOTE: The item is indicated, but not monitored. | Off |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

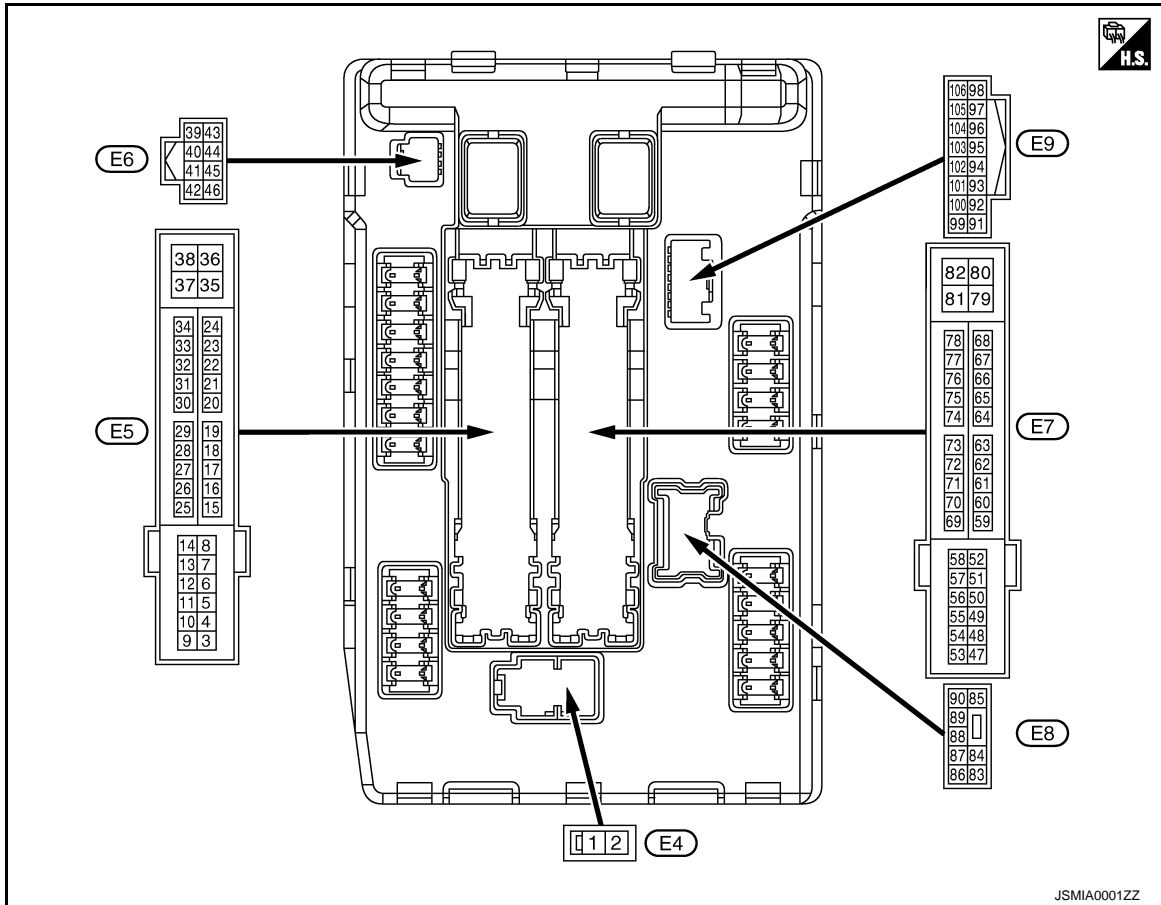
PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

TERMINAL LAYOUT



PHYSICAL VALUES

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|---|------------------------|--------------------|
| + | - | Signal name | Input/ Output | | | |
| 1 (W) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 2 (L) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 4 (V) | Ground | Front wiper LO | Output | Ignition switch OFF | Front wiper switch OFF | 0 V |
| | | | | Ignition switch ON | Front wiper switch LO | Battery voltage |
| 5 (L) | Ground | Front wiper HI | Output | Ignition switch OFF | Front wiper switch OFF | 0 V |
| | | | | Ignition switch ON | Front wiper switch HI | Battery voltage |
| 6*4 (SB) | Ground | Daytime running light relay | Input | Ignition switch OFF | | Battery voltage |
| 7 (R) | Ground | Tail, license plate lamps & illuminations | Output | Ignition switch OFF | Lighting switch OFF | 0 V |
| | | | | Ignition switch ON | Lighting switch 1ST | Battery voltage |
| 12 (B/W) | Ground | Ground | — | Ignition switch ON | | 0 V |
| 13 (Y) | Ground | Fuel pump power supply | Output | Approximately 1 second or more after turning the ignition switch ON | | 0 V |
| | | | | <ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running | | Battery voltage |

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) | |
|------------------------------|--------|---------------------------------------|------------------|---|---|--------------------|----|
| + | - | Signal name | Input/ Output | | | | |
| 16 (LG) | Ground | Front wiper auto stop | Input | Ignition switch ON | Front wiper stop position | 0 V | A |
| | | | | | Any position other than front wiper stop position | Battery voltage | B |
| 19 (W) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V | C |
| | | | | Ignition switch ON | | Battery voltage | |
| 25 (G) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V | D |
| | | | | Ignition switch ON | | Battery voltage | E |
| 26*1 (R) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V | F |
| | | | | Ignition switch ON | | Battery voltage | G |
| 27 (BG) | Ground | Ignition relay monitor | Input | Ignition switch OFF or ACC | | Battery voltage | H |
| | | | | Ignition switch ON | | 0 V | I |
| 28 (L) | Ground | Push-button ignition switch | Input | Press the push-button ignition switch | | 0 V | J |
| | | | | Release the push-button ignition switch | | Battery voltage | K |
| 30 (GR) | Ground | Starter relay control | Input | A/T models | Selector lever in any position other than P or N (Ignition switch ON) | 0 V | L |
| | | | | | Selector lever P or N (Ignition switch ON) | Battery voltage | M |
| | | | | M/T models | Release the clutch pedal | 0 V | N |
| | | | | | Depress the clutch pedal | Battery voltage | O |
| 36 (G) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage | |
| 39 (P) | — | CAN-L | Input/ Output | — | | — | P |
| 40 (L) | — | CAN-H | Input/ Output | — | | — | Q |
| 41 (B/W) | Ground | Ground | — | Ignition switch ON | | 0 V | R |
| 42 (Y) | Ground | Cooling fan relay control | Input | Ignition switch OFF or ACC | | 0 V | S |
| | | | | Ignition switch ON | | 0.7 V | T |
| 43*2 (SB) | Ground | A/T shift selector (Detention switch) | Input | Ignition switch ON | <ul style="list-style-type: none"> Press the selector button (selector lever P) Selector lever in any position other than P | Battery voltage | U |
| | | | | | Release the selector button (selector lever P) | 0 V | V |
| 44 (LG) | Ground | Horn relay control | Input | The horn is deactivated | | Battery voltage | W |
| | | | | The horn is activated | | 0 V | X |
| 45 (G) | Ground | Anti theft horn relay control | Input | The horn is deactivated | | Battery voltage | Y |
| | | | | The horn is activated | | 0 V | Z |
| 46 (W) | Ground | Starter relay control | Input | A/T models | Selector lever in any position other than P or N (Ignition switch ON) | 0 V | AA |
| | | | | | Selector lever P or N (Ignition switch ON) | Battery voltage | AB |
| | | | | M/T models | Release the clutch pedal | 0 V | AC |
| | | | | | Depress the clutch pedal | Battery voltage | AD |

PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >




[IPDM E/R]

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|---|--|--------------------|
| + | - | Signal name | Input/ Output | | | |
| 48 (BR) | Ground | A/C relay power supply | Output | Engine running | A/C switch OFF | 0 V |
| | | | | | A/C switch ON (A/C compressor is operating) | Battery voltage |
| 49 (BG) | Ground | ECM relay power supply | Output | Ignition switch OFF (More than a few seconds after turning ignition switch OFF) | 0 V | |
| | | | | <ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) | Battery voltage | |
| 51 (Y) | Ground | Ignition relay power supply | Output | Ignition switch OFF | 0 V | |
| | | | | Ignition switch ON | Battery voltage | |
| 53 (W) | Ground | ECM relay power supply | Output | Ignition switch OFF (More than a few seconds after turning ignition switch OFF) | 0 V | |
| | | | | <ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) | Battery voltage | |
| 54 (P) | Ground | Throttle control motor relay power supply | Output | Ignition switch OFF (More than a few seconds after turning ignition switch OFF) | 0 V | |
| | | | | <ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) | Battery voltage | |
| 55 (SB) | Ground | ECM power supply | Output | Ignition switch OFF | Battery voltage | |
| 56 (LG) | Ground | Ignition relay power supply | Output | Ignition switch OFF | 0 V | |
| | | | | Ignition switch ON | Battery voltage | |
| 57 (G) | Ground | Ignition relay power supply | Output | Ignition switch OFF | 0 V | |
| | | | | Ignition switch ON | Battery voltage | |
| 58*2 (GR) | Ground | Ignition relay power supply | Output | Ignition switch OFF | 0 V | |
| | | | | Ignition switch ON | Battery voltage | |
| 69 (BR) | Ground | ECM relay control | Output | Ignition switch OFF (More than a few seconds after turning ignition switch OFF) | Battery voltage | |
| | | | | <ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) | 0 - 1.5 V | |
| 70 (BG) | Ground | Throttle control motor relay control | Output | Ignition switch ON → OFF | 0 -1.0 V ↓ Battery voltage ↓ 0 V | |
| | | | | Ignition switch ON | 0 - 1.0 V | |
| 73*3 (P) | Ground | Ignition relay power supply | Output | Ignition switch OFF | 0 V | |
| | | | | Ignition switch ON | Battery voltage | |

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

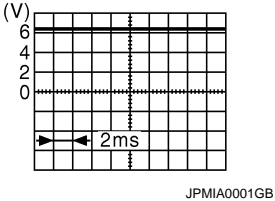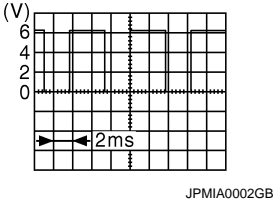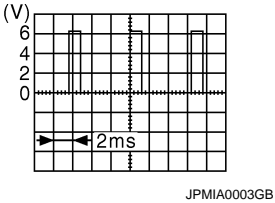[IPDM E/R]

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---------------------------------|--------|---|---|--|
| | | | | | | |
| + | - | | | | | |
| 74 (G) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 75 (SB) | Ground | Oil pressure switch | Input | Ignition switch ON | Engine stopped | 0 V |
| | | | | | Engine running | Battery voltage |
| 76 (Y) | Ground | Power generation command signal | Output | Ignition switch ON | |  <p style="text-align: center;">6.3 V</p> |
| | | | | 40% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE" | |  <p style="text-align: center;">3.8 V</p> |
| | | | | 80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE" | |  <p style="text-align: center;">1.4 V</p> |
| 77 (R) | Ground | Fuel pump relay control | Output | <ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running | | 0 - 1.0 V |
| | | | | Approximately 1 second or more after turning the ignition switch ON | | Battery voltage |
| 80 (W) | Ground | Starter motor | Output | At engine cranking | | Battery voltage |
| 83 (R) | Ground | Headlamp LO (RH) | Output | Ignition switch ON | Lighting switch OFF | 0 V |
| | | | | | Lighting switch 2ND | Battery voltage |
| 84 (P) | Ground | Headlamp LO (LH) | Output | Ignition switch ON | Lighting switch OFF | 0 V |
| | | | | | Lighting switch 2ND | Battery voltage |
| 86 (W) | Ground | Front fog lamp (RH) | Output | Lighting switch 2ND | Front fog lamp switch OFF | 0 V |
| | | | | | <ul style="list-style-type: none"> Front fog lamp switch ON Daytime running light activated (Only for Canada) | Battery voltage |

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|--|------------------|---|---|--------------------|
| + | - | Signal name | Input/ Output | | | |
| 87 (L) | Ground | Front fog lamp (LH) | Output | Lighting switch 2ND | Front fog lamp switch OFF | 0 V |
| | | | | | <ul style="list-style-type: none"> • Front fog lamp switch ON • Daytime running light activated (Only for Canada) | Battery voltage |
| 88 (G) | Ground | Washer pump power sup- ply | Output | Ignition switch ON | | Battery voltage |
| 89 (BR) | Ground | Headlamp HI (RH) | Output | Ignition switch ON | Lighting switch OFF | 0 V |
| | | | | | <ul style="list-style-type: none"> • Lighting switch HI • Lighting switch PASS | Battery voltage |
| 90 (LG) | Ground | Headlamp HI (LH) | Output | Ignition switch ON | Lighting switch OFF | 0 V |
| | | | | | <ul style="list-style-type: none"> • Lighting switch HI • Lighting switch PASS | Battery voltage |
| 91 (P) | Ground | Parking lamp (RH) | Output | Ignition switch ON | Lighting switch OFF | 0 V |
| | | | | | Lighting switch 1ST | Battery voltage |
| 92 (BG) | Ground | Parking lamp (LH) | Output | Ignition switch ON | Lighting switch OFF | 0 V |
| | | | | | Lighting switch 1ST | Battery voltage |
| 97 (V) | Ground | Cooling fan control | Output | Engine idling | | 0 - 5 V |
| 104 (LG) | Ground | Hood switch | Input | Close the hood | | Battery voltage |
| | | | | Open the hood | | 0 V |
| 105*5 (L) | Ground | Daytime running light relay control | Output | <ul style="list-style-type: none"> • Parking lamp • License plate lamp • Tail lamp | Turned OFF | Battery voltage |
| | | | | | Turned ON | |

*1: Only for the models with ICC system

*2: A/T models only

*3: M/T models only

*4: Models with daytime running light system

 
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Wiring Diagram - IPDM E/R -

INFOID:000000007469500

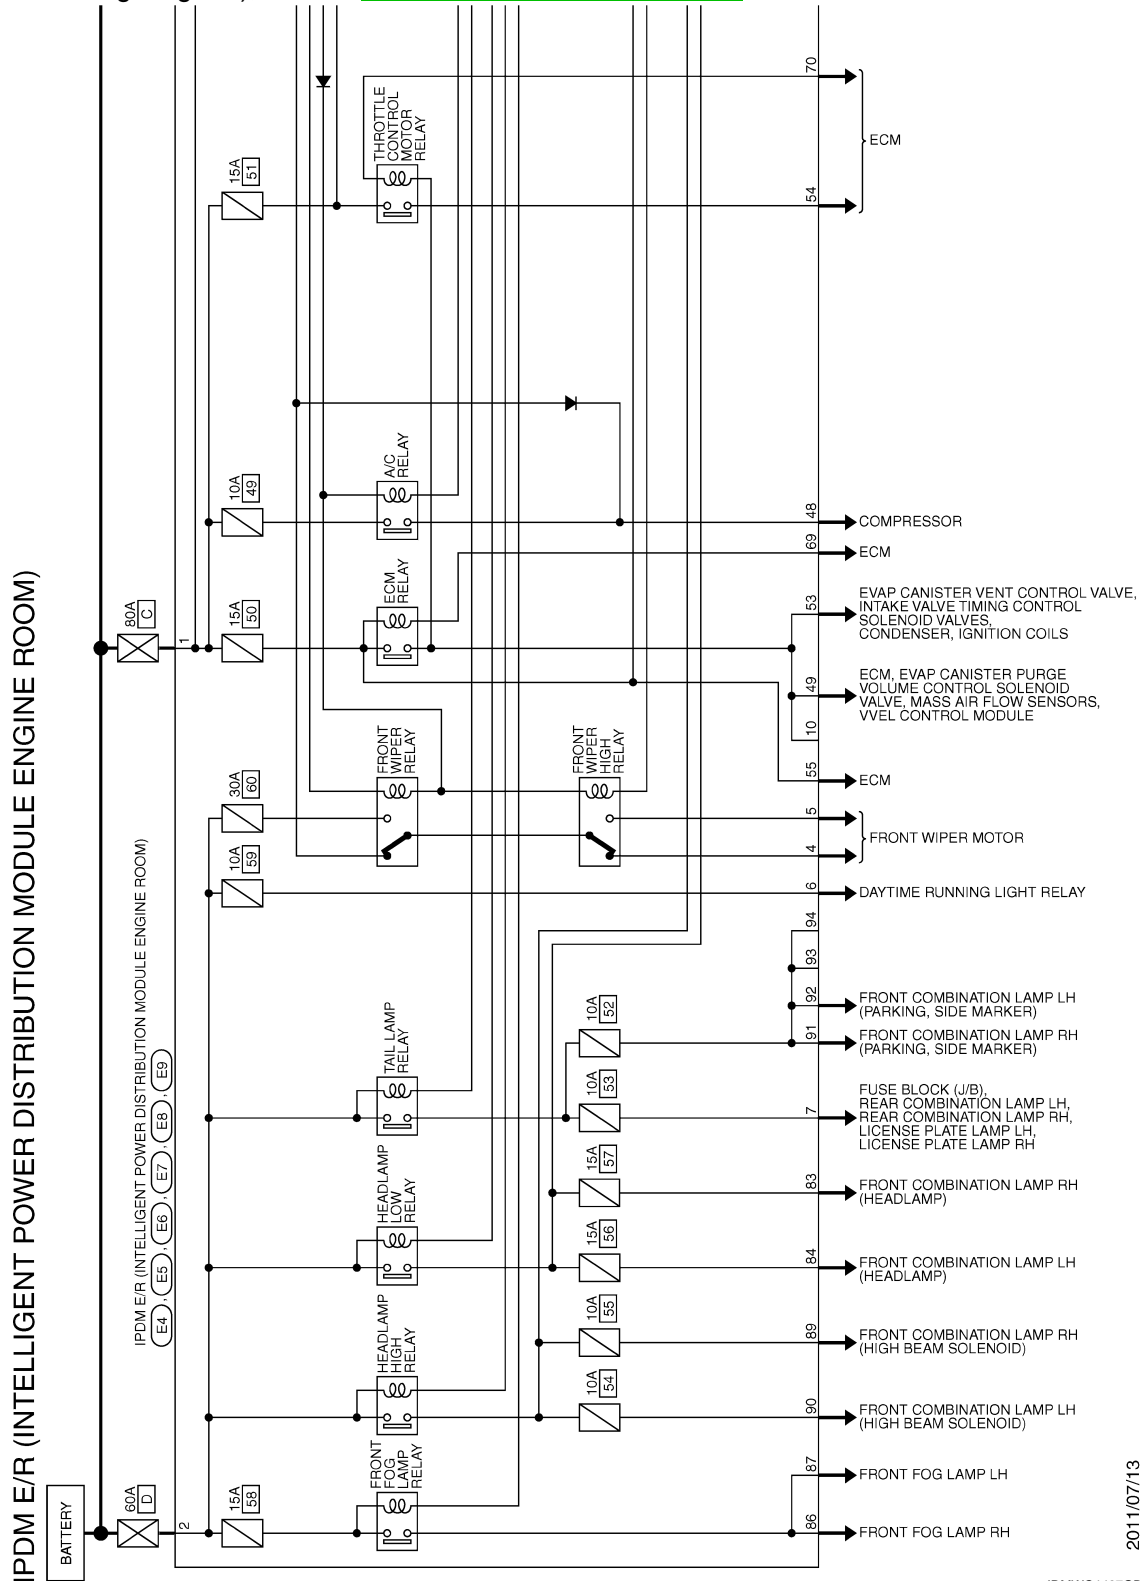For connector terminal arrangements, harness layouts, and alphabets in a  (option abbreviation; if not described in wiring diagram), refer to [GI-12, "Connector Information"](#).



A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

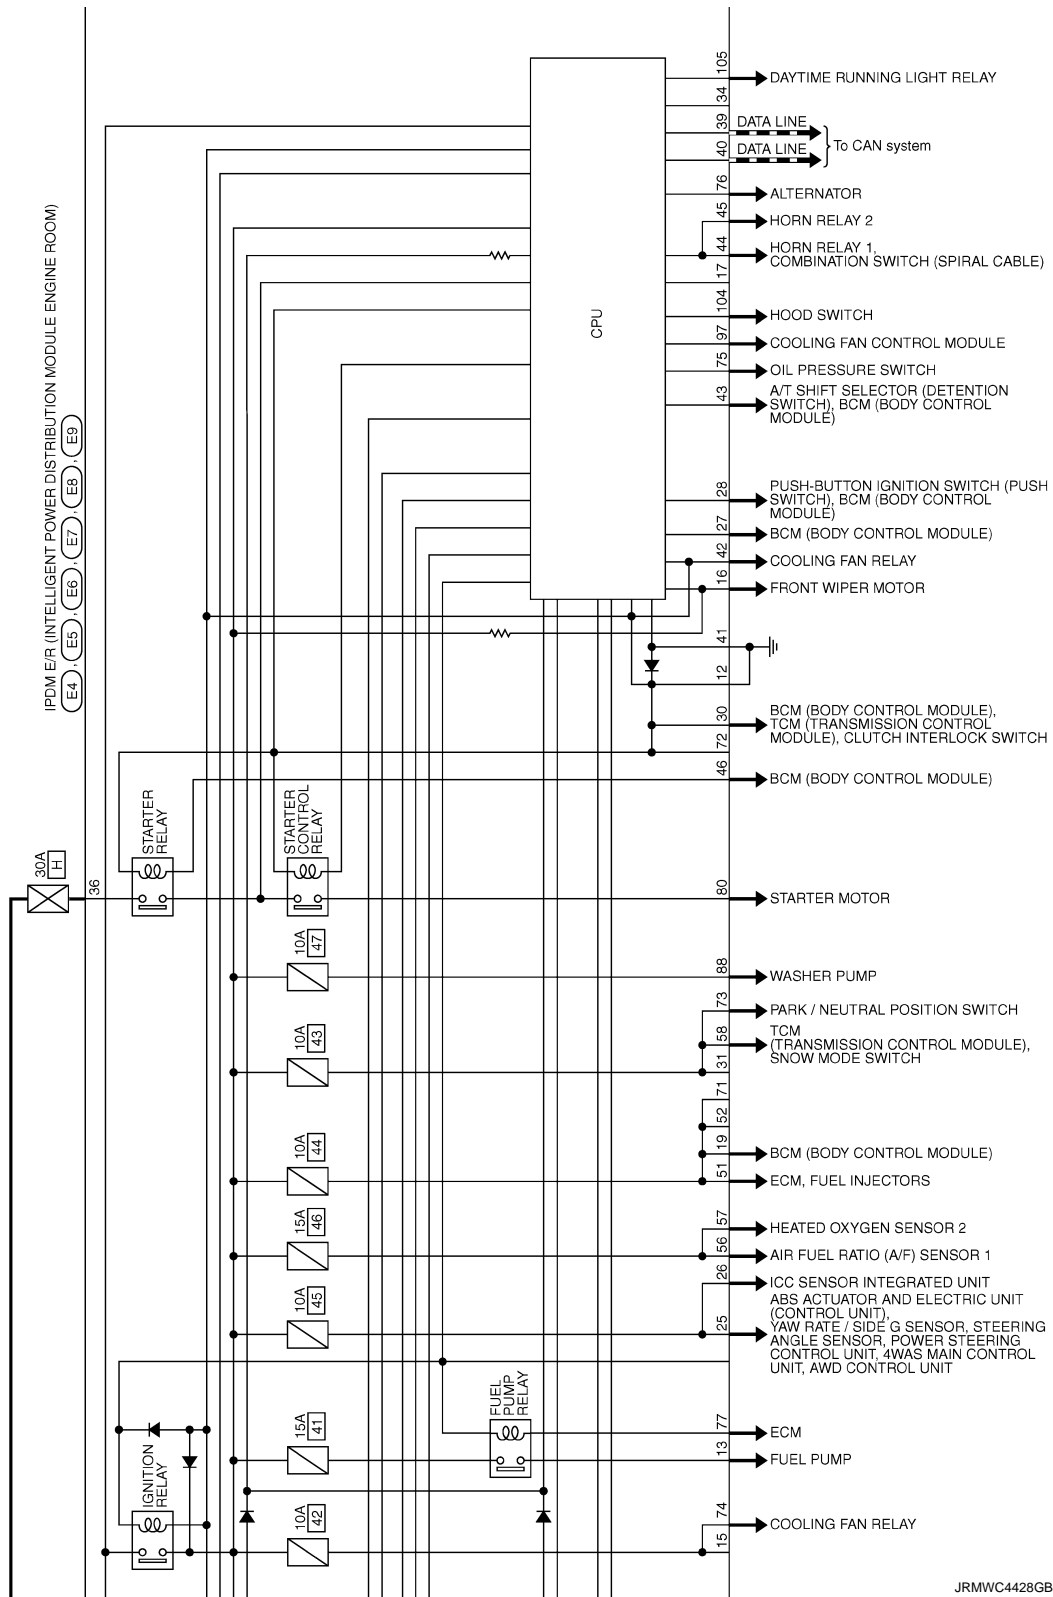
2011/07/13

JRMWC4427GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]



JRMWC4428GB

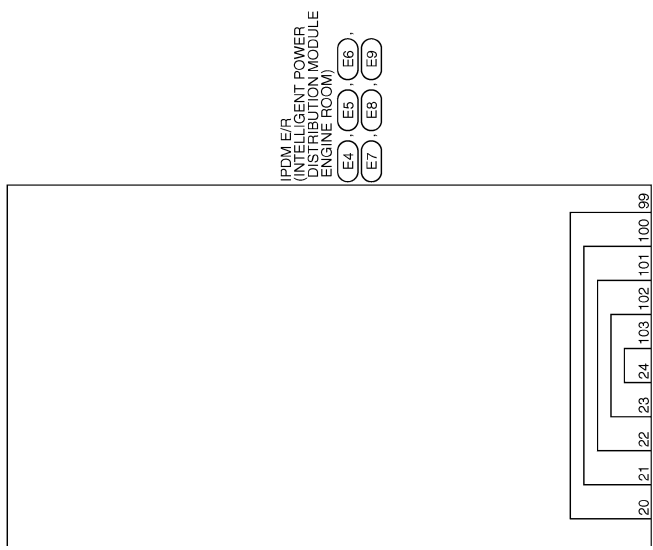A
B
C
D
E
F
G
H
I
J
K
L
N
O
P



PCS

JRMWC4429GB

INFOID:000000007469501

Fail-safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

| Control part | Fail-safe operation |
|----------------|---|
| Cooling fan | <ul style="list-style-type: none"> • Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON • Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF |
| A/C compressor | A/C relay OFF |
| Alternator | Outputs the power generation command signal (PWM signal) 0% |

If No CAN Communication Is Available With BCM

| Control part | Fail-safe operation |
|--|--|
| Headlamp | <ul style="list-style-type: none"> • Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF |
| <ul style="list-style-type: none"> • Parking lamps • Side maker lamp • License plate lamps • Illuminations • Tail lamps | <ul style="list-style-type: none"> • Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF |
| Front wiper | <ul style="list-style-type: none"> • The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. • The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating. |
| Horn | Horn relay OFF |
| Ignition relay | The status just before activation of fail-safe is maintained. |
| Starter motor | Starter control relay OFF |

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

| Voltage judgment | | IPDM E/R judgment | Operation |
|-----------------------------|-------------------------------------|---------------------------|--|
| Ignition relay contact side | Ignition relay excitation coil side | | |
| ON | ON | Ignition relay ON normal | — |
| OFF | OFF | Ignition relay OFF normal | — |
| ON | OFF | Ignition relay ON stuck | <ul style="list-style-type: none"> • Detects DTC "B2098: IGN RELAY ON" • Turns ON the tail lamp relay for 10 minutes |
| OFF | ON | Ignition relay OFF stuck | Detects DTC "B2099: IGN RELAY OFF" |

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

| Ignition switch | Front wiper switch | Front wiper stop position signal |
|-----------------|--------------------|--|
| ON | OFF | The front wiper stop position signal (stop position) cannot be input for 10 seconds. |
| | ON | The front wiper stop position signal does not change for 10 seconds. |

NOTE:

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:000000007469502

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now.
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
 - The number is 0 when is detected now.
 - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

| CONSULT display | Fail-safe | Refer to |
|--|-----------|------------------------|
| No DTC is detected. further testing may be required. | — | — |
| U1000: CAN COMM CIRCUIT | × | PCS-14 |
| B2098: IGN RELAY ON | × | PCS-15 |
| B2099: IGN RELAY OFF | — | PCS-16 |
| B210B: START CONT RLY ON | — | SEC-88 |
| B210C: START CONT RLY OFF | — | SEC-89 |
| B210D: STARTER RELAY ON | — | SEC-90 |
| B210E: STARTER RELAY OFF | — | SEC-91 |
| B210F: INTRLCK/PNP SW ON | — | SEC-93 |
| B2110: INTRLCK/PNP SW OFF | — | SEC-95 |

PCS

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000007469503

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Battery Service

INFOID:000000007469504

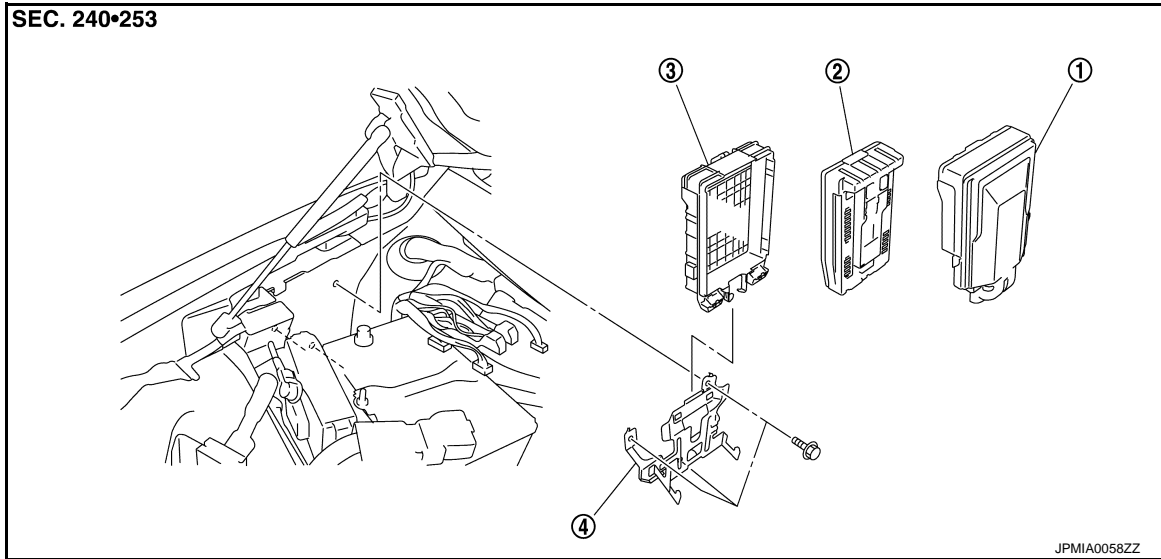
Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

REMOVAL AND INSTALLATION

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Exploded View

INFOID:000000007469506



- 1. IPDM E/R cover A
- 2. IPDM E/R
- 3. IPDM E/R cover B
- 4. Bracket

Removal and Installation

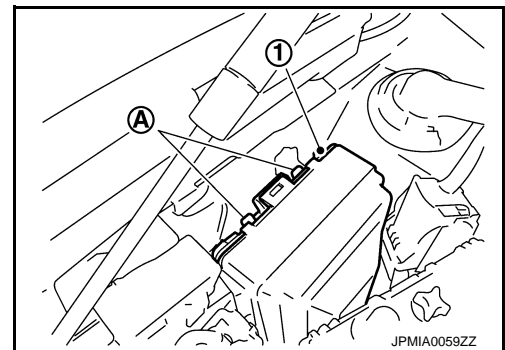
INFOID:000000007469507

CAUTION:

IPDM E/R integrated relays are not serviceable parts, and must not be removed from the unit.

REMOVAL

1. Disconnect the battery cable from the negative terminal.
2. Remove the cowl top cover (RH). Refer to [EXT-23, "Exploded View"](#).
3. Pull up the IPDM E/R assembly while pressing the pawls (A) on the back of the IPDM E/R cover B (1).




A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


[IPDM E/R]

< REMOVAL AND INSTALLATION >

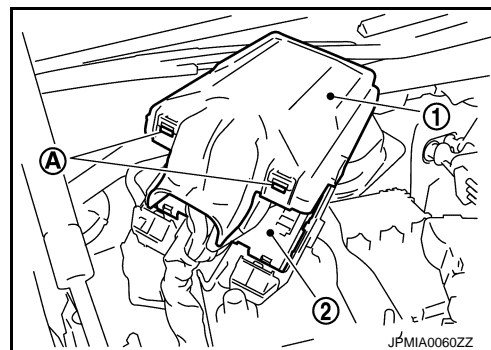4. Remove the IPDM E/R cover A (1). While pressing the pawls (A) at the lower end of the IPDM E/R cover A
5. Disconnect the harness connector and remove the IPDM E/R (2).



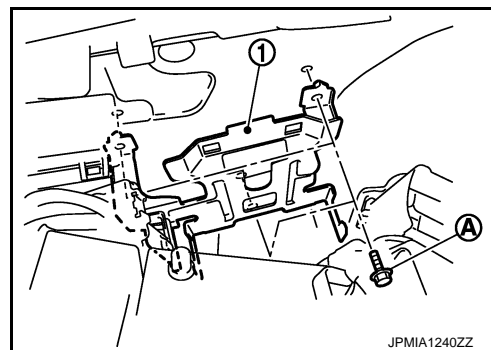6. Remove the bolts (A) and remove the bracket (1) from the vehicle.



INSTALLATION

Install in the reverse order of removal.

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

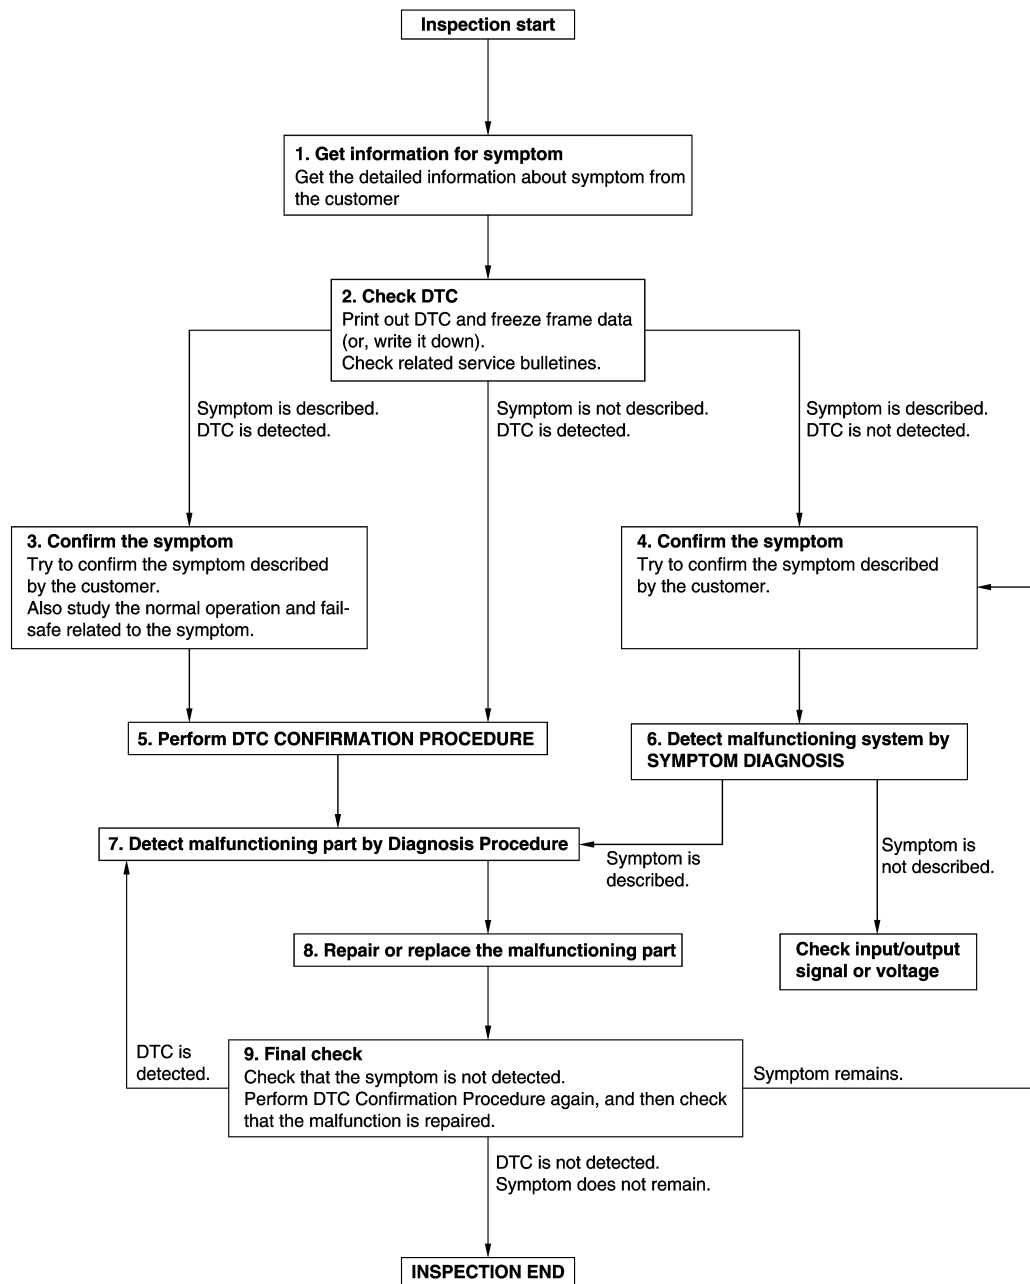
BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000007792850

OVERALL SEQUENCE



DETAILED FLOW

JMKIA8652GB

DIAGNOSIS AND REPAIR WORK FLOW

[POWER DISTRIBUTION SYSTEM]

< BASIC INSPECTION >

1. GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time.

If two or more DTCs are detected, refer to [PCS-95. "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-43. "Intermittent Incident"](#).

6. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

7. DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

DIAGNOSIS AND REPAIR WORK FLOW

[POWER DISTRIBUTION SYSTEM]

< BASIC INSPECTION >

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-43. "Intermittent Incident"](#).

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

SYSTEM DESCRIPTION

POWER DISTRIBUTION SYSTEM

System Description

INFOID:000000007469509

SYSTEM DESCRIPTION

- PDS (POWER DISTRIBUTION SYSTEM) is the system that BCM controls with the operation of the push-button ignition switch and performs the power distribution to each power circuit. This system is used instead of the mechanical power supply changing mechanism with the operation of the conventional key cylinder.
- The push-button ignition switch can be operated when Intelligent Key is in the following condition. Refer to Engine Start Function for details.
 - Intelligent Key is in the detection area of the interior antenna
 - Insert Intelligent Key in to the key slot
- The push-button ignition switch operation is input to BCM as a signal. BCM changes the power supply position according to the status and operates the following relays to supply power to each power circuit.
 - Ignition relay (inside IPDM E/R)
 - Ignition relay (inside fuse block)
 - ACC relay
 - Blower relay
- The power supply position changes due to the conditions of push-button ignition switch operation, brake pedal, clutch pedal, selector lever and vehicle speed.

NOTE:

The power supply position can be confirmed with the lighting of the indicators near the push-button ignition switch.

BATTERY SAVER SYSTEM

When all the following conditions are met for 60 minutes, the battery saver system will cut off the power supply to prevent battery discharge.

- The ignition switch is in the ACC position
- All doors are closed
- Selector lever is in the P position (A/T models)

Reset Condition of Battery Saver System

If any of the following conditions are met the battery saver system is released.

- Opening any door
- Operating with door request switch on door lock
- Operating with Intelligent Key on door lock
- Change ignition switch position to ACC position from OFF position by pressing push-button ignition switch.

POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when it is inserted to the key slot, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions,

A/T models

- Brake pedal operating condition
- A/T selector lever position
- Vehicle speed

M/T models

- Clutch pedal operating condition
- Vehicle speed

Vehicle speed: less than 4km/h (2.5 MPH).

POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

| Power supply position | Engine start/stop condition | | | Push-button ignition switch operation frequency |
|--|-----------------------------|---------------------------------|----------------------------------|---|
| | A/T models | | M/T models | |
| | Selector lever position | Brake pedal operation condition | Clutch pedal operation condition | |
| OFF → ACC | — | Not depressed | Not depressed | 1 |
| OFF → ACC → ON | — | Not depressed | Not depressed | 2 |
| OFF → ACC → ON → OFF | — | Not depressed | Not depressed | 3 |
| OFF → START ACC → START ON → START | P or N position | Depressed | Depressed | 1 |
| Engine is running → OFF | — | — | — | 1 |

Vehicle speed: 4km/h (2.5 MPH) or more.

| Power supply position | Engine start/stop condition | | | Push-button ignition switch operation frequency |
|---|-----------------------------|---------------------------------|----------------------------------|---|
| | A/T models | | M/T models | |
| | Selector lever position | Brake pedal operation condition | Clutch pedal operation condition | |
| Engine is running → ACC | — | — | — | Emergency stop operation |
| Engine stall return operation while driving | N position | Not depressed | Depressed | 1 |

Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P

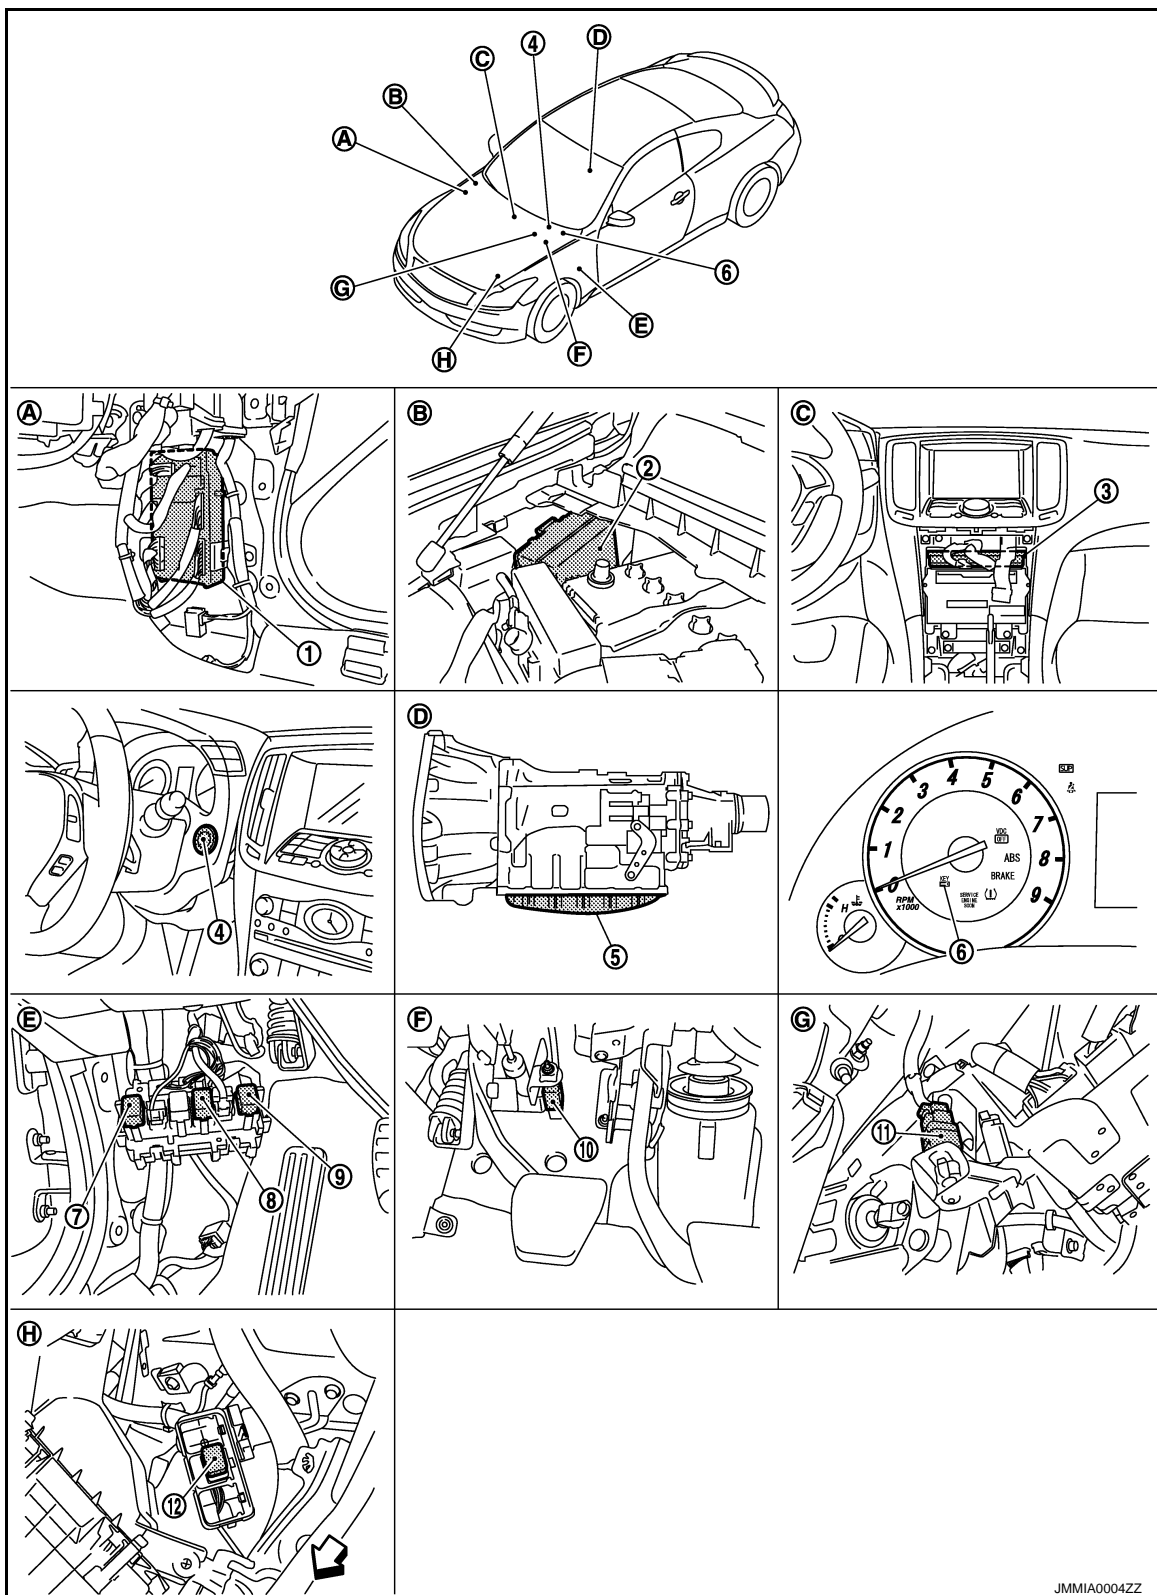
POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Component Parts Location

INFOID:000000007469510



JMMIA0004ZZ

- | | | |
|--------------------------------|----------------------|---|
| 1. BCM | 2. IPDM E/R | 3. Unified meter and A/C AMP. |
| 4. Push button ignition switch | 5. TCM | 6. Combination meter (Key warning lamp) |
| 7. Ignition relay | 8. Accessory relay | 9. Blower relay |
| 10. Clutch interlock switch | 11. Stop lamp switch | 12. ICC brake hold relay |

POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

- | | | |
|---|------------------------------------|---|
| A. Dash side lower (Passenger side). | B. Engine room dash panel (RH). | C. Behind cluster lid C. |
| D. Inside of A/T (built into A/T). | E. View with dash side LH removed. | F. View with instrument driver lower cover removed. |
| G. View with instrument driver lower cover removed. | H. Left view of engine room | |

Component Description

INFOID:000000007469511

| BCM | Reference |
|--|------------------------|
| IPDM E/R | PCS-3 |
| Ignition relay (Built-in IPDM E/R) | PCS-16 |
| Ignition relay (Built-in fuse block) | PCS-48 |
| Accessory relay | PCS-52 |
| Blower relay | PCS-54 |
| Stop lamp switch | SEC-59 |
| Transmission range switch (A/T models) | SEC-73 |
| Clutch inter lock switch (M/T models) | SEC-93 |
| Push-button ignition switch | SEC-61 |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000007773641

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

| Diagnosis mode | Function Description |
|--------------------------|--|
| Work Support | Changes the setting for each system function. |
| Self Diagnostic Result | Displays the diagnosis results judged by BCM. |
| CAN Diag Support Monitor | Monitors the reception status of CAN communication viewed from BCM. |
| Data Monitor | The BCM input/output signals are displayed. |
| Active Test | The signals used to activate each device are forcibly supplied from BCM. |
| Ecu Identification | The BCM part number is displayed. |
| Configuration | This function is not used even though it is displayed. |

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

| System | Sub system selection item | Diagnosis mode | | |
|---|---------------------------|----------------|--------------|-------------|
| | | Work Support | Data Monitor | Active Test |
| Door lock | DOOR LOCK | × | × | × |
| Rear window defogger | REAR DEFOGGER | | × | × |
| Warning chime | BUZZER | | × | × |
| Interior room lamp timer | INT LAMP | × | × | × |
| Exterior lamp | HEAD LAMP | × | × | × |
| Wiper and washer | WIPER | × | × | × |
| Turn signal and hazard warning lamps | FLASHER | × | × | × |
| — | AIR CONDITONER* | | | |
| <ul style="list-style-type: none"> • Intelligent Key system • Engine start system | INTELLIGENT KEY | × | × | × |
| Combination switch | COMB SW | | × | |
| Body control system | BCM | × | | |
| IVIS - NATS | IMMU | | × | × |
| Interior room lamp battery saver | BATTERY SAVER | × | × | × |
| Trunk lid open | TRUNK | | × | × |
| Vehicle security system | THEFT ALM | × | × | × |
| RAP system | RETAINED PWR | | × | |
| Signal buffer system | SIGNAL BUFFER | | × | × |
| TPMS | AIR PRESSURE MONITOR | × | × | × |

NOTE:

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM)

[POWER DISTRIBUTION SYSTEM]

< SYSTEM DESCRIPTION >

| CONSULT screen item | Indication/Unit | Description | |
|---------------------|---|--|--|
| Vehicle Speed | km/h | Vehicle speed of the moment a particular DTC is detected | |
| Odo/Trip Meter | km | Total mileage (Odometer value) of the moment a particular DTC is detected | |
| Vehicle Condition | SLEEP>LOCK | Power supply position status of the moment a particular DTC is detected | While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"*) |
| | SLEEP>OFF | | While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".) |
| | LOCK>ACC | | While turning power supply position from "LOCK"* to "ACC" |
| | ACC>ON | | While turning power supply position from "ACC" to "IGN" |
| | RUN>ACC | | While turning power supply position from "RUN" to "ACC" (Except emergency stop operation) |
| | CRANK>RUN | | While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it) |
| | RUN>URGENT | | While turning power supply position from "RUN" to "ACC" (Emergency stop operation) |
| | ACC>OFF | | While turning power supply position from "ACC" to "OFF" |
| | OFF>LOCK | | While turning power supply position from "OFF" to "LOCK"* |
| | OFF>ACC | | While turning power supply position from "OFF" to "ACC" |
| | ON>CRANK | | While turning power supply position from "IGN" to "CRANKING" |
| | OFF>SLEEP | | While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode |
| | LOCK>SLEEP | | While turning BCM status from normal mode (Power supply position is "LOCK"*.) to low power consumption mode |
| | LOCK | | Power supply position is "LOCK"* |
| | OFF | | Power supply position is "OFF" (Ignition switch OFF) |
| | ACC | | Power supply position is "ACC" (Ignition switch ACC) |
| | ON | | Power supply position is "IGN" (Ignition switch ON with engine stopped) |
| ENGINE RUN | Power supply position is "RUN" (Ignition switch ON with engine running) | | |
| CRANKING | Power supply position is "CRANKING" (At engine cranking) | | |
| IGN Counter | 0 - 39 | The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. | |

NOTE:

*: Power supply position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position (A/T models), and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:000000007773642

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

| Monitor item | Description |
|--------------------------|--|
| CONFIRM KEY FOB ID | It can be checked whether Intelligent Key ID code is registered or not in this mode. |
| AUTO LOCK SET | Auto door lock time can be changed in this mode. <ul style="list-style-type: none">• MODE 1: 1 minute• MODE 2: 5 minutes• MODE 3: 30 seconds• MODE 4: 2 minutes |
| LOCK/UNLOCK BY I-KEY | Door lock/unlock function by door request switch (driver side and passenger side) mode can be changed to operate (ON) or not operate (OFF) in this mode. |
| ENGINE START BY I-KEY | Engine start function mode can be changed to operate (ON) or not operate (OFF) with this mode. |
| TRUNK/GLASS HATCH OPEN | Buzzer reminder function mode by trunk opener request switch can be changed to operate (ON) or not operate (OFF) with this mode. |
| PANIC ALARM SET | Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following with this mode. <ul style="list-style-type: none">• MODE 1: 0.5 sec.• MODE 2: Non-operation• MODE 3: 1.5 sec. |
| PW DOWN SET | Unlock button pressing time on Intelligent Key button can be selected from the following with this mode. <ul style="list-style-type: none">• MODE 1: 3 sec.• MODE 2: Non-operation• MODE 3: 5 sec. |
| TRUNK OPEN DELAY | Trunk button pressing on Intelligent Key button can be selected as per the following in this mode. <ul style="list-style-type: none">• MODE 1: Press and hold• MODE 2: Press twice• MODE 3: Press and hold, or press twice |
| LO- BATT OF KEY FOB WARN | Intelligent Key low battery warning mode can be changed to operate (ON) or not operate (OFF) with this mode. |
| ANTI KEY LOCK IN FUNCTI | Key reminder function mode can be changed to operate (ON) or not operate (OFF) with this mode. |
| HAZARD ANSWER BACK | Hazard reminder function mode can be selected from the following with this mode. <ul style="list-style-type: none">• LOCK ONLY: Door lock operation only• UNLOCK ONLY: Door unlock operation only• LOCK/UNLOCK: Lock/unlock operation• OFF: Non-operation |
| ANS BACK I-KEY LOCK | Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following with this mode. <ul style="list-style-type: none">• Horn chirp: Sound horn• Buzzer: Sound Intelligent Key warning buzzer• OFF: Non-operation |
| ANS BACK I-KEY UNLOCK | Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) with this mode. |
| SHORT CRANKING OUTPUT | Starter motor can operate during the times below. <ul style="list-style-type: none">• 70 msec• 100 msec• 200 msec |
| INSIDE ANT DIAGNOSIS | This function allows inside key antenna self-diagnosis. |
| HORN WITH KEYLESS LOCK | Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) with this mode. |

SELF-DIAG RESULT

Refer to [DLK-140, "DTC Index"](#).

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

| Monitor Item | Condition |
|----------------|---|
| REQ SW -DR | Indicates [ON/OFF] condition of door request switch (driver side). |
| REQ SW -AS | Indicates [ON/OFF] condition of door request switch (passenger side). |
| REQ SW -BD/TR | Indicates [ON/OFF] condition of trunk opener request switch. |
| PUSH SW | Indicates [ON/OFF] condition of push-button ignition switch. |
| IGN RLY2 -F/B | Indicates [ON/OFF] condition of ignition relay 2. |
| ACC RLY-FB | NOTE: This item is displayed, but cannot be monitored. |
| CLUTCH SW*1 | Indicates [ON/OFF] condition of clutch switch. |
| BRAKE SW 1 | Indicates [ON/OFF]*2 condition of brake switch power supply. |
| BRAKE SW 2 | Indicates [ON/OFF] condition of brake switch. |
| DETE/CANCL SW | Indicates [ON/OFF] condition of P position. |
| SFT PN/N SW | Indicates [ON/OFF] condition of P or N position. |
| S/L -LOCK | NOTE: This item is displayed, but cannot be monitored. |
| S/L -UNLOCK | NOTE: This item is displayed, but cannot be monitored. |
| S/L RELAY -F/B | NOTE: This item is displayed, but cannot be monitored. |
| UNLK SEN -DR | Indicates [ON/OFF] condition of driver door UNLOCK status. |
| PUSH SW -IPDM | Indicates [ON/OFF] condition of push-button ignition switch. |
| IGN RLY1 -F/B | Indicates [ON/OFF] condition of ignition relay 1. |
| DETE SW -IPDM | Indicates [ON/OFF] condition of P position. |
| SFT PN -IPDM | Indicates [ON/OFF] condition of P or N position. |
| SFT P -MET | Indicates [ON/OFF] condition of P position. |
| SFT N -MET | Indicates [ON/OFF] condition of N position. |
| ENGINE STATE | Indicates [STOP/STALL/CRANK/RUN] condition of engine states. |
| S/L LOCK-IPDM | NOTE: This item is displayed, but cannot be monitored. |
| S/L UNLK-IPDM | NOTE: This item is displayed, but cannot be monitored. |
| S/L RELAY-REQ | NOTE: This item is displayed, but cannot be monitored. |
| VEH SPEED 1 | Display the vehicle speed signal received from combination meter by numerical value [Km/h]. |
| VEH SPEED 2 | Display the vehicle speed signal received from ABS or VDC or TCM by numerical value [Km/h]. |
| DOOR STAT-DR | Indicates [LOCK/READY/UNLOCK] condition of driver side door status. |
| DOOR STAT-AS | Indicates [LOCK/READY/UNLOCK] condition of passenger side door status. |
| ID OK FLAG | Indicates [SET/RESET] condition of key ID. |
| PRMT ENG STRT | Indicates [SET/RESET] condition of engine start possibility. |
| PRMT RKE STRT | NOTE: This item is displayed, but cannot be monitored. |
| KEY SW -SLOT | Indicates [ON/OFF] condition of key slot. |
| TRNK/HAT MNTR | Indicates [ON/OFF] condition of trunk lid. |
| RKE-LOCK | Indicates [ON/OFF] condition of LOCK signal from Intelligent Key. |
| RKE-UNLOCK | Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key. |
| RKE-TR/BD | Indicates [ON/OFF] condition of TRUNK OPEN signal from Intelligent Key. |
| RKE-PANIC | Indicates [ON/OFF] condition of PANIC button of Intelligent Key. |

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

| Monitor Item | Condition |
|---------------|--|
| RKE-P/W OPEN | Indicates [ON/OFF] condition of P/W DOWN signal from Intelligent Key. |
| RKE-MODE CHG | Indicates [ON/OFF] condition of MODE CHANGE signal from Intelligent Key. |
| RKE OPE COUN1 | When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing. |
| RKE OPE COUN2 | NOTE: This item is displayed, but cannot be monitored. |

*1: It is displayed but does not operate on M/T models.

*2: OFF is displayed when brake pedal is depressed while brake switch power supply is OFF.

ACTIVE TEST

| Test item | Description |
|--------------------|---|
| BATTERY SAVER | This test is able to check interior room lamp operation. The interior room lamp is activated after "ON" on CONSULT screen is touched. |
| PW REMOTO DOWN SET | This test is able to check power window down operation. The power window down is activated after "ON" on CONSULT screen is touched. |
| OUTSIDE BUZZER | This test is able to check Intelligent Key warning buzzer operation. The Intelligent Key warning buzzer is activated after "ON" on CONSULT screen is touched. |
| INSIDE BUZZER | This test is able to check warning chime in combination meter operation. <ul style="list-style-type: none"> • Take away warning chime sounds when "TAKE OUT" on CONSULT screen is touched. • Key warning chime sounds when "KEY" on CONSULT screen is touched. • OFF position warning chime sounds when "KNOB" on CONSULT screen is touched. |
| INDICATOR | This test is able to check warning lamp operation. <ul style="list-style-type: none"> • "KEY" Warning lamp illuminates when "KEY ON" on CONSULT screen is touched. • "KEY" Warning lamp blinks when "KEY IND" on CONSULT screen is touched. |
| INT LAMP | This test is able to check interior room lamp operation. The interior room lamp is activated after "ON" on CONSULT screen is touched. |
| LCD | This test is able to check meter display information <ul style="list-style-type: none"> • Engine start information displays when "BP N" on CONSULT screen is touched. • Engine start information displays when "BP I" on CONSULT screen is touched. • Key ID warning displays when "ID NG" on CONSULT screen is touched. • ROTAT: This item is displayed, but cannot b monitored. • P position warning displays when "SFT P" on CONSULT screen is touched. • Intelligent Key insert information displays when "INSRT" on CONSULT screen is touched. • Intelligent Key low battery warning displays when "BATT" on CONSULT screen is touched. • Take away through window warning displays when "NO KY" on CONSULT screen is touched. • Take away warning display when "OUTKEY" on CONSULT screen is touched. • OFF position warning display when "LK WN" on CONSULT screen is touched. |
| TRUNK/GLASS HATCH | This test is able to check trunk lid opener actuator open operation. This actuator opens when "OPEN" on CONSULT screen is touched. |
| FLASHER | This test is able to check security hazard lamp operation. The hazard lamps are activated after "LH/RH/OFF" on CONSULT screen is touched. |
| HORN | This test is able to check horn operation. The horn is activated after "ON" on CONSULT screen is touched. |
| P RANGE | This test is able to check A/T shift selector power supply A/T shift selector power is supplied when "ON" on CONSULT screen is touched. |
| ENGINE SW ILLUMI | This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when "ON" on CONSULT screen is touched. |
| LOCK INDICATOR | This test is able to check LOCK indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched. |
| ACC INDICATOR | This test is able to check ACC indicator in push-ignition switch operation. ACC indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched. |
| IGNITION ON IND | This test is able to check on indicator in push-ignition switch operation. ON indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched. |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

| Test item | Description |
|-----------------|---|
| KEY SLOT ILLUMI | This test is able to check key slot illumination operation. Key slot illumination blinks when "ON" on CONSULT screen is touched. |
| TRUNK/BACK DOOR | This test is able to check trunk lid opener actuator open operation. This actuator opens when "OPEN" on CONSULT screen is touched. |

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000007469514

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-25, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:000000007469515

DTC DETECTION LOGIC

| DTC | CONSULT display description | DTC Detection Condition | Possible cause |
|-------|-----------------------------|--|--------------------------|
| U1000 | CAN COMM | When BCM cannot communicate CAN communication signal continuously for 2 seconds or more. | CAN communication system |

Diagnosis Procedure

INFOID:000000007469516

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

Is DTC "U1000" displayed?

- YES >> Refer to [LAN-16, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-43, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

U1010 CONTROL UNIT (CAN)

DTC Logic

INFOID:000000007469517

DTC DETECTION LOGIC

| DTC | CONSULT display description | DTC Detection Condition | Possible cause |
|-------|-----------------------------|--|----------------|
| U1010 | CONTROL UNIT(CAN) | BCM detected internal CAN communication circuit malfunction. | BCM |

Diagnosis Procedure

INFOID:000000007469518

1.REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-78. "Removal and Installation"](#).

Special Repair Requirement

INFOID:000000007469519

1.REQUIRED WORK WHEN REPLACING BCM

Initialize control unit.

>> Work end.

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P

B2553 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2553 IGNITION RELAY

Description

INFOID:000000007469520

BCM turns ON the following relays to ignition power supply to each ECU when the ignition switch is turned ON.

- Ignition relay (inside fuse box)
- Ignition relay (inside IPDM E/R)
- Blower relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

DTC Logic

INFOID:000000007469521

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|---|
| B2553 | IGNITION RELAY | BCM detects a difference of signal for 2 seconds or more between the following information. <ul style="list-style-type: none">• Ignition relay (fuse block) ON/OFF operation• Ignition relay (fuse block) feedback. | <ul style="list-style-type: none">• Harness or connectors (ignition relay feedback circuit is open or short)• IPDM E/R |

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions (start the engine), and wait for at least 2 seconds.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-48, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000007469522

1. CHECK DTC WITH IPDM E/R

Check "Self diagnostic result" with CONSULT. Refer to [PCS-29, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2. CHECK IGNITION RELAY FEEDBACK INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

| (+) | | (-) | Condition | Voltage (V) (Approx.) | |
|-----------|----------|--------|-----------------|--------------------------|-----------------|
| BCM | | | | | |
| Connector | Terminal | | | | |
| M123 | 123 | Ground | Ignition switch | OFF | 0 |
| | | | | ON | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 4.

B2553 IGNITION RELAY

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 3.

3. CHECK IGNITION RELAY FEEDBACK CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between BCM harness connector and IPDM E/R harness connector.

| BCM | | IPDM E/R | | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M123 | 123 | E5 | 19 | Existed |

3. Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| M123 | 123 | | Not existed |

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation"](#).
NO >> Repair or replace harness or connector.

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

B260A IGNITION RELAY**Description**

INFOID:000000007469523

BCM turns ON the following relays to ignition power supply to each ECU when the ignition switch is turned ON.

- Ignition relay (inserted into fuse block)
- Ignition relay (built into IPDM E/R)
- Blower fan motor relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

DTC Logic

INFOID:000000007469524

DTC DETECTION LOGIC**NOTE:**

- If DTC B260A is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-46, "DTC Logic"](#).
- If DTC B260A is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [PCS-47, "DTC Logic"](#).
- If DTC B260A is displayed with DTC B261A, first perform the trouble diagnosis for DTC B261A. Refer to [PCS-59, "DTC Logic"](#).

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|---|
| B260A | IGNITION RELAY | BCM detects a difference of signal for 2 second or more between the following information. <ul style="list-style-type: none"> • Ignition relay (IPDM E/R) operation request • Ignition relay feedback from IPDM E/R (CAN). | <ul style="list-style-type: none"> • Harness or connectors (Ignition relay operation circuit is open or shorted.) • BCM • IPDM E/R |

DTC CONFIRMATION PROCEDURE**1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON under the following conditions, and wait for at least 2 seconds.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-50, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000007469525

1. CHECK DTC WITH IPDM E/R

Check "Self diagnostic result" with CONSULT. Refer to [PCS-29, "DTC Index"](#).

Is DTC detected?

- YES >> Repair or replace the malfunctioning parts.
NO >> GO TO 2.

2. CHECK IGNITION RELAY INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

B260A IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| BCM | | | |
| Connector | Terminal | | |
| M121 | 47 | Ground | Battery voltage |

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK IGNITION RELAY (IPDM E/R) CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and BCM harness connector.

| IPDM E/R | | BCM | | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E5 | 27 | M121 | 47 | Existed |

3. Check continuity between IPDM E/R harness connector and ground.

| IPDM E/R | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| E5 | 27 | | Not existed |

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-31. "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

PCS

B2614 ACC RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2614 ACC RELAY CIRCUIT

Description

INFOID:000000007469526

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.
BCM checks the power supply position internally.

DTC Logic

INFOID:000000007469527

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|---|--|
| B2614 | ACC relay circuit | An immediate operation of ACC relay is requested by BCM, but there is no response for more than 1 second. | <ul style="list-style-type: none">• Harness or connectors (ACC relay circuit is open or shorted)• BCM• ACC relay |

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to ACC under the following conditions, and wait for at least 1 second.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-52, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000007469528

1. CHECK ACCESSORY RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect accessory relay.
3. Check voltage between accessory relay harness connector and ground.

| (+) | (-) | Condition | Voltage (V) (Approx.) |
|-----------------------------|--------|-----------------|--------------------------|
| Accessory relay Terminal | | | |
| 1 | Ground | Ignition switch | 0 |
| | | | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between accessory relay harness connector and BCM harness connector.

B2614 ACC RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

| Accessory relay | BCM | | Continuity |
|-----------------|-----------|----------|------------|
| Terminal | Connector | Terminal | |
| 1 | M122 | 95 | Existed |

4. Check continuity between accessory relay harness connector and ground.

| Accessory relay | Ground | Continuity |
|-----------------|--------|-------------|
| Terminal | | |
| 1 | | Not existed |

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-78, "Removal and Installation"](#).
- NO >> Repair or replace harness or connector.

3.CHECK ACCESSORY RELAY GROUND CIRCUIT

Check continuity between accessory relay harness connector and ground.

| Accessory relay | Ground | Continuity |
|-----------------|--------|------------|
| Terminal | | |
| 2 | | Existed |

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair accessory relay ground circuit.

4.CHECK ACCESSORY RELAY

Refer to [PCS-53, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Replace accessory relay.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007469529


1.CHECK ACCESSORY RELAY

1. Turn ignition switch OFF.
2. Remove accessory relay.
3. Check the continuity between accessory relay terminals.

| Terminals | Condition | Continuity |
|-----------|--|-------------|
| 3 and 5 | 12 V direct current supply between terminals 1 and 2 | Existed |
| | No current supply | Not existed |

Is the inspection result normal?

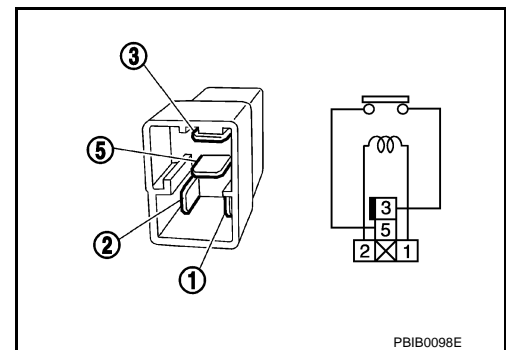- YES >> INSPECTION END
- NO >> Replace accessory relay.



PBIB0098E

B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2615 BLOWER RELAY CIRCUIT

Description

INFOID:000000007469530

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.
BCM checks the power supply position internally.

DTC Logic

INFOID:000000007469531

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|--|
| B2615 | Blower relay circuit | BCM detects a difference of signal for 1 second or more between the following information. <ul style="list-style-type: none">• Blower relay ON/OFF request• Blower relay feedback | <ul style="list-style-type: none">• Harness or connectors (Blower relay circuit is open or shorted)• BCM• Blower relay |

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-54. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000007469532

1. CHECK BLOWER RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect blower relay.
3. Check voltage between blower relay harness connector and ground.

| (+) | (-) | Condition | Voltage (V) (Approx.) |
|--------------------------|--------|------------------|--------------------------|
| Blower relay Terminal | | | |
| 1 | Ground | Ignition switch | 0 |
| | | OFF or ACC ON | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK BLOWER RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between blower relay harness connector and BCM harness connector.

B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

| Blower relay Terminal | BCM | | Continuity |
|--------------------------|-----------|----------|------------|
| | Connector | Terminal | |
| 1 | M122 | 102 | Existed |

4. Check continuity between blower relay harness connector and ground.

| Blower relay Terminal | Ground | Continuity |
|--------------------------|--------|-------------|
| 1 | | Not existed |

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-78, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

3.CHECK BLOWER RELAY GROUND CIRCUIT

- Turn ignition switch OFF.
- Check continuity between blower relay harness connector and ground.

| Blower relay Terminal | Ground | Continuity |
|--------------------------|--------|------------|
| 2 | | Existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair blower relay ground circuit.

4.CHECK BLOWER RELAY

Refer to [PCS-55, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace blower relay.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007469533

1.CHECK BLOWER RELAY


- Turn ignition switch OFF.
- Remove blower relay.
- Check the continuity between blower relay terminals.

| Terminals | Condition | Continuity |
|-----------|--|-------------|
| 3 and 5 | 12 V direct current supply between terminals 1 and 2 | Existed |
| | No current supply | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

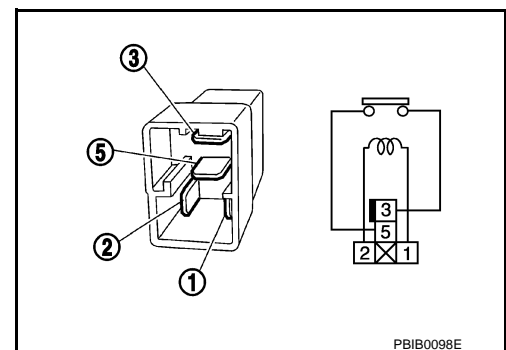NO >> Replace blower relay



PBIB0098E

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P

B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2616 IGNITION RELAY CIRCUIT

Description

INFOID:000000007469534

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.
BCM checks the power supply position internally.

DTC Logic

INFOID:000000007469535

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|---|
| B2616 | Ignition relay circuit | An immediate operation of ignition relay (fuse block) is requested by BCM, but there is no response for more than 1 second | <ul style="list-style-type: none">• Harness or connectors (Ignition relay circuit is open or shorted)• BCM• Ignition relay (Fuse block) |

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-56. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000007469536

1. CHECK IGNITION RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect ignition relay.
3. Check voltage between ignition relay harness connector and ground.

| (+) | (-) | Condition | Voltage (V) (Approx.) |
|----------------------------|--------|------------------|--------------------------|
| Ignition relay Terminal | | | |
| 1 | Ground | Ignition switch | 0 |
| | | OFF or ACC ON | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK IGNITION RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between ignition relay harness connector and BCM harness connector.

B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

| Ignition relay | BCM | | Continuity |
|----------------|-----------|----------|------------|
| Terminal | Connector | Terminal | |
| 1 | M122 | 82 | Existed |

4. Check continuity between ignition relay harness connector and ground.

| Ignition relay | Ground | Continuity |
|----------------|--------|-------------|
| Terminal | | |
| 1 | | Not existed |

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-78, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

3.CHECK IGNITION RELAY GROUND CIRCUIT

- Turn ignition switch OFF.
- Check continuity between ignition relay harness connector and ground.

| Ignition relay | Ground | Continuity |
|----------------|--------|------------|
| Terminal | | |
| 2 | | Existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair ignition relay ground circuit.

4.CHECK IGNITION RELAY

Refer to [PCS-57, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace ignition relay.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007469537

1.CHECK IGNITION RELAY


- Turn ignition switch OFF.
- Remove ignition relay.
- Check the continuity between ignition relay terminals.

| Terminals | Condition | Continuity |
|-----------|--|-------------|
| 3 and 5 | 12 V direct current supply between terminals 1 and 2 | Existed |
| | No current supply | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

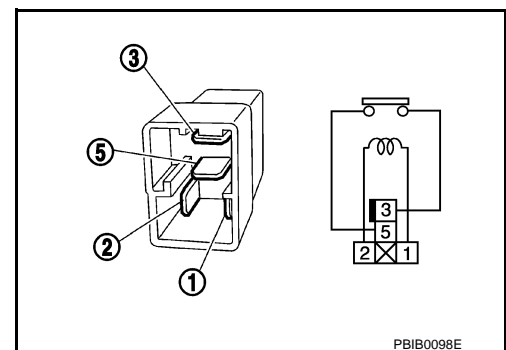NO >> Replace Ignition relay



PBIB0098E

PCS

B2618 BCM

Description

INFOID:000000007469538

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.
 BCM checks the power supply position internally.

DTC Logic

INFOID:000000007469539

DTC DETECTION LOGIC

NOTE:

- If DTC B2618 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-46, "DTC Logic"](#).
- If DTC B2618 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [PCS-47, "DTC Logic"](#).

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|----------------|
| B2618 | BCM | An immediate operation of ignition relay (IPDM E/R) is requested by BCM, but there is no response for more than 1 second | BCM |

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-58, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000007469540

1. INSPECTION START

1. Turn ignition switch ON.
2. Select "Self diagnostic result" mode with CONSULT.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
 See [PCS-58, "DTC Logic"](#).

Is the 1st trip DTC B2618 displayed again?

- YES >> Replace BCM. Refer to [BCS-78, "Removal and Installation"](#)
- NO >> INSPECTION END

B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B261A PUSH-BUTTON IGNITION SWITCH

Description

INFOID:000000007469541

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

DTC Logic

INFOID:000000007469542

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|-----------------------------|---|--|
| B261A | PUSH-BUTTON IGNITION SWITCH | BCM detects a difference of signal for 1 second or more between the following information. <ul style="list-style-type: none"> Power supply position by push-button ignition switch Power supply position from IPDM E/R (CAN) | Harness or connectors (Push-button ignition switch circuit is open or shorted.) |

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- Press the push-button ignition switch under the following conditions, and wait for at least 1 second.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
- Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-59, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000007469543

1. CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns to ON.

Does ignition switch turn to ON?

- YES >> GO TO 2.
 NO >> GO TO 4.

2. CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

- Disconnect push-button ignition switch connector.
- Check voltage between IPDM E/R harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| IPDM E/R | | | |
| Connector | Terminal | | |
| E5 | 28 | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation"](#).

3. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

- Disconnect IPDM E/R connector and BCM connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

B261A PUSH-BUTTON IGNITION SWITCH

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

2. Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

| IPDM E/R | | Push-button ignition switch | | Continuity |
|-----------|----------|-----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E5 | 28 | M50 | 4 | Existed |

3. Check continuity between IPDM E/R harness connector and ground.

| IPDM E/R | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| E5 | 28 | | Not existed |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness or connector.

4.CHECK IGNITION SWITCH OUTPUT SIGNAL (BCM)

1. Disconnect push-button ignition switch connector.
2. Check voltage between BCM harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| BCM | | | |
| Connector | Terminal | | |
| M121 | 60 | Ground | Battery voltage |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace BCM. Refer to [BCS-78, "Removal and Installation"](#).

5.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (BCM)

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

| BCM | | Push-button ignition switch | | Continuity |
|-----------|----------|-----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M121 | 60 | M50 | 4 | Existed |

3. Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| M121 | 60 | | Not existed |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness or connector.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:000000007773643

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

| Signal name | Fuse and fusible link No. |
|----------------------|---------------------------|
| Battery power supply | K |
| | 10 |

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

| Terminals | | Voltage (Approx.) |
|-----------|----------|---------------------------|
| (+) | (-) | |
| BCM | | Ground Battery voltage |
| Connector | Terminal | |
| M118 | 1 | |
| M119 | 11 | |

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal | | |
| M119 | 13 | | Existed |

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH

Description

INFOID:000000007469545

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

Component Function Check

INFOID:000000007469546

1. CHECK FUNCTION

1. Select "PUSH SW" in "Data Monitor" mode with CONSULT.
2. Check the push-button ignition switch signal under the following condition.

| Test item | Condition | Status |
|-----------|--|--------|
| PUSH SW | Push-button ignition switch is pressed | ON |
| | Push-button ignition switch is not pressed | OFF |

Is the indication normal?

- YES >> INSPECTION END
NO >> Go to [PCS-62, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007469547

1. CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns to ON.

Does ignition switch turn to ON?

- YES >> GO TO 2.
NO >> GO TO 4.

2. CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

1. Disconnect push-button ignition switch connector.
2. Check voltage between IPDM E/R harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| IPDM E/R | | | |
| Connector | Terminal | Ground | Battery voltage |
| E5 | 28 | | |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation"](#).

3. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

1. Disconnect IPDM E/R connector and BCM connector.
2. Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

| IPDM E/R | | Push-button ignition switch | | Continuity |
|-----------|----------|-----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E5 | 28 | M50 | 4 | Existed |

3. Check continuity between IPDM E/R harness connector and ground.

| IPDM E/R | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| E5 | 28 | | Not existed |

PUSH-BUTTON IGNITION SWITCH

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness or connector.

4.CHECK IGNITION SWITCH OUTPUT SIGNAL (BCM)

1. Disconnect push-button ignition switch connector.
2. Check voltage between BCM harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| BCM | | | |
| Connector | Terminal | Ground | Battery voltage |
| M121 | 60 | | |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace BCM. Refer to [BCS-78. "Removal and Installation"](#).

5.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (BCM)

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

| BCM | | Push-button ignition switch | | Continuity |
|-----------|----------|-----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M121 | 60 | M50 | 4 | Existed |

3. Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| M121 | 60 | | Not existed |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness or connector.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000007469548

PCS

1.CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals.

| Push-button ignition switch | | Condition | | Continuity |
|-----------------------------|---|-----------------------------|-------------|-------------|
| Terminal | | Push-button ignition switch | Pressed | |
| 1 | 4 | | | Pressed |
| | | | Not pressed | Not existed |

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Replace push-button ignition switch. Refer to [PCS-102. "Removal and Installation"](#).

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

Description

INFOID:000000007469549

The switch that changes the power supply position.
BCM maintains the power supply position status.
BCM changes the power supply position with the operation of the push-button ignition switch.

Component Function Check

INFOID:000000007469550

1.CHECK FUNCTION

Check push-button ignition switch ("LOCK INDICATOR", "ACC INDICATOR" and "IGNITION ON IND") in Active Test Mode with CONSULT.

| Test item | | Description | |
|----------------------------------|-----|--------------------|----------------|
| LOCK INDICATOR | ON | Position indicator | Illuminate |
| ACC INDICATOR IGNITION ON IND | OFF | | Not illuminate |

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Refer to [PCS-64, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007469551

1.CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

- Turn ignition switch OFF.
- Disconnect push-button ignition switch connector.
- Check voltage between push-button ignition switch harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------------------------|----------|--------|--------------------------|
| Push-button ignition switch | | | |
| Connector | Terminal | Ground | Battery voltage |
| M50 | 8 | | |

Is the inspection normal?

- YES >> GO TO 2.
NO-1 >> Check 10 A fuse [No.9, located in fuse block (J/B)].
NO-2 >> Check harness for open or short between push-button ignition switch and fuse.

2.CHECK BCM INPUT

- Connect push-button ignition switch connector.
- Disconnect BCM connector.
- Check voltage between BCM connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| BCM | | | |
| Connector | Terminal | Ground | Battery voltage |
| M119 | 15 | | |
| M122 | 93 | | |
| M123 | 134 | | |

Is the inspection normal?

- YES >> Replace BCM. Refer to [BCS-78, "Removal and Installation"](#).
NO >> GO TO 3.

3.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

- Disconnect push-button ignition switch connector.

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

| Indicator | BCM | | Push-button ignition switch | | Continuity |
|-----------|-----------|----------|-----------------------------|----------|------------|
| | Connector | Terminal | Connector | Terminal | |
| LOCK | M123 | 134 | M50 | 5 | Existed |
| ACC | M119 | 15 | | 6 | |
| ON | M122 | 93 | | 7 | |

3. Check continuity between BCM harness connector and ground.

| Indicator | BCM | | Ground | Continuity |
|-----------|-----------|----------|--------|-------------|
| | Connector | Terminal | | |
| LOCK | M123 | 134 | Ground | Not existed |
| ACC | M119 | 15 | | |
| ON | M122 | 93 | | |

Is the inspection normal?

- YES >> Replace push-button ignition switch. Refer to [PCS-102, "Removal and Installation"](#).
- NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P



POWER DISTRIBUTION SYSTEM

 
< DTC/CIRCUIT DIAGNOSIS >


[POWER DISTRIBUTION SYSTEM]

POWER DISTRIBUTION SYSTEM

Wiring Diagram - PDS (POWER DISTRIBUTION SYSTEM) -

INFOID:000000007469552

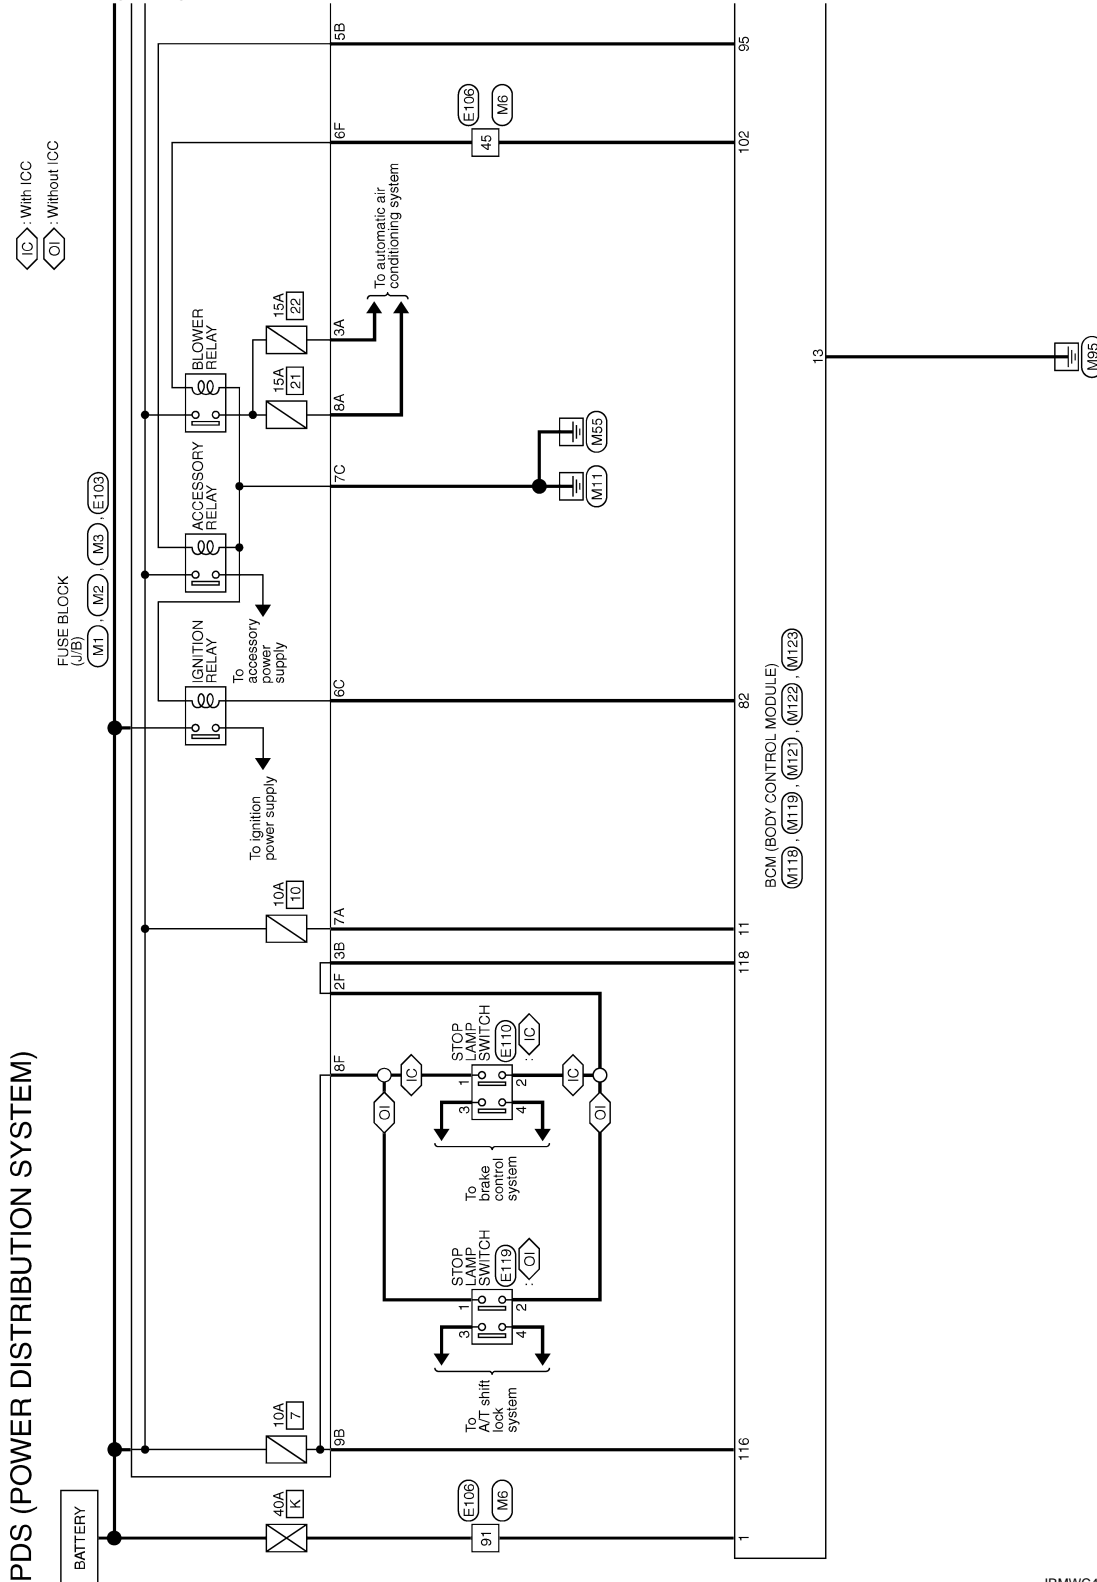For connector terminal arrangements, harness layouts, and alphabets in a  (option abbreviation; if not described in wiring diagram), refer to [GI-12, "Connector Information"](#).




JRMWC4430GB

2011/07/13

POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

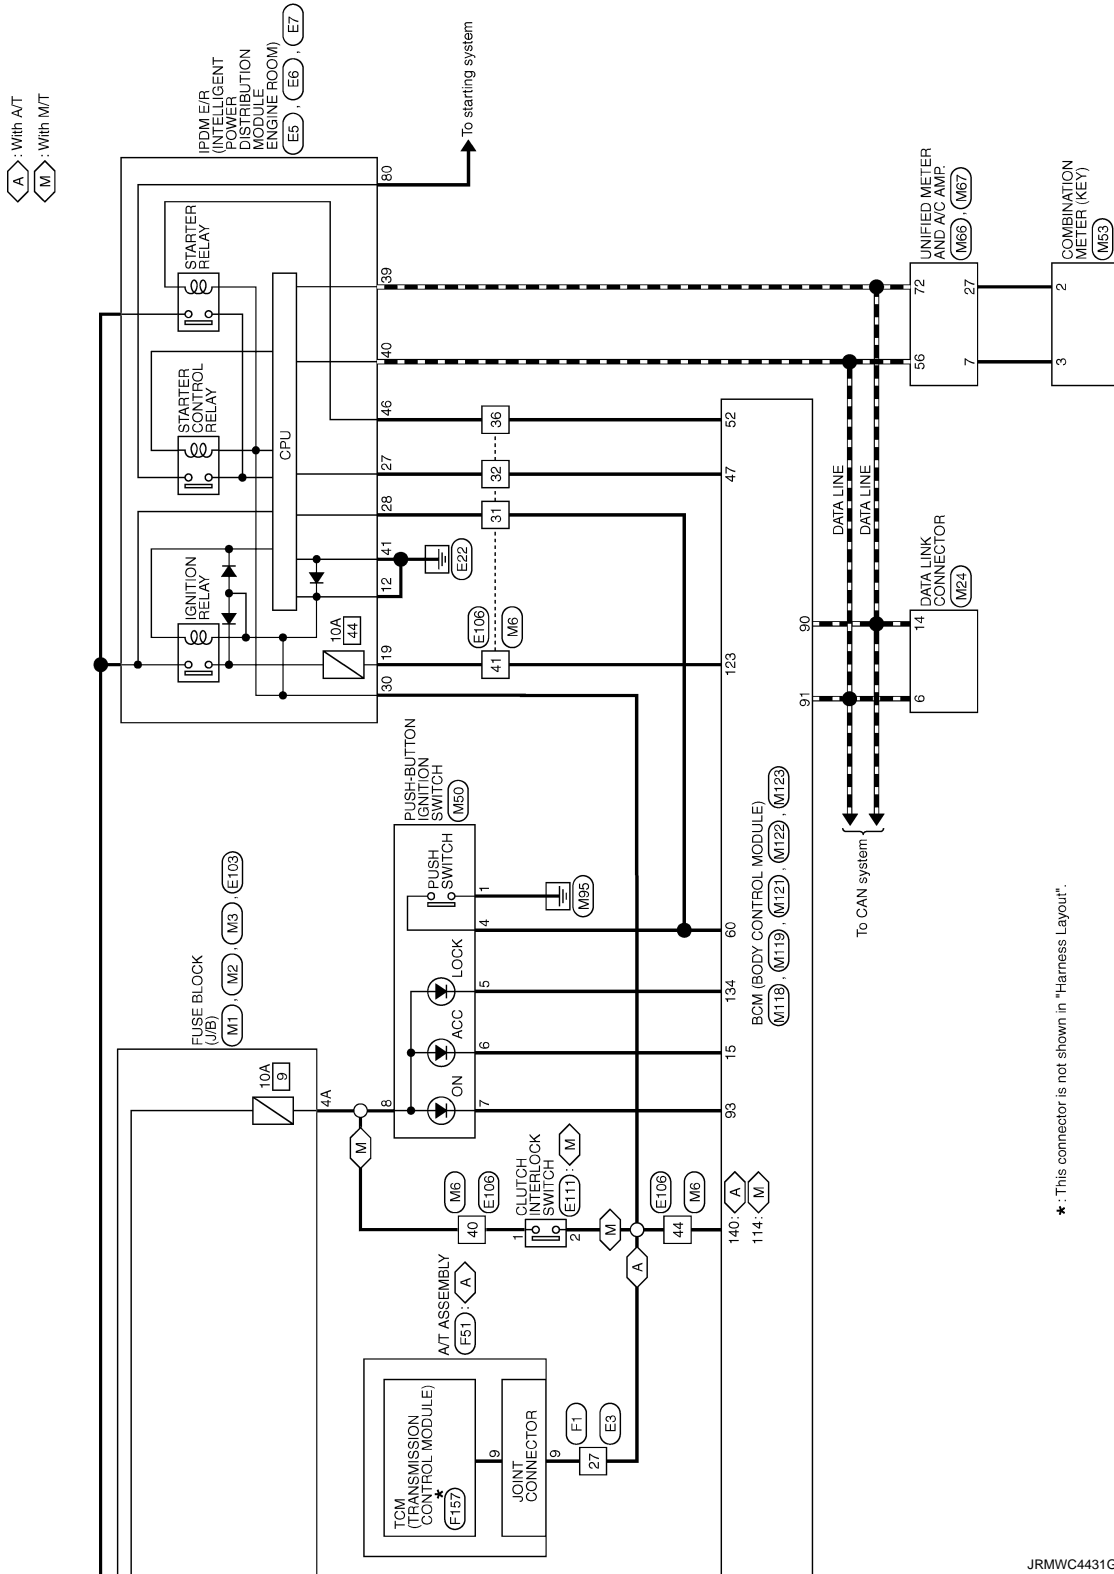[POWER DISTRIBUTION SYSTEM]



*: This connector is not shown in "Harness Layout".

JRMWC4431GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000007773644

VALUES ON THE DIAGNOSIS TOOL

CONSULT MONITOR ITEM

| Monitor Item | Condition | Value/Status |
|----------------|---|----------------------------|
| FR WIPER HI | Other than front wiper switch HI | Off |
| | Front wiper switch HI | On |
| FR WIPER LOW | Other than front wiper switch LO | Off |
| | Front wiper switch LO | On |
| FR WASHER SW | Front washer switch OFF | Off |
| | Front washer switch ON | On |
| FR WIPER INT | Other than front wiper switch INT/AUTO | Off |
| | Front wiper switch INT/AUTO | On |
| FR WIPER STOP | Front wiper is not in STOP position | Off |
| | Front wiper is in STOP position | On |
| INT VOLUME | Wiper volume dial is in a dial position 1 - 7 | Wiper volume dial position |
| TURN SIGNAL R | Other than turn signal switch RH | Off |
| | Turn signal switch RH | On |
| TURN SIGNAL L | Other than turn signal switch LH | Off |
| | Turn signal switch LH | On |
| TAIL LAMP SW | Other than lighting switch 1ST and 2ND | Off |
| | Lighting switch 1ST or 2ND | On |
| HI BEAM SW | Other than lighting switch HI | Off |
| | Lighting switch HI | On |
| HEAD LAMP SW 1 | Other than lighting switch 2ND | Off |
| | Lighting switch 2ND | On |
| HEAD LAMP SW 2 | Other than lighting switch 2ND | Off |
| | Lighting switch 2ND | On |
| PASSING SW | Other than lighting switch PASS | Off |
| | Lighting switch PASS | On |
| AUTO LIGHT SW | Other than lighting switch AUTO | Off |
| | Lighting switch AUTO | On |
| FR FOG SW | Front fog lamp switch OFF | Off |
| | Front fog lamp switch ON | On |
| RR FOG SW | NOTE: The item is indicated, but not monitored. | Off |
| DOOR SW-DR | Driver door closed | Off |
| | Driver door opened | On |
| DOOR SW-AS | Passenger door closed | Off |
| | Passenger door opened | On |
| DOOR SW-RR | NOTE: The item is indicated, but not monitored. | Off |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Monitor Item | Condition | Value/Status | |
|----------------|--|--------------|-----|
| DOOR SW-RL | NOTE: The item is indicated, but not monitored. | Off | A |
| DOOR SW-BK | NOTE: The item is indicated, but not monitored. | Off | B |
| CDL LOCK SW | Other than power door lock switch LOCK | Off | C |
| | Power door lock switch LOCK | On | |
| CDL UNLOCK SW | Other than power door lock switch UNLOCK | Off | D |
| | Power door lock switch UNLOCK | On | |
| KEY CYL LK-SW | Other than driver door key cylinder LOCK position | Off | E |
| | Driver door key cylinder LOCK position | On | |
| KEY CYL UN-SW | Other than driver door key cylinder UNLOCK position | Off | F |
| | Driver door key cylinder UNLOCK position | On | |
| KEY CYL SW-TR | NOTE: The item is indicated, but not monitored. | Off | G |
| HAZARD SW | Hazard switch is OFF | Off | H |
| | Hazard switch is ON | On | |
| REAR DEF SW | NOTE: The item is indicated, but not monitored. | Off | I |
| TR CANCEL SW | Trunk lid opener cancel switch OFF | Off | J |
| | Trunk lid opener cancel switch ON | On | |
| TR/BD OPEN SW | Trunk lid opener switch OFF | Off | K |
| | While the trunk lid opener switch is turned ON | On | |
| TRNK/HAT MNTR | Trunk lid closed | Off | L |
| | Trunk lid opened | On | |
| REVERSE SW | NOTE: The item is indicated, but not monitored. | Off | M |
| RKE-LOCK | LOCK button of the Intelligent Key is not pressed | Off | N |
| | LOCK button of the Intelligent Key is pressed | On | |
| RKE-UNLOCK | UNLOCK button of the Intelligent Key is not pressed | Off | O |
| | UNLOCK button of the Intelligent Key is pressed | On | |
| RKE-TR/BD | TRUNK OPEN button of the Intelligent Key is not pressed | Off | P |
| | TRUNK OPEN button of the Intelligent Key is pressed | On | |
| RKE-PANIC | PANIC button of the Intelligent Key is not pressed | Off | PCS |
| | PANIC button of the Intelligent Key is pressed | On | |
| RKE-P/W OPEN | UNLOCK button of the Intelligent Key is not pressed | Off | N |
| | UNLOCK button of the Intelligent Key is pressed and held | On | |
| RKE-MODE CHG | LOCK/UNLOCK button of the Intelligent Key is not pressed and held simultaneously | Off | O |
| | LOCK/UNLOCK button of the Intelligent Key is pressed and held simultaneously | On | |
| OPTICAL SENSOR | Bright outside of the vehicle | Close to 5 V | P |
| | Dark outside of the vehicle | Close to 0 V | |
| REQ SW -DR | Driver door request switch is not pressed | Off | N |
| | Driver door request switch is pressed | On | |
| REQ SW -AS | Passenger door request switch is not pressed | Off | N |
| | Passenger door request switch is pressed | On | |
| REQ SW -RR | NOTE: The item is indicated, but not monitored. | Off | N |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Monitor Item | Condition | Value/Status |
|---------------|---|--------------|
| REQ SW -RL | NOTE: The item is indicated, but not monitored. | Off |
| REQ SW -BD/TR | Trunk lid opener request switch is not pressed | Off |
| | Trunk lid opener request switch is pressed | On |
| PUSH SW | Push-button ignition switch (push switch) is not pressed | Off |
| | Push-button ignition switch (push switch) is pressed | On |
| IGN RLY2 -F/B | NOTE: The item is indicated, but not monitored. | Off |
| ACC RLY -F/B | NOTE: The item is indicated, but not monitored. | Off |
| CLUCH SW | The clutch pedal is not depressed | Off |
| | The clutch pedal is depressed | On |
| BRAKE SW 1 | The brake pedal is depressed when No. 7 fuse is blown | Off |
| | The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal | On |
| BRAKE SW 2 | The brake pedal is not depressed | Off |
| | The brake pedal is depressed | On |
| DETE/CANCL SW | <ul style="list-style-type: none"> • Selector lever in P position (Except M/T models) • The clutch pedal is depressed (M/T models) | Off |
| | <ul style="list-style-type: none"> • Selector lever in any position other than P (Except M/T models) • The clutch pedal is not depressed (M/T models) | On |
| SFT PN/N SW | Selector lever in any position other than P and N | Off |
| | Selector lever in P or N position | On |
| S/L -LOCK | NOTE: The item is indicated, but not monitored. | Off |
| S/L -UNLOCK | NOTE: The item is indicated, but not monitored. | Off |
| S/L RELAY-F/B | NOTE: The item is indicated, but not monitored. | Off |
| UNLK SEN -DR | Driver door is unlocked | Off |
| | Driver door is locked | On |
| PUSH SW -IPDM | Push-button ignition switch (push-switch) is not pressed | Off |
| | Push-button ignition switch (push-switch) is pressed | On |
| IGN RLY1 -F/B | Ignition switch in OFF or ACC position | Off |
| | Ignition switch in ON position | On |
| DETE SW -IPDM | Selector lever in any position other than P | Off |
| | Selector lever in P position | On |
| SFT PN -IPDM | <ul style="list-style-type: none"> • Selector lever in any position other than P and N (Except M/T models) • The clutch pedal is not depressed (M/T models) | Off |
| | <ul style="list-style-type: none"> • Selector lever in P or N position • The clutch pedal is depressed | On |
| SFT P -MET | Selector lever in any position other than P | Off |
| | Selector lever in P position | On |
| SFT N -MET | Selector lever in any position other than N | Off |
| | Selector lever in N position | On |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Monitor Item | Condition | Value/Status | |
|----------------|--|--|-----|
| ENGINE STATE | Engine stopped | Stop | A |
| | While the engine stalls | Stall | |
| | At engine cranking | Crank | B |
| | Engine running | Run | |
| S/L LOCK-IPDM | NOTE: The item is indicated, but not monitored. | Off | C |
| S/L UNLK-IPDM | NOTE: The item is indicated, but not monitored. | Off | |
| S/L RELAY-REQ | NOTE: The item is indicated, but not monitored. | Off | D |
| VEH SPEED 1 | While driving | Equivalent to speedometer reading | E |
| VEH SPEED 2 | While driving | Equivalent to speedometer reading | |
| DOOR STAT-DR | Driver door is locked | LOCK | F |
| | Wait with selective UNLOCK operation (60 seconds) | READY | |
| | Driver door is unlocked | UNLOCK | G |
| DOOR STAT-AS | Passenger door is locked | LOCK | H |
| | Wait with selective UNLOCK operation (60 seconds) | READY | |
| | Passenger door is unlocked | UNLOCK | I |
| ID OK FLAG | Driver side door is open after ignition switch is turned OFF (Selector lever is in the P position except for M/T models) | Reset | J |
| | Ignition switch is ON | Set | K |
| PRMT ENG STRT | The engine start is prohibited | Reset | L |
| | The engine start is permitted | Set | |
| PRMT RKE STRT | NOTE: The item is indicated, but not monitored. | Reset | M |
| KEY SW -SLOT | The Intelligent Key is not inserted into key slot | Off | N |
| | The Intelligent Key is inserted into key slot | On | O |
| RKE OPE COUN1 | During the operation of the Intelligent Key | Operation frequency of the Intelligent Key | P |
| RKE OPE COUN2 | NOTE: The item is indicated, but not monitored. | — | |
| CONFIRM ID ALL | The key ID that the key slot receives is not recognized by any key ID registered to BCM. | Yet | PCS |
| | The key ID that the key slot receives is recognized by any key ID registered to BCM. | Done | N |
| CONFIRM ID4 | The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM. | Yet | O |
| | The key ID that the key slot receives is recognized by the fourth key ID registered to BCM. | Done | P |
| CONFIRM ID3 | The key ID that the key slot receives is not recognized by the third key ID registered to BCM. | Yet | |
| | The key ID that the key slot receives is recognized by the third key ID registered to BCM. | Done | |
| CONFIRM ID2 | The key ID that the key slot receives is not recognized by the second key ID registered to BCM. | Yet | |
| | The key ID that the key slot receives is recognized by the second key ID registered to BCM. | Done | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


| Monitor Item | Condition | Value/Status |
|--------------|--|-------------------------------|
| CONFIRM ID1 | The key ID that the key slot receives is not recognized by the first key ID registered to BCM. | Yet |
| | The key ID that the key slot receives is recognized by the first key ID registered to BCM. | Done |
| TP 4 | The ID of fourth Intelligent Key is not registered to BCM | Yet |
| | The ID of fourth Intelligent Key is registered to BCM | Done |
| TP 3 | The ID of third Intelligent Key is not registered to BCM | Yet |
| | The ID of third Intelligent Key is registered to BCM | Done |
| TP 2 | The ID of second Intelligent Key is not registered to BCM | Yet |
| | The ID of second Intelligent Key is registered to BCM | Done |
| TP 1 | The ID of first Intelligent Key is not registered to BCM | Yet |
| | The ID of first Intelligent Key is registered to BCM | Done |
| AIR PRESS FL | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of front LH tire |
| AIR PRESS FR | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of front RH tire |
| AIR PRESS RR | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of rear RH tire |
| AIR PRESS RL | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of rear LH tire |
| ID REGST FL1 | ID of front LH tire transmitter is registered | Done |
| | ID of front LH tire transmitter is not registered | Yet |
| ID REGST FR1 | ID of front RH tire transmitter is registered | Done |
| | ID of front RH tire transmitter is not registered | Yet |
| ID REGST RR1 | ID of rear RH tire transmitter is registered | Done |
| | ID of rear RH tire transmitter is not registered | Yet |
| ID REGST RL1 | ID of rear LH tire transmitter is registered | Done |
| | ID of rear LH tire transmitter is not registered | Yet |
| WARNING LAMP | Tire pressure indicator OFF | Off |
| | Tire pressure indicator ON | On |
| BUZZER | Tire pressure warning alarm is not sounding | Off |
| | Tire pressure warning alarm is sounding | On |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

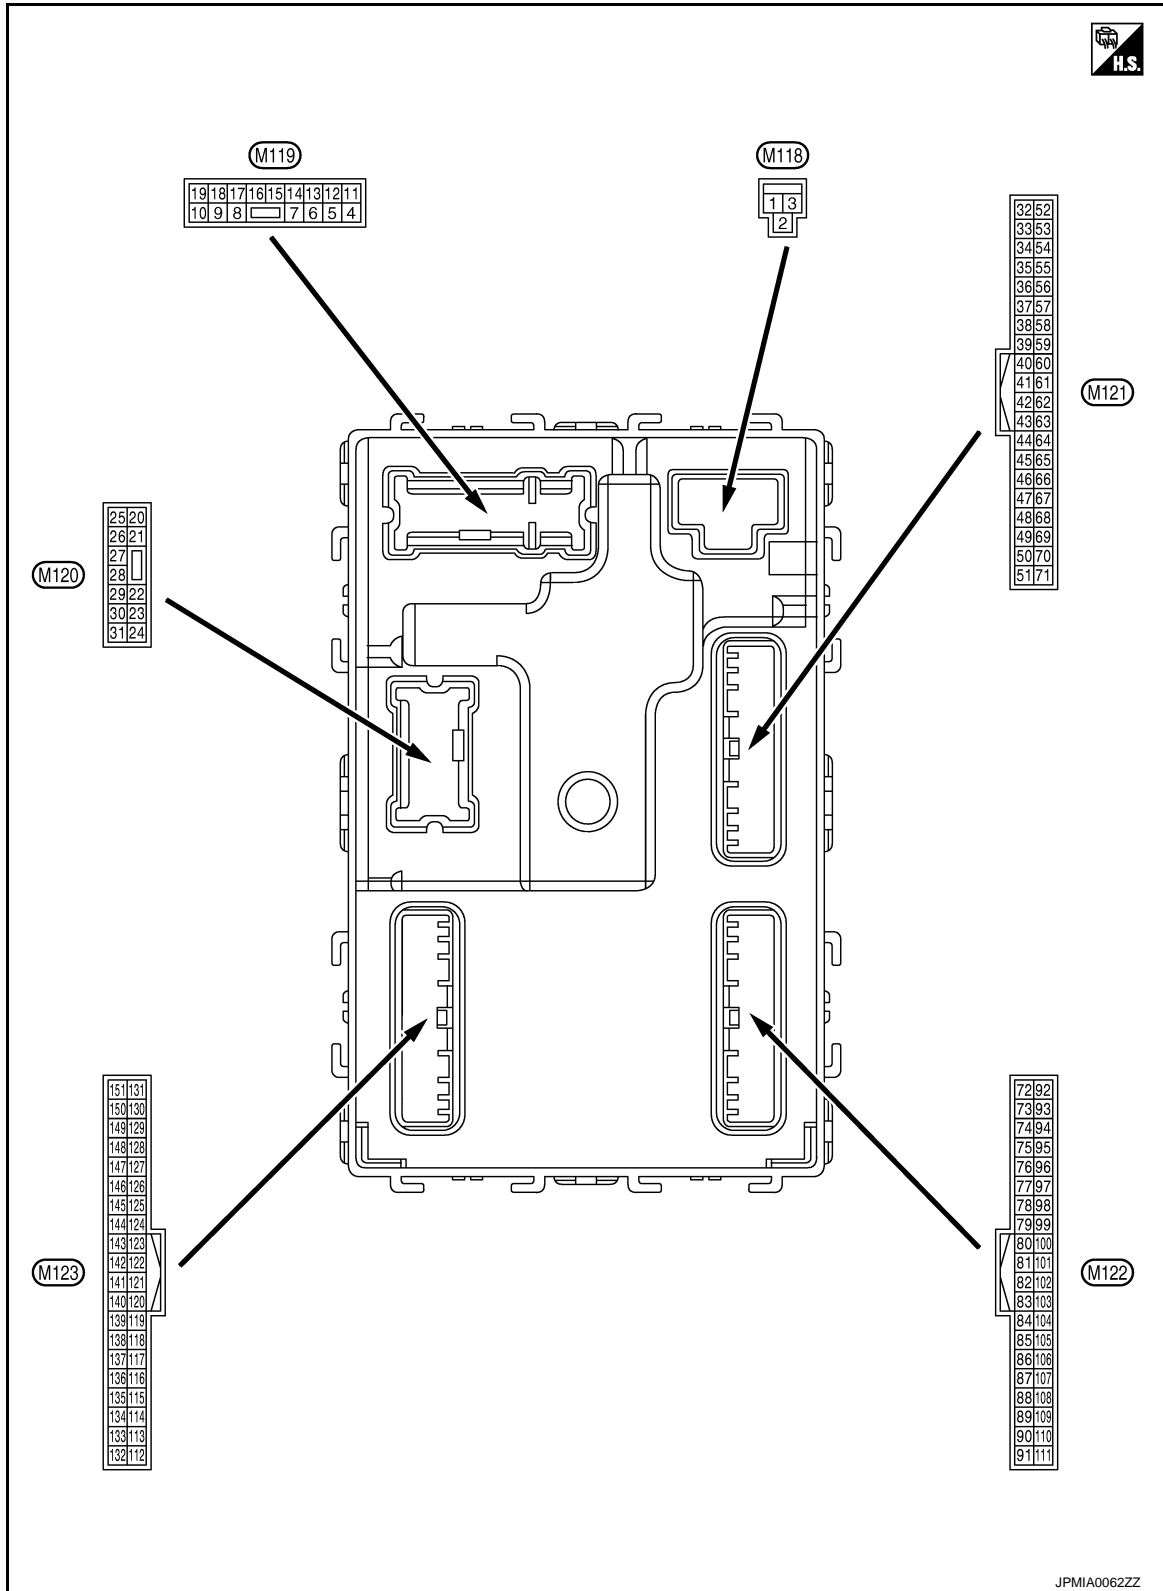TERMINAL LAYOUT



PHYSICAL VALUES

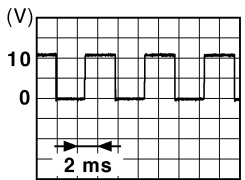
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|---|---|---|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 1 (W) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 2 (Y) | Ground | P/W power supply (BAT) | Output | Ignition switch OFF | | 12 V |
| 3 (BG) | Ground | P/W power supply (RAP) | Output | Ignition switch ON | | 12 V |
| 4 (LG) | Ground | Interior room lamp power supply | Output | Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply) | | 0 V |
| | | | | Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply) | | 12 V |
| 5 (P) | Ground | Passenger door UN- LOCK | Output | Passenger door | UNLOCK (Actuator is activated) | 12 V |
| | | | | | Other than UNLOCK (Actuator is not activated) | 0 V |
| 7 (SB) | Ground | Step lamp | Output | Step lamp | ON | 0 V |
| | | | | | OFF | 12 V |
| 8 (V) | Ground | All doors, fuel lid LOCK | Output | All doors, fuel lid | LOCK (Actuator is activated) | 12 V |
| | | | | | Other than LOCK (Actuator is not activated) | 0 V |
| 9 (G) | Ground | Driver door, fuel lid UNLOCK | Output | Driver door, fuel lid | UNLOCK (Actuator is activated) | 12 V |
| | | | | | Other than UNLOCK (Actuator is not activated) | 0 V |
| 11 (R) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 13 (B) | Ground | Ground | — | Ignition switch ON | | 0 V |
| 14 (W) | Ground | Push-button ignition switch illumination ground | Output | Tail lamp | OFF | 0 V |
| | | | | | ON | <p style="text-align: center;">NOTE: When the illumination brightening/dimming level is in the neutral position.</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p> |
| 15 (BG) | Ground | ACC indicator lamp | Output | Ignition switch | OFF (LOCK indicator is not illuminated) | Battery voltage |
| | | | | | ACC | 0 V |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

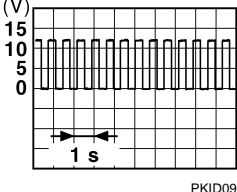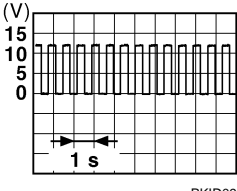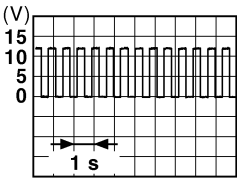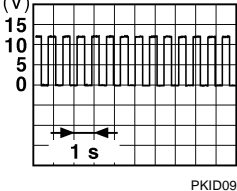[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-------------------------------|------------------|-----------------------|--|--|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 17 (W) | Ground | Turn signal RH (Front) | Output | Ignition switch ON | Turn signal switch OFF | 0 V |
| | | | | | Turn signal switch RH |  6.5 V |
| 18 (BG) | Ground | Turn signal LH (Front) | Output | Ignition switch ON | Turn signal switch OFF | 0 V |
| | | | | | Turn signal switch LH |  6.5 V |
| 19 (V) | Ground | Interior room lamp control | Output | Interior room lamp | OFF | 12 V |
| | | | | | ON | 0 V |
| 20 (V) | Ground | Turn signal RH (Rear) | Output | Ignition switch ON | Turn signal switch OFF | 0 V |
| | | | | | Turn signal switch RH |  6.5 V |
| 23 (LG) | Ground | Trunk lid open | Output | Trunk lid | OPEN (Trunk lid opener actuator is activated) | 12 V |
| | | | | | Other than OPEN (Trunk lid opener actuator is not activated) | 0 V |
| 25 (Y) | Ground | Turn signal LH (Rear) | Output | Ignition switch ON | Turn signal switch OFF | 0 V |
| | | | | | Turn signal switch LH |  6.5 V |
| 30 (P) | Ground | Trunk room lamp | Output | Trunk room lamp | ON | 0 V |
| | | | | | OFF | 12 V |

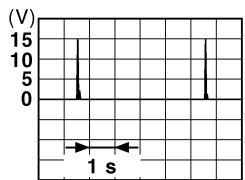
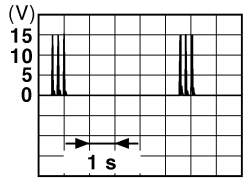
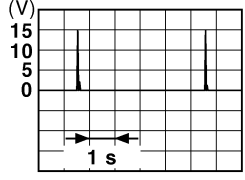
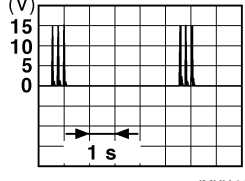
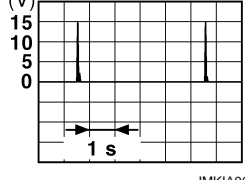
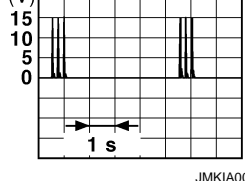
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|------------------------------|------------------|---|--|
| + | - | Signal name | Input/ Output | | |
| 34 (SB) | Ground | Trunk room antenna (-) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compart- ment  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compart- ment  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> | |
| 35 (V) | Ground | Trunk room antenna (+) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compart- ment  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compart- ment  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> | |
| 38 (B) | Ground | Rear bumper anten- na (-) | Output | When the trunk lid opener re- quest switch is operated with ignition switch OFF | When Intelligent Key is in the antenna detection area  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

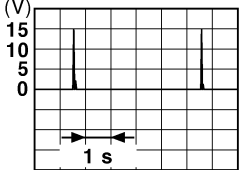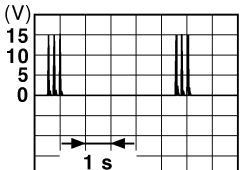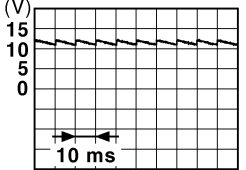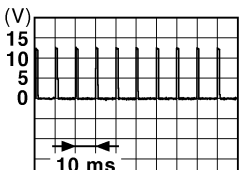[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--|------------------|---|---|---|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 39 (W) | Ground | Rear bumper antenna (+) | Output | When Intelligent Key is in the antenna detection area |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> | |
| | | | | When the trunk lid opener request switch is operated with ignition switch OFF |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> | |
| 47 (Y) | Ground | Ignition relay (IPDM E/R) control | Output | Ignition switch | OFF or ACC | 12 V |
| | | | | | ON | 0 V |
| 50 (BG) | Ground | Trunk room lamp switch | Input | Trunk room lamp switch | OFF (Trunk lid is closed) |  <p style="text-align: right; font-size: small;">JPMIA0011GB</p> |
| | | | | | | ON (Trunk lid is opened) |
| 52 (R) | Ground | Starter relay control | Output | Ignition switch ON (A/T models) | When selector lever is in P or N position | 12 V |
| | | | | | When selector lever is not in P or N position | 0 V |
| | | | | Ignition switch ON (M/T models) | When the clutch pedal is depressed | Battery voltage |
| | | | | | When the clutch pedal is not depressed | 0 V |
| 60 (BR) | Ground | Push-button ignition switch (Push switch) | Input | Push-button ignition switch (Push switch) | Pressed | 0 V |
| | | | | | Not pressed | Battery voltage |
| 61 (SB) | Ground | Trunk lid opener request switch | Input | Trunk lid opener request switch | ON (Pressed) | 0 V |
| | | | | | OFF (Not pressed) |  <p style="text-align: right; font-size: small;">JPMIA0016GB</p> |
| 64 (G) | Ground | Intelligent Key warning buzzer (Engine room) | Output | Intelligent Key warning buzzer (Engine room) | Sounding | 0 V |
| | | | | | Not sounding | 12 V |

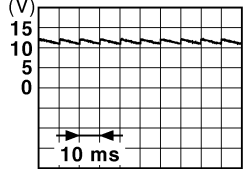
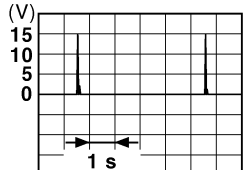
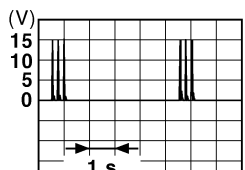
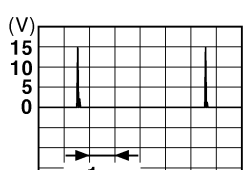
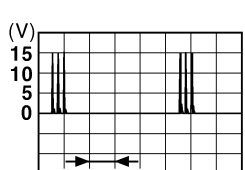
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--|------------------|------------------------------|--|---|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 67 (GR) | Ground | Trunk lid opener switch | Input | Trunk lid open- er switch | Pressed | 0 V |
| | | | | | Not pressed |  <p style="text-align: right; font-size: small;">JPMIA0011GB</p> |
| 72 (R) | Ground | Room antenna 2 (-) (Center console) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | | When Intelligent Key is not in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 73 (G) | Ground | Room antenna 2 (+) (Center console) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | | When Intelligent Key is not in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|----------------------------|------------------|---|---|
| | | Signal name | Input/ Output | | |
| + | - | | | | |
| 74 (SB) | Ground | Passenger door antenna (-) | Output | When the passenger door request switch is operated with ignition switch OFF | When Intelligent Key is in the antenna detection area |
| | | | | When Intelligent Key is not in the antenna detection area | |
| 75 (BR) | Ground | Passenger door antenna (+) | Output | When the passenger door request switch is operated with ignition switch OFF | When Intelligent Key is in the antenna detection area |
| | | | | When Intelligent Key is not in the antenna detection area | |
| 76 (V) | Ground | Driver door antenna (-) | Output | When the driver door request switch is operated with ignition switch OFF | When Intelligent Key is in the antenna detection area |
| | | | | When Intelligent Key is not in the antenna detection area | |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

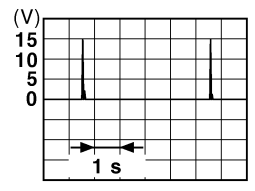
PCS




JMKIA0062GB

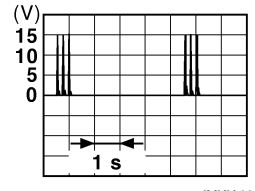


JMKIA0063GB

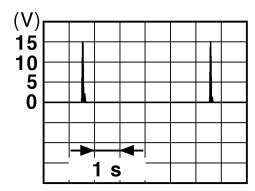


JMKIA0062GB

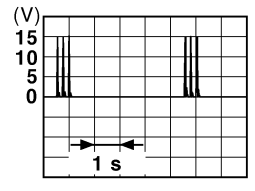

JMKIA0063GB

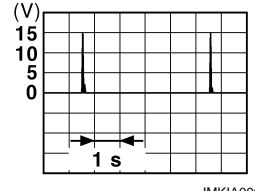

JMKIA0062GB






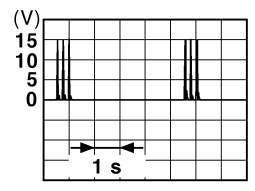


JMKIA0063GB

BCM (BODY CONTROL MODULE)
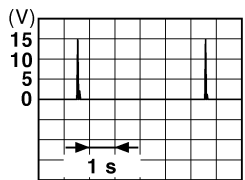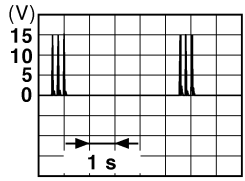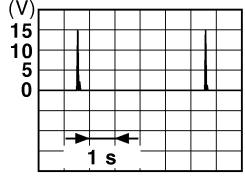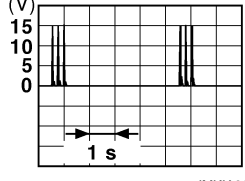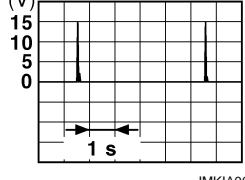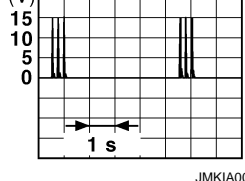
< ECU DIAGNOSIS INFORMATION >






[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--|------------------|--|---|
| + | - | Signal name | Input/ Output | | |
| 77 (LG) | Ground | Driver door antenna (+) | Output | When the driver door request switch is operated with ignition switch OFF | When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the antenna detection area |  <small>JMKIA0063GB</small> |
| 78 (Y) | Ground | Room antenna 1 (-) (Instrument panel) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compartment  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the passenger compartment |  <small>JMKIA0063GB</small> |
| 79 (BR) | Ground | Room antenna 1 (+) (Instrument panel) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compartment  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the passenger compartment |  <small>JMKIA0063GB</small> |

BCM (BODY CONTROL MODULE)
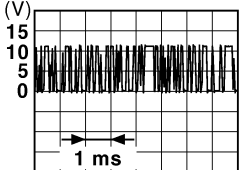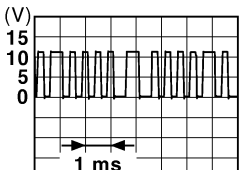
< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

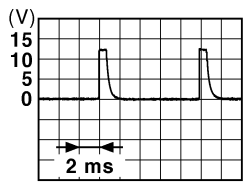
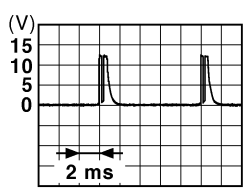

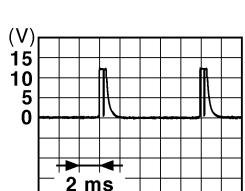
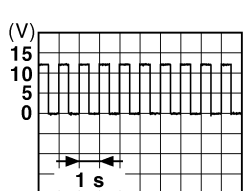
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|---|---|---|
| + | - | Signal name | Input/ Output | | | |
| 80 (GR) | Ground | NATS antenna amp. | Input/ Output | During waiting | Ignition switch is pressed while inserting the Intelligent Key into the key slot. | Just after pressing ignition switch. Pointer of tester should move. |
| 81 (W) | Ground | NATS antenna amp. | Input/ Output | During waiting | Ignition switch is pressed while inserting the Intelligent Key into the key slot. | Just after pressing ignition switch. Pointer of tester should move. |
| 82 (SB) | Ground | Ignition relay [Fuse block (J/B)] control | Output | Ignition switch | OFF or ACC | 0 V |
| | | | | | ON | 12 V |
| 83 (Y) | Ground | Remote keyless entry receiver communication | Input/ Output | During waiting | |  <p style="text-align: right; font-size: small;">JMKIA0064GB</p> |
| | | | | When operating either button on the Intelligent Key | |  <p style="text-align: right; font-size: small;">JMKIA0065GB</p> |
| 87 (Y) | Ground | Combination switch INPUT 5 | Input | Combination switch | All switches OFF (Wiper volume dial 4) |  <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p> |
| | | | | | Front fog lamp switch ON (Wiper volume dial 4) |  <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p> |
| | | | | | Any of the conditions below with all switches OFF | <ul style="list-style-type: none"> • Wiper volume dial 1 • Wiper volume dial 2 • Wiper volume dial 6 • Wiper volume dial 7  <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p> |

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >



[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------|------------------|----------------------------|---|
| | | Signal name | Input/ Output | | |
| + | - | | | | |
| 88 (BG) | Ground | Combination switch INPUT 3 | Input | Combination switch | All switches OFF (Wiper volume dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0041GB</p> <p style="margin: 0;">1.4 V</p> </div> |
| | | | | | Lighting switch HI (Wiper volume dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0036GB</p> <p style="margin: 0;">1.3 V</p> </div> |
| | | | | | Lighting switch 2ND (Wiper volume dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0037GB</p> <p style="margin: 0;">1.3 V</p> </div> |
| | | | | | Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper volume dial 1 • Wiper volume dial 2 • Wiper volume dial 3 <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0040GB</p> <p style="margin: 0;">1.3 V</p> </div> |
| 90 (P) | Ground | CAN-L | Input/ Output | — | — |
| 91 (L) | Ground | CAN-H | Input/ Output | — | — |
| 92 (LG) | Ground | Key slot illumination | Output | Key slot illumina- tion | OFF <div style="text-align: right;"> <p style="margin: 0;">12 V</p> </div> |
| | | | | Blinking | <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0015GB</p> <p style="margin: 0;">6.5 V</p> </div> |
| | | | | ON | 0 V |
| 93 (GR) | Ground | ON indicator lamp | Output | Ignition switch | OFF (LOCK indicator is not illuminated) <div style="text-align: right;"> <p style="margin: 0;">Battery voltage</p> </div> |
| | | | | ON | 0 V |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

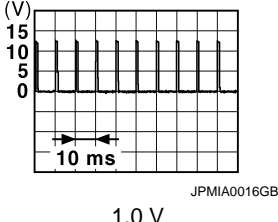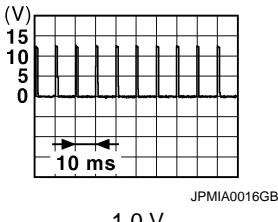[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|---|--------|--|------------------|-------------------------------|------------------------------------|---|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 95 (BG) | Ground | ACC relay control | Output | Ignition switch | OFF | 0 V |
| | | | | | ACC or ON | 12 V |
| 96 (GR) | Ground | A/T shift selector (Detention switch) power supply | Output | — | | 12 V |
| 99 (R) ^{*1} (BR) ^{*2} | Ground | Selector lever P position switch (A/T models) | Input | Selector lever | P position | 0 V |
| | | | | | Any position other than P | 12 V |
| | | ASCD clutch switch (M/T models) | | ASCD clutch switch | OFF (Clutch pedal is depressed) | 0 V |
| | | | | | ON (Clutch pedal is not depressed) | 12 V |
| 100 (Y) | Ground | Passenger door request switch | Input | Passenger door request switch | ON (Pressed) | 0 V |
| | | | | | OFF (Not pressed) |  |
| 101 (P) | Ground | Driver door request switch | Input | Driver door request switch | ON (Pressed) | 0 V |
| | | | | | OFF (Not pressed) |  |
| 102 (BG) | Ground | Blower fan motor relay control | Output | Ignition switch | OFF or ACC | 0 V |
| | | | | | ON | 12 V |
| 103 (P) | Ground | Remote keyless entry receiver power supply | Output | Ignition switch OFF | | 12 V |

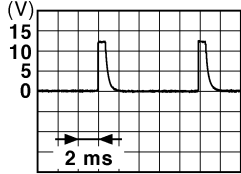
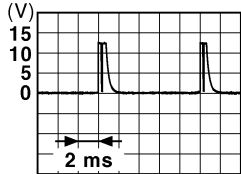


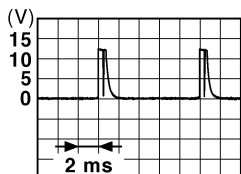
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

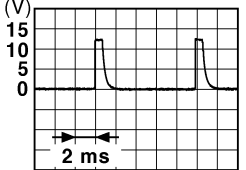

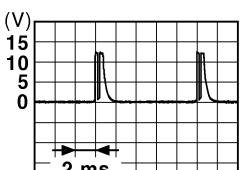
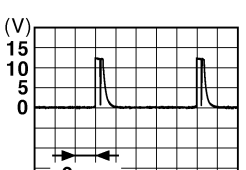
[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-------------------------------|------------------|---|------------------------|--|
| + | - | Signal name | Input/ Output | | | |
| 107 (LG) | Ground | Combination switch INPUT 1 | Input | Combination switch (Wiper volume dial 4) | All switches OFF |  <small>JPMIA0041GB</small> 1.4 V |
| | | | | | Turn signal switch LH |  <small>JPMIA0037GB</small> 1.3 V |
| | | | | | Turn signal switch RH |  <small>JPMIA0036GB</small> 1.3 V |
| | | | | | Front wiper switch LO |  <small>JPMIA0038GB</small> 1.3 V |
| | | | | | Front washer switch ON |  <small>JPMIA0039GB</small> 1.3 V |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------|------------------|---|---|
| | | Signal name | Input/ Output | | |
| + | - | | | | |
| 108 (R) | Ground | Combination switch INPUT 4 | Input | Combination switch | All switches OFF (Wiper volume dial 4) <div style="text-align: right; margin-top: 10px;">  <p style="font-size: small; margin: 0;">JPMIA0041GB</p> <p style="margin: 0;">1.4 V</p> </div> |
| | | | | Lighting switch AUTO (Wiper volume dial 4) | Lighting switch AUTO (Wiper volume dial 4) <div style="text-align: right; margin-top: 10px;">  <p style="font-size: small; margin: 0;">JPMIA0038GB</p> <p style="margin: 0;">1.3 V</p> </div> |
| | | | | Lighting switch 1ST (Wiper volume dial 4) | Lighting switch 1ST (Wiper volume dial 4) <div style="text-align: right; margin-top: 10px;">  <p style="font-size: small; margin: 0;">JPMIA0036GB</p> <p style="margin: 0;">1.3 V</p> </div> |
| | | | | Any of the conditions below with all switches OFF | Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper volume dial 1 • Wiper volume dial 5 • Wiper volume dial 6 <div style="text-align: right; margin-top: 10px;">  <p style="font-size: small; margin: 0;">JPMIA0039GB</p> <p style="margin: 0;">1.3 V</p> </div> |

A
B
C
D
E
F
G
H
I
J
K
L

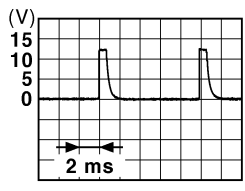
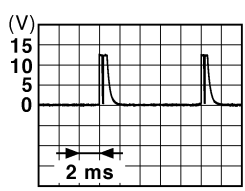
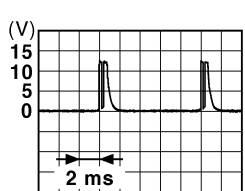
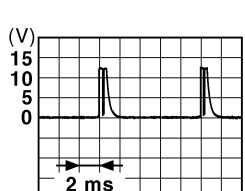
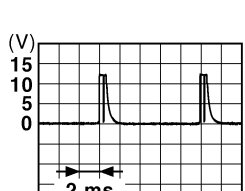
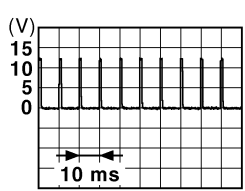
PCS

N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >



[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-------------------------------|------------------|---|---------------------------------|--|
| + | - | Signal name | Input/ Output | | | |
| 109 (W) | Ground | Combination switch INPUT 2 | Input | Combination switch (Wiper volume dial 4) | All switches OFF |  <small>JPMIA0041GB</small> 1.4 V |
| | | | | | Lighting switch PASS |  <small>JPMIA0037GB</small> 1.3 V |
| | | | | | Lighting switch 2ND |  <small>JPMIA0036GB</small> 1.3 V |
| | | | | | Front wiper switch INT/ AUTO |  <small>JPMIA0038GB</small> 1.3 V |
| | | | | | Front wiper switch HI |  <small>JPMIA0040GB</small> 1.3 V |
| | | | | | ON | 0 V |
| 110 (G) | Ground | Hazard switch | Input | Hazard switch | OFF |  <small>JPMIA0012GB</small> 1.1 V |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

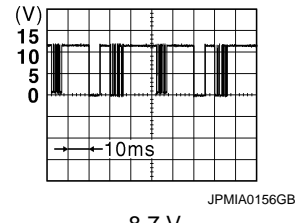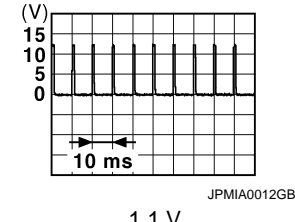[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--|------------------|--|--|
| + | - | Signal name | Input/ Output | | |
| 112 (R) | Ground | Rain sensor serial link | Input/ Output | Ignition switch ON |  <p style="text-align: center;">8.7 V</p> |
| 113 (BG) | Ground | Optical sensor | Input | Ignition switch ON | When bright outside of the vehicle Close to 5 V |
| | | | | Ignition switch OFF | When dark outside of the vehicle Close to 0 V |
| 114 (R) | Ground | Clutch interlock switch | Input | Clutch interlock switch OFF | OFF (Clutch pedal is not depressed) 0 V |
| | | | | Clutch interlock switch ON | ON (Clutch pedal is depressed) Battery voltage |
| 116 (SB) | Ground | Stop lamp switch 1 | Input | — | Battery voltage |
| 118 (BR) | Ground | Stop lamp switch 2 (Without ICC) | Input | Stop lamp switch OFF | OFF (Brake pedal is not depressed) 0 V |
| | | | | Stop lamp switch ON | ON (Brake pedal is depressed) Battery voltage |
| | | Stop lamp switch 2 (With ICC) | | Stop lamp switch OFF | Stop lamp switch OFF (Brake pedal is not depressed) and ICC brake hold relay OFF 0 V |
| | | | | Stop lamp switch ON | Stop lamp switch ON (Brake pedal is depressed) or ICC brake hold relay ON Battery voltage |
| 119 (SB) | Ground | Driver side door lock assembly (Unlock sensor) | Input | Driver door LOCK status (Unlock sensor switch OFF) |  <p style="text-align: center;">1.1 V</p> |
| | | | | Driver door UNLOCK status (Unlock switch sensor ON) | 0 V |
| 121 (SB) | Ground | Key slot switch | Input | When the Intelligent Key is inserted into key slot | 12 V |
| | | | | When the Intelligent Key is not inserted into key slot | 0 V |
| 123 (V) | Ground | IGN feedback | Input | Ignition switch OFF or ACC | 0 V |
| | | | | Ignition switch ON | Battery voltage |

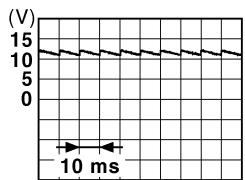
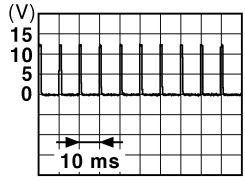
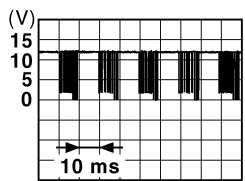
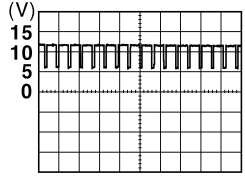
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

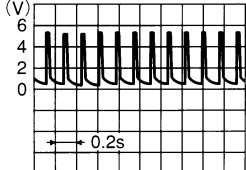

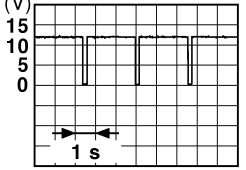
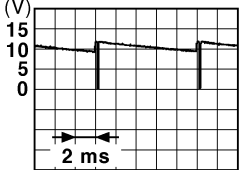

[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|---|------------------|--|----------------------------|---|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 124 (R) | Ground | Passenger door switch | Input | Passenger door switch | OFF (Door close) |  <small>JPMIA0011GB</small> 11.8 V |
| | | | | | ON (Door open) | 0 V |
| 129 (BG) | Ground | Trunk lid opener cancel switch | Input | Trunk lid open- er cancel switch | CANCEL |  <small>JPMIA0012GB</small> 1.1 V |
| | | | | | ON | 0 V |
| 132 (V) | Ground | Power window switch communication | Input/ Output | Ignition switch ON | Ignition switch ON |  <small>JPMIA0013GB</small> 10.2 V |
| | | | | | Ignition switch OFF or ACC | 12 V |
| 133 (L) | Ground | Push-button ignition switch illumination | Output | Push-button ig- nition switch il- lumination | ON (Tail lamps OFF) | 9.5 V |
| | | | | | ON (Tail lamps ON) | <p style="text-align: center;">NOTE: The pulse width of this wave is varied by the illumination bright- ening/dimming level.</p>  <small>JPMIA0159GB</small> |
| | | | | | OFF | 0 V |
| 134 (LG) | Ground | LOCK indicator lamp | Output | LOCK indicator lamp | OFF | Battery voltage |
| | | | | | ON | 0 V |
| 137 (BG) | Ground | Receiver and sensor ground | Input | Ignition switch ON | Ignition switch ON | 0 V |
| 138 (V) | Ground | Receiver and sensor power supply | Output | Ignition switch | OFF | 0 V |
| | | | | | ACC or ON | 5.0 V |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--------------------------------------|------------------|--|---|---|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 139 (L) | Ground | Tire pressure receiver communication | Input/ Output | Ignition switch ON | Standby state |  <small>OCC3881D</small> |
| | | | | | When receiving the signal from the transmitter |  <small>OCC3880D</small> |
| 140*1 (B) | Ground | Selector lever P/N position | Input | Selector lever | P or N position | 12 V |
| | | | | | Except P and N positions | 0 V |
| 141 (W) | Ground | Security indicator lamp | Output | Security indicator lamp | ON | 0 V |
| | | | | | Blinking |  <small>JPMIA0014GB</small> 11.3 V |
| | | | | | OFF | 12 V |
| 142 (BR) | Ground | Combination switch OUTPUT 5 | Output | Combination switch (Wiper volume dial 4) | All switches OFF | 0 V |
| | | | | | Lighting switch 1ST |  <small>JPMIA0031GB</small> 10.7 V |
| | | | | | Lighting switch HI | |
| | | | | | Lighting switch 2ND | |
| | | | | | Turn signal switch RH | |
| 143 (P) | Ground | Combination switch OUTPUT 1 | Output | Combination switch | All switches OFF (Wiper volume dial 4) | 0 V |
| | | | | | Front wiper switch HI (Wiper volume dial 4) |  <small>JPMIA0032GB</small> 10.7 V |
| | | | | | Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper volume dial 1 • Wiper volume dial 2 • Wiper volume dial 3 • Wiper volume dial 6 • Wiper volume dial 7 | |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | | |
|------------------------------|--------|---------------------------------------|------------------|---|---|-----------------|--------|
| | | Signal name | Input/ Output | | | | |
| + | - | | | | | | |
| 144 (G) | Ground | Combination switch OUTPUT 2 | Output | Combination switch | All switches OFF (Wiper volume dial 4) | 0 V | |
| | | | | | Front washer switch ON (Wiper volume dial 4) | | |
| | | | | | Any of the conditions below with all switches OFF | | 10.7 V |
| | | | | | | | |
| 145 (L) | Ground | Combination switch OUTPUT 3 | Output | Combination switch (Wiper volume dial 4) | All switches OFF | 0 V | |
| | | | | | Front wiper switch INT/ AUTO | | |
| | | | | | Front wiper switch LO | | 10.7 V |
| | | | | | Lighting switch AUTO | | |
| 146 (SB) | Ground | Combination switch OUTPUT 4 | Output | Combination switch (Wiper volume dial 4) | All switches OFF | 0 V | |
| | | | | | Front fog lamp switch ON | | |
| | | | | | Lighting switch 2ND | | 10.7 V |
| | | | | | Lighting switch PASS | | |
| | | | | | Turn signal switch LH | | |
| 150 (GR) | Ground | Driver door switch | Input | Driver door switch | OFF (Door close) | | |
| | | | | | ON (Door open) | 0 V | |
| 151 (G) | Ground | Rear window defogger relay control | Output | Rear window defogger | Active | 0 V | |
| | | | | | Not activated | Battery voltage | |

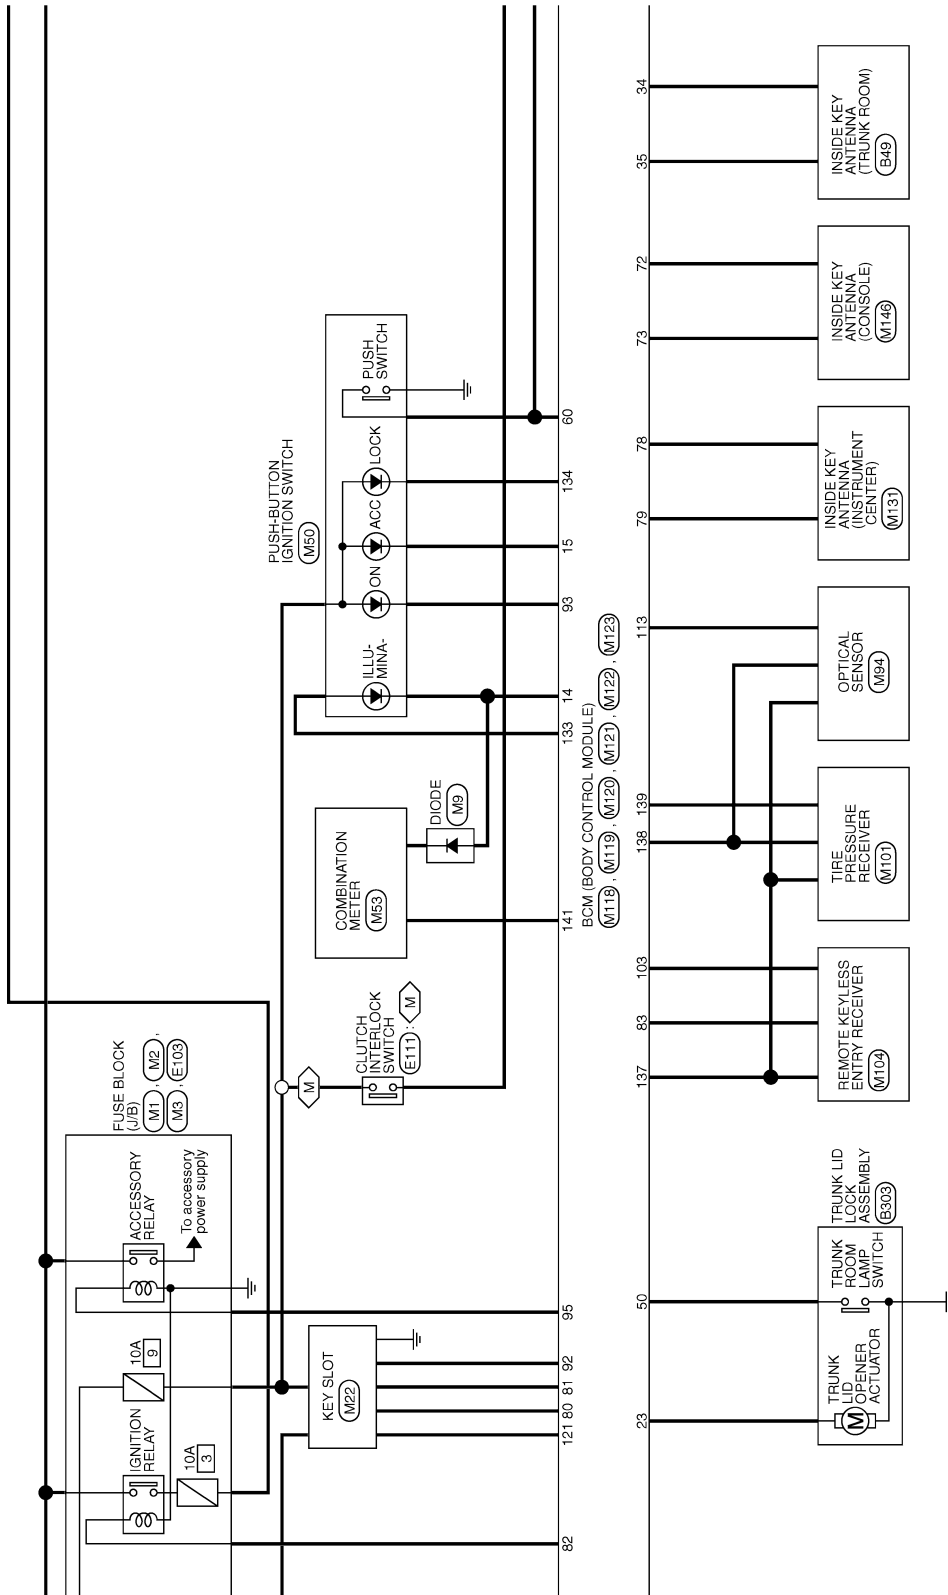
- *1: A/T models
- *2: M/T models

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

M : With M/T




JRMWC4424GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

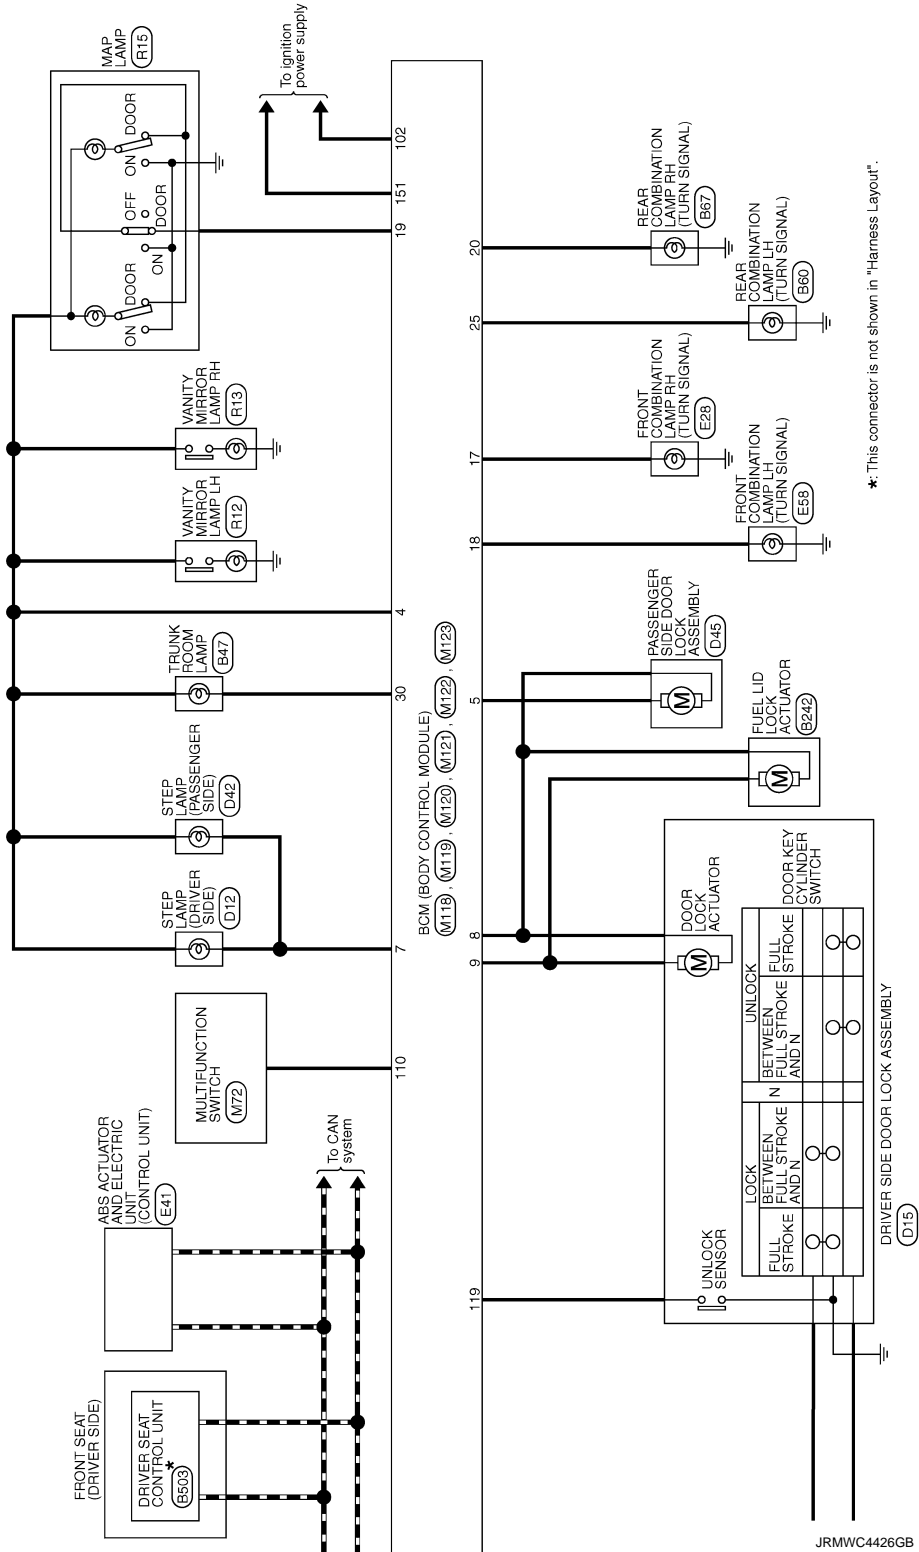[POWER DISTRIBUTION SYSTEM]



Fail-safe

INFOID:000000007773646

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Display contents of CONSULT | Fail-safe | Cancellation | |
|-----------------------------|---|--|--------|
| B2190: NATS ANTENNA AMP | Inhibit engine cranking | Erase DTC | A |
| B2191: DIFFERENCE OF KEY | Inhibit engine cranking | Erase DTC | B |
| B2192: ID DISCORD BCM-ECM | Inhibit engine cranking | Erase DTC | B |
| B2193: CHAIN OF BCM-ECM | Inhibit engine cranking | Erase DTC | |
| B2195: ANTI-SCANNING | Inhibit engine cranking | Ignition switch ON → OFF | C |
| B2560: STARTER CONT RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status becomes consistent • Starter control relay signal • Starter relay status signal | D |
| B2608: STARTER RELAY | Inhibit engine cranking | 500 ms after the following signal communication status becomes consistent • Starter motor relay control signal • Starter relay status signal (CAN) | E |
| B260A: IGNITION RELAY | Inhibit engine cranking | 500 ms after the following conditions are fulfilled • IGN relay (IPDM E/R) control signal: OFF (12 V) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal) | F |
| B260F: ENG STATE SIG LOST | Maintains the power supply position attained at the time of DTC detection | When any of the following conditions are fulfilled • Power position changes to ACC • Receives engine status signal (CAN) | G |
| B2617: BCM | Inhibit engine cranking | 1 second after the starter motor relay control inside BCM becomes normal | H |
| B2618: BCM | Inhibit engine cranking | 1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal | |
| B261E: VEHICLE TYPE | Inhibit engine cranking | BCM initialization | I |
| B26E8: CLUTCH SW | Inhibit engine cranking | When any of the following BCM recognition conditions are fulfilled • Status 1 - Clutch switch signal (CAN from ECM): ON - Clutch interlock switch signal: OFF (0 V) • Status 2 - Clutch switch signal (CAN from ECM): OFF - Clutch interlock switch signal: ON (Battery voltage) | J K |

DTC Inspection Priority Chart

INFOID:000000007773647

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

| Priority | DTC | PCS |
|----------|---|--------|
| 1 | B2562: LOW VOLTAGE | |
| 2 | <ul style="list-style-type: none"> • U1000: CAN COMM • U1010: CONTROL UNIT(CAN) | N |
| 3 | <ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI-SCANNING | O P |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Priority | DTC |
|----------|---|
| 4 | <ul style="list-style-type: none"> • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP/CLUTCH SW • B2605: PNP/CLUTCH SW • B2608: STARTER RELAY • B260A: IGNITION RELAY • B260F: ENG STATE SIG LOST • B2614: BCM • B2615: BCM • B2616: BCM • B2617: BCM • B2618: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26E8: CLUTCH SW • B26EA: KEY REGISTRATION • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED |
| 5 | <ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1734: CONTROL UNIT |
| 6 | <ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA |

DTC Index

INFOID:00000000773648

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-16, "COMMON ITEM : CONSULT Function \(BCM - COMMON ITEM\)"](#).

| CONSULT display | Fail-safe | Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition | Intelligent Key warning lamp ON | Tire pressure monitor warning lamp ON | Refer- ence page |
|--|-----------|--|------------------------------------|---|------------------------|
| No DTC is detected. further testing may be required. | — | — | — | — | — |
| U1000: CAN COMM | — | — | — | — | BCS-35 |
| U1010: CONTROL UNIT(CAN) | — | — | — | — | BCS-36 |
| U0415: VEHICLE SPEED | — | — | — | — | BCS-37 |
| B2190: NATS ANTENNA AMP | × | — | — | — | SEC-51 |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| CONSULT display | Fail-safe | Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition | Intelligent Key warning lamp ON | Tire pressure monitor warning lamp ON | Refer- ence page |
|---------------------------|-----------|--|------------------------------------|---|------------------------|
| B2191: DIFFERENCE OF KEY | × | — | — | — | SEC-54 |
| B2192: ID DISCORD BCM-ECM | × | — | — | — | SEC-55 |
| B2193: CHAIN OF BCM-ECM | × | — | — | — | SEC-57 |
| B2195: ANTI-SCANNING | × | — | — | — | SEC-58 |
| B2553: IGNITION RELAY | — | × | — | — | PCS-48 |
| B2555: STOP LAMP | — | × | — | — | SEC-59 |
| B2556: PUSH-BTN IGN SW | — | × | × | — | SEC-61 |
| B2557: VEHICLE SPEED | × | × | × | — | SEC-63 |
| B2560: STARTER CONT RELAY | × | × | × | — | SEC-64 |
| B2562: LOW VOLTAGE | — | × | — | — | BCS-38 |
| B2601: SHIFT POSITION | × | × | × | — | SEC-65 |
| B2602: SHIFT POSITION | × | × | × | — | SEC-68 |
| B2603: SHIFT POSI STATUS | × | × | × | — | SEC-70 |
| B2604: PNP/CLUTCH SW | × | × | × | — | SEC-73 |
| B2605: PNP/CLUTCH SW | × | × | × | — | SEC-75 |
| B2608: STARTER RELAY | × | × | × | — | SEC-77 |
| B260A: IGNITION RELAY | × | × | × | — | PCS-50 |
| B260F: ENG STATE SIG LOST | × | × | × | — | SEC-79 |
| B2614: BCM | — | × | × | — | PCS-52 |
| B2615: BCM | — | × | × | — | PCS-54 |
| B2616: BCM | — | × | × | — | PCS-56 |
| B2617: BCM | × | × | × | — | SEC-83 |
| B2618: BCM | × | × | × | — | PCS-58 |
| B261A: PUSH-BTN IGN SW | — | × | × | — | PCS-59 |
| B261E: VEHICLE TYPE | × | × | × (Turn ON for 15 seconds) | — | SEC-85 |
| B2621: INSIDE ANTENNA | — | × | — | — | DLK-55 |
| B2622: INSIDE ANTENNA | — | × | — | — | DLK-57 |
| B2623: INSIDE ANTENNA | — | × | — | — | DLK-59 |
| B26E8: CLUTCH SW | × | × | × | — | SEC-80 |
| B26EA: KEY REGISTRATION | — | × | × (Turn ON for 15 seconds) | — | SEC-82 |
| C1704: LOW PRESSURE FL | — | — | — | × | WT-19 |
| C1705: LOW PRESSURE FR | — | — | — | × | |
| C1706: LOW PRESSURE RR | — | — | — | × | |
| C1707: LOW PRESSURE RL | — | — | — | × | |
| C1708: [NO DATA] FL | — | — | — | × | WT-21 |
| C1709: [NO DATA] FR | — | — | — | × | |
| C1710: [NO DATA] RR | — | — | — | × | |
| C1711: [NO DATA] RL | — | — | — | × | |

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| CONSULT display | Fail-safe | Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition | Intelligent Key warning lamp ON | Tire pressure monitor warning lamp ON | Refer- ence page |
|---------------------------|-----------|--|------------------------------------|---|-----------------------|
| C1716: [PRESSDATA ERR] FL | — | — | — | × | WT-24 |
| C1717: [PRESSDATA ERR] FR | — | — | — | × | |
| C1718: [PRESSDATA ERR] RR | — | — | — | × | |
| C1719: [PRESSDATA ERR] RL | — | — | — | × | |
| C1729: VHCL SPEED SIG ERR | — | — | — | × | WT-25 |
| C1734: CONTROL UNIT | — | — | — | × | WT-26 |

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000007469558

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Battery Service

INFOID:000000007773649

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P



PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

SYMPTOM DIAGNOSIS

PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

Description

INFOID:000000007469560

Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

NOTE:

The engine start function, door lock function, power distribution system, and NATS-IVIS/NVIS in the Intelligent Key system are closely related to each other regarding control. The vehicle security function can operate only when the door lock and power distribution system are operating normally.

Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT.
- Intelligent Key is not inserted in key slot.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Diagnosis Procedure

INFOID:000000007469561

1. CHECK INTELLIGENT KEY SYSTEM (DOOR LOCK FUNCTION)

Lock/unlock door with door request switch.

Refer to [DLK-11. "System Description"](#).

Is the operation normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (door lock function). Refer to [DLK-84. "Diagnosis Procedure"](#).

2. PERFORM WORK SUPPORT

Perform “INSIDE ANT DIAGNOSIS” on Work Support of “INTELLIGENT KEY”.

Refer to [DLK-49. "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)"](#).

>> GO TO 3.

3. PERFORM SELF DIAGNOSTIC RESULT

Perform Self Diagnostic Result of “BCM”.

Is DTC detected?

YES >> Refer to [DLK-55. "DTC Logic"](#) (instrument center), [DLK-57. "DTC Logic"](#) (console) or [DLK-59. "DTC Logic"](#) (trunk room).

NO >> GO TO 4.

4. CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Refer to [PCS-102. "Removal and Installation"](#).

Is the operation normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

5. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

YES >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

NO >> GO TO 1.

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE

Description

INFOID:000000007469562

- Before performing the diagnosis in the following table, check “Work Flow”. Refer to [PCS-33, "Work Flow"](#).
- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Diagnosis Procedure

INFOID:000000007469563

1. CHECK PUSH-BUTTON IGNITION SWITCH INDICATOR

Check push-button ignition switch indicator.

Refer to [PCS-64, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P

PUSH BUTTON IGNITION SWITCH

< REMOVAL AND INSTALLATION >

[POWER DISTRIBUTION SYSTEM]

REMOVAL AND INSTALLATION

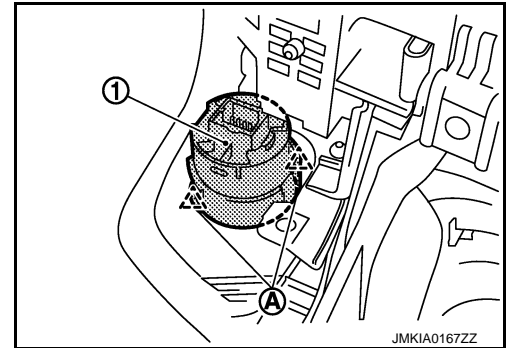
PUSH BUTTON IGNITION SWITCH

Removal and Installation

INFOID:000000007469564

REMOVAL

1. Remove the cluster lid A assembly. Refer to [JP-12. "A/T MODELS : Exploded View"](#) (A/T models), [JP-23. "M/T MODELS : Exploded View"](#) (M/T models).
2. Remove the push-button ignition switch (1) from cluster lid A assembly, and then remove pawl (A). Press push-button ignition switch (1) back to disengage from cluster lid A assembly.



INSTALLATION

Install in the reverse order of removal.