

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EF &  
EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

BF

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS circuit diagram.....	BR-7
ABS control unit.....	BR-5
ABS wheel sensors.....	BR-5
ABS wiring diagram.....	BR-4
A/C circuit diagram (auto A/C).....	HA-13
A/C circuit diagram (manual A/C).....	HA-2
A/C trouble diagnoses (auto A/C).....	HA-13
A/C trouble diagnoses (manual A/C).....	HA-2
A/C wiring diagram (auto A/C).....	HA-14
A/C wiring diagram (manual A/C).....	HA-4
Air conditioner cut control.....	EF & EC-56
Alternator.....	EL-8
Anti-freeze coolant.....	MA-2
ASCD (automatic speed control device).....	EL-36
A/T control unit.....	AT-7
A/T indicator lamp.....	EL-24
A/T removal and installation.....	AT-18
A/T self-diagnoses.....	AT-5
Audio.....	EL-33
Automatic transmission fluid.....	MA-2

## B

Back window.....	BF-14
Back-up lamp.....	EL-15
Back-up lamp switch (M/T).....	MT-3, MT-14
Baulk ring (M/T).....	MT-4
Brake fluid.....	MA-2

## C

Canister.....	EF & EC-109
Canister control.....	EF & EC-56
Canister control solenoid valve.....	EF & EC-106
Canister purge control.....	EF & EC-57
Canister purge control valve.....	EF & EC-106
Canister purge cut valve.....	EF & EC-110
Charging system.....	EL-7
Cigarette lighter.....	EL-31
Clearance lamp.....	EL-13
Clock.....	EL-31
Closed throttle position.....	EF & EC-107
Clutch cover.....	CL-11
Clutch damper.....	CL-8
Clutch disc.....	CL-10
Clutch fluid.....	MA-2
Clutch master cylinder.....	CL-7
Clutch operating cylinder.....	CL-8
Clutch pedal.....	CL-4
Clutch pedal free play.....	CL-5

Clutch pedal height.....	CL-5
Clutch release bearing.....	CL-9
Clutch withdrawal lever.....	CL-9
Combination meter.....	EL-22
Control lever transfer.....	TF-8
Converter housing installation.....	AT-18
Coolant.....	MA-2
Cooling circuit (engine).....	LC-6, LC-13
Cooling fan.....	LC-9, LC-16
Counter gear (M/T).....	MT-4
Counter gear Transfer.....	TF-10
Coupling sleeve (M/T).....	MT-4
Crankshaft assembly.....	EM-17
Crankshaft bearing clearance.....	EM-15
Cylinder block.....	EM-2, EM-13
Cylinder block boring.....	EM-3, EM-15
Cylinder head.....	EM-7
Cylinder head bolt tightening.....	EM-8

## D

Differential gear oil.....	MA-2
Drive plate runout.....	EM-16

## E

ECCS circuit diagram.....	EF & EC-8, EF & EC-53
ECCS component parts location.....	EF & EC-2, EF & EC-47
ECCS on-board diagnostic system.....	EF & EC-58
ECCS system diagram and chart.....	EF & EC-4, EF & EC-50
ECCS trouble diagnoses.....	EF & EC-14
EGR canister control solenoid valve inspection.....	EF & EC-106
EGR control (EGRC) - solenoid valve.....	EF & EC-54
Engine oil.....	MA-2
Engine oil replacement.....	MA-3
Engine outer component parts.....	EM-6
Engine removal.....	EM-11
Evaporative emission system.....	EF & EC-109, EF & EC-111
Exhaust system.....	FE-4
Exterior lamp.....	EL-13

## F

Fluids.....	MA-2
Flywheel runout.....	EM-16
Front drive shaft Transfer.....	TF-10
Fuel check valve inspection.....	EF & EC-112

# ALPHABETICAL INDEX

Fuel injector..... EF & EC-54  
 Fuel system..... FE-2  
 Fuel tank vacuum relief valve inspection.EF & EC-112  
 Fuel temperature sensor inspection..... EF & EC-106

## G

Gears (M/T).....MT-4  
 Grease..... MA-2

## H

Hazard warning lamp ..... EL-16  
 Headlamp .....EL-11  
 Heated oxygen sensor heater inspection . EF & EC-45  
 Heated seat..... BF-13  
 Heater wiring diagram.....HA-3  
 High clutch.....AT-43  
 Horn..... EL-31  
 Hydraulic lash adjuster inspection ..... EM-10

## I

Idle mixture ratio inspection ..... EF & EC-9  
 Idle speed inspection ..... EF & EC-9  
 Ignition timing inspection..... EF & EC-9  
 Illumination ..... EL-18  
 Injector removal and installation ..... EF & EC-108  
 Interior and exterior..... BF-12  
 Interior lamp ..... EL-20

## J

Jacking points..... GI-7

## L

Low and reverse brake .....AT-45  
 Lubricants..... MA-2  
 Lubrication circuit (engine)..... LC-10

## M

Main drive gear (M/T).....MT-4  
 Main gear transfer..... TF-10  
 Mainshaft (M/T) .....MT-4  
 Mainshaft transfer..... TF-10  
 Manual steering gear oil..... MA-2  
 Manual transmission oil..... MA-2

Master cylinder (clutch)..... CL-7  
 Meter and gauges ..... EL-22  
 Model variation ..... GI-2  
 M/T overhaul ..... MT-3, MT-14  
 M/T removal and installation..... MT-2  
 Multi purpose grease..... MA-2

## N

Neutral position switch (M/T) .....MT-14

## O

Oil pressure (engine)..... LC-3, LC-11  
 Oil pressure relief valve (engine) ..... LC-5, LC-12  
 Oil pump (engine)..... LC-4, LC-11  
 Oil pump regulator valve (engine)..... LC-5, LC-12  
 Operating cylinder (clutch) ..... CL-8  
 Oversize piston.....EM-2, EM-15

## P

Parking brake control .....BR-3  
 Piston assembly ..... EM-17  
 Piston to bore clearance .....EM-2, EM-14  
 Power door lock ..... BF-4  
 Power steering fluid..... MA-2  
 Power steering gear..... ST-4  
 Power supply routing..... EL-2  
 Power window ..... BF-10  
 Pressure plate - See Clutch cover..... CL-11  
 Propeller shaft ..... PD-2

## R

Radiator ..... LC-8, LC-16  
 Rear axle (disc brake type)..... RA-3  
 Rear disc brake .....BR-2  
 Refilling engine coolant..... LC-3  
 Release bearing (clutch) ..... CL-9  
 Resistor inspection..... EF & EC-108  
 Reverse gear (M/T).....MT-4  
 Reverse idler shaft (M/T) .....MT-4  
 Road wheel size..... GI-6

## S

Self-diagnostic results .....EF & EC-14, EF & EC-59  
 Shift control (TF) ..... TF-11, TF-23  
 Shift lock system .....AT-12

GI  
 MA  
 EM  
 LC  
 EF & EC  
 FE  
 CL  
 MT  
 AT  
 TF  
 PD  
 FA  
 RA  
 BR  
 ST  
 BF  
 HA  
 EL  
 IDX

# ALPHABETICAL INDEX

Shock absorber (adjustable, front)..... FA-7  
SMJ (super multiple junction)..... Foldout page  
Starter..... EL-5  
Starting system..... EL-3  
Steering wheel and column..... ST-2  
Stop lamp ..... EL-13  
Synchronizer (M/T)..... MT-4

## T

Tail lamp ..... EL-13  
Thermostat ..... LC-8, LC-15  
Throttle position sensor inspection ..... EF & EC-107  
Throttle position sensor (TPS) ..... EF & EC-54  
Throwout bearing - See Clutch release  
bearing ..... CL-9  
Tire size..... GI-6  
Torque converter installation ..... AT-18  
Tow truck towing..... GI-8  
Transfer case ..... TF-9  
Transfer gear oil ..... MA-2  
Transfer overhaul ..... TF-9  
Transfer removal and installation..... TF-7

Transmission case (M/T)..... MT-3, MT-14  
Turn signal lamp..... EL-16

## V

Vacuum Control Valve..... EF & EC-110  
Vacuum hose drawing..... EF & EC-5  
Vehicle identification number ..... GI-5

## W

Warning chime ..... EL-24, EL-28  
Warning lamps ..... EL-24, EL-26  
Washer, front..... EL-29  
Washer, rear..... EL-30  
Water pump..... LC-7, LC-14  
Wheel sensors (ABS)..... BR-5  
Wide open & closed throttle position (CTP)  
switch ..... EF & EC-54  
Wiper and washer ..... EL-29  
Wiper, rear..... EL-29, EL-30  
Withdrawal lever (clutch)..... CL-9