

GI

SECTION **IDX**

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-221
ABS - Wiring diagram	BR-39
ABS (anti-lock brake system).....	BR-30
Absolute pressure sensor	EC-100
A/C - Wiring diagram.....	HA-31
A/C air flow.....	HA-13
A/C component layout.....	HA-12
A/C compressor clutch removal and installation.....	HA-53
A/C compressor mounting.....	HA-52
A/C compressor precaution.....	HA-6
A/C compressor special service tool.....	HA-6
A/C control linkage adjustment (manual A/C).....	HA-42
A/C control operation (manual A/C).....	HA-14
A/C diagnostic work flow (manual A/C)	HA-15
A/C harness layout (manual A/C)	HA-28
A/C HFC134a (R134a) system identification.....	HA-3
A/C HFC134a (R134a) system introduction	HA-3
A/C HFC134a (R134a) system precaution	HA-4
A/C HFC134a (R134a) system service procedure.....	HA-48
A/C HFC134a (R134a) system service tools.....	HA-7
A/C HFC134a system service equipment precaution	HA-9
A/C lubricant (R134a).....	HA-50
A/C operational check.....	HA-16
A/C performance chart.....	HA-24
A/C performance test diagnoses.....	HA-22
A/C relay.....	HA-42
A/C service data specification.....	HA-57
A/C switch	HA-41
A/C symptom chart (manual A/C).....	HA-18
A/C trouble diagnoses (manual A/C)	HA-15
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Air bag.....	RS-10
Air bag disposal.....	RS-13
Air bag precautions	GI-2
Air bleeding for brake system	BR-5
Air bleeding (hydraulic clutch).....	CL-6
Air cleaner filter replacement	MA-12
Air conditioner - wiring diagram	HA-31
Air conditioner cut control	EC-18
Air conditioning - See A/C.....	HA-11
Air control cable adjustment.....	HA-43
Air flow meter - See Mass air flow sensor.....	EC-93
Air mix door control linkage adjustment.....	HA-43
Alternator.....	EL-28
Angular tightening application.....	EM-2
Antenna	EL-109
Anti-lock brake system - See ABS.....	BR-30
Anti-lock brake system - Wiring diagram	BR-39
AP/SEN - Wiring diagram	EC-100
ASCD - Wiring diagram.....	EL-118

ASCD (automatic speed control device).....	EL-114
A/T - Wiring diagram.....	AT-6
A/T mode switch.....	AT-22
A/T removal and installation.....	AT-40
A/T shift lock system	AT-30
A/T shift lock system - Wiring diagram.....	AT-31
A/T trouble diagnoses	AT-12
Audio	EL-102
AUDIO - Wiring diagram	EL-104
Audio and A/C control removal and installation - See Instrument panel	BT-10
Auto lock free running hub.....	FA-18
Automatic speed control system - See ASCD.....	EL-114
Automatic transmission fluid replacement	MA-17
Automatic transmission number.....	GI-37
Auxiliary air control (AAC).....	EC-221
Axle housing (rear).....	RA-5

B

Back window	BT-28
BACK/L - Wiring diagram.....	EL-49
Back-up lamp	EL-49
Back-up lamp switch (M/T)	MT-4
Ball joint front axle.....	FA-44
Battery	EL-15
Baulk ring (M/T).....	MT-8
Blower motor.....	HA-41
Blower relay.....	HA-42
Blower resistor.....	HA-41
Body alignment.....	BT-34
Body mounting	BT-33
Boring/honing cylinder block	EM-35
BPT valve.....	EC-184
Brake booster.....	BR-16
Brake control valve (Proportioning valve).....	BR-8
Brake fluid change	BR-4
Brake fluid level.....	MA-20
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-20
Brake lines and cables inspection	MA-20
Brake master cylinder	BR-13
Brake pedal	BR-11
Bumper, front.....	BT-6
Bumper, rear.....	BT-7
BYPS/V - Wiring diagram.....	EC-276

C

Cab body.....	BT-32
Camshaft inspection.....	EM-19
Camshaft position sensor (CMPS).....	EC-171
Canister - See EVAP canister.....	EC-20

ALPHABETICAL INDEX

CANI/V - Wiring diagram.....	EC-199
Cargo space.....	GI-38
Center bearing assembly (propeller shaft).....	PD-11
Center bearing disassembly (propeller shaft).....	PD-10
CHARGE - Wiring diagram.....	EL-26
Charging system.....	EL-25
Chassis and body maintenance.....	MA-16
CHIME - Wiring diagram.....	EL-84
Cigarette lighter.....	EL-101
Circuit breaker.....	EL-11
CKPS - Wiring diagram.....	EC-166, EC-262
Clearance lamp.....	EL-50
Clock.....	EL-101
Closed loop control.....	EC-134
Closed throttle position switch.....	EC-226
Clutch cover.....	CL-13
Clutch damper.....	CL-9
Clutch disc.....	CL-12
Clutch fluid level.....	MA-16
Clutch master cylinder.....	CL-7
Clutch operating cylinder.....	CL-8
Clutch pedal.....	CL-4
Clutch release bearing.....	CL-10
Clutch withdrawal lever.....	CL-10
CMPS - Wiring diagram.....	EC-171
Collision diagnosis.....	RS-37
Combination lamp, front, removal and installation.....	BT-6
Combination lamp, rear, removal and installation.....	BT-7
Combination meter.....	EL-66
Combination meter (needle type).....	EL-66
Combination meter removal and installation - See Instrument panel.....	BT-10
Combination switch.....	EL-32
Compression pressure.....	EM-7
Compressor clutch removal and installation.....	HA-53
Compressor mounting.....	HA-52
Compressor precaution.....	HA-6
Compressor special service tool.....	HA-6
Connecting rod.....	EM-34
Connecting rod bearing clearance.....	EM-38
Connecting rod bushing clearance.....	EM-39
Console box - See Instrument panel.....	BT-10
CONSULT for ECCS.....	EC-53
CONSULT general information.....	GI-33
Control lever (M/T).....	MT-10
Control lever transfer.....	TF-7
Control valve (A/T).....	AT-61
Converter housing installation.....	AT-41
Coolant mixture ratio.....	MA-9
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-7
Cooling fan.....	LC-12
Counter gear (M/T).....	MT-8
Counter gear transfer.....	TF-9

Coupling sleeve (M/T).....	MT-8	GI
Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-171	MA
Crankcase ventilation system - See positive crankcase ventilation.....	EC-24	EM
Crankshaft.....	EM-36	EM
Crankshaft position sensor (OBD).....	EC-166	
Crankshaft position sensor (OBD) cog chipping... ..	EC-262	
Crash zone sensor.....	RS-9	LC
Cruise control - See ASCD.....	EL-114	
Cylinder block.....	EM-32	EC
Cylinder block boring.....	EM-35	EC
Cylinder head.....	EM-16	
Cylinder head bolt tightening.....	EM-26	FE

D

Data link connector for Consult.....	EC-53	
Daytime light system.....	EL-38	WT
Daytime running light - See Daytime light system.....	EL-38	AT
Defroster door control rod adjustment.....	HA-43	AT
Diagnosis sensor unit.....	RS-9	
Diagnostic trouble code (DTC) chart.....	EC-75	TF
Diagnostic trouble code (DTC) for ECCS OBD system.....	EC-2	
Differential carrier assembly.....	PD-30, PD-52, PD-75, PD-96	PD
Differential carrier disassembly.....	PD-36, PD-58, PD-81	
Differential gear oil replacement.....	MA-19	FA
Dimensions.....	GI-38	
Distributor ignition (DI) system.....	EC-17	
D/LOCK - Wiring diagram.....	EL-144	RA
Dome light - See Interior lamp.....	EL-63	
Door, front.....	BT-9	BR
Door glass.....	BT-9	BR
Door lock.....	BT-9	
Door mirror.....	BT-30	
Door trim.....	BT-13	ST
Drive belt inspection.....	MA-10	
Drive pinion diff. inspection.....	PD-40, PD-62, PD-85	RS
Drive pinion height.....	PD-47, PD-70, PD-92	
Drive plate runout.....	EM-39	
Drive shaft (front).....	FA-28	BT
DTRL - Wiring diagram.....	EL-42	
Dual pressure switch.....	HA-41	HA

E

ECCS basic inspection.....	EC-72	
ECCS circuit diagram.....	EC-9	
ECCS component parts location.....	EC-11	IDX
ECCS fail-safe system.....	EC-76	
ECCS on board diagnostic system.....	EC-34	

ALPHABETICAL INDEX

ECCS relay.....	EC-89	Fluids.....	MA-8
ECCS symptom matrix chart.....	EC-77	Flywheel (clutch).....	CL-13
ECCS system diagram and chart.....	EC-10	Flywheel runout.....	EM-39
ECM input/output signal.....	EC-83	Fork rod (M/T).....	MT-10
ECTS - Wiring diagram.....	EC-113, EC-124	Forward clutch.....	AT-79
EGR control (EGRC) - BPT valve.....	EC-184	F/PUMP - Wiring diagram.....	EC-309
EGR control (EGRC) - solenoid valve.....	EC-267	Freeze frame data.....	EC-36
EGR control valve.....	EC-182	FRO2 - Wiring diagram.....	EC-129
EGR temperature sensor.....	EC-271	FRO2/H - Wiring diagram.....	EC-135
EGRC1 - Wiring diagram.....	EC-176	Front axle.....	FA-15
EGRC/V - Wiring diagram.....	EC-267	Front bumper.....	BT-6
EGR/TS - Wiring diagram.....	EC-271	Front combination lamp removal and installation.....	BT-6
Electrical diagnoses.....	GI-18	Front disc brake.....	BR-19
Electrical unit.....	EL-150	Front door.....	BT-9
Electrical units location.....	EL-150	Front drive shaft transfer.....	TF-9
Engine compartment.....	BT-35	Front final drive disassembly (4WD).....	PD-18
Engine control module (ECM).....	EC-6	Front final drive pre-inspection (4WD).....	PD-18
Engine coolant temperature sensor (ECTS).....	EC-113, EC-124	Front final drive removal and installation (4WD)....	PD-15
Engine oil filter replacement.....	MA-13	Front heated oxygen sensor (HO2S) heater.....	EC-135
Engine oil precautions.....	GI-5	Front oxygen sensor (O2S).....	EC-129
Engine oil replacement.....	MA-13	Front seat.....	BT-23
Engine outer component parts.....	EM-6	Front seat belt.....	RS-3
Engine removal.....	EM-29	Front suspension.....	FA-34
Engine room - See Engine compartment.....	BT-35	Front washer.....	EL-93
Engine serial number.....	GI-37	Front wiper.....	EL-92
EVAP canister.....	EC-20	FUEL - Wiring diagram.....	EC-148, EC-153
EVAP canister purge control valve.....	EC-199	Fuel cut control (at no load & high engine speed).....	EC-19
EVAP canister purge volume control valve.....	EC-281	Fuel filter replacement.....	MA-12
EVAP canister vent control valve.....	EC-207	Fuel gauge.....	EL-70
EVAP control system pressure sensor.....	EC-212	Fuel injection system.....	EC-148, EC-153
EVAP control system purge flow monitoring diagnosis.....	EC-288	Fuel injector.....	EC-303
EVAP control system (small leak) diagnosis.....	EC-189	Fuel line inspection.....	MA-12
EVAP shut valve.....	EC-21	Fuel precautions.....	GI-6
EVAP vapor lines inspection.....	MA-15	Fuel pressure check.....	EC-25
Evaporative emission (EVAP) system.....	EC-20	Fuel pressure regulator.....	EC-25
Exhaust gas recirculation (EGR) valve.....	EC-176	Fuel pressure release.....	EC-25
Exhaust system.....	FE-7	Fuel pump.....	EC-309
Exhaust system inspection.....	MA-16	Fuel pump and gauge.....	FE-6
Extension tube diff.....	PD-21	Fuel pump relay.....	EC-312
Exterior.....	BT-17	Fuel system.....	FE-3
Exterior lamp.....	EL-49	Fuel tank vacuum relief valve.....	EC-21

F

Fan switch.....	HA-41
Fast idle cam (FIC) inspection and adjustment.....	EC-27
FICD - Wiring diagram.....	EC-317
Final drive disassembly.....	PD-36, PD-58, PD-81
Final drive pre-inspection.....	PD-36, PD-58, PD-81
Final drive removal and installation.....	PD-16
Finisher, rear panel.....	BT-13
Floor trim.....	BT-13
Flow charts.....	GI-30

G

Garage jack and safety stand.....	GI-40
Gauges.....	EL-65
Gears (M/T).....	MT-8
Generator.....	EL-28
Generic scan tool (GST).....	EC-66

ALPHABETICAL INDEX

Glass	BT-9
Governer valve assembly.....	AT-72
Grease.....	MA-8
Ground clearance.....	GI-38
Ground distribution.....	EL-12

Intake door control linkage adjustment.....	HA-43
Intake manifold.....	EM-6
Interior.....	BT-13
Interior lamp.....	EL-58
INT/L - Wiring diagram.....	EL-63

H

Harness connector.....	EL-3
Harness layout.....	EL-152
Hazard warning lamp.....	EL-52
Headlamp.....	EL-35
Headlamp aiming control.....	EL-47
Headlining - See Roof trim.....	BT-15
Heated oxygen sensor (HO2S).....	EC-129
Heated oxygen sensor (HO2S) (front).....	EC-129
Heated oxygen sensor (rear).....	EC-139
HEATER - Wiring diagram.....	HA-30
Heater system - Wiring diagram.....	HA-30
Height (Dimensions).....	GI-38
HFC134a (R134a) system identification.....	HA-3
HFC134a (R134a) system introduction.....	HA-3
HFC134a (R134a) system precaution.....	HA-4
HFC134a (R134a) system service procedure.....	HA-48
HFC134a (R134a) system service tools.....	HA-7
HFC134a system service equipment precaution.....	HA-9
High clutch.....	AT-77
H/LAMP - Wiring diagram.....	EL-36
Hood.....	BT-6
Horn.....	EL-101
HORN - Wiring diagram.....	EL-101
How to erase DTC for ECCS OBD system.....	EC-43
Hydraulic lash adjuster inspection.....	EM-28

I

IACV-AAC valve inspection.....	EC-225
IACV-FICD solenoid valve.....	EC-317
IATS - Wiring diagram.....	EC-107
Idle air control valve (IACV).....	EC-221
Idle mixture ratio.....	EC-28
Idle speed.....	EC-28
Ignition coil.....	EC-261
Ignition timing.....	EC-28
Ignition wire inspection.....	EC-165
IGN/SG - Wiring diagram.....	EC-256
ILL - Wiring diagram.....	EL-60
Illumination.....	EL-58
Inhibitor switch.....	AT-23, EC-232
INJECT - Wiring diagram.....	EC-303
Injector.....	EC-305
Injector removal and installation.....	EC-26
Instrument panel.....	BT-10
Intake air temperature sensor.....	EC-107

J

Jacking points.....	GI-39
Joint connector (J/C).....	Foldout page
Journal bearing assembly (propeller shaft).....	PD-12
Journal bearing disassembly (propeller shaft).....	PD-11
Jump seat.....	BT-24

K

Knuckle spindle.....	FA-25
----------------------	-------

L

Leaf spring (rear).....	RA-10
Length (Dimensions).....	GI-38
License lamp.....	EL-50
Lifting points.....	GI-39
Limited slip diff. adjustment.....	PD-65, PD-88
Limited slip diff. assembly.....	PD-43, PD-67, PD-89
Limited slip diff. disassembly.....	PD-42, PD-63, PD-86
Limited slip diff. inspection.....	PD-42, PD-64, PD-87
Line pressure test (A/T).....	AT-27
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-150
Lock, door.....	BT-9
Low and reverse brake.....	AT-83
LSV (Load sensing valve).....	BR-9
Lubricant (R134a) A/C.....	HA-50
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication-locks, hinges and hood latches.....	MA-22

M

MAFS - Wiring diagram.....	EC-93
Magnet clutch.....	HA-53
MAIN - Wiring diagram.....	EC-89
Main drive gear (M/T).....	MT-8
Main gear transfer.....	TF-9
Mainshaft (M/T).....	MT-8
Mainshaft transfer.....	TF-9
Maintenance.....	MA-3
Maintenance (engine).....	MA-10
Manual lock free running hub.....	FA-17
Manual steering gear.....	ST-14

ALPHABETICAL INDEX

Manual transmission number.....GI-37
Manual transmission oil replacement.....MA-16
Map lamp.....EL-63
MAP/BARO switch solenoid valve.....EC-237
Mass air flow sensor (MAFS).....EC-93
Master cylinder (brake).....BR-13
Master cylinder (clutch).....CL-7
Meter.....EL-65
METER - Wiring diagram.....EL-68
MIL & Data link connectors circuit.....EC-321
MIL/DL - Wiring diagram.....EC-321
MIRROR - Wiring diagram.....EL-112
Mirror, door.....BT-30
Mirror, out side.....BT-30
Misfire.....EC-162
Mode door control linkage adjustment.....HA-43
Model variation.....GI-34
Molding - See Exterior.....BT-17
M/T overhaul.....MT-7
M/T removal and installation.....MT-5
Mud guard - See Exterior.....BT-17
Multiport fuel injection (MFI) system.....EC-15
Multiport fuel injection precautions.....GI-6

N

Neutral position switch.....EC-232
Neutral position switch (M/T).....MT-4

O

Oil change (capacity).....MA-8
Oil change (interval).....MA-6
Oil pan (engine).....EM-8
Oil pressure (engine).....LC-5
Oil pressure relief valve (engine).....LC-6
Oil pump (A/T).....AT-57
Oil pump (engine).....LC-5
Oil pump regulator valve (engine).....LC-6
Oil seal replacement (engine).....EM-14
Oil seal replacement (front final drive 4WD).....PD-13
Oil seal replacement (front of final drive).....PD-13
Operating cylinder (clutch).....CL-8
Out side mirror.....BT-30
Overdrive control switch.....AT-22
Overrun clutch.....AT-79
Oversize piston.....EM-35
Oxygen sensor (O2S) (front).....EC-129

P

Pantograph jack.....GI-39
Parking brake control.....BR-28

Parking lamp.....EL-50
Park/Neutral position switch.....EC-232
PCV filter replacement.....MA-15
PCV (positive crankcase ventilation).....EC-24
PGC/V - Wiring diagram.....EC-281
Pilot bushing replacement.....EM-41
Pinion bearing preload diff.....PD-25
Pinion gear height diff.....PD-25, PD-47, PD-70, PD-92
Piston assembly.....EM-39
Piston pin inspection.....EM-33
Piston ring inspection.....EM-34
Piston to bore clearance.....EM-35
POWER - Wiring diagram.....EL-7
Power door lock.....EL-141
Power door mirror.....EL-112
Power steering fluid level.....ST-5, MA-21
Power steering gear.....ST-20
Power steering hydraulic pressure.....ST-8
Power steering oil pressure switch.....EC-313
Power steering oil pump.....ST-35
Power steering system bleeding.....ST-6
Power supply routing.....EL-6
Power transistor.....EC-261
Power transistor & ignition coil.....EC-256
Power window.....EL-135
Precautions (General).....GI-3
PRE/SE - Wiring diagram.....EC-212
Pressure plate - See Clutch cover.....CL-13
Pressure test (A/T).....AT-27
Propeller shaft.....PD-7
Propeller shaft inspection.....MA-18
Propeller shaft on vehicle service.....PD-9
Propeller shaft vibration.....PD-9
PST/SW - Wiring diagram.....EC-313

R

R134a - See HFC134a.....HA-3
Radiator.....LC-11
Radiator fan - See Cooling fan.....LC-12
Radio - See Audio.....EL-102
Rear axle.....RA-5
Rear axle (drum brake type).....RA-3
Rear body.....BT-32
Rear bumper.....BT-7
Rear combination lamp removal and installation.....BT-7
Rear cover packing replacement diff.....PD-14
Rear drum brake.....BR-24
Rear heated oxygen sensor (HO2S).....EC-139
Rear heated oxygen sensor (HO2S) heater.....EC-143
Rear panel finisher.....BT-13
Rear seat belt.....RS-3
Rear side window.....BT-29
Rear suspension.....RA-9
Rear wheel anti-lock brake system (R-ABS).....BR-30

ALPHABETICAL INDEX

Rear window.....	BT-28
Refrigerant connection precaution.....	HA-5
Refrigerant discharging evacuating charging.....	HA-48
Refrigerant general precaution.....	HA-4
Refrigerant lines.....	HA-47
Refrigeration cycle.....	HA-11
Release bearing (clutch).....	CL-10
Resistor.....	EC-261
Reverse clutch.....	AT-73
Reverse gear (M/T).....	MT-8
Reverse idler shaft (M/T).....	MT-8
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-4
Ring gear diff. inspection.....	PD-40, PD-62, PD-85
Road wheel size.....	GI-38
Roof trim.....	BT-15
Room lamp.....	EL-63
Room lamp - See Interior lamp.....	EL-63
Rotor disc (front).....	FA-24
RRO2 - Wiring diagram.....	EC-139
RRO2/H - Wiring diagram.....	EC-143

S

SAE J1930 terminology list.....	GI-45
Screw jack.....	GI-39
Seal - See Exterior.....	BT-17
Seat belt, front.....	RS-3
Seat belt inspection.....	MA-23
Seat belt, rear.....	RS-3
Seat, front.....	BT-23
Self-diagnostic results.....	EC-47
SHIFT - Wiring diagram.....	AT-31
Shift control (M/T).....	MT-10
Shift control (TF).....	TF-10
Shift fork (M/T).....	MT-10
Shift lock system.....	AT-30
Shift schedule.....	AT-14
Shock absorber (front).....	FA-36
Shock absorber (rear).....	RA-10
Side bearing preload diff.....	PD-46, PD-69
Side bearing preload (front final drive 4WD).....	PD-24
Side shaft diff.	PD-21
Side trim.....	BT-13
Side window - See Rear side window.....	BT-29
SMJ (super multiple junction).....	Foldout page
Spare tire size.....	GI-38
Spark plug replacement.....	MA-14
Speedometer.....	EL-72
Spiral cable.....	RS-10
Spot lamp.....	EL-63
SRS - See Supplemental Restraint System.....	RS-6
SRS - Wiring diagram.....	RS-20
SRS Trouble diagnoses.....	RS-17
S/SIG - Wiring diagram.....	EC-306

Stabilizer bar (front).....	FA-39	GI
Stall test (A/T).....	AT-25	
Standardized relay.....	EL-4	MA
START - Wiring diagram.....	EL-20	
Start signal.....	EC-306	
Starter.....	EL-22	EM
Starting system.....	EL-19	
Steering gear and linkage inspection.....	MA-21	LC
Steering gear oil level.....	MA-21	
Steering knuckle.....	FA-25	
Steering linkage.....	ST-38	EC
Steering switch.....	EL-34	
Steering wheel and column.....	ST-10	
Steering wheel play.....	ST-7	FE
Steering wheel turning force.....	ST-7	
Stop lamp.....	EL-50	CL
Striking rod (M/T).....	MT-10	
Sunroof.....	BT-25	
Supplement restraint system - Wiring diagram.....	RS-20	MT
Supplemental Restraint System.....	RS-6	
S/VCSW - Wiring diagram.....	EC-251	AT
Swirl control valve control solenoid valve.....	EC-243	
Swirl control valve control vacuum check switch.....	EC-251	TF
SWL/V - Wiring diagram.....	EC-243	
SW/V - Wiring diagram.....	EC-237	PD
Symbols and abbreviations.....	GI-8	FA
Synchronizer (M/T).....	MT-8	
System readiness test (SRT) code.....	EC-36	

T

Tachometer.....	EL-71	RA
Tail lamp.....	EL-50	
TAIL/L - Wiring diagram.....	EL-50	BR
Tank fuel temperature sensor.....	EC-158	
TCV - Wiring diagram.....	EC-295	ST
Temperature control cable and linkage adjustment.....	HA-43	RS
Tension rod (front).....	FA-42	BT
TFTS - Wiring diagram.....	EC-158	
Thermal protector.....	HA-42	HA
Thermo control amp.....	HA-42	
Thermostat.....	LC-9	EL
Three way catalyst.....	EC-186	
Three way catalyst precautions.....	GI-6	
Throttle bodies.....	EM-6	
Throttle chambers.....	EM-6	
Throttle drum adjustment.....	FE-2	
Throttle position sensor adjustment.....	EC-72	
Throttle position sensor (TPS).....	EC-118	
Throwout bearing - See Clutch release bearing.....	CL-10	
Tie-rod.....	ST-38	IDX
Tie-rod ball joints.....	ST-38	
Tightening torque of standard bolts.....	GI-44	

ALPHABETICAL INDEX

Timing chain	EM-10
Tire rotation	MA-19
Tire size	GI-38
Tooth contact diff.	PD-51, PD-74, PD-95
Tooth contact (front final drive 4WD)	PD-29
Torque converter clutch solenoid valve.....	AT-20
Torque converter installation	AT-41
Torque convertor clutch solenoid valve.....	EC-295
Torsion bar spring.....	FA-36
Tow truck towing.....	GI-42
Towing point	GI-43
TPS - Wiring diagram.....	EC-118
TP/SW - Wiring diagram	EC-226
Transfer case	TF-8
Transfer fluid replacement	MA-18
Transfer oil replacement	MA-18
Transfer overhaul	TF-8
Transfer removal and installation	TF-6
Transfer serial number	GI-37
Transmission case (M/T).....	MT-7
Transmission serial number	GI-37
Tread-FR&RR (Dimensions)	GI-38
Trim	BT-13
TURN - Wiring diagram.....	EL-54
Turn signal lamp.....	EL-52
Two trip detection logic	EC-34
Two-pole lift	GI-41

U

Under body.....	BT-36
Upper link (front susp.).....	FA-40

V

Vacuum cut valve	EC-280
Vacuum cut valve bypass valve	EC-276
Vacuum hose (brake system)	BR-18
Vacuum hose drawing (ECCS)	EC-13
Valve clearance	EM-21
Valve guide.....	EM-21
Valve seat.....	EM-22
Valve spring.....	EM-24
Vehicle identification number	GI-36

Vehicle recovery (freeing a stuck vehicle)	GI-43
Vehicle speed sensor (VSS)	EC-217
Ventilator door control rod adjustment.....	HA-42
VENT/V - Wiring diagram.....	EC-207
Viscosity number (SAE)	MA-9
VSS - Wiring diagram	EC-217

W

WARN - Wiring diagram.....	EL-79
Warning chime	EL-83
Warning lamps	EL-76
Washer, front	EL-93
Water cock control rod adjustment	HA-43
Water pump.....	LC-8
Water temperature gauge	EL-69
Weatherstrip - See Exterior.....	BT-17
Wheel alignment (front).....	FA-8
Wheel balance.....	MA-19
Wheel bearing (front axle).....	FA-6
Wheel bearing (rear)	RA-4
Wheel hub (front)	FA-24
Wheel sensors (ABS).....	BR-30
Wheel size.....	GI-38
Wheelbase (Dimensions)	GI-38
Wide open & closed throttle position (CTP) switch	EC-226
Width (Dimensions).....	GI-38
WINDOW - Wiring diagram.....	EL-138
Window antenna.....	EL-109
Window, back	BT-28
Window, door.....	BT-9
Window, rear	BT-28
Window, rear side.....	BT-29
Window, side - See Rear side window	BT-29
Windshield	BT-26
Windshield washer - See Front washer.....	EL-93
Windshield wiper - See Front wiper.....	EL-92
WIPER - Wiring diagram.....	EL-94
Wiper and washer	EL-92
Wiper, front.....	EL-92
Wiring diagrams	GI-9
Withdrawal lever (clutch).....	CL-10
Wrist pin - See Piston pin inspection	EM-33