

# ACCELERATOR CONTROL, FUEL & EXHAUST SYSTEMS

## SECTION FE

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX


## CONTENTS

<b>PREPARATION/ACCELERATOR CONTROL SYSTEM</b> .....2	Adjusting Accelerator Wire .....2	
Special Service Tool .....2	<b>FUEL SYSTEM</b> .....3	
	<b>EXHAUST SYSTEM</b> .....4	

# PREPARATION/ACCELERATOR CONTROL SYSTEM



## Special Service Tool

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

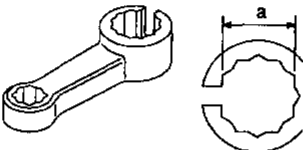Tool number (Kent-Moore No.) Tool name	Description
KV10114400 (J-38365) Heated oxygen sensor wrench	 <p>Loosening or tightening front and rear heated oxygen sensors</p> <p>a = 22 mm (0.87 in)</p>
	NT636

### CAUTION:

- When removing accelerator wire, make a mark to indicate lock nut's initial position.
- Check that throttle valve opens fully when accelerator pedal is fully depressed. Also check that it returns to idle position when pedal is released.
- Check accelerator control parts for improper contact with any adjacent parts.
- When connecting accelerator wire, be careful not to twist or scratch wire.

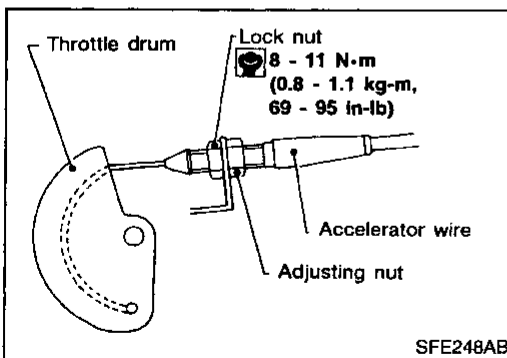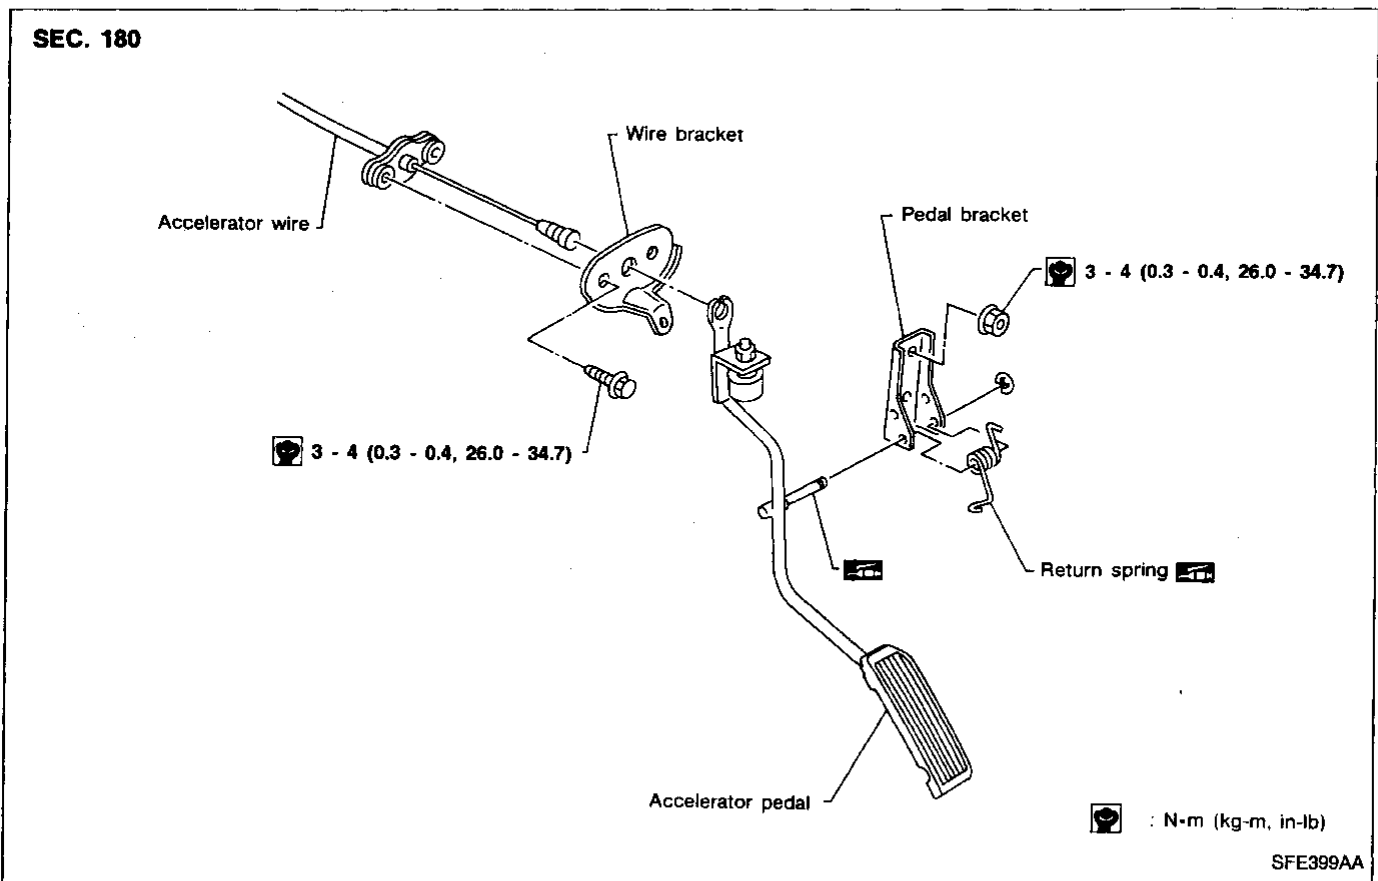

## Adjusting Accelerator Wire

### CAUTION:

- Make sure the ASCD wire is not pulling the throttle drum.
  - Refer to "AUTOMATIC SPEED CONTROL DEVICE" in EL section for ASCD wire adjustment.
1. Loosen lock nut, and tighten adjusting nut until throttle drum starts to move.
  2. From that position turn back adjusting nut 1.5 to 2 turns, and fasten it with lock nut.


# FUEL SYSTEM

## WARNING:


- Be sure to furnish workshop with a CO<sub>2</sub> fire extinguisher.
- Do not smoke while servicing fuel system. Keep open flames and sparks away from work area.

## CAUTION:

- Before removing fuel line parts carry out the following procedures:
  - a. Put drained fuel in an explosion-proof container and put the lid on securely.
  - b. Release fuel pressure from fuel line. Refer to "Changing Fuel Filter" in MA section.
  - c. Disconnect battery ground cable.
- Always replace O-ring and clamps with new ones.
- Do not kink or twist tubes when they are being installed.
- Do not tighten hose clamps excessively to avoid damaging hoses.
- After installing tubes, run engine and check for fuel leaks at connections.
- Use only a genuine fuel filler cap as a replacement.
- For inspection of EVAP shut valve, refer to "EVAPORATIVE EMISSION SYSTEM" in EC section.

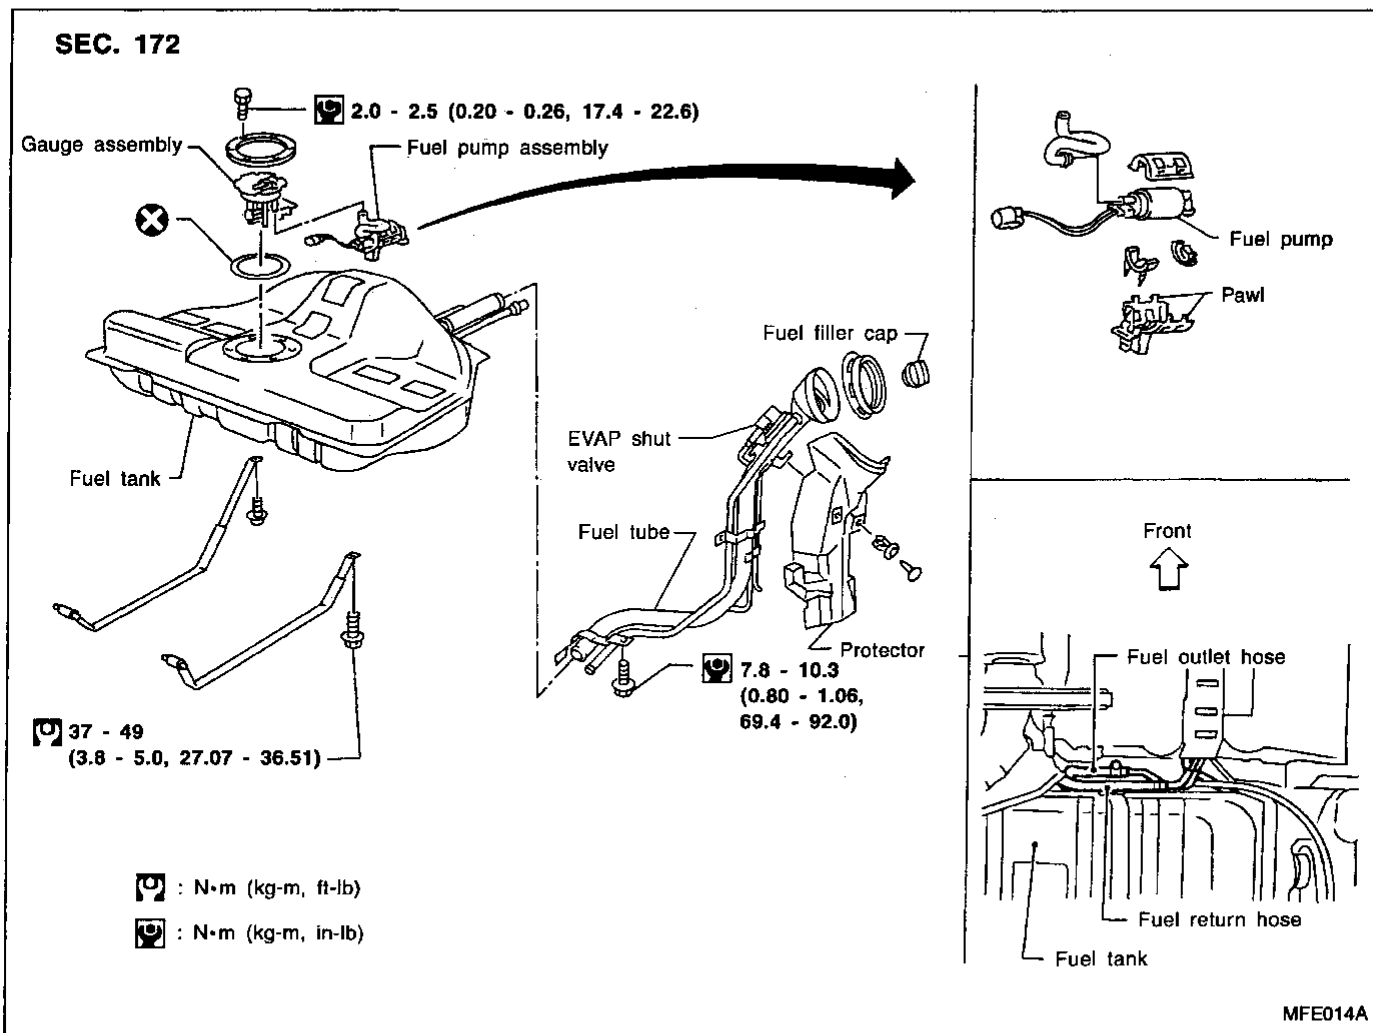


# EXHAUST SYSTEM

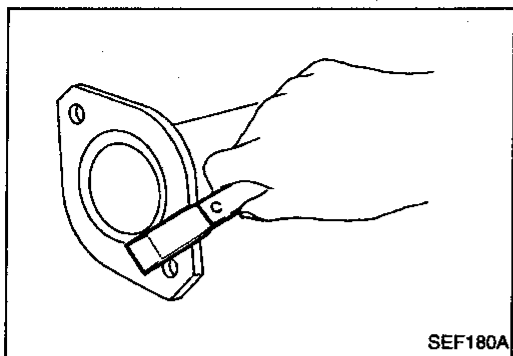

## CAUTION:

- Always replace exhaust gaskets with new ones when reassembling. If gasket remains on flange surface, scrape off completely as shown at left.
- With engine running, check all tube connections for exhaust gas leaks, and entire system for unusual noises.
- Check to ensure that mounting brackets and mounting insulators are installed properly and free from undue stress. Improper installation could result in excessive noise or vibration.
- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

## SEC. 200

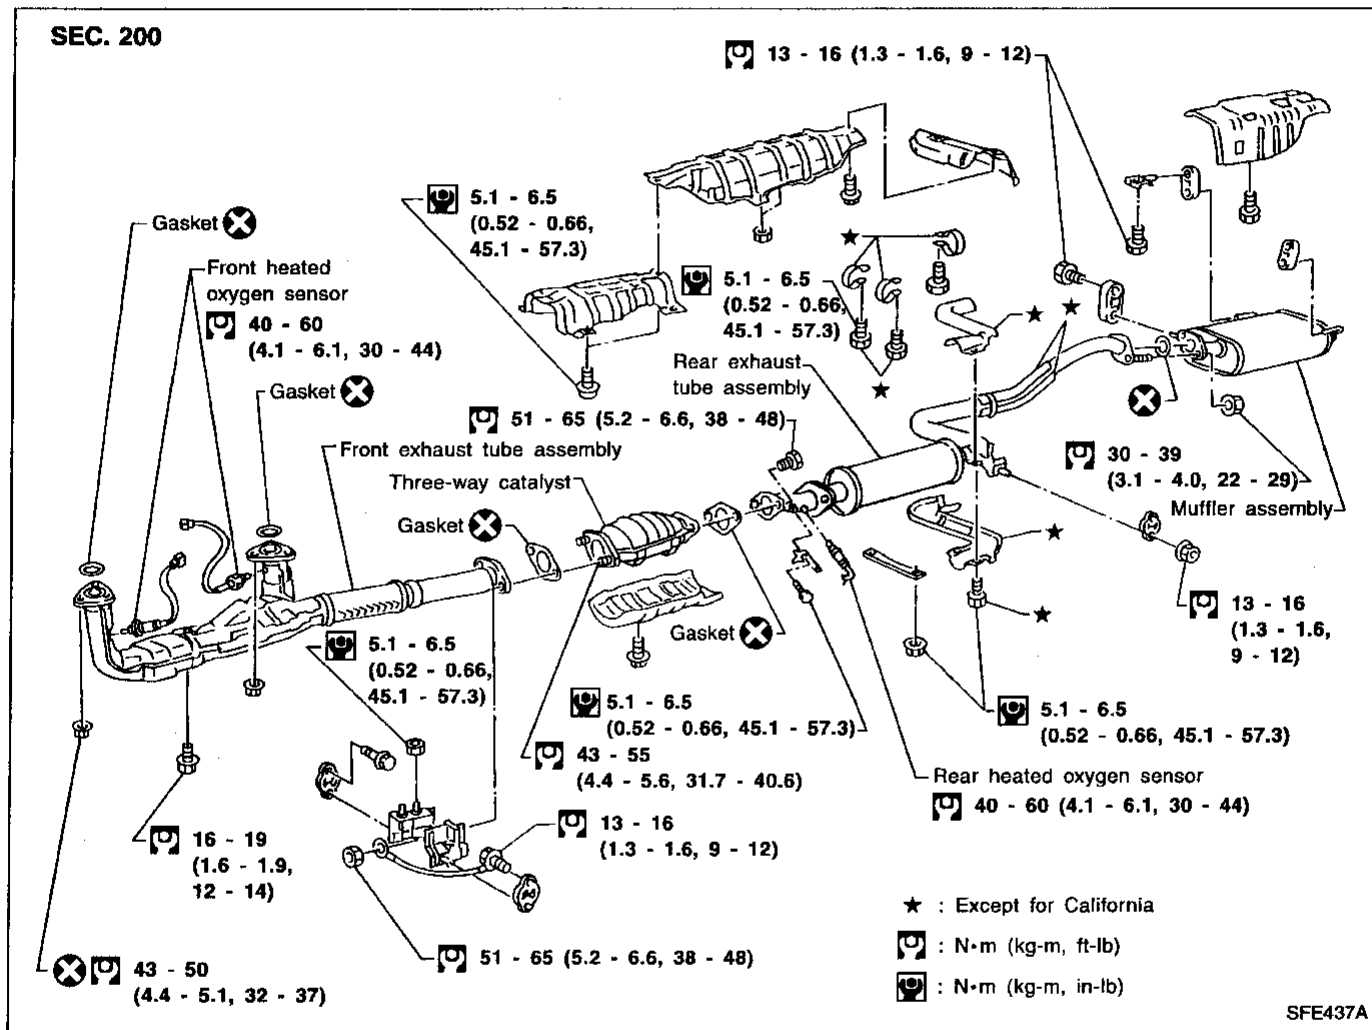

SFE437A