


SUPER MULTIPLE JUNCTION (SMJ)

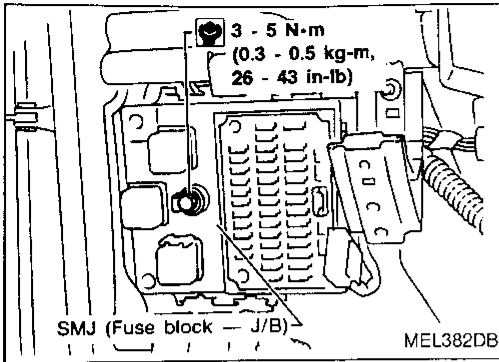


INSTALLATION

To install FUSE BLOCK (J/B) and SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

☑ : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

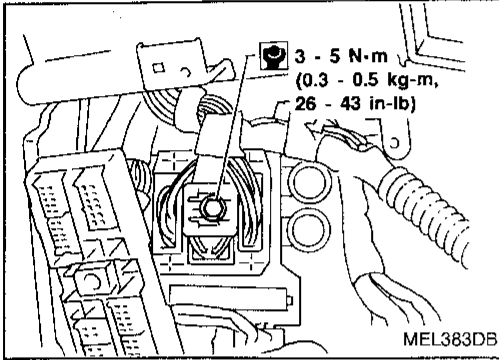


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement



MAIN HARNESS


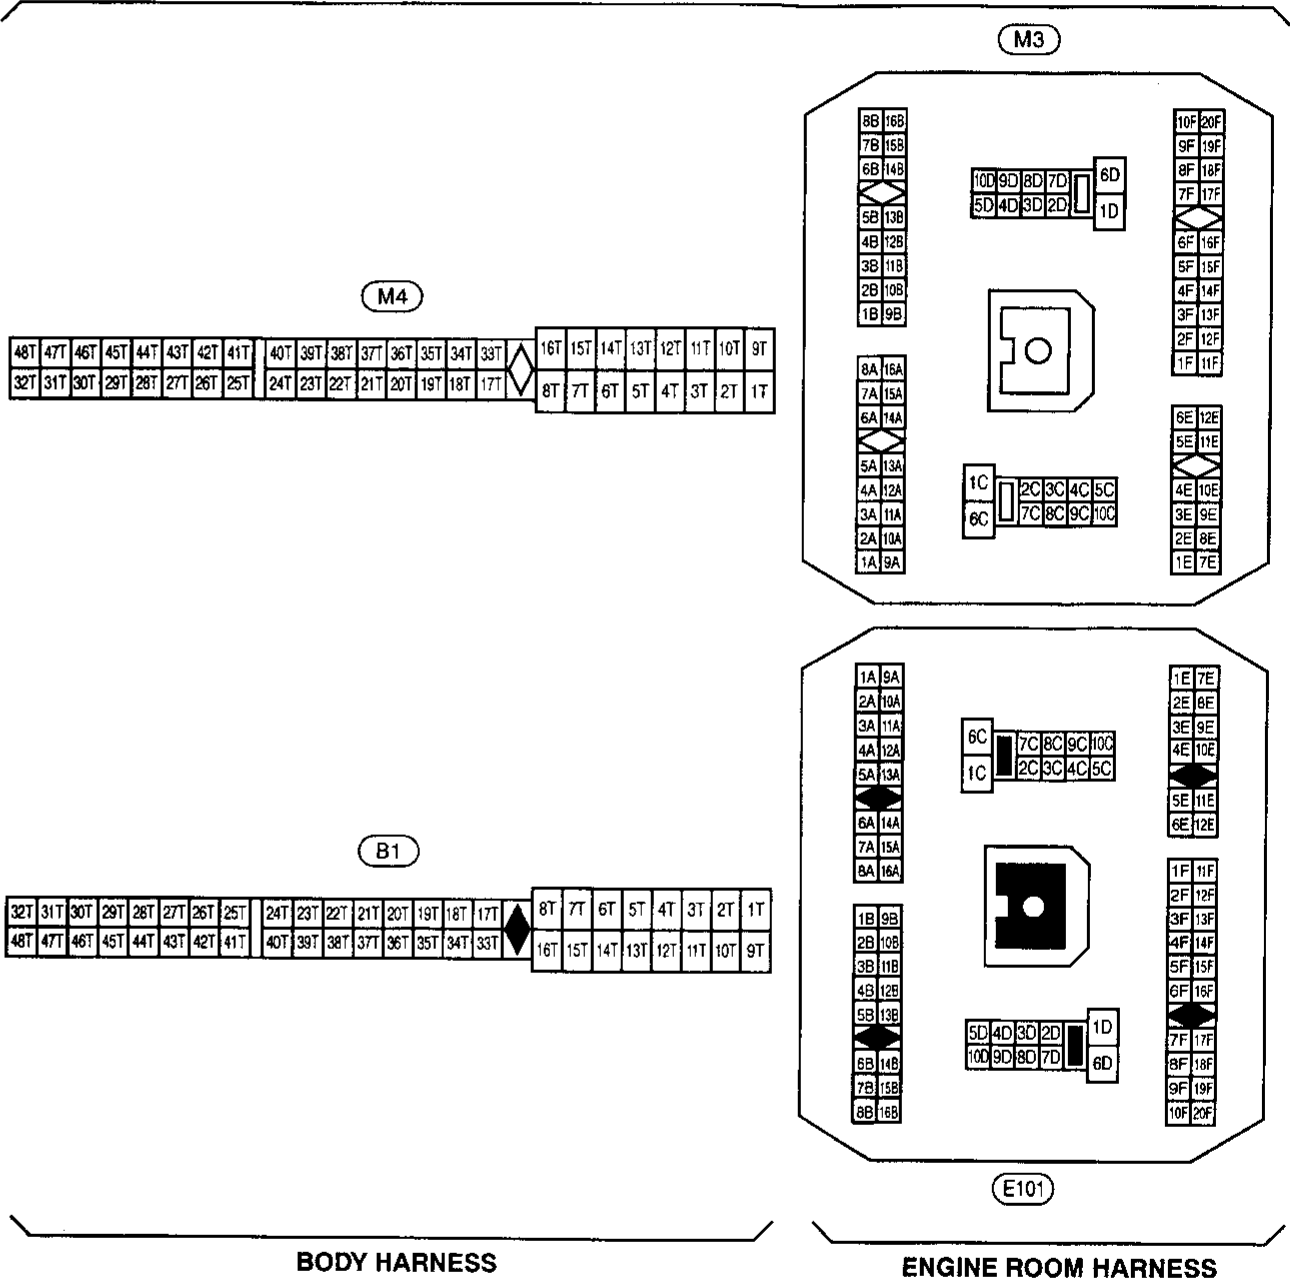


BODY HARNESS

ENGINE ROOM HARNESS


FUSE BLOCK — Junction Box (J/B)

Terminal Arrangement

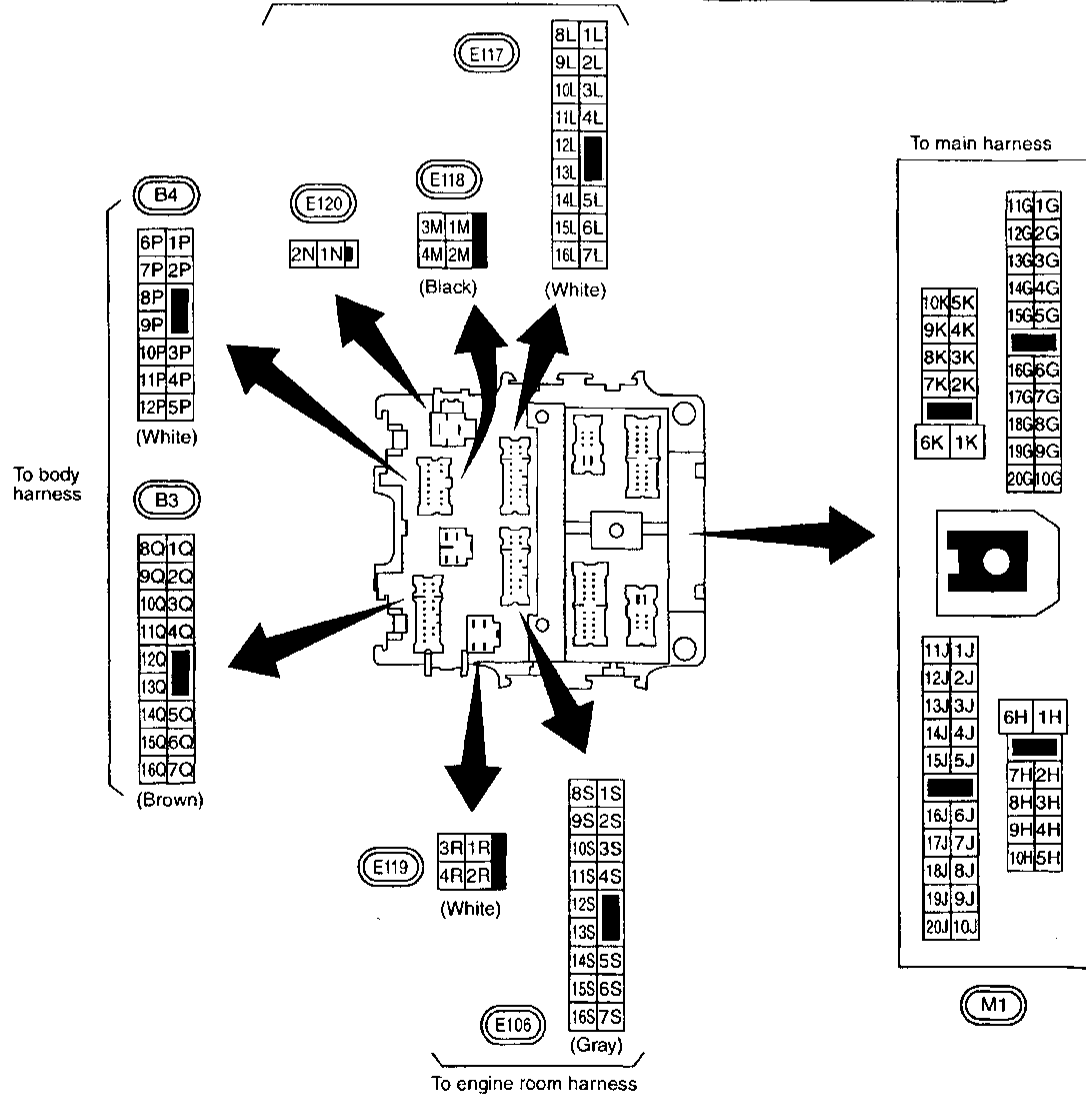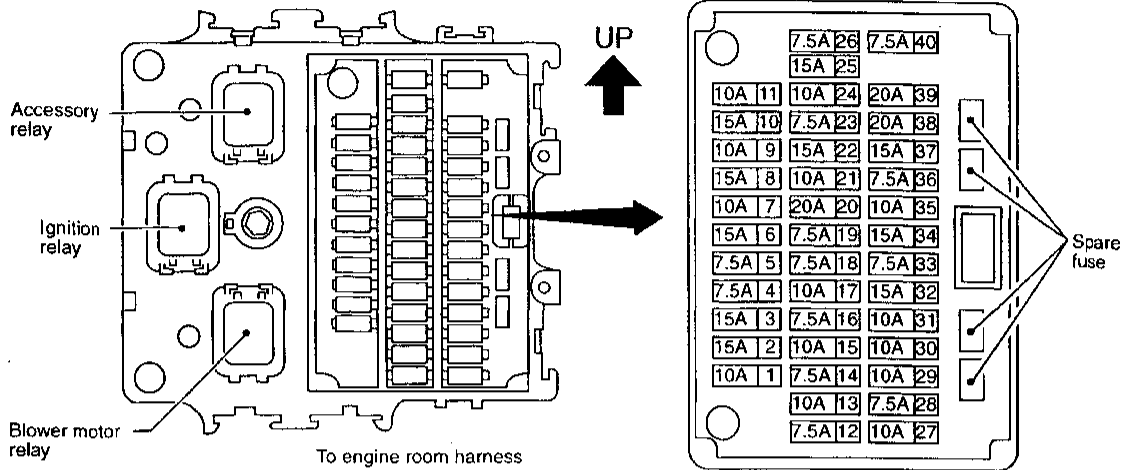

FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

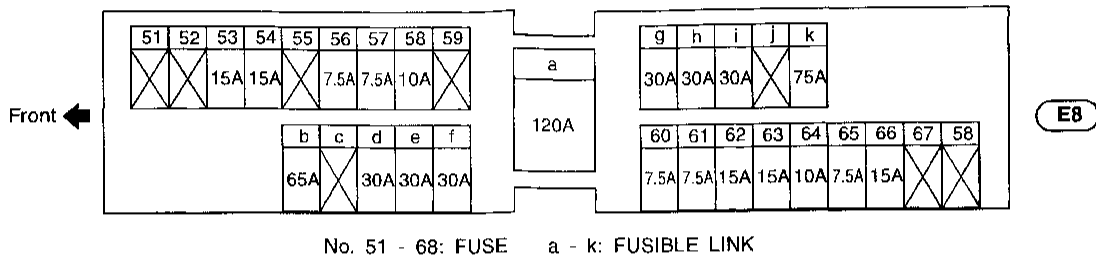


MEL760H

ELECTRICAL UNITS

Terminal Arrangement


ECM (ECCS CONTROL MODULE) (F101)

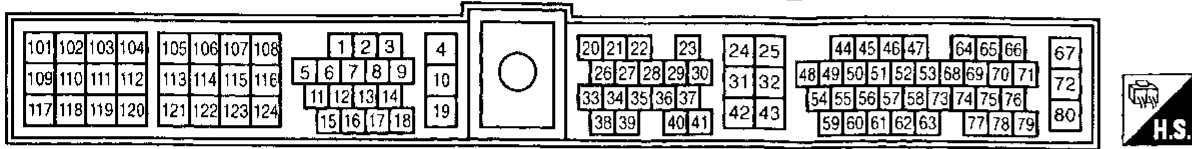


TCM (TRANSMISSION CONTROL MODULE) (F103)



 ABS CONTROL UNIT (E114)




BCM (BODY CONTROL MODULE)

 

A/C AUTO AMP.



 AIR BAG DIAGNOSIS SENSOR UNIT (Z4)



JOINT CONNECTOR (J/C)

Terminal Arrangement

