

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS (anti-lock brake system) ..... BR-28  
 ABS - Wiring diagram ..... BR-37  
 ABS/TCS C/U signal ..... EC-497  
 Absolute pressure sensor ..... EC-130  
 A/C air flow ..... HA-17  
 A/C component layout ..... HA-16  
 A/C compressor clutch removal and  
   installation ..... HA-96  
 A/C compressor description ..... HA-12  
 A/C compressor mounting ..... HA-95  
 A/C compressor precaution ..... HA-6  
 A/C compressor special service tool ..... HA-6  
 A/C control linkage adjustment ..... HA-73  
 A/C control operation ..... HA-21  
 A/C diagnostic work flow ..... HA-23  
 A/C HFC134a (R134a) system  
   precaution ..... HA-2  
 A/C HFC134a (R134a) system service  
   procedure ..... HA-87  
 A/C HFC134a (R134a) system service  
   tools ..... HA-7  
 A/C HFC134a system service equip-  
   ment precaution ..... HA-9  
 A/C lubricant (R134a) ..... HA-89  
 A/C operational check ..... HA-24  
 A/C performance chart ..... HA-49  
 A/C performance test diagnoses ..... HA-47  
 A/C relay ..... HA-73  
 A/C self-diagnoses ..... HA-30  
 A/C service data specification ..... HA-100  
 A/C symptom chart ..... HA-28  
 A/C system description ..... HA-75  
 A/C trouble diagnoses ..... HA-23  
 A/C, A - Wiring diagram ..... HA-56  
 Accelerator control system ..... FE-2  
 Accelerator wire adjustment ..... FE-2  
 Air bag ..... RS-9  
 Air bag disposal ..... RS-20  
 Air bag precautions ..... GI-2  
 Air bleeding (hydraulic clutch) ..... CL-6  
 Air bleeding for brake system ..... BR-6  
 Air cleaner filter replacement ..... MA-13  
 Air conditioner cut control ..... EC-24  
 Air flow meter - See Mass air flow  
   sensor ..... EC-122  
 Air mix door control linkage adjustment ..... HA-73  
 Air mix. door motor ..... HA-80  
 Air spoiler, rear ..... BT-21  
 Alternator ..... EL-33  
 Ambient sensor ..... HA-77  
 Angular tightening application ..... EM-2  
 Antenna ..... EL-136  
 Anti-lock brake system - See ABS ..... BR-28  
 Anti-lock brake system - Wiring  
   diagram ..... BR-37  
 ASCD (automatic speed control device) ..... EL-152  
 ASCD - Wiring diagram ..... EL-157

A/T - Wiring diagram ..... AT-13  
 A/T fluid temperature sensor ..... AT-87, 153  
 A/T self-diagnoses ..... AT-42  
 A/T shift lock system ..... AT-180  
 A/T shift lock system - Wiring diagram ..... AT-181  
 A/T trouble diagnoses ..... AT-53  
 AT/C - Wiring diagram ..... EC-380, 500  
 Audio ..... EL-130  
 AUDIO - Wiring diagram ..... EL-132  
 Audio and A/C control removal and  
   installation - See Instrument panel ..... BT-13  
 Auto air conditioner - Wiring diagram ..... HA-56  
 Auto anti-dazzling inside mirror ..... EL-150  
 Automatic speed control system - See  
   ASCD ..... EL-152  
 Automatic transaxle number ..... GI-40  
 Automatic transmission fluid  
   replacement ..... MA-18  
 Automatic transmission number ..... GI-40  
 Auxiliary air control (AAC) valve ..... EC-368

## B

Back-up lamp ..... EL-65  
 Back-up lamp switch (M/T) ..... MT-8  
 BACK/L - Wiring diagram ..... EL-65  
 Ball joint front axle ..... FA-6  
 Basic inspection ..... EC-92  
 Battery ..... EL-21  
 Baulk ring (M/T) ..... MT-12  
 Blower motor ..... HA-72  
 Board-on lift ..... GI-42  
 Body alignment ..... BT-42  
 Brake booster ..... BR-12  
 Brake control valve (Proportioning  
   valve) ..... BR-8  
 Brake fluid change ..... BR-5  
 Brake fluid level ..... MA-19  
 Brake fluid level and line check ..... BR-5  
 Brake hydraulic line ..... BR-7  
 Brake inspection ..... MA-19  
 Brake lines and cables inspection ..... MA-19  
 Brake master cylinder ..... BR-10  
 Brake pedal ..... BR-9  
 Bulb specifications ..... EL-379  
 Bumper, front ..... BT-5  
 Bumper, rear ..... BT-8  
 BUZZER - Wiring diagram ..... EL-99  
 BYPS/V - Wiring diagram ..... EC-482, 487

## C

Camshaft inspection ..... EM-40  
 Camshaft position sensor (CMPS) ..... EC-310  
 Camshaft position sensor (PHASE) ..... EC-310  
 Canister-See EVAP canister ..... EC-26  
 CHARGE - Wiring diagram ..... EL-31  
 Charging system ..... EL-30

# ALPHABETICAL INDEX

Chassis and body maintenance .....	MA-17
CIGAR - Wiring diagram .....	EL-119
Cigarette lighter.....	EL-119
Circuit breaker .....	EL-15
Clock.....	EL-120
CLOCK - Wiring diagram.....	EL-120
Closed loop control .....	EC-407
Closed throttle position switch .....	EC-375
Clutch cover.....	CL-10
Clutch disc.....	CL-10
Clutch fluid level .....	MA-17
Clutch master cylinder.....	CL-7
Clutch operating cylinder.....	CL-8
Clutch pedal.....	CL-5
Clutch release bearing .....	CL-9
Clutch release mechanism .....	CL-9
Clutch withdrawal lever .....	CL-9
Coil spring (front) .....	FA-22
Coil spring (rear).....	RA-11
Collision diagnosis .....	RS-58
Combination lamp, front, removal and installation .....	BT-5
Combination lamp, rear, removal and installation .....	BT-21
Combination meter .....	EL-80
Combination meter removal and instal- lation - See Instrument panel.....	BT-13
Combination switch.....	EL-35
COMM - Wiring diagram.....	EL-192
Component Location .....	HA-53
Compression pressure.....	EM-12
Compressor clutch removal and installation.....	HA-96
Compressor description .....	HA-12
Compressor mounting.....	HA-95
Compressor precaution .....	HA-6
Compressor special service tool.....	HA-6
Connecting rod .....	EM-59
Connecting rod bearing clearance .....	EM-63
Connecting rod bushing clearance.....	EM-64
Connector inspection.....	GI-19
Console box - See Instrument panel.....	BT-13
CONSULT for ABS .....	BR-44
CONSULT for engine .....	EC-73
CONSULT general information.....	GI-35
Control lever (M/T).....	MT-10
Control valve (A/T) .....	AT-218
Converter housing installation.....	AT-191
Coolant mixture ratio .....	MA-9
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-8
Cooling fan control .....	EC-503
Cooling fan control system.....	LC-15
Cooling fan motor.....	EC-515
Cooling fan relay .....	EC-515
CORNER - Wiring diagram .....	EL-71
Cornering lamp .....	EL-70
Coupling sleeve (M/T).....	MT-12
Crankshaft.....	EM-61
Crankshaft position sensor (POS) .....	EC-303

Crankshaft position sensor (POS) chipping .....	EC-427
Crankshaft position sensor (REF).....	EC-421
Cruise control - See ASCD.....	EL-152
Cylinder block .....	EM-57
Cylinder head.....	EM-37
Cylinder head bolt tightening.....	EM-46

## D

Daytime light system .....	EL-48
Daytime running light - See Daytime light system .....	EL-48
DEF - Wiring diagram.....	EL-122
Detonation sensor - See Knock sensor.....	EC-299
Diagnosis sensor unit.....	RS-13
Differential gear (FF M/T) .....	MT-12, 26
Dimensions.....	GI-41
Direct ignition system.....	EC-40
Distributor ignition (DI) system.....	EC-23
D/LOCK - Wiring diagram.....	EL-228
Door mirror.....	BT-41
Door trim .....	BT-18
Door, front .....	BT-11
Door, rear.....	BT-12
Drive belt inspection .....	MA-10
Drive plate runout .....	EM-65
Drive shaft (front) .....	FA-13
Dropping resistor (A/T).....	AT-131
DTRL - Wiring diagram.....	EL-51

## E

ECM input/output signal.....	EC-108
ECM-ABS/TCS COMM NG.....	EC-500
EGR temperature sensor .....	EC-434
EGR valve & EVAP canister purge con- trol solenoid valve.....	EC-329
EGR volume control valve .....	EC-324
EGVC/V - Wiring diagram.....	EC-324
Electric sun roof.....	EL-144
Electrical diagnoses .....	GI-22
Electrical ignition system.....	EC-23
Electrical load signal circuit.....	EC-535
Electrical unit .....	Foldout
Engine compartment.....	BT-42
Engine control circuit diagram.....	EC-11
Engine control component parts location .....	EC-14
Engine control module (ECM).....	EC-383
Engine control system diagram and chart.....	EC-12
Engine coolant temperature sensor (ECTS).....	EC-145, 161
Engine mounting control (Front) .....	EC-527
Engine oil filter replacement .....	MA-14
Engine oil precautions.....	GI-5
Engine oil replacement .....	MA-14

# ALPHABETICAL INDEX

Engine outer component parts .....	EM-8
Engine removal.....	EM-54
Engine room - See Engine compartment .....	BT-42
Engine serial number .....	GI-40
EVAP canister .....	EC-26
EVAP canister vent control valve.....	EC-353
EVAP control system purge flow moni- toring diagnosis .....	EC-470
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-26
Exhaust system .....	FE-4
Exhaust system inspection .....	MA-17
Exterior.....	BT-21

## F

Fan control amp.....	HA-85
Fast idle cam (FIC) inspection and adjustment .....	EC-39
F/FOG - Wiring diagram .....	EL-67
Final drive (FF M/T) .....	MT-12, 26
Floor trim.....	BT-16
Flow charts .....	GI-32
Fluid temperature sensor (A/T).....	AT-87, 153
Fluids .....	MA-8
Flywheel (clutch).....	CL-11
Flywheel runout .....	EM-65
FO2H-L - Wiring diagram.....	EC-166, 174, 180, 186, 196
Fog lamp, front .....	EL-66
Fog lamp, front, removal and installation .....	BT-5
Fork rod (M/T) .....	MT-13
Forward clutch.....	AT-239
FRO2LH - Wiring diagram .....	EC-204
Front axle.....	FA-9
Front bumper .....	BT-5
Front combination lamp removal and installation .....	BT-5
Front disc brake .....	BR-14
Front door.....	BT-11
Front engine mounting control.....	EC-527
Front fog lamp .....	EL-66
Front fog lamp removal and installation.....	BT-5
Front heated oxygen sensor (HO2S).....	EC-166, 174, 180, 186, 196
Front heated oxygen sensor (HO2S) (Left bank).....	EC-166, 174, 180, 186, 196
Front heated oxygen sensor (HO2S) (Right bank) .....	EC-166, 174, 180, 186, 196
Front heated oxygen sensor (HO2S) monitor.....	EC-64, 67
Front heated oxygen sensor heater (Left bank) .....	EC-204
Front heated oxygen sensor heater (Right bank) .....	EC-204
Front passenger air bag.....	RS-9
Front seat.....	BT-28
Front seat belt .....	RS-4

Front suspension .....	FA-21
Front washer.....	EL-106
Front wiper.....	EL-106
Fuel cut control (at no load & high engine speed).....	EC-25
Fuel filler lid .....	BT-8
Fuel filter replacement .....	MA-13
Fuel gauge.....	EL-80
Fuel injection system (Left bank).....	EC-278, 284
Fuel injection system (Right bank) .....	EC-278
Fuel lid opener, electric .....	EL-151
Fuel line inspection .....	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-37
Fuel pressure release .....	EC-37
Fuel pump .....	EC-526
Fuel pump control module .....	EC-523
Fuel pump relay .....	EC-526
Fuel system .....	FE-3
FUELLH - Wiring diagram .....	EC-278, 284
Fuse .....	EL-15
Fuse block.....	Foldout
Fusible link.....	EL-15

## G

Garage jack and safety stand .....	GI-43
Gauges .....	EL-80
Gear components (M/T).....	MT-12
Generic scan tool (GST) .....	EC-86
Grille.....	BT-21
Ground distribution .....	EL-16

## H

Harness connector.....	EL-3
Harness connector inspection.....	GI-19
Harness layout.....	EL-363
Hazard warning lamp.....	EL-59
Headlamp.....	EL-38
Headlamp removal and installation .....	BT-5
Headlining - See Roof trim .....	BT-19
Heated oxygen sensor (HO2S) (front) .....	EC-166, 174, 180, 186, 196
Heated oxygen sensor (HO2S) (Front) (Left bank).....	EC-166, 174, 180, 186, 196
Heated oxygen sensor (HO2S) (Front) (Right bank) .....	EC-166, 174, 180, 196
Heated oxygen sensor (HO2S) monitor .....	EC-67
Heated oxygen sensor (rear) .....	EC-210, 219, 227, 235
Heated oxygen sensor heater (Front)(Left bank).....	EC-204
Heated oxygen sensor heater (Front)(Right bank) .....	EC-204
Heated oxygen sensor monitor (HO2S) (front) .....	EC-67
Heated seat.....	BT-29, EL-148

# ALPHABETICAL INDEX

Height (Dimensions).....	GI-41
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service procedure.....	HA-87
HFC134a (R134a) system service tools.....	HA-7
HFC134a system service equipment precaution.....	HA-9
High clutch.....	AT-235
H/LAMP - Wiring diagram.....	EL-40
Hood.....	BT-5
Horn.....	EL-118
HORN - Wiring diagram.....	EL-118
How to erase DTC for OBD system .....	EC-62
H/PHON - Wiring diagram.....	EL-141
HSEAT - Wiring diagram .....	EL-148

## I

IACV-AAC valve .....	EC-374
Identification plate .....	GI-40
Idle air control valve (IACV).....	EC-368
Idle mixture ratio .....	EC-42
Idle speed.....	EC-42
Ignition coil .....	EC-420
Ignition timing .....	EC-42
ILL - Wiring diagram .....	EL-75
Illumination.....	EL-73, 290
I/MIRR - Wiring diagram.....	EL-150
In vehicle sensor .....	HA-76
INFINITI communicator.....	EL-323
Injector.....	EC-520
Injector removal and installation .....	EC-38
Input shaft (FF M/T).....	MT-12, 17
Instrument panel.....	BT-13
INT/L - Wiring diagram .....	EL-79
Intake air temperature sensor.....	EC-139
Intake door control linkage adjustment.....	HA-74
Intake door motor.....	HA-84
Intake manifold .....	EM-10
Intake sensor.....	HA-78
Integrated homelink transmitter .....	EL-357
Interior.....	BT-16
Interior lamp on-off control.....	EL-294
IVCS (Infiniti vehicle immobiliser system).....	EL-308
IVCS - Wiring diagram.....	EL-332
IVIS (Infiniti vehicle immobiliser system) precautions.....	GI-2
IVMS (In-Vehicle Multiplexing System) .....	EL-176
IVMS-System description .....	EL-176
IVMS-Trouble diagnoses .....	EL-195

## J

Jacking points.....	GI-43
Junction box (J/B) .....	Foldout

## K

Key illumination.....	EL-294
Keyless entry system - See Multi-remote control system.....	EL-245
Knock sensor (KS) .....	EC-299

## L

Length (Dimensions) .....	GI-41
License lamp.....	EL-56
Lifting points .....	GI-44
Line pressure solenoid valve .....	AT-116, 127, 131
Line pressure test (A/T) .....	AT-61
Liquid gasket application .....	EM-2
Location of electrical units .....	EL-360
Low and reverse brake .....	AT-245
Lubricant (R134a) A/C .....	HA-89
Lubricants .....	MA-8
Lubrication circuit (engine) .....	LC-4
Lubrication-locks, hinges and hood latches.....	MA-21

## M

Magnet clutch.....	HA-96
Main drive gear (M/T) .....	MT-12
Mainshaft (M/T).....	MT-12, 22
Maintenance .....	MA-1
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-193
Malfunction indicator lamp (MIL).....	EC-64
Manual transaxle number.....	GI-40
Manual transmission oil replacement .....	MA-17
MAP/BARO switch solenoid valve .....	EC-385
Mass air flow sensor (MAFS).....	EC-122
Master cylinder (brake) .....	BR-10
Master cylinder (clutch) .....	CL-7
Meter.....	EL-80
METER - Wiring diagram .....	EL-83
MIL & Data link connectors circuit .....	EC-538
MIRROR - Wiring diagram .....	EL-149
Mirror, door .....	BT-41
Mirror, out side.....	BT-41
Misfire .....	EC-294
Mode door control linkage adjustment.....	HA-73
Mode door motor.....	HA-82
Model variation .....	GI-38
Molding - See Exterior.....	BT-21
M/T major overhaul .....	MT-11
M/T removal and installation .....	MT-8
MULTI - Wiring diagram.....	EL-248
Multi-remote control system .....	EL-245
Multiport fuel injection (MFI) system.....	EC-21
Multiport fuel injection precautions.....	GI-5

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

# ALPHABETICAL INDEX

## N

NATS (Nissan anti-theft system) .....	EL-308
NATS (Nissan anti-theft system) precautions .....	GI-2
NATS - Wiring diagram .....	EL-310
NVH troubleshooting (BR) .....	BR-4
NVH troubleshooting (CL) .....	CL-3
NVH troubleshooting (FA) .....	FA-4
NVH troubleshooting (M/T) .....	MT-5
NVH troubleshooting (RA) .....	RA-3
NVH troubleshooting (ST) .....	ST-5

## O

Oil pan (engine) .....	EM-13
Oil pressure (engine) .....	LC-5
Oil pump (A/T) .....	AT-214
Oil pump (engine) .....	LC-5
Oil pump regulator valve (engine) .....	LC-7
Oil seal replacement (engine) .....	EM-34
On board diagnostic system .....	EC-50
Operating cylinder (clutch) .....	CL-8
ORVR (On-board Refueling Vapor Recovery) .....	EC-31
Out side mirror .....	BT-41
Overdrive control switch .....	AT-178
Overrun clutch .....	AT-239
Overrun clutch solenoid valve .....	AT-116, 127, 149
Oxygen sensor monitor (O2S) (front) .....	EC-67

## P

P/ANT - Wiring diagram .....	EL-137
Park/Neutral position switch .....	EC-492
Park/neutral position switch (M/T) .....	MT-8
Parking brake control .....	BR-26
Parking lamp .....	EL-56
PCV (positive crankcase ventilation) .....	EC-36
PGC/V - Wiring diagram .....	EC-458
PHONE - Wiring diagram .....	EL-143
Piston assembly .....	EM-65
Piston pin inspection .....	EM-58
Piston ring inspection .....	EM-59
Piston to bore clearance .....	EM-60
POWER - Wiring diagram .....	EL-8
Power door lock .....	EL-226
Power door mirror .....	EL-149
Power seat .....	EL-146
Power steering fluid level .....	MA-20, ST-7
Power steering gear .....	ST-14
Power steering hydraulic pressure .....	ST-9
Power steering oil pressure switch .....	EC-530
Power steering oil pump .....	ST-24
Power steering system bleeding .....	ST-7
Power supply routing .....	EL-7
Power transistor .....	EC-420

Power transistor & ignition coil .....	EC-414
Power window .....	EL-210
Precautions (General) .....	GI-3
Pressure plate - See Clutch cover .....	CL-10
Pressure test (A/T) .....	AT-61

## R

Radiator .....	LC-15
Radio - See Audio .....	EL-130
Rear air spoiler .....	BT-21
Rear axle .....	RA-7
Rear bumper .....	BT-8
Rear combination lamp removal and installation .....	BT-21
Rear disc brake .....	BR-18
Rear door .....	BT-12
Rear heated oxygen sensor (HO2S) .....	EC-210, 219, 227, 235
Rear heated oxygen sensor (HO2S) heater .....	EC-267, 273
Rear seat .....	BT-30
Rear seat belt .....	RS-5
Rear suspension .....	RA-10
Rear window .....	BT-39
Rear window defogger .....	EL-121
Refrigerant connection precaution .....	HA-3
Refrigerant general precaution .....	HA-2
Refrigerant lines .....	HA-91
Release bearing (clutch) .....	CL-9
Removal and installation (A/T) .....	AT-190
Reverse clutch .....	AT-232
Reverse idler shaft (M/T) .....	MT-12
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) .....	MT-8
Reverse main gear (M/T) .....	MT-12
Revolution sensor (A/T) .....	AT-90
RO2H-L - Wiring diagram .....	EC-210
Road wheel size .....	GI-41
Roof trim .....	BT-19
ROOM/L - Wiring diagram .....	EL-295
RRO2LH - Wiring diagram .....	EC-248, 267
RRO2RH - Wiring diagram .....	EC-241

## S

SAE J1930 terminology list .....	GI-47
SAE J1979 - Mode 1 - 7 .....	EC-50
Seal - See Exterior .....	BT-21
SEAT - Wiring diagram .....	EL-146
Seat belt inspection .....	MA-21, RS-6
Seat belt pre-tensioner .....	RS-9
Seat belt pre-tensioner disposal .....	RS-20
Seat belt, front .....	RS-4
Seat belt, rear .....	RS-5
Seat, front .....	BT-28
Seat, rear .....	BT-30
Self-diagnostic results .....	EC-64

# ALPHABETICAL INDEX

SHIFT - Wiring diagram .....	AT-181
Shift control components (M/T).....	MT-13
Shift fork (M/T) .....	MT-13
Shift lever .....	MT-10
Shift schedule.....	AT-285
Shift solenoid	
valve A (A/T) .....	AT-97, 107, 116, 127, 135
Shift solenoid	
valve B (A/T) .....	AT-97, 102, 116, 127, 139
Shock absorber (rear) .....	RA-11
Side air bag .....	RS-9
Side trim.....	BT-16
SMJ (super multiple junction).....	Foldout
Spare tire size .....	GI-41
Spark plug replacement.....	MA-15
Speedometer .....	EL-80
Spiral cable .....	RS-15
Spot lamp.....	EL-79
Spring (Wheelarch) height.....	FA-6
SROOF - Wiring diagram .....	EL-145
SRS - See Supplemental Restraint	
System.....	RS-9
SRS - Wiring diagram .....	RS-31
SRS Trouble diagnoses .....	RS-26
Stabilizer bar (front) .....	FA-23
Stall test (A/T) .....	AT-58
Standardized relay.....	EL-5
START - Wiring diagram.....	EL-26
Starter .....	EL-28
Starting system .....	EL-25
Steering gear and linkage inspection .....	MA-20
Steering linkage .....	ST-14
Steering switch .....	EL-37
Steering wheel and column .....	ST-10
Steering wheel play .....	ST-6
Steering wheel turning force.....	ST-8
Step lamp.....	EL-302
STEP/L - Wiring diagram.....	EL-303
Stop lamp.....	EL-63
STOP/L - Wiring diagram .....	EL-63
Striking rod (M/T) .....	MT-13
Strut (front).....	FA-22
Sun roof, electric.....	EL-144
Sunload sensor .....	HA-77
Sunroof .....	BT-31
Supplemental Restraint System.....	RS-9
Supplemental restraint system - Wiring	
diagram.....	RS-31
S/VCSW - Wiring diagram .....	EC-409
SW/ILL - Wiring diagram .....	EL-291
Swirl control valve control solenoid	
valve .....	EC-394
Swirl control valve control vacuum	
check switch .....	EC-409
SWL/V - Wiring diagram .....	EC-394
Symbols and abbreviations .....	GI-9
Synchronizer (M/T).....	MT-12
System readiness test (SRT) code .....	EC-52

## T

Tachometer .....	EL-80	
Tail lamp.....	EL-56	GI
TAIL/L - Wiring diagram.....	EL-56	
Tank fuel temperature sensor .....	EC-290	
TCM circuit diagram.....	AT-12	MA
TCM inspection table .....	AT-76	
Telephone .....	EL-141	
THEFT - Wiring diagram.....	EL-268	EM
Theft warning system .....	EL-263	
Thermostat.....	LC-14	LC
Three way catalyst.....	EC-330, 333	
Three way catalyst function		
(Left bank) .....	EC-330, 333	EC
Three way catalyst function (Right		
bank).....	EC-330, 333	
Three way catalyst precautions .....	GI-5	FE
Throttle bodies .....	EM-10	
Throttle position sensor (TPS) .....	EC-150	
Throttle position switch .....	AT-145, 179	CL
Throwout bearing - See Clutch release		
bearing .....	CL-9	
Tie-rod.....	ST-18	MT
Tie-rod ball joints .....	ST-18	
Tightening torque of standard bolts .....	GI-46	AT
Timing chain.....	EM-20	
Tire rotation.....	MA-19	
Tire size .....	GI-41	FA
TLID - Wiring diagram .....	EL-151	
Torque converter installation .....	AT-191	
Torque convertor clutch		
solenoid valve.....	AT-116, 120, 127	RA
Tow truck towing.....	GI-45	
Transmission case (M/T).....	MT-11	BR
TRANSMT - Wiring diagram.....	EL-357	
Transverse link (front).....	FA-24	
Tread-FR&RR (Dimensions) .....	GI-41	ST
Trim .....	BT-16	
Triple pressure switch .....	HA-11, 72	
Trouble diagnoses .....	GI-32	RS
Trunk lid .....	BT-8	
Trunk lid opener - See Trunk lid.....	BT-8	
Trunk lid opener, electric .....	EL-151	BT
Trunk lid trim .....	BT-20	
Trunk room lamp.....	EL-79	HA
Trunk room trim .....	BT-20	
TURN - Wiring diagram .....	EL-60	
Turn signal lamp .....	EL-59	EL
Two trip detection logic .....	EC-50	
Two-pole lift .....	GI-44	

## U

Under body .....	BT-44
------------------	-------

IDX

# ALPHABETICAL INDEX

## V

Vacuum cut valve .....	EC-491
Vacuum hose (brake system) .....	BR-13
Vacuum hose drawing (Engine control) .....	EC-18
Valve clearance .....	EM-50
Valve guide .....	EM-41
Valve seat .....	EM-43
Valve spring .....	EM-44
Vehicle identification number .....	GI-39
Vehicle recovery (freeing a stuck vehicle) .....	GI-45
Vehicle speed sensor (VSS) .....	EC-364
VENT/V - Wiring diagram .....	EC-465, 476
Viscosity number (SAE) .....	MA-8
Viscous coupling (FF M/T) .....	MT-8, 12

## W

WARN - Wiring diagram .....	EL-93
Warning buzzer .....	EL-98
Warning lamps .....	EL-92
Washer, front .....	EL-106
Water pump .....	LC-10

Water temperature gauge .....	EL-80
Weatherstrip - See Exterior .....	BT-21
Wheel alignment (front) .....	FA-7
Wheel alignment (rear) .....	RA-6
Wheel balance .....	MA-19
Wheel bearing (front axle) .....	FA-7
Wheel bearing (rear) .....	RA-5
Wheel hub (rear) .....	RA-7
Wheel sensors (ABS) .....	BR-31
Wheel size .....	GI-41
Wheelarch height .....	FA-6
Wheelbase (Dimensions) .....	GI-41
Wide open & closed throttle position switch .....	EC-150
Width (Dimensions) .....	GI-41
WINDOW - Wiring diagram .....	EL-212
Window antenna .....	EL-138
Window, rear .....	BT-39
Windshield .....	BT-39
WIPER - Wiring diagram .....	EL-108
Wiper, front .....	EL-106
Wiring Diagram (Cell code) list .....	EL-380
Wiring diagrams .....	GI-10
Withdrawal lever (clutch) .....	CL-9
Wrist pin - See Piston pin inspection .....	EM-58