

ALPHABETICAL INDEX

SECTION **IDX**

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-461
ABS (anti-lock brake system).....	BR-39
ABS - Wiring diagram	BR-44
ABS sensor rotor	AX-19
ABS/TCS C/U signal	EC-515
Absolute pressure sensor	EC-173
A/C air flow.....	HA-26
A/C component layout.....	HA-20
A/C compressor clutch removal and installation	HA-112
A/C compressor precaution.....	HA-7
A/C compressor special service tool.....	HA-10
A/C control operation (auto A/C).....	HA-24
A/C diagnostic work flow (auto A/C)	HA-46
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-107
A/C HFC134a (R134a) system service tools.....	HA-11
A/C HFC134a system service equip- ment precaution	HA-7
A/C lubricant (R134a).....	HA-109
A/C operational check	HA-47
A/C performance chart	HA-84
A/C performance test diagnoses.....	HA-82
A/C relay.....	HA-80
A/C self-diagnoses (auto A/C).....	HA-36
A/C service data specification.....	HA-123
A/C system description (auto A/C).....	HA-24
A/C trouble diagnoses (auto A/C)	HA-28
A/C, A - Wiring diagram	HA-31
Accelerator control system	FE-3
Air bag	RS-13
Air bag disposal.....	RS-25
Air bag precautions	GI-3
Air bleeding for brake system	BR-9
Air cleaner filter replacement.....	MA-17
Air conditioner cut control	EC-32
Air flow meter - See Mass air flow sensor	EC-165
Air mix door control linkage adjustment.....	HA-62
Air mix. door motor	HA-60, 106
Air spoiler, rear.....	BT-40
Alternator	SC-13
Ambient sensor	HA-93
Angular tightening application.....	EM-3
Antenna - See Power antenna	EL-208
Anti-lock brake system - See ABS.....	BR-39
Anti-lock brake system - Wiring diagram.....	BR-44
AP/SEN - Wiring diagram	EC-175
ASCD (automatic speed control device)	EL-268
ASCD - Wiring diagram	EL-272
A/T - Wiring diagram	AT-16
A/T - Wiring diagram - AT - FTS	AT-111
A/T - Wiring diagram - AT - MAIN.....	AT-100

A/T - Wiring diagram - AT - PNP/SW.....	AT-105
A/T - Wiring diagram - AT - VSS A/T	AT-117
A/T control	EC-476
A/T diagnosis communication line.....	EC-650
A/T fluid temperature sensor.....	AT-109
A/T self-diagnoses	AT-41, 49
A/T shift lock system	AT-272
A/T shift lock system - Wiring diagram	AT-273
A/T trouble diagnoses	AT-55
A/T Wiring diagram - AT - ENG SS	AT-123
A/T Wiring diagram AT - 1ST	AT-129
A/T Wiring diagram AT - 2ND	AT-135
A/T Wiring diagram AT - 3RD	AT-141
A/T Wiring diagram AT - 4TH.....	AT-148
A/T Wiring diagram AT - BA/FTS	AT-200
A/T Wiring diagram AT - LPSV	AT-170
A/T Wiring diagram AT - NONDTC	AT-218
A/T Wiring diagram AT - OVRCSV	AT-195
A/T Wiring diagram AT - SSV/A	AT-176
A/T Wiring diagram AT - SSV/B	AT-181
A/T Wiring diagram AT - TCCSIG	AT-161
A/T Wiring diagram AT - TCV	AT-155
A/T Wiring diagram AT - TPS.....	AT-187
A/T Wiring diagram AT - VSSMTR.....	AT-207
AT/C - Wiring diagram.....	EC-477
ATDIAG - Wiring diagram.....	EC-651
Audio	EL-200
AUDIO - Wiring diagram.....	EL-202
Audio and A/C control removal and installation - See Instrument panel	BT-28
Auto air conditioner - Wiring diagram	HA-31
Automatic amplifier.....	HA-34, 50
Automatic speed control system - See ASCD	EL-268
Automatic transmission fluid replacement.....	MA-22
Automatic transmission number	GI-44
Auxiliary air control (AAC) valve	EC-458

B

Back-up lamp	EL-100
BACK/L - Wiring diagram.....	EL-100
Ball joint (front)	SU-14
Base idle air volume initialiging.....	EC-67
Basic inspection	EC-111
Battery	SC-3
Blower and cooling unit	HA-117
Blower motor	HA-66
Board-on lift	GI-46
Body alignment	BT-62
Brake booster	BR-21
Brake control valve (Proportioning valve)	BR-12
Brake fluid change	BR-8
Brake fluid level	MA-24
Brake fluid level and line check	BR-8
Brake hydraulic line.....	BR-10
Brake inspection	MA-24
Brake lines and cables inspection	MA-24

ALPHABETICAL INDEX

Brake master cylinder	BR-15
Brake pedal	BR-13
Bulb specifications	EL-484
Bumper, front	BT-13
Bumper, rear	BT-16
BYPS/V - Wiring diagram	EC-634, 641

C

Camshaft inspection	EM-42
Camshaft position sensor (PHASE)	EC-364
Canister-See EVAP canister	EC-33
CHARGE - Wiring diagram	SC-11
Charging system	SC-10
Chassis and body maintenance	MA-21
CHIME - Wiring diagram	EL-169
CIGAR - Wiring diagram	EL-187
Cigarette lighter	EL-187
Circuit breaker	EL-18
CKPS - Wiring diagram	EC-356
CLOCK - Wiring diagram	EL-188
Closed loop control (Left bank)	EC-507
Closed loop control (Right bank)	EC-507
Closed throttle position switch	EC-467
Coil spring (front)	SU-10
Coil spring (rear)	SU-25
Collision diagnosis	RS-68
Combination lamp, rear, removal and installation	BT-40
Combination meter	EL-143
Combination meter removal and instal- lation - See Instrument panel	BT-28
Combination switch	EL-31
Component Location (auto A/C)	HA-28
Compression pressure	EM-12
Compressor clutch removal and installation	HA-112
Compressor precaution	HA-7
Compressor special service tool	HA-10
Connecting rod	EM-63
Connecting rod bearing clearance	EM-67
Connecting rod bushing clearance	EM-68
Connector inspection	GI-22
Console box - See Instrument panel	BT-28
CONSULT for ABS	BR-51
CONSULT for engine	EC-91
CONSULT for TCS	BR-51
Control valve (A/T)	AT-314
Converter housing installation	AT-286
COOL/F - Wiring diagram	EC-329, 523
Coolant mixture ratio	MA-12
Coolant replacement	MA-14
Cooling circuit (engine)	LC-8
Cooling fan control	EC-520
Cooling fan control system	LC-17
CORNER - Wiring diagram	EL-219
“Crankcase emission control system - See positive crankcase ventilation”	EC-49
Crankshaft	EM-65
Crankshaft position sensor (POS)	EC-356

Crankshaft position sensor (POS) chipping	EC-561
Crankshaft position sensor (REF)	EC-555
Cruise control - See ASCD	EL-268
Cylinder block	EM-60
Cylinder head	EM-39
Cylinder head bolt tightening	EM-49

D

Data link connector for Consult	EC-91
Daytime light system	EL-65, 77
Daytime running light - See Daytime light system	EL-65, 77
DEF - Wiring diagram	EL-190
Detonation sensor - See Knock sensor	EC-351
Diagnosis sensor unit	RS-18
Diagnostic trouble code (DTC) for OBD system	EC-9, 70
Diagnostic trouble code (DTC) inspec- tion priority chart	EC-126
Differential gear (FF A/T)	AT-358
Dimensions	GI-45
D/LOCK - Wiring diagram	EL-310
Dome light - See Interior lamp	EL-125
Door glass	BT-20
Door lock	BT-24
Door mirror	BT-60
Door trim	BT-35
Door, front	BT-19
Door, rear	BT-19
Drive plate runout	EM-68
Drive shaft (front)	AX-9
Dropping resistor (A/T)	AT-168
DTC work support	EC-102
DTRL - Wiring diagram	EL-69, 81

E

ECM input/output signal	EC-145
ECTS - Wiring diagram	EC-186, 203
EGR temperature sensor	EC-569
EGR/TS - Wiring diagram	EC-572
EGRC1 - Wiring diagram	EC-374, 382, 580
Electric sun roof	EL-212
Electrical diagnoses	GI-25
Electrical ignition system	EC-31
Electrical unit	Foldout
Electrical units location	EL-457
EMNT - Wiring diagram	EC-680
Engine compartment	BT-63
Engine control circuit diagram	EC-25
Engine control component parts location	EC-21
Engine control module (ECM)	EC-479
Engine control system diagram and chart	EC-26

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Engine coolant temperature sensor (ECTS).....	EC-184, 201
Engine fail-safe system	EC-127
Engine mounting control (Front)	EC-680
Engine oil filter replacement	MA-18
Engine oil precautions	GI-7
Engine oil replacement	MA-17
Engine outer component parts	EM-9
Engine removal	EM-57
Engine room - See Engine compartment.....	BT-63
Engine serial number	GI-44
EVAP canister.....	EC-34
EVAP canister purge volume control solenoid valve.....	EC-33, 406, 588
EVAP canister vent control valve	EC-412, 600, 620
EVAP control system (small leak) diagnosis	EC-391, 431, 586
EVAP control system pressure sensor.....	EC-419
EVAP control system purge flow monitoring diagnosis.....	EC-608
EVAP vapor lines inspection.....	MA-20
Evaporative emission (EVAP) system.....	EC-33
Exhaust gas recirculation (EGR) valve	EC-370, 578
Exhaust system.....	FE-11
Exhaust system inspection	MA-21
Exterior.....	BT-40

F

Fan control amp.....	HA-68, 74
F/FOG - Wiring diagram	EL-102
Final drive (FF A/T)	AT-358
Finisher, interior - See Trim	BT-32
Finisher, trunk lid.....	BT-39
Floor trim.....	BT-32
Fluid temperature sensor (A/T).....	AT-109
Fluids.....	MA-11
FO2H-L - Wiring diagram	EC-256
FO2H-R - Wiring diagram	EC-255
Fog lamp, front.....	EL-101
Fog lamp, front, removal and installation	BT-13
Forward clutch.....	AT-336
FPCM - Wiring diagram	EC-537
F/PUMP - Wiring diagram	EC-675
Freeze frame data	EC-70
FRO2LH - Wiring diagram	EC-210, 236, 248
FRO2RH - Wiring diagram.....	EC-209, 235, 247
Front axle.....	AX-2
Front bumper	BT-13
Front combination lamp removal and installation	BT-13
Front disc brake	BR-24
Front door	BT-19
Front fog lamp.....	EL-101
Front fog lamp removal and installation	BT-13

Front heated oxygen sensor (HO2S) (Left bank).....	EC-206, 216, 224, 232, 245
Front heated oxygen sensor (HO2S) (Right bank)	EC-206, 216, 224, 232, 245
Front heated oxygen sensor heater (Left bank).....	EC-253
Front heated oxygen sensor heater (Right bank).....	EC-253
Front seat.....	BT-46
Front seat belt	RS-5
Front suspension.....	SU-2
Front washer	EL-181
Front wiper	EL-181
Fuel cut control (at no load & high engine speed).....	EC-33
Fuel gauge	EL-143
Fuel injection system (Left bank).....	EC-305, 313
Fuel injection system (Right bank)	EC-305, 313
Fuel line inspection	MA-16
Fuel precautions	GI-8
Fuel pressure check.....	EC-51
Fuel pressure regulator	EC-52
Fuel pressure release	EC-51
Fuel pump	EC-674
Fuel pump control module	EC-537
Fuel system	FE-5
Fuel tank temperature sensor	EC-320
Fuel tank vacuum relief valve	EC-34
FUELLH - Wiring diagram.....	EC-308, 316
FUELRH - Wiring diagram	EC-307, 315
Fuse	EL-18
Fuse block	Foldout
Fusible link	EL-18

G

Garage jack and safety stand	GI-47
Gauges.....	EL-143
Generator - See Alternator.....	SC-13
Generic scan tool (GST)	EC-105
Glass	BT-20
Grease.....	MA-11
Ground distribution.....	EL-19

H

Harness connector.....	EL-6
Harness connector inspection	GI-22
Harness layout	EL-461
Hazard warning lamp	EL-108
Headlamp.....	EL-34, 48
Headlamp removal and installation	BT-13
Headlining - See Roof trim	BT-37
Heated seat.....	BT-48, EL-261
Heater unit (heater core)	HA-116
Height (Dimensions)	GI-45
HFC134a (R134a) system precaution	HA-2

ALPHABETICAL INDEX

HFC134a (R134a) system service
 procedure.....HA-107
 HFC134a (R134a) system service toolsHA-11
 HFC134a system service equipment
 precautionHA-7
 High clutch.....AT-331
 H/LAMP - Wiring diagram.....EL-38, 53
 Hood.....BT-13
 HornEL-186
 HORN - Wiring diagram.....EL-186
 How to erase DTC for OBD system.....EC-82
 HSEAT - Wiring diagram.....EL-261

I

IACV-AAC valveEC-458
 IATS - Wiring diagramEC-181
 Identification plate.....GI-44
 Idle air control valve (IACV)EC-458
 Idle mixture ratio.....EC-56
 Idle speed.....EC-56
 IGN/SG - Wiring diagramEC-546
 Ignition control systemEC-544
 Ignition timingEC-56
 ILL - Wiring diagram.....EL-115, 119
 IlluminationEL-113, 117
 I/MIRR - Wiring diagramEL-218
 In vehicle sensorHA-97
 INFINITI COMMUNICATOR.....EL-421
 Infiniti communicator (IVCS)EL-421
 INJECT - Wiring diagramEC-665
 Injector.....EC-664
 Injector removal and installationEC-53
 Instrument panelBT-28
 Intake air temperature sensor.....EC-179
 Intake door control linkage adjustmentHA-65
 Intake door motorHA-63
 Intake manifold.....EM-11
 Intake sensor.....HA-104
 Integrated homelink transmitterEL-398
 InteriorBT-32
 Interior lampEL-125
 Interior lamp on-off control.....EL-126
 IVCS - Wiring diagram.....EL-430
 IVIS (Infiniti vehicle immobilizer
 system).....EL-401
 IVIS (Infiniti vehicle immobilizer sys-
 tem) precautionsGI-3

J

Jacking points.....GI-47
 Joint connector (J/C)Foldout
 Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-re-
 mote control system.....EL-326
 Knock sensor (KS)EC-351
 Knuckle spindleAX-5
 KS - Wiring diagram.....EC-352

L

Length (Dimensions)GI-45
 License lamp.....EL-89
 Lifting pointsGI-48
 Line pressure solenoid valveAT-168
 Line pressure test (A/T)AT-65
 Liquid gasket applicationEM-3
 LOAD - Wiring diagram.....EC-693
 Location of electrical unitsEL-457
 Lock, doorBT-24
 Low and reverse brakeAT-341
 Lubricant (R134a) A/C.....HA-109
 Lubricants.....MA-11
 Lubrication circuit (engine)LC-3
 Lubrication-locks, hinges and hood
 latchesMA-26

M

MAFS - Wiring diagram.....EC-169
 Magnet clutchHA-75, 112
 MAIN - Wiring diagram.....EC-158
 Maintenance (engine)MA-13
 MAJOR OVERHALL.....AT-288
 Malfunction indicator lamp (MIL)EC-84
 Mass air flow sensor (MAFS).....EC-165
 Master cylinder (brake)BR-15
 MeterEL-143
 METER - Wiring diagram.....EL-148
 MIL & Data link connectors circuitEC-699
 MIL/DL - Wiring diagramEC-699
 MIRROR - Wiring diagram.....EL-217
 Mirror defoggerEL-189
 Mirror, door.....BT-60
 MisfireEC-343
 Mode door control linkage adjustment.....HA-58
 Mode door motor.....HA-53
 Model variationGI-42
 Molding - See ExteriorBT-40
 MULTI - Wiring diagram.....EL-330
 Multi-remote control system.....EL-326
 Multiport fuel injection (MFI) systemEC-29
 Multiport fuel injection precautions.....GI-6

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

N

NATS (Nissan anti-theft system) precautions	GI-3
NATS - Wiring diagram	EL-403
NVH troubleshooting (AX)	AX-3
NVH troubleshooting (BR)	BR-7
NVH troubleshooting (ST)	ST-5
NVH troubleshooting (SU)	SU-18
NVIS (Nissan vehicle immobilizer system)	EL-401

O

Oil change (capacity)	MA-11
Oil pan (engine)	EM-13
Oil pressure (engine)	LC-4
Oil pump (A/T)	AT-310
Oil pump (engine)	LC-4
Oil pump regulator valve (engine)	LC-6
Oil seal replacement (engine)	EM-36
On board diagnostic system	EC-69
ORVR (On-board Refueling Vapor Recovery)	EC-39
Overdrive control switch	AT-262
Overrun clutch	AT-336
Overrun clutch solenoid valve	AT-193

P

P/ANT - Wiring diagram	EL-209
Park/Neutral position switch	EC-653
Park/neutral position switch (A/T)	AT-103
Parking brake control	BR-37
Parking lamp	EL-89
PCV (positive crankcase ventilation)	EC-49
PGC/V - Wiring diagram	EC-408, 591
PHASE - Wiring diagram	EC-364
PHONE - Wiring diagram	EL-220
Piston assembly	EM-69
Piston pin inspection	EM-61
Piston ring inspection	EM-62
Piston to bore clearance	EM-64
PNP/SW - Wiring diagram	EC-655
POS - Wiring diagram	EC-561
POWER - Wiring diagram	EL-11
Power antenna	EL-208
Power door lock	EL-308
Power door mirror	EL-217
Power seat	EL-257
Power steering fluid level	MA-25, ST-7
Power steering gear	ST-15
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-684
Power steering oil pump	ST-25
Power steering system bleeding	ST-7
Power supply routing	EL-10

Power transistor & ignition coil	EC-544
Power window	EL-293
PRE/SE - Wiring diagram	EC-421
Precautions (General)	GI-4
Pressure test (A/T)	AT-65
PST/SW - Wiring diagram	EC-685

R

Radiator	LC-16, 17
Radio - See Audio	EL-200
Rear air spoiler	BT-40
Rear axle	AX-17
Rear axle (disc brake type)	AX-19
Rear bumper	BT-16
Rear combination lamp removal and installation	BT-40
Rear disc brake	BR-28
Rear door	BT-19
Rear heated oxygen sensor (HO2S)	EC-260, 270, 280, 290
Rear heated oxygen sensor (HO2S) heater	EC-298
Rear seat	BT-49
Rear seat belt	RS-7
Rear suspension	SU-18
Rear window	BT-58
Rear window defogger	EL-189
REF - Wiring diagram	EC-555
Refrigerant pressure sensor	HA-80
Refrigerant connection precaution	HA-3
Refrigerant discharging evacuating charging	HA-107
Refrigerant general precaution	HA-3
Refrigerant lines	HA-118
Refrigerant pressure sensor	EC-689
Refrigeration cycle	HA-14
Removal and installation (A/T)	AT-285
Reverse clutch	AT-328
Revolution sensor (A/T)	AT-115
RO2H-L - Wiring diagram	EC-301
RO2H-R - Wiring diagram	EC-300
Road wheel size	GI-45
Roof trim	BT-37
Room lamp - See Interior lamp	EL-125
ROOM/L - Wiring diagram	EL-129
RRO2LH - Wiring diagram	EC-264, 274, 284, 293
RRO2RH - Wiring diagram	EC-263, 273, 283, 292

S

SAE J1930 terminology list	GI-51
Seal - See Exterior	BT-40
SEAT - Wiring diagram	EL-258
Seat belt inspection	MA-26, RS-9
Seat belt pre-tensioner	RS-3
Seat belt pre-tensioner disposal	RS-25
Seat belt, front	RS-5

ALPHABETICAL INDEX

Seat belt, rear.....RS-7
 Seat, frontBT-46
 Seat, rearBT-49
 SHADE - Wiring diagram.....EL-264
 SHIFT - Wiring diagramAT-273
 Shift lock systemAT-272
 Shift schedule.....AT-384
 Shift solenoid valve A (A/T).....AT-174
 Shift solenoid valve B (A/T)AT-179
 Shock absorber (front).....SU-11
 Shock absorber (rear)SU-25
 Side air bagRS-24
 Side trim.....BT-32
 Smart entrance control unitEL-389
 SMJ (super multiple junction).....Foldout
 Spare tire sizeGI-45
 Spark plug replacement.....MA-18
 Speedometer.....EL-143
 Spiral cable.....RS-20
 Spring (Wheelarch) heightSU-6
 SROOF - Wiring diagramEL-213
 SRS - See Supplemental Restraint
 System.....RS-13
 SRS - Wiring diagramRS-38
 S/SIG - Wiring diagramEC-671
 Stabilizer bar (front).....SU-12
 Stall test (A/T)AT-61
 Standardized relayEL-8
 START - Wiring diagramSC-7
 Start signalEC-670
 Starter.....SC-8
 Starting system.....SC-6
 Steering gear and linkage inspectionMA-25
 Steering linkageST-15
 Steering switch.....EL-33
 Steering wheel and columnST-10
 Steering wheel playST-6
 Steering wheel turning force.....ST-8
 Stop lamp.....EL-98
 STOP/L - Wiring diagram.....EL-98
 Strut (front)SU-10
 Strut (rear)SU-23
 Sun roof, electric.....EL-212
 Sunload sensorHA-100
 Sunroof.....BT-50
 Supplemental Restraint System.....RS-13
 Supplemental restraint system - Wiring
 diagram.....RS-38
 S/VCSW - Wiring diagramEC-509
 Swirl control valve control solenoid
 valveEC-483
 Swirl control valve control vacuum
 check switchEC-509
 SWL/V - Wiring diagramEC-483
 Symbols and abbreviationsGI-9
 Symptom matrix chartEC-135
 System readiness test (SRT) code.....EC-71

T

TachometerEL-143 GI
 Tail lamp.....EL-89
 TAIL/L - Wiring diagramEL-91 MA
 TCM circuit diagramAT-16
 TCM inspection tableAT-96
 TCS (traction control system)BR-40 EM
 TCS - Wiring diagramBR-43
 TCS component parts and connector
 locationBR-42 LC
 TCS control unitBR-41
 TCS self-diagnosisBR-49
 TCS system componentsBR-40 EC
 TCS wheel sensorsBR-42
 TFTS - Wiring diagram.....EC-322
 THEFT - Wiring diagram.....EL-362 FE
 Theft warning system.....EL-356
 Thermostat.....LC-14
 Three way catalyst function (Left bank).....EC-386 AT
 Three way catalyst function (Right
 bank)EC-386 AX
 Three way catalyst precautions.....GI-6
 Throttle bodies.....EM-11
 Throttle position sensor (TPS)EC-189 SU
 Throttle position sensor adjustment.....EC-111
 Throttle position switchEC-467, AT-184, 262
 Tie-rodST-15 BR
 Tie-rod ball joints.....ST-19
 Tightening torque of standard bolts.....GI-50
 Timing chain.....EM-20 ST
 Tire rotationMA-24
 Tire sizeGI-45
 TLID - Wiring diagramEL-219 RS
 Torque converter installation.....AT-286, 377
 Torque convertor clutch solenoid valve.....AT-153
 Tow truck towing.....GI-49 BT
 TP/SW - Wiring diagramEC-470
 TPS - Wiring diagram.....EC-194 HA
 Traction control system - See TCS.....BR-40
 Traction control system - Wiring
 diagram.....BR-43 SC
 Transaxle serial numberGI-44
 TRANSMT - Wiring diagram.....EL-398
 Tread-FR&RR (Dimensions).....GI-45 EL
 TrimBT-32
 Trouble diagnosesGI-35
 Trunk lidBT-16
 Trunk lid finisher.....BT-39
 Trunk lid opener - See Trunk lid.....BT-16
 Trunk lid trimBT-39
 Trunk room trim.....BT-39
 TURN - Wiring diagram.....EL-110
 Turn signal lampEL-108
 Two trip detection logicEC-69
 Two-pole liftGI-48

U

Under bodyBT-65

V

Vacuum cut valveEC-33
 Vacuum cut valve bypass valve.....EC-33, 632, 638
 Vacuum hose (brake system).....BR-23
 Vacuum hose drawing (Engine control)EC-27
 Valve clearance.....EM-52
 Valve guide.....EM-44
 Valve seat.....EM-45
 Valve spring.....EM-46
 Vehicle recovery (freeing a stuck
 vehicle).....GI-49
 Vehicle speed sensor (VSS)EC-454
 VENT/V - Wiring diagramEC-414, 602, 623
 VIASEC-658
 VIAS - Wiring diagramEC-658
 Viscosity number (SAE)MA-11
 Viscous coupling (FF A/T).....AT-358
 VSS - Wiring diagramEC-456

W

WARN - Wiring diagramEL-160

Warning chimeEL-167
 Warning lampsEL-159
 Washer, front.....EL-181
 Water pumpLC-10
 Water temperature gaugeEL-143
 Weatherstrip - See ExteriorBT-40
 Wheel alignment (front).....SU-6
 Wheel alignment (rear).....SU-20
 Wheel balanceMA-22
 Wheel bearing (front).....AX-3
 Wheel bearing (rear)AX-18
 Wheel hub (front).....AX-5
 Wheel hub (rear)AX-19
 Wheel sensors (TCS).....BR-42
 Wheelarch heightSU-6
 Wheelbase (Dimensions)GI-45
 Wide open & closed throttle position
 switchEC-189
 Width (Dimensions)GI-45
 WINDOW - Wiring diagramEL-297
 Window, rearBT-58
 Windshield.....BT-58
 WIPER - Wiring diagramEL-183
 Wiper, front.....EL-181
 Wiring Diagram (Cell code) list.....EL-485
 Wiring diagram - AT - LAN.....AT-212
 Wiring diagramsGI-11
 Wrist pin - See Piston pin inspection.....EM-61