

# ALPHABETICAL INDEX

## SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS sensor rotor .....AX-19  
 Absolute pressure sensor .....EC-197  
 A/C air flow .....HA-25  
 A/C component layout .....HA-19  
 A/C compressor clutch removal and  
   installation .....HA-112  
 A/C compressor precaution .....HA-7  
 A/C compressor special service tool .....HA-10  
 A/C control operation (auto A/C) .....HA-23  
 A/C diagnostic work flow (auto A/C) .....HA-46  
 A/C HFC134a (R134a) system  
   precaution .....HA-2  
 A/C HFC134a (R134a) system service  
   procedure .....HA-107  
 A/C HFC134a (R134a) system service  
   tools .....HA-11  
 A/C HFC134a system service equip-  
   ment precaution .....HA-7  
 A/C lubricant (R134a) .....HA-109  
 A/C operational check .....HA-47  
 A/C performance chart .....HA-84  
 A/C performance test diagnoses .....HA-82  
 A/C relay .....HA-80  
 A/C self-diagnoses (auto A/C) .....HA-36  
 A/C service data specification .....HA-124  
 A/C system description (auto A/C) .....HA-23  
 A/C trouble diagnoses (auto A/C) .....HA-27  
 A/C, A - Wiring diagram .....HA-30  
 Accelerator control system .....FE-3  
 Accelerator pedal position (APP)  
   sensor .....EC-643, 650, 662  
 Air bag .....RS-14  
 Air bag disposal .....RS-26  
 Air bag precautions .....GI-3  
 Air bleeding for brake system .....BR-8  
 Air cleaner filter replacement .....MA-16  
 Air conditioner cut control .....EC-36  
 Air flow meter - See Mass air flow  
   sensor .....EC-184, 191, 445  
 Air mix door control linkage adjustment .....HA-62  
 Air mix. door motor .....HA-60, 106  
 Air spoiler, rear .....BT-41  
 Alternator .....SC-29  
 Ambient sensor .....HA-93  
 Angular tightening application .....EM-3  
 Antenna - See Power antenna .....EL-205  
 ASCD (automatic speed control device) .....EL-261  
 A/T - Wiring diagram - AT - FTS .....AT-117  
 A/T - Wiring diagram - AT - MAIN .....AT-102  
 A/T - Wiring diagram - AT - PNP/SW .....AT-111  
 A/T - Wiring diagram - AT - VSS A/T .....AT-123, 215  
 A/T fluid temperature sensor .....AT-115  
 A/T IND - Wiring diagram .....EL-159  
 AT indicator lamp .....EL-159  
 A/T self-diagnoses .....AT-42, 53  
 A/T shift lock system .....AT-277  
 A/T shift lock system - Wiring diagram .....AT-278

A/T trouble diagnoses .....AT-59  
 A/T Wiring diagram - AT - ENG SS .....AT-128  
 A/T Wiring diagram AT - 1ST .....AT-134  
 A/T Wiring diagram AT - 2ND .....AT-140  
 A/T Wiring diagram AT - 3RD .....AT-146  
 A/T Wiring diagram AT - 4TH .....AT-153  
 A/T Wiring diagram AT - BA/FTS .....AT-203  
 A/T Wiring diagram AT - CAN .....AT-107  
 A/T Wiring diagram AT - LPSV .....AT-175  
 A/T Wiring diagram AT - NONDTC .....AT-222  
 A/T Wiring diagram AT - OVRCSV .....AT-198  
 A/T Wiring diagram AT - SSV/A .....AT-181  
 A/T Wiring diagram AT - SSV/B .....AT-186  
 A/T Wiring diagram AT - TCCSIG .....AT-166  
 A/T Wiring diagram AT - TCV .....AT-160  
 A/T Wiring diagram AT - TPS .....AT-192  
 A/T Wiring diagram AT - VSSMTR .....AT-210  
 Audio .....EL-195  
 AUDIO - Wiring diagram .....EL-197  
 Audio and A/C control removal and  
   installation - See Instrument panel .....BT-29  
 AUT/DP - Wiring diagram .....EL-222  
 Auto air conditioner - Wiring diagram .....HA-30  
 Auto anti-dazzling inside mirror .....EL-214  
 Automatic amplifier .....HA-34, 50  
 Automatic drive positioner .....EL-217  
 Automatic speed control system - See  
   ASCD .....EL-261  
 Automatic transmission fluid  
   replacement .....MA-21  
 Automatic transmission number .....GI-46

## B

Back-up lamp .....EL-76  
 BACK/L - Wiring diagram .....EL-76  
 Ball joint (front) .....SU-13  
 Basic inspection .....EC-119  
 Battery .....SC-4  
 Battery/Starting/Charging System  
   Tester .....SC-7, 12, 22  
 B/COMP - Wiring diagram .....EL-143  
 Blower and cooling unit .....HA-117  
 Blower motor .....HA-66  
 Board computer .....EL-141  
 Board-on lift .....GI-48  
 Body alignment .....BT-63  
 Brake booster .....BR-19  
 Brake fluid change .....BR-7  
 Brake fluid level .....MA-23  
 Brake fluid level and line check .....BR-7  
 Brake hydraulic line .....BR-9  
 Brake inspection .....MA-23  
 Brake lines and cables inspection .....MA-23  
 Brake master cylinder .....BR-13, 16  
 Brake pedal .....BR-11  
 Brake switch .....EC-637  
 BRK/SW - Wiring diagram .....EC-638  
 Bulb specifications .....EL-506  
 Bumper, front .....BT-13



# ALPHABETICAL INDEX

Engine control system diagram and chart.....	EC-30
Engine coolant temperature sensor (ECTS).....	EC-203, 214
Engine fail-safe system.....	EC-125
Engine mounting control (Front).....	EC-705
Engine oil filter replacement.....	MA-17
Engine oil precautions.....	GI-7
Engine oil replacement.....	MA-16
Engine outer component parts.....	EM-9
Engine removal.....	EM-69
Engine room - See Engine compartment.....	BT-64
Engine serial number.....	GI-46
EVAP canister.....	EC-38
EVAP canister purge volume control solenoid valve.....	EC-37, 356, 538
EVAP canister vent control valve.....	EC-363, 551, 559
EVAP control system (small leak) diagnosis.....	EC-341, 397, 568
EVAP control system pressure sensor.....	EC-370, 376
EVAP control system purge flow monitoring diagnosis.....	EC-331
EVAP vapor lines inspection.....	MA-19
Evaporative emission (EVAP) system.....	EC-37
Exhaust system.....	FE-9
Exhaust system inspection.....	MA-20
Exterior.....	BT-41

## F

Fan control amp.....	HA-68
F/FOG - Wiring diagram.....	EL-78
Final drive (FF A/T).....	AT-359
Finisher, interior - See Trim.....	BT-33
Finisher, trunk lid.....	BT-40
F/LID - Wiring diagram.....	EL-215
Floor trim.....	BT-33
FLS1 - Wiring diagram.....	EC-413
FLS2 - Wiring diagram.....	EC-419
Fluid temperature sensor (A/T).....	AT-115
Fluids.....	MA-11
Fog lamp, front.....	EL-77
Fog lamp, front, removal and installation.....	BT-13
Forward clutch.....	AT-337
F/PUMP - Wiring diagram.....	EC-699
Freeze frame data.....	EC-77
Front axle.....	AX-2
Front bumper.....	BT-13
Front combination lamp removal and installation.....	BT-13
Front disc brake.....	BR-22
Front door.....	BT-20
Front fog lamp.....	EL-77
Front fog lamp removal and installation.....	BT-13
Front passenger air bag.....	RS-23
Front seat.....	BT-47

Front seat belt.....	RS-5
Front suspension.....	SU-2
Front washer.....	EL-176
Front wiper.....	EL-176
FTTS - Wiring diagram.....	EC-287
Fuel cut control (at no load & high engine speed).....	EC-37
Fuel gauge.....	EL-125
Fuel injection system (Bank 1).....	EC-267, 275
Fuel injection system (Bank 2).....	EC-267, 275
Fuel level sensor.....	EC-412, 416
Fuel lid opener, electric.....	EL-215
Fuel line inspection.....	MA-15
Fuel precautions.....	GI-8
Fuel pressure check.....	EC-56
Fuel pressure release.....	EC-56
Fuel pump.....	EC-698
Fuel system.....	FE-4
Fuel tank temperature sensor.....	EC-282, 285
Fuel tank vacuum relief valve.....	EC-38
FUELB1 - Wiring diagram.....	EC-269, 277
FUELB2 - Wiring diagram.....	EC-270, 278
Fuse.....	EL-19
Fuse block.....	Foldout
Fusible link.....	EL-19

## G

Garage jack and safety stand.....	GI-49
Gauges.....	EL-125
Generator - See Alternator.....	SC-29
Generic scan tool (GST).....	EC-113
Glass.....	BT-21
Grease.....	MA-11
Ground distribution.....	EL-20

## H

Harness connector.....	EL-7
Harness connector inspection.....	GI-21
Harness layout.....	EL-483
Hazard warning lamp.....	EL-82
Headlamp.....	EL-38
Headlamp removal and installation.....	BT-13
Headlining - See Roof trim.....	BT-38
Heated oxygen sensor 1 (bank 1).....	EC-221, 229, 241, 472, 479
Heated oxygen sensor 1 (bank 2).....	EC-221, 229, 241, 472, 479
Heated oxygen sensor 1 heater (bank 1).....	EC-171
Heated oxygen sensor 1 heater (bank 2).....	EC-171
Heated oxygen sensor 2 (bank 1).....	EC-250, 258, 486, 495
Heated oxygen sensor 2 (bank 2).....	EC-250, 258, 486, 495

# ALPHABETICAL INDEX

Heated oxygen sensor 2 heater (bank 1).....	EC-178
Heated oxygen sensor 2 heater (bank 2).....	EC-178
Heated seat.....	BT-49, EL-252
Heated steering.....	EL-35
Heater unit (heater core) .....	HA-116
Height (Dimensions) .....	GI-47
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service procedure.....	HA-107
HFC134a (R134a) system service tools .....	HA-11
HFC134a system service equipment precaution .....	HA-7
High clutch.....	AT-332
H/LAMP - Wiring diagram.....	EL-42
Homelink universal transceiver .....	EL-371
Hood.....	BT-13
Horn .....	EL-181
HORN - Wiring diagram.....	EL-181
How to erase DTC for OBD system.....	EC-89
HSEAT - Wiring diagram.....	EL-252
H/STRG - Wiring diagram.....	EL-37

## I

IATS - Wiring diagram.....	EC-200
Identification plate.....	GI-46
Idle mixture ratio.....	EC-59
Idle speed.....	EC-59
Ignition control system .....	EC-677
Ignition timing .....	EC-59
IGNSYS - Wiring diagram .....	EC-678
ILL - Wiring diagram .....	EL-94
Illumination .....	EL-92
I/MIRR - Wiring diagram .....	EL-214
In vehicle sensor .....	HA-97
In-cabin Microfilter .....	HA-123
INJECT - Wiring diagram .....	EC-689
Injector.....	EC-688
Injector removal and installation .....	EC-57
Instrument panel .....	BT-29
INT/L - Wiring diagram.....	EL-104
Intake air temperature sensor.....	EC-199, 217
Intake door control linkage adjustment .....	HA-65
Intake door motor .....	HA-63
Intake manifold.....	EM-11
Intake sensor.....	HA-104
Integrated homelink transmitter .....	EL-371
Interior .....	BT-33
Interior lamp .....	EL-100
Interior lamp on-off control.....	EL-102
IVIS (Infiniti vehicle immobilizer system).....	EL-375

## J

Jacking points.....	GI-49
---------------------	-------

Joint connector (J/C) .....	Foldout
Junction box (J/B).....	Foldout

## K

KEYLES - Wiring diagram .....	EL-302
Keyless entry system - See Multi-re- mote control system.....	EL-297
Knock sensor (KS) .....	EC-305
Knuckle spindle .....	AX-5
KS - Wiring diagram.....	EC-306

## L

Length (Dimensions) .....	GI-47
License lamp.....	EL-65
Lifting points .....	GI-50
Line pressure solenoid valve .....	AT-173
Line pressure test (A/T) .....	AT-69
Liquid gasket application .....	EM-3
LOAD - Wiring diagram.....	EC-724
Location of electrical units .....	EL-478
Lock, door .....	BT-25
Low and reverse brake .....	AT-342
Lubricant (R134a) A/C.....	HA-109
Lubricants.....	MA-11
Lubrication circuit (engine) .....	LC-4
Lubrication-locks, hinges and hood latches .....	MA-25

## M

MAFS - Wiring diagram .....	EC-187, 193, 447
Magnet clutch .....	HA-75, 112
MAIN - Wiring diagram.....	EC-152
Maintenance (engine) .....	MA-13
MAJOR OVERHALL.....	AT-289
Malfunction indicator lamp (MIL) .....	EC-437
Mass air flow sensor (MAFS) .....	EC-184, 191, 445
Master cylinder (brake) .....	BR-13, 16
Meter .....	EL-125
METER - Wiring diagram.....	EL-129
MIL - Wiring diagram.....	EC-438
MIRROR - Wiring diagram.....	EL-213
Mirror defogger .....	EL-184
Mirror, door.....	BT-61
Misfire .....	EC-296
Mode door control linkage adjustment .....	HA-58
Mode door motor .....	HA-53
Model variation .....	GI-44
Molding - See Exterior .....	BT-41
MULTI - Wiring diagram.....	EL-302
Multi-remote control system.....	EL-297
Multiport fuel injection (MFI) system .....	EC-33
Multiport fuel injection precautions .....	GI-6

GI

MA

EM

LC

EC

FE

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

**IDX**

# ALPHABETICAL INDEX

## N

NATS (Nissan anti-theft system) precautions .....	GI-4
NATS - Wiring diagram .....	EL-377
NAVI - wiring diagram .....	EL-405
Navigation System .....	EL-395
NVH troubleshooting (AX) .....	AX-3
NVH troubleshooting (BR) .....	BR-6
NVH troubleshooting (ST) .....	ST-5
NVH troubleshooting (SU) .....	SU-4
NVIS (Nissan vehicle immobilizer system) .....	EL-375
NVIS (Nissan vehicle immobilizer system) precautions .....	GI-4

## O

O2H1B1 - Wiring diagram .....	EC-173
O2H1B2 - Wiring diagram .....	EC-174
O2H2B1 - Wiring diagram .....	EC-180
O2H2B2 - Wiring diagram .....	EC-181
O2S1B1 - Wiring diagram .....	EC-223, 232, 244
O2S1B2 - Wiring diagram .....	EC-224, 233, 245
O2S2B1 - Wiring diagram .....	EC-252, 261, 489, 498
O2S2B2 - Wiring diagram .....	EC-253, 262, 490, 499
Oil change (capacity) .....	MA-11
Oil cooler (engine) .....	LC-9
Oil pan (engine) .....	EM-14
Oil pressure (engine) .....	LC-6
Oil pump (A/T) .....	AT-311
Oil pump (engine) .....	LC-6
Oil pump regulator valve (engine) .....	LC-8
Oil seal replacement (engine) .....	EM-47
On board diagnostic system .....	EC-75
ORVR (On-board Refueling Vapor Recovery) .....	EC-43
Overheat .....	EC-510
Overrun clutch .....	AT-337
Overrun clutch solenoid valve .....	AT-196

## P

P/ANT - Wiring diagram .....	EL-205
Park/Neutral position switch .....	EC-627
Park/neutral position switch (A/T) .....	AT-109
Parking brake control .....	BR-34
Parking lamp .....	EL-65
PCV (positive crankcase ventilation) .....	EC-52
PGC/V - Wiring diagram .....	EC-358, 541
PHASE - Wiring diagram .....	EC-319
PHONE - Wiring diagram .....	EL-216
Piston assembly .....	EM-82
Piston pin inspection .....	EM-75
Piston ring inspection .....	EM-75
Piston to bore clearance .....	EM-77
PNP/SW - Wiring diagram .....	EC-629

POS - Wiring diagram .....	EC-312
POWER - Wiring diagram .....	EL-12
Power antenna .....	EL-205
Power door lock .....	EL-280
Power door mirror .....	EL-213
Power seat .....	EL-251
Power steering fluid level .....	MA-24, ST-7
Power steering gear .....	ST-15
Power steering hydraulic pressure .....	ST-9
Power steering oil pump .....	ST-25
Power steering pressure (PSP) sensor .....	EC-430
Power steering system bleeding .....	ST-7
Power supply routing .....	EL-11
Power transistor & ignition coil .....	EC-677
Power window .....	EL-262
PRE/SE - Wiring diagram .....	EC-372, 378
Precautions (General) .....	GI-4
Pressure test (A/T) .....	AT-69
PS/SEN - Wiring diagram .....	EC-431

## R

Radiator .....	LC-20, 21
Radio - See Audio .....	EL-195
Rear air spoiler .....	BT-41
Rear axle .....	AX-17
Rear axle (disc brake type) .....	AX-19
Rear bumper .....	BT-16
Rear combination lamp removal and installation .....	BT-41
Rear disc brake .....	BR-26
Rear door .....	BT-20
Rear seat .....	BT-50
Rear seat belt .....	RS-7
Rear sunshade .....	EL-255
Rear suspension .....	SU-17
Rear window .....	BT-59
Rear window defogger .....	EL-184
Refrigerant pressure sensor .....	HA-80
Refrigerant connection precaution .....	HA-4
Refrigerant discharging evacuating charging .....	HA-107
Refrigerant general precaution .....	HA-3
Refrigerant lines .....	HA-118
Refrigerant pressure sensor .....	EC-709
Refrigeration cycle .....	HA-14
Remote keyless entry system .....	EL-297
Removal and installation (A/T) .....	AT-286
Reverse clutch .....	AT-329
Revolution sensor (A/T) .....	AT-121
Road wheel size .....	GI-47
Roof trim .....	BT-38
Room lamp - See Interior lamp .....	EL-100
RP/SEN - Wiring diagram .....	EC-710

## S

SAE J1930 terminology list .....	GI-54
----------------------------------	-------

# ALPHABETICAL INDEX

Seal - See Exterior .....	BT-41
SEAT - Wiring diagram .....	EL-251
Seat belt inspection .....	MA-26, RS-9
Seat belt pre-tensioner .....	RS-3
Seat belt pre-tensioner disposal .....	RS-26
Seat belt, front .....	RS-5
Seat belt, rear .....	RS-7
Seat, front .....	BT-47
Seat, rear .....	BT-50
SHADE - Wiring diagram .....	EL-257
SHIFT - Wiring diagram .....	AT-278
Shift lock system .....	AT-277
Shift schedule .....	AT-382
Shift solenoid valve A (A/T) .....	AT-179
Shift solenoid valve B (A/T) .....	AT-184
Shock absorber (front) .....	SU-10
Shock absorber (rear) .....	SU-23
Side air bag .....	RS-25
Side trim .....	BT-33
Smart entrance control unit .....	EL-361
SMJ (super multiple junction) .....	Foldout
Spare tire size .....	GI-47
Spark plug replacement .....	MA-17
Speedometer .....	EL-125
Spiral cable .....	RS-21
Spot lamp .....	EL-100
Spring (Wheelarch) height .....	SU-6
SROOF - Wiring diagram .....	EL-209
SRS - See Supplemental Restraint System .....	RS-14
SRS - Wiring diagram .....	RS-39
S/SIG - Wiring diagram .....	EC-695
Stabilizer bar (front) .....	SU-11
Stall test (A/T) .....	AT-65
Standardized relay .....	EL-9
START - Wiring diagram .....	SC-11
Start signal .....	EC-694
Starter .....	SC-18
Starting system .....	SC-10
Steering gear and linkage inspection .....	MA-24
Steering linkage .....	ST-15
Steering switch .....	EL-34
Steering wheel and column .....	ST-10
Steering wheel play .....	ST-6
Steering wheel turning force .....	ST-8
Step lamp .....	EL-100
STEP/L - Wiring diagram .....	EL-104
Stop lamp .....	EL-74
STOP/L - Wiring diagram .....	EL-74
Strut (front) .....	SU-9
Strut (rear) .....	SU-21
Sunload sensor .....	HA-100
Sunroof .....	BT-51
Sunroof, electric .....	EL-208
Supplemental Restraint System .....	RS-14
Supplemental restraint system - Wiring diagram .....	RS-39
Symbols and abbreviations .....	GI-10
Symptom matrix chart .....	EC-126
System readiness test (SRT) code .....	EC-77

T

Tachometer .....	EL-125	GI
Tail lamp .....	EL-65	
TAIL/L - Wiring diagram .....	EL-68	
TCM circuit diagram .....	AT-16	MA
TCM inspection table .....	AT-99	
TCS (traction control system) .....	BR-36	EM
TCS - Wiring diagram .....	BR-41	
TCS component parts and connector location .....	BR-40	LC
TCS control unit .....	BR-38	
TCS system components .....	BR-37	
TCS trouble diagnoses .....	BR-54, 132	EC
TCS wheel sensors .....	BR-40	
Telephone .....	EL-216	
THEFT - Wiring diagram .....	EL-336	FE
Theft warning system .....	EL-328	
Thermometer .....	EL-147	
Thermostat .....	LC-18	AT
Three way catalyst precautions .....	GI-6	
Throttle body .....	EM-11	AX
Throttle control motor .....	EC-467	
Throttle control motor relay .....	EC-461	
Throttle position sensor (TPS) .....	EC-208, 290, 528, 530, 656	SU
Throttle position switch .....	AT-189	
Tie-rod .....	ST-15	BR
Tie-rod ball joints .....	ST-19	
Tightening torque of standard bolts .....	GI-52	
Timing chain .....	EM-29	ST
Tire rotation .....	MA-23	
Tire size .....	GI-47	
TLID - Wiring diagram .....	EL-215	RS
Torque converter clutch solenoid valve .....	AT-158	
Torque converter installation .....	AT-287, 376	
Tow truck towing .....	GI-51	BT
Traction control system - See TCS .....	BR-36	
Traction control system - Wiring diagram .....	BR-41	HA
TRANSMT - Wiring diagram .....	EL-371	
Tread-FR&RR (Dimensions) .....	GI-47	SC
Trim .....	BT-33	
TRNSCV - Wiring diagram .....	EL-371	
Trouble diagnoses .....	GI-35	EL
Trunk lid .....	BT-16	
Trunk lid finisher .....	BT-40	
Trunk lid opener - See Trunk lid .....	BT-16	
Trunk lid opener, electric .....	EL-215	
Trunk lid trim .....	BT-40	
Trunk room lamp .....	EL-100	
Trunk room trim .....	BT-40	
Turbine revolution sensor .....	AT-213	
TURN - Wiring diagram .....	EL-84	
Turn signal lamp .....	EL-82	
Two trip detection logic .....	EC-75	
Two-pole lift .....	GI-50	

# ALPHABETICAL INDEX

## U

Under body .....BT-66

## V

Vacuum cut valve .....EC-37  
Vacuum cut valve bypass valve.....EC-37, 587, 593  
Vacuum hose (brake system).....BR-21  
Vacuum hose drawing (Engine control) .....EC-31  
Valve clearance.....EM-66  
Valve guide.....EM-57  
Valve seat.....EM-58  
Valve spring.....EM-59  
Vanity mirror lamp .....EL-100  
VDC - Wiring diagram .....BR-105  
Vehicle recovery (freeing a stuck  
vehicle).....GI-51  
Vehicle security (theft warning) system .....EL-328  
Vehicle speed sensor (VSS) .....EC-422  
VEHSEC - Wiring Diagram.....EL-336  
VENT/V - Wiring diagram .....EC-365, 553, 562  
VIAS .....EC-632, 669  
VIAS - Wiring diagram .....EC-671  
Viscosity number (SAE) .....MA-11  
VSS - Wiring diagram .....EC-424

## W

WARN - Wiring diagram .....EL-151

Warning chime .....EL-161  
Warning lamps .....EL-150  
Washer, front.....EL-176  
Water pump .....LC-14  
Water temperature gauge .....EL-125  
Weatherstrip - See Exterior .....BT-41  
Wheel alignment (front).....SU-6  
Wheel alignment (rear).....SU-19  
Wheel balance .....MA-21  
Wheel bearing (front).....AX-4  
Wheel bearing (rear) .....AX-18  
Wheel hub (front).....AX-5  
Wheel hub (rear) .....AX-19  
Wheel sensor (VDC) .....BR-172  
Wheel sensors (TCS).....BR-172  
Wheelarch height .....SU-6  
Wheelbase (Dimensions) .....GI-47  
Width (Dimensions) .....GI-47  
WINDOW - Wiring diagram .....EL-266  
Window, rear .....BT-59  
Windshield.....BT-59  
WIPER - Wiring diagram .....EL-178  
Wiper, front.....EL-176  
Wiring Diagram (Cell code) list.....EL-507  
Wiring diagrams .....GI-11  
Wrist pin - See Piston pin inspection.....EM-75