

SECTION **EXT**
EXTERIOR

A
B
C
D
E
F
G
H
I
J
EXT
L
M
N
O
P

CONTENTS

PRECAUTION	3	FENDER PROTECTOR	27
PRECAUTIONS	3	FENDER PROTECTOR	27
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	FENDER PROTECTOR : Exploded View	27
Precaution for Procedure without Cowl Top Cover.....	3	FENDER PROTECTOR : Removal and Installation	27
Precaution for Work	3	REAR WHEEL HOUSE PROTECTOR	27
PREPARATION	5	REAR WHEEL HOUSE PROTECTOR : Exploded View	28
PREPARATION	5	REAR WHEEL HOUSE PROTECTOR : Removal and Installation	28
Special Service Tool	5	FRONT UNDER COVER	29
Commercial Service Tool	5	Exploded View	29
CLIP LIST	6	Removal and Installation	29
Descriptions for Clips	6	ROOF SIDE MOLDING	30
SYMPTOM DIAGNOSIS	10	Exploded View	30
SQUEAK AND RATTLE TROUBLE DIAGNOSES	10	Removal and Installation	30
Work Flow	10	DOOR OUTSIDE MOLDING	32
Generic Squeak and Rattle Troubleshooting	12	Exploded View	32
Diagnostic Worksheet	14	Removal and Installation	32
REMOVAL AND INSTALLATION	16	SIDE GUARD MOLDING	34
FRONT BUMPER	16	Exploded View	34
Exploded View	16	Removal and Installation	35
Removal and Installation	17	DOOR OUTSIDE LOWER MOLDING	36
REAR BUMPER	20	Exploded View	36
Exploded View	20	Removal and Installation	36
Removal and Installation	20	SILL MOLDING	38
FRONT GRILLE	23	Exploded View	38
Exploded View	23	Removal and Installation	38
Removal and Installation	23	REAR SPOILER	39
COWL TOP	24	Exploded View	39
Exploded View	24	Removal and Installation	39
Removal and Installation	24	BACK DOOR OUTER FINISHER	41
		Exploded View	41

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000008297307

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:000000007914179

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

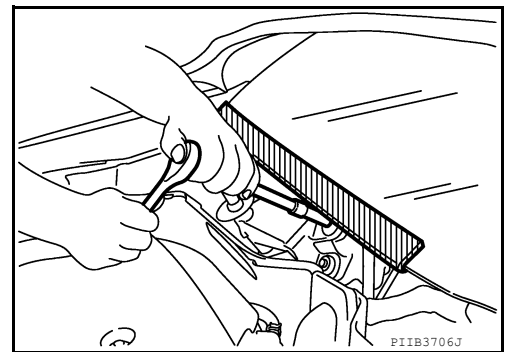

Precaution for Work

INFOID:000000008282720

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components.

A

B

C

D

E

F

G

H

I

J

EXT

L

M

N

O

P

PRECAUTIONS

< PRECAUTION >

- Water soluble dirt: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the dirty area.
Then rub with a soft and dry cloth.
- Oily dirt: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the dirty area.
Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol, or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION

< PREPARATION >

PREPARATION


PREPARATION

Special Service Tool


INFOID:000000008282722

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.


Tool number (Kent-Moore No.) Tool name	Description
— (J-39570) Chassis ear	Locating the noise
— (J-43980) NISSAN Squeak and Rattle kit	Repairing the cause of noise
— (J-46534) Trim Tool Set	Removing trim components

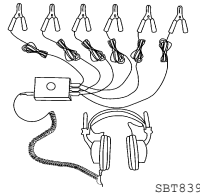

SBT839

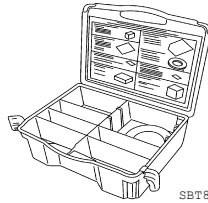

SBT840

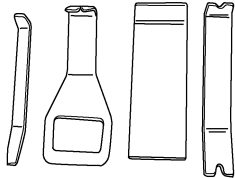


AWJIA04832Z

Commercial Service Tool

INFOID:000000008282723

EXT

(Kent-Moore No.) Tool name	Description
(J-39565) Engine ear	Locating the noise

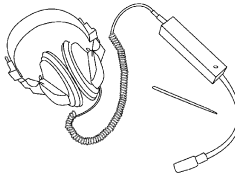

SIIA0995E

L

M

N

O

P

CLIP LIST


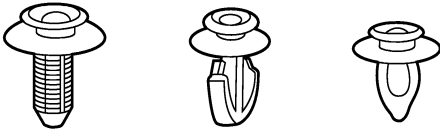


 


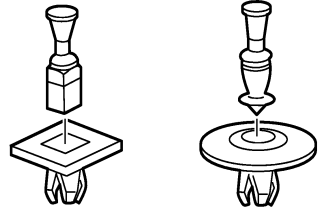
 
 

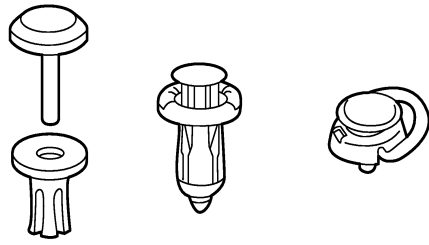
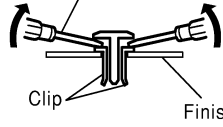

 
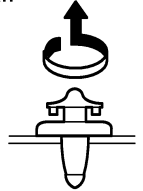
< PREPARATION >

CLIP LIST

Descriptions for Clips

INFOID:000000008282726


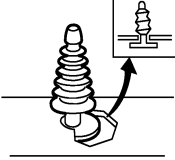
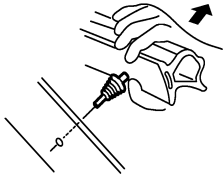

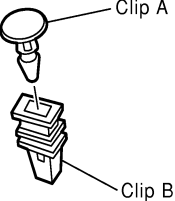
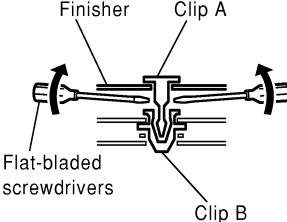

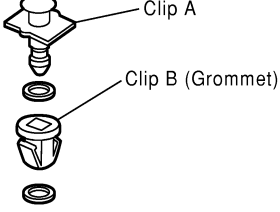
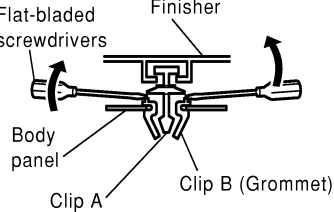


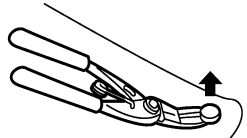

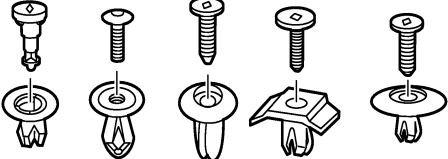

Replace any clips which are damaged during removal or installation.

Symbol No.	Shapes	Removal & Installation
<p>C101</p> 		<p>Removal: Remove by bending up with flat-bladed screwdrivers or clip remover.</p> 
<p>C103</p> 		 <p>Removal: Remove with a clip remover.</p>
<p>C203</p> 		<p>Removal: Push center pin to catching position. (Do not remove center pin by hitting it.)</p> <p>Push</p>  <p>Installation:</p> <p>Push</p> 
<p>C205</p> 		<p>Removal:</p> <p>Flat-bladed screwdriver</p>  <p>Clip</p> <p>Finisher</p>
<p>C206</p> 		<p>Removal:</p> 

SIIA0315E

CLIP LIST

< PREPARATION >

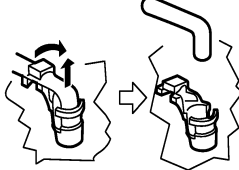
 

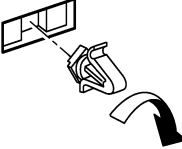





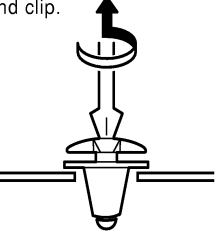



Symbol No.	Shapes	Removal & Installation
<p>CE103</p> 		<p>Removal:</p> 
<p>CF110</p> 		<p>Removal:</p> 
<p>CF118</p> 		<p>Removal:</p> 
<p>CR103</p> 		<p>Removal: Holder portion of clip must be spread out to remove rod.</p> 
<p>CS101</p> 		<p>Removal:</p> <ol style="list-style-type: none"> 1. Screw out with a Phillips screwdriver. 2. Remove female portion with flat-bladed screwdriver. 

S11A0316E

A
B
C
D
E
F
G
H
I
J
EXT
L
M
N
O
P

 CLIP LIST


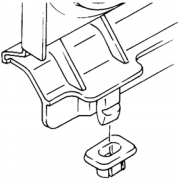
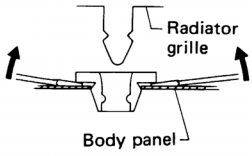

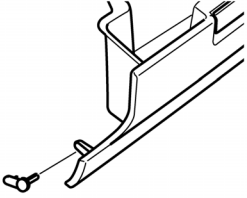
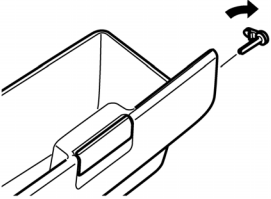

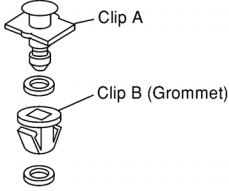
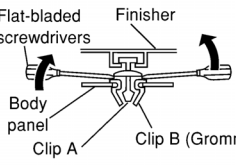
< PREPARATION >

Symbol No.	Shapes	Removal & Installation	
CG101 		Removal:  Rotate 45° to remove	Installation: 
CS102 			
CS113 		Removal: Disconnect upper connection of clip with a flat-bladed screwdriver, then remove clip while inserting a flat-bladed screwdriver between body panel and clip. 	
C111 			

SIIA0317E

CLIP LIST

< PREPARATION >

Symbol No.	Shapes	Removal & Installation
<p>CG104</p> 		<p>Removal: Remove by bending up with flat-bladed screwdrivers.</p>  <p>Radiator grille Body panel</p>
<p>CE114</p> 		
<p>CF118</p> 	 <p>Clip A Clip B (Grommet)</p>	<p>Removal: Flat-bladed screwdrivers Finisher</p>  <p>Body panel Clip A Clip B (Grommet)</p>

ALJIA0564GB

A
B
C
D
E
F
G
H
I
J
EXT
L
M
N
O
P

SQUEAK AND RATTLE TROUBLE DIAGNOSES


< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

SQUEAK AND RATTLE TROUBLE DIAGNOSES

Work Flow

INFOID:000000008282729

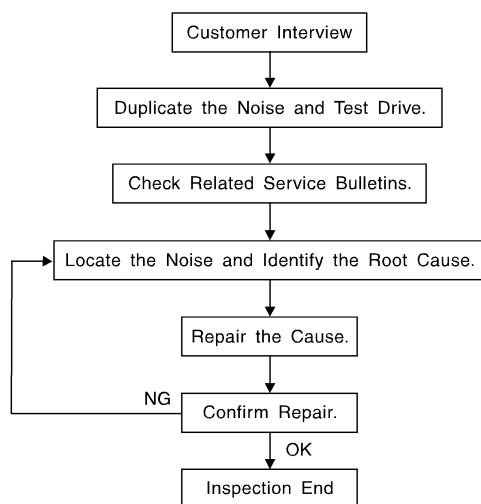

SBT842

CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any customer's comments; refer to [EXT-14, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, be sure to diagnose and repair the noise that the customer is concerned about. This can be accomplished by test driving the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak —(Like tennis shoes on a clean floor)
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping.
- Creak—(Like walking on an old wooden floor)
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle—(Like shaking a baby rattle)
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock —(Like a knock on a door)
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick—(Like a clock second hand)
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump—(Heavy, muffled knock noise)
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz—(Like a bumble bee)
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending upon the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

DUPLICATE THE NOISE AND TEST DRIVE

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
 - 2) Tap or push/pull around the area where the noise appears to be coming from.
 - 3) Rev the engine.
 - 4) Use a floor jack to recreate vehicle "twist".
 - 5) At idle, apply engine load (electrical load, half-clutch on M/T model, drive position on CVT and A/T models).
 - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
 - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear: J-39565 and mechanic's stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
 - removing the components in the area that you suspect the noise is coming from.
Do not use too much force when removing clips and fasteners, otherwise clips and fasteners can be broken or lost during the repair, resulting in the creation of new noise.
 - tapping or pushing/pulling the component that you suspect is causing the noise.
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
 - feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
 - placing a piece of paper between components that you suspect are causing the noise.
 - looking for loose components and contact marks.
Refer to [EXT-12. "Generic Squeak and Rattle Troubleshooting"](#).

REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
 - separate components by repositioning or loosening and retightening the component, if possible.
 - insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A NISSAN Squeak and Rattle Kit (J-43980) is available through your authorized NISSAN Parts Department.

CAUTION:

Do not use excessive force as many components are constructed of plastic and may be damaged.

Always check with the Parts Department for the latest parts information.

The following materials are contained in the NISSAN Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.

URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

76268-9E005: 100×135 mm (3.94×5.31 in)/76884-71L01: 60×85 mm (2.36×3.35 in)/76884-71L02: 15×25 mm (0.59×0.98 in)

INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

73982-9E000: 45 mm (1.77 in) thick, 50×50 mm (1.97×1.97 in)/73982-50Y00: 10 mm (0.39 in) thick, 50×50 mm (1.97×1.97 in)

INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30×50 mm (1.18×1.97 in)

FELT CLOTH TAPE

Used to insulate where movement does not occur. Ideal for instrument panel applications.

68370-4B000: 15×25 mm (0.59×0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll. The following materials not found in the kit can also be used to repair squeaks and rattles.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

UHMW (TEFLON) TAPE

Insulates where slight movement is present. Ideal for instrument panel applications.

SILICONE GREASE

Used instead of UHMW tape that will be visible or not fit.

Note: Will only last a few months.

SILICONE SPRAY

Use when grease cannot be applied.

DUCT TAPE

Use to eliminate movement.

CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

Generic Squeak and Rattle Troubleshooting

INFOID:000000008282730

Refer to Table of Contents for specific component removal and installation information.

INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. Cluster lid A and the instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar finisher
4. Instrument panel to windshield
5. Instrument panel pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicone spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

CAUTION:

Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.

CENTER CONSOLE

Components to pay attention to include:

1. Shift selector assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

DOORS

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the NISSAN Squeak and Rattle Kit (J-43980) to repair the noise.

TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner.

In addition look for:

1. Trunk lid bumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

4. A loose license plate or bracket

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

A

SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

B

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sun visor shaft shaking in the holder
3. Front or rear windshield touching headliner and squeaking

C

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

D

OVERHEAD CONSOLE (FRONT AND REAR)

Overhead console noises are often caused by the console panel clips not being engaged correctly. Most of these incidents are repaired by pushing up on the console at the clip locations until the clips engage.

E

In addition look for:

1. Loose harness or harness connectors.
2. Front console map/reading lamp lens loose.
3. Loose screws at console attachment points.

F

SEATS

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

G

Cause of seat noise include:

H

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

I

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

J

UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

EXT

Causes of transmitted underhood noise include:

1. Any component installed to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator installation pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

L

M

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine rpm or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

N

O

P

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Diagnostic Worksheet

INFOID:000000008282731





Dear Customer:

We are concerned about your satisfaction with your vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your vehicle right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

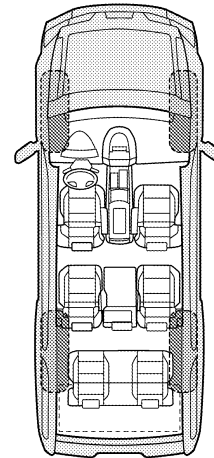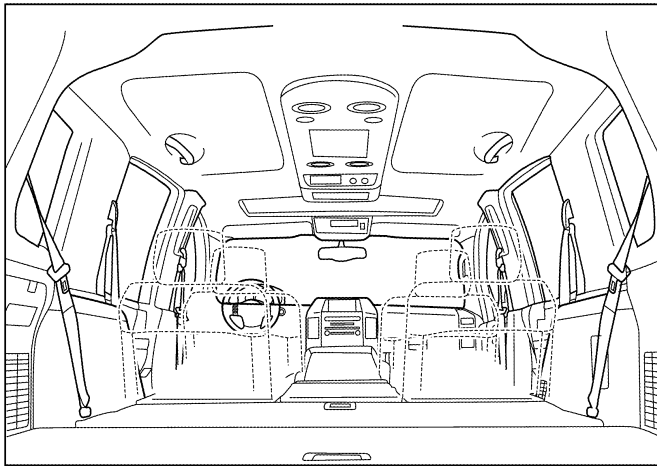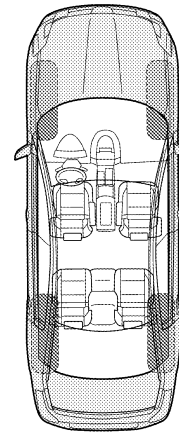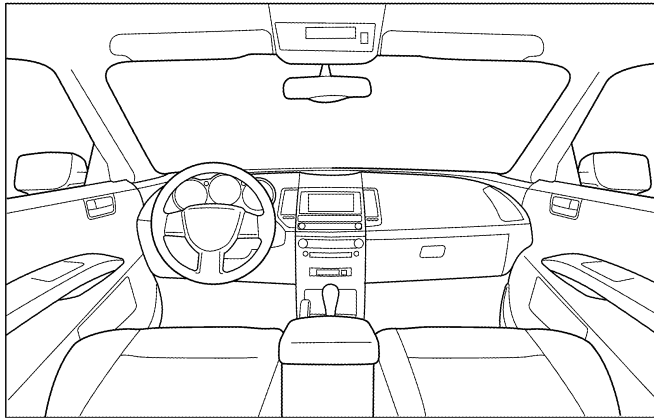

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- | | |
|---|--|
| <input type="checkbox"/> Anytime | <input type="checkbox"/> After sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning | <input type="checkbox"/> When it is raining or wet |
| <input type="checkbox"/> Only when it is cold outside | <input type="checkbox"/> Dry or dusty conditions |
| <input type="checkbox"/> Only when it is hot outside | <input type="checkbox"/> Other: |

III. WHEN DRIVING:

- Through driveways
- Over rough roads
- Over speed bumps
- Only about ____ mph
- On acceleration
- Coming to a stop
- On turns: left, right or either (circle)
- With passengers or cargo
- Other: _____
- After driving ____ miles or ____ minutes

IV. WHAT TYPE OF NOISE

- Squeak (like tennis shoes on a clean floor)
- Creak (like walking on an old wooden floor)
- Rattle (like shaking a baby rattle)
- Knock (like a knock at the door)
- Tick (like a clock second hand)
- Thump (heavy muffled knock noise)
- Buzz (like a bumble bee)

TO BE COMPLETED BY DEALERSHIP PERSONNEL

Test Drive Notes:

	YES	NO	Initials of person performing
Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

VIN: _____ Customer Name _____

W.O.# _____ Date: _____

This form must be attached to Work Order

LAI1A0071E

A
B
C
D
E
F
G
H
I
J
EXT
L
M
N
O
P

FRONT BUMPER


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

FRONT BUMPER

Exploded View

INFOID:000000007914185

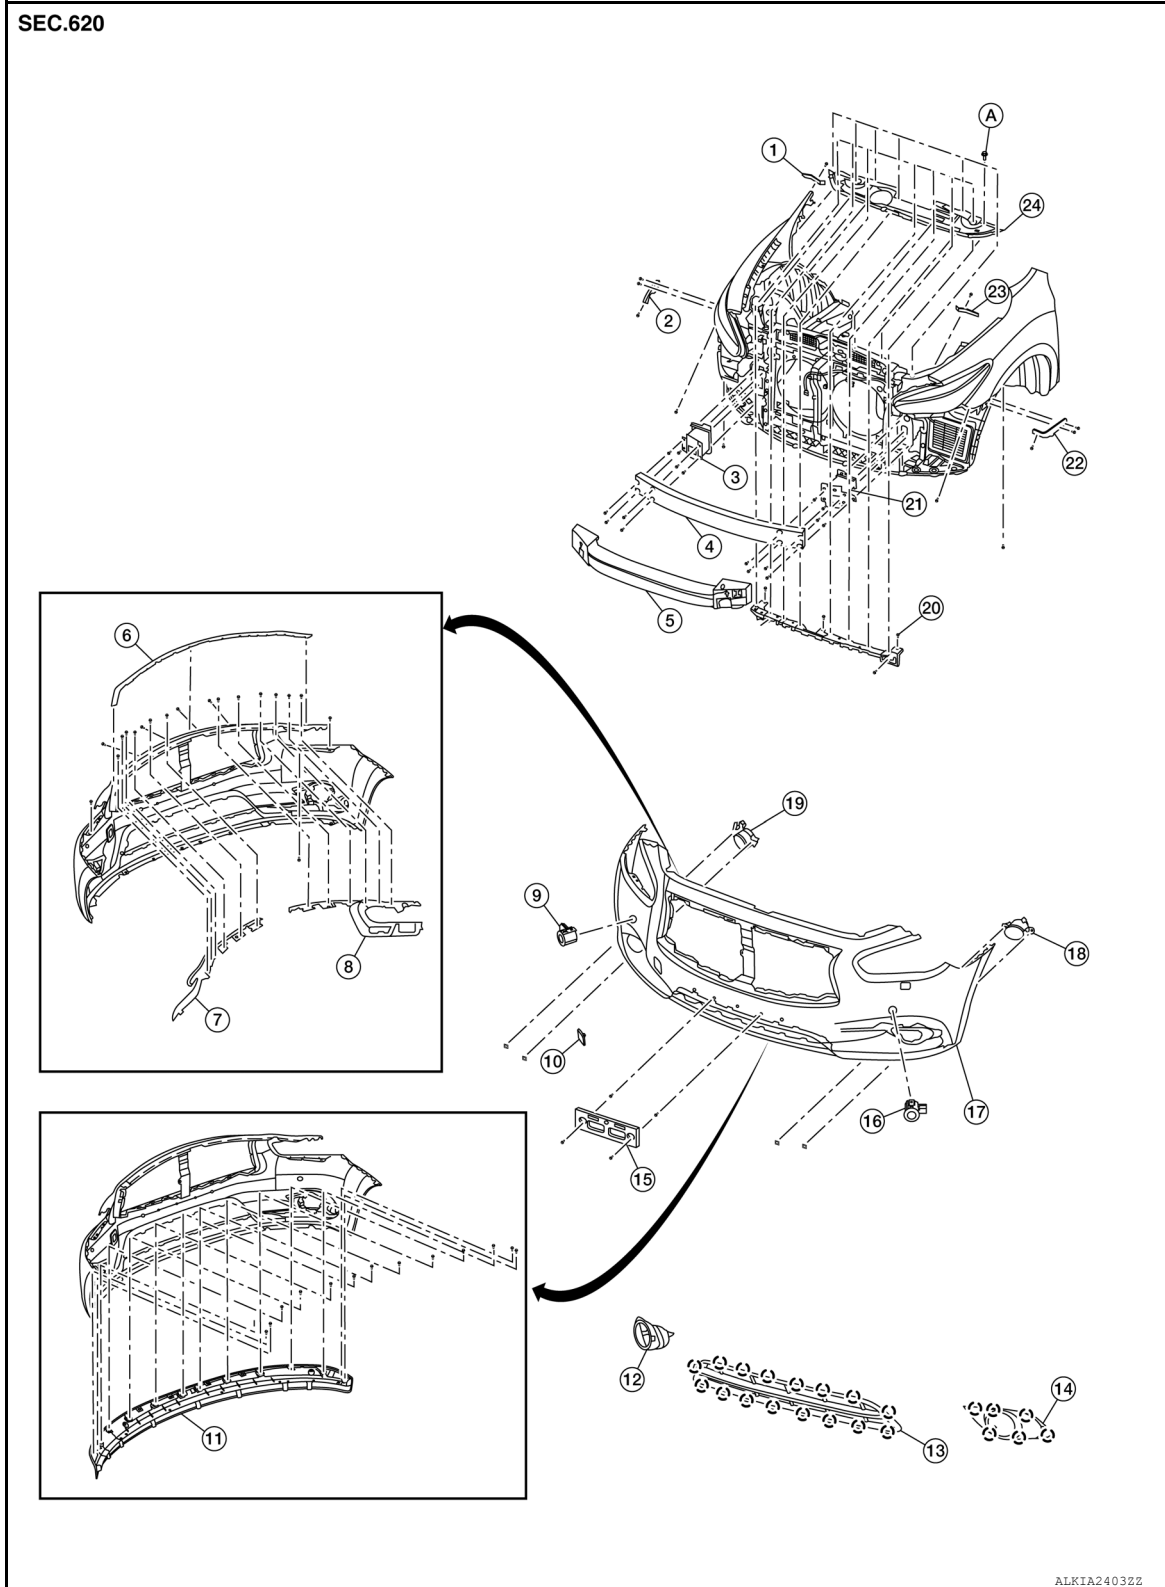

FRONT BUMPER

< REMOVAL AND INSTALLATION >

- | | | |
|---|--|---|
| 1. Front bumper fascia upper bracket RH | 2. Front bumper side bracket RH | 3. Front bumper reinforcement support RH |
| 4. Front bumper reinforcement | 5. Front energy absorber | 6. Front bumper fascia hood seal |
| 7. Front bumper fascia inner stiffener RH | 8. Front bumper fascia inner stiffener LH | 9. Front sonar sensor outer RH |
| 10. Tow cover | 11. Front fascia lower grille | 12. Front fog lamp finisher RH |
| 13. Front bumper grille | 14. Front fog lamp finisher LH | 15. Front license plate bracket |
| 16. Front sonar sensor outer LH | 17. Front bumper fascia | 18. Front fog lamp LH |
| 19. Front fog lamp RH | 20. Front bumper fascia upper retainer bracket | 21. Front bumper reinforcement support LH |
| 22. Front bumper side bracket LH | 23. Front bumper fascia upper bracket LH | 24. Core support cover |
| A. Clip | ⊖ Pawl | |

Removal and Installation


INFOID:000000007914186

REMOVAL


CAUTION:

Bumper fascia is made of resin. Use care when handling to prevent damage. Avoid contact with oily substances.

1. Open hood.
2. Remove the core support cover clips (A), then remove the core support cover (1).

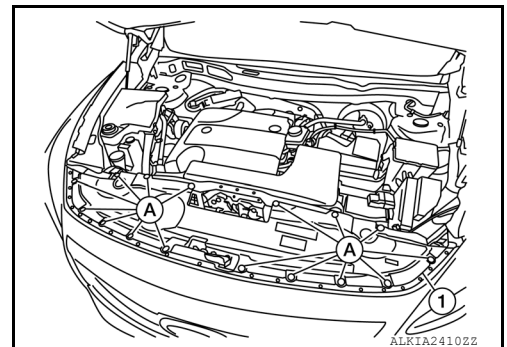


3. Partially remove the front fender protectors (LH/RH). Refer to [EXT-27. "FENDER PROTECTOR : Removal and Installation"](#).
4. Remove the front under cover. Refer to [EXT-29. "Removal and Installation"](#).
5. Remove the front bumper fascia to upper fender screw (A) (LH/RH), then remove front fascia upper bracket (1).

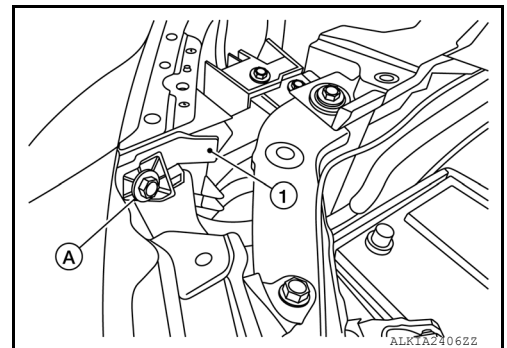

FRONT BUMPER


< REMOVAL AND INSTALLATION >

6. Remove the front bumper fascia to fender screw (A) (LH/RH).

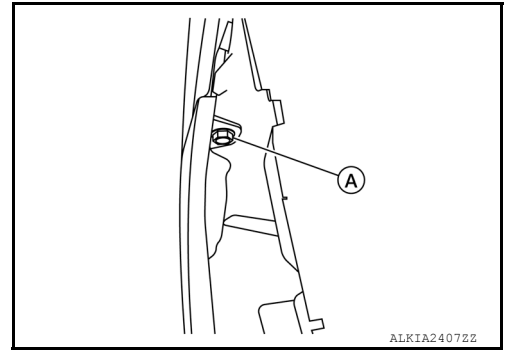

7. Disconnect the harness connectors from front sonar sensors outer (LH/RH) and fog lamps (LH/RH).
8. Release the front bumper fascia from the side brackets (LH/RH).

○: Pawl

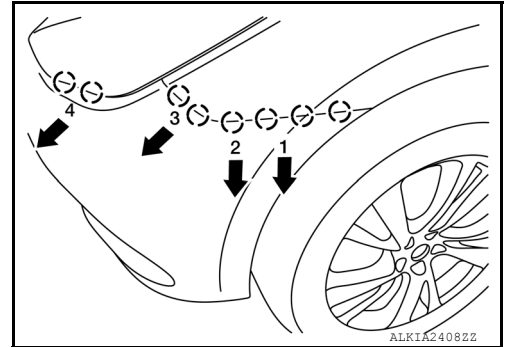

9. Remove the front bumper fascia.

CAUTION:

When removing front bumper fascia, two people are required to avoid damaging.

10. Remove the following parts after removing front bumper fascia.
- Front fascia lower grille
 - Front bumper grille
 - Front sonar sensor outer (LH/RH). Refer to [AV-692, "Removal and Installation"](#).
 - Front fog lamp assemblies (LH/RH). Refer to [EXL-163, "Removal and Installation"](#).
 - Front fog lamp finishers (LH/RH)
 - Front bumper side brackets (LH/RH)
 - Front license plate bracket
11. Remove the front bumper fascia upper retainer bracket.

INSTALLATION


Installation is in the reverse order of removal.

NOTE:

- The following table shows the specified values for checking normal installation status.
- Fitting adjustment cannot be performed.

FRONT BUMPER

< REMOVAL AND INSTALLATION >

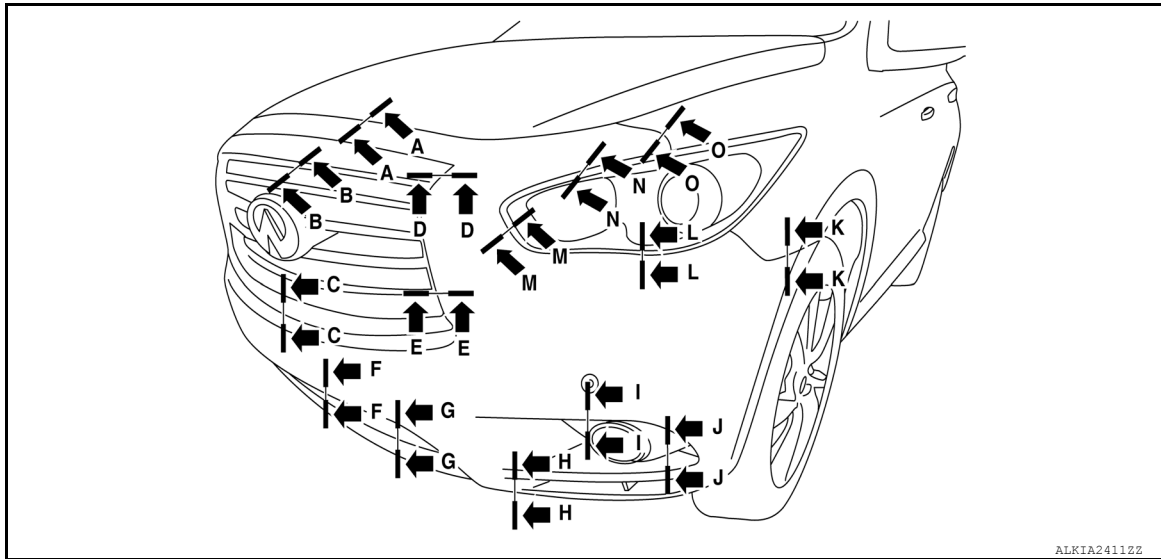

mm (in)

Section	Measurement	Minimum	Target Value	Maximum
A-A	Clearance	2.1 (0.08)	4.1 (0.16)	6.1 (0.24)
A-A	Surface height	-0.50 (-0.02)	1.0 (0.04)	2.5 (0.10)
B-B	Clearance	0.2 (0.01)	1.5 (0.06)	2.8 (0.11)
B-B	Surface height	-0.8 (-0.03)	0.3 (0.01)	1.4 (0.06)
C-C	Clearance	0.2 (0.01)	1.5 (0.06)	2.8 (0.11)
C-C	Surface height	0.7 (0.03)	2.0 (0.08)	3.3 (0.13)
D-D	Clearance	0.2 (0.01)	1.5 (0.06)	2.8 (0.11)
D-D	Surface height	2.4 (0.09)	3.5 (0.14)	4.6 (0.18)
E-E	Clearance	0.2 (0.01)	1.5 (0.06)	2.8 (0.11)
F-F	Clearance	0.0 (0.00)	1.0 (0.04)	2.0 (0.08)
G-G	Clearance	0.0 (0.00)	1.0 (0.04)	2.0 (0.08)
H-H	Clearance	0.0 (0.00)	0.0 (0.00)	0.7 (0.03)
I-I	Clearance	0.0 (0.00)	1.0 (0.04)	2.0 (0.08)
J-J	Clearance	0.0 (0.00)	1.0 (0.04)	2.0 (0.08)
K-K	Clearance	0.0 (0.00)	0.0 (0.00)	0.8 (0.03)
K-K	Surface height	-0.3 (-0.01)	0.7 (0.03)	1.7 (0.07)
L-L	Clearance	0.2 (0.01)	1.5 (0.06)	3.2 (0.13)
M-M	Clearance	0.2 (0.01)	1.5 (0.06)	3.2 (0.13)
N-N	Clearance	0.2 (0.01)	1.5 (0.06)	3.2 (0.13)
O-O	Clearance	0.0 (0.00)	0.0 (0.00)	0.7 (0.03)
O-O	Surface height	-1.0 (-0.04)	0.0 (0.00)	1.0 (0.04)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
EXT
P


REAR BUMPER

< REMOVAL AND INSTALLATION >

REAR BUMPER

Exploded View

INFOID:000000007914187

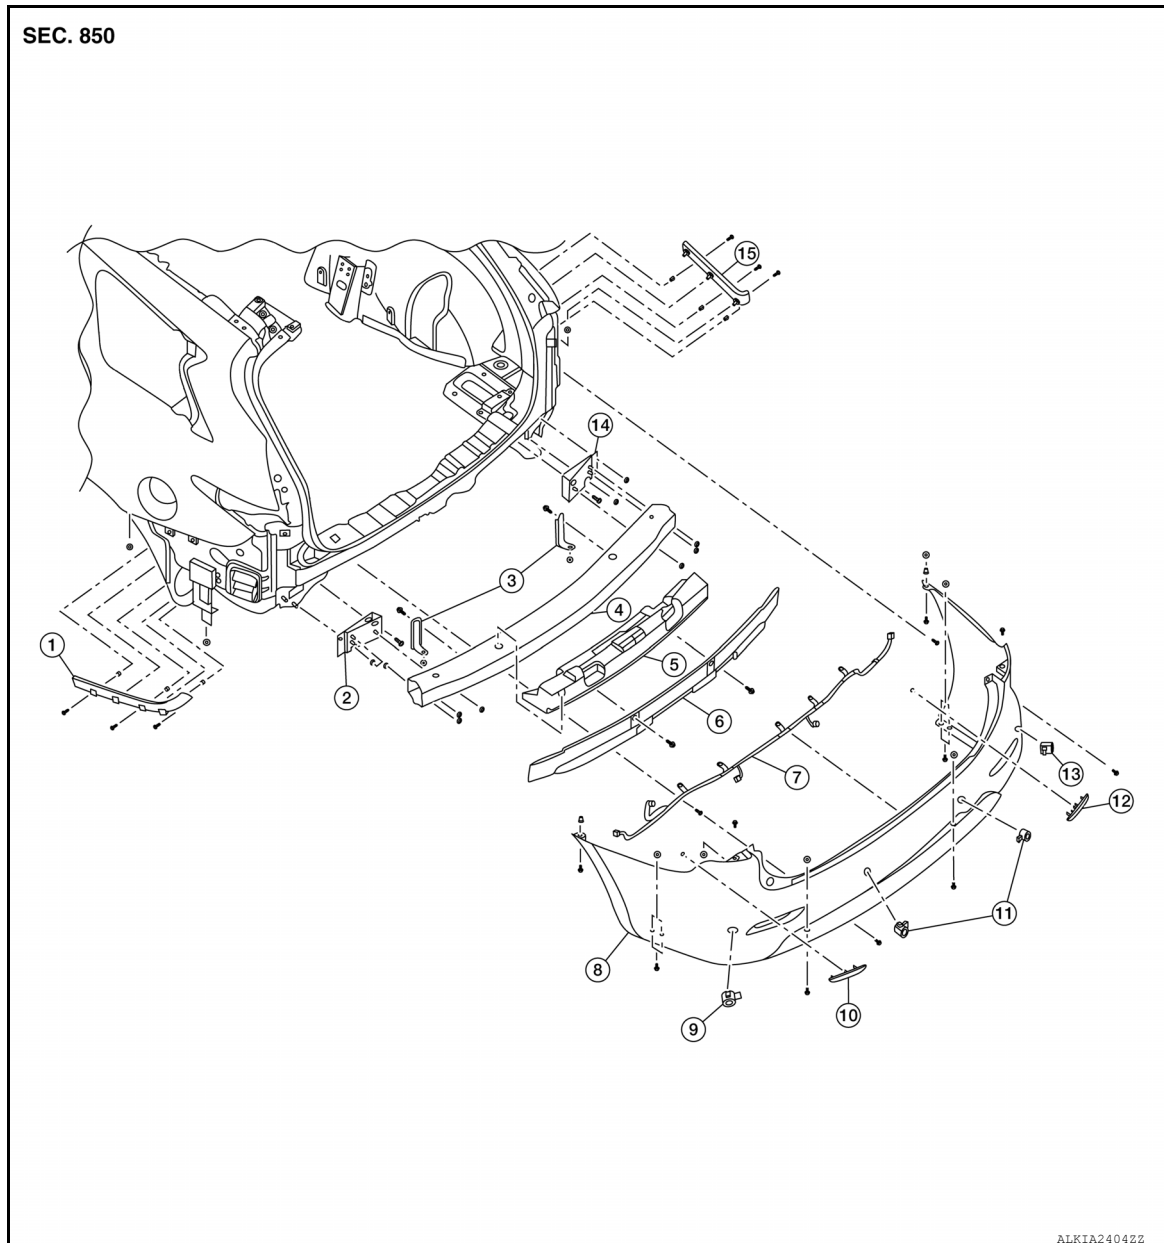

- | | | |
|-------------------------------------|--|---|
| 1. Rear bumper side bracket LH | 2. Rear bumper reinforcement support LH | 3. Rear bumper fascia lower bracket LH/RH |
| 4. Rear bumper reinforcement | 5. Rear bumper energy absorber 1 | 6. Rear bumper energy absorber 2 |
| 7. Rear sonar sensor harness | 8. Rear bumper fascia | 9. Rear sonar sensor outer LH |
| 10. Rear bumper fascia reflector LH | 11. Rear sonar sensors inner LH/RH | 12. Rear bumper fascia reflector RH |
| 13. Rear sonar sensor outer RH | 14. Rear bumper reinforcement support RH | 15. Rear bumper side bracket RH |

Removal and Installation

INFOID:000000007914188

REMOVAL


CAUTION:

Bumper fascia is made of resin. Use care when handling to prevent damage. Avoid contact with oily substances.


REAR BUMPER

< REMOVAL AND INSTALLATION >


1. Open back door.
2. Remove the rear combination lamps (LH/RH). Refer to [EXL-168. "Removal and Installation"](#).
3. Remove the rear bumper fascia clips (A) and screws (B) (LH/RH).

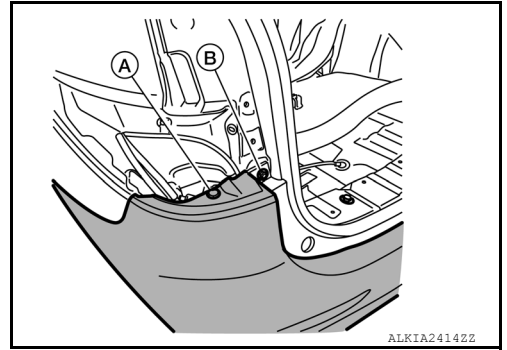


4. Partially remove the rear wheel house protectors. Refer to [EXT-28. "REAR WHEEL HOUSE PROTECTOR : Removal and Installation"](#).
5. Remove the bumper fascia side upper screws (A) (LH/RH).

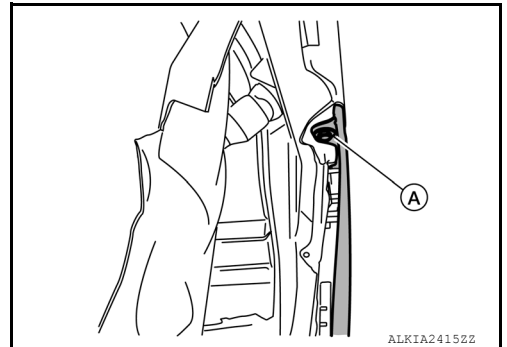

6. Remove rear bumper fascia lower side bolts (A) (LH/RH).

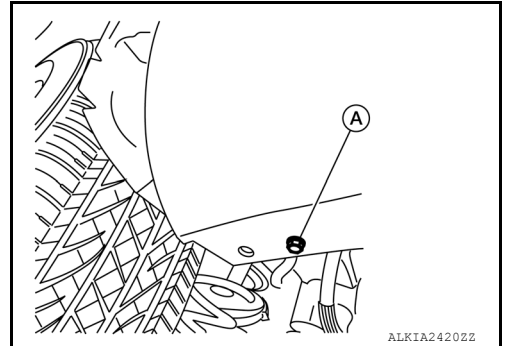

7. Remove the rear bumper fascia lower rear clips (A).

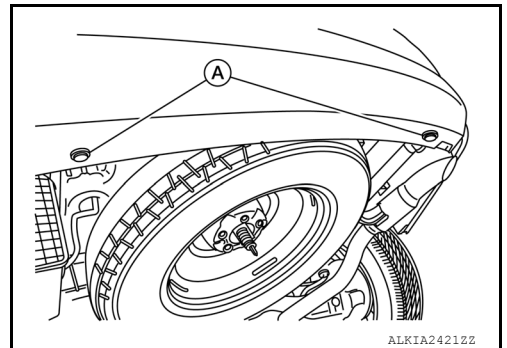

8. Disconnect the harness connector from rear sonar sensors.


A
B
C
D
E
F
G
H
I
J
EXT
L
M
N
O
P

REAR BUMPER

< REMOVAL AND INSTALLATION >

9. Pull rear bumper fascia downward as shown by the arrows to release from rear bumper side brackets (LH/RH).

○: Pawl

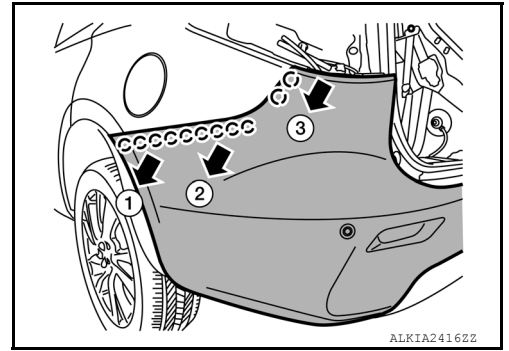

10. Remove the rear bumper fascia.

CAUTION:

When removing rear bumper fascia, two people are required to avoid damaging.

11. Remove the following parts after removing rear bumper fascia.

- Rear bumper side brackets (LH/RH)
- Rear bumper fascia reflectors (LH/RH)
- Rear sonar sensors


12. Remove rear bumper energy absorbers 1 and 2.

INSTALLATION

Installation is in the reverse order of removal.

NOTE:

- The following table shows the specified values for checking normal installation status.
- Fitting adjustment cannot be performed.

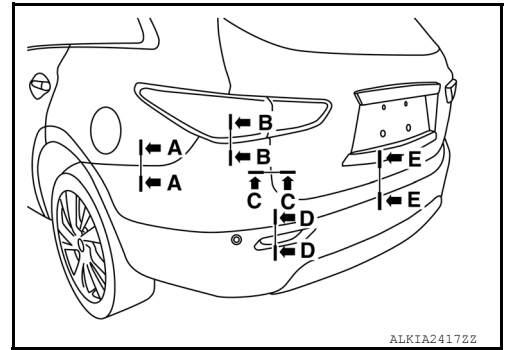

mm (in)

Section	Measurement	Minimum	Target Value	Maximum
A-A	Clearance	0.0 (0.00)	0.0 (0.00)	1.0 (0.04)
A-A	Surface height	0.0 (0.00)	1.0 (0.04)	2.0 (0.08)
B-B	Clearance	0.0 (0.00)	1.5 (0.06)	3.0 (0.12)
C-C	Clearance	3.0 (0.12)	5.0 (0.20)	7.0 (0.28)
C-C	Surface height	-2.0 (-0.08)	0.0 (0.00)	2.0 (0.08)
D-D	Clearance	0.0 (0.00)	1.0 (0.04)	2.0 (0.08)
E-E	Clearance	5.0 (0.12)	7.0 (0.28)	9.0 (0.35)


FRONT GRILLE

< REMOVAL AND INSTALLATION >

FRONT GRILLE

Exploded View

INFOID:000000007914189

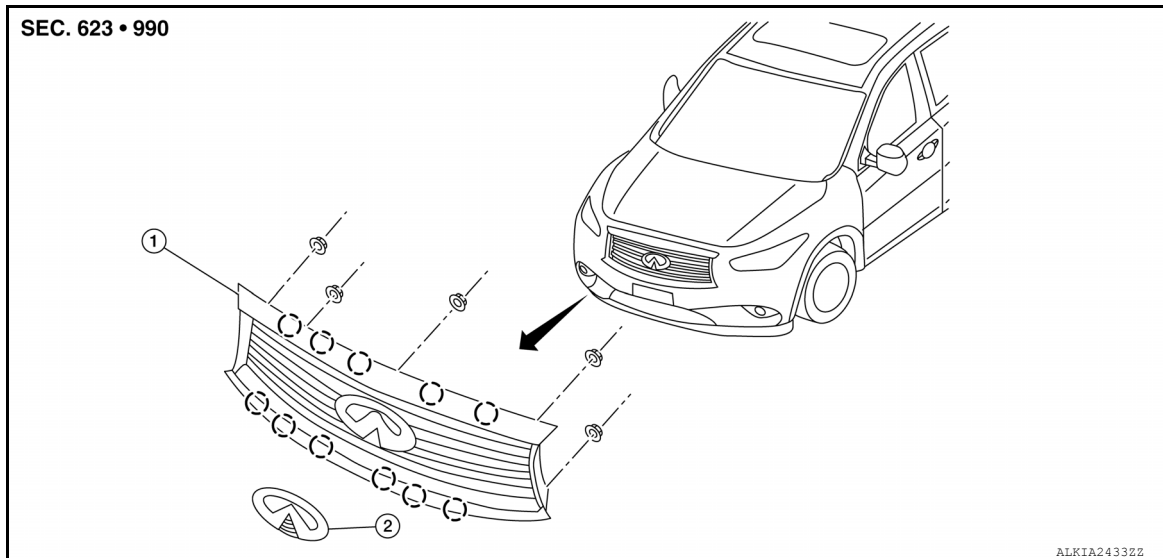

1. Front grille

2. Front emblem


○ Pawl

Removal and Installation


INFOID:000000007914190

REMOVAL

1. Open hood.
2. Remove the front bumper fascia. Refer to [EXT-17, "Removal and Installation"](#).
3. Release front camera harness connector clip (A).

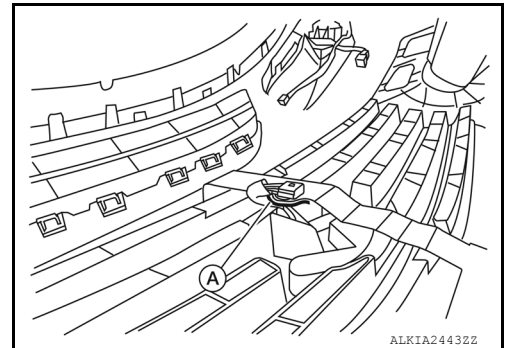

4. Remove the front grille nuts (A), release front grille pawls (B), then remove front grille (1) from the front bumper fascia.

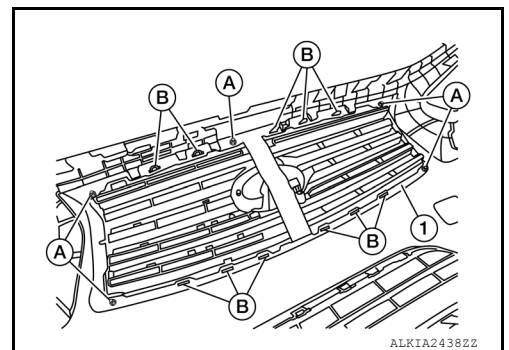

5. Remove the front emblem and front camera from the front grille.

INSTALLATION

Installation is in the reverse order of removal.


COWL TOP

< REMOVAL AND INSTALLATION >

COWL TOP

Exploded View

INFOID:000000007914191

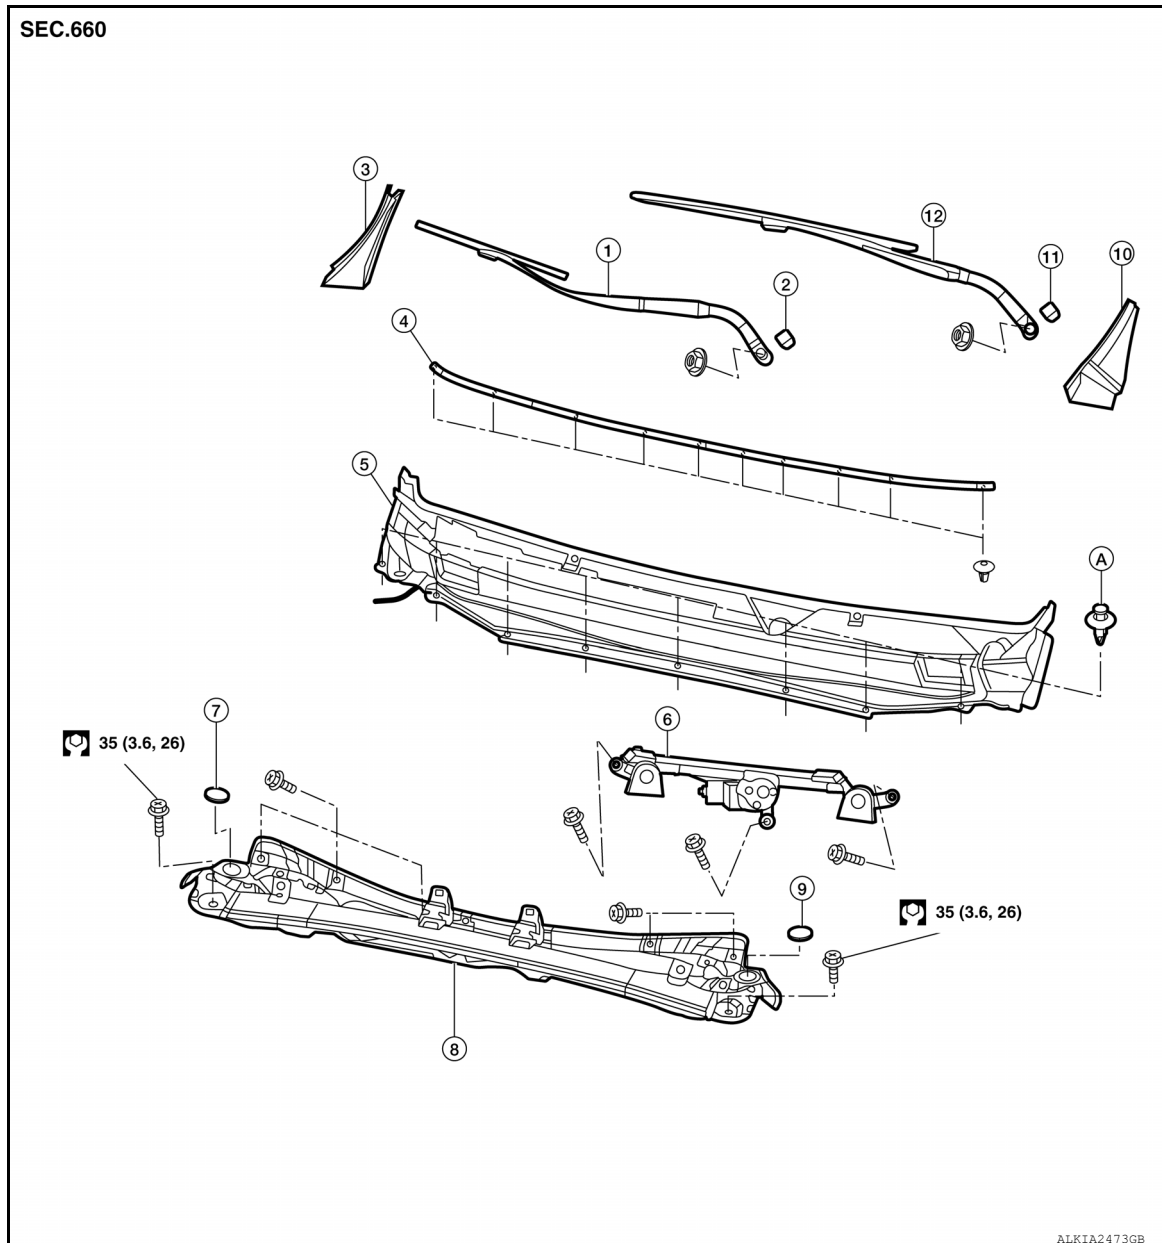

- | | | |
|------------------------------------|-----------------------|-------------------------------------|
| 1. Wiper arm and blade assembly RH | 2. Wiper arm cap RH | 3. Cowl top side trim cover RH |
| 4. Cowl top seal | 5. Cowl top cover | 6. Front wiper drive assembly |
| 7. Rubber plug LH | 8. Cowl top extension | 9. Rubber plug RH |
| 10. Cowl top side trim cover LH | 11. Wiper arm cap LH | 12. Wiper arm and blade assembly LH |
| A. Clip | | |

Removal and Installation

INFOID:000000007914192

COWL TOP COVER

Removal


1. Remove front wiper arms (LH/RH). Refer to [WW-67, "Removal and Installation"](#).
2. Release the cowl top seal clips, then remove the cowl top seal.

COWL TOP

< REMOVAL AND INSTALLATION >


3. Release the clips and pawls using a suitable tool and remove hood ledge finisher (1).

○: Pawl

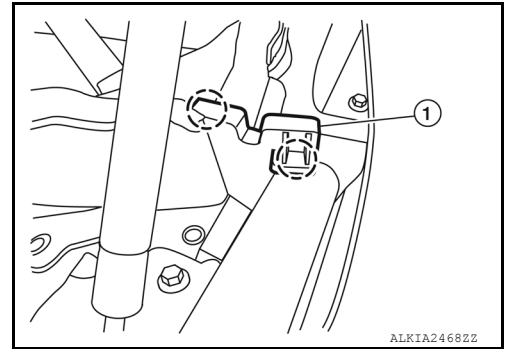


4. Release the pawls, then remove cowl top side trim covers (1) (LH/RH).

○: Pawl

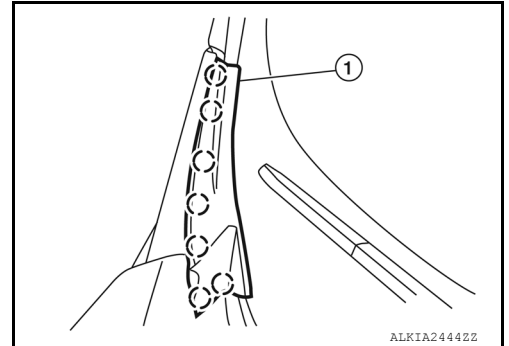

5. Disconnect front washer tube connector.
6. Remove cowl top cover clips.
7. Pull forward to release cowl top cover (1) and remove.

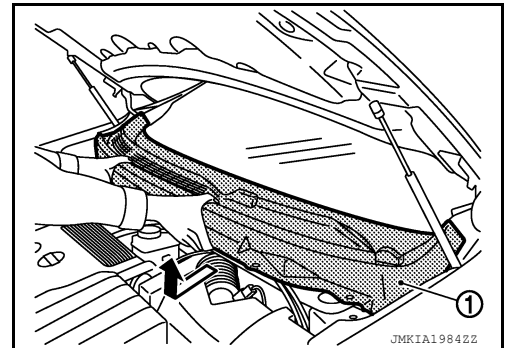

8. Remove the following parts after removing cowl top cover.
 - Front washer nozzle (LH/RH)
 - Front washer tube

Installation

Installation is in the reverse order of removal.

COWL TOP EXTENSION

REMOVAL

1. Remove the cowl top cover.
2. Disconnect the harness connector from wiper motor and remove the wiper motor harness clips from the cowl top extension.

CAUTION:

When performing any procedure after removing cowl top cover, cover the lower end of windshield glass with urethane etc.


3. Remove the front wiper drive assembly. Refer to [WW-70. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
EXT
L
M
N
O
P


COWL TOP

< REMOVAL AND INSTALLATION >

4. Remove the brake reservoir bracket nuts (A), release the brake level sensor harness clips (B) and position the brake reservoir (1) aside.

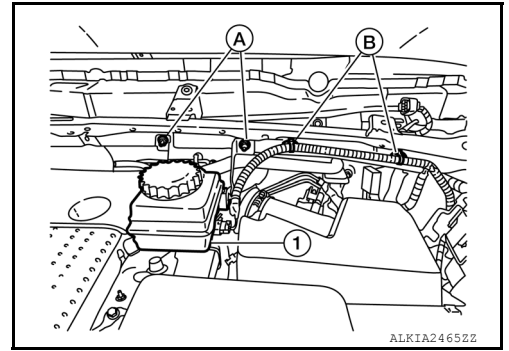

5. Remove the fuse and relay box nuts (A) and position the fuse and relay box (1) aside.

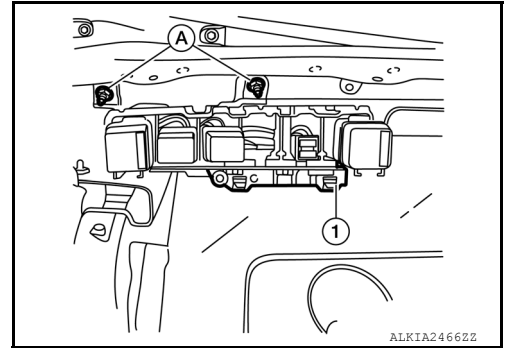

6. Remove the cowl top extension bolts and the cowl top extension.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- When installing cowl top cover, check that clips are securely fitted in panel holes on body, and then press them in.
- After installing, perform adjustment of wiper arms. Refer to [WW-67, "Removal and Installation"](#).

FENDER PROTECTOR


< REMOVAL AND INSTALLATION >

FENDER PROTECTOR

FENDER PROTECTOR

FENDER PROTECTOR : Exploded View

INFOID:000000007914193

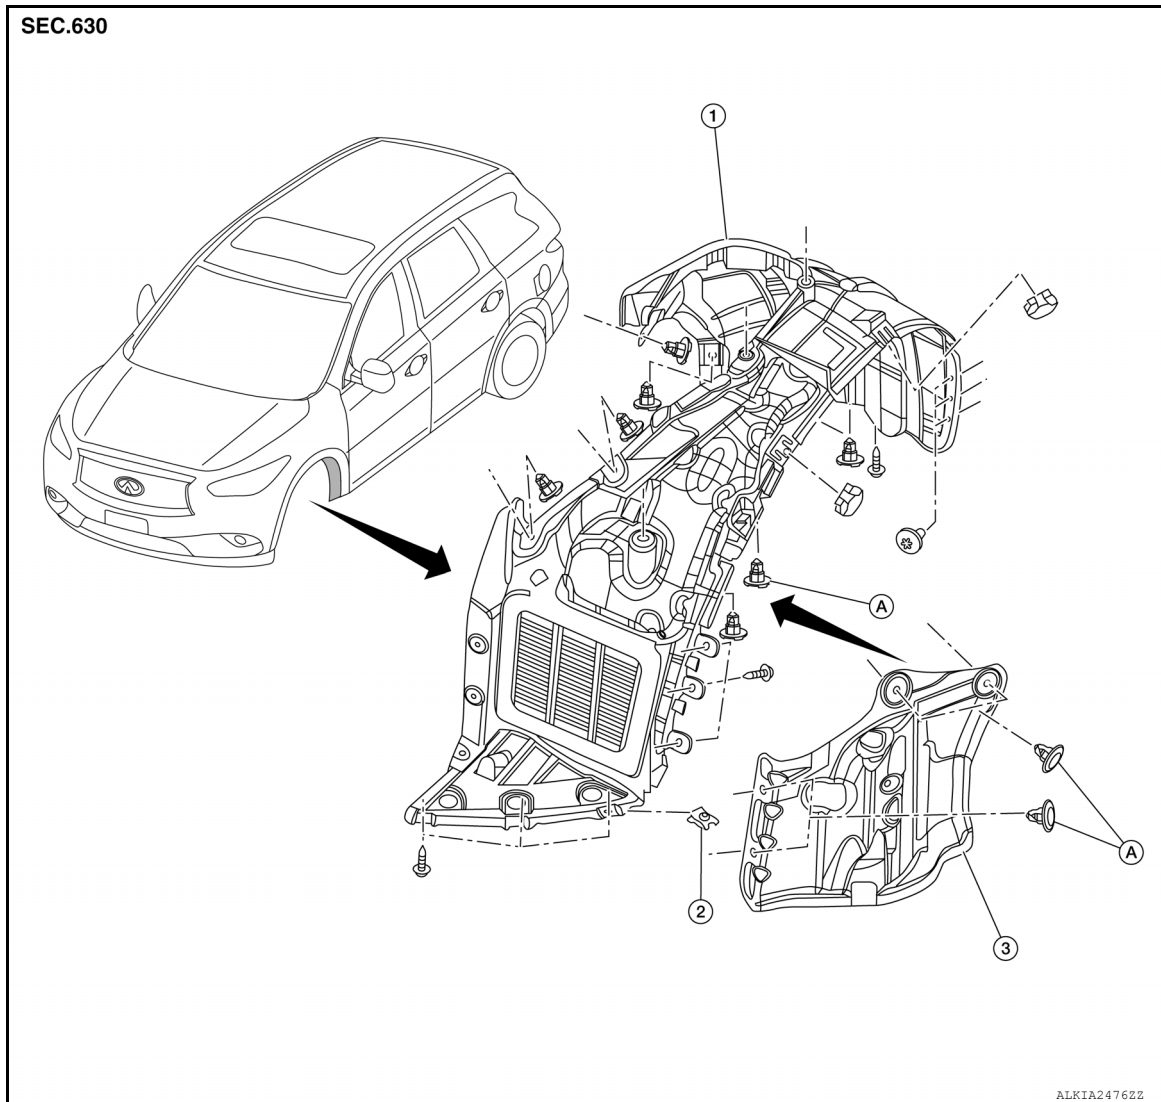

1. Front fender protector

2. J-nut

3. Front fender protector side cover

A. Clip

FENDER PROTECTOR : Removal and Installation

INFOID:000000007914194

REMOVAL

1. Remove the front under cover. Refer to [EXT-29, "Removal and Installation"](#).
2. Position the front wheels as necessary to remove screws and clips.
3. Remove the front fender protector side cover clips, then remove the front protector side cover.
4. Release the front fender protector clips, remove the front fender protector screws, then remove the front fender protector.

INSTALLATION

Installation is in the reverse order of removal.


REAR WHEEL HOUSE PROTECTOR

FENDER PROTECTOR

< REMOVAL AND INSTALLATION >

REAR WHEEL HOUSE PROTECTOR : Exploded View

INFOID:000000007914195

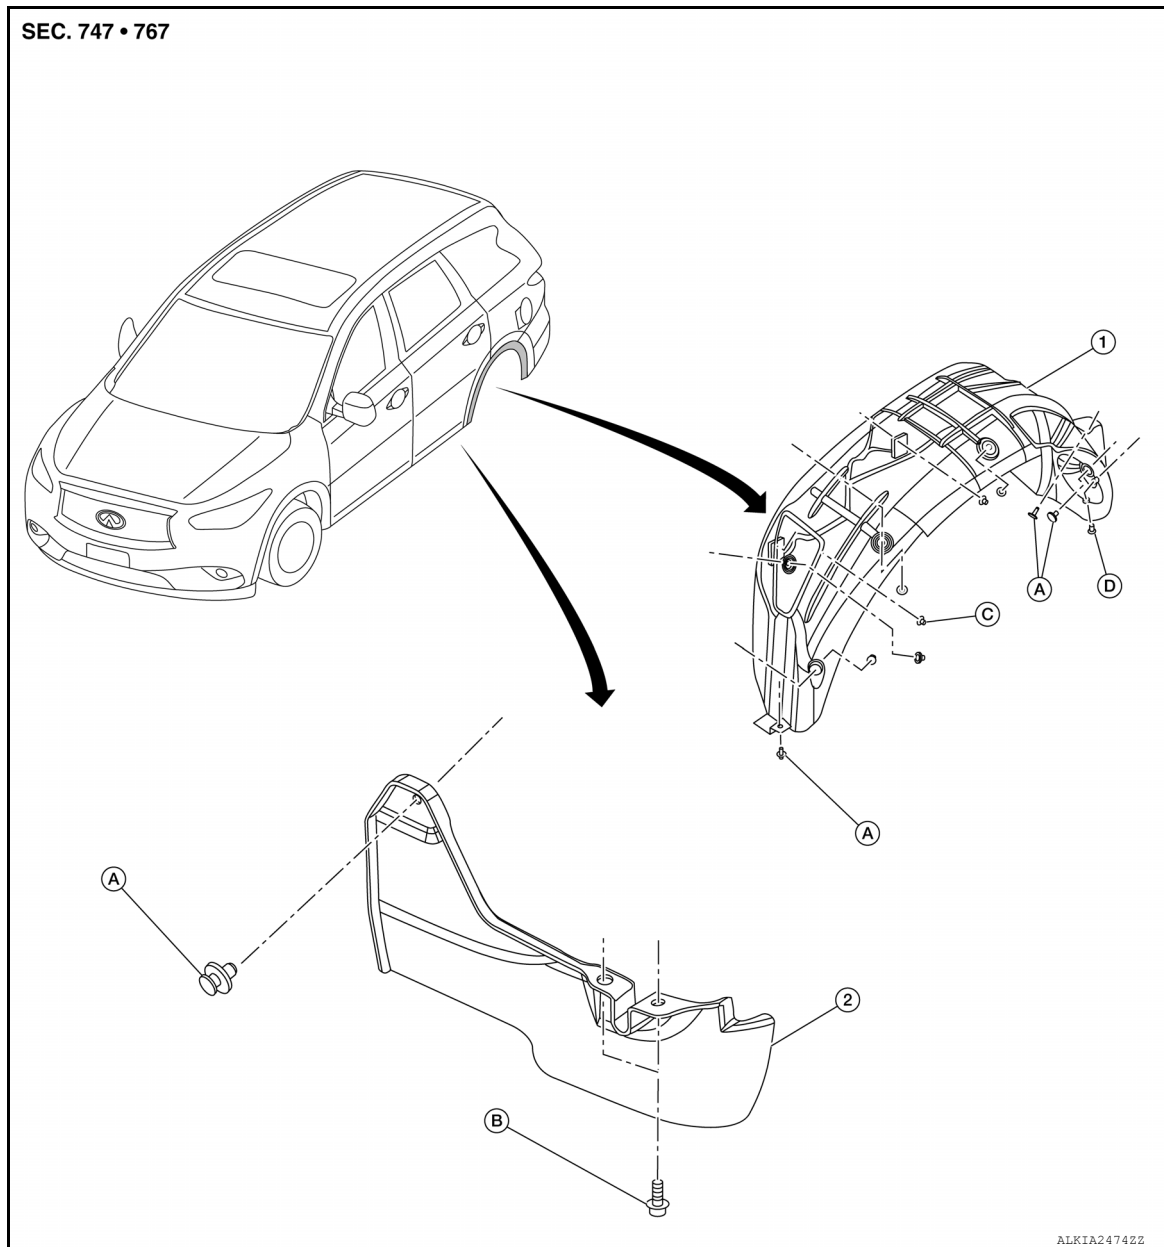

- | | | |
|-------------------------------|------------------------|-----------------------------|
| 1. Rear wheel house protector | 2. Rear wind deflector | A. Clip |
| B. Rear wind deflector bolt | C. Plastic nut | D. Rear bumper fascia screw |

REAR WHEEL HOUSE PROTECTOR : Removal and Installation

INFOID:000000007914196

REMOVAL

1. Remove the rear wheel house protector clips.
2. Remove rear wheel house protector plastic nuts, remove the rear bumper fascia screw, then remove the rear wheel house protector.
3. Remove rear wind deflector bolts and clip, then remove rear wheel wind deflector.

INSTALLATION

Installation is in the reverse order of removal.


FRONT UNDER COVER

< REMOVAL AND INSTALLATION >

FRONT UNDER COVER

Exploded View

INFOID:000000007914197

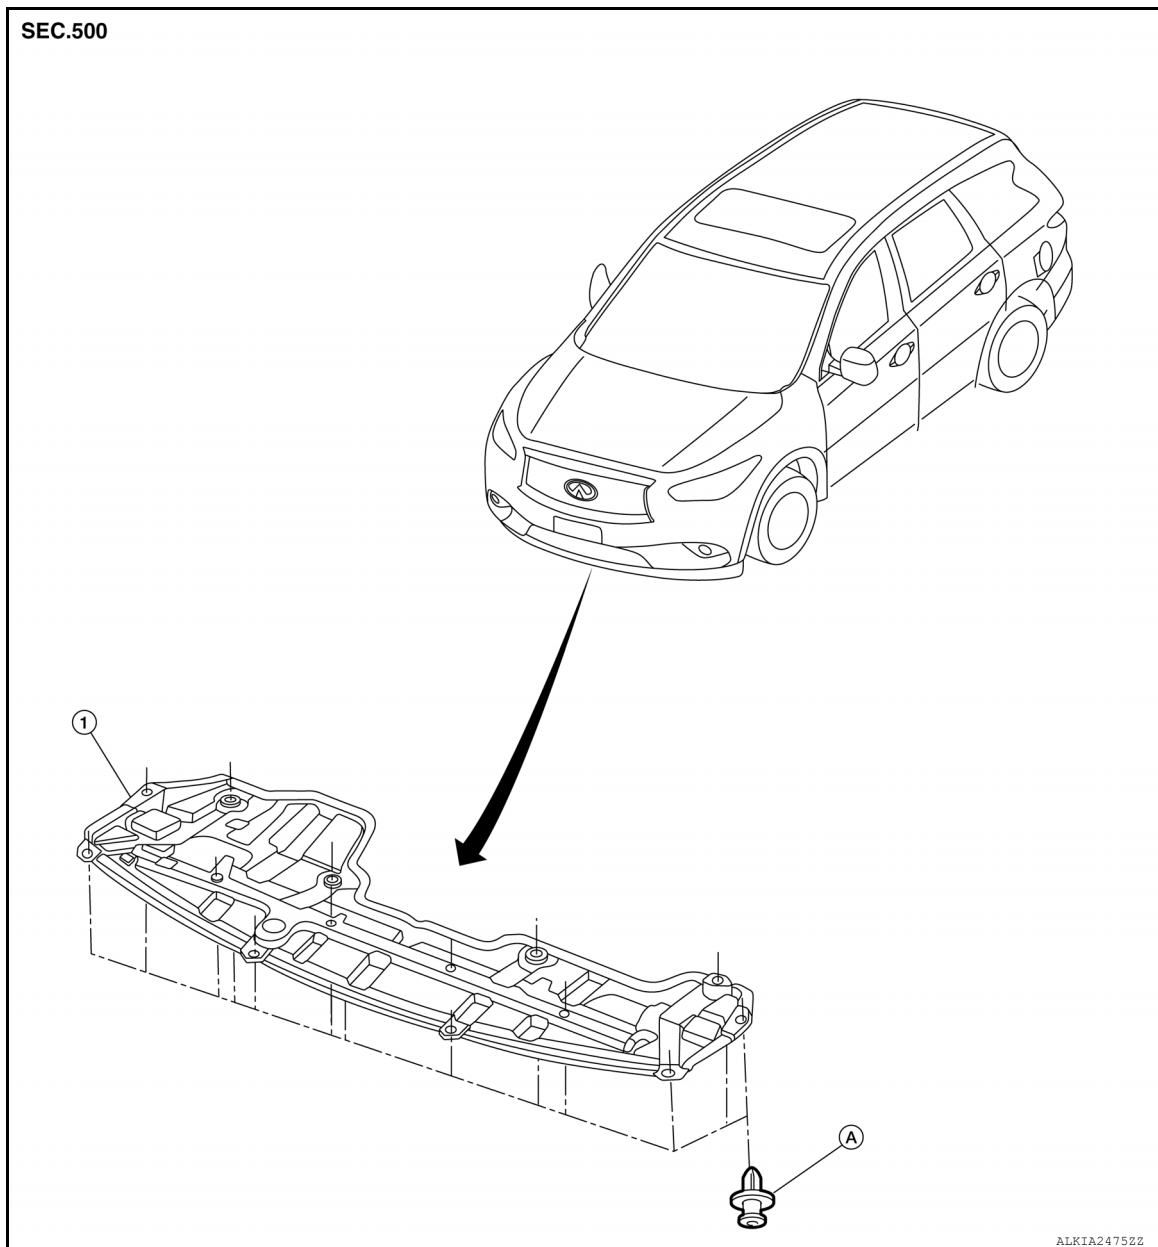

1. Front under cover

A. Clip

Removal and Installation

INFOID:000000007914198

REMOVAL

Remove the front under cover clips, and then remove front under cover.

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
EXT
L
M
N
O
P


ROOF SIDE MOLDING

< REMOVAL AND INSTALLATION >

ROOF SIDE MOLDING

Exploded View

INFOID:000000007914203

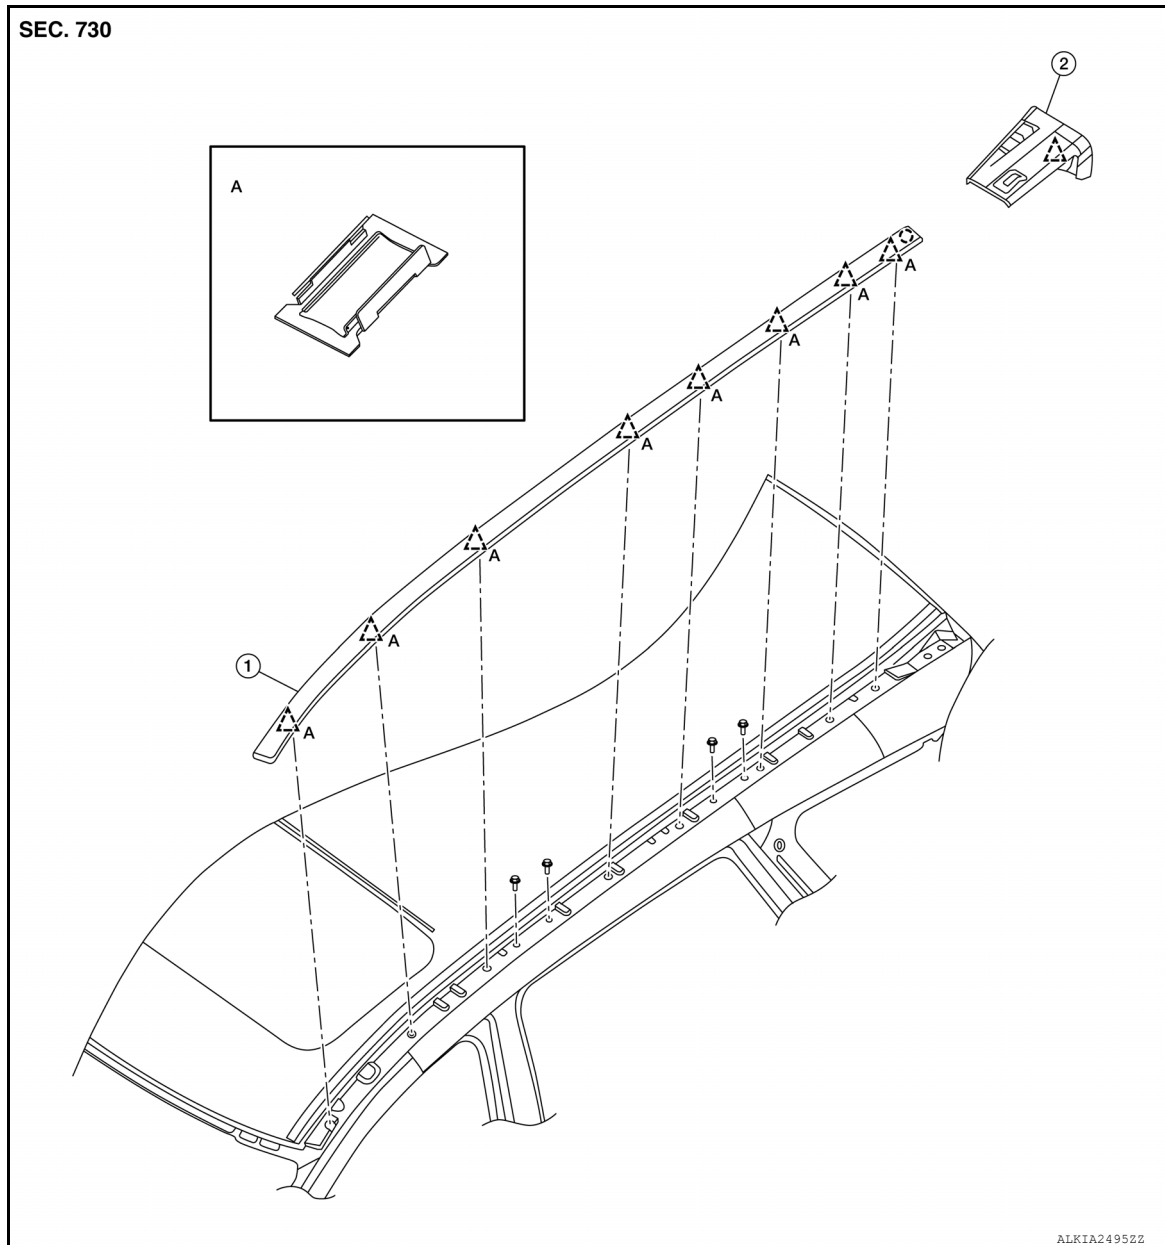

1. Roof side molding

2. Roof side molding end finisher

△ Clip

○ Pawl

Removal and Installation

INFOID:000000007914204

REMOVAL

 
ROOF SIDE MOLDING


< REMOVAL AND INSTALLATION >

1. Release the roof side molding clips, using a suitable tool (A), and then remove the roof side molding.

CAUTION:

Apply protective tape (B) around the roof side molding.

 Clip

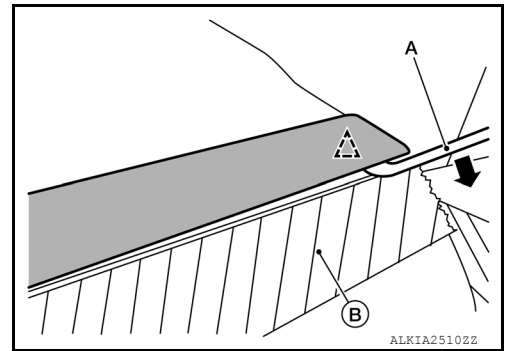

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

To install roof side molding, make sure all clips are on roof side molding. Make sure all old clips have been removed from posts on roof panel.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

EXT


DOOR OUTSIDE MOLDING


< REMOVAL AND INSTALLATION >

DOOR OUTSIDE MOLDING

Exploded View

INFOID:000000008273184

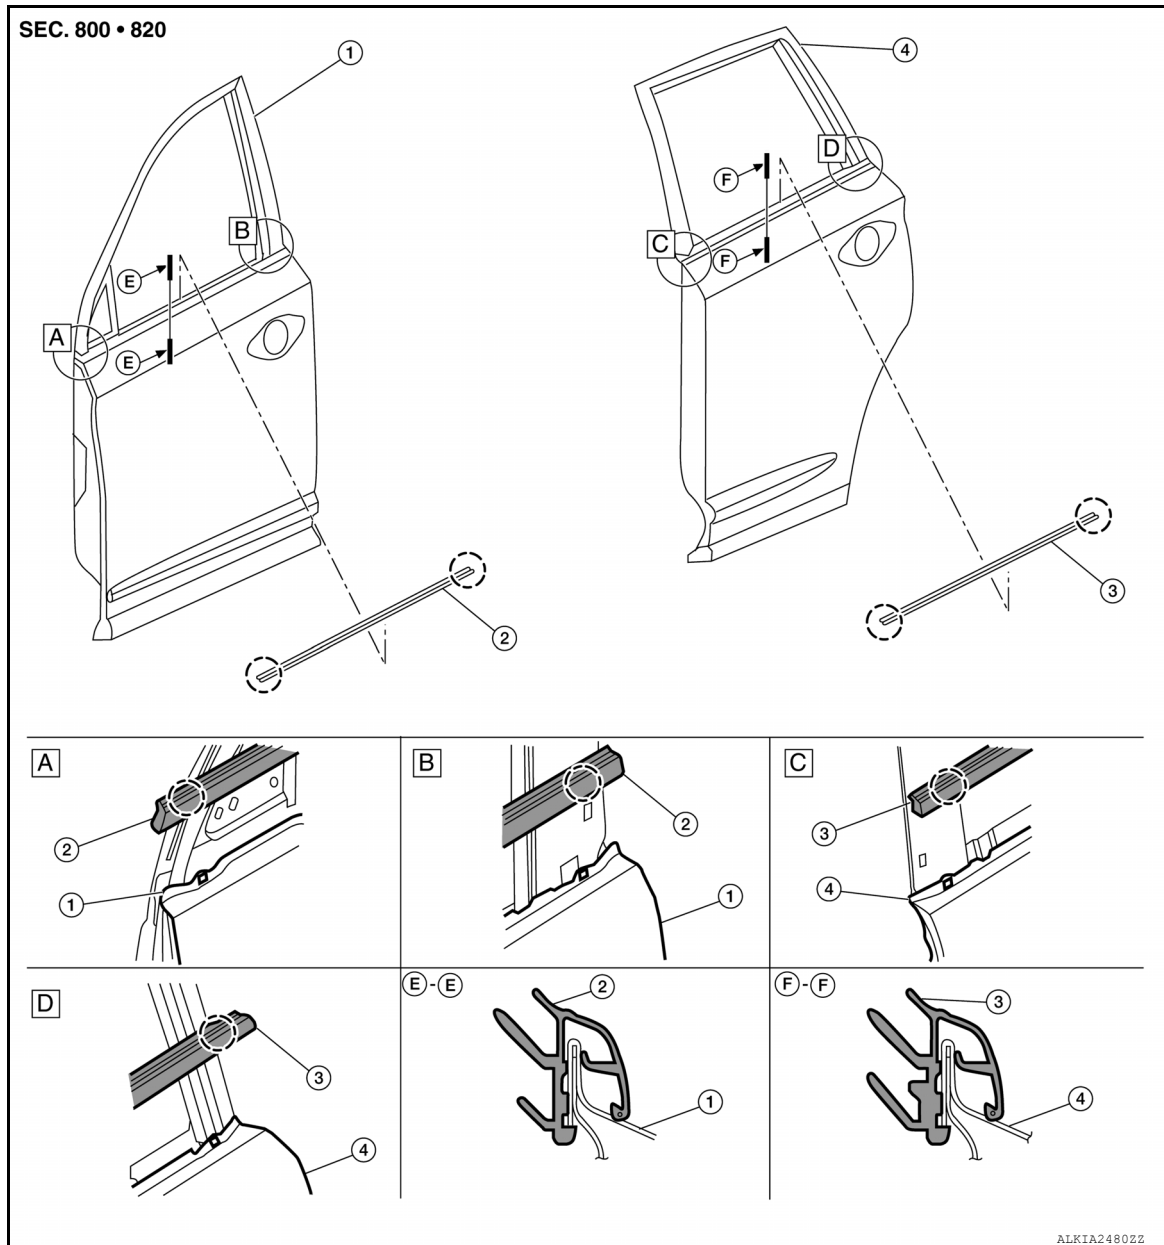

- 1. Front door panel
- 2. Front door outside molding
- 3. Rear door outside molding
- 4. Rear door panel
-  Pawl

Removal and Installation

INFOID:000000008273185

FRONT DOOR OUTSIDE MOLDING

Removal


DOOR OUTSIDE MOLDING

< REMOVAL AND INSTALLATION >

1. Rotate and lift as shown to remove the front door outside molding (1).

CAUTION:

- Apply protective tape on front door panel.
- Do not use excessive force when removing or damage may occur.

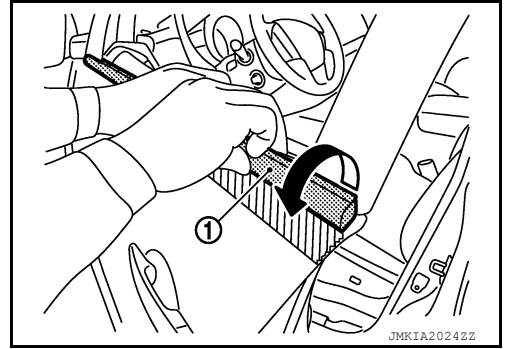

Installation

Installation is in the reverse order of removal.


REAR DOOR OUTSIDE MOLDING

Removal

1. Rotate and lift as shown to remove the rear door outside molding (1).

CAUTION:

- Apply protective tape on rear door panel.
- Do not use excessive force when removing or damage may occur.

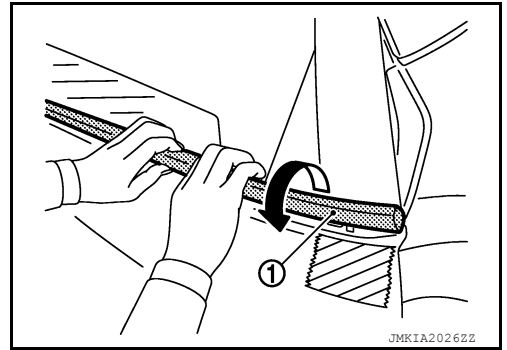

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
EXT
L
M
N
O
P


SIDE GUARD MOLDING

< REMOVAL AND INSTALLATION >

SIDE GUARD MOLDING

Exploded View

INFOID:000000008273187

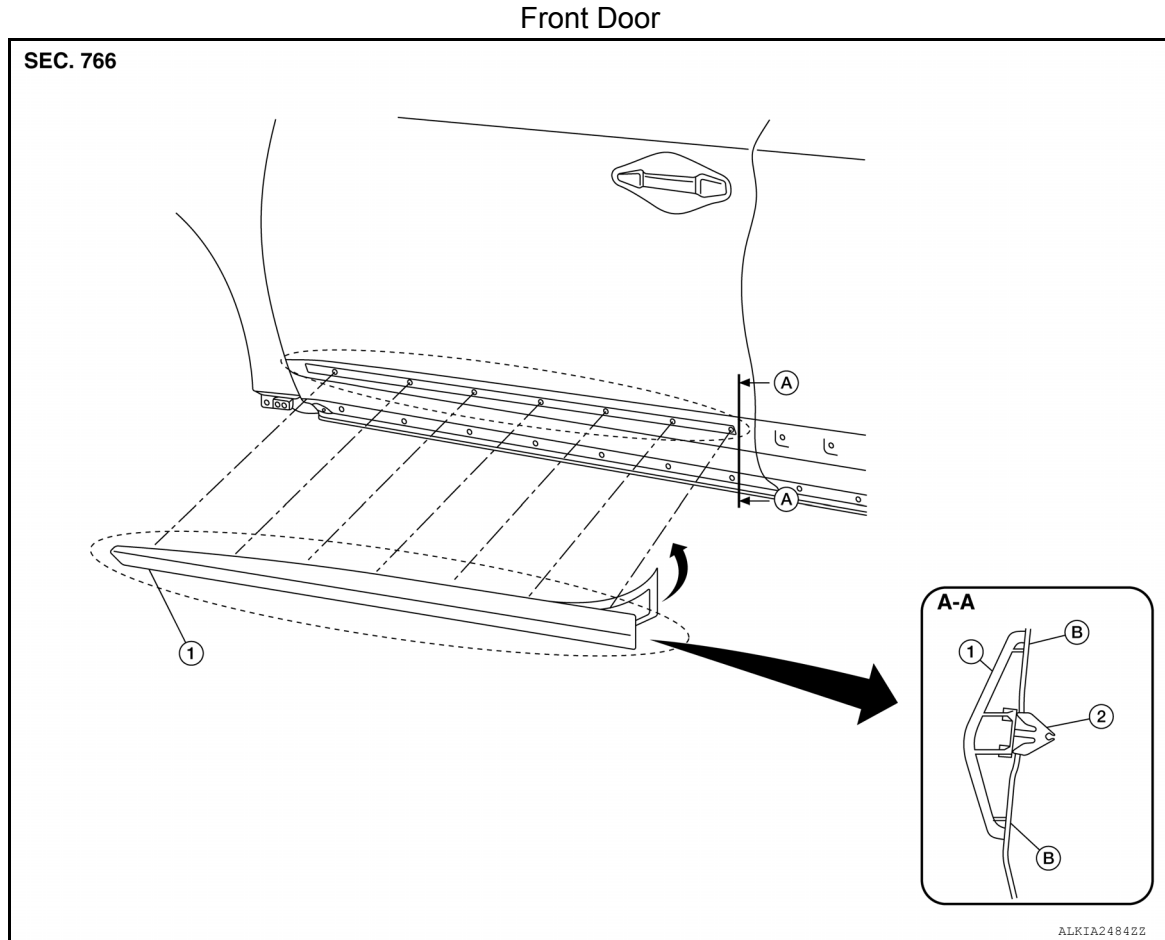

1. Front door side guard molding


2. Clip

B. Double-faced adhesive tape

SIDE GUARD MOLDING

< REMOVAL AND INSTALLATION >

Rear Door

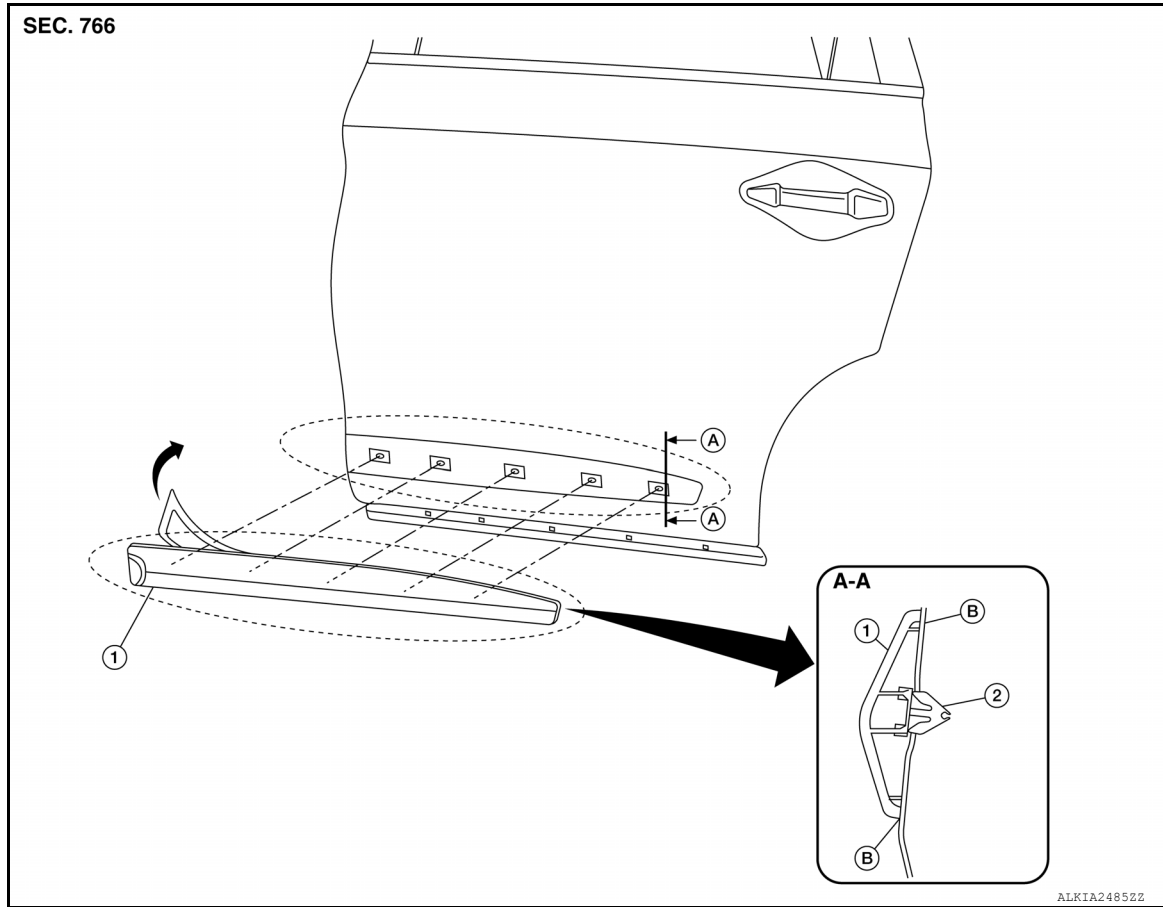

1. Rear door side guard molding

2. Clip

B. Double-faced adhesive tape

Removal and Installation

INFOID:000000008273186

Removal

CAUTION:

Never apply tack-paper adhesive remover to body panel surface finished with lacquer-based paints.

• Original side guard molding is affixed to body panel with double-faced adhesive tape.

1. Heat molding to between 30° - 40°C (86° - 104°F) with a heat gun.
2. Raise end of molding to release clips, then cut away tape to remove molding. Remove all traces of tape.

Installation

• On vehicles coated with Hard Clear Coat, use double-faced 3M adhesive tape Product No. 4210 or equivalent, after priming with 3M primer Product No. N200 or C-100 or equivalent.

• The repair parts are also affixed with double-faced adhesive tape.

• To re-use existing molding, clean all traces of double-faced adhesive tape from the molding and apply new double-faced adhesive tape to the molding.

1. Clean the panel surface with isopropyl alcohol or equivalent to degrease the surface.
2. Heat the panel and molding tape surface to 30° - 40°C (86° - 104°F).
3. Apply the side guard molding.
 - Remove the backing sheet from the tape surface.
 - Align the locating pin into the hole in the outer door.
 - Continue aligning the pins into their corresponding holes in the outer door during installation.
4. Press ends by hand and use a roller to apply 5 kg-f (11 ft-lbs) to press molding to door surface.
 - Apply even pressure along molding to insure proper wet out.

CAUTION:

To secure contact, do not wash vehicle for 24 hours after installation.

A
B
C
D
E
F
G
H
I
J

EXT

L

M

N

O

P


DOOR OUTSIDE LOWER MOLDING

< REMOVAL AND INSTALLATION >

DOOR OUTSIDE LOWER MOLDING

Exploded View

INFOID:000000008276787

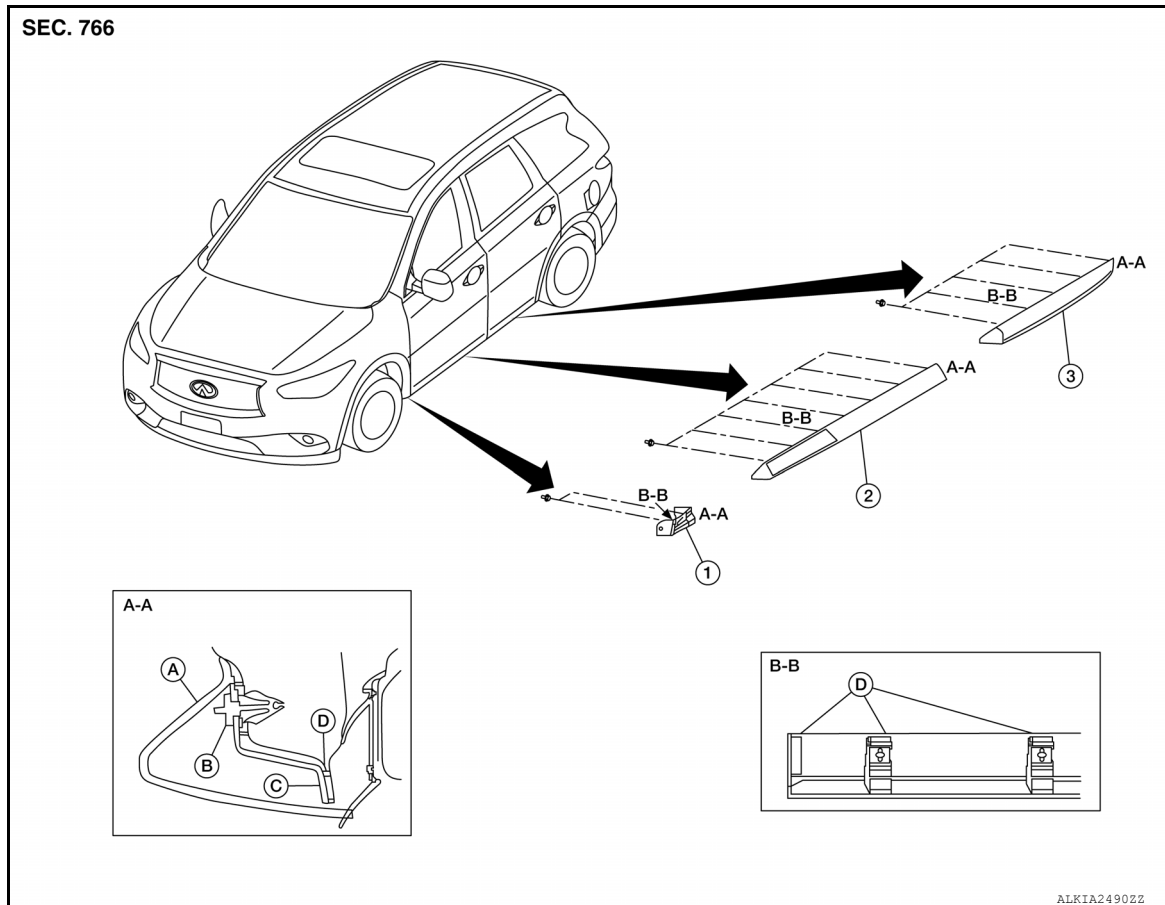

- | | | |
|---------------------------------------|-------------------------------------|------------------------------------|
| 1. Front fender outside lower molding | 2. Front door outside lower molding | 3. Rear door outside lower molding |
| A. Outside lower molding | B. Clip | C. Outer sheet metal |
| D. Adhesive | | |

Removal and Installation

INFOID:000000008276788

FRONT FENDER OUTSIDE LOWER MOLDING


Removal

1. Remove the front fender protector screw.
2. Release the clips from the front fender outside lower molding (1), using a suitable tool (A).

CAUTION:

- Apply protective tape (B) to the front fender to protect the painted surface from damage.
- Release the clips slowly and carefully.
- Do not pull the front fender outside lower molding.

 Clip

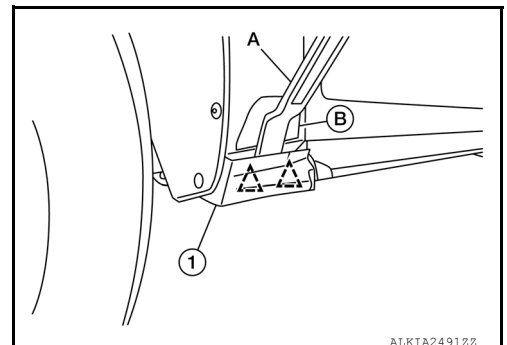

3. Remove the front fender outside lower molding.

Installation

DOOR OUTSIDE LOWER MOLDING

< REMOVAL AND INSTALLATION >

Installation is in the reverse order of removal.

CAUTION:

- When installing, visually check the outside lower molding and the clips and replace with new parts if they have been damaged.
- When installing outside lower molding, make sure that the clips are attached to the molding. Make sure old clips have all been removed from fender.


FRONT DOOR OUTSIDE LOWER MOLDING

Removal

1. Release the clips from the front door outside lower molding (1) by starting at the rear and moving forward, using a suitable tool (A).

CAUTION:

- Apply protective tape (B) to the door to protect the painted surface from damage.
- Release the clips slowly and carefully.
- Do not pull the front door outside lower molding.

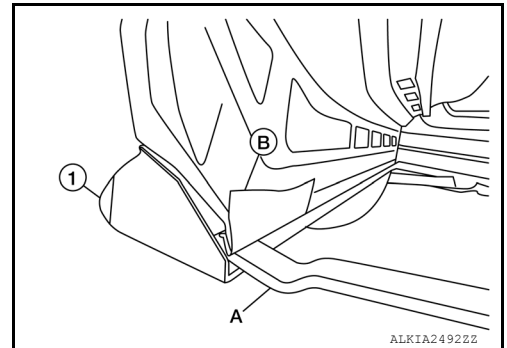

2. Remove the front door outside lower molding.

Installation

Installation is in the reverse order of removal.

CAUTION:

- When installing, visually check the outside lower molding and the clips and replace with new parts if they have been damaged.
- When installing outside lower molding, make sure that the clips are attached to the molding. Make sure old clips have all been removed from door.


REAR DOOR OUTSIDE LOWER MOLDING

Removal

1. Release the clips from the rear door outside lower molding (1) by starting at the rear and moving forward, using a suitable tool (A).

CAUTION:

- Apply protective tape (B) to the door to protect the painted surface from damage.
- Release the clips slowly and carefully.
- Do not pull the rear door outside lower molding.

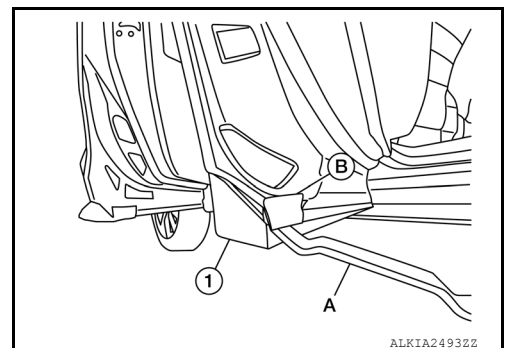

2. Remove the rear door outside lower molding.

Installation

Installation is in the reverse order of removal.

CAUTION:

- When installing, visually check the outside lower molding and the clips and replace with new parts if they have been damaged.
- When installing outside lower molding, make sure that the clips are attached to the molding. Make sure old clips have all been removed from door.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

EXT


SILL MOLDING

< REMOVAL AND INSTALLATION >

SILL MOLDING

Exploded View

INFOID:000000007914209

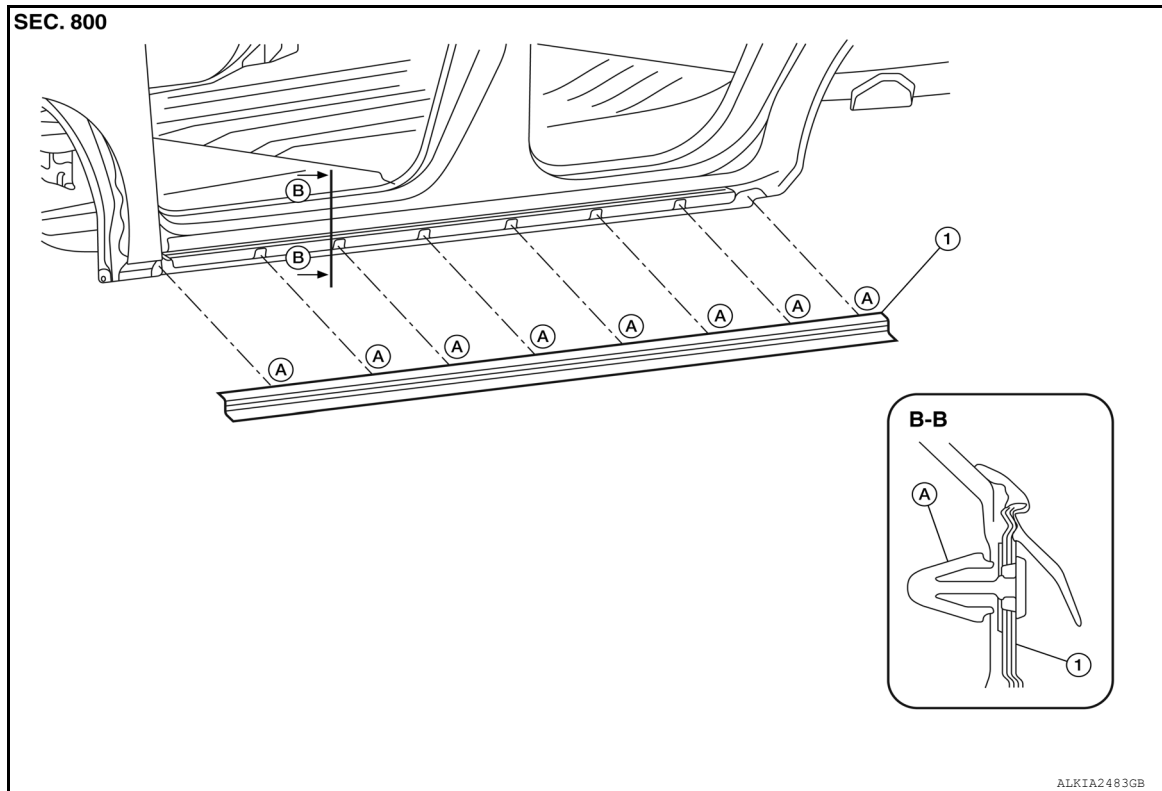

1. Sill molding

A. Clip

Removal and Installation

 
INFOID:000000007914210


REMOVAL

1. Release sill molding clips with a suitable tool (A), and then remove the sill molding (1).

CAUTION:

Disengage the clips slowly and carefully.

 Clip

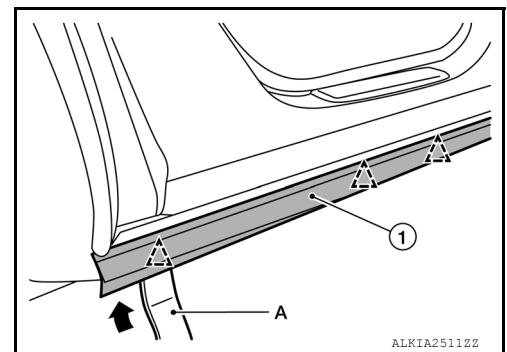

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- When installing, visually check the sill molding and the clips and replace them with new parts if they have been damaged.
- When installing the sill molding, check that clips are securely fitted in panel holes on body, and then press them in.


REAR SPOILER

< REMOVAL AND INSTALLATION >

REAR SPOILER

Exploded View

INFOID:000000008273181

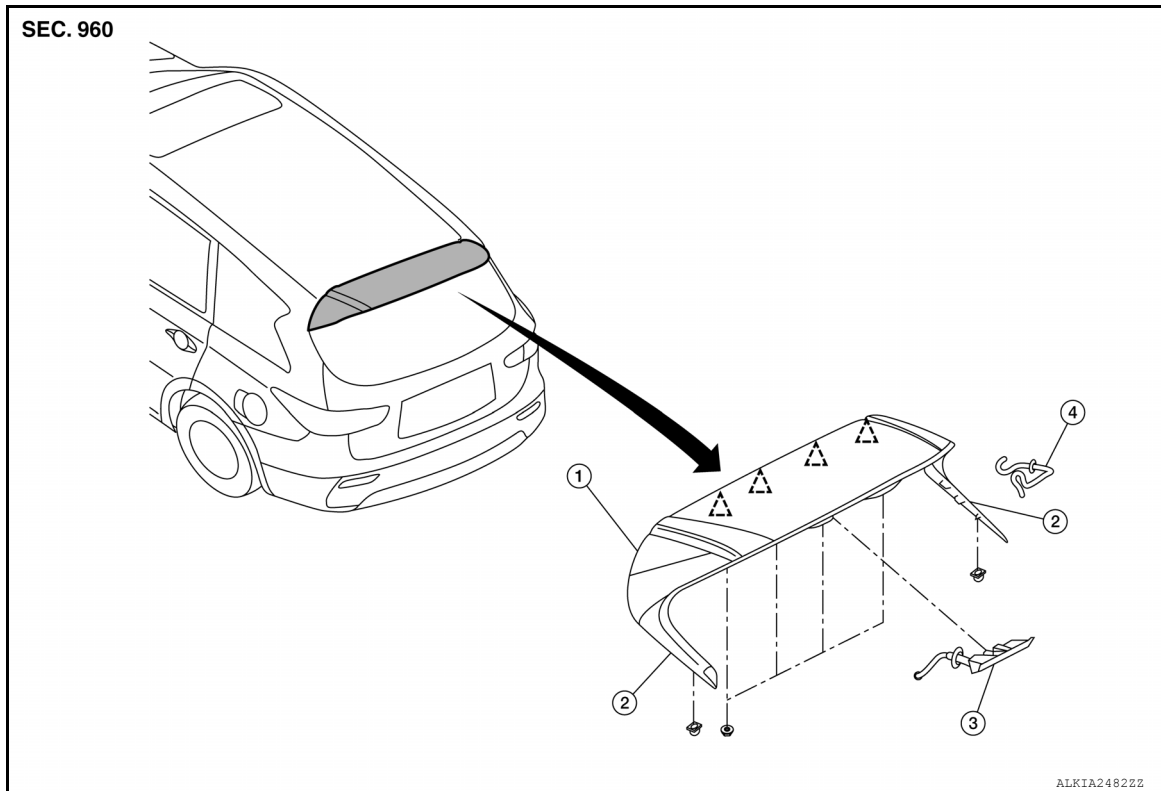

1. Rear spoiler
2. Rear spoiler side trim cover (LH/RH)
3. High-mounted stop lamp
4. Rear washer nozzle
△ Clip

Removal and Installation

INFOID:000000007914216

EXT


REMOVAL

1. Remove the back door side finishers (LH/RH). Refer to [EXT-41, "Removal and Installation"](#).
2. Remove the rear spoiler nuts.
3. Disconnect the harness connector from high-mounted stop lamp.
4. Release the rear washer nozzle tube.
5. Release the rear spoiler clips with a suitable tool (A), and then remove the rear spoiler.

CAUTION:

Apply protective tape (B) to the roof panel and rear spoiler to protect the painted surface from damage.

△: Clip

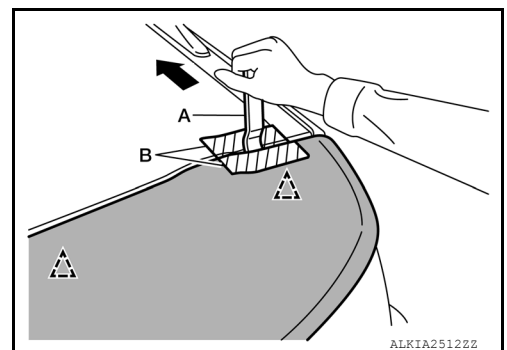

6. Remove following parts after removing rear spoiler.
 - High-mounted stop lamp
 - Rear spoiler side trim covers (LH/RH)
 - Rear washer nozzle

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

REAR SPOILER

< REMOVAL AND INSTALLATION >

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- **When installing, visually check the rear spoiler and the clips and replace them with new parts if they are damaged.**
- **When installing rear spoiler, make sure that the clips and bolts are securely placed in back door panel holes, and then press them in.**
- **Do not wash the vehicle within 24 hours after installing to allow adhesive time to cure.**


BACK DOOR OUTER FINISHER

< REMOVAL AND INSTALLATION >

BACK DOOR OUTER FINISHER

Exploded View

INFOID:000000007914219

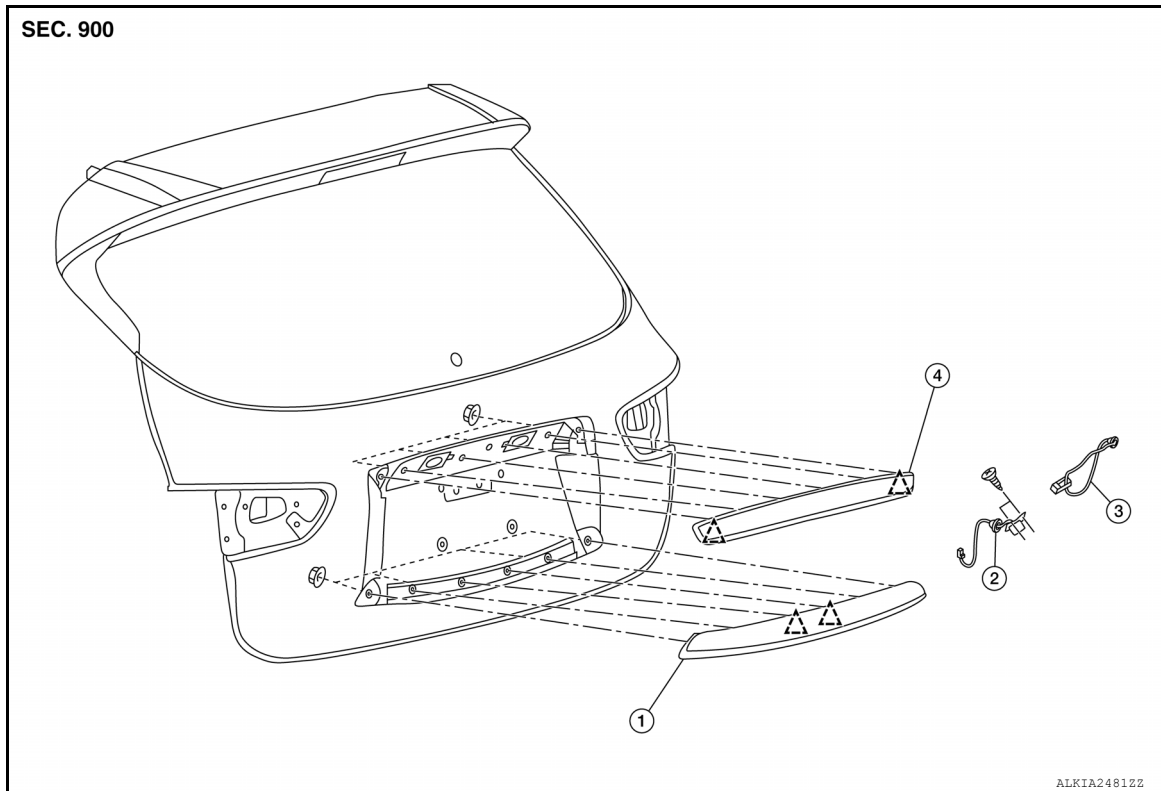

- | | | |
|-----------------------------------|---------------------|------------------------------------|
| 1. Back door outer lower finisher | 2. Rear view camera | 3. Back door opener request switch |
| 4. Back door outer upper finisher | △ Clip | |

Removal and Installation

INFOID:000000007914220

EXT

Back Door Outer Upper Finisher

Removal

1. Remove the back door lower finisher. Refer to [INT-34, "BACK DOOR FINISHER : Removal and Installation"](#).
2. Disconnect the harness connectors from rear view camera and back door opener switch.
3. Remove the back door outer upper finisher nuts.
4. Release the clips, and then remove the back door outer upper finisher.
5. Remove the following parts after removing back door outer upper finisher.
 - Rear view camera
 - Back door opener switch
 - License lamp

Installation

Installation is in the reverse order of removal.

Back Door Outer Lower Finisher

Removal

1. Remove the back door lower finisher. Refer to [INT-34, "BACK DOOR FINISHER : Removal and Installation"](#).
2. Remove the back door outer lower finisher nuts.
3. Release clips, and then remove the back door outer lower finisher.

BACK DOOR OUTER FINISHER

< REMOVAL AND INSTALLATION >

Installation

Installation is in the reverse order of removal.