

# PWO

SECTION  
POWER OUTLET

## CONTENTS

<b>POWER SOCKET</b>	
<b>PRECAUTION</b>	3
<b>PRECAUTIONS</b>	3
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3
Precaution for Work	3
<b>PREPARATION</b>	4
<b>PREPARATION</b>	4
Special Service Tool	4
<b>SYSTEM DESCRIPTION</b>	5
<b>COMPONENT PARTS</b>	5
Component Parts Location	5
<b>WIRING DIAGRAM</b>	6
<b>POWER SOCKET</b>	6
Wiring Diagram	6
<b>REMOVAL AND INSTALLATION</b>	9
<b>POWER SOCKET</b>	9
Removal and Installation	9
<b>AC 120 V OUTLET</b>	
<b>PRECAUTION</b>	10
<b>PRECAUTIONS</b>	10
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	10
Precaution for Work	10
<b>PREPARATION</b>	11
<b>PREPARATION</b>	11
Special Service Tool	11
<b>SYSTEM DESCRIPTION</b>	12
<b>COMPONENT PARTS</b>	12
Component Parts Location	12
Component Description	12
Inverter Unit	12
AC 120V Outlet Main Switch	12
AC 120V Outlet	12
<b>SYSTEM</b>	13
System Diagram	13
System Description	13
Fail-safe	13
<b>ECU DIAGNOSIS INFORMATION</b>	14
<b>INVERTER UNIT</b>	14
Reference Value	14
Fail-safe	15
<b>WIRING DIAGRAM</b>	16
<b>INVERTER UNIT</b>	16
Wiring Diagram	16
<b>BASIC INSPECTION</b>	20
<b>DIAGNOSIS AND REPAIR WORK FLOW</b>	20
Work Flow	20
<b>DTC/CIRCUIT DIAGNOSIS</b>	22
<b>POWER SUPPLY AND GROUND CIRCUIT</b>	22
Diagnosis Procedure	22
<b>AC 120 V OUTLET MAIN SWITCH POWER SUPPLY CIRCUIT</b>	23
Diagnosis Procedure	23
<b>AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL CIRCUIT</b>	24
Diagnosis Procedure	24

---

Component Inspection (AC 120V Outlet Main Switch) .....	24	Description .....	31
<b>AC 120 V POWER OUTPUT CIRCUIT .....</b>	<b>26</b>	<b>REMOVAL AND INSTALLATION .....</b>	<b>32</b>
Diagnosis Procedure .....	26	<b>INVERTER UNIT .....</b>	<b>32</b>
<b>AC 120 V OUTLET MAIN SWITCH INDICATOR CIRCUIT .....</b>	<b>28</b>	Removal and Installation .....	32
Diagnosis Procedure .....	28	<b>AC 120V OUTLET MAIN SW .....</b>	<b>33</b>
<b>SYMPTOM DIAGNOSIS .....</b>	<b>29</b>	Removal and Installation .....	33
<b>NO OUTPUT FROM AC 120 V OUTLET .....</b>	<b>29</b>	<b>AC 120 V OUTLET .....</b>	<b>34</b>
Diagnosis Procedure .....	29	Removal and Installation .....	34
<b>AC 120 V OUTLET MAIN SWITCH INDICATOR DOES NOT TURN ON .....</b>	<b>30</b>	<b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>	<b>35</b>
Diagnosis Procedure .....	30	<b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>	<b>35</b>
<b>NORMAL OPERATING CONDITION .....</b>	<b>31</b>	AC 120V Power Outlet .....	35

&lt; PRECAUTION &gt;

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000008177537

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Work

INFOID:0000000008197430

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components.
- Water soluble dirt: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the dirty area.

Then rub with a soft and dry cloth.

- Oily dirt: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the dirty area.

Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.

- Do not use organic solvent such as thinner, benzene, alcohol, or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

## PREPARATION

< PREPARATION >

[POWER SOCKET]



# PREPARATION

## PREPARATION

### Special Service Tool

INFOID:000000008177541

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

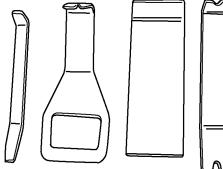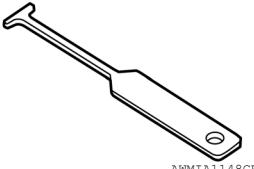
Tool number (Kent-Moore No.) Tool name	Description
— (J-46534) Trim tool set	 AWJIA0483ZZ
— (J-42059) Power socket removal tool	 AWMIA1148GB

# SYSTEM DESCRIPTION

## COMPONENT PARTS

## Component Parts Location

INFOID:0000000008117052

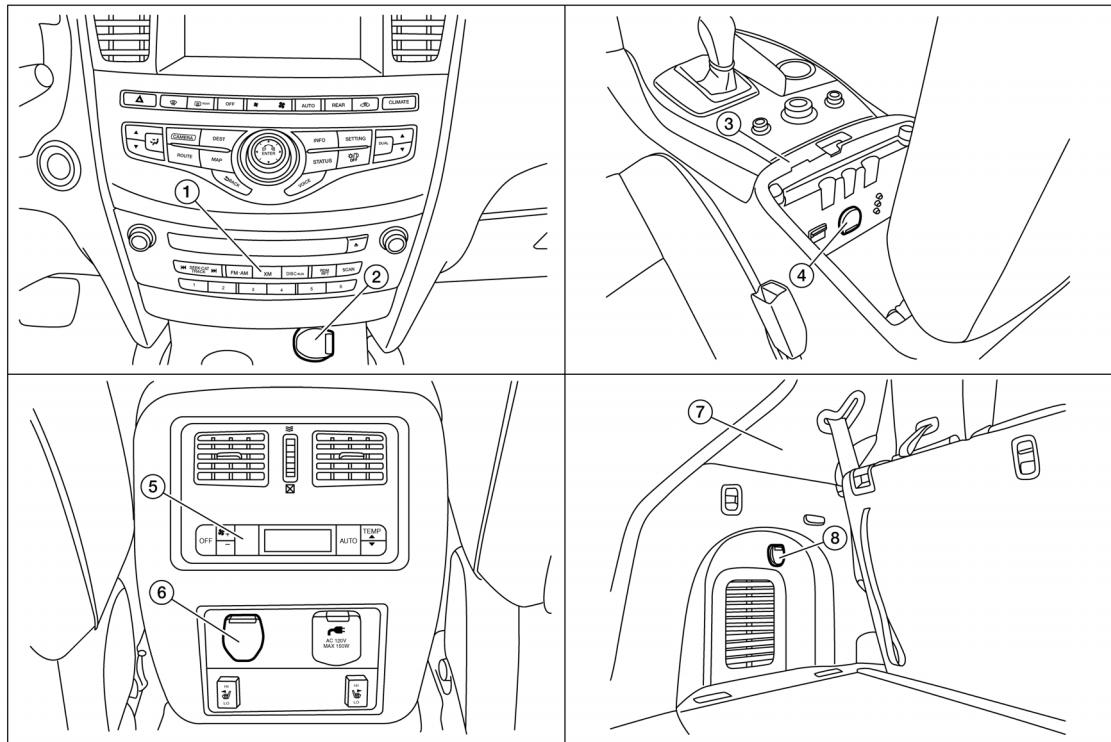

ALMIA0549ZZ

- |                                   |   |                              |
|-----------------------------------|---|------------------------------|
| 1. A/C and AV switch assembly     | 2. Front console power socket (for cigarette lighter) | 3. Center console            |
| 4. Console power socket           | 5. Rear air control                                   | 6. Rear console power socket |
| 7. Luggage side finisher lower LH | 8. Rear cargo power socket                            |                              |

A  
B  
C  
D  
E  
F  
G  
H  
I  
JK  
L

PWO

N  
O  
P

# POWER SOCKET

< WIRING DIAGRAM >


[POWER SOCKET]

## WIRING DIAGRAM POWER SOCKET

### Wiring Diagram

INFOID:0000000008117053

POWER SOCKET

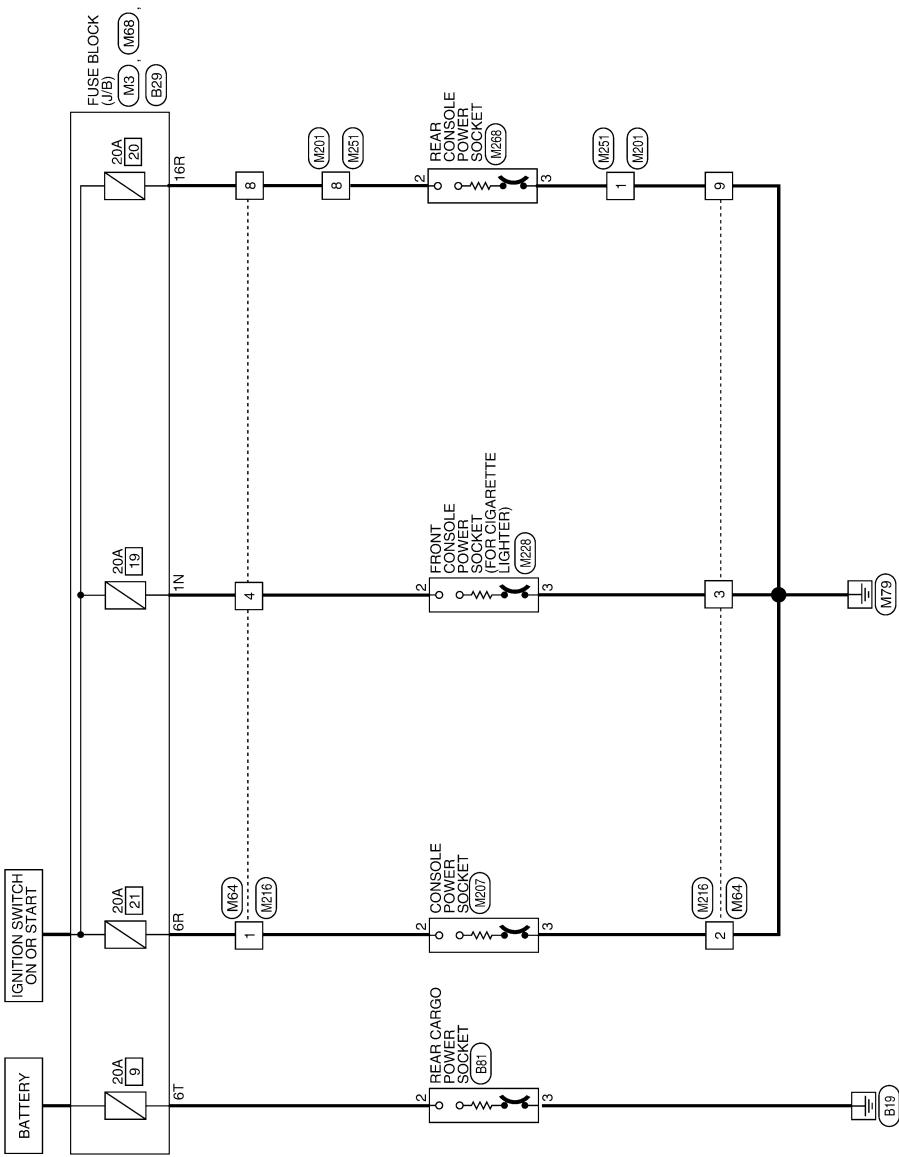

ABMW A1503GB


# POWER SOCKET

< WIRING DIAGRAM >

[POWER SOCKET]

## POWER SOCKET CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK(J/B)
Connector Color	WHITE

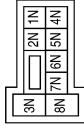

**H.S.**

Connector No.	M64
Connector Name	WIRE TO WIRE
Connector Color	WHITE



**H.S.**

Terminal No.	Color of Wire	Signal Name
1N	LG	-


Terminal No.	Color of Wire	Signal Name
1	Y	-
2	B	-
3	B	-
4	LG	-
8	BG	-
9	B	-

## POWER SOCKET

Connector No.	M68
Connector Name	FUSE BLOCK(J/B)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
6R	Y	-
16R	BG	-

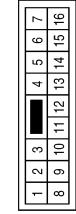

Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6
8	9	10
9	10	11
10	11	12
11	12	13
12	13	14
13	14	15
14	15	16



Connector No.	M207
Connector Name	CONSOLE POWER SOCKET
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
2	BG	-
3	B	-
4	R	-
8	BG	-
9	B	-

Terminal No.	Color of Wire	Signal Name
1	BG	-
2	B	-
3	B	-



A B C D E F G H I K L M O P Q R S T Z

# POWER SOCKET


< WIRING DIAGRAM >

[POWER SOCKET]

Connector No.	M228
Connector Name	FRONT CONSOLE POWER SOCKET(FOR CIGARETTE LIGHTER)
Connector Color	WHITE
Connector Color	GRAY



Connector No.	M251
Connector Name	WIRE TO WIRE
Connector Color	WHITE
Connector Color	GRAY

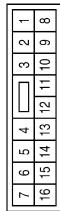

Terminal No.	Color of Wire	Signal Name
2	R	-
3	B	-

Terminal No.	Color of Wire	Signal Name
1	B	-
8	BG	-

Connector No.	B29
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6T	L	-

Connector No.	B81
Connector Name	REAR CARGO POWER SOCKET
Connector Color	GRAY



2	—	—
3	—	—

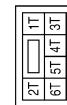

Connector No.	B81
Connector Name	REAR CARGO POWER SOCKET
Connector Color	GRAY



2	L	—
3	GR	—

AEMIA3649GB

# REMOVAL AND INSTALLATION

## POWER SOCKET

### Removal and Installation

INFOID:000000008177545

FRONT CONSOLE POWER SOCKET, CONSOLE POWER SOCKET, REAR CONSOLE POWER SOCKET or REAR CARGO POWER SOCKET

**NOTE:**



If unable to use the Tool because of power socket location or access to the harness connector, then further removal of interior components may be required. Refer to [IP-22, "Removal and Installation"](#) (Front Console Power Socket), [IP-18, "Removal and Installation"](#) (Console Power Socket), [IP-27, "Disassembly and Assembly"](#) (Rear Console Power Socket) or Rear Cargo Power Socket [INT-29, "LUGGAGE SIDE LOWER FINISHER : Removal and Installation"](#).

#### Removal

1. Remove the fuse for the power socket.
2. Insert one side of the Tool (A) into one of the square holes inside the power socket.

**Tool number** : — (J-42059)

3. Lift up the handle of the Tool until the other side snaps into the other square hole in the power socket.
4. Pull the power socket straight out with the Tool.
5. Disconnect the harness connector from the power socket.
6. Remove the ring from the power socket finisher while pressing the pawls.

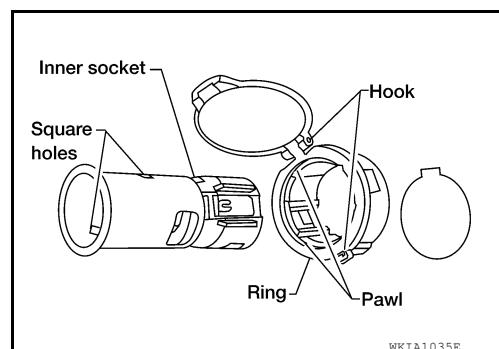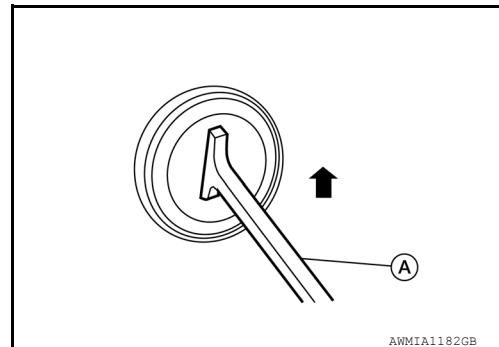


#### Installation

Installation is in the reverse order of removal.

**NOTE:**

Make sure to align the tab with the square notched area during installation.

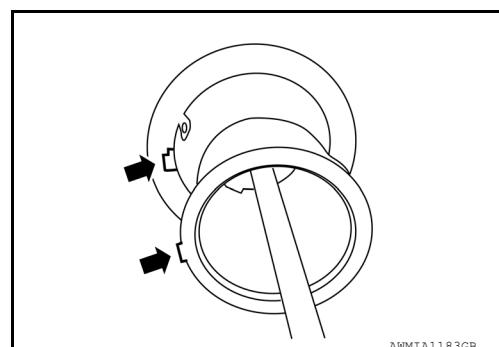

&lt; PRECAUTION &gt;

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000008197435

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Work

INFOID:0000000008197431

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components.
- Water soluble dirt: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the dirty area.  
Then rub with a soft and dry cloth.
- Oily dirt: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the dirty area.  
Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol, or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

## PREPARATION

[AC 120 V OUTLET]

< PREPARATION >


# PREPARATION

## PREPARATION

### Special Service Tool

INFOID:000000008177542

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

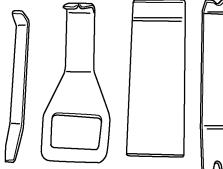Tool number (Kent-Moore No.)	Description
— (J-46534) Trim tool set	 AWJIA0483ZZ

A

B

C

D

E

F

G

H

I

J

K

L

PWO

N

O

P

## COMPONENT PARTS

< SYSTEM DESCRIPTION >


[AC 120 V OUTLET]

# SYSTEM DESCRIPTION

## COMPONENT PARTS

### Component Parts Location

INFOID:0000000008117054

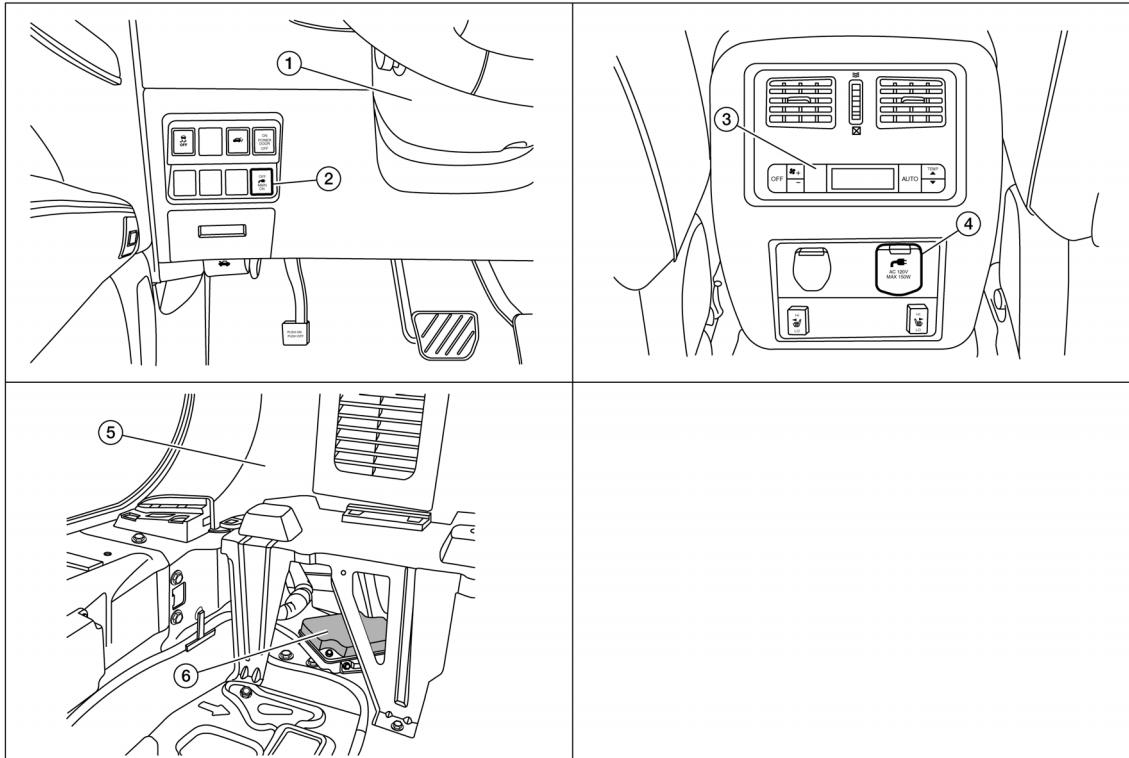

ALMIA05502Z

- 1. Steering column
- 4. AC 120V outlet

- 2. AC 120V outlet main switch
- 5. Luggage side finisher lower LH

- 3. Rear air control
- 6. Inverter unit (view with storage box removed)

### Component Description

INFOID:0000000008117055

Component	Reference
Inverter unit	<a href="#">PWO-12, "Inverter Unit"</a>
AC 120V outlet main switch	<a href="#">PWO-12, "AC 120V Outlet Main Switch"</a>
AC 120V outlet	<a href="#">PWO-12, "AC 120V Outlet"</a>

#### Inverter Unit

INFOID:0000000008117056

The inverter unit converts 12V DC to 120V AC.

#### AC 120V Outlet Main Switch

INFOID:0000000008117057

The AC outlet main switch allows operation of the inverter unit in 150W AC 120V mode.

#### AC 120V Outlet

INFOID:0000000008117058

The AC 120V outlet allow use of AC components up to 150W.

# SYSTEM


[AC 120 V OUTLET]

< SYSTEM DESCRIPTION >

## SYSTEM

### System Diagram

INFOID:0000000008117059

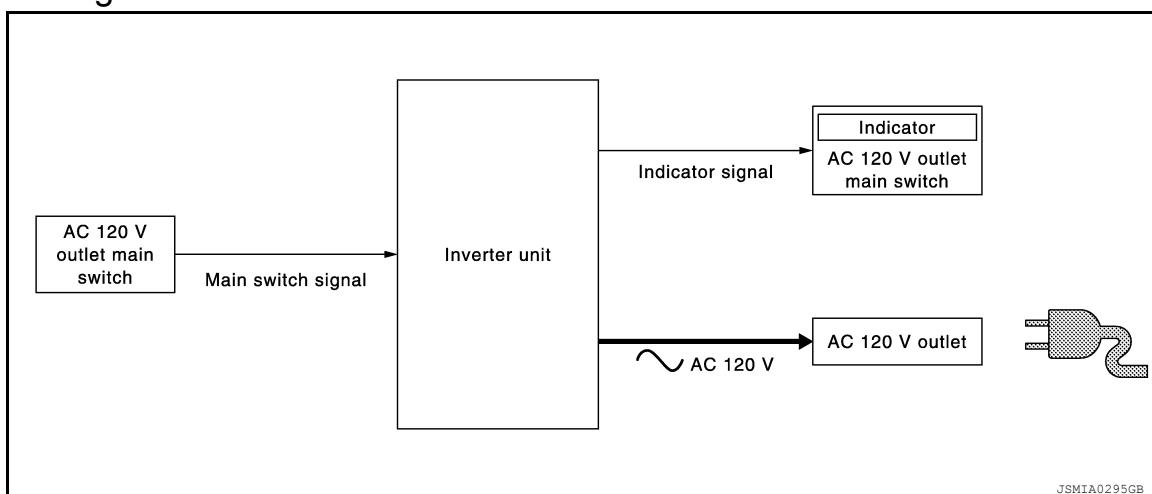

JSMIA0295GB

### System Description

INFOID:0000000008117060

- When turning ON the AC 120V outlet main switch with the ignition switch ON, the Indicator turns ON and the inverter unit is activated allowing the use of devices up to 150W.
- The inverter unit converts 12V DC to 120V AC and outputs the converted voltage to the AC 120V outlet two seconds after the AC 120V outlet main switch is turned ON.

### Fail-safe

INFOID:0000000008117061

When a malfunction listed below occurs, the inverter unit turns OFF the AC 120V outlet main switch indicator and stops the output.

Malfunction item	Fail-safe condition	Fail-safe cancellation condition
Inverter unit power supply voltage is greater than 15V	When inverter unit input voltage rises above 15V, the output will be suspended to protect the inverter unit.	After the inverter unit power supply voltage drops below 15V, the AC 120V outlet main switch ON => OFF => ON operation allows normal return.
Inverter unit power supply voltage is less than 11.5V for 2 seconds or more	When inverter unit input voltage is lowered, the output will be suspended to protect the battery from running out.	After the inverter unit power supply voltage rises above 11.5V, the AC 120V outlet main switch ON => OFF => ON operation allows normal return.
Inverter unit power supply voltage is less than 9V		
Inverter unit AC 120V output voltage is greater than 170V	When inverter unit AC 120V output voltage is greater than 170V, the output will be suspended.	After the inverter unit AC 120V output voltage drops below 170V, the AC 120V outlet main switch ON => OFF => ON operation allows normal return.
Inverter unit input current is greater than 13.3A	When inverter unit input current rises above 13.3A, the output will be suspended to prevent over current (e.g., connecting an electric appliance exceeding rated output).	After the inverter unit input current drops below 13.3A, the AC 120V outlet main switch ON => OFF => ON operation allows normal return.
Inverter unit is overheated	When the inverter unit is overheated [thermistor temperature above 100°C (212°F)], the output will be suspended to protect the inverter unit.	After the inverter unit temperature is lowered, the AC 120V outlet main switch ON => OFF => ON operation allows normal return.
Inverter unit output signal (AC 120V output signal) is shorted	When inverter unit output signal is shorted, the output will be suspended.	After recovering from inverter unit output signal short, the AC 120V outlet main switch ON => OFF => ON operation allows normal return.

# INVERTER UNIT

< ECU DIAGNOSIS INFORMATION >


[AC 120 V OUTLET]

## ECU DIAGNOSIS INFORMATION INVERTER UNIT



### Reference Value

INFOID:0000000008117062

### TERMINAL LAYOUT

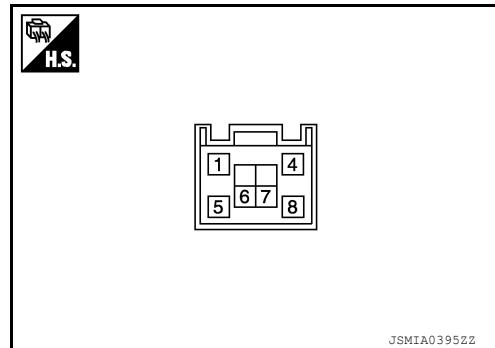

### PHYSICAL VALUES

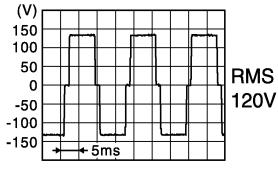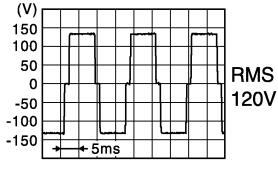Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
1 (W)	5 (B)	AC output 2	Output	Ignition switch ON	AC 120V outlet main switch OFF
					AC 120V
					Reference value  <small>JSMIA0397GB</small>
4 (W)	Ground	Battery power supply	Input	Ignition switch OFF	
5 (B)	1 (W)	AC output 1	Output	Ignition switch ON	AC 120V outlet main switch OFF
					AC 120V
					Reference value  <small>JSMIA0397GB</small>

# INVERTER UNIT

< ECU DIAGNOSIS INFORMATION >

[AC 120 V OUTLET]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			Value (Approx.)
6 (W)		AC 120 V outlet main switch	Input	Ignition switch ON	AC 120V outlet main switch OFF	0V
					AC 120V outlet main switch ON	12V
7 (G)	Ground	AC 120 V outlet main switch	Output	Ignition switch ON	AC 120V outlet main switch OFF	0V
					AC 120V outlet main switch ON	5.2V
8 (B)		Ground	—	Ignition switch ON		0V

**CAUTION:**

- To measure AC 120V output signal, always use the circuit tester or oscilloscope AC range. Never allow the probes to contact each other.
- Because of modified sine wave output of the AC 120V output signal, voltage cannot be measured accurately without using a circuit tester that can measure true RMS (root mean square).

## Fail-safe

INFOID:0000000008117063

When a malfunction listed below occurs, the inverter unit turns OFF the AC 120V outlet main switch indicator and stops the output.

Malfunction item	Fail-safe condition	Fail-safe cancellation condition
Inverter unit power supply voltage is greater than 15V	When inverter unit input voltage rises above 15V, the output will be suspended to protect the inverter unit.	After the inverter unit power supply voltage drops below 15V, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit power supply voltage is less than 11.5V for 2 seconds or more	When inverter unit input voltage is lowered, the output will be suspended to protect the battery from running out.	After the inverter unit power supply voltage rises above 11.5V, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit power supply voltage is less than 9V		
Inverter unit AC 120V output voltage is greater than 170V	When inverter unit AC 120V output voltage is greater than 170V, the output will be suspended.	After the inverter unit AC 120V output voltage drops below 170V, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit input current is greater than 13.3A	When inverter unit input current rises above 13.3A, the output will be suspended to prevent over current (e.g., connecting an electric appliance exceeding rated output).	After the inverter unit input current drops below 13.3A, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit is overheated	When the inverter unit is overheated [thermistor temperature above 100°C (212°F)], the output will be suspended to protect the inverter unit.	After the inverter unit temperature is lowered, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.
Inverter unit output signal (AC 120V output signal) is shorted	When inverter unit output signal is shorted, the output will be suspended.	After recovering from inverter unit output signal short, the AC 120V outlet main switch ON ⇒ OFF ⇒ ON operation allows normal return.

# INVERTER UNIT

< WIRING DIAGRAM >


[AC 120 V OUTLET]

## WIRING DIAGRAM INVERTER UNIT

### Wiring Diagram

INFOID:0000000008117064

#### INVERTER SYSTEM

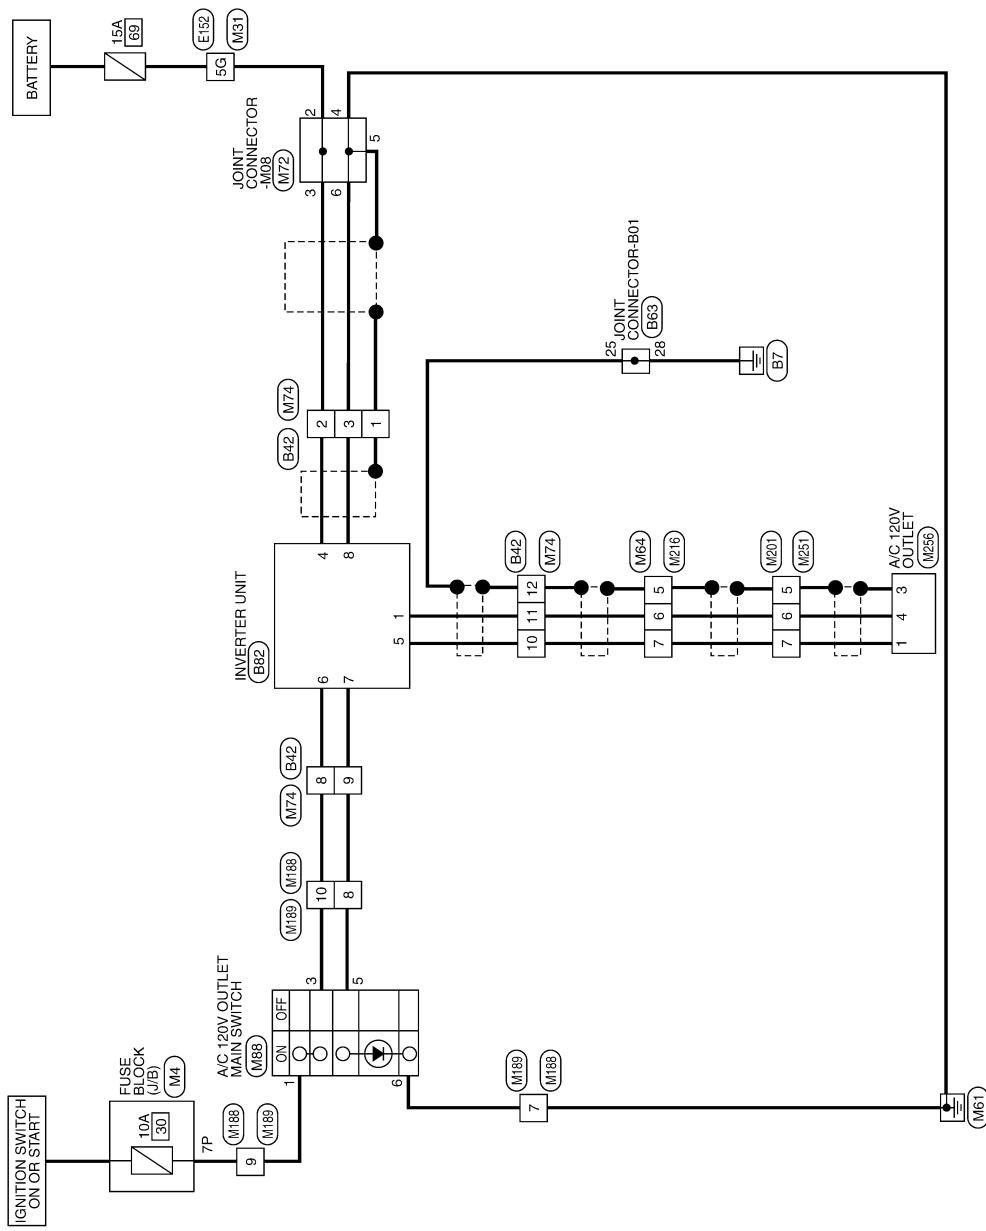





ABMWA1504GB

# INVERTER UNIT

< WIRING DIAGRAM >

[AC 120 V OUTLET]

## INVERTER SYSTEM

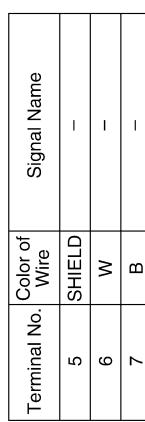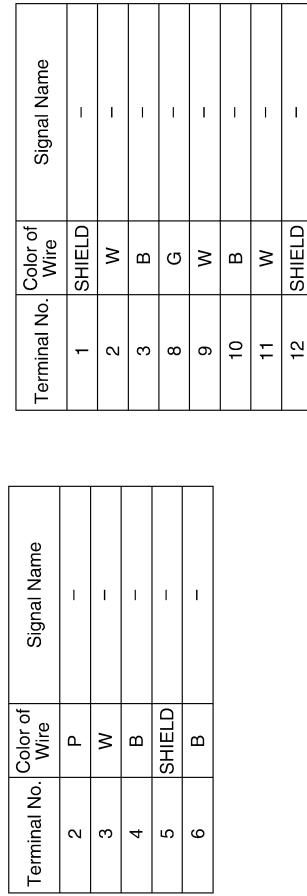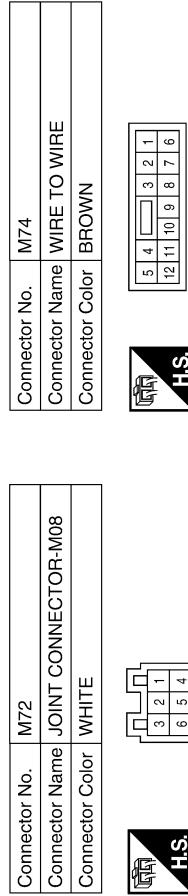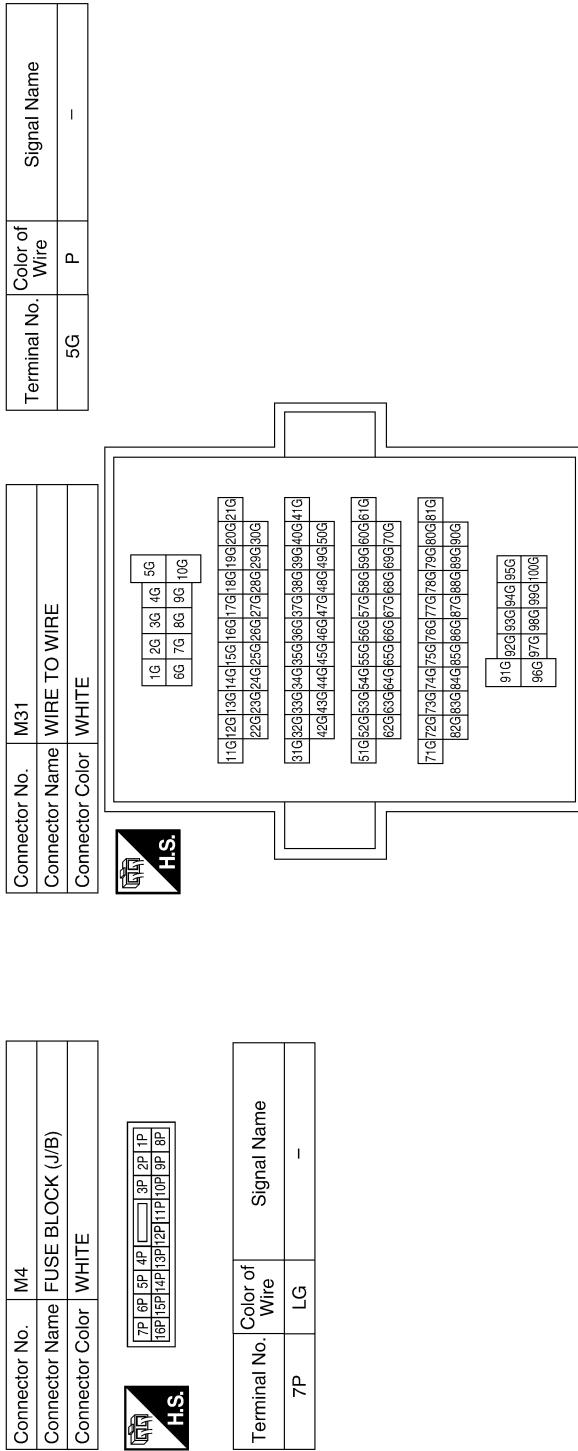

ABMIA3650GB


A B C D E F G H I K L M O P Q Z

# INVERTER UNIT


< WIRING DIAGRAM >

[AC 120 V OUTLET]


Connector No.	M188
Connector Name	WIRE TO WIRE
Connector Color	WHITE

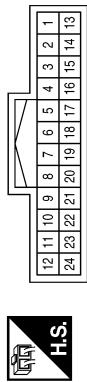

Connector No.	M201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

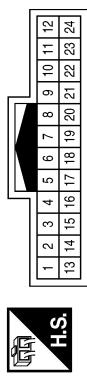


Connector No.	M88
Connector Name	A/C 120V OUTLET MAIN SWITCH
Connector Color	BLACK

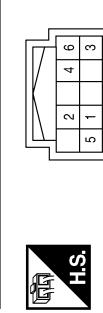


Terminal No.	Color of Wire	Signal Name
1	LG	—
3	G	—
5	W	—
6	B	—
7	B	—
8	W	—
9	LG	—
10	G	—

Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6
5	6	7
6	7	8
7	8	9
8	9	10
9	10	11
10	11	12
11	12	13
12	13	14
13	14	15
14	15	16


Connector No.	M189
Connector Name	WIRE TO WIRE
Connector Color	WHITE

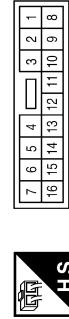

Connector No.	M216
Connector Name	WIRE TO WIRE
Connector Color	WHITE

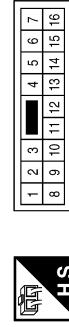

Connector No.	M201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

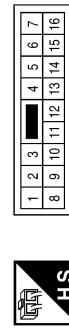

Terminal No.	Color of Wire	Signal Name
5	SHIELD	—
6	W	—
7	B	—
8	B	—
9	W	—
10	LG	—
11	G	—
12	G	—
13	LG	—
14	W	—
15	W	—
16	LG	—


Terminal No.	Color of Wire	Signal Name
7	6	5
8	5	4
9	4	3
10	3	2
11	2	1

# INVERTER UNIT

< WIRING DIAGRAM >

[AC 120 V OUTLET]

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

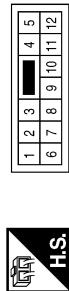

Terminal No.	Color of Wire	Signal Name
1	5G	P
2		-
3		-
4		-
5		-
6		-
7		-
8		-
9		-
10		-
11		-
12		-


2(G)20(G)19(G)8(G)17(G)16(G)15(G)14(G)13(G)12(G)11(G)
3(G)29(G)28(G)27(G)26(G)25(G)24(G)23(G)22(G)
4(G)40(G)39(G)38(G)37(G)36(G)35(G)34(G)33(G)32(G)31(G)
5(G)49(G)48(G)47(G)46(G)45(G)44(G)43(G)42(G)
6(G)60(G)59(G)58(G)57(G)56(G)55(G)54(G)53(G)52(G)51(G)
7(G)69(G)68(G)67(G)66(G)65(G)64(G)63(G)62(G)
8(G)80(G)79(G)78(G)77(G)76(G)75(G)74(G)73(G)72(G)71(G)
9(G)89(G)88(G)87(G)86(G)85(G)84(G)83(G)82(G)
95(G)94(G)93(G)92(G)91(G)
100(G)99(G)98(G)97(G)96(G)



Terminal No.	Color of Wire	Signal Name
1	B	AC1
3	SHIELD	GND
4	W	AC2



Connector No.	M256
Connector Name	A/C 120V OUTLET
Connector Color	WHITE

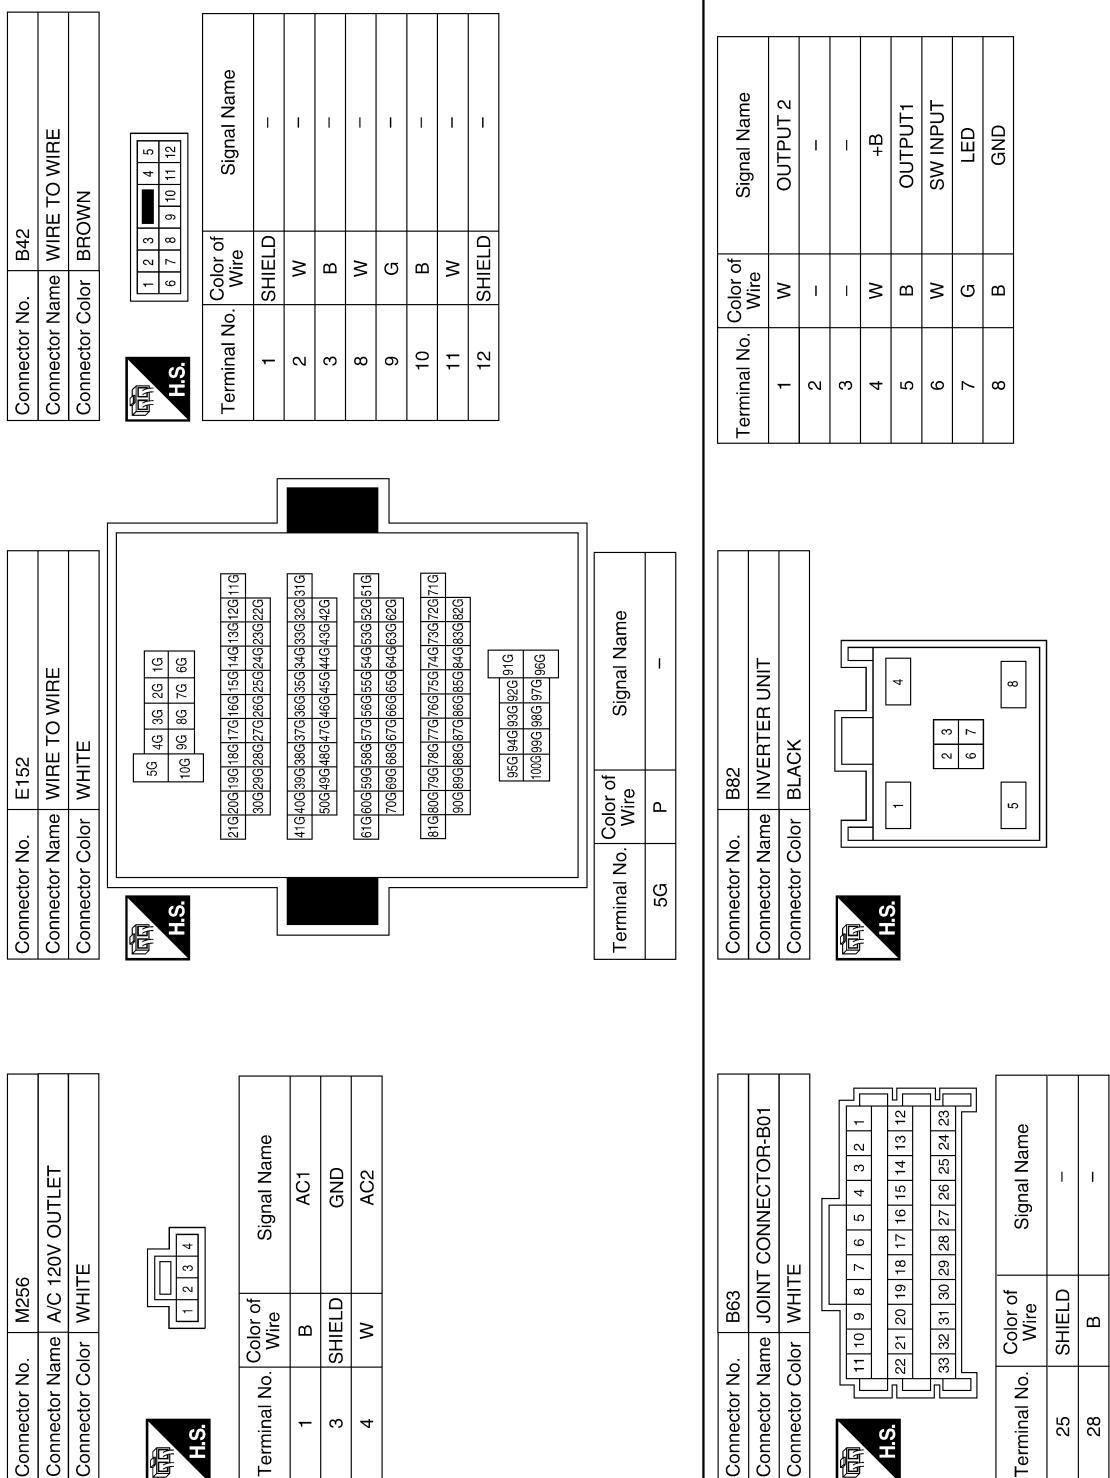

ABMIA3652GB

A B C D E F G H I K L M O P Q Z


# BASIC INSPECTION

## DIAGNOSIS AND REPAIR WORK FLOW

### Work Flow

INFOID:000000008117065

### OVERALL SEQUENCE

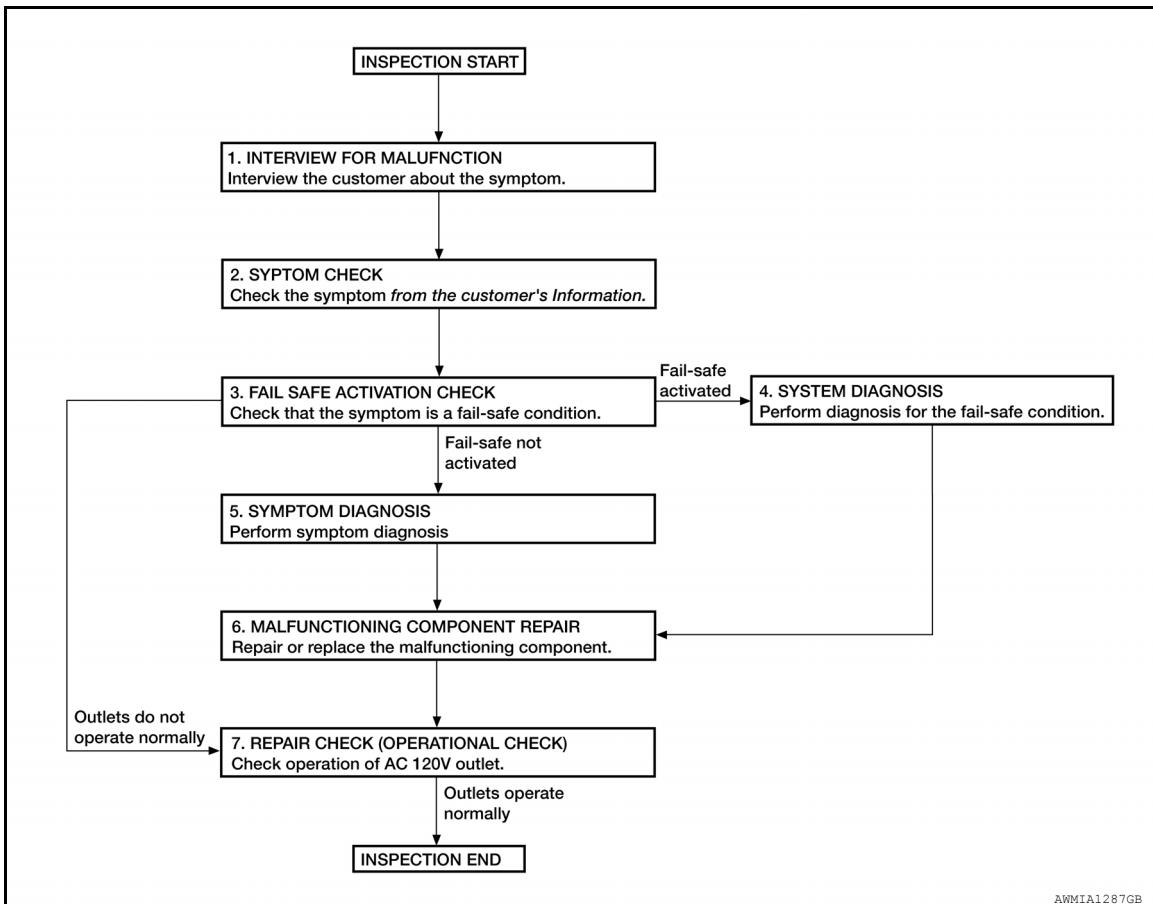

AWMIA1287GB

### DETAILED FLOW

#### 1. INTERVIEW FOR MALFUNCTION

Interview the customer about the symptom.

>> GO TO 2.

#### 2. SYMPTOM CHECK

Check the symptom from the customer's information.

>> GO TO 3.

#### 3. FAIL-SAFE ACTIVATION CHECK

Check that the symptom is a fail-safe condition.

Is fail-safe activated?

YES >> GO TO 4.

NO >> GO TO 5.

#### 4. SYSTEM DIAGNOSIS

Perform diagnosis for the fail-safe activated system. Specify the malfunctioning component.

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[AC 120 V OUTLET]

>> GO TO 6.

## 5. SYMPTOM DIAGNOSIS

Perform symptom diagnosis. Specify the malfunctioning component.

>> GO TO 6.

## 6. MALFUNCTIONING COMPONENT REPAIR

Repair or replace the malfunctioning component.

>> GO TO 7.

## 7. REPAIR CHECK (OPERATION CHECK)

Check operation of AC 120V outlet.

Does the outlet operate normally?

YES >> Inspection End.

NO >> GO TO 3.

A

B

C

D

E

F

G

H

I

J

K

L

PWO

N

O

P

# DTC/CIRCUIT DIAGNOSIS

## POWER SUPPLY AND GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000008117066

Regarding Wiring Diagram information, refer to [PWO-16, "Wiring Diagram".](#)

#### 1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse No.
Battery power supply	69 (15A)

##### Is the fuse blown?

- YES >> Replace the blown fuse after repairing the affected circuit.  
 NO >> GO TO 2.

#### 2. CHECK INVERTER UNIT POWER SUPPLY CIRCUIT

1. Disconnect inverter unit connector B82.
2. Check voltage between inverter unit connector B82 terminal 4 and ground.

Inverter unit		Ground	Voltage (Approx.)
Connector	Terminal		
B82	4	—	Battery voltage

##### Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Repair or replace the inverter unit power supply circuit.

#### 3. CHECK INVERTER UNIT GROUND CIRCUIT

Check continuity between inverter unit connector B82 terminal 8 and ground.

Inverter unit		Ground	Continuity
Connector	Terminal		
B82	8	—	Yes

##### Is the inspection result normal?

- YES >> Inspection End.  
 NO >> Repair or replace the inverter unit ground circuit.

# AC 120 V OUTLET MAIN SWITCH POWER SUPPLY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

## AC 120 V OUTLET MAIN SWITCH POWER SUPPLY CIRCUIT

### Diagnosis Procedure

INFOID:0000000008117068

Regarding Wiring Diagram information, refer to [PWO-16, "Wiring Diagram"](#).

#### 1.CHECK FUSE

Check that the following fuse is not blown.

Signal name	Fuse No.
Ignition switch ON or START	30 (10A)

Is the fuse blown?

YES >> Replace the blown fuse after repairing the affected circuit.

NO >> GO TO 2.

#### 2.CHECK POWER SUPPLY FOR AC 120V OUTLET MAIN SWITCH

1. Turn ignition switch ON.
2. Check voltage between AC 120V outlet main switch connector M88 terminal 1 and ground.

AC 120V outlet main switch		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M88	1	—	Ignition switch ON	Battery voltage
			Ignition switch OFF	0V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the AC 120V main switch power supply circuit.

#### 3.CHECK POWER SUPPLY FOR AC 120V OUTLET MAIN SWITCH

1. Turn ignition switch OFF.
2. Check continuity between AC 120V outlet main switch connector M88 terminal 6 and ground.

AC 120V outlet main switch		Ground	Continuity
Connector	Terminal		
M88	6	—	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace the AC 120V main switch ground circuit.

A

B

C

D

E

F

G

H

I

J

K

L

PWO

N

O

P

# AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

## AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL CIRCUIT

### Diagnosis Procedure

INFOID:0000000008117069

Regarding Wiring Diagram information, refer to [PWO-16, "Wiring Diagram"](#).

#### 1.CHECK AC 120V OUTLET MAIN SWITCH INPUT SIGNAL

1. Turn ignition switch ON.
2. AC 120V outlet main switch ON.
3. Check for voltage between the inverter unit connector B82 terminal 6 and ground.

Inverter unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
B82	6	—	AC 120V outlet main switch OFF	0V
			AC 120V outlet main switch ON	Battery voltage

Is the inspection result normal?

- YES >> Inspection End.  
NO >> GO TO 2.

#### 2.CHECK AC 120V OUTLET MAIN SWITCH

Check AC 120V outlet main switch. Refer to [PWO-24, "Component Inspection \(AC 120V Outlet Main Switch\)"](#).

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace AC 120V outlet main switch.

#### 3.CHECK HARNESS BETWEEN INVERTER UNIT AND AC 120V OUTLET MAIN SWITCH

1. Disconnect inverter unit connector.
2. Check for continuity between the inverter unit connector B82 terminal 6 and AC 120V outlet main switch connector M88 terminal 3.

Inverter unit		AC 120V outlet main switch		Continuity
Connector	Terminal	Connector	Terminal	
B82	6	M88	3	Yes

3. Check for continuity between inverter unit connector B82 terminal 6 and ground.

Inverter unit		Ground	Continuity
Connector	Terminal		
B82	6	—	No

Is the inspection result normal?

- YES >> Inspection End.  
NO >> Repair or replace the AC 120V outlet main switch input signal circuit.

### Component Inspection (AC 120V Outlet Main Switch)

INFOID:0000000008117070

#### 1.CHECK AC 120V OUTLET MAIN SWITCH

1. Turn ignition switch OFF.
2. Disconnect AC 120V outlet main switch connector.
3. Check continuity between terminals 1 and 3 of AC 120V outlet main switch.

## AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL CIRCUIT

[AC 120 V OUTLET]

< DTC/CIRCUIT DIAGNOSIS >

AC 120V outlet main switch terminals	Condition	Continuity
1 – 3	AC 120V outlet main switch ON	Yes
	AC 120V outlet main switch OFF	No

Is the inspection result normal?

YES    >> Inspection End.

NO    >> Replace AC 120V outlet main switch.

A

B

C

D

E

F

G

H

I

J

K

L

PWO

N

O

P

# AC 120 V POWER OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

## AC 120 V POWER OUTPUT CIRCUIT

### Diagnosis Procedure

INFOID:0000000008117071

Regarding Wiring Diagram information, refer to [PWO-16, "Wiring Diagram"](#).

#### 1.CHECK HARNESS BETWEEN INVERTER UNIT AND AC 120V OUTLET

1. Turn ignition switch OFF.
2. Disconnect inverter unit and AC 120V outlet connectors.
3. Check continuity between inverter unit connector B82 terminals 5, 1 and AC 120V outlet connector M256 terminals 1, 4.

Inverter unit		AC 120V outlet		Continuity
Connector	Terminal	Connector	Terminal	
B82	5	M256	1	Yes
	1		4	

4. Check continuity between inverter unit connector B82 terminals 5, 1 and ground.

Inverter unit		Ground	Continuity
Connector	Terminal		
B82	5	—	No
	1		

5. Check continuity between inverter unit connector B82 terminals 5 and 1.

Inverter unit		Terminal	Continuity
Connector			
B82	5	1	No

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the harness or connectors.

#### 2.CHECK INVERTER UNIT OUTPUT SIGNAL

1. Connect inverter unit and AC 120V outlet connectors.
2. Turn ignition switch ON.
3. AC 120V outlet main switch ON (AC 120V outlet main switch indicator ON).
4. Check voltage between inverter unit connector B82 terminals 5 and 1.

**CAUTION:**

- To measure AC 120V output signal, always use the circuit tester AC range.
- Never allow the probes to contact each other.

Inverter unit connector B82 terminals		Condition	Voltage (Approx.)
(+)	(-)		
5	1	AC 120V outlet main switch	
		OFF	0V
		ON	AC 120V

Is the inspection result normal?

YES >> GO TO 3

NO >> Replace inverter unit.

#### 3.CHECK AC 120V OUTLET VOLTAGE

Check voltage between AC 120V outlet M256 terminals 1 and 4.

## AC 120 V POWER OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

### CAUTION:

- To measure AC 120V output signal, always use the circuit tester AC range.
- Never allow the probes to contact each other.

AC 120V outlet connector M256 terminals		Condition	Voltage (Approx.)
(+)	(-)	AC 120V outlet main switch	
1	4	OFF	0V
		ON	AC 120V

Is the inspection result normal?

YES >> GO TO 4

NO >> Replace AC 120V outlet.

### 4.CHECK AC 120V OUTLET GROUND CIRCUIT

1. AC 120V outlet main switch OFF.
2. Turn ignition switch OFF.
3. Disconnect AC 120V outlet connector.
4. Check continuity between AC 120V outlet connector M256 terminal 3 and ground.

AC 120V outlet		Ground	Continuity
Connector	Terminal		
M256	3	—	Yes

Is the inspection result normal?

YES >> Replace AC 120V outlet.

NO >> Repair AC 120V outlet ground circuit.

A

B

C

D

E

F

G

H

I

J

K

L

PWO

N

O

P

# AC 120 V OUTLET MAIN SWITCH INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AC 120 V OUTLET]

## AC 120 V OUTLET MAIN SWITCH INDICATOR CIRCUIT

### Diagnosis Procedure

INFOID:0000000008117072

Regarding Wiring Diagram information, refer to [PWO-16, "Wiring Diagram"](#).

#### 1.CHECK HARNESS BETWEEN INVERTER UNIT AND AC 120 V OUTLET MAIN SWITCH

1. Turn ignition switch OFF.
2. Disconnect inverter unit and AC 120 V outlet main switch connectors.
3. Check continuity between inverter unit connector B82 terminal 7 and AC 120 V main switch connector M88 terminal 5.

Inverter unit		AC 120 V outlet main switch		Continuity
Connector	Terminal	Connector	Terminal	
B82	7	M88	5	Yes

4. Check continuity between inverter unit connector B82 terminal 7 and ground.

Inverter unit		Ground	Continuity
Connector	Terminal		
B82	7		No

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace the harness or connectors.

#### 2.CHECK AC 120 V OUTLET MAIN SWITCH GROUND CIRCUIT

Check continuity between AC 120 V outlet main switch connector M88 terminal 6 and ground.

AC 120 V outlet main switch		Ground	Continuity
Connector	Terminal		
M88	6		Yes

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair AC 120 V outlet main switch ground circuit.

#### 3.CHECK AC 120 V OUTLET MAIN SWITCH INDICATOR OUTPUT SIGNAL

1. Connect AC 120 V outlet main switch and inverter unit connectors.
2. Turn ignition switch ON.
3. AC 120 V outlet main switch ON.
4. Check voltage between the inverter unit connector B82 terminal 7 and ground.

Inverter unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal		AC 120V outlet main switch	
B82	7	—	OFF	0V
			ON	5.2V

Is the inspection result normal?

- YES >> Replace AC 120 V outlet main switch.  
NO >> Replace inverter unit.

## SYMPTOM DIAGNOSIS

### NO OUTPUT FROM AC 120 V OUTLET

#### Diagnosis Procedure

INFOID:000000008117076

#### 1.CHECK FAIL-SAFE ACTIVATION

Check if the symptom is caused by a fail-safe operation. Refer to [PWO-15, "Fail-safe".](#)

Is fail-safe operating?

- YES    >> Repair the part causing fail-safe operation.  
NO    >> GO TO 2.

#### 2.CHECK INVERTER UNIT POWER SUPPLY CIRCUIT

Check inverter unit power supply circuit. Refer to [PWO-22, "Diagnosis Procedure".](#)

Is the inspection result normal?

- YES    >> GO TO 3.  
NO    >> Repair or replace the malfunctioning parts.

#### 3.CHECK AC 120V OUTLET MAIN SWITCH POWER SUPPLY CIRCUIT

Check AC 120V outlet main switch power supply circuit. Refer to [PWO-23, "Diagnosis Procedure".](#)

Is the inspection result normal?

- YES    >> GO TO 4.  
NO    >> Repair or replace the malfunctioning parts.

#### 4.CHECK AC 120V OUTLET MAIN SWITCH INPUT SIGNAL CIRCUIT

Check AC 120V outlet main switch input signal circuit. Refer to [PWO-24, "Diagnosis Procedure".](#)

Is the inspection result normal?

- YES    >> GO TO 5.  
NO    >> Repair or replace the malfunctioning parts.

#### 5.CHECK INVERTER UNIT POWER OUTPUT CIRCUIT

Check inverter unit power output circuit. Refer to [PWO-26, "Diagnosis Procedure".](#)

Is the inspection result normal?

- YES    >> Refer to [GI-53, "Intermittent Incident".](#)  
NO    >> Repair or replace the malfunctioning parts.

A

B

C

D

E

F

G

H

I

J

K

L

PWO

N

O

P

# AC 120 V OUTLET MAIN SWITCH INDICATOR DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

[AC 120 V OUTLET]

## AC 120 V OUTLET MAIN SWITCH INDICATOR DOES NOT TURN ON

### Diagnosis Procedure

INFOID:0000000008117077

#### 1. CHECK FAIL-SAFE ACTIVATION

Check if the symptom is caused by a fail-safe operation. Refer to [PWO-15, "Fail-safe"](#).

Is fail-safe operating?

- YES    >> Repair the part causing fail-safe operation.  
NO     >> GO TO 2.

#### 2. CHECK INVERTER UNIT POWER SUPPLY CIRCUIT

Check inverter unit power supply circuit. Refer to [PWO-22, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES    >> GO TO 3.  
NO     >> Repair or replace the malfunctioning parts.

#### 3. CHECK AC 120V OUTLET MAIN SWITCH POWER SUPPLY CIRCUIT

Check AC 120V outlet main switch power supply circuit. Refer to [PWO-23, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES    >> GO TO 4.  
NO     >> Repair or replace the malfunctioning parts.

#### 4. CHECK AC 120V OUTLET MAIN SWITCH INPUT SIGNAL CIRCUIT

Check AC 120V outlet main switch input signal circuit. Refer to [PWO-24, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES    >> GO TO 5.  
NO     >> Repair or replace the malfunctioning parts.

#### 5. CHECK AC 120V OUTLET MAIN SWITCH INDICATOR CIRCUIT

Check AC 120V outlet main switch indicator circuit. Refer to [PWO-28, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES    >> Refer to [GI-53, "Intermittent Incident"](#).  
NO     >> Repair or replace the malfunctioning parts.

## NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[AC 120 V OUTLET]

### NORMAL OPERATING CONDITION

#### Description

INFOID:0000000008117078

Because of modified sine wave output, the AC 120V outlet may not operate normally for electric appliance of which electric power consumption is 150W or less.

- Electric appliances requiring a large amount of electric power consumption at startup (e.g., CRT-based TV, power tool)
  - Measuring instruments for data requiring accuracy (e.g., medical equipment, measuring instrument)
  - Microprocessor-controlled appliances (e.g., microprocessor-controlled blanket)
- Noise may be caused in radio or TV, depending on an electric appliance.

A

B

C

D

E

F

G

H

I

J

K

L

PWO

N

O

P

# REMOVAL AND INSTALLATION

## INVERTER UNIT

### Removal and Installation


INFOID:0000000007914607

#### REMOVAL


1. Remove inverter unit fuse.
2. Remove storage box. Refer to [INT-28, "Exploded View"](#).
3. Remove luggage side lower finisher LH. Refer to [INT-29, "LUGGAGE SIDE LOWER FINISHER : Removal and Installation"](#).

**NOTE:**

The inverter unit is located under the storage box bracket (LH) (1).

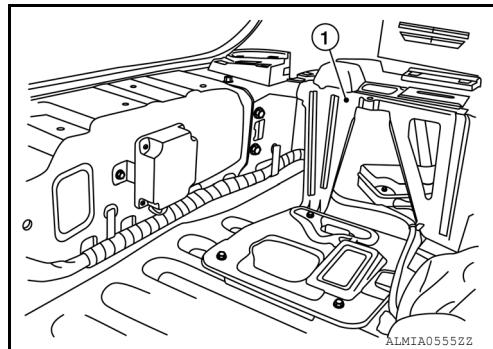

4. Remove the inverter unit bolts.
5. Disconnect the harness connector from the inverter unit (1).
6. Remove the inverter unit (1).

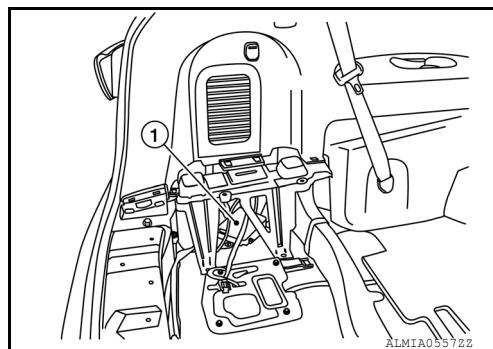

#### INSTALLATION

Installation is in the reverse order of removal.


&lt; REMOVAL AND INSTALLATION &gt;

**AC 120V OUTLET MAIN SW****Removal and Installation**


INFOID:0000000007914608

**REMOVAL**

1. Remove the inverter unit fuse.
2. Remove the instrument lower panel LH. Refer to [IP-23, "Removal and Installation"](#).
3. Remove three screws (A,B,) that retain the lower switch assembly (2).
  - (1) Upper switch assembly
  - (C) Upper switch assembly screws

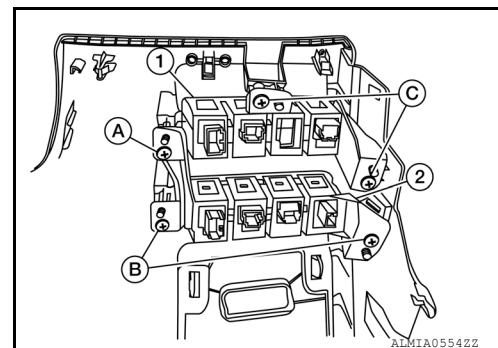

4. Release upper (B) and lower (C) tab using a suitable tool (A), then remove the AC 120V outlet main switch (3) from the lower switch assembly.
  - (1) Warning system switch
  - (2) Dimmer switch
  - (4) Heated steering wheel switch

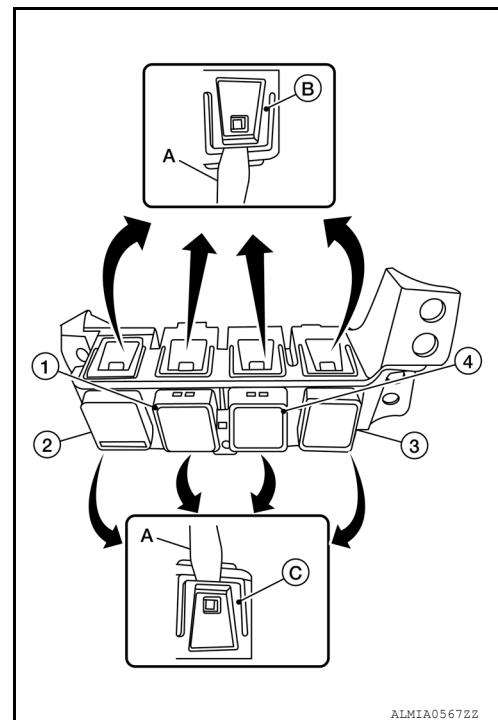**INSTALLATION**

Installation is in the reverse order of removal.

## AC 120 V OUTLET

< REMOVAL AND INSTALLATION >

[AC 120 V OUTLET]

### AC 120 V OUTLET

#### Removal and Installation

INFOID:0000000007914609

##### REMOVAL

1. Remove center console rear finisher. Refer to [IP-25, "Exploded View"](#).
2. Release the pawl from the back of the center console rear finisher to remove the AC 120 V outlet.

##### INSTALLATION

Installation is in the reverse order of removal.

## SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[AC 120 V OUTLET]

# SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### AC 120V Power Outlet

INFOID:0000000008226539

Rated voltage	AC 120 V
Maximum electric capacity	150 W or less (Total)
Maximum current	1.25 A or less (Total)

A

B

C

D

E

F

G

H

I

J

K

L

PWO

N

O

P