
ALPHABETICAL INDEX

Numerics

4WD BRANCH LINE CIRCUIT ..LAN-48, LAN-160,
LAN-175, LAN-192

A

A-BAG BRANCH LINE CIRCUIT .LAN-52, LAN-69,
LAN-82, LAN-97, LAN-115, LAN-129, LAN-145,
LAN-164, LAN-179, LAN-196

A/C AUTO AMP.HAC-30, HAC-93

A/C AUTO AMP. CONNECTION RECOGNITION
SIGNAL CIRCUITMWI-58

A/C CONTROL..... HAC-151

A/C INDICATOR..... HAC-138

A/C ON SIGNAL..... HAC-77

A/C SWITCH..... HAC-130

A/C UNIT ASSEMBLY.....HA-39

ABBREVIATIONS GI-14

ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT).....BRC-44, BRC-154

ABS BRANCH LINE CIRCUITLAN-49, LAN-67,
LAN-80, LAN-95, LAN-112, LAN-126, LAN-142,
LAN-161, LAN-176, LAN-193

ABS WARNING LAMP BRC-137

ACC WARNING DOES NOT OPERATE....DLK-111

ACCELERATOR CONTROL SYSTEM ACC-4

ACCELERATOR PEDAL.....EC-770

ACCELERATOR PEDAL RELEASED POSITION
LEARNING.....EC-160, EC-754

ADDITIONAL SERVICE WHEN REMOVING
BATTERY NEGATIVE TERMINAL.....PWC-24

ADDITIONAL SERVICE WHEN REPLACING ABS
ACTUATOR AND ELECTRIC UNIT (CONTROL
UNIT) BRC-62

ADDITIONAL SERVICE WHEN REPLACING AWD
CONTROL MODULEDLN-41

ADDITIONAL SERVICE WHEN REPLACING BCM
WT-19

ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT BCS-79, PWC-25, SEC-47

ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE OR TRANSAXLE
ASSEMBLY TM-221

ADDITIONAL SERVICE WHEN REPLACING ECM
EC-157, EC-750

ADDITIONAL SERVICE WHEN REPLACING TCM
TM-219, TM-429

ADDITIONAL SERVICE WHEN REPLACING TCM
AND TRANSAXLE ASSEMBLY TM-433

ADDITIONAL SERVICE WHEN REPLACING
TRANSAXLE ASSEMBLY..... TM-431

ADJUSTMENT OF STEERING ANGLE SENSOR
NEUTRAL POSITION BRC-63

AIR BREATHER HOSE TM-29, TM-85, TM-329,
TM-555

AIR CLEANER AND AIR DUCT EM-27, EM-192

AIR CLEANER FILTEREM-22, EM-187

AIR FUEL RATIO INITIAL LEARNING.....EC-761

ALL DEFOGGER SYSTEMS DO NOT OPERATE .
DEF-37

ALTERNATOR.....CHG-31

AMBIENT SENSOR HAC-94

ANTENNA BASE.....AV-58, AV-187

ANTENNA FEEDER.....AV-59, AV-197

ANTI-PINCH SYSTEM DOES NOT OPERATE
NORMALLY (DRIVER SIDE) PWC-51

AROUND VIEW MONITOR CONTROL UNITAV-88,
AV-190

ASCD MAIN SWITCH DOES NOT TURN ON/OFF
EC-1248

ASCD TEMPORARY RELEASE CANNOT BE
PERFORMED BY THE CLUTCH PEDAL.....
EC-582, EC-1249

AUDIO SYSTEM AV-46

AUDIO UNITAV-18, AV-50

AUTO DOOR LOCK OPERATION DOES NOT
OPERATEDLK-102

AUTO OPERATION DOES NOT OPERATE .RF-25

AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATE NORMALLY (DRIVER
SIDE)..... PWC-50

AUTOMATIC AIR CONDITIONER SYSTEMHAC-86

AUTOMATIC AIR CONDITIONING SYSTEM
HAC-35

AUTOMATIC SPEED CONTROL DEVICE (ASCD)
CCS-2

AV BRANCH LINE CIRCUITLAN-55, LAN-100,
LAN-148, LAN-199

AVM BRANCH LINE CIRCUITLAN-53, LAN-98,
LAN-146, LAN-197

AWD CONTROL MODULE DLN-25, DLN-91

AWD MODE INDICATOR LAMP (AWD)DLN-81

AWD MODE INDICATOR LAMP (AWD-V)..DLN-80

AWD MODE SWITCHDLN-93

AWD SYSTEMDLN-33

AWD WARNING LAMPDLN-79

AWD WARNING LAMP BLINKS QUICKLY .DLN-86

AWD WARNING LAMP BLINKS SLOWLY..DLN-87

AWD WARNING LAMP DOES NOT TURN OFF
DLN-83

AWD WARNING LAMP DOES NOT TURN ON.....
DLN-82

B

B TERMINAL CIRCUIT CHG-25, STR-23

B0001 DRIVER AIR BAG MODULE SRC-36

B0002 DRIVER AIR BAG MODULE SRC-39

B0010 PASSENGER AIR BAG MODULE ..	SRC-42	B2578, B2579 IN-VEHICLE SENSOR.....	HAC-55
B0011 PASSENGER AIR BAG MODULE ..	SRC-44	B257B, B257C AMBIENT SENSOR.....	HAC-58
B0020 SIDE AIR BAG MODULE	SRC-46	B2581, B2582 INTAKE SENSOR	HAC-61
B0021 CURTAIN AIR BAG MODULE.....	SRC-48	B2601 SHIFT POSITION	SEC-66
B0028 SIDE AIR BAG MODULE	SRC-50	B2602 SHIFT POSITION	SEC-68
B0029 CURTAIN AIR BAG MODULE.....	SRC-52	B2603 SHIFT POSITION	SEC-71
B0091 B-PILLAR SATELLITE SENSOR	SRC-54	B2604 SHIFT POSITION	SEC-75
B0093 FRONT DOOR SATELLITE SENSOR LH...	SRC-56	B2605 SHIFT POSITION	SEC-77
B0094 CRASH ZONE SENSOR	SRC-58	B2608 STARTER RELAY	SEC-78
B0096 B-PILLAR SATELLITE SENSOR	SRC-60	B260F ENGINE STATUS.....	SEC-80
B0098 FRONT DOOR SATELLITE SENSOR RH...	SRC-62	B2614 ACC RELAY CIRCUIT	PCS-63
B00A0 OCCUPANT DETECTION SYSTEM		B2615 BLOWER RELAY CIRCUIT	PCS-66
CONTROL UNIT	SRC-64	B2616 IGNITION RELAY CIRCUIT	PCS-68
B00D5 PASSENGER AIR BAG OFF INDICATOR ..	SRC-66	B2618 BCM	PCS-70
B1400, B1401, B1402, B1403, B1404, B1405 AIR		B261A PUSH-BUTTON IGNITION SWITCH	PCS-71,
BAG DIAGNOSIS SENSOR UNIT	SRC-68		SEC-81
B1406, B1407, B1408, B1409, B1410 AIR BAG		B261F ASCD CLUTCH SWITCH	SEC-83
DIAGNOSIS SENSOR UNIT	SRC-70	B2620 PARK/NEUTRAL POSITION SWITCH.....	SEC-85
B1411, B1412, B1413, B1414, B1415 AIR BAG		B2621 INSIDE ANTENNA	DLK-49
DIAGNOSIS SENSOR UNIT	SRC-72	B2622 INSIDE ANTENNA	DLK-51
B1416, B1417, B1418, B1419, B1420 AIR BAG		B2626 OUTSIDE ANTENNA	DLK-53
DIAGNOSIS SENSOR UNIT	SRC-74	B2627 OUTSIDE ANTENNA	DLK-55
B1421 FRONTAL COLLISION DETECTION	SRC-76	B2628 OUTSIDE ANTENNA	DLK-57
B1422 SIDE COLLISION DETECTION	SRC-77	B2630, B2631 SUNLOAD SENSOR	HAC-64
B1425 REAR COLLISION DETECTION	SRC-78	B26E8 CLUTCH INTERLOCK SWITCH.....	SEC-88
B142A IGN VOLTAGE	SRC-79	B26F1 IGNITION RELAY	PCS-73
B1430 SEAT BELT PRE-TENSIONER.....	SRC-81	B26F2 IGNITION RELAY	PCS-75
B1431 SEAT BELT PRE-TENSIONER.....	SRC-83	B26F3 STARTER CONTROL RELAY.....	SEC-91
B1500 DOOR SATELLITE SENSOR.....	SRC-85	B26F4 STARTER CONTROL RELAY.....	SEC-92
B2098 IGNITION RELAY ON STUCK	PCS-32	B26F6 BCM	PCS-77
B2099 IGNITION RELAY OFF STUCK	PCS-34	B26F7 BCM	SEC-93
B209F CRANKING REQUEST CIRCUIT .	SEC-101	B26F8 BCM	SEC-94
B20A0 CRANKING REQUEST CIRCUIT .	SEC-103	B26F9 CRANKING REQUEST CIRCUIT ...	SEC-95
B210B STARTER CONTROL RELAY	SEC-105	B26FA CRANKING REQUEST CIRCUIT ...	SEC-97
B210C STARTER CONTROL RELAY	SEC-107	B26FB CLUTCH SWITCH	SEC-99
B210D STARTER RELAY	SEC-109	B26FC KEY REGISTRATION.....	SEC-100
B210E STARTER RELAY	SEC-111	B27A0, B27A1 INTAKE DOOR MOTOR	HAC-67
B210F SHIFT POSITION/CLUTCH INTERLOCK		B27A2, B27A3, B27A4, B27A5 AIR MIX DOOR	
SWITCH	SEC-113	MOTOR	HAC-71
B2110 SHIFT POSITION/CLUTCH INTERLOCK		B27A6, B27A7, B27A8, B27A9 MODE DOOR	
SWITCH	SEC-115	MOTOR	HAC-73
B2192 ID DISCORD, IMMU-ECM	SEC-53	BACK DOOR	DLK-145
B2193 CHAIN OF ECM-IMMU	SEC-54	BACK DOOR DOES NOT OPENED	DLK-101
B2195 ANTI-SCANNING	SEC-55	BACK DOOR FINISHER	EXT-51
B2196 DONGLE UNIT	SEC-56	BACK DOOR LOCK	DLK-164
B2198 NATS ANTENNA AMP.	SEC-58	BACK DOOR OPENER ACTUATOR.....	DLK-59
B2205 VEHICLE SPEED	MWI-50	BACK DOOR OPENER SWITCH	DLK-61
B2267 ENGINE SPEED	MWI-51	BACK DOOR OPENER SYSTEM	DLK-24
B2268 WATER TEMP	MWI-52	BACK DOOR REQUEST SWITCH.....	DLK-63
B2555 STOP LAMP	SEC-61	BACK DOOR TRIM	INT-38
B2556 PUSH-BUTTON IGNITION SWITCH	SEC-63	BACK DOOR WINDOW GLASS	GW-14
B2557 VEHICLE SPEED	SEC-65	BASIC INSPECTION	EC-153, EC-766
B2562 LOW VOLTAGE	BCS-86	BATTERY	PG-105
		BATTERY CURRENT SENSOR.....	EC-1191
		BATTERY INSPECTION.....	PG-97

BATTERY TERMINAL WITH FUSIBLE LINK [PG-106](#)
 BCM .. [BCS-39](#), [BCS-65](#), [BCS-94](#), [DLK-32](#), [INL-16](#),
[PCS-51](#), [WT-13](#)
 BCM (BODY CONTROL MODULE) [PWC-14](#), [RF-10](#),
[WCS-30](#)
 BCM BRANCH LINE CIRCUIT [LAN-61](#), [LAN-74](#),
[LAN-89](#), [LAN-106](#), [LAN-120](#), [LAN-136](#),
[LAN-154](#), [LAN-169](#), [LAN-186](#), [LAN-205](#)
 BCM, ECM, IPDM E/R [HAC-117](#)
 BCM, IPDM E/R [DEF-17](#), [EXL-30](#), [EXL-142](#), [WW-21](#)
 BLOWER FAN ON SIGNAL [HAC-79](#), [HAC-132](#)
 BLOWER FAN RESISTOR [HAC-154](#)
 BLOWER MOTOR [HAC-81](#), [HAC-140](#), [VTL-14](#)
 BODY ALIGNMENT [BRM-75](#)
 BODY COMPONENT PARTS [BRM-12](#)
 BODY CONSTRUCTION [BRM-31](#)
 BODY EXTERIOR PAINT COLOR [BRM-2](#)
 BODY MAINTENANCE [MA-47](#)
 BODY SIDE TRIM [INT-18](#)
 BOTH SIDE FRONT FOG LAMPS ARE NOT
 TURNED ON [EXL-90](#), [EXL-201](#)
 BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED
 ON [EXL-87](#), [EXL-198](#)
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ON [EXL-88](#), [EXL-199](#)
 BRAKE BOOSTER [BR-15](#), [BR-42](#)
 BRAKE CONTROL SYSTEM [BRC-52](#)
 BRAKE FLUID [BR-12](#)
 BRAKE MASTER CYLINDER [BR-14](#), [BR-38](#)
 BRAKE PEDAL [BR-9](#), [BR-20](#)
 BRAKE PEDAL POSITION SWITCH [EC-571](#),
[EC-1193](#)
 BRAKE PEDAL VIBRATION OR OPERATION
 SOUND OCCURS [BRC-145](#)
 BRAKE PIPING [BR-23](#)
 BRAKE WARNING LAMP [BRC-138](#)
 BUZZER (COMBINATION METER) [DLK-65](#)

C

C1101, C1102, C1103, C1104 WHEEL SENSOR...
[BRC-65](#)
 C1105, C1106, C1107, C1108 WHEEL SENSOR...
[BRC-70](#)
 C1109 POWER AND GROUND SYSTEM. [BRC-77](#)
 C1110, C1170 ABS ACTUATOR AND ELECTRIC
 UNIT (CONTROL UNIT) [BRC-79](#)
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM
[BRC-81](#)
 C1113, C1145, C1146 YAW RATE/SIDE/DECEL G
 SENSOR [BRC-84](#)
 C1115 WHEEL SENSOR [BRC-88](#)
 C1116 STOP LAMP SWITCH [BRC-95](#)
 C1120, C1122, C1124, C1126 ABS IN VALVE
 SYSTEM [BRC-100](#)
 C1121, C1123, C1125, C1127 ABS OUT VALVE
 SYSTEM [BRC-102](#)

C1130 ENGINE SIGNAL [BRC-104](#)
 C1140 ACTUATOR RELAY SYSTEM [BRC-106](#)
 C1143 STEERING ANGLE SENSOR [BRC-108](#)
 C1144 INCOMPLETE STEERING ANGLE SENSOR
 ADJUSTMENT [BRC-111](#)
 C1155 BRAKE FLUID LEVEL SWITCH [BRC-113](#)
 C1164, C1165 CV SYSTEM [BRC-117](#)
 C1166, C1167 SV SYSTEM [BRC-119](#)
 C1176 STOP LAMP SW2 [BRC-121](#)
 C1601 BATTERY POWER SUPPLY [STC-21](#)
 C1604 TORQUE SENSOR [STC-23](#)
 C1606 EPS MOTOR [STC-24](#)
 C1607, C1608 EPS CONTROL UNIT [STC-25](#)
 C1609 VEHICLE SPEED SIGNAL [STC-26](#)
 C1704, C1705, C1706, C1707 LOW TIRE
 PRESSURE [WT-22](#)
 C1708, C1709, C1710, C1711 TIRE PRESSURE
 SENSOR [WT-24](#)
 C1716, C1717, C1718, C1719 TIRE PRESSURE
 SENSOR [WT-26](#)
 C1729 VEHICLE SPEED SIGNAL [WT-28](#)
 C1A03 VEHICLE SPEED SENSOR [AV-123](#)
 C1A39 STEERING ANGLE SENSOR [AV-124](#)
 CAMERA IMAGE SIGNAL CIRCUIT [AV-44](#), [AV-165](#)
 CAMSHAFT [EM-88](#), [EM-260](#)
 CAMSHAFT VALVE CLEARANCE. [EM-14](#), [EM-179](#)
 CAN COMMUNICATION CIRCUIT [LAN-62](#), [LAN-75](#),
[LAN-90](#), [LAN-107](#), [LAN-121](#), [LAN-137](#),
[LAN-155](#), [LAN-170](#), [LAN-187](#), [LAN-206](#)
 CAN SYSTEM [LAN-34](#)
 CATALYST [EM-34](#), [EM-232](#)
 CENTER CONSOLE ASSEMBLY [IP-23](#)
 CENTER STEM ASSEMBLY [DLN-158](#)
 CHARGE AIR COOLER [EM-32](#), [EM-194](#)
 CHARGING SYSTEM [CHG-10](#), [CHG-30](#)
 CHARGING SYSTEM PRELIMINARY INSPECTION
[CHG-22](#)
 CHASSIS MAINTENANCE [MA-35](#)
 CHECK ANTI-PINCH FUNCTION [PWC-27](#)
 CLUTCH DISC AND CLUTCH COVER [CL-18](#)
 CLUTCH FLUID [CL-8](#)
 CLUTCH MASTER CYLINDER [CL-13](#)
 CLUTCH PEDAL [CL-6](#), [CL-11](#)
 CLUTCH PEDAL POSITION SWITCH [EC-573](#),
[EC-1195](#)
 CLUTCH PIPING [CL-15](#)
 COIL SPRING [RSU-12](#), [RSU-27](#)
 COLLISION DIAGNOSIS [SR-6](#)
 COMBINATION METER [MWI-26](#), [MWI-64](#), [WCS-21](#)
 COMBINATION SWITCH [BCS-95](#)
 COMBINATION SWITCH INPUT CIRCUIT [BCS-90](#)
 COMBINATION SWITCH OUTPUT CIRCUIT
[BCS-88](#)
 COMBINATION SWITCH SYSTEM SYMPTOMS...
[BCS-92](#)
 COMPRESSION PRESSURE [EM-17](#), [EM-182](#)

COMPRESSOR.....HA-28
 COMPRESSOR DOES NOT OPERATE ...HAC-91,
 HAC-149
 CONDENSER..... DEF-45, HA-36
 CONFIGURATION (BCM) BCS-80
 CONSULT/GST CHECKING SYSTEM..... GI-53
 CONTROL CABLE TM-319, TM-549
 CONTROL LINKAGE TM-25, TM-83
 CONTROL VALVE TM-330
 CONTROLLER HAC-92
 COOLER PIPE AND HOSE HA-32
 COOLING FAN .. CO-19, CO-50, EC-561, EC-1197
 CORROSION PROTECTION BRM-21
 COWL TOP.....EXT-29
 CRASH ZONE SENSOR.....SR-24
 CSC (CONCENTRIC SLAVE CYLINDER) CL-17
 CUMULATIVE BATTERY DISCHARGE CURRENT
 CLEAREC-765
 CURTAIN AIR BAG MODULESR-21
 CVT CONTROL SYSTEMTM-205, TM-416, TM-539
 CVT FLUID TM-234, TM-314, TM-440, TM-545
 CVT FLUID COOLER SYSTEM ... TM-223, TM-435
 CVT OIL WARMER TM-574
 CVT POSITION TM-233, TM-439
 CVT SHIFT LOCK SYSTEM TM-213, TM-423
 CVT SHIFT SELECTOR..... TM-316, TM-546
 CYLINDER BLOCK EM-114, EM-286
 CYLINDER HEADEM-100, EM-272

D

DAYTIME RUNNING LIGHTEXL-101, EXL-212
 DAYTIME RUNNING LIGHT CIRCUIT EXL-67,
 EXL-178
 DAYTIME RUNNING LIGHT RELAY CIRCUIT
 EXL-64, EXL-175
 DECREASE IN TURNING PERFORMANCEDLN-88
 DEFROSTER POSITION SIGNAL HAC-136
 DIAGNOSIS AND REPAIR WORK FLOW .AV-220,
 BRC-59, CHG-15, DEF-18, DLK-46, DLN-38,
 DMS-15, EXL-47, EXL-159, HAC-45, HAC-125,
 INL-35, PCS-60, PWC-23, SEC-44, SRC-29,
 STR-18, TM-426, WT-17, WW-27
 DIAGNOSIS AND REPAIR WORKFLOW (METER
 SYSTEM) MWI-46
 DIAGNOSIS SENSOR UNITSR-29, SRC-17
 DIAGNOSIS SYSTEM (A/C AUTO AMP.) ..HAC-24
 DIAGNOSIS SYSTEM (AIR BAG)..... SRC-10
 DIAGNOSIS SYSTEM (AROUND VIEW MONITOR
 CONTROL UNIT) AV-80
 DIAGNOSIS SYSTEM (AUDIO UNIT)..... AV-15
 DIAGNOSIS SYSTEM (AWD CONTROL MODULE)
 DLN-21
 DIAGNOSIS SYSTEM (BCM) BCS-15, DLK-25,
 EXL-19, EXL-131, HAC-27, HAC-113, INL-10,
 PCS-46, PWC-11, SEC-19, WCS-18, WT-9,
 WW-13

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT
 KEY SYSTEM) DEF-9
 DIAGNOSIS SYSTEM (COMBINATION METER)...
 MWI-21, WCS-14
 DIAGNOSIS SYSTEM (ECM)..... EC-74, EC-660
 DIAGNOSIS SYSTEM (EPS CONTROL UNIT)
 STC-9
 DIAGNOSIS SYSTEM (IPDM E/R).....EXL-25,
 EXL-137, PCS-12, SEC-26, WW-16
 DIAGNOSIS SYSTEM (IPDM E/R) (WITH
 INTELLIGENT KEY SYSTEM) DEF-12
 DIAGNOSIS SYSTEM (MULTI DISPLAY UNIT).....
 AV-210
 DIAGNOSIS SYSTEM (NAVI CONTROL UNIT).....
 AV-77
 DIAGNOSIS SYSTEM (OCCUPANT DETECTION
 SYSTEM).....SRC-16
 DIAGNOSIS SYSTEM (TCM)..... TM-190, TM-395
 DIAGNOSIS SYSTEM [ABS ACTUATOR AND
 ELECTRIC UNIT (CONTROL UNIT)] ...BRC-39
 DIFFERENTIAL SIDE OIL SEAL.. TM-340, TM-566
 DISPLAY AUDIOAV-22
 DLC BRANCH LINE CIRCUIT LAN-56, LAN-70,
 LAN-84, LAN-101, LAN-116, LAN-131, LAN-149,
 LAN-165, LAN-181, LAN-200
 DOES NOT OPERATEBRC-144
 DOOR & LOCK SYSTEM DLK-33
 DOOR CABLEHAC-155
 DOOR DOES NOT LOCK/UNLOCK WITH DOOR
 KEY CYLINDER OPERATION DLK-96
 DOOR DOES NOT LOCK/UNLOCK WITH DOOR
 LOCK AND UNLOCK SWITCH DLK-90
 DOOR DOES NOT LOCK/UNLOCK WITH DOOR
 REQUEST SWITCH DLK-93
 DOOR DOES NOT LOCK/UNLOCK WITH
 INTELLIGENT KEY DLK-97
 DOOR KEY CYLINDER SWITCH DLK-66
 DOOR LOCK ACTUATOR..... DLK-68
 DOOR LOCK AND UNLOCK SWITCH DLK-73
 DOOR LOCK OPERATION WARNING DOES NOT
 OPERATE.....DLK-114
 DOOR MIRROR DEFOGGER..... DEF-26
 DOOR MIRROR DEFOGGER DOES NOT
 OPERATE..... DEF-39
 DOOR MIRROR REMOTE CONTROL SWITCH
 MIR-21
 DOOR MIRROR REMOTE CONTROL SWITCH
 (MIRROR SWITCH/CHANGEVER SWITCH).
 MIR-9
 DOOR MIRROR SYSTEM.....MIR-6
 DOOR MOTOR.....HAC-100
 DOOR MOTOR STARTING POSITION RESET.....
 HAC-52
 DOOR OUTSIDE MOLDING EXT-41
 DOOR REQUEST SWITCH DLK-75
 DOOR SASH TAPE EXT-43

DOOR SWITCHDLK-77, DLK-169
 DRIVE BELTEM-20, EM-185
 DRIVE BELT AUTO TENSIONER AND IDLER
 PULLEYEM-75, EM-231
 DRIVE PINION.....DLN-111, DLN-168
 DRIVE PLATEEM-229
 DRIVER AIR BAG MODULE.....SR-12
 DRIVER SIDE DOOR MIRROR DEFOGGER
 DEF-27
 DRIVER SIDE POWER WINDOW DOES NOT
 OPERATEPWC-43
 DUCT AND GRILLE.....VTL-7

E

ECM BRANCH LINE CIRCUITLAN-47, LAN-66,
 LAN-79, LAN-94, LAN-111, LAN-125, LAN-141,
 LAN-159, LAN-174, LAN-191
 ECM, IPDM E/R, BCMSEC-28
 EGR SYSTEM.....EM-238
 ELECTRIC CONTROLLED COUPLING ..DLN-145,
 DLN-154
 ELECTRIC CONTROLLED COUPLING OIL SEAL
 DLN-149
 ELECTRICAL LOAD SIGNAL.....EC-559, EC-1200
 ELECTRONICALLY CONTROLLED POWER
 STEERING SYSTEM.....STC-14
 ENCODER CIRCUIT.....PWC-39
 ENGINE ASSEMBLYEM-62, EM-216
 ENGINE CONTROL SYSTEMEC-129, EC-577,
 EC-722, EC-1243
 ENGINE COOLANTCO-10, CO-40
 ENGINE COVER.....EM-26, EM-191
 ENGINE DOES NOT START WHEN INTELLIGENT
 KEY IS INSIDE OF VEHICLESEC-121
 ENGINE MAINTENANCE (MR EXCEPT FOR
 NISMO RS MODELS).....MA-25
 ENGINE MAINTENANCE (MR FOR NISMO RS
 MODELS).....MA-15
 ENGINE OIL.....LU-9, LU-28
 ENGINE STAND SETTINGEM-72, EM-225
 ENGINE UNITEM-74, EM-226
 EPS BRANCH LINE CIRCUITLAN-57, LAN-71,
 LAN-85, LAN-102, LAN-117, LAN-132, LAN-150,
 LAN-166, LAN-182, LAN-201
 EPS CONTROL UNITSTC-11, STC-36
 EPS WARNING LAMPSTC-28
 EPS WARNING LAMP DOES NOT TURN OFF
 STC-30
 EPS WARNING LAMP DOES NOT TURN ON.....
 STC-29
 EVAP CANISTER.....FL-26
 EVAP CANISTER PURGE VOLUME CONTROL
 SOLENOID VALVEEC-1202
 EVAP LEAK CHECKEC-588, EC-1254
 EVAPORATIVE EMISSION SYSTEM.....EC-587,
 EC-1253

EXCESSIVE OPERATION FREQUENCY BRC-141
 EXHAUST MANIFOLD.....EM-44
 EXHAUST MANIFOLD AND TURBOCHARGER
 ASSEMBLYEM-242
 EXHAUST SYSTEM.....EX-4, EX-5
 EXTERIOR LIGHTING SYSTEM EXL-31, EXL-143
 EXTERIOR LIGHTING SYSTEM SYMPTOMS.....
 EXL-79, EXL-190

F

FENDER PROTECTOREXT-31
 FILAMENT.....DEF-43
 FILLET MOLDING.....EXT-36
 FINAL DRIVETM-64, TM-136
 FLOOR SIDE FAIRINGEXT-35
 FLOOR TRIMINT-24
 FLUID COOLER HOSE.....TM-572
 FLYWHEELEM-227
 FRONT BUMPER.....EXT-12
 FRONT CAMERA.....AV-191
 FRONT COIL SPRING AND STRUTFSU-9
 FRONT COMBINATION LAMP ...EXL-99, EXL-210
 FRONT DISC BRAKEBR-6, BR-16, BR-48
 FRONT DOORDLK-135
 FRONT DOOR FINISHERINT-13
 FRONT DOOR GLASSGW-17
 FRONT DOOR LOCKDLK-157
 FRONT DOOR SPEAKERAV-51, AV-183
 FRONT DRIVE SHAFT ..FAX-10, FAX-27, FAX-65,
 FAX-82
 FRONT DRIVE SHAFT BOOTFAX-15, FAX-70
 FRONT FENDERDLK-133
 FRONT FOG LAMPEXL-102, EXL-213
 FRONT FOG LAMP AIMING ADJUSTMENT
 EXL-93, EXL-204
 FRONT FOG LAMP CIRCUITEXL-69, EXL-180
 FRONT GRILLEEXT-25
 FRONT OIL SEALDLN-138
 FRONT PASSENGER SIDE POWER WINDOW
 DOES NOT OPERATEPWC-44
 FRONT POWER WINDOW SWITCH (PASSENGER
 SIDE).....PWC-31
 FRONT REGULATOR.....GW-19
 FRONT SEAT.....SE-17
 FRONT SEAT BELTSB-5
 FRONT SIDE MARKER LAMP CIRCUIT...EXL-58,
 EXL-169
 FRONT STABILIZER.....FSU-15
 FRONT SUSPENSION ASSEMBLYFSU-6
 FRONT SUSPENSION MEMBER.....FSU-17
 FRONT WASHER NOZZLE AND TUBEWW-47
 FRONT WHEEL HUB AND KNUCKLEFAX-9,
 FAX-11, FAX-64, FAX-66
 FRONT WIPER ARMWW-50
 FRONT WIPER BLADEWW-52
 FRONT WIPER DOES NOT OPERATEWW-42

FRONT WIPER DRIVE ASSEMBLY WW-54
FRONT WIPER MOTOR GROUND CIRCUIT
WW-34
FRONT WIPER MOTOR HI CIRCUIT WW-32
FRONT WIPER MOTOR LO CIRCUIT WW-31
FRONT WIPER STOP POSITION SIGNAL CIRCUIT
WW-33
FUEL FILLER LID OPENER DLK-166
FUEL INJECTOR..... EC-542, EC-1205, EM-208
FUEL INJECTOR AND FUEL TUBE EM-54
FUEL LEVEL SENSOR SIGNAL CIRCUIT MWI-54
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND
FUEL PUMP ASSEMBLY FL-6
FUEL PRESSURE..... EC-166, EC-772
FUEL SYSTEM..... FL-5
FUEL TANK FL-18
FUSE BLOCK - JUNCTION BOX (J/B) PG-80
FUSE INSPECTION PG-100
FUSE, FUSIBLE LINK AND RELAY BOX PG-81
FUSIBLE LINK INSPECTION..... PG-104

G

G SENSOR..... EC-1210, EC-1258
G SENSOR CALIBRATION EC-164, EC-764
GEAR OIL..... TM-22, TM-80
GENERAL MAINTENANCE MA-5
GLASS LID RF-34
GLOVE BOX LAMP INL-48
GPS ANTENNA..... AV-188
GROUND DISTRIBUTION PG-66

H

HANDLING PRECAUTION AV-209, DMS-9
HANDS-FREE PHONE SYMPTOMS AV-176
HARNES LAYOUT PG-83
HAZARD AND BUZZER REMINDER DOES NOT
OPERATE..... DLK-106
HAZARD FUNCTION DLK-80
HAZARD SWITCH..... EXL-77, EXL-107, EXL-188,
EXL-218
HEADLAMP EXL-95, EXL-206
HEADLAMP (HI) CIRCUIT EXL-50, EXL-162
HEADLAMP (LO) CIRCUIT EXL-53, EXL-165
HEADLAMP AIMING ADJUSTMENT EXL-91,
EXL-202
HEADLAMP FUNCTION SEC-117
HEADLINING..... INT-27
HEATED SEAT SWITCH SE-41
HEATED SEAT SYSTEM SE-8
HEAVY TIGHT-CORNER BRAKING SYMPTOM
OCCURS..... DLN-84
HIGH PRESSURE FUEL PUMP EC-550, EC-1213
HIGH PRESSURE FUEL PUMP AND FUEL HOSE
EM-49, EM-203
HIGH-MOUNTED STOP LAMP. EXL-111, EXL-222

HO2S2 EC-1218
HO2S2 HEATER..... EC-1222
HOOD DLK-124
HOOD LOCK DLK-154
HORN HRN-4, HRN-7
HORN FUNCTION..... SEC-118
HOW TO ERASE PERMANENT DTC EC-174,
EC-780, TM-443
HOW TO FOLLOW TROUBLE DIAGNOSES ..GI-6
HOW TO READ WIRING DIAGRAMSGI-9
HOW TO SELECT PISTON AND BEARINGEM-133,
EM-304
HOW TO SET SRT CODE..... EC-168, EC-774
HOW TO USE THIS MANUALGI-3
HOW TO USE THIS SECTIONFAX-3, FAX-58,
LAN-22
HVAC BRANCH LINE CIRCUIT .. LAN-54, LAN-83,
LAN-99, LAN-130, LAN-147, LAN-180, LAN-198

I

IDENTIFICATION INFORMATION.....GI-35
IDLE AIR VOLUME LEARNING ... EC-162, EC-759
IDLE SPEED..... EC-585, EC-1251
IGN OFF INTERLOCK DOOR UNLOCK FUNCTION
DOES NOT OPERATE DLK-104
IGNITION COIL, SPARK PLUG AND ROCKER
COVER..... EM-60, EM-214
IGNITION POSITION WARNING FUNCTION DOES
NOT OPERATE DLK-99
IGNITION SIGNAL..... EC-555, EC-1230
IGNITION TIMING EC-586, EC-1252
ILLUMINATION INL-25
IN-CABIN MICROFILTER..... VTL-16
IN-VEHICLE SENSOR HAC-95
INFORMATION DISPLAY (ASCD)EC-575, EC-1234
INFORMATION DISPLAY IS MALFUNCTIONING ..
EC-583
INPUT SHAFT AND GEAR TM-49
INPUT SHAFT AND GEARS TM-117
INPUT SPEED SENSOR..... TM-560
INSIDE KEY ANTENNA DLK-170
INSIDE MIRROR MIR-16
INSTRUMENT PANEL ASSEMBLY..... IP-12
INSUFFICIENT COOLING HAC-88, HAC-147
INSUFFICIENT HEATING HAC-90, HAC-148
INTAKE MANIFOLD EM-29, EM-197
INTAKE SENSOR..... HAC-97
INTEGRATED CONTROL SYSTEMAV-216, AV-230,
DMS-11
INTELLIGENT KEY BATTERY ... DLK-81, DLK-175
INTELLIGENT KEY LOW BATTERY WARNING
DOES NOT OPERATEDLK-113
INTELLIGENT KEY WARNING BUZZER.. DLK-82,
DLK-173
INTERIOR LIGHTING SYSTEM SYMPTOMSINL-45

INTERIOR ROOM LAMP CONTROL CIRCUIT
[INL-40](#)
 INTERIOR ROOM LAMP CONTROL SYSTEM.....
[INL-17](#)
 INTERIOR ROOM LAMP POWER SUPPLY
 CIRCUIT [INL-38](#)
 IPDM E/R [MWI-35](#), [PCS-17](#), [PCS-26](#), [PCS-37](#)
 IPDM E/R (INTELLIGENT POWER DISTRIBUTION
 MODULE ENGINE ROOM) [PG-82](#)
 IPDM-E BRANCH LINE CIRCUIT [LAN-50](#), [LAN-68](#),
[LAN-81](#), [LAN-96](#), [LAN-113](#), [LAN-127](#), [LAN-143](#),
[LAN-162](#), [LAN-177](#), [LAN-194](#)

K

KEY ID WARNING DOES NOT OPERATED [DLK-115](#)
 KEY INTERLOCK CABLE [TM-324](#)
 KEY REMINDER FUNCTION DOES NOT
 OPERATE [DLK-108](#)
 KEY WARNING LAMP [DLK-84](#)
 KEY WARNING LAMP DOES NOT ILLUMINATE ..
[DLK-116](#)

L

L TERMINAL CIRCUIT (OPEN)..... [CHG-26](#)
 L TERMINAL CIRCUIT (SHORT) [CHG-28](#)
 LICENSE PLATE LAMP [EXL-113](#), [EXL-224](#)
 LICENSE PLATE LAMP CIRCUIT [EXL-62](#), [EXL-173](#)
 LIFTING POINT [GI-30](#)
 LIGHTING & TURN SIGNAL SWITCH [EXL-106](#),
[EXL-217](#)
 LINE PRESSURE TEST [TM-228](#)
 LOCATION OF PLASTIC PARTS [BRM-88](#)
 LOW PRESSURE FUEL PUMP .. [EC-547](#), [EC-1235](#)
 LOW TIRE PRESSURE WARNING LAMP BLINKS
[WT-34](#)
 LOW TIRE PRESSURE WARNING LAMP DOES
 NOT TURN OFF [WT-33](#)
 LOW TIRE PRESSURE WARNING LAMP DOES
 NOT TURN ON [WT-32](#)
 LOWER LINK [RSU-31](#)
 LUBRICANT [HA-21](#)
 LUGGAGE FLOOR TRIM [INT-33](#)
 LUGGAGE ROOM LAMP [INL-49](#)
 LUGGAGE ROOM LAMP CIRCUIT [INL-42](#)

M

M&A BRANCH LINE CIRCUIT [LAN-58](#), [LAN-72](#),
[LAN-86](#), [LAN-103](#), [LAN-118](#), [LAN-133](#), [LAN-151](#),
[LAN-167](#), [LAN-183](#), [LAN-202](#)
 MAGNET CLUTCH [HAC-85](#), [HAC-144](#)
 MAIN LINE BETWEEN A-BAG AND DLC CIRCUIT
[LAN-45](#), [LAN-65](#), [LAN-110](#), [LAN-158](#)

MAIN LINE BETWEEN HVAC AND DLC CIRCUIT
[LAN-46](#), [LAN-78](#), [LAN-93](#), [LAN-124](#), [LAN-140](#),
[LAN-173](#), [LAN-190](#)
 MAIN LINE BETWEEN IPDM-E AND A-BAG
 CIRCUIT. [LAN-43](#), [LAN-64](#), [LAN-109](#), [LAN-157](#)
 MAIN LINE BETWEEN IPDM-E AND HVAC
 CIRCUIT.. [LAN-44](#), [LAN-77](#), [LAN-92](#), [LAN-123](#),
[LAN-139](#), [LAN-172](#), [LAN-189](#)
 MAIN POWER SUPPLY AND GROUND CIRCUIT.
[TM-532](#)
 MAINSHAFT AND GEAR..... [TM-55](#)
 MAINSHAFT AND GEARS [TM-125](#)
 MALFUNCTION AREA CHART [LAN-42](#)
 MALFUNCTION INDICATOR LAMP [EC-576](#),
[EC-1238](#)
 MANUAL AIR CONDITIONING SYSTEM [HAC-118](#),
[HAC-145](#)
 MAP LAMP [INL-46](#)
 MDU BRANCH LINE CIRCUIT [LAN-59](#), [LAN-87](#),
[LAN-104](#), [LAN-134](#), [LAN-152](#), [LAN-184](#),
[LAN-203](#)
 METER BUZZER CIRCUIT [WCS-40](#)
 METER SYSTEM [MWI-36](#)
 MICROPHONE..... [AV-54](#), [AV-189](#)
 MICROPHONE SIGNAL CIRCUIT ... [AV-36](#), [AV-163](#)
 MIXTURE RATIO SELF-LEARNING VALUE CLEAR
[EC-165](#), [EC-763](#)
 MULTI DISPLAY UNIT... [AV-212](#), [AV-231](#), [DMS-10](#),
[DMS-17](#)
 MULTI DISPLAY UNIT, BCM, ECM, IPDM E/R.....
[HAC-34](#)
 MULTI-WAY CONTROL VALVE [CO-54](#)

N

NATS ANTENNA AMP..... [SEC-126](#)
 NAVI CONTROL UNIT [AV-83](#), [AV-182](#)
 NAVIGATION SYSTEM..... [AV-94](#), [AV-172](#)
 NOISE [HA-27](#)
 NOISE, VIBRATION AND HARSHNESS (NVH)
 TROUBLESHOOTING [BR-8](#), [CL-5](#), [DLN-89](#),
[DLN-122](#), [DLN-136](#), [EM-18](#), [EM-183](#), [FAX-8](#),
[FAX-63](#), [FSU-5](#), [RAX-5](#), [RAX-13](#), [RSU-5](#),
[RSU-20](#), [ST-7](#), [TM-21](#), [TM-79](#), [WT-36](#)
 NONE OF THE POWER WINDOWS CAN BE
 OPERATED USING ANY SWITCH..... [PWC-42](#)
 NORMAL OPERATING CONDITION [AV-48](#), [AV-177](#),
[BCS-93](#), [BRC-147](#), [EC-584](#), [EC-1250](#), [EXL-86](#),
[EXL-197](#), [MWI-63](#), [WW-41](#)

O

OCCUPANT DETECTION SYSTEM CONTROL
 UNIT [SR-32](#)
 OFF POSITION WARNING DOES NOT OPERATE
[DLK-109](#)
 OIL COOLER [LU-13](#), [LU-31](#)

OIL FILTER..... LU-12, LU-27
OIL PAN..... TM-557
OIL PAN (LOWER).....EM-46, EM-200
OIL PAN (UPPER).....EM-110, EM-282
OIL PUMP LU-16, LU-34
OIL PUMP FITTING BOLT TM-343
OIL SEAL.....EM-97, EM-269
ON BOARD DIAGNOSTIC (OBD) SYSTEM EC-73,
EC-659, TM-188, TM-394
ON BOARD REFUELING VAPOR RECOVERY
(ORVR)..... EC-564, EC-1225
ON IS NOT DISPLAYED WHEN PRESSING REAR
WINDOW DEFOGGER SWITCH BUT IT IS
OPERATED DEF-41
OPERATION... EC-71, EC-657, HAC-21, HAC-112,
MWI-20
OPERATION INSPECTION..... HAC-48, HAC-128
OPTICAL SENSOREXL-74, EXL-105, EXL-185,
EXL-216
OPTION HARNESS..... PG-76
OUTPUT SPEED SENSOR TM-564
OUTSIDE KEY ANTENNADLK-172
OUTSIDE MIRRORMIR-17
OVERHEATING CAUSE ANALYSIS ..CO-8, CO-38

P

P POSITION WARNING DOES NOT OPERATE
DLK-110
P RANGE INTERLOCK DOOR LOCK/UNLOCK
FUNCTION DOES NOT OPERATEDLK-105
P0011 IVT CONTROL EC-196, EC-800
P0014 EVT CONTROL..... EC-199, EC-803
P0030, P0031, P0032 A/F SENSOR 1 HEATER
EC-203
P0030, P0031, P0032 A/F SENSOR HEATER
EC-806
P0037, P0038 HO2S2 HEATER... EC-206, EC-809
P0045, P0047, P0048 TC BOOST CONTROL
SOLENOID VALVEEC-209
P0046 WASTEGATE CONTROL MOTOR ..EC-812
P0075 IVT CONTROL SOLENOID VALVE EC-212,
EC-814
P0078 EVT CONTROL SOLENOID VALVEEC-215,
EC-817
P0087 FRP CONTROL SYSTEM. EC-218, EC-820
P0088 FRP CONTROL SYSTEM. EC-221, EC-824
P0090 HIGH PRESSURE FUEL PUMPEC-223,
EC-827
P0096 IAT SENSOR 2..... EC-228, EC-830
P0097, P0098 IAT SENSOR 2 EC-230, EC-832
P00B3, P00B4 ENGINE COOLANT
TEMPERATURE SENSOR 2EC-835
P00C1, P00C2 TURBOCHARGER BYPASS
CONTROL VALVEEC-837
P0101 MAF SENSOR EC-234, EC-839
P0102, P0103 MAF SENSOR EC-239, EC-844

P0106 TC BOOST SENSOR..... EC-849
P010A MANIFOLD ABSOLUTE PRESSURE
SENSOR EC-852
P0111 IAT SENSOR 1 EC-244, EC-855
P0112, P0113 IAT SENSOR 1 EC-246, EC-857
P0116 ECT SENSOR EC-248
P0116 ENGINE COOLANT TEMPERATURE
SENSOR 1 EC-859
P0117, P0118 ECT SENSOR EC-250
P0117, P0118 ENGINE COOLANT TEMPERATURE
SENSOR 1 EC-861
P011C IAT SENSOR..... EC-252, EC-863
P0122, P0123 TP SENSOR EC-254, EC-865
P0125 ECT SENSOR EC-257, EC-868
P0127 IAT SENSOR..... EC-259, EC-870
P0128 THERMOSTAT FUNCTION..... EC-261
P0130 A/F SENSOR 1..... EC-264, EC-872
P0131 A/F SENSOR 1..... EC-268, EC-876
P0132 A/F SENSOR 1..... EC-271, EC-879
P0137 HO2S2..... EC-274, EC-882
P0138 HO2S2..... EC-280, EC-888
P0139 HO2S2..... EC-287, EC-895
P014C, P014D, P015A, P015B A/F SENSOR 1
EC-293, EC-901
P0171 FUEL INJECTION SYSTEM FUNCTION.....
EC-298, EC-906
P0172 FUEL INJECTION SYSTEM FUNCTION.....
EC-302, EC-910
P0181 FTT SENSOR..... EC-306, EC-914
P0182, P0183 FTT SENSOR EC-310, EC-918
P0190, P0192, P0193 FRP SENSOR EC-313,
EC-920
P0196 EOT SENSOR..... EC-317, EC-923
P0197, P0198 EOT SENSOR EC-321, EC-927
P0201, P0202, P0203, P0204 FUEL INJECTOR
EC-323, EC-929
P0222, P0223 TP SENSOR EC-324, EC-930
P0234 TC SYSTEM..... EC-327, EC-933
P0235 TC BOOST SENSOR..... EC-330, EC-936
P0237, P0238 TC BOOST SENSOR EC-333,
EC-939
P0300, P0301, P0302, P0303, P0304 MISFIRE
EC-336, EC-942
P0327, P0328 KS EC-342, EC-948
P0335 CKP SENSOR (POS)..... EC-344, EC-950
P0340 CMP SENSOR (PHASE)... EC-347, EC-953
P0365 EXHAUST VALVE TIMING CONTROL
POSITION SENSOR EC-956
P0401, P0402 EGR SYSTEM EC-960
P0404 EGR VOLUME CONTROL VALVE.. EC-962
P0407, P0408 EGR PRESSURE SENSOR EC-964
P0420 THREE WAY CATALYST FUNCTION.....
EC-351, EC-967
P0441 EVAP CONTROL SYSTEMEC-356, EC-972
P0443 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVEEC-361, EC-978

P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	EC-366, EC-983	P0706 TRANSMISSION RANGE SENSOR A	TM-460
P0447 EVAP CANISTER VENT CONTROL VALVE	EC-369, EC-986	P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-244
P0448 EVAP CANISTER VENT CONTROL VALVE	EC-373, EC-990	P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-463
P044A, P044E EGR VOLUME CONTROL VALVE POSITION SENSOR	EC-994	P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-468
P044B EXHAUST GAS RECIRCULATION SYSTEM	EC-997	P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A	TM-470
P044C, P044D EGR VOLUME CONTROL VALVE POSITION SENSOR	EC-1000	P0715 INPUT SPEED SENSOR A	TM-248, TM-472
P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR	EC-377, EC-1003	P0717 INPUT SPEED SENSOR A	TM-475
P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR	EC-381, EC-1006	P0720 OUTPUT SPEED SENSOR	TM-251
P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR	EC-384, EC-1009	P0725 ENGINE SPEED	TM-254
P0456 EVAP CONTROL SYSTEM	EC-388, EC-1013	P0740 TORQUE CONVERTER	TM-255, TM-478
P0460 FUEL LEVEL SENSOR	EC-394, EC-1019	P0743 TORQUE CONVERTER	TM-480
P0461 FUEL LEVEL SENSOR	EC-395, EC-1020	P0744 TORQUE CONVERTER	TM-258, TM-482
P0462, P0463 FUEL LEVEL SENSOR	EC-397, EC-1022	P0745 PRESSURE CONTROL SOLENOID A	TM-260
P046E EGR PRESSURE SENSOR	EC-1023	P0746 PRESSURE CONTROL SOLENOID A	TM-262, TM-484
P046F, P0486 EGR PRESSURE SENSOR	EC-1026	P0776 PRESSURE CONTROL SOLENOID B	TM-264, TM-486
P0500 VSS	EC-398, EC-1028	P0778 PRESSURE CONTROL SOLENOID B	TM-266, TM-488
P0501, P2159 VEHICLE SPEED SENSOR	EC-402, EC-1032	P0779 PRESSURE CONTROL SOLENOID B	TM-489
P0506 ISC SYSTEM	EC-403, EC-1033	P0826 UP AND DOWN SHIFT SW	TM-268, TM-491
P0507 ISC SYSTEM	EC-405, EC-1035	P0840 TRANSMISSION FLUID PRESSURE SENSOR SW A	TM-274
P050A, P050B, P050E COLD START CONTROL	EC-1037	P0841 TRANSMISSION FLUID PRESSURE SENSOR SW A	TM-277, TM-497
P050A, P050E COLD START CONTROL	EC-407	P0847 TRANSMISSION FLUID PRESSURE SENSOR SW B	TM-498
P0520 EOP SENSOR	EC-409, EC-1039	P0848 TRANSMISSION FLUID PRESSURE SENSOR SW B	TM-500
P0524 ENGINE OIL PRESSURE	EC-413, EC-1042	P084C TRANSMISSION FLUID PRESSURE SENSOR SW H	TM-502
P052A, P052B INTAKE VALVE TIMING CONTROL	EC-1045	P084D TRANSMISSION FLUID PRESSURE SENSOR SW H	TM-504
P0603 ECM	EC-416, EC-1051	P0850 PNP SWITCH	EC-427, EC-1066
P0604 ECM	EC-417, EC-1052	P0863 TCM COMMUNICATION	TM-506
P0605 ECM	EC-418, EC-1053	P0868 TRANSMISSION FLUID PRESSURE	TM-279
P0606 ECM	EC-419, EC-1054	P0890 TCM	TM-507
P0607 ECM	EC-420, EC-1055	P0962 PRESSURE CONTROL SOLENOID A	TM-509
P060A ECM	EC-421, EC-1056	P0963 PRESSURE CONTROL SOLENOID A	TM-511
P060B ECM	EC-422, EC-1057	P0965 PRESSURE CONTROL SOLENOID B	TM-513
P0611 ECM PROTECTION	EC-423, EC-1058	P0966 PRESSURE CONTROL SOLENOID B	TM-515
P062B ECM	EC-424, EC-1059	P0967 PRESSURE CONTROL SOLENOID B	TM-517
P062F CONTROL MODULE	EC-1060	P100C VALVE TIMING OFFSET DATA	EC-1070
P062F EEPROM	TM-454	P1078 EVT CONTROL POSITION SENSOR	EC-431
P0643 SENSOR POWER SUPPLY	EC-425, EC-1061		
P06DA, P06DB ENGINE OIL PRESSURE CONTROL SOLENOID VALVE	EC-1064		
P0703 BRAKE SWITCH B	TM-238		
P0705 TRANSMISSION RANGE SENSOR A	TM-241, TM-455		

P1148 CLOSED LOOP CONTROLEC-435, EC-1071	P1807, P1808 BRAKE PEDAL POSITION SWITCH EC-502
P1197 OUT OF GAS EC-436, EC-1072	P1808 WHEEL SPEED SENSOR DLN-44
P119A, P119B FUEL RAIL PRESSURE SENSOR . EC-438, EC-1074	P1811 POWER SUPPLY CIRCUIT FOR AWD CONTROL MODULE..... DLN-45
P119C FUEL RAIL PRESSURE SENSOR.EC-443, EC-1078	P1813 AWD MODE SWITCH DLN-47
P1212 TCS COMMUNICATION LINEEC-447, EC-1081	P181B INCOMPLETE SELF SHUT DLN-50
P1217 ENGINE OVER TEMPERATURE ...EC-448, EC-1082	P181D ENGINE TORQUE SIGNAL DLN-52
P1225 TP SENSOR EC-451, EC-1085	P181E STEERING ANGLE SENSOR DLN-53
P1226 TP SENSOR EC-452, EC-1086	P181F INCOMPLETE CALIBRATION DLN-54
P1423, P1424 COLD START CONTROL...EC-453, EC-1087	P1820 ENGINE SPEED SIGNAL DLN-55
P1451 PRESSURE SENSOR EC-455, EC-1089	P1829 ACCELERATOR PEDAL POSITION SENSOR DLN-56
P1550 BATTERY CURRENT SENSOREC-458, EC-1092	P182D AWD SOLENOID (LEFT)..... DLN-57
P1551, P1552 BATTERY CURRENT SENSOR..... EC-461, EC-1095	P182E AWD SOLENOID (RIGHT)..... DLN-60
P1553 BATTERY CURRENT SENSOREC-464, EC-1098	P1830 ABS OPERATION SIGNAL DLN-63
P1554 BATTERY CURRENT SENSOREC-467, EC-1101	P1831 VDC OPERATION SIGNAL..... DLN-64
P1556, P1557 BATTERY TEMPERATURE SENSOREC-471, EC-1104	P1832 TCS OPERATION SIGNAL DLN-65
P1564 ASCD STEERING SWITCH.....EC-473, EC-1106	P183B SOLENOID POWER SUPPLY DLN-66
P1572 ASCD BRAKE SWITCH.....EC-1109	P183C DECEL G SENSOR..... DLN-68
P1572 BRAKE PEDAL POSITION SWITCHEC-476	P183D SIDE G SENSOR DLN-69
P1574 ASCD VEHICLE SPEED SENSOR EC-481, EC-1114	P183E YAW RATE SENSOR..... DLN-70
P158A G SENSOREC-483, EC-1116	P183F GEAR POSITION SIGNAL..... DLN-71
P159A, P159C, P159D G SENSOREC-484	P1840 OUTPUT SPEED SIGNAL DLN-72
P159B G SENSOREC-488, EC-1117	P1864 INPUT SPEED SIGNAL DLN-73
P159C, P159D G SENSOR.....EC-1121	P1865 GEAR RATIO SIGNAL DLN-74
P1610 LOCK MODE..... SEC-50	P2004 INTAKE MANIFOLD RUNNER CONTROL VALVE.....EC-1127
P1611 ID DISCORD, IMMU-ECM..... SEC-51	P2014, P2016, P2017, P2018 INTAKE MANIFOLD RUNNER CONTROL VALVE POSITION SENSOREC-1130
P1612 CHAIN OF ECM-IMMU SEC-52	P2096, P2097 A/F SENSOR 1 ... EC-505, EC-1133
P1650 STARTER MOTOR RELAY 2EC-493	P2100, P2103 THROTTLE CONTROL MOTOR RELAY EC-509, EC-1137
P1651 STARTER MOTOR RELAYEC-496	P2101 ELECTRIC THROTTLE CONTROL FUNCTIONEC-511, EC-1139
P1652 STARTER MOTOR SYSTEM COMMEC-498	P2118 THROTTLE CONTROL MOTOR.... EC-514, EC-1142
P1701 TCM TM-281	P2119 ELECTRIC THROTTLE CONTROL ACTUATOR EC-516, EC-1144
P1705 TP SENSOR TM-284	P2122, P2123 APP SENSOR.... EC-518, EC-1146
P1709 INCOMPLETED DATA WRITING.... TM-285	P2127, P2128 APP SENSOR.... EC-521, EC-1149
P1722 VEHICLE SPEED..... TM-287	P2135 TP SENSOR..... EC-524, EC-1151
P1723 SPEED SENSOR..... TM-288	P2138 APP SENSOR..... EC-527, EC-1154
P1726 THROTTLE CONTROL SIGNAL TM-290	P2162 VEHICLE SPEED SENSOR..... EC-531, EC-1157
P1740 SELECT SOLENOID..... TM-291	P219A AIR FUEL RATIO EC-533, EC-1159
P1777 STEP MOTOR..... TM-293	P2263 TC SYSTEM..... EC-538, EC-1164
P1778 STEP MOTOR..... TM-296	P2562, P2566 WASTEGATE CONTROL VALVE POSITION SENSOREC-1169
P17F0 CVT JUDDER (T/M INSPECTION). TM-519	P2563 WASTEGATE CONTROL VALVE POSITION SENSOREC-1172
P17F1 CVT JUDDER (C/V INSPECTION). TM-520	P2564, P2565 WASTEGATE CONTROL VALVE POSITION SENSOREC-1175
P17F2 CVT JUDDER (T/C INSPECTION) . TM-521	P2610 ECM INTERNAL TIMEREC-1178
P1804, P1809 AWD CONTROL MODULE. DLN-43	
P1805 BRAKE SWITCH.....EC-500, EC-1125	

P26A3 MULTI-WAY CONTROL VALVE MOTOR....
[EC-1180](#)
P26A5 MULTI-WAY CONTROL VALVE POSITION
SENSOR..... [EC-1182](#)
P26A6 P26A7 MULTI-WAY CONTROL VALVE
POSITION SENSOR..... [EC-1185](#)
P26AB MULTI-WAY CONTROL VALVE.... [EC-1188](#)
P2765 INPUT SPEED SENSOR B [TM-522](#)
P2813 SELECT SOLENOID [TM-526](#)
P2814 SELECT SOLENOID [TM-528](#)
P2815 SELECT SOLENOID [TM-530](#)
PADDLE SHIFTER..... [TM-322](#), [TM-552](#)
PARKING BRAKE CONTROL [PB-6](#)
PARKING BRAKE SHOE [PB-5](#), [PB-9](#)
PARKING BRAKE SWITCH..... [BRC-133](#)
PARKING BRAKE SWITCH SIGNAL CIRCUIT
[WCS-43](#)
PARKING BRAKE SYSTEM [PB-4](#)
PARKING LAMP CIRCUIT [EXL-56](#), [EXL-167](#)
PARKING, LICENSE PLATE, SIDE MARKER AND
TAIL LAMPS ARE NOT TURNED ON . [EXL-89](#),
[EXL-200](#)
PASSENGER AIR BAG MODULE [SR-18](#)
PASSENGER SIDE DOOR MIRROR DEFOGGER
[DEF-28](#)
PERFORMANCE TEST [HA-24](#)
PERIODIC MAINTENANCE..... [MA-7](#)
PLUG [TM-576](#)
POSITION SWITCH. [TM-20](#), [TM-24](#), [TM-78](#), [TM-82](#)
POSITIVE CRANKCASE VENTILATION... [EC-590](#),
[EC-1256](#)
POWER DISTRIBUTION SYSTEM [PCS-52](#)
POWER GENERATION VOLTAGE VARIABLE
CONTROL SYSTEM OPERATION
INSPECTION [CHG-23](#)
POWER SOCKET [PWO-4](#), [PWO-6](#)
POWER SUPPLY ROUTING CIRCUIT [PG-12](#)
POWER TRANSISTOR [HAC-99](#)
POWER WINDOW LOCK SWITCH DOES NOT
FUNCTION [PWC-53](#)
POWER WINDOW MAIN SWITCH..... [PWC-15](#),
[PWC-54](#)
POWER WINDOW MOTOR [PWC-35](#)
POWER WINDOW RETAINED POWER
OPERATION DOES NOT OPERATE
PROPERLY [PWC-52](#)
POWER WINDOW SYSTEM [PWC-17](#)

PRECAUTIONS [ACC-2](#), [AV-6](#), [AV-60](#), [AV-198](#),
[BCS-3](#), [BR-3](#), [BRC-4](#), [BRM-6](#), [CHG-3](#), [CL-2](#),
[CO-3](#), [CO-29](#), [DEF-3](#), [DLK-6](#), [DLN-5](#), [DLN-121](#),
[DLN-129](#), [DMS-2](#), [EC-20](#), [EC-593](#), [EM-5](#),
[EM-150](#), [EX-2](#), [EXL-6](#), [EXL-119](#), [EXT-3](#), [FAX-4](#),
[FAX-59](#), [FL-2](#), [FSU-2](#), [GI-23](#), [GW-2](#), [HA-3](#),
[HAC-5](#), [HAC-103](#), [HRN-2](#), [INL-3](#), [INT-3](#), [IP-2](#),
[LAN-7](#), [LAN-23](#), [LU-3](#), [LU-20](#), [MIR-2](#), [MWI-3](#),
[PB-2](#), [PCS-3](#), [PCS-39](#), [PG-3](#), [PWC-4](#), [PWO-2](#),
[RAX-3](#), [RAX-10](#), [RF-3](#), [RSU-3](#), [RSU-18](#), [SB-2](#),
[SE-2](#), [SEC-4](#), [SR-2](#), [SRC-3](#), [ST-2](#), [STC-3](#),
[STR-2](#), [TM-11](#), [TM-68](#), [TM-149](#), [TM-355](#), [VTL-2](#),
[WCS-3](#), [WT-3](#), [WW-3](#)
PRIMARY SPEED SENSOR..... [TM-337](#), [TM-562](#)
PUSH-BUTTON IGNITION SWITCH [PCS-78](#),
[SEC-127](#)
PUSH-BUTTON IGNITION SWITCH DOES NOT
OPERATE [PCS-83](#)
PUSH-BUTTON IGNITION SWITCH
ILLUMINATION CIRCUIT [INL-43](#)
PUSH-BUTTON IGNITION SWITCH POSITION
INDICATOR..... [PCS-81](#)
PUSH-BUTTON IGNITION SWITCH POSITION
INDICATOR DOES NOT ILLUMINATE [PCS-84](#)

R

RADIATOR [CO-14](#), [CO-16](#), [CO-37](#), [CO-46](#)
RADIATOR CAP [CO-45](#)
RADIATOR CORE SUPPORT [DLK-130](#)
REAR BUMPER [EXT-20](#)
REAR CAMERA [AV-192](#)
REAR COMBINATION LAMP ... [EXL-108](#), [EXL-219](#)
REAR DIFFERENTIAL GEAR OIL..... [DLN-137](#)
REAR DISC BRAKE..... [BR-7](#), [BR-18](#), [BR-59](#)
REAR DOOR..... [DLK-140](#)
REAR DOOR FINISHER..... [INT-16](#)
REAR DOOR GLASS..... [GW-21](#)
REAR DOOR LOCK..... [DLK-161](#)
REAR DOOR SPEAKER..... [AV-52](#), [AV-184](#)
REAR DRIVE SHAFT..... [RAX-15](#), [RAX-19](#)
REAR FENDER COVER..... [EXT-48](#)
REAR FINAL DRIVE ASSEMBLY [DLN-151](#)
REAR FOG LAMP [EXL-115](#), [EXL-226](#)
REAR LH SIDE POWER WINDOW DOES NOT
OPERATE [PWC-46](#)
REAR POWER WINDOW SWITCH [PWC-33](#)
REAR PROPELLER SHAFT ... [DLN-123](#), [DLN-124](#)
REAR REFLEX REFLECTOR... [EXL-116](#), [EXL-227](#)
REAR REGULATOR [GW-23](#)
REAR RH SIDE POWER WINDOW DOES NOT
OPERATE [PWC-48](#)
REAR SEAT [SE-29](#)
REAR SEAT BELT [SB-11](#)
REAR SHOCK ABSORBER..... [RSU-8](#), [RSU-24](#)
REAR SPOILER..... [EXT-49](#)
REAR STABILIZER..... [RSU-35](#)

REAR SUSPENSION ASSEMBLY [RSU-6](#), [RSU-21](#),
[RSU-36](#)
 REAR SUSPENSION BEAM [RSU-14](#)
 REAR VIEW CAMERA [AV-56](#)
 REAR WASHER NOZZLE AND TUBE [WW-60](#)
 REAR WHEEL HUB [RAX-6](#), [RAX-7](#)
 REAR WHEEL HUB AND HOUSING [RAX-14](#),
[RAX-16](#)
 REAR WINDOW DEFOGGER [DEF-23](#)
 REAR WINDOW DEFOGGER DOES NOT
 OPERATE BUT BOTH DOOR MIRROR
 DEFOGGERS OPERATE [DEF-38](#)
 REAR WINDOW DEFOGGER FEEDBACK SIGNAL
[DEF-29](#)
 REAR WINDOW DEFOGGER INDICATOR DOES
 NOT ILLUMINATE [DEF-42](#)
 REAR WINDOW DEFOGGER RELAY [DEF-22](#)
 REAR WINDOW DEFOGGER SWITCH ... [DEF-19](#)
 REAR WINDOW DEFOGGER SYSTEM ... [DEF-30](#)
 REAR WIPER ARM [WW-57](#)
 REAR WIPER MOTOR [WW-59](#)
 REAR WIPER MOTOR CIRCUIT [WW-36](#)
 REAR WIPER STOP POSITION SIGNAL CIRCUIT
[WW-38](#)
 RECOMMENDED CHEMICAL PRODUCTS AND
 SEALANTS [GI-22](#)
 RECOMMENDED FLUIDS AND LUBRICANTS
[MA-11](#)
 REFRIGERANT [HA-17](#)
 REFRIGERANT PRESSURE SENSOR [EC-569](#),
[EC-1239](#), [HAC-98](#), [HAC-153](#)
 REFRIGERATION SYSTEM SYMPTOMS ... [HA-25](#)
 REMOTE KEYLESS ENTRY RECEIVER .. [DLK-85](#),
[DLK-174](#)
 REPAIRING HIGH STRENGTH STEEL [BRM-7](#)
 REPAIRING MATERIAL [BRM-10](#)
 REPLACEMENT OPERATIONS [BRM-36](#)
 RETAINED POWER OPERATION DOES NOT
 OPERATE PROPERLY [RF-27](#)
 REVERSE IDLER SHAFT AND GEAR [TM-61](#)
 REVERSE IDLER SHAFT AND GEARS ... [TM-134](#)
 RING GEAR SHAFT [DLN-96](#)
 ROAD TEST [TM-230](#)
 ROAD WHEEL [WT-37](#)
 ROAD WHEEL TIRE ASSEMBLY [WT-39](#)
 ROOF SIDE MOLDING [EXT-38](#)

S

S TERMINAL CIRCUIT [CHG-29](#), [STR-25](#)
 SATELLITE SENSOR [SR-26](#)
 SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT .
[WCS-41](#)
 SEAT BELT PRE-TENSIONER [SR-31](#)
 SECONDARY SPEED SENSOR [TM-338](#)
 SECURITY CONTROL SYSTEM [SEC-29](#)
 SECURITY INDICATOR LAMP [SEC-119](#)

SECURITY INDICATOR LAMP DOES NOT TURN
 ON OR BLINK [SEC-122](#)
 SELECTIVE UNLOCK FUNCTION DOES NOT
 OPERATE [DLK-100](#)
 SENSOR POWER SUPPLY 2 CIRCUIT .. [EC-1241](#)
 SENSOR ROTOR [BRC-153](#)
 SERVICE AFTER REPLACING OR REMOVING
 ENGINE PARTS [EC-749](#)
 SERVICE DATA AND SPECIFICATIONS (SDS)
[BR-68](#), [CHG-35](#), [CL-21](#), [CO-28](#), [CO-58](#),
[DLN-120](#), [DLN-128](#), [DLN-175](#), [EC-592](#),
[EC-1259](#), [EM-139](#), [EM-311](#), [EXL-118](#), [EXL-229](#),
[FAX-57](#), [FAX-109](#), [FL-32](#), [FSU-19](#), [HA-48](#),
[INL-51](#), [LU-19](#), [LU-38](#), [MA-48](#), [PB-13](#), [PG-107](#),
[RAX-9](#), [RAX-26](#), [RSU-16](#), [RSU-38](#), [ST-21](#),
[STR-30](#), [TM-67](#), [TM-143](#), [TM-353](#), [TM-584](#),
[VTL-17](#), [WT-47](#)
 SERVICE INFORMATION FOR ELECTRICAL
 INCIDENT [GI-41](#)
 SHIFT CONTROL [TM-139](#)
 SHIFT LOCK SYSTEM [TM-299](#), [TM-535](#)
 SHIFT P WARNING LAMP [DLK-87](#)
 SHIFT POSITION INDICATOR CIRCUIT .. [TM-298](#),
[TM-534](#)
 SHIPPING MODE CANCEL OPERATION . [BCS-82](#)
 SIDE CAMERA [AV-193](#)
 SIDE OIL SEAL [DLN-143](#), [TM-23](#), [TM-81](#)
 SIDE TURN SIGNAL LAMP [EXL-104](#), [EXL-215](#)
 SILL COVER [EXT-33](#)
 SPARK PLUG [EM-24](#), [EM-189](#)
 SPIRAL CABLE [SR-15](#)
 SQUEAK AND RATTLE TROUBLE DIAGNOSES ..
[DLK-118](#), [EXT-6](#), [GW-5](#), [INT-7](#), [IP-6](#), [MIR-10](#),
[RF-28](#), [SE-11](#)
 SRS AIR BAG SYSTEM [SRC-21](#)
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 OFF [SRC-87](#)
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 ON [SRC-88](#)
 STALL TEST [TM-226](#), [TM-438](#)
 STARTER MOTOR [STR-27](#)
 STARTING SYSTEM [STR-7](#), [STR-26](#)
 STEERING ANGLE SENSOR ... [AV-194](#), [BRC-157](#)
 STEERING COLUMN [ST-10](#)
 STEERING GEAR AND LINKAGE [ST-16](#)
 STEERING SHAFT [ST-14](#)
 STEERING SWITCH [AV-55](#), [AV-195](#)
 STEERING SWITCH GROUND CIRCUIT ... [AV-170](#)
 STEERING SWITCH SIGNAL A CIRCUIT ... [AV-38](#),
[AV-166](#)
 STEERING SWITCH SIGNAL B CIRCUIT ... [AV-40](#),
[AV-168](#)
 STEERING SWITCH SIGNAL GND CIRCUIT ... [AV-42](#)
 STEERING WHEEL [ST-5](#), [ST-8](#), [ST-9](#)
 STEERING WHEEL TURNING FORCE IS HEAVY
 OR LIGHT [STC-31](#)

STRG BRANCH LINE CIRCUIT ..LAN-60, LAN-73,
LAN-88, LAN-105, LAN-119, LAN-135, LAN-153,
LAN-168, LAN-185, LAN-204

STRUCTURE AND OPERATIONDLN-14, DLN-135,
EC-47, EC-622, EM-174, TM-18, TM-76,
TM-164, TM-371

SUNLOAD SENSOR..... HAC-96

SUNROOF DOES NOT OPERATE ANTI-PINCH
FUNCTION RF-26

SUNROOF DOES NOT OPERATE PROPERLY
RF-23

SUNROOF MOTOR ASSEMBLY RF-12, RF-20,
RF-37

SUNROOF SWITCH RF-21, RF-45

SUNROOF SYSTEM RF-11

SUNROOF UNIT ASSEMBLY..... RF-39

SUNSHADE RF-42

SUSPENSION ARM..... RSU-29

SYSTEM (INTELLIGENT KEY SYSTEM)...DLK-13

SYSTEM INITIALIZATIONPWC-26

SYSTEM SETTING..... HAC-50

SYSTEM SYMPTOM TM-303

T

TAIL LAMP CIRCUIT EXL-60, EXL-171

TAKE AWAY WARNING DOES NOT OPERATE
DLK-112

TCMTM-195, TM-328, TM-402, TM-554

TCM BRANCH LINE CIRCUIT... LAN-51, LAN-114,
LAN-128, LAN-144, LAN-163, LAN-178,
LAN-195

THE AMBIENT TEMPERATURE DISPLAY IS
INCORRECT.....MWI-62

THE BRAKING DISTANCE IS LONG BRC-143

THE FUEL GAUGE INDICATOR DOES NOT
OPERATEMWI-59

THE LIGHT REMINDER WARNING DOES NOT
SOUNDWCS-45

THE OIL PRESSURE WARNING LAMP DOES NOT
TURN OFFMWI-61

THE OIL PRESSURE WARNING LAMP DOES NOT
TURN ON.....MWI-60

THE PARKING BRAKE RELEASE WARNING
CONTINUES SOUNDING, OR DOES NOT
SOUNDWCS-44

THE SEAT BELT WARNING CONTINUES
SOUNDING, OR DOES NOT SOUND.WCS-46

THERMO CONTROL AMPLIFIER HAC-134,
HAC-152

THERMOSTATCO-23

THROTTLE VALVE CLOSED POSITION
LEARNING.....EC-161, EC-755

TIGHTENING TORQUE OF STANDARD BOLTS...
GI-19

TIMING CHAIN EM-76, EM-248

TIRE PRESSURE MONITORING SYSTEM WT-14

TIRE PRESSURE RECEIVER..... WT-46

TIRE PRESSURE SENSOR WT-40

TIRE PRESSURE SENSOR ID REGISTRATION...
WT-20

TIRE PRESSURE SENSOR ID REGISTRATION
CANNOT BE COMPLETED WT-35

TORQUE CONVERTER AND CONVERTER
HOUSING OIL SEAL TM-351, TM-581

TOW TRUCK TOWING GI-32

TPMS WT-30

TRANSAXLE ASSEMBLY... TM-30, TM-32, TM-86,
TM-88, TM-347, TM-577

TRANSFER ASSEMBLYDLN-94

TRANSFER CASEDLN-116

TRANSFER OILDLN-90

TRANSMISSION RANGE SWITCH TM-326

TRANSVERSE LINK.....FSU-13

TROUBLE DIAGNOSIS LAN-10

TROUBLE DIAGNOSIS - SPECIFICATION VALUE
EC-180, EC-786

TURBOCHARGER..... EM-40

TURN SIGNAL LAMP CIRCUIT .. EXL-71, EXL-182

TWEETER.....AV-53, AV-185

U

U0073 COMMUNICATION BUS A OFFTM-444

U0100 DRIVETRAIN CAN COMMUNICATION
(ECM).....EC-191

U0100 LOST COMMUNICATION (ECM A)TM-235,
TM-445

U0101 CAN COMM CIRCUITEC-193, EC-797

U0102 LOST COMMUNICATION (TRANSFER).....
TM-446

U0122 ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT)..... AV-125

U0122 VEHICLE DYNAMICS CONTROL MODULE
EC-194, EC-798

U0140 LOST COMMUNICATION (BCM)TM-447

U0141 LOST COMMUNICATION (BCM A).TM-448

U0155 LOST COMMUNICATION (IPC)TM-449

U0164 LOST COMMUNICATION (HVAC) ..TM-450

U0300 CAN COMMUNICATION DATA TM-451

U0415 VEHICLE SPEED BCS-85

U0416 ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT)..... AV-126

U0428 STEERING ANGLE SENSOR AV-127

U1000 CAN COMM..... BCS-83

U1000 CAN COMM CIRCUITAV-128, AV-222,
BRC-127, DLN-75, EC-799, HAC-53, MWI-48,
PCS-31, SRC-34, STC-27, TM-236, TM-452

U1001 CAN COMM CIRCUIT EC-195

U1010 CONTROL UNIT (CAN).....AV-130, AV-223,
BCS-84, BRC-128, DLN-76, HAC-54, MWI-49,
SRC-35, TM-237

U1117 LOST COMMUNICATION (ABS) TM-453

U111A REAR CAMERA IMAGE SIGNAL CIRCUIT	
AV-131	
U111B SIDE CAMERA RH IMAGE SIGNAL CIRCUIT	AV-134
U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT	AV-137
U111D SIDE CAMERA LH IMAGE SIGNAL CIRCUIT	AV-140
U1200 NAVI CONTROL UNIT	AV-143
U1217 NAVI CONTROL UNIT	AV-144
U1229 NAVI CONTROL UNIT	AV-145
U1232 STEERING ANGLE SENSOR	AV-146
U1244 GPS ANTENNA	AV-147
U1258 SATELLITE RADIO ANTENNA	AV-148
U1263 USB	AV-149
U1264 AMP	AV-150
U12AA CONFIGURATION ERROR	AV-151
U12AB ANTENNA	AV-152
U12AC NAVI CONTROL UNIT	AV-153
U12AD NAVI CONTROL UNIT	AV-154
U12AE NAVI CONTROL UNIT	AV-155
U12AF NAVI CONTROL UNIT	AV-156
U12B0 POWER SUPPLY VOLTAGE	AV-157
U12B1 POWER SUPPLY VOLTAGE	AV-158
U1304 CAMERA IMAGE CALIBRATION	AV-159
U1305 CONFIG UNFINISH	AV-160
U1402 ENGINE SPEED SIGNAL	AV-224
U1405 ENGINE TORQUE SIGNAL	AV-225
U1406 BOOST PRESSURE INPUT	AV-226
U1412 LONG ACC INPUT	AV-227
U1413 TRANS ACC INPUT	AV-228
UNBALANCE STEERING WHEEL TURNING FORCE (TORQUE VARIATION)	STC-34
UNBALANCE STEERING WHEEL TURNING FORCE AND RETURN BETWEEN RIGHT AND LEFT	STC-33
UNEXPECTED BRAKE PEDAL REACTION	BRC-142
UNIT CHARACTERISTICS WRITING	DLN-42
UNLOCK LINK FUNCTION DOES NOT OPERATE	DLK-117
UNLOCK SENSOR	DLK-88
UPPER LINK	RSU-33
USB CONNECTOR AND AUX JACK	AV-57, AV-196

V

VACUUM LINES	BR-45
VALVE TIMING OFFSET DATA CLEAR	EC-757
VALVE TIMING OFFSET DATA WRITING	EC-758
VDC OFF INDICATOR LAMP	BRC-140
VDC OFF SWITCH	BRC-135, BRC-158
VDC WARNING LAMP	BRC-139
VEHICLE DOES NOT ENTER AWD MODE	DLN-85
VEHICLE JERKS DURING	BRC-146
VEHICLE SECURITY ALARM DOES NOT ACTIVATE	SEC-125

VEHICLE SECURITY SYSTEM CANNOT BE SET	SEC-123
VEHICLE SPEED SENSING AUTO LOCK OPERATION DOES NOT OPERATE	DLK-103
VENTILATION SYSTEM	VTL-5
VIN REGISTRATION	EC-159, EC-753

W

WARNING CHIME SYSTEM	WCS-31
WASHER LEVEL SWITCH	WW-46
WASHER PUMP	WW-45
WASHER SWITCH	WW-35
WASHER TANK	WW-43
WASTEGATE VALVE CLOSED POSITION LEARNING	EC-756
WATER HOSE	TM-344, TM-570
WATER OUTLET	CO-25
WATER PUMP	CO-21, CO-52
WHEEL ALIGNMENT	FSU-7, RSU-7, RSU-22
WHEEL SENSOR	BRC-148
WIND DEFLECTOR	RF-44
WINDSHIELD GLASS	GW-11
WIPER AND WASHER FUSE	WW-30
WIPER AND WASHER SWITCH	WW-56
WIPER AND WASHER SYSTEM	WW-22
WIPER AND WASHER SYSTEM SYMPTOMS	WW-39
WOOFER	AV-186

X

XENON HEADLAMP	EXL-55
----------------	--------

Y

YAW RATE/SIDE/DECEL G SENSOR	BRC-156
------------------------------	---------

