

PCS

SECTION

POWER CONTROL SYSTEM

CONTENTS

IPDM E/R	IPDM E/R	17
PRECAUTION	Reference Value	17
PRECAUTIONS	Fail-safe	23
Precautions for Removing Battery Terminal	DTC Index	24
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	WIRING DIAGRAM	26
SYSTEM DESCRIPTION	IPDM E/R	26
COMPONENT PARTS	Wiring Diagram	26
Component Parts Location	DTC/CIRCUIT DIAGNOSIS	31
SYSTEM	U1000 CAN COMM CIRCUIT	31
RELAY CONTROL SYSTEM	Description	31
RELAY CONTROL SYSTEM : System Diagram	DTC Logic	31
RELAY CONTROL SYSTEM : System Description	Diagnosis Procedure	31
RELAY CONTROL SYSTEM : Fail-safe	B2098 IGNITION RELAY ON STUCK	32
POWER CONTROL SYSTEM	Description	32
POWER CONTROL SYSTEM : System Diagram	DTC Logic	32
POWER CONTROL SYSTEM : System Description	Diagnosis Procedure	32
SIGNAL BUFFER SYSTEM	B2099 IGNITION RELAY OFF STUCK	34
SIGNAL BUFFER SYSTEM : System Diagram	Description	34
SIGNAL BUFFER SYSTEM : System Description	DTC Logic	34
POWER CONSUMPTION CONTROL SYSTEM	Diagnosis Procedure	34
POWER CONSUMPTION CONTROL SYSTEM : System Diagram	POWER SUPPLY AND GROUND CIRCUIT	36
POWER CONSUMPTION CONTROL SYSTEM : System Description	Diagnosis Procedure	36
DIAGNOSIS SYSTEM (IPDM E/R)	REMOVAL AND INSTALLATION	37
Diagnosis Description	IPDM E/R	37
CONSULT Function (IPDM E/R)	Exploded View	37
ECU DIAGNOSIS INFORMATION	Removal and Installation	37
	POWER DISTRIBUTION SYSTEM	
	PRECAUTION	39
	PRECAUTIONS	39
	Precautions for Removing Battery Terminal	39

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	39	Diagnosis Procedure	63
Precaution for Procedure without Cowl Top Cover..	40	Component Inspection	64
SYSTEM DESCRIPTION	41	B2615 BLOWER RELAY CIRCUIT	66
COMPONENT PARTS	41	DTC Logic	66
Component Parts Location	41	Diagnosis Procedure	66
Component Description	41	Component Inspection	67
BCM	41	B2616 IGNITION RELAY CIRCUIT	68
Ignition Relay	41	DTC Logic	68
Accessory Relay	42	Diagnosis Procedure	68
Blower Relay	42	Component Inspection	69
Push-Button Ignition Switch	42	B2618 BCM	70
Stop Lamp Switch	42	DTC Logic	70
Transmission Range Switch	42	Diagnosis Procedure	70
Clutch Interlock Switch	42	B261A PUSH-BUTTON IGNITION SWITCH	71
SYSTEM	43	DTC Logic	71
POWER DISTRIBUTION SYSTEM	43	Diagnosis Procedure	71
POWER DISTRIBUTION SYSTEM : System Diagram	43	B26F1 IGNITION RELAY	73
POWER DISTRIBUTION SYSTEM : System Description	43	DTC Logic	73
Fail-safe	44	Diagnosis Procedure	73
DIAGNOSIS SYSTEM (BCM)	46	B26F2 IGNITION RELAY	75
COMMON ITEM	46	DTC Logic	75
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	46	Diagnosis Procedure	75
INTELLIGENT KEY	47	B26F6 BCM	77
INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)	47	DTC Logic	77
ECU DIAGNOSIS INFORMATION	51	Diagnosis Procedure	77
BCM	51	PUSH-BUTTON IGNITION SWITCH	78
List of ECU Reference	51	Component Function Check	78
WIRING DIAGRAM	52	Diagnosis Procedure	78
POWER DISTRIBUTION SYSTEM	52	Component Inspection	79
Wiring Diagram	52	PUSH-BUTTON IGNITION SWITCH POSI- TION INDICATOR	81
BASIC INSPECTION	60	Description	81
DIAGNOSIS AND REPAIR WORK FLOW	60	Component Function Check	81
Work Flow	60	Diagnosis Procedure	81
DTC/CIRCUIT DIAGNOSIS	63	SYMPTOM DIAGNOSIS	83
B2614 ACC RELAY CIRCUIT	63	PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE	83
DTC Logic	63	Description	83
		Diagnosis Procedure	83
		PUSH-BUTTON IGNITION SWITCH POSI- TION INDICATOR DOES NOT ILLUMINATE ...	84
		Description	84
		Diagnosis Procedure	84

PRECAUTION

PRECAUTIONS


Precautions for Removing Battery Terminal

INFOID:0000000012946954

When disconnecting the battery terminal, pay attention to the following.

- Always use a 12V battery as power source.
- Never disconnect battery terminal while engine is running.
- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.
- For vehicles with the engine listed below, remove the battery terminal after a lapse of the specified time:

D4D engine	: 20 minutes	YS23DDT	: 4 minutes
HRA2DDT	: 12 minutes	YS23DDTT	: 4 minutes
K9K engine	: 4 minutes	ZD30DDTi	: 60 seconds
M9R engine	: 4 minutes	ZD30DDTT	: 60 seconds
R9M engine	: 4 minutes		
V9X engine	: 4 minutes		
YD25DDTi	: 2 minutes		

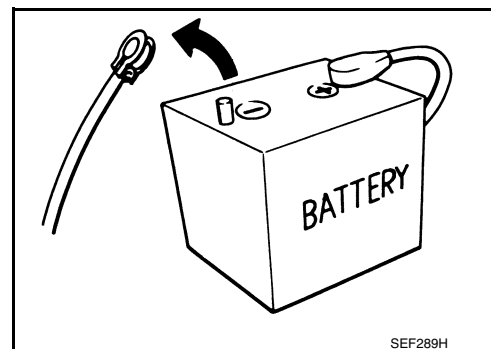

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- After high-load driving, if the vehicle is equipped with the V9X engine, turn the ignition switch OFF and wait for at least 15 minutes to remove the battery terminal.

NOTE:

- Turbocharger cooling pump may operate in a few minutes after the ignition switch is turned OFF.
- Example of high-load driving
 - Driving for 30 minutes or more at 140 km/h (86 MPH) or more.
 - Driving for 30 minutes or more on a steep slope.
- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000012197147

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".

PRECAUTIONS

< PRECAUTION >

[IPDM E/R]

- **Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.


- **When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.**
- **When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery or batteries, and wait at least 3 minutes before performing any service.**

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000012197148

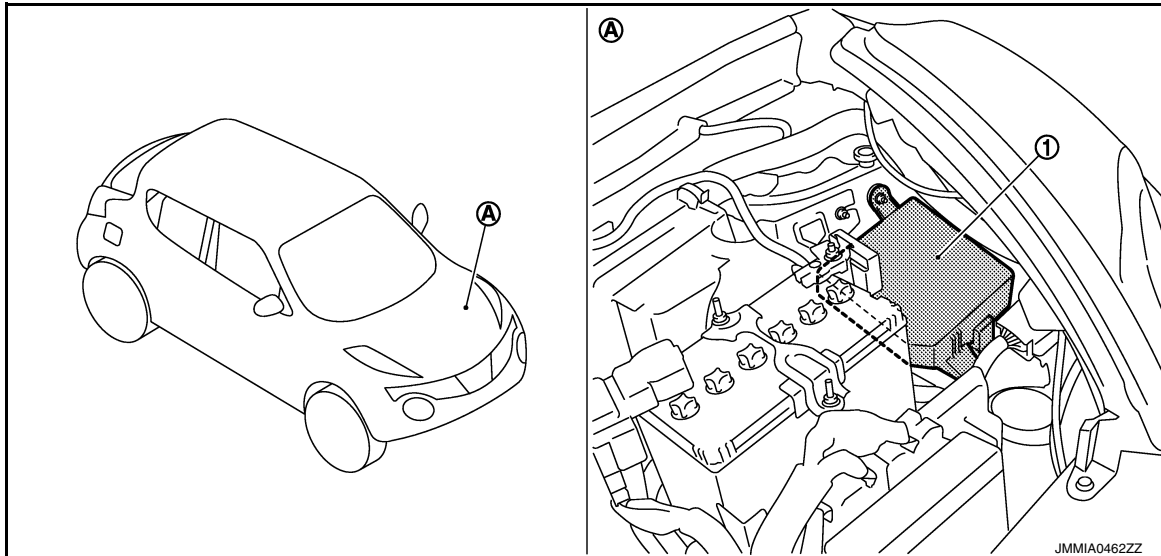

- 1. IPDM E/R
- A. Engine room (LH)

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS


SYSTEM

RELAY CONTROL SYSTEM

RELAY CONTROL SYSTEM : System Diagram

INFOID:000000012197149


NISMO MODELS

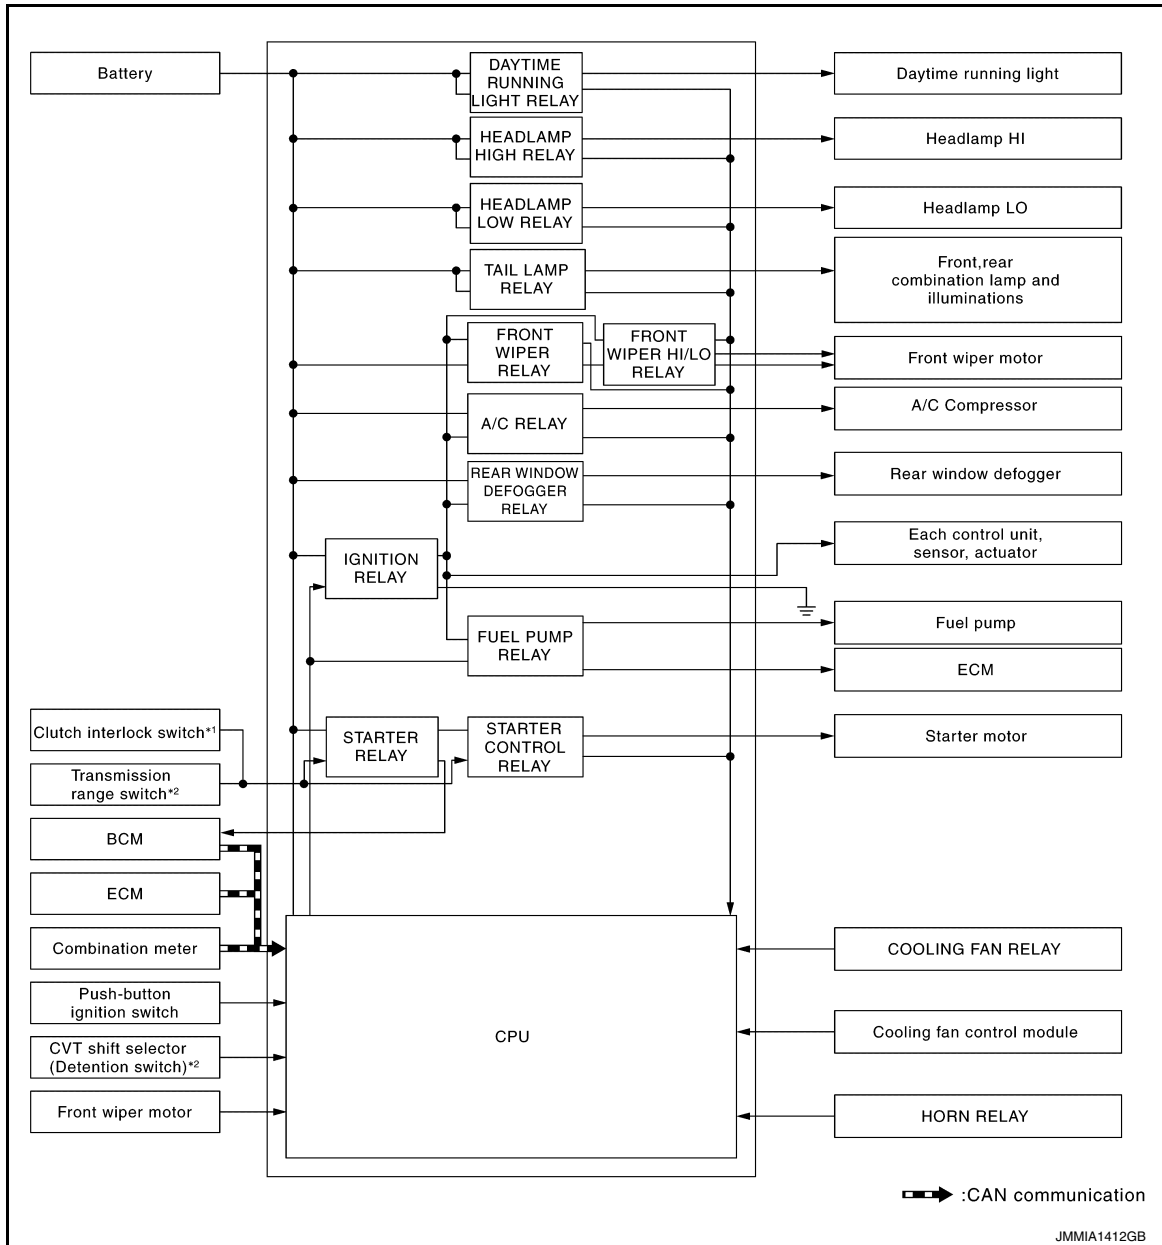

*1: M/T models

*2: CVT models

EXCEPT NISMO MODELS

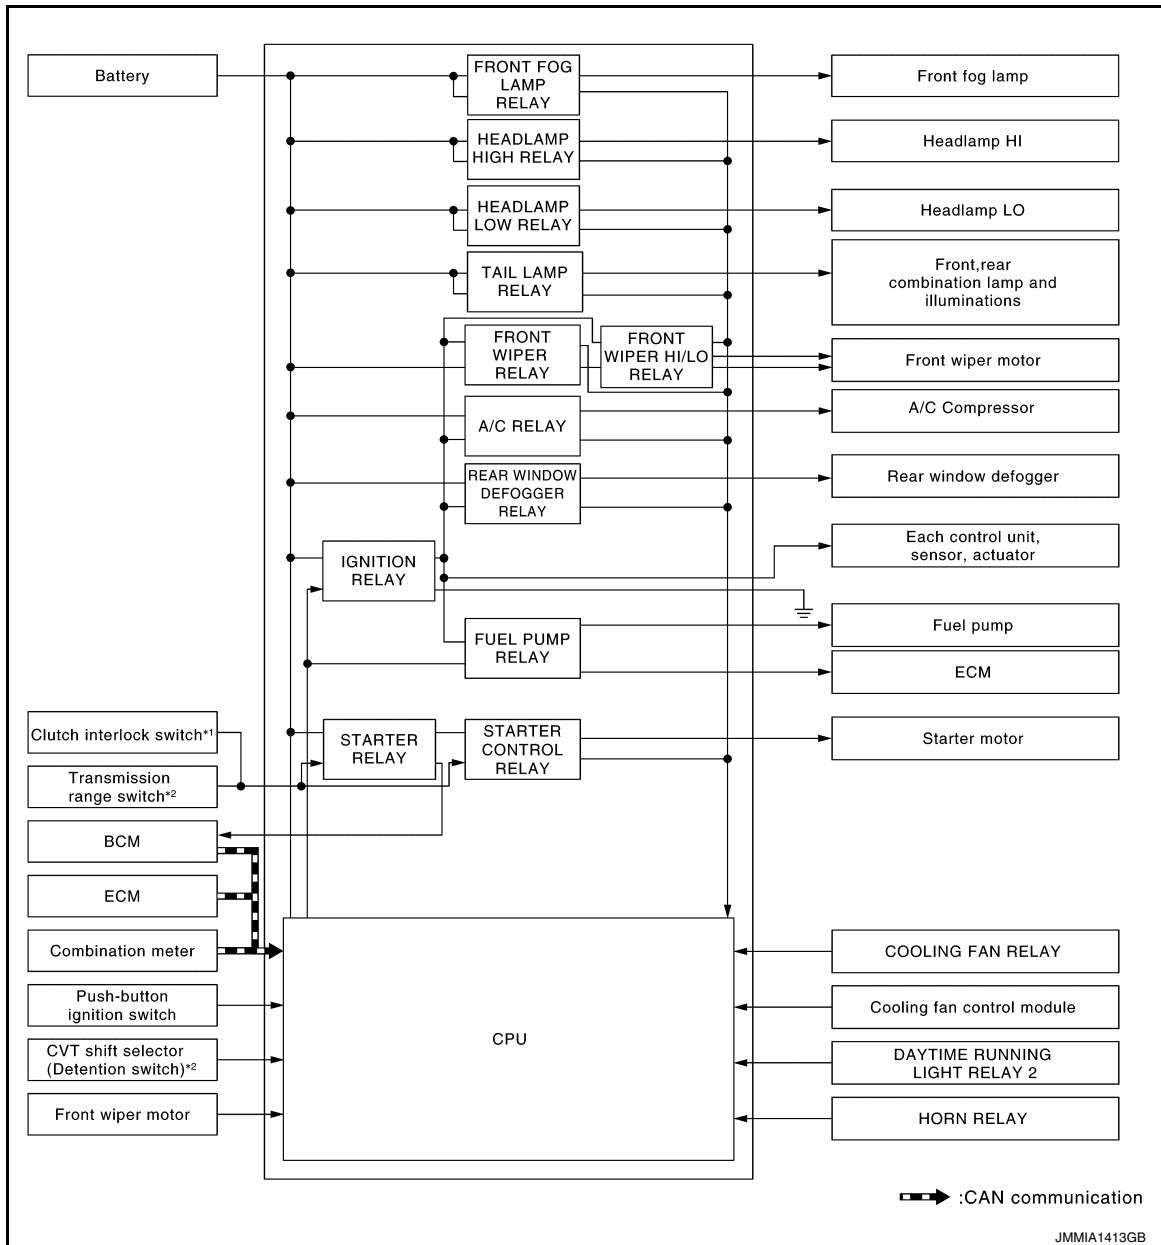

*1: M/T models

*2: CVT models

RELAY CONTROL SYSTEM : System Description

INFOID:000000012197150

IPDM E/R activates the internal control circuit to perform the relay ON-OFF control according to the input signals from various sensors and the request signals received from control units via CAN communication.

CAUTION:

IPDM E/R integrated relays cannot be removed.

Control relay	Input/output	Transmit unit	Control part	Reference page
<ul style="list-style-type: none"> Headlamp low relay Headlamp high relay 	<ul style="list-style-type: none"> Low beam request signal High beam request signal 	BCM (CAN)	<ul style="list-style-type: none"> Headlamp (LO) Headlamp (HI) 	EXL-11
Front fog lamp relay (Except for NISMO models)	Front fog light request signal	BCM (CAN)	Front fog lamp	EXL-17
Daytime running light relay (For NISMO models)			Daytime running light	EXL-14

SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

Control relay	Input/output	Transmit unit	Control part	Reference page
Tail lamp relay	Position light request signal	BCM (CAN)	<ul style="list-style-type: none"> • Parking lamp • License plate lamp • Tail lamp • Side marker lamp 	EXL-15
			Illumination	INL-6
<ul style="list-style-type: none"> • Front wiper relay • Front wiper HI/LO relay 	Front wiper request signal	BCM (CAN)	Front wiper motor	WW-7
	Front wiper stop position signal	Front wiper motor		
Rear window defogger	Rear window defogger switch signal	BCM (CAN)	Rear window defogger	DEF-7
Horn relay	Theft warning horn request signal	BCM (CAN)	Horn	SEC-16
<ul style="list-style-type: none"> • Starter relay^{NOTE} • Starter control relay 	Starter control relay signal	BCM (CAN)	Starter motor	SEC-9 , SEC-9
	Starter relay control signal	Transmission range switch (CVT models)		
		Clutch interlock switch (M/T models)		
Cooling fan relay	Cooling fan speed request	ECM (CAN)	Cooling fan control module	EC-64
A/C relay	A/C compressor request signal	ECM (CAN)	A/C compressor (Magnet clutch)	HAC-15
Daytime running light relay 2 (Except for NISMO models)	<ul style="list-style-type: none"> • Daytime running light request signal • Low beam request signal 	BCM (CAN)	<ul style="list-style-type: none"> • Headlamp (LO) • Parking lamp • License plate lamp • Tail lamp 	EXL-14
Ignition relay	Ignition switch ON signal	BCM (CAN)	Each control unit, sensor, actuator and relay (Ignition power supply)	PCS-32
	Vehicle speed signal (Meter)	Combination meter (CAN)		
	Push-button ignition switch signal	Push-button ignition switch		

NOTE:

BCM controls the starter relay.

RELAY CONTROL SYSTEM : Fail-safe

INFOID:0000000012197151

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> • Transmits the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON. • Transmits the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF.
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> • Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF
<ul style="list-style-type: none"> • Parking lamp • License plate lamp • Illumination • Tail lamp • Side marker lamp 	<ul style="list-style-type: none"> • Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper motor	<ul style="list-style-type: none"> • The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. • The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating. • Returns automatically wiper to stop position when ignition switch is turned ON if fail-safe control is activated while front wiper motor is operated and wiper stop in the other position than stop position. • The status is held at service position if the fail-safe control is activated while the service position function is operating.
Front fog lamp	Front fog lamp relay OFF
Daytime running light	Daytime running light relay OFF
Rear window defogger	Rear window defogger relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> • Detects DTC “B2098: IGN RELAY ON CIRC” • Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC “B2099: IGN RELAY OFF CIRC”

FRONT WIPER PROTECTION FUNCTION

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop.

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

POWER CONTROL SYSTEM


SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

POWER CONTROL SYSTEM : System Diagram

INFOID:0000000012197152

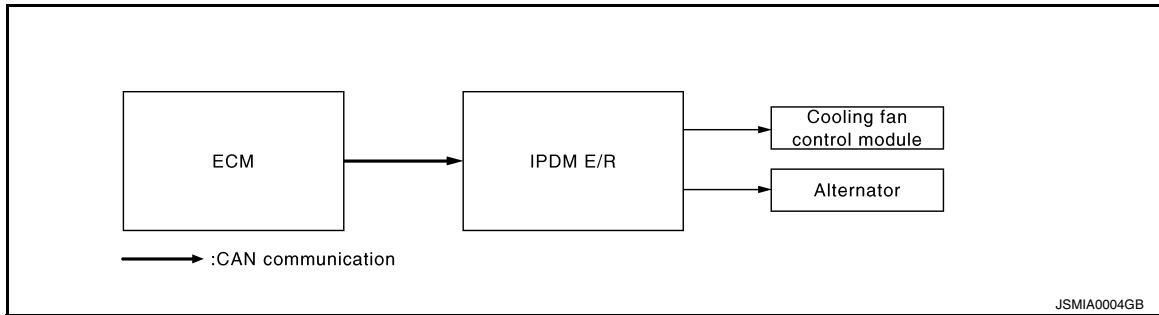

POWER CONTROL SYSTEM : System Description

INFOID:0000000012197153

COOLING FAN CONTROL

IPDM E/R outputs pulse duty signal (PWM signal) to the cooling fan control module according to the status of the cooling fan speed request signal received from ECM via CAN communication. Refer to [EC-64, "COOLING FAN CONTROL : System Diagram"](#).

CAUTION:

After ignition switch OFF, IPDM E/R turn the cooling fan relay ON and outputs pulse duty signal (PWM signal) to the cooling fan control module according to the request signal from ECM for cooling the engine according to the situation.


ALTERNATOR CONTROL

IPDM E/R outputs power generation command signal (PWM signal) to the alternator according to the status of the power generation command value signal received from ECM via CAN communication. Refer to [CHG-8, "POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : System Diagram"](#).

SIGNAL BUFFER SYSTEM

SIGNAL BUFFER SYSTEM : System Diagram

INFOID:0000000012197154

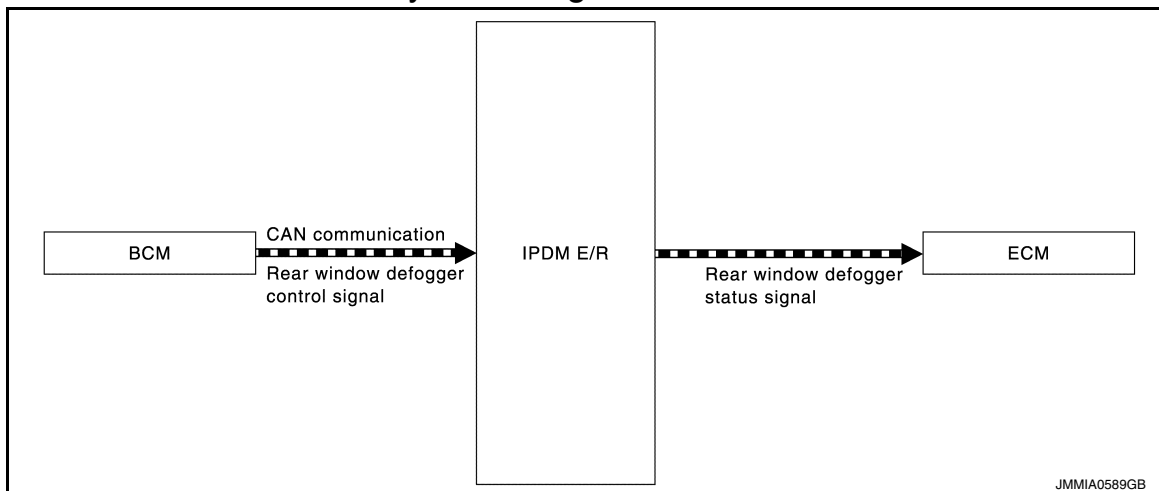

SIGNAL BUFFER SYSTEM : System Description


INFOID:0000000012197155

IPDM E/R receives the rear window defogger control signal from BCM via CAN communication and transmits the rear window defogger status signal to ECM via CAN communication. Refer to [DEF-7, "WITH AUTO A/C : System Diagram"](#).

POWER CONSUMPTION CONTROL SYSTEM

POWER CONSUMPTION CONTROL SYSTEM : System Diagram

INFOID:000000012197156

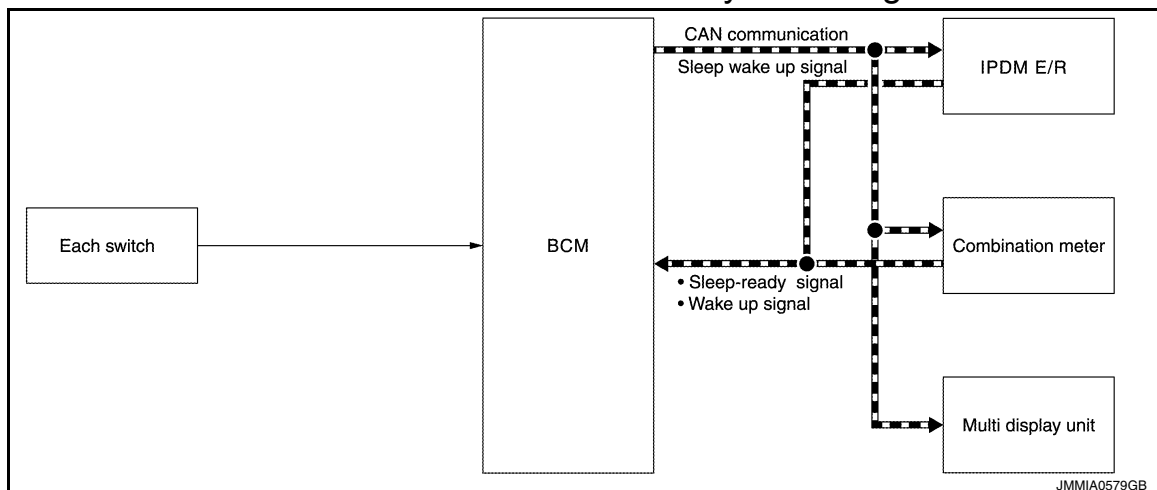

POWER CONSUMPTION CONTROL SYSTEM : System Description

INFOID:000000012197157

OUTLINE

- IPDM E/R incorporates a power consumption control function that reduces the power consumption according to the vehicle status.
- IPDM E/R changes its status (control mode) with the sleep wake up signal received from BCM via CAN communication.

Normal mode (wake-up)

- CAN communication is normally performed with other control units.
- Individual unit control by IPDM E/R is normally performed.

Low power consumption mode (sleep)

- Low power consumption control is active.
- CAN transmission is stopped.

SLEEP MODE ACTIVATION

- IPDM E/R judges that the sleep-ready conditions are fulfilled when the ignition switch is OFF and none of the conditions below are present. Then it transmits a sleep-ready signal (ready) to BCM via CAN communication.
- Outputting signals to actuators
- Switches or relays operating
- Output requests are being received from control units via CAN communication.
- IPDM E/R stops CAN communication and enters the low power consumption mode when it receives a sleep wake up signal (sleep) from BCM and the sleep-ready conditions are fulfilled.

WAKE-UP OPERATION

- IPDM E/R changes from the low power consumption mode to the normal mode when it receives a sleep wake-up signal (wake up) from BCM or any of the following conditions is fulfilled. In addition, it transmits a sleep-ready signal (not-ready) to BCM via CAN communication to report the CAN communication start.
- Ignition switch ON
- An output request is received from a control unit via CAN communication.

PCS

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:000000012197158

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Rear window defogger
- Front wiper motor
- Parking lamp
- License plate lamp
- Tail lamp
- Side marker lamp
- Front fog lamp
- Headlamp (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan

Operation Procedure

CAUTION:

Wiper arm interferes with hood when wiper is operated while wiper arm is in the raised position. Always perform auto active test without setting wiper arm in the raised position. Always pour water on front windshield glass in advance to auto active test so that damage on front windshield glass surface is prevented.

1. Turn the ignition switch OFF.
2. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.

CAUTION:

Close passenger door.

3. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.

CAUTION:

Engine starts when ignition switch is turned ON while brake pedal is depressed.

4. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

- When auto active test mode has to be cancelled halfway through test, turn the ignition switch OFF.
- When auto active test is not activated, door switch may be the cause. Check door switch. Refer to [DLK-77, "Component Function Check"](#).

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following operation sequence is repeated 3 times.


Operation sequence	Inspection location	Operation
1	Rear window defogger	10 seconds
2	Front wiper motor	LO for 5 seconds → HI for 5 seconds
3	<ul style="list-style-type: none"> • Parking lamp • License plate lamp • Tail lamp • Side marker lamp • Front fog lamp 	10 seconds
4	Headlamp	LO for 10 seconds → HI ON ↔ OFF 5 times
5	A/C compressor (magnet clutch)	ON ↔ OFF 5 times
6	Cooling fan	50% duty for 5 seconds → 100% duty for 5 seconds

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Concept of auto active test

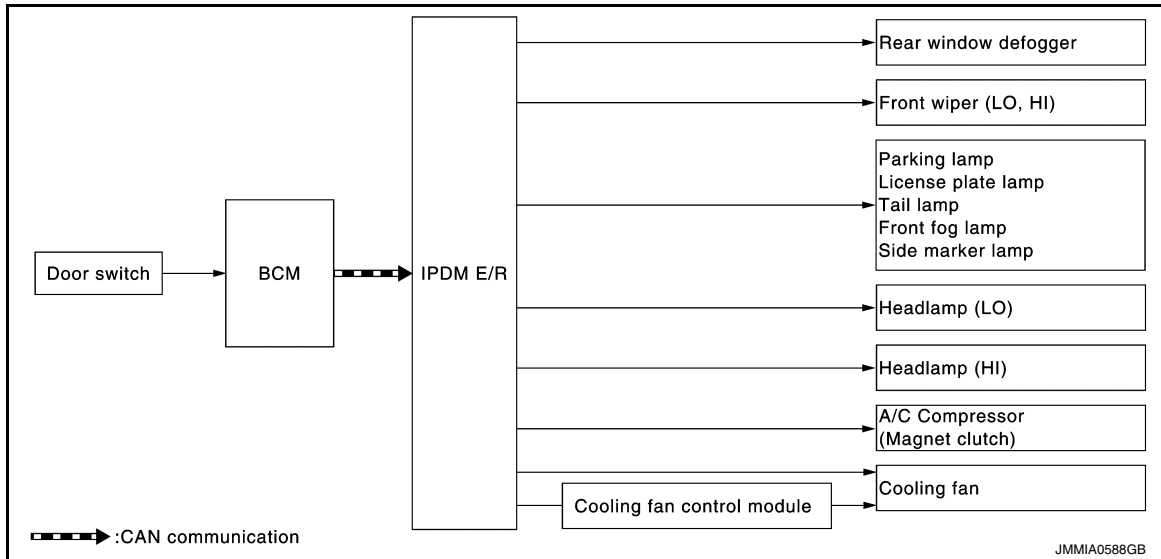

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Rear window defogger does not operate	Perform auto active test. Does the rear window defogger operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> • Rear window defogger • Rear window defogger ground circuit • Harness or connector between IPDM E/R and rear window defogger • IPDM E/R
Any of the following components do not operate <ul style="list-style-type: none"> • Parking lamp • License plate lamp • Tail lamp • Side marker lamp • Front fog lamp • Headlamp (HI, LO) • Front wiper motor 	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES <ul style="list-style-type: none"> • A/C amp. signal input circuit • CAN communication signal between A/C amp. and ECM • CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> • Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Symptom	Inspection contents		Possible cause
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES	<ul style="list-style-type: none"> ECM signal input circuit CAN communication signal between ECM and IPDM E/R
		NO	<ul style="list-style-type: none"> Harness or connector between IPDM E/R and cooling fan relay Harness or connector between IPDM E/R and cooling fan control module. Harness or connector between cooling fan control module and cooling fan motor Cooling fan motor Cooling fan relay Cooling fan control module IPDM E/R

CONSULT Function (IPDM E/R)

INFOID:0000000012197159

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [PCS-24, "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIGNALS	Description
RAD FAN REQ [%]	×	Displays the value of the cooling fan speed request signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Monitor Item [Unit]	MAIN SIGNALS	Description
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the ignition power supply (M/T models) or shift position (CVT models) judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INHI RLY [Off/ ST ON/INHI ON/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the CVT shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		NOTE: This item is indicated, but not monitored.
S/L STATE [LOCK/UNLK/UNKWN]		NOTE: This item is indicated, but not monitored.
DTRL REQ [Off/On]		Displays the status of the daytime running light request signal received from BCM via CAN communication. NOTE: This item is monitored only for the except for NISMO models.
OIL P SW [Open/Close]		NOTE: This item is indicated, but not monitored.
HOOD SW [Off/On]		NOTE: This item is indicated, but not monitored.
HL WASHER REQ [Off/On]		NOTE: This item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder request signal received from BCM via CAN communication.

ACTIVE TEST

Test item

Test item	Operation	Description
HORN	On	Operates horn relay for 20 ms.
REAR DEFOGGER	Off	OFF
	On	Operates the rear window defogger relay.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN	1	OFF
	2	Transmits 50% pulse duty signal (PWM signal) to the cooling fan control module.
	3	Transmits 75% pulse duty signal (PWM signal) to the cooling fan control module.
	4	Transmits 100% pulse duty signal (PWM signal) to the cooling fan control module.
HEAD LAMP WASHER	On	NOTE: This item is indicated, but cannot be tested.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Test item	Operation	Description
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

ECU DIAGNOSIS INFORMATION

IPDM E/R

Reference Value

INFOID:0000000012197160

VALUES ON THE DIAGNOSIS TOOL


NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
RAD FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 – 100%
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	<ul style="list-style-type: none"> Lighting switch 1ST, 2ND or AUTO (Light is illuminated) Daytime running light system operated 		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch 2ND or AUTO (light is illuminated)	Lighting switch other than HI and PASS	Off
		Lighting switch HI or PASS	On
FR FOG REQ	Lighting switch 1ST, 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally.	Off
		Front wiper stops at fail-safe operation.	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON (CVT models)	Selector lever in any position other than P or N	Off
		Selector lever in P or N position	On
	Ignition switch OFF or ACC (M/T models)		Off
	Ignition switch ON (M/T models)		On

Monitor Item	Condition		Value/Status
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On
ST/INHI RLY	Ignition switch ON		Off
	At engine cranking		INHI ON → ST ON
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF.		UNKWN
DETENT SW	Ignition switch ON	<ul style="list-style-type: none"> Press the selector button with selector lever in P position. Selector lever in any position other than P. 	Off
	Release the selector button with selector lever in P position. NOTE: Status fixed to On for M/T models		On
S/L RLY -REQ	NOTE: This item is indicated, but not monitored.		Off
S/L STATE	NOTE: This item is indicated, but not monitored.		UNLOCK
DTRL REQ NOTE: This item is monitored only for the except for NISMO models.	Daytime running light system is not operated with ignition switch OFF		Off
	Any of the condition below <ul style="list-style-type: none"> Daytime running light system is operated Light switch 2ND or AUTO (light is illuminated) 		On
OIL P SW	NOTE: This item is indicated, but not monitored.		Open
HOOD SW	NOTE: This item is indicated, but not monitored.		Off
HL WASHER REQ	NOTE: This item is indicated, but not monitored.		Off
THFT HRN REQ	Not operation		Off
	Theft warning alarm is activated		On
HORN CHIRP	Not operation		Off
	Horn reminder is activated		On

TERMINAL LAYOUT

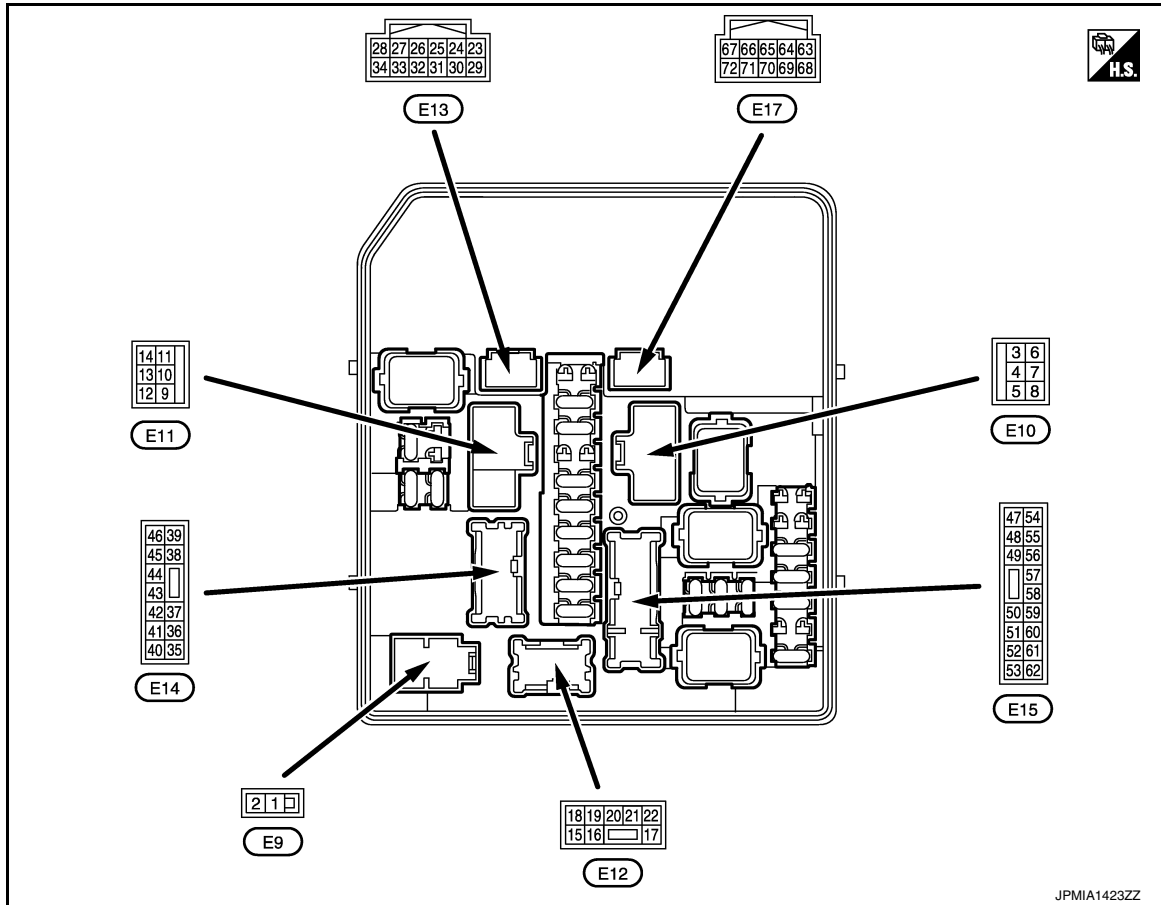

PHYSICAL VALUES

Terminal NO. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF		6 – 16 V
2 (G)	Ground	Battery power supply	Input	Ignition switch OFF		6 – 16 V
3 (R)	Ground	Starter motor	Output	Other than engine cranking		0 – 1 V
4 (P)	Ground			At engine cranking		6 – 16 V
9 (B/Y)	Ground	Ground	—	Ignition switch ON		0 – 1 V
14 (R)	Ground	Rear window defogger	Output	Ignition switch ON	Rear window defogger switch OFF	0 – 1 V
					Rear window defogger switch ON	9 – 16 V
18 (GR)	Ground	Ground	—	Ignition switch ON		0 – 1 V

IPDM E/R

< ECU DIAGNOSIS INFORMATION >




[IPDM E/R]

Terminal NO. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
19 (W)*3 (R)*4	Ground	Front fog lamp (RH)*3	Output	Lighting switch 1ST, 2ND or AUTO	Front fog lamp switch OFF	0 – 1 V
					Front fog lamp switch ON	9 – 16 V
		Daytime running light (RH)*4		Daytime running light deactivated		0 – 1 V
				Daytime running light activated		9 – 16 V
20 (V)*3 (G)*4	Ground	Front fog lamp (LH)*3	Output	Lighting switch 1ST, 2ND or AUTO	Front fog lamp switch OFF	0 – 1 V
					Front fog lamp switch ON	9 – 16 V
		Daytime running light (LH)*4		Daytime running light deactivated		0 – 1 V
				Daytime running light activated		9 – 16 V
23 (SB)	Ground	Cranking request	Output	Ignition switch OFF		0 – 1 V
				Ignition switch ON	Select lever P or N	
						Select lever in any position other than P or N
				Engine running		
25 (BR)	Ground	Front wiper stop position	Input	Ignition switch ON	Front wiper stop position	0 – 1.5 V
					Any position other than front wiper stop position	9 – 16 V
26 (P)	Ground	CAN-L	Input/ Output	—		—
27 (L)	Ground	CAN-H	Input/ Output	—		—
28 (Y)	Ground	Daytime running light relay 2 control	Output	Daytime running light deactivated		9 – 16 V
				Daytime running light activated		0 – 1 V
30 (V)	Ground	Starter relay control	Output	Ignition switch ON	Select lever P or N	6 – 16 V
					Select lever in any position other than P or N	0 – 1 V
31 (Y)	Ground	Fuel pump relay control	Output	• Approximately 1 second after turning the ignition switch ON • Engine running		0 – 1 V
				Approximately 1 second or more after turning the ignition switch ON		6 – 16 V

IPDM E/R

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

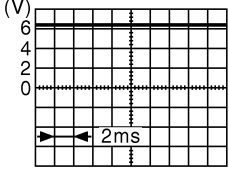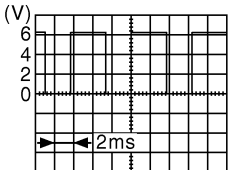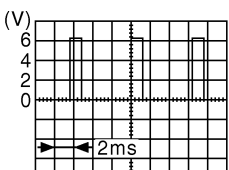Terminal NO. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
33 (G)	Ground	Power generation command signal	Output	Ignition switch ON	 <p>JPMIA0001GB</p> <p>6.3 V</p>	A
				40% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 <p>JPMIA0002GB</p> <p>3.8 V</p>	B
				80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 <p>JPMIA0003GB</p> <p>1.4 V</p>	C
34 (L)	Ground	Horn relay control	Output	The horn is deactivated	9 – 16 V	D
				The horn is activated	0 – 1 V	E
35 (G)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 – 1 V	F
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	6 – 16 V	G
36 (P)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 – 1 V	H
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	6 – 16 V	I
39 (L)	Ground	Front wiper HI	Output	Ignition switch OFF	0 – 1 V	J
				Ignition switch ON	9 – 16 V	K
41 (BR)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	6 – 16 V	L
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	0 – 1 V	M
42 (Y)	Ground	ECM power supply	Output	Ignition switch OFF	6 – 16 V	N

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

IPDM E/R

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal NO. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
43 (L)	Ground	Parking lamp and side marker lamp	Output	Lighting switch OFF		0 – 1 V
				Lighting switch 1ST		9 – 16 V
44 (BR)	Ground	Rear combination lamp and illumination	Output	Lighting switch OFF		0 – 1 V
				Lighting switch 1ST		9 – 16 V
45 (W)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 – 1 V
					Front wiper switch LO	9 – 16 V
48 (BR)	Ground	Transmission range switch* ¹	Input	Select lever in any position other than P or N (Ignition switch ON)		0 – 1 V
				Select lever P or N (Ignition switch ON)		9 – 16 V
		Clutch interlock switch* ²		Release the clutch pedal		0 – 1 V
				Depress the clutch pedal		6 – 16 V
49 (Y)	Ground	Headlamp HI (RH)	Output	Ignition switch 2ND or AUTO	Lighting switch OFF	0 – 1 V
					<ul style="list-style-type: none">Lighting switch HILighting switch PASS	9 – 16 V
50 (G)	Ground	Headlamp HI (LH)	Output	Ignition switch 2ND or AUTO	Lighting switch OFF	0 – 1 V
					<ul style="list-style-type: none">Lighting switch HILighting switch PASS	9 – 16 V
51 (L)	Ground	Headlamp LO (LH)	Output	Lighting switch OFF		0 – 1 V
				Lighting switch 2ND		9 – 16 V
52 (P)	Ground	Headlamp LO (RH) and daytime running light relay 1	Output	Lighting switch OFF		0 – 1 V
				Lighting switch 2ND		9 – 16 V
54 (P)	Ground	Fuel pump power sup- ply	Output	Approximately 1 second or more than after turning the ignition switch ON		0 – 1 V
				<ul style="list-style-type: none">Approximately 1 second after turning the ignition switch ONEngine running		6 – 16 V
55 (G)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning igni- tion switch OFF)		0 – 1 V
				<ul style="list-style-type: none">Ignition switch ONIgnition switch OFF (For a few seconds after turning ignition switch OFF)		6 – 16 V
56 (SB)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 – 1 V
					A/C switch ON (A/C compressor is operating)	9 – 16 V
57 (O)	Ground	Ignition relay power supply	Output	Ignition switch OFF or ACC		0 – 1 V
				Ignition switch ON		6 – 16 V
58 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 – 1 V
				Ignition switch ON		6 – 16 V
59 (V)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 – 1 V
				Ignition switch ON		6 – 16 V
60 (SB)	Ground	Throttle control motor relay control	Output	Ignition switch OFF or ACC		6 – 16 V
				Ignition switch ON		0 – 1 V

IPDM E/R

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal NO. (Wire color)		Description		Condition			Value (Approx.)
		Signal name	Input/ Output				
+	–						
61 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF			0 – 1 V
				Ignition switch ON			6 – 16 V
62 (BE)	Ground	Ignition relay power supply	Output	Ignition switch OFF			0 – 1 V
				Ignition switch ON			6 – 16 V
64*1 (Y)	Ground	CVT shift selector (Detention switch)	Input	Ignition switch ON	Select lever P	Release select button	0 – 1 V
						Press select button	9 – 16 V
				Select lever in any position other than P			
66 (G)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch			0 – 1 V
				Release the push-button ignition switch			6 – 16 V
67 (L)	Ground	Cooling fan relay control	Output	Ignition switch OFF or ACC			9 – 16 V
				Ignition switch ON			0 – 1 V
				Cooling fan operated			0 – 1 V
68 (BE)	Ground	Ignition relay control	Input	Ignition switch OFF or ACC			6 – 16 V
				Ignition switch ON			0 – 1 V
69 (BR)	Ground	Ignition power supply No. 2	Output	Ignition switch OFF or ACC			0 – 1 V
				Ignition switch ON			6 – 16 V
72 (W)	Ground	Cooling fan control	Output	Engine idling			0 – 5 V

*1: CVT models

*2: M/T models

*3: Except for NISMO models

*4: For NISMO models

Fail-safe

INFOID:0000000012197161

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> Transmits the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON. Transmits the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF.
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF
<ul style="list-style-type: none"> Parking lamp License plate lamp Illumination Tail lamp Side marker lamp 	<ul style="list-style-type: none"> Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF

Control part	Fail-safe operation
Front wiper motor	<ul style="list-style-type: none"> The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating. Returns automatically wiper to stop position when ignition switch is turned ON if fail-safe control is activated while front wiper motor is operated and wiper stop in the other position than stop position. The status is held at service position if the fail-safe control is activated while the service position function is operating.
Front fog lamp	Front fog lamp relay OFF
Daytime running light	Daytime running light relay OFF
Rear window defogger	Rear window defogger relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> Detects DTC "B2098: IGN RELAY ON CIRC" Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF CIRC"

FRONT WIPER PROTECTION FUNCTION

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop.

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R "Data Monitor" that displays "BLOCK" for the item "WIP PROT" while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:0000000012197162

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now.
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame Data).
- The number is 0 when is detected now.

IPDM E/R

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

- The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-31
B2098: IGN RELAY ON CIRC	×	PCS-32
B2099: IGN RELAY OFF CIRC	—	PCS-34
B209F: STR CUT OFF OPEN	—	SEC-101
B20A0: STR CUT OFF SHORT	—	SEC-103
B210B: STR CONT RLY ON CIRC	—	SEC-105
B210C: STR CONT RLY OFF CIRC	—	SEC-107
B210D: STARTER RLY ON CIRC	—	SEC-109
B210E: STARTER RLY OFF CIRC	—	SEC-111
B210F: INTRLCK/PNP SW ON	—	SEC-113
B2110: INTRLCK/PNP SW OFF	—	SEC-115

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


PCS

WIRING DIAGRAM

IPDM E/R


Wiring Diagram

INFOID:000000012197163

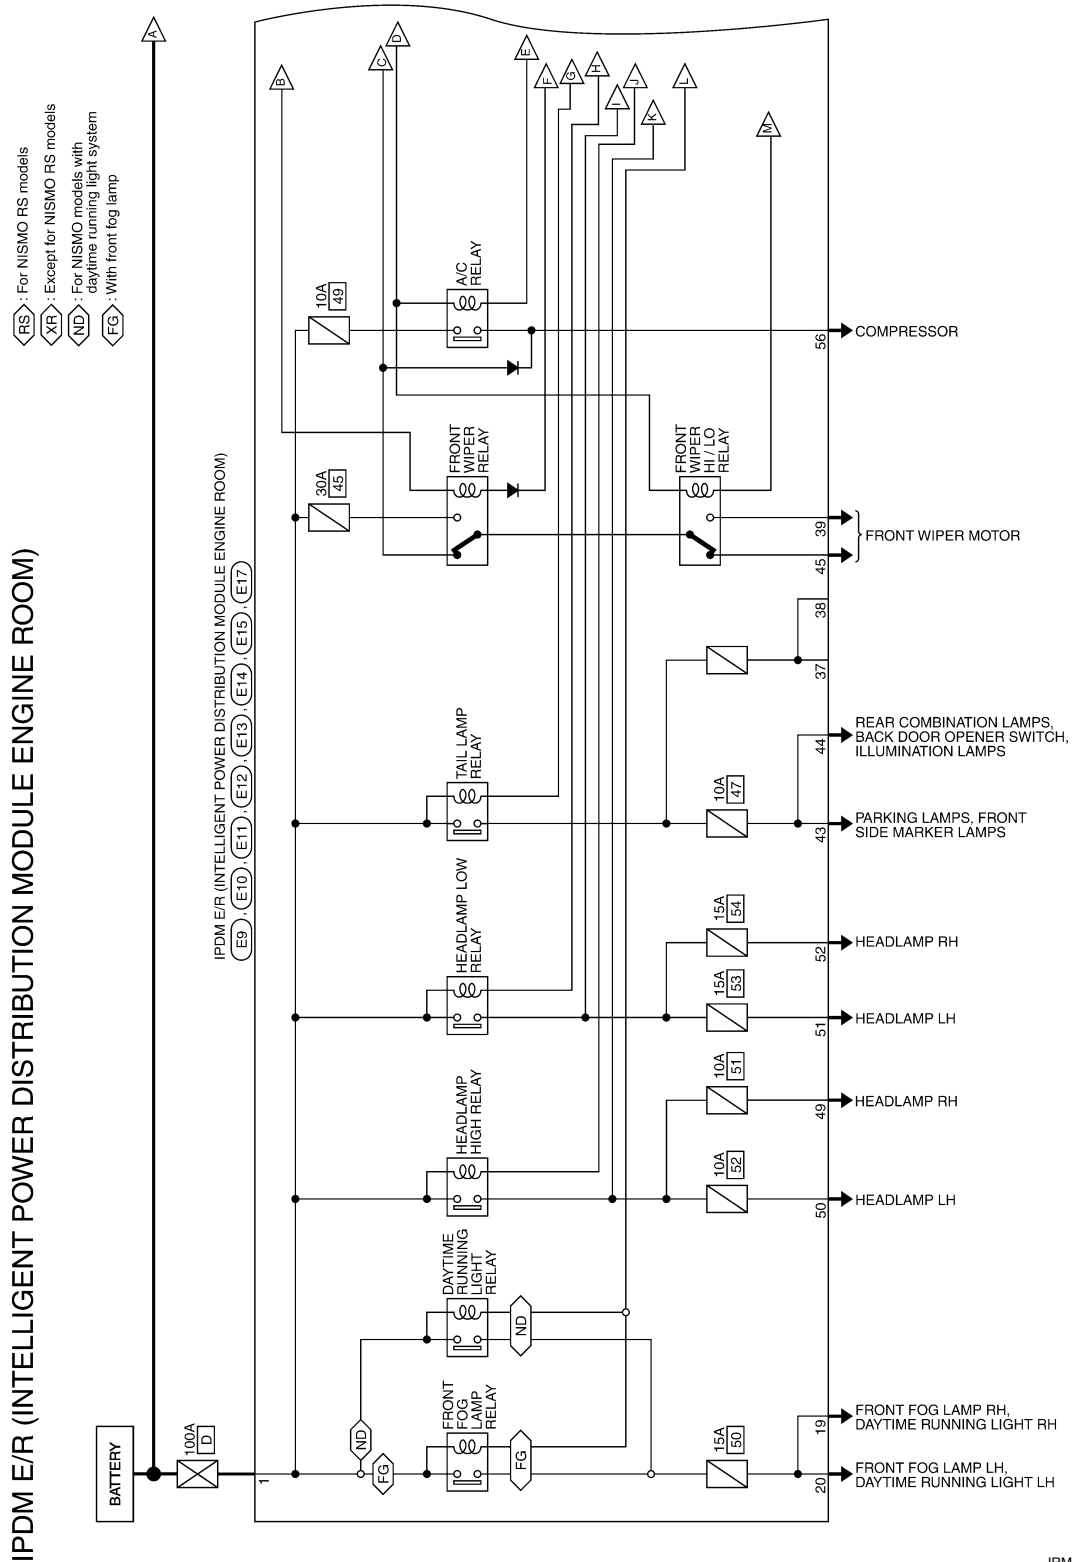


2015/08/18

JRMW15132GB

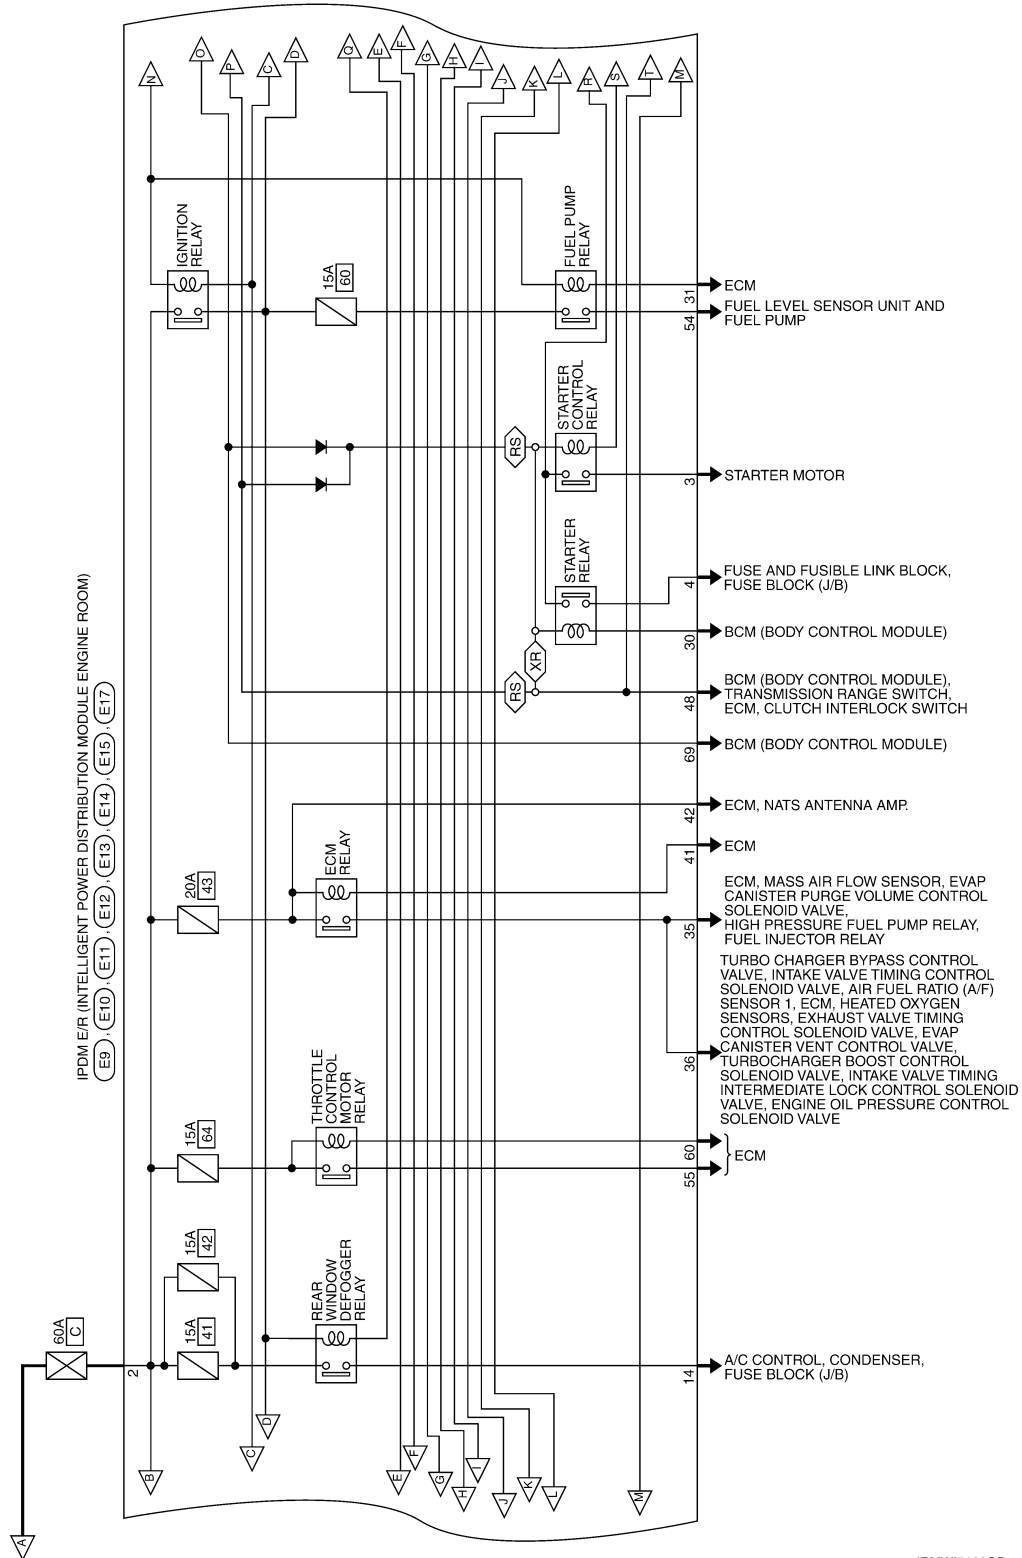

JRMW15133GB

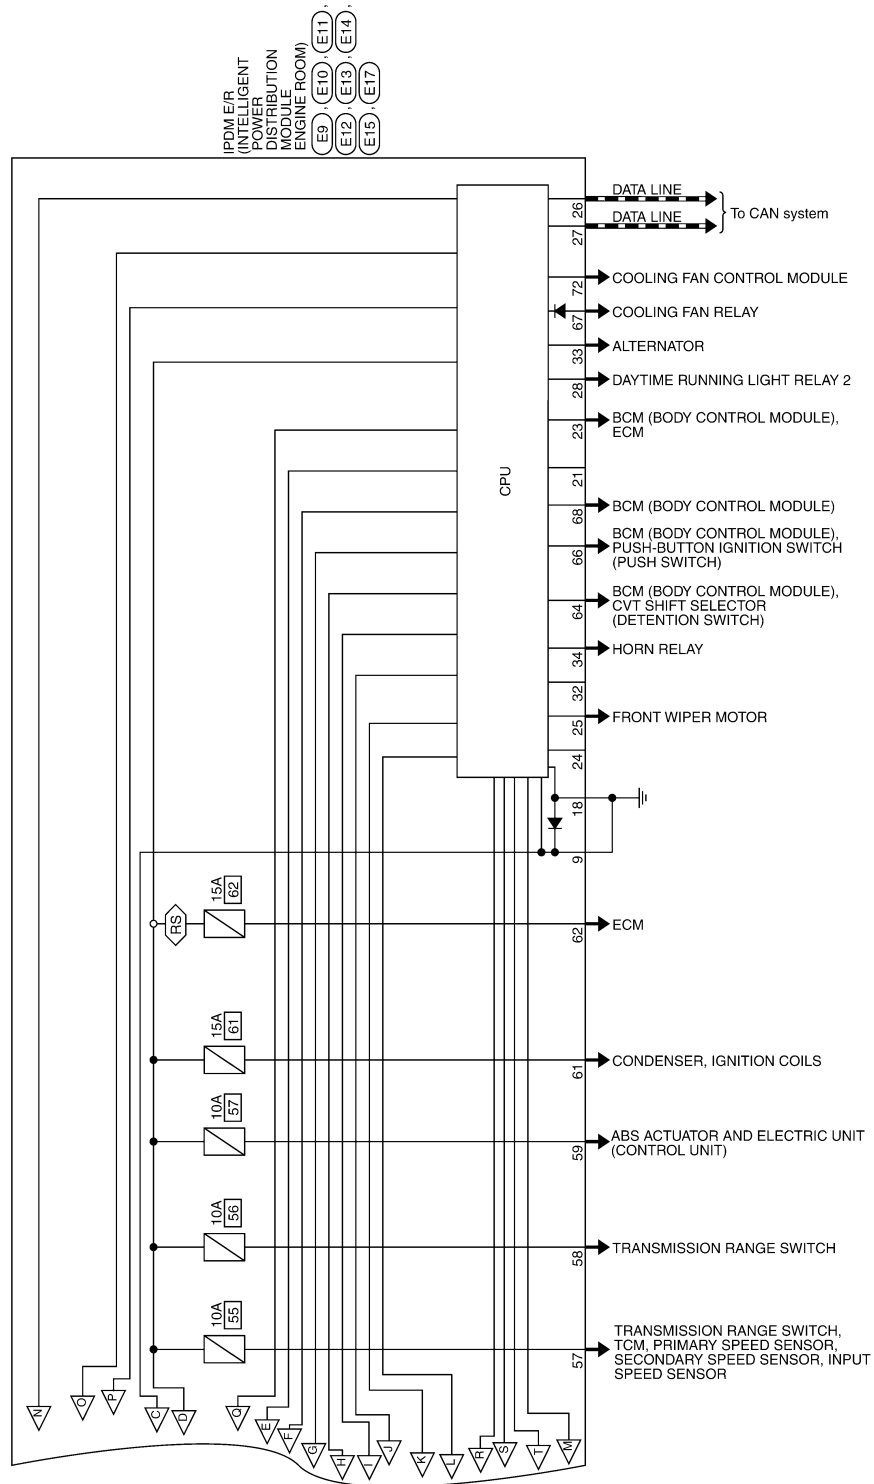

JRMW15134GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


Connector No.	E19
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	UD2EP-MC




Connector No.	E11
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	MD6FB-IC



Connector No.	E13
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH12PW-NH

 

Connector No.	E15
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	NS16PW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	G	-


Terminal No.	Color Of Wire	Signal Name [Specification]
9	B/Y	-
10	L	-
14	R	-

Terminal No.	Color Of Wire	Signal Name [Specification]
23	SB	-
25	BR	-
26	P	-
27	L	-
28	Y	-
30	V	-
31	Y	-
32	R	-
33	G	-
34	L	-

Connector No.	E10
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	MD6FW-LC



Connector No.	E12
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	NS08FB-CS

 


Connector No.	E14
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	NS12PB-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
48	BR	-
49	Y	-
50	G	-
51	L	-
52	P	-
54	P	-
55	G	-
56	SB	-
57	O	-
58	LG	-
59	V	-
60	SB	-
61	LG	-
62	BE	-

Connector No.	E17
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH10PB-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
3	R	-
4	P	-
5	LG	-
7	Y	-
8	W/R	-

Terminal No.	Color Of Wire	Signal Name [Specification]
18	GR	-
19	R	- [Without front fog lamp] - [With front fog lamp]
19	W	- [Without front fog lamp] - [With front fog lamp]
20	G	-
20	V	-

Terminal No.	Color Of Wire	Signal Name [Specification]
35	G	-
36	P	-
37	L	-
39	L	-
41	BR	-
42	Y	-
43	L	-
44	BR	-
45	W	-

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Terminal No.	Color of Wire	Signal Name [Specification]
62	Y	-
64	Y	-
65	W	-
66	G	-
67	L	-
68	BE	-
69	BR	-
72	W	-

JRMW15136GB

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000012197164

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-30, "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#).

DTC Logic

INFOID:0000000012197165

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	CAN communication system

Diagnosis Procedure

INFOID:0000000012197166

1.PERFORM SELF DIAGNOSTIC

1. Turn the ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of IPDM E/R.

Is DTC "U1000" displayed?

- YES >> Refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-45, "Intermittent Incident"](#).

B2098 IGNITION RELAY ON STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

B2098 IGNITION RELAY ON STUCK

Description

INFOID:0000000012197167

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the combination meter (Emergency OFF)
 - Press and hold the push-button ignition switch for 2 seconds or more.
 - Press the push-button ignition switch 3 times within 1.5 seconds.

NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

DTC Logic

INFOID:0000000012197168

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible causes
B2098	IGN RELAY ON CIRC	The ignition relay ON is detected for 1 second at ignition switch OFF (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

Is DTC detected?

- YES >> Refer to [PCS-32, "Diagnosis Procedure"](#).
NO >> INSPECTION END.

Diagnosis Procedure

INFOID:0000000012197169

1.CHECK SELF DIAGNOSTIC RESULT

Check DTC using CONSULT.

What is the display history of DTC "B2098"?

- "CRNT">> GO TO 2.
"PAST">> GO TO 5.

2.CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE 1

1. Turn ignition switch ON
2. Check voltage between IPDM E/R harness connector and ground.

(+) IPDM E/R		(-)	Voltage (Approx.)
Connector	Terminal		
E17	68	Ground	0 V

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 3.

3.CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE 2

1. Disconnect IPDM E/R connector.
2. Turn ignition switch ON

B2098 IGNITION RELAY ON STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

3. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (Approx.)
IPDM E/R			
Connector	Terminal		
E17	68	Ground	0 V

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-37, "Removal and Installation"](#).
NO >> Check the harness of the ignition relay control circuit for a short to power.

4.CHECK IGNITION RELAY CONTROL CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E17	68		Not existed

Is the inspection result normal?

- YES >> Perform the diagnosis procedure for DTC B26F2. Refer to [PCS-75, "DTC Logic"](#).
NO >> Repair or replace harness.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

>> INSPECTION END

PCS

B2099 IGNITION RELAY OFF STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

B2099 IGNITION RELAY OFF STUCK

Description

INFOID:0000000012197170

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the combination meter (Emergency OFF)
 - Press and hold the push-button ignition switch for 2 seconds or more.
 - Press the push-button ignition switch 3 times within 1.5 seconds.

NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

DTC Logic

INFOID:0000000012197171

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible causes
B2099	IGN RELAY OFF CIRC	The ignition relay OFF is detected for 1 second at ignition switch ON (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

NOTE:

When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the "DTC: B2099" may be detected.

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

Is DTC detected?

- YES >> Refer to [PCS-34, "Diagnosis Procedure"](#).
NO >> INSPECTION END.

Diagnosis Procedure

INFOID:0000000012197172

1.CHECK FUSE

Check that all of the fuses installed on the downstream of the contact point side circuit of the ignition relay in IPDM E/R are not blown.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the blown fuse after replacing the affected circuit if a fuse is blown.

2.CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE

1. Turn ignition switch ON
2. Check voltage between IPDM E/R harness connector and ground.

(+) IPDM E/R		(-)	Voltage (Approx)
Connector	Terminal		
E17	68	Ground	0 V

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-37, "Removal and Installation"](#).
NO >> GO TO 3.

B2099 IGNITION RELAY OFF STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

3.CHECK BATTERY VOLTAGE

Check battery voltage.

Which is the measurement result?

More than 12.4 V>>GO TO 4.

Less than 12.4 V>>Perform battery inspection. Refer to [PG-97, "How to Handle Battery"](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

>> INSPECTION END

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000012197173

1.CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
Battery power supply	C (60 A)
	D (100 A)

Is the fuse blown (open)?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

(+) IPDM E/R		(-)	Voltage (Approx.)
Connector	Terminal		
E9	1	Ground	6 – 16 V
	2		

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E11	9		Existed
E12	18		

Does continuity exist?

YES >> INSPECTION END


NO >> Repair the harness or connector.

REMOVAL AND INSTALLATION

IPDM E/R

Exploded View

INFOID:0000000012197174

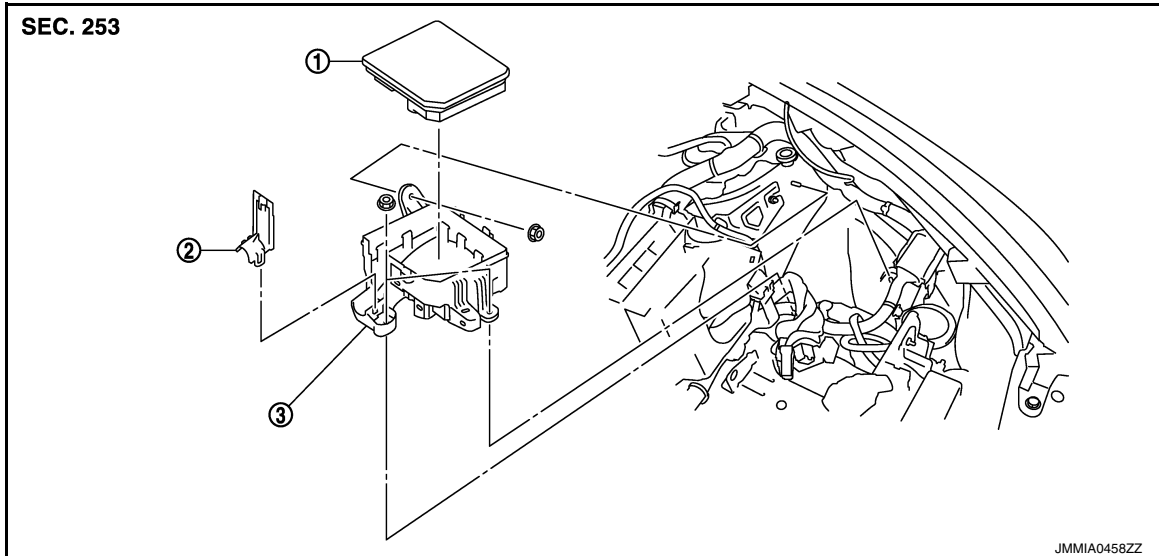

1. IPDM E/R cover A

2. IPDM E/R

3. IPDM E/R cover B

Removal and Installation


INFOID:0000000012197175

CAUTION:


IPDM E/R integrated relays are not serviceable parts, and must not be removed from the unit.

REMOVAL


1. Remove battery.
2. Press and expand pawls (A) on lateral side of IPDM E/R cover and remove IPDM E/R (1) from IPDM E/R cover B (2).
3. Disconnect the harness connector and then remove the IPDM E/R.

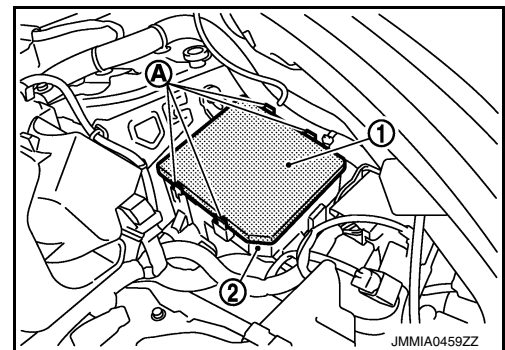

4. Remove IPDM E/R cover B mounting nuts (A).

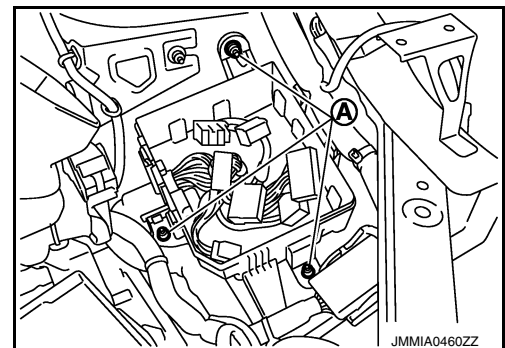

5. Insert a flat-bladed screwdriver between IPDM E/R cover A (1) and IPDM E/R cover B (2), disengage pawls, and remove IPDM E/R cover A.

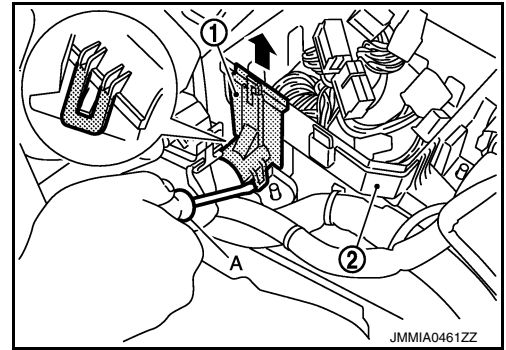

6. Remove IPDM E/R cover B.

INSTALLATION

Install in the reverse order of removal.

PRECAUTION

PRECAUTIONS


Precautions for Removing Battery Terminal

INFOID:0000000012946955

When disconnecting the battery terminal, pay attention to the following.

- Always use a 12V battery as power source.
- Never disconnect battery terminal while engine is running.
- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.
- For vehicles with the engine listed below, remove the battery terminal after a lapse of the specified time:

D4D engine	: 20 minutes	YS23DDT	: 4 minutes
HRA2DDT	: 12 minutes	YS23DDTT	: 4 minutes
K9K engine	: 4 minutes	ZD30DDTi	: 60 seconds
M9R engine	: 4 minutes	ZD30DDTT	: 60 seconds
R9M engine	: 4 minutes		
V9X engine	: 4 minutes		
YD25DDTi	: 2 minutes		

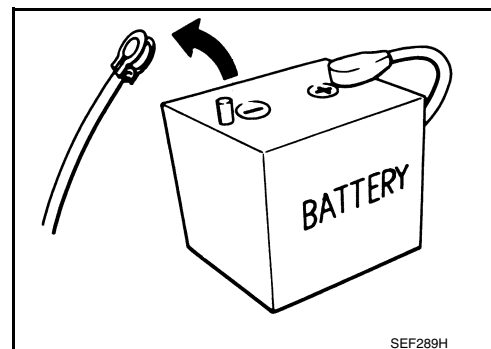

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- After high-load driving, if the vehicle is equipped with the V9X engine, turn the ignition switch OFF and wait for at least 15 minutes to remove the battery terminal.

NOTE:

- Turbocharger cooling pump may operate in a few minutes after the ignition switch is turned OFF.
- Example of high-load driving
 - Driving for 30 minutes or more at 140 km/h (86 MPH) or more.
 - Driving for 30 minutes or more on a steep slope.
- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000012197177

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".

PRECAUTIONS

< PRECAUTION >

[POWER DISTRIBUTION SYSTEM]

- **Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery or batteries, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:0000000012197178

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

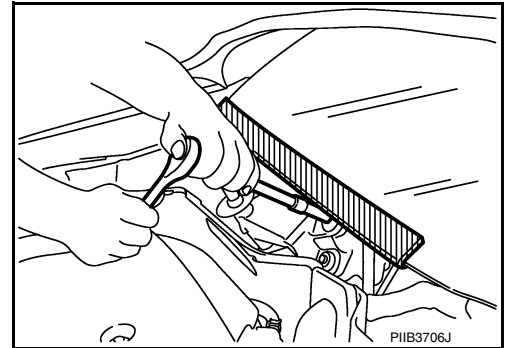


SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000012197179

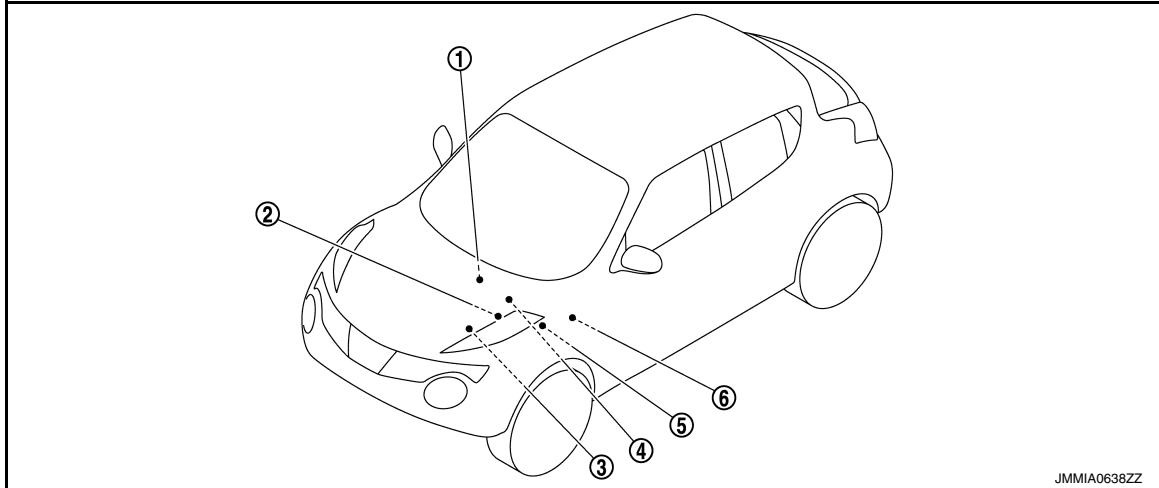

- | | | |
|---|--|--|
| 1. Push-button ignition switch | 2. IPDM E/R
Refer to PCS-5. "Component Parts Location" | 3. Transmission range switch
Refer to TM-156. "CVT CONTROL SYSTEM : Component Parts Location" |
| 4. Stop lamp switch
Refer to BRC-9. "Component Parts Location" | 5. Clutch interlock switch
Refer to STR-5. "Component Parts Location" | 6. BCM
Refer to BCS-5. "BODY CONTROL SYSTEM : Component Parts Location" |

Component Description

INFOID:0000000012197180

BCM	Reference
BCM	PCS-41
Ignition relay	PCS-41
Accessory relay	PCS-42
Blower relay	PCS-42
Push-button ignition switch	PCS-42
Stop lamp switch	PCS-42
Transmission range switch	PCS-42
Clutch interlock switch	PCS-42

BCM

INFOID:0000000012197181

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

Ignition Relay

INFOID:0000000012197182

BCM turns ON the following relays to supply ignition power supply or ignition switch ON signal to each ECU when the ignition switch is turned ON.

- Ignition relay (fuse block)
- Ignition relay (IPDM E/R)
- Blower relay

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

BCM compares following status comparing.

- Ignition relay (fuse block) control signal, and power supply position judged by BCM
- Ignition relay (IPDM E/R) control request, and Ignition relay (IPDM E/R) status

Accessory Relay

INFOID:0000000012197183

BCM turns ON the accessory relays to supply accessory power supply or ignition switch ACC signal to each ECU when the ignition switch is turned ACC or ON.

BCM compares status of accessory relay control signal, and power supply position judged by BCM.

Blower Relay

INFOID:0000000012197184

BCM turns ON the following relays to supply ignition power supply or ignition switch ON signal to each ECU when the ignition switch is turned ON.

- Ignition relay (fuse block)
- Ignition relay (IPDM E/R)
- Blower relay

BCM compares status of blower relay control signal, and power supply position judged by BCM.

Push-Button Ignition Switch

INFOID:0000000012197185

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

Stop Lamp Switch

INFOID:0000000012197186

Stop lamp switch detects that brake pedal is depressed, and then transmits the signal to BCM.

Transmission Range Switch

INFOID:0000000012197187

Transmission range switch is integrated in CVT assembly, and detects the CVT shift selector position.

Transmission range switch detects selector lever position (P/N position), and transmits the P/N position signal to BCM.

Clutch Interlock Switch

INFOID:0000000012197188


Clutch interlock switch detects that clutch pedal is depressed, and transmits ON/OFF signal to BCM.

SYSTEM

POWER DISTRIBUTION SYSTEM

POWER DISTRIBUTION SYSTEM : System Diagram

INFOID:0000000012197189

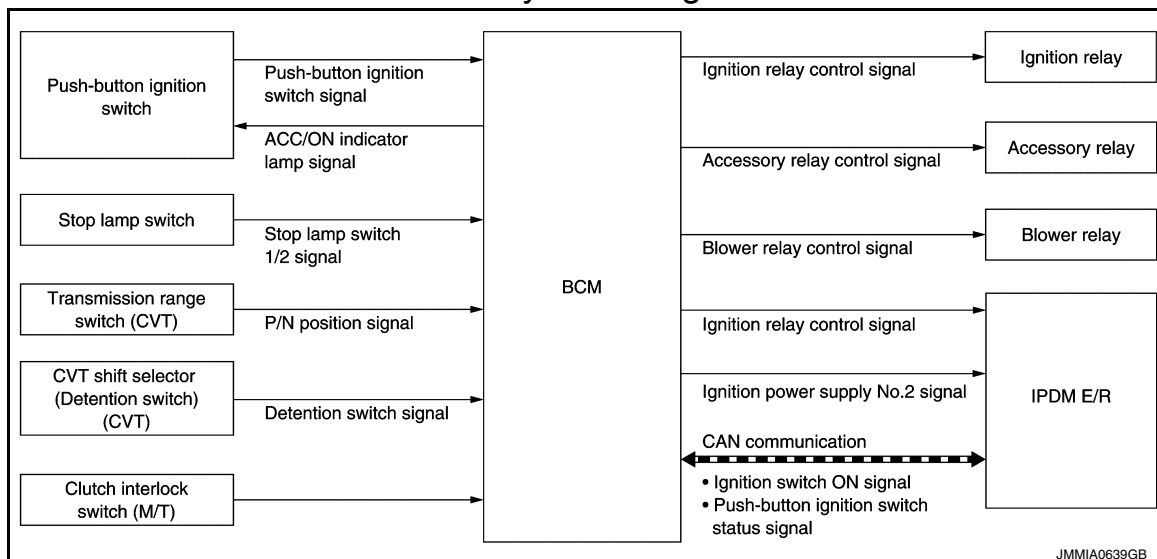

POWER DISTRIBUTION SYSTEM : System Description

INFOID:0000000012197190

SYSTEM DESCRIPTION

- PDS (POWER DISTRIBUTION SYSTEM) is the system that BCM controls with the operation of the push-button ignition switch and performs the power distribution to each power circuit. This system is used instead of the mechanical power supply changing mechanism with the operation of the conventional key cylinder.
- The push-button ignition switch can be operated when Intelligent Key is in the following condition. Refer to Engine Start Function for details.
 - Intelligent Key is in the detection area of the inside key antenna.
 - Intelligent Key backside is contacted to push-button ignition switch.
- The push-button ignition switch operation is input to BCM as a signal. BCM changes the power supply position according to the status and operates the following relays to supply power to each power circuit.
 - Ignition relay (IPDM E/R)
 - Ignition relay (fuse block)
 - ACC relay
 - Blower relay

NOTE:

The push-button ignition switch operation changes due to the conditions of brake pedal, selector lever and vehicle speed.

- The power supply position can be confirmed with the lighting of ACC/ON indicator in the push-button ignition switch.

IGNITION BATTERY SAVER SYSTEM

Ignition Position [ON]

When all the following conditions are met for 10 minutes, the battery saver system will cut off the power supply (ignition switch position ON → OFF) to prevent battery discharge.

Ignition Position [ACC]

When all the following conditions are met for 30 minutes, the battery saver system will cut off the power supply (ignition switch position ACC → OFF) to prevent battery discharge.

- Ignition switch is in the ACC position
- Turn signal lamp is not in operation
- Selector lever is in the P position

Reset Condition of Ignition Battery Saver System

If any of the following conditions are met the battery saver system is released.

- Ignition switch is not in the ACC/ON position.

SYSTEM

[POWER DISTRIBUTION SYSTEM]

< SYSTEM DESCRIPTION >

- Turn signal lamp is operation.
- Selector lever is not in the P position.

POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when Intelligent Key backside is contacted to push-button ignition switch, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions,

CVT models

- Brake pedal operating condition
- Selector lever position
- Vehicle speed

M/T models

- Clutch pedal operating condition
- Vehicle speed

Vehicle speed: less than 4 km/h (2.5 MPH)

Power supply position	Engine start/stop condition			Push-button ignition switch operation frequency
	CVT models		M/T models	
	Selector lever position	Brake pedal operation condition	Clutch pedal operation condition	
OFF → ACC	—	Not depressed	Not depressed	1
OFF → ACC → ON	—	Not depressed	Not depressed	2
OFF → ACC → ON → OFF	—	Not depressed	Not depressed	3
OFF → START ACC → START ON → START	P or N position	Depressed	Depressed	1
Engine is running → OFF	—	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more

Power supply position	Engine start/stop condition			Push-button ignition switch operation frequency
	CVT models		M/T models	
	Selector lever position	Brake pedal operation condition	Clutch pedal operation condition	
Engine is running → ACC	—	—	—	Emergency stop operation
Engine stall return operation while driving	N position	Not depressed	Depressed	1

Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.

Fail-safe

INFOID:0000000012197191

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	When communication between BCM and steering lock unit are communicated normally.
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	When communication between BCM and steering lock unit are communicated normally.
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC

SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Display contents of CONSULT	Fail-safe	Cancellation
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI-SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2196: DONGLE NG	Inhibit engine cranking	Erase DTC
B2198: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter motor relay control signal • Starter relay status signal (CAN)
B260F: ENG STATE SIG LOST	Inhibit engine cranking	When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN)
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B26F1: IGN RELAY OFF	Inhibit engine cranking	When the following conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch ON signal (CAN: Transmitted from BCM): ON • Ignition switch ON signal (CAN: Transmitted from IPDM E/R): ON
B26F2: IGN RELAY ON	Inhibit engine cranking	When the following conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch ON signal (CAN: Transmitted from BCM): OFF • Ignition switch ON signal (CAN: Transmitted from IPDM E/R): OFF
B26F3: START CONT RLY ON	Inhibit engine cranking	When the following conditions are fulfilled <ul style="list-style-type: none"> • Starter control relay signal (CAN: Transmitted from BCM): OFF • Starter control relay signal (CAN: Transmitted from IPDM E/R): OFF
B26F4: START CONT RLY OFF	Inhibit engine cranking	When the following conditions are fulfilled <ul style="list-style-type: none"> • Starter control relay signal (CAN: Transmitted from BCM): ON • Starter control relay signal (CAN: Transmitted from IPDM E/R): ON
B26F7: BCM	Inhibit engine cranking by Intelligent Key system	When room antenna and luggage room antenna functions normally

REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal. When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

1. More than 1 minute is passed after the rear wiper stop.
2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

FAIL-SAFE CONTROL OF COMBINATION SWITCH READING FUNCTION CAUSED BY LOW POWER SUPPLY VOLTAGE

If voltage of battery power supply lower, BCM maintains combination switch reading to the status when input voltage is less than approximately 9 V.

NOTE:

When voltage of battery power supply is approximately 9 V or more, combination switch reading function returns to normal operation.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000012946956

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none">Read and save the vehicle specification.Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
Air conditioning system	AIR CONDITONER		×	×*
<ul style="list-style-type: none">Intelligent Key systemEngine start system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU	×	×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open	TRUNK		×	
Theft warning alarm	THEFT ALM	×	×	×
RAP	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	AIR PRESSURE MONITOR	×	×	×

NOTE:

*: For models with automatic A/C, this diagnosis mode is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

CONSULT screen item	Indication/Unit	Description		
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected		A
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected		
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected	While turning BCM status from low power consumption mode to normal mode (Power position is "LOCK"*.)	B
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power position is "OFF".)	C
	LOCK>ACC		While turning power position from "LOCK"* *to "ACC"	
	ACC>ON		While turning power position from "ACC" to "IGN"	D
	RUN>ACC		While turning power position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)	
	CRANK>RUN		While turning power position from "CRANKING" to "RUN" (From cranking up the engine to run it)	E
	RUN>URGENT		While turning power position from "RUN" to "ACC" (Emergency stop operation)	
	ACC>OFF		While turning power position from "ACC" to "OFF"	F
	OFF>LOCK		While turning power position from "OFF" to "LOCK"*	
	OFF>ACC		While turning power position from "OFF" to "ACC"	G
	ON>CRANK		While turning power position from "IGN" to "CRANKING"	
	OFF>SLEEP		While turning BCM status from normal mode (Power position is "OFF".) to low power consumption mode	H
	LOCK>SLEEP		While turning BCM status from normal mode (Power position is "LOCK"*.) to low power consumption mode	
	LOCK		Power position is "LOCK"*	I
	OFF		Power position is "OFF" (Ignition switch OFF)	
	ACC		Power position is "ACC" (Ignition switch ACC)	J
	ON		Power position is "IGN" (Ignition switch ON with engine stopped)	
	ENGINE RUN		Power position is "RUN" (Ignition switch ON with engine running)	
	CRANKING		Power position is "CRANKING" (At engine cranking)	K
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. 		L

NOTE:

*: Power position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position (A/T models and CVT models), and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:0000000012946957

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Monitor item	Description
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch mode can be changed to operation in this mode <ul style="list-style-type: none">• On: Operate• Off: Non-operation
ENGINE START BY I-KEY	Engine start function mode can be changed to operation with this mode <ul style="list-style-type: none">• On: Operate• Off: Non-operation
TRUNK/GLASS HATCH OPEN	NOTE: This item is displayed, but cannot be monitored
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) with this mode <ul style="list-style-type: none">• On: Operate• Off: Non-operation
PANIC ALARM SET	Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following with this mode <ul style="list-style-type: none">• MODE 1: 0.5 sec• MODE 2: Non-operation• MODE 3: 1.5 sec
TRUNK OPEN DELAY	NOTE: This item is displayed, but cannot be monitored
LO- BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operation with this mode <ul style="list-style-type: none">• On: Operate• Off: Non-operation
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operation with this mode <ul style="list-style-type: none">• On: Operate• Off: Non-operation
HAZARD ANSWER BACK	Hazard reminder function mode by door request switch and Intelligent Key button can be selected from the following with this mode <ul style="list-style-type: none">• Lock Only: Door lock operation only• Unlock Only: Door unlock operation only• Lock/Unlock: Lock and unlock operation• Off: Non-operation
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch can be selected from the following with this mode <ul style="list-style-type: none">• Horn Chirp: Sound horn• Buzzer: Sound Intelligent Key warning buzzer• Off: Non-operation
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operation with this mode <ul style="list-style-type: none">• On: Operate• Off: Non-operation
SHORT CRANKING OUTPUT	Starter motor can operate during the times below <ul style="list-style-type: none">• 70 msec• 100 msec• 200 msec
CONFIRM KEY FOB ID	It can be checked whether Intelligent Key ID code is registered or not in this mode
AUTO LOCK SET	Auto door lock operation time can be changed in this mode <ul style="list-style-type: none">• MODE 1: OFF• MODE 2: 30 sec• MODE 3: 1 minute• MODE 4: 2 minutes• MODE 5: 3 minutes• MODE 6: 4 minutes• MODE 7: 5 minutes

SELF-DIAG RESULT

Refer to [BCS-62, "DTC Index"](#).

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition
REQ SW -DR	Indicates [On/Off] condition of door request switch (driver side)
REQ SW -AS	Indicates [On/Off] condition of door request switch (passenger side)
REQ SW -BD/TR	Indicates [On/Off] condition of back door request switch
PUSH SW	Indicates [On/Off] condition of push-button ignition switch
CLUTCH SW*1	Indicates [On/Off] condition of clutch interlock switch
BRAKE SW 1	Indicates [On/Off]*2 condition of stop lamp switch power supply
BRAKE SW 2	Indicates [On/Off] condition of stop lamp switch
DETE/CANCL SW	Indicates [On/Off] condition of P position
SFT PN/N SW	Indicates [On/Off] condition of P or N position
UNLK SEN -DR	Indicates [On/Off] condition of driver door UNLOCK status
PUSH SW -IPDM	Indicates [On/Off] condition of push-button ignition switch
IGN RLY1 -F/B	Indicates [On/Off] condition of ignition relay 1
DETE SW -IPDM	Indicates [On/Off] condition of P position
SFT PN -IPDM	Indicates [On/Off] condition of P or N position
SFT P -MET	Indicates [On/Off] condition of P position
SFT N -MET	Indicates [On/Off] condition of N position
ENGINE STATE	Indicates [Stop/Stall/Crank/Run] condition of engine states
S/L LOCK-IPDM	NOTE: This item is displayed, but cannot be monitored
S/L UNLK-IPDM	NOTE: This item is displayed, but cannot be monitored
S/L RELAY-REQ	NOTE: This item is displayed, but cannot be monitored
VEH SPEED 1	Display the vehicle speed signal received from combination meter by numerical value [Km/h]
VEH SPEED 2	Display the vehicle speed signal received from ABS or VDC or TCM by numerical value [Km/h]
DOOR STAT-DR	Indicates [LOCK/READY/UNLK] condition of driver side door status
DOOR STAT-AS	Indicates [LOCK/READY/UNLK] condition of passenger side door status
ID OK FLAG	Indicates [Set/Reset] condition of key ID
PRMT ENG STRT	Indicates [Set/Reset] condition of engine start possibility
PRMT RKE STRT	NOTE: This item is displayed, but cannot be monitored
TRNK/HAT MNTR	NOTE: This item is displayed, but cannot be monitored
RKE-LOCK	Indicates [On/Off] condition of LOCK signal from Intelligent Key
RKE-UNLOCK	Indicates [On/Off] condition of UNLOCK signal from Intelligent Key
RKE-TR/BD	NOTE: This item is displayed, but cannot be monitored
RKE-PANIC	Indicates [On/Off] condition of PANIC button of Intelligent Key
RKE-MODE CHG	Indicates [On/Off] condition of MODE CHANGE signal from Intelligent Key
RKE OPE COUN1	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing
RKE OPE COUN2	NOTE: This item is displayed, but cannot be monitored

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

*1: It is displayed but does not operate on CVT models.

*2: OFF is displayed when brake pedal is depressed while brake switch power supply is OFF.

ACTIVE TEST

Test item	Description
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation <ul style="list-style-type: none">• On: Operate• Off: Non-operation
INSIDE BUZZER	This test is able to check warning chime in combination meter operation <ul style="list-style-type: none">• Take Out: Take away warning chime sounds when CONSULT screen is touched• Key: Key warning chime sounds when CONSULT screen is touched• Knob: OFF position warning chime sounds when CONSULT screen is touched• Off: Non-operation
INDICATOR	This test is able to check warning lamp operation <ul style="list-style-type: none">• KEY ON: "KEY" Warning lamp illuminates when CONSULT screen is touched• KEY IND: "KEY" Warning lamp blinks when CONSULT screen is touched• Off: Non-operation
INT LAMP	This test is able to check interior room lamp operation <ul style="list-style-type: none">• On: Operate• Off: Non-operation
LCD	This test is able to check meter display information <ul style="list-style-type: none">• BP N: Engine start operation indicator lamp indicate when CONSULT screen is touched• BP I: Engine start operation indicator lamp indicate when CONSULT screen is touched• ID NG: This item is displayed, but cannot be monitored• ROTAT: This item is displayed, but cannot be monitored• SFT P: Shift P warning lamp indicate when CONSULT screen is touched• INSRT: This item is displayed, but cannot be monitored• BATT: Key warning lamp indicator when CONSULT screen is touched• NO KY: Key warning lamp indicator when CONSULT screen is touched• OUTKEY: Engine start operation indicator lamp indicate when CONSULT screen is touched• LK WN: Engine start operation indicator lamp indicate when CONSULT screen is touched
FLASHER	This test is able to check security hazard lamp operation The hazard lamps are activated after "LH/RH/Off" on CONSULT screen is touched
HORN	This test is able to check horn operation The horn is activated after "ON" on CONSULT screen is touched
P RANGE	This test is able to check CVT shift selector power supply <ul style="list-style-type: none">• On: Operate• Off: Non-operation
ENGINE SW ILLUMI	This test is able to check push-ignition switch illumination operation Push-ignition switch illumination illuminates when "ON" on CONSULT screen is touched
PUSH SWITCH INDICATOR	This test is able to check LOCK indicator in push-ignition switch operation LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched
BATTERY SAVER	This test is able to check interior room lamp operation. The interior room lamp will be activated after "ON" on CONSULT screen is touched.
TRUNK/BACK DOOR	This test is able to check back door opener actuator open operation. This actuator opens when "Open" on CONSULT screen is touched.

ECU DIAGNOSIS INFORMATION

BCM

List of ECU Reference

INFOID:0000000012197194

ECU	Reference
BCM	BCS-39, "Reference Value"
	BCS-60, "Fail-safe"
	BCS-61, "DTC Inspection Priority Chart"
	BCS-62, "DTC Index"


A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

[POWER DISTRIBUTION SYSTEM]

POWER DISTRIBUTION SYSTEM

Wiring Diagram

INFOID:0000000012197195

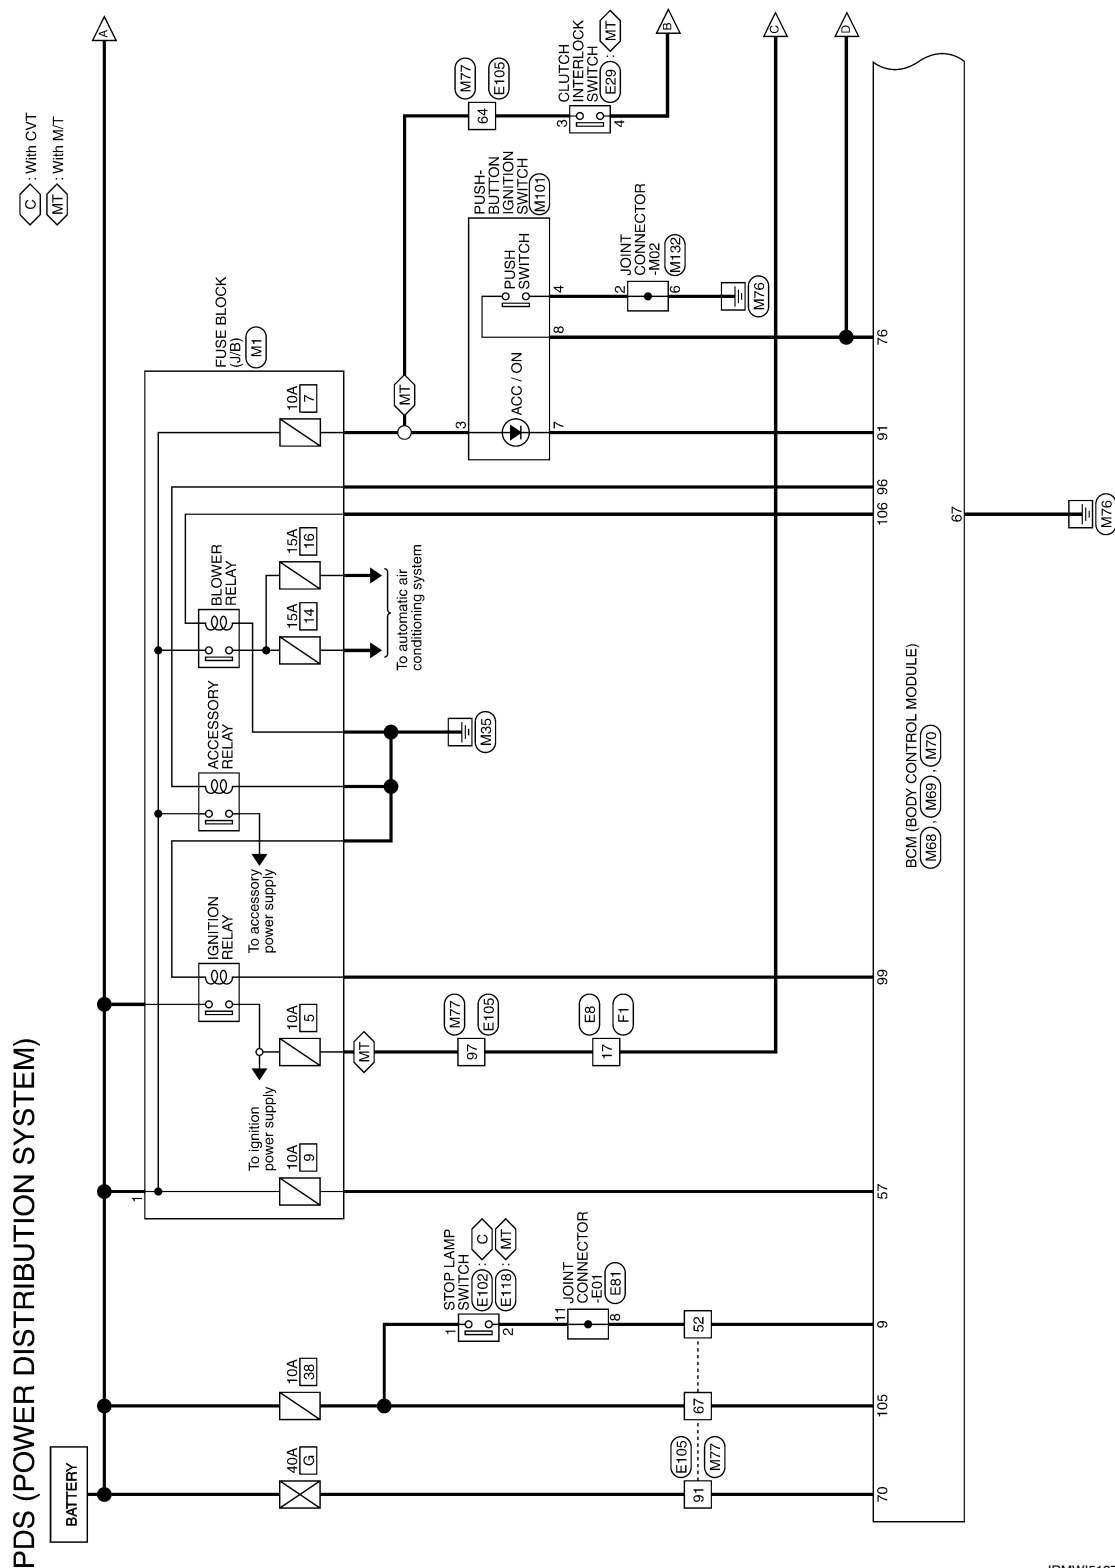

2015/08/18

JRMWI5137GB

[POWER DISTRIBUTION SYSTEM]

A
B
C
D
E
F
G
H
I
J
K
L
PC
N
O
P




POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	E8
Connector Name	WIRE TO WIRE
Connector Type	SA43BAP-PS10-S12

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	L	-
3	O	-
4	LG	- [For NISMO RS]
5	V	- [Except for NISMO RS]
6	BR	-
7	BR	-
10	R	-
11	G	- [Except for NISMO RS]
12	G	- [For NISMO RS]
13	B	- [Except for NISMO RS]
14	Y	- [For NISMO RS]
15	L	- [Except for NISMO RS]
16	R	- [For NISMO RS]
17	GB	-
18	WB	-
19	L/B	-
20	L/W	-
21	G	-
22	G	- [For NISMO RS]
23	Y	- [Except for NISMO RS]
24	B	- [For NISMO RS]
25	SHIELD	- [For NISMO RS]
26	P	-
27	R	-
28	B	-
29	LG	-
30	G	-
31	P	- [Except for NISMO RS]

32	V	-
33	BR	- [Except for NISMO RS]
34	P	- [For NISMO RS]
35	W	- [For NISMO RS]
36	L	- [Without Intelligent Key]
37	LG	- [With Intelligent Key]
38	SB	-
39	B	-
40	P	-
41	V	-
42	L	-
43	BR	- [For NISMO RS]
44	W	- [Except for NISMO RS]
45	G	- [For NISMO RS]
46	BR	-
47	Y	-
48	SB	-
49	LG	- [With Intelligent Key]
50	Y	- [Without Intelligent Key]

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Type	MS6FW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
3	R	-
4	P	-
5	LG	-
7	Y	-
8	W/R	-

Connector No.	E11
Connector Name	WIRE TO WIRE
Connector Type	MS6FB-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
9	B/Y	-
10	L	-
14	R	-

Connector No.	E12
Connector Name	WIRE TO WIRE
Connector Type	MS6FB-CS

 


Terminal No.	Color Of Wire	Signal Name [Specification]
18	GR	-
19	R	- [Without front fog lamp]
19	W	- [With front fog lamp]
20	G	- [Without front fog lamp]
20	V	- [With front fog lamp]

Connector No.	E13
Connector Name	WIRE TO WIRE
Connector Type	TH12FW-WH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
23	SB	-
25	BR	-
26	P	-
27	L	-
28	Y	-
30	V	-
31	Y	-
32	R	-
33	G	-
34	L	-

Connector No.	E15
Connector Name	WIRE TO WIRE
Connector Type	NS16FW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
48	BR	-
49	Y	-
50	G	-
51	L	-
52	P	-
54	P	-
55	G	-
56	SB	-
57	O	-

POWER DISTRIBUTION SYSTEM


< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)

58	LG	-
59	V	-
60	GB	-
61	G	-
62	BE	-

Connector No.	E17
Connector Name	FROM LIE INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH10FB-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
63	P	-
64	Y	-
65	W	-
66	G	-
67	L	-
68	BE	-
69	BR	-
72	W	-

Connector No.	E29
Connector Name	CLUTCH INTERLOCK SWITCH
Connector Type	M04FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	BR	-

Connector No.	E81
Connector Name	JOINT CONNECTOR-E01
Connector Type	A32FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	BR	-
3	BR	-
4	BR	-
6	BR	-
8	R	-
9	R	-
10	R	-
11	R	-
12	R	-

Connector No.	E84
Connector Name	JOINT CONNECTOR-E02
Connector Type	A32FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	L	-
3	L	-
4	L	-
5	L	-
6	L	-
7	P	-
8	P	-
10	P	-


11	P	-
12	P	-

Connector No.	E102
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	R	-
3	BE	-
4	P	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-7M4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
4	Y	-
6	P	-
10	R	-
11	W	-
12	B	-
13	R	-
14	SHIELD	-
34	BE	-
35	R	-
36	B	-
37	P	-

52	R	-
53	BR	-
54	V	-
55	BE	-
56	G	-
59	Y	-
62	Y	-
63	V	-
64	LG	-
65	L	-
66	R	-
67	W	-
68	SB	-
70	BR	-
71	LG	-
72	V	-
73	L	-
76	R	-
78	B	-
79	W	-
80	L	-
83	Y	-
84	LG	-
85	P	-
86	BE	-
90	SHIELD	-
91	G	-
92	R	-
95	BR	-
96	G	-
97	W	-
98	OR	-
99	V	-
100	O	-

POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]


PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	F118
Connector Name	STOP LAMP SWITCH
Connector Type	MS02F8-4C



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	R	-

Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Type	SA43F8-RSD-S22

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	L	-
3	W	-
4	BG	- [Except for NISMO RS]
5	GR	- [Except for NISMO RS]
6	LG	- [Except for NISMO RS]
7	G	-
8	R	- [Except for NISMO RS]
9	Y	- [Except for NISMO RS]
10	Y	- [Except for NISMO RS]
11	G	- [Except for NISMO RS]
12	Y	- [Except for NISMO RS]
13	B	- [Except for NISMO RS]
14	BG	- [Except for NISMO RS]
15	L	- [Except for NISMO RS]
16	V	- [Except for NISMO RS]
17	BR	-


16	P	-
17	SB	-
18	G	-
19	G	-
20	BR	-
21	G	-
22	BR	- [For NISMO RS]
23	Y	- [Except for NISMO RS]
24	B	-
25	R	-
26	B	-
27	B	-
28	R	-
29	W	-
30	GR	- [Except for NISMO RS]
31	R	- [For NISMO RS]
32	LG	-
33	BR	-
34	G	- [For NISMO RS]
35	P	- [Except for NISMO RS]
36	G	- [Without Intelligent Key]
37	GR	- [With Intelligent Key]
38	R	-
39	GR	-
40	P	-
41	BR	- [For NISMO RS]
42	V	- [Except for NISMO RS]
43	W	- [For NISMO RS]
44	W	- [Except for NISMO RS]
45	GR	- [For NISMO RS]
46	R	-
47	Y	-
48	GR	- [With Intelligent Key]
49	Y	- [Without Intelligent Key]

Connector No.	F27
Connector Name	TRANSMISSION RANGE SWITCH
Connector Type	R008EG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	BR	-
3	LG	-
4	L	-
5	G	-
6	Y	-
7	W	-
8	V	-

Connector No.	F30
Connector Name	TRANSMISSION RANGE SWITCH
Connector Type	YD00GFB-HS4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	BR	-
3	LG	-
4	SB	-
5	G	-
6	LG	-
7	W	-
8	BR	-

Connector No.	F49
Connector Name	PARK / NEUTRAL POSITION SWITCH
Connector Type	FE03FG-1C



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	SB	-
3	BR	-

Connector No.	F55
Connector Name	PARK / NEUTRAL POSITION SWITCH
Connector Type	R002FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	SB	-

POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]


PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	M1
Connector Name	FUSE BLOCK (I/B)
Connector Type	UG3FW-MC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-
3	L	-
4	W	-
5	LG	-
6	P	-
7	Y	-
8	LG	-
9	P	-
10	Y	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	P	-
3	Y	VEHICLE SPEED SIGNAL (8-PULSE)
4	G	PADDLE SHIFTER UP SWITCH SIGNAL
5	BR	FUEL LEVEL SENSOR SIGNAL
6	R	AIR BAG SIGNAL
7	P	-
8	W	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
9	W	PARKING BRAKE SWITCH SIGNAL
10	SB	BRAKE FLUID LEVEL SWITCH SIGNAL
11	G	ILLUMINATION CONTROL SIGNAL
12	GR	MANUAL MODE SHIFTER UP SIGNAL
13	R	ACC POWER SUPPLY
14	L	MANUAL MODE SHIFTER DOWN SIGNAL
15	W	WASHER LEVEL SWITCH SIGNAL
16	G	REAR WIPER SIGNAL
17	R	AMBIENT SENSOR SIGNAL
18	GR	AMBIENT SENSOR GROUND
19	B	GROUND
20	B	GROUND
21	B	GROUND
22	B	GROUND
23	B	FUEL LEVEL SENSOR GROUND
24	L	VDC GROUND
25	B	PADDLE SHIFTER DOWN SWITCH SIGNAL
26	V	BATTERY POWER SUPPLY
27	LG	IGNITION SIGNAL
28	GR	PASSENGER SEAT BELT WARNING SIGNAL
29	V	A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL
30	P	MANUAL MODE SIGNAL
31	G	NON-MANUAL MODE SIGNAL
32	P	ALTERNATOR SIGNAL

Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	COMBI SW INPUT 5
2	L	COMBI SW INPUT 4
3	GR	COMBI SW INPUT 3
4	BR	COMBI SW INPUT 2
5	G	COMBI SW INPUT 1
6	W	KEY CYL UNLOCK SW
7	L	KEY CYL LOCK SW
8	R	STOP LAMP SW 1
9	R	-
10	W	DOOR LK & UNLK SW LOCK
11	GR	DOOR LK & UNLK SW UNLOCK
12	BR	OPTICAL SENS
13	SB	REAR WINDOW DEF SW
14	W	OPTICAL SENS PWR SW
15	W	RECEIVER GND
16	Y	REAR WIPER AMP. CONT
17	Y	REAR WIPER AMP. CONT
18	Y	REAR WIPER AMP. CONT
19	Y	REAR WIPER AMP. CONT
20	Y	REAR WIPER AMP. CONT
21	Y	REAR WIPER AMP. CONT
22	Y	REAR WIPER AMP. CONT
23	Y	REAR WIPER AMP. CONT
24	Y	REAR WIPER AMP. CONT
25	Y	REAR WIPER AMP. CONT
26	Y	REAR WIPER AMP. CONT
27	Y	REAR WIPER AMP. CONT
28	Y	REAR WIPER AMP. CONT
29	Y	REAR WIPER AMP. CONT
30	Y	REAR WIPER AMP. CONT
31	Y	REAR WIPER AMP. CONT
32	Y	REAR WIPER AMP. CONT
33	Y	REAR WIPER AMP. CONT
34	Y	REAR WIPER AMP. CONT
35	Y	REAR WIPER AMP. CONT
36	Y	REAR WIPER AMP. CONT
37	Y	REAR WIPER AMP. CONT
38	Y	REAR WIPER AMP. CONT
39	Y	REAR WIPER AMP. CONT
40	Y	REAR WIPER AMP. CONT

Connector No.	M69
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FE40FW-FH46-SA

 

Terminal No.	Color Of Wire	Signal Name [Specification]
56	P	INT ROOM LAMP PWR SW
57	P	BATT FUSE
58	SB	PASS DOOR UNLK OUTPUT
59	V	TURN SIG LH OUTPUT
60	W	TURN SIG RH OUTPUT
61	W	INT ROOM LAMP CONT
62	R	REVERSE SW
63	V	ALL DOOR LOCK OUTPUT
64	B	DR DOOR UNLK OUTPUT
65	L	GND
66	L	PW PWR SW (IGN)
67	P	PW PWR SW (BAT)
68	Y	BAT F/U

Connector No.	M70
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
71	SB	A/C IND OUTPUT
72	LG	DR DOOR REQ SW
73	LG	PUSH SW
74	P	DRIVER DOOR ANT+
75	V	DRIVER DOOR ANT-
76	BR	PASS DOOR ANT+
77	G	PASS DOOR ANT-

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)

82	W	REAR BUMP ANT+
83	BR	REAR BUMP ANT-
84	GR	ROOM ANT1+
85	V	ROOM ANT1-
86	LG	ROOM ANT2+
87	W	ROOM ANT2-
89	W	PUSH-BTN IGN SW LLL PWR
91	V	ACC / ON IND
92	R	PUSH-BTN IGN SW LLL GND
93	GR	1-KEY WARN BUZZER
96	BR	ACC RELAY CONT
97	SB	STARTER RELAY CONT
98	P	IGN RELAY (IPDM E/R) CONT
99	R	IGN RELAY (FBI) CONT
100	P	PASS DOOR REQ SW
101	Y	CLUTCH INTERLOCK SW [FOR M/T MODELS]
101	Y	IGN SPV INO2. [EXCEPT FOR M/T MODELS]
102	L	NEUTRAL SW [FOR M/T MODELS]
102	L	P/A POSITION [EXCEPT FOR M/T MODELS]
103	G	FR DEFROST SW
104	SB	CVT SHIFT SELECT PWR SPV
105	V	STOP LAMP SW 2
106	Y	BLWR RELAY CONT

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80PW-CSI6-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
4	V	-
6	P	-
10	R	-
11	R	-
12	LG	-
13	V	-
14	SHIELD	-
34	LG	-
55	SB	-
36	B	-


37	P	-
52	R	-
53	L	-
54	SB	-
55	P	-
56	LG	-
59	G	-
62	Y	-
63	W	-
64	G	-
65	GR	-
66	Y	-
67	V	-
68	R	-
70	V	-
71	R	-
72	GR	-
73	G	-
76	W	-
78	LG	-
79	V	-
80	LG	-
83	P	-
84	G	-
85	BR	-
86	LG	-
90	SHIELD	-
91	P	-
92	BR	-
95	L	-
96	L	-
97	GR	-
98	G	-
99	R	-
100	LG	-

Connector No.	M101
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK085BR




Terminal No.	Color Of Wire	Signal Name [Specification]
3	G	-
4	B	-
5	W	-
6	R	-
7	V	-
8	LG	-

Connector No.	M132
Connector Name	JOINT CONNECTOR-M02
Connector Type	NH20PLDC

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	B	-
3	B	-
4	B	-
5	B	-
6	B	-
7	B	-
8	B	-
9	B	-
10	LG	-
11	LG	-
13	LG	-
16	LG	-

Connector No.	M133
Connector Name	JOINT CONNECTOR-M04
Connector Type	NH20PLDC

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	P	-
3	P	-
5	P	-
7	P	-
11	L	-
12	L	-
13	L	-
15	L	-
17	L	-
18	W	-
19	W	-

Connector No.	M136
Connector Name	JOINT CONNECTOR-M07
Connector Type	NH20PLDC

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	P	-
3	P	-
4	P	-
5	P	-
6	P	-
7	P	-
8	P	-

JRMW15143GB

POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PDS (POWER DISTRIBUTION SYSTEM)

10	L	-
11	L	-
12	L	-
13	L	-
14	L	-
15	L	-
16	L	-
17	L	-
18	GR	-
19	GR	-
20	GR	-

PCS

JRMW15144GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:0000000012197196

OVERALL SEQUENCE

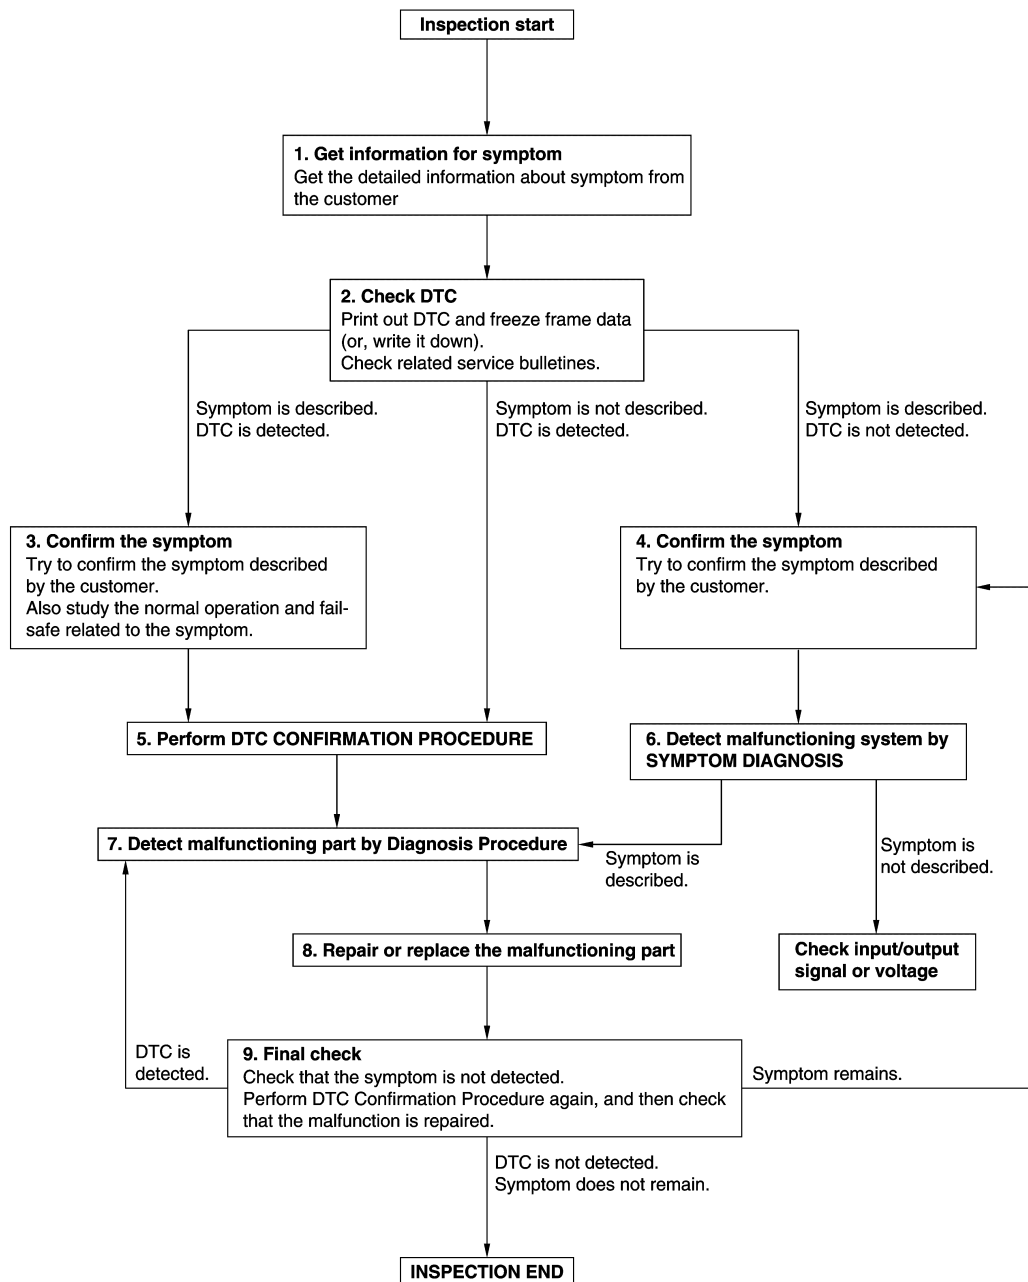

JMKIA8652GB

DETAILED FLOW

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

1.GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2.CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to [BCS-61, "DTC Inspection Priority Chart"](#), and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-45, "Intermittent Incident"](#).

6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

7.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

Inspect according to Diagnostic Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-45. "Intermittent Incident"](#).

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

B2614 ACC RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

DTC/CIRCUIT DIAGNOSIS

B2614 ACC RELAY CIRCUIT

DTC Logic

INFOID:0000000012197197

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2614	BCM	An immediate operation of accessory relay is requested by BCM, but there is no response for more than 2 second.	<ul style="list-style-type: none">• Harness or connectors (Accessory relay circuit is open or shorted)• BCM• Accessory relay

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to ACC under the following conditions, and wait for 2 second or more.
 - Selector lever is in the P position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" of BCM with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-63, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012197198

1.CHECK ACCESSORY RELAY POWER SUPPLY-1

1. Turn ignition switch OFF.
2. Disconnect accessory relay.
3. Check voltage between accessory relay harness connector and ground.

(+)	(-)	Condition		Voltage (V) (Approx.)
Accessory relay				
Terminal				
1	Ground	Ignition switch	OFF	0
			ACC or ON	12

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between accessory relay harness connector and BCM harness connector.

Accessory relay	BCM		Continuity
	Connector	Terminal	
1	M70	96	Existed

4. Check continuity between accessory relay harness connector and ground.

B2614 ACC RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Accessory relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-94, "Removal and Installation"](#).

NO >> Repair or replace harness.

3.CHECK ACCESSORY RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between accessory relay harness connector and ground.

Accessory relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair accessory relay ground circuit.

4.CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT-2

1. Turn ignition switch ACC.
2. Check voltage between accessory relay harness connector and ground.

(+)	(-)	Voltage (V) (Approx.)
Accessory relay		
Terminal		
5	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check continuity open or short between accessory relay and battery.

5.CHECK ACCESSORY RELAY

Refer to [PCS-64, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace accessory relay.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000012197199

1.CHECK ACCESSORY RELAY

1. Turn ignition switch OFF.
2. Remove accessory relay.

B2614 ACC RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >


[POWER DISTRIBUTION SYSTEM]

3. Check the continuity between accessory relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

Is the inspection result normal?

YES >> INSPECTION END
NO >> Replace accessory relay

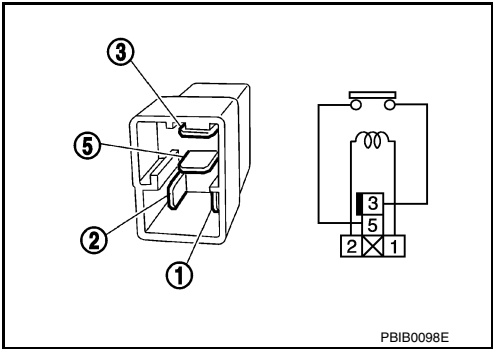

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2615 BLOWER RELAY CIRCUIT

DTC Logic

INFOID:0000000012197200

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2615	BCM	BCM detects a difference of signal for 1 second or more between the following items. <ul style="list-style-type: none">• Blower relay ON/OFF request• Blower relay feedback	<ul style="list-style-type: none">• Harness or connectors (Blower relay circuit is open or shorted)• BCM• Blower relay

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for 1 second or more.
 - Selector lever is in the P position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" of BCM with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-66. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012197201

1.CHECK BLOWER RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect blower relay.
3. Check voltage between blower relay harness connector and ground.

(+)	(-)	Condition		Voltage (V) (Approx.)
Blower relay				
Terminal				
1	Ground	Ignition switch	OFF or ACC	0
			ON	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK BLOWER RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between blower relay harness connector and BCM harness connector.

Blower relay	BCM		Continuity
	Connector	Terminal	
1	M70	106	Existed

4. Check continuity between blower relay harness connector and ground.

Blower relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

B2615 BLOWER RELAY CIRCUIT

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 6.
NO >> Repair or replace harness.

3.CHECK BLOWER RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between blower relay harness connector and ground.

Blower relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair blower relay ground circuit.

4.CHECK BLOWER RELAY POWER SUPPLY CIRCUIT-2

1. Turn ignition switch ON.
2. Check voltage between blower relay harness connector and ground.

(+)	(-)	Voltage (V) (Approx.)
Blower relay		
Terminal		
5	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Check continuity open or short between blower relay and battery.

5.CHECK BLOWER RELAY

Refer to [PCS-67, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Replace blower relay.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000012197202

PCS


1.CHECK BLOWER RELAY

1. Turn ignition switch OFF.
2. Remove blower relay.
3. Check the continuity between blower relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace blower relay

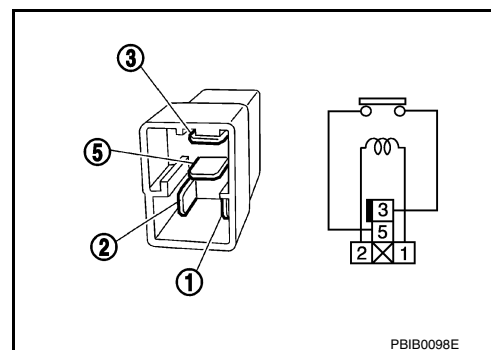

PBIB0098E

B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2616 IGNITION RELAY CIRCUIT

DTC Logic

INFOID:0000000012197203

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2616	BCM	An immediate operation of ignition relay is requested by BCM, but there is no response for more than 1 second	<ul style="list-style-type: none">• Harness or connectors (Ignition relay circuit is open or shorted)• BCM• Ignition relay

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for 1 second or more.
 - Selector lever is in the P position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-68, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012197204

1.CHECK IGNITION RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect ignition relay.
3. Check voltage between ignition relay harness connector and ground.

(+)	(-)	Condition		Voltage (V) (Approx.)
Ignition relay Terminal				
2	Ground	Ignition switch	OFF or ACC	0
			ON	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK IGNITION RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between ignition relay harness connector and BCM harness connector.

Ignition relay Terminal	BCM		Continuity
	Connector	Terminal	
2	M70	99	Existed

4. Check continuity between ignition relay harness connector and ground.

Ignition relay Terminal	Ground	Continuity
		Not existed
2		

Is the inspection result normal?

B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

- YES >> Replace BCM. Refer to [BCS-94. "Removal and Installation"](#).
NO >> Repair or replace harness.

3.CHECK IGNITION RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between ignition relay harness connector and ground.

Ignition relay	Ground	Continuity
Terminal		
1		Existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair ignition relay ground circuit.

4.CHECK IGNITION RELAY POWER SUPPLY CIRCUIT-2

1. Turn ignition switch ON.
2. Check voltage between ignition relay harness connector and ground.

(+)	(-)	Voltage (V) (Approx.)
Ignition relay		
Terminal		
5	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Check continuity open or short between ignition relay and battery.

5.CHECK IGNITION RELAY

Refer to [PCS-69. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Replace ignition relay.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-45. "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000012197205

PCS


1.CHECK IGNITION RELAY

1. Turn ignition switch OFF.
2. Remove ignition relay.
3. Check the continuity between ignition relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace Ignition relay

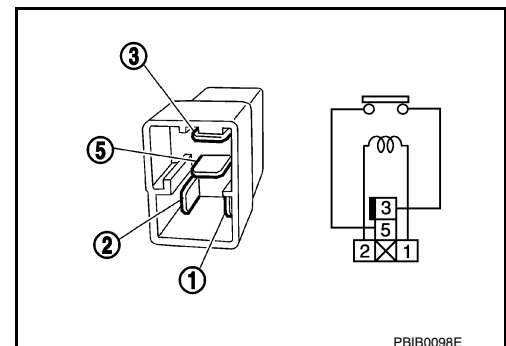

B2618 BCM**DTC Logic**

INFOID:0000000012197206

DTC DETECTION LOGIC**NOTE:**

- If DTC B2618 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B2618 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2618	BCM	An immediate operation of ignition relay (IPDM E/R) is requested by BCM, but there is no response for more than 1 second	BCM

DTC CONFIRMATION PROCEDURE**1.PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON under the following conditions, and wait for 1 second or more.

CVT models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnosis result" of BCM with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-70, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012197207

1.INSPECTION START

1. Turn ignition switch ON.
2. Select "Self-diagnosis result" of BCM with CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure.
See [PCS-70, "DTC Logic"](#).

Is the 1st trip DTC B2618 displayed again?

- YES >> Replace BCM. Refer to [BCS-94, "Removal and Installation"](#)
NO >> INSPECTION END

B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B261A PUSH-BUTTON IGNITION SWITCH

DTC Logic

INFOID:0000000012197208

DTC DETECTION LOGIC

NOTE:

- If DTC B261A is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B261A is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B261A	PUSH-BTN IGN SW	BCM detects a difference of signal for 1 second or more between the following items. <ul style="list-style-type: none">• Push-button ignition switch signal• Push-button ignition switch status signal (CAN)	<ul style="list-style-type: none">• Harness or connectors (Push-button ignition switch circuit is open or shorted.)• BCM• IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Press the push-button ignition switch under the following conditions, and wait for 1 second or more.

CVT models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal

2. Check "Self-diagnosis result" of BCM with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-71, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012197209

1.CHECK IGNITION SWITCH OUTPUT SIGNAL (PUSH-BUTTON IGNITION SWITCH)

1. Disconnect push-button ignition switch connector and IPDM E/R connector.
2. Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Push-button ignition switch			
Connector	Terminal		
M101	8	Ground	12

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (BCM)

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M70	76	M101	8	Existed

3. Check continuity between push-button ignition switch harness connector and ground.

B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M101	8		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-94, "Removal and Installation"](#).

NO >> Repair or replace harness.

3.CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
E17	66	Ground	12

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> GO TO 4.

4.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

1. Disconnect BCM connector.
2. Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

IPDM E/R		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
E17	66	M101	8	Existed

3. Check continuity between push-button ignition switch harness connector and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M101	8		Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

>> INSPECTION END

B26F1 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B26F1 IGNITION RELAY

DTC Logic

INFOID:0000000012197210

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F1	IGN RELAY OFF	BCM transmits the ignition relay control signal (ON: 0 V) or ignition switch ON signal (ON) (CAN), but does not receives ignition switch ON signal (ON) (CAN) from IPDM E/R.	<ul style="list-style-type: none">• Harness or connectors (Ignition relay circuit is open)• BCM• IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for 2 seconds or more.

CVT models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnosis result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-73, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012197211

1.CHECK IPDM E/R SELF-DIAGNOSTIC RESULT

1. Turn ignition switch ON.
2. Erase the DTC of IPDM E/R.
3. Turn ignition switch OFF.
4. Turn ignition switch ON and check the DTC again.

Is DTC detected?

- YES >> Repair or replace the malfunctioning part. Refer to [PCS-24, "DTC Index"](#).
NO >> GO TO 2.

2.CHECK IGNITION RELAY (IPDM E/R) CONTROL SIGNAL

Check voltage between BCM harness connector and ground.

(+) BCM		(-)	Condition		Voltage (V) (Approx.)
Connector	Terminal				
M70	98	Ground	Ignition switch	ON	0

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace BCM. Refer to [BCS-94, "Removal and Installation"](#).

3.CHECK IGNITION RELAY (IPDM E/R) CONTROL SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM and IPDM connectors.
3. Check continuity between BCM harness connector and IPDM E/R harness connector.

B26F1 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

BCM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M70	98	E17	68	Existed

Is the inspection result normal?

- YES >> Replace IPDM E/R.
NO >> Repair or replace harness.

B26F2 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B26F2 IGNITION RELAY

DTC Logic

INFOID:0000000012197212

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F2	IGN RELAY ON	BCM transmits the ignition relay control signal (OFF: 12 V) or ignition switch ON signal (OFF) (CAN), but does not receives ignition switch ON signal (OFF) (CAN) from IPDM E/R.	<ul style="list-style-type: none">• Harness or connectors (Ignition relay circuit is short)• BCM• IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for 2 seconds or more.

CVT models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnosis result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-75, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012197213

1.CHECK IPDM E/R SELF-DIAGNOSTIC RESULT

1. Turn ignition switch ON.
2. Erase the DTC of IPDM E/R.
3. Turn ignition switch OFF.
4. Turn ignition switch ON and check the DTC again.

Is DTC detected?

- YES >> Repair or replace the malfunctioning part. Refer to [PCS-24, "DTC Index"](#).
NO >> GO TO 2.

2.CHECK IGNITION RELAY (IPDM E/R) CONTROL SIGNAL

1. Turn ignition switch OFF.
2. Check voltage between IPDM E/R harness connector and ground.

(+) IPDM E/R		(-)	Condition		Voltage (V) (Approx.)
Connector	Terminal				
E17	68	Ground	Ignition switch	OFF or ACC	12

Is the inspection result normal?

- YES >> Replace IPDM E/R.
NO >> GO TO 3.

3.CHECK IGNITION RELAY (IPDM E/R) CONTROL SIGNAL CIRCUIT - 1

1. Turn ignition switch OFF.
2. Disconnect BCM and IPDM E/R connectors.
3. Check continuity between IPDM E/R harness connector and ground.

B26F2 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

IPDM E/R		Ground	Continuity
Connector	Terminal		
E17	68		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4. CHECK IGNITION RELAY (IPDM E/R) CONTROL SIGNAL CIRCUIT - 2

1. Connect IPDM E/R connectors.
2. Check voltage between IPDM E/R harness connector and ground.

(+) IPDM E/R		(-)	Condition		Voltage (V) (Approx.)
Connector	Terminal				
E17	68				
		Ground	Ignition switch	OFF or ACC	12

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-94. "Removal and Installation"](#).

NO >> Replace IPDM E/R.

B26F6 BCM

DTC Logic

INFOID:0000000012197214

DTC DETECTION LOGIC

NOTE:

- If DTC B26F6 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B26F6 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F6	BCM	Ignition relay ON signal is not transmitted from IPDM E/R when BCM turns ignition relay ON.	BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for 1 second or more.

CVT models

- Selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self-diagnosis result" of BCM with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-77, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012197215

1. INSPECTION START

1. Turn ignition switch ON.
2. Select "Self-diagnosis result" of BCM with CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure.
See [BCS-62, "DTC Index"](#).

Is DTC detected?

- YES >> Replace BCM. Refer to [BCS-94, "Removal and Installation"](#)
 NO >> INSPECTION END

PCS

PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH

Component Function Check

INFOID:0000000012197216

1.CHECK FUNCTION

1. Select "PUSH SW" in "Data Monitor" mode with CONSULT.
2. Check the push-button ignition switch signal under the following conditions.

Test item	Condition	Status
PUSH SW	Push-button ignition switch is pressed	ON
	Push-button ignition switch is not pressed	OFF

Is the indication normal?

- YES >> INSPECTION END.
NO >> Go to [PCS-78, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000012197217

1.CHECK PUSH-BUTTON IGNITION SWITCH OUTPUT SIGNAL 1

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector and IPDM E/R connector.
3. Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Push-button ignition switch			
Connector	Terminal		
M101	8	Ground	12

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT 1

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M70	76	M101	8	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M70	76	Ground	Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-94, "Removal and Installation"](#).
NO >> Repair or replace harness.

3.CHECK PUSH-BUTTON IGNITION SWITCH OUTPUT SIGNAL 2

Check voltage between IPDM E/R harness connector and ground.

PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
E17	66	Ground	12

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT 2

1. Disconnect BCM connector.
2. Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

IPDM E/R		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
E17	66	M101	8	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E17	66		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace harness.

5.CHECK PUSH-BUTTON IGNITION SWITCH GROUND CIRCUIT

Check continuity between push-button ignition switch harness connector and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M101	4		Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6.CHECK PUSH-BUTTON IGNITION SWITCH

Refer to [PCS-79, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace push-button ignition switch.

7.CHECK INTERMITTENT INCIDENT

Refer to [GI-45, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000012197218

1.CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals.

PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Push-button ignition switch		Condition	Continuity
Terminal			
4	8	Pressed	Existed
		Not pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace push-button ignition switch.

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

Description

INFOID:0000000012197219

Push-button ignition switch changes the power supply position.
BCM maintains the power supply position status.
BCM changes the power supply position with the operation of the push-button ignition switch.

Component Function Check

INFOID:0000000012197220

1.CHECK FUNCTION

Check push-button ignition switch ("PUSH SWITCH INDICATOR") in Active Test Mode with CONSULT.

Test item		Description	
PUSH SWITCH INDICATOR	ON	Position indicator	Illuminates
	OFF		Does not illuminate

Is the inspection result normal?

YES >> INSPECTION END
NO >> Refer to [PCS-81, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000012197221

1.CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Push-button ignition switch			
Connector	Terminal		
M101	3	Ground	Battery voltage

Is the inspection normal?

YES >> GO TO 2.
NO-1 >> Check 10 A fuse [No.13, located in fuse block (J/B)].
NO-2 >> Check harness for open or short between push-button ignition switch and fuse.

2.CHECK BCM INPUT

1. Connect push-button ignition switch connector.
2. Disconnect BCM connector.
3. Check voltage between BCM connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M70	91	Ground	Battery voltage

Is the inspection normal?

YES >> Replace BCM. Refer to [BCS-94, "Removal and Installation"](#).
NO >> GO TO 3.

3.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

1. Disconnect push-button ignition switch connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M70	91	M101	7	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M70	91		Not existed

Is the inspection normal?

YES >> Replace push-button ignition switch.

NO >> Repair or replace harness.

PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

SYMPTOM DIAGNOSIS

PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

Description

INFOID:0000000012197222

Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

NOTE:

The engine start function, door lock function, power distribution system, and NATS-IVIS/NVIS in the Intelligent Key system are closely related to each other regarding control. The vehicle security function can operate only when the door lock and power distribution system are operating normally.

Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Diagnosis Procedure

INFOID:0000000012197223

1.PERFORM WORK SUPPORT

Perform “INSIDE ANT DIAGNOSIS” on Work Support of “INTELLIGENT KEY”.
Refer to [DLK-26, "DOOR LOCK : CONSULT Function \(BCM - DOOR LOCK\)"](#).

>> GO TO 2.

2.PERFORM SELF-DIAGNOSIS RESULT

Perform Self-Diagnosis Result of “BCM”.

Is DTC detected?

- YES >> Refer to [BCS-62, "DTC Index"](#).
NO >> GO TO 3.

3.CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Refer to [PCS-78, "Component Function Check"](#).

Is the operation normal?

- YES >> GO TO 4.
NO >> Repair or replace malfunctioning parts.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

- YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).
NO >> GO TO 1.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE

Description

INFOID:0000000012197224

- Before performing the diagnosis in the following table, check “Work Flow”. Refer to [PCS-60, "Work Flow"](#).
- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Diagnosis Procedure

INFOID:0000000012197225

1.CHECK PUSH-BUTTON IGNITION SWITCH INDICATOR

Check push-button ignition switch indicator.

Refer to [PCS-81, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-45, "Intermittent Incident"](#).

NO >> GO TO 1.