

SECTION **PWO**
POWER OUTLET

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CONTENTS

PRECAUTION	2	Wiring Diagram	4
PRECAUTIONS	2	REMOVAL AND INSTALLATION	9
Precaution for Technicians Using Medical Electric.....	2	POWER SOCKET	9
Point to Be Checked Before Starting Maintenance		Removal and Installation	9
Work	2	SERVICE DATA AND SPECIFICATIONS	
Precaution for Supplemental Restraint System		(SDS)	10
(SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	SERVICE DATA AND SPECIFICATIONS	
Precaution for Removing 12V Battery	3	(SDS)	10
WIRING DIAGRAM	4	Power Socket	10
POWER SOCKET	4		

PWO

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Technicians Using Medical Electric

INFOID:000000009353530

OPERATION PROHIBITION

WARNING:

- Parts with strong magnet is used in this vehicle.
- Technicians using a medical electric device such as pacemaker must never perform operation on the vehicle, as magnetic field can affect the device function by approaching to such parts.

NORMAL CHARGE PRECAUTION

WARNING:

- If a technician uses a medical electric device such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator, the possible effects on the devices must be checked with the device manufacturer before starting the charge operation.
- As radiated electromagnetic wave generated by PDM (Power Delivery Module) at normal charge operation may affect medical electric devices, a technician using a medical electric device such as implantable cardiac pacemaker or an implantable cardioverter defibrillator must not approach motor room [PDM (Power Delivery Module)] at the hood-opened condition during normal charge operation.

PRECAUTION AT TELEMATICS SYSTEM OPERATION

WARNING:

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of TCU might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), when using the service, etc.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of TCU might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before TCU use.

PRECAUTION AT INTELLIGENT KEY SYSTEM OPERATION

WARNING:

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of Intelligent Key might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), at door operation, at each request switch operation, or at engine starting.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of Intelligent Key might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before Intelligent Key use.

Point to Be Checked Before Starting Maintenance Work

INFOID:000000008744034

The high voltage system may starts automatically. It is required to check that the timer air conditioner and timer charge (during EVSE connection) are not set before starting maintenance work.

NOTE:

If the timer air conditioner or timer charge (during EVSE connection) is set, the high voltage system starts automatically even when the power switch is in OFF state.

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009330682

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS

PRECAUTIONS

< PRECAUTION >

system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Removing 12V Battery

INFOID:000000008744036

1. Check that EVSE is not connected.

NOTE:

If EVSE is connected, the air conditioning system may be automatically activated by the timer A/C function.

2. Turn the power switch OFF → ON → OFF. Get out of the vehicle. Close all doors (including back door).
3. Check that the charge status indicator lamp does not blink and wait for 5 minutes or more.

NOTE:

If the battery is removed within 5 minutes after the power switch is turned OFF, plural DTCs may be detected.

4. Remove 12V battery within 1 hour after turning the power switch OFF → ON → OFF.

NOTE:

- The 12V battery automatic charge control may start automatically even when the power switch is in OFF state.
- Once the power switch is turned ON → OFF, the 12V battery automatic charge control does not start for approximately 1 hour.

CAUTION:

- After all doors (including back door) are closed, if a door (including back door) is opened before battery terminals are disconnected, start over from Step 1.
- After turning the power switch OFF, if "Remote A/C" is activated by user operation, stop the air conditioner and start over from Step 1.

 
A
B
C
D
E
F
G
H
I
J
K
L
PWO
N
O
P

POWER SOCKET

< WIRING DIAGRAM >

POWER SOCKET - CONNECTORS

Connector No.	M60
Connector Name	POWER SOCKET
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L	-
2	B	-

AAMIA1874GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PWO


POWER SOCKET

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
60	Y	-
61	GR	-
62	W	-
63	BR	-
64	SHIELD	-
65	W	-
66	LG	-
67	R	-
68	G	-
69	BG	-
70	GR	-
71	R	-
72	R	-
73	B	-
74	W	-
76	L	-
80	W	-
81	LG	-
83	GR	-
84	L	-
85	Y	-
86	SB	-
88	R	-
89	G	-
90	SHIELD	-
91	Y	-
92	BR	-
93	W	-
94	P	-
95	L	-
96	P	-
97	G	-
98	V	-
99	LG	-
100	R	-

Terminal No.	Color of Wire	Signal Name
22	B	-
23	BG	-
24	B	-
26	G	-
27	B	-
28	B	-
25	W	-
29	R	-
31	R	-
32	W	-
33	GR	-
34	BR	-
35	BR	-
36	W	-
37	L	-
38	LG	-
39	SB	-
40	V	-
41	P	-
42	SB	-
43	G	-
44	LG	-
45	Y	-
46	R	-
47	W	-
48	L	-
49	G	-
50	L	-
51	SB	-
52	L	-
54	B	-
55	R	-
56	V	-
57	Y	-
58	L	-

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Color	WHITE

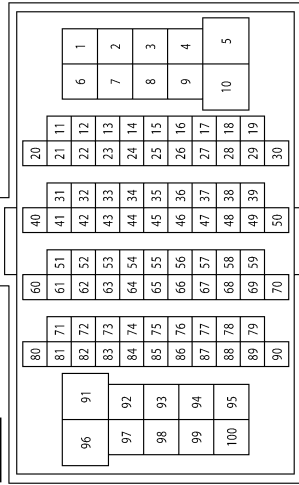

Terminal No.	Color of Wire	Signal Name
1	R	-
2	L	-
3	V	-
4	LG	-
6	P	-
7	GR	-
9	G	-
10	L	-
11	L	-
12	Y	-
13	V	-
14	R	-
15	G	-
16	W	-
17	R	-
18	G	-
19	W	-
20	GR	-
21	P	-

AAMIA1875GB

POWER SOCKET

< WIRING DIAGRAM >

Connector No.	E43
Connector Name	POWER SOCKET RELAY
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	R	-
3	L	-
5	R	-

AAMIA1932GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


PWO

POWER SOCKET

< WIRING DIAGRAM >

58	L	-
60	LG	-
61	GR	-
62	W	-
63	SB	-
64	SHIELD	-
65	W	-
66	G	-
67	V	-
68	R	-
69	B	-
70	BR	-
71	LG	-
72	R	-
73	B	-
74	O	-
76	L	-
77	Y	-
80	P	-
81	SB	-
83	GR	-
84	L	-
85	O	-
86	BR	-
88	B	-
89	W	-
90	SHIELD	-
91	Y	-
92	BR	-
93	O	-
94	R	-
95	V	-
96	P	-
97	G	-
98	W	-
99	O	-
100	SB	-

20	BR	-
21	R	-
22	B	-
23	LG	-
24	B	-
25	W	-
26	W	-
27	B	-
28	O/L	-
29	W	-
31	R	-
32	W	-
33	G	-
34	BR	-
35	V	-
36	O	-
37	L	-
38	SB	-
39	P	-
40	V	-
41	O	-
42	Y	-
43	BR	-
44	W	-
45	G	-
46	P	-
47	LG	-
47	R	-
48	B	-
49	L	-
50	G	-
51	W	-
52	O	-
54	B	-
55	R	-
56	Y	-
57	Y	-

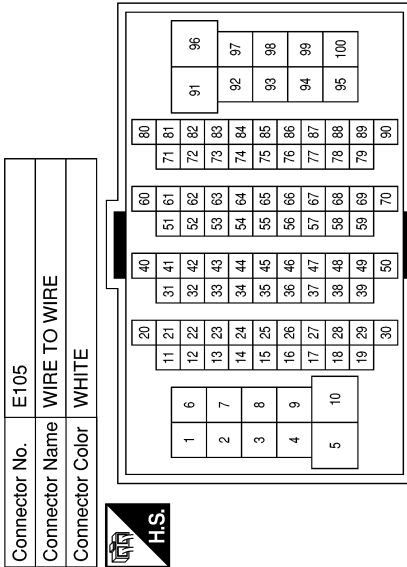

Terminal No.	Color of Wire	Signal Name
1	R	-
2	L	-
3	BW	-(WITHOUT FRONT FOG LAMPS)
3	R	-(WITH LED HEADLAMPS)
4	LG	-(WITH LED HEADLAMPS)
4	B/W	-(WITHOUT FRONT FOG LAMPS)
6	B/R	-
7	W	-
9	G	-
10	R	-
11	L	-
12	Y	-
13	W	-
14	R	-
15	G	-
16	G	-
17	R	-
18	O	-
19	W/L	-

AAMIA2085GB

POWER SOCKET

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION


POWER SOCKET


Removal and Installation

INFOID:000000008744039

REMOVAL


1. Remove cluster lid C. Refer to [IP-16, "Exploded View"](#).
2. Disconnect power socket connector.
3. Press the power socket pawl from the back of the cluster lower panel to remove the power socket.


 : Pawl

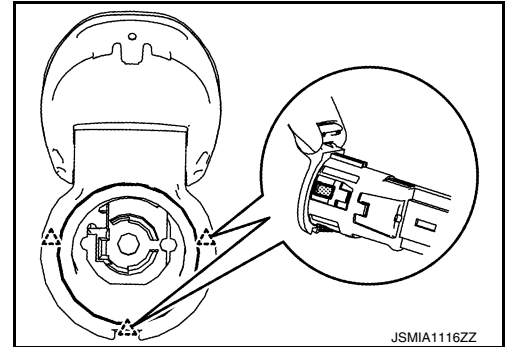

INSTALLATION

Note the following, and install in the reverse order of removal.
Align the cut outs of power socket and cluster lower panel.

 : Cut out

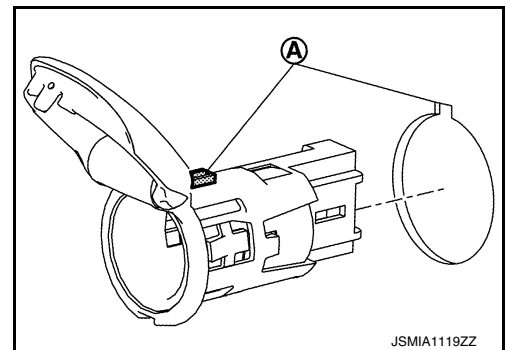

A

B

C

D

E

F

G

H

I

J

K

L

PWO

N

O

P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Power Socket

INFOID:000000008744040

Rated voltage	DC 12 V
Maximum electric capacity	120 W or less (Total)
Maximum current	20 A or less (Total)