 


SECTION MA
MAINTENANCE

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
MA

CONTENTS

PREPARATION	4	DRIVE BELT	21
PREPARATION	4	DRIVE BELT : Exploded View	21
Special Service Tool	4	DRIVE BELT : Checking	21
Commercial Service Tool	4	DRIVE BELT : Tension Adjustment	21
PERIODIC MAINTENANCE	5	ENGINE COOLANT	21
GENERAL MAINTENANCE	5	ENGINE COOLANT : Draining	21
FOR NORTH AMERICA	5	ENGINE COOLANT : Refilling	22
FOR NORTH AMERICA : Explanation of General Maintenance	5	ENGINE COOLANT : Flushing	24
FOR MEXICO	6	RADIATOR CAP	24
FOR MEXICO : General Maintenance	7	RADIATOR CAP : Inspection	24
PERIODIC MAINTENANCE	9	RADIATOR	25
FOR NORTH AMERICA	9	RADIATOR : Inspection	25
FOR NORTH AMERICA : Introduction of Periodic Maintenance	9	FUEL LINES	25
FOR NORTH AMERICA : Schedule 1	9	FUEL LINES : Inspection	25
FOR NORTH AMERICA : Schedule 2	11	AIR CLEANER FILTER	26
FOR MEXICO	13	AIR CLEANER FILTER : Removal and Installation	26
FOR MEXICO : Periodic Maintenance	13	ENGINE OIL	26
RECOMMENDED FLUIDS AND LUBRI- CANTS	16	ENGINE OIL : Draining	26
FOR NORTH AMERICA	16	ENGINE OIL : Refilling	26
FOR NORTH AMERICA : Fluids and Lubricants	16	OIL FILTER	27
FOR NORTH AMERICA : Engine Oil Recommen- dation	17	OIL FILTER : Removal and Installation	27
FOR NORTH AMERICA : Anti-Freeze Coolant Mixture Ratio	17	OIL FILTER : Inspection	28
FOR MEXICO	17	SPARK PLUG	28
FOR MEXICO : Fluids and Lubricants	18	SPARK PLUG : Removal and Installation	28
FOR MEXICO : SAE Viscosity Number	18	SPARK PLUG : Inspection	29
FOR MEXICO : Engine Coolant Mixture Ratio	20	EVAP VAPOR LINES	29
ENGINE MAINTENANCE (VQ37VHR)	21	EVAP VAPOR LINES : Inspection	29
		ENGINE MAINTENANCE (VK56VD)	30
		DRIVE BELT	30
		DRIVE BELT : Exploded View	30
		DRIVE BELT : Checking	30
		DRIVE BELT : Tension Adjustment	31



ENGINE COOLANT	31	FRONT DIFFERENTIAL GEAR OIL: F160A : Re-	
ENGINE COOLANT : Draining	31	filling	43
ENGINE COOLANT : Refilling	31	REAR DIFFERENTIAL GEAR OIL: R200	43
ENGINE COOLANT : Flushing	33	REAR DIFFERENTIAL GEAR OIL: R200 : Inspec-	
RADIATOR CAP	34	tion	43
RADIATOR CAP : Inspection	34	REAR DIFFERENTIAL GEAR OIL: R200 : Drain-	
RADIATOR	34	ing	43
RADIATOR : Inspection	35	REAR DIFFERENTIAL GEAR OIL: R200 : Refill-	
FUEL LINES	35	ing	44
FUEL LINES : Inspection	35	REAR DIFFERENTIAL GEAR OIL: R208	44
AIR CLEANER FILTER	35	REAR DIFFERENTIAL GEAR OIL: R208 : Inspec-	
AIR CLEANER FILTER : Removal and Installation	35	tion	44
	35	REAR DIFFERENTIAL GEAR OIL: R208 : Drain-	
ENGINE OIL	36	ing	44
ENGINE OIL : Draining	36	REAR DIFFERENTIAL GEAR OIL: R208 : Refill-	
ENGINE OIL : Refilling	36	ing	45
OIL FILTER	36	WHEELS (BONDING WEIGHT TYPE)	45
OIL FILTER : Removal and Installation	36	WHEELS (BONDING WEIGHT TYPE) : Adjust-	
OIL FILTER : Inspection	37	ment	45
SPARK PLUG	37	BRAKE FLUID LEVEL AND LEAKS	47
SPARK PLUG : Removal and Installation	37	BRAKE FLUID LEVEL AND LEAKS : Inspection ...	47
SPARK PLUG : Inspection	38	BRAKE LINES AND CABLES	47
EVAP VAPOR LINES	38	BRAKE LINES AND CABLES : Inspection	47
EVAP VAPOR LINES : Inspection	38	BRAKE FLUID	47
CHASSIS MAINTENANCE	39	BRAKE FLUID : Changing	47
EXHAUST SYSTEM	39	DISC BRAKE	48
EXHAUST SYSTEM : Inspection	39	DISC BRAKE : Inspection	48
A/T FLUID	39	DISC BRAKE : Front Disc Brake	48
A/T FLUID : Inspection	39	DISC BRAKE : Rear Disc Brake	48
TRANSFER FLUID	39	STEERING GEAR AND LINKAGE	49
TRANSFER FLUID : Inspection	39	STEERING GEAR AND LINKAGE : Inspection	49
TRANSFER FLUID : Draining	39	POWER STEERING FLUID AND LINES	49
TRANSFER FLUID : Refilling	40	POWER STEERING FLUID AND LINES : Inspec-	
FRONT PROPELLER SHAFT: 2S56A	40	tion	49
FRONT PROPELLER SHAFT: 2S56A : Inspec-	40	AXLE AND SUSPENSION PARTS	50
tion	40	AXLE AND SUSPENSION PARTS : Inspection	50
REAR PROPELLER SHAFT: 3S80A-R	41	DRIVE SHAFT	50
REAR PROPELLER SHAFT: 3S80A-R : Inspec-	41	DRIVE SHAFT : Inspection	50
tion	41	BODY MAINTENANCE	51
REAR PROPELLER SHAFT: 3F80A-R	41	LOCKS, HINGES AND HOOD LATCH	51
REAR PROPELLER SHAFT: 3F80A-R : Inspec-	41	LOCKS, HINGES AND HOOD LATCH : Lubricat-	
tion	41	ing	51
FRONT DIFFERENTIAL GEAR OIL: F160A	42	SEAT BELT, BUCKLES, RETRACTORS, AN-	
FRONT DIFFERENTIAL GEAR OIL: F160A : In-	42	CHORS AND ADJUSTERS	51
spection	42	SEAT BELT, BUCKLES, RETRACTORS, AN-	
FRONT DIFFERENTIAL GEAR OIL: F160A :	42	CHORS AND ADJUSTERS : Inspection	51
Draining	42	SERVICE DATA AND SPECIFICATIONS	
		(SDS)	52

SERVICE DATA AND SPECIFICATIONS

(SDS)	52
DRIVE BELTS (VQ37VHR)	52
DRIVE BELTS (VQ37VHR) : Drive Belt	52
DRIVE BELTS (VK56VD)	52
DRIVE BELTS (VK56VD) : Drive Belts	52
ENGINE COOLANT (VQ37VHR)	52
ENGINE COOLANT (VQ37VHR) :	
Periodical Maintenance Specification	52
ENGINE COOLANT (VK56VD)	52
ENGINE COOLANT (VK56VD) :	
Periodical Maintenance Specification	52

ENGINE OIL (VQ37VHR)	52
ENGINE OIL (VQ37VHR) :	
Periodical Maintenance Specification	52
ENGINE OIL (VK56VD)	52
ENGINE OIL (VK56VD) :	
Periodical Maintenance Specification	52
SPARK PLUG (VQ37VHR)	53
SPARK PLUG (VQ37VHR) : Spark Plug	53
SPARK PLUG (VK56VD)	53
SPARK PLUG (VK56VD) : Spark Plug	53
ROAD WHEEL	53
ROAD WHEEL : Road Wheel	53

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

MA

PREPARATION

< PREPARATION >


PREPARATION

PREPARATION

Special Service Tool



INFOID:000000006887413

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

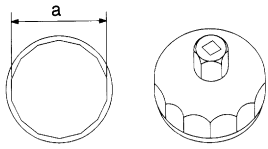Tool number (Kent-Moore No.) Tool name	Description
KV10115801 (J-38956) Oil filter wrench <div style="text-align: center;">  <p>S-NT375</p> </div>	Removing and installing oil filter a: 64.3 mm (2.531 in)

Commercial Service Tool

INFOID:000000006887414

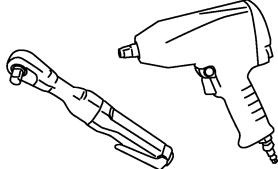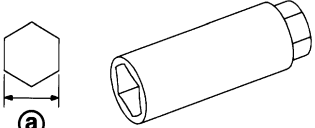Tool name	Description
Power tool <div style="text-align: center;">  <p>PBIC0190E</p> </div>	Loosening nuts and bolts
Spark plug wrench <div style="text-align: center;">  <p>JPBIA0399ZZ</p> </div>	Removing and installing spark plug a : 14 mm (0.55 in)

GENERAL MAINTENANCE

< PERIODIC MAINTENANCE >

PERIODIC MAINTENANCE

GENERAL MAINTENANCE FOR NORTH AMERICA

FOR NORTH AMERICA : Explanation of General Maintenance

INFOID:000000006887415

General maintenance includes those items which should be checked during the normal day-to-day operation of the vehicle. They are essential if the vehicle is to continue operating properly. The owners can perform checks and inspections themselves or have their **INFINITI** dealers do them.

OUTSIDE THE VEHICLE

The maintenance items listed here should be performed from time to time, unless otherwise specified.

Item		Reference page
Tires	Check the pressure with a gauge often and always prior to long distance trips. Adjust the pressure in all tires, including the spare, to the pressure specified. Check carefully for damage, cuts or excessive wear.	WT-62
Wheel nuts	When checking the tires, make sure no nuts are missing, and check for any loose nuts. Tighten if necessary.	—
Tire rotation	Tires should be rotated every 7,500 miles (12,000 km). If the vehicle is equipped with different sized tires in the front and rear, tires cannot be rotated.	MA-45
Tire Pressure Monitoring System (TPMS) transmitter components	Replace the TPMS transmitter grommet seal, valve core and cap when the tires are replaced due to wear or age.	WT-59
Wheel alignment and balance	If the vehicle should pull to either side while driving on a straight and level road, or if you detect uneven or abnormal tire wear, there may be a need for wheel alignment. If the steering wheel or seat vibrates at normal highway speeds, wheel balancing may be needed. For additional information regarding tires, refer to "Important Tire Safety Information" (US) or "Tire Safety Information" (Canada) in the INFINITI Warranty Information Booklet.	FSU-7 (2WD) FSU-26 (AWD) RSU-6
Windshield	Clean the windshield on a regular basis. Check the windshield at least every six months for cracks or other damage. Repair as necessary.	—
Windshield wiper blades	Check for cracks or wear if they do not wipe properly.	—
Doors and engine hood	Check that all doors and the engine hood operate properly. Also make sure that all latches lock securely. Lubricate if necessary. Make sure that the secondary latch keeps the hood from opening when the primary latch is released. When driving in areas using road salt or other corrosive materials, check lubrication frequently.	MA-51
Lamps	Make sure that the headlamps, stop lamps, tail lamps, turn signal lamps, and other lamps are all operating properly and installed securely. Also check headlamp aim. Clean the headlamps on a regular basis.	—

INSIDE THE VEHICLE

The maintenance items listed here should be checked on a regular basis, such as when performing periodic maintenance, cleaning the vehicle, etc.

Item		Reference page
Warning lamps and chimes	Make sure that all warning lamps and chimes are operating properly.	—
Windshield wiper and washer	Check that the wipers and washer operate properly and that the wipers do not streak.	—
Windshield defroster	Check that the air comes out of the defroster outlets properly and in sufficient quantity when operating the heater or air conditioner.	—
Steering wheel	Check that it has the specified play. Check for changes in the steering condition, such as excessive play, hard steering or strange noises. Free play: Less than 35 mm (1.38 in)	—

GENERAL MAINTENANCE

< PERIODIC MAINTENANCE >

Item		Reference page
Seats	Check seat position controls such as seat adjusters, seatback recliner, etc. to make sure they operate smoothly and that all latches lock securely in every position. Check that the head restraints move up and down smoothly and that the locks (if equipped) hold securely in all latched positions. Check that the latches lock securely for folding-down rear seatbacks.	—
Seat belts	Check that all parts of the seat belt system (e.g. buckles, anchors, adjusters and retractors) operate properly and smoothly, and are installed securely. Check the belt webbing for cuts, fraying, wear or damage.	MA-51
Accelerator pedal	Check the pedal for smooth operation and make sure the pedal does not catch or require uneven effort. Keep the floor mats away from the pedal.	—
Brakes	Check that the brake does not pull the vehicle to one side when applied.	—
Brake pedal and booster	Check the pedal for smooth operation and make sure it has the proper distance under it when depressed fully. Check the brake booster function. Be sure to keep the floor mats away from the pedal.	BR-7 BR-13
Parking brake	Check that the lever or pedal has the proper travel and make sure that the vehicle is held securely on a fairly steep hill when only the parking brake is applied.	PB-3
Automatic transmission “Park” mechanism	Check that the lock release button on the selector lever operates properly and smoothly. On a fairly steep hill check that the vehicle is held securely with the selector lever in the P (Park) position without applying any brakes.	—

UNDER THE HOOD AND VEHICLE

The maintenance items listed here should be checked periodically (e.g. each time you check the engine oil or refuel).

Item		Reference page
Windshield washer fluid	Check that there is adequate fluid in the tank.	—
Engine coolant level	Check the coolant level when the engine is cold.	CO-8 CO-34
Radiator and hoses	Check the front of the radiator and clean off any dirt, insects, leaves, etc., that may have accumulated. Make sure the hoses have no cracks, deformation, deterioration or loose connections.	MA-25 MA-35
Brake fluid level	Make sure that the brake fluid level is between the “MAX” and “MIN” lines on the reservoir.	MA-47
Battery	Check the fluid level in each cell. It should be between the “MAX” and “MIN” lines. Vehicles operated in high temperatures or under severe conditions require frequent checks of the battery fluid level.	PG-135
Engine drive belts	Make sure that no belt is frayed, worn, cracked or oily.	MA-21 MA-30
Engine oil level	Check the level on the oil level gauge after parking the vehicle on a level spot and turning off the engine.	LU-7 LU-23
Power steering fluid level and lines	Check the level on the dipstick with the engine off. Check the lines for improper attachment, leaks, cracks, etc.	MA-49
Exhaust system	Make sure there are no loose supports, cracks or holes. If the sound of the exhaust seems unusual or there is a smell of exhaust fumes, immediately locate the trouble and correct it.	MA-39
Underbody	The underbody is frequently exposed to corrosive substances such as those used on icy roads or to control dust. It is very important to remove these substances, otherwise rust will form on the floor pan, frame, fuel lines and around the exhaust system. At the end of winter, the underbody should be thoroughly flushed with plain water, being careful to clean those areas where mud and dirt can easily accumulate.	—
Fluid leaks	Check under the vehicle for fuel, oil, water or other fluid leaks after the vehicle has been parked for a while. Water dripping from the air conditioner after use is normal. If you should notice any leaks or gasoline fumes are evident, check for the cause and correct it immediately.	—

FOR MEXICO

GENERAL MAINTENANCE

< PERIODIC MAINTENANCE >

FOR MEXICO : General Maintenance

INFOID:000000007798029

General maintenance includes those items which should be checked during the normal day-to-day operation of the vehicle. They are essential if the vehicle is to continue operating properly. The owners can perform the checks and inspections themselves or they can have their **INFINITI** dealers do them.

OUTSIDE THE VEHICLE

The maintenance items listed here should be performed from time to time, unless otherwise specified.

	Item	Reference page
Lamps	Clean the head lamps on a regular basis. Make sure that the headlamps, stop lamps, tail lamps, turn signal lamps, and other lamps are all operating properly installed securely. Also check the aim of the headlamps.	—
Tires	Check the pressure with a gauge often and always prior to long distance trips. Adjust the pressure in all tires, including the spare, to the pressure specified. Check carefully for damage, cuts or excessive wear.	WT-62
Wiper blades	Check for cracks or wear if not functioning correctly.	—
Doors and engine hood	Check that all doors and the engine hood operate properly. Also make sure that all latches lock securely. Lubricate if necessary. Make sure that the secondary latch keeps the hood from opening when the primary latch is released. When driving in areas using road salt or other corrosive materials, check for lubrication frequently.	MA-51
Tire rotation	Tires should be rotated every 10,000 km (6,000 miles).	MA-45
Tire Pressure Monitoring System (TPMS) transmitter components (if equipped)	Replace the TPMS transmitter grommet seal, valve core and cap when the tires are replaced due to wear or age.	WT-59
Windshield	Clean the windshield on a regular basis. Check the windshield at least every six months for cracks or other damage. Repair as necessary.	—

INSIDE THE VEHICLE

The maintenance items listed here should be checked on a regular basis, such as when performing periodic maintenance, cleaning the vehicle, etc.

	Item	Reference page
Accelerator pedal	Check the pedal for smooth operation and make sure that the pedal does not catch or require uneven effort. Keep the floor mats away from the pedal.	—
Brake pedal	Check the pedal for smooth operation and make sure that it has the proper distance under it when depressed fully. Check the brake booster function. Be sure to keep the floor mats away from the pedal.	BR-7
Parking brake	Check that the lever or the pedal has the proper travel and make sure that the vehicle is held securely on a fairly steep hill when only the parking brake is applied.	PB-3
Warning lamps and chimes	Make sure that all warning lamps and chimes are operating properly.	—
Windshield defogger	Check that the air comes out of the defogger outlets properly and in good quantity when operating the heater or air conditioner.	—
Windshield wiper and washer	Check that the wipers and washer operate properly and that the wipers do not streak.	—
Steering wheel	Check that it has the specified play. Check for changes in the steering conditions, such as excessive free play, hard steering or strange noises. Free play: Less than 35 mm (1.38 in)	—
Seat belts	Check that all parts of the seat belt system (e.g. buckles, anchors, adjusters and retractors) operate properly and smoothly, and are installed securely. Check the belt webbing for cuts, fraying, wear or damage.	MA-51

UNDER THE HOOD AND VEHICLE

The maintenance items listed here should be checked periodically (e.g. each time you check the engine oil or refuel).

GENERAL MAINTENANCE

< PERIODIC MAINTENANCE >

Item		Reference page
Windshield washer fluid	Check that there is adequate fluid in the tank.	—
Engine coolant level	Check the coolant level when the engine is cold.	CO-8 (VQ37) CO-34 (VK56)
Engine drive belts	Make sure that drive belts are not frayed, worn, cracked or oily.	MA-21 (VQ37) MA-30 (VK56)
Engine oil level	Check the level after parking the vehicle (on a level ground) and turning off the engine.	LU-7 (Q37) LU-23 (VK56)
Brake fluid level	Make sure that the brake fluid level is between the “MAX” and “MIN” lines on the reservoirs.	MA-47
Battery	Check the fluid level in each cell. It should be between the “MAX” and “MIN” lines. Vehicles operated in high temperatures or under severe conditions require frequent checks of the battery fluid level.	PG-135
Fluid leaks	Check under the vehicle for fuel, oil, water or other fluid leaks after the vehicle has been parked for a while. Water dripping from the air conditioner after use is normal. If you should notice any leaks or if gasoline fumes are evident, check for cause and have it corrected immediately.	—
Power steering fluid level and lines	Check the level when the fluid is cold, with the engine off. check the lines for proper attachment, leaks, cracks, etc..	MA-49

PERIODIC MAINTENANCE

< PERIODIC MAINTENANCE >

PERIODIC MAINTENANCE FOR NORTH AMERICA

FOR NORTH AMERICA : Introduction of Periodic Maintenance

INFOID:000000006887416

Two different maintenance schedules are provided, and should be used, depending upon the conditions in which the vehicle is mainly operated. **After 60,000 miles (96,000 km) or 48 months, continue the periodic maintenance at the same mileage/time intervals.**

Schedule 1	Follow Periodic Maintenance Schedule 1 if the driving habits frequently include one or more of the following driving conditions: <ul style="list-style-type: none"> Repeated short trips of less than 5 miles (8 km). Repeated short trips of less than 10 miles (16 km) with outside temperatures remaining below freezing. Operating in hot weather in stop-and-go "rush hour" traffic. Extensive idling and/or low speed driving for long distances, such as police, taxi or door-to-door delivery use. Driving in dusty conditions. Driving on rough, muddy, or salt spread roads. Towing a trailer, using a camper or a car-top carrier. 	Emission Control System Maintenance	MA-9
		Chassis and Body Maintenance	
Schedule 2	Follow Periodic Maintenance Schedule 2 if none of driving conditions shown in Schedule 1 apply to the driving habits.	Emission Control System Maintenance	MA-11
		Chassis and Body Maintenance	

FOR NORTH AMERICA : Schedule 1

INFOID:000000006887417

EMISSION CONTROL SYSTEM

Abbreviations: R = Replace. I = Inspect. Correct or replace if necessary. []: At the mileage intervals only

MAINTENANCE OPERATION	Miles x 1,000 (km x 1,000) Months	MAINTENANCE INTERVAL								Reference Section - Page or - Content Title
		3.75 (6)	7.50 (12)	11.25 (18)	15 (24)	18.75 (30)	22.5 (36)	26.25 (42)	30 (48)	
Perform at number of miles, kilometers or months, whichever comes first.		3	6	9	12	15	18	21	24	
Drive belts	NOTE (1)									MA-21 MA-30
Air cleaner filter	NOTE (2)								[R]	MA-26 MA-35
EVAP vapor lines									I*	MA-29 MA-38
Fuel lines									I*	MA-35 MA-25
Fuel filter	NOTE (3)									—
Engine coolant*	NOTE (4)									MA-21 MA-31
Engine oil		R	R	R	R	R	R	R	R	MA-26 MA-36
Engine oil filter (Use genuine NISSAN engine oil filter or equivalent.)		R	R	R	R	R	R	R	R	MA-27 MA-36
Spark plugs (Iridium-tipped type)		Replace every 105,000 miles (168,000 km).								MA-28 MA-37
Intake & exhaust valve clearance*	NOTE (5)									EM-13 EM-168

PERIODIC MAINTENANCE

< PERIODIC MAINTENANCE >

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference Section - Page or - Content Title
		Miles x 1,000 (km x 1,000) Months	33.75 (54) 27	37.5 (60) 30	41.25 (66) 33	45 (72) 36	48.75 (78) 39	52.5 (84) 42	56.25 (90) 45	
Perform at number of miles, kilometers or months, whichever comes first.	Miles x 1,000 (km x 1,000) Months	33.75 (54) 27	37.5 (60) 30	41.25 (66) 33	45 (72) 36	48.75 (78) 39	52.5 (84) 42	56.25 (90) 45	60 (96) 48	
Drive belts	NOTE (1)								I*	MA-21 MA-30
Air cleaner filter	NOTE (2)								[R]	MA-26 MA-35
EVAP vapor lines									I*	MA-29 MA-38
Fuel lines									I*	MA-35 MA-25
Fuel filter	NOTE (3)									—
Engine coolant*	NOTE (4)									MA-21 MA-31
Engine oil		R	R	R	R	R	R	R	R	MA-26 MA-36
Engine oil filter (Use genuine NISSAN engine oil filter or equivalent.)		R	R	R	R	R	R	R	R	MA-27 MA-36
Spark plugs (Iridium-tipped type)		Replace every 105,000 miles (168,000 km).								MA-28 MA-37
Intake & exhaust valve clearance*	NOTE (5)									EM-13 EM-168

NOTE:

- (1) After 60,000 miles (96,000 km) or 48 months, inspect every 15,000 miles (24,000 km) or 12 months. Replace the drive belts if found damaged or if the auto belt tensioner reading reaches the maximum limit.
- (2) If operating mainly in dusty conditions, more frequent maintenance may be required.
- (3) Maintenance-free item. For service procedures, refer to FL section.
- (4) First replacement interval is 105,000 miles (168,000 km) or 84 months. After first replacement, replace every 75,000 miles (120,000 km) or 60 months. Use only Genuine NISSAN Long Life Antifreeze/Coolant (blue) or equivalent with proper mixture ratio of 50% anti-freeze and 50% demineralized or distilled water. Mixing any other type of coolant or the use of non-distilled water will reduce the life expectancy of the factory-fill coolant.
- (5) Periodic maintenance is not required. However, if valve noise increases, inspect valve clearance.

* Maintenance items and intervals with "*" are recommended by INFINITI for reliable vehicle operation. The owner need not perform such maintenance in order to maintain the emission warranty or manufacturer recall liability. Other maintenance items and intervals are required.

CHASSIS AND BODY

Abbreviations: R = Replace. I = Inspect. Correct or replace if necessary.

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference Section - Page or - Content Title
		Miles x 1,000 (km x 1,000) Months	3.75 (6) 3	7.50 (12) 6	11.25 (18) 9	15 (24) 12	18.75 (30) 15	22.5 (36) 18	26.25 (42) 21	
Perform at number of miles, kilometers or months, whichever comes first.	Miles x 1,000 (km x 1,000) Months	3.75 (6) 3	7.50 (12) 6	11.25 (18) 9	15 (24) 12	18.75 (30) 15	22.5 (36) 18	26.25 (42) 21	30 (48) 24	
Brake lines & cables					I				I	MA-47
Brake fluid					R				R	MA-47
Brake pads & rotors			I		I		I		I	MA-48
Transfer fluid & differential gear oil	NOTE (1)				I				I	MA-39 MA-42 MA-43 MA-44
Automatic transmission fluid	NOTE (2)									—

PERIODIC MAINTENANCE

< PERIODIC MAINTENANCE >

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference Section - Page or - Content Title
Perform at number of miles, kilometers or months, whichever comes first.	Miles x 1,000 (km x 1,000) Months	3.75 (6) 3	7.50 (12) 6	11.25 (18) 9	15 (24) 12	18.75 (30) 15	22.5 (36) 18	26.25 (42) 21	30 (48) 24	
Steering gear & linkage, axle & suspension parts			I		I		I		I	MA-49 MA-50
Tire rotation	NOTE (3)									MA-5 MA-45
Drive shaft boots and propeller shaft (AWD models)			I		I		I		I	MA-50 MA-40 MA-41 MA-41
Exhaust system			I		I		I		I	MA-39
In-cabin microfilter					R				R	VTL-18

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference Section - Page or - Content Title
Perform at number of miles, kilometers or months, whichever comes first.	Miles x 1,000 (km x 1,000) Months	33.75 (54) 27	37.5 (60) 30	41.25 (66) 33	45 (72) 36	48.75 (78) 39	52.5 (84) 42	56.25 (90) 45	60 (96) 48	
Brake lines & cables					I				I	MA-47
Brake fluid					R				R	MA-47
Brake pads & rotors			I		I		I		I	MA-48
Transfer fluid & differential gear oil	NOTE (1)				I				I	MA-39 MA-42 MA-43 MA-44
Automatic transmission fluid	NOTE (2)									—
Steering gear & linkage, axle & suspension parts			I		I		I		I	MA-49 MA-50
Tire rotation	NOTE (3)									MA-5 MA-45
Drive shaft boots and propeller shaft (AWD models)			I		I		I		I	MA-50 MA-40 MA-41 MA-41
Exhaust system			I		I		I		I	MA-39
In-cabin microfilter					R				R	VTL-18

NOTE:

- (1) If towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads, change (not just inspect) fluid /oil at every 30,000 miles (48,000 km) or 24 months.
- (2) Automatic transmission fluid is maintenance-free.
- (3) Refer to "Tire rotation" under the "General maintenance" heading earlier in this section.

FOR NORTH AMERICA : Schedule 2

INFOID:000000006887418

EMISSION CONTROL SYSTEM

MA

PERIODIC MAINTENANCE

< PERIODIC MAINTENANCE >

Abbreviations: R = Replace. I = Inspect. Correct or replace if necessary. []: At the mileage intervals only

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference Section - Page or - Content Title
Perform at number of miles, kilometers or months, whichever comes first.	Miles x 1,000 (km x 1,000) Months	7.5 (12) 6	15 (24) 12	22.5 (36) 18	30 (48) 24	37.5 (60) 30	45 (72) 36	52.5 (84) 42	60 (96) 48	
Drive belts	NOTE (1)								I*	MA-21 MA-30
Air cleaner filter					[R]				[R]	MA-26 MA-35
EVAP vapor lines					I*				I*	MA-29 MA-38
Fuel lines					I*				I*	MA-35 MA-25
Fuel filter	NOTE (2)									—
Engine coolant*	NOTE (3)									MA-21 MA-31
Engine oil		R	R	R	R	R	R	R	R	MA-26 MA-36
Engine oil filter (Use genuine NISSAN engine oil filter or equivalent.)		R	R	R	R	R	R	R	R	MA-27 MA-36
Spark plugs (Iridium-tipped type)		Replace every 105,000 miles (168,000 km).								MA-28 MA-37
Intake & exhaust valve clearance*	NOTE (4)									EM-13 EM-168

NOTE:

(1) After 60,000 miles (96,000 km) or 48 months, inspect every 15,000 miles (24,000 km) or 12 months. Replace the drive belts if found damaged or if the auto belt tensioner reading reaches the maximum limit.

(2) Maintenance-free item. For service procedures, refer to FL section.

(3) First replacement interval is 105,000 miles (168,000 km) or 84 months. After first replacement, replace every 75,000 miles (120,000 km) or 60 months. Use only Genuine NISSAN Long Life Antifreeze/Coolant (blue) or equivalent with proper mixture ratio of 50% anti-freeze and 50% demineralized or distilled water. Mixing any other type of coolant or the use of non-distilled water will reduce the life expectancy of the factory-fill coolant.

(4) Periodic maintenance is not required. However, if valve noise increases, inspect valve clearance.

* Maintenance items and intervals with "*" are recommended by INFINITI for reliable vehicle operation. The owner need not perform such maintenance in order to maintain the emission warranty or manufacturer recall liability. Other maintenance items and intervals are required.

CHASSIS AND BODY

Abbreviations: R = Replace. I = Inspect. Correct or replace if necessary.

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference Section - Page or - Content Title
Perform at number of miles, kilometers or months, whichever comes first.	Miles x 1,000 (km x 1,000) Months	7.5 (12) 6	15 (24) 12	22.5 (36) 18	30 (48) 24	37.5 (60) 30	45 (72) 36	52.5 (84) 42	60 (96) 48	
Brake lines & cables			I		I		I		I	MA-47
Brake fluid					R				R	MA-47
Brake pads & rotors			I		I		I		I	MA-48
Transfer fluid & differential gear oil			I		I		I		I	MA-39 MA-42 MA-43 MA-44
Automatic transmission fluid	NOTE (1)									—
Steering gear & linkage, axle & suspension parts					I				I	MA-49 MA-50

PERIODIC MAINTENANCE

< PERIODIC MAINTENANCE >

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference Section - Page or - Content Title
Perform at number of miles, kilometers or months, whichever comes first.	Miles x 1,000 (km x 1,000) Months	7.5 (12) 6	15 (24) 12	22.5 (36) 18	30 (48) 24	37.5 (60) 30	45 (72) 36	52.5 (84) 42	60 (96) 48	
Tire rotation	NOTE (2)									MA-5 MA-45
Drive shaft boots and propeller shaft (AWD models)			I		I		I		I	MA-50 MA-40 MA-41 MA-41
Exhaust system					I				I	MA-39
In-cabin microfilter			R		R		R		R	VTL-18

NOTE:

- (1) Automatic transmission fluid is maintenance-free.
- (2) Refer to "Tire rotation" under the "General maintenance" heading earlier in this section.

FOR MEXICO

FOR MEXICO : Periodic Maintenance

INFOID:000000007798181

The following tables show the normal maintenance schedule. Depending upon weather and atmospheric conditions, varying road surfaces, individual driving habits and vehicle usage, additional or more frequent maintenance may be required.

Periodic maintenance beyond the last period shown on the tables requires similar maintenance.

ENGINE AND EMISSION CONTROL MAINTENANCE

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace, E = Check and correct the engine coolant mixture ratio.

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference page
Perform at a kilometers (miles) or month interval, whichever comes first.	km x 1,000 (Miles x 1,000) Months	10 (6) 6	20 (12) 12	30 (18) 18	40 (24) 24	50 (30) 30	60 (36) 36	70 (42) 42	80 (48) 48	
Underhood and under vehicle										
Intake & exhaust valve clearance	See NOTE (1)									EM-13 EM-168
Drive belt	See NOTE (2)				I				I	MA-21 MA-30
Engine oil (Use recommended oil.)★		R	R	R	R	R	R	R	R	MA-26 MA-36
Engine oil filter (Use genuine NISSAN engine oil filter or equivalent)★		R	R	R	R	R	R	R	R	MA-27 MA-36
Engine coolant (Use Genuine NISSAN Engine Coolant or equivalent in its quality.)	See NOTE (3)					E			R	MA-21 MA-31
Cooling system						I			I	CO-8 CO-34 MA-24 MA-34 MA-25 MA-35
Fuel lines						I			I	MA-25 MA-35
Air cleaner filter (Viscous paper type)★						R			R	MA-26 MA-35
Fuel filter (In-tank type)	See NOTE (4)									—

PERIODIC MAINTENANCE

< PERIODIC MAINTENANCE >

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference page
Perform at a kilometers (miles) or month interval, whichever comes first.	km × 1,000 (Miles × 1,000) Months	10 (6) 6	20 (12) 12	30 (18) 18	40 (24) 24	50 (30) 30	60 (36) 36	70 (42) 42	80 (48) 48	
Spark plugs (Iridium-tipped type)	See NOTE (5)	Replace every 100,000 km (60,000 miles)								MA-28 MA-37
EVAP vapor lines (With carbon canister)					I				I	MA-29 MA-38

NOTE:

- Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.
- (1) Periodic maintenance is not required. However, if valve noise increases, check valve clearance.
- (2) Replace the drive belts if found damaged or if the auto belt tensioner reading reaches the maximum limit.
- (3) Use Genuine NISSAN Engine Coolant or equivalent in its quality, in order to avoid possible aluminum corrosion within the engine cooling system caused by the use of non-genuine engine coolant. After first replacement, replace every 40,000 km (24,000 miles) or 24 months.
- (4) Maintenance-free item.
- (5) Replace spark plug when the spark plug gap exceeds 1.4 mm (0.055 in) even if within specified periodic replacement mileage.

CHASSIS AND BODY MAINTENANCE

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace.

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference page
Perform at a kilometers (miles) or month interval, whichever comes first.	km × 1,000 (Miles × 1,000) Months	10 (6) 6	20 (12) 12	30 (18) 18	40 (24) 24	50 (30) 30	60 (36) 36	70 (42) 42	80 (48) 48	
Underhood and under vehicle										
Brake line & cables			I		I		I		I	MA-47
Brake fluid (For level & leaks)			I		I		I		I	MA-47
Brake fluid★					R				R	MA-47
Exhaust system					I				I	MA-39
Power steering fluid & lines (For level & leaks)			I		I		I		I	MA-49
Automatic transmission fluid	See NOTE (1)									—
Differential gear oil (For level & leaks)★			I		I		I		I	MA-43 MA-44
Steering gear & linkage, axle & suspension parts★					I				I	MA-49 MA-50
Outside and inside										
Wheel alignment (If necessary, balance wheels)			I		I		I		I	FSU-7 RSU-6 MA-45
Brake pads, rotors, drums & linings★			I		I		I		I	MA-48 BR-14 BR-16
Foot brake & parking brake (For free play, stroke & operation)			I		I		I		I	BR-7 PB-3
Air conditioner filter★			R		R		R		R	VTL-18

NOTE:

- Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.
- (1) Automatic transmission fluid is maintenance-free.

PERIODIC MAINTENANCE

< PERIODIC MAINTENANCE >

MAINTENANCE UNDER SEVERE DRIVING CONDITIONS

The maintenance intervals shown on the preceding pages are for normal operating conditions. If the vehicle is mainly operated under severe driving conditions as shown below, more frequent maintenance must be performed on the following items as shown in the table.

Severe driving conditions

A — Driving under dusty conditions

B — Driving repeatedly short distances

C — Towing a trailer or caravan

D — Extensive idling

E — Driving in extremely adverse weather conditions or in areas where ambient temperatures are either extremely low or extremely high

F — Driving in high humidity or mountainous areas

G — Driving in areas using salt or other corrosive areas

H — Driving on rough and/or muddy roads or in the desert

I — Driving with frequent use of braking or in mountainous areas

J — Frequent driving in water

Maintenance operation: Inspect = Check and correct or replace as necessary

Driving condition										Maintenance item	Maintenance operation	Reference page	Maintenance interval
A	Air cleaner filter (Viscous paper type)	Replace	More frequently	MA-26 MA-35
A	B	C	D	Engine oil & engine oil filter	Replace	Every 5,000 km (3,000 miles) or 3 months	MA-26 MA-36 MA-27 MA-36
.	F	Brake fluid	Replace	Every 20,000 km (12,000 miles) or 12 months	MA-47
.	.	C	H	.	.	Differential gear oil	Replace	Every 40,000 km (24,000 miles) or 24 months	MA-43 MA-44
.	G	H	.	.	Steering gear & linkage, axle & suspension parts	Inspect	Every 20,000 km (12,000 miles) or 12 months	MA-49 MA-50
A	.	C	.	.	.	G	H	I	.	Brake pads, rotors, drums & linings	Inspect	Every 10,000 km (6,000 miles) or 6 months	MA-48 BR-14 BR-16
A	Air conditioner filter	Replace	More frequently	VTL-18

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

MA

RECOMMENDED FLUIDS AND LUBRICANTS

< PERIODIC MAINTENANCE >

RECOMMENDED FLUIDS AND LUBRICANTS FOR NORTH AMERICA

FOR NORTH AMERICA : Fluids and Lubricants

INFOID:000000006887419

			Capacity (Approximate)			Recommended Fluids/Lubricants
			US measure	Imp measure	Liter	
Engine oil Drain and refill	With oil filter change	VQ37VHR	5-1/8 qt	4-1/4 qt	4.9	<ul style="list-style-type: none"> • Engine oil with API Certification Mark*¹, *² • Viscosity SAE 5W-30*¹, *²
		VK56VD (2WD)	6-3/8 qt	5-2/8 qt	6.0	
		VK56VD [4WD (AWD)]	6-4/8 qt	5-3/8 qt	6.1	
	Without oil fil- ter change	VQ37VHR	4-7/8 qt	4 qt	4.6	
		VK56VD (2WD)	6 qt	5 qt	5.7	
		VK56VD [4WD (AWD)]	6-1/8 qt	5-1/8 qt	5.8	
Dry engine (Overhaul)		VQ37VHR	6 qt	5 qt	5.7	
		VK56VD	7-5/8 qt	6-3/8 qt	7.2	
Cooling system	With reservoir tank	VQ37VHR	8-7/8 qt	7-3/8 qt	8.4	Pre-diluted Genuine NISSAN Long Life Anti- freeze/ Coolant (blue) or equivalent
		VK56VD	11-4/8 qt	9-5/8 qt	10.9	
	Reservoir tank		7/8 qt	3/4 qt	0.8	
Automatic transmission fluid		VQ37VHR	9-3/4 qt* ⁹	8-1/8 qt* ⁹	9.2* ⁹	Genuine NISSAN Matic S ATF* ³
		VK56VD	10-5/8 qt* ⁹	8-3/4 qt* ⁹	10.0* ⁹	
Differential gear oil	Front		1-3/8 pt	1-1/8 pt	0.65	Genuine NISSAN Differential Oil Hypoid Su- per GL-5 80W-90 or API GL-5, Viscosity SAE 80W-90* ⁴
	Rear	VQ37VHR	3 pt	2-1/2 pt	1.40	API GL-5 synthetic gear oil, Viscosity SAE 75W-90* ⁵
		VK56VD	2-3/8 pt	2 pt	1.15	
Transfer fluid			2-1/8 pt	1-3/4 pt	1.0	Genuine NISSAN Matic J ATF* ⁶
Power steering fluid (PSF)			1-1/8 qt	7/8 qt	1.0	Genuine NISSAN PSF or equivalent* ⁷
Brake fluid			—	—	—	Genuine NISSAN Super Heavy Duty Brake Fluid* ⁸ or equivalent DOT 3 (US FMVSS No. 116)
Multi-purpose grease			—	—	—	NLGI No. 2 (Lithium soap base)
Windshield washer fluid			—	—	—	Genuine NISSAN Windshield Washer Con- centrate Cleaner & Antifreeze or equivalent
Fuel recommendation			—	—	—	Refer to GI-28, "Fuel" .

*1: For additional information, see "Engine Oil Recommendation".

*2: INFINITI recommends Genuine NISSAN Ester Engine Oil available at your INFINITI dealer.

*3: Using automatic transmission fluid other than Genuine NISSAN Matic S ATF will cause deterioration in driveability and automatic transmission durability, and may damage the automatic transmission, which is not covered by the INFINITI new vehicle limited warranty.

*4: For hot climates, viscosity SAE 90 is suitable for ambient temperatures above 0°C (32°F).

*5: See an INFINITI dealer for service for synthetic oil.

*6: Using transfer fluid other than Genuine NISSAN Matic J ATF will cause deterioration in driveability and transfer durability, and may damage the transfer, which is not covered by the INFINITI new vehicle limited warranty.

*7: DEXRON™ VI type ATF may also be used.

*8: Available in mainland U.S.A. through an INFINITI dealer.

*9: The fluid capacity is the reference value.


RECOMMENDED FLUIDS AND LUBRICANTS

< PERIODIC MAINTENANCE >

FOR NORTH AMERICA : Engine Oil Recommendation

INFOID:000000006887420

NISSAN recommends the use of an energy conserving oil in order to improve fuel economy. Select only engine oils that meet the American Petroleum Institute (API) certification and International Lubricant Standardization and Approval Committee (ILSAC) certification and SAE viscosity standard. These oils have the API certification mark on the front of the container. Oils which do not have the specified quality label should not be used as they could cause engine damage.

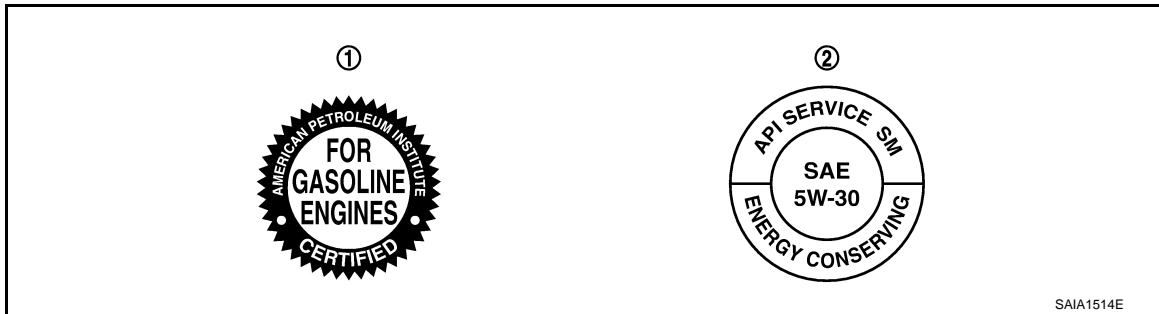

1. API certification mark
2. API service symbol

FOR NORTH AMERICA : Anti-Freeze Coolant Mixture Ratio

INFOID:000000006887421

The engine cooling system is filled at the factory with a pre-diluted mixture of 50% Genuine NISSAN Long Life Antifreeze/Coolant (blue) and 50% water to provide year-round anti-freeze and coolant protection. The anti-freeze solution contains rust and corrosion inhibitors. Additional engine cooling system additives are not necessary.

WARNING:

- Never remove the radiator or coolant reservoir cap when the engine is hot. Wait until the engine and radiator cool down. Serious burns could be caused by high pressure fluid escaping from the radiator.
- The radiator is equipped with a pressure type radiator cap. To prevent engine damage, use only a genuine NISSAN radiator cap.

CAUTION:

- When adding or replacing coolant, be sure to use only Genuine NISSAN Long Life Antifreeze/Coolant (blue) or equivalent. Genuine NISSAN Long Life Antifreeze/Coolant (blue) is pre-diluted to provide antifreeze protection to -34°F (-37°C). If additional freeze protection is needed due to weather where you operate your vehicle, add Genuine NISSAN Long Life Antifreeze/Coolant (blue) concentrate following the directions on the container. If an equivalent coolant other than Genuine NISSAN Long Life Antifreeze/Coolant (blue) is used, follow the coolant manufacturer's instructions to maintain minimum antifreeze protection to -34°F (-37°C). The use of other types of coolant solutions other than Genuine NISSAN Long Life Antifreeze/Coolant (blue) or equivalent may damage the engine cooling system.
- Mixing any other type of coolant other than Genuine NISSAN Long Life Antifreeze/Coolant (blue), including Genuine NISSAN Long Life Antifreeze/Coolant (green), or the use of non-distilled water will reduce the life expectancy of the factory-fill coolant.

FOR MEXICO

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

MA

RECOMMENDED FLUIDS AND LUBRICANTS

< PERIODIC MAINTENANCE >

FOR MEXICO : Fluids and Lubricants

INFOID:000000007798233

			Capacity (Approximate)		Recommended Fluids/Lubricants
			Liter	Imp measure	
Engine oil Drain and refill	With oil filter change	VQ37VHR	4.9	4-1/4 qt	Genuine NISSAN engine oil API grade SL or SM ^{*1} ILSAC grade GF-2, GF-3 or GF-4 ^{*1}
		VK56VD	6.0	5-2/8 qt	
	Without oil filter change	VQ37VHR	4.6	4 qt	
		VK56VD	5.7	5 qt	
Dry engine (engine overhaul)		VQ37VHR	5.7	5 qt	
		VK56VD	7.2	6-3/8 qt	
Cooling system (with reservoir)		VQ37VHR	8.4	7-3/8 qt	Genuine NISSAN Engine Coolant or equivalent in its quality ^{*2}
		VK56VD	10.9	9-5/8 qt	
Reservoir tank		VQ37VHR	0.8	3/4 qt	
		VK56VD	0.8	3/4 qt	
Automatic transmission fluid		VQ37VHR	9.2 ^{*4}	8-1/8 qt ^{*4}	Genuine NISSAN Matic S ATF ^{*3}
		VK56VD	10.0 ^{*4}	8-3/4 qt ^{*4}	
Differential gear oil		VQ37VHR	1.40	2-1/2 pt	Genuine NISSAN Differential Oil Hypoid Super-S GL-5 Synthetic 75W-90 or equiv- alent ^{*5}
		VK56VD	1.15	2 pt	
Power steering fluid (PSF)			1.0	7/8 qt	Genuine NISSAN PSF or equivalent ^{*6}
Brake fluid			—	—	Genuine NISSAN Brake Fluid, or equiva- lent DOT 3 (US FMVSS No.116)
Multi-purpose grease			—	—	NLGI No. 2 (Lithium soap base)

*1: For additional information, see "SAE Viscosity Number".

*2: Use Genuine NISSAN Engine Coolant or equivalent in its quality, in order to avoid possible aluminum corrosion within the engine cooling system caused by the use of non-genuine engine coolant.

Note that any repairs for the incidents within the engine cooling system while using non-genuine engine coolant may not be covered by the warranty even if such incidents occurred during the warranty period.

*3: Using automatic transmission fluid other than Genuine NISSAN Matic S ATF will cause deterioration in driveability and automatic transmission durability, and may damage the automatic transmission, which is not covered by warranty.

*4: The fluid capacity is the reference value.

*5: See an INFINITI dealer for service for synthetic oil.

*6: DEXRON™ VI type ATF may also be used.

FOR MEXICO : SAE Viscosity Number

INFOID:000000007798234

GASOLINE ENGINE

For VK56VD engine:


RECOMMENDED FLUIDS AND LUBRICANTS

< PERIODIC MAINTENANCE >

- 10W-30 is preferable.
If 10W-30 is not available, select the viscosity, from the chart, that is suitable for the outside temperature range.
- For VQ37VHR engine:
 - 5W-30 is preferable.
If 5W-30 is not available, select the viscosity, from the chart, that is suitable for the outside temperature range.

Outside Temperature Range Anticipated Before Next Oil Change

GASOLINE ENGINE OIL

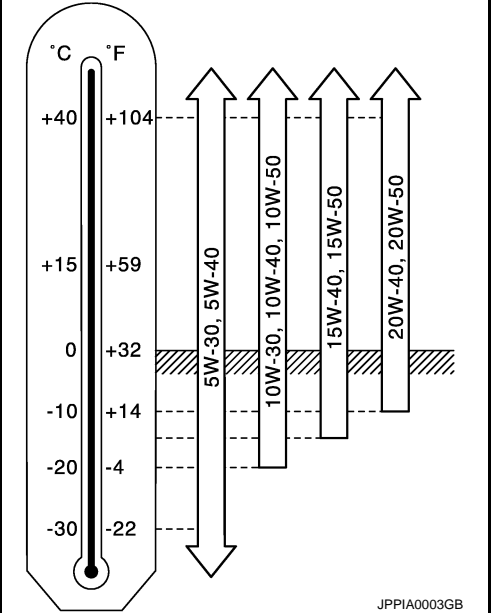


DIFFERENTIAL GEAR OIL

- 75W-90 for the differential gear is preferable.

Outside Temperature Range Anticipated Before Next Oil Change

DIFFERENTIAL GEAR OIL

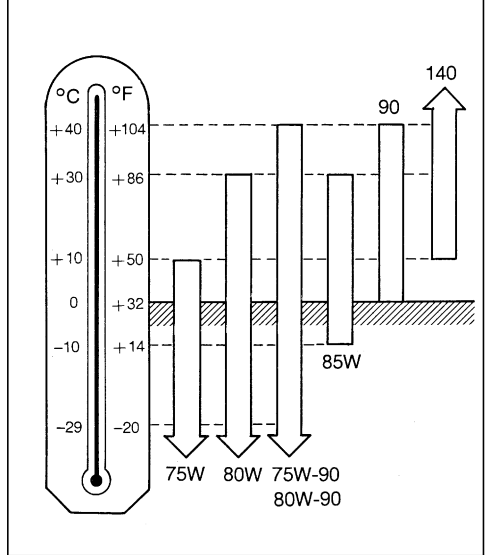

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

MA

RECOMMENDED FLUIDS AND LUBRICANTS

< PERIODIC MAINTENANCE >

FOR MEXICO : Engine Coolant Mixture Ratio

INFOID:000000007798235

The engine cooling system is filled at the factory with a high-quality, year-round and extended life engine coolant. The high quality engine coolant contains the specific solutions effective for the anti-corrosion and the anti-freeze function. Therefore, additional cooling system additives are not necessary.

CAUTION:

- When adding or replacing coolant, be sure to use only Genuine NISSAN Engine Coolant or equivalent in its quality with the proper mixture ratio. See the examples shown right.

The use of other types of engine coolant may damage the engine cooling system.

- When checking the engine coolant mixture ratio by the coolant hydrometer, use the chart below to correct your hydrometer reading (specific gravity) according to coolant temperature.

Outside temperature down to		Composition	
°C	°F	Engine coolant (Concentrated)	Demineralized water or distilled water
-15	5	30%	70%
-35	-30	50%	50%

SMA089D

Mixed coolant specific gravity

Unit: specific gravity

Engine coolant mixture ratio	Coolant temperature °C (°F)			
	15 (59)	25 (77)	35 (95)	45 (113)
30%	1.046 - 1.050	1.042 - 1.046	1.038 - 1.042	1.033 - 1.038
50%	1.076 - 1.080	1.070 - 1.076	1.065 - 1.071	1.059 - 1.065

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator. Wait until the engine and radiator cool down.

ENGINE MAINTENANCE (VQ37VHR)


< PERIODIC MAINTENANCE >

ENGINE MAINTENANCE (VQ37VHR)

DRIVE BELT

DRIVE BELT : Exploded View

INFOID:000000006887422

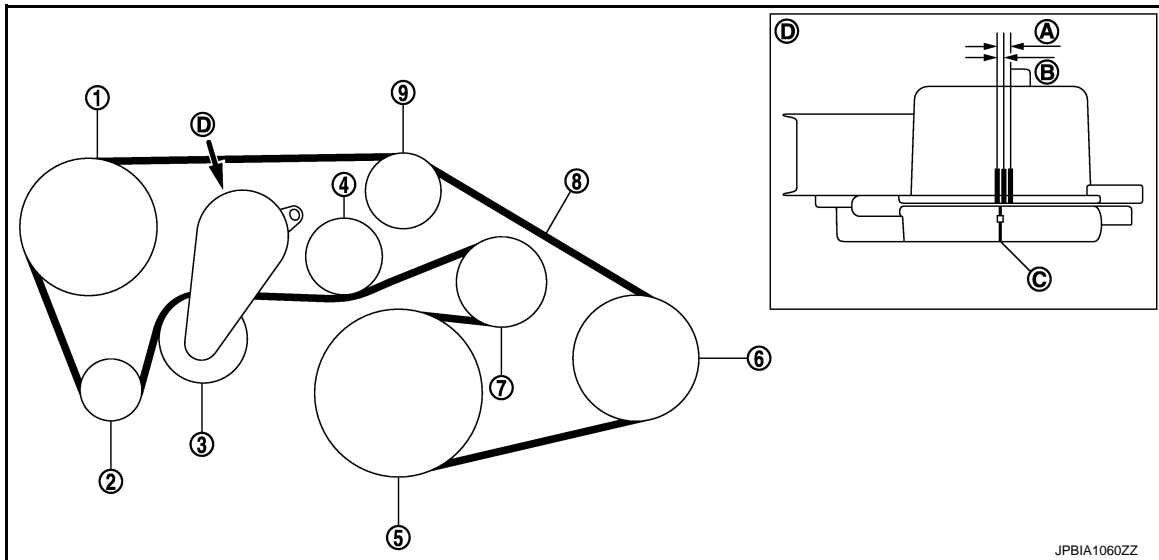

- | | | |
|----------------------------|---|------------------------------|
| 1. Power steering oil pump | 2. Alternator | 3. Drive belt auto-tensioner |
| 4. Idler pulley | 5. Crankshaft pulley | 6. A/C compressor |
| 7. Idler pulley | 8. Drive belt | 9. Idler pulley |
| A. Possible use range | B. Range when new drive belt is installed | C. Indicator |
| D. View D | | |

DRIVE BELT : Checking

INFOID:000000006887423

WARNING:

Be sure to perform the this step when engine is stopped.

- Check that the indicator (C) (notch on fixed side) of drive belt auto-tensioner is within the possible use range (A).

NOTE:

- Check the drive belt auto-tensioner indication when the engine is cold.
- When new drive belt is installed, the indicator (notch on fixed side) should be within the range (B) in the figure.
- Visually check the entire drive belt for wear, damage or crack.
- If the indicator (notch on fixed side) is out of the possible use range or belt is damaged, replace drive belt.

DRIVE BELT : Tension Adjustment

INFOID:000000006887424

Refer to [EM-148. "Drive Belt"](#).

ENGINE COOLANT

ENGINE COOLANT : Draining

INFOID:000000007798522

WARNING:

- To avoid being scalded, never change engine coolant when the engine is hot.
- Wrap a thick cloth around radiator cap and carefully remove radiator cap. First, turn radiator cap a quarter of a turn to release built-up pressure. Then turn radiator cap all the way.
- Never spill engine coolant on drive belt.

1. Connect drain hose.

NOTE:


MA

ENGINE MAINTENANCE (VQ37VHR)

< PERIODIC MAINTENANCE >


Use a general-purpose hose with the dimensions shown in the figure.

- A : ϕ 15 - 16 mm (0.59 - 0.63 in)
- B : 145 mm (5.17 in)

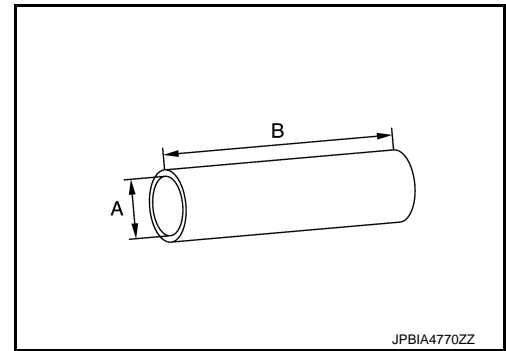

2. Open radiator drain plug (1) at the bottom of radiator, and then remove radiator cap.

- A : Radiator drain plug hole
- ↶ : Vehicle front

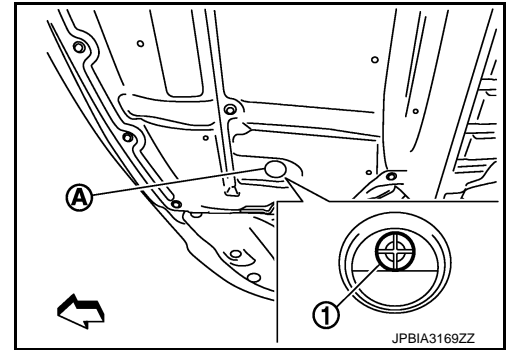

When draining all of engine coolant in the system, open water drain plugs on cylinder block. Refer to [EM-81, "Setting"](#).

3. Remove reservoir tank if necessary, and drain engine coolant and clean reservoir tank before installing.
4. Check drained engine coolant for contaminants such as rust, corrosion or discoloration. If contaminated, flush the engine cooling system. Refer to [CO-10, "Flushing"](#).
5. Disconnect drain hose.

ENGINE COOLANT : Refilling

INFOID:000000007176965

CAUTION:

- Do not reuse O-rings.
- Do not put additive such as waterleak preventive, since it may cause cooling waterway clogging.
- Refill Genuine NISSAN Long Life Antifreeze/Coolant (blue) or equivalent in its quality mixed with water (distilled or demineralized). Refer to [MA-16, "FOR NORTH AMERICA : Fluids and Lubricants"](#) (FOR NORTH AMERICA), [MA-18, "FOR MEXICO : Fluids and Lubricants"](#) (FOR MEXICO).

1. Remove air cleaner case (LH) and air duct (inlet). Refer to [EM-29, "Exploded View"](#).
2. Install reservoir tank if removed, and radiator drain plug.

CAUTION:

Be sure to clean drain plug and install with new O-ring.

Tightening torque : Refer to [CO-14, "Exploded View"](#).

If water drain plugs on cylinder block are removed, close and tighten them. Refer to [EM-81, "Setting"](#).


3. Check that each hose clamp has been firmly tightened.

ENGINE MAINTENANCE (VQ37VHR)

< PERIODIC MAINTENANCE >

4. Remove air relief plug (1) on radiator left side.


↔ : Vehicle front

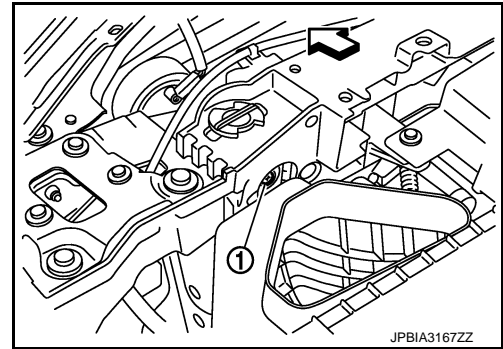

5. Fill up the radiator with cooling water.
Pour engine coolant through engine coolant filler neck slowly of less than 2 ℓ (2-1/8 US qt, 1-3/4 Imp qt) a minute to allow air in system to escape.

Engine coolant capacity
(With reservoir tank at
“MAX” level)

: Refer to [CO-27,](#)
["Periodical Maintenance](#)
[e Specification".](#)

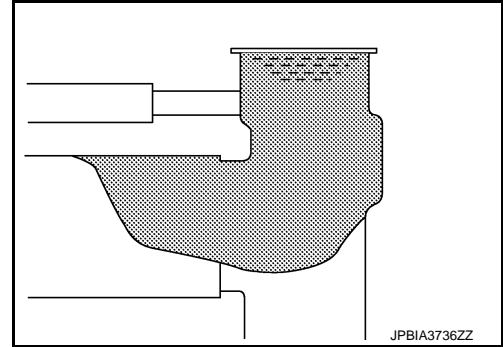

Reservoir tank engine coolant capacity
(At “MAX” level)


:Refer to [CO-27,](#)
["Periodical Maintenance Specification"](#)

A : MAX
B : MIN

6. When engine coolant overflows air relief hole on radiator, install air relief plug with new O-ring.

CAUTION:
Do not reuse O-rings.

Tightening torque : Refer to [CO-14, "Exploded View".](#)

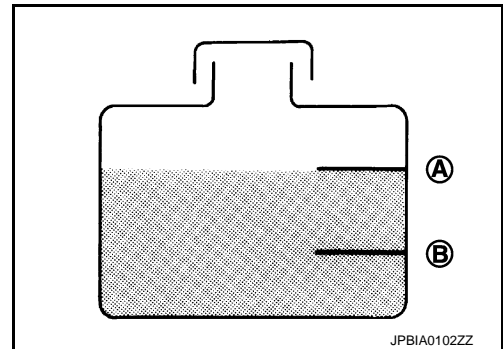

7. Refill reservoir tank to “MAX” level line with engine coolant.
8. Install air cleaner case (LH) and air duct (inlet). Refer to [EM-29, "Exploded View".](#)
9. Install radiator cap.
10. Warm up engine until opening thermostat. Standard for warming-up time is approximately 10 minutes at 3,000 rpm.
- Check thermostat opening condition by touching radiator hose (lower) to see a flow of warm water.
- CAUTION:**
Watch water temperature gauge so as not to overheat engine.
11. Stop the engine and cool down to less than approximately 50°C (122°F).
- Cool down using fan to reduce the time.
 - If necessary, refill radiator up to filler neck with engine coolant.
 - Remove the radiator cap to check the fluid level. If the fluid level is low, refill with cooling water and repeat the steps from Step 7.
12. Refill reservoir tank to “MAX” level line with engine coolant.
13. Check cooling system for leakage with engine running.
14. Check flow noise, according to the following steps.

CAUTION:

To check flow noise, turn OFF the radio and close the windows, doors, and the hood.

ENGINE MAINTENANCE (VQ37VHR)

< PERIODIC MAINTENANCE >

- Allow the engine to become cold (approximately 50°C or less).
- Start the engine, maintain 1000 rpm for approximately 30 seconds, and increase the engine speed from 1000 to 3000 rpm. Repeat this cycle three times.
- Check that flow noise can be heard from the heater core during the Step b operation.
- If flow noise can be heard, repeat from Step 12 of Refilling to Step c of Flow Noise Verification Method.
- Check that the reservoir tank cap is tightened.

ENGINE COOLANT : Flushing

INFOID:000000006887427

1. Install reservoir tank if removed, and radiator drain plug.

CAUTION:


Be sure to clean drain plug and install with new O-ring.

Tightening torque : Refer to [CO-14, "Exploded View"](#).

If water drain plugs on cylinder block are removed, close and tighten them. Refer to [EM-81, "Setting"](#).

2. Remove air relief plug (1) on radiator.

← : Vehicle front

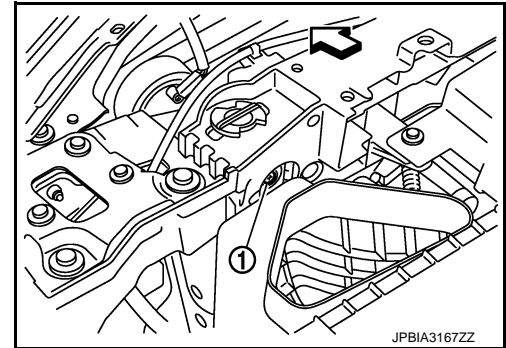

3. Fill radiator with water until water spills from the air relief holes, then close air relief plugs. Fill radiator and reservoir tank with water and reinstall radiator cap.

Tightening torque : Refer to [CO-14, "Exploded View"](#).

4. Run the engine and warm it up to normal operating temperature.
5. Rev the engine two or three times under no-load.
6. Stop the engine and wait until it cools down.
7. Drain water from the system. Refer to [CO-8, "Draining"](#).
8. Repeat steps 1 through 7 until clear water begins to drain from radiator.
9. Check that the reservoir tank cap is tightened.

RADIATOR CAP


RADIATOR CAP : Inspection

INFOID:000000006887428

- Check valve seat (A) of radiator cap.

B : Metal plunger


- Check if valve seat is swollen to the extent that the edge of the plunger (B) cannot be seen when watching it vertically from the top.
- Check if valve seat has no soil and damage.

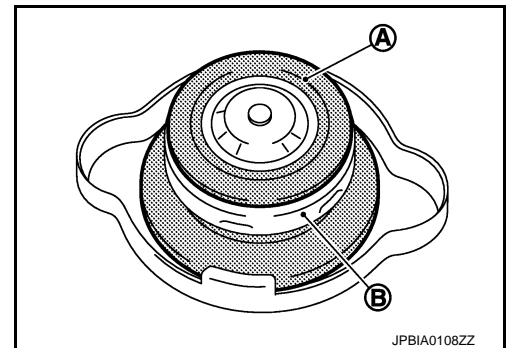

ENGINE MAINTENANCE (VQ37VHR)

< PERIODIC MAINTENANCE >


- Pull negative-pressure valve to open it, and check that it close completely when released.
- Check that there is no dirt or damage on the valve seat of radiator cap negative-pressure valve.
- Check that there are no unusualness in the opening and closing conditions of negative-pressure valve.

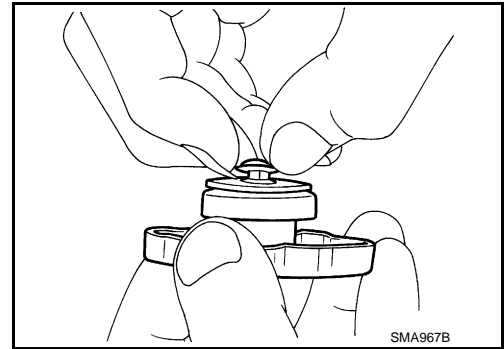

- Check radiator cap relief pressure.

Standard and limit : Refer to [CO-27, "Radiator"](#).

- When connecting radiator cap to the radiator cap tester and the radiator cap tester adapter (commercial service tool) (A), apply engine coolant to the cap seal surface.

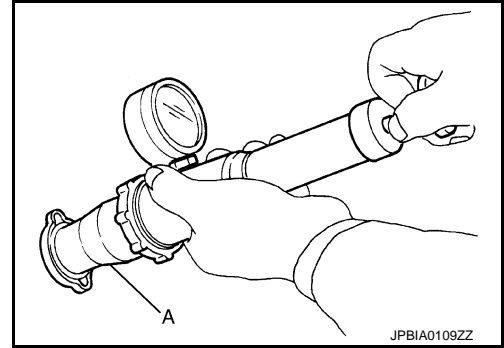

- Replace radiator cap if there is an unusualness related to the above three.

CAUTION:

When installing radiator cap, thoroughly wipe out the water outlet (front) filler neck to remove any waxy residue or foreign material.

RADIATOR

RADIATOR : Inspection

INFOID:000000006887429

Check radiator for mud or clogging. If necessary, clean radiator as follows:

- Be careful not to bend or damage radiator fins.
 - When radiator is cleaned without removal, remove all surrounding parts such as radiator cooling fan assembly and horns. Then tape harness and connectors to prevent water from entering.
1. Apply water by hose to the back side of the radiator core vertically downward.
 2. Apply water again to all radiator core surfaces once per minute.
 3. Stop washing if any stains no longer flow out from radiator.
 4. Blow air into the back side of radiator core vertically downward.
 - Use compressed air lower than 490 kPa (5 kg/cm², 71 psi) and keep distance more than 30 cm (11.8 in).
 5. Blow air again into all the radiator core surfaces once per minute until no water sprays out.

FUEL LINES


FUEL LINES : Inspection

INFOID:000000006887430

Inspect fuel lines, fuel filler cap and fuel tank for improper attachment, leakage, cracks, damage, loose connections, chafing or deterioration.

- A : Engine
- B : Fuel line
- C : Fuel tank

If necessary, repair or replace damaged parts.

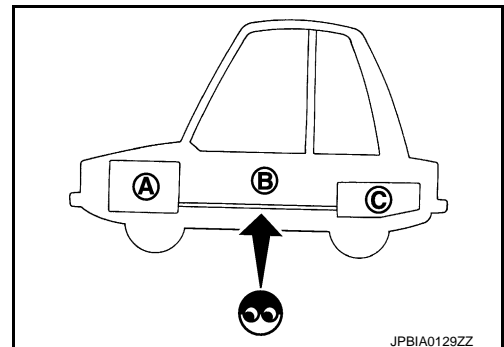

ENGINE MAINTENANCE (VQ37VHR)

< PERIODIC MAINTENANCE >

AIR CLEANER FILTER


AIR CLEANER FILTER : Removal and Installation

INFOID:000000006887431


REMOVAL

1. Unhook clips (A).

- 1 : Holder
- 2 : Air cleaner case

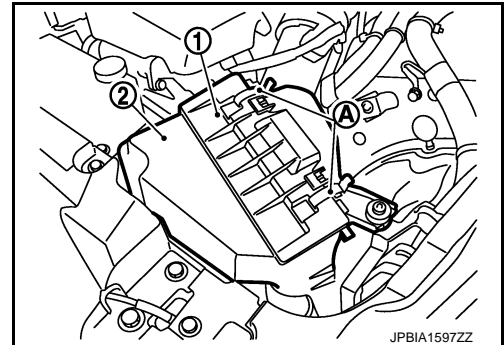

2. Remove holder (3) from air cleaner case (2), and then remove air cleaner filter (1) from holder.

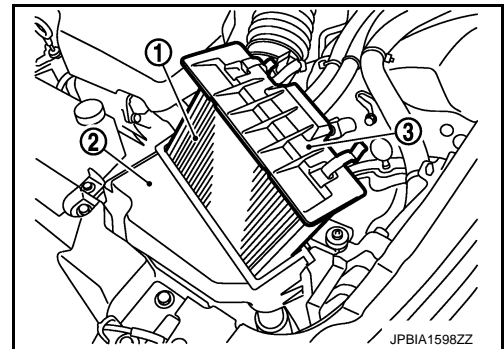

INSTALLATION

Note the following, and install in the reverse order of removal.

- Install the air cleaner filter by aligning the seal with the notch of air cleaner case.

ENGINE OIL

ENGINE OIL : Draining

INFOID:000000006887432

WARNING:

- Be careful not to get burn yourself, as engine oil may be hot.
- Prolonged and repeated contact with used engine oil may cause skin cancer. Try to avoid direct skin contact with used engine oil. If skin contact is made, wash thoroughly with soap or hand cleaner as soon as possible.

1. Warm up the engine, and check for engine oil leakage from engine components. Refer to [LU-7, "Inspection"](#).
2. Stop the engine and wait for 10 minutes.
3. Loosen oil filler cap.
4. Remove undercover with power tool.
5. Remove drain plug and then drain engine oil.

ENGINE OIL : Refilling

INFOID:000000006887433

1. Install drain plug with new washer. Refer to [EM-45, "Exploded View"](#).

CAUTION:

Be sure to clean drain plug and install with new washer.

Tightening torque : Refer to [EM-45, "Exploded View"](#).

2. Refill with new engine oil.

ENGINE MAINTENANCE (VQ37VHR)

< PERIODIC MAINTENANCE >

Engine oil specification and viscosity: Refer to [MA-16, "FOR NORTH AMERICA : Fluids and Lubricants"](#).

Engine oil capacity : Refer to [LU-17, "Periodical Maintenance Specification"](#).

CAUTION:

- When filling engine oil, do not pull out oil level gauge.
 - The refill capacity depends on the engine oil temperature and drain time. Use these specifications for reference only.
 - Always use oil level gauge to determine the proper amount of engine oil in engine.
3. Warm up the engine and check area around drain plug and oil filter for engine oil leakage.
 4. Stop the engine and wait for 10 minutes.
 5. Check the engine oil level. Refer to [LU-7, "Inspection"](#).

OIL FILTER

OIL FILTER : Removal and Installation

INFOID:000000006887434

REMOVAL


CAUTION:

- Oil filter is provided with relief valve. Use genuine NISSAN oil filter or equivalent.
- Be careful not to get burned when engine and engine oil may be hot.
- When removing, prepare a shop cloth to absorb any engine oil leakage or spillage.
- Never allow engine oil to adhere to drive belt.
- Completely wipe off any engine oil that adheres to engine and vehicle.

1. Remove engine undercover with power tool.
2. Using oil filter wrench [SST: KV10115801 (J-38956)] (B), remove oil filter.


A : 2WD models

⇐ : Engine front

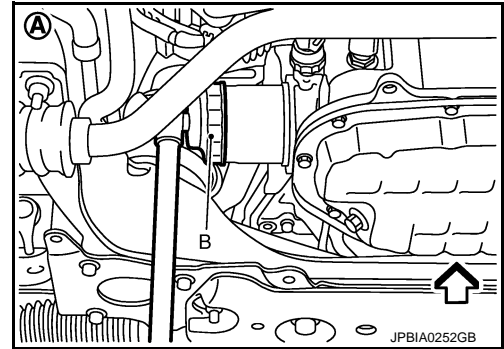

A : AWD models

⇐ : Engine front

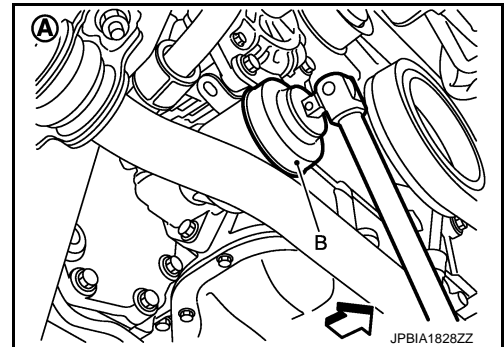

INSTALLATION

1. Remove foreign materials adhering to oil filter installation surface.


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

MA

ENGINE MAINTENANCE (VQ37VHR)

< PERIODIC MAINTENANCE >


2. Apply engine oil to the oil seal contact surface of new oil filter.

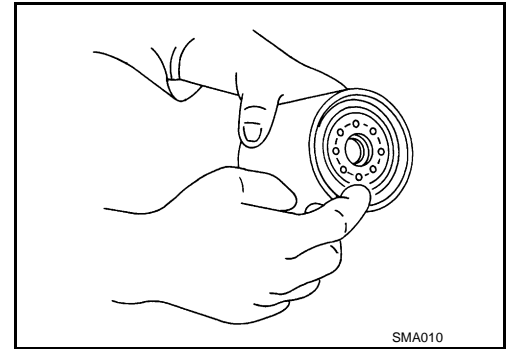

3. Screw oil filter manually until it touches the installation surface, then tighten it by 2/3 turn (A). Or tighten to the specification.

Oil filter:

: 17.7 N·m (1.8 kg-m, 13 ft-lb)

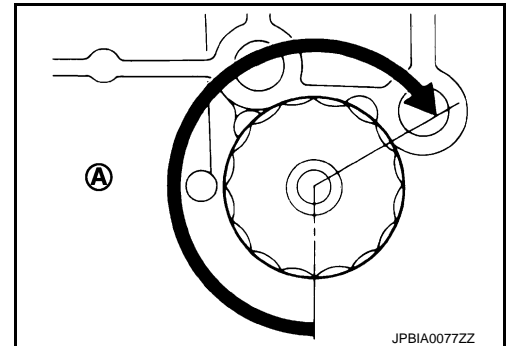

OIL FILTER : Inspection

INFOID:000000006887435

INSPECTION AFTER INSTALLATION

1. Check the engine oil level. Refer to [LU-7, "Inspection"](#).
2. Start the engine, and check there is no leak of engine oil.
3. Stop the engine and wait for 10 minutes.
4. Check the engine oil level, and adjust the level. Refer to [LU-7, "Inspection"](#).

SPARK PLUG


SPARK PLUG : Removal and Installation

INFOID:000000006887436

REMOVAL

1. Remove engine cover with power tool. Refer to [EM-27, "Exploded View"](#).
2. Remove air cleaner case and air duct (RH and LH). Refer to [EM-29, "Exploded View"](#).
3. Remove electric throttle control actuator. Refer to [EM-31, "Exploded View"](#).
4. Remove ignition coil. Refer to [EM-49, "Removal and Installation"](#).
5. Remove spark plug with a spark plug wrench (commercial service tool).

a : 14 mm (0.55 in)

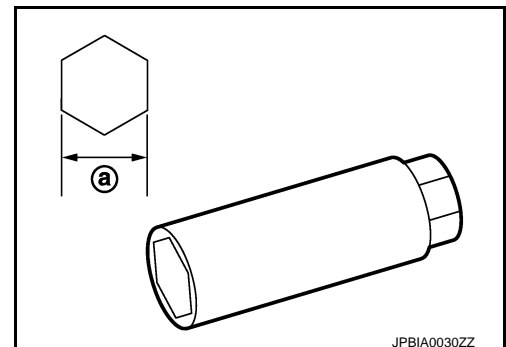

INSTALLATION

Installation is the reverse order of removal.

ENGINE MAINTENANCE (VQ37VHR)

< PERIODIC MAINTENANCE >

SPARK PLUG : Inspection

INFOID:000000006887437

INSPECTION AFTER REMOVAL

Use the standard type spark plug for normal condition.

Spark plug (Standard type) : Refer to [EM-148, "Spark Plug"](#).

CAUTION:


- Never drop or shock spark plug.
- Never use a wire brush for cleaning.
- If plug tip is covered with carbon, use spark plug cleaner to clean.

Cleaner air pressure


: Less than 588 kPa (6 kg/cm², 85 psi)

Cleaning time

: Less than 20 seconds

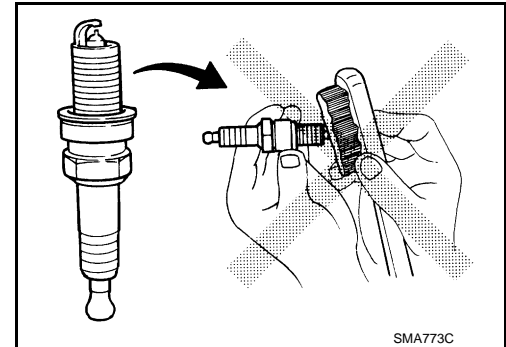

- Check and adjustment of plug gap is not required between change intervals.

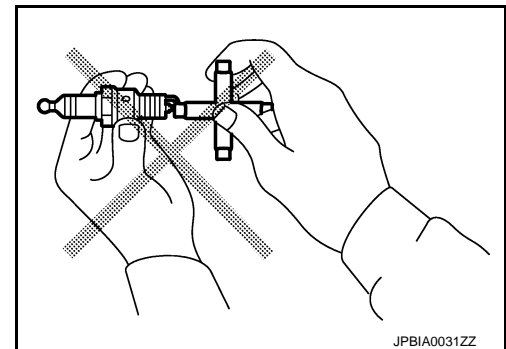

EVAP VAPOR LINES

EVAP VAPOR LINES : Inspection

INFOID:000000006887438

1. Visually inspect EVAP vapor lines for improper attachment and for cracks, damage, loose connections, chafing and deterioration. Refer to [EC-540, "Inspection"](#).
2. Inspect fuel tank filler cap vacuum relief valve for clogging, sticking, etc. Refer to [EC-364, "Component Inspection"](#).

ENGINE MAINTENANCE (VK56VD)


< PERIODIC MAINTENANCE >

ENGINE MAINTENANCE (VK56VD)

DRIVE BELT

DRIVE BELT : Exploded View

INFOID:000000006887439

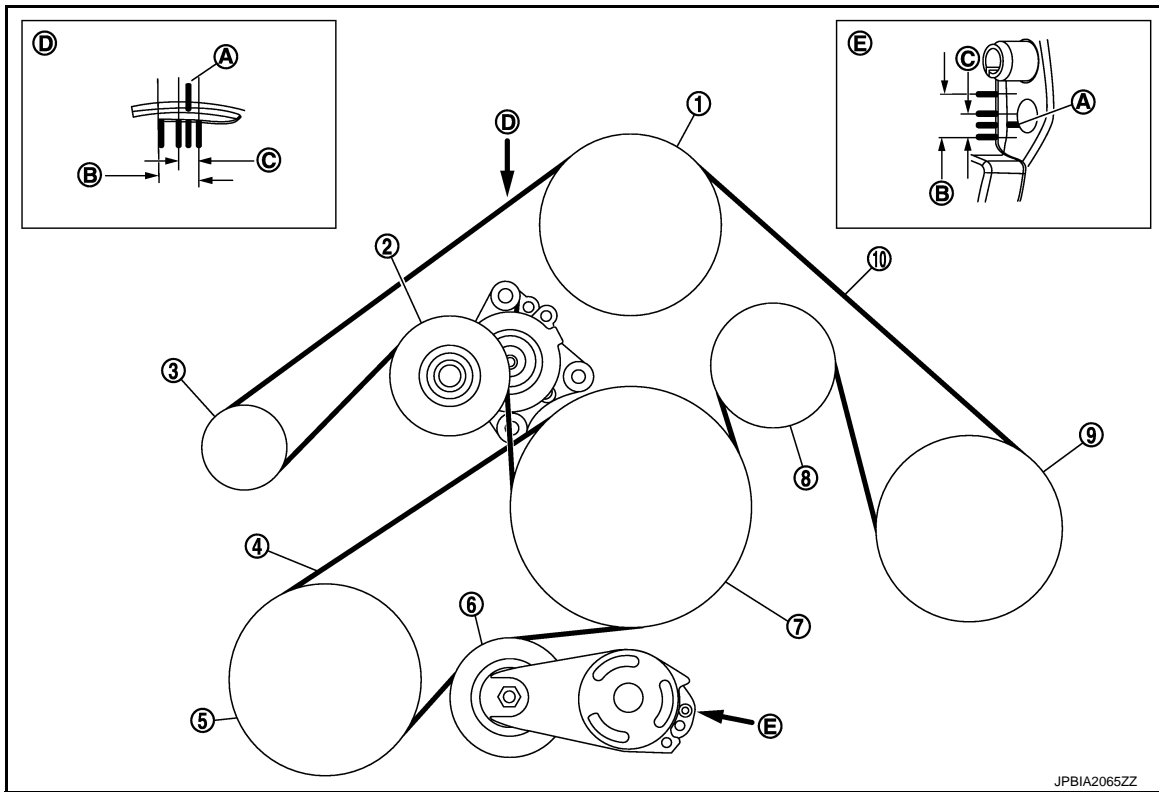

JPBIA2065ZZ

- | | | |
|--|--|--|
| 1. Water pump | 2. Auto-tensioner (for alternator, water pump and A/C compressor belt) | 3. Alternator |
| 4. Power steering oil pump belt | 5. Power steering oil pump | 6. Auto-tensioner (for power steering oil pump belt) |
| 7. Crankshaft pulley | 8. Idler pulley | 9. A/C compressor |
| 10. Alternator, water pump and A/C compressor belt | | |
| A. Indicator | B. Possible use range | C. Range when new drive belt is installed |
| D. View D | E. View E | |

DRIVE BELT : Checking

INFOID:000000006887440

WARNING:

Be sure to perform the these steps when engine is stopped.

- Remove air duct (inlet) when inspecting alternator, water pump and A/C compressor belt.
- Remove engine undercover with power tool when inspecting power steering oil pump belt.
- Check that the indicator (A) (notch on fixed side) of each auto-tensioner is within the possible use range (B).

NOTE:

- Check the each auto-tensioners indication when the engine is cold.
- When new drive belts is installed, the indicator (notch on fixed side) should be within the range (C) in the figure.
- Visually check all drive belts for wear, damage or cracks.
- If the indicator (notch on fixed side) is out of the possible use range or drive belts are damaged, replace drive belts.

ENGINE MAINTENANCE (VK56VD)

< PERIODIC MAINTENANCE >

DRIVE BELT : Tension Adjustment

INFOID:000000006887441

Refer to [EM-301, "Drive Belts"](#).

ENGINE COOLANT

ENGINE COOLANT : Draining

INFOID:000000007798524

WARNING:


- Never change engine coolant when the engine is hot to avoid being scalded.
- Wrap a thick cloth around radiator cap and carefully remove radiator cap. First, turn radiator cap a quarter of a turn to release built-up pressure. Then turn radiator cap all the way.
- Never spill engine coolant on drive belt.

1. Connect drain hose.

NOTE:


Use a general-purpose hose with the dimensions shown in the figure.

- A : ϕ 15 - 16 mm (0.59 - 0.63 in)
B : 145 mm (5.17 in)

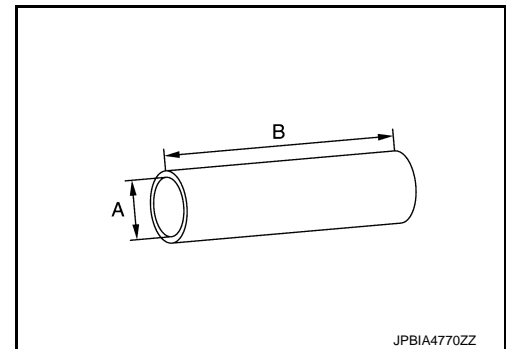

2. Open radiator drain plug (1) at the bottom of radiator, and then remove radiator cap.

- A : Radiator drain plug hole
↙ : Vehicle front

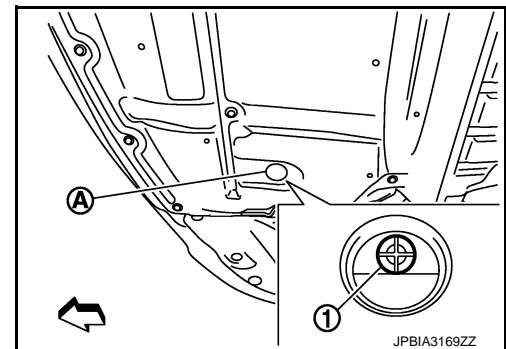

When draining all of engine coolant in the system, open water drain plug on cylinder block. Refer to [EM-275, "Disassembly and Assembly"](#).

3. Remove reservoir tank if necessary, and drain engine coolant and clean reservoir tank before installing.
4. Check drained engine coolant for contaminants such as rust, corrosion or discoloration. If contaminated, flush the engine cooling system. Refer to [CO-37, "Flushing"](#).
5. Disconnect drain hose.

ENGINE COOLANT : Refilling

INFOID:000000007186929

CAUTION:

- Do not put additive such as waterleak preventive, since it may cause cooling waterway clogging.
- Refill Genuine NISSAN Long Life Antifreeze/Coolant (blue) or equivalent in its quality mixed with water (distilled or demineralized). Refer to [MA-16, "FOR NORTH AMERICA : Fluids and Lubricants" \(FOR NORTH AMERICA\)](#), [MA-18, "FOR MEXICO : Fluids and Lubricants" \(FOR MEXICO\)](#).

1. Remove air cleaner case (LH) and air duct (inlet). Refer to [EM-184, "Exploded View"](#).
2. Install reservoir tank if removed, and radiator drain plug.

CAUTION:

Be sure to clean drain plug and install with new O-ring.

ENGINE MAINTENANCE (VK56VD)


< PERIODIC MAINTENANCE >

 : 1.2 N-m (0.12 kg-m, 11 in-lb)

If water drain plug on cylinder block is removed, close and tighten it. Refer to [EM-275, "Disassembly and Assembly"](#).


3. Check that each hose clamp is firmly tightened.
4. Remove air relief plug (1) on radiator left side.

 : Vehicle front

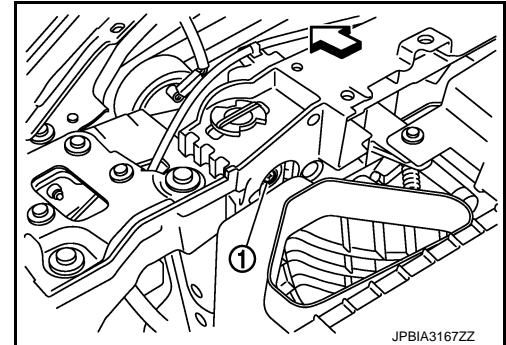

5. Remove air relief plug (1) on heater hose side.

 : Vehicle front

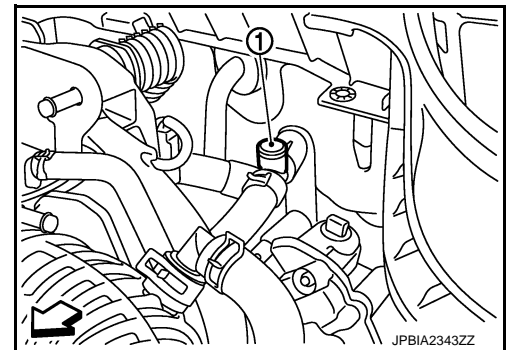



6. Fill up the radiator with cooling water.
Pour engine coolant through engine coolant filler neck slowly of less than 2 l (2-1/8 US qt, 1-3/4 Imp qt) a minute to allow air in system to escape.

Engine coolant capacity (With reservoir tank at "MAX" level) : Refer to [CO-51, "Periodical Maintenance Specification"](#).

Reservoir tank engine coolant capacity (At "MAX" level) : Refer to [CO-51, "Periodical Maintenance Specification"](#).

A : MAX

B : MIN

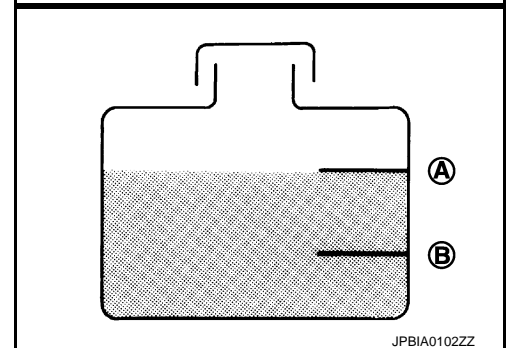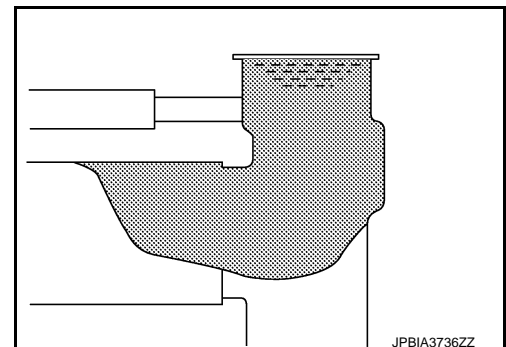

7. When engine coolant overflows air relief hole on radiator, install air relief plug with new O-ring.

 : 1.2 N-m (0.12 kg-m, 11 in-lb)

8. Refill reservoir tank to "MAX" level line with engine coolant.

ENGINE MAINTENANCE (VK56VD)

< PERIODIC MAINTENANCE >

9. When engine coolant overflows air relief hole on heater hose, install air relief plug with new O-ring. Then refill radiator with engine coolant.

CAUTION:

Do not reuse O-rings.

 : 1.2 N·m (0.12 kg-m, 11 in-lb)

10. Install air cleaner case (LH) and air duct (inlet).
11. Install radiator cap.
12. Warm up engine until opening thermostat. Standard for warming-up time is approximately 10 minutes at 3,000 rpm.
- Check thermostat opening condition by touching radiator hose (lower) to see a flow of warm water.
- CAUTION:**
Watch water temperature gauge so as not to overheat engine.
13. Stop the engine and cool down to less than approximately 50°C (122°F).
- Cool down using fan to reduce the time.
 - If necessary, refill radiator up to filler neck with engine coolant.
 - Remove the radiator cap to check the fluid level. If the fluid level is low, refill with cooling water and repeat the steps from Step 8.
14. Refill reservoir tank to "MAX" level line with engine coolant.
15. Check cooling system for leakage with engine running.
16. Check flow noise, according to the following steps.
- CAUTION:**
To check flow noise, turn OFF the radio and close the windows, doors, and the hood.
- a. Allow the engine to become cold (approximately 50°C or less).
 - b. Start the engine, maintain 1000 rpm for approximately 30 seconds, and increase the engine speed from 1000 to 3000 rpm. Repeat this cycle three times.
 - c. Check that flow noise can be heard from the heater core during the Step b operation.
 - d. If flow noise can be heard, repeat from Step 12 of Refilling to Step c of Flow Noise Verification Method.
 - e. Check that the reservoir tank cap is tightened.

ENGINE COOLANT : Flushing

INFOID:000000006887444

1. Install reservoir tank if removed, and radiator drain plug.

CAUTION:


Be sure to clean drain plug and install with new O-ring.

 : 1.2 N·m (0.12 kg-m, 11 in-lb)

If water drain plug on cylinder block is removed, close and tighten it. Refer to [EM-275, "Disassembly and Assembly"](#).

2. Remove air relief plug (1) on radiator.

 : Vehicle front

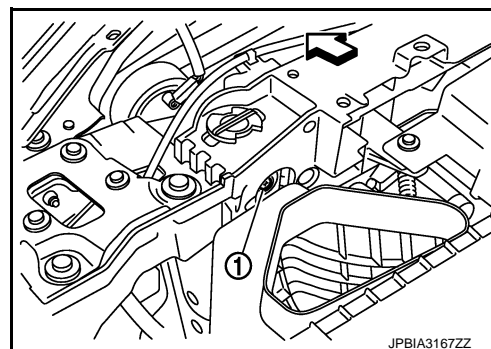

3. Fill water inlet with water until water spills from the air relief holes, then close air relief plugs. Fill water inlet and reservoir tank with water and reinstall radiator cap.

ENGINE MAINTENANCE (VK56VD)

< PERIODIC MAINTENANCE >

 : 1.2 N·m (0.12 kg·m, 11 in·lb)


4. Run the engine and warm it up to normal operating temperature.
5. Rev the engine two or three times under no-load.
6. Stop the engine and wait until it cools down.
7. Drain water from the system. Refer to [CO-34. "Draining"](#).
8. Repeat steps 1 through 7 until clear water begins to drain from radiator.
9. Check that the reservoir tank cap is tightened.

RADIATOR CAP


RADIATOR CAP : Inspection

INFOID:000000006887445

- Check valve seat of radiator cap.
 - Check if valve seat (A) is swollen to the extent that the edge of the metal plunger (B) cannot be seen when watching it vertically from the top.
 - Check if valve seat has no soil and damage.

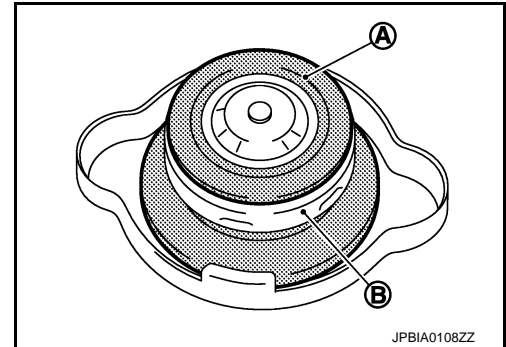


- Pull negative-pressure valve to open it, and check that it close completely when released.
 - Check that there is no dirt or damage on the valve seat of radiator cap negative-pressure valve.
 - Check that there are no unusualness in the opening and closing conditions of negative-pressure valve.

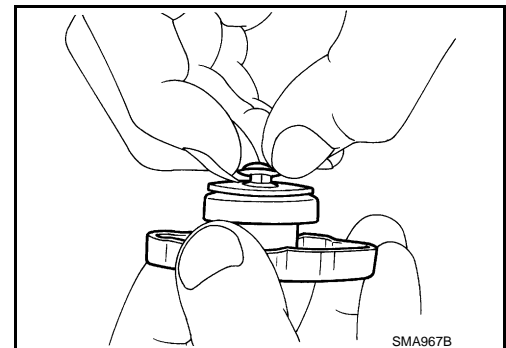

- Check radiator cap relief pressure.
 - When connecting radiator cap to the radiator cap tester (commercial service tool) and the radiator cap tester adapter (commercial service tool) (A), apply engine coolant to the cap seal surface.

Standard and limit : Refer to [CO-51. "Radiator"](#).

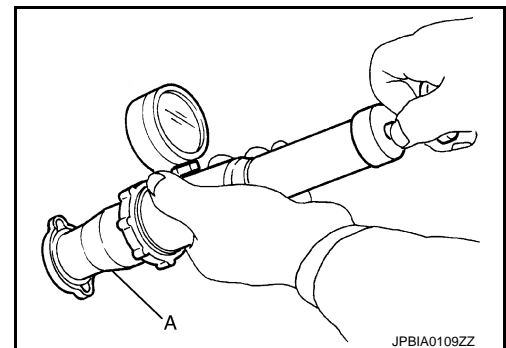

- Replace radiator cap if there is an unusualness related to the above three.

CAUTION:

When installing radiator cap, thoroughly wipe out the water inlet filler neck to remove any waxy residue or foreign material.

RADIATOR

ENGINE MAINTENANCE (VK56VD)

< PERIODIC MAINTENANCE >

RADIATOR : Inspection

INFOID:000000006887446

Check radiator for mud or clogging. If necessary, clean radiator as per the following:

- Be careful not to bend or damage radiator fins.
 - When radiator is cleaned without removal, remove all surrounding parts such as radiator cooling fan assembly and horns. Then tape harness and connectors to prevent water from entering.
1. Apply water by hose to the back side of the radiator core vertically downward.
 2. Apply water again to all radiator core surfaces once per minute.
 3. Stop washing if any stains no longer flow out from radiator.
 4. Blow air into the back side of radiator core vertically downward.
 - Use compressed air lower than 490 kPa (5 kg/cm², 71 psi) and keep distance more than 30 cm (11.8 in).
 5. Blow air again into all the radiator core surfaces once per minute until no water sprays out.

FUEL LINES


FUEL LINES : Inspection

INFOID:000000006887447

Inspect fuel lines, fuel filler cap and fuel tank for improper attachment, leakage, cracks, damage, loose connections, chafing or deterioration.

- A : Engine
- B : Fuel line
- C : Fuel tank

If necessary, repair or replace damaged parts.

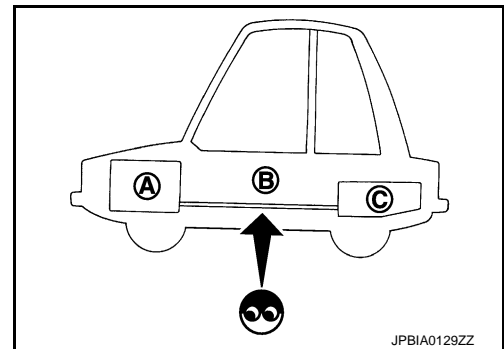


AIR CLEANER FILTER

AIR CLEANER FILTER : Removal and Installation


INFOID:000000006887448

REMOVAL

1. Unhook clips (A), and move the air cleaner cover assembly (1).

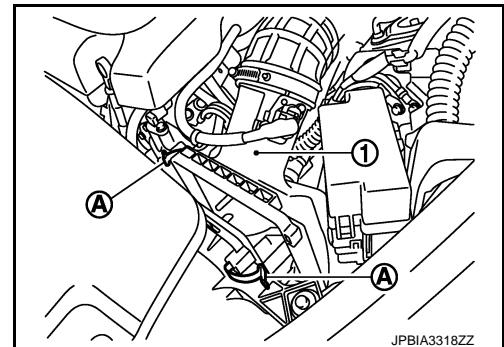

2. Remove air cleaner filter (1).

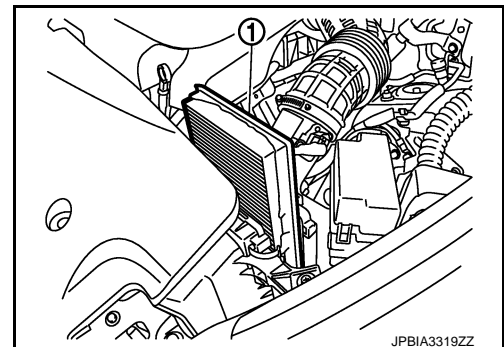

INSTALLATION

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

MA

ENGINE MAINTENANCE (VK56VD)

< PERIODIC MAINTENANCE >

Note the following item, and install in the reverse order of removal.

- Install the air cleaner filter by aligning the seal with the notch of air cleaner case.

ENGINE OIL

ENGINE OIL : Draining

INFOID:000000006887449

WARNING:

- **Be careful not to get burned, as engine oil may be hot.**
 - **Prolonged and repeated contact with used engine oil may cause skin cancer. Try to avoid direct skin contact with used engine oil. If skin contact is made, wash thoroughly with soap or hand cleaner as soon as possible.**
1. Warm up the engine, and check for engine oil leakage from engine components. Refer to [LU-23, "Inspection"](#).
 2. Stop the engine and wait for 15 minutes.
 3. Loosen oil filler cap.
 4. Remove drain plug and then drain engine oil.

ENGINE OIL : Refilling

INFOID:000000006887450

1. Install drain plug with new washer.

CAUTION:

Be sure to clean drain plug and install with new washer.

Tightening torque

2WD models : Refer to [EM-204, "2WD : Exploded View"](#).

AWD models : Refer to [EM-207, "AWD : Exploded View"](#).

2. Refill with new engine oil.

Engine oil specification and viscosity:

Refer to [MA-16, "FOR NORTH AMERICA : Fluids and Lubricants"](#).

Engine oil capacity : Refer to [LU-31, "Periodical Maintenance Specification"](#).

CAUTION:

- **The refill capacity depends on the engine oil temperature and drain time. Use these specifications for reference only.**
 - **Always use oil level gauge to determine the proper amount of engine oil in engine.**
3. Warm up the engine and check area around drain plug and oil filter for engine oil leakage.
 4. Stop the engine and wait for 15 minutes.
 5. Check the engine oil level. Refer to [LU-23, "Inspection"](#).

OIL FILTER

OIL FILTER : Removal and Installation

INFOID:000000006887451

REMOVAL


CAUTION:

- **Oil filter is provided with relief valve. Use genuine NISSAN oil filter or an equivalent.**
 - **Be careful not to get burned when engine and engine oil may be hot.**
 - **When removing, prepare a shop cloth to absorb any engine oil leakage or spillage.**
 - **Never allow engine oil to adhere to drive belts.**
 - **Completely wipe off any engine oil that adheres to engine and vehicle.**
1. Remove engine undercover with power tool.

ENGINE MAINTENANCE (VK56VD)


< PERIODIC MAINTENANCE >

- Using oil filter wrench [SST: KV10115801 (J38956)] (A), remove oil filter.

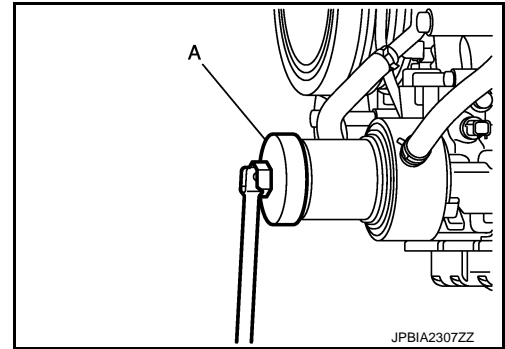

INSTALLATION


- Remove foreign matter adhering to oil filter installation surface.
- Apply engine oil to the oil seal contact surface of new oil filter.

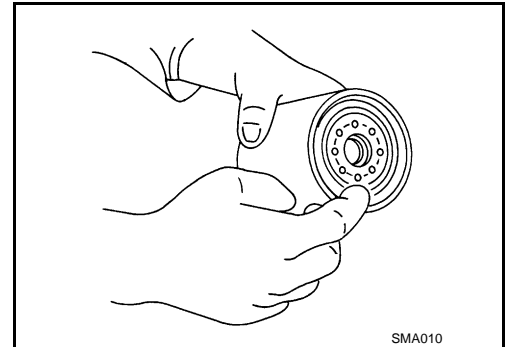

- Screw oil filter manually until it touches the installation surface, then tighten it by 2/3 turn (A). Or tighten to the specification.

Oil filter:

: 17.7 N·m (1.8 kg·m, 13 ft·lb)

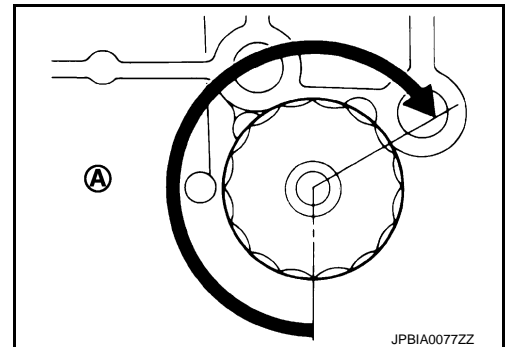

OIL FILTER : Inspection

INFOID:000000006887452

INSPECTION AFTER INSTALLATION

- Check the engine oil level. Refer to [LU-23. "Inspection"](#).
- Start the engine, and check there is no leakage of engine oil.
- Stop the engine and wait for 15 minutes.
- Check the engine oil level, and adjust the level. Refer to [LU-23. "Inspection"](#).

SPARK PLUG

SPARK PLUG : Removal and Installation

INFOID:000000006887453

REMOVAL

- Remove engine cover. Refer to [EM-182. "Exploded View"](#).
- Remove air duct.
- Remove the harness bracket. (bank 2 side)
- Remove ignition coil. Refer to [EM-186. "Exploded View"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O


MA

ENGINE MAINTENANCE (VK56VD)

< PERIODIC MAINTENANCE >

- Remove spark plug with a spark plug wrench (commercial service tool).

a : 14 mm (0.55 in)

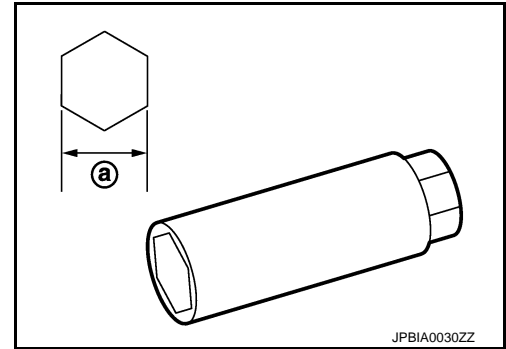

INSTALLATION

Installation is the reverse order of removal.

SPARK PLUG : Inspection

INFOID:000000006887454

INSPECTION AFTER REMOVAL

Use the standard type spark plug for normal condition.

Spark plug (Standard type) : Refer to [EM-301, "Spark Plug"](#).

CAUTION:


- Never drop or impact spark plug.
- Never use a wire brush for cleaning.
- If plug tip is covered with carbon, use spark plug cleaner to clean.

Cleaner air pressure


: Less than 588 kPa (6 kg/cm², 85 psi)

Cleaning time

: Less than 20 seconds

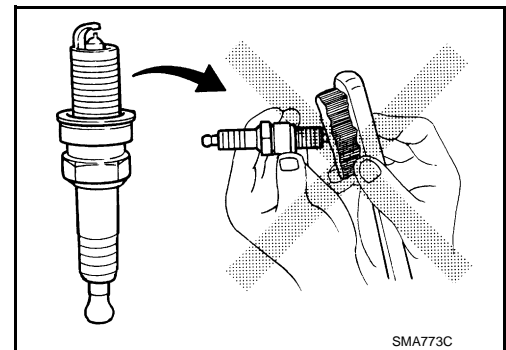

- Measure spark plug gap. When it exceeds the limit, replace spark plug even if it is within the specified replacement mileage. Refer to [EM-301, "Spark Plug"](#).
- Spark plug gap adjustment is not required between replacement intervals.

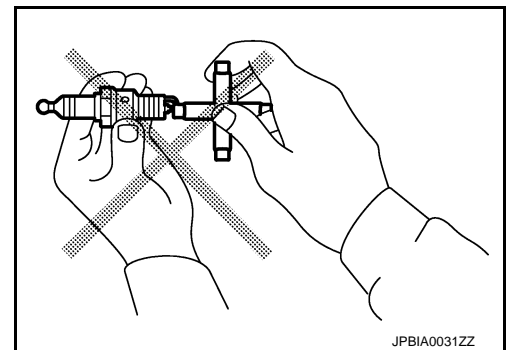

EVAP VAPOR LINES

EVAP VAPOR LINES : Inspection

INFOID:000000006887455

- Visually inspect EVAP vapor lines for improper attachment and for cracks, damage, loose connections, chafing and deterioration. Refer to [EC-1550, "Inspection"](#).
- Inspect fuel tank filler cap vacuum relief valve for clogging, sticking, etc.
Refer to [EC-1360, "Component Inspection \(Fuel Filler Cap\)"](#).

CHASSIS MAINTENANCE

< PERIODIC MAINTENANCE >

CHASSIS MAINTENANCE


EXHAUST SYSTEM

EXHAUST SYSTEM : Inspection

INFOID:000000006887456

Check exhaust pipes, muffler and mounting for improper attachment, leaks, cracks, damage or deterioration.

- If anything is found, repair or replace damaged parts.

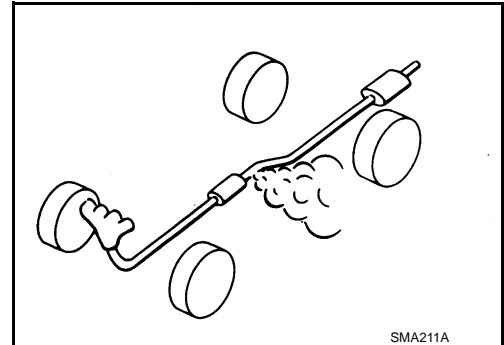


A/T FLUID

A/T FLUID : Inspection

INFOID:000000007176866

FLUID LEAKAGE

- Check transaxle surrounding area (oil seal and plug etc.) for fluid leakage.
- If anything is found, repair or replace damaged parts and adjust A/T fluid level. Refer to [TM-90, "Adjustment"](#).

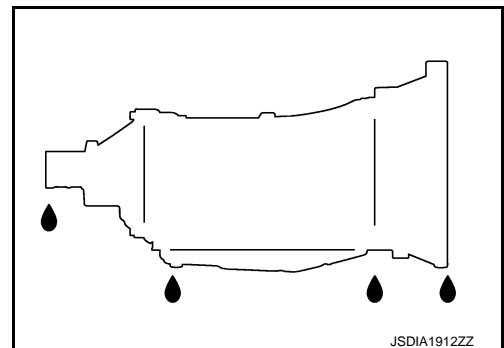

TRANSFER FLUID

TRANSFER FLUID : Inspection

INFOID:000000006887457

FLUID LEAKAGE

Check transfer surrounding area (oil seal, drain plug, and filler plug etc.) for fluid leakage.

FLUID LEVEL

1. Remove filler plug (1) and gasket. Then check that fluid is filled up from mounting hole for the filler plug.


CAUTION:

Never start engine while checking fluid level.

2. Set a new gasket onto filler plug, and install it on transfer and tighten to the specified torque. Refer to [DLN-64, "Exploded View"](#).

CAUTION:

Never reuse gasket.

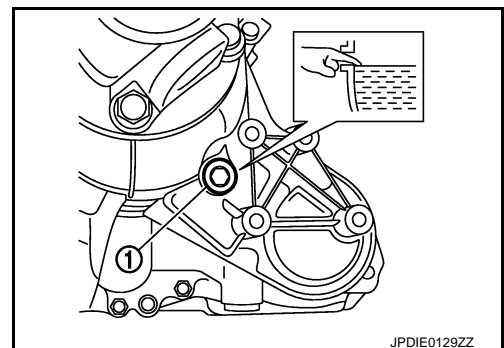

TRANSFER FLUID : Draining

INFOID:000000006887458

1. Run the vehicle to warm up the transfer unit sufficiently.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
MA


CHASSIS MAINTENANCE

< PERIODIC MAINTENANCE >

2. Stop the engine, and remove the drain plug (1) to drain the transfer fluid.
3. Set a new gasket onto the drain plug, and install it on the transfer and tighten to the specified torque. Refer to [DLN-64, "Exploded View"](#).

CAUTION:

Never reuse gasket.

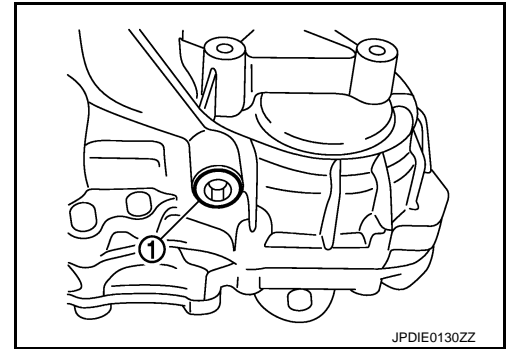

INFOID:000000006887459

TRANSFER FLUID : Refilling

1. Remove filler plug (1) and gasket. Then fill fluid up to mounting hole for the filler plug.

Fluid and viscosity

: Refer to [MA-16, "FOR NORTH AMERICA : Fluids and Lubricants"](#).

Fluid capacity

: Refer to [DLN-83, "General Specifications"](#).


CAUTION:

Carefully fill the fluid. (Fill up for approximately 3 minutes.)

2. Leave the vehicle for 3 minutes, and check the fluid level again.
3. Set a new gasket onto filler plug, and install it on transfer and tighten to the specified torque. Refer to [DLN-64, "Exploded View"](#).

CAUTION:

Never reuse gasket.

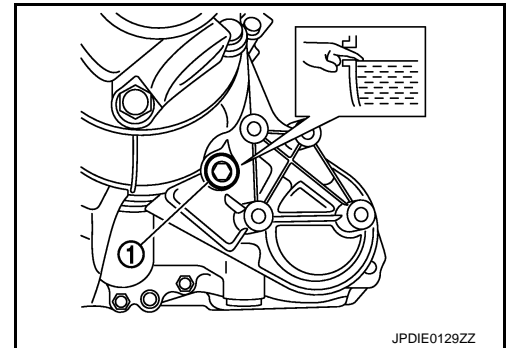

INFOID:000000007176869

FRONT PROPELLER SHAFT: 2S56A

FRONT PROPELLER SHAFT: 2S56A : Inspection

APPEARANCE AND NOISE

- Check the propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.
- If center bearing is noisy or damaged, replace propeller shaft assembly.

VIBRATION


If vibration is present at high speed, inspect propeller shaft runout first.

1. With a dial indicator, measure propeller shaft runout at runout measuring points by rotating final drive companion flange with hands.

←: Vehicle front

Propeller shaft runout

: Refer to [DLN-93, "Propeller Shaft Runout"](#).

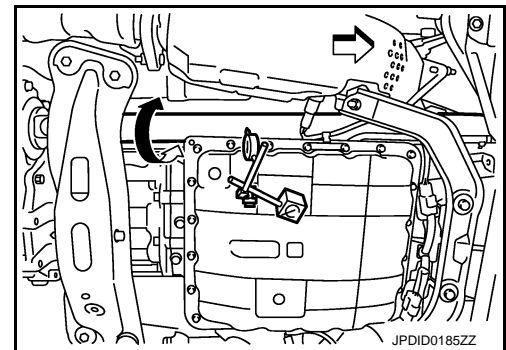


CHASSIS MAINTENANCE

< PERIODIC MAINTENANCE >

- Propeller shaft runout measuring point (Point “△”)

Dimension A **VQ37VHR** : 381.5 mm (15.02 in)
 VK56VD : 386.5 mm (15.22 in)

2. If runout still exceeds specifications, separate propeller shaft at final drive companion flange; then change the phase between companion flange and propeller shaft by the one bolt hole at a time and install propeller shaft.
3. If runout is more than the limit value, remove and check propeller shaft.
4. Check the vibration by driving vehicle.

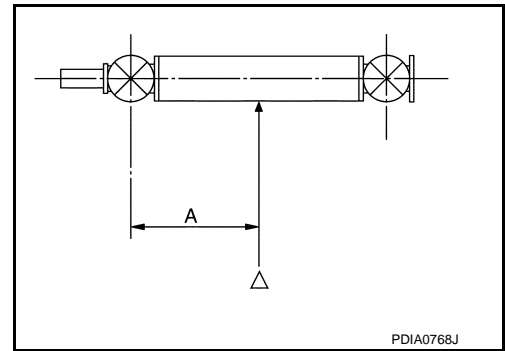

REAR PROPELLER SHAFT: 3S80A-R

REAR PROPELLER SHAFT: 3S80A-R : Inspection

INFOID:000000007176870

APPEARANCE AND NOISE


- Check the propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.
- If center bearing is noisy or damaged, replace propeller shaft assembly.

VIBRATION

If vibration is present at high speed, inspect propeller shaft runout first.

1. With a dial indicator, measure propeller shaft runout at runout measuring points by rotating final drive companion flange with hands.

Propeller shaft runout : Refer to [DLN-102, "Propeller Shaft Runout"](#).

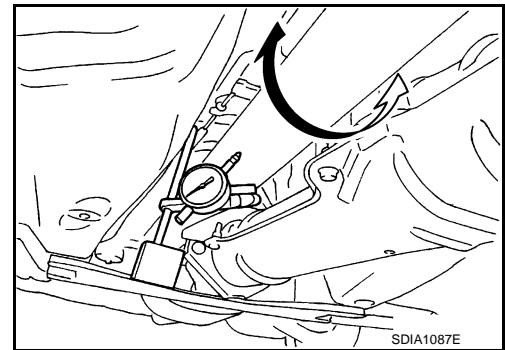


- Propeller shaft runout measuring point (Point “△”)

↔: Vehicle front

Dimension **A** : 172 mm (6.77 in)
 B : 172 mm (6.77 in)
 C : 172 mm (6.77 in)

2. If runout still exceeds specifications, separate propeller shaft at final drive companion flange; then change the phase between companion flange and propeller shaft by the one bolt hole at a time and install propeller shaft.
3. If runout is more than the limit value, remove and check propeller shaft.
4. Check the vibration by driving vehicle.

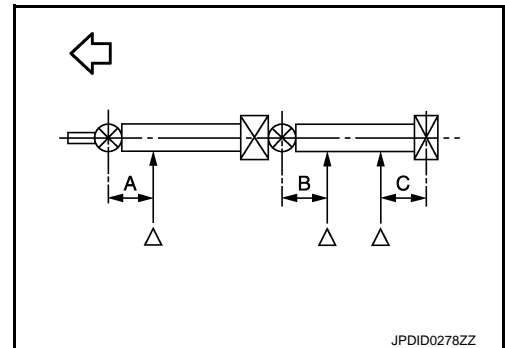

REAR PROPELLER SHAFT: 3F80A-R

REAR PROPELLER SHAFT: 3F80A-R : Inspection

INFOID:000000007176871

APPEARANCE AND NOISE

- Check the propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.
- If center bearing is noisy or damaged, replace propeller shaft assembly.

VIBRATION

If vibration is present at high speed, inspect propeller shaft runout first.


CHASSIS MAINTENANCE

< PERIODIC MAINTENANCE >

1. With a dial indicator, measure propeller shaft runout at runout measuring points by rotating final drive companion flange with hands.

Propeller shaft runout

: Refer to [DLN-110, "Propeller Shaft Runout"](#).

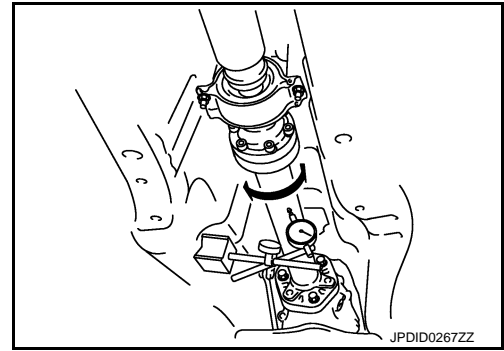


- Propeller shaft runout measuring point (Point "△")

⇐: Vehicle front

Dimension

A	: 192 mm (7.56 in)
B	: 172 mm (6.77 in)
C	: 172 mm (6.77 in)

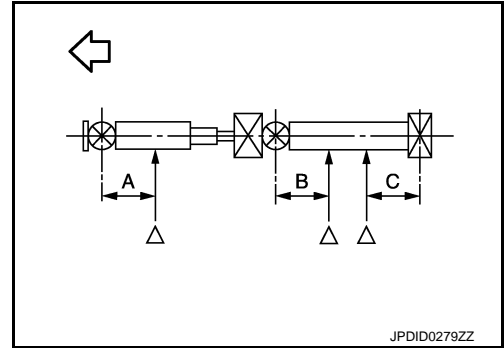

2. If runout still exceeds specifications, separate propeller shaft at final drive companion flange or transfer companion flange; then change the phase between companion flange and propeller shaft by the one bolt hole at a time and install propeller shaft.
3. If runout is more than the limit value, remove and check propeller shaft.
4. Check the vibration by driving vehicle.

FRONT DIFFERENTIAL GEAR OIL: F160A

FRONT DIFFERENTIAL GEAR OIL: F160A : Inspection

INFOID:000000007176872

OIL LEAKAGE

Make sure that oil is not leaking from final drive assembly or around it.

OIL LEVEL

- Remove filler plug (1) and check oil level from filler plug mounting hole as shown in the figure.


CAUTION:

Never start engine while checking oil level.

- Set a gasket on filler plug and install it on final drive assembly. Refer to [DLN-130, "Exploded View"](#).

CAUTION:

Never reuse gasket.

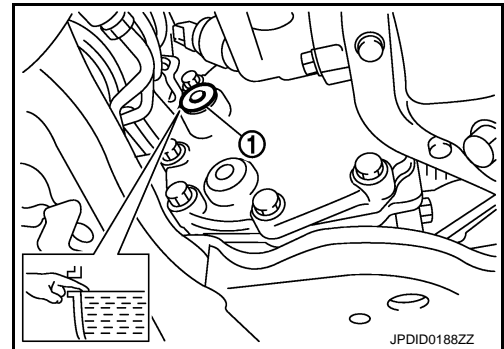

FRONT DIFFERENTIAL GEAR OIL: F160A : Draining


INFOID:000000007176873

1. Stop engine.

CHASSIS MAINTENANCE

< PERIODIC MAINTENANCE >

2. Remove drain plug (1) and drain gear oil.
3. Set a gasket on drain plug and install it to final drive assembly and tighten to the specified torque. Refer to [DLN-130. "Exploded View"](#).
CAUTION:
Never reuse gasket.

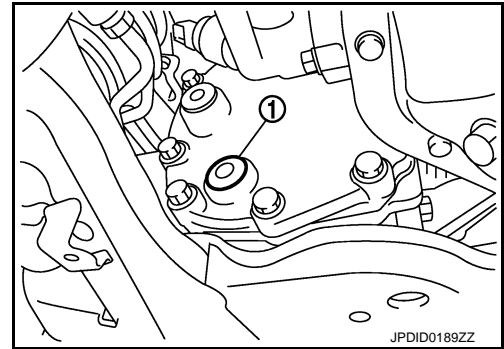

FRONT DIFFERENTIAL GEAR OIL: F160A : Refilling

INFOID:000000007176874

1. Remove filler plug (1). Fill with new gear oil until oil level reaches the specified level near filler plug mounting hole.


Oil grade and Viscosity : Refer to [MA-16. "FOR NORTH AMERICA : Fluids and Lubricants"](#).

Oil capacity : Refer to [DLN-155. "General Specifications"](#).

2. After refilling oil, check oil level. Set a gasket to filler plug, then install it to final drive assembly. Refer to [DLN-130. "Exploded View"](#).

CAUTION:

Never reuse gasket.

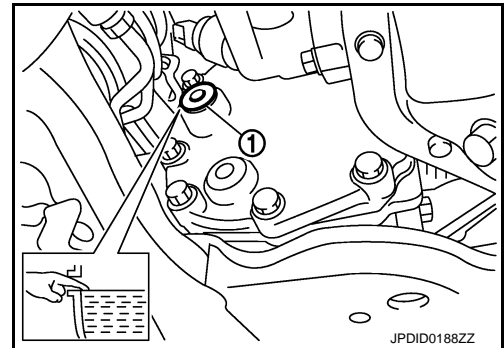

REAR DIFFERENTIAL GEAR OIL: R200

REAR DIFFERENTIAL GEAR OIL: R200 : Inspection

INFOID:000000007176899

OIL LEAKAGE

- Make sure that oil is not leaking from final drive assembly or around it.

OIL LEVEL

- Remove filler plug (1) and check oil level from filler plug mounting hole as shown in the figure.


CAUTION:

Never start engine while checking oil level.

- Set a gasket on filler plug and install it on final drive assembly. Refer to [DLN-172. "Exploded View"](#).

CAUTION:

Never reuse gasket.

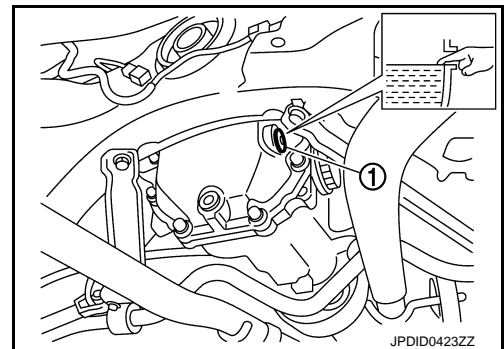

REAR DIFFERENTIAL GEAR OIL: R200 : Draining

INFOID:000000007176900

1. Stop engine.

MA


CHASSIS MAINTENANCE

< PERIODIC MAINTENANCE >

2. Remove drain plug (1) and drain gear oil.
3. Set a gasket on drain plug and install it to final drive assembly and tighten to the specified torque. Refer to [DLN-172. "Exploded View"](#).

CAUTION:

Never reuse gasket.

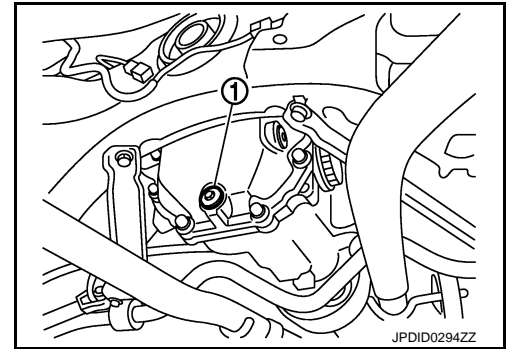

JPDID0294ZZ

REAR DIFFERENTIAL GEAR OIL: R200 : Refilling

INFOID:000000007176901


1. Remove filler plug (1). Fill with new gear oil until oil level reaches the specified level near filler plug mounting hole.

Oil grade and viscosity

: Refer to [MA-16. "FOR NORTH AMERICA : Fluids and Lubricants"](#) (For North America), [MA-18. "FOR MEXICO : Fluids and Lubricants"](#) (For Mexico).

Oil capacity

: Refer to [DLN-193. "General Specifications"](#).

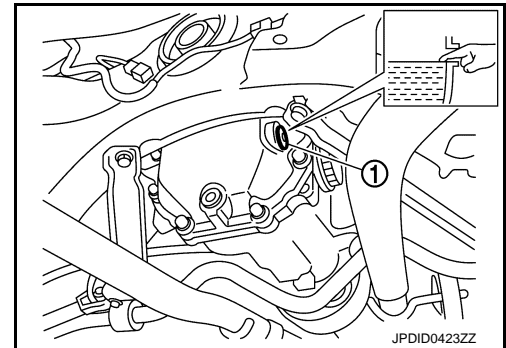

JPDID0423ZZ

2. After refilling oil, check oil level. Set a gasket to filler plug, then install it to final drive assembly. Refer to [DLN-172. "Exploded View"](#).

CAUTION:

Never reuse gasket.

REAR DIFFERENTIAL GEAR OIL: R208

REAR DIFFERENTIAL GEAR OIL: R208 : Inspection

INFOID:000000007176902

OIL LEAKAGE

- Make sure that oil is not leaking from final drive assembly or around it.

OIL LEVEL

- Remove filler plug (1) and check oil level from filler plug mounting hole as shown in the figure.


CAUTION:

Never start engine while checking oil level.

- Set a gasket on filler plug and install it on final drive assembly. Refer to [DLN-210. "Exploded View"](#).

CAUTION:

Never reuse gasket.

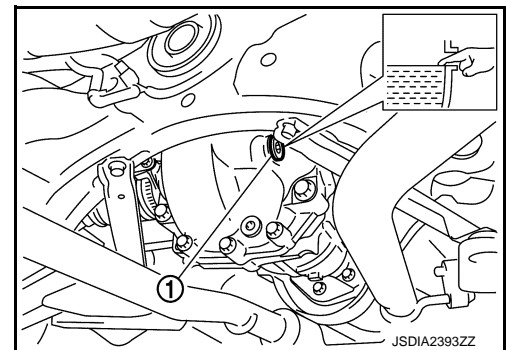

JSDIA2393ZZ

REAR DIFFERENTIAL GEAR OIL: R208 : Draining


INFOID:000000007176903

1. Stop engine.

CHASSIS MAINTENANCE

< PERIODIC MAINTENANCE >

- Remove drain plug (1) and drain gear oil.
- Set a gasket on drain plug and install it to final drive assembly and tighten to the specified torque. Refer to [DLN-210, "Exploded View"](#).
CAUTION:
Never reuse gasket.

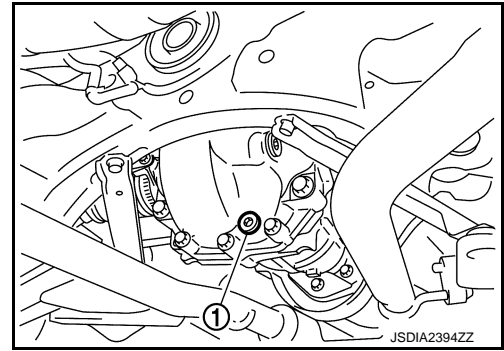


REAR DIFFERENTIAL GEAR OIL: R208 : Refilling

INFOID:000000007176904

- Remove filler plug (1). Fill with new gear oil until oil level reaches the specified level near filler plug mounting hole.

- Oil grade and viscosity** : Refer to [MA-16, "FOR NORTH AMERICA : Fluids and Lubricants"](#) (For North America), [MA-18, "FOR MEXICO : Fluids and Lubricants"](#) (For Mexico).
- Oil capacity** : Refer to [DLN-228, "General Specifications"](#).

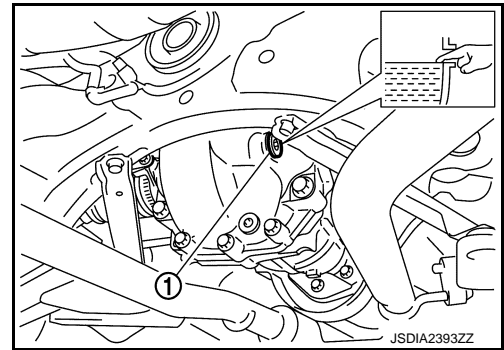

- After refilling oil, check oil level. Set a gasket to filler plug, then install it to final drive assembly. Refer to [DLN-210, "Exploded View"](#).
CAUTION:
Never reuse gasket.

WHEELS (BONDING WEIGHT TYPE)

WHEELS (BONDING WEIGHT TYPE) : Adjustment

INFOID:000000007177414

BALANCING WHEELS (BONDING WEIGHT TYPE)

Preparation Before Adjustment

Using releasing agent, remove double-faced adhesive tape from the road wheel.

CAUTION:

- Be careful not to scratch the road wheel during removal.
- After removing double-faced adhesive tape, wipe clean traces of releasing agent from the road wheel.

Wheel Balance Adjustment

- The details of the adjustment procedure are different for each model of wheel balancer. Therefore, refer to each instruction manual.
 - If a tire balance machine has adhesion balance weight mode settings and drive-in weight mode setting, select and adjust a drive-in weight mode suitable for road wheels.
- Set road wheel on tire balance machine using the center hole as a guide. Start the tire balance machine.
 - When inner and outer unbalance values are shown on the tire balance machine indicator, multiply outer unbalance value by 5/3 to determine balance weight that should be used. Select the outer balance weight with a value closest to the calculated value above and install to the designated outer position of, or at the designated angle in relation to the road wheel.

CAUTION:

- Never install the inner balance weight before installing the outer balance weight.
- Before installing the balance weight, always to clean the mating surface of the road wheel.

CHASSIS MAINTENANCE

< PERIODIC MAINTENANCE >

- a. Indicated unbalance value $\times 5/3 =$ balance weight to be installed

Calculation example:

23 g (0.81 oz) $\times 5/3 = 38.33$ g (1.35 oz) $\Rightarrow 37.5$ g (1.32 oz) balance weight (closer to calculated balance weight value)


NOTE:

Note that balance weight value must be closer to the calculated balance weight value.

Example:

36.2 $\Rightarrow 35$ g (1.23 oz)

36.3 $\Rightarrow 37.5$ g (1.32 oz)

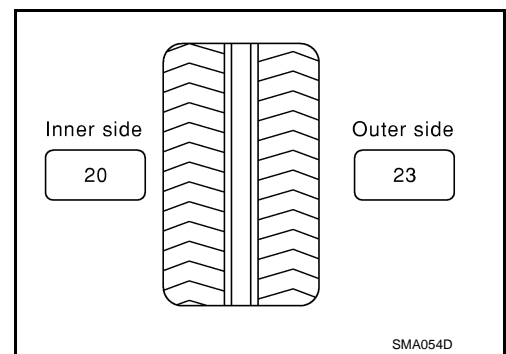


- b. Installed balance weight in the position.

- When installing balance weight (1) to road wheels, set it into the grooved area (A) on the inner wall of the road wheel as shown in the figure so that the balance weight center (B) is aligned with the tire balance machine indication position (angle) (C).

CAUTION:

- Always use genuine NISSAN adhesion balance weights.
- Balance weights are non-reusable; always replace with new ones.
- Never install three or more sheets of balance weight.

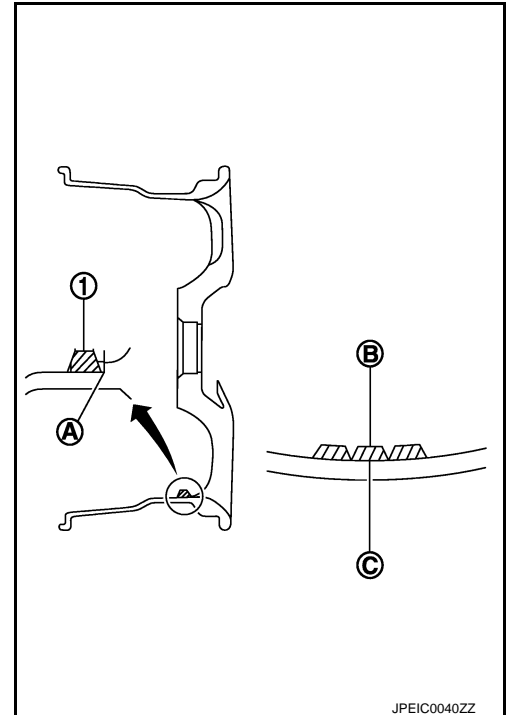

- c. If calculated balance weight value exceeds 50 g (1.76 oz), install two balance weight sheets in line with each other as shown in the figure.

CAUTION:

Never install one balance weight sheet on top of another.

3. Start the tire balance machine again.
4. Install drive-in balance weight on inner side of road wheel in the tire balance machine indication position (angle).


CAUTION:

Never install three or more balance weight.

5. Start the tire balance machine. Check that the inner and outer residual unbalance value is within the allowable unbalance value.

CAUTION:

If either residual unbalance value exceeds limit, repeat installation procedures.

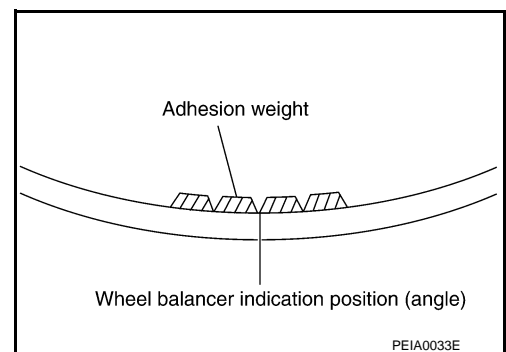

Allowable unbalance value

Dynamic (At flange) : Refer to [WT-62, "Road Wheel"](#).

Static (At flange) : Refer to [WT-62, "Road Wheel"](#).

TIRE ROTATION


CHASSIS MAINTENANCE

< PERIODIC MAINTENANCE >

- Follow the maintenance schedule for tire rotation service intervals. Refer to [MA-5, "FOR NORTH AMERICA : Explanation of General Maintenance"](#).
- When installing the wheel, tighten wheel nuts to the specified torque. Refer to [WT-56, "Exploded View"](#).

CAUTION:

- Do not include the T-type spare tire when rotating the tires.
- When installing wheels, tighten them diagonally by dividing the work two to three times in order to prevent the wheels from developing any distortion.
- Be careful not to tighten wheel nut at torque exceeding the criteria.
- Use NISSAN genuine wheel nuts for aluminum wheels.
- Perform the ID registration, after tire rotation. Refer to [WT-22, "Work Procedure"](#).

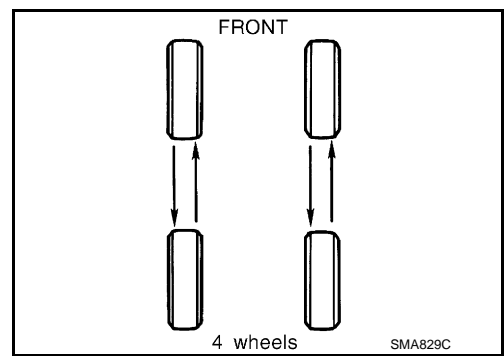


BRAKE FLUID LEVEL AND LEAKS

BRAKE FLUID LEVEL AND LEAKS : Inspection

INFOID:000000006887473

- If fluid level is extremely low, check brake system for leaks.

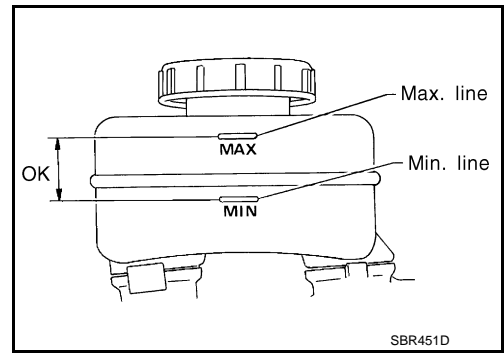


BRAKE LINES AND CABLES

BRAKE LINES AND CABLES : Inspection

INFOID:000000006887474

- Check brake fluid lines and parking brake cables for improper attachment, leaks, chafing, abrasions, deterioration, etc.

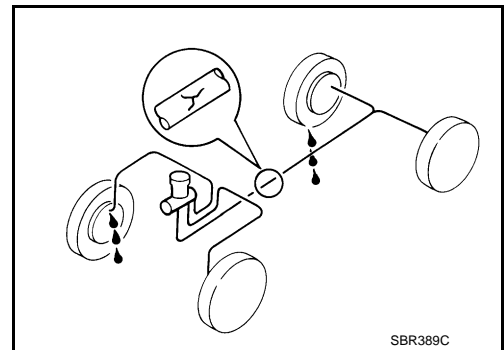


BRAKE FLUID

BRAKE FLUID : Changing

INFOID:000000006887475

- Drain brake fluid from each bleed valve.
- Refill until new brake fluid comes out from each bleed valve. Use same procedure as in bleeding hydraulic system to refill brake fluid. Refer to [BR-11, "Bleeding Brake System"](#).
 - Refill with recommended Genuine NISSAN Super Heavy Duty Brake Fluid or equivalent DOT 3 (US FMVSS No. 116). Refer to [MA-16, "FOR NORTH AMERICA : Fluids and Lubricants"](#).
 - Never reuse drained brake fluid.
 - Be careful not to splash brake fluid on painted areas.

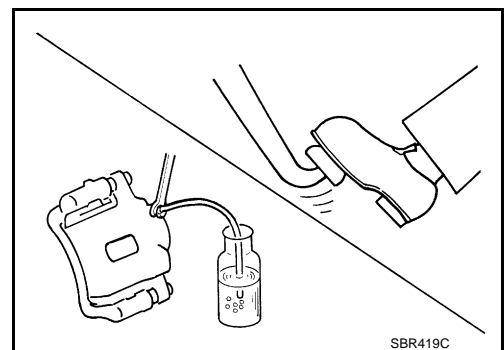

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
MA

CHASSIS MAINTENANCE

< PERIODIC MAINTENANCE >

DISC BRAKE

DISC BRAKE : Inspection


INFOID:000000006887476

DISC ROTOR

Check condition, wear, and damage.


CALIPER

- Check for leakage.

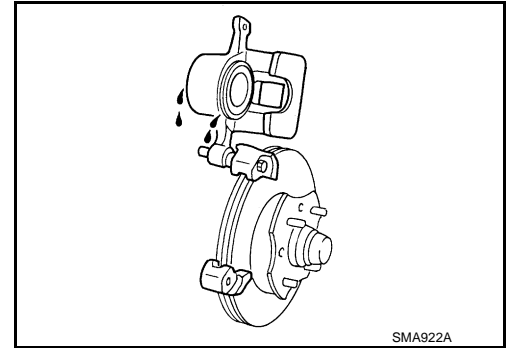

BRAKE PAD

- Check for wear or damage.

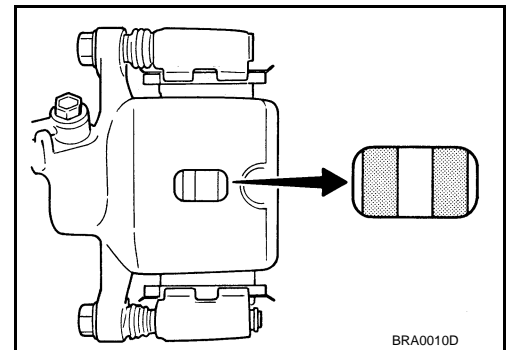

DISC BRAKE : Front Disc Brake

INFOID:000000006887477

2 PISTON TYPE

Unit: mm (in)

Item		Limit
Brake pad	Wear thickness	2.0 (0.079)
	Wear thickness	26.0 (1.024)
Disc rotor	Thickness variation (measured at 8 positions)	0.015 (0.0006)
	Runout (with it attached to the vehicle)	0.035 (0.0014)

4 PISTON TYPE

Unit mm (in)

Item		Limit
Brake pad	Wear thickness	2.0 (0.079)
	Wear thickness	30.0 (1.181)
Disc rotor	Thickness variation (measured at 8 positions)	0.015 (0.0006)
	Runout (with it attached to the vehicle)	0.035 (0.0014)

DISC BRAKE : Rear Disc Brake

INFOID:000000006887478

1 PISTON TYPE

CHASSIS MAINTENANCE

< PERIODIC MAINTENANCE >

Unit: mm (in)

Item		Limit
Brake pad	Wear thickness	2.0 (0.079)
	Wear thickness	14.0 (0.551)
Disc rotor	Thickness variation (measured at 8 positions)	0.015 (0.0006)
	Runout (with it attached to the vehicle)	0.055 (0.0022)

2 PISTON TYPE

Unit: mm (in)

Item		Limit
Brake pad	Wear thickness	2.0 (0.079)
	Wear thickness	18.0 (0.709)
Disc rotor	Thickness variation (measured at 8 positions)	0.015 (0.0006)
	Runout (with it attached to the vehicle)	0.055 (0.0022)


STEERING GEAR AND LINKAGE

STEERING GEAR AND LINKAGE : Inspection

INFOID:000000006887479

STEERING GEAR

- Check gear housing and boots for looseness, damage and grease leakage.
- Check connection with steering column for looseness.

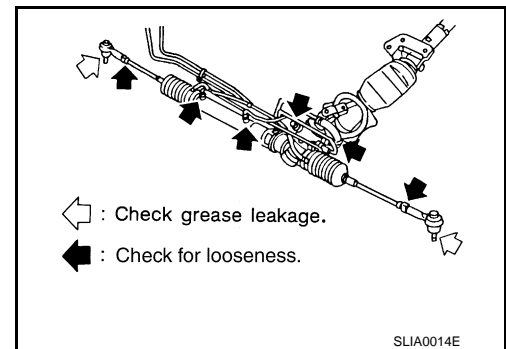

STEERING LINKAGE

Check ball joint, dust cover and other component parts for looseness, wear, damage and grease leakage.

POWER STEERING FLUID AND LINES

POWER STEERING FLUID AND LINES : Inspection


INFOID:000000006887480

Check fluid level in reservoir tank with engine off.

Use "HOT" range at fluid temperatures of 50 to 80°C (122 to 176°F) or "COLD" range at fluid temperatures of 0 to 30°C (32 to 86°F).

CAUTION:


- Do not overfill.
- Recommended fluid is Genuine NISSAN PSF or equivalent. Refer to [MA-16, "FOR NORTH AMERICA : Fluids and Lubricants"](#).

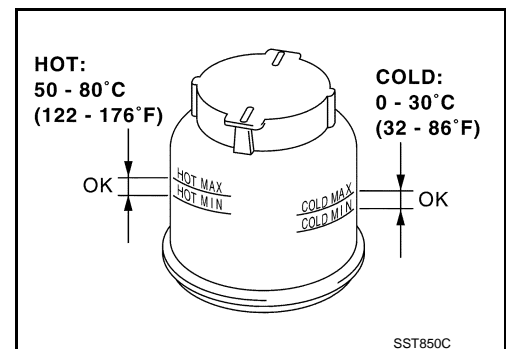

CHASSIS MAINTENANCE

< PERIODIC MAINTENANCE >

- Check lines for improper attachment, leaks, cracks, damage, loose connections, chafing and deterioration.
- Check rack boots for accumulation of power steering fluid.

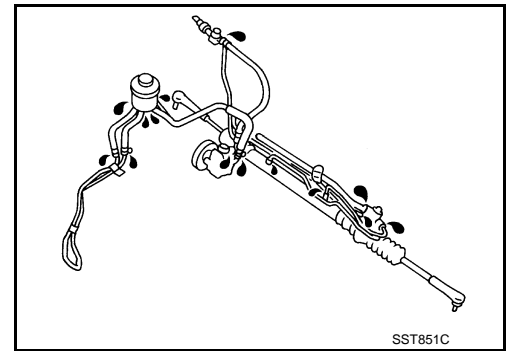



AXLE AND SUSPENSION PARTS

AXLE AND SUSPENSION PARTS : Inspection

INFOID:000000006887481

Check front and rear axle and suspension parts for excessive play, cracks, wear or other damage.

- Shake each wheel to check for excessive play.
- Check wheel bearings for smooth operation.
- Check axle and suspension nuts and bolts for looseness.
- Check strut (shock absorber) for oil leakage or other damage.
- Check suspension ball joint for grease leakage and ball joint dust cover for cracks or other damage.

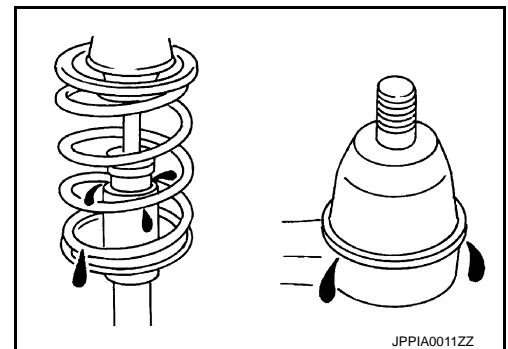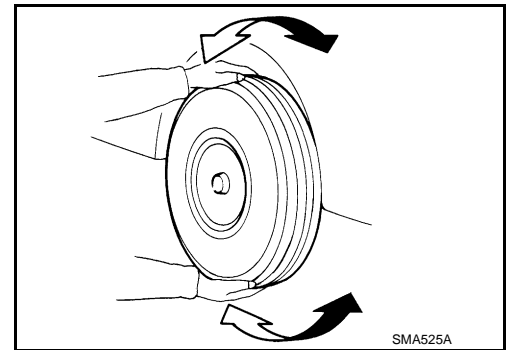


DRIVE SHAFT

DRIVE SHAFT : Inspection

INFOID:000000006887482

Check boot and drive shaft for cracks, wear, damage and grease leakage.

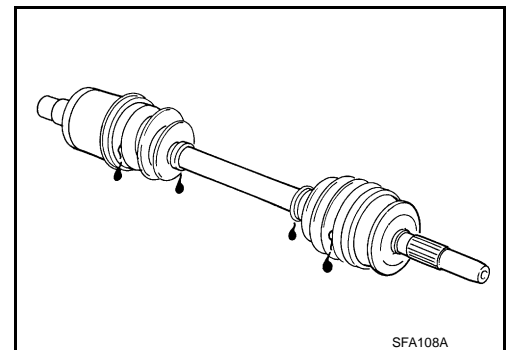

BODY MAINTENANCE

< PERIODIC MAINTENANCE >

BODY MAINTENANCE

LOCKS, HINGES AND HOOD LATCH

LOCKS, HINGES AND HOOD LATCH : Lubricating

INFOID:000000006887483

For hood and hood lock control illustration.

- Hood: Refer to [DLK-132, "Exploded View"](#).
- Hood lock control: Refer to [DLK-158, "Exploded View"](#).

For door and door lock illustration.

- Front door: Refer to [DLK-142, "Exploded View"](#).
- Front door lock: Refer to [DLK-163, "Exploded View"](#).
- Rear door: Refer to [DLK-146, "Exploded View"](#).
- Rear door lock: Refer to [DLK-167, "Exploded View"](#).

For trunk lid and trunk lid lock illustration.

- Trunk lid: Refer to [DLK-151, "Exploded View"](#).
- Trunk lid lock: Refer to [DLK-171, "Exploded View"](#).

SEAT BELT, BUCKLES, RETRACTORS, ANCHORS AND ADJUSTERS

SEAT BELT, BUCKLES, RETRACTORS, ANCHORS AND ADJUSTERS : Inspection

INFOID:000000006887484

For front seat belt illustration. Refer to [SB-5, "SEAT BELT RETRACTOR : Exploded View"](#).

For rear seat belt illustration. Refer to [SB-13, "SEAT BELT RETRACTOR : Exploded View"](#).

CAUTION:

- **After any collision, inspect all seat belt assemblies, including retractors and other attached hardwares (i.e. anchor bolt, guide rail set). Nissan recommends to replace all seat belt assemblies in use during a collision, unless not damaged and properly operating after minor collision.**

Also inspect seat belt assemblies not in use during a collision, and replace if damaged or improperly operating.

Seat belt pre-tensioner should be replaced even if the seat belts are not in use during a frontal collision where the driver and passenger air bags are deployed.

- **If any component of seat belt assembly is questionable, do not repair.**

Replace as seat belt assembly.

- **If webbing is cut, frayed, or damaged, replace belt assembly.**
- **Never oil tongue and buckle.**
- **Use a genuine NISSAN seat belt assembly.**

For details, refer to [SB-4, "SEAT BELT RETRACTOR : Inspection"](#), [SB-11, "SEAT BELT RETRACTOR : Inspection"](#) in SB section.

- Check anchors for loose mounting
- Check belts for damage
- Check retractor for smooth operation
- Check function of buckles and tongues when buckled and released

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

MA

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

DRIVE BELTS (VQ37VHR)

DRIVE BELTS (VQ37VHR) : Drive Belt

INFOID:000000006887485

DRIVE BELT

Tension of drive belt	Belt tension is not necessary, as it is automatically adjusted by drive belt auto-tensioner.
-----------------------	--

DRIVE BELTS (VK56VD)

DRIVE BELTS (VK56VD) : Drive Belts

INFOID:000000006887486

DRIVE BELT

Tension of drive belts	Belt tension is not necessary, as it is automatically adjusted by drive belt auto-tensioner.
------------------------	--

ENGINE COOLANT (VQ37VHR)

ENGINE COOLANT (VQ37VHR) : Periodical Maintenance Specification

INFOID:000000006887487

ENGINE COOLANT CAPACITY (APPROXIMATE)

Unit: ℓ (US qt, Imp qt)

Engine coolant capacity [With reservoir tank ("MAX" level)]	8.4 (8-7/8, 7-3/8)
Reservoir tank engine coolant capacity (At "MAX" level)	0.8 (7/8, 3/4)

ENGINE COOLANT (VK56VD)

ENGINE COOLANT (VK56VD) : Periodical Maintenance Specification

INFOID:000000006887488

ENGINE COOLANT CAPACITY (APPROXIMATELY)

Unit: ℓ (US qt, Imp qt)

Engine coolant capacity [With reservoir tank ("MAX" level)]	10.9 (11-4/8, 9-5/8)
Reservoir tank engine coolant capacity (At "MAX" level)	0.8 (7/8, 3/4)

ENGINE OIL (VQ37VHR)

ENGINE OIL (VQ37VHR) : Periodical Maintenance Specification

INFOID:000000006887489

ENGINE OIL CAPACITY (APPROXIMATE)

Unit: ℓ (US qt, Imp qt)

Drain and refill	With oil filter change	4.9 (5-1/8, 4-1/4)
	Without oil filter change	4.6 (4-7/8, 4)
Dry engine (Overhaul)		5.7 (6, 5)

ENGINE OIL (VK56VD)

ENGINE OIL (VK56VD) : Periodical Maintenance Specification

INFOID:000000006887490

ENGINE OIL CAPACITY (APPROXIMATELY)

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

Unit: ℓ (US qt, Imp qt)

Drain and refill	With oil filter change	2WD	6.0 (6-3/8, 5-2/8)
		AWD	6.1 (6-4/8, 5-3/8)
	Without oil filter change	2WD	5.7 (6, 5)
		AWD	5.8 (6-1/8, 5-1/8)
Dry engine (Overhaul)			7.2 (7-5/8, 6-3/8)

SPARK PLUG (VQ37VHR)

SPARK PLUG (VQ37VHR) : Spark Plug

INFOID:0000000006887491

SPARK PLUG

Unit: mm (in)

Make	DENSO
Standard type	FXE24HR11
Gap (Nominal)	1.1 (0.043)

SPARK PLUG (VK56VD)

SPARK PLUG (VK56VD) : Spark Plug

INFOID:0000000006887492

SPARK PLUG

Unit: mm (in)

Make	NGK	
Standard type	DILKAR7B11	
Gap	Standard	1.1 (0.043)
	Limit	1.25 (0.049)

ROAD WHEEL

ROAD WHEEL : Road Wheel

INFOID:0000000007215016

CONVENTIONAL

Item		Limit
Runout	Axial runout	Less than 0.3 mm (0.012 in)
	Radial runout	
Allowable unbalance	Dynamic (At flange)	Less than 5 g (0.17 oz) (one side)
	Static (At flange)	Less than 10 g (0.35 oz)

EMERGENCY (ALUMINUM WHEEL)

Item		Limit
Runout	Axial runout	Less than 1.5 mm (0.059 in)
	Radial runout	

EMERGENCY (STEEL WHEEL)

Item		Limit
Runout	Axial runout (Average)	Less than 1.5 mm (0.059 in)
	Radial runout (Average)	