

# STR

SECTION STR  
STARTING SYSTEM

<b>PRECAUTION .....</b>	<b>2</b>	Work Flow .....	<b>9</b>
<b>PRECAUTIONS .....</b>	<b>2</b>	<b>DTC/CIRCUIT DIAGNOSIS .....</b>	<b>12</b>
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	2	<b>B TERMINAL CIRCUIT .....</b>	<b>12</b>
Precaution for Procedure without Cowl Top Cover.....	2	Description .....	12
Precautions For Xenon Headlamp Service .....	2	Diagnosis Procedure .....	12
<b>PREPARATION .....</b>	<b>4</b>	<b>S CONNECTOR CIRCUIT .....</b>	<b>13</b>
<b>PREPARATION .....</b>	<b>4</b>	Description .....	13
Special Service Tools .....	4	Diagnosis Procedure .....	13
Commercial Service Tools .....	4	<b>SYMPTOM DIAGNOSIS .....</b>	<b>14</b>
<b>SYSTEM DESCRIPTION .....</b>	<b>5</b>	<b>STARTING SYSTEM .....</b>	<b>14</b>
<b>COMPONENT PARTS .....</b>	<b>5</b>	Symptom Table .....	14
<b>VQ37VHR .....</b>	<b>5</b>	<b>REMOVAL AND INSTALLATION .....</b>	<b>15</b>
VQ37VHR : Component Parts Location .....	5	<b>STARTER MOTOR .....</b>	<b>15</b>
VQ37VHR : Component Description .....	5	<b>VQ37VHR .....</b>	<b>15</b>
<b>VK56VD .....</b>	<b>5</b>	VQ37VHR : Exploded View .....	15
VK56VD : Component Parts Location .....	6	VQ37VHR : Removal and Installation (2WD) .....	16
VK56VD : Component Description .....	6	VQ37VHR : Removal and Installation (AWD) .....	17
<b>SYSTEM .....</b>	<b>7</b>	VQ37VHR : Inspection .....	18
System Diagram .....	7	<b>VK56VD .....</b>	<b>18</b>
System Description .....	7	VK56VD : Exploded View .....	18
<b>WIRING DIAGRAM .....</b>	<b>8</b>	VK56VD : Removal and Installation .....	20
<b>STARTING SYSTEM .....</b>	<b>8</b>	VK56VD : Inspection .....	20
Wiring Diagram .....	8	<b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>	<b>22</b>
<b>BASIC INSPECTION .....</b>	<b>9</b>	<b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>	<b>22</b>
<b>DIAGNOSIS AND REPAIR WORK FLOW .....</b>	<b>9</b>	Starter Motor .....	22

## PRECAUTIONS

< PRECAUTION >

# PRECAUTION

## PRECAUTIONS

### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000006887765

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

### Precaution for Procedure without Cowl Top Cover

INFOID:0000000007802159

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

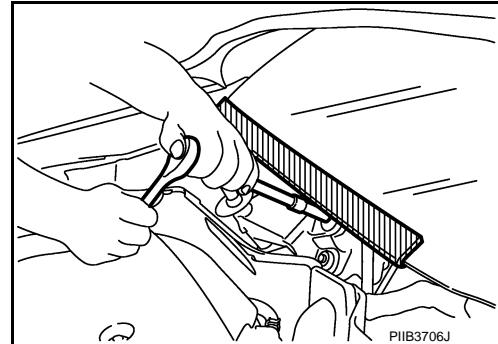

### Precautions For Xenon Headlamp Service

INFOID:0000000007802160

#### **WARNING:**

Comply with the following warnings to prevent any serious accident.

- Disconnect the battery cable (negative terminal) or the power supply fuse before installing, removing, or touching the xenon headlamp (bulb included). The xenon headlamp contains high-voltage generated parts.
- Never work with wet hands.
- Check the xenon headlamp ON-OFF status after assembling it to the vehicle. Never turn the xenon headlamp ON in other conditions. Connect the power supply to the vehicle-side connector.

## PRECAUTIONS

### < PRECAUTION >

(Turning it ON outside the lamp case may cause fire or visual impairments.)

- Never touch the bulb glass immediately after turning it OFF. It is extremely hot.

A

#### CAUTION:

Comply with the following cautions to prevent any error and malfunction.

- Install the xenon bulb securely. (Insufficient bulb socket installation may melt the bulb, the connector, the housing, etc. by high-voltage leakage or corona discharge.)
- Never perform HID circuit inspection with a tester.
- Never touch the xenon bulb glass with hands. Never put oil and grease on it.
- Dispose of the used xenon bulb after packing it in thick vinyl without breaking it.
- Never wipe out dirt and contamination with organic solvent (thinner, gasoline, etc.).

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

## PREPARATION

< PREPARATION >

# PREPARATION

## PREPARATION

### Special Service Tools

INFOID:000000006887767

Tool number (Kent-Moore No.)	Description
— (J-44373 Model MCR620) Starting/Charging System Tester	 SEL403X Tests starting and charging systems. For operating instructions, refer to Technical Service Bulletin.

### Commercial Service Tools

INFOID:000000006887768

Tool name	Description
Power tool	 PIIB1407E Loosening bolts, nuts and screws

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

## SYSTEM DESCRIPTION

### COMPONENT PARTS

VQ37VHR

A

STR

INFOID:0000000006887769

VQ37VHR : Component Parts Location

C

D

E

F

G

H

I

J

K


L

M

N

O

P

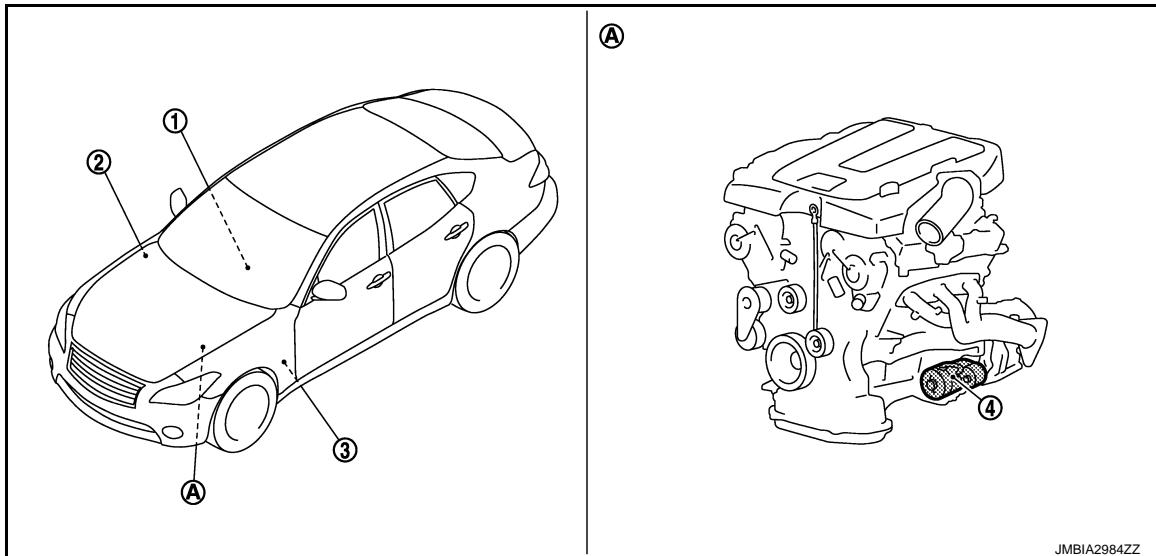

JMBIA2984ZZ

1. TCM  
Refer to [TM-10, "A/T CONTROL SYSTEM : Component Parts Location".](#)
2. IPDM E/R  
Refer to [PCS-5, "IPDM E/R : Component Parts Location".](#)
3. BCM  
Refer to [BCS-4, "BODY CONTROL SYSTEM : Component Parts Location".](#)
4. Starter motor
- A. Engine

VQ37VHR : Component Description

INFOID:0000000006887770

Component part	Description
TCM	TCM supplies power to the starter relay and starter control relay inside IPDM E/R when the selector lever is shifted to the P or N position.
BCM	BCM controls the starter relay inside IPDM E/R.
IPDM E/R	CPU inside IPDM E/R controls the starter control relay.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.


VK56VD

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

## VK56VD : Component Parts Location

INFOID:000000006887771

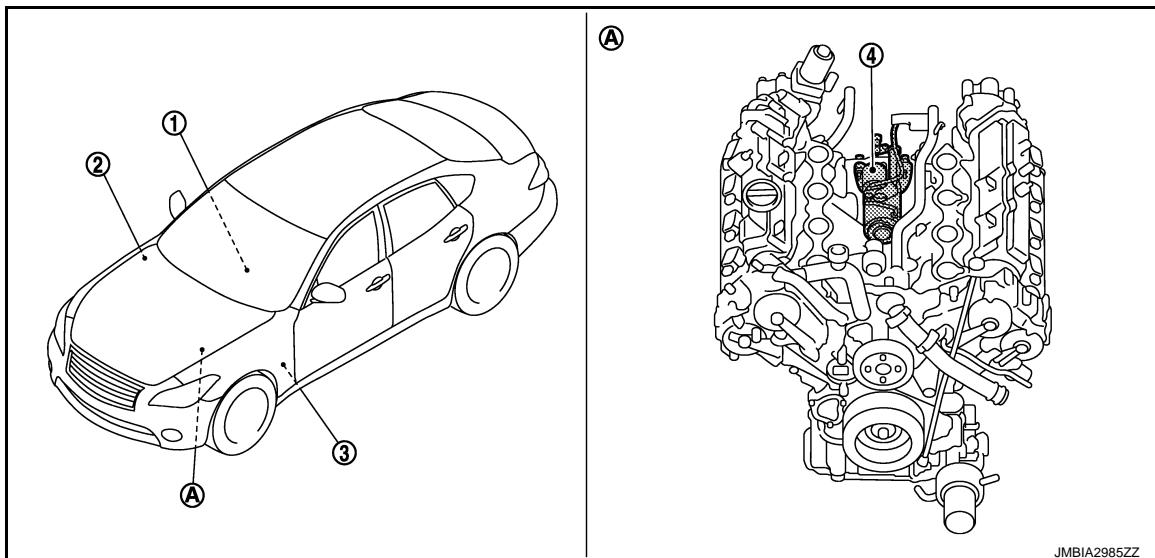

JMBIA2985ZZ

1. TCM  
Refer to [TM-10, "A/T CONTROL SYSTEM : Component Parts Location".](#)
2. IPDM E/R  
Refer to [PCS-5, "IPDM E/R : Component Parts Location".](#)
3. BCM  
Refer to [BCS-4, "BODY CONTROL SYSTEM : Component Parts Location".](#)
4. Starter motor
- A. Engine

## VK56VD : Component Description

INFOID:000000006887772

Component part	Description
TCM	TCM supplies power to the starter relay and starter control relay inside IPDM E/R when the selector lever is shifted to the P or N position.
BCM	BCM controls the starter relay inside IPDM E/R.
IPDM E/R	CPU inside IPDM E/R controls the starter control relay.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.


# SYSTEM

< SYSTEM DESCRIPTION >

## SYSTEM

### System Diagram

INFOID:000000006887773

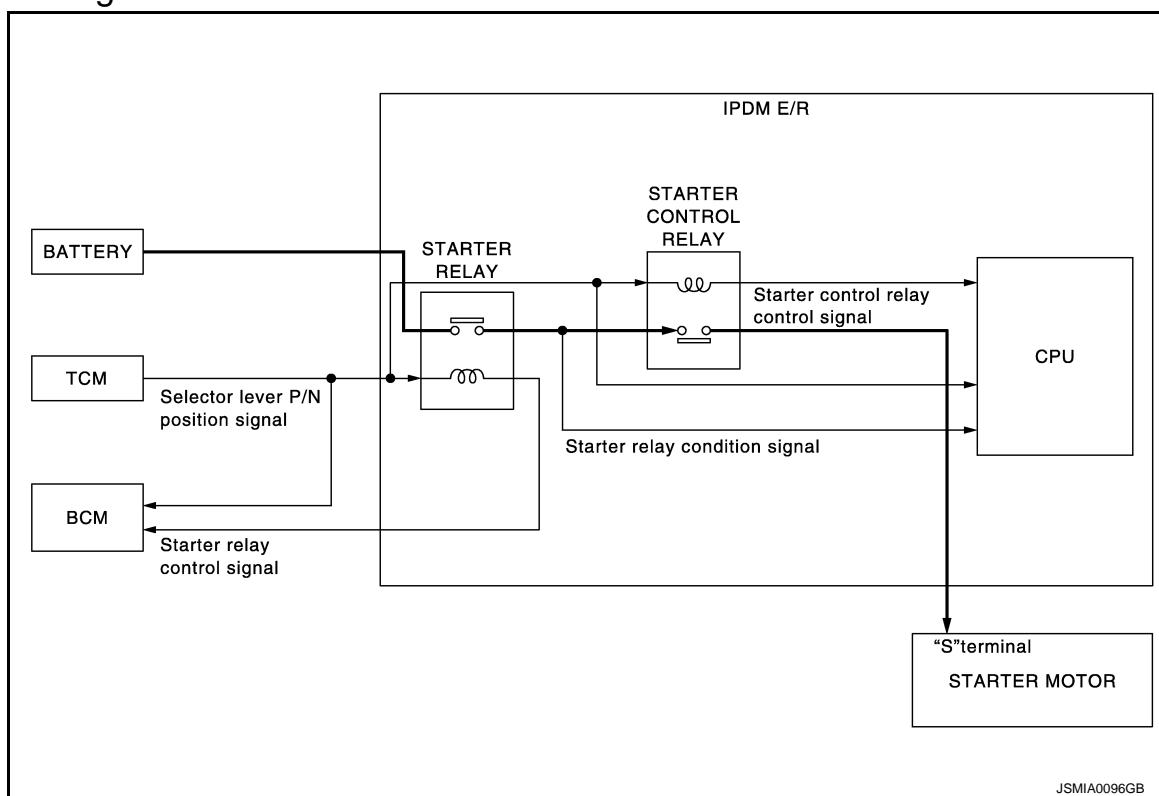

A  
STR  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

### System Description

INFOID:000000006887774

- When selector lever is P or N, power is supplied to starter relay and starter control relay by TCM. And BCM and IPDM E/R (CPU) detect selector lever P/N condition by the inputted signal.
- When starter operating condition is satisfied, IPDM E/R turns starter control relay ON by starter control relay control signal.
- When engine cranking condition is satisfied, BCM turns starter relay ON by starter relay control signal.
- Then battery power is supplied to starter motor ("S" terminal) through starter control relay and starter relay. And IPDM E/R (CPU) detect starter relay condition by the inputted signal.


# STARTING SYSTEM

< WIRING DIAGRAM >

## WIRING DIAGRAM STARTING SYSTEM

### Wiring Diagram

INFOID:0000000006887775

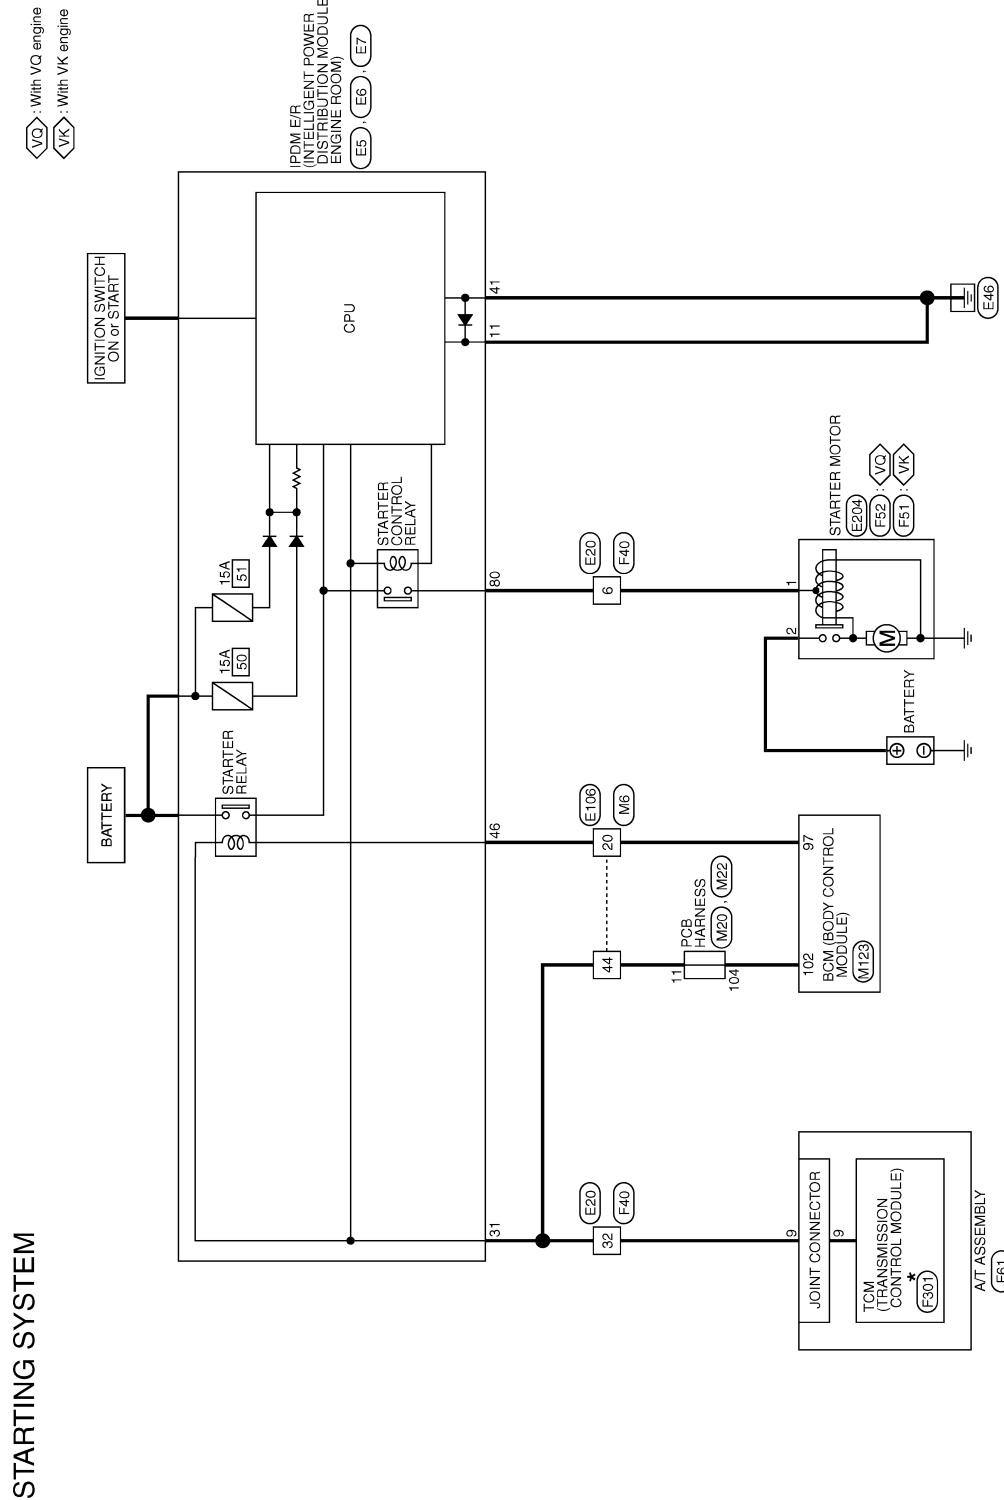

2010/12/14

JCBWA2040GB

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORK FLOW

#### Work Flow

INFOID:000000006887776

STR

C

D

E

F

G

H

I

J

K

L


M

N

O

P

#### OVERALL SEQUENCE

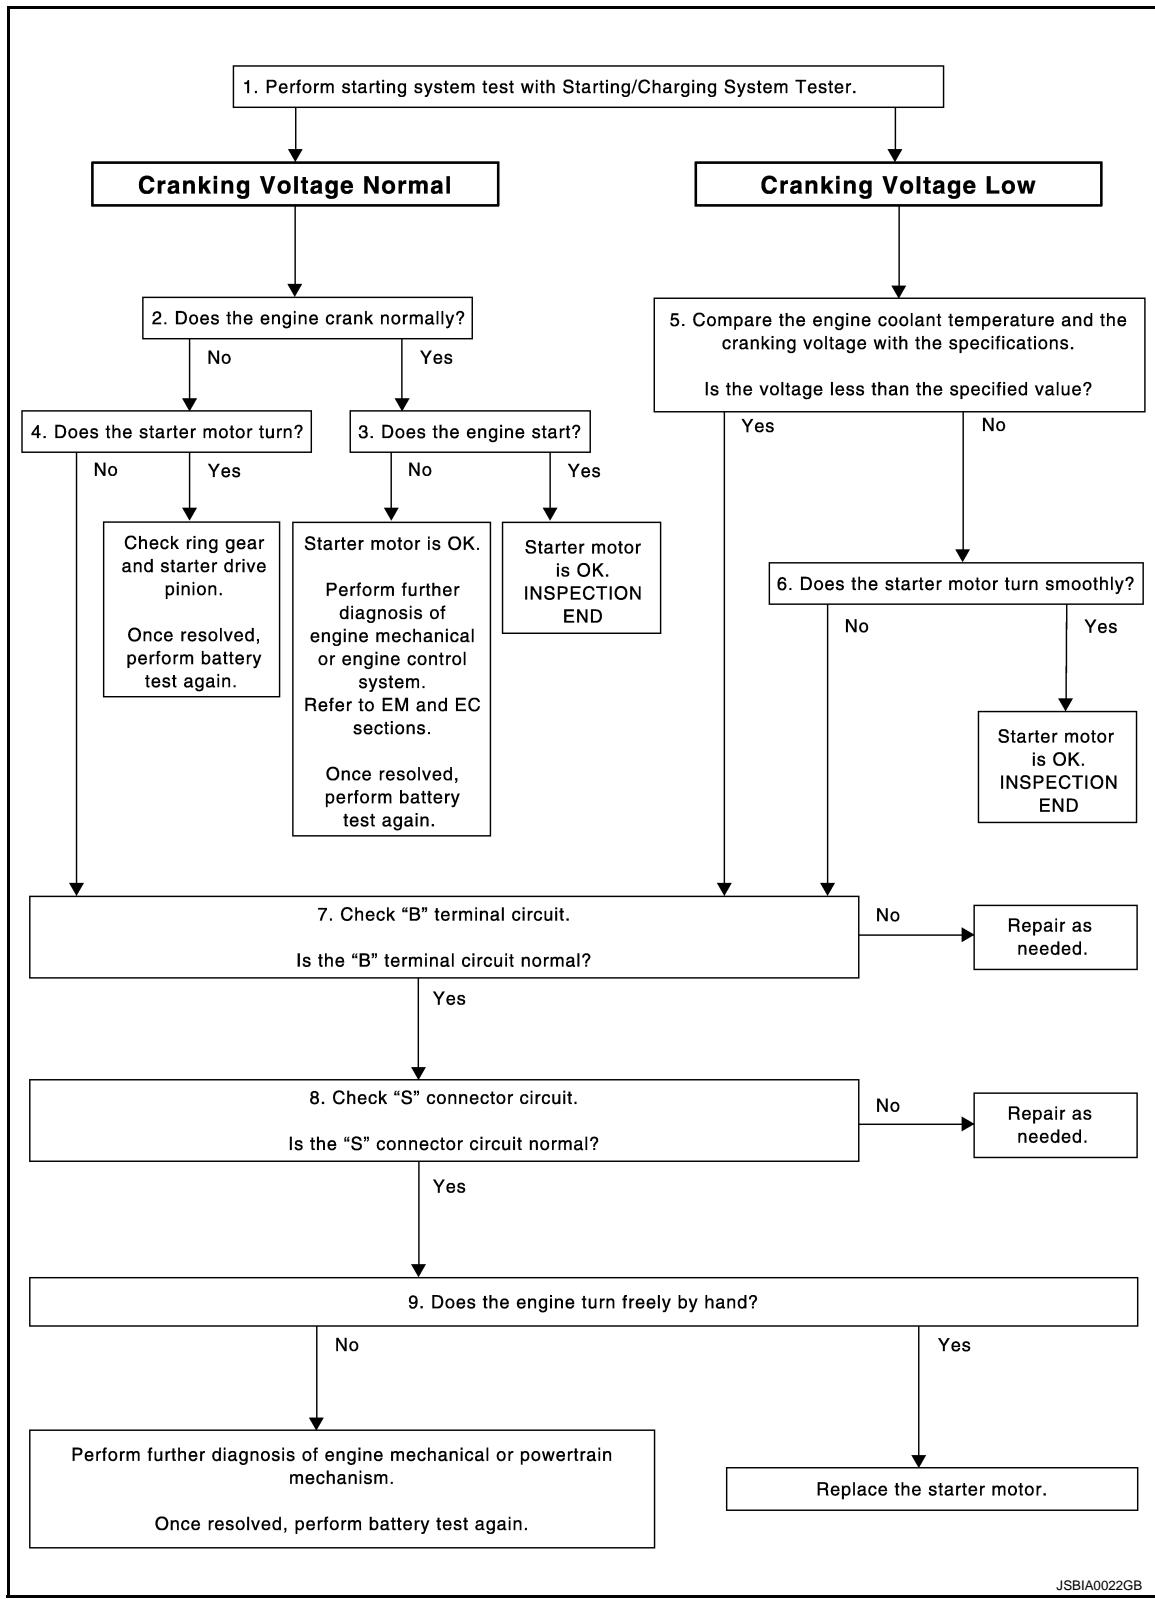

JSBIA0022GB

#### DETAILED FLOW

# DIAGNOSIS AND REPAIR WORK FLOW

## < BASIC INSPECTION >

### **NOTE:**

To ensure a complete and thorough diagnosis, the battery, starter motor and alternator test segments must be done as a set from start to finish.

## 1. DIAGNOSIS WITH STARTING/CHARGING SYSTEM TESTER

Perform the starting system test with Starting/Charging System Tester (SST: J-44373). For details and operating instructions, refer to Technical Service Bulletin.

### Test result

CRANKING VOLTAGE NORMAL>>GO TO 2.

CRANKING VOLTAGE LOW>>GO TO 5.

CHARGE BATTERY>>Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again. Refer to Technical Service Bulletin.

REPLACE BATTERY>>Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again. Refer to Technical Service Bulletin. If second test result is "REPLACE BATTERY", then do so. Perform battery test again to confirm repair.

## 2. CRANKING CHECK

Check that the starter motor operates correctly.

### Does the engine crank normally?

YES >> GO TO 3.

NO >> GO TO 4.

## 3. ENGINE START CHECK

Check that the engine starts.

### Does the engine start?

YES >> Starter motor is OK. INSPECTION END

NO >> Perform further diagnosis of engine mechanical or engine control system. Refer EM and EC sections. Once resolved, perform battery test again.

## 4. STARTER MOTOR ACTIVATION

Check that the starter motor operates.

### Does the starter motor turn?

YES >> Check ring gear and starter motor drive pinion. Once resolved, perform battery test again.

NO >> GO TO 7.

## 5. COMPARISON BETWEEN ENGINE COOLANT AND CRANKING VOLTAGE

Compare the engine coolant temperature and the cranking voltage with the specifications.

### Minimum Specification of Cranking Voltage Referencing Coolant Temperature

Engine coolant temperature [°C (°F)]	Voltage [V]
-30 to -20 (-22 to -4)	8.6
-19 to -10 (-2 to 14)	9.1
-9 to 0 (16 to 32)	9.5
More than 1 (More than 34)	9.9

### Is the voltage less than the specified value?

YES >> GO TO 7.

NO >> GO TO 6.

## 6. STARTER OPERATION

Check the starter operation status.

### Does the starter motor turn smoothly?

YES >> Starter motor is OK. INSPECTION END

NO >> GO TO 7.

## 7. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [STR-12, "Diagnosis Procedure"](#).

### Is "B" terminal circuit normal?

# DIAGNOSIS AND REPAIR WORK FLOW

## < BASIC INSPECTION >

YES >> GO TO 8.

NO >> Repair as needed.

A

## 8."S" CONNECTOR CIRCUIT INSPECTION

Check "S" connector circuit. Refer to [STR-13, "Diagnosis Procedure"](#).

STR

Is "S" connector circuit normal?

C

YES >> GO TO 9.

NO >> Repair as needed.

D

## 9.ENGINE ROTATION STATUS

Check that the engine can be rotated by hand.

F

Does the engine turn freely by hand?

G

YES >> Replace starter motor.

H

NO >> Perform further diagnosis of engine mechanical or powertrain mechanism. Once resolved, perform battery test again. Refer to Technical Service Bulletin.

I

J

K

L

M

N

O

P

## B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

# DTC/CIRCUIT DIAGNOSIS

## B TERMINAL CIRCUIT

### Description

INFOID:000000006887777

The "B" terminal is constantly supplied with battery power.

### Diagnosis Procedure

INFOID:000000006887778

#### CAUTION:

Perform diagnosis under the condition that engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

### 1.CHECK "B" TERMINAL CIRCUIT

1. Turn ignition switch OFF.
2. Check that starter motor "B" terminal connection is clean and tight.
3. Check voltage between starter motor "B" terminal and ground.

Terminals		(-)	Voltage (Approx.)
(+)	Terminal		
Starter motor "B" terminal			
E204	2	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Check harness between battery and starter motor for open circuit.

### 2.CHECK BATTERY CABLE CONNECTION STATUS (VOLTAGE DROP TEST)

1. Shift A/T selector lever to "P" or "N" position.
2. Check voltage between battery positive terminal and starter motor "B" terminal.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Starter motor "B" terminal	Terminal		
Battery positive terminal	E204	2	When the ignition switch is in START position Less than 0.5 V

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Check harness between the battery and the starter motor for poor continuity.

### 3.CHECK GROUND CIRCUIT STATUS (VOLTAGE DROP TEST)

1. Shift A/T selector lever to "P" or "N" position.
2. Check voltage between starter motor case and battery negative terminal.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Starter motor case	Battery negative terminal	When the ignition switch is in START position	Less than 0.2 V

Is the inspection result normal?

- YES >> "B" terminal circuit is OK. Further inspection is necessary. Refer to [STR-9, "Work Flow"](#).  
NO >> Check the starter motor case and ground for poor continuity.

# S CONNECTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## S CONNECTOR CIRCUIT

### Description

INFOID:000000006887779

The starter motor magnetic switch is supplied with power when the ignition switch is turned to the START position while the selector lever is in the P or N position.

A

### Diagnosis Procedure

INFOID:0000000068877780

#### CAUTION:

Perform diagnosis under the condition that engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.
- 1.CHECK "S" CONNECTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter motor connector.
3. Shift A/T selector lever to "P" or "N" position.
4. Check voltage between starter motor harness connector and ground.

Terminals		Condition	Voltage (Approx.)	
(+)	(-)			
Starter motor harness connector	Terminal			
F51 (VK56VD) F52 (VQ37VHR)	1	Ground	When the ignition switch is in START position	Battery voltage

Is the inspection result normal?

- YES >> "S" connector circuit is OK. Further inspection is necessary. Refer to [STR-9, "Work Flow"](#).  
NO >> GO TO 2.

### 2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect IPDM E/R connector.
2. Check continuity between starter motor harness connector and IPDM E/R harness connector.

Starter motor harness connector		IPDM E/R harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F51 (VK56VD) F52 (VQ37VHR)	1	E7	80	Existed

Is the inspection result normal?

- YES >> Further inspection is necessary. Refer to [STR-9, "Work Flow"](#).  
NO >> Repair the harness.

## STARTING SYSTEM

< SYMPTOM DIAGNOSIS >

# SYMPTOM DIAGNOSIS

## STARTING SYSTEM

### Symptom Table

INFOID:000000006887781

Symptom	Reference
No normal cranking	Refer to <a href="#">STR-9, "Work Flow".</a>
Starter motor does not rotate	

# STARTER MOTOR

< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### STARTER MOTOR


VQ37VHR

VQ37VHR : Exploded View

INFOID:0000000006887782

STR

### REMOVAL

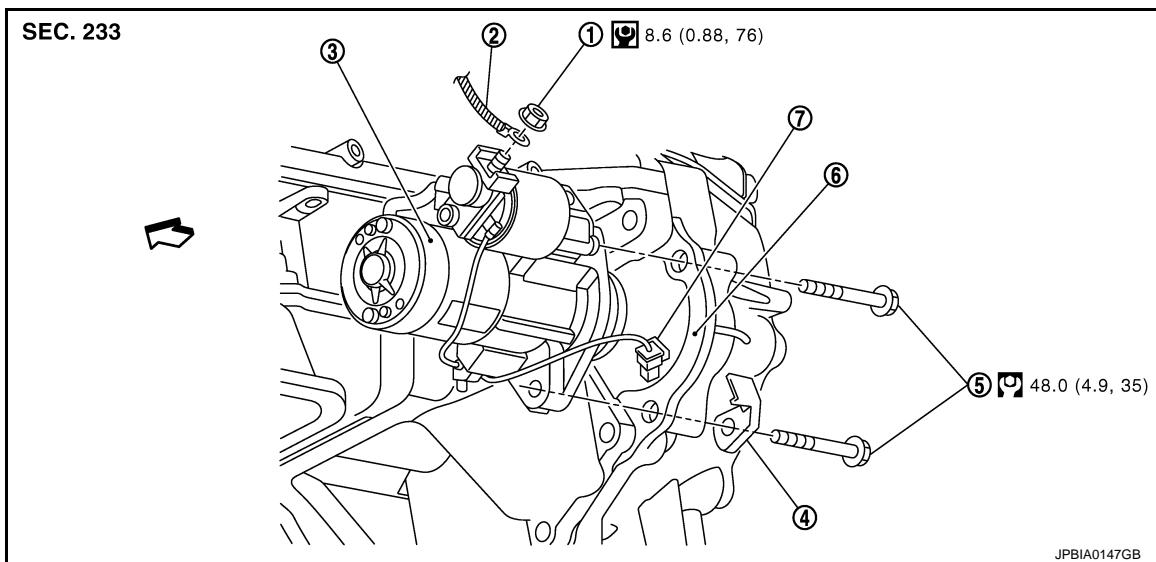

- 1. Terminal B nut
- 2. Terminal B harness
- 3. Starter motor
- 4. Harness clip bracket
- 5. Starter motor mounting bolt
- 6. Converter housing
- 7. Connector S

⇨: Engine front


Refer to [GI-4, "Components"](#) for symbols in the figure.

### DISASSEMBLY

# STARTER MOTOR

< REMOVAL AND INSTALLATION >

Type: S114-932

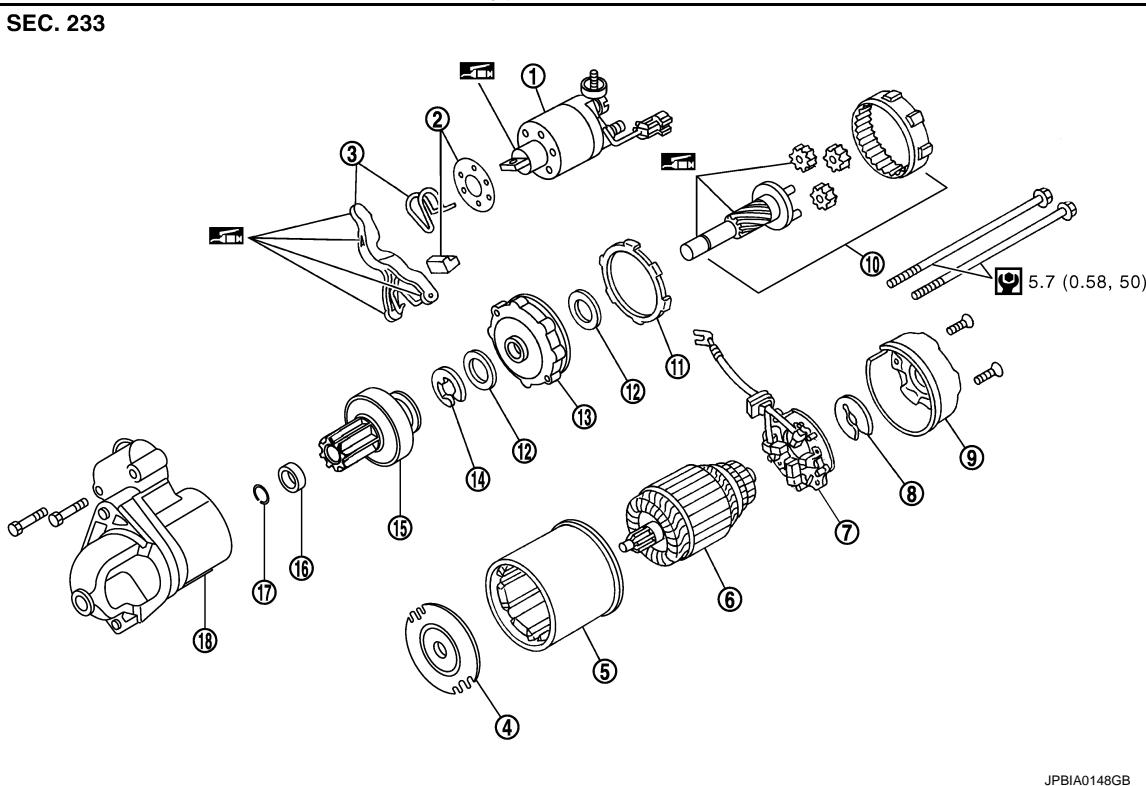

- |                             |                         |                        |
|-----------------------------|-------------------------|------------------------|
| 1. Magnetic switch assembly | 2. Dust cover kit       | 3. Shift lever set     |
| 4. Center bracket (A)       | 5. Yoke assembly        | 6. Armature assembly   |
| 7. Brush holder assembly    | 8. Thrust washer        | 9. Rear cover assembly |
| 10. Shaft gear assembly     | 11. Packing             | 12. Thrust washer      |
| 13. Center bracket (P)      | 14. E-ring              | 15. Pinion assembly    |
| 16. Pinion stopper          | 17. Pinion stopper clip | 18. Gear case assembly |

High-temperature grease point


Refer to [GI-4, "Components"](#) for symbols not described on the above.

## VQ37VHR : Removal and Installation (2WD)

INFOID:0000000006887783

### Removal

1. Disconnect the battery cable from the negative terminal. Refer to [PG-142, "Removal and Installation"](#).
2. Remove front undercover. Refer to [EXT-29, "FRONT UNDER COVER : Removal and Installation"](#).
3. Remove road wheel and tire (Front LH). Refer to [WT-56, "Removal and Installation"](#).
4. Disconnect steering lower joint (1), then remove it. Refer to [ST-36, "WITHOUT 4WAS : Removal and Installation"](#) (Without 4WAS) or [ST-38, "WITH 4WAS : Removal and Installation"](#) (With 4WAS).
5. Remove terminal B nut (A).

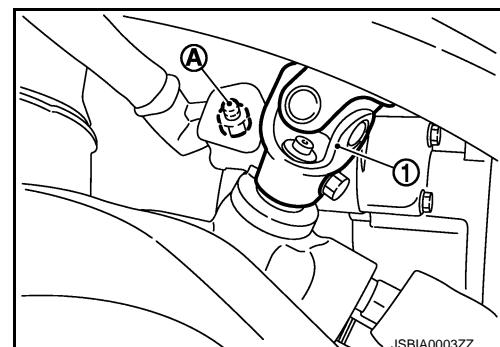


# STARTER MOTOR

## < REMOVAL AND INSTALLATION >

6. Disconnect connector S (A).


↳ : Vehicle front

7. Remove starter motor mounting bolts (B), using power tools.

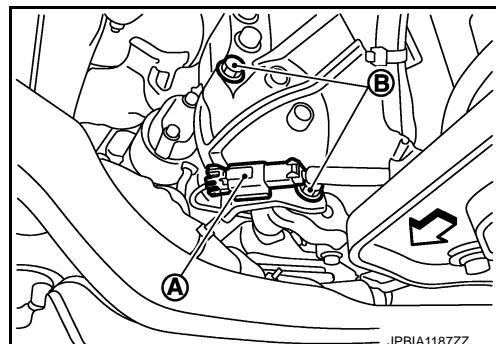

8. Remove starter motor (1) from the side of the vehicle.

↳ : Vehicle front

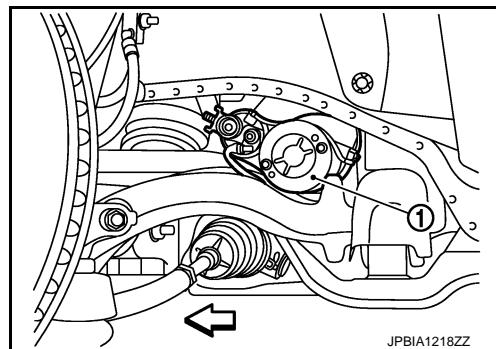

## INSTALLATION

Note the following item, and install in the reverse order of removal.

### CAUTION:


Be sure to tighten terminal B nut carefully.

## VQ37VHR : Removal and Installation (AWD)

INFOID:0000000006887784

### Removal


1. Disconnect the battery cable from the negative terminal. Refer to [PG-142, "Removal and Installation"](#).
2. Remove front undercover. Refer to [EXT-29, "FRONT UNDER COVER : Removal and Installation"](#).
3. Remove road wheel and tire (front LH). Refer to [WT-56, "Removal and Installation"](#)
4. Disconnect steering lower joint (1), and then remove it. Refer to [ST-36, "WITHOUT 4WAS : Removal and Installation"](#).
5. Remove terminal B nut (A).

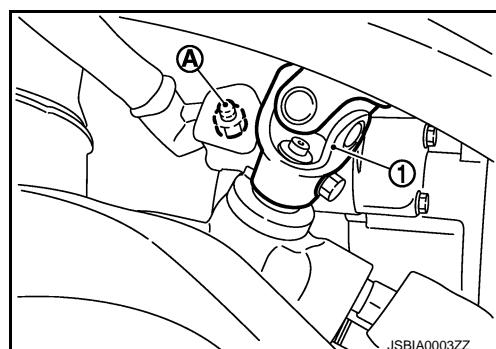

6. Disconnect connector S (A).

↳ : Vehicle front

7. Remove starter motor mounting bolts (B), using power tools.

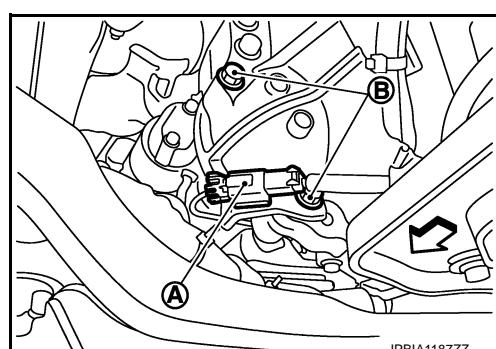


A  
STR  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STARTER MOTOR

## < REMOVAL AND INSTALLATION >

8. Remove exhaust mounting bracket. Refer to [EX-5, "VQ37VHR : Exploded View"](#).
9. Remove starter motor (1) downward from the vehicle.

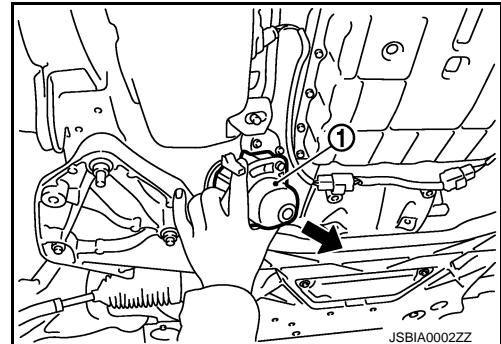

## INSTALLATION

Note the following item, and then install in the reverse order of removal.

### CAUTION:

**Be sure to tighten terminal B nut carefully.**

## VQ37VHR : Inspection

INFOID:000000006887785

## INSPECTION AFTER DISASSEMBLY

### Pinion/Clutch Check

1. Inspect pinion teeth.
  - Replace pinion if teeth are worn or damaged. (Also check condition of ring gear teeth.)
2. Inspect reduction gear teeth.
  - Replace reduction gear if teeth are worn or damaged. (Also check condition of armature shaft gear teeth.)
3. Check to see if pinion locks in one direction and rotates smoothly in the opposite direction.
  - If it locks or rotates in both directions, or unusual resistance is evident, replace.

## VK56VD


## VK56VD : Exploded View

INFOID:000000006887786

## REMOVAL

# STARTER MOTOR

## < REMOVAL AND INSTALLATION >

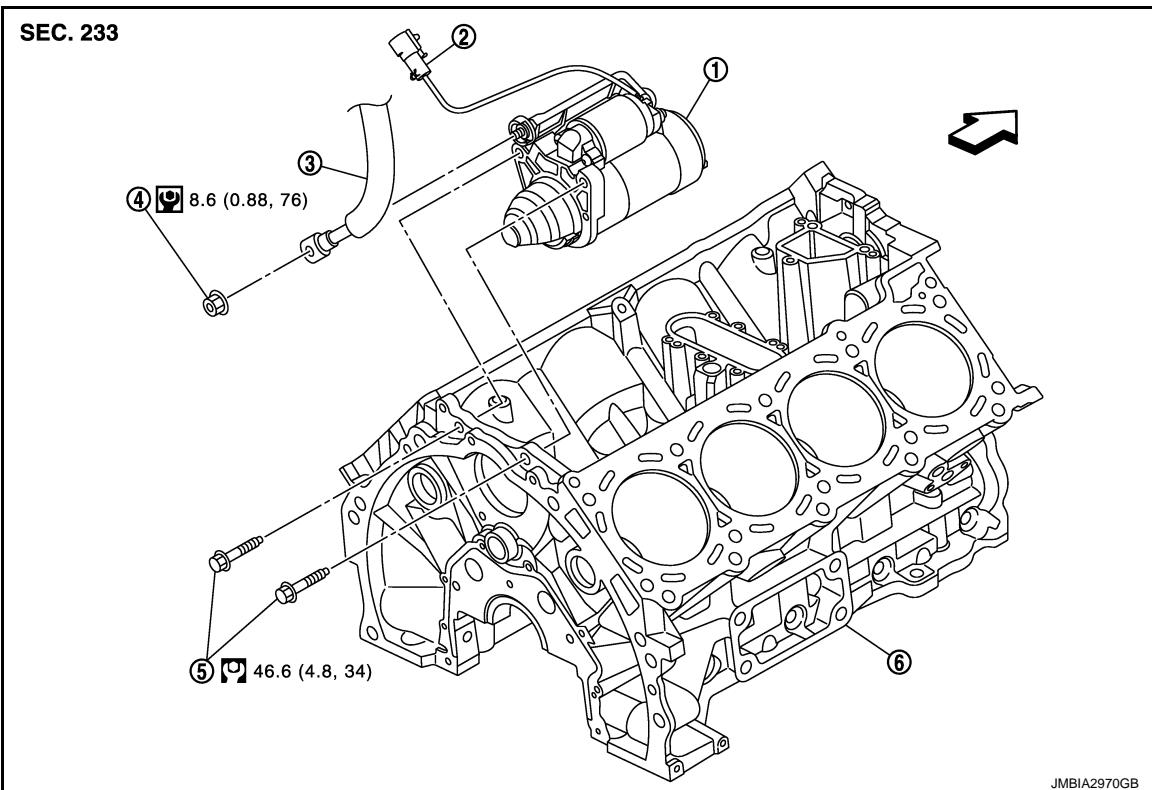

- 1. Starter motor
- 2. Connector S
- 3. Terminal B harness
- 4. Terminal B nut
- 5. Starter motor mounting bolt
- 6. Cylinder block

⇨: Engine front


Refer to [GI-4, "Components"](#) for symbols in the figure.

## DISASSEMBLY

# STARTER MOTOR

## < REMOVAL AND INSTALLATION >

Type: M001T30671

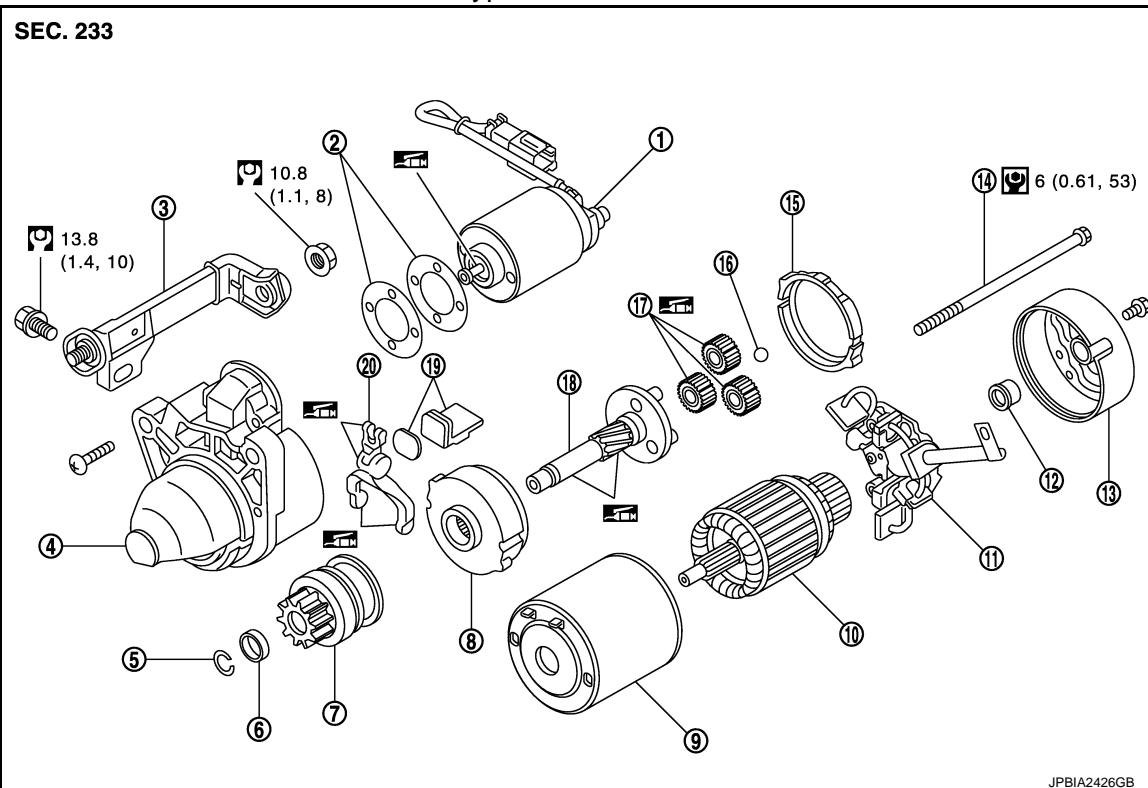

- 1. Magnetic switch assembly
- 2. Adjusting plate
- 3. "B" terminal extension
- 4. Gear case assembly
- 5. Stopper ring
- 6. Stopper
- 7. Pinion assembly
- 8. Internal gear
- 9. Yoke assembly
- 10. Armature assembly
- 11. Brush holder assembly
- 12. Metal RR
- 13. Rear cover
- 14. Through bolt
- 15. Packing
- 16. Ball
- 17. Planetary gear
- 18. Gear shaft
- 19. Dust cover kit
- 20. Shift lever

High-temperature grease point

Refer to [GI-4, "Components"](#) for symbols not described on the above.

## VK56VD : Removal and Installation

INFOID:0000000006887787

### REMOVAL

1. Disconnect the battery cable from the negative terminal. Refer to [PG-142, "Removal and Installation"](#).
2. Remove engine cover. Refer to [EM-182, "Removal and Installation"](#).
3. Remove intake manifold. Refer to [EM-191, "Removal and Installation"](#).
4. Remove terminal B nut, and then terminal B harness.
5. Disconnect connector S.
6. Remove starter motor mounting bolts.
7. Remove starter motor upward from the vehicle.

### INSTALLATION

Note the following item, and then install in the reverse order of removal.

#### CAUTION:

Be sure to tighten terminal B nut carefully.

## VK56VD : Inspection

INFOID:0000000006887788

### INSPECTION AFTER DISASSEMBLY

## STARTER MOTOR

### < REMOVAL AND INSTALLATION >

#### Pinion/Clutch Check

1. Inspect pinion teeth.
  - Replace pinion if teeth are worn or damaged. (Also check condition of ring gear teeth.)
2. Inspect reduction gear teeth.
  - Replace reduction gear if teeth are worn or damaged. (Also check condition of armature shaft gear teeth.)
3. Check to see if pinion locks in one direction and rotates smoothly in the opposite direction.
  - If it locks or rotates in both directions, or unusual resistance is evident, replace.

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

# SERVICE DATA AND SPECIFICATIONS (SDS)

<SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### Starter Motor

INFOID:000000006887789

Applied model	VQ37VHR	VK56VD
	S114-932	M001T30671
Type	HITACHI make	mitsubishi make
	Reduction gear type	
System voltage	[V]	12
No-load	Terminal voltage [V]	11
	Current [A]	Less than 110
	Revolution [rpm]	More than 2,700
Minimum diameter of commutator	[mm (in)]	28.0 (1.102) 28.8 (1.134)
Minimum length of brush	[mm (in)]	10.5 (0.413) 10.0 (0.394)
Brush spring tension	[N (kg, lb)]	16.2 (1.65, 3.6) 23.4 - 31.6 (2.4, 5.3 - 3.2, 7.1)
Clearance between bearing metal and armature shaft	[mm (in)]	Less than 0.2 (0.008)
Clearance between pinion front edge and pinion stopper	[mm (in)]	0.3 - 2.5 (0.012 - 0.098) 0.5 - 2.0 (0.02 - 0.079)